

Brass Audit - SOP

Titan Track and Trace

1.Login

- Login to the application using your credentials.

2.Navigate to Brass Audit

- From the left navigation menu, click **Brass Audit**.
- The Brass Audit Pick Table screen is displayed.
- The Pick Table displays all lots that are available for Brass Audit processing.

Brass Audit Pick Table

Step 3 - Select the Lot

- Locate the required lot in the Pick Table.
- Review the lot details before starting the audit.

Step 4 - Verify Lot Quantity

- Verify the Lot Qty displayed for the selected lot.
- Ensure the physical quantity matches the displayed quantity.

Step 5 - Click Audit

- After verifying the lot quantity, the Audit button becomes enabled.
- Click Audit to open the Brass Audit processing screen.

Brass Audit Processing

Step 6 - Verify Accepted Quantity

- Verify the accepted quantity received from the previous process.

Step 7 - Perform Brass Audit Inspection

- Inspect the components according to the Brass Audit quality requirements.

Step 8 - Accept or Reject the Lot

If the Lot is Accepted

- Click Accept.
- Verify the accepted quantity.
- Enter remarks if required.
- Click Proceed to complete the Brass Audit process.

If the Lot is Rejected

- Click Reject.
- Select the appropriate Rejection Reason.
- Enter the Reject Quantity.
- Enter remarks if required.
- Click Proceed to submit the rejection details.

Step 9 - Save as Draft (Optional)

- If the inspection cannot be completed immediately, click Draft.
- The current progress is saved.
- The user can reopen the same lot later and continue processing.

Brass Audit Completion Flow

After the Brass Audit process is completed, the lot is automatically routed based on the processing outcome.

Accepted Lot

The accepted lot is automatically moved to the Jig Loading module for the next stage of processing.


Moved to → Jig Loading

Rejected Lot

The rejected lot is automatically moved back to the IQF module for reprocessing.

Moved to → IQF

Process Flow

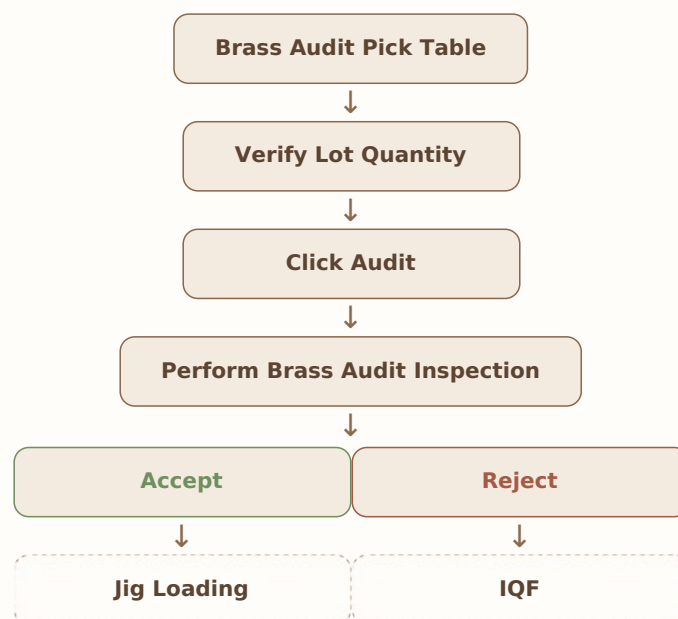

This workflow is the same as the Brass QC process, with only the final routing differing:

- **Accept** → Jig Loading

- **Reject** → IQF

Brass Audit Module – SOP. Titan Track and Trace.