


Adafruit TMC2209 Stepper Motor Driver Breakout Board

Created by Tim C

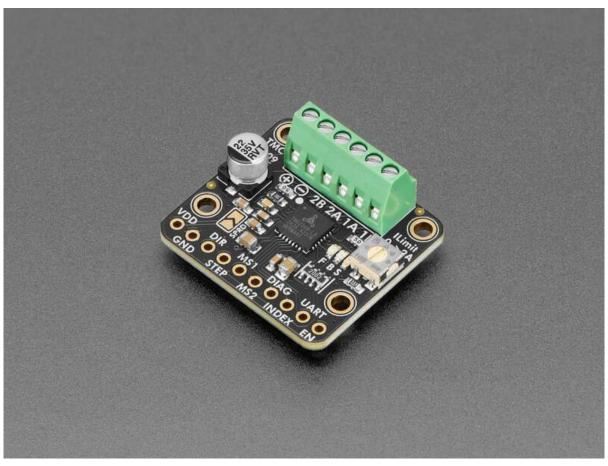

https://learn.adafruit.com/adafruit-tmc2209-stepper-motor-driver-breakout-board

Last updated on 2025-01-16 12:38:28 PM EST


© Adafruit Industries Page 1 of 17

Table of Contents


Overview	3
Pinouts	7
• Power	
Current Potentiometer	
Terminal Block Bipolar Stepper Motor Connections	
Stepper Control Pins	
Microstep Selection Pins	
TMC2209 Control Pins	
• LEDs	
• SPREAD Jumper	
CircuitPython and Python	9
CircuitPython Microcontroller Wiring	
Python Computer Wiring	
Python Blinka Setup	
CircuitPython Usage	
• Python Usage	
• Example Code	
Arduino	14
• Wiring	
• Example Code	
Downloads	16
• Files	
Schematic and Fab Print	

© Adafruit Industries Page 2 of 17

Overview

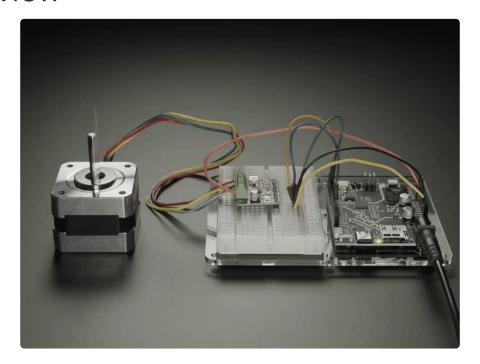

Stepper motors are used for CNC machines, 3D printers, and whenever else one needs precise, powerful motion. But to get good behavior from steppers, you need a motor driver chip that can provide high bursts of current. And for smooth motion, the driver must be able to PWM that current for microstepping support. You can DIY this with a lot of timers, a microcontroller and an H-Bridge chip - or you could take the easy way out and use an Adafruit TMC2209 Stepper Motor Driver Breakout Board which makes controlling stepper motors easy-breezy and super-silent.

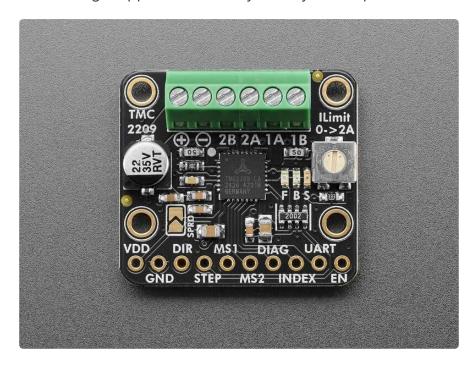


© Adafruit Industries Page 3 of 17

All you need is two output pins, no timers, PWM or real-time microcontroller. Set the DIRection pin high or low to set the spin orientation. Then toggle the STEP pin to take one microstep at a time. You can set whether you want to go faster with 1/8 microsteps, or increase the precision to 1/16, 1/32 or 1/64 microsteps per STEP toggle. If you want more control, say to single-step or up to 1/256 microsteps, you can do so via the UART interface (more on that later). By default the driver is set to 1/8 microstep mode, you can change it by tying the MS1/MS2 pins high, either with jumpers or with 2 more output pins. The step/microstep mode can even be adjusted on the fly! LEDs on the DIR and STEP pins let you get visual feedback of your motor signal.



The Trinamic drivers are often known as "silent" or "stealth" chips - compared to the A4988 they are unbelievably quiet. You can barely tell they are running thanks to the microstepping techniques used. This reduces noise and wear, to make users happy. There's also a lot of niceties like index output which will pulse when the microstepping counter cycles back to 'zero', and a diagnostic output to quickly alert the microcontroller of a big error like short or open circuits. It can also do 'sensor-less stop detection' with a feature called StallGuard - but for that you will need to use the UART interface.

© Adafruit Industries Page 4 of 17

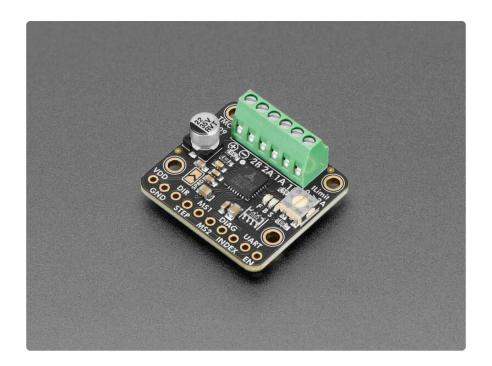

The UART interface is a single-pin serial port with auto-baud detection that allows more precise communication, diagnostics and control. You can do things like set microsteps from 1 to 256, or set the speed with a single command. You can also configure settings like current limiting, over-heat temperature limit, PWM frequency, etc. You'll need a microcontroller library to use UART and it's an 'extra' - not essential for basic motion control!

The Trinamic TMC2209 is a popular driver chip, with small breakout boards used in many 3D printers. Those breakouts are great for plugging into motherboards, but are a little tough to use for prototyping. Our version comes with terminal blocks for the motor power and stepper wires, plus nicely labeled pins for control and mounting holes.




© Adafruit Industries Page 5 of 17

We fabricated the board with 2 oz copper to give it a hand with the 2A-max current that this driver can handle. To use the current limiting capability, twist the onboard potentiometer: when all the way to the right we can get to up to 2A max. Note that the higher currents will heat up both the motor driver and stepper so you may need to add heatsinking to the chip. We don't include a heatsink but you can get a tall ~80°C/W (http://adafru.it/1493) or short ~90°C/W heatsink (http://adafru.it/1515) to attach on top.

Features:


- Trinamic TMC2209 (https://adafru.it/1abZ) silent "Stealth Chopper" DMOS microstepping driver with translator and overcurrent protection
- Motor voltage from 5V to 29VDC
- Vdd/Logic voltage from 3V to 5V, use with anything from an Arduino-compatible or ESP32 to Raspberry Pi other Single Board Computer
- Terminal screw block connections for easy VMotor power and 4-wire bi-polar stepper motor connection with 26-20AWG slots, 2.54mm / 0.1" spacing
- Control steppers using only two pins: DIRection and STEP
- Defaults to 1/8 microstep mode, change by pulling MS1/MS2
 high (see TMC2209 datasheet (https://adafru.it/1abZ) for pin configuration) or via
 UART
- Red and Green LEDs on DIR signal to let you know forward or backward motion
- Yellow LED on STEP to let you know that motor driver is being moved
- Enable control line for low power / deactivation
- Index output will toggle when passing through the 'zero point' of the microsteps
- Diagnostic output will trigger on errors like shorted output or with "stall detection" (which requires UART configuration)
- Potentiometer to set current limiting, up to 2A
- 22uF 35V electrolytic capacitor on motor power
- 2 Oz copper for better current carrying and heatsinking
- Four mounting holes

©Adafruit Industries Page 6 of 17

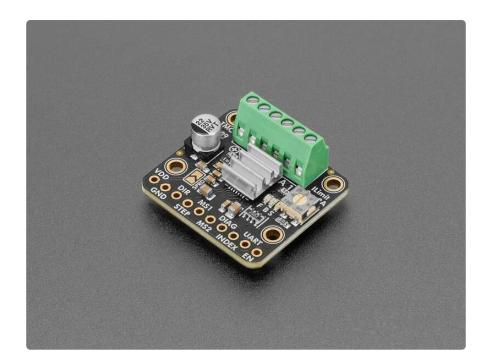

Comes as one assembled and tested breakout plus a small strip of header. You'll need to do some light soldering to attach the header onto the breakout PCB. Microcontroller, motors, and power supply not included. You will need some sort of driver board that will toggle the DIR/STEP pins for you.

Pinouts

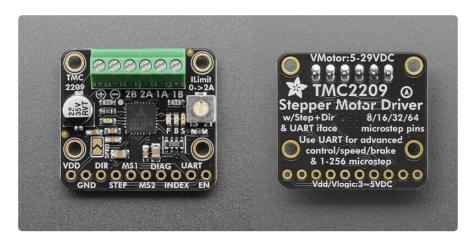

Power

- VDD This is the logic voltage input. To power the board, give it the same power as the logic level of your microcontroller e.g. for a 5V micro like Arduino, use 5V. It can be powered between from 3.3V to 5V.
- + (terminal block) This is the motor voltage input. Supply 5V to 29VDC for your motor.
- GND / (terminal block) common ground for power and logic.

© Adafruit Industries Page 7 of 17

Current Potentiometer

On the right side of the board is the current potentiometer. This potentiometer limits the current output to the motor. When the potentiometer is all the way to the right, you can get up to 2A max. Note that the higher currents will heat up both the motor driver and stepper, so you may need to add heatsinking to the chip.

Terminal Block Bipolar Stepper Motor Connections

- 1A and 1B The first set of motor control outputs connected to DMOS bridge 1.
- 2A and 2B The second set of motor control outputs connected to DMOS bridge 2.

Stepper Control Pins

- **DIR** This is the direction control pin. You can set this pin high or low to set the spin orientation. Pulling it high turns the motor clockwise. Pulling it low turns it counterclockwise.
- STEP This is the microstep control pin. Toggle this pin to take one step or microstep at a time. By default, the driver is set to 1/8 microstep mode.

Microstep Selection Pins


There are two pins (MS1, and MS2) that can be pulled high to change the default 1/8 microstep mode where both pins are open/low. The table below shows the pin combinations to change to the different modes. For example, if you wanted to use 1/16 microstep mode, you would tie both MS1 and MS2 high.

STEP	MS1	MS2
1/8	L	L
1/16	Н	Н
1/32	Н	L
1/64	L	Н

©Adafruit Industries Page 8 of 17

Arduino

Using the TMC2209 breakout with Arduino involves wiring up the breakout with a stepper motor to your Arduino-compatible microcontroller and running the provided example code.

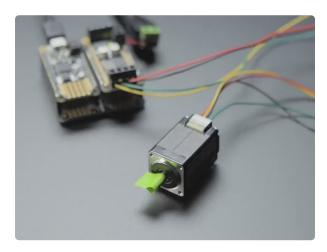

Mini Stepper Motor - 200 Steps - 20x30mm NEMA-8 Size

This tiny stepper motor is the same quality and step-size as the big NEMA-17's we stock, but so cute so it will work with compact CNC builds. This 4-wire bipolar stepper has...

https://www.adafruit.com/product/4411



Adjustable Power Supply with 2.1mm / 5.5mm DC - 3V to 12V at 5A

Put your Snap! cassette on and sing along to "I got the power!" with this super useful power supply adapter where...

https://www.adafruit.com/product/4880


Wiring

Wire as shown for a **5V** board like an Uno. If you are using a **3V** board, like an Adafruit Feather, wire the board's 3V pin to the breakout VDD.

Here is an Adafruit Metro wired up to the breakout with a stepper motor. You'll need to connect the stepper motor power supply to the DC jack on the Metro.

Check your stepper motor wiring - your motor may have different wire colors or wire order.

©Adafruit Industries Page 14 of 17

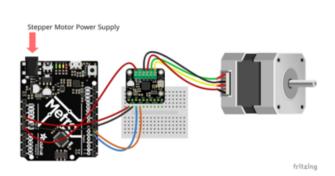

Stepper motor power supply to Metro DC Jack

Breakout VDD to Metro 5V (red wire)
Breakout GND to Metro GND (black wire)
Breakout DIR to Metro pin 5 (blue wire)
Breakout STEP to Metro pin 6 (orange wire)

Breakout terminal block + to Metro VIN (red wire)

Breakout 1A to stepper motor coil 1 positive (green wire)

Breakout 1B to stepper motor coil 1 negative (yellow wire)

Breakout 2A to stepper motor coil 2 positive (red wire)

Breakout 2B to stepper motor coil 2 negative (black wire)

Example Code

```
// SPDX-FileCopyrightText: 2025 Liz Clark for Adafruit Industries
// SPDX-License-Identifier: MIT
const int DIR = 5;
const int STEP = 6;
const int microMode = 8; // microstep mode, default is 1/8 so 8; ex: 1/16 would be
// full rotation * microstep divider
const int steps = 200 * microMode;
void setup()
  // setup step and dir pins as outputs
  pinMode(STEP, OUTPUT);
pinMode(DIR, OUTPUT);
void loop()
  // change direction every loop
  digitalWrite(DIR, !digitalRead(DIR));
  // toggle STEP to move
  for(int x = 0; x < steps; x++)
    digitalWrite(STEP, HIGH);
    delay(2);
    digitalWrite(STEP, LOW);
    delay(2);
  delay(1000); // 1 second delay
```

© Adafruit Industries Page 15 of 17


Upload the sketch to your board. You'll see your attached stepper motor turn clockwise and then reverse and turn counterclockwise.


Downloads

Files


- TMC2209 Datasheet (https://adafru.it/1ac0)
- EagleCAD PCB Files on GitHub (https://adafru.it/1ac1)
- 3D models on GitHub (https://adafru.it/1ac7)
- Fritzing object in the Adafruit Fritzing Library (https://adafru.it/1ac2)

Schematic and Fab Print

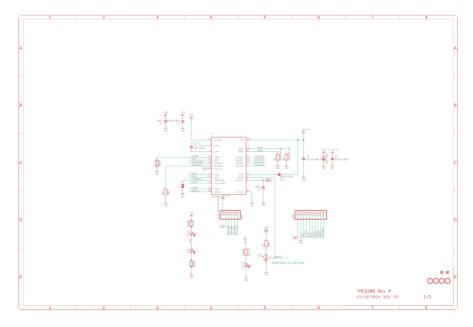

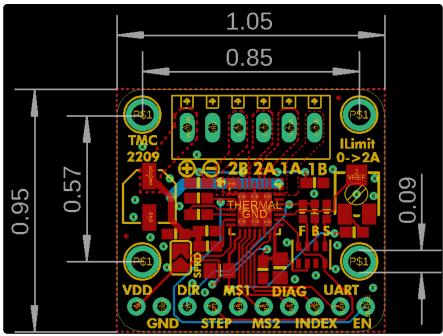

© Adafruit Industries Page 16 of 17

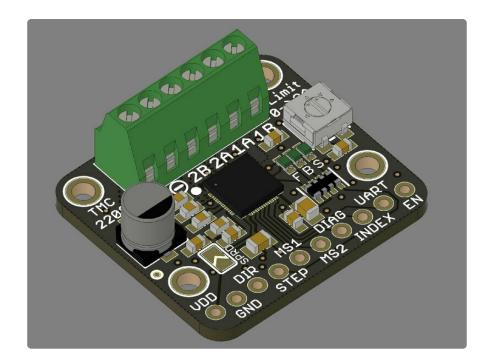

© Adafruit Industries Page 17 of 17