

MECHIMON BADGE


Soldering Guide

Before you start make sure to check if the following parts are included in your kit:

- 2x LEDs
- 1x switch
- 2x capacitors
- 1x battery holder
- 1x 7555 chip
- 1x transistor
- 7x resistors
- 1x CR2032 battery

SCHEMATICS


front

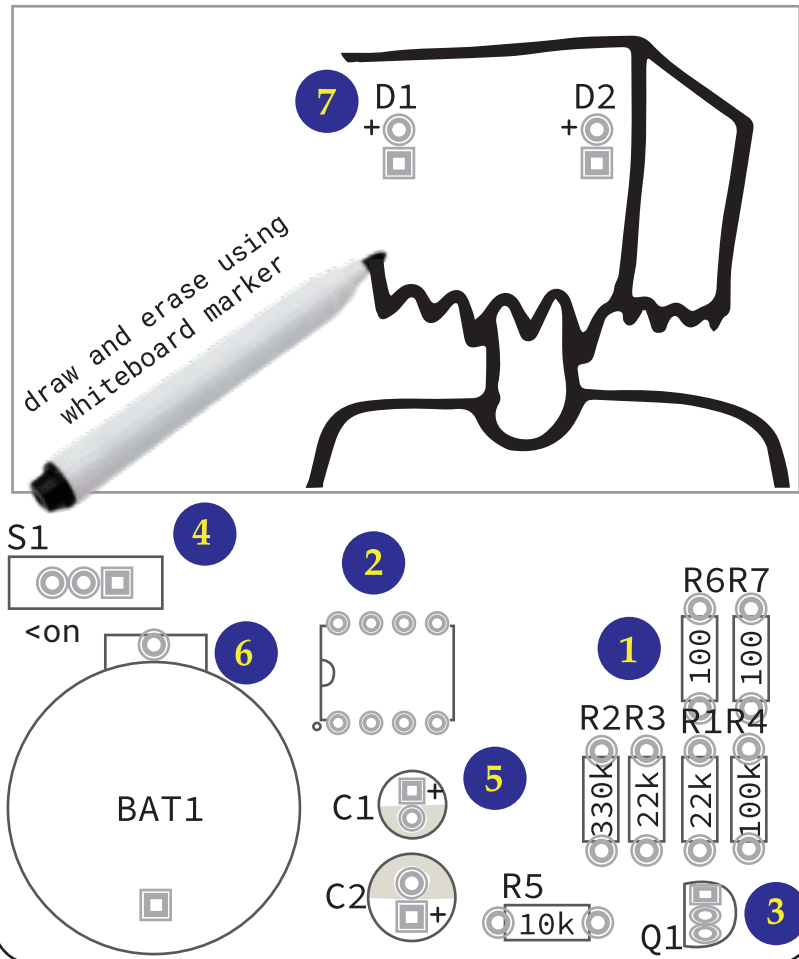

1 Resistors

Bend your resistors and put them in the designated spots. The orientation does not matter. You can identify them by their stripes:

R6/R7 100 R5 10k R1/R3 22k

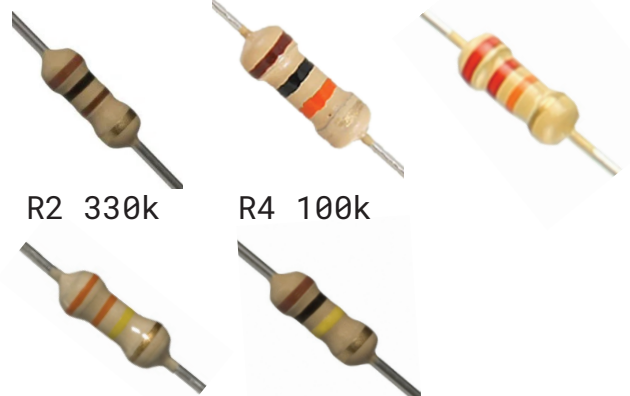

Solder the parts onto the back and clip off any excess.

2 U1 7555 Chip



Bend the legs and place the chip so the notch lines up with the notch shown on the schematic. Then solder it on the back.

4 S1 Switch



Insert the switch in its place. Orientation doesn't matter. Solder the pins on the back of the board.

3 Q1 Transistor



Insert the transistor so its shape matches the shape shown on the schematic. Bend the leads and solder them on the back. Make sure to solder each pin to its own pad, without letting the solder connect to another pad. This step can be a bit tricky.

5 C1/C2 Capacitors



Insert the small and large capacitors with the negative side (light blue) in the round hole marked on the schematic, and the positive side (dark blue) in the square hole on the board. Then solder the leads on the back.

7 D1/D2 LEDs

Insert the LEDs. By convention the long leg is positive + and needs to go into the round hole.



Before soldering them on, bend the legs, put in the battery and turn the switch. Solder the LEDs on to back if they are blinking.

6 BAT Battery Holder



Ensure the pins go all the way through the board. The battery holder should sit flat against the board with the pins fully inserted. Then solder the pins on the back.