भारतीय प्रौद्योगिकी संस्थान हैदराबाद
Indian Institute of Technology
Hyderabad

STM32 Clocks

Teaching Learning Center
IIT Hyderabad

G V V Sharma*

CONTENTS

***Abstract*—This manual shows how to manage clocks in arm using STM32F103C8T6.**

1 COMPONENTS

Component	Value	Quantity
Breadboard		1
Resistor	220 Ω	1
STM32F103C8T6		1
Seven Segment Display	Common Anode	1
Jumper Wires		20

TABLE 1.0: Components

Problem 1.1. List all available clocks in the STM32F103C8T6 blue pill.

Solution: See Table 1.1.

Clock	Location	Type	Frequency
HSI	Internal	RC	8Mhz
LSI	Internal	RC	32.768 kHz
HSE	External	Crystal	8Mhz

TABLE 1.1: STM32F103C8T6 Clock Types

*The author is with the Department of Electrical Engineering, Indian Institute of Technology, Hyderabad 502285 India e-mail: gadepall@iith.ac.in.

Problem 1.2. Make connections as shown in Table 1.2.

STM32	Seven Segment Display
3.3V	COM (through resistor)
PA1	DOT

TABLE 1.2: Pin Connections

1.1 HSE

Problem 1.3. Execute the following program

```
https://github.com/gadepall/STM32F103C8T6/blob/master/examples/clocks/hse_systick_blink.c
```

Problem 1.4. Explain the following instruction

```
RCC->CR =0x00010000;
```

Solution: Fig. 1.4 shows the RCC− >CR register. The above instruction enables the HSE crystal, which is 8 MHz for the STM32F103C8T6.

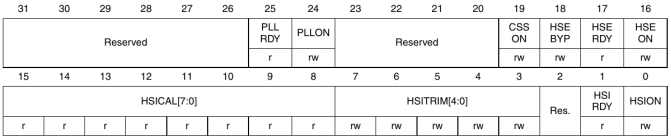

Fig. 1.4: RCC Clock Control Register (RCC− >CR)

Problem 1.5. Explain the following instruction

```
RCC->CFGR =0x00000001;
```

Solution: Fig. 1.5 shows the RCC− >CFGR register. The above instruction makes the HSE as the system clock through SW = 01.

Problem 1.6. Verify that HSE is the system clock by checking that SWS = 01.

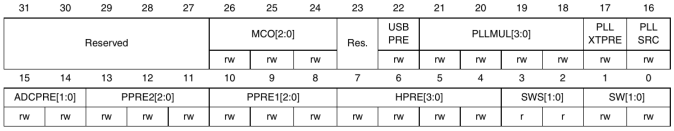

Fig. 1.5: RCC clock Configuration Register (RCC− >CFGR)

2 PLL

Problem 2.1. Make the PLL as the system clock.

Solution:

```
RCC->CFGR =0x00000010;
```

Problem 2.2. Choose the PLL input as HSE.

```
RCC->CFGR =0x00010010;
```

Problem 2.3. Enable PLL

Solution:

```
RCC->CR =0x01010000;
```

Problem 2.4. Execute the following code.

```
https://github.com/gadepall/
    STM32F103C8T6/blob/master/
    examples/clocks/
    pll_systick_blink.c
```

Problem 2.5. Make the PLL output = 24 MHz.