


Construction drawings

Rotated opening and mirrored corner detail | Design ca8aced76ca1 | Build 30edf49b


opening.elevation

1:40 · imperial

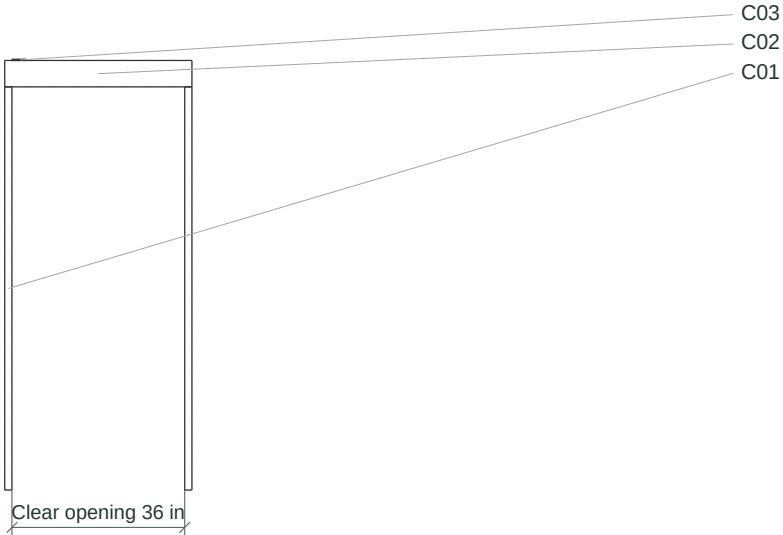

Corner sample: profile and bore

1:2 · imperial · detail of sheet 1

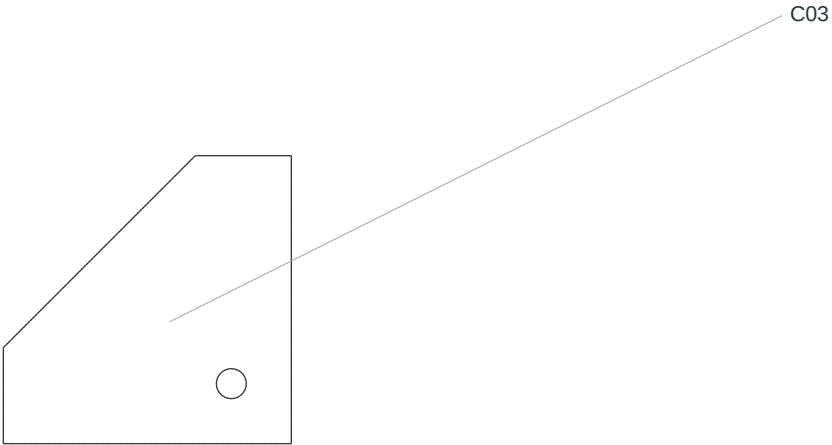

Scale check: this line is exactly 4 in on the page.

Cut schedule

Rotated opening and mirrored corner detail | Design ca8aced76ca1 | Build 30edf49b

C-labels identify identical finished parts and cut recipes. Counts include every physical part. Member identities and original marks are in parts.csv. All blank dimensions use the part's local stock frame.

Cut types

Cut / stock	Qty	Typical part	Starting blank	Cut
C01/M01	2	opening.left_jamb	1 1/2 in × 3 1/2 in × 84 in	Square cut
C02/M02	1	opening.header	39 in × 3 1/2 in × 5 1/2 in	Square cut
C03/M03	1	opening.corner_detail	3 in × 3 in × 1/4 in	D01

Special cutting instructions

Detail	Instructions
D01	Cut the closed outline on the local blank face. Join coordinates (3 in, 0 in); (0 in, 0 in); (0 in, 1 in); (2 in, 3 in); (3 in, 3 in). Bore 5/16 in diameter through. Center 2 3/8 in, 5/8 in from the local blank corner. Drill through the local Z direction.

Material purchases

Purchase	Quantity	Unit price	Saved quote	Amount
M02 · lumber 3 5x5 5 · softwood · 96 in · 3 1/2 in × 5 1/2 in	1 board	Missing		Missing
M04 · screws no10x3 · wood · gauge: #10 · length: 3 in	1 pack / 50 each	Missing		Missing
M03 · steel plate 3x3x0 25 · steel · size: 3 in × 3 in × 1/4 in	1 each	Missing		Missing
M01 · lumber 1 5x3 5 · softwood · 96 in · 1 1/2 in × 3 1/2 in	2 board	Missing		Missing

Known subtotal USD 0.00; tax 0.00; contingency 0.00. Total incomplete: missing quantities/prices are not zero.

Board cutting plan — repeat each row for its quantity

Plan	Qty	Stock section × length	Cuts in order; allow saw kerf	Reusable offcut
B01	1	M02 · 3 1/2 in × 5 1/2 in × 96 in	C02 (39 in); kerf 1/8 in	56 7/8 in
B02	2	M01 · 1 1/2 in × 3 1/2 in × 96 in	C01 (84 in); kerf 1/8 in	11 7/8 in

Cut lengths are blank lengths. Kerf between cuts and before offcuts is included in the saved allocation. Do not substitute a smaller stock section. Allowances and purchase overrides are separate from the required cut counts.

Scale check: this line is exactly 4 in on the page.

Assembly sequence

Rotated opening and mirrored corner detail | Design ca8aced76ca1 | Build 30edf49b

1. Cut the jambs and header to the listed lengths, label them, and assemble the opening on a flat surface.

Cut types C01, C02. Drawings on sheet 1.

Seat the header on both jamb ends. Clamp square and fasten with two #10 x 3 in screws into each jamb.

Hardware: 4 × screws.no10x3.

2. Cut and bore the separate mirrored corner sample using its local blank dimensions; this sample is not a specified structural connector.

Cut types C03. After step 1. Drawings on sheet 1.

Review — Prices or quantities are incomplete; missing values are not zero.

Saved estimate 59bb8081aaa8d37e9309104e019816cd2697f2e0094b9f56b7a8d352edb58656. Price basis 91f8389ee47ce7b5173db427f2e18d307eeb27033c8ee66e61b98c1caed8ed39.

Sheet index

Sheet	Contents
1	opening.elevation; Corner sample: profile and bore
2	Cut schedule
3	Assembly sequence