Rev C | COMPLETE ROBOT WIRING

One Pololu 2810 LV master switch. 7 Nov 2026 signal update: lower D8, upper D7.

POSITIVE | servo current passes through the Pololu, never through the XIAO

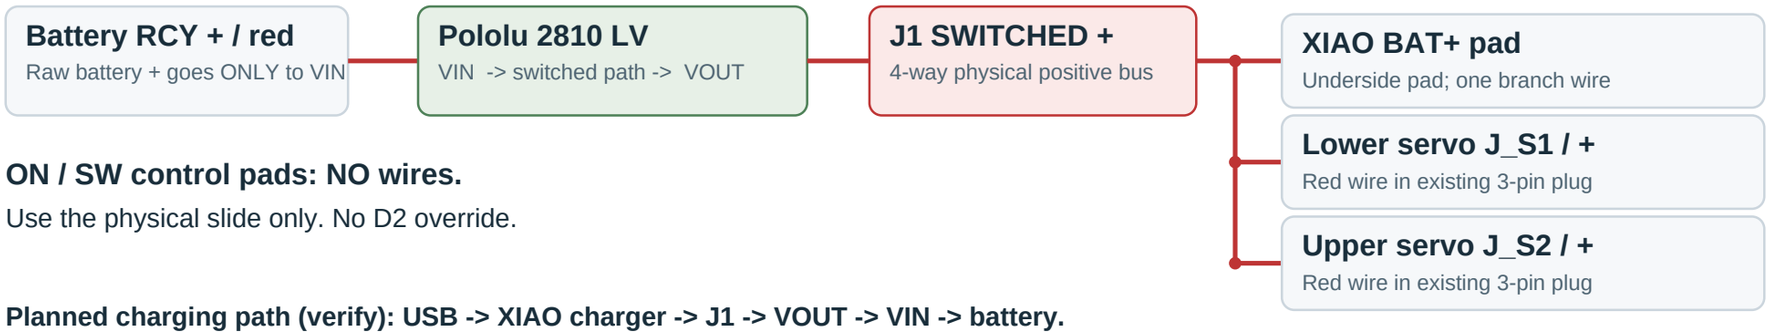

ON / SW control pads: NO wires.

Use the physical slide only. No D2 override.

Planned charging path (verify): USB -> XIAO charger -> J1 -> VOUT -> VIN -> battery.

GROUND | one common return, including the Pololu

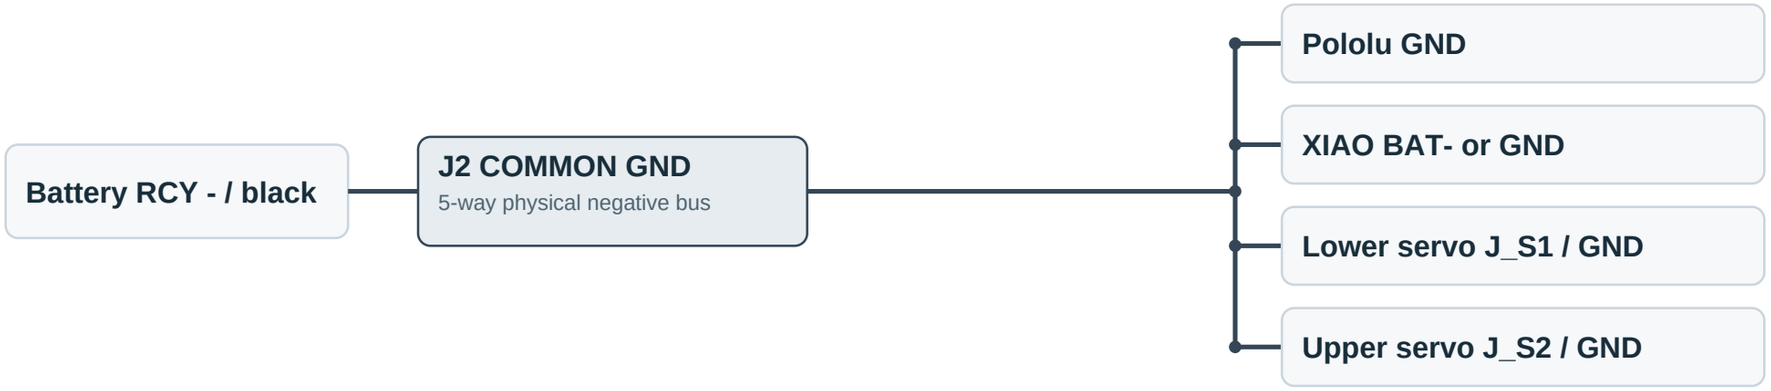

PWM | these signal wires share the same existing three-pin servo plugs

D2 remains UNUSED. XIAO 3V3 and 5V/VBUS are NOT connected to servo power.

CHARGE: USB at boot + switch ON (0.6); or ./robot charge.

Battery-only ON starts recovery; 60 s of base stillness locks PWM until reboot.

STORAGE OFF: unplug USB AND slide OFF. OFF + USB isolates the cell but may power the servos.

PWM off is not power off. Verify idle load/charge completion. Disconnect battery + USB before service.

Not a physical pad layout. Verify board labels. Numbered assembly steps: electrical/FROM_SCRATCH.md