

Rev A · complete robot wiring

The three bus blocks are physical insulated solder junctions. Each drawn line is one wire; this is a connectivity diagram, not a scale drawing.

Power distribution

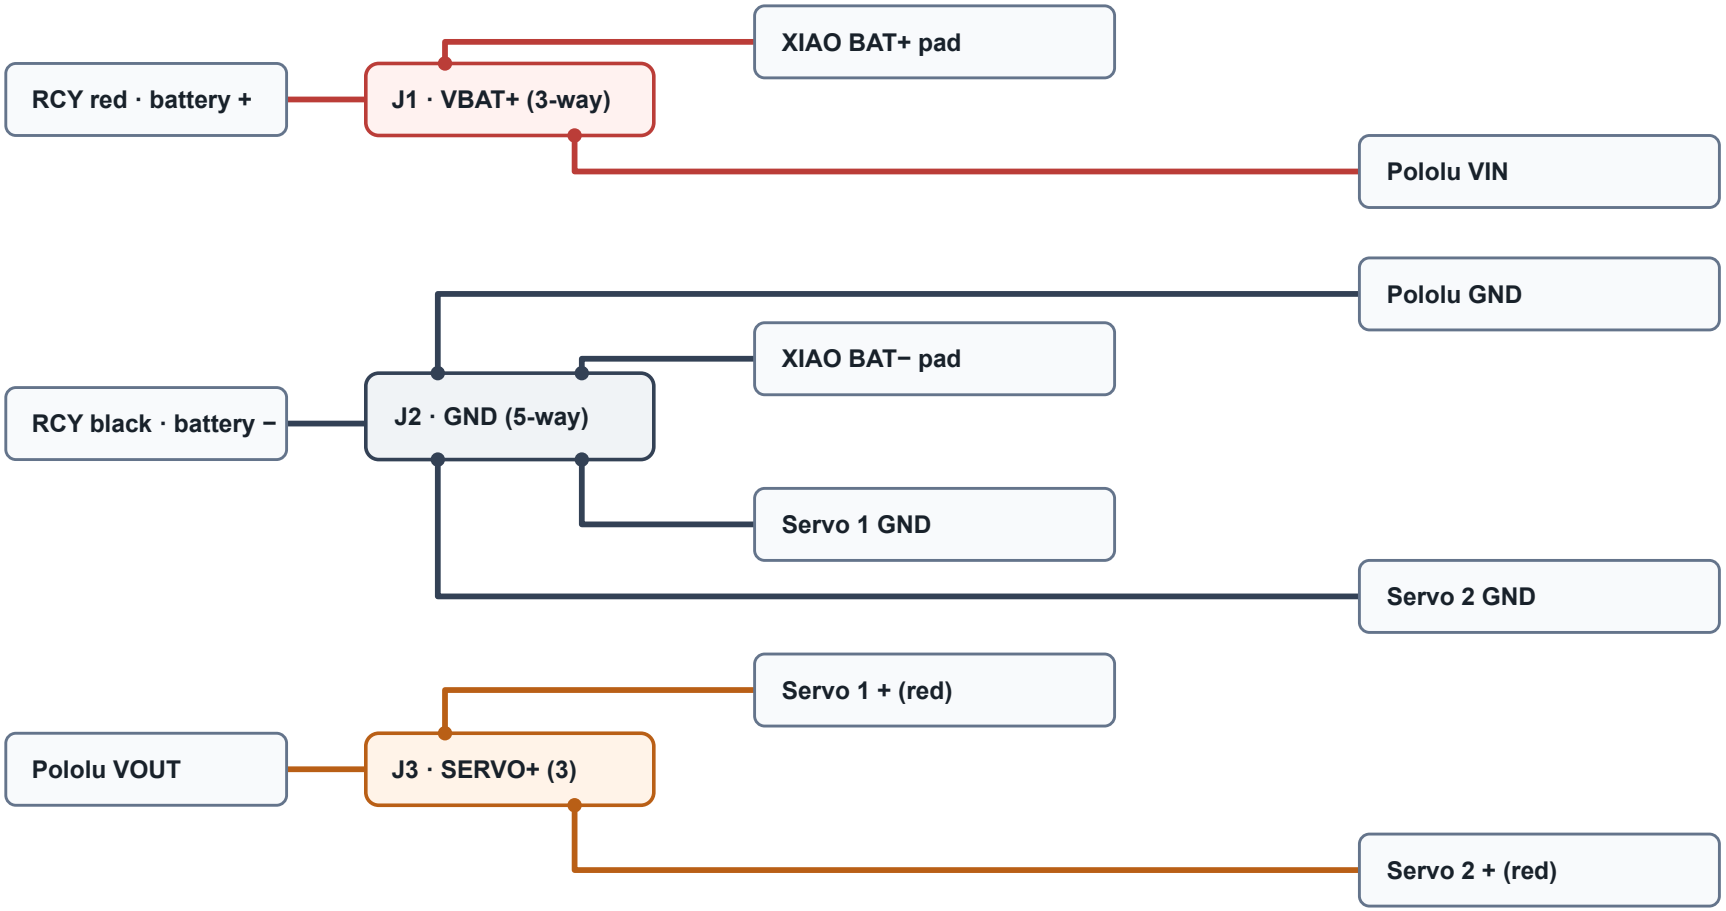

Control wires · each line is a separate direct connection

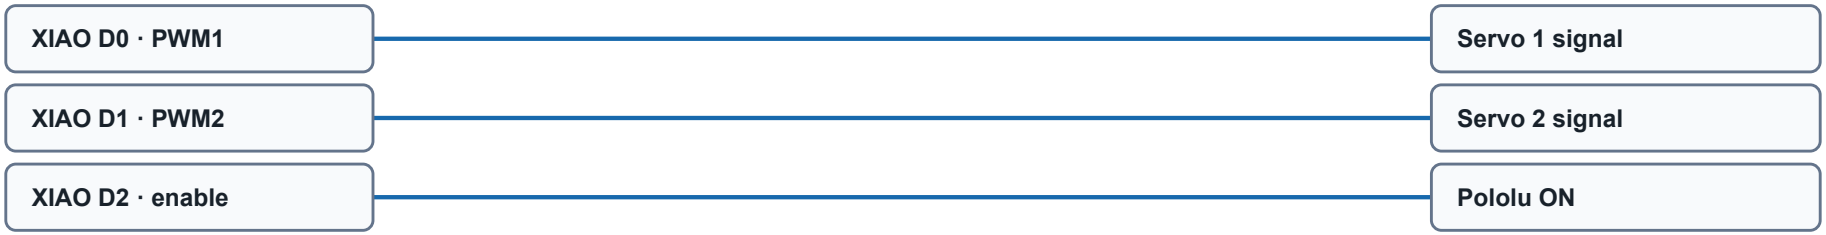

Never connect servo + to XIAO 3V3/VBUS. USB-C and the IMU are already on the XIAO. For USB charging, first verify D2 LOW and VOUT off.