Rev C | COMPLETE ROBOT WIRING

One Pololu 2810 LV master switch. 7 Nov 2026 signal update: lower D8, upper D7.

POSITIVE | servo current passes through the Pololu, never through the XIAO

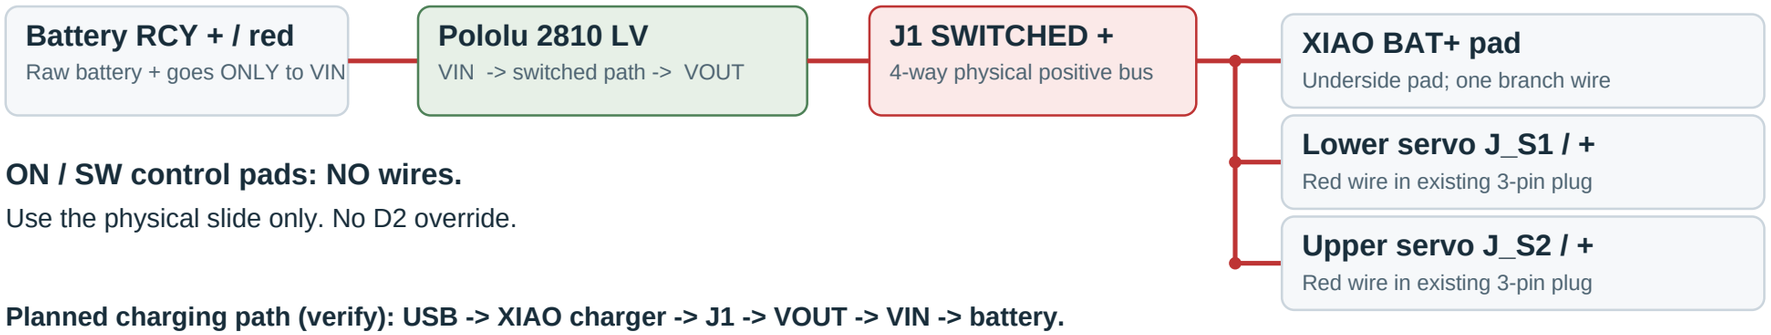

ON / SW control pads: NO wires.

Use the physical slide only. No D2 override.

Planned charging path (verify): USB -> XIAO charger -> J1 -> VOUT -> VIN -> battery.

GROUND | one common return, including the Pololu

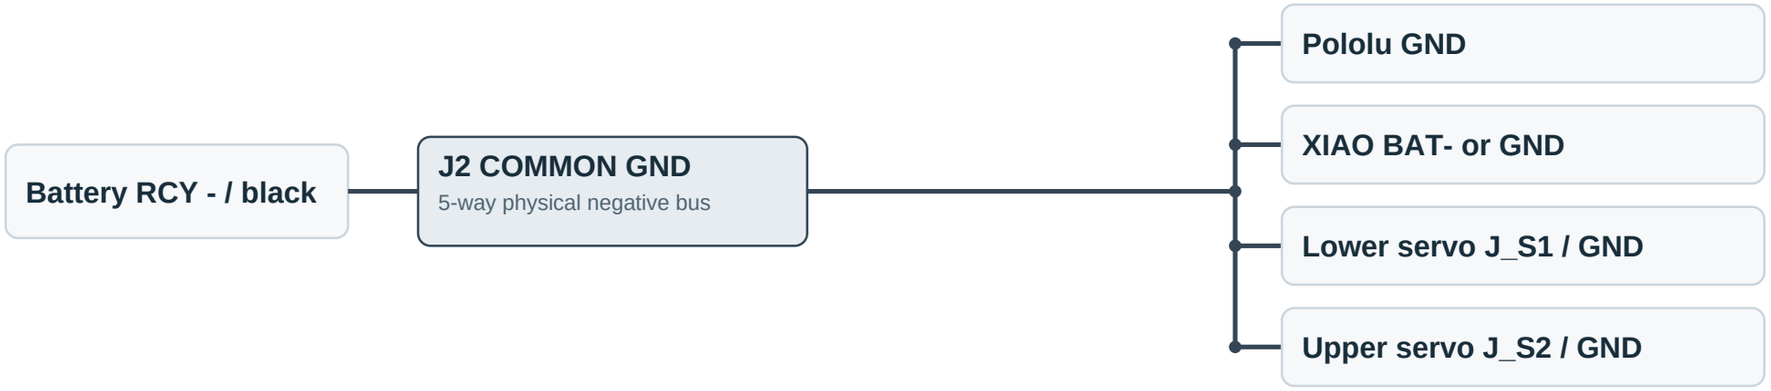

PWM | these signal wires share the same existing three-pin servo plugs

D2 remains UNUSED. XIAO 3V3 and 5V/VBUS are NOT connected to servo power.

CHARGE: switch ON + USB connected + ./robot charge (firmware 0.4).

Charge mode stops PWM, not servo power; idle current and charging completion need measurement.

STORAGE OFF: unplug USB AND slide OFF. OFF + USB isolates the cell but may power the servos.

No routine connector access. Disconnect battery AND USB before soldering or servicing.

Not a physical pad layout. Verify board labels. Numbered assembly steps: electrical/FROM_SCRATCH.md