




Standoff

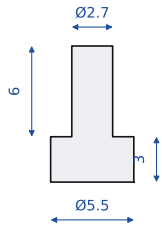


Pin, cap head, 6

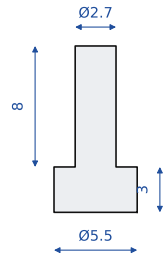


Pin, cap head, 8

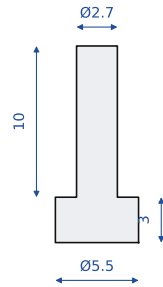


Pin, cap head, 10

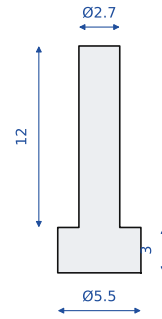

Pin, cap head, 12

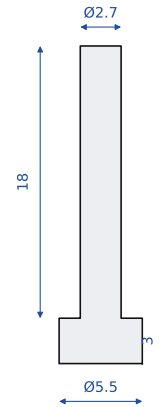

Pin, cap head, 18

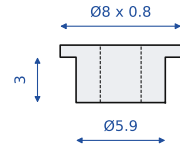


Press-nut ring
bore Ø2.7

Parts list

Qty	Part	Goes	Print
8	Standoff Ø6 x 35	S1-S8, lower plate to top plate	stand on end
8	Pin, cap head, 6	top plate into the standoffs	lying flat
2	Pin, cap head, 8	S7, S8: tail plate, from below	lying flat
2	Pin, cap head, 10	S1, S2: chin plate, from below	lying flat
12	Pin, cap head, 12	arm bolts (4) from below; braces (8) from above	lying flat
4	Pin, cap head, 18	S3-S6 from below: belly, arm, lower plate	lying flat
12	Press-nut ring	lower plate's arm-bolt holes (4); under the arms at the braces (8)	flange down
1	Fit gauge	print first: bores 2.4-3.0, notches count 0.1 mm steps	flat

Fit: pins Ø2.7 clear the plates' 3.0-3.2 holes and press into Ø2.7 bores. Bores printed standing come out about 0.1-0.15 undersize, so this grips. Too tight or loose: print the gauge, then rerun hardware.py --bore. Print pins lying flat (stronger across the layers), in PETG or PA, 100 % infill. Lengths match the real screws, measured under the head. Chin and tail plate holes are Ø2.8 in the model: open them to 3.2 for the pins to pass. The STEP countersinks those holes; with plain holes, cap-head pins go there (hardware.py --countersunk for the other). The brace fasteners are as the RJX manual shows them (M3 x 12, press nuts); pins sit loose in the Ø5 and Ø4 holes.



Mark4 V2 10" frame, from its STEP model. mm. Print at 100 % (actual size) and check the bar.

Hardware stand-ins (printed)	Scale 2:1
Pins Ø2.7 in Ø2.7 bores, no threads. For test assembly only	Sheet 1 of 1