Quick-Start Tutorial for New Users

This is a simple tutorial to show how to use TRaP.

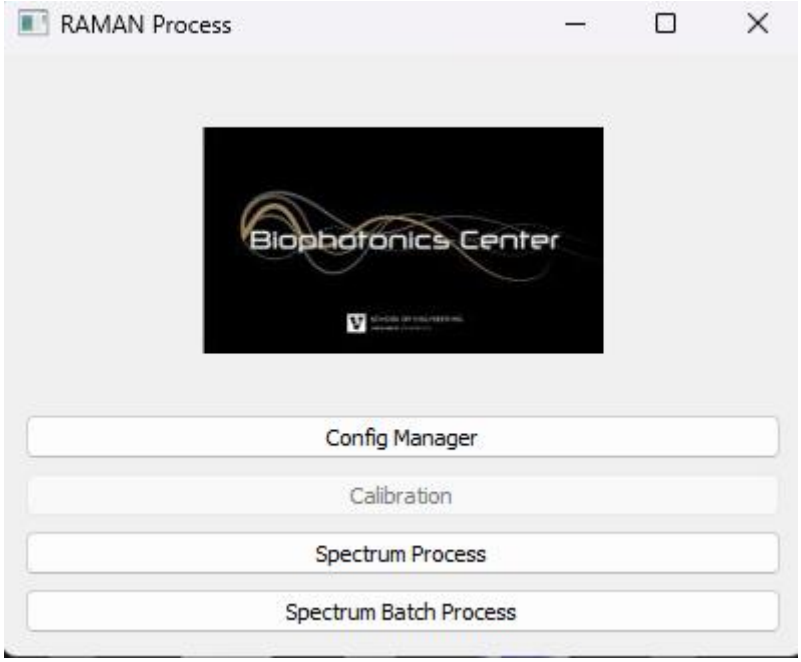

Step 1 - Config Manager

- In the **Config Manager** panel, pick the **Name** of your configuration and the corresponding **System** setting.
- If you want to perform an **X-axis calibration**, set **Use X-axis Calibration** to **"Yes"**.
- Before any other function is available, you must **save a new configuration** or **load an existing one**.

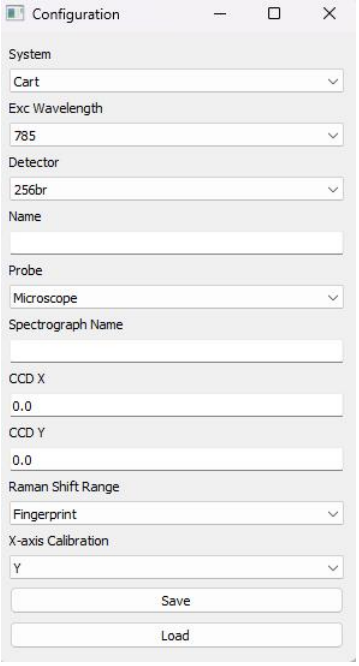

Step 2 - Calibration

- Click **Calibration**.

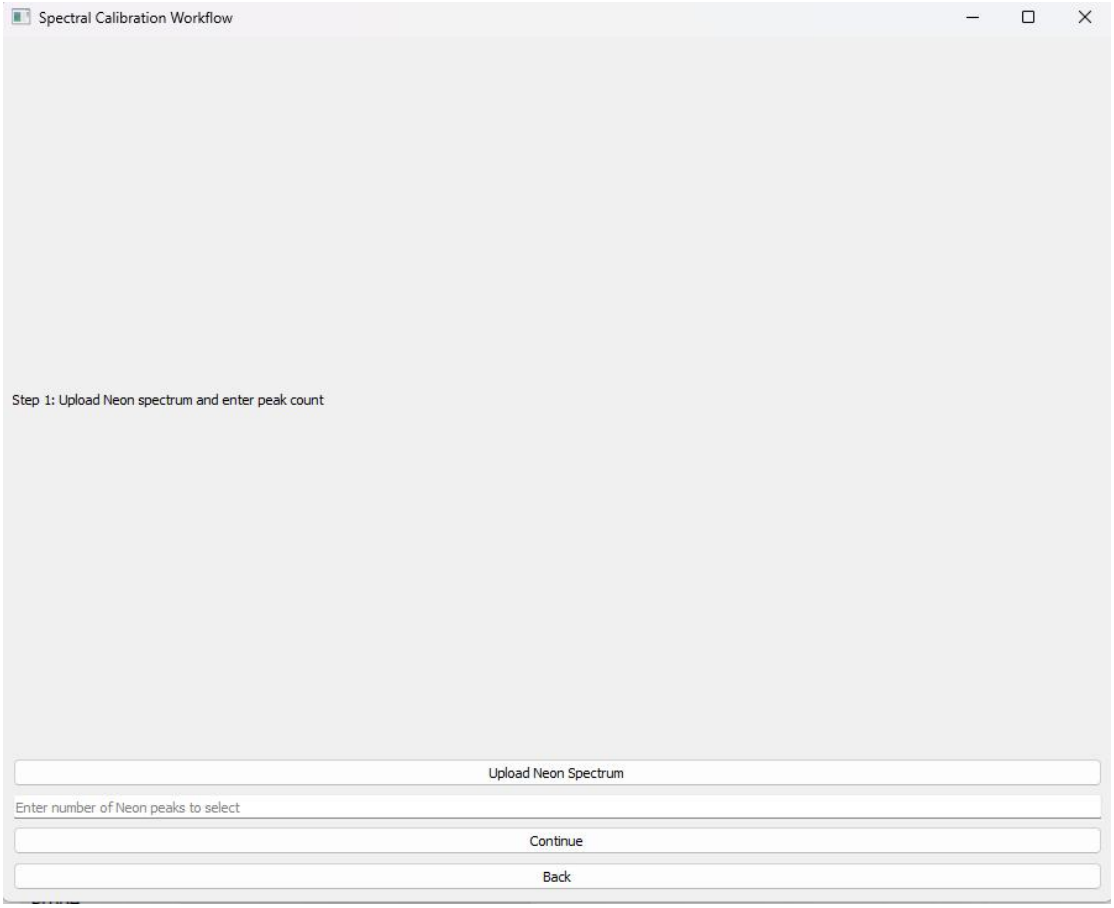

- Upload your **NeArgon (NeAr) spectrum** file.

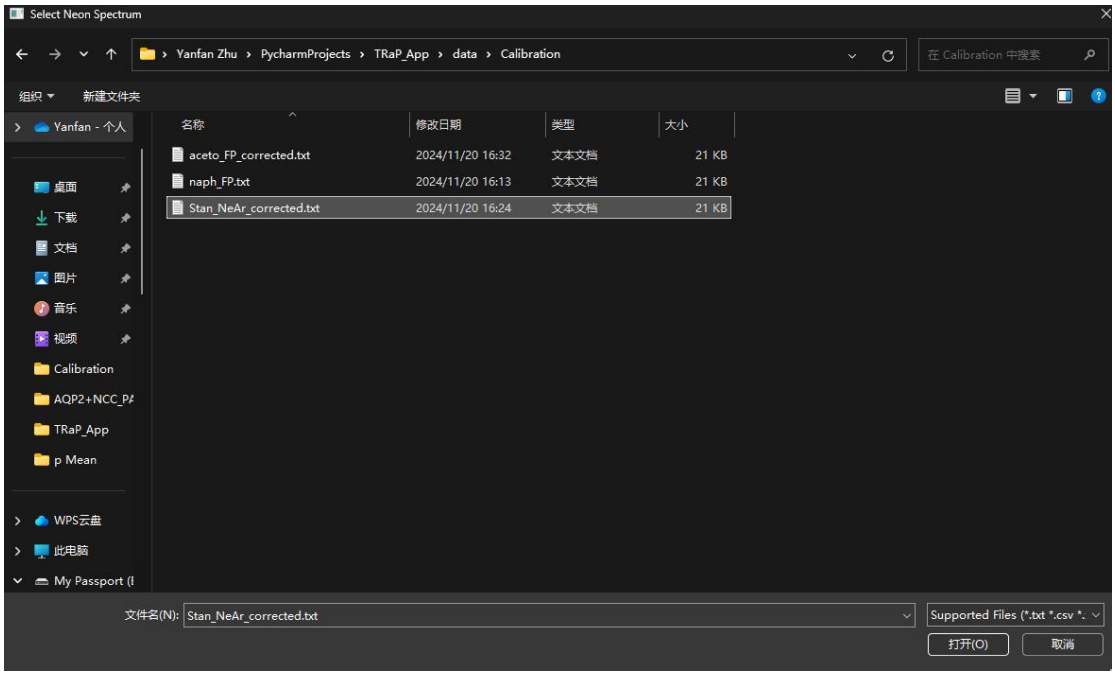

- Enter the **number of peaks** you plan to select.

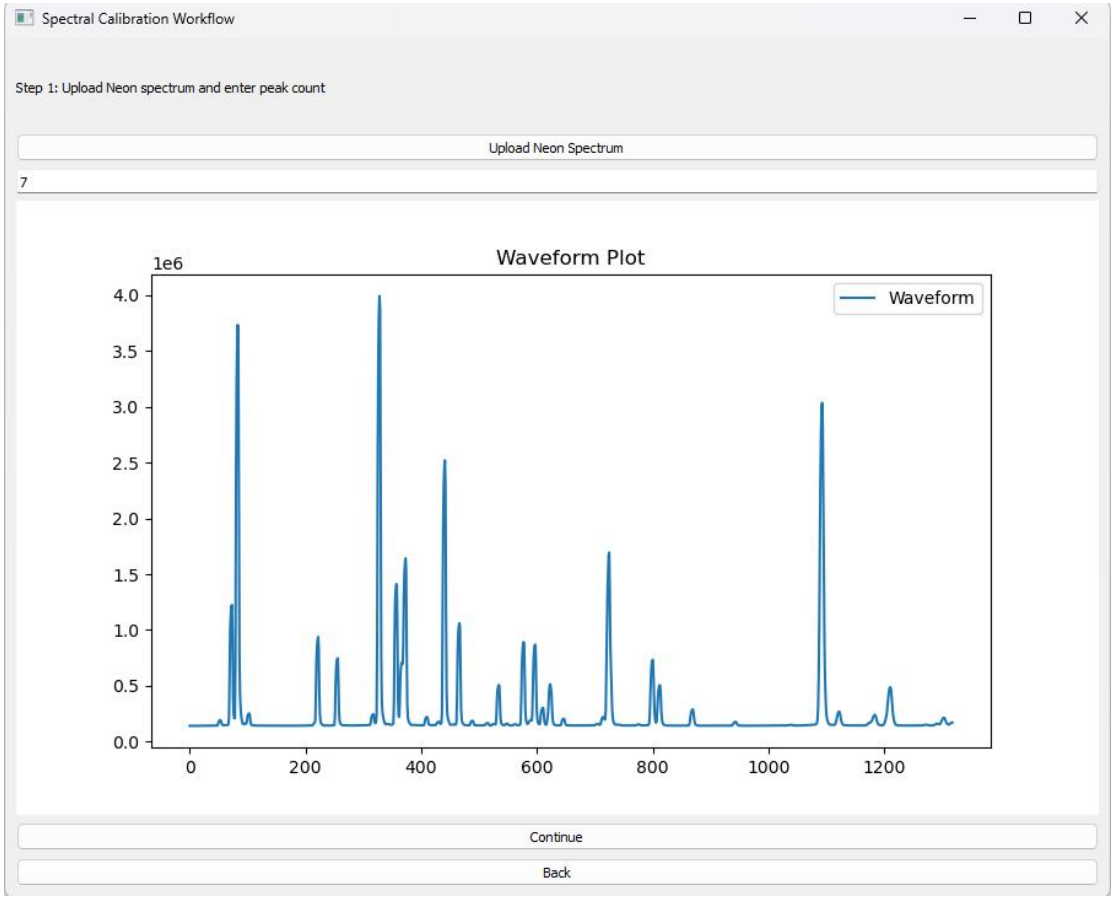

Step 3 – Peak Selection & Processing

- On the plotting canvas, **click each peak** you want to use.

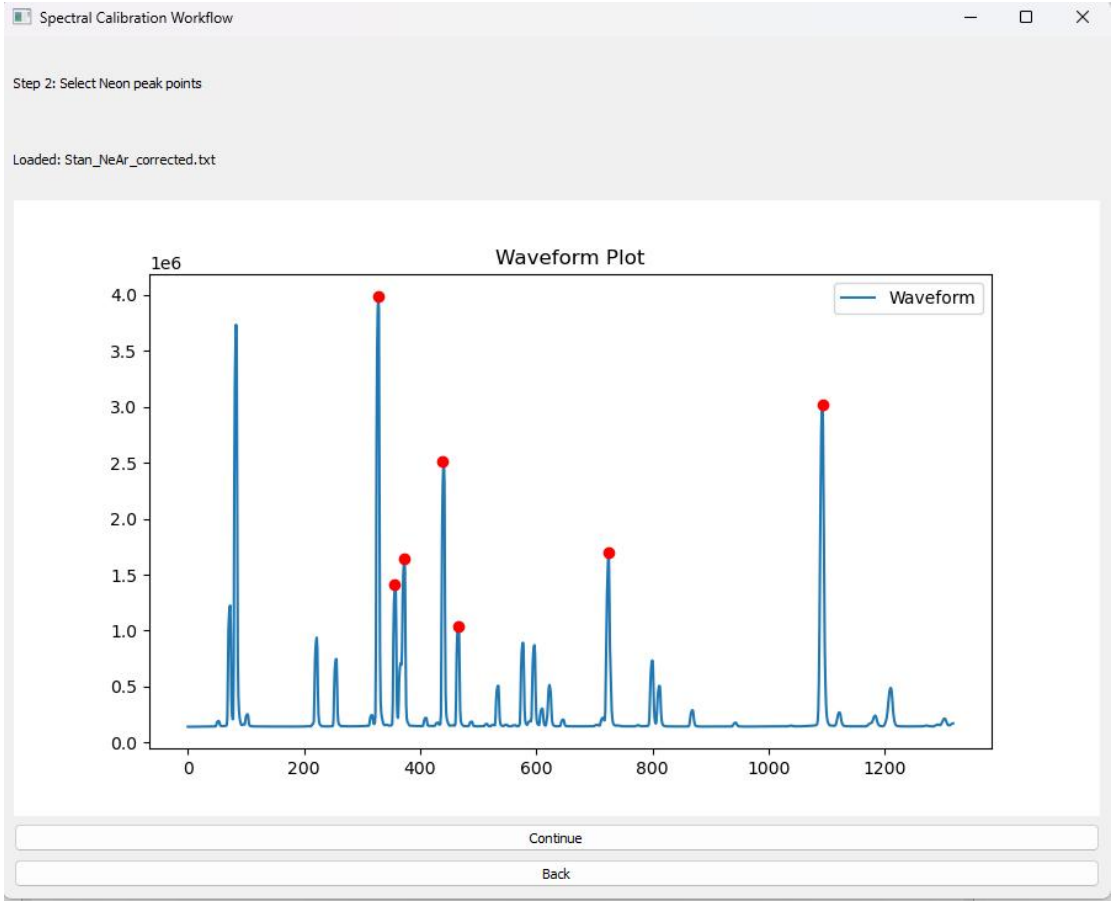

- Indicate whether you **already know the system wavelength**:

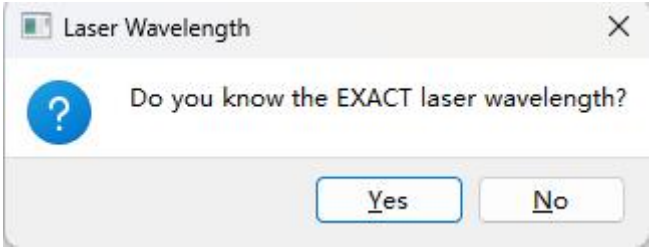

◆ **If you do:** type the wavelength value.

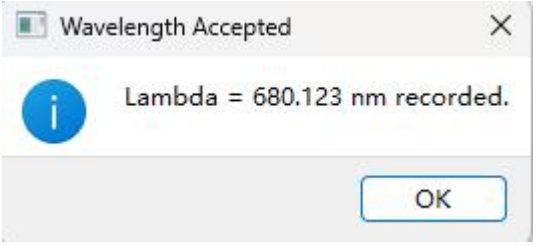

- **If you don't:**

1. Choose **"No"**

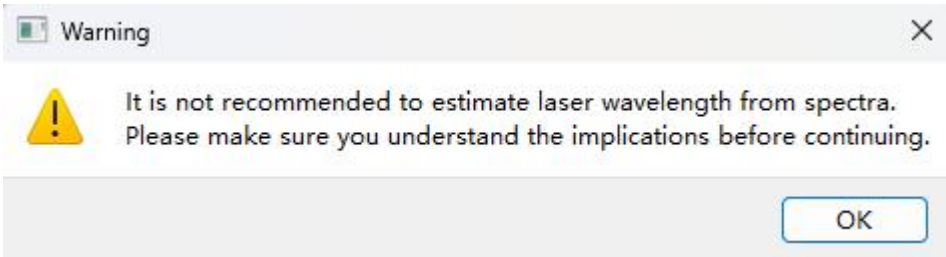

2. Upload an **acetaminophen spectrum**.

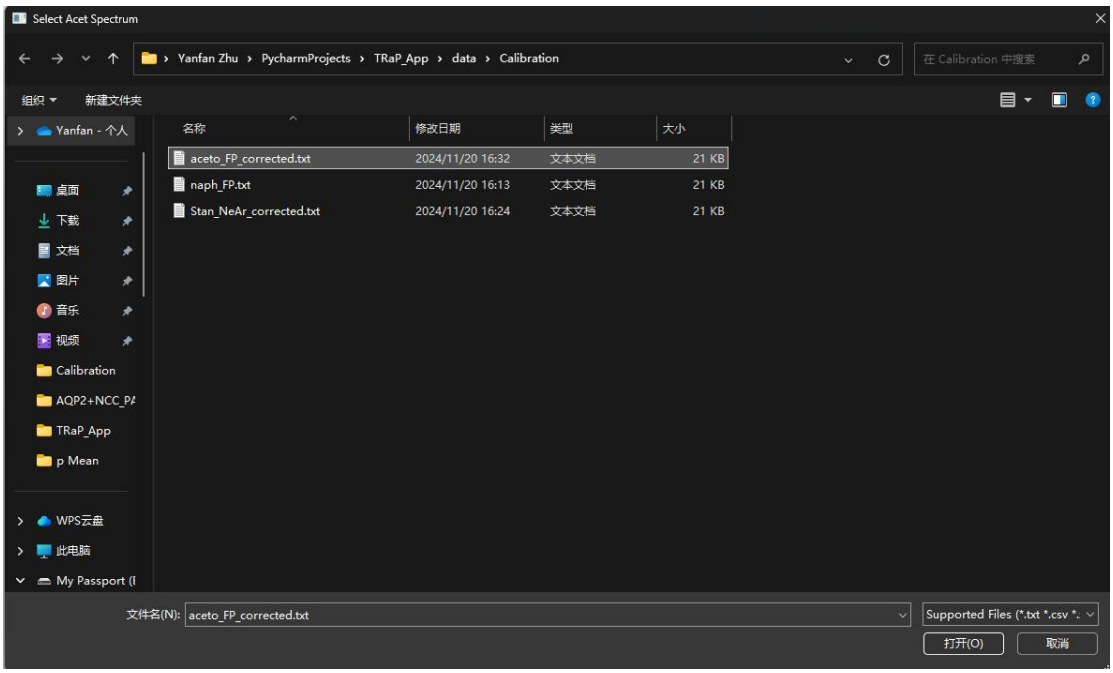

3. Enter the **number of peaks** in that spectrum.

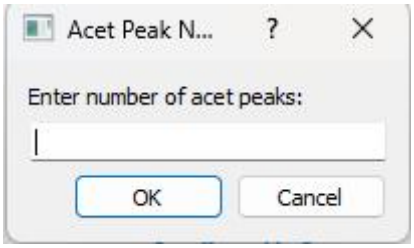

4. Click each peak on the plotting canvas to align them.

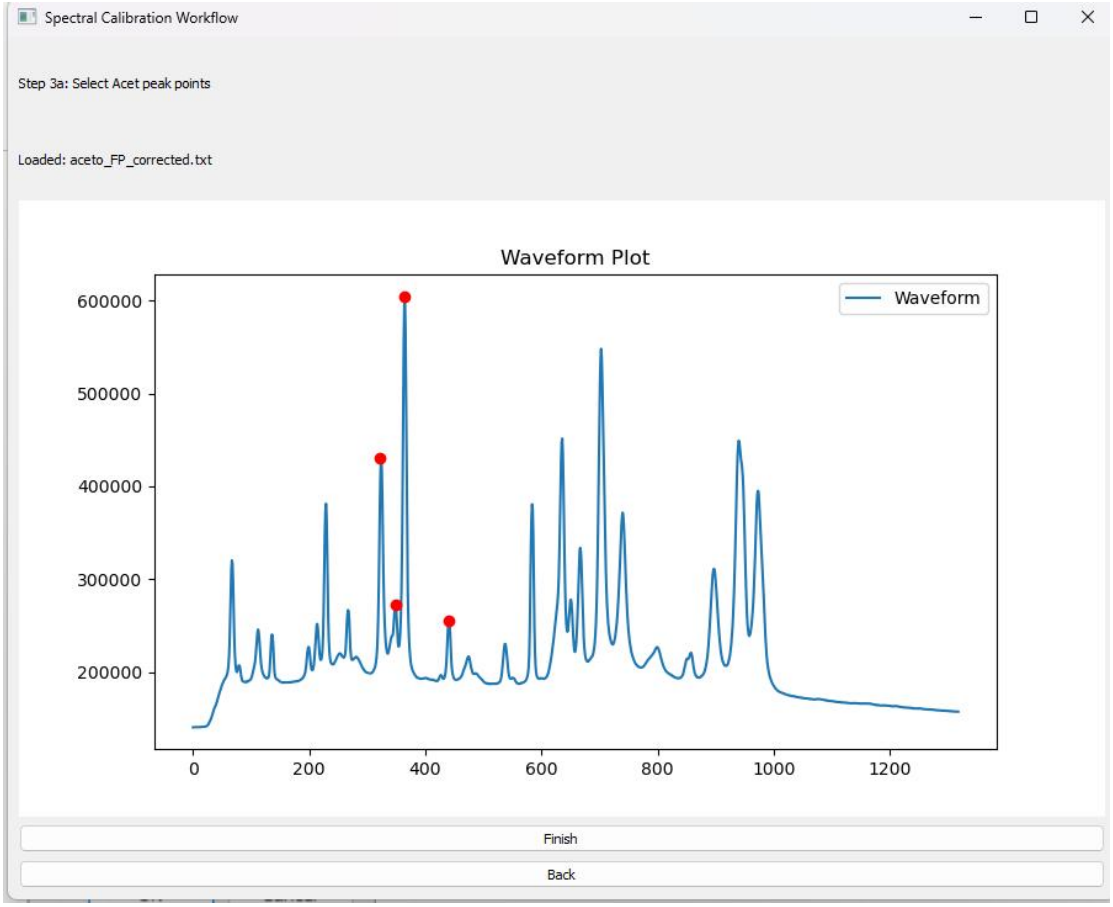

- Press **Process and Save** to generate your **calibration (.Cal) file**.

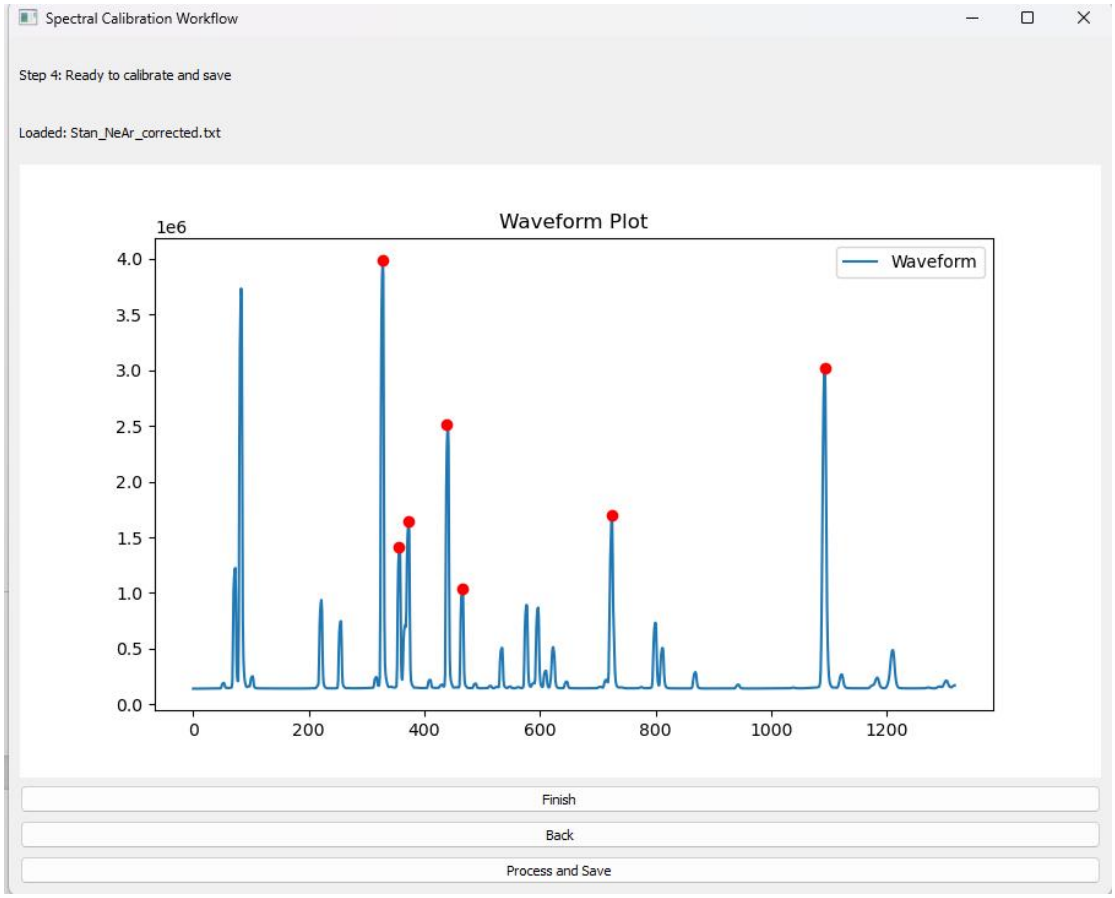

P-Mean Process:

Click **Spectrum Process** to see how each parameter influences the waveform throughout the P-Mean workflow.

- First, fill in **Start**, **Stop**, and **Poly order.**
- Press **Load Data Files** to choose your waveform file, the white-light-correction file, and the calibration file.
- Click **Next** to step through the process and observe each change in the waveform.
- You can adjust parameters at any time; **Current Step** shows the stage you are on, while **Next Step** previews what comes next.

To handle multiple spectra at once, choose **Spectrum Batch Process**.
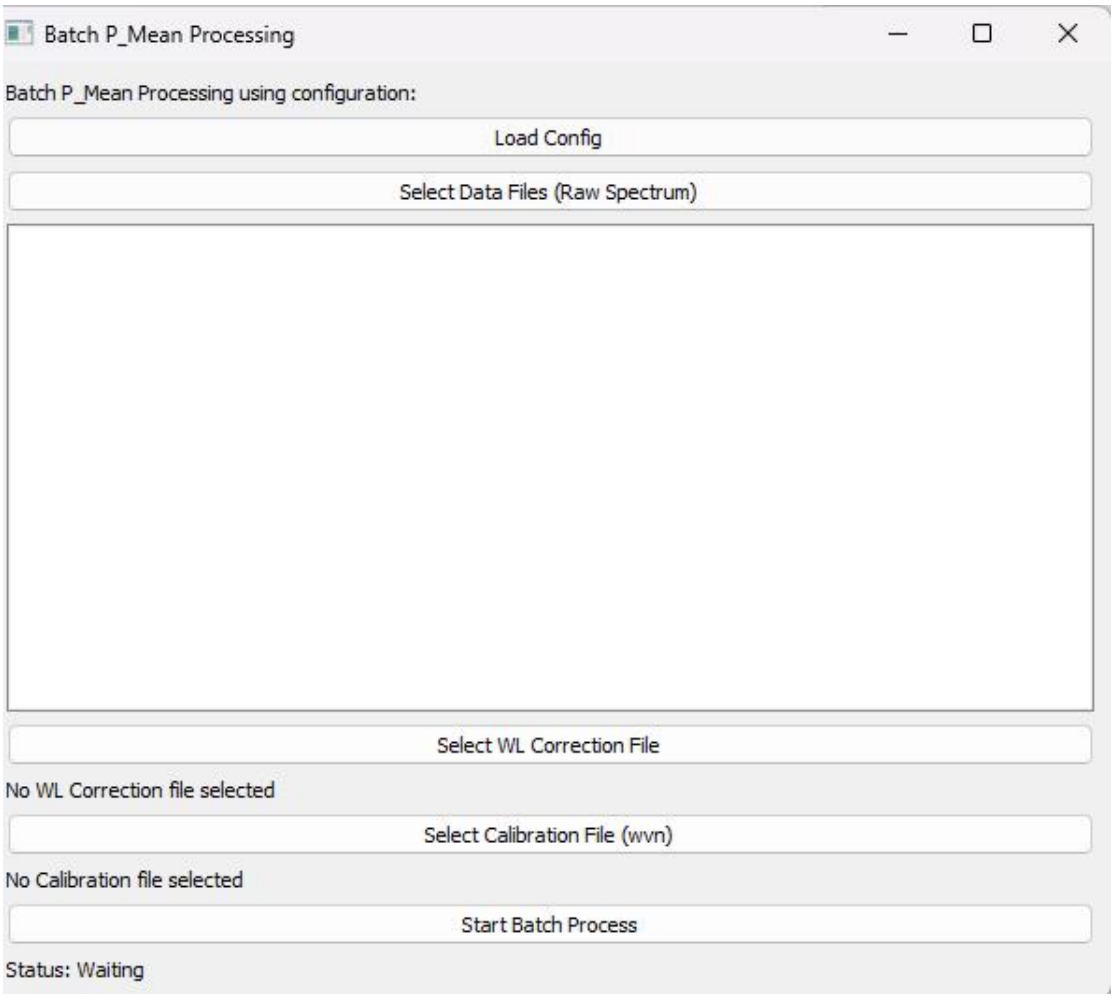
- In **Select Data Files**, upload your waveform files.
- In **Select WL Correction File**, provide the white-light correction.
- In **Select Calibration File**, upload the calibration file.
- Click **Start Batch Process** to run P-Mean on all selected data.