



J&J Tool T-Master


1st Measure outer diameter of pipe covering and divide by 2 to get radius.

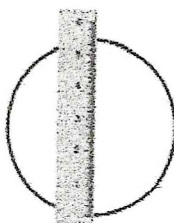

2nd Locate this number on the T-Master.

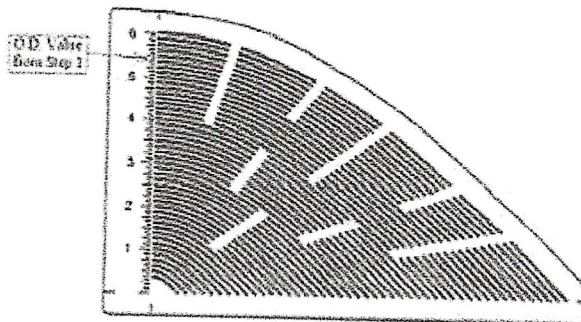

3rd While holding the T-Master steady in one position, trace the curve at this radius value and transfer the four squaring tab locations (A, B, C, D) as shown to the right.

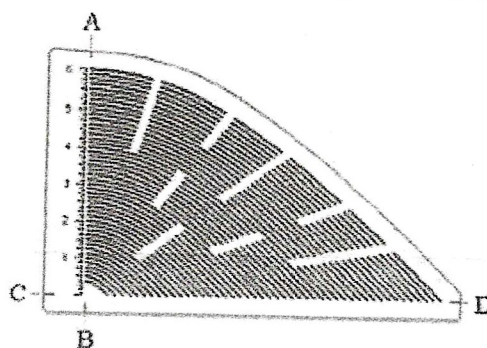

4th Remove the T-Master and connect the squaring tab marks. This will give you your 90° lines.

