## DEPARTMENT OF COMPUTER SCIENCE & ENGINEERING



## **CERTIFICATE**

This is to certify that Ms./Mr	
Reg. No. Section: Ro	oll No: has
satisfactorily completed the lab exercises prescribed for En	mbedded systems lab [CSE
2263] of Second Year B. Tech. in Computer Science and E	Engineering Degree at MIT,
Manipal, in the academic year 2020-2021.	
Date:	

Signature Faculty in Charge

## **CONTENTS**

LAB NO	TITLE	PAGENO.
	COURSE OBJECTIVES AND OUTCOMES	1
	EVALUATION PLAN	1
	INSTRUCTIONS TO THE STUDENTS	2-3
	SAMPLE LAB OBSERVATION NOTE PREPARATION	4
1	INTRODUCTION TO KEIL MVISION-4 AND PROGRAMS ON DATA TRANSFER INSTRUCTIONS	5
2	PROGRAMS ON ARITHMETIC INSTRUCTIONS	21
3	PROGRAMS ON ARITHMETIC AND LOGICAL INSTRUCTIONS	23
4	BRANCHING AND LOOPING	25
5	SORTING, SEARCHING PROGRAMS	27
6	INTERFACING LED TO ARM MICROCONTROLLER.	30
7	PROGRAMS ON MULTIPLEXED SEVEN SEGMENT DISPLAY	36
8	LIQUID CRYSTAL DISPLAY (LCD) AND KEYBOARD INTERFACING	42
9	ANALOG TO DIGITAL CONVERTOR PROGRAM	52

10	PROGRAM ON DIGITAL TO ANALOG CONVERTOR (DAC)	55
11	PROGRAM ON PULSE WIDTH MODULATION (PWM)	57
12	PROGRAM ON STEPPER MOTOR	60
	APPENDIX A	64
	APPENDIX B	68
	APPENDIX C	72

## **Course Objectives**

- To gain knowledge about assembly language and Embedded C programming
- To implement the programs using ARM instruction set
- To understand various interfacing circuits necessary for various applications and programming using ARM.

#### **Course Outcomes**

On the completion of this laboratory course, the students will be able to:

- Gain knowledge about simulators for an embedded system and to execute simple programs.
- Comprehend the software development for ARM cortex-M microcontroller using assembly language.
- Develop embedded C program for ARM cortex-M microcontroller by interfacing various modules to ARM kit

## **Evaluation plan**

- Internal Assessment Marks: 60%
  - ✓ Continuous evaluation component (for each experiment):10 marks
  - ✓ The assessment will depend on punctuality, program execution, maintaining the observation note and answering the questions in viva voce
  - $\checkmark$  Total marks of the 12 experiments reduced to marks out of 60
- End semester assessment of 2 hour duration: 40 %

#### INSTRUCTIONS TO THE STUDENTS

#### **Pre- Lab Session Instructions**

- 1. Students should carry the Class notes, Lab Manual and the required stationery to every lab session
- 2. Be in time and follow the Instructions from Lab Instructors
- 3. Must Sign in the log register provided
- 4. Make sure to occupy the allotted seat and answer the attendance
- 5. Adhere to the rules and maintain the decorum

#### In- Lab Session Instructions

- Follow the instructions on the allotted exercises given in Lab Manual
- Show the program and results to the instructors on completion of experiments
- On receiving approval from the instructor, copy the program and results in the Lab record
- Prescribed textbooks and class notes can be kept ready for reference if required

#### General Instructions for the exercises in Lab

- The programs should meet the following criteria:
  - Programs should be interactive with appropriate prompt messages, error messages if any, and descriptive messages for outputs.
  - Use meaningful names for variables and procedures.
- Plagiarism (copying from others) is strictly prohibited and would invite severe penalty during evaluation.
- The exercises for each week are divided under three sets:
  - Solved exercise
  - Lab exercises to be completed during lab hours
  - Additional Exercises to be completed outside the lab or in the lab to enhance the skill
- In case a student misses a lab class, he/ she must ensure that the experiment is completed at students end or in a repetition class (if available) with the permission of the faculty concerned but credit will be given only to one day's experiment(s).

- Questions for lab tests and examination are not necessarily limited to the questions in the manual, but may involve some variations and / or combinations of the questions.
- A sample note preparation is given later in the manual as a model for observation.

## Sample lab observation note preparation

LAB NO:	Date:

# Title: INTRODUCTION TO KEIL µVISION-4 AND PROGRAMS ON DATA TRANSFER INSTRUCTIONS

Add two immediate values in the registers and store the result in the third register.

## **Program:**

AREA RESET, DATA, READONLY

EXPORT \_\_Vectors

\_\_Vectors

DCD 0X10001000

DCD Reset\_Handler

**ALIGN** 

AREA mycode, CODE, READONLY

**ENTRY** 

EXPORT Reset\_Handler

## Reset\_Handler


MOV R0, #10

MOV R1, #3

ADD R2, R0, R1

**END** 

## **Sample output:**



## INTRODUCTION TO KEIL µVISION-4 AND PROGRAMS ON DATA TRANSFER INSTRUCTIONS

## **Objectives:**


In this lab, students will be able to

- Understand the usage of Keil µVision 4 software for assembly language.
- Write, build and execute assembly language programs in Keil µVision 4.
- Use different data transfer instructions of ARM processor.

## I. Running an assembly language program in Keil $\mu$ Vision 4


## Step 1:

- Create a directory with section followed by roll number (to be unique); e.g. A21
- Start up µVision-4 by clicking on the icon the "Start" menu or "All Programs". The following screen appears.

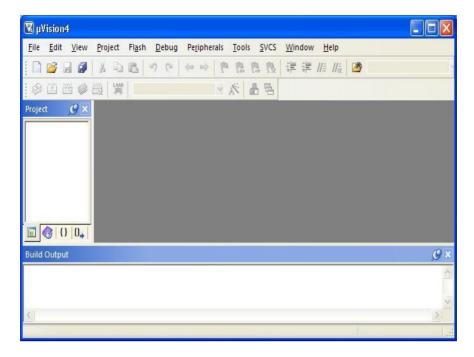


Step 2: Create a project


To create a project, click on the "Project" menu from the  $\mu V$ ision-4 screen and select "New  $\mu V$ ision Project". Then, select the folder you have created already, give project name and save.

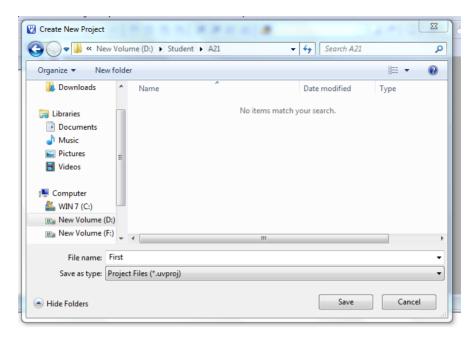

From the "Select Device for Target Target 1..." window, select "NXP" as the vendor. In that, select LPC1768 ARM controller, and then click on OK button. Some general information of the chip is shown in the description box.

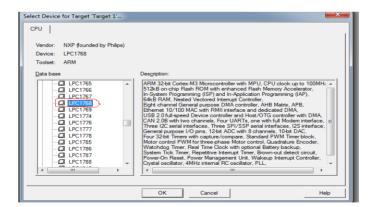



Make sure you click on "NO" for the following pop up window.

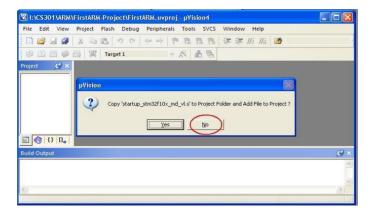

## **Step 3: Create Source File**


From the "File" menu, select "New", to get the editor window. Type the program here. (Note: give a tab space at the beginning). Save the program with .s extension in the directory.

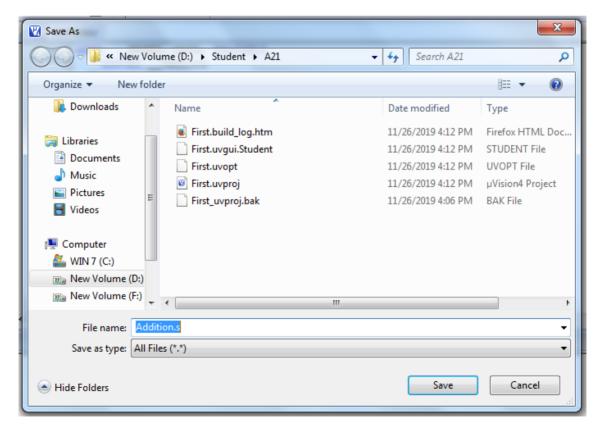

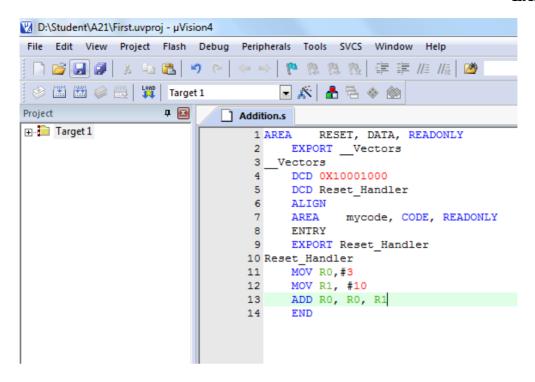


Step 4: Add Source File to the Project

Click on the + symbol near the Target 1 in the top left corner of the window. Right click on the "Source Group 1", select "Add Existing Files to Group 'Source Group 1".

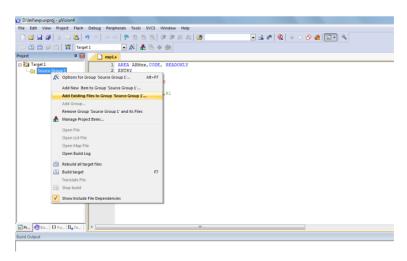


Select "Files of type" as "asm Source file (\*.s\*;\*.src\*;\*.a\*), then select the file. Click on "Add", and then click on "Close".

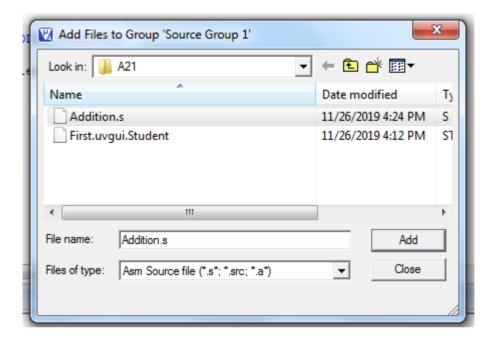


## Step 5: Build your project

Click on the "+" beside the "Source Group 1", you will see the program "Addition.s" Click on the "Build" button or from the "Project" menu, you will see the following screen.

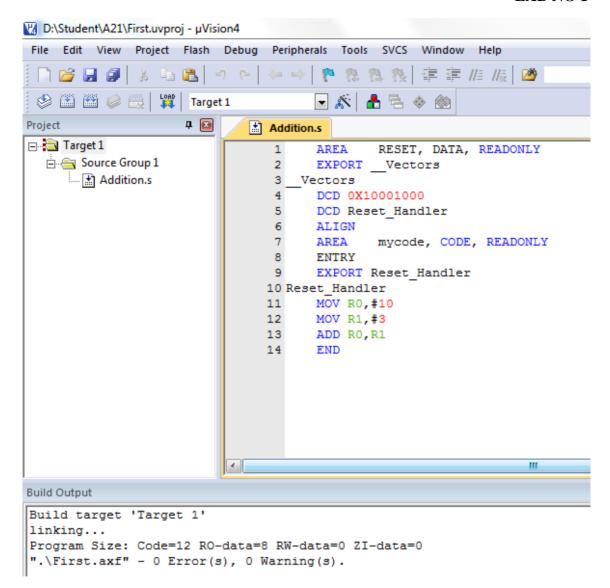


## **Step 6: Run the program**

Run the program through the "Debug" menu.

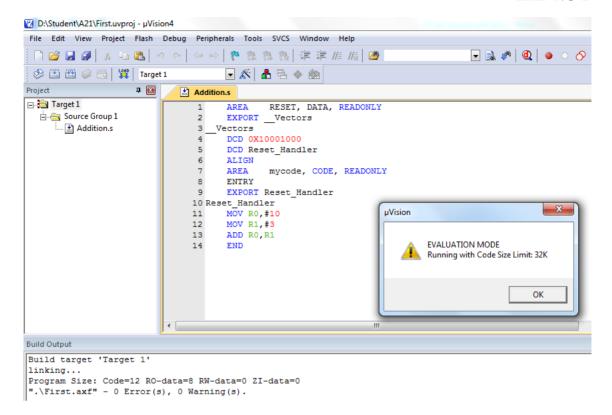



Click on "OK" for the pop up window showing "EVALUATION MODE, Running with Code Size Limit: 32K". You will see the following window.

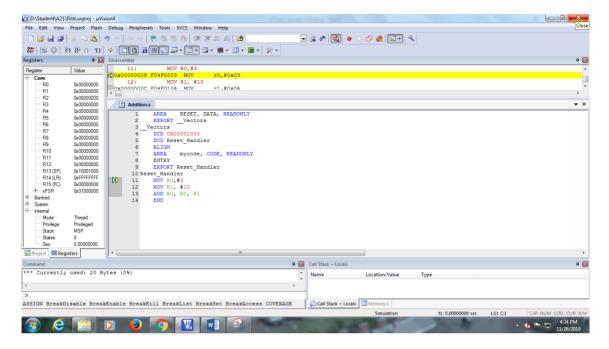


Open  $\mu$ Vision4 to full screen to have a better and complete view. The left hand side window shows the registers and the right side window shows the program code. There are some other windows open. Adjust the size of them to have a better view. Run the program step by step; observe the change of the values in the registers.

Run the program using the **Step Over** button or click on **Step Over** from the Debug menu. It executes the instructions of the program one after another. To trace the program one can use the **Step** button, as well. The difference between the **Step Over** and **Step** is in executing functions. While **Step** goes into the function and executes its instructions one by one, **Step Over** executes the function completely and goes to the instruction next to the function. To see the difference between them, trace the program once with **Step Over** and then with **Step**. When the PC is executing the function and wants the function to be executed completely one can use **Step Out**. In this case, the instructions of the function will be executed, it returns from the function, and goes to the instruction which is next to the function call.

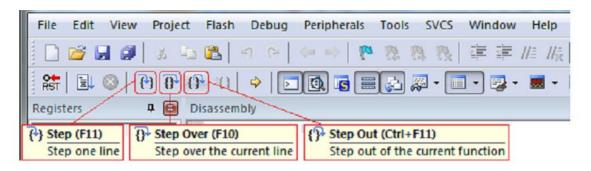

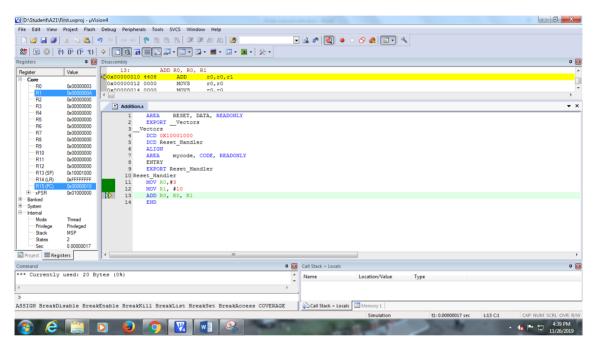

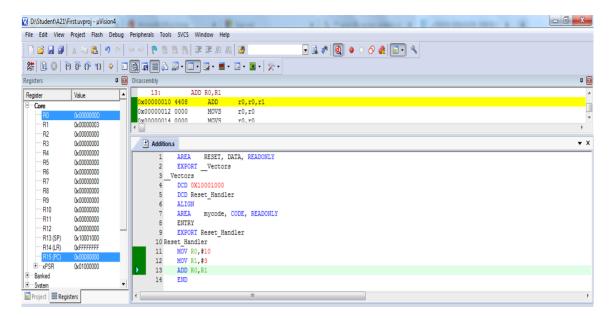

Click on the "Start/Stop Debug Session" again to stop execution of the program.

## II. ARM assembly language module

An ARM assembly language module has several constituent parts.

#### These are:

- Extensible Linking Format (ELF) sections (defined by the AREA directive).
- Application entry (defined by the ENTRY directive).
- Program end (defined by the END directive).

#### **Assembler Directives**

- Assembler directives are the commands to the assembler that direct the assembly process.
- ➤ They do not generate any machine code i.e. they do not contribute to the final size of machine code and they are assembler specific

#### AREA:

The AREA directive tells the assembler to define a new section of memory. The memory can be code (instructions) or data and can have attributes such as READONLY, READWRITE and so on. This is used to define one or more blocks of indivisible memory for code or data to be used by the linker. The following is the format:

AREA sectionname attribute, attribute, ...

The following line defines a new area named mycode which has CODE and READONLY attributes:

AREA mycode, CODE, READONLY

Commonly used attributes are CODE, DATA, READONLY, READWRITE, ALIGN and END.

#### **READONLY:**

It is an attribute given to an area of memory which can only be read from. It is by default for CODE. This area is used to write the instructions.

#### **READWRITE:**

It is an attribute given to an area of memory which can be read from and written to. It is by default for DATA.

#### CODE:

It is an attribute given to an area of memory used for executable machine instructions. It is by default READONLY memory.

#### **DATA:**

It is an attribute given to an area of memory used for data and no instructions can be placed in this area. It is by default READWRITE memory.

#### **ALIGN:**

It is an attribute given to an area of memory to indicate how memory should be allocated according to the addresses. When the ALIGN is used for CODE and READONLY, it is

aligned in 4-bytes address boundary by default since the ARM instructions are 32 bit

word. If it is written as ALIGN = 3, it indicates that the information should be placed in

memory with addresses of 2<sup>3</sup>, that is for example 0x50000, 0x50008, 0x50010, 0x50018

and so on.

**EXPORT:** 

The EXPORT directive declares a symbol that can be used by the linker to resolve symbol

references in separate object and library files.

**DCD** (Define constant word):

Allocates a word size memory and initializes the values. Allocates one or more words of

memory, aligned on 4-byte boundaries and defines initial run time contents of the

memory.

**ENTRY:** 

The ENTRY directive declares an entry point to the program. It marks the first instruction

to be executed. In applications using the C library, an entry point is also contained within

the C library initialization code. Initialization code and exception handlers also contain

entry points

END:

It indicates to the assembler the end of the source code. The END directive is the last line

of the ARM assembly program and anything after the END directive in the source file is

ignored by the assembler.

**Example:** 

AREA RESET, DATA, READONLY

EXPORT \_\_Vectors

\_\_Vectors

17

DCD 0X10001000 ;stack pointer value when stack is empty

;The processor uses a full descending stack.

;This means the stack pointer holds the address of the last ;stacked item in memory. When the processor pushes a new item ;onto the stack, it decrements the stack pointer and then

;writes the item to the new memory location.

DCD Reset\_Handler ; reset vector. The program linker requires Reset\_Handler

**ALIGN** 

AREA mycode, CODE, READONLY

**ENTRY** 

**EXPORT Reset Handler** 

Reset\_Handler

;;;;;;;User Code Starts from the next line;;;;;;;;

MOV R0, #10

MOV R1, #3

ADD R0, R1

END ;End of the program

## III. Introduction to ARM addressing modes

Data can be transferred into and out of the ARM controller using different addressing modes. There are different ways to specify the address of the operands for any given operations such as load, add or branch. The different ways of determining the address of the operands are called addressing modes. Different addressing modes used in ARM are listed in Appendix A.

#### **Solved Exercise:**

Write an ARM assembly language program to copy 32 bit data from code memory to data memory.

Source: SRC= 0X00000008 at location pointed by R0

Destination: DST = 0X00000008 at location pointed by R1 after the execution

## **Program:**

AREA RESET, DATA, READONLY EXPORT \_\_Vectors

\_\_Vectors

DCD 0x10001000 ; stack pointer value when stack is empty

DCD Reset\_Handler ; reset vector

**ALIGN** 

AREA mycode, CODE, READONLY

**ENTRY** 

**EXPORT Reset Handler** 

Reset\_Handler

LDR R0, =SRC ; Load address of SRC into R0

LDR R1, =DST ; Load the address of DST onto R1 LDR R3, [R0] ; Load data pointed by R0 into R3

STR R3,[R1] ; Store data from R3 into the address pointed by R1

**STOP** 

B STOP : Be there

SRC DCD 8 ;SRC location in code memory

AREA mydata, DATA, READWRITE

DST DCD 0 ;DST location in data memory

**END** 

#### Observations to be made

- 1. **Data storage into the memory:** Click on Memory window and go to Memory1 option. Type address pointed by R0 in address space and observe how the data are stored into the memory.
- 2. **Data movement from one memory to another memory:** Click on Memory window and go to Memory2 option. Type address pointed by R1 in address space and observe data movement to another location before execution and after execution.

#### Lab Exercises:

- 1. Write an ARM assembly language program to store data into general purpose registers.
- 2. Write an ARM assembly language program to transfer a 32 bit number from one location in the data memory to another location in the data memory.
- 3. Write an ARM assembly language program to transfer block of ten 32 bit numbers from code memory to data memory when the source and destination blocks are non-overlapping.
- 4. Reverse an array of ten 32 bit numbers in the memory.

#### **Additional Exercises:**

- 1. Repeat Q3 above using pre indexing mode.
- 2. Repeat Q3 above when the source and destination blocks are overlapping

LAB NO: 2 Date:

#### PROGRAMS ON ARITHMETIC INSTRUCTIONS

#### **Objectives:**

In this lab, students will be able to

- Identify and use the instructions required to perform addition and subtraction
- Debug and trace the programs.

Refer Appendix A for instruction details.

#### **Solved Exercise:**

Write a program to add two 32 bit numbers available in the code memory. Store the result in the data memory

```
AREA RESET, DATA, READONLY
      EXPORT Vectors
  Vectors
     DCD 0x40001000 ; stack pointer value when stack is empty
     DCD Reset Handler; reset vector
      ALIGN
      AREA mycode, CODE, READONLY
      ENTRY
      EXPORT Reset Handler
Reset Handler
      LDR R0, =VALUE1 ;pointer to the first value1
      LDR R1, [R0]
                         :load the first value into R1
      LDR R0, =VALUE2 ;pointer to the second value
      LDR R3, [R0]
                         :load second number into r3
      ADDS R6, R1, R3
                         add two numbers and store the result in r6
      LDR R2, =RESULT
      STR R6, [R2]
  STOP
```

**B STOP** 

VALUE1 DCD 0X12345678 ; First 32 bit number VALUE2 DCD 0XABCDEF12 ; Second 32 bit number

AREA data, DATA, READWRITE

RESULT DCD 0

**END** 

#### Lab Exercises:

- 1. Write a program to add ten 32 bit numbers available in code memory and store the result in data memory.
- 2. Write a program to add two 128 bit numbers available in code memory and store the result in data memory.

Hint: Use indexed addressing mode.

- 3. Write a program to subtract two 32 bit numbers available in the code memory and store the result in the data memory.
- 4. Write a program to subtract two 128 bit numbers available in the code memory and store the result in the data memory.

#### **Additional Exercises:**

- 1. Write a program to find the 2's complement of 64 bit data in R0 and R1 registers. The R0 holds the lower 32 bit.
- 2. Add and subtract two 32 bit numbers and check all the flags. Take appropriate data to check all the flags.

LAB NO: 3 Date:

#### PROGRAMS ON ARITHMETIC AND LOGICAL INSTRUCTIONS

## **Objectives:**

In this lab, students will be able to

- > Identify and use the instructions required to perform multiplication, division and logical operations
- Debug and trace the programs.

Refer Appendix A for instruction details.

#### **Solved Exercise:**

Write an assembly program to multiply two 32 bit numbers

AREA RESET, DATA, READONLY

```
__Vectors
__Vectors

__DCD 0x40001000 ; stack pointer value when stack is empty
DCD Reset_Handler ; reset vector
ALIGN
AREA mycode, CODE, READONLY
ENTRY
EXPORT Reset_Handler
Reset_Handler
LDR R1, =VALUE1 ;pointer to the first value1
```

LDR R1, =VALUE1 ;pointer to the first value1 LDR R2,=VALUE2 ;pointer to the second value

UMULL R3, R4, R2, R1 ;Multiply the values from R1 and R2 and store

; least significant  $\,$  32 bit number into  $\,$  R3 and  $\,$  most

;significant 32 bit number into R4.

LDR R2, =RESULT

STR R4, [R2]

ADD R2, #4

STR R3, [R2]; store result in memory

#### **STOP**

**B STOP** 

VALUE1 DCD 0X54000000 ; First 32 bit number

VALUE2 DCD 0X10000002; Second 32 bit number

AREA data, DATA, READWRITE

RESULT DCD 0

Note: If the result is within 32 bits, use MUL instruction.

#### Lab Exercises:

- 1. Write an assembly language program to implement division by repetitive subtraction.
- 2. Find the sum of 'n' natural numbers using MLA instruction.
- 3. Write an assembly language program to find GCD and LCM of two 8 bit numbers
- 4. Write an ARM assembly language program to convert 2-digit hexadecimal number into ascii format.
- 5. Write an ARM assembly language program to convert a 32 bit BCD number in the unpacked form into packed form.

#### **Additional Exercises:**

- 1. Write an assembly language program to generate Fibonacci series.
- 2. Check whether a given number is even or odd.

LAB NO: 4 Date:

#### BRANCHING AND LOOPING

## **Objectives:**

In this lab, students will be able to

- > Learn different kinds of branching instructions.
- > Understand looping code conversion programs

#### **Solved Exercise:**

Write an assembly language program to unpack a 32 bit BCD number into eight 32-bit ASCII numbers.

AREA RESET, DATA, READONLY EXPORT Vectors

\_\_Vectors

DCD 0x40001000 ; stack pointer value when stack is empty

DCD Reset\_Handler ; reset vector

**ALIGN** 

AREA mycode, CODE, READONLY

**ENTRY** 

EXPORT Reset\_Handler

Reset\_Handler

MOV R5, #4

LDR R0.=NUM

LDR R3,=RESULT

UP LDRB R1,[R0], #1 ; load BCD number into register R1

AND R2,R1,#0x0F; mask upper 4 bits

ADD R2,#0x30; Add 30H to the number, Ascii value of first digit

STR R2,[R3], #4

AND R4,R1,#0xF0 ; Mask the second digit MOV R4,R4,LSR#04 ; Shift right by 4 bits

ADD R4,#0x30 ; Ascii value of second digit

STR R4,[R3], #4

SUBS R5, #1

BNE UP ;Repeat 4 times

STOP B STOP

NUM DCD 0x12345678 AREA data, DATA, READWRITE RESULT DCD 0 END

#### Lab Exercises:

- 1. Convert a 32 bit packed BCD number into its equivalent hexadecimal number.
- 2. Convert a 16 bit hex number into its equivalent packed BCD
- 3. Add two 32 bit packed BCD numbers and store the result in packed BCD form.
- 4. Multiply two 16 bit packed BCD and store the result in packed BCD form.

#### **Additional Exercises:**

- 1. Write an assembly language program to unpack a 32 bit BCD number into eight 32-bit numbers
- 2. Write an assembly language program to find the sum of bits (no. of 1's) of a 32 bit number available in the memory.

### LAB NO: 5 Date:

#### SORTING AND SEARCHING PROGRAMS

## **Objectives:**

In this lab, students will be able to

- Perform advanced list operations in a given list or array.
- Use different branch instructions.

#### **Solved Exercise:**

Write an ARM ALP to sort a list using bubble sort.

```
AREA RESET, DATA, READONLY
            EXPORT Vectors
 Vectors
            DCD 0x40001000 ; stack pointer value when stack is empty
            DCD Reset_Handler; reset vector
             ALIGN
             AREA ascend, code, readonly
             ENTRY
Reset Handler
            mov r4,#0
             mov r1,#10
            ldr r0, =list
            ldr r2, =result
            ldr r3, [r0,r4]
      up
             str r3, [r2,r4]
            add r4, #04
             sub r1,#01
             cmp r1,#00
             bhi up
             ldr r0, =result
             mov r3, #10
                                        ; inner loop counter
```

```
sub r3, r3, #1
       mov r9, r3
                                      ; R9 contain no of passes
                                      ; outer loop counter
outer loop
       mov r5, r0
       mov r4, r3
                                      ; R4 contains no of comparison in a pass
inner_loop
       ldr r6, [r5], #4
       ldr r7, [r5]
       cmp r7, r6
                                      ; swap without swap instruction
       strls r6, [r5]
       strls r7, [r5, #-4]
       subs r4, r4, #1
       bne inner loop
       sub r3, #1
       subs r9, r9, #1
       bne outer loop
list dcd 0x10,0x05,0x33,0x24,0x56,0x77,0x21,0x04,0x87,0x01
    AREA data1, data, readwrite
result DCW 0,0,0,0,0,0,0,0,0,0
       end
```

#### Lab Exercises:

- 1. Write an assembly program to sort an array using selection sort
- 2. Write an assembly program to find the factorial of an unsigned number using recursion
- 3. Write an assembly program to search an element in an array of ten 32 bit numbers using linear search.
- 4. Assume that ten 32 bit numbers are stored in registers R1-R10. Sort these numbers in the empty ascending stack using selection sort and store the sorted array back into the registers. Use STM and LDMDB instructions wherever necessary.

#### **Additional Exercises:**

#### LAB NO 5:

- 1. Repeat question 4 for a fully descending stack using STMDB and LDM instruction wherever necessary.
- 2. Write an ARM ALP that contains a list of numbers and makes a count of
  - a) Even and Odd numbers.
- b) Numbers greater than 10
- 3. Implement Full ascending and empty descending stack using LDR, STR, ADD and SUB instructions.

LAB NO: 6 Date:

#### INTERFACING LED TO ARM MICROCONTROLLER.

#### **Objectives:**

In this lab, students will be able to

➤ Interface LEDs to the ARM cortex LPC1768 microcontroller using ALS interfacing board.

## Steps to be followed

## **Project Creation in Keil uvision4 IDE:**

- Create a project folder before creating a NEW project.
- Use separate folder for each project
- Open Keil uVision4 IDE software by double clicking on "Keil Uvision4" icon.
- Select "Project" then to "New Project" and save it with a name in the respective Project folder, which is already created.
- Select the device as "NXP (founded by Philips)" Select "LPC1768" then Press "OK" and then press "YES" button to add "system LPC17xx.s" file.
- Go to "File" select "New" to open an editor window. Create a source file and use the header file "LPC17xx.h" in the source file and save the file. Color syntax highlighting will be enabled once the file is saved with a Recognized extension such as ".C".
- Right click on "Source Group 1" and select the option "Add Files to Group 'Source Group 1' "add the. C source file(s) to the group.
- Again right click on Source Group 1 and select the option "Add Files to Group 'Source Group 1' "add the file -C:Keil\ARM\startup\NXP\LPC17xx\system\_LPC17xx.c
- Any changes made to this file at the current project will directly change the source system\_LPC17xx.C file. As a result other project settings may get altered. So it is recommended to copy the file
   C:Keil\ARM\startup\NXP\LPC17xx\system\_LPC17xx.c to the project folder and add to the source group.
- Important: This file should be added during each project creation.
- Select "Project" then select "Translate" to compile the File (s).

• Select "Project", select "Build Target" for building all source files such as ".C",".ASM", ".h", files, etc...This will create the hex file if there are no warnings & no errors.

#### **Solved Exercise:**

Write a program to turn on/off the LEDs serially.

Note: Before writing the program please check GPIO port pins available in the kit (Refer Appendix C.)

```
#include <LPC17xx.h>
unsigned int i,j;
unsigned long LED = 0x00000010;
int main(void)
{
        SystemInit();
                            //Add these two function for its internal operation
        SystemCoreClockUpdate();
        LPC PINCON->PINSEL0 &= 0xFF0000FF;
                       //Configure Port0 PINS P0.4-P0.11 as GPIO function
        LPC GPIO0->FIODIR = 0x000000FF0;
                                  //Configure P0.4-P0.11 as output port
        while(1)
             LED = 0x00000010: Initial value on LED
             for(i=1;i<9;i++)
                                    //On the LED's serially
              {
                    LPC GPIO0->FIOSET = LED;
                         // Turn ON LED at LSB (LED connected to p0.4)
                    for(j=0;j<10000;j++); a random delay
                    LED <<= 1; Shift the LED to the left by one unit
              }
                    //loop for 8 times
             LED = 0x00000010;
```

```
for(i=1;i<9;i++) \hspace{0.5cm} /\!/Off \hspace{0.1cm} the \hspace{0.1cm} LED's \hspace{0.1cm} serially \\ \{ \hspace{0.5cm} LPC\_GPIO0\text{->FIOCLR} = LED; \\ \hspace{0.5cm} /\!/Turn \hspace{0.1cm} OFF \hspace{0.1cm} LED \hspace{0.1cm} at \hspace{0.1cm} LSB \hspace{0.1cm} (LED \hspace{0.1cm} connected \hspace{0.1cm} to \hspace{0.1cm} p0.4) \\ \hspace{0.1cm} for(j=0;j<10000;j++); \\ \hspace{0.1cm} LED <<=1; \\ \} \\ \} \\ \}
```

## Some Settings to be done in KEIL $\mu$ V-4 for Executing C programs :

- In Project Window Right click "TARGET1" and select "options for target 'TARGET1' select to option "Target" in that select
  - 1. XTAL 12.0MHz
  - 2. Select IROM1 (starting  $0\times0$  size  $0\times8000$ ).
  - 3. Select IRAM1 (starting  $0 \times 10000000$  size  $0 \times 8000$ ).
- Then go to option "Output"

Select "Create Hex file".

• Then go to option "Linker"

Select use memory layout from target dialog

## Settings to be done at configuration wizard of system\_LPC17xx.c file

- There are three clock sources for the CPU. Select Oscillator clock out of three. This selection is done by CLKSRCSEL register.
- If we disable the PLL0 System clock will be bypassed directly into the CPU clock divider register.
- Use CCLKCFG register for choosing the division factor of 4 to get 3MHz out of 12 MHz Oscillator frequency
- For any other peripherals use the PCLK same as CCLK.

## Follow the steps specified below to carry out the settings.

- Double click on system\_LPC17xx.c file at project window
- Select the configuration wizard at the bottom
- Expand the icons

- Select Clock configuration
- Under System controls and Status registers

OSCRANGE: Main Oscillator range select 1MHz to 20MHz

OSCEN: Main oscillator enable  $\sqrt{\phantom{a}}$ 

• Under Clock source select register (CLKSRCSEL)

CLKSRC: PLL clock source selection Main oscillator

- Disable PLL0 configuration and PLL1 configuration
- Under CPU Clock Configuration register(CCLKCFG)

CCLKSEL: Divide value for CPU clock for PLL0 4

• Under USB Clock configuration register (USBCLKCFG)

USBSEL: Divide value for USB clock for PLL0 4

- Under Peripheral clock selection register 0 (PCLKSEL0) and 1 (PCLKSEL1) select Pclk = Cclk for all.
- Under Power control for peripherals (PCONP)
  Enable the power for required peripherals
- If CLKOUT to be studied configure the Clock output configuration register as below

CLKOUTSEL: Main Oscillator

CLKOUTDIV: 1 CLKOUT EN:  $\sqrt{\phantom{0}}$ 

• Call the functions

SystemInit();

SystemCoreClockUpdate(); at the beginning of the main function without missing. These functions are defined in system\_LPC17xx.c where the actual clock and other system control registers are configured.

• A small change is required in the file system\_LPC17xx.c after installation. Go to text editor:

#define PLL0\_SETUP 0 #define PLL1\_SETUP 0

if the above #defines are 1 then make 0

# **Components required**

• ALS-SDA-ARMCTXM3-01: 1 No.

• Power supply (+5V): 1 No.

#### **LAB NO 6**:

- Cross cable for programming and serial communication: 1 No
- One working USB port in the host computer system and PC for downloading the software.
- 10 core FRC cables of 8 inch length

2 No

• USB to B type cable

1 No

# Some Settings for downloading the program in FLASH MAGIC:

- Step1. Connect 9 pin DSUB cross cable from PC to CN9 at the board.
- Step2. On the 2 way dip switch SW21. Short jumper JP3
- Step3. Open flash magic 6.01
- Step4. Make following setting in Flash magic(Only once)
  - a. Communications:

Device: LPC1768
Com Port: COM1
Baud Rate: 9600

Interface: None(ISP)
Oscillator: 12MHz

b. ERASE:

Select "Erase Blocks Used By Hex File".

c. Hex file:

Browse and select the Hex file which you want to download.

d. Options:

Select "Verify After Programming".

# **Go to Options -> Advanced Options->communications**

Do not select High Speed Communications, keep baud rate 115200.

# **Options -> Advanced Options->Hardware config**

Select Use DTR & RTS to control RST & ISP Pin.

Select Keep RTS asserted while COM Port open.

T1 = 50ms. T2 = 100ms.

# Step5. Start:

Click "Start" to download the hex file to the controller.

Step6. Connect one end of 10 pin FRC cable to CNA1, Short other end to CNA

Step7. Press reset controller switch SW1 and Check output on the LEDs

#### connected to CNA1.

#### Lab Exercises:

- 1. Write a C program to display an 8-bit binary up counter on the LEDs.
- 2. Write a C program to read a key and display an 8-bit up/down counter on the LEDs.

**Hint:** Use key SW2 (if SW2=1, up counter else down counter), which is available at CNB1 pin 7. Connect CNB1 to any controller connector like CNB, CNC, etc. Configure the corresponding port pin as GPIO using corresponding PINSEL register and as input pin using corresponding FIODIR register.

3. Write a program to simulate an 8- bit ring counter with key press (SW2).

LAB NO: 7. Date:

#### PROGRAMS ON MULTIPLEXED SEVEN SEGMENT DISPLAY

# **Objectives**

In this lab students will be able to


> Interface and understand the working of multiplexed seven segments display

#### **Introduction:**

There are four multiplexed 7-segment display units (U8, U9, U10 and U11) on the board. Each display has 8-inputs SEG\_A (Pin-7), SEG\_B (Pin-6), SEG\_C (Pin-4), SEG\_D (Pin-2), SEG\_E (Pin-1), SEG\_F (Pin-9), SEG\_G (Pin-10) and SEG\_H (Pin-5) and the remaining pins pin-3 & pin-8 are Common Cathode CC. These segments are common cathode type hence active high devices.

At power on all the segments are pulled up. A four bits input through CNB2 is used for multiplexing operation. A 1-of-10 Decoder/Driver U7 is used to accept BCD inputs and provide appropriate outputs for enabling the required display.

8 bits data is provided in this block using CNA2. All the data lines are taken buffered at U12 before giving to the displays.

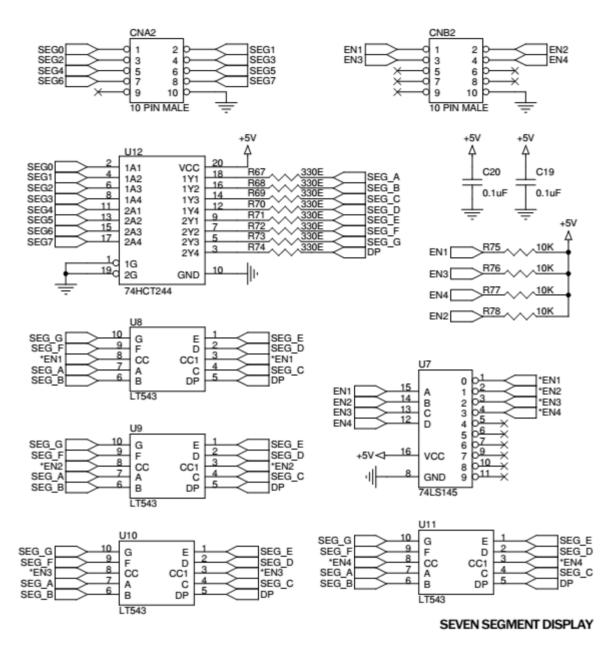

At the controller end, any 2 connectors are required for interfacing this block.

Lookup Table for displaying 0,1,2,3 to 9

```
value = h g f e d c b a

* 0x3F = 0 0 1 1 1 1 1 1 1 -> Displaying '0'

* 0x06 = 0 0 0 0 0 1 1 0 -> Displaying '1'

* 0x5B = 0 1 0 1 1 0 1 1 -> Displaying '2'

* 0x4F = 0 1 0 0 1 1 1 1 -> Displaying '3'

* 0x66 = 0 1 1 0 0 1 1 0 -> Displaying '4'

* 0x6D = 0 1 1 0 1 1 0 1 -> Displaying '5'

* 0x7D = 0 1 1 1 1 1 1 0 1 -> Displaying '6'

* 0x07 = 0 0 0 0 0 1 1 1 -> Displaying '7'

* 0x7F = 0 1 1 1 1 1 1 1 -> Displaying '8'

* 0x6F = 0 1 1 0 1 1 1 1 -> Displaying '9'
```

#### Solved Exercise:

WAP to simulate 4-digit BCD up counter on the multiplexed seven segment display.

```
#include <LPC17xx.h>
#include <stdio.h>
unsigned int seg select[4] = \{0 < 23, 1 < 23, 2 < 23, 3 < 23\};
unsigned int dig1=0x00, dig2=0x00, dig3=0x00, dig4=0x00;
unsigned int seg count=0x00, temp1=0x00;
unsigned char
array dec[10]=\{0x3F,0x06,0x5B,0x4F,0x66,0x6D,0x7D,0x07,0x7F,0x6F\};
unsigned long int i=0;
void delay(void);
void display(void);
int main(void)
    SystemInit();
    SystemCoreClockUpdate();
    LPC PINCON->PINSEL0 &= 0xFF0000FF; //P0.4 to P0.11 GPIO data lines
    LPC_PINCON->PINSEL3 &= 0xFFC03FFF; //P1.23 to P1.26 GPIO enable lines
    LPC\_GPIOO->FIODIR = 0x000000FF0;
                                                //P0.4 to P0.11 output
```

```
LPC_GPIO1->FIODIR |= 0x07800000; //P1.23 to P1.26 output
  while(1)
         delay();
         display();
         seg_count +=1;
         if(seg\_count == 0x04)
                seg\_count = 0x00;
                dig1 +=1;
                if(dig1 == 0x0A)
                        dig1 = 0;
                        dig2 +=1;
                        if(dig2 == 0x0A)
                               dig2 = 0;
                               dig3+=1;
                               if(dig3 == 0x0A)
                                      dig3 = 0;
                                      dig4 += 1;
                                      if(dig4 == 0x0A)
                                              dig4 = 0;
                                      } //end of dig4
                               } //end of dig3
                        } //end of dig2
                 } //end of dig1
         } //end of seg_count
  } //end of while(1)
```

```
}//end of main
void display(void) //To Display on 7-segments
      LPC GPIO1->FIOPIN = seg select[seg count];
       if(seg\_count == 0x00) // For Segment U8
              temp1 = dig1;
       else if(seg count == 0x01) // For Segment U9
              temp1 = dig2;
       else if(seg_count == 0x02) // For Segment U10
              temp1 = dig3;
       else if(seg_count == 0x03) // For Segment U11
              temp1 = dig4;
       LPC_GPIO0->FIOPIN = array_dec[temp1]<<4; // Taking Data Lines for 7-Seg
       for(i=0;i<500;i++);
}
void delay(void)
       unsigned int i;
      for(i=0;i<10000;i++);
Components required
```

- ALS-SDA-ARMCTXM3-01: 1 No. 1 No. • Power supply (+5V) :
- Cross cable for programming and serial communication : 1 No
- One working USB in the host computer system and PC for downloading the software.
- 10 core FRC cables of 8 inch length 2 No

• USB to B type cable

1 No

**Hardware setup:** Connect a 10 core FRC cable from CNA to CNA2 and CNB to CNB2.

**Working procedure:** After software download and hardware setup, press the reset, Observe the count from 0000 to 9999 on the display.

#### Lab Exercises:

- 1. Write a C program to display the number "1234" serially in the seven segment display.
- 2. Write a C program to simulate a 4 digit BCD down counter. Use a timer for delay.
- 3. Write a C program for 4 digit BCD up/down counters on seven segment using a switch and timer with a delay of 1-second between each count.
- 4. Write a program for 4 digit Hexadecimal up/down counters on seven segment using a switch and timer with a delay of 1-second between each count.

LAB NO: 8: Date:

# LIQUID CRYSTAL DISPLAY (LCD) AND KEYBOARD INTERFACING Objectives:

In this lab students will be able to

> Interface and understand the working of LCD and matrix keyboard

#### **Introduction:**

**LCD**: A 16×2 alphanumeric LCD can be used to display the message from the controller. 16 pin small LCD has to be mounted to the connector CN11. 10 pin connector CNAD is used to interface this LCD from the controller. Only higher 4 data lines are used among the 8 LCD data lines. Use POT3 for contrast adjustment and Short the jumper JP16 to use this LCD. LCD connector CN11 is described in this table. CN11 is a single row 16 pin female berg.

Pin no CN11	Description
1	Ground
2	+5V
3	LCD contrast
4	RS
5,7,8,9,10	NC
6	En
11 to 14	Data 4 to 7
15	Back light anode
16	Back light cathode

#### Connection from CNAD to LCD connector CN11 is shown below

Pin no at CNAD	Description	Pin no at CN11
1	L0 - Data line 4 of LCD	11
2	L1 – Data line 5 of LCD	12
3	L2 – Data line 6 of LCD	13
4	L3 – Data line 7 of LCD	14
5	L5 – Command line of LCD	4
6	L5 – Enable line of LCD	6

Code				_	Execution Time (max) (when f <sub>co</sub> or
Instruction	RS	R/W	DB7 DB6 DB5 DB4 DB3 DB2 DB1 DB0	Description	f <sub>osc</sub> is 270 kHz)
Write data to CG or DDRAM	1	0	Write data	Writes data into DDRAM or CGRAM.	37 μs t <sub>ADD</sub> = 4 μs*
Read data from CG or DDRAM	1	1	Read data	Reads data from DDRAM or CGRAM.	37 μs t <sub>ADD</sub> = 4 μs*
	I/D S S/C S/C R/L R/L DL N F	= 1: = 0: = 1: = 0: = 1: = 1:	Cursor move Shift to the right Shift to the left 8 bits, DL = 0: 4 bits 2 lines, N = 0: 1 line 5 × 10 dots, F = 0: 5 × 8 dots Internally operating	DDRAM: Display data RAM CGRAM: Character generator RAM ACG: CGRAM address ADD: DDRAM address (corresponds to cursor address) AC: Address counter used for both DD and CGRAM addresses	Execution time changes when frequency changes Example: When $f_{cp}$ or $f_{OSC}$ is 250 kHz, $37 \ \mu s \times \frac{270}{250} = 40 \ \mu s$

Note: - indicates no effect.

\* After execution of the CGRAM/DDRAM data write or read instruction, the RAM address counter is incremented or decremented by 1. The RAM address counter is updated after the busy flag turns off. In Figure 10, t<sub>ADD</sub> is the time elapsed after the busy flag turns off until the address counter is updated.

					Co	ode						Execution Time (max) (when for or
Instruction	RS	R/W	DB7	DB6	DB5	DB4	DB3	DB2	DB1	DB0	Description	f <sub>osc</sub> is 270 kHz)
Clear display	0	0	0	0	0	0	0	0	0	1	Clears entire display and sets DDRAM address 0 in address counter.	
Return home	0	0	0	0	0	0	0	0	1	_	Sets DDRAM address 0 in address counter. Also returns display from being shifted to original position. DDRAM contents remain unchanged.	1.52 ms
Entry mode set	0	0	0	0	0	0	0	1	I/D	S	Sets cursor move direction and specifies display shift. These operations are performed during data write and read.	37 μs
Display on/off control	0	0	0	0	0	0	1	D	С	В	Sets entire display (D) on/off, cursor on/off (C), and blinking of cursor position character (B).	37 μs
Cursor or display shift	0	0	0	0	0	1	S/C	R/L	-	-	Moves cursor and shifts display without changing DDRAM contents.	37 μs
Function set	0	0	0	0	1	DL	N	F	-	-	Sets interface data length (DL), number of display lines (N), and character font (F).	37 μs
Set CGRAM address	0	0	0	1	ACG	ACG	ACG	ACG	ACG	ACG	Sets CGRAM address. CGRAM data is sent and received after this setting.	37 μs
Set DDRAM address	0	0	1	ADD	Sets DDRAM address. DDRAM data is sent and received after this setting.	37 μs						
Read busy flag & address	0	1	BF	AC	Reads busy flag (BF) indicating internal operation is being performed and reads address counter contents.	0 μs						

#### **Solved Exercise:**

WAP to display message on LCD

```
#include <lpc17xx.h>
void lcd init(void);
void write(int, int);
void delay lcd(unsigned int);
void lcd comdata(int, int);
void clear_ports(void);
void lcd_puts(unsigned char *);
int main(void)
       unsigned char Msg1[4] = {"MIT"};
       unsigned char Msg2[19] = {"Department of CSE:"};
       SystemInit();
       SystemCoreClockUpdate();
       lcd init();
       lcd comdata(0x80, 0);
       delay_lcd(800);
       lcd_puts(&Msg1[0]);
       lcd_comdata(0xC0, 0);
       delay_lcd(800);
       lcd_puts(&Msg2[0]);
//lcd initialization
void lcd init()
{
       /*Ports initialized as GPIO */
       LPC PINCON->PINSEL3 &= 0xFC003FFF; //P0.23 to P0.28
       /*Setting the directions as output */
       LPC_GPIO0->FIODIR |= 0x0F<<23 | 1<<27 | 1<<28;
       clear_ports();
       delay_lcd(3200);
```

```
lcd comdata(0x33, 0);
       delay lcd(30000);
       lcd comdata(0x32, 0);
       delay lcd(30000);
                                    //function set
       lcd comdata(0x28, 0);
       delay lcd(30000);
       lcd comdata(0x0c, 0);//display on cursor off
       delay_lcd(800);
                                    //entry mode set increment cursor right
       lcd comdata(0x06, 0);
       delay lcd(800);
                                    //display clear
       lcd_comdata(0x01, 0);
       delay lcd(10000);
       return;
}
void lcd comdata(int temp1, int type)
       int temp2 = temp1 & 0xf0; //move data (26-8+1) times : 26 - HN place, 4 - Bits
       temp2 = temp2 << 19;
                                    //data lines from 23 to 26
       write(temp2, type);
       temp2 = temp1 & 0x0f;
                                    \frac{1}{26-4+1}
       temp2 = temp2 << 23;
       write(temp2, type);
       delay_lcd(1000);
       return;
}
void write(int temp2, int type)
                                           //write to command/data reg
       clear ports();
       LPC_GPIO0->FIOPIN = temp2; // Assign the value to the data lines
       if(type==0)
              LPC GPIO0->FIOCLR = 1<<27; // clear bit RS for Command
```

```
else
              LPC GPIO0->FIOSET = 1<<27; // set bit RS for Data
       LPC GPIO0 \rightarrow FIOSET = 1 << 28;
                                          // EN=1
      delay_lcd(25);
      LPC GPIO0->FIOCLR = 1<<28; // EN =0
       return;
}
void delay_lcd(unsigned int r1)
       unsigned int r;
      for(r=0;r<r1;r++);
       return;
}
void clear_ports(void)
      /* Clearing the lines at power on */
      LPC_GPIO0->FIOCLR = 0x0F<<23; //Clearing data lines
      LPC_GPIO0->FIOCLR = 1<<27; //Clearing RS line
      LPC_GPIO0->FIOCLR = 1<<28; //Clearing Enable line
       return;
}
void lcd_puts(unsigned char *buf1)
       unsigned int i=0;
       unsigned int temp3;
       while(buf1[i]!=\0')
              temp3 = buf1[i];
              lcd_comdata(temp3, 1);
              i++;
              if(i==16)
                     lcd_comdata(0xc0, 0);
```

```
}
return;
}
```

# **Components required**

• ALS-SDA-ARMCTXM3-01: 1 No.

• Power supply (+5V): 1 No.

• Cross cable for programming and serial communication: 1 No

• One working USB port in the host computer system and PC for downloading the software.

• 10 core FRC cables of 8 inch length 2 No

• USB to B type cable 1 No

# Hardware setup:

Connect 10 pin FRC cable from CND to CNAD. Short the jumper JP16 & JP5. Use POT3 for contrast adjustment.

**Working procedure:** After software download and hardware setup, press the reset. A fixed message will display on the LCD.


# **Exercise Questions:**

1. Simulate DIE tossing on LCD.

Hint: Program reads the external interrupt using the key SW2. A random number between 0-6 should be displayed on the LCD upon keypress.

**Keyboard connection**: The switches SW3 to SW18 are organized as 4 rows X 4 columns matrix. One end of all the switches are configured as columns. The other end of the matrix is configured as rows. A row line will always be an output from the controller. Column lines are pulled to ground. A high level sent from the row will appear at column end if the switch is pressed.

Connector CNB3 is used for interfacing this block with the controller. At the controller end any connector can be used to interact with this connector CNB3.

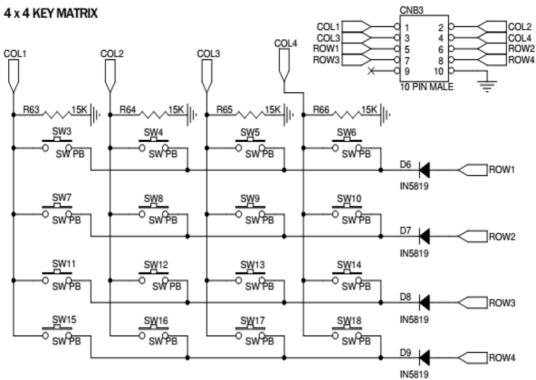

C1 to C4 -> P1.23 to P1.26. R1 to R4 -> P2.10 to P2.13

#### **Solved Exercise:**

WAP to read a key from the matrix keyboard and display its key code on the LCD.

```
#include <LPC17xx.h>
#include "lcd-disp.c" // use all the functions of lcd program void scan(void);
unsigned char Msg1[13] = "KEY PRESSED=";
unsigned char row, var, flag, key;
unsigned long int i, var1, temp, temp1, temp2, temp3;
unsigned char SCAN_CODE[16] = {0x11,0x21,0x41,0x81,
0x12,0x22,0x42,0x82,
0x14,0x24,0x44,0x84,
0x18,0x28,0x48,0x88};
```

```
unsigned char ASCII_CODE[16] = \{'0', '1', '2', '3',
                                     '4','5','6','7',
                                     '8','9','A','B',
                                     'C','D','E','F'};
int main(void)
{
      LPC GPIO2->FIODIR \mid= 0x00003C00; //made output P2.10 to P2.13 (rows)
      LPC_GPIO1->FIODIR &= 0xF87FFFFF; //made input P1.23 to P1.26(cols)
                                                   ;not required since it is by default
      LPC GPIO0->FIODIR |= 0x0F<<23 | 1<<27 | 1<<28;
      clear_ports();
      delay lcd(3200);
      lcd_init();
      lcd_com(0x80); //point to first line of LCD
      delay_lcd(800);
      lcd_puts(&Msg1[0]); //display the message
      while(1)
       {
              while(1)
              {
                     for(row=1;row<5;row++)
                            if(row == 1)
                                    var1 = 0x00000400;
                            else if(row == 2)
                                    var1 = 0x00000800;
                            else if(row == 3)
                                    var1 = 0x00001000;
```

```
else if(row == 4)
                                    var1 = 0x00002000;
                             temp = var1;
                             LPC\_GPIO2->FIOCLR = 0x00003C00; //first clear the
port and send appropriate value for
                             LPC GPIO2->FIOSET = var1; //enabling the row
                             flag = 0;
                             scan(); //scan if any key pressed in the enabled row
                             if(flag == 1)
                             break;
                      } //end for
                     if(flag == 1)
                     break;
              } //2nd while(1)
              for(i=0;i<16;i++) //get the ascii code for display
              {
                     if(key == SCAN_CODE[i])
                      {
                             key = ASCII_CODE[i];
                             break;
                      } //end if(key == SCAN CODE[i])
              \frac{1}{i} and for (i=0;i<16;i++)
              lcd_com(0xc0);//display in the second line
              delay_lcd(800);
              lcd_puts(&key);
       }//end while 1
}//end main
void scan(void)
{
```

# **Components required**

ALS-SDA-ARMCTXM3-01: 1 No.
Power supply (+5V): 1 No.
Cross cable for programming and serial communication: 1 No.

• One working USB port in the host computer system and PC for downloading the software.

10 core FRC cables of 8 inch length
USB to B type cable
1 No

**Hardware setup:** Connect 10 core FRC cable from CNB to CNB3, short JP4(1, 2) Connect another 10 core FRC cable from CND to CNAD, Short the jumper JP16 & JP5. Use POT3 for contrast.

**Working procedure:** After software download and hardware setup, use the reset. Identity of key pressed (0 to F) will be displayed on LCD.

#### Lab Exercise:

1. Write a program to input an expression of the type A operator B =, from the keyboard, where A and B are the single digit BCD numbers and operator may be + or -. Display the result on the LCD.

LAB NO: 9 Date:

#### ANALOG TO DIGITAL CONVERTOR PROGRAM

# **Objectives:**

In this lab students will be able to

• Understand the working of a 12 bit internal Analog-to-Digital Converter (ADC)

**Introduction:** The LPC1768 contains a single 12-bit successive approximation ADC with eight channels and DMA support. 12-bit ADC with input multiplexing among eight pins, conversion rates up to 200 kHz, and multiple result registers. The 12-bit ADC can be used with the GPDMA controller. On board there are two interfaces for internal ADC's. AD0.5 (pin P1.31) of the controller is used to convert the analog input voltage varied using POT1 to digital value. AD0.4(Pin 1.30) used to convert the analog voltage varied using POT4. An input voltage range of 0 to 3.3V is accepted. 000 to FFF is the converted digital voltage range here. Short JP18 (2, 3) to use AD0.4.

#### **Solved Exercise:**

WAP to configure and read analog data from ADC channel no 5, and display the digital data on the LCD.

```
#include<LPC17xx.h>
#include<stdio.h>
#include"AN LCD.h"
#define Ref_Vtg
                    3.300
#define Full_Scale
                                         //12 bit ADC
                    0xFFF
int main(void)
       unsigned long adc_temp;
       unsigned int i;
       float in vtg;
       unsigned char vtg[7], dval[7];
       unsigned char Msg3[11] = {"ANALOG IP:"};
       unsigned char Msg4[12] = {"ADC OUTPUT:"};
       SystemInit();
       SystemCoreClockUpdate();
```

```
//Power for GPIO block
LPC SC->PCONP = (1 << 15);
lcd init();
LPC PINCON->PINSEL3 |= 0xC0000000:
                                                 //P1.31 as AD0.5
LPC SC->PCONP |= (1<<12);
                                                 //enable the peripheral ADC
SystemCoreClockUpdate();
lcd comdata(0x80, 0);
delay_lcd(800);
lcd puts(&Msg3[0]);
lcd comdata(0xC0, 0);
delay lcd(800);
lcd_puts(&Msg4[0]);
while(1)
       LPC ADC->ADCR = (1 << 5)|(1 << 21)|(1 << 24):
                                                        //0x01200001;
                             //ADC0.5, start conversion and operational
       while(!(LPC ADC->ADDR5 & 0x80000000));
              //wait till 'done' bit is 1, indicates conversion complete
       adc temp = LPC ADC->ADDR5;
       adc_{temp} >>= 4;
       adc temp &= 0x00000FFF;
                                                        //12 bit ADC
      in_vtg = (((float)adc_temp * (float)Ref_Vtg))/((float)Full_Scale);
                                   //calculating input analog voltage
      sprintf(vtg, "%3.2fV", in_vtg);
                     //convert the readings into string to display on LCD
      sprintf(dval, "%x", adc temp);
      for(i=0; i<2000; i++);
       lcd comdata(0x89, 0);
       delay lcd(800);
       lcd puts(&vtg[0]);
       lcd comdata(0xC8, 0);
       delay lcd(800);
       lcd_puts(&dval[0]);
```

```
for(i=0;i<200000;i++);\\ for(i=0;i<7;i++)\\ vtg[i] = dval[i] = 0x00;\\ adc\_temp = 0;\\ in\_vtg = 0;\\ \}
```

# **Components required**

ALS-SDA-ARMCTXM3-01: 1 No.
 Power supply (+5V): 1 No.
 Cross cable for programming and serial communication: 1 No

• One working COM port (Ex: COM1) in the host computer system and PC for downloading the software.

10 core FRC cables of 8 inch length
USB to B type cable
1 No

**Hardware Setup**: Do the setup related to LCD

**Working procedure:** Vary POT1 and observe the corresponding analog and digital voltage values on LCD.

#### **Exercise**

1. Write a C program to display the digital value representing the difference in analog voltages at ADC channel 4 and channel 5 on LCD using BURST and Software mode.

LAB NO: 10 Date:

#### PROGRAM ON DIGITAL TO ANALOG CONVERTOR (DAC)

### **Objectives:**

In this lab students will be able to

➤ Understand the working of a 10 bit DAC and check the waveform on Cathode Ray Oscilloscope (CRO).

**Introduction:** LPC1768 has 10 bit internal DAC with dedicated conversion timer and DMA support. The DAC allows to generate a variable analog output. The maximum output value of the DAC is VREFP. The equation to calculate output voltage value is given as below.

```
AOUT = DACR \text{ value } x ((VREFP - VREFN)/1024) + VREFN
```

An analog output from the controller can be observed in this block at TP8. Open JP5 to use this feature and use CRO to watch analog output value.

#### **Solved Exercise:**

```
WAP to generate a sawtooth waveform using DAC and display it on CRO.
#include <lpc17xx.h>
void delayMS(unsigned int milliseconds);
int main(void)
unsigned int value=0; //Binary value used for Digital to Analog Conversion
LPC PINCON->PINSEL1 |= (1<<21); //Select AOUT function for P0.26, bits[21:20]
=[10]
while(1)
    {
           if(value > 1023) value=0; //For 10-bit DAC max-value is 2^10 - 1 = 1023
           LPC DAC->DACR = (value << 6);
           delayMS(9999); //for 10 millisecond delay
           value++;
    }
void delayMS(unsigned int count) //Using Timer0
{
```

```
LPC_TIM0->CTCR = 0x0; //Timer mode

LPC_TIM0->PR = 2; //Increment TC at every 3 pclk

LPC_TIM0->TCR = 0x02; //Reset Timer

LPC_TIM0->TCR = 0x01; //Enable timer

while(LPC_TIM0->TC < count); //wait until timer counter reaches the desired

//delay

LPC_TIM0->TCR = 0x00; //Disable timer

}
```

# **Components required**

- ALS-SDA-ARMCTXM3-01: 1 No.
- Power supply (+5V): 1 No.
- Cross cable for programming and serial communication : 1 No
- One working USB port in the host computer system and PC for downloading the software.
- 10 core FRC cables of 8 inch length
  USB to B type cable
  1 No

# Hardware setup:

Open the jumper JP5

Connect TP8 pin to CRO positive wire and TP3 to CRO negative wire. Scale the CRO to the proper display

**Working procedure**: Reset the controller and observe the analog output waveform on CRO.

#### Lab Exercises:

- 1. Using DAC, generate a triangular waveform with maximum possible peak-peak amplitude.
- 2. Using DAC, generate a ramp waveform with maximum possible peak-peak amplitude.

#### **Additional Exercise:**

Using DAC, generate a variable frequency sine waveform. Use ROW-0 of keyboard for frequency variation

LAB NO: 11 Date:

#### PROGRAM ON PULSE WIDTH MODULATION (PWM)

# **Objectives:**

In this lab students will be able to

➤ Interface and understand the working of PWM

**Introduction:** The PWM is based on the standard Timer block and inherits all of its features, although only the PWM function is pinned out on the LPC1768. The Timer is designed to count cycles of the system derived clock and optionally switch pins, generate interrupts or perform other actions when the specified timer values occur, based on seven match registers. The PWM function is in addition to these features, and is based on match register events. A PWM output from the controller can be observed as an intensity variation of the LED LD10.

#### **Solved Exercise:**

```
WAP to vary the intensity of an LED using PWM.
#include <LPC17xx.h>
void initPWM(void);
void updatePulseWidth(unsigned int pulseWidth);
void delayMS(unsigned int milliseconds);
int main(void)
{
      27000}; //Pulse Widths for varying LED Brightness
      const int numPulseWidths = 10;
      int count=1:
      int dir=0; //direction, 0 = Increasing, 1 = Decreasing
      initPWM(); //Initialize PWM
      while(1)
      {
            updatePulseWidth(pulseWidths[count]); //Update LED Pulse Width
            delayMS(10000);
```

```
if(count == (numPulseWidths-1) || count == 0)
                   dir = !dir; //Toggle direction if we have reached count limit
             if(dir) count--;
             else count++;
      }
}
void initPWM(void)
      LPC PINCON->PINSEL3 |= 0x8000; //Select PWM1.4 output for Pin1.23,
function 2
      LPC_PWM1->PCR = 0x1000; //enable PWM1.4, by default it is single Edged
      LPC PWM1->PR = 0;
      LPC_PWM1->MR0 = 30000; //period=10ms if pclk=cclk/4
      LPC PWM1->MCR = (1<<1); //Reset PWM TC on PWM1MR0 match
      LPC_PWM1->LER = 0xff; //update values in MR0 and MR1
LPC_PWM1->TCR = 0x00000002; //RESET COUNTER TC and PC
      LPC PWM1->TCR = 0x00000009; //enable TC and PC
}
void updatePulseWidth(unsigned int pulseWidth)
      LPC_PWM1->MR4 = pulseWidth; //Update MR4 with new value
      LPC_PWM1->LER = 0xff; //Load the MR4 new value at start of next cycle
}
void delayMS(unsigned int milliseconds) //Using Timer0
      LPC_TIMO->CTCR = 0x0; //Timer mode
      LPC TIM0->PR = 2; //Increment TC at every 3 pclk
```

```
LPC\_TIM0->TCR = 0x02; //Reset \ Timer \\ LPC\_TIM0->TCR = 0x01; //Enable \ timer \\ while(LPC\_TIM0->TC < milliseconds); //wait \ until \ timer \ counter \ reaches \ the \\ desired \ delay \\ LPC\_TIM0->TCR = 0x00; //Disable \ timer \\ \}
```

Hardware setup: Connect 10 pin FRC cable from CNB to CNB1.

Working procedure: As the pulse width varies, intensity of LED LD10 varies. Observe the pulses at TP5. Observe the amplitude level at TP6.

# Lab Exercises:

Write a program to set the following intensity levels to the LED connected to PWM output. Use ROW-0 of keyboard for intensity variation

Intensity level	Key pressed		
10%	0		
25%	1		
50%	2		
75%	3		

LAB NO: 12 Date:

#### PROGRAM ON STEPPER MOTOR

# **Objectives**

In this lab students will be able to

> Interface and understand the working of stepper motor

**Introduction:** The Stepper motor can be interfaced to the board by connecting it to the Power Mate PM1. The direction of the rotation can be changed through software. The DC Motor can also be interfaced to the board by connecting it to the Reliamate RM5. The direction of the rotation can be changed through software.

The Relay K2 is switched between ON and OFF state. The LED L12 will toggle for every relay switch over. The contact of NO & NC of the relay can be checked at the MKDSN connector CN12 pins 1 & 2 using a CRO– these contacts can be connected to external devices. Using connector CNA5 micro controller can interface with this block.

Description of the connector pins are given in below table.

Pin @ CNA5	Description
1 to 4	Buffered from U13 used for stepper motor control
5	Buffered from U13 and connected to relay k2 coil. coil other end is connected to +5V
6	Connected to both 1 & 2 of U13; corresponding outputs of U13 are taken to NO and NC contacts of relay K1
7	One end of coil of relay K1
8	Controls the buzzer

PM1- it's a 5 pin straight male power mate. PIN descriptions are as given below.

Pin no	Description
1	+5v supply
2	Phase A
3	Phase B
4	Phase C
5	Phase D

Pin 2 to 5 are phase A to D output for the stepper motor respectively.

**Sample program:** To rotate the stepper motor in clockwise and anticlockwise direction at a particular speed continuously.

```
#include <LPC17xx.H>
void clock wise(void);
void anti_clock_wise(void);
unsigned long int var1, var2;
unsigned int i=0,j=0,k=0;
int main(void)
    SystemInit();
    SystemCoreClockUpdate();
    LPC_PINCON->PINSEL0 = 0xFFFF00FF; //P0.4 to P0.7 GPIO
    LPC\_GPIOO->FIODIR = 0x0000000F0;
                                             //P0.4 to P0.7 output
    while(1)
    {
           for(j=0;j<50;j++)
                 clock_wise();
           for(k=0;k<65000;k++);
                                   // Delay to show anti_clock Rotation
```

```
for(j=0;j<50;j++)
                 anti_clock_wise();
          for(k=0;k<65000;k++); // Delay to show clock Rotation
   } // End of while(1)
} // End of main
void clock_wise(void)
   var1 = 0x00000008:
                           //For Clockwise
 for(i=0;i<=3;i++) // for A B C D Stepping
          var1 = var1 << 1; //For Clockwise
          LPC_GPIO0->FIOPIN = var1;
   for(k=0;k<3000;k++); //for step speed variation
}
void anti_clock_wise(void)
   var1 = 0x00000100;
                         //For Anticlockwise
  for(i=0;i \le 3;i++) // for A B C D Stepping
    var1 = var1>>1; //For Anticlockwise
    LPC_GPIO0->FIOPIN = var1;
    for(k=0;k<3000;k++); //for step speed variation
    }
```

}

# **Components required**

• ALS-SDA-ARMCTXM3-01 :	1 No.
• Power supply (+5V):	1 No.
• Cross cable for programming and serial communication:	1 No
• Stepper motor	1 No
• One working USB port in the host computer system	and PC for downloading
the software.	

10 core FRC cables of 8 inch length
USB to B type cable
1 No

**Hardware setup:** Connect 10 pin FRC cable from CNA to CNA5. Connect the stepper motor to PM1.

**Working procedure:** Stepper motor will rotate clockwise and in anti-clock wise direction automatically after reset.

### Lab Exercise:

Write a C program to rotate the stepper motor in the clockwise direction when SW2 is high and anticlockwise direction when SW2 is low.

# **Appendix A: Instructions**

# **Instruction Set Summary**

Mnemonic	Operation	Description
<u>ADC</u>	$Rd := Rn + \underline{Op2} + C$	Add with carry
<u>ADD</u>	$Rd := Rn + \underline{Op2}$	Add
<u>ADDS</u>	Rd: = Rn + Op2	Add and update falgs
<u>ADR</u>	Rd: = Rn, label	Load register with adress
AND	$Rd := Rn \ AND \ \underline{Op2}$	AND
ANDS	$Rd := Rn \ AND \ \underline{Op2}$	AND update flags
<u>ASR</u>	Rd: = Rn, #LSB, #width	Arithmetic shift right
<u>B</u>	R15 := address	Branch
BIC	$Rd := Rn \ AND \ NOT \ \underline{Op2}$	Bit Clear
<u>BL</u>	R14 := address of next instruction, R15 :=address	Branch with Link
<u>BX</u>	R15 := Rn, change to Thumb if address bit 0 is 1	Branch and Exchange
CLZ	Rd := number of leading zeroes in Rm	Count Leading Zeroes
<u>CMN</u>	$CPSR flags := Rn + \underline{Op2}$	Compare Negative
<u>CMP</u>	CPSR flags := Rn - $\underline{Op2}$	Compare
<b>EOR</b>	Rd:= Rn EOR Op2	Exclusive OR
<u>LDM</u>	Stack manipulation (Pop)	Load multiple Registers (refer last paragraph of this appendix)
<b>LDMIA</b>	LDMIA Rn!, {reglist}	Load multiple registers from memory
<u>LDR</u>	Rd := [address][31:0]	Load 32-bit word from memory.
<u>LDRB</u>	Rd := ZeroExtend ([address][7:0])	Load register byte value to Memory.
<u>LDRH</u>	Rd := ZeroExtend ([address][15:0])	Load register 16-bit halfword value to Memory.

# Appendix A

MCR	cRn:=rRn { <op>cRm}</op>	Move CPU register to coprocessor register
MLA	Rd := (Rm * Rs) + Rn	Multiply Accumulate
MOV	$Rd := \underline{Op2}$	Move register or constant
MRS	Rn := PSR	Move PSR status flags to register
MSR	PSR := Rm	Move register to PSR status flags
MUL	Rd := Rm * Rs	Multiply
MVN	Rd := NOT Rm	Move inverted register or constant
<u>NOP</u>	None	No operation
<u>ORR</u>	Rd:=Rn OR Op2	OR
<u>PUSH</u>	PUSH {reg list}	Push registers on to the stack pointed by R13
<u>POP</u>	POP{reg. list}	Pop registers from the stack pointed by R13
<u>RSB</u>	Rd := Op2 - Rn	Reverse Subtract
RSC	Rd := Op2 - Rn - 1 + Carry	Reverse Subtract with Carry
RBIT	RBIT Rd, Rn	Reverse the bit order in a 32-bit word
REV	REV Rd, Rn	converts 32-bit big-endian data into little-endian data or 32-bit little-endian data into big-endian data
ROR	Rd: = Rd, Rs	Rotate Rd register by Rs bits
RRX	Rd: = Rd, Rm	Rotate Right with Extend
<b>SBC</b>	Rd := Rn - Op2 - 1 + Carry	Subtract with Carry
<u>STM</u>	stack manipulation (Push)	Store Multiple (refer last paragraph of this appendix
<u>STR</u>	<address>:=Rd</address>	Store register to memory
<u>STRB</u>	[address][7:0] := Rd[7:0]	Store register byte value to Memory.
<u>STRH</u>	[address][15:0] :=Rd[15:0]	Store register 16-bit halfword value to Memory
<u>SUB</u>	Rd := Rn - Op2	Subtract

<u>TEQ</u>	CPSR flags:= Rn EOR Op2	Test bitwise equality
<u>TST</u>	CPSR flags:= Rn AND Op2	Test bits
<u>UMULL</u>	UMULL r0, r4, r5, r6	Unsigned Long Multiply

A conditional instruction is only executed on match of the condition flags in the Program Status Register. For example, the BEQ (B instruction with EQ condition) branches only if the Z flag is set. If the {cond} field is empty the instruction is always executed.

{cond} Suffix	Tested Status Flags	Description
EQ	Z set	equal
NE	Z clear	not equal
CS/HS	C set	unsigned higher or same
CC/LO	C clear	unsigned lower
MI	N set	negative
PL	N clear	positive or zero
VS	V set	overflow
VC	V clear	no overflow
HI	C set and Z clear	unsigned higher
LS	C clear or Z set	unsigned lower or same
GE	N equals V	signed greater or equal
LT	N not equal to V	signed less than
GT	Z clear AND (N equals V)	signed greater than
LE	Z set OR (N not equal to V)	signed less than or equal
AL	(ignored)	always (usually omitted)

# **Addressing Mode for LDM and STM**

The instructions LDM and STM provide four different addressing modes. The addressing mode specifies the behavior of the base register and is explained in the following table.

Addressing Mode	C ' ' '
I/\ ddragging \\/\ \/\ \da	locorintion
AUDIESSIIIS MODE	DESCRIDION
Tradicional Tradicion	

# Appendix A

IA	Increment base register after instruction execution.
IB	Increment base register before instruction execution.
DA	Decrement base register after instruction execution.
DB	Decrement base register before instruction execution.

**Examples:** STMDB R2!,{R4,R5,LR}

LDMIA R0!,{R1-R5}

STMDB R6!,{R0,R1,R5}

# Appendix B: Addressing modes

Name	Alternative Name	ARM Examples
Register to register	Register direct	MOV R0, R1
	Direct	LDR R0, MEM
Literal	Immediate	MOV R0, #15 ADD R1, R2, #12
Indexed, base	Register indirect	LDR R0, [R1]
Pre-indexed, base with displacement	Register indirect	LDR R0, [R1, #4]
Pre-indexed, autoindexing	Register indirect pre-incrementing	LDR R0, [R1, #4]!
Post-indexing, autoindexed	Register indirect post-increment	LDR R0, [R1], #4
Double Reg indirect	Register indirect Register indexed	LDR R0, [R1, R2]
Double Reg indirect with scaling	Register indirect indexed with scaling	LDR R0, [R1, r2, LSL #2]
Program counter relative		LDR R0, [PC, #offset]

# **Literal Addressing**

In this addressing mode data is a part of instruction. '#' symbol is used to indiacate the data. ARM and Thumb instructions can only be 32 bits wide. You can use a MOV or MVN instruction to load a register with an immediate value from a range that depends on the instruction set. Certain 32-bit values cannot be represented as an immediate operand to a single 32-bit instruction, although you can load these values from memory in a single

instruction. you can load any 32-bit immediate value into a register with two instructions, a MOV followed by a MOVT. Or, you can use a pseudo-instruction, MOV32, to construct the instruction sequence for you. You can also use the LDR pseudo-instruction to load immediate values into a register

Examples	Meaning
 CMP R0, #22	;Compare Register content R0 with 22
 ADD R1, R2, #18; Add the ;the result in R1	e content of R2 and 18 then store
 MOV R1, #30	;copy the data 30 into register R1
 MOV R1, #0Xff	;copy the data ff in hexadecimal into R1
 MOV R2, #0xFF0000FF	
 AND R0, R1, #0xFF00000	0
CMN R0, #6400	; update the N, Z, C and V flags
 CMPGT SP, R7, LSL #2	; update the N, Z, C and V flags

- MOV can load any 8-bit immediate value, giving a range of 0x0-0xFF (0-255). It can also rotate these values by any even number. These values are also available as immediate operands in many data processing operations, without being loaded in a separate instruction.
- MVN can load the bitwise complements of these values. The numerical values are (n+1), where n is the value available in MOV.
- A MOVT instruction that can load any value in the range 0x0000 to 0xFFFF into the most significant half of a register, without altering the contents of the least significant half.
- The LDR Rd,=const pseudo-instruction generates the most efficient single instruction to load any 32-bit number

**Introduction to Register Indirect Addressing:** Register indirect addressing means that the location of an operand is held in a register. It is also called indexed addressing or base addressing.

Register indirect addressing mode requires three read operations to access an operand. It is very important because the content of the register containing the pointer to the operand can be modified at runtime. Therefore, the address is a vaiable that allows the access to the data structure like arrays.

- Read the instruction to find the pointer register
- Read the pointer register to find the oprand address
- Read memory at the operand address to find the operand

Some examples of using register indirect addressing mode:

```
LDR R2, [R0]; Load R2 with the word pointed by R0

STR R2, [R3]; Store the word in R2 in the location
; pointed by R3
```

LDR Rd,=label can load any 32-bit numeric value into a register. It also accepts PC-relative expressions such as labels, and labels with offsets

# Register Indirect Addressing with an Offset

ARM supports a memory-addressing mode where the effective address of an operand is computed by adding the content of a register and a literal offset coded into load/store instruction. For example,

Instruction	Effective Address
 LDR R0, [R1, #20] ; pointed a	R1 + 20; loads R0 with the word at by R1+20

ARM's Autoindexing Pre-indexed Addressing Mode

This is used to facilitate the reading of sequential data in structures such as arrays, tables, and vectors. A pointer register is used to hold the base address. An offset can be added to achieve the effective address. For example,

Instruction	Effectiv	ve Address
 LDR R0, [R1, #4]!		
;u	pointed at by R1 update the point by adding 4 to R	er

# **ARM's Autoindexing Post-indexing Addressing Mode**

This is similar to the above, but it first accesses the operand at the location pointed by the base register, then increments the base register. For example,

Instruction	Effective Address
	;loads R0 with the word by R1 then e pointed by ;adding 4 to R1
	 , ,

# **Program Counter Relative (PC Relative) Addressing Mode**

Register R15 is the program counter. If you use R15 as a pointer register to access operand, the resulting addressing mode is called PC relative addressing. The operand is specified with respect to the current code location. Please look at this example,

Instruction	Effective Address
LDR R0, [R15, #24]	R15 + 24 ;loads R0 with the word ;pointed at by R1+24

#### APPENDIX C

#### **GPIO** extension connectors:

There are four 10 pin FRC type male connectors, they extends the controllers general purpose port lines for the use of user requirements. Details on each connector is given below:

**CNA** –10 pin male box type FRC connector. Port lines P0.4 to P0.11 from controller are terminated in this connector. They can be extended to interface few on board or external peripherals. The pins mentioned in the above table are configured to work as a GPIO's at power on. Other alternate functions on those pins needs to be selected using respective PINSEL registers.

Pin CNA	PIN LPC1768	Description
1	81	P0.4/I2SRX_CLK/RD2/CAP2.0
2	80	P0.5/I2SRX_WS/TD2/CAP2.1
3	79	P0.6/I2SRX_SDA/SSEL1/MAT2.0
4	78	P0.7/I2STX_CLK/SCK1//MAT2.1
5	77	P0.8/I2STX_WS/MISO1/MAT2.2
6	76	P0.9/I2STX_SDA/MOSI1/MAT2.3
7	48	P0.10/TXD2/SDA2/MAT3.0
8	49	P0.11/RXD2/SCL2/MAT3.1
9	-	No connection
10	-	Ground

**CNB** – 10 pin male box type FRC connector. Port lines fromP1.23 to P1.26 and P2.10 to P2.13 are terminated in this connector.

Description of the connector CNB:

Pin CNB	Pin LPC1768	Description
1	37	P1.23/MCI1/PWM1.4/MISO0
2	38	P1.24/MCI2/PWM1.5/MOSI0
3	39	P1.25/MCOA1/MAT1.1
4	40	P1.26/MCOB1/PWM1.6/CAP0.0
5	53	P2.10/EINT0/NMI
6	52	P2.11/EINT1/I2STX_CLK
7	51	P2.12/EINT2/I2STX_WS
8	50	P2.13/EINT3/I2STX_SDA
9	-	No connection
10	-	Ground

**CNC** – 10 pin male box type FRC connector. Port lines fromP0.15 to P0.22 and P2.13 are terminated in this connector.

Pin CNC	Pin LPC1768	Description
1	62	P0.15/TXD1/SCK0/SCK
2	63	P0.16/RXD1/SSEL0/SSEL
3	61	P0.17/CTS1/MISO0/MISO
4	60	P0.18/DCD1/MOSI0/MOSI
5	59	P0.19/DSR1/SDA1
6	58	P0.20/DTR1/SCL1
7	57	P0.21/RI1/RD1
8	56	P0.22/RTS1/TD1
9	50	P2.13/I2STX_SDA
10	-	Ground

 ${\bf CND}-10$  pin male box type FRC connector. Port lines from P0.23 to P0.28 and P2.0 to P2.1 are terminated in this connector.

# Appendix C

Pin CND	Pin LPC1768	Description
1	9	P0.23/AD0.0/I2SRX_CLK/CAP3.0
2	8	P0.24/AD0.1/I2SRX_WS/CAP3.1
3	7	P0.25/AD0.2/I2SRX_SDA/TXD3
4	6	P0.26/AD0.3/AOUT/RXD3
5	25	P0.27/SDA0/USB/SDA
6	24	P0.28/SCL0/USB_SCL
7	75	P2.0/PWM1.1/TXD1
8	74	P2.1/PWM1.2/RXD1
9	-	No connection
10	-	Ground