

PT. YONGJIN JAVASUKA GARMENT	**INTRUKSI KERJA- GUDANG ACC** ***WORK INSTRUCTIONS- ACC WAREHOUSE INSPECTION***	No. Dokumen : YJ-IK.WHS.0006 Tgl.Efektif : 01 Oktober 2025 No.Revisi 01 Halaman : 1 Dari 1

1 Flowchart Inspection

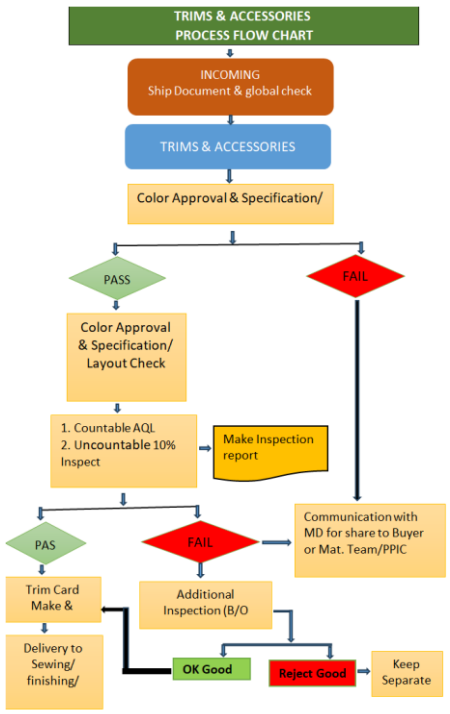


2 Area Pengecheckan
Inspection Area

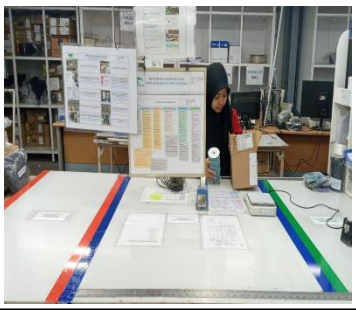

Area Pengecheckan harus rapih dan jelas, dengan memisahkan antara material sebelum dan sesudah inspect

The inspection area must be tidy and clear, separating materials before and after inspection.

3 Standard pengecheckan
Inspection Standard

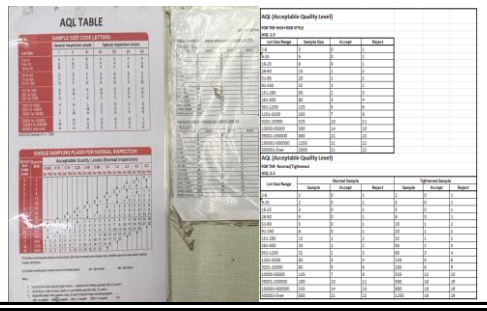

Inspeksi barang menggunakan Approval dan standard AQL dengan statdard pencahayaan dari buyer.

Inspection material using Approval and AQL standards with lighting standards from the buyer.


4 Methode Pengechekan
Inpestion Method



Material ACC ada 2 cara pengecheckan
Countable: AQL Standard
Uncountable: 10%

ACC material has 2 Methode of checking
Countable: AQL Standard
Uncountable: 10%

5 Pengecheckan Color dan Detail
Color & Detail Inspection

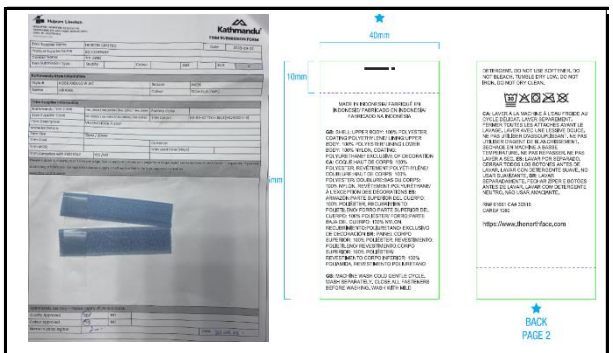

Petugas inspect akan mengecheck color dan Detail dengan cara menbandingkannya dengan Approval dari buyer.

The inspector will check the color and detail by comparing it with the buyer's approval.

6 Penempelan sticker QC
QC sticker application



Petugas inspect akan menempelkan QC sticker pada kemasan untuk material yang sudah selesai di inspect.

The inspector will attach a QC sticker on the packaging for materials that have been inspected.

7 Pengechekan Short Roll (QTY)
Short roll check (QTY)



Steam elastic 1yds,4yds,4yds,4yds (ubah satuan yds ke inch") 1yds=36", Relax elastic 24 jam,Timbang berat elastic 1yds,4yds,4yds,4yds setelah rela, Ukur susut elastic per 1yds,4yds,4yds,4yds,Hitung % susut setiap yds nya, Hitung rata-rata susut setiap 1yds, Hitung total yds quantity susut dari total actual quantity, Hitung balance quantity.

=Actual quantity-Sticker qty)-total quantity susut.


Steam elastic 1yds, 4yds, 4yds, 4yds (convert the unit yds to inches) 1yds = 36".
Relax elastic for 24 hours.Weigh the weight of elastic 1yds, 4yds, 4yds, 4yds after relaxing, Measure elastic shrinkage per 1yds, 4yds, 4yds, 4yds and calculate the %, shrinkage for each yard, Calculate the average shrinkage per 1yds, Calculate the total yds shrinkage from the total actual quantity, Calculate the balance quantity = (Actual quantity - Sticker qty) - total shrinkage quantity.

8 Pengecheckan Metal
Metal Inspection



Material / ACC yang terbuat dari metal harus di check menggunakan metal detector untuk memastikan tidak ada nya kandungan metal pada barang dan kemasan.
Materials/Accessories made of metal must be checked using a metal detector to ensure there is no metal content in the items and packaging.

9 Inspection Report & Performance supplier

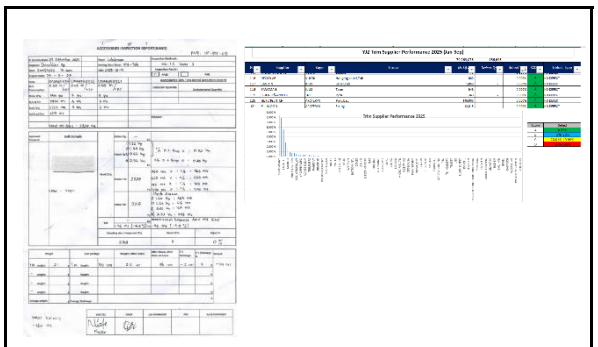

* Membuat laporan kinerja pemasok dengan diagram Pareto, lengkap dengan skor dari hasil analisis kualitas, membandingkan setiap bulan, sebagai pertimbangan untuk membuat keputusan perbaikan.
* Laporan inspeksi bahan di recap oleh adm di komputer dan di laporkan kepada WH manager dan PPIC.
** Creating a supplier performance report with a Pareto chart, complete with scores from quality analysis results, comparing each month, as a consideration for making the decisions for improvemen*
** The material inspection report is recap by adm on the computer and reported to the WH manager and PPIC.*

10 Penandaan dan Pemisahan area material reject
Marking and Separation of Rejected Material Areas



PIC menempelkan sticker reject pada kemasan, lalu memindahkan material reject ke rak CNCM dan menempelkan identitasnya.
The PIC attaches a reject sticker on the packaging, then moves the rejected material to the CNCM rack and attaches their identification.

Terima kasih anda telah melakukan pekerjaan sesuai dengan standard operasional prosedure, S.O.P. Pastikan pekerjaan hari ini lebih baik dari kemarin

Thank you for doing your work in accordance with standard operating procedures, S.O.P. Make sure that today's work is better than yesterday