
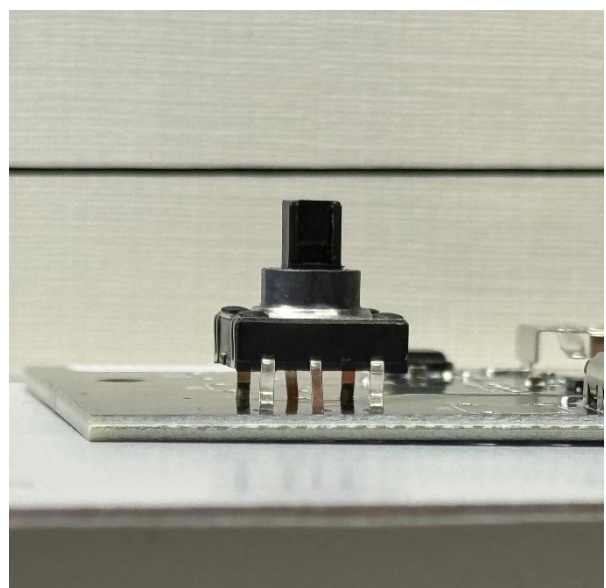
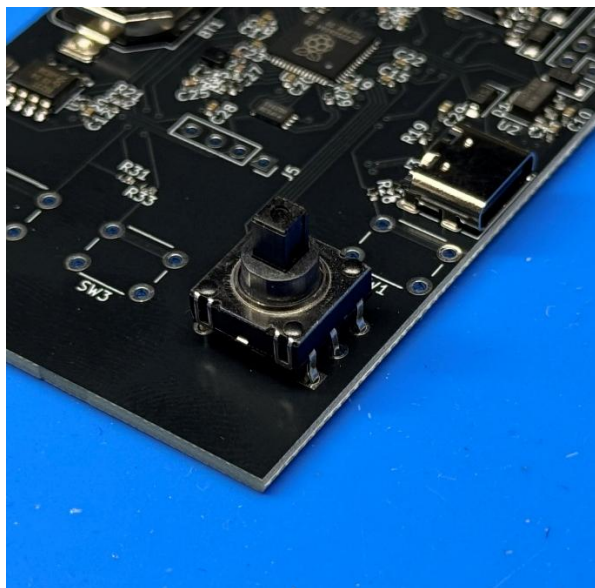
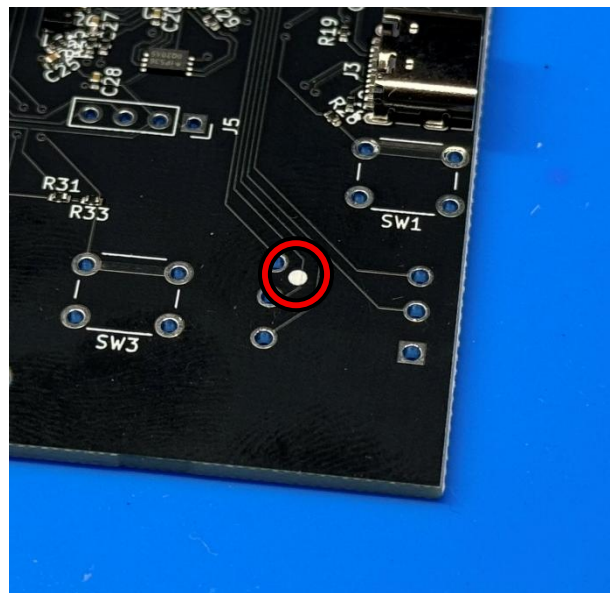


Supra Build Guide



1: 5-way navigator

Use a flat surface to insert the 5-way navigation switch so that just the tips of the pins are inserted into the pads. Make sure that the dot on the underside of the switch matches up with the dot on the silkscreen. Adjust the switch until it looks level with the PCB and solder it.

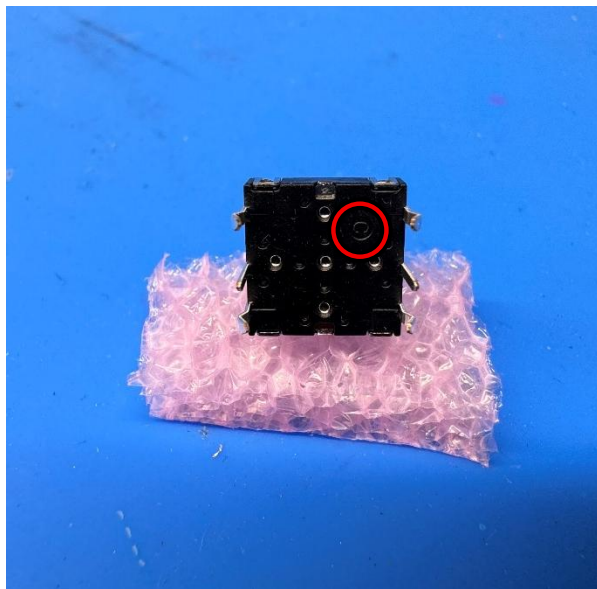



2: Pushbutton and power header

On the back side of the PCB, insert the pushbutton and power header. When soldering the power header be mindful of the surrounding surface mount components.

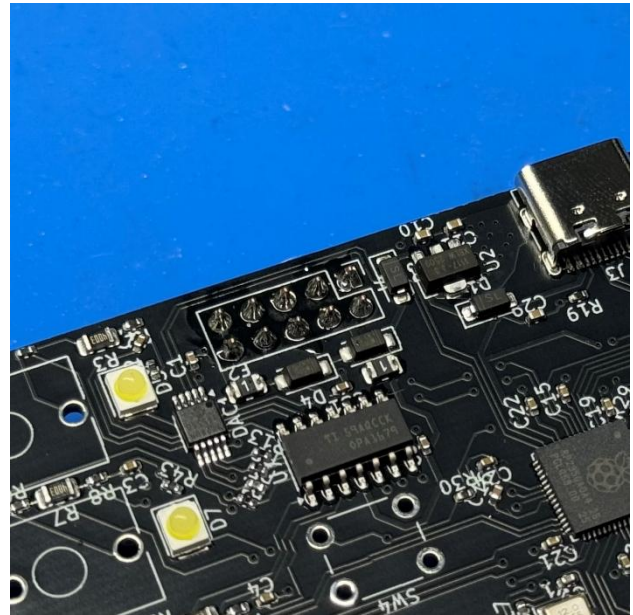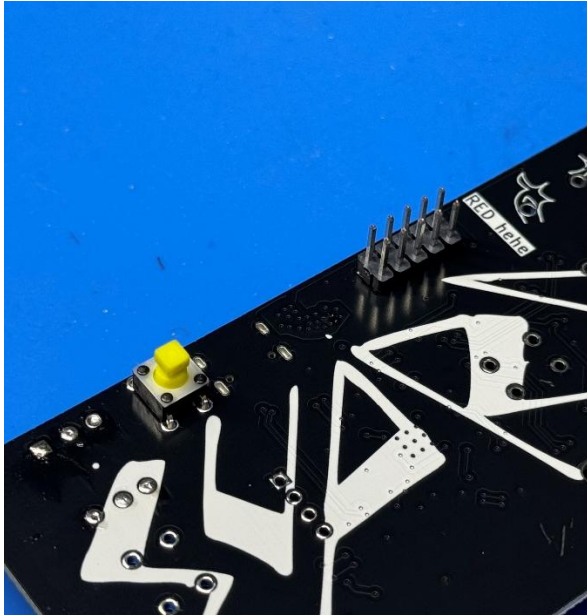



3: OLED display

To mount the display, you will need the included 6mm spacer, the 4mm screw, and a hex nut. Attach the spacer the bottom of the display with the screw and insert the pins and threaded end of the spacer in the PCB. Use the hex nut to secure the display. Adjust the display until it looks parallel to the PCB and solder the pins. At this point you can remove the screen protector.

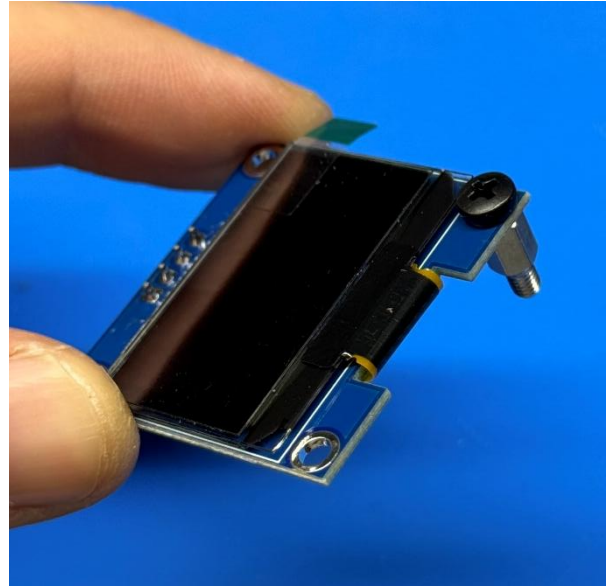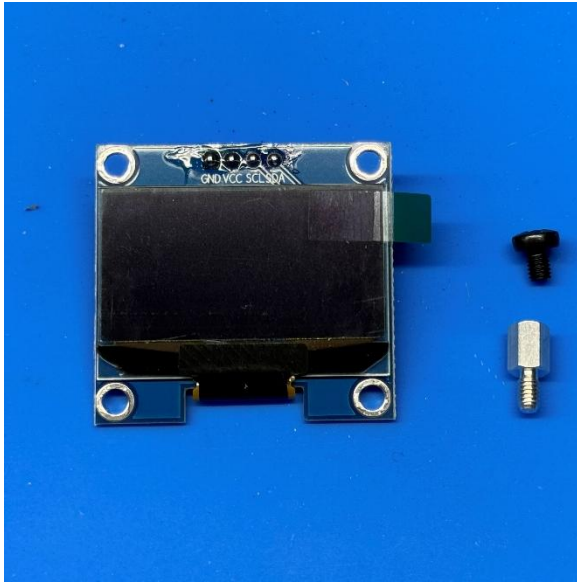

4: Panel hardware

Attach the 10mm spacer to the PCB with the remaining hex nut. Insert the white capped buttons and jacks. Place the panel on the jacks and use the 6mm screw to secure the panel to the spacer and screw on the round nuts to the jacks. Check that the buttons and jacks are seated flat and solder them. Insert the light pipes, navigator cap, and the battery making sure it goes in positive side up. Use a multimeter and check the continuity between the power pins to make sure there are no shorts

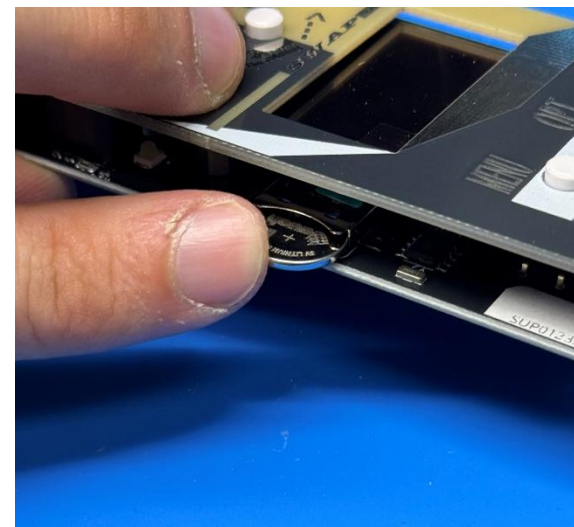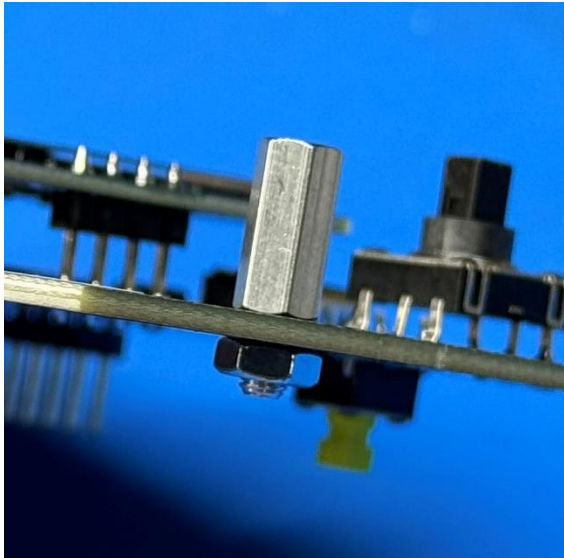

5: Computer stuff

Plug your Supra into your computer with a USB C cable. Flash the Supra and set the current date and time with the navigator.



6: Yippee!

Plug your Supra into your system and check to see if the button, inputs, and outputs are working correctly. Congratulations, you finished your Supra! Have fun getting lost in supra-time!

