

Manual de Montagem

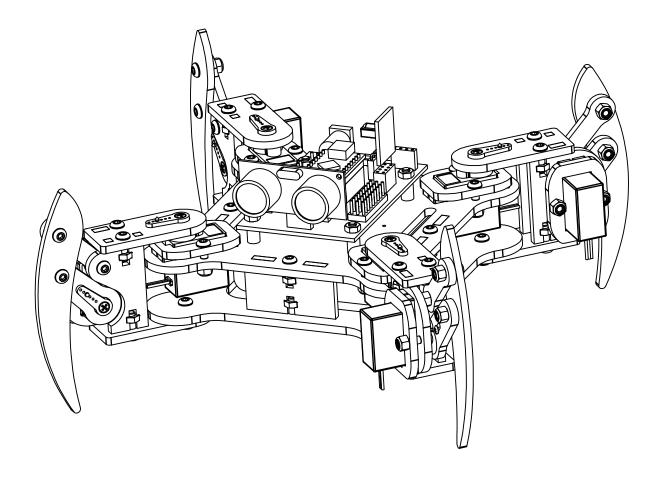

Wood Parts:

Before laser cutting the mePed, the wood was covered with a protective masking tape to prevent the wood from becoming smoke damaged. You will need to peel the masking tape off each part before assembling the mePed. If there is a little bit of smoke damage anywhere on the wood after peeling off the masking tape, a light sanding will quickly remove it.

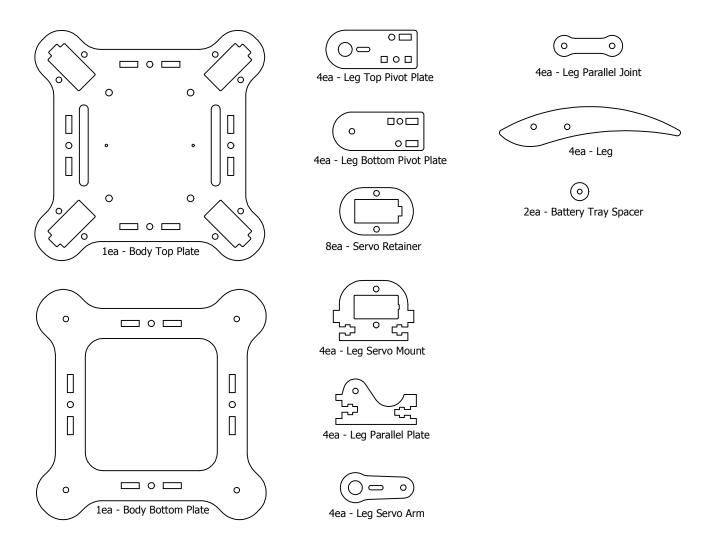

60ea - M3 Hex Nut

40ea - M3 x 10mm Screw


16ea - M3 x 12mm Screw

<u>ATENÇÃO!</u>


Não são todos os kits que acompanham servos e eletrônica, certifique-se qual o kit que você adquiriu.

Setting Servo Center Position


Before starting to assemble your new mePed Walking Robot, it is important to center all 8 servos that came with the kit. The following steps will help ensure all of the servos are rotated to their center or 90° position.



Attach a Servo Arm to the servo and then gently rotate the Servo Arm clockwise until the arm stops. It is okay if the Servo Arm does not stop at the same angle shown in the illustration above. What is important is that we find the end stop of the Servo.




Remove the Servo Arm from the Servo and reposition it to be perpendicular to the Servo body as shown in this illustration.



Gently rotate the Servo Arm counter-clockwise until the Servo Arm is parallel with the Servo body as shown. After the Servo Arm is parallel with the Servo Body, remove the Servo Arm and set it aside for later assembly. This is the Servo's center position and it is important that all 8 Servos are centered before starting the assembly.

Leg Assembly

Repeat Steps 1-9 four times.

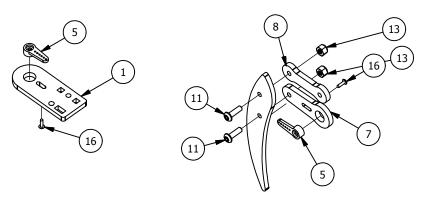


Step 1: Insert a Servo Single Arm into a Leg Top Pivot Plate and thread a Servo Mount Screw into the Servo Single Arm from the back side of the Leg Top Pivot Plate.

Step 2: Insert a Servo Single Arm into a Leg Servo Arm and thread a Servo Mount Screw into the Servo Single Arm from the back side of the Leg Servo Arm.

Step 3: Attach one Leg Parallel Linkage to a Leg piece using an M3 x 10mm Screw and an M3 Plain Nut.

Step 4: Attach the Leg piece to a Leg Servo Arm using an M3 x 10mm Screw and an M3 Plain Nut.


IMPORTANT! Do not over tighten the screws in Steps 2 and 3. The Leg joints should move freely to prevent excess friction which could cause the servos to fail.

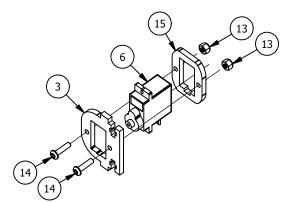

Step 5: Insert a Servo into a Servo Retainer.

Step 6: Insert the top end of the Servo into the Leg Servo Mount.

Step 7: Attach the Servo Retainer to the Leg Servo Mount using two M3 x 12mm Screws and two M3 Plain Nuts.

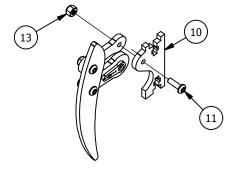

PARTS LIST

Leg Bottom Pivot Plate

Leg Top Pivot Plate

Leg Servo Mount

Servo Single Arm

Leg Servo Arm

Leg Parallel Linkage

Leg Parallel Plate

M3 x 10mm Screw

M3 x 12mm Screw

Servo Mount Screw

Servo Retainer

Leg, Rev A

M3 Plain Nut

M3 Plain Nut

Servo Screw

Servo

PART NUMBER

ITEM

2

3

4

5

6 7

8

10

11

12

13

14


15

16


17

Step 8: Attach a Leg Parallel Plate to the other end of the Leg Parallel Linkage using an M3 x 10mm Screw and an M3 Plain Nut

IMPORTANT! Do not over tighten this screw. The leg joints should move freely to prevent excess friction which could cause the servos to fail.

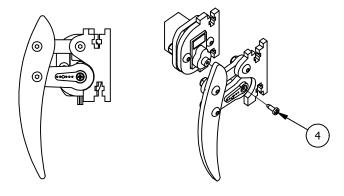


Step 9: With the Servo rotated to center position and the leg positioned so the Parallel Linkage is horizontal, attach the Leg Servo Arm to the Servo using the Servo Arm Screw supplied with the Servo.

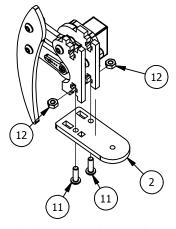


Step 10: Attach the Leg Assembly from the previous steps to a Leg Bottom Pivot Plate using two M3 x 10mm Screws and two M3 Plain Nuts.

Body Assembly

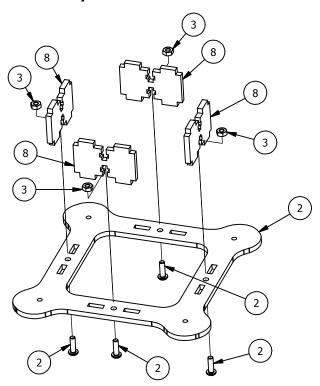

PARTS LIST
PART NUMBER
Body Top Plate
Servo Screw
9 Gram Servo
M3 x 10mm Screw
M3 Plain Nut
M3 Plain Nut
M3 x 12mm Screw
Body Spacer
Leg Servo Mount
Servo Retainer
Leg, Rev A


Step 11: Attach four Body Spacers to the Body Bottom Plate using four M3 x 10mm Screws and four M3 Plain Nuts.

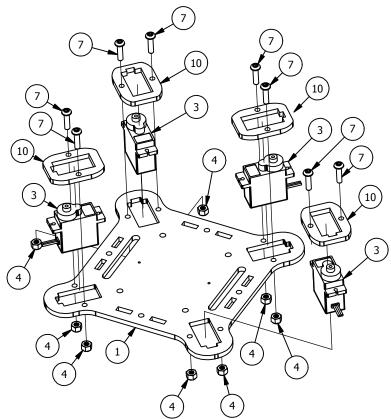


Step 12: Insert four Servos into the top side of the Body Top Plate. Step 13: Slide a Servo Retainer onto the top of each Servo.


- Step 14: Attach each Servo Retainer to the Body Top Plate using M3 x 12mm Screws and M3 Plain Nuts.

Final Assembly

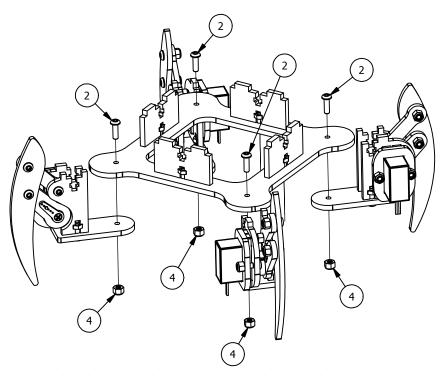


Step 15: Attach each Leg Assembly to the Body Bottom Plate Assembly using an M3 x 10mm Screw and an M3 Plain Nut. Do not over tighten these screws. The leg joints should move freely to prevent excess friction which could cause the servos to fail.

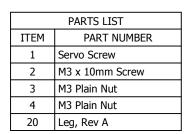

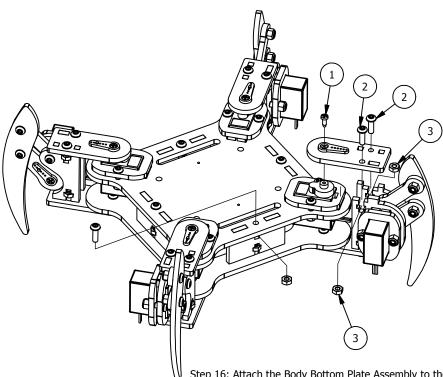


- Step 16: Attach the Body Bottom Plate Assembly to the Body Top Plate Assembly using four M3 x 10mm Screws and four M3 Plain Nuts.
- Step 17: Rotate each Leg so they are oriented at a 45° angle as shown. Attach a Leg Top Pivot Plate Assembly to each Pivot Servo and Leg Assembly using two M3 x 10mm Screws and two M3 Plain Nuts.
- Step 18: Secure the Servo Single Arm to the Servo using a Servo Screw.

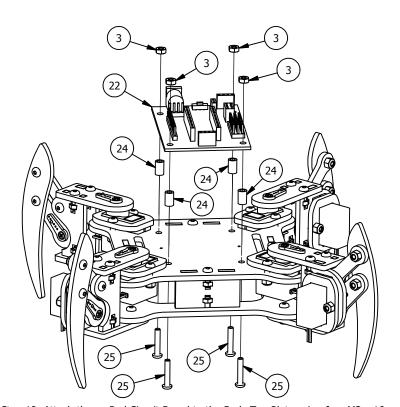


	PARTS LIST
ITEM	PART NUMBER
3	M3 Plain Nut
19	Servo Mount Screw
21	Battery Holder (NÃO INCLUSO)
22	mePed Circuit Board
24	Spacer, M3 x 8mm(NÃO INCLUSO
25	M3 x 16mm Screw
26	Battery Tray Spacer

Step 19: Attach the mePed Circuit Board to the Body Top Plate using four M3 x 16mm Screws and four M3 Plain Nuts.

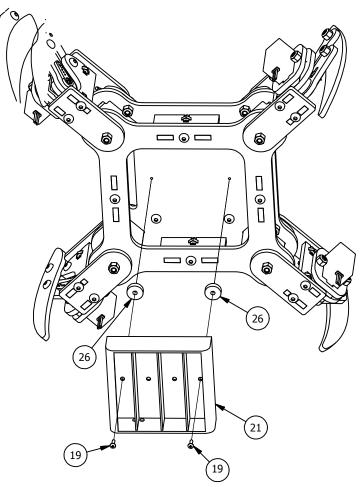


Step 20: Attach the Battery Holder to the bottom of the Body Top Plate using two Servo Screws and two Battery Holder Spacers. Feed the battery cable through the back of the mePed body and plug it into the match power socket on the mePed circuit board.

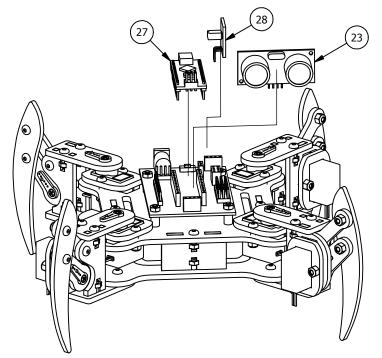

	PARTS LIST
ITEM	PART NUMBER
23	HC-SR04 Ultrasonic (NÃO INCLUSO)
27	Arduino Nano
28	IR Sensor

ITEM 23: NÃO ESTÁ INCLUSO NO KIT

- Step 21: Plug the HC-SR04 Ultrasonic Range Finder into the port labeled ULTRASONIC RF of the mePed Circuit Board.
- Step 22: Plug the Arduino Nano micro controller into the port labeled Nano on the mePed Circuit Board. Be sure the USB port on the Arduino Nano is facing away from the Ultrasonic Range Finder as shown in the illustration. Failure to orient the Arduino Nano correctly can permanently damage it.
- Step 23: Insert the IR Sensor into the port labeled IR on the mePed Circuit Board. Be sure to orient the IR Sensor as shown. The pin labeled "S" on the IR Sensor should plug into the socket lableled SIG on the mePed Circuit Board.

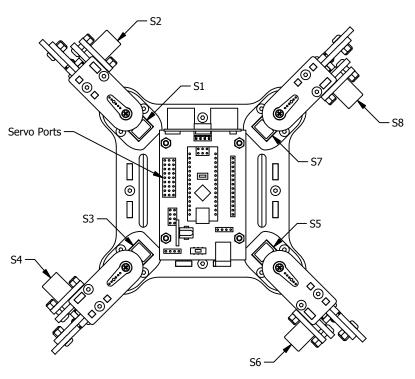

Step 24: Plug the servos into the Servo Ports as follows: NOTE: The Orange wire of the servo goes to the S terminal and the Brown wire goes to "-" terminal on the mePed Circuit Board.


Front Left Pivot Servo into S1
Front Left Lift Servo into S2
Back Left Pivot Servo into S3
Back Left Lift Servo into S4
Back Right Pivot Servo into S5
Back Right Lift Servo into S6
Front Right Pivot Servo into S7
Front Right Lift Servo into S8

S9 is intentionally left empty but can accomodate an extra servo for added customization.

After your mePed robot is fully assembled and all the servo motor wires are plugged into their corresponding pins, insert four AA batteries into the battery holder on the bottom side of the robot and use the power switch to turn the robot on.

Here is a list of the pre-programmed remote control functions that are already on your mePed robot.

#

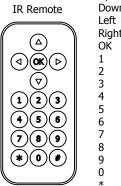

Up - Walk Forward
Down - Walk Backwards
Left - Turn Left
Right - Turn Right
OK -

1 - Walk Turn Walk
2 - Wave
3 - Increase Walking Speed
4 -
5 -
6 - Decrease Walking Speed
7 -
8 Dance
9 - Move all servos to center position

Buttons that do not have a movement associated with them are intentionally left un-programmed so you can program your own custom functions.

You can download the starter program already loaded onto your mePed as well as find other resources for your new robot at www.meped.io/mepedv2.

- Trim Left

- Trim Right