




$R = 410 \text{ Ом: } \Theta = 0.380 \pm 0.009, f = 5960 \text{ Гц}$

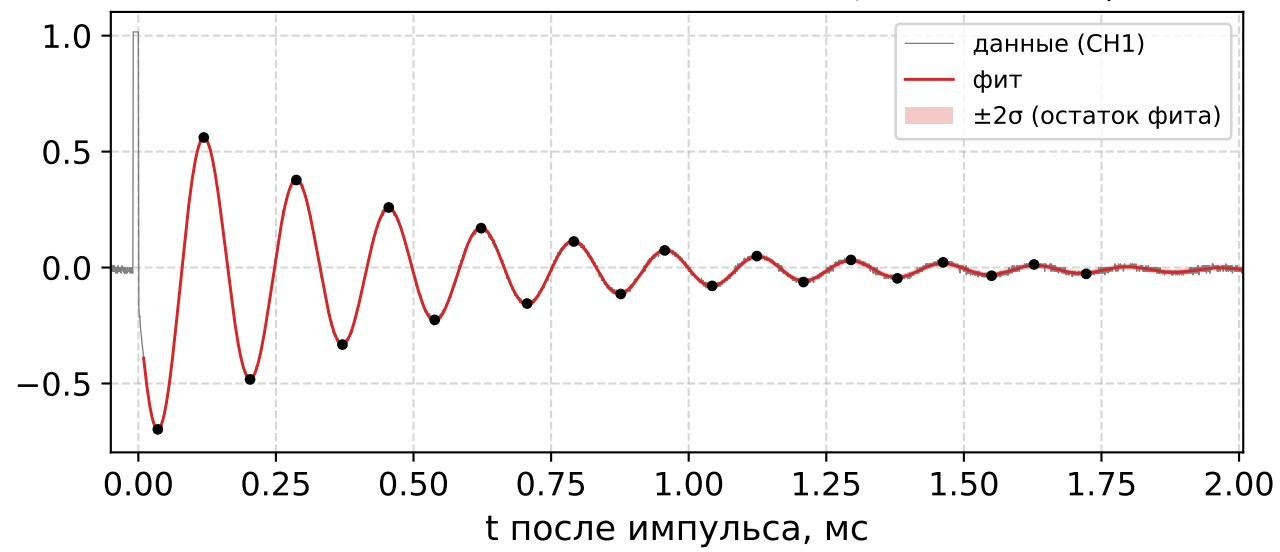


$R = 600 \text{ Ом: } \Theta = 0.544 \pm 0.002, f = 5951 \text{ Гц}$

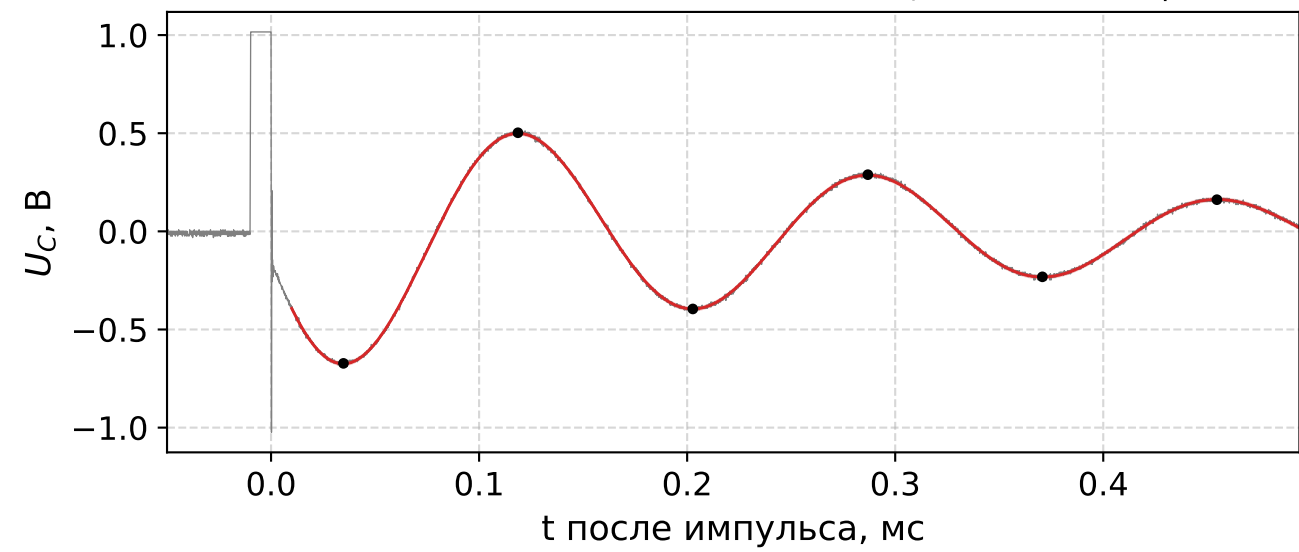


$R = 800 \text{ Ом: } \Theta = 0.707 \pm 0.001, f = 5938 \text{ Гц}$

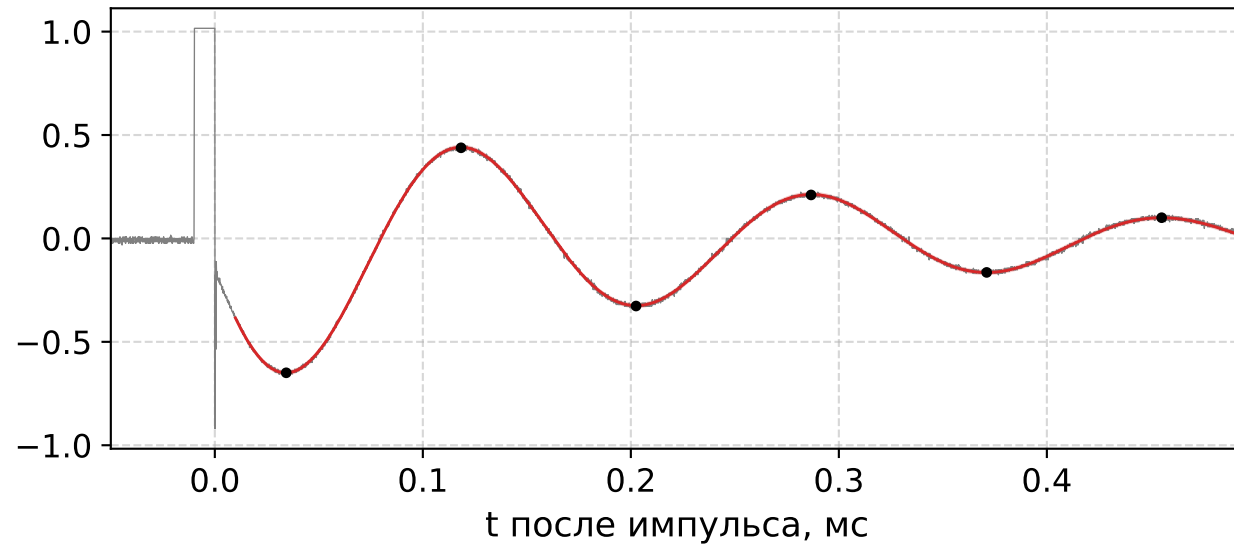


$R = 1000 \text{ Ом: } \Theta = 0.873 \pm 0.004, f = 5919 \text{ Гц}$

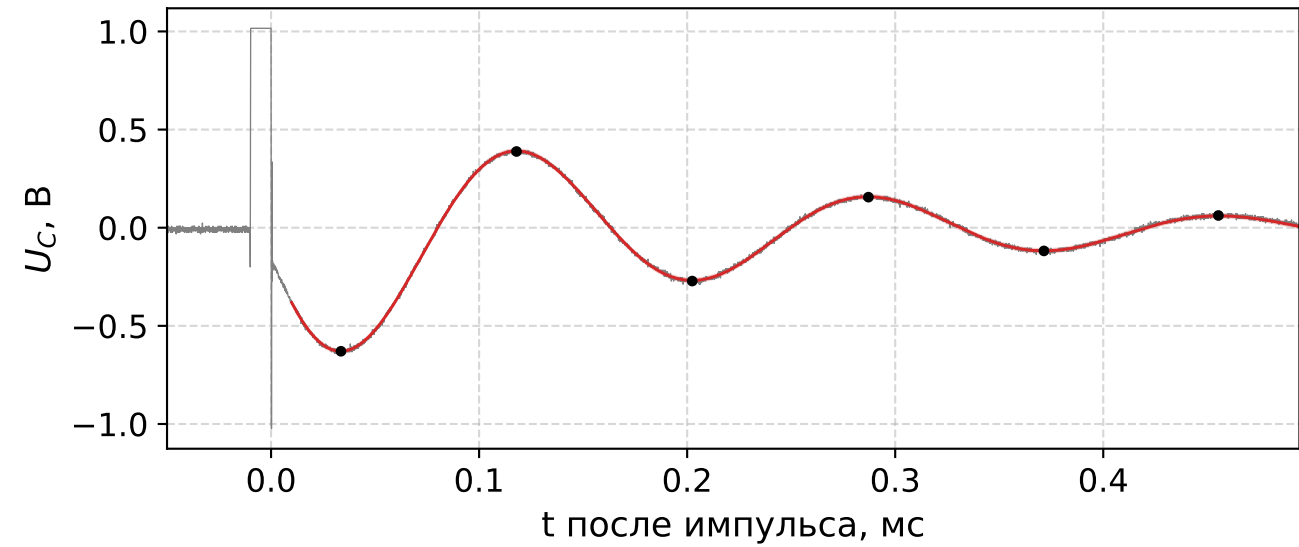


$R = 1200 \text{ Ом: } \Theta = 1.042 \pm 0.002, f = 5899 \text{ Гц}$

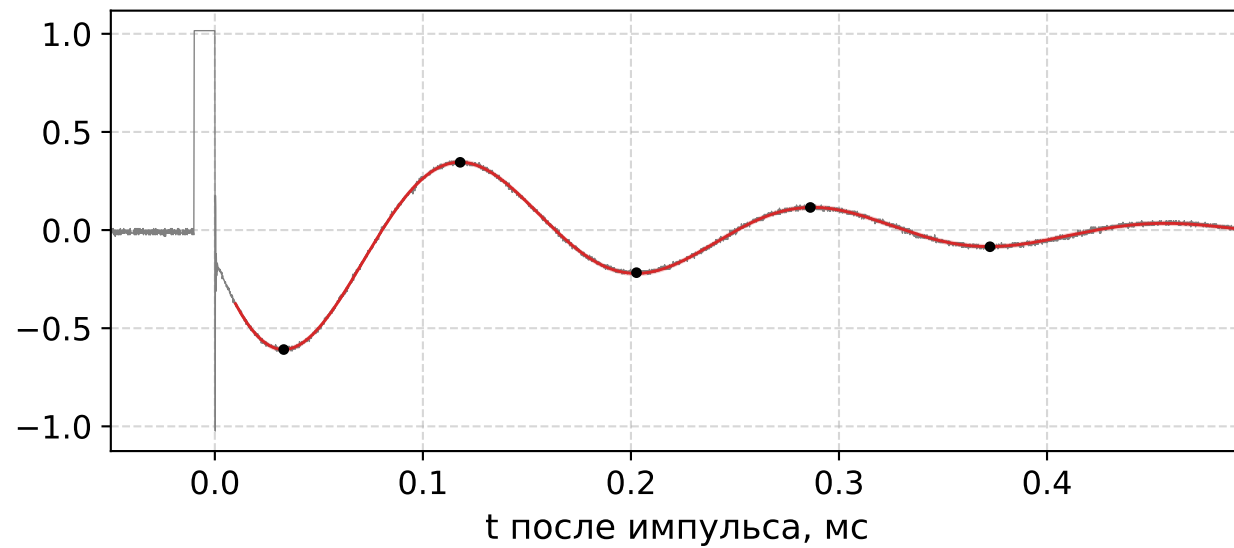

$R = 1500 \text{ Ом: } \Theta = 1.290 \pm 0.008, f = 5863 \text{ Гц}$

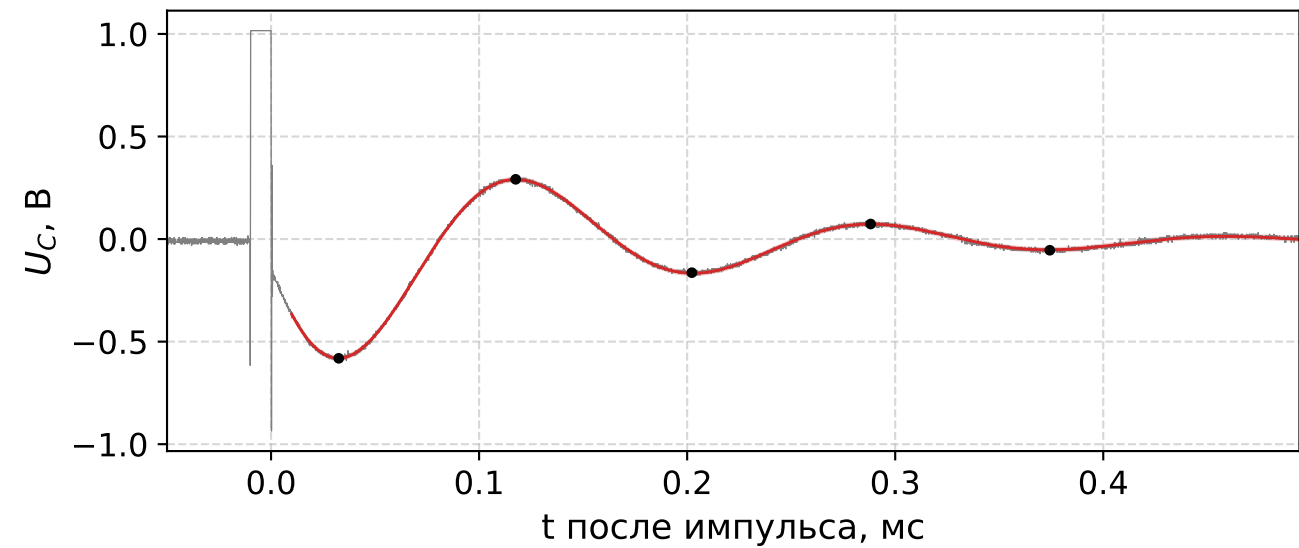

$R = 1750 \text{ Ом: } \Theta = 1.512 \pm 0.007, f = 5818 \text{ Гц}$

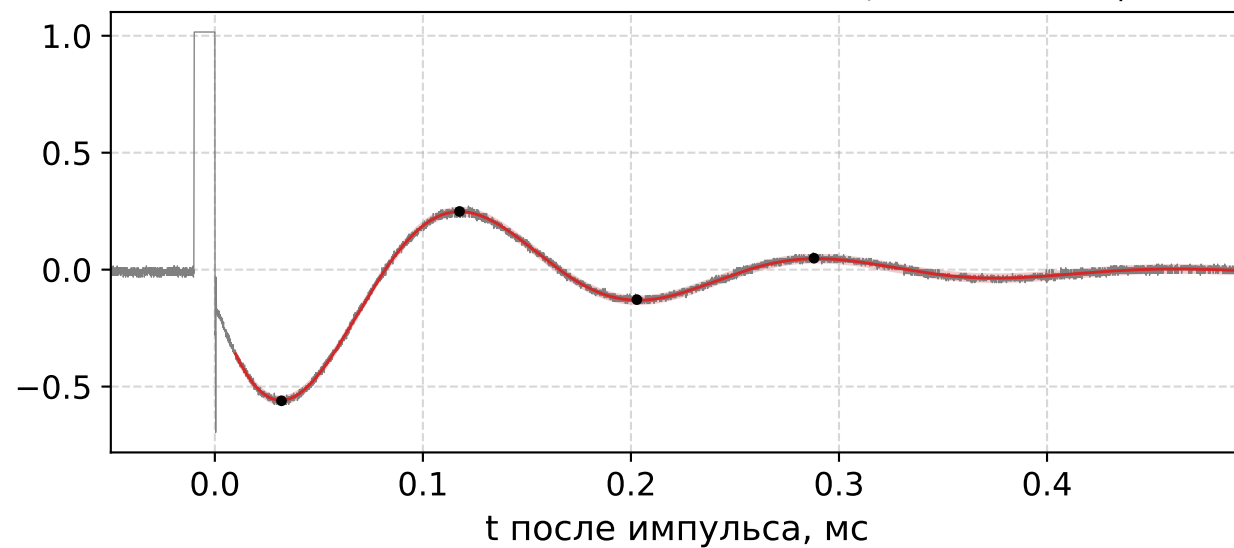

$R = 2040 \text{ Ом: } \Theta = 1.778 \pm 0.020, f = 5767 \text{ Гц}$

