Recommended splicing method

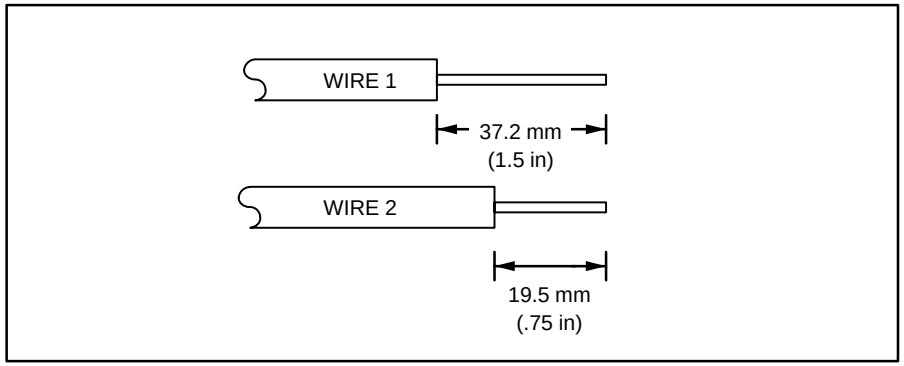

1. Disconnect battery ground cable.
2. Strip wires to appropriate length.

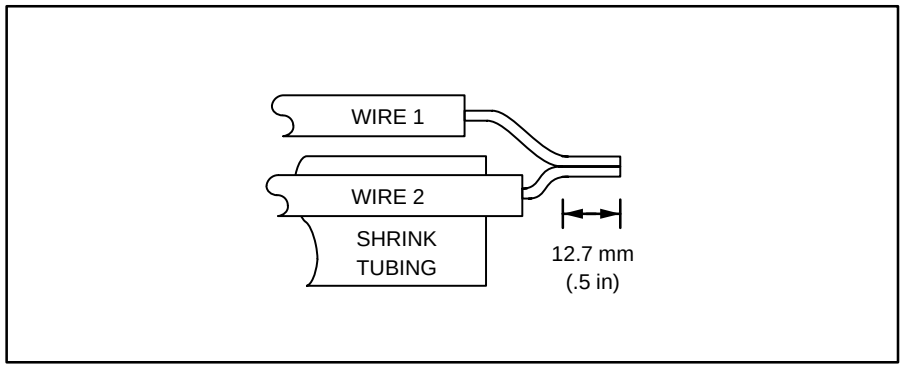

3. Install heat shrink tubing.
4. Twist wires together.
5. Solder wires together.
   NOTE: Use rosin core mildly-activated (RMA) solder. Do not use acid core solder.

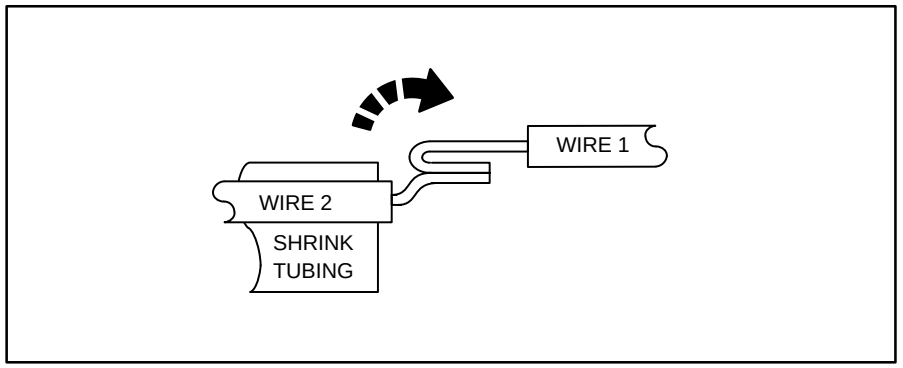

6. Bend Wire 1 back in a straight line.
   NOTE: Wait for solder to cool before moving wires.