Recommended splicing method

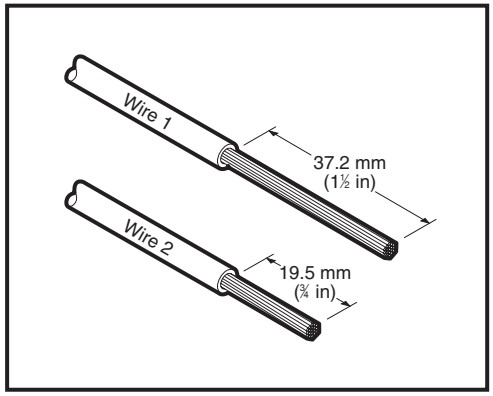

1. Disconnect battery ground cable.
2. Strip wires to appropriate length.

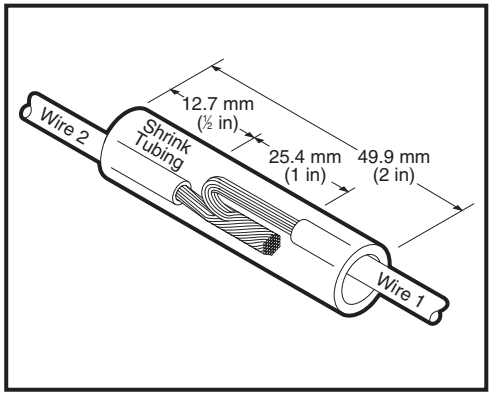

7. Evenly position heat shrink tubing over wire repair.

Note:
Overlab tubing on both wires

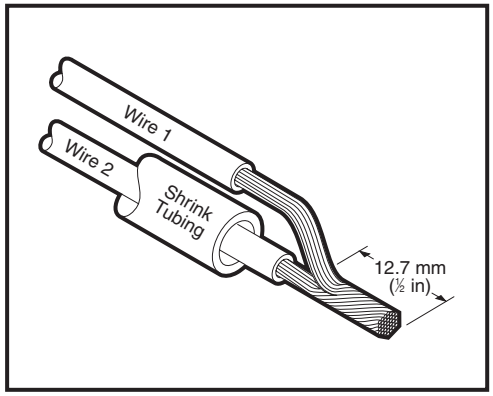

3. Install heat shrink tubing.
4. Twist wires together.
5. Solder wires together.

Note:
Use resin core mildly-activated (RMA) solder. Do not use acid core solder.

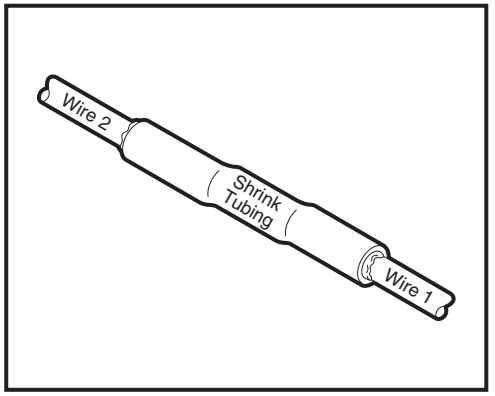

8. Use heat gun to heat the repaired area until adhesive flows out of both ends of heat shrink tubing.
9. Reconnect battery ground cable.

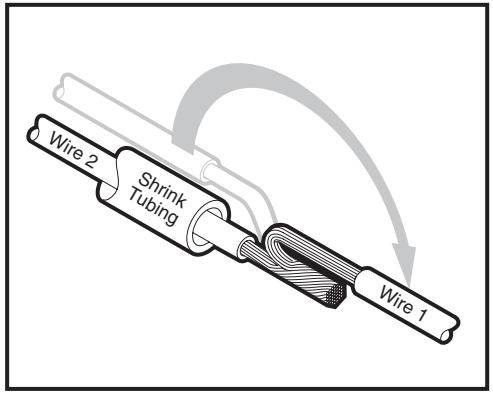

6. Bend Wire 1 back in a straight line.

Note:
Wait for solder to cool before moving wires.