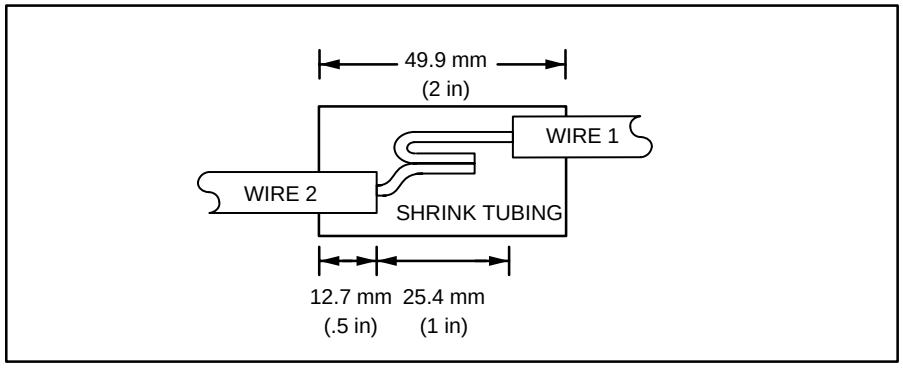

7. Evenly position heat shrink tubing over wire repair.
   NOTE: Overlap tubing on both wires.

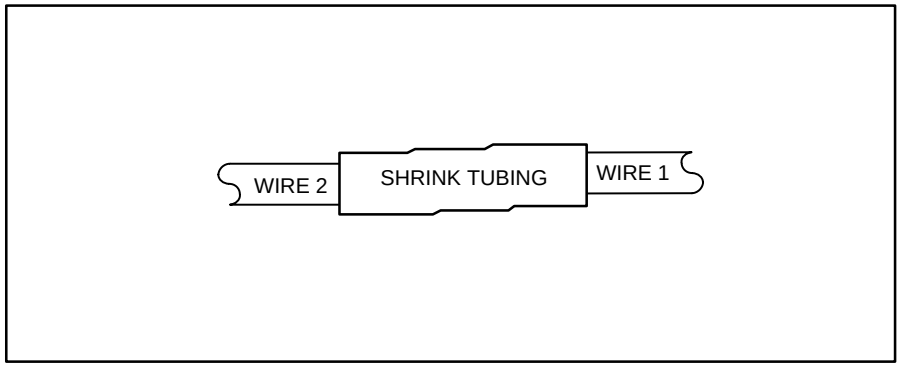

8. Use heat gun to heat the repaired area until adhesive flows out of both ends of heat shrink tubing.
9. Reconnect battery ground cable.