TIRE SERVICE WARNING LABEL INSTALLATION

AFFECTED VEHICLES: **CERTAIN 1999 THROUGH 2001 F-450, F-550 SUPER DUTY VEHICLES AND F-53 STRIPPED CHASSIS**

SERVICE PROCEDURE

NOTE: Refer to the dealer letter and the vehicle build date to verify if the vehicle requires two or three labels installed.

NOTE: The illustration shown here represents F-450 and F-550 model vehicles. Due to the wide variety of body configurations available on the F-Super Duty Stripped Chassis frame, the vehicle may not be equipped with a driver side door as illustrated. On these vehicles, install the enclosed labels so they are visible at the vehicle point of entry.

THREE-LABEL INSTALLATION

1. Open the driver's door and, using isopropyl alcohol, clean the two areas shown in Figure 1.

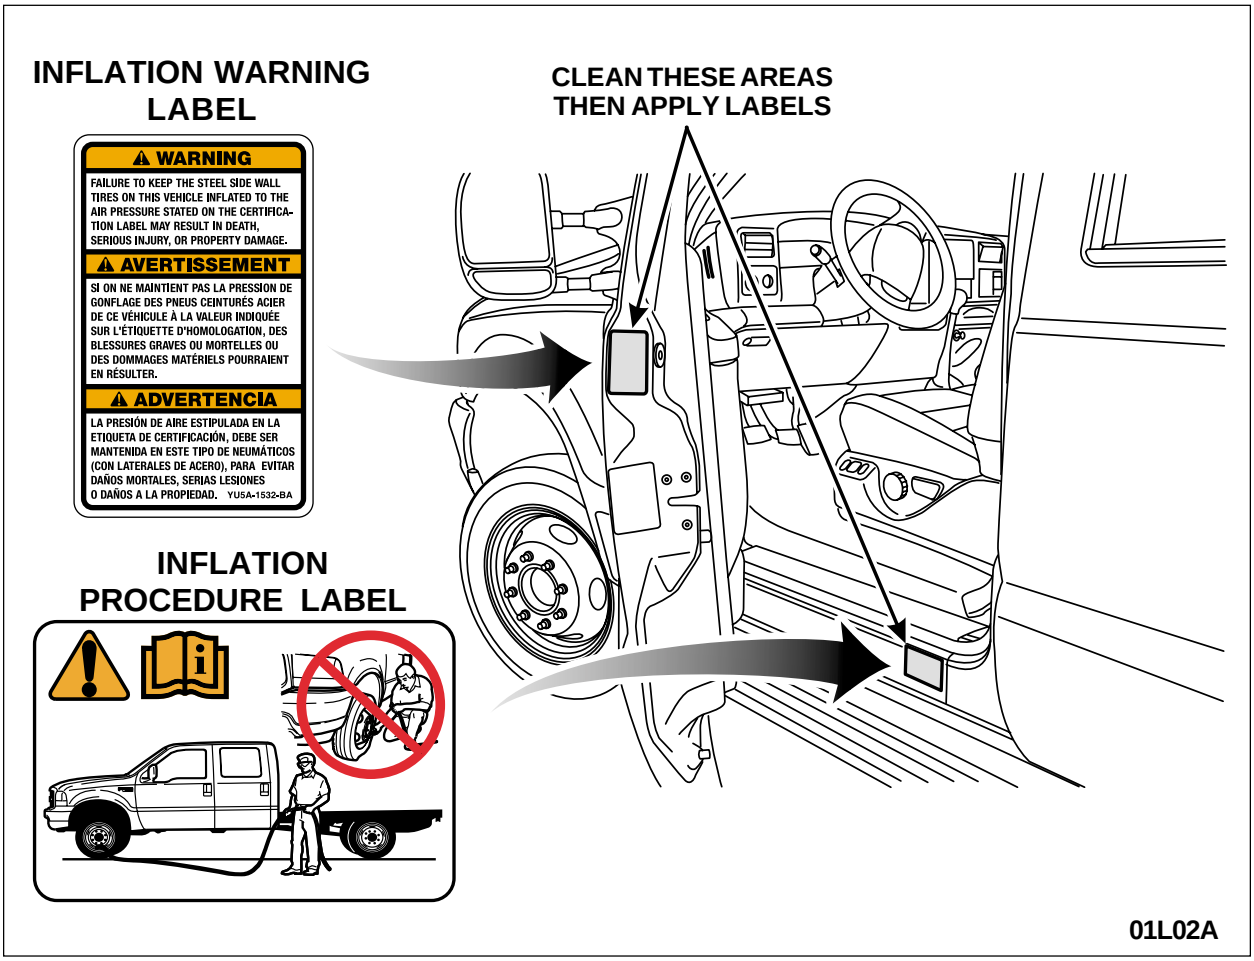


FIGURE 1

Ford Motor Company

CPR © 2001 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
03/01

2. Peel the backing off the Inflation Warning Label and apply it to the flat area on the driver's door.
3. Peel the backing off the Inflation Procedure Label and apply it to the rocker panel at the vertical seam covering the top two spot welds.
4. Peel the backing off the owner's guide supplement label and apply it to the inside of the front cover. See Figure 2.

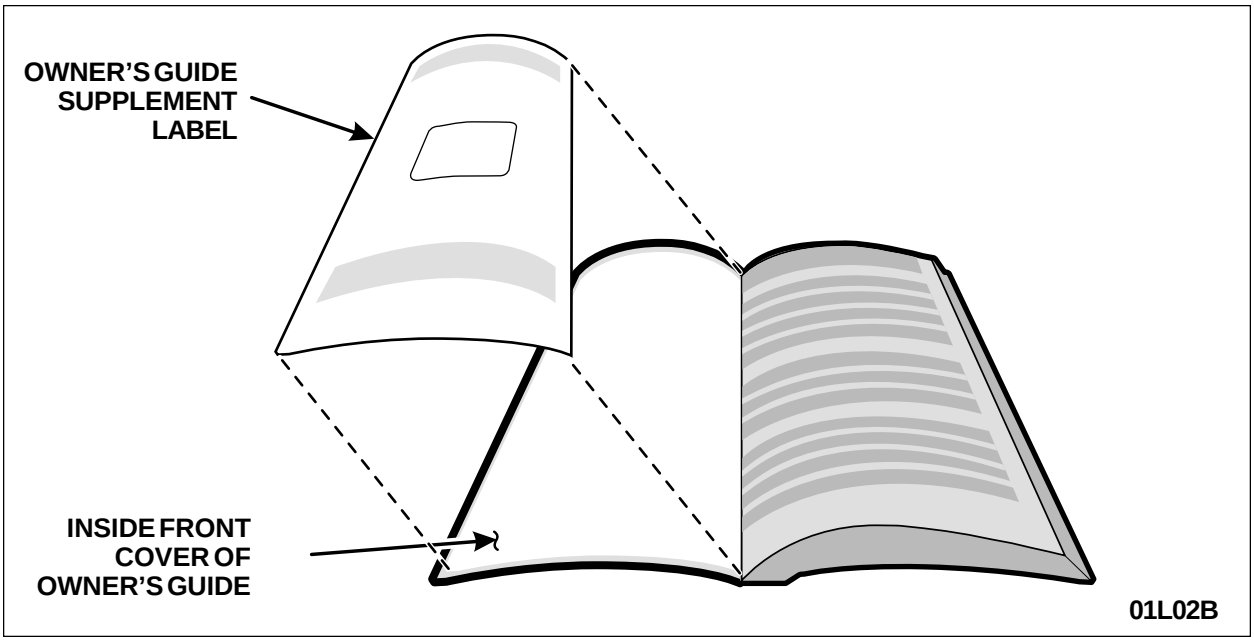


FIGURE 2

Ford Motor Company
CPR © 2001 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
03/01

TWO-LABEL INSTALLATION

1. Open the driver's door and clean the area on the rocker panel with isopropyl alcohol as shown in Figure 3.

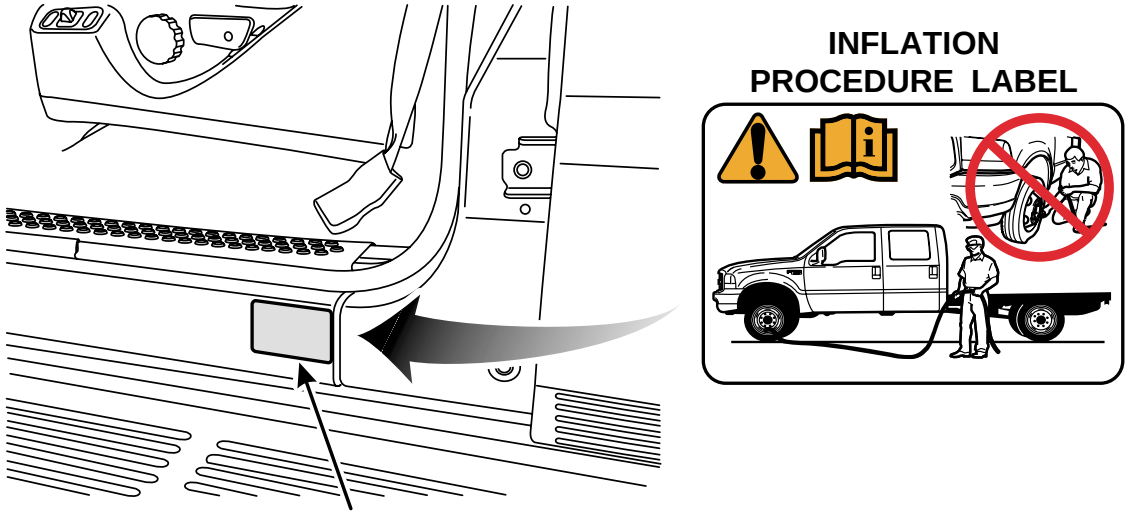


FIGURE 3

2. Peel the backing off the Inflation Procedure Label and apply it to the rocker panel at the vertical seam covering the top two spot welds.
3. Peel the backing off the owner's guide label and apply it to the inside of the front cover. See Figure 4.

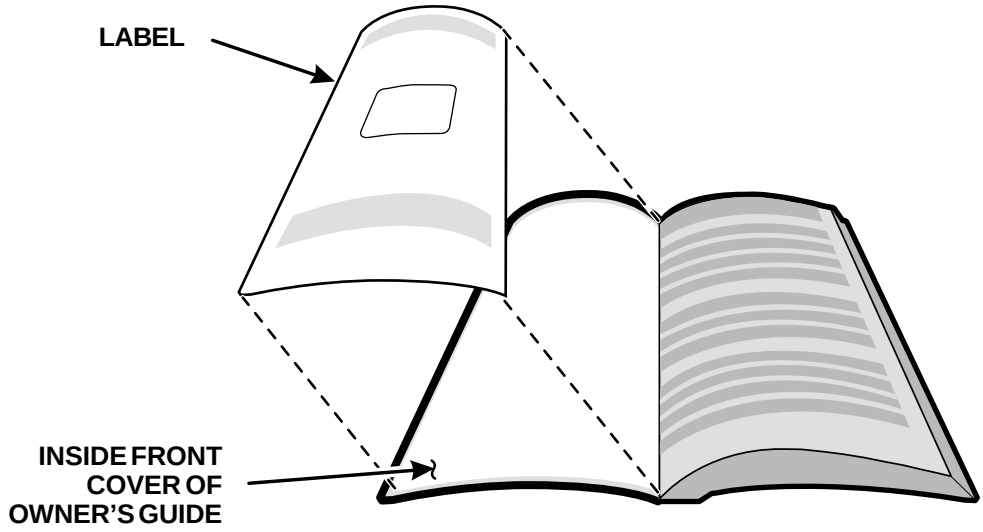


FIGURE 4

Ford Motor Company
CPR © 2001 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
03/01