BRAKE PEDAL PUSHROD RETAINING CLIP INSPECTION AND INSTALLATION

AFFECTED VEHICLES: CERTAIN 2000 F-53 MOTORHOME STRIPPED CHASSIS

SERVICE PROCEDURE

1. Remove the shrouds covering the lower steering column area. See Figure 1.

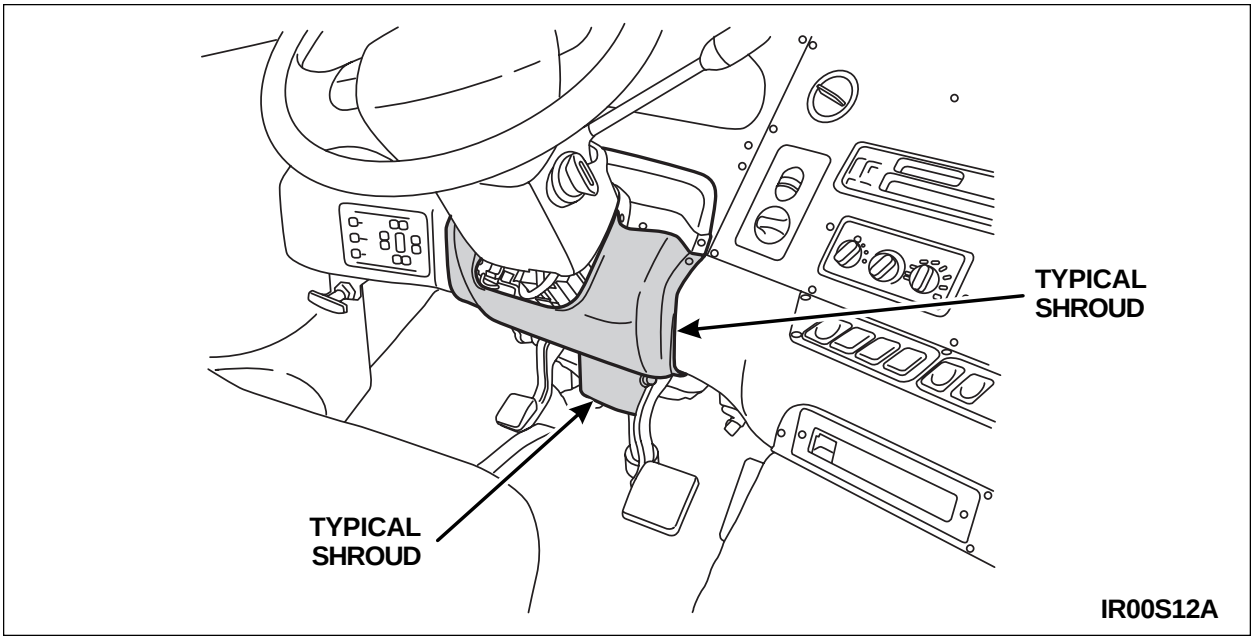

FIGURE 1

CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
07/00

2. Check the installation of the brake pedal pushrod retaining clip. See Figure 2.
   - If the clip is fully seated, no service action is required.
   - If the clip is only partially installed, seat it fully.
   - If the clip is missing, install a ***new*** one.
3. Install the steering column shrouds.

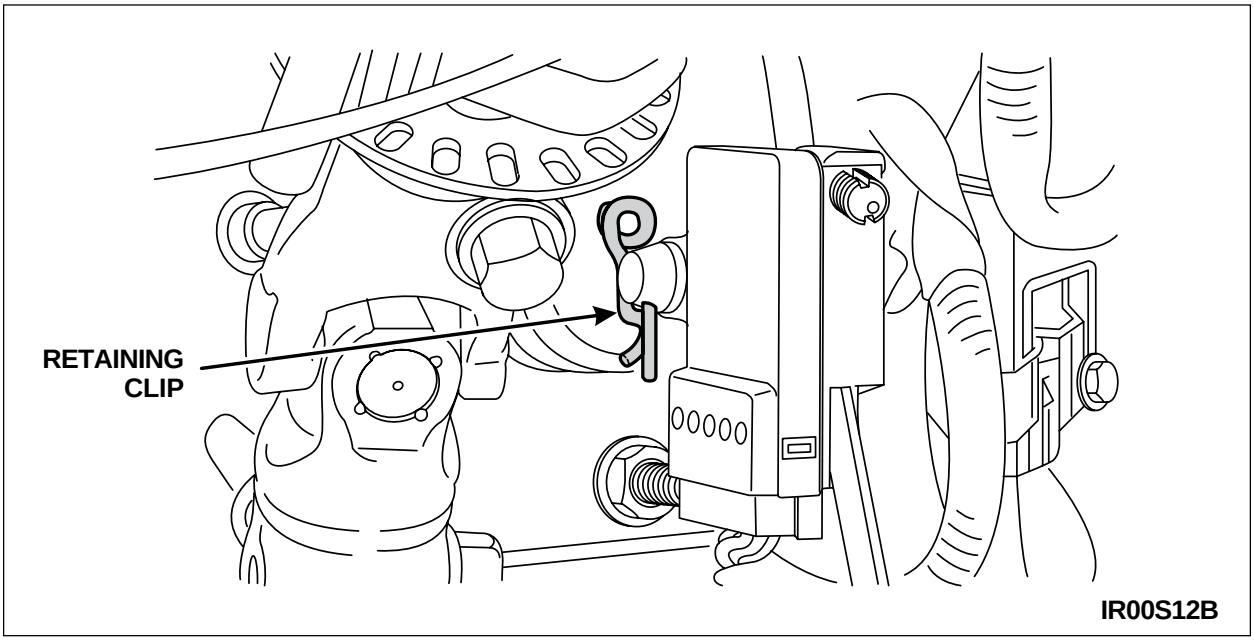

FIGURE 2

CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
07/00