
Battery in, main fuse, soft start

XT30U-M hand fitted. Q1 ramps +BATT_SW over about 30 ms (C2 Miller ramp); C1 holds Q1 off at plug-in. docs/bridge-pcb.md 3.3

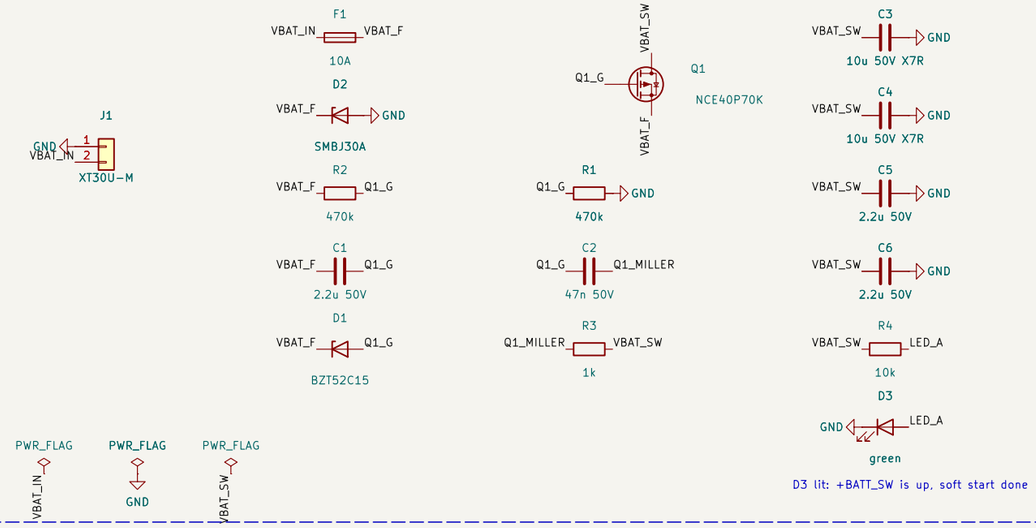

D3 lit: +BATT_SW is up, soft start done


Branches: servo segments A to D, head

Fuses slow blow. Data lines: 0R fitted, 5.6 V zener not fitted (hardware.md 5.6). PH 2.0 vertical through hole, hand fitted




5 V buck for the WeAct board

LMR51606X, 400 kHz. Values from TI Table 8-1; 130k/22k gives 5.53 V, about 5.2 V after D8. EN tied to VIN

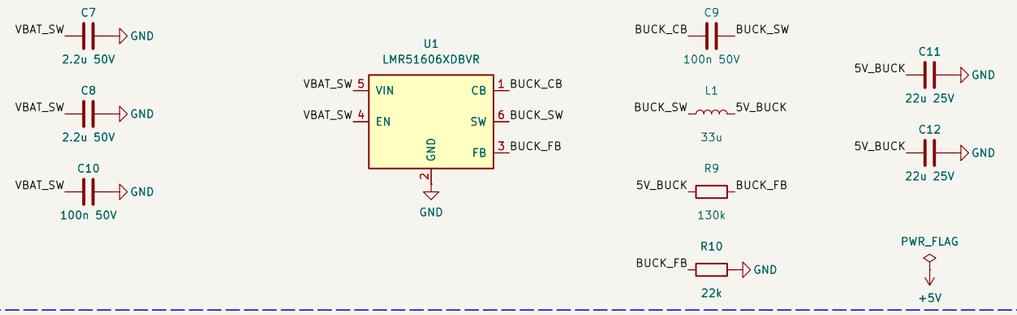


Pack voltage to PA0

Full scale 36 V (hardware.md 5.8)

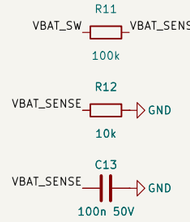


Mounting holes

M2, one per corner, not connected




Buck output, backup 5 V

D8 stops USB 5 V feeding back through the buck. Buck fails: cut JP1, external step-down to J9

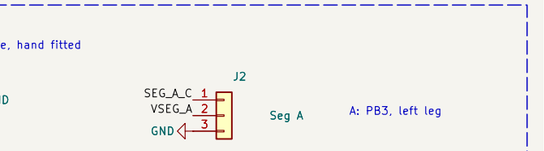


Bridge MCU: WeAct STM32G474 core board

Soldered flush. Pin allocation: hardware.md 5.8. Unused pins not connected

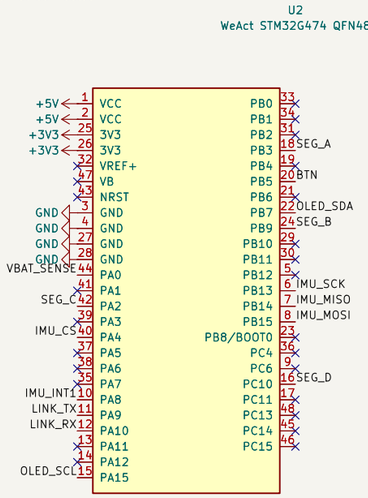


Trunk IMU: LSM6DSV16X breakout

SPI2, 4-wire. Soldered flush, 7-pin row only

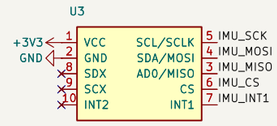

Display and button connectors

PH 2.0 vertical through hole, hand fitted

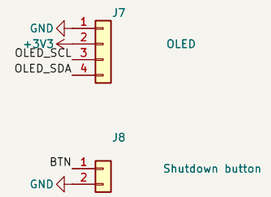

Bootstrapped by scripts/kicad/gen_bridge_sch.py; edit this file from now on
Design note: docs/bridge-pcb.md

Sheet: /
File: bridge.kicad_sch

Title: Dukki bridge carrier

Size: A3	Date: 10/10/2026	**Rev: A, draft**
KiCad E.D.A. 10.0.6		Id: 1/1