
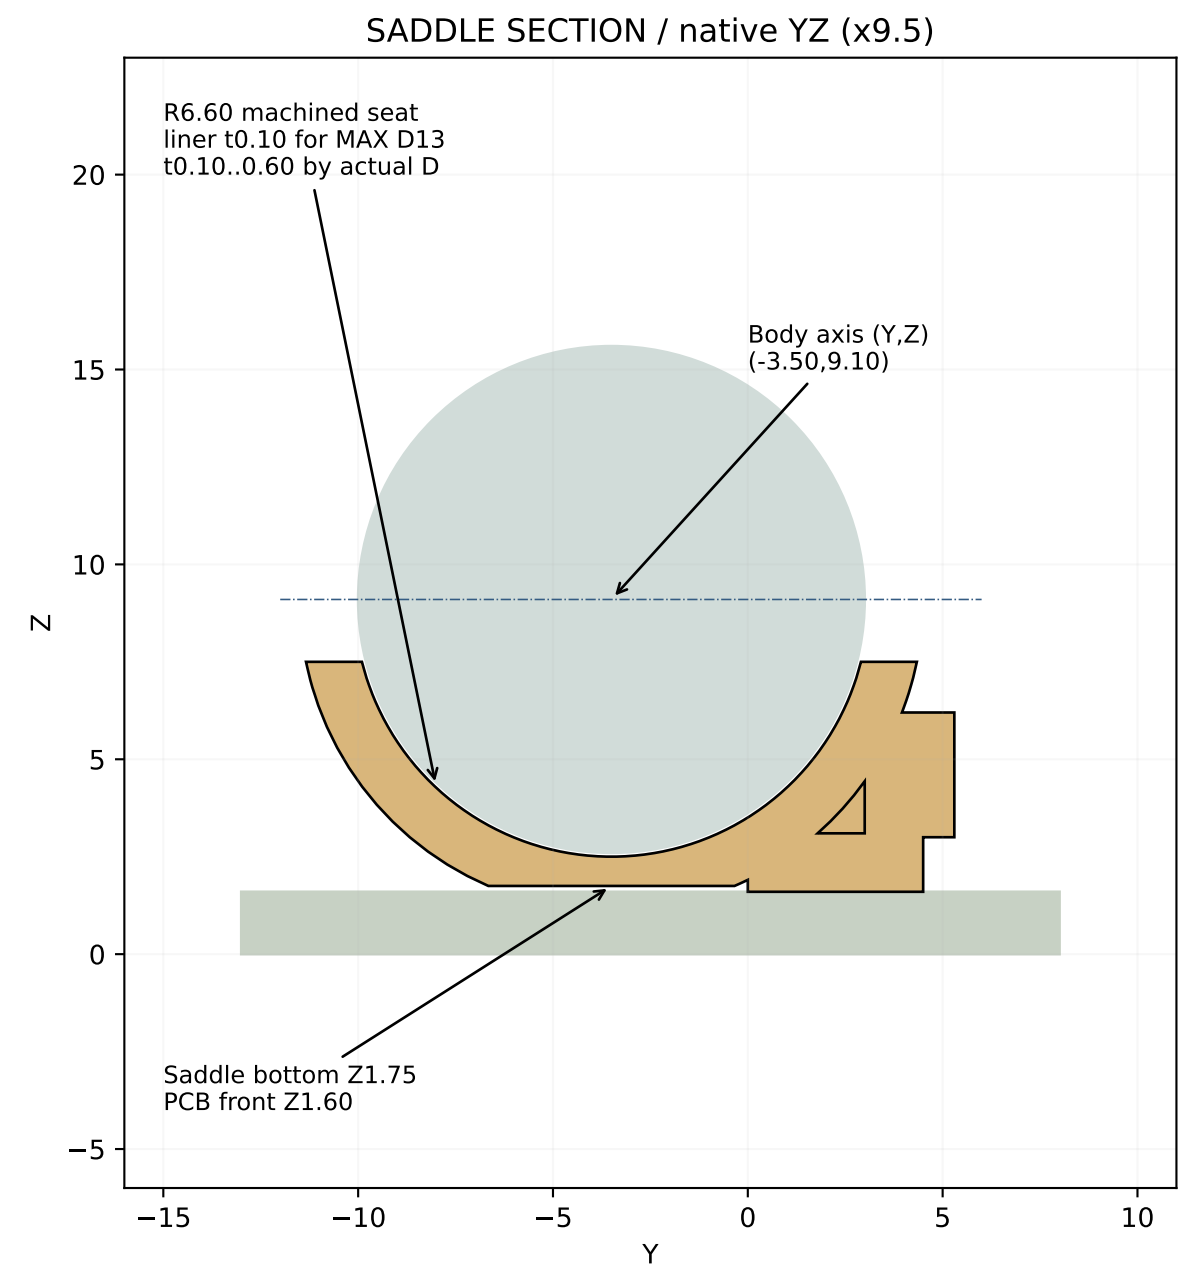


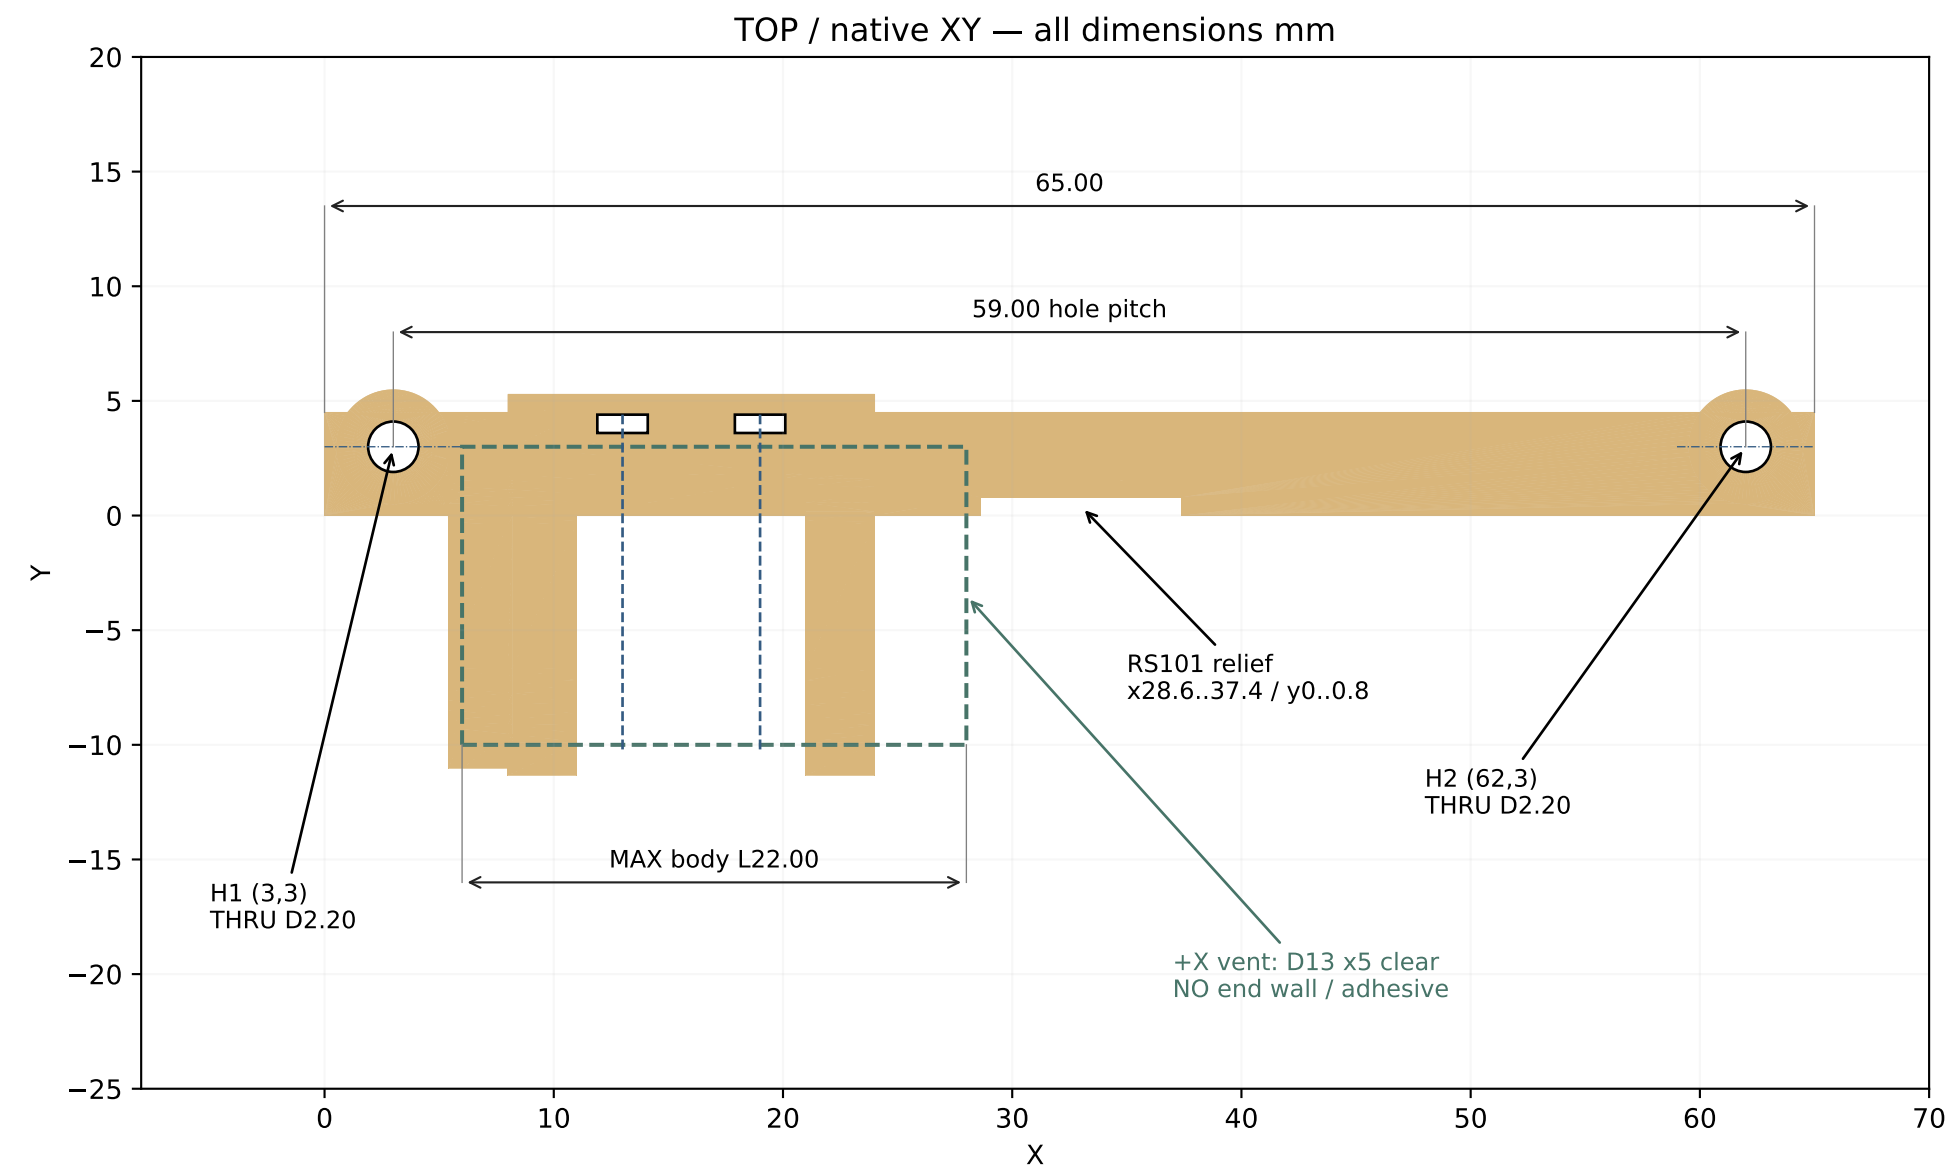

R22-CAP-001 | REV A | CNC unfilled PEEK | Engineering candidate — no manufacturing / shock qualification

DATUM: PCB back Z0, front Z1.60. H1 (3,3), H2 (62,3); board transform is stored in manifest.json.

Beam: X0..65 / Y0..4.5 / Z1.60..3.10; end bosses D5.00, Z1.60..6.20. H1/H2 through holes D2.20 +0.05/-0.

Two saddle bands: X8..11 and X21..24; concentric radii6.60/8.00, centerY-3.50 Z9.10, topZ7.50, bottom clippedZ1.75.

Positive-Y side bridge: X8..24 / Y3.00..5.30 / Z3.00..6.20. Seal stop: X5.40..6.00, lower rim only; keep both lead exits free.

Lacing stations X13.00 and19.00: top through slots2.20(X)x0.80(Y), centerY4.00; horizontal tunnelsZ2.00..2.90, Y-0.60..4.40.

Ribbon-contact slot edges: deburr / radius0.15±0.05, no burrs or sharp exit corners. STEP omits cosmetic edge breaks.

General linear tolerance±0.10; bore radius±0.05; hole locations±0.05; bearing flatness0.05; boss height4.60±0.05.

Fastening: M2x8 + front0.30 washer + PEEK4.60 + PCB1.60 + rear0.30 washer + SHNS-M2-LP nut1.20; measure full stack.

M2 torque screening0.010..0.020 N m. Require effective thread≥0.90 and tip beyond nut≤0.30; nominal8.00 stack has no tolerance margin.

ASSEMBLY: install cradle/liners/loose lacing on bench; place capacitor; tighten and proof-pull each tie; then solder formed leads.

TOOLS: H1 rear AF4 wrench from -X; H2 from +Y or-X; both front drivers D4 x30 clear. Do not approach H1 from+Y.

Native STEP defines the nominal solid. Reference braid/knot/purchase hardware are envelopes; actual knot and cut strip must fit.