

2. Route both free ends of line through front slider grommet to proper canopy attachment points. Tie free end of line to attachment loop with a French locking knot. Adjust line to proper trim using other lines in the group as reference.

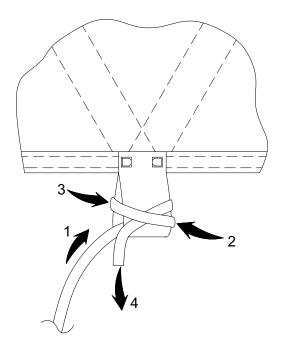

3. When adjusted, lay free end of line on top of main line and secure with $^5/_8$ -inch by $^1/_8$ -inch bartack placed as close to knot as possible. Trim line $^1/_{16}$ -inch from bartack.

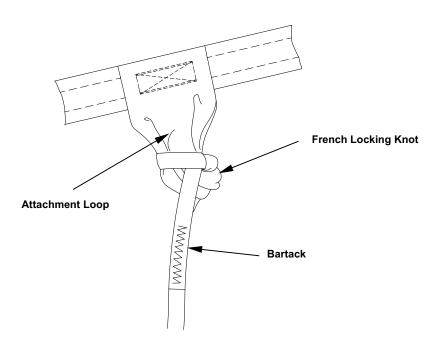

4. Perform continuity check IAW WP 0004 00.

END OF WORK PACKAGE