

1. Using a M3 hex key to remove 4 socket head cap screws on the cover of the leg.

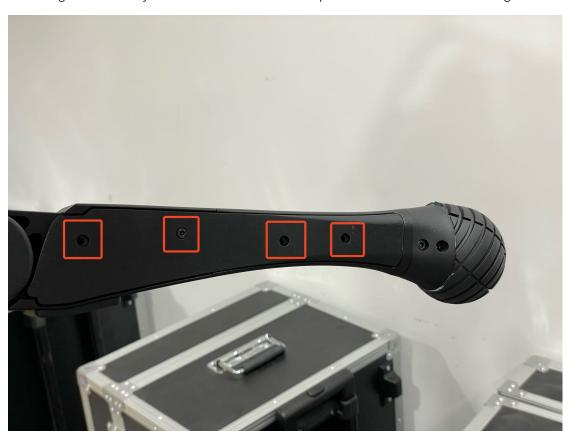

2. Using a M4 hex key to remove 4 socket head screws that connects the leg.

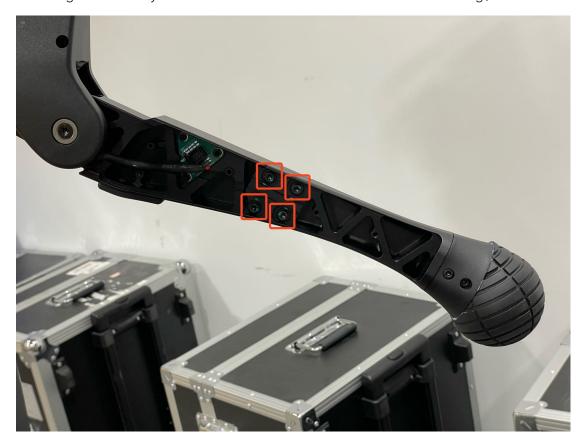

3. Remove the leg



4. Mount the Wheel-foot component, and all tighten the M4 socket head screws.



5. Fitting the cable into the cable duct, and connect the connector.



6. To finish the replacement, using a M3 hex key to tighten the cover

