
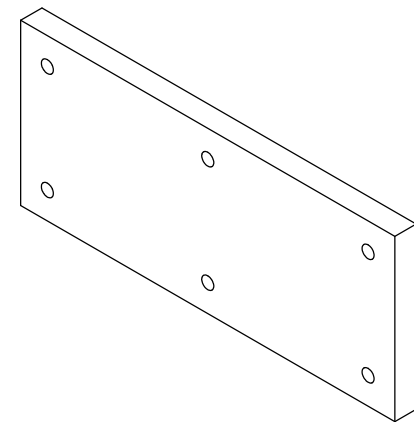


PM853C

6X M5 THRU

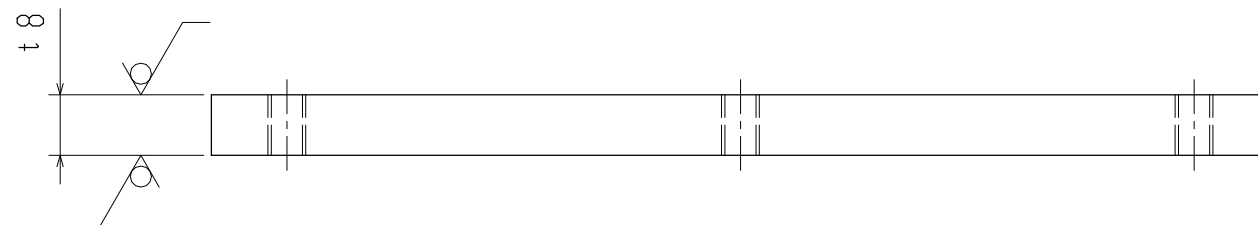

METRIC

NOTE

1. REMOVE ALL BURRS AND BREAK SHARP EDGES.
2. CLEAN PART WITH ISOPROPYL ALCOHOL
3. USE SUS304 MATERIAL
4. INTERPRET DRAWING, DIMENSION, TOLERANCE AND SYMBOL PER JIS.

記事

1. バリ、カエリ等なきこと
2. 脱脂洗浄後納品のこと
