




## ESP32 WROOM 32E

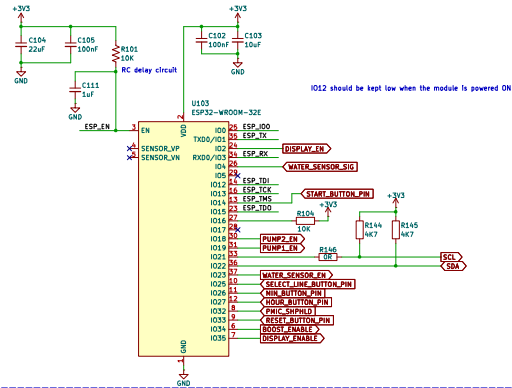


## Power Management IC

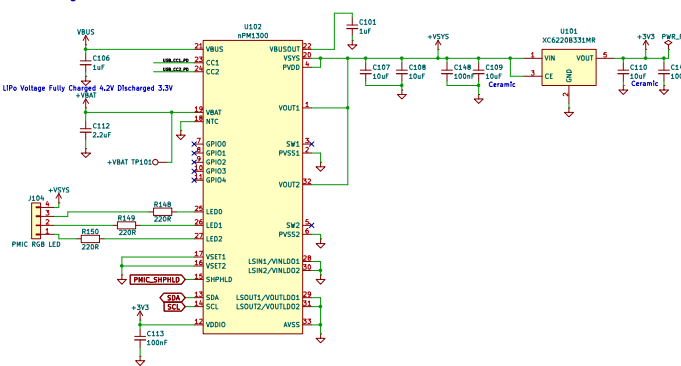


## Pump 1

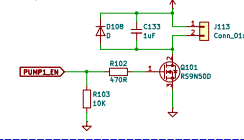


## Pump 2

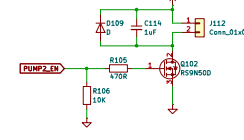


## BOOT & Reset

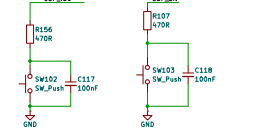


## JTAG

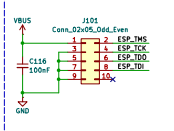


## UART\_PROG

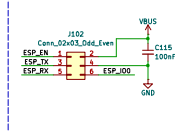


## CP2102N USB to Serial Converter

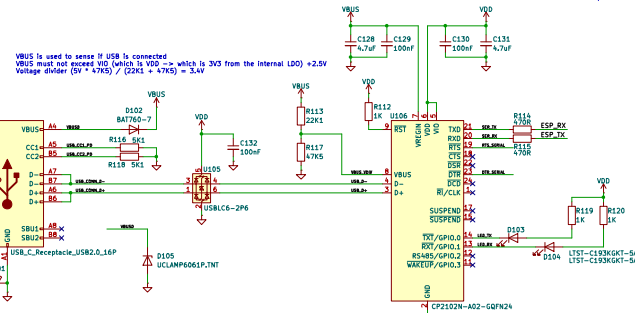


## +3V4/+5V to +12V Boost Converter

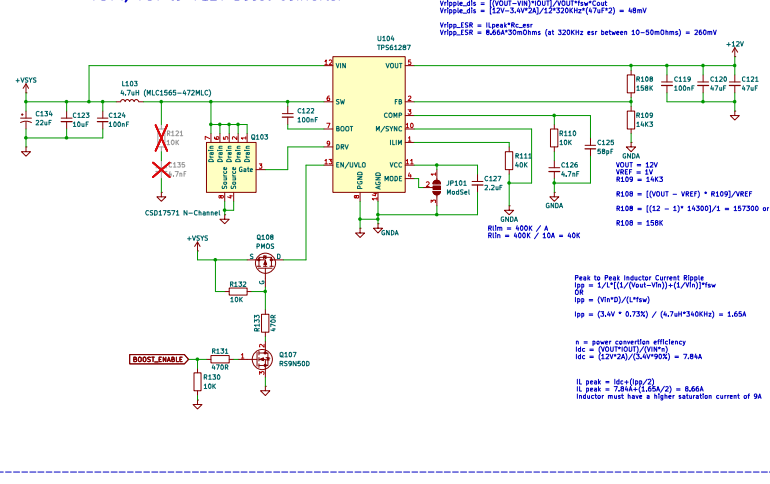


## RTC DS3231

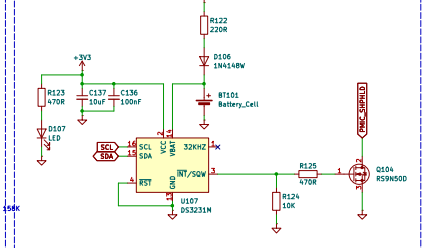


## Water Sensor

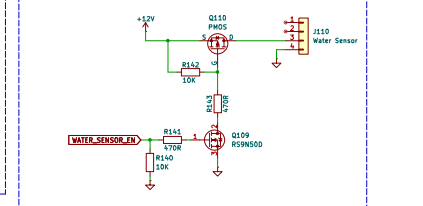


## User Interface Buttons

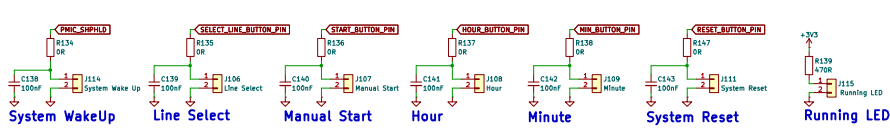


## USB to SERIAL PROGRAMMING

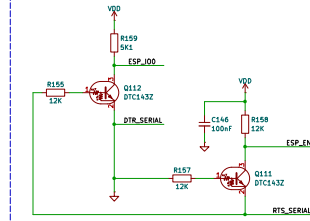

## EEPROM

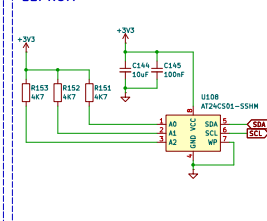

## OLED Display

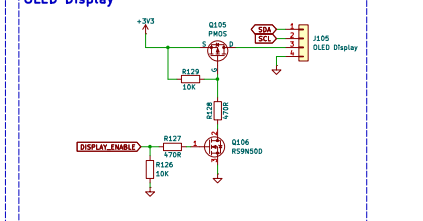

TO DO:  
 CHECK MOSFET PINOUT IF GATE / DRAIN / SOURCE ARE CORRECT  
 FIND CONNECTORS AND CHECK FOOTPRINT  
 CHECK CONNECTOR ORIENTATION FOR  
 RESET / PUMP1 / PUMP2 / DISPLAY / WATER SENSOR / RUNNING LED / RGB LED  
 ANOTATE SCHEMATIC  
 CREATE FOOTPRINTS  
 ASSIGN FOOTPRINTS  
 MAKE BOM  
 DESIGN PCB