

Fixed-tail forming profiles

Removable tooling only - not aircraft ribs

Make three split collars from stiff card or 3 mm scrap plywood.

Each collar has two separate halves. Cut the solid black outline.

The blue reference is the exact CAD outer surface section.

The opening includes 0.25 mm radial forming clearance.

Pair and hold the halves with tape or light elastic bands.

Do not crush the outside paper to force a collar closed.

Place T03 near the root, T02 at mid-span and T01 near the tip.

Distances are measured along the 342 mm CAD span axis:

T03: 6.84 mm from root; T02: 171.00 mm; T01: 335.16 mm.

Use a straight alignment board and square each collar to that axis.

The CAD reference plane origins are listed in the accompanying JSON.

Form F05/F07 (right) or F06/F08 (left) with outer paper preserved.

Qualify peeling, inner-core relief and adhesive on scrap first.

Align the collar stations, join the outside-paper skin seams,
and remove both collar halves after the adhesive has cured.

Do not slide a closed ring along the tail: chord changes at the
control cut-out, so a closed ring can become trapped.

A nominal 5 mm inward offset has no usable cavity here.

The two foam walls meet inside: relieve excess inner core.

The profile comes from the trimmed fixed-tail solid; moving
control surfaces are excluded. Do not glue a collar into the tail.


The same profiles fit both tail sides; reverse the tooling face
as needed. The mirrored CAD profile match is checked numerically.

Print at Actual Size / 100%. Verify the 100 mm bar on every page.


Tail forming collars | all cuts at 1:1

Six removable tool halves. Print at Actual Size / 100%. Cut black outlines only.


T01 - near tip

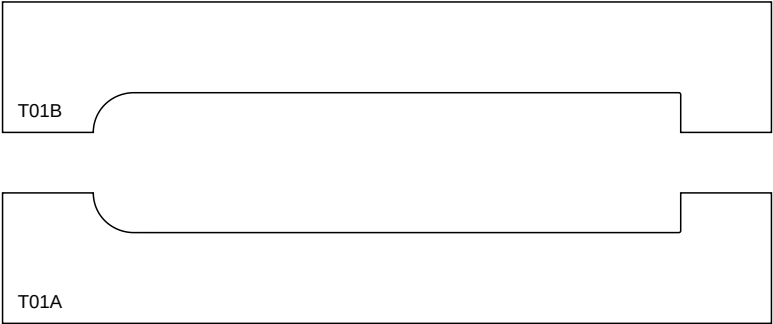

T02 - mid-span

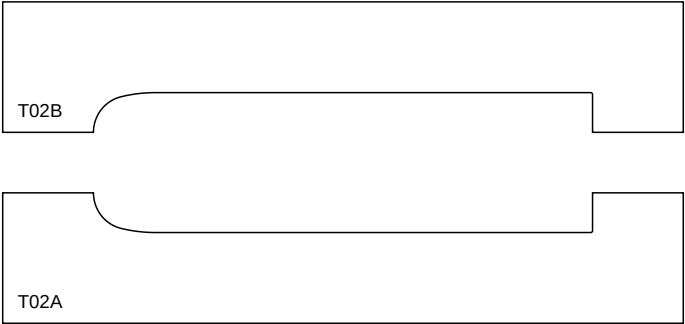

T03 - near root

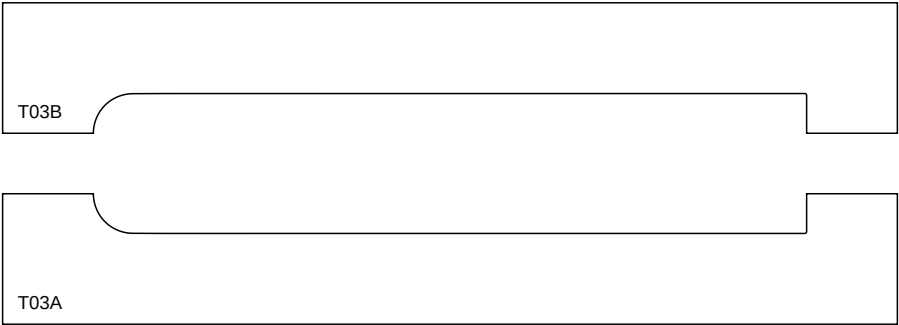

100 x 20 mm
Check both directions.