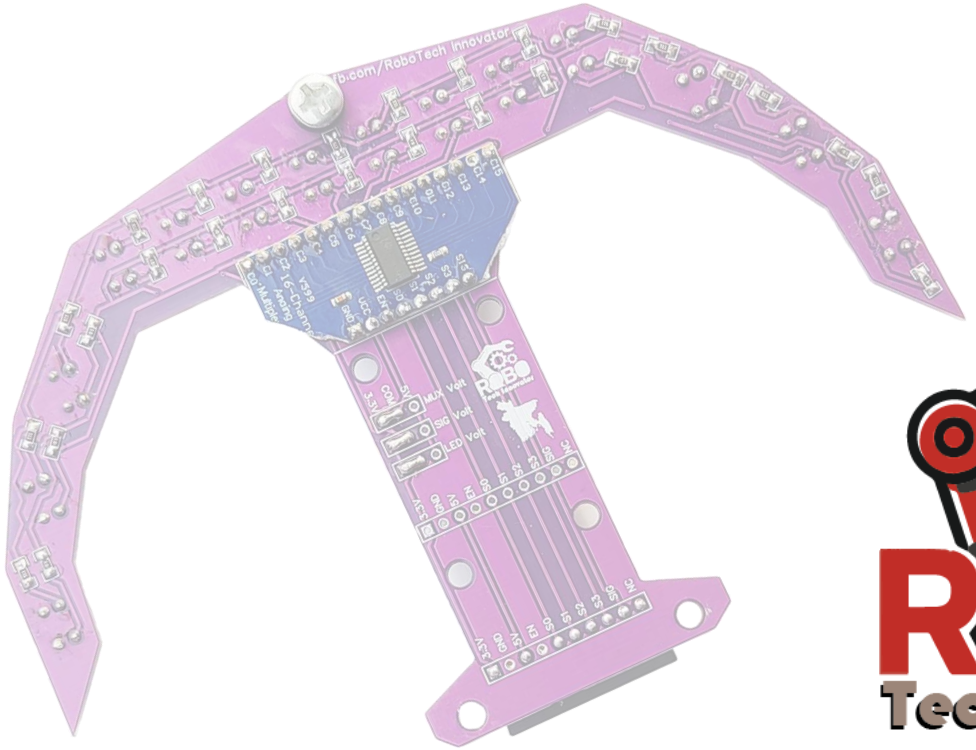

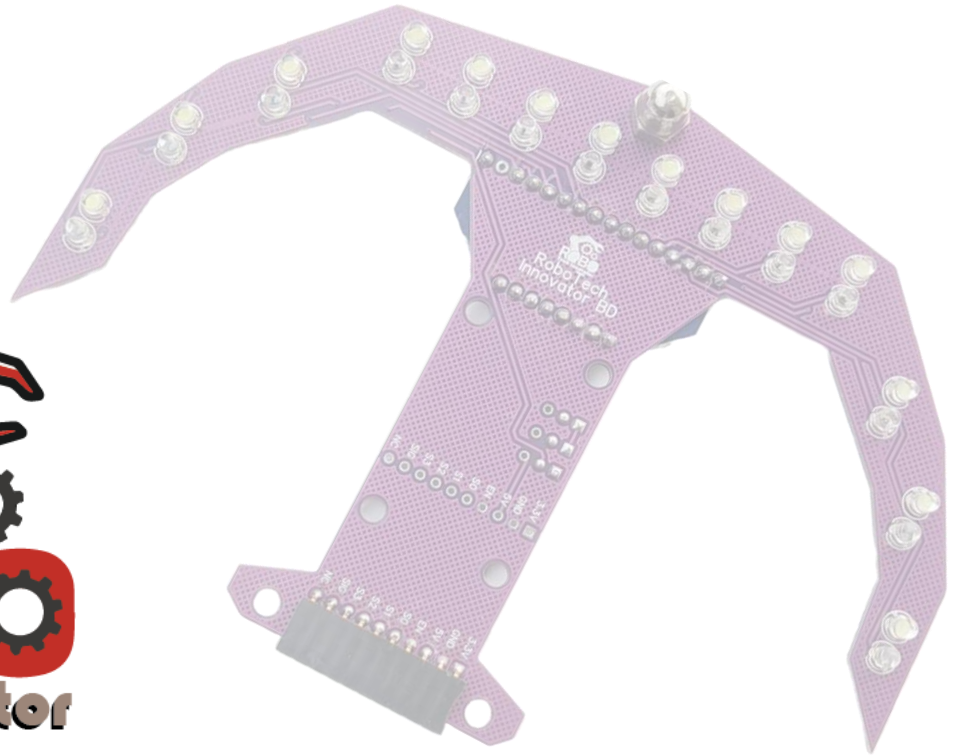

User Manual

14 Channel Sensor Array

Pinout

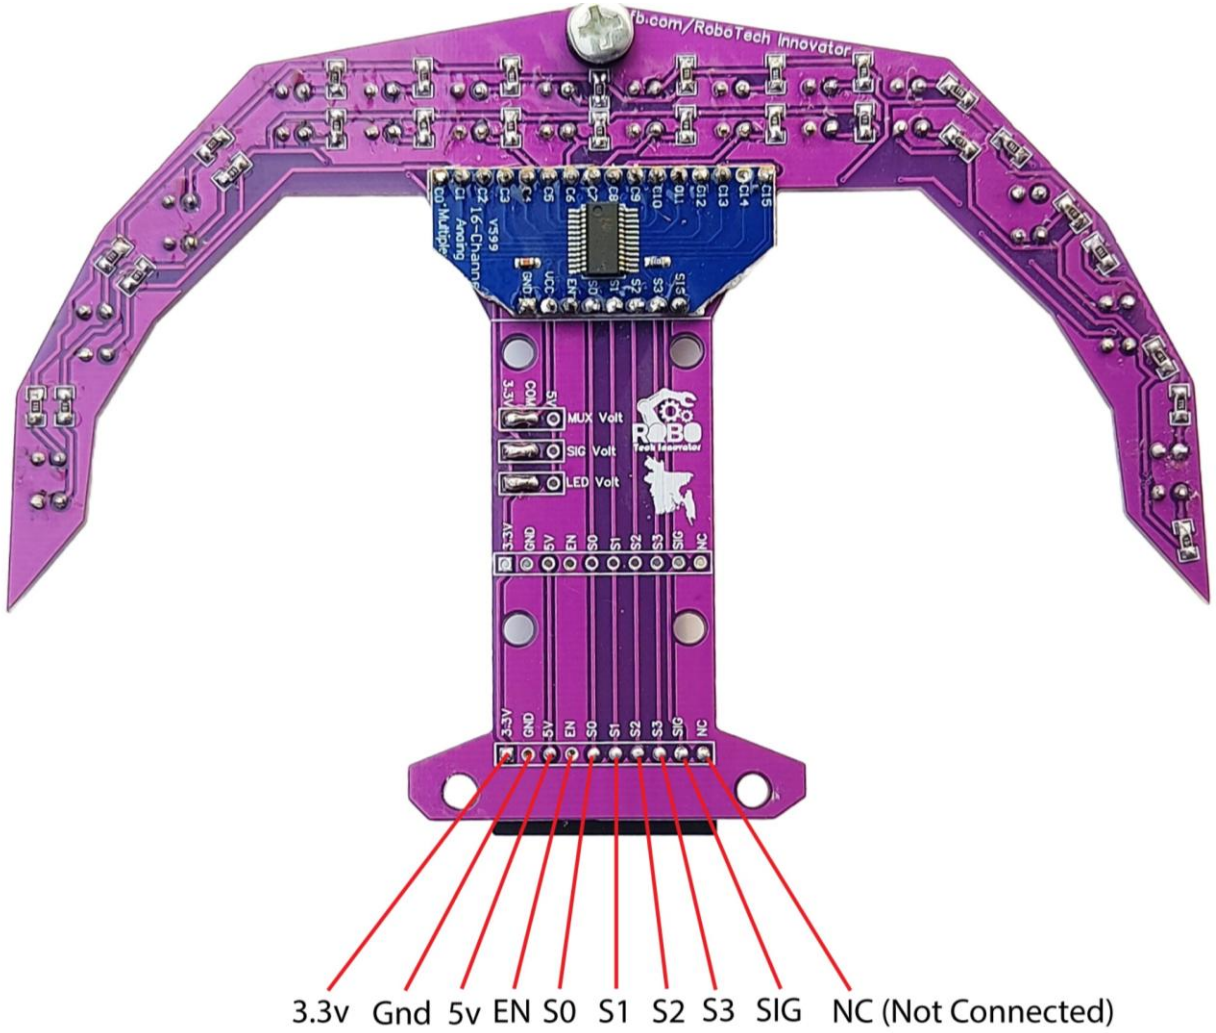

5mm Gap Between Ground and Sensor

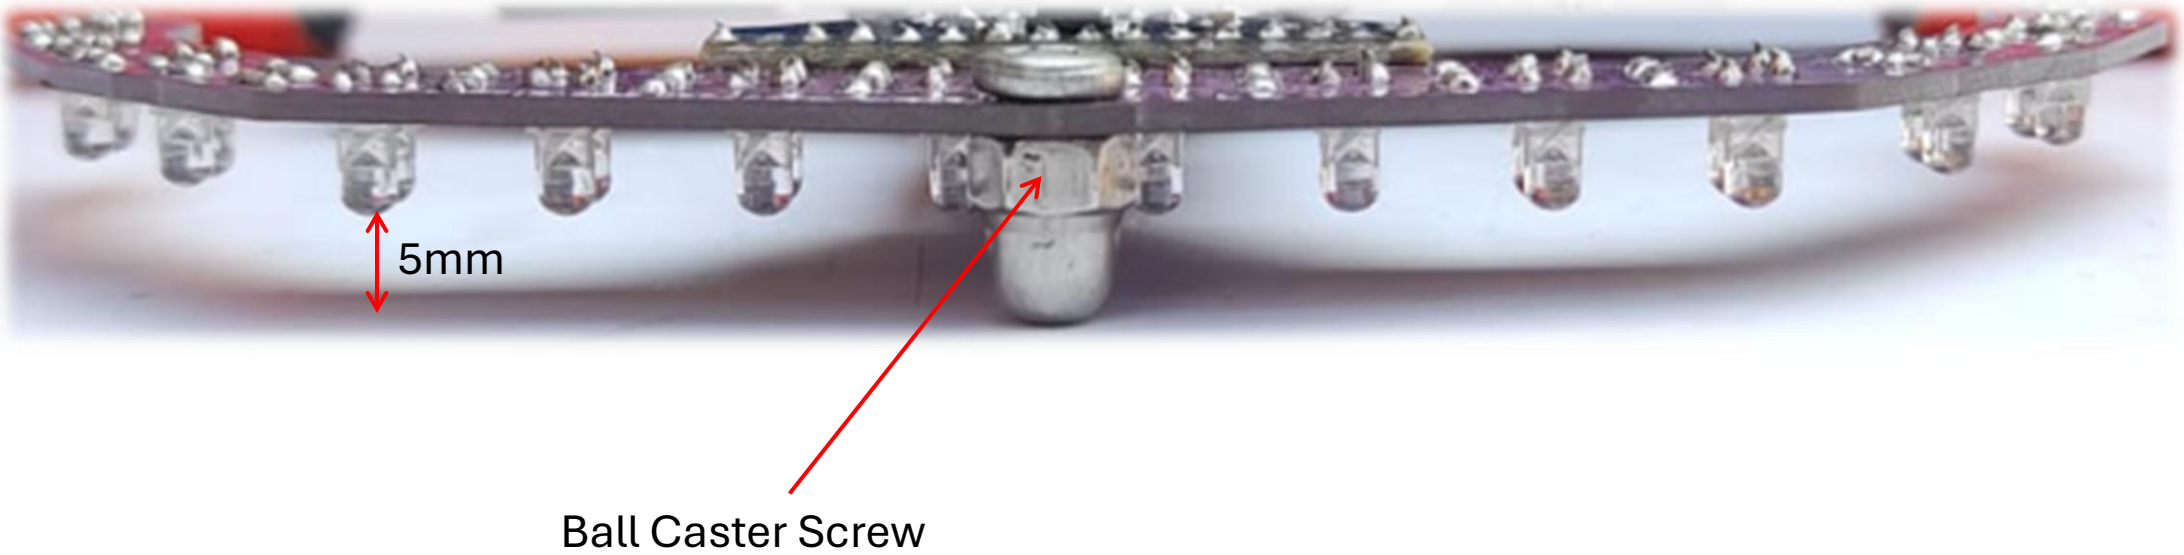

How to Attach in LFR

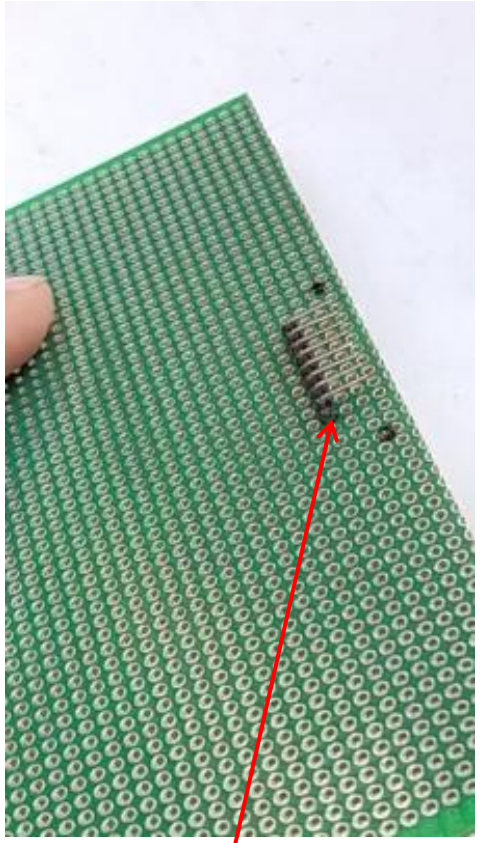

Solder L-Shaped
Header Pin with VB

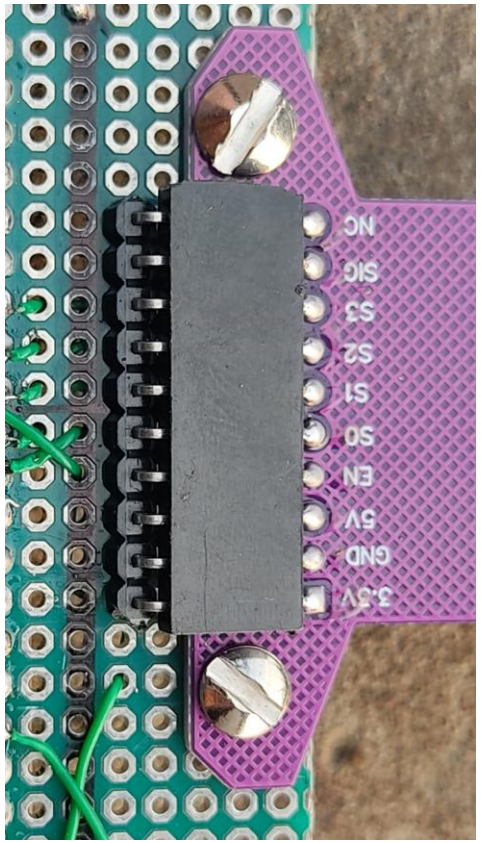

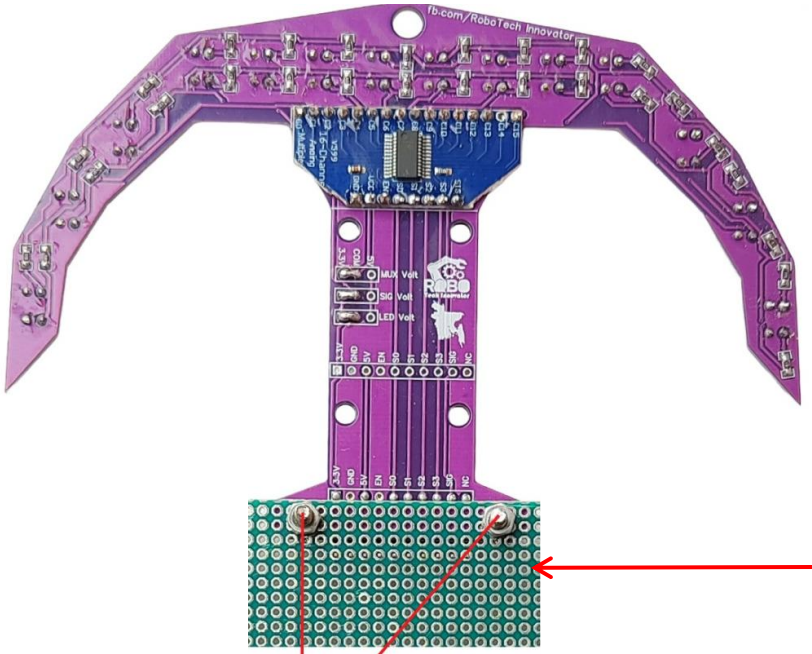

Main Chassis

Direct Attach
with Screw

Voltage Selection for Specific MCU

For 5v Logic Based MCU (Arduino)	For 3.3v Logic Based MCU (ESP32, STM32)
1. MUX Volt→ Solder COM with 5v Pad 2. SIG Volt→ Solder COM with 5v Pad 3. LED Volt→ Solder COM with 3.3v Pad **In This Case You Need to Provide Both 5v & 3.3v Supply to the Sensor.** 	1. MUX Volt→ Solder COM with 3.3v Pad 2. SIG Volt→ Solder COM with 3.3v Pad 3. LED Volt→ Solder COM with 3.3v Pad **In This Case You Don't Need to Provide 5v Supply to the Sensor.**

Power Supply

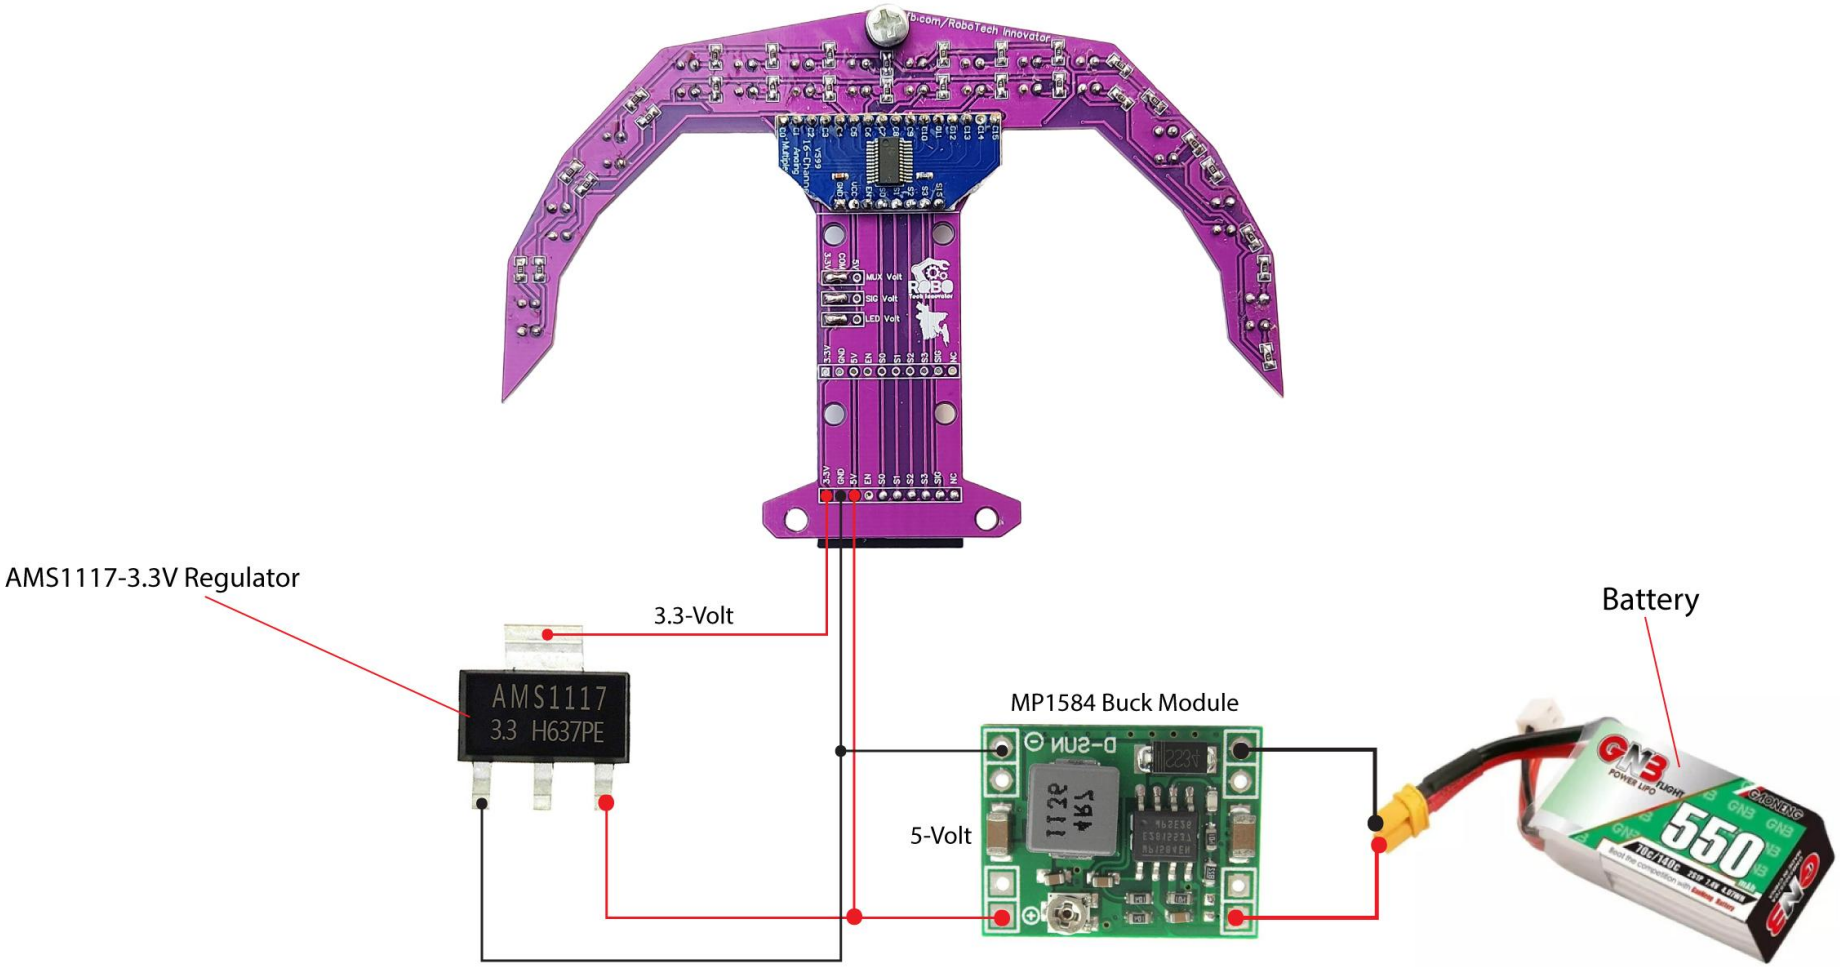

Wiring with MCU (ESP32)

S0,S1,S2,S3 → Must Connect to Digital Enabled Pins
SIG → to Must Analog Capable Pins

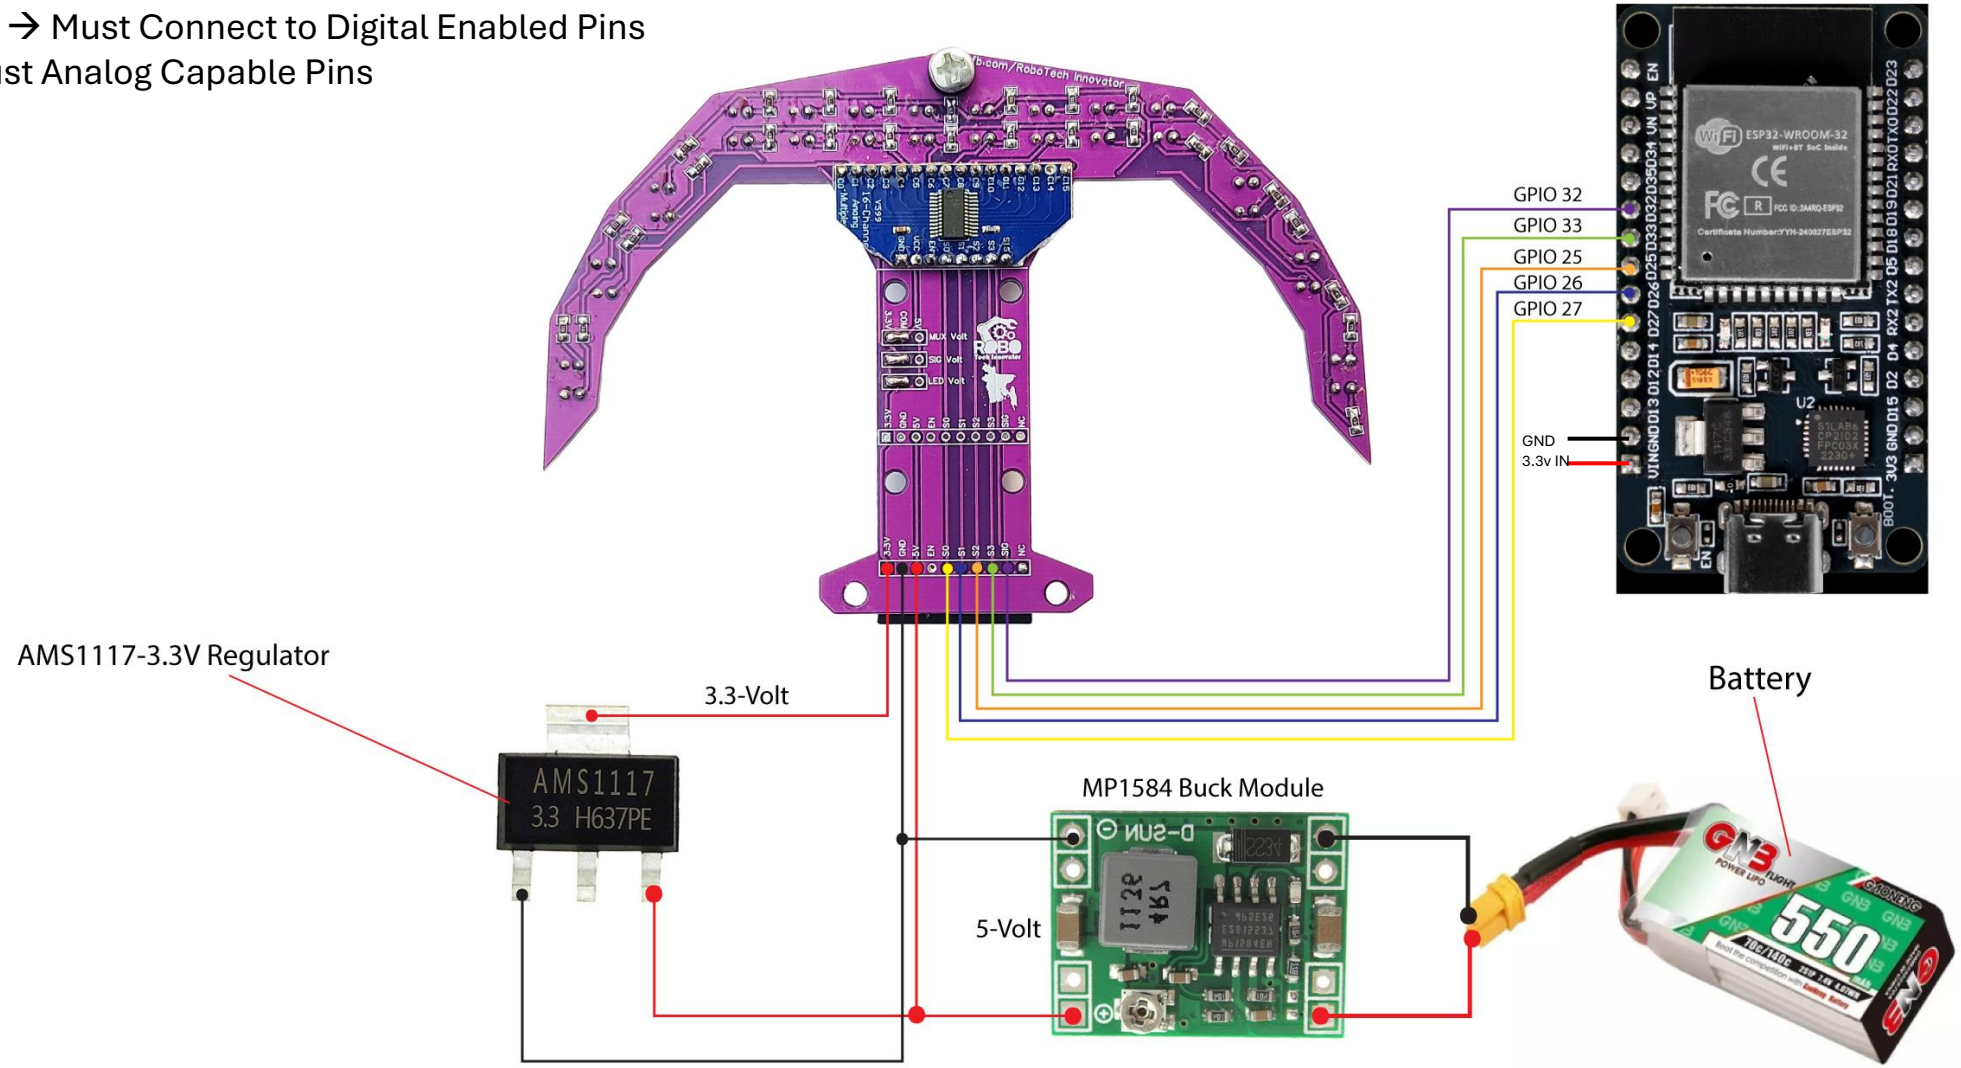

Wiring with MCU (Arduino)

S0,S1,S2,S3 → Must Connect to Digital Enabled Pins
SIG → to Must Analog Capable Pins

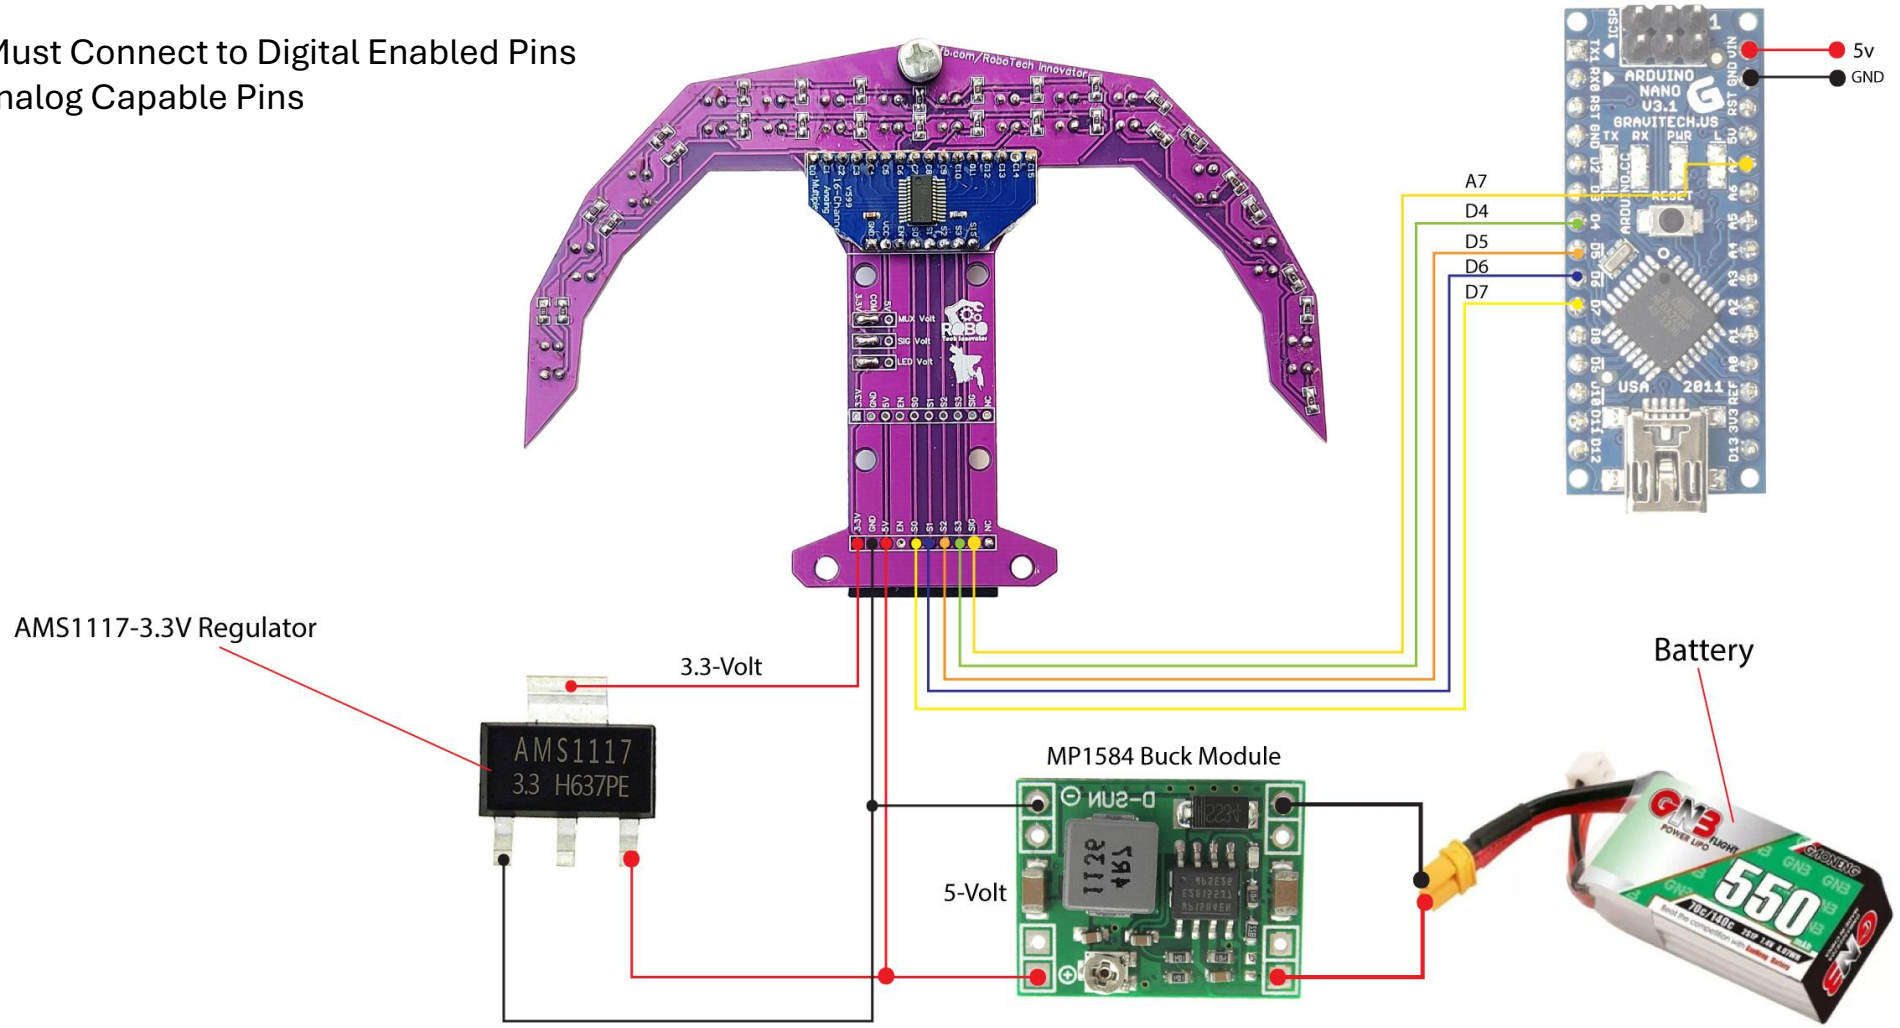

Wiring with MCU (STM32)

S0,S1,S2,S3 → Must Connect to Digital Enabled Pins
SIG → to Must Analog Capable Pins

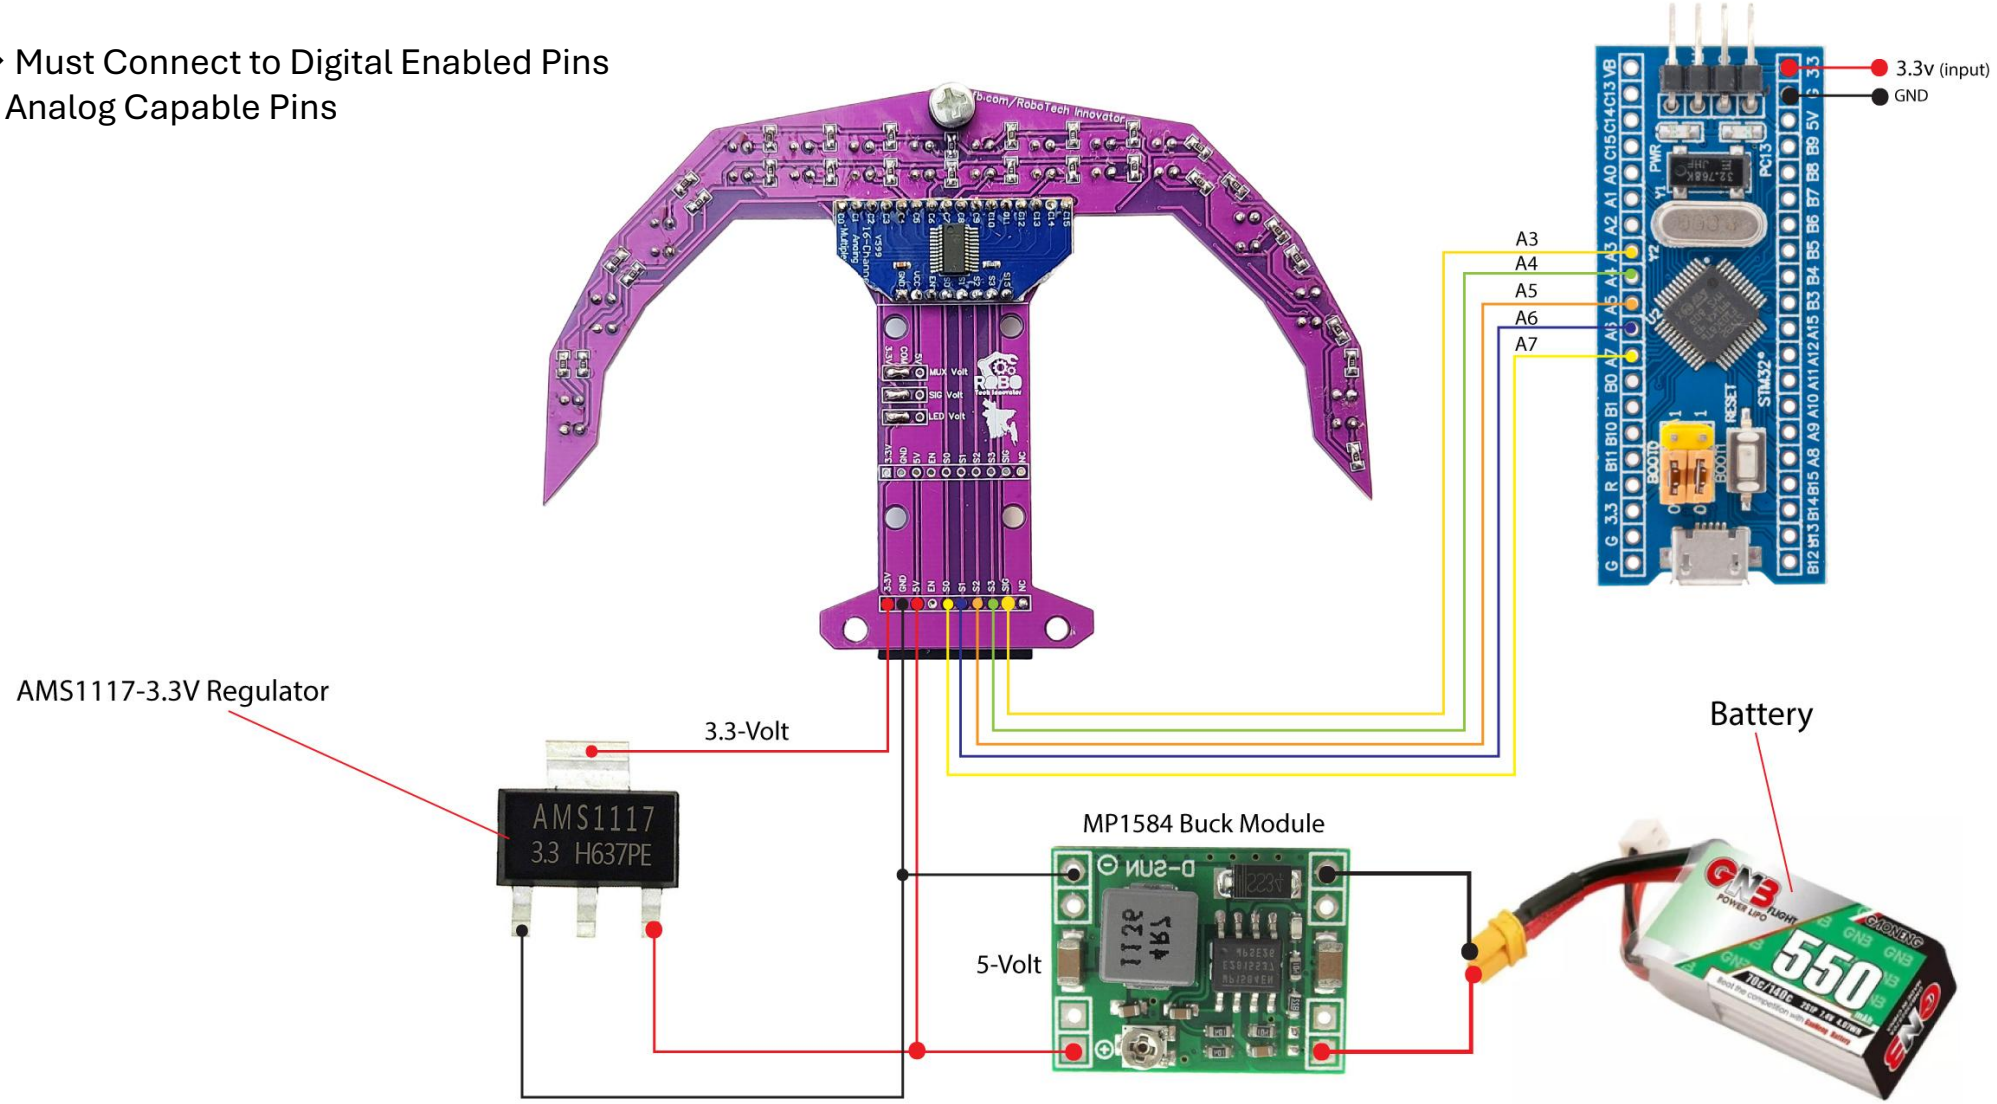

Code for Reading Sensor Value

- ESP32: https://github.com/mdaslamhossain3825-glitch/14-Channel-Demo/blob/main/14ch_sensor_read_ESP32/14ch_sensor_read_ESP32.ino
- STM32: https://github.com/mdaslamhossain3825-glitch/14-Channel-Demo/blob/main/14ch_sensor_read_STM32/14ch_sensor_read_STM32.ino
- Arduino: https://github.com/mdaslamhossain3825-glitch/14-Channel-Demo/blob/main/14ch_sensor_read_NANO/14ch_sensor_read_NANO.ino

Note: Edit Pin Number in the Code According to Your Hardware Setup