

TABLE OF CONTENTS

TABLE OF CONTENTS	1
1- GENERAL CHECKS	2
2- INPUT VOLTAGE CHECK	3
3- MAIN INPUT BREAKER CHECKS.....	4
4- OUTPUT VOLTAGE CHECK	5
5- SCR CHECK	6
REVISION HISTORY	8

Description - The Full-Size PDU is a two-bay cabinet, and the Compact PDU is a single-bay cabinet. Procedures for the Full-Size PDU do not apply to the Compact PDU.

DANGER!!

FATAL ELECTRIC SHOCK HAZARD!!

LETHAL VOLTAGES ARE PRESENT WITHIN THE PDU EVEN WHEN ALL PDU BREAKERS ARE OFF. ENSURE THAT POWER AT MAIN DISCONNECT IS OFF, LOCKED, AND TAGGED BEFORE PROCEEDING.

1. Lock out and tag out facility circuit breaker (main disconnect) using appropriate OSHA procedure. (Refer to CD-ROM *Dir. 2187583-3 [or -2], MR Release Signa 5x/8x Service Methods, Renewal Parts and Service Tools, Procedure for Safety, Section 6, OSHA LOCKOUT/TAGOUT REQUIREMENTS.*)
2. Verify that all three Phase indicator lights on PDU are off.

1- GENERAL CHECKS

1. Tighten line and load transformer connections.
2. Check connectors on circuit boards to ensure proper seating.
3. Check fuselinks for continuity and discoloration (see Illustration L2703A below).

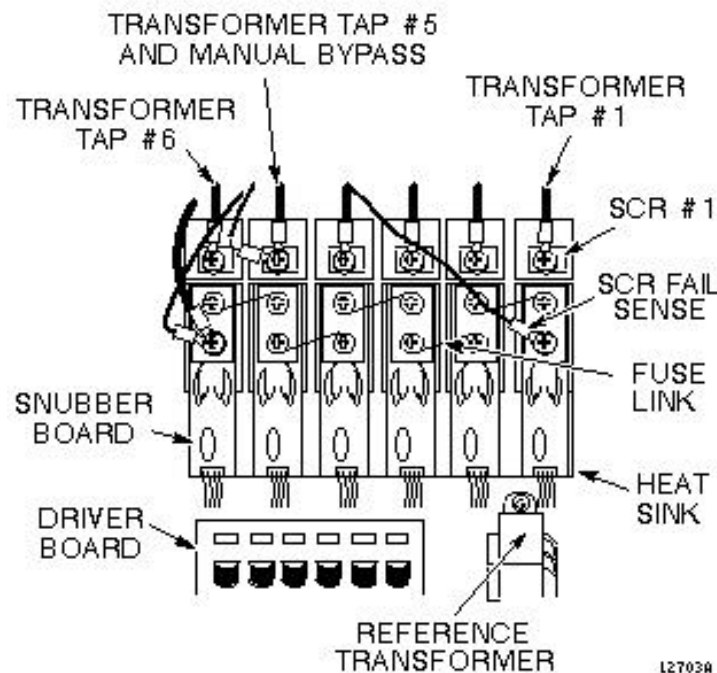


ILLUSTRATION L2703A

SCR GENERAL COMP. LOCATIONS

4. Disconnect transformer connection to snubber board on SCR#6 or #5 for each phase bank.
5. Measure resistance between an SCR transformer lead and a snubber board solder pad. Resistance should be in excess of 1 kohms.
6. Connect transformer lead to snubber board on SCR#6 or #5 for each phase bank.
7. Check snubber boards for discoloration and rupture of foil.
8. Check that all snubber board plug connections are tight .
9. Check that all connections to input/output filter capacitors are tight.
10. Tighten screws on all SCRs.



FATAL ELECTRIC SHOCK HAZARD!! LETHAL VOLTAGES EXIST WITHIN THE PDU DURING THIS CHECK. FOLLOW THE STEPS BELOW EXACTLY. FAILURE TO DO SO COULD CAUSE SEVERE INJURY OR DEATH.

2- INPUT VOLTAGE CHECK

1. Unlock and turn on main disconnect power.
2. Measure facility line-to-line voltage at input test points. Voltage should be 4.8 Vac (see Illustration L2704A below).

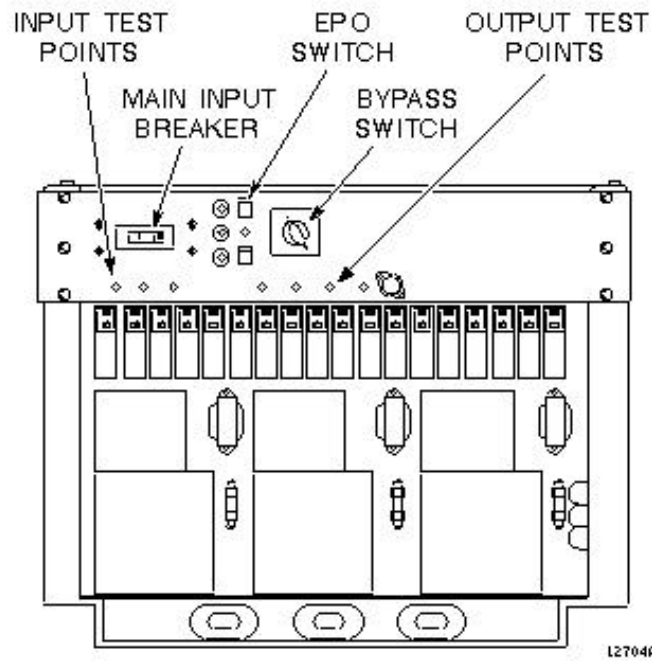


ILLUSTRATION L2704A
SWITCH AND TEST POINT LOCATIONS

3- MAIN INPUT BREAKER CHECKS

1. Unlock and turn on main disconnect power.
2. Turn bypass switch to Auto position (see Illustration L2704A above in Section 2).
3. Close main input breaker on the regulator.
4. Press EPO switch. Main input breaker should trip.
5. Reset and close main input breaker on the regulator.
6. Turn bypass switch from Auto to Manual position. Main input breaker should trip.
7. Reset and close main input breaker on the regulator.
8. Turn bypass switch to Auto position. Main input breaker should trip.
9. Remove fuselink from any SCR bank (see Illustration L2705A below). Reset and close main input breaker on regulator. Main input breaker should trip.

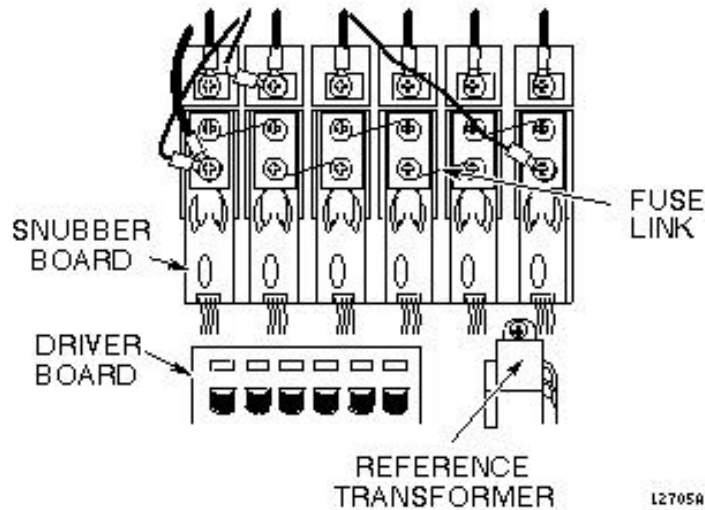


ILLUSTRATION L2705A
SCR BANK

10. Replace fuselink. Reset and close main input breaker on regulator.

4- OUTPUT VOLTAGE CHECK

1. Unlock and turn on main disconnect power.
2. Turn on main input breaker (see Illustration L2706A below).

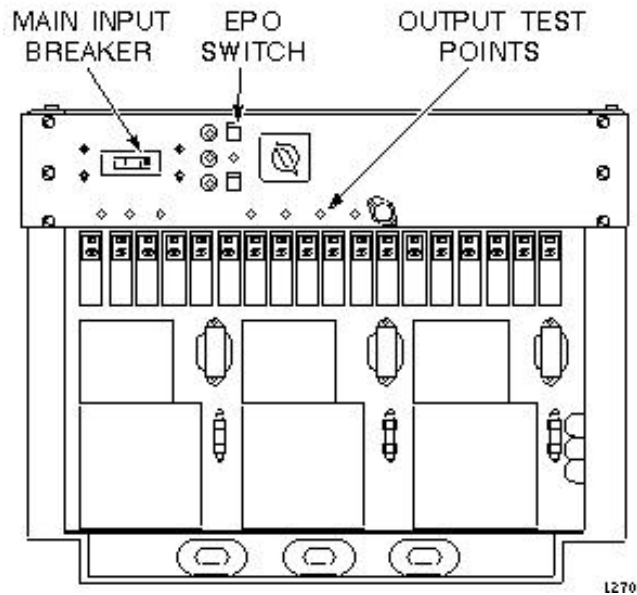


ILLUSTRATION L2706A
VOLTAGE AND SCR CHECKPOINTS

3. Turn on all external subsystem power.
4. Check output line-to-neutral voltage at the test points. Voltage should be $1.20 \pm 0.03V$. Refer to procedure for PDU (Standard PDU) Powertech Regulator Calibration, section 1- Logic Board Adjustments if needed.

5- SCR CHECK

1. Turn off main input breaker.
2. Monitor output test point A line-to-neutral voltage (see Illustration L2706A above in Section 4).
3. Turn on main input breaker.
4. Observe meter for four seconds and push Emergency Power Off switch. Reading should be virtually zero. If a reading greater than 0.2 Vac is measured, there is a shorted SCR in the regulator.
5. Move the meter to output test point B line-to-neutral voltage.
6. Reset breaker by turning off, and then on.
7. Observe meter for four seconds and push Emergency Power Off switch. Reading should be virtually zero. If a reading greater than 0.2 Vac is measured, there is a shorted SCR in the regulator.
8. Move the meter to output test point C line-to-neutral voltage.
9. Reset breaker by turning off, and then on.
10. Observe meter for four seconds and push Emergency Power Off switch. Reading should be virtually zero. If a reading greater than 0.2 Vac is measured, there is a shorted SCR in the regulator.
11. If all readings are virtually zero, refer to Section 4- Output Voltage Check.

TABLE 2-1 (“*TableNo.*” style)
 INSTALLATION MANUAL REFERENCES (“*TableName.*” style)



REVISION HISTORY

REV	DATE	AUTHOR	PRIMARY REASONS FOR CHANGE
0	June16, 1998	M. Whitlow	Initial Conversion from Toolbook to Word.