


TABLE OF CONTENTS

TABLE OF CONTENTS	1
1- FAST RECEIVER MODULE REPLACEMENT	2
2- RECEIVER 0 WITH FAST RECEIVER ADAPTER MODULE REPLACEMENT	3
3- FUNCTIONAL CHECKS REQUIRED	5
REVISION HISTORY	6

Description - This material describes the Fast Receiver Module replacement, and the Receiver 0 with Fast Receiver Adapter Module replacement. It applies only to Signa Horizon (8.0) systems.

1- FAST RECEIVER MODULE REPLACEMENT


1. Turn off System Cabinet circuit breakers, and tag to prevent power from being turned on.
2. Remove front cover from System Cabinet.
3. Disconnect the Fast Receiver Module AC power cord from the rear of the Systems Cabinet.
4. Disconnect the BNC (Fast Receiver RF IN). See Illustration L4774A.

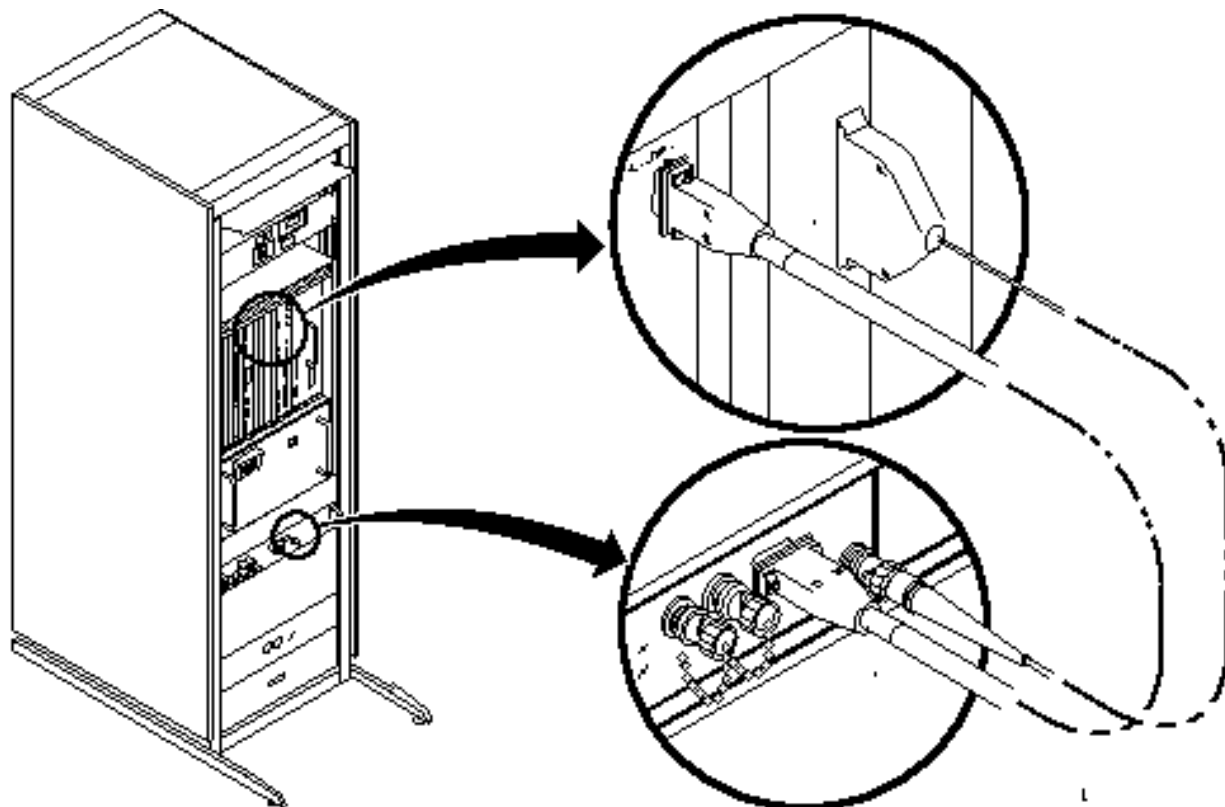

CONNECTING EPI FAST RECEIVER
ILLUSTRATION L4774A

5. Disconnect the sub-D connector (Fast Receiver Digital Interface).
6. If the new Fast Receiver is missing the 2 small BNC jumper cables, transfer the cables from the old Fast Receiver to the new Fast Receiver.
7. Separate the outer and inner rails by pressing in the locking button.

8. Remove the inner rails from either side of the bad Fast Receiver Module, and mount the inner rails to the new Fast Receiver Module (see Illustration L4775A).

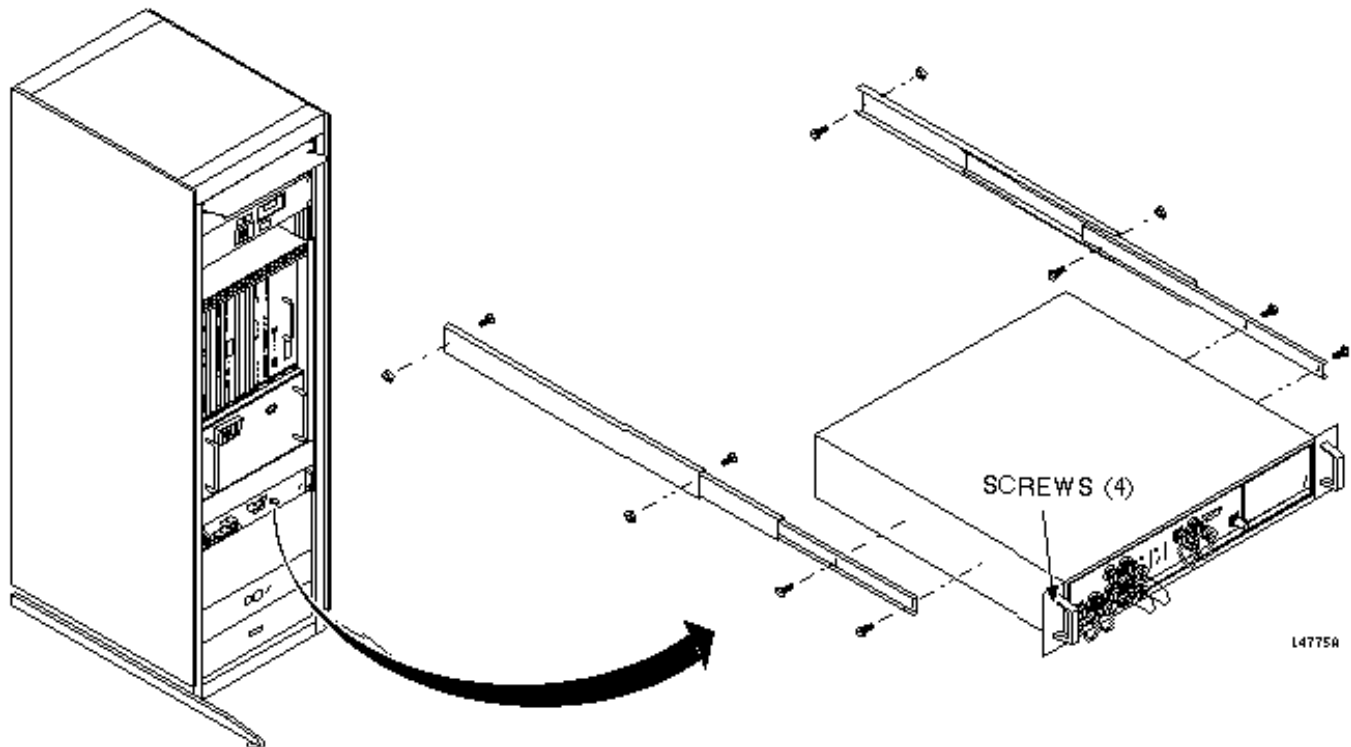


MOUNTING OF EPI FAST RECEIVER IN SYSTEM CABINET
ILLUSTRATION L4775A

9. Slide the outer rails out to full length. Slide the inner rails into the outer rails until the locking buttons click in the locked position.
10. Slide the Fast Receiver into the Systems Cabinet, and attach the four screws into frame to hold in place.
11. Connect the SMB (Receiver J11) to the BNC (Fast Receiver RF IN). See Illustration L4774A.
12. Connect the sub-D connector (Receiver) to the sub-D connector (Fast Receiver Digital Interface).
13. At the rear of the System Cabinet, plug the Fast Receiver AC power cord into a vacant AC outlet in the rear of the cabinet.
14. Close the front and rear covers on the System Cabinet.
15. Remove the tag, and turn on System Cabinet circuit breakers.

2- RECEIVER 0 WITH FAST RECEIVER ADAPTER MODULE REPLACEMENT

1. Turn off System Cabinet circuit breakers, and tag to prevent power from being turned on.

2. Remove front cover from System Cabinet.
3. Disconnect the SMB (J11) and the sub-D connector (Fast Receiver Digital Interface Cable) from the bad Receiver 0 Module (MR2A30A6).
4. Remove two screws securing Receiver 0 Module (slot 9 & 10) to TPS/ISE Chassis (see Illustration L4857A).

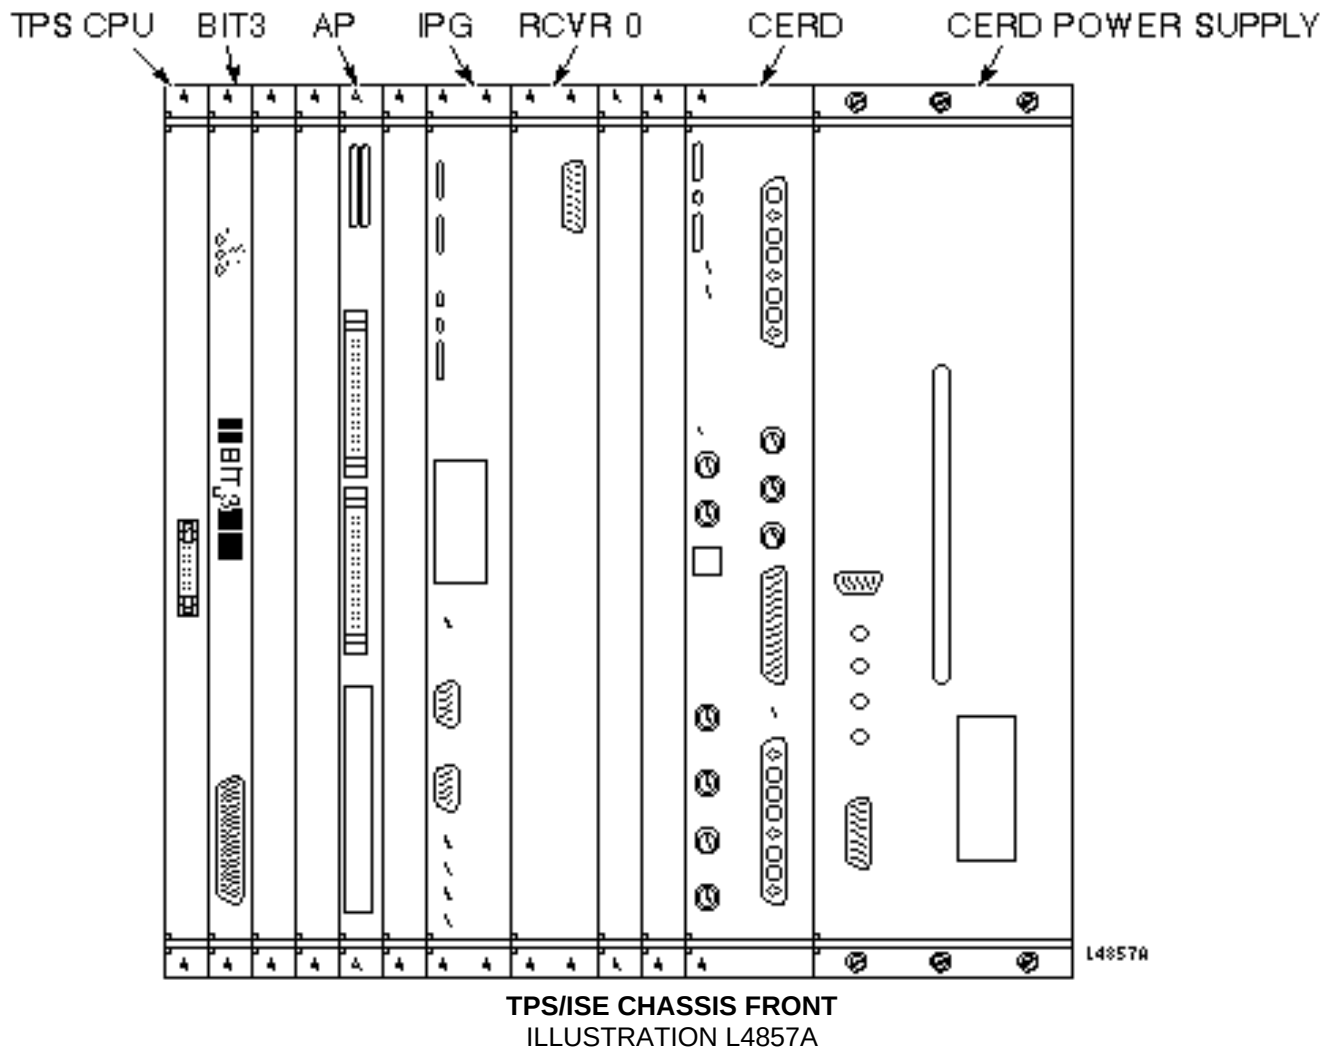

5. Slide module out of chassis .
6. Slide new Receiver 0 with Fast Receiver Adapter module into TPS/ISE Chassis. Secure to chassis with two front panel screws.
7. Connect the BNC (Fast Receiver RF IN) to SMB (Receiver J11). See Illustration L4774A in Section 1.
8. Connect the sub-D connector (Fast Receiver Digital Interface) to the sub-D connector (Receiver).

9. Close the front cover on the System Cabinet.
10. Remove the tag, and turn on System Cabinet circuit breakers.
11. If Signa Horizon (8.0) software is running, [**Reset TPS**] from the Service Desktop menu.

3- FUNCTIONAL CHECKS REQUIRED

1. Perform procedure for EPI Bandpass Asymmetry Correction Characterization.
2. Perform procedure for EPI B0 Dither and Group Delay .

REVISION HISTORY

REV	DATE	AUTHOR	PRIMARY REASONS FOR CHANGE
0	June 2, 1998	J. Saperstein	Initial Conversion from Toolbook to Word.