

**ADMINISTRATIVE INFORMATION****FMI No: 25320****FMI Title: LightSpeed 16 Power Supply Cable Upgrade**

FMI TYPE	CHARGE CODES	IMPLEMENTATION DATES
☐ Mandatory Safety	GEMS-AM:	Issue Date:
☒ Mandatory	GEMS-E:	Close Date:
☐ Mandatory on Request	GEMS-A:	

☒ Staged FMI	Customer List provided by FMI Administration. If you identify additional units within effectivity range, but they are not shown on the customer list, contact FMI Administration in your Pole.
☒	Parts and any special tools are furnished automatically. To address shortages and ordering exceptions, contact FMI Administration in your Pole.
☐	Parts Ordering: GEMS - Americas, contact your Region logistics coordinator GEMS - Europe, Order FMI kits from GPO/EPL Buc GEMS - Asia, Contact your region logistics coordinator
☐	No Parts are required to complete this FMI.
☐ Batch with	FMI # To minimize costs, combine implementation of this FMI with the FMIs listed for all customers where the effectivity is the same (Please see your customer lists).
☐ Non-Staged	No Customer List is provided. Each service location must identify affected units and place part orders as indicated in the Special Instructions.

Technical Support

GEMS - Americas	GEMS - Europe	GEMS - Asia
GE Medical Systems Insite Center (414) 524-5300 800-321-7973 Milwaukee, WI 53201, USA	GEMS - E / ESC BP34 F 78533 BUC CEDEX, FRANCE Tel: (33 1) 39 20 00 07 or ESC Fax: (33 1) 30 70 99 70	Asia Support Center Phone: 81-426-56-0033 Fax: 81-426-48-2905

Special Instructions:**Unit Tracked:****FMI Instructions Part No.: 2369573-100****Do NOT leave unsecured on site.**



Completion Certification Report

Mail To

GEMS - Americas

GE Medical Systems
Attn: FMI Admin. W-523
P.O. Box 414
Milwaukee, WI 53201

GEMS - Europe

GEMS - E / ESC
FMI Admin. 322
BP34
F 78533 Buc Cedex, France

Send to your
Country FMI or Service
Administrator

FMI No.: 25320 FMI Title: LightSpeed 16 Power Supply Cable Upgrade

Customer Full Name:

Number and Street Address:

City and Country:

Country Code

Site Number

System I.D.

Unit Tracked:

Model Number	Serial Number	Compl. Date DD/MM/YY	FMI Comp. Code	Service Hours	
				Labor	Travel

FMI Completion Code:

- 1.) Modification Complete or previously modified.
- 2.) FMI not required per FMI instruction.
- 3.) Not modified. Unit in storage. FMI kit returned to stock.
- 4.) Modification refused or equipment altered. Customer signature and title required.
- 5.) Unit location unknown or unit not in area. Product Locator notified.

**Customer Refusal or Equipment Altered
- Modification Pending.**

Installer
Comments

Effectivity

Affected CT Equipment includes the LightSpeed Gantry P/N 2339985 with the following Gantry #s:

Site	FDO	Gantry #	System ID	DAS #	Model #
Stanford	0970-53492	583	415723SCT3	MDAS16-0001	2332633
Charite	0930-48079	1157	CC0618CT02	MDAS16-0007	2332633
FMLH	0970-65139	946	414805CT16	MDAS16-0003	2332633
JFK	0970-82047	937	732632ect	MDAS16-0004	2332633
Shanghai	0930-08530	1091		MDAS16-0005	2332633
U of M	0970-59963	1259	734936ct1	MDAS16-0012	2332633
Keio	0930-11723	1275		MDAS16-0015	2332633
CCN	0930-23220	1306	M2322212	MDAS16-0018	2332633
Mayo	0970-13536	1314	ct81441	MDAS16-0019	2332633
Cardiff	0930-13963	1328	00243CTS05	MDAS16-0020	2332633

Purpose

The purpose of this FMI is to replace DAS DC power cabling with current production parts and to install chassis to chassis cable mounting brackets.

Furnished Materials

Qty	Description	Part #
1	FMI Document	2369573-100
2	Cable Clamp Support Bracket	2359758
2	Cable Clamp Support Bracket	2359758-2
16	M3 x 6mm SHCS	46-328417P73
4	Flat Cable Mount (Panduit)	46-220191P6
1	Cable - DAS 5V /12V DC power	2335326
1	cable - 5V Logic Supply	2335328

Required Tools

Qty	Description	Part #
1	FMI Document	2369573-100
1	Loctite 242	Field Supplied
1	2.5 mm Hex key	Field Supplied
	Ty-raps	Field Supplied

People Power

5 hours labor and 1 hour of travel.

Procedure

1 Preparation or Before You Begin

Do the following first, because it is wise to have a baseline before you start.

- 1.) Check DAS power supply values using DASTOOLS to establish reference.
See Direction 2341960-100, Rev 01, Chapter 2, Section 4.5.5.1, for details.
- 2.) Inventory FMI kit to verify all parts are present.

2 HW Adjustment and Installation

2.1 Cable Clamp

- 1.) Turn off Axial Enable, HVDC and 120 VAC Service switches located on STC backplane.
- 2.) Turn off the DAS power switch located on the DAS Fuse box.
- 3.) Attach one (1) panduit cable clamp to the top side of the four (4) brackets. [See Figure 1.](#)
 - a.) Use Loctite 242 on each screw.
 - b.) Attach one (1) panduit clamp, open or locking end, facing the left side of both the short and long brackets.
 - c.) Attach one (1) panduit clamp, open or locking end, facing the right side of both the short and long brackets.

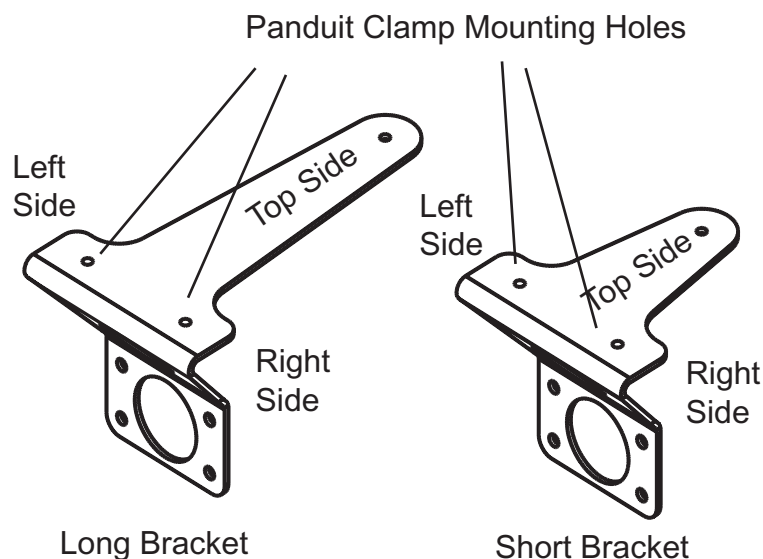


Figure 1 - Cable Clamp Brackets

- 4.) Rotate gantry for easy access to DAS chassis.
- 5.) Mount long brackets to DAS center chassis. [See Figure 2.](#)

- a.) Use Loctite 242 on each screw. Torque to 0.55 N-m (4.9 lbs-in)
- b.) Ensure Panduit clamps open or locking end is table side.
- c.) Mount brackets so they extend over the top of the DAS chassis.
- d.) Mount brackets on an angle such that bracket slopes toward the rear of the gantry. This maximizes the space between the bracket and the top of the DAS chassis. Use hole pattern 1 or 2 to achieve correct bracket slope.

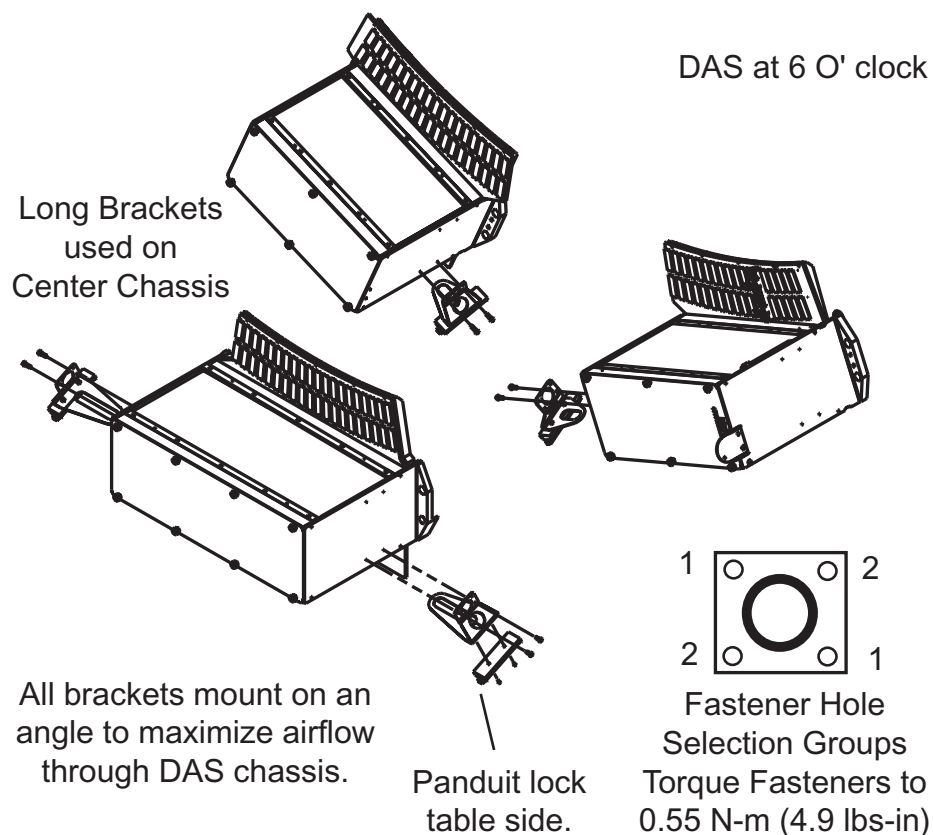


Figure 2 - Bracket mounting detail

- 6.) Mount short brackets on DAS left and right chassis closest to center chassis. Use same procedure outline in step 5.
- 7.) Install DAS chassis to chassis data cables. Secure in Panduit clamp.

2.2 DC Power Cable Replacement

- 1.) Ensure Axial Enable, HVDC and 120 VAC service switches are OFF on the STC backplane.
- 2.) Ensure DAS Power switch is OFF at the DAS Fuse box.
- 3.) Replace the 5 vdc logic power cable by removing the existing cable and following the same cable routing.
- 4.) Make sure the new cable is properly secured using Ty-raps.
- 5.) Replace the 5/12 vdc power cable using the same process as above.

3 Finishing Up

- 1.) Restore DAS and gantry power.
- 2.) Verify DAS voltages using DASTOOLS as before.
- 3.) Adjust voltages as necessary.
- 4.) Perform applications test scans to ensure proper DAS operation.
- 5.) Complete FMI paperwork and submit as required.