


TABLE OF CONTENTS

TABLE OF CONTENTS	1
1 - OVERVIEW	2
2 - TOOLS REQUIRED.....	3
3 – SRF CABINET POWER LOCKOUT AND TAGOUT.....	3
4 – BORE TEMPERATURE SENSOR ASSEMBLY REMOVAL	5
5 – BORE TEMPERATURE SENSOR ASSEMBLY INSTALLATION.....	5
6 – SYSTEM RESTORATION	6
REVISION HISTORY	7

1 - OVERVIEW

This procedure describes the process for replacing a failed bore temperature sensor assembly on the top, inside, front of the 1.5T Twin RF body coil. The Bore Temperature Sensor assembly consists of two (2) redundant sensors and cables that merge into one connector. The connector interfaces to J10 on the SRI. Illustration 1-1 shows the location of the Bore Temperature Sensor Assembly on the Twin RF Coil.

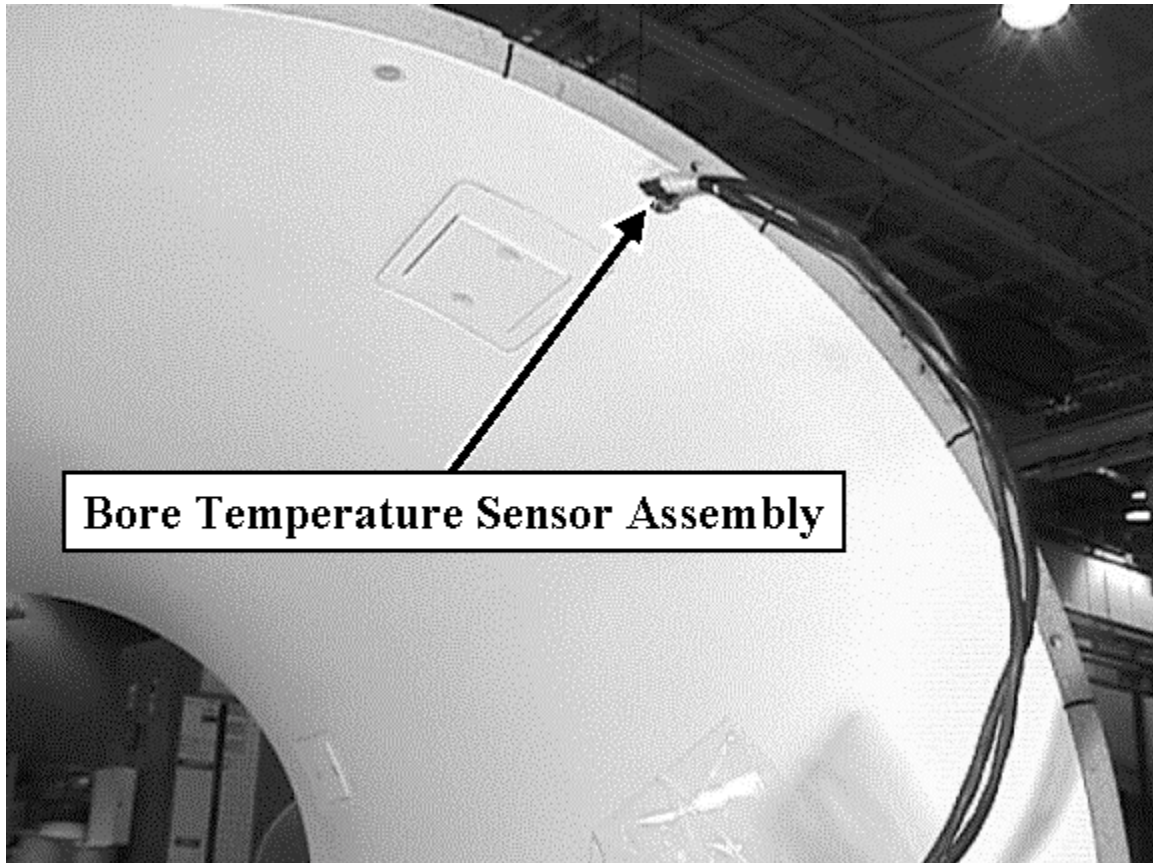

FRONT VIEW INTO TWIN RF COIL SHOWING LOCATION OF BORE TEMPERATURE SENSOR ASSEMBLY
ILLUSTRATION 1-1

2 - TOOLS REQUIRED


- 1/8" non-magnetic slot screwdriver - GE part # 46-320473P4
- Thermal Grease - GE part # 46-170212P1 (optional)
- Duct tape or equivalent
- Quick-drying epoxy
- 5" tie-wraps – Qty. 5

3 – SRF CABINET POWER LOCKOUT AND TAGOUT



POSSIBLE PERSONAL INJURY! AVOID SERIOUS INJURY OR DEATH BY ELECTROCUTION. REMOVE POWER FROM THE SRF CABINET BEFORE ATTEMPTING TO SERVICE THE DYNAMIC DISABLE CIRCUIT. VERIFY THAT THE RFI/AMP AND SSM BREAKERS ON THE FRONT OF THE PDU ARE OFF. LOCK AND TAG OUT THE PLEXI-GLASS COVER ON THE FRONT OF THE PDU.


1. Remove the cover from the front of the ACGD Cabinet.
2. Open Plexiglas door over the front of the PDU breakers and switch off the **RFI/AMP** and **SSM** breakers. See Illustration 3-1.

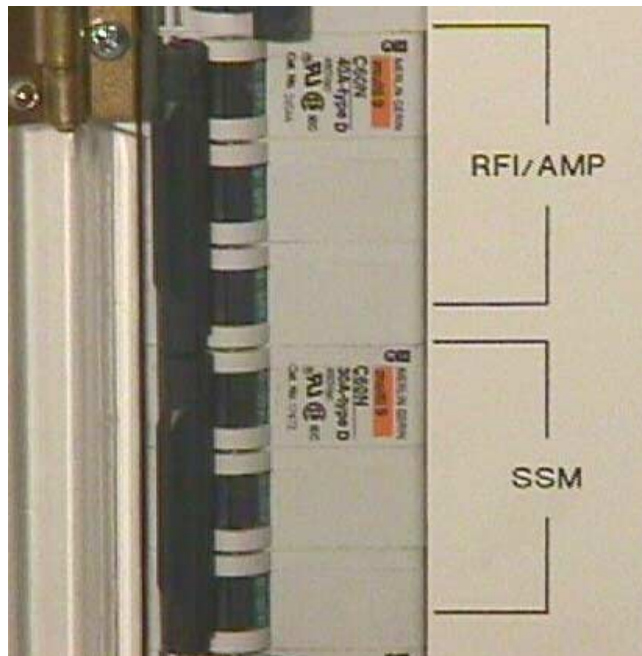

BREAKER IDENTIFICATION
ILLUSTRATION 3-1

3 – SRF CABINET POWER LOCKOUT AND TAGOUT (CONTINUED)

3. Close the plexi-glass door and lock and tag it out. See Illustration 3-2. (Refer to CD-ROM *Dir. 2187583-3 [or -2], MR Release Signa 5x/8x Service Methods, Renewal Parts and Service Tools*, Safety, Section 6, OSHA LOCKOUT/TAGOUT REQUIREMENTS.)

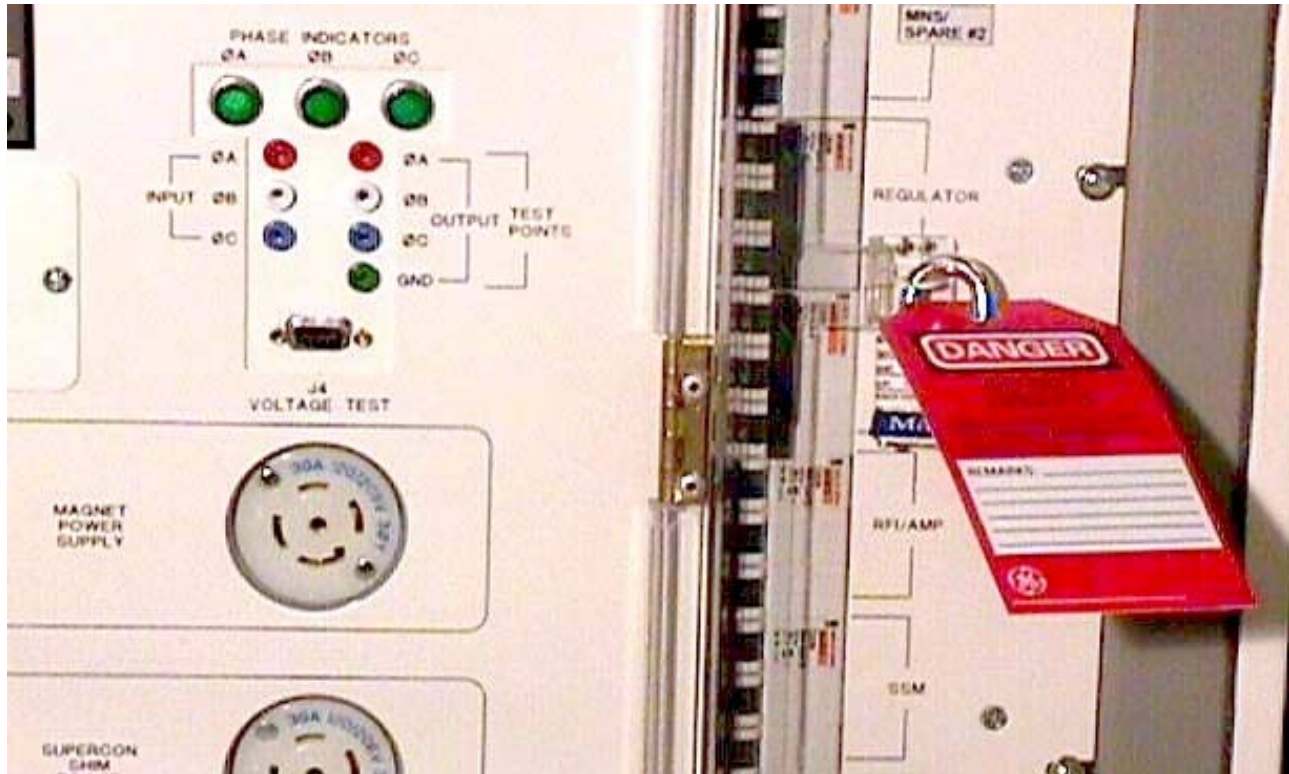

LOCKOUT AND TAGOUT OF BREAKERS
ILLUSTRATION 3-2

4. Remove the front cover from the SRF Cabinet.
5. Verify all LEDs are OFF (not illuminated) on front of SSM and RFI. Verify all LEDs are OFF (not illuminated) at the rear of the RF Amplifier Power Module.
6. Using an AC voltmeter (DVM), measure the input power leads on the rear of one of the RF Amplifier Modules from the rear (right side) of the RF/PDU Cabinet.
 - Measure between L1 and L2; verify voltmeter measures 0 VAC.

4 – BORE TEMPERATURE SENSOR ASSEMBLY REMOVAL

1. Perform **Section 3 – SRF CABINET POWER LOCKOUT AND TAGOUT** (Refer to *MR Signa OpenSpeed Service Methods CDRom*, Safety (SYSMSA2.DOC), Section 6, OSHA LOCKOUT/TAGOUT REQUIREMENTS.).
2. Remove the two Bore Temperature Sensors from the inside-edge of the RF Coil.
 - a. Where the sensors enter the holes, a small section of the bore sensor cables are secured to the RF coil surface with quick-drying epoxy. Gently tug on the cables to straighten them and break the epoxy bond to the coil surface.
 - b. Remove the two (2) temperature sensors from the holes.
 - c. The sensors are coated with white thermal grease. Remove excess amounts of the grease from these sensors and apply to the replacement sensors. If necessary, thermal grease can also be ordered and added to what is already in the holes.

5 – BORE TEMPERATURE SENSOR ASSEMBLY INSTALLATION

1. Fully uncoil the cable and place the excess inside the bore.
2. Attach the new Bore Temperature Sensors to the RF coil
 - a. Apply an accumulation of epoxy material between the holes and the outer edge of the RF coil.
 - b. Fully insert each temperature sensor into a hole.
 - c. Attach the cables to the coil surface and temporarily secure with tape until the epoxy cures.
 - i. While holding the sensors stationary in the holes with one hand, bend the cables in a 90 degree angle with the other hand so that each cable is exiting from the front of the RF coil. See Illustration 1-1.
 - ii. Use masking tape or duct tape to temporarily secure the cables to the coil in this bent position in order to give the epoxy time to permanently set.
3. Once the epoxy has dried and the cables are firmly set in place, route the cables to the SRI.
4. Coil up the excess cable, leaving a 2 foot (60 cm) length of the connector end free, and firmly tie-wrap the excess to the frame supporting the SRI.
5. Attach and secure the connector to J10 on the SRI.
6. While exercising care to avoid breaking the epoxy bond, remove the masking tape or duct tape securing the cables to the RF coil.

6 – SYSTEM RESTORATION

1. Remove lock and tag from the plexi-glass cover on the front of the PDU cabinet and put the RFI/AMP and the SSM breakers into the right (ON) position.
2. Confirm that LEDs are illuminated on the front of the RFI and SSM and confirm that the fans in the RF amplifiers are rotating.
3. Perform one head and one body scan to verify that the system is functional.

REVISION HISTORY

REV	DATE	AUTHOR	PRIMARY REASONS FOR CHANGE
A	August 15, 2001	Don Thome'	Initial version.