



Sr.No	NAME OF LINE	THICKNESS (IN mm)	ILLUSTRATION	APPLICATION
1.	Continuous Thick	0.5		Visible outlines.
2.	Continuous Thin	0.2		Dimension lines, extension lines, leader lines, hatching, revolved section, construction lines etc.
3.	Dashed medium Thick	0.3		Hidden lines.
4.	Chain Thin	0.2		Centre lines, Lines of symmetry, locus line
5.	Chain Thin and thick at ends Only.	0.2 for thin and 0.5 for thick ends.		Cutting planes.
6.	Chain thin double-dashed	0.2		Outlines for adjacent parts, alternative and extreme positions moveable parts.
7.	Continuous thin Wavy	0.2		Irregular boundary line, Short break line.
8.	Continuous thin with Zig-Zag.	0.2		Long break line.
9.	Chain - Thick.	0.5		Indication of surfaces to meet special requirements.

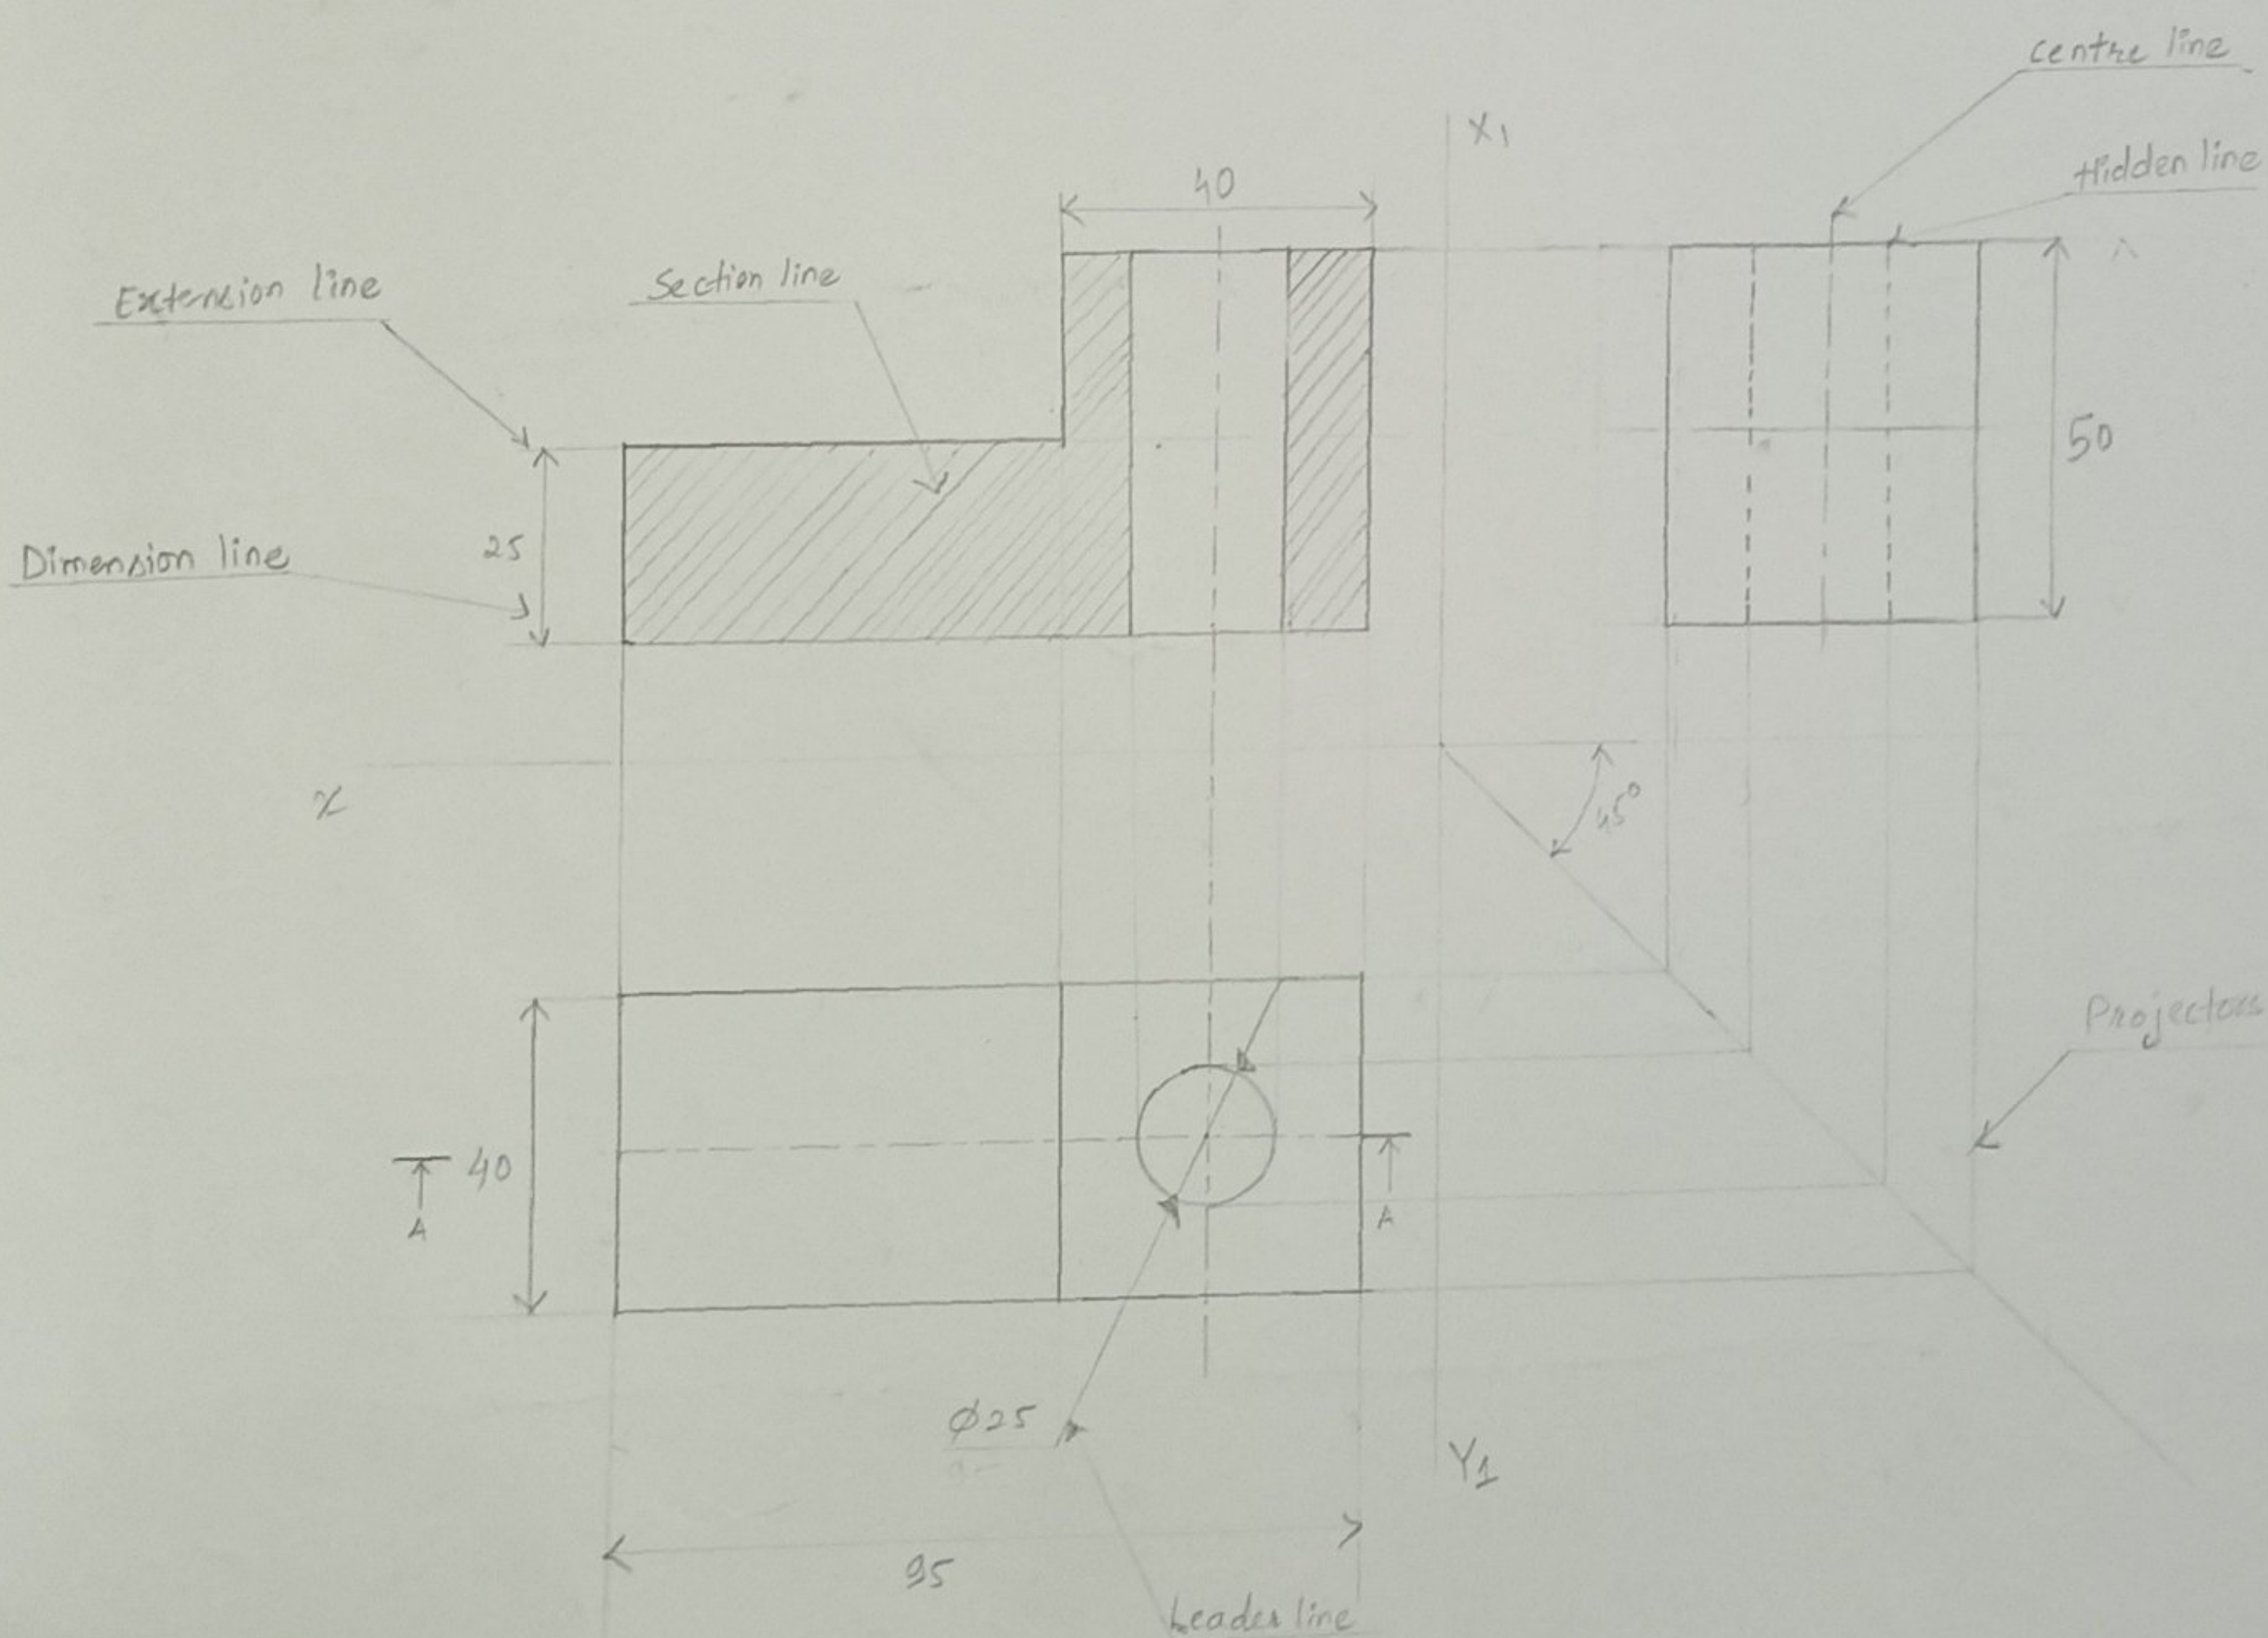



LETTERING

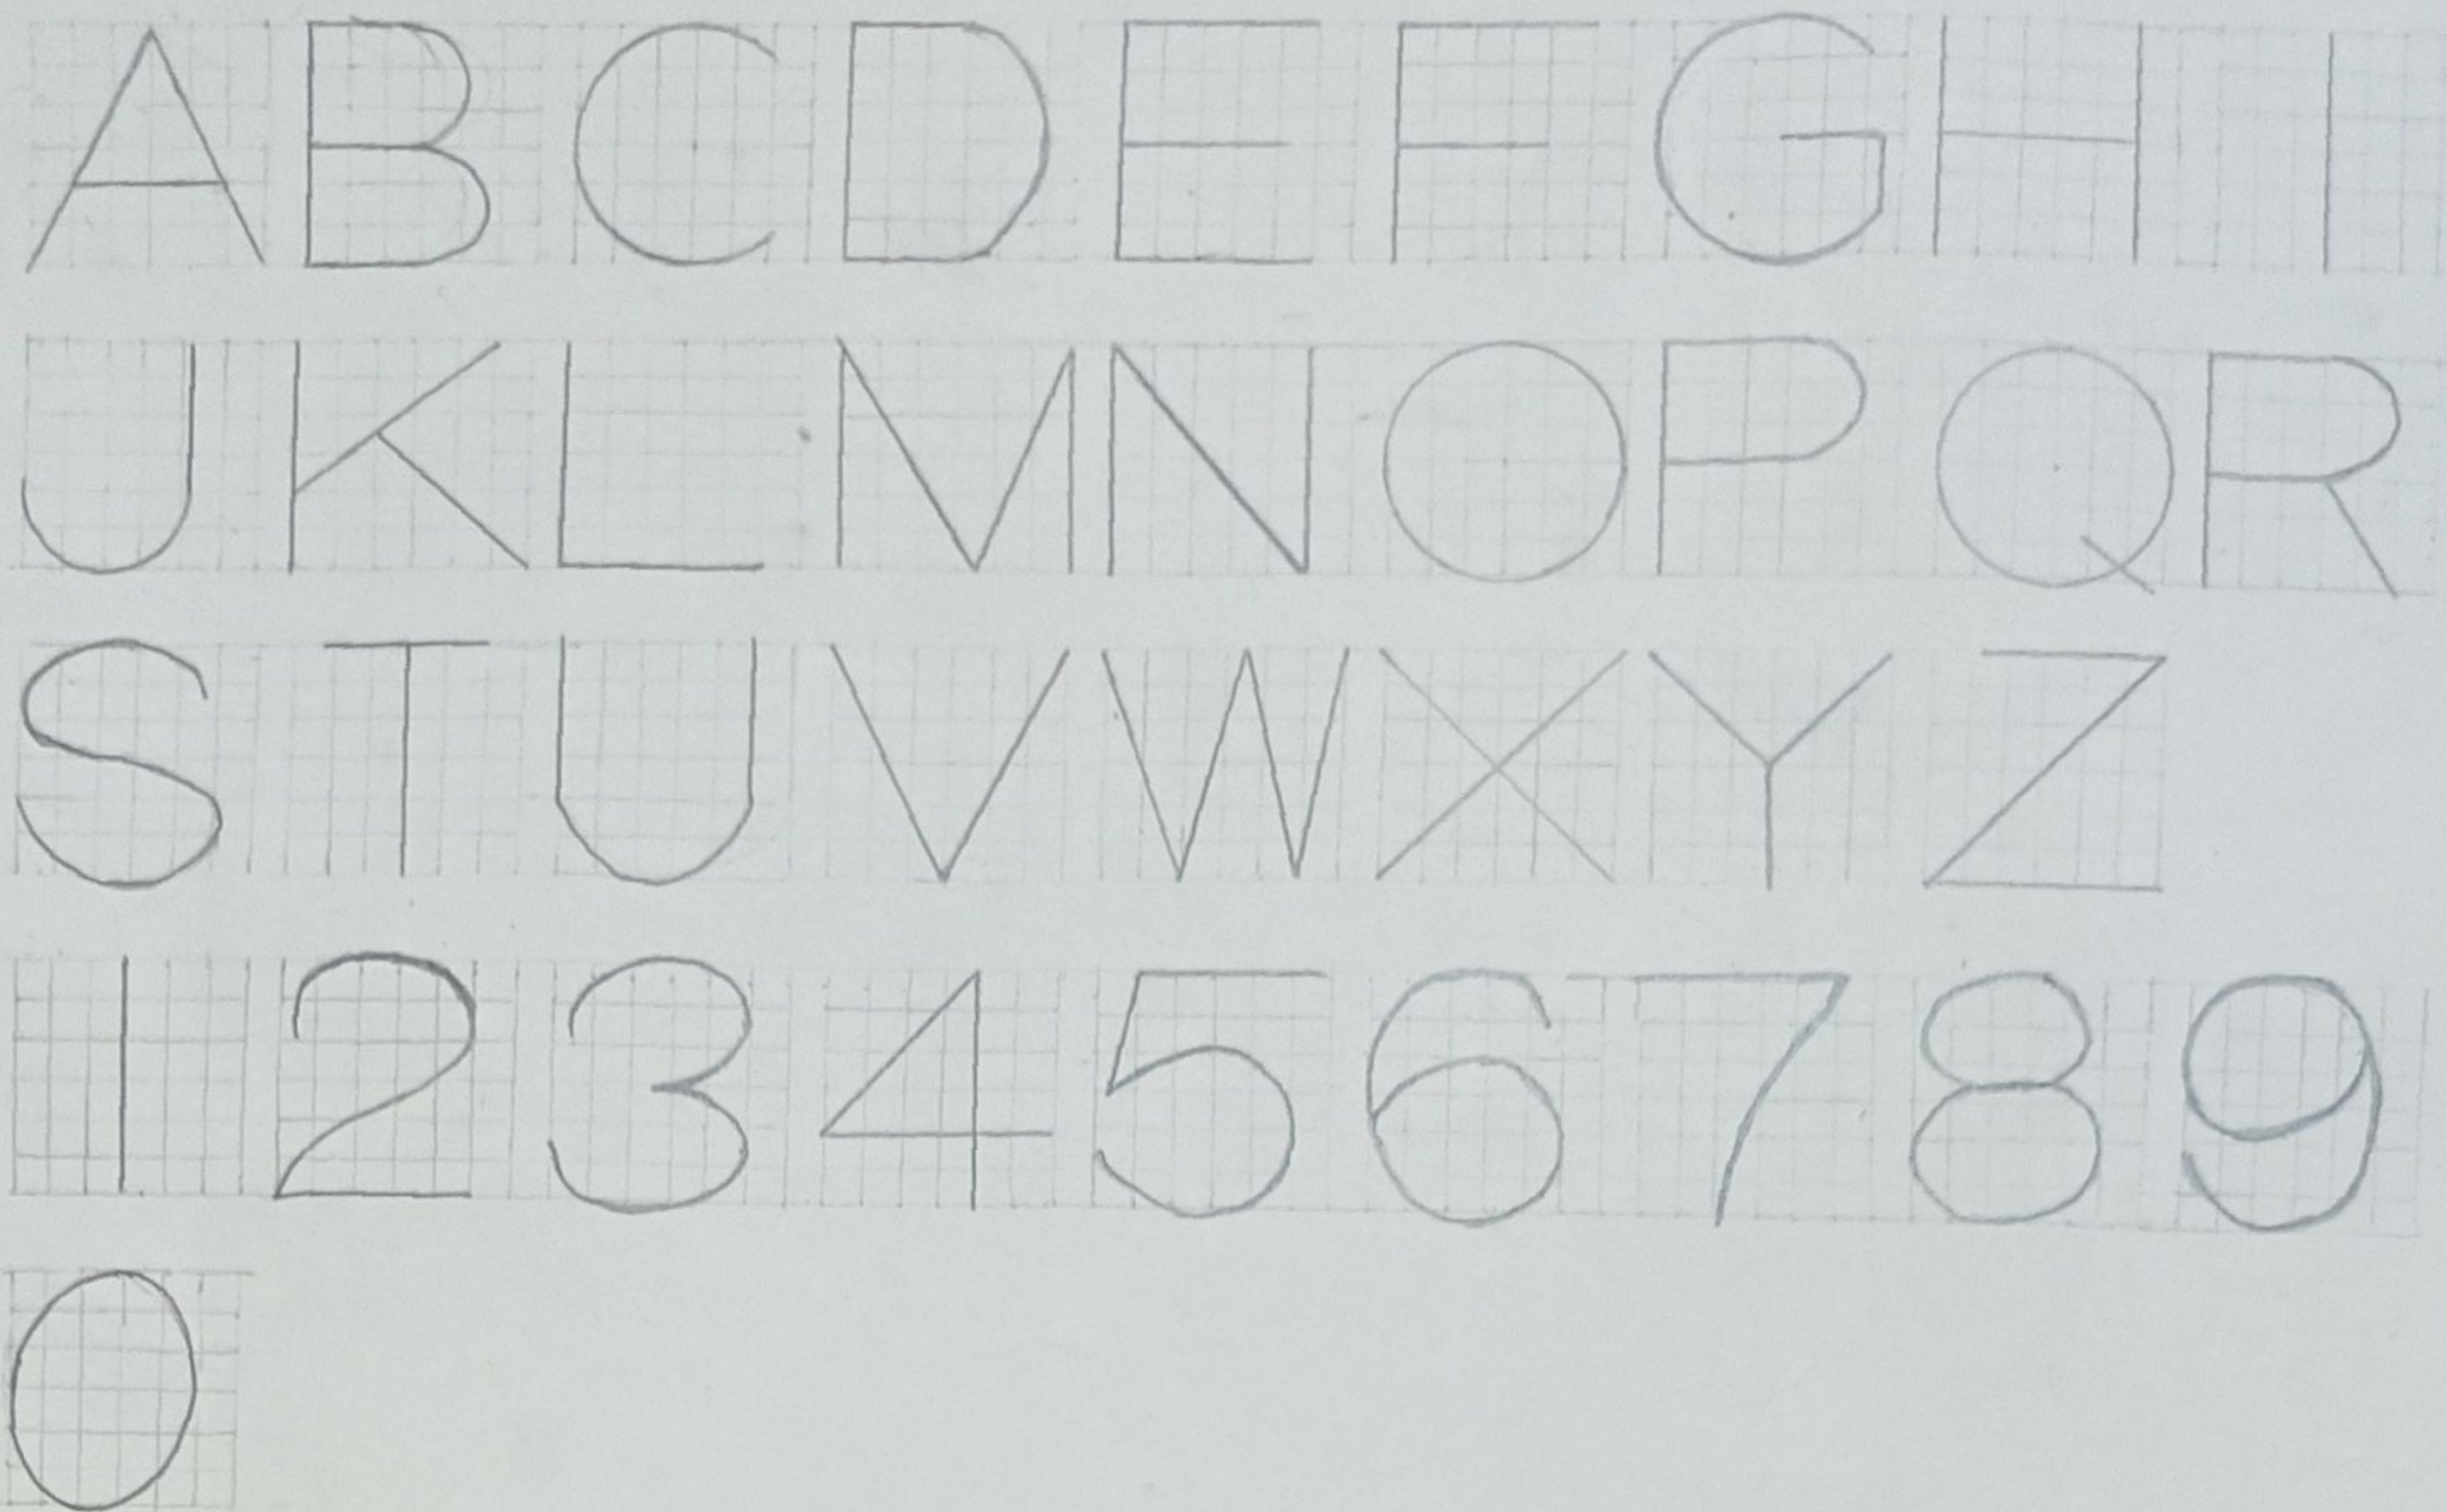

Dimensioning:-

- An engineering drawing must be properly dimensioned in order to convey the designer's intent to the end user.
- Dimensions provide the information needed to specify the size and location of every feature on the object.
- A properly dimensioned drawing helps ensure that the part produced in the manufacturing phase matches the part you thought you asked for.
- Before we can begin to go over the rules for dimensioning, we must learn a little bit about the anatomy of a dimension. A dimensioned view of an object is showing in fig 1.

The following terms refer to this fig 1:-

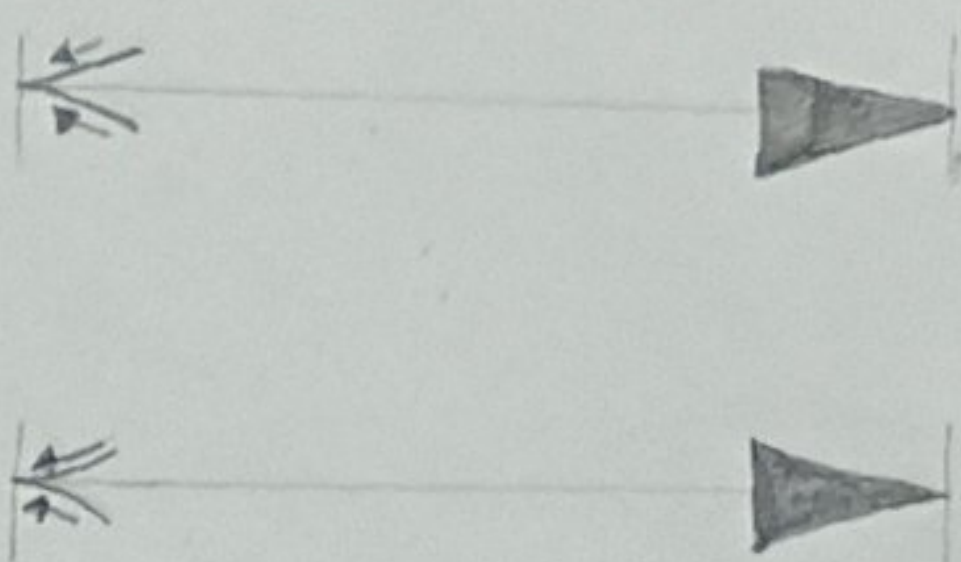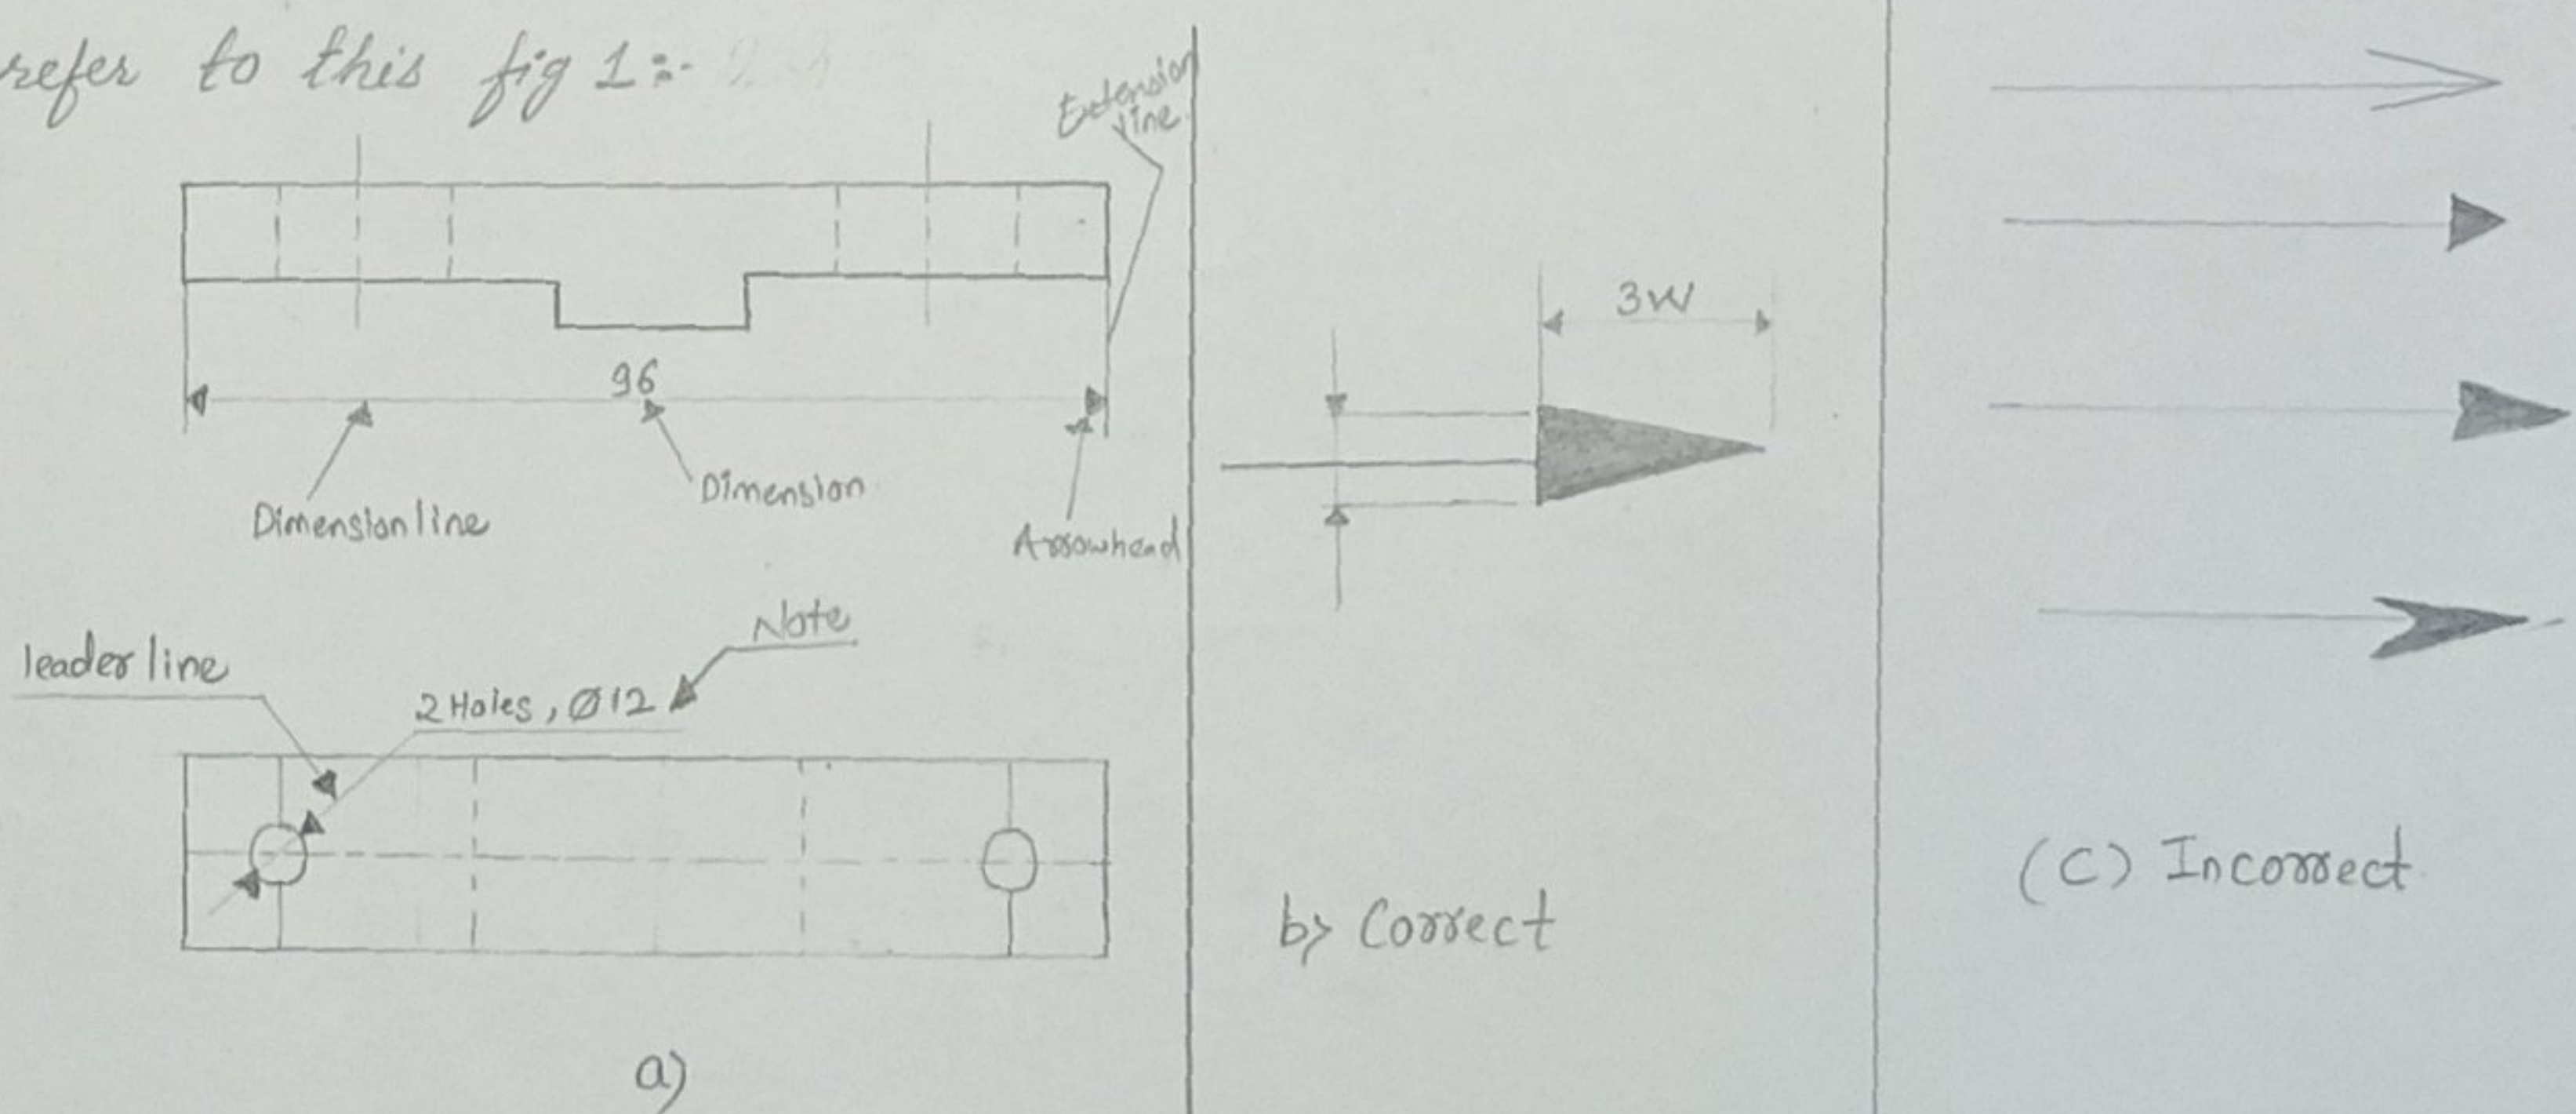

d) Formation of Arrow Heads

GRAMIN TECHNICAL & MANAGEMENT CAMPUS VISHNUPURI NELLORE			
NAME: NABEEL AHMED AHMED MUBASSIR.			
TITLE: SHEET ON LINES, LETTERING & DIMENSIONING			
CLASS: First Year B-TECH (COMPUTER ENGINEERING) ROLL NO: 24C0667			
DATE: 24-09-2024		SHEET NO: 01 SCALE NO: -	
METHOD OF PROJECTION:		SIGN: _____ MARKS: _____	

15/10/2024 08/06