
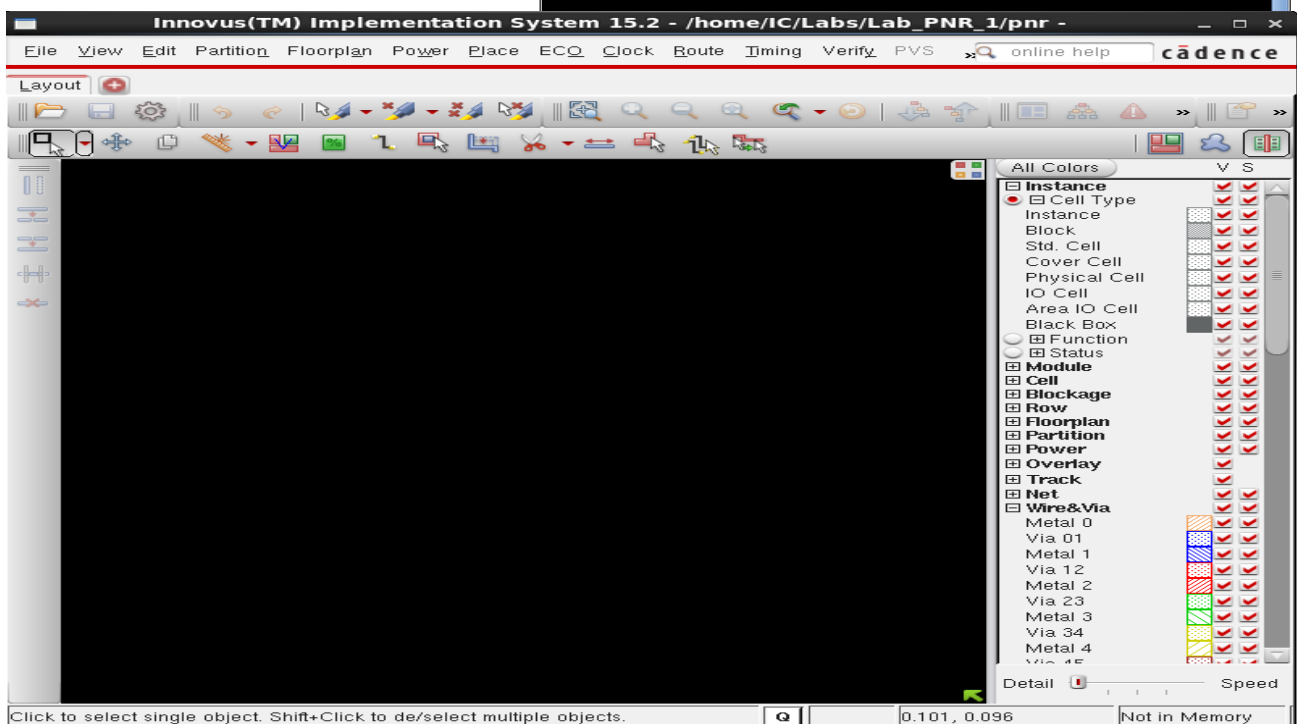


Lab_PNR_1.0

Steps: -

1. Copy **Lab_PNR_1.0** folder from your computer into the virtual machine inside Labs directory
1. Prepare different constraints Files
 - Open **ALU_TOP.sdc** file and add the following commands:
 - **set_case_analysis 0 test_mode**
 - **set_case_analysis 0 SE**
 - Copy **ALU_TOP.sdc** to **ALU_TOP_scan.sdc** and add the following:-
 - **set_case_analysis 1 test_mode**
 - **set_case_analysis 0 SE**
 - Copy **ALU_TOP.sdc** to **ALU_TOP_capture.sdc** and add the following:-
 - **set_case_analysis 1 test_mode**
 - **set_case_analysis 1 SE**
 - Open **MMMC.tcl** script: -
 - Add constraints mode using **create_constraint_mode** for **ALU_TOP_scan.sdc** and **ALU_TOP_capture.sdc**
 - Create **setup** & **hold** analysis views for the new constraints modes
2. Open Terminal and then Type **encounter** and Press Enter
3. The tool will open

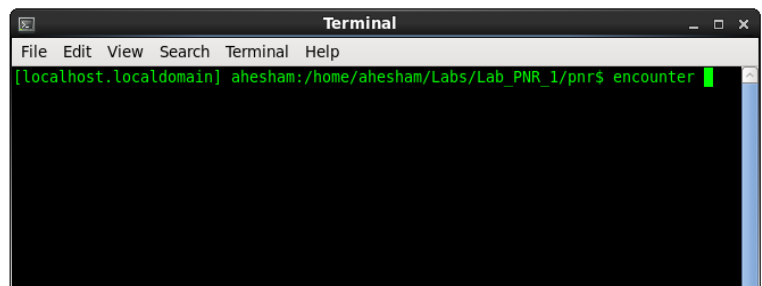

4. Design Import
5. Check the warnings and messages in the terminal
6. View Chip Utilization
7. Power planning
 - Add power ring
 - i. Check connectivity & DRCs and fix issues
 - Add power strips
 - i. Check connectivity & DRCs and fix issues
 - Add special routing