Proprietary to General Electric Company
Direction 5438996-8EN, **Rev#** 9
Brivo CT385 Series Service Methods (Adv)
Module Version 1.0, **Version Date** 7/23/12

HOT ISO Alignment

(Click Here for Summary Version)

1 Personnel Requirements

Required Persons	Preliminary Reqs	Procedure	Finalization
1	Not Applicable	30 mins	Not Applicable

2 Overview

This procedure provides steps for HOT ISO Alignment.

Last Revised:	Feb 20, 2012

3 Preliminary Requirements

3.1 Safety



NOTICE

Follow ALL required safety and PPE procedures customary for your organization, when working on this product.


3.2 Required Conditions

Condition	Reference	Effectivity
Only trained service personnel should service the GE CT Scanner.	-	-

4 Procedure

1. Select the [CALIBRATION] tab in the Common Service Desktop.
2. Select [HOT ISO ALIGNMENT]. The Hot ISO Screen appears as shown in Illustration 1

Illustration 1: Hot ISO Screen

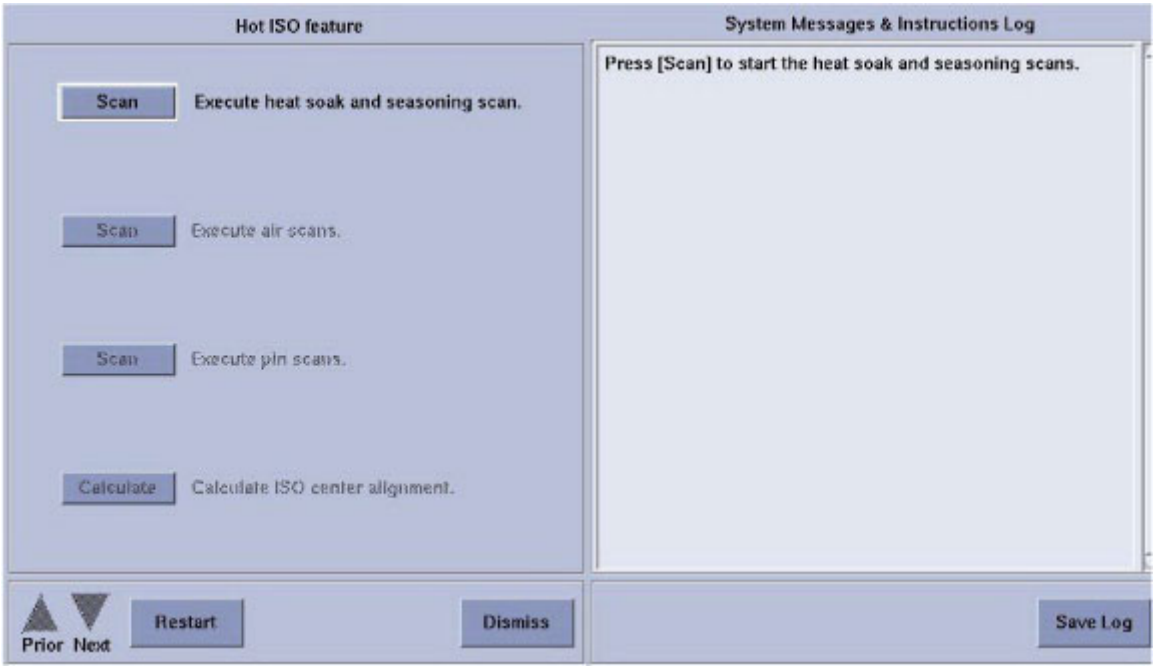

3. Remove any objects from the detector FOV. (Cradle, phantoms, Mylar window, etc.)
4. Click the first **Scan** button to execute the **Heat Soak and Seasoning** scan.
5. Press [START] on the GSCB when it flashes.
6. Click the second **Scan** button to execute the **Air Scans** (small spot and large spot).
7. Press [START] on the GSCB when it flashes.
8. Place an 1/8 in. screwdriver on the phantom holder (should be pointing into the Z direction). Turn **ON** the laser alignment lights. Advance the adjust the table to position the metal shaft 35 mm up and 35 mm to the right of ISO center as marked by the laser alignment lights. Make sure the shaft remains perpendicular to the scan plane.
9. Click the third **Scan** button to execute **Pin Scans** (small spot and large spot).
10. Press [START] on the GSCB when it flashes.
11. Click the [Calculate] button to calculate correction factor.

NOTE: No movement of the tube is required. This is a software correction done automatically.

5 Finalization

No finalization steps.

Back to top