







3. Spray bottom of metal sheet and press onto foam pad. The wire can slip through the foam pad but slicing a crease into the side of foam you want to align the wires for a clean look.

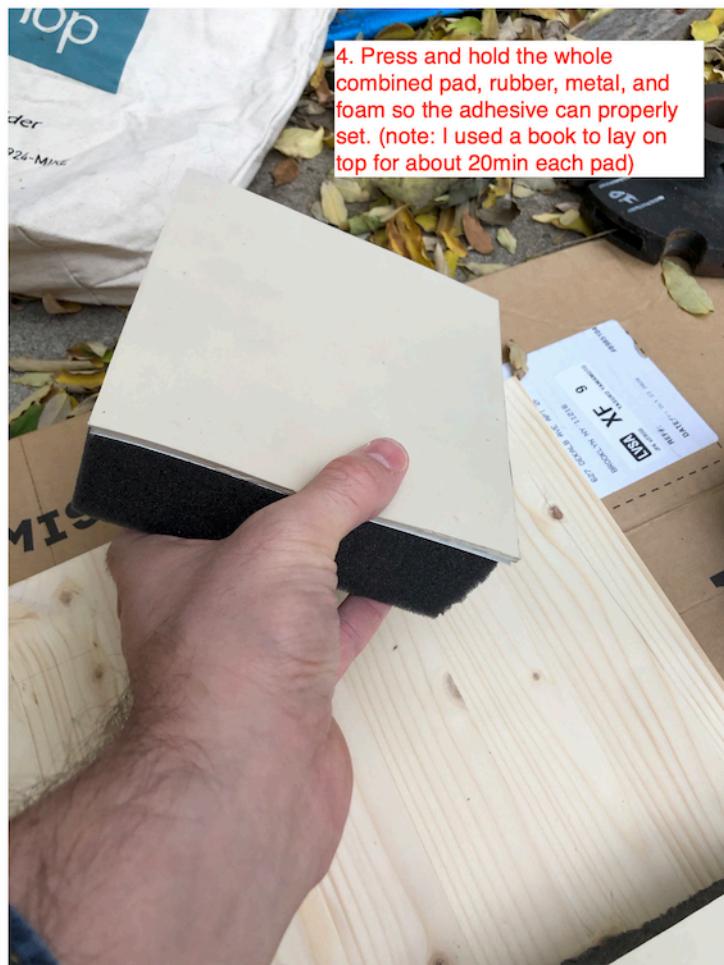

4. Press and hold the whole combined pad, rubber, metal, and foam so the adhesive can properly set. (note: I used a book to lay on top for about 20min each pad)

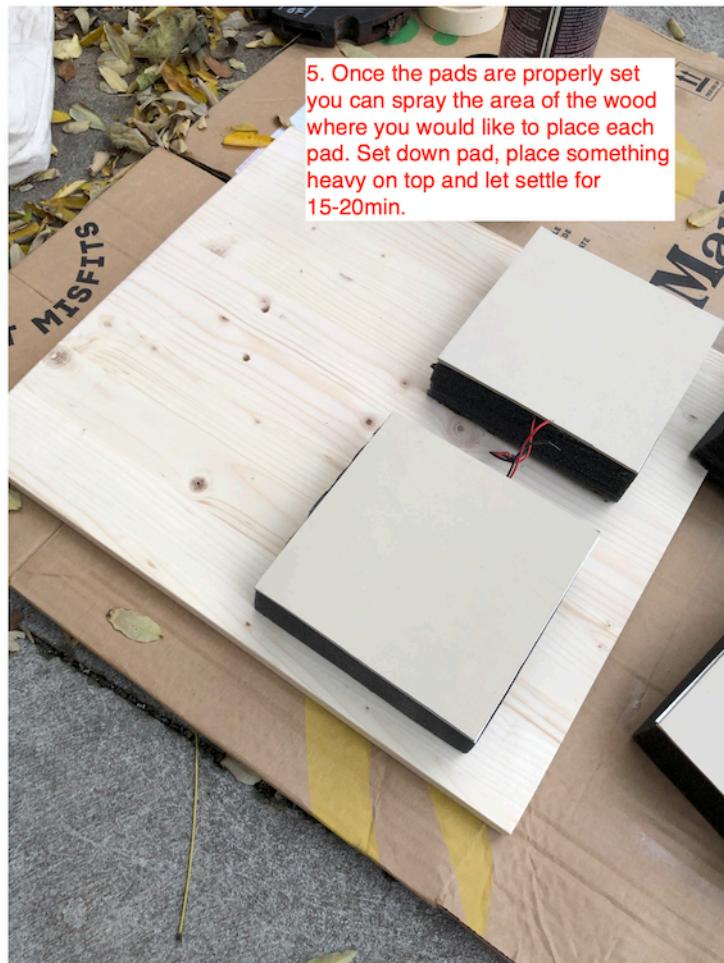

5. Once the pads are properly set you can spray the area of the wood where you would like to place each pad. Set down pad, place something heavy on top and let settle for 15-20min.



