


Rotating Magnetic Field (RMF)

Angle(θ)	ϕ_R	ϕ_Y	ϕ_B
$\theta = 0^\circ$	0	$-\frac{\sqrt{3}}{2}\phi_m$	$\frac{\sqrt{3}}{2}\phi_m$
$\theta = 60^\circ$	$\frac{\sqrt{3}}{2}\phi_m$	$-\frac{\sqrt{3}}{2}\phi_m$	0
$\theta = 120^\circ$	$\frac{\sqrt{3}}{2}\phi_m$	0	$-\frac{\sqrt{3}}{2}\phi_m$
$\theta = 180^\circ$	0	$\frac{\sqrt{3}}{2}\phi_m$	$-\frac{\sqrt{3}}{2}\phi_m$
$\theta = 240^\circ$	$-\frac{\sqrt{3}}{2}\phi_m$	$\frac{\sqrt{3}}{2}\phi_m$	0
$\theta = 300^\circ$	$-\frac{\sqrt{3}}{2}\phi_m$	0	$\frac{\sqrt{3}}{2}\phi_m$
$\theta = 360^\circ$	0	$-\frac{\sqrt{3}}{2}\phi_m$	$\frac{\sqrt{3}}{2}\phi_m$

Rotating Magnetic Field (RMF)

$\phi_R = \phi_m \sin \theta$
 $\phi_Y = \phi_m \sin(\theta - 120^\circ)$
 $\phi_B = \phi_m \sin(\theta - 240^\circ)$

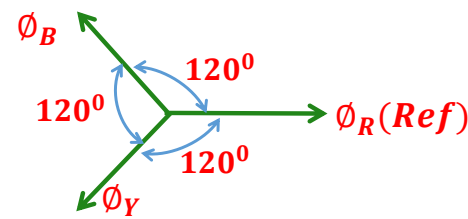

Angle(θ)	Three Fluxes	Resultant Flux	Phasor Diagram	Result
$\theta = 0^\circ$	$\phi_R = 0$ $\phi_Y = -\frac{\sqrt{3}}{2} \phi_m$ $\phi_B = \frac{\sqrt{3}}{2} \phi_m$	$\phi_T = 1.5 \phi_m$		ϕ_T lead ϕ_R by 90°
$\theta = 60^\circ$	$\phi_R = \frac{\sqrt{3}}{2} \phi_m$ $\phi_Y = -\frac{\sqrt{3}}{2} \phi_m$ $\phi_B = 0$	$\phi_T = 1.5 \phi_m$		ϕ_T lead ϕ_R by 30°
$\theta = 120^\circ$	$\phi_R = \frac{\sqrt{3}}{2} \phi_m$ $\phi_Y = 0$ $\phi_B = -\frac{\sqrt{3}}{2} \phi_m$	$\phi_T = 1.5 \phi_m$		ϕ_T lag ϕ_R by 30°
$\theta = 180^\circ$	$\phi_R = 0$ $\phi_Y = \frac{\sqrt{3}}{2} \phi_m$ $\phi_B = -\frac{\sqrt{3}}{2} \phi_m$	$\phi_T = 1.5 \phi_m$		ϕ_T lag ϕ_R by 90°