

Machine Elements in Mechanical Design

SIXTH EDITION

Robert L. Mott
Edward M. Vavrek
Jyhwen Wang



Pearson

MACHINE ELEMENTS IN MECHANICAL DESIGN

Sixth Edition

Robert L. Mott
University of Dayton

Edward M. Vavrek
Purdue University

Jyhwen Wang
Texas A&M University



330 Hudson Street, NY, NY 10013

Vice President, Portfolio Management: Andrew Gilfillan
Portfolio Manager: Tony Webster
Editorial Assistant: Lara Dimmick
Senior Vice President, Marketing: David Gesell
Marketing Coordinator: Elizabeth MacKenzie-Lamb
Director, Digital Studio and Content Production: Brian Hyland
Managing Producer: Jennifer Sargunar
Managing Producer: Cynthia Zonneveld
Content Producer: Faraz Sharique Ali
Content Producer: Nikhil Rakshit

Manager, Rights Management: Johanna Burke
Operations Specialist: Deidra Smith
Cover Design: Cenveo Publisher Services
Cover Art: Authors' own
Full-Service Management and Composition: R. Srivatsakshi/SPi Global
Printer/Binder: LSC Communications, Inc.
Cover Printer: Phoenix Color/Hagerstown
Text Font: 10/12 Sabon LT Pro Roman

Copyright© 2018, 2014, 2004. by Pearson Education, Inc. All Rights Reserved.
Manufactured in the United States of America. This publication is protected by copyright, and permission should be obtained from the publisher prior to any prohibited reproduction, storage in a retrieval system, or transmission in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise. For information regarding permissions, request forms, and the appropriate contacts within the Pearson Education Global Rights and Permissions department, please visit www.pearsoned.com/permissions/.

Acknowledgments of third-party content appear on the appropriate page within the text.

Unless otherwise indicated herein, any third-party trademarks, logos, or icons that may appear in this work are the property of their respective owners, and any references to third-party trademarks, logos, icons, or other trade dress are for demonstrative or descriptive purposes only. Such references are not intended to imply any sponsorship, endorsement, authorization, or promotion of Pearson's products by the owners of such marks, or any relationship between the owner and Pearson Education, Inc., authors, licensees, or distributors.

Library of Congress Cataloging-in-Publication Data on File

10 9 8 7 6 5 4 3 2 1



ISBN 10: 0-13-444118-4
ISBN 13: 978-0-13-444118-4

CONTENTS

Preface ix
Acknowledgments xv

PART 1 Principles of Design and Stress Analysis 1

1 The Nature of Mechanical Design 2

- The Big Picture 2
- You Are the Designer 7
- 1–1 Objectives of This Chapter 8
- 1–2 The Design Process 8
- 1–3 Skills Needed in Mechanical Design 9
- 1–4 Functions, Design Requirements, and Evaluation Criteria 10
- 1–5 Example of the Integration of Machine Elements into a Mechanical Design 12
- 1–6 Computational Aids 13
- 1–7 Design Calculations 14
- 1–8 Preferred Basic Sizes, Screw Threads, and Standard Shapes 14
- 1–9 Unit Systems 20
- 1–10 Distinction Among Weight, Force, and Mass 21
- References 22
- Internet Sites for General Mechanical Design 22
- Internet Sites for Innovation and Managing Complex Design Projects 23
- Problems 23

2 Materials in Mechanical Design 25

- The Big Picture 25
- You Are the Designer 26
- 2–1 Objectives of This Chapter 27
- 2–2 Properties of Materials 27
- 2–3 Classification of Metals and Alloys 39
- 2–4 Variability of Material Properties Data 43
- 2–5 Carbon and Alloy Steel 43
- 2–6 Conditions for Steels and Heat Treatment 46
- 2–7 Stainless Steels 51
- 2–8 Structural Steel 51

- 2–9 Tool Steels 51
- 2–10 Cast Iron 51
- 2–11 Powdered Metals 53
- 2–12 Aluminum 56
- 2–13 Zinc Alloys and Magnesium 58
- 2–14 Nickel-Based Alloys and Titanium 59
- 2–15 Copper, Brass, and Bronze 60
- 2–16 Plastics 61
- 2–17 Composite Materials 64
- 2–18 Materials Selection 76
- References 81
- Internet Sites Related to Design Properties of Materials 82
- Problems 83
- Supplementary Problems 85
- Internet-Based Assignments 86

3 Stress and Deformation Analysis 87

- The Big Picture 87
- You Are the Designer 88
- 3–1 Objectives of This Chapter 91
- 3–2 Philosophy of a Safe Design 91
- 3–3 Representing Stresses on a Stress Element 92
- 3–4 Normal Stresses Due to Direct Axial Load 93
- 3–5 Deformation Under Direct Axial Load 94
- 3–6 Shear Stress due to Direct Shear Load 94
- 3–7 Torsional Load—Torque, Rotational Speed, and Power 94
- 3–8 Shear Stress due to Torsional Load 96
- 3–9 Torsional Deformation 98
- 3–10 Torsion in Members Having Non-Circular Cross Sections 98
- 3–11 Torsion in Closed, Thin-Walled Tubes 100
- 3–12 Torsion in Open, Thin-Walled Tubes 100
- 3–13 Shear Stress Due to Bending 102

| | | |
|--|---|-----|
| 3–14 | Shear Stress Due to Bending – Special Shear Stress Formulas | 103 |
| 3–15 | Normal Stress Due to Bending | 104 |
| 3–16 | Beams with Concentrated Bending Moments | 105 |
| 3–17 | Flexural Center for Beam Bending | 110 |
| 3–18 | Beam Deflections | 110 |
| 3–19 | Equations for Deflected Beam Shape | 112 |
| 3–20 | Curved Beams | 113 |
| 3–21 | Superposition Principle | 120 |
| 3–22 | Stress Concentrations | 122 |
| 3–23 | Notch Sensitivity and Strength Reduction Factor | 129 |
| References | | 129 |
| Internet Sites Related to Stress and Deformation Analysis | | 129 |
| Problems | | 129 |
| 4 Combined Stresses and Stress Transformation 142 | | |
| The Big Picture 142 | | |
| You Are the Designer 143 | | |
| 4–1 | Objectives of This Chapter | 144 |
| 4–2 | General Case of Combined Stress | 144 |
| 4–3 | Stress Transformation | 145 |
| 4–4 | Mohr's Circle | 150 |
| 4–5 | Mohr's Circle Practice Problems | 157 |
| 4–6 | Mohr's Circle for Special Stress Conditions | 159 |
| 4–7 | Analysis of Complex Loading Conditions | 164 |
| Reference | | 164 |
| Internet Sites Related to Stress Transformation | | 164 |
| Problems | | 165 |
| 5 Design for Different Types of Loading 166 | | |
| The Big Picture 166 | | |
| You Are the Designer 168 | | |
| 5–1 | Objectives of This Chapter | 168 |
| 5–2 | Types of Loading and Stress Ratio | 168 |
| 5–3 | Failure Theories | 172 |
| 5–4 | Design for Static Loading | 173 |
| 5–5 | Endurance Limit and Mechanisms of Fatigue Failure | 175 |
| 5–6 | Estimated Actual Endurance Limit, s'_n | 178 |
| 5–7 | Design for Cyclic Loading | 185 |
| 5–8 | Recommended Design and Processing for Fatigue Loading | 188 |
| 5–9 | Design Factors | 189 |
| 5–10 | Design Philosophy | 189 |
| 5–11 | General Design Procedure | 191 |
| 5–12 | Design Examples | 193 |
| 5–13 | Statistical Approaches to Design | 203 |
| 5–14 | Finite Life and Damage Accumulation Method | 204 |
| References | | 207 |
| Internet Sites Related to Design | | 208 |
| Problems | | 208 |

6 Columns 217

| | | |
|---------------------------------|--|-----|
| The Big Picture 217 | | |
| 6–1 | Objectives of This Chapter | 218 |
| You Are the Designer 219 | | |
| 6–2 | Properties of the Cross Section of a Column | 219 |
| 6–3 | End Fixity and Effective Length | 220 |
| 6–4 | Slenderness Ratio | 221 |
| 6–5 | Long Column Analysis: The Euler Formula | 221 |
| 6–6 | Transition Slenderness Ratio | 222 |
| 6–7 | Short Column Analysis: The J. B. Johnson Formula | 223 |
| 6–8 | Column Analysis Spreadsheet | 226 |
| 6–9 | Efficient Shapes for Column Cross Sections | 227 |
| 6–10 | The Design of Columns | 229 |
| 6–11 | Crooked Columns | 232 |
| 6–12 | Eccentrically Loaded Columns | 233 |
| References 237 | | |
| Problems 237 | | |

PART 2 Design of a Mechanical Drive 241

7 Belt Drives, Chain Drives, and Wire Rope 244

| | | |
|---------------------------------|--|-----|
| The Big Picture 244 | | |
| You Are the Designer 246 | | |
| 7–1 | Objectives of This Chapter | 246 |
| 7–2 | Kinematics of Belt and Chain Drive Systems | 246 |
| 7–3 | Types of Belt Drives | 251 |
| 7–4 | V-Belt Drives | 252 |
| 7–5 | Synchronous Belt Drives | 262 |

- 7–6 Chain Drives 278
- 7–7 Wire Rope 292
- References 301
- Internet Sites Related to Belt Drives and Chain Drives 301
- Problems 302

8 Kinematics of Gears 304

- The Big Picture 304
- You Are the Designer 308
- 8–1 Objectives of This Chapter 308
- 8–2 Spur Gear Styles 309
- 8–3 Spur Gear Geometry-Involute-Tooth Form 309
- 8–4 Spur Gear Nomenclature and Gear-Tooth Features 311
- 8–5 Interference Between Mating Spur Gear Teeth 321
- 8–6 Internal Gear Geometry 322
- 8–7 Helical Gear Geometry 323
- 8–8 Bevel Gear Geometry 326
- 8–9 Types of Wormgearing 330
- 8–10 Geometry of Worms and Wormgears 332
- 8–11 Gear Manufacture 337
- 8–12 Gear Quality 340
- 8–13 Velocity Ratio and Gear Trains 343
- 8–14 Devising Gear Trains 351
- References 356
- Internet Sites Related to Kinematics of Gears 357
- Problems 357

9 Spur Gear Design 362

- The Big Picture 362
- You Are the Designer 363
- 9–1 Objectives of This Chapter 364
- 9–2 Concepts From Previous Chapters 364
- 9–3 Forces, Torque, and Power in Gearing 365
- 9–4 Introduction to Stress Analysis for Gears 374
- 9–5 Bending Stress in Gear Teeth 374
- 9–6 Contact Stress in Gear Teeth 387
- 9–7 Metallic Gear Materials 389
- 9–8 Selection of Gear Materials 393
- 9–9 Design of Spur Gears to Specify Suitable Materials for the Gears 400
- 9–10 Gear Design for the Metric Module System 405

- 9–11 Computer-Aided Spur Gear Design and Analysis 407
- 9–12 Use of the Spur Gear Design Spreadsheet 409
- 9–13 Power-Transmitting Capacity 412
- 9–14 Plastics Gearing 413
- 9–15 Practical Considerations for Gears and Interfaces with other Elements 418
- References 422
- Internet Sites Related to Spur Gear Design 423
- Problems 423

10 Helical Gears, Bevel Gears, and Wormgearing 428

- The Big Picture 428
- You Are the Designer 430
- 10–1 Objectives of This Chapter 430
- 10–2 Forces on Helical Gear Teeth 430
- 10–3 Stresses in Helical Gear Teeth 433
- 10–4 Pitting Resistance for Helical Gear Teeth 433
- 10–5 Design of Helical Gears 434
- 10–6 Forces on Straight Bevel Gears 439
- 10–7 Bearing Forces on Shafts Carrying Bevel Gears 441
- 10–8 Bending Moments on Shafts Carrying Bevel Gears 444
- 10–9 Stresses in Straight Bevel Gear Teeth 444
- 10–10 Forces, Friction, and Efficiency in Wormgear Sets 456
- 10–11 Stress in Wormgear Teeth 461
- 10–12 Surface Durability of Wormgear Drives 461
- 10–13 Emerging Technology and Software for Gear Design 464
- References 466
- Internet Sites Related to Helical Gears, Bevel Gears, and Wormgearing 467
- Problems 467

11 Keys, Couplings, and Seals 470

- The Big Picture 470
- You Are the Designer 471
- 11–1 Objectives of This Chapter 471
- 11–2 Keys 471
- 11–3 Materials for Keys 476
- 11–4 Stress Analysis to Determine Key Length 476

| | | |
|-------|---|-----|
| 11–5 | Splines | 479 |
| 11–6 | Other Methods of Fastening Elements to Shafts | 482 |
| 11–7 | Couplings | 486 |
| 11–8 | Universal Joints | 494 |
| 11–9 | Other Means of Axial Location | 499 |
| 11–10 | Types of Seals | 502 |
| 11–11 | Seal Materials | 503 |
| | References | 505 |
| | Internet Sites for Keys, Couplings, and Seals | 505 |
| | Problems | 506 |

12 Shaft Design 509

| | | |
|-------|--|-----|
| | The Big Picture | 509 |
| | You Are the Designer | 510 |
| 12–1 | Objectives of This Chapter | 510 |
| 12–2 | Shaft Design Procedure | 510 |
| 12–3 | Forces Exerted on Shafts by Machine Elements | 513 |
| 12–4 | Stress Concentrations in Shafts | 516 |
| 12–5 | Design Stresses for Shafts | 517 |
| 12–6 | Shafts in Bending and Torsion Only | 520 |
| 12–7 | Shaft Design Examples—Bending and Torsion Only | 521 |
| 12–8 | Shaft Design Example—Bending and Torsion with Axial Forces | 529 |
| 12–9 | Spreadsheet Aid for Shaft Design | 533 |
| 12–10 | Shaft Rigidity and Dynamic Considerations | 534 |
| 12–11 | Flexible Shafts | 535 |
| | References | 535 |
| | Internet Sites for Shaft Design | 535 |
| | Problems | 536 |

13 Tolerances and Fits 546

| | | |
|------|--|-----|
| | The Big Picture | 546 |
| | You Are the Designer | 547 |
| 13–1 | Objectives of This Chapter | 547 |
| 13–2 | Factors Affecting Tolerances and Fits | 547 |
| 13–3 | Tolerances, Production Processes, and Cost | 548 |
| 13–4 | Preferred Basic Sizes | 550 |
| 13–5 | Clearance Fits | 551 |
| 13–6 | Interference Fits | 554 |
| 13–7 | Transition Fits | 555 |
| 13–8 | Stresses for Force Fits | 555 |
| 13–9 | General Tolerancing Methods | 557 |

| | | |
|-------|---|-----|
| 13–10 | Robust Product Design | 560 |
| | References | 560 |
| | Internet Sites Related to Tolerances and Fits | 561 |
| | Problems | 561 |

14 Rolling Contact Bearings 563

| | | |
|-------|---|-----|
| | The Big Picture | 563 |
| | You Are the Designer | 564 |
| 14–1 | Objectives of This Chapter | 565 |
| 14–2 | Types of Rolling Contact Bearings | 565 |
| 14–3 | Thrust Bearings | 567 |
| 14–4 | Mounted Bearings | 568 |
| 14–5 | Bearing Materials | 569 |
| 14–6 | Load/Life Relationship | 570 |
| 14–7 | Bearing Manufacturers' Data | 571 |
| 14–8 | Design Life | 575 |
| 14–9 | Bearing Selection: Radial Loads Only | 576 |
| 14–10 | Bearing Selection: Radial and Thrust Loads Combined | 576 |
| 14–11 | Bearing Selection from Manufacturers' Catalogs | 578 |
| 14–12 | Mounting of Bearings | 578 |
| 14–13 | Tapered Roller Bearings | 580 |
| 14–14 | Practical Considerations in the Application of Bearings | 582 |
| 14–15 | Importance of Oil Film Thickness in Bearings | 584 |
| 14–16 | Life Prediction under Varying Loads | 585 |
| 14–17 | Bearing Designation Series | 586 |
| | References | 586 |
| | Internet Sites Related to Rolling Contact Bearings | 587 |
| | Problems | 587 |

15 Completion of the Design of a Power Transmission 589

| | | |
|------|--|-----|
| | The Big Picture | 589 |
| 15–1 | Objectives of This Chapter | 590 |
| 15–2 | Description of the Power Transmission to be Designed | 590 |
| 15–3 | Design Alternatives and Selection of the Design Approach | 591 |
| 15–4 | Design Alternatives for the Gear-Type Reducer | 592 |
| 15–5 | General Layout and Design Details of the Reducer | 593 |

- 15–6 Final Design Details for the Shafts 605
- 15–7 Assembly Drawing 608
- References 611
- Internet Sites Related to Transmission Design 612

PART 3 Design Details and Other Machine Elements 613

16 Plain Surface Bearings 614

- The Big Picture 614
- You Are the Designer 616
- 16–1 Objectives of This Chapter 616
- 16–2 The Bearing Design Task 616
- 16–3 Bearing Parameter, $\mu n/p$ 617
- 16–4 Bearing Materials 618
- 16–5 Design of Boundary-Lubricated Bearings 619
- 16–6 Full-Film Hydrodynamic Bearings 624
- 16–7 Design of Full-Film Hydrodynamically Lubricated Bearings 625
- 16–8 Practical Considerations for Plain Surface Bearings 630
- 16–9 Hydrostatic Bearings 632
- 16–10 The Kugel Fountain—A Special Example of a Hydrostatic Bearing 635
- 16–11 Tribology: Friction, Lubrication, and Wear 635
- References 638
- Internet Sites Related to Plain Bearings and Lubrication 639
- Problems 640

17 Linear Motion Elements 641

- The Big Picture 641
- You Are the Designer 643
- 17–1 Objectives of This Chapter 644
- 17–2 Power Screws 644
- 17–3 Ball Screws 649
- 17–4 Application Considerations for Power Screws and Ball Screws 652
- References 652
- Internet Sites for Linear Motion Elements 653
- Problems 653

18 Springs 655

- The Big Picture 655
- You Are the Designer 656
- 18–1 Objectives of This Chapter 657
- 18–2 Kinds of Springs 657

- 18–3 Helical Compression Springs 659
- 18–4 Stresses and Deflection for Helical Compression Springs 666
- 18–5 Analysis of Spring Characteristics 667
- 18–6 Design of Helical Compression Springs 670
- 18–7 Extension Springs 677
- 18–8 Helical Torsion Springs 681
- 18–9 Improving Spring Performance by Shot Peening and Laser Peening 687
- 18–10 Spring Manufacturing 687
- References 688
- Internet Sites Related to Spring Design 688
- Problems 689

19 Fasteners 691

- The Big Picture 691
- You Are the Designer 692
- 19–1 Objectives of This Chapter 693
- 19–2 Bolt Materials and Strength 693
- 19–3 Thread Designations and Stress Area 695
- 19–4 Clamping Load and Tightening of Bolted Joints 696
- 19–5 Externally Applied Force on a Bolted Joint 698
- 19–6 Thread Stripping Strength 700
- 19–7 Other Types of Fasteners and Accessories 700
- 19–8 Other Means of Fastening and Joining 702
- References 702
- Internet Sites Related to Fasteners 703
- Problems 704

20 Machine Frames, Bolted Connections, and Welded Joints 705

- The Big Picture 705
- You Are the Designer 706
- 20–1 Objectives of This Chapter 706
- 20–2 Machine Frames and Structures 706
- 20–3 Eccentrically Loaded Bolted Joints 710
- 20–4 Welded Joints 712
- References 719
- Internet Sites for Machine Frames, Bolted Connections, and Welded Joints 720
- Problems 721

21 Electric Motors and Controls 723

- The Big Picture 723
 You Are the Designer 725
 21–1 Objectives of This Chapter 725
 21–2 Motor Selection Factors 725
 21–3 AC Power and General Information about AC Motors 726
 21–4 Principles of Operation of AC Induction Motors 727
 21–5 AC Motor Performance 728
 21–6 Three-Phase, Squirrel-Cage Induction Motors 729
 21–7 Single-Phase Motors 731
 21–8 AC Motor Frame Types and Enclosures 733
 21–9 Controls for AC Motors 735
 21–10 DC Power 742
 21–11 DC Motors 742
 21–12 DC Motor Control 744
 21–13 Other Types of Motors 744
 References 746
 Internet Sites for Electric Motors and Controls 746
 Problems 747

22 Motion Control: Clutches and Brakes 749

- The Big Picture 749
 You Are the Designer 751
 22–1 Objectives of This Chapter 751
 22–2 Descriptions of Clutches and Brakes 751
 22–3 Types of Friction Clutches and Brakes 751
 22–4 Performance Parameters 756
 22–5 Time Required to Accelerate or Decelerate a Load 758
 22–6 Inertia of a System Referred to the Clutch Shaft Speed 760
 22–7 Effective Inertia for Bodies Moving Linearly 761
 22–8 Energy Absorption: Heat-Dissipation Requirements 762
 22–9 Response Time 762
 22–10 Friction Materials and Coefficient of Friction 764
 22–11 Plate-Type Clutch or Brake 765
 22–12 Caliper Disc Brakes 767
 22–13 Cone Clutch or Brake 767

- 22–14 Drum Brakes 768
 22–15 Band Brakes 772
 22–16 Other Types of Clutches and Brakes 773
 References 775
 Internet Sites for Clutches and Brakes 775
 Problems 775

23 Design Projects 778

- 23–1 Objectives of This Chapter 778
 23–2 Design Projects 778

List of Appendices 781

- Appendix 1 Properties of Areas 782
 Appendix 2 Preferred Basic Sizes and Screw Threads 784
 Appendix 3 Design Properties of Carbon and Alloy Steels 787
 Appendix 4 Properties of Heat-Treated Steels 789
 Appendix 5 Properties of Carburized Steels 791
 Appendix 6 Properties of Stainless Steels 792
 Appendix 7 Properties of Structural Steels 793
 Appendix 8 Design Properties of Cast Iron—U.S. Units Basis 794
 Appendix 8A Design Properties of Cast Iron—SI Units Basis 795
 Appendix 9 Typical Properties of Aluminum 796
 Appendix 10–1 Properties of Die-Cast Zinc Alloys 797
 Appendix 10–2 Properties of Die-Cast Magnesium Alloys 797
 Appendix 11–1 Properties of Nickel-Based Alloys 798
 Appendix 11–2 Properties of Titanium Alloys 798
 Appendix 12 Properties of Bronzes, Brasses, and Other Copper Alloys 799
 Appendix 13 Typical Properties of Selected Plastics 800
 Appendix 14 Beam-Deflection Formulas 801
 Appendix 15 Commercially Available Shapes Used For Load-Carrying Members 809
 Appendix 16 Conversion Factors 829
 Appendix 17 Hardness Conversion Table 830
 Appendix 18 Stress Concentration Factors 831
 Appendix 19 Geometry Factor, I , for Pitting for Spur Gears 834

Answers to Selected Problems 837**Index 848**

PREFACE

The objective of this book is to provide the concepts, procedures, data, and decision analysis techniques necessary to design machine elements commonly found in mechanical devices and systems. Students completing a course of study using this book should be able to execute original designs for machine elements and integrate the elements into a system composed of several elements.

This process requires a consideration of the performance requirements of an individual element and of the interfaces between elements as they work together to form a system. For example, a gear must be designed to transmit power at a given speed. The design must specify the number of teeth, pitch, tooth form, face width, pitch diameter, material, and method of heat treatment. But the gear design also affects, and is affected by, the mating gear, the shaft carrying the gear, and the environment in which it is to operate. Furthermore, the shaft must be supported by bearings, which must be contained in a housing. Thus, the designer should keep the complete system in mind while designing each individual element. This book will help the student approach design problems in this way.

This text is designed for those interested in practical mechanical design. The emphasis is on the use of readily available materials and processes and appropriate design approaches to achieve a safe, efficient design. It is assumed that the person using the book will be the designer, that is, the person responsible for determining the configuration of a machine or a part of a machine. Where practical, all design equations, data, and procedures needed to make design decisions are specified.

It is expected that students using this book will have a good background in statics, strength of materials, college algebra, and trigonometry. Helpful, but not required, would be knowledge of kinematics, industrial mechanisms, dynamics, materials, and manufacturing processes.

Among the important features of this book are the following:

1. It is designed to be used at the undergraduate level in a first course in machine design.
2. The large list of topics allows the instructor some choice in the design of the course. The format is also appropriate for a two-course sequence and as a reference for mechanical design project courses.
3. Students should be able to extend their efforts into topics not covered in classroom instruction because explanations of principles are straightforward and include many example problems.

4. The practical presentation of the material leads to feasible design decisions and is useful to practicing designers.
5. The text advocates and demonstrates use of computer spreadsheets in cases requiring long, laborious solution procedures. Using spreadsheets allows the designer to make decisions and to modify data at several points within the problem while the computer performs all computations. See Chapter 6 on columns, Chapter 9 on spur gears, Chapter 12 on shafts, Chapter 13 on shrink fits, and Chapter 18 on spring design. Other computer-aided calculation software can also be used.
6. References to other books, standards, and technical papers assist the instructor in presenting alternate approaches or extending the depth or breadth of treatment.
7. Lists of Internet sites pertinent to topics in this book are included at the end of most chapters to assist readers in accessing additional information or data about commercial products.
8. In addition to the emphasis on original design of machine elements, much of the discussion covers commercially available machine elements and devices, since many design projects require an optimum combination of new, uniquely designed parts and purchased components.
9. For some topics the focus is on aiding the designer in selecting commercially available components, such as rolling contact bearings, flexible couplings, ball screws, electric motors, belt drives, chain drives, wire rope, couplings, clutches, and brakes.
10. Computations and problem solutions use both the International System of Units (SI) and the U.S. Customary System (inch-pound-second) approximately equally. The basic reference for the usage of SI units is IEEE/ASTM-SI-10 *American National Standard for Metric Practice*. This document is the primary American National Standard on application of the metric system.
11. Extensive appendices are included along with detailed tables in many chapters to help the reader to make real design decisions, using only this text. Several appendix tables feature commercially available structural shapes in both larger and smaller sizes and many in purely metric dimensions are included in this edition to give instructors and students many options for completing design problems.

MECHANICAL DESIGN SOFTWARE

The design of machine elements inherently involves extensive procedures, complex calculations, and many design decisions. Data must be found from numerous charts and tables. Furthermore, design is typically iterative, requiring the designer to try several options for any given element, leading to the repetition of design calculations with new data or new design decisions. This is especially true for complete mechanical devices containing several components as the interfaces between components are considered. Changes to one component often require changes to mating elements. Use of spreadsheets, computational software, and computer-aided mechanical design software can facilitate the design process by performing many of the tasks while leaving the major design decisions to the creativity and judgment of the designer or engineer.

We emphasize that users of computer software must have a solid understanding of the principles of design and stress analysis to ensure that design decisions are based on reliable foundations. We recommend that the software be used only after mastering a given design methodology by careful study and using manual techniques.

The strong movement in the United States and other industrialized countries toward global sourcing of materials and products and the use of multinational design teams makes the use of commercial software highly valuable during the lifelong career of designers and engineers. Furthermore, the specification of commercially available machine components and systems typically involves the use of manufacturers' software built into company Internet sites. This book provides guidance on the use of such sites as an integral part of the machinery design process.

FEATURES OF THE SIXTH EDITION

The practical approach to designing machine elements in the context of complete mechanical designs is retained and refined in this edition. An extensive amount of updating has been accomplished through the inclusion of new photographs of commercially available machine components, new design data for some elements, new or revised standards, new end-of-chapter references, listings of Internet sites, and some completely new elements. Full color has been used for the first time to enhance the visual attractiveness of the book and to highlight prominent features of charts, graphs, and technical illustrations. Numerous, highly detailed, full-color new drawings have been added or have replaced drawings used in previous editions.

The following list summarizes the primary features and the updates.

1. The three-part structure that was introduced in the third edition has been maintained.
 - Part I (Chapters 1–6) focuses on reviewing and upgrading readers' understanding of design philosophies, the principles of strength of materials, the design properties of materials, combined stresses, design for different types of loading, and the analysis and design of columns.
 - Part II (Chapters 7–15) is organized around the concept of the design of a complete power-transmission system, covering some of the primary machine elements such as belt drives, chain drives, wire rope, gears, shafts, keys, couplings, seals, and rolling contact bearings. These topics are tied together to emphasize both their interrelationships and their unique characteristics. Chapter 15, **Completion of the Design of a Power Transmission**, is a guide through detailed design decisions such as the overall layout, detail drawings, tolerances, and fits. Several new, full-color drawings for an example of a gear-type speed reducer have been added to aid students' perception and understanding of how individual machine elements are designed, assembled, and operated together. The representation of the complete single-reduction gear drive at the end of Chapter 15 has been significantly upgraded, aiding students' understanding of how to translate design analysis, decision-making about component details, and commercially available components into a complete assembly.
 - Part III (Chapters 16–22) presents methods of analysis and design of several important machine elements that were not pertinent to the design of a power transmission. These chapters can be covered in any order or can be used as reference material for general design projects. Covered here are plain surface bearings, linear motion elements, fasteners, springs, machine frames, bolted connections, welded joints, electric motors, controls, clutches, and brakes.
2. The **Big Picture**, **You Are the Designer**, and **Objectives** features introduced in earlier editions are maintained and refined. Feedback about these features from users, both students and instructors, have been enthusiastically favorable. They help readers to draw on their own experiences and to appreciate what competencies they will acquire from the study of each chapter. Constructivist theories of learning espouse this approach.
3. Lists of Internet sites and printed references have been updated and edited in every chapter. Many new entries have been added. The extensive lists of such resources are useful to students, instructors, and practicing engineers to extend their understanding of concepts beyond this book and to access the huge

potential of the Internet as a source of information about practical design methods and commercially available products.

4. Some of the new or updated topics from individual chapters are summarized here.

- In Chapter 1, **The Nature of Mechanical Design**, first ten figures showing a variety of mechanical devices and machinery have been replaced with new, full-color images to enhance students' perceptions of the details of many types of equipment. Two of these new images show production machinery designed by one of the new coauthors of this book.
- Chapter 2, **Materials in Mechanical Design**, continues to emphasize the specification and use of appropriate materials, building on prior courses in metallurgy, materials, and processes. Extensive tables listing materials commonly used in commercially available shapes are included. To serve the global nature of machine design, an extensive table of designations for steel and aluminum alloys from several countries is included. Designations for steel alloys continue to use the SAE numbering system. The discussion of heat treating of steels continues to focus on quenching and tempering along with case hardening to give students an appreciation of the wide range of properties that any given material can have and the importance of being able to specify pertinent heat treatment requirements. Descriptions of white iron, powder metals, aluminum casting and forging alloys, magnesium, nickel-based alloys, titanium alloys, and brasses and bronzes are included. The extensive discussion of advanced engineering composites includes SI data, nanocomposites, and design approaches, continuing to provide students with basic concepts that can lead to novel applications of composite materials to machine design. Materials selection using decision analysis techniques has been refined.
- Chapter 3, **Stress and Deformation Analysis**, has been reorganized with some section titles revised, bringing an improved order of coverage. The objective of the update is to clarify how the external loading, such as direct normal force, direction shear force, torsion/torque, and bending moment can produce normal and shear stresses on a stress element.
- Graphs of stress concentration factors have been returned to the Appendix, allowing students to apply them in most problem-solving exercises in this book. However, information about other print and easily-accessible Internet sources for K_t values remain, giving instructors and students the opportunity to apply a wider scope of design data.
- Chapter 4, **Combined Stresses and Stress Transformation**, has been revised to show that a stress element is always 3-dimensional (3D). Resulting from some loading condition, the stresses on a 3D element, however, can be in 1D or 2D stress state. That is, the values of stress components in certain direction(s) can be zero. This concept is presented to assist readers in analyzing 3D combined loading and combined stress problems. A major change in this chapter is that, while the Mohr's circle technique is used for 1D or 2D stress transformation, the resulting stress element is presented in 3D, having one or two principal stresses equal to zero. The 3D approach can help readers to visualize the stress state of a point (a stress element) at the location of interest.
- The contents of Chapter 5, **Design for Different Types of Loading**, have been reorganized and a brief discussion of failure theories has been added, extending the revisions discussed for Chapters 3 and 4. The design methods for static loading and cyclic loading are now clearly identified in different sections. All stress elements in the Design Examples are 3D elements, while recognizing that some elements are in a 1D or 2D stress state. For failure prediction, a unified approach based on the evaluation of principal stresses against material properties is presented. The 3D approach is also used in mean and alternating stresses calculation when dealing with fatigue failure in cyclic loading condition. Continuing from the 5th edition, are discussions of endurance strength, recommended design and processing approaches under fatigue load, the Smith Diagram approach for showing the effect of mean stress on fatigue, and the damage accumulation method for varying stress amplitudes.
- In Chapter 7, **Belt Drives, Chain Drives, and Wire Rope**, significant new material on synchronous belt drive designs in both SI and U.S. units has been added. Common metric sizes for V-belts, synchronous belts, chains, and sprockets are included. The new section on wire rope complements the former parts of this chapter with information that can be applied to lifting equipment and industrial machinery for which flexible tensile elements are needed.
- Chapter 8, **Kinematics of Gears**, continues to emphasize the geometry of U. S. and metric module-type gearing and has an integrated discussion of spur, helical, bevel, and wormgearing. A useful table for calculating key geometric features of gears and gear teeth aids problem solving and design decisions. Discussions of velocity ratios, train values, and devising gear trains have been refined and new, detailed, color drawings are included.

- Chapter 9, **Spur Gear Design**, continues to be refined in its use of AGMA standards along with the metric module system. The arrangement of sections has been modified for smoother coverage of the various aspects of gear design. Additional example problems illustrate different approaches to the design process. Topics covering gear lubricants and typical viscosity grades are included.
- Chapter 10, **Helical Gears, Bevel Gears, and Wormgearing**, has been updated along similar lines as discussed for Chapter 9 on Spur Gear Design.
- In Chapter 11, **Keys, Couplings, and Seals**, new information is provided for selecting flexible couplings and universal joints.
- In Chapter 12, **Shaft Design**, the highly regarded procedure for the design of a shaft has been continued. Coverage of the torque capacity of selected flexible shaft sizes continues.
- In Chapter 14, **Rolling Contact Bearings**, the bearing selection procedure has been closely tied to the use of manufacturers' data and the specific procedures outlined on their Internet sites, listed at the end of the chapter. This permits the use of a wide variety of sources and types of bearings as is done in practical mechanical design. Sample data are included in the chapter to introduce students to the variables involved in bearing selection and the types of analysis required to specify optimal bearings. An extensive discussion of bearing materials is included for steels, ceramics, Monel, titanium/nickel alloys, and plastics to emphasize the importance of specifying materials that meet application requirements.
- Chapter 16, **Plain Surface Bearings**, includes sample data on *pV* factors for boundary-lubricated bearings and common lubricants, along with the analysis of plain bearing performance under oscillating motion. Coverage of topics such as hydrodynamic and hydrostatic bearings continues. An intriguing new example of the application of boundary lubrication, called the Kugel Fountain, has been added.
- In Chapter 17, **Linear Motion Elements**, new information about high-speed linear actuators has been added to the discussion of power screws and ball screw drives.
- Chapter 18 on **Springs**, Chapter 19 on **Fasteners**, and Chapter 20, **Frames, Bolted Connections, and Welded Joints** provide useful information about components and analysis techniques used in many types of machinery.
- Chapter 21 **Electric Motors and Controls**, and Chapter 22, **Motion Control: Clutches and Brakes**, assist the mechanical designer in specifying electrical drive systems and electrical and mechanical controls for a wide variety of applications.
- The Appendix has an extensive set of tables for material properties of steels, cast irons, aluminum alloys, zinc and magnesium alloys, plastics, nickel-based alloys, titanium alloys, bronzes, brasses, and other copper alloys. Several tables of data are included for section properties of commercially available shapes in larger and smaller sizes and in pure metric dimensions to provide a wide array of choices for problem-solving and design. Appendixes for beam deflection formulas, conversion factors, and hardness assist students as they study multiple chapters. Ten charts for stress concentration factors have been returned to the book in a revised order that is related to the manner of loading; tension, bending, and torsion.

INTRODUCING TWO NEW CO-AUTHORS:

For the first five editions of this book, the sole author was Robert L. Mott. For this new 6th edition, two outstanding co-authors have contributed to a great extent in updating and upgrading the content, and enhancing the appearance of the book. Their brief biographies are mentioned below. For those using this book and who may not know Professor Mott, his brief biography follows:

Robert L. Mott is Professor Emeritus of Engineering Technology at the University of Dayton. He is a member of ASEE, SME, and ASME. He is a Fellow of ASEE and a recipient of the ASEE James H. McGraw Award and the Archie Higdon Distinguished Educator Award from the Mechanics Division. He is a recipient of the SME Education Award for his contributions to manufacturing education. He holds the Bachelor of Mechanical Engineering degree from General Motors Institute (Now Kettering University) and the Master of Science in Mechanical Engineering from Purdue University. He has authored three textbooks; *Applied Fluid Mechanics* 7th ed. (2015) and *Machine Elements in Mechanical Design* 6th ed. (2018), published by Pearson; *Applied Strength of Materials* 6th ed. (2017) published by CRC Press. His work experience includes serving as a research engineer for General Motors Corporation, consulting for industrial clients, working for the University of Dayton Research Institute (UDRI), leading the Center for Advanced Manufacturing for UDRI, and serving as an expert witness for accident analysis cases for industrial and automotive accidents. He also served for 12 years as one of the senior personnel for the NSF-sponsored National Center for Manufacturing Education based in Dayton, Ohio.

Edward M. Vavrek is an Associate Professor in Mechanical Engineering Technology at Purdue University Northwest, located at the Westville, IN campus, an extension of Purdue University. He is a member of AGMA, ASME, and ASEE. He received his Bachelor of Science in

Mechanical Engineering from Purdue University Calumet, Masters in Business Administration from Indiana University Northwest, and Masters in Mechanical and Aeronautical Engineering from the Illinois Institute of Technology. He has significant industrial experience in design and development of machinery, using SolidWorks and Inventor, within the printing/converting, shipbuilding, railroad, steel mill, and automotive industries. He has presented multiple papers on his software developed for the area of machine design. He holds one U.S. patent. He also does extensive private consulting in mechanical design that is highly relevant to the content of this book.

Dr. Jyhwen Wang, Ph.D. is a Professor with dual appointment in the departments of Engineering Technology and Industrial Distribution and Mechanical Engineering at Texas A&M University in College Station, TX. He holds the degrees of Ph.D. in Mechanical Engineering and Master of Engineering in Manufacturing

Engineering from Northwestern University in Evansville, IL, the M.S. in Industrial Engineering and Operations Research from Syracuse University in Syracuse, NY, and the B.S. in Industrial Engineering from Tung-hai University in Taichung, Taiwan. He has significant industrial experience with Weirton Steel Corporation in Weirton, West Virginia along with consulting for several organizations. He has participated in funded research and education projects as PI or Co-PI. He is a Fellow of the American Society of Mechanical Engineers and the Society of Manufacturing Engineers. Professional society memberships include ASME, ASEE, SME, NAMRI/SME (North American Manufacturing Research Institute), and NADDRG (North American Deep Drawing Research Group). He has written book sections for *Manufacturing Processes for Engineering Materials*, (2003) and *Manufacturing Engineering and Technology*, (2001) by Kalpakjian and Schmid published by Pearson.

This page intentionally left blank

ACKNOWLEDGMENTS

Our appreciation is extended to all those who provided helpful suggestions for improvements to this book. We thank the editorial staff of Pearson, those who provided illustrations, and the many users of the book, both instructors and students, with whom we have had discussions. Special appreciation goes to our colleagues at the University of Dayton, Purdue University, and Texas A&M University. We would like to thank Amit Banerjee, The Pennsylvania State University; Michael DeVore, Cincinnati State Technical and Community College; Dexter Hulse, University of Cincinnati; Scott Kessler, Colorado Mesa University;

and Zhongming Liang, Indiana Purdue University Fort Wayne, for their helpful reviews of this revision. We also thank those who provided thoughtful reviews of prior editions. We especially thank our students—past and present—for their encouragement and positive feedback about this book. All three co-authors extend sincere gratitude to our wives, children, and parents who provided unwavering support, patience, and inspiration as we prepared the new 6th edition of this book.

Robert L. Mott, Edward M. Vavrek, Jyhwen Wang

This page intentionally left blank

PRINCIPLES OF DESIGN AND STRESS ANALYSIS

As you complete the first six chapters of this book, you will gain an understanding of design philosophies, and you will build on earlier-learned principles of strength of materials, materials science, and manufacturing processes. The competencies gained from these chapters are useful throughout the book and in general machine design or product design projects.

Chapter 1: The Nature of Mechanical Design helps you see the big picture of the process of mechanical design. Several examples are shown from different industry sectors: Consumer products, manufacturing systems, construction equipment, agricultural equipment, transportation equipment, ships, and space systems. The responsibilities of designers are discussed, along with an illustration of the iterative nature of the design process. Units and conversions structural shapes, screw threads, and preferred basic sizes complete the chapter.

Chapter 2: Materials in Mechanical Design emphasizes the design properties of materials. Much of this chapter is probably review for you, but it is presented here to emphasize the importance of material selection to the design process and to explain the data for materials presented in the Appendices.

Chapter 3: Stress and Deformation Analysis is a review of the basic principles of stress and deflection analysis. It is essential that you understand the basic concepts summarized here before proceeding with later material. Reviewed are direct tensile, compressive, and shearing stresses; bending stresses; and torsional shear stresses.

Chapter 4: Combined Stresses and Stress Transformations is important because many general design problems and the design of machine elements covered in later chapters of the book involve combined stresses. You may have covered these topics in a course in strength of materials.

Chapter 5: Design for Different Types of Loading is an in-depth discussion of design factors, fatigue, and many of the details of stress analysis as used in this book.

Chapter 6: Columns discusses the long, slender, axially loaded members that tend to fail by buckling rather than by exceeding the yield, ultimate, or shear stress of the material. Special design and analysis methods are reviewed here.

THE NATURE OF MECHANICAL DESIGN

The Big Picture

You Are the Designer

- 1–1 Objectives of This Chapter
- 1–2 The Design Process
- 1–3 Skills Needed in Mechanical Design
- 1–4 Functions, Design Requirements, and Evaluation Criteria
- 1–5 Example of the Integration of Machine Elements into a Mechanical Design
- 1–6 Computational Aids
- 1–7 Design Calculations
- 1–8 Preferred Basic Sizes, Screw Threads, and Standard Shapes
- 1–9 Unit Systems
- 1–10 Distinction among Weight, Force, and Mass

THE BIG PICTURE

The Nature of Mechanical Design

Discussion Map

- To design mechanical components and devices, you must be competent in the design of individual elements that comprise the system.
- But you must also be able to integrate several components and devices into a coordinated, robust system that meets your customer's needs.

Discover

Think, now, about the many fields in which you can use mechanical design:

What are some of the products of those fields?

What kinds of materials are used in the products?

What are some of the unique features of the products?

How were the components made?

How were the parts of the products assembled?

Consider consumer products, construction equipment, agricultural machinery, manufacturing systems, and transportation systems on the land, in the air, in space, and on and under water.

In this book, you will find the tools to learn the principles of ***Machine Elements in Mechanical Design***.

Design of machine elements is an integral part of the larger and more general field of mechanical design. Designers and design engineers create devices or systems to satisfy specific needs. Mechanical devices typically involve moving parts that transmit power and accomplish specific patterns of motion. Mechanical systems are composed of several mechanical devices.

Therefore, to design mechanical devices and systems, you must be competent in the design of individual machine elements that comprise the system. But you must also be able to integrate several components and

devices into a coordinated, robust system that meets your customer's needs. From this logic comes the name of this book, ***Machine Elements in Mechanical Design***.

Think about the many fields in which you can use mechanical design. Discuss these fields with your instructor and with your colleagues who are studying with you. Talk with people who are doing mechanical design in local industries. Try to visit their companies if possible, or meet designers and design engineers at meetings of professional societies. Consider the following fields where mechanical products are designed and produced.


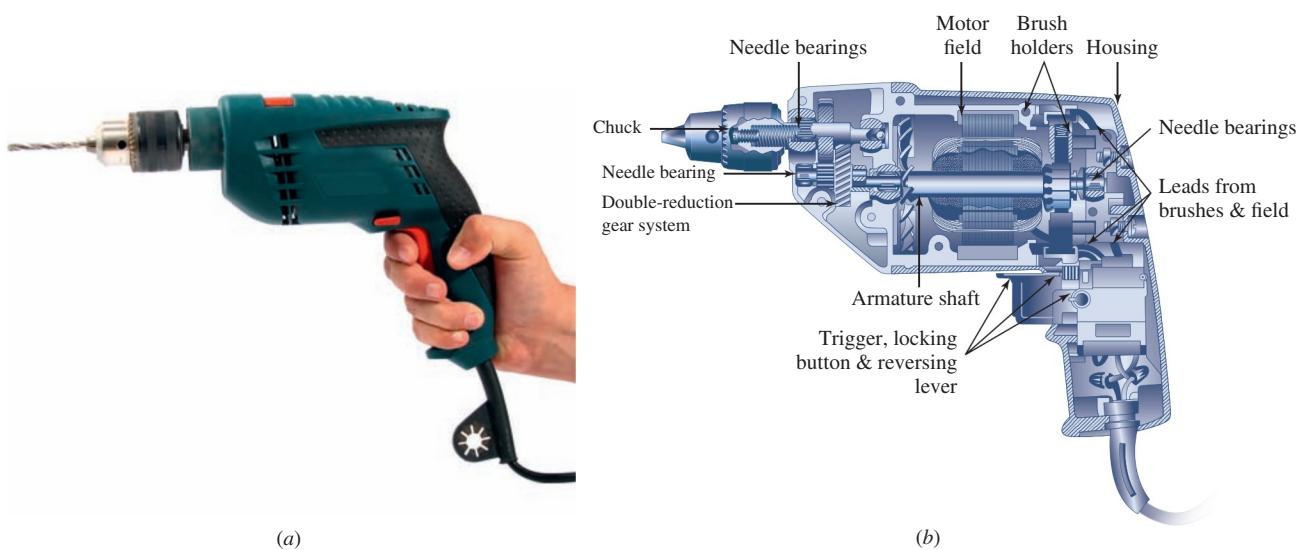


FIGURE 1-1 (a) Hand-held power drill (b) Cutaway view of a hand drill


- **Consumer products:** Household appliances (can openers, food processors, mixers, toasters, vacuum cleaners, clothes washers), lawn mowers, chain saws, power tools, garage door openers, air-conditioning systems, and many others. See Figures 1-1 and 1-2 for a few examples of commercially available products.
- **Manufacturing systems:** Material handling devices, conveyors, cranes, transfer devices, industrial robots, machine tools, automated assembly systems, special-purpose processing systems, forklift trucks, and packaging equipment. See Figures 1-3 and 1-4.
- **Construction equipment:** Tractors with front-end loaders or backhoes, cranes, power shovels, earthmovers, graders, dump trucks, road pavers, concrete mixers, powered nailers and staplers, compressors, and many others. See Figures 1-5 and 1-6.
- **Agricultural equipment:** Tractors, harvesters (for corn, wheat, tomatoes, cotton, fruit, and many other crops), rakes, hay balers, plows, disc harrows, cultivators, and conveyors. See Figures 1-6, 1-7, and 1-8.
- **Transportation equipment:** (a) Automobiles, trucks, and buses, which include hundreds of mechanical devices such as suspension components (springs, shock absorbers, and struts); door and window operators; windshield wiper mechanisms; steering systems; hood and trunk latches and hinges; clutch and braking systems; transmissions; driveshafts; seat adjusters; and numerous parts of the engine systems. (b) Aircraft, which include retractable landing gear, flap and rudder actuators, cargo-handling devices, seat reclining mechanisms, dozens of latches, structural components, and door operators. See Figures 1-9 and 1-10.




FIGURE 1-2 Chain saw
(Shutterstock)

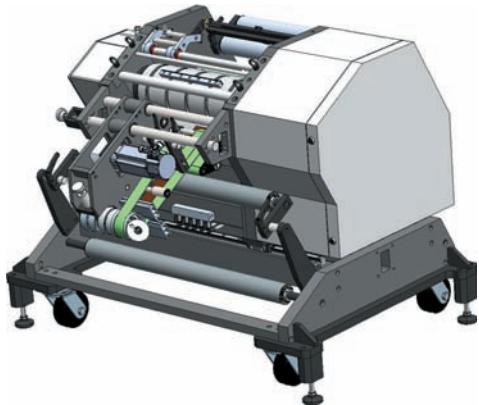


(a) Pictorial view with enclosures over mechanisms

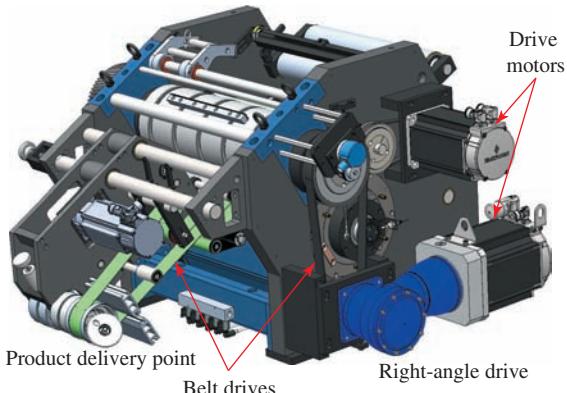

(b) Covers removed to show right side drive systems

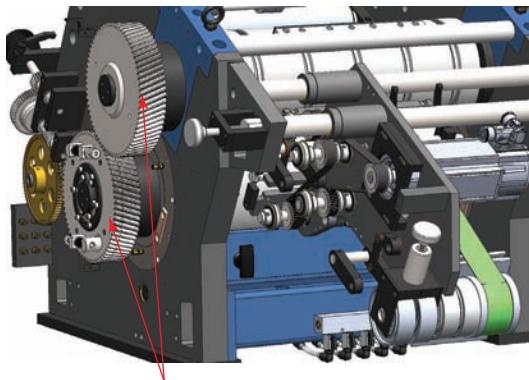

(c) Left side, viewed from front of machine

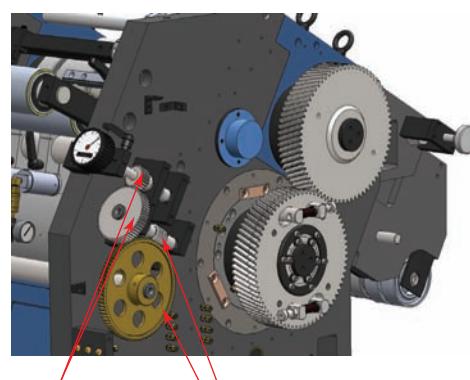

(d) Closer view of gear drives from left-rear

FIGURE 1–3 Closed end mailer for the printing industry

Created by Edward M. Vavrek for The Lettershop Group, Leeks, UK

- **Ships:** Winches to haul up the anchor, cargo-handling cranes, rotating radar antennas, rudder steering gear, drive gearing and driveshafts, and the numerous sensors and controls for operating on-board systems.
- **Space systems:** Satellite systems, the space shuttle, the space station, and launch systems, which contain numerous mechanical systems such as devices to deploy antennas, hatches, docking systems, robotic arms, vibration control devices, devices to secure cargo, positioning devices for instruments, actuators for thrusters, and propulsion systems.

How many examples of mechanical devices and systems can you add to these lists?

What are some of the unique features of the products in these fields?

What kinds of mechanisms are included?

What kinds of materials are used in the products?

How were the components made?

How were the parts assembled into the complete products?

In this book, you will find the tools to learn the principles of *Machine Elements in Mechanical Design*. In the introduction to each chapter, we include a brief scenario called *You Are the Designer*. The purpose of these scenarios is to stimulate your thinking about the material presented in the chapter and to show examples of realistic situations in which you may apply it.

Let's consider Figures 1–3 and 1–4 more closely to show specific examples of how coverage of machine elements relates directly to mechanical design.

Figure 1–3 shows a *closed end mailer* for the printing industry. It takes in bulk paper, forms it, cuts it, and delivers it to the user. Clearly shown are electric motor drives, a right-angle gearbox, a belt drive to rotate rollers, a helical gear pair, a spur gear pair, a worm/wormgear set, bearings, and several other types

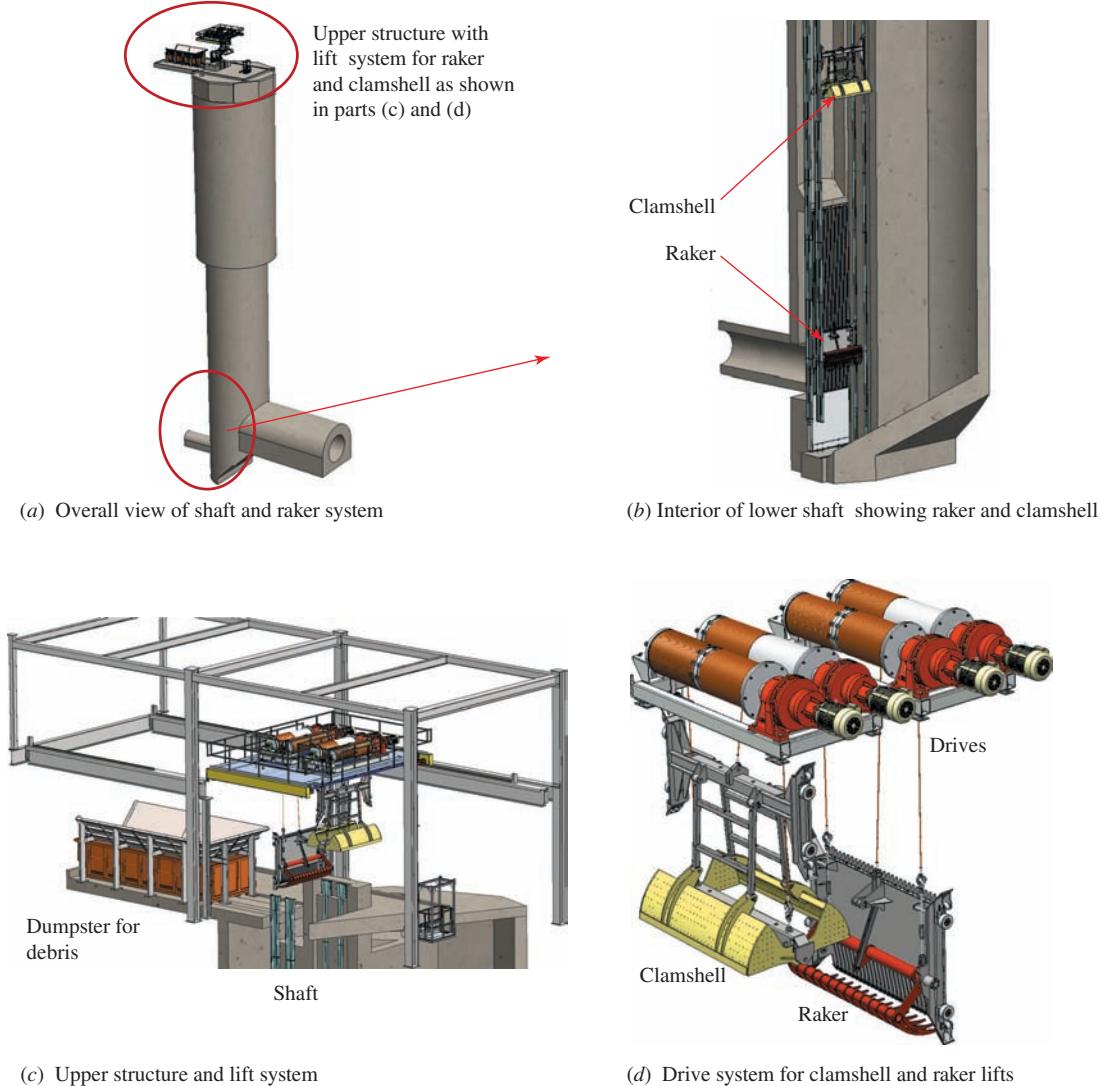


FIGURE 1–4 Raker and clamshell for a deep rock tunnel connector pumping station

Created by Edward M. Vavrek for Fairfield Service Company, Michigan City, IN



FIGURE 1–5 Construction crane on a building site
(Shutterstock)



FIGURE 1–6 Construction backhoe and front-end loader
(Shutterstock)



FIGURE 1–7 Corn harvester on a farm
(Shutterstock)



FIGURE 1–8 Heavy duty tractor for farm, highway construction, and commercial applications
(Shutterstock)



FIGURE 1–9 Aircraft showing open door and steps
(Shutterstock)



FIGURE 1–10 Landing gear for a large aircraft
(Shutterstock)

of mechanisms. Scan the chapter and section titles for this book to see how these topics are presented.

Figure 1–4 shows a huge system called *deep rock tunnel connector pumping system*. The vertical shaft is over 250 ft deep and it is part of a water storage system for a major city. Of most interest to this book is the mechanical drive system on the upper part of the shaft that lifts a raker system that separates

debris from a huge screen in the water flow path. The debris falls to the bottom of the shaft and the clam-shell device picks it up, raises it to the top of the shaft and then transports it horizontally to dispose it into a specially designed dumpster. The drive systems, wire-rope lifting systems, actuating mechanisms, transfer system, and other components are highly relevant to the topics presented in this book.

YOU ARE THE DESIGNER

Consider, now, that you are the designer responsible for the design of a new consumer product, such as the hand drill for a home workshop shown in Figure 1–1. What kind of technical preparation would you need to complete the design? What steps would you follow? What information would you need? How would you show, by calculation, that the design is safe and that the product will perform its desired function?

The general answers to these questions are presented in this chapter. As you complete the study of this book, you will learn about many design techniques that will aid in your design of a wide variety of machine elements. You will also learn how to integrate several machine elements into a mechanical system by considering the relationships between and among elements. ■

1-1 OBJECTIVES OF THIS CHAPTER

After completing this chapter, you will be able to:

1. Recognize examples of mechanical systems in which the application of the principles discussed in this book is necessary to complete their design.
2. List what design skills are required to perform competent mechanical design.
3. Describe the importance of integrating individual machine elements into a more comprehensive mechanical system.
4. Describe the main elements of the *product realization process*.
5. Write statements of *functions* and *design requirements* for mechanical devices.
6. Establish a set of criteria for evaluating proposed designs.
7. Work with appropriate units in mechanical design calculations both in the U.S. Customary Unit System and in SI metric units.
8. Distinguish between *force* and *mass*, and express them properly in both unit systems.
9. Present design calculations in a professional, neat, and orderly manner that can be understood and evaluated by others knowledgeable in the field of machine design.
10. Become acquainted with section properties of commercially available structural shapes and other tables of data in the Appendix of this book to aid in performing design and analysis tasks throughout the book.

1-2 THE DESIGN PROCESS

The ultimate objective of mechanical design is to produce a useful product that satisfies the needs of a customer and that is safe, efficient, reliable, economical, and practical to manufacture. Think broadly when answering the question, “Who is the customer for the product or system I am about to design?” Consider the following scenarios:

- **You are designing a can opener for the home market.** The ultimate customer is the person who will purchase the can opener and use it in the kitchen of a home. Other customers may include the designer of the packaging for the opener, the manufacturing staff who must produce the opener economically, and service personnel who repair the unit.
- **You are designing a piece of production machinery for a manufacturing operation.** The customers include the manufacturing engineer who is responsible for the production operation, the operator of the machine, the staff who install the machine, and the

maintenance personnel who must service the machine to keep it in good running order.

- **You are designing a powered system to open a large door on a passenger aircraft.** The customers include the person who must operate the door in normal service or in emergencies, the people who must pass through the door during use, the personnel who manufacture the opener, the installers, the aircraft structure designers who must accommodate the loads produced by the opener during flight and during operation, the service technicians who maintain the system, and the interior designers who must shield the opener during use while allowing access for installation and maintenance.

It is essential that you know the desires and expectations of all customers before beginning product design. Marketing professionals are often employed to manage the definition of customer expectations, but designers will likely work with them as a part of a product development team.

Numerous approaches are available that guide designers through the complete process of product design and methods for creating new, innovative products. Some are oriented toward large complex products such as aircraft, automobiles, and multifunction machine tools. It is advisable for a company to select one method that is suitable to their particular style of products or to create one that meets their special needs. The following discussion identifies the salient features of some of the approaches and the listed references and Internet sites provide more details. Some of the listed methods are applied in combination.

- **Axiomatic design.** See References 14, 15, and 18 and Internet site 8. Axiomatic design methods implement a process where developers think functionally first, followed by the innovative creation of the physical embodiment of a product to meet customer requirements along with the process needed to produce the product.
- **Quality function deployment (QFD).** See Reference 8 and Internet sites 9 and 10. QFD is a quality system that espouses understanding customer requirements and uses quality systems thinking to maximize positive quality that adds value. The process also includes use of the “House of Quality” matrix described in Reference 8.
- **Design for six sigma (DFSS).** See References 18–20 and Internet sites 11 and 16. The objective of Six Sigma Quality is to reduce output variation that will result in no more than 3.4 defective parts per million (PPM). The term *six sigma* or 6σ refers to a distribution of performance measures, in which products produced are within upper and lower specification limits that are six process standard deviations from the mean.
- **TRIZ.** See References 21–23 and Internet sites 12–15. TRIZ is an acronym for a Russian phrase that translates into English as “Theory of Inventive Problem

Solving.” Developed in 1946 in Russia by Genrich Altshuller and colleagues, the process is applied throughout the world to create and to improve products, services, and systems. TRIZ is a problem-solving method based on logic and data, not intuition, which accelerates the project team’s ability to solve problems creatively.

- **Total design.** See Reference 13. An integrated approach to product engineering using a systematic and disciplined process to create innovative products that satisfy customer needs.
- **The engineering design process—embodiment design.** See Reference 26. A comprehensive process involving need identification, concept selection, decision making, detail design, modeling and simulation, design for manufacturing, robust design, and several other elements.
- **Failure modes and effects analysis (FMEA).** See Reference 24 and Internet site 17. An analysis technique which facilitates the identification of potential problems in the design of a product by examining the effects of lower level failures. Recommended actions or compensating provisions are made to reduce the likelihood of the problem occurring or mitigating the risk if problems do occur. The process evolved from military and NASA procedures designed to enhance the reliability of products and systems. For many years, MIL STD 1629A defined accepted FMEA methods used in military and commercial industry. Even though that standard was cancelled, it remains the basis for much of the current work related to FMEA. MIL-Handbook-502A Product Support Analysis is now widely used. The prevalent standards in the automotive and aerospace industries are SAE J1739 and SAE TA-STD-0017, Product Support Analysis.
- **Product design for manufacture and assembly.** See Reference 27. A product design methodology with a heavy emphasis on how the components and the assembled product are to be manufactured to achieve a low-cost, high-quality design. Included are design for die casting, forging, powder metal processing, sheet metalworking, machining, injection molding, and many other processes.

It is also important to consider how the design process fits with all functions that must happen to deliver a satisfactory product to the customer and to service the product throughout its life cycle. In fact, it is important to consider how the product will be disposed of after it has served its useful life. The total of all such functions that affect the product is sometimes called the *product realization process* or *PRP*. (See References 3 and 10.) Some of the factors included in PRP are as follows:

- Marketing functions to assess customer requirements.
- Research to determine the available technology that can reasonably be used in the product.

- Availability of materials and components that can be incorporated into the product.
- Product design and development.
- Performance testing.
- Documentation of the design.
- Vendor relationships and purchasing functions.
- Consideration of global sourcing of materials and global marketing.
- Work-force skills.
- Physical plant and facilities available.
- Capability of manufacturing systems.
- Production planning and control of production systems.
- Production support systems and personnel.
- Quality systems requirements.
- Operation and maintenance of the physical plant.
- Distribution systems to get products to the customer.
- Sales operations and time schedules.
- Cost targets and other competitive issues.
- Customer service requirements.
- Environmental concerns during manufacture, operation, and disposal of the product.
- Legal requirements.
- Availability of financial capital.

Can you add to this list?

You should be able to see that the design of a product is but one part of a comprehensive process. In this book, we will focus more carefully on the design process itself, but the producibility of your designs must always be considered. This simultaneous consideration of product design and manufacturing process design is often called *concurrent engineering*. Note that this process is a subset of the larger list given previously for the product realization process. Other major books discussing general approaches to mechanical design are listed as References 6, 7, and 12–26.

1-3 SKILLS NEEDED IN MECHANICAL DESIGN

Product engineers and mechanical designers use a wide range of skills and knowledge in their daily work, including the following:

1. Sketching, technical drawing, and 2D and 3D computer-aided design.
2. Properties of materials, materials processing, and manufacturing processes.
3. Applications of chemistry such as corrosion protection, plating, and painting.
4. Statics, dynamics, strength of materials, kinematics, and mechanisms.

5. Oral communication, listening, technical writing, and teamwork skills.
6. Fluid mechanics, thermodynamics, and heat transfer.
7. Fluid power, the fundamentals of electrical phenomena, and industrial controls.
8. Experimental design, performance testing of materials and mechanical systems, and use of computer-aided engineering software.
9. Creativity, problem solving, and project management.
10. Stress analysis.
11. Specialized knowledge of the behavior of machine elements such as gears, belt drives, chain drives, shafts, bearings, keys, splines, couplings, seals, springs, connections (bolted, riveted, welded, adhesive), electric motors, linear motion devices, clutches, and brakes.

It is expected that you will have acquired a high level of competence in items 1–5 in this list prior to beginning the study of this text. The competencies in items 6–8 are typically acquired in other courses of study either before, concurrently, or after the study of design of machine elements. Item 9 represents skills that are developed continuously throughout your academic study and through experience. Studying this book will help you acquire significant knowledge and skills for the topics listed in items 10 and 11.

1-4 FUNCTIONS, DESIGN REQUIREMENTS, AND EVALUATION CRITERIA

Section 1–2 emphasized the importance of carefully identifying the needs and expectations of the customer prior to beginning the design of a mechanical device. You can formulate these by producing clear, complete statements of *functions*, *design requirements*, and *evaluation criteria*:

- **Functions** tell what the device must do, using general, nonquantitative statements that employ action phrases such as *to support a load*, *to lift a crate*, *to transmit power*, or *to hold two structural members together*.
- **Design requirements** are detailed, usually quantitative statements of *expected performance levels*, *environmental conditions in which the device must operate*, *limitations on space or weight*, or *available materials and components that may be used*.
- **Evaluation criteria** are statements of *desirable qualitative characteristics* of a design that assist the designer in deciding which alternative design is optimum—that is, the design that maximizes benefits while minimizing disadvantages.

Together these elements can be called the *specifications* for the design.

Most designs progress through a cycle of activities as outlined in Figure 1–11. You should typically propose more than one possible alternative design concept. This is where creativity is exercised to produce truly novel designs. Each design concept must satisfy the functions and design requirements. A critical evaluation of the desirable features, advantages, and disadvantages of each design concept should be completed. Then a rational decision analysis technique should use the evaluation criteria to decide which design concept is the optimum and, therefore, should be produced. See References 25 and 28 and Internet site 18.

The final block in the design flowchart is the detailed design, and the primary focus of this book is on that part of the overall design process. It is important to recognize that a significant amount of activity precedes the detailed design.

Note in Figure 1–11, that in many design projects there are reasons for returning to an earlier stage of the process outlined in Figure 1–11, based on discoveries made later in the process. After moving forward with proposing design concepts, you may discover that initial specifications or design requirements were unreasonable or that something was missing. Then you would return to Phase I to adjust the specifications. This process is called *iteration* and it is very typical in design projects. Other iterative steps are implied in the figure as well.

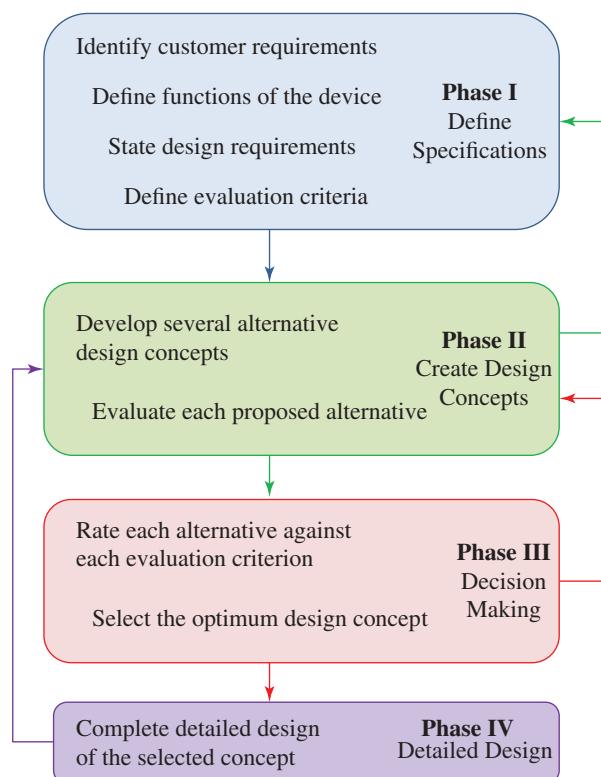


FIGURE 1–11 Steps in the product development and design process

Example of Functions, Design Requirements, and Evaluation Criteria

Consider that you are the designer of a speed reducer that is part of the power transmission for a small tractor. The tractor's engine operates at a fairly high speed, while the drive for the wheels must rotate more slowly and transmit a higher torque than is available at the output of the engine.

To begin the design process, let us list the *functions* of the speed reducer. What is it supposed to do? Some answers to this question are as follows:

Functions

1. To receive power from the tractor's engine through a rotating shaft.
2. To transmit the power through machine elements that reduce the rotational speed to a desired value.
3. To deliver the power at the lower speed to an output shaft that ultimately drives the wheels of the tractor.

Now the *design requirements* should be stated. The following list is hypothetical, but if you were on the design team for the tractor, you would be able to identify such requirements from your own experience and ingenuity and/or by consultation with fellow designers, marketing staff, manufacturing engineers, service personnel, suppliers, and customers.

The product realization process calls for personnel from all of these functions to be involved from the earliest stages of design.

Design Requirements

1. The reducer must transmit 15.0 hp.
2. The input is from a two-cylinder gasoline engine with a rotational speed of 2000 rpm.
3. The output delivers the power at a rotational speed in the range of 290 to 295 rpm.
4. A mechanical efficiency of greater than 95% is desirable.
5. The minimum output torque capacity of the reducer should be 3050 pound-inches ($\text{lb} \cdot \text{in}$).
6. The reducer output is connected to the driveshaft for the wheels of a farm tractor. Moderate shock will be encountered.
7. The input and output shafts must be in-line.
8. The reducer is to be fastened to a rigid steel frame of the tractor.
9. Small size is desirable. The reducer must fit in a space no larger than 20 in \times 20 in, with a maximum height of 24 in.
10. The tractor is expected to operate 8 hours (h) per day, 5 days per week, with a design life of 10 years.
11. The reducer must be protected from the weather and must be capable of operating anywhere in the United States at temperatures ranging from 0 to 130°F.

12. Flexible couplings will be used on the input and output shafts to prohibit axial and bending loads from being transmitted to the reducer.
13. The production quantity is 10 000 units per year.
14. A moderate cost is critical to successful marketing.
15. All government and industry safety standards must be met.

Careful preparation of function statements and design requirements will ensure that the design effort is focused on the desired results. Much time and money can be wasted on designs that, although technically sound, do not meet design requirements. Design requirements should include everything that is needed, but at the same time they should offer ample opportunity for innovation.

Evaluation criteria should be developed by all members of a product development team to ensure that the interests of all concerned parties are considered. Often weights are assigned to the criteria to reflect their relative importance.

Safety must always be the paramount criterion. Different design concepts may have varying levels of inherent safety in addition to meeting stated safety requirements as noted in the design requirements list. Designers and engineers are legally liable if a person is injured because of a design error. You must consider any reasonably foreseeable uses of the device and ensure safety of those operating it or those who may be close by.

Achieving a high overall performance should also be a high priority. Certain design concepts may have desirable features not present on others.

The remaining criteria should reflect the special needs of a particular project. The following list gives examples of possible evaluation criteria for the small tractor.

Evaluation Criteria

1. Safety (the relative inherent safety over and above stated requirements).
2. Performance (the degree to which the design concept exceeds requirements).
3. Ease of manufacture.
4. Ease of service or replacement of components.
5. Ease of operation.
6. Low initial cost.
7. Low operating and maintenance costs.
8. Small size and low weight.
9. Low noise and vibration; smooth operation.
10. Use of readily available materials and purchased components.
11. Prudent use of both uniquely designed parts and commercially available components.
12. Appearance that is attractive and appropriate to the application.

1-5 EXAMPLE OF THE INTEGRATION OF MACHINE ELEMENTS INTO A MECHANICAL DESIGN

Mechanical design is the process of designing and/or selecting mechanical components and putting them together to accomplish a desired function. Of course, machine elements must be compatible, must fit well together, and must perform safely and efficiently. The designer must consider not only the performance of the element being designed at a given time but also the elements with which it must interface.

To illustrate how the design of machine elements must be integrated with a larger mechanical design, let us consider the design of a speed reducer for the small tractor discussed in Section 1-4. Suppose that, to accomplish the speed reduction, you decide to design a double-reduction, spur gear reducer. You specify four gears, three shafts, six bearings, and a housing to hold the individual elements in proper relation to each other, as shown in the concept sketches in Figure 1-12.

The primary elements of the speed reducer in Figure 1-12 are:

1. The input shaft (shaft 1) is to be connected to the power source, a gasoline engine whose output shaft rotates at 2000 rpm. A flexible coupling is to be employed to minimize difficulties with alignment.
2. The first pair of gears, A and B, causes a reduction in the speed of the intermediate shaft (shaft 2) proportional to the ratio of the numbers of teeth in the gears. Gears B and C are both mounted to shaft 2 and rotate at the same speed.
3. A key is used at the interface between the hub of each gear and the shaft on which it is mounted to transmit torque between the gear and the shaft.

4. The second pair of gears, C and D, further reduces the speed of gear D and the output shaft (shaft 3) to the range of 290 to 295 rpm.
5. The output shaft is to carry a chain sprocket (not shown). The chain drive ultimately is to be connected to the drive wheels of the tractor.
6. Each of the three shafts is supported by two ball bearings, making them statically determinate and allowing the analysis of forces and stresses using standard principles of mechanics.
7. The bearings are held in a housing that is to be attached to the frame of the tractor. Note that the manner of holding each bearing is such that the inner race rotates with the shaft, while the outer race is held stationary.
8. Seals are shown on the input and output shafts to prohibit contaminants from entering the housing.
9. Other parts of the housing are shown schematically. Details of how the active elements are to be installed, lubricated, and aligned are only suggested at this stage of the design process to demonstrate feasibility. One possible assembly process could be as follows:
 - Start by placing the gears, keys, spacers, and bearings on their respective shafts.
 - Then insert shaft 1 into its bearing seat on the left side of the housing.
 - Insert the left end of shaft 2 into its bearing seat while engaging the teeth of gears A and B.
 - Install the center bearing support to provide support for the bearing at the right side of shaft 1.
 - Install shaft 3 by placing its left bearing into the seat on the center bearing support while engaging gears C and D.
 - Install the right side cover for the housing while placing the final two bearings in their seats.

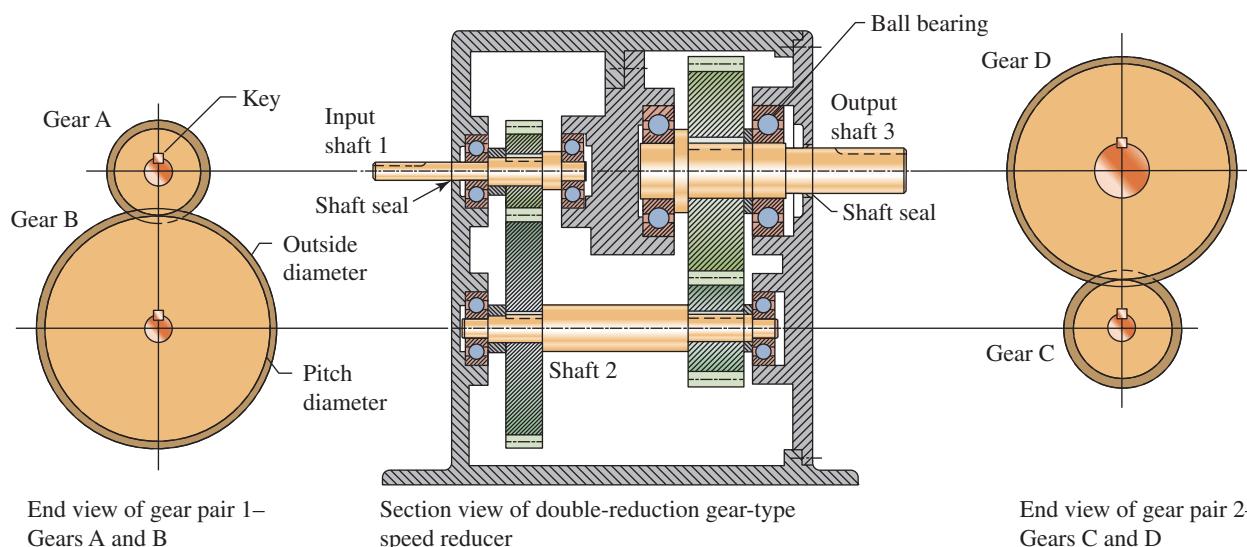


FIGURE 1-12 Conceptual design for a speed reducer

- Ensure careful alignment of the shafts.
- Place gear lubricant in the lower part of the housing.

Figures 9–29 to 9–31 show three examples of commercially available double-reduction gear reducers where you can see these details.

The arrangement of the gears, the placement of the bearings so that they straddle the gears, and the general configuration of the housing are also design decisions. The design process cannot rationally proceed until these kinds of decisions are made. Notice that the sketch of Figure 1–12 is where *integration* of the elements into a whole design begins. When the overall design is conceptualized, the design of the individual machine elements in the speed reducer can proceed. As each element is discussed, scan the relevant chapters of the book. Part II of this book, Chapters 7–15, provides details for design of the elements of the reducer. You should recognize that you have already made many design decisions by rendering such a sketch. First, you chose *spur gears* rather than helical gears, a worm and wormgear, or bevel gears. In fact, other types of speed-reduction devices—belt drives, chain drives, or many others—could be appropriate.

Gears

For the gear pairs, you must specify the number of teeth in each gear, the pitch (size) of the teeth, the pitch diameters, the face width, and the material and its heat treatment. These specifications depend on considerations of strength and wear of the gear teeth and the motion requirements (Chapters 8 and 9). You must also recognize that the gears must be mounted on shafts in a manner that ensures proper location of the gears, adequate torque transmitting capability from the gears to the shafts (as through keys), and safe shaft design.

Shafts

Having designed the gear pairs, you next consider the shaft design (Chapter 12). The shaft is loaded in bending and torsion because of the forces acting at the gear teeth. Thus, its design must consider strength and rigidity, and it must permit the mounting of the gears and bearings. Shafts of varying diameters may be used to provide shoulders against which to seat the gears and bearings. There may be keyseats cut into the shaft (Chapter 11). The input and output shafts will extend beyond the housing to permit coupling with the engine and the drive axle. The type of coupling must be considered, as it can have a dramatic effect on the shaft stress analysis (Chapter 11). Seals on the input and output shafts protect internal components (Chapter 11).

Bearings

Design of the bearings (Chapter 14) is next. If rolling contact bearings are to be used, you will probably select commercially available bearings from a manufacturer's

catalog, rather than design a unique one. You must first determine the magnitude of the loads on each bearing from the shaft analysis and the gear designs. The rotational speed and reasonable design life of the bearings and their compatibility with the shaft on which they are to be mounted must also be considered. For example, on the basis of the shaft analysis, you could specify the minimum allowable diameter at each bearing seat location to ensure safe stress levels. The bearing selected to support a particular part of the shaft, then, must have a bore (inside diameter) no smaller than the safe diameter of the shaft. Of course, the bearing should not be grossly larger than necessary. When a specific bearing is selected, the diameter of the shaft at the bearing seat location and allowable tolerances must be specified, according to the bearing manufacturer's recommendations, to achieve proper operation and life expectancy of the bearing.

Keys

Now the keys (Chapter 11) and the keyseats can be designed. The diameter of the shaft at the key determines the key's basic size (width and height). The torque that must be transmitted is used in strength calculations to specify key length and material. Once the working components are designed, the housing design can begin.

Housing

The housing design process must be both creative and practical. What provisions should be made to mount the bearings accurately and to transmit the bearing loads safely through the case to the structure on which the speed reducer is mounted? How will the various elements be assembled into the housing? How will the gears and bearings be lubricated? What housing material should be used? Should the housing be a casting, a weldment, or an assembly of machined parts?

The design process as outlined here implies that the design can progress in sequence: From the gears to the shafts, to the bearings, to the keys and couplings, and finally to the housing. It would be rare, however, to follow this logical path only once for a given design. Usually the designer must go back many times to adjust the design of certain components affected by changes in other components. This process, called *iteration*, continues until an acceptable overall design is achieved. Frequently prototypes are developed and tested during iteration.

Chapter 15 shows how all of the machine elements are finally integrated into a unit.

1–6 COMPUTATIONAL AIDS

Because of the usual need for several iterations and because many of the design procedures require long, complex calculations, spreadsheets, mathematical analysis software, computer programs, or programmable calculators are often useful in performing the design

analysis. Interactive spreadsheets or programs allow you, the designer, to make design decisions during the design process. In this way, many trials can be made in a short time, and the effects of changing various parameters can be investigated. Spreadsheets using Microsoft Excel are used most frequently as examples in this book for computer-aided design and analysis calculations.

Spreadsheets, and commercial software must be used carefully and it is recommended that the following statements guide your use of such aids:

- *Users of computer software and calculation aids must have a solid understanding of the relevant principles of design and stress analysis to ensure that design decisions are based on reliable foundations.*
- *Software should be used only after mastering a given design methodology by careful study and practicing manual techniques.*

Examples of commercially available mechanical design software are listed as Internet Sites 4–6 and 19. Internet sites for later chapters include several additional sources for software.

1-7 DESIGN CALCULATIONS

As you study this book and as you progress in your career as a designer, you will make many design calculations. It is important to record the calculations neatly, completely, and in an orderly fashion. You may have to explain to others how you approached the design, which data you used, and which assumptions and judgments you made. In some cases, someone else will actually check your work when you are not there to comment on it or to answer questions. Also, an accurate record of your design calculations is often useful if changes in design are likely. In all of these situations, you are going to be asked to communicate your design to someone else in written and graphic form.

To prepare a careful design record, you will usually take the following steps:

1. Identify the machine element being designed and the nature of the design calculation.
2. Draw a sketch of the element, showing all features that affect performance or stress analysis.
3. Show in a sketch the forces acting on the element (the free-body diagram), and provide other drawings to clarify the actual physical situation.
4. Identify the kind of analysis to be performed, such as stress due to bending, deflection of a beam, buckling of a column, and so on.
5. List all given data and assumptions.
6. Write the formulas to be used in symbol form, and clearly indicate the values and units of the variables involved. If a formula is not well known to a potential reader of your work, give the source. The reader may want to refer to it to evaluate the appropriateness of the formula.

7. Solve each formula for the desired variable.
8. Insert data, check units, and perform computations.
9. Judge the reasonableness of the result.
10. If the result is not reasonable, change the design decisions and recompute. Perhaps a different geometry or material would be more appropriate.
11. When a reasonable, satisfactory result has been achieved, specify the final values for all important design parameters, using standard sizes, convenient dimensions, readily available materials, and so on.

Figure 1–13 shows a sample design calculation. A beam is to be designed to span a 60-in pit to support a large gear weighing 2050 pounds (lb). The design assumes that a rectangular shape is to be used for the cross section of the beam. Other practical shapes could have been used. The objective is to compute the required dimensions of the cross section, considering both stress and deflection. A material for the beam is also chosen. Refer to Chapter 3 for a review of stress due to bending.

1-8 PREFERRED BASIC SIZES, SCREW THREADS, AND STANDARD SHAPES

One responsibility of a designer is to specify the final dimensions for load-carrying members. After completing the analyses for stress and deformation (strain), the designer will know the minimum acceptable values for dimensions that will ensure that the member will meet performance requirements. The designer then typically specifies the final dimensions to be standard or convenient values that will facilitate the purchase of materials and the manufacture of the parts. This section presents some guides to aid in these decisions and specifications.

Preferred Basic Sizes

Table A2–1 lists preferred basic sizes for fractional-inch, decimal-inch, and metric sizes.¹ You should choose one of these preferred sizes as the final part of your design. An example is at the end of the sample design calculation shown in Figure 1–13. You may, of course, specify another size if there is a sound functional reason.

American Standard Screw Threads

Threaded fasteners and machine elements having threaded connections are manufactured according to standard dimensions to ensure interchangeability of parts and to permit convenient manufacture with standard machines and tooling. Table A2–2 gives the dimensions of American

¹Throughout this book, some references to tables and figures have the letter A included in their numbers; these tables and figures are in the appendices in the back of the book. For example, Table A2–1 is the first table in Appendix 2; Figure A15–4 is the fourth figure in Appendix 15. These tables and figures are clearly identified in their captions in the appendices.

DESIGN OF A BAR TO SUPPORT A GEAR IN A SOAKING PIT

BAR IS TO BE 60 IN LONG BETWEEN SUPPORTS
GEAR WEIGHT 2050 LB
HANGERS TO BE 24 IN APART

BAR IS A BEAM IN BENDING

$$\textcircled{1} \quad \sigma = M/S$$

ASSUME A RECTANGULAR SHAPE

S = SECTION MODULUS

$$S = th^2/6$$

LET $h \approx 3t$

$$\text{THEN } S = t(3t)^2/6 = 9t^3/6$$

$$S = 1.5 t^3$$

$$\textcircled{2} \quad \text{REQUIRED } t = \sqrt[3]{S/1.5}$$

TRY SAE 1040 HR STEEL BAR



$$S_y = 42000 \text{ PSI (YIELD STRENGTH)}$$

LET $\sigma = \sigma_d = S_y/N = \text{DESIGN STRESS}$

N = DESIGN FACTOR

LET $N = 2$ (DEAD LOAD)

$$\sigma_d = 42000/2 = 21000 \text{ PSI}$$

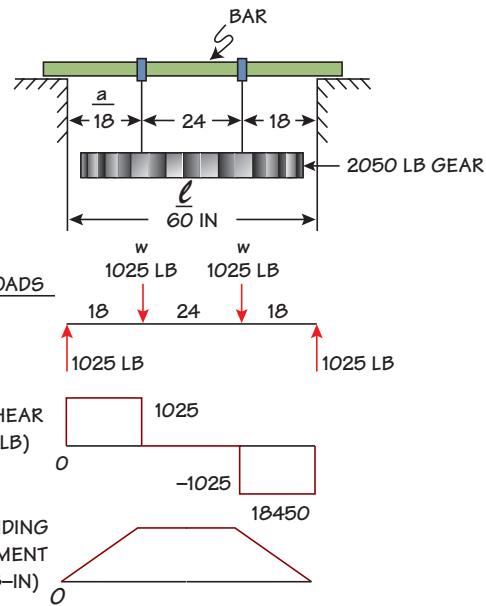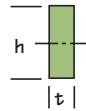

THEN FROM $\textcircled{1} : S = M/\sigma_d = \text{REQUIRED SECTION MODULUS}$

$$S = \frac{18450 \text{ LB-IN}}{21000 \text{ LB/IN}^2} = 0.879 \text{ IN}^3$$

$$\text{FROM } \textcircled{2} \quad t = \sqrt[3]{S/1.5} = \sqrt[3]{0.879 \text{ IN}^3/1.5} = 0.837 \text{ IN}$$

$$\text{THEN } h = 3t = 3(0.837 \text{ IN}) = 2.51 \text{ IN}$$

SUPPLIER HAS $3/4 \times 2^{3/4}$ AVAILABLE $[h/t = 2.75/0.75 = 3.67 \text{ ok}]$

$$\text{CHECK } S = th^2/6 = (0.75 \text{ IN})(2.75 \text{ IN})^2/6 = 0.945 \text{ IN}^3 > 0.879 \text{ IN}^3 \text{ ok}$$

$$\sigma = M/S = 18450 \text{ LB-IN}/0.945 \text{ IN}^3 = 19500 \text{ PSI}$$

$$N = S_y/\sigma = 42000 \text{ PSI}/19500 \text{ PSI} = 2.15 \text{ ok}$$

$$\text{CHECK DEFLECTION AT CENTER: } y = \frac{Wa}{24 EI} (3\ell^2 - 4a^2) \left(\begin{array}{l} \text{REF} \\ \text{Appendix} \\ \text{A14-1(c)} \end{array} \right)$$

$$y = \frac{(1025)(18)[3(60)^2 - 4(18)^2]}{24(30 \times 10^6)(1.30)} = 0.187 \text{ IN} \quad \text{ACCEPTABLE}$$

SPECIFY: $3/4 \times 2^{3/4}$ RECTANGULAR STEEL BAR. SAE 1040 HR

FIGURE 1-13 Sample design calculation

Standard Unified threads. Sizes smaller than 1/4 in are given numbers from 0 to 12, while fractional-inch sizes are specified for 1/4 in and larger sizes. Two series are listed: UNC is the designation for coarse threads, and UNF designates fine threads. Standard designations are as follows:

| | |
|------------------------|---|
| 6-32 UNC | (number size 6, 32 threads per inch, coarse thread) |
| 12-28 UNF | (number size 12, 28 threads per inch, fine thread) |
| $\frac{1}{2}$ -13 UNC | (fractional size 1/2 in, 13 threads per inch, coarse thread) |
| $1\frac{1}{2}$ -12 UNF | (fractional size $1\frac{1}{2}$ in, 12 threads per inch, fine thread) |

The *pitch* of a screw thread, P , is the distance between corresponding points on two adjacent threads and it is the distance the screw would move axially

when the screw is turned one complete revolution. In the American Standard Unified thread system,

$$P = 1/n = 1/\text{number of threads per inch}$$

For example, for the 1/2-13 UNC thread, $P = 1/n = 1/13 = 0.0769$ in. For metric screw threads, described next, the pitch is included as part of the thread designation system. It is given as an axial distance between adjacent threads in mm.

Given in the tables are the basic major diameter (D), the number of threads per inch (n), and the tensile stress area (A_t), found from

◇ Tensile Stress Area for Threads

$$A_t = 0.7854 \left(D - \frac{0.9743}{n} \right)^2 \quad (1-1)$$

When a threaded member is subjected to direct tension, the tensile stress area is used to compute the average tensile stress. It is based on a circular area computed from the mean of the pitch diameter and the minor diameter of the threaded member.

Metric Screw Threads

Table A2–3 gives similar dimensions for metric threads. Standard metric thread designations are of the form

$$M10 \times 1.5$$

where M stands for metric

The following number is the basic major diameter, D, in mm

The last number is the pitch, P, between adjacent threads in mm

The tensile stress area for metric threads is computed from the following equation and is based on a slightly different diameter. (See Reference 11, in the section, *Calculating Thread Tensile-Stress Area*.)

$$A_t = 0.7854(D - 0.9382P)^2 \quad (1-2)$$

Thus, the designation above would denote a metric thread with a basic major diameter of $D = 10.0$ mm and a pitch of $P = 1.5$ mm. Note that pitch = $1/n$. The tensile stress area for this thread is 58.0 mm^2 .

Commercially Available Shapes for Load-Carrying Members

An extensive array of shapes for the cross sections of load-carrying members is included in the 19 tables of Appendix 15. Many are available in either steel or aluminum.

Both U.S. Customary sizes and metric sizes are included with sizes ranging from quite small [about 10 mm or 3/8 in (0.375 in)] to large (up to 300 mm or 24 in). Note that the metric sizes listed are designed specifically in metric dimensions, rather than being *soft converted* from inch-sizes.

You are advised to refer first to the introduction that precedes the tables at the start of this appendix where the units, basic shape descriptions, available materials, and available sizes are given. This will guide you to appropriate tables for your application. In general, the following types of shapes are included:

- Tables A15–1 to A15–3: Angles or L-shapes
- Tables A15–4 to A15–8: Channels or C-shapes
- Tables A15–9 to A15–13: I-beam shapes, such as wide-flange (W) shapes, American Standard S-shapes, Aluminum Association I-beam shapes, European standard I-beam shapes
- Tables A15–14 to A15–16: Hollow square and rectangular tubing
- Tables A15–17 to A15–19: Pipe and hollow mechanical tubing

In many tables, links to Internet sites are given to allow searching for a much larger set of sizes for the types of shapes in the given table. You are encouraged to use this feature for problems and design exercises in this book.

Footnotes for many tables list the density, taken to be *mass density*, for steel and/or aluminum as an aid in computing the mass or weight of a given design. Note that:

Mass = Density × Volume, where

$$\text{Density} = \text{mass/unit volume}(\text{kg/m}^3 \text{ or } \text{lb}_m/\text{in}^3)$$

On earth, it is typically sufficiently accurate to assume that the U.S. Customary force unit, lb_f , is numerically equal to the mass unit, lb_m . For example, if density is given to be $0.283 \text{ lb}_m/\text{ft}^3$, it is reasonable to say that the weight density (also called specific weight) is $0.283 \text{ lb}_f/\text{ft}^3$. To obtain weight in the metric system, it is necessary to multiply the mass by g , the acceleration due to gravity. The nominal value of $g = 32.2 \text{ ft/s}^2$ or 9.81 m/s^2 . See Section 1–10 for additional discussion of the relationship between mass and weight.

Typical section properties listed for the shapes are:




- A—Cross-sectional area
- I—Moment of inertia, sometimes called the second moment of the area; used for beam analysis and design
- S—Section modulus. Note that $S = I/c$, where c is the distance from the neutral axis to the outermost part of the section; used for beam analysis and design
- r—Radius of gyration. Note that $r = \sqrt{I/A}$; used for column analysis
- J—Polar moment of inertia; used for torsional analysis and design
- Z_p —Polar section modulus. Note that $Z_p = J/c$, where c is the outside radius of the pipe or tube; used for torsional analysis and design

Structural Shapes—Designations

Steel manufacturers provide a large array of standard structural shapes that are efficient in the use of material and that are convenient for specification and installation into building structures or machine frames. Included, as shown in Table 1–1, are standard angles (L-shapes), channels (C-shapes), wide-flange beams (W-shapes), American Standard beams (S-shapes), structural tubing, and pipe. Note that the W-shapes and the S-shapes are often referred to in general conversation as “I-beams” because the shape of the cross section looks like the capital letter I. See Reference 2.

Materials used for structural shapes are typically called *structural steels*, and their characteristics and properties are described more fully in Chapter 2. Refer to Appendix 7 for typical strength data. Rolled W-shapes are most readily available in ASTM A992, A572 Grade 50, or A36. S-shapes and C-shapes are typically made

TABLE 1-1 Designations for Steel and Aluminum Shapes
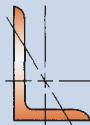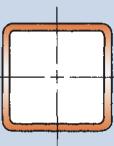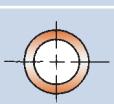
| Name of shape | Shape | Symbol | Example designation and Appendix table |
|-------------------------------|---|--------|--|
| Angle |  | L | L4×3× $\frac{1}{2}$ Table A15-1 |
| Channel |  | C | C15×50 Table A15-4 |
| Wide-flange beam |  | W | W14×43 Table A15-9 |
| American Standard beam |  | S | S10×35 Table A15-10 |
| Structural tubing—square |  | HSS | 4×4× $\frac{1}{4}$ Table A15-14 |
| Structural tubing—rectangular |  | HSS | 6×4× $\frac{1}{4}$ Table A15-14 |
| Pipe |  | PIPE | 4-inch standard weight 4-inch Schedule 40 Table A15-17 |
| Aluminum Association channel |  | C | C4×1.738 Table A15-6 |
| Aluminum Association I-beam |  | I | I 8×6.181 Table A15-11 |

from ASTM A572 Grade 50 or A36. ASTM A36 should be specified for steel angles and plates. Hollow structural shapes (HSS) are most readily available in ASTM A500.

Aluminum structural shapes are most often made from extruded 6061-T6 alloy.

Angles (L-Shapes)

Table A15-1 shows sketches of the typical shapes of steel angles having equal or unequal leg lengths. Called *L-shapes* because of the appearance of the cross section, angles are often used as tension members of trusses and towers, framing members for machine structures, lintels over windows and doors in construction, stiffeners for large plates used in housings and beams, brackets, and ledge-type supports for equipment. Some refer to these shapes as “angle iron.” The U.S. standard designation takes the following form, using one example size:

$$L4 \times 3 \times \frac{1}{2}$$

where L refers to the L-shape

4 is the length of the longer leg

3 is the length of the shorter leg

$\frac{1}{2}$ is the thickness of the legs

Dimensions are in inches

Smaller angles in U.S. units are listed in Table A15-2. Angles made to purely metric dimensions are listed in Table A15-3 over a range of sizes from 10 mm to 100 mm. Many of the listed shapes are available in either aluminum or steel.

Channels (C-Shapes)

See Table A15-4 for the appearance of American Standard channels and their geometric properties. Channels are used in applications similar to those described for angles. The flat web and the two flanges provide a generally stiffer shape than angles.

The sketch at the top of the table shows that channels have tapered flanges and webs with constant thickness. The slope of the flange taper is approximately 2 inches in 12 inches, and this makes it difficult to attach other members to the flanges. Special tapered washers are available to facilitate fastening. Note the designation of the x- and y-axes in the sketch, defined with the web of the channel vertical which gives it the characteristic C-shape. This is most important when using channels as beams or columns. The x-axis is located on the horizontal axis of symmetry, while the dimension x, given in the table, locates the y-axis relative to the back of the web. The centroid is at the intersection of the x- and y-axes.

The form of the U.S. standard designation for channels is

$$C15 \times 50$$

where C indicates that it is a standard C-shape

15 is the nominal (and actual) depth in inches with the web vertical

50 is the weight per unit length in lb/ft

Most other channels have flanges with uniform thicknesses that are often made by rolling flat sheets into the C-shape or by extrusion. Smaller channels in U.S. units are listed in Table A15-5. Aluminum angles made to European standards in purely metric dimensions are listed in Table A15-7, and steel metric channels are listed in Table A15-8. The designations for metric channels and small channels in U.S. units contain only size data, not weight per unit length.

Channels made to Aluminum Association standard shapes in U.S. units are listed in Table A15-6. Several designation systems are in common use. Some give the web height, leg length, and thickness. In this book, we use a form similar to that for standard steel shapes. For example,

$$C4 \times 1.738$$

where C indicates the basic shape

4 indicates the depth of the shape (web height) in inches

1.738 indicates the weight per unit length in lb/ft

I-Beam Shapes

Wide-Flange Shapes (W-Shapes). Refer to Table A15-9, which illustrates the most common shape used for beams. W-shapes have relatively thin webs and somewhat thicker, flat flanges with constant thickness. Most of the area of the cross section is in the flanges, farthest away from the horizontal centroidal axis (*x*-axis), thus making the moment of inertia very high for a given amount of material. Note that the properties of moment of inertia and section modulus are very much higher with respect to the *x*-axis than they are for the *y*-axis. Therefore, W-shapes are typically used in the orientation shown in the sketch in Table A15-9. Also, these shapes are best when used in pure bending without twisting because they are quite flexible in torsion.

The standard designation for steel W-shapes carries much information. Consider the following example:

$$W14 \times 43$$

where W indicates that it is a W-shape

14 is the nominal depth in inches

43 is the weight per unit length in lb/ft

The term *depth* is the standard designation for the vertical height of the cross section when placed in the orientation shown in Table A15-9. Note from the data in the table that the actual depth is often different from

the nominal depth. For the W14×43, the actual depth is 13.66 in.

All sizes listed in Table A15–9, along with many more (see Reference 2), are available in steel. A few of the listed sizes are also available in aluminum.

American Standard Beams (S-Shapes). Table A15–10 shows the properties for S-shapes. Much of the discussion given for W-shapes applies to S-shapes as well. Note that, again, the weight per foot of length is included in the designation such as the S10×35, which weighs 35 lb/ft. For most, but not all, of the S-shapes, the actual depth is the same as the nominal depth. The flanges of the S-shapes are tapered at a slope of approximately 2 inches in 12 inches, similar to the flanges of the C-shapes. The x - and y -axes are defined as shown with the web vertical.

Often wide-flange shapes (W-shapes) are preferred over S-shapes because of their relatively wide flanges, the constant thickness of the flanges, and the generally higher section properties for a given weight and depth.

A few of the sizes for S-shapes are available in aluminum.

Aluminum Association I-Beam Shapes. Aluminum Association standard I-beam shapes in U.S. units are listed in Table A15–11. Several designation systems are in common use. Some give the web height, flange width, and the thickness for either the web or the flange. In this book, we use a form similar to that for standard steel I-shapes. For example,

I 8×6.181

where I indicates the basic I-shape

8 indicates the depth of the shape (web height) in inches

6.181 indicates the weight per unit length in lb/ft

Other I-Beam Shapes. Table A15–12 lists small extruded aluminum shapes. European standard steel shapes in purely metric units are listed in Table A15–13.

Hollow Tubing (Square and Rectangular)

Square tubing and rectangular tubing are very useful in machine structures because they provide good section properties for members loaded as beams in bending and for torsional loading (twisting) because of the closed cross section. The flat sides often facilitate fastening of members together or the attachment of equipment to the structural members. Some frames are welded into an integral unit that functions as a stiff space-frame. Square tubing makes an efficient section for columns.

See Table A15–14 for the appearance and properties for hollow steel structural shapes. These shapes, often called HSS, are usually formed from flat sheet and

welded along the length. The section properties account for the corner radii. Note the sketches showing the x - and y -axes. The standard designation takes the form

HSS $6 \times 4 \times \frac{1}{4}$

where 6 is the depth of the longer side in inches

4 is the width of the shorter side in inches

$\frac{1}{4}$ is the wall thickness in inches

Note that for standard HSS shapes as listed in Reference 2, the *design wall thickness*, t_w , from Table A15–14 should be used. That value, *smaller* than the nominal size used in the designation, is used to compute the listed section properties.

Table A15–15 lists smaller steel and aluminum square and rectangular tubing in inch-sizes from 0.375 in (3/8 in) to 3.00 in depth. Metric sizes for square and rectangular tubing are listed in Table A15–16 from 20 mm to 300 mm depth.

Pipe and Hollow Circular Tubing

Hollow circular sections, commonly called *pipe*, are very efficient for use as beams, torsion members, and columns. The placement of the material uniformly away from the center of the pipe enhances the moment of inertia for a given amount of material and gives the pipe uniform properties with respect to all axes through the center of the cross section. The closed cross-sectional shape gives it high strength and stiffness in torsion as well as in bending.

Table A15–17 gives the properties for American National Standard Schedule 40 welded and seamless wrought steel pipe. This type of pipe is often used to transport water and other fluids, but it also performs well in structural applications. Note that the actual inside and outside diameters are somewhat different from the nominal size, except for the very large sizes. Construction pipe is often called *Standard Weight Pipe*, and it has the same dimensions as the Schedule 40 pipe for sizes from 1/2 in to 10 in. Other “schedules” and “weights” of pipe are available with larger and smaller wall thicknesses.

Other hollow circular sections are commonly available that are referred to as *tubing*. These sections are available in carbon steel, alloy steel, stainless steel, aluminum, copper, brass, titanium, and other materials. See References 1, 2, 5, and 9 for a variety of types and sizes of pipe and tubing.

Tubing is typically specified by its outside diameter and wall thickness, with the wall thickness sometimes given as a standard *gauge*. Table A15–18 lists tubing in U.S. sizes in steel and aluminum with outside diameters from 0.50 in to 5.0 in and various wall thicknesses. Table A15–19 lists tubing in metric sizes in steel and aluminum with outside diameters from 10 mm to 150 mm in various wall thicknesses.

1-9 UNIT SYSTEMS

We will perform computations in this book by using either the U.S. Customary Unit System (inch-pound-second) or the International System (SI). Table 1-2 lists the typical units used in the study of machine design. *SI*, the abbreviation for “Le Système International d’Unités,” is the standard for metric units throughout the world. (See Reference 4.) For convenience, the term *SI units* will be used instead of *metric units*.

Prefixes applied to the basic units indicate order of magnitude. Only those prefixes listed in Table 1-3, which differ by a factor of 1000, should be used in technical

calculations. The final result for a quantity should be reported as a number between 0.1 and 10 000, times some multiple of 1000. Then the unit with the appropriate prefix should be specified. Table 1-4 lists examples of proper SI notation.

Sometimes you have to convert a unit from one system to another. Appendix 16 provides tables of conversion factors. Also, you should be familiar with the typical order of magnitude of the quantities encountered in machine design so that you can judge the reasonableness of design calculations (see Table 1-5 for several examples).

TABLE 1-2 Typical Units used in Machine Design

| Quantity | U.S. Customary unit | SI unit |
|--|---|--|
| Length or distance | inch (in) foot (ft) | meter (m) millimeter (mm) |
| Area | square inch (in^2) | square meter (m^2) or square millimeter (mm^2) |
| Force | pound (lb) kip (K) (1000 lb) | newton (N) (1 N = 1 kg · m/s ²) |
| Mass | slug ($\text{lb} \cdot \text{s}^2/\text{ft}$) | kilogram (kg) |
| Time | second (s) | second (s) |
| Angle | degree ($^\circ$) | radian (rad) or degree ($^\circ$) |
| Temperature | degrees Fahrenheit ($^\circ\text{F}$) | degrees Celsius ($^\circ\text{C}$) |
| Torque or moment | pound-inch ($\text{lb} \cdot \text{in}$) or pound-foot ($\text{lb} \cdot \text{ft}$) | newton-meter ($\text{N} \cdot \text{m}$) |
| Energy or work | pound-inch ($\text{lb} \cdot \text{in}$) | joule (J) 1 J = 1 N · m |
| Power | horsepower (hp) (1 hp = 550 lb · ft/s) | watt (W) or kilowatts (kW) (1 W = 1 J/s = 1 N · m/s) |
| Stress, pressure, or modulus of elasticity | pounds per square inch (lb/in^2 , or psi) kips per square inch (K/in^2 , or ksi) | pascal (Pa) (1 Pa = 1 N/m ²) kilopascal (kPa) (1 kPa = 10^3 Pa) megapascal (MPa) (1 MPa = 10^6 Pa) gigapascal (GPa) (1 GPa = 10^9 Pa) |
| Section modulus | inches cubed (in^3) | meters cubed (m^3) or millimeters cubed (mm^3) |
| Moment of inertia | inches to the fourth power (in^4) | meters to the fourth power (m^4) or millimeters to the fourth power (mm^4) |
| Rotational speed | revolutions per min (rpm) | radians per second (rad/s) |

TABLE 1-3 Prefixes used with SI Units

| Prefix | SI symbol | Factor |
|--------|-----------|---------------------------|
| micro- | μ | $10^{-6} = 0.000\,001$ |
| milli- | m | $10^{-3} = 0.001$ |
| kilo- | k | $10^3 = 1000$ |
| mega- | M | $10^6 = 1\,000\,000$ |
| giga- | G | $10^9 = 1\,000\,000\,000$ |

TABLE 1-4 Quantities Expressed in SI Units

| Computed result | Reported result |
|--------------------------|--|
| 0.001 65 m | 1.65×10^{-3} m, or 1.65 mm |
| 32 540 N | 32.54×10^3 N, or 32.54 kN |
| 1.583×10^5 W | 158.3×10^3 W, or 158.3 kW; or 0.1583×10^6 W; or 0.1583 MW |
| 2.07×10^{11} Pa | 207×10^9 Pa, or 207 GPa |

TABLE 1–5 Typical Order of Magnitude for Commonly Encountered Quantities

| Quantity | U.S. Customary unit | SI unit |
|--|---|--|
| Dimensions of a wood standard 2 × 4 | 1.50 in × 3.50 in | 38 mm × 89 mm |
| Moment of inertia of a 2 × 4 (3.50-in side vertical) | 5.36 in ⁴ | 2.23 × 10 ⁶ mm ⁴ , or 2.23 × 10 ⁻⁶ m ⁴ |
| Section modulus of a 2 × 4 (3.50-in side vertical) | 3.06 in ³ | 5.02 × 10 ⁴ mm ³ , or 5.02 × 10 ⁻⁵ m ³ |
| Force required to lift 1.0 gal of gasoline | 6.01 lb | 26.7 N |
| Density of water | 1.94 slugs/ft ³ | 1000 kg/m ³ , or 1.0 Mg/m ³ |
| Compressed air pressure in a factory | 100 psi | 690 kPa |
| Yield point of SAE 1040 hot-rolled steel | 42 000 psi, or 42 ksi | 290 MPa |
| Modulus of elasticity of steel | 30 000 000 psi, or 30 × 10 ⁶ psi | 207 GPa |

**Example Problem
1–1**

Express the diameter of a shaft in millimeters if it is measured to be 2.755 in.

Solution Table A16 gives the conversion factor for length to be 1.00 in = 25.4 mm. Then

$$\text{Diameter} = 2.755 \text{ in} \frac{25.4 \text{ mm}}{1.00 \text{ in}} = 69.98 \text{ mm}$$

**Example Problem
1–2**

An electric motor is rotating at 1750 revolutions per minute (rpm). Express the speed in radians per second (rad/s).

Solution A series of conversions is required.

$$\text{Rotational speed} = \frac{1750 \text{ rev}}{\text{min}} \frac{2\pi \text{ rad}}{\text{rev}} \frac{1 \text{ min}}{60 \text{ s}} = 183.3 \text{ rad/s}$$

1–10 DISTINCTION AMONG WEIGHT, FORCE, AND MASS

Distinction must be made among the terms *force*, *mass*, and *weight*. *Mass* is the quantity of matter in a body. A *force* is a push or pull applied to a body that results in a change in the body's motion or in some deformation of the body. Clearly these are two different physical phenomena, but the distinction is not always understood. The units for force and mass used in this text are listed in Table 1–2.

The term *weight*, as used in this book, refers to the amount of *force* required to support a body against the influence of gravity. Thus, in response to "What is the weight of 75 kg of steel?" we would use the relationship between force and mass from physics:

Weight/Mass Relationship

$$F = ma \quad \text{or} \quad w = mg$$

where F = force

m = mass

a = acceleration

w = weight

g = acceleration due to gravity

We will use

$$g = 32.2 \text{ ft/s}^2 \quad \text{or} \quad g = 9.81 \text{ m/s}^2$$

Then, to compute the weight,

$$w = mg = 75 \text{ kg} (9.81 \text{ m/s}^2)$$

$$w = 736 \text{ kg} \cdot \text{m/s}^2 = 736 \text{ N}$$

Remember that, as shown in Table 1–2, the newton (N) is equivalent to 1.0 kg · m/s². In fact, the newton is defined as the force required to give a mass of 1.0 kg an acceleration of 1.0 m/s². In our example, then, we would say that the 75-kg mass of steel has a weight of 736 N.

REFERENCES

1. Aluminum Association. *Aluminum Design Manual*. Washington, DC: Aluminum Association, 2015.
2. American Institute of Steel Construction. *Steel Construction Manual*. 14th ed. Chicago: American Institute of Steel Construction, 2015.
3. Magrab, Edward, Satyandra Gupta, Patrick McCluskey, and Peter Sandborn. *Integrated Product and Process Design and Development: The Product Realization Process*. 2nd ed. Boca Raton, FL: CRC Press, 2009.
4. ASTM, International. *IEEE/ASTM SI-10 American National Standard for Metric Practice*. West Conshohocken, PA: ASTM International, 2010.
5. Avallone, Eugene, Theodore Baumeister, and Ali Sadegh, eds. *Marks' Standard Handbook for Mechanical Engineers*. 11th ed. New York: McGraw-Hill, 2007.
6. Dym, Clive L., Patrick Little, and Elizabeth Owen. *Engineering Design: A Project-Based Introduction*. 4th ed. New York: John Wiley & Sons, 2014.
7. Ertas, Atila, and Jesse C. Jones. *The Engineering Design Process*. 2nd ed. New York: John Wiley & Sons, 1997. Discussion of the design process from definition of design objectives through product certification and manufacture.
8. Madu, Christian. *House of Quality (QFD) in a Minute*. Second Edition. Fairfield, CT: Chi Publishers, 2006.
9. Mott, Robert L. *Applied Fluid Mechanics*. 7th ed. Upper Saddle River, NJ: Pearson/Prentice Hall, 2015.
10. National Research Council. *Improving Engineering Design: Designing for Competitive Advantage*. Washington, DC: National Academy Press, 1991. Describes the Product Realization Process (PRP).
11. Oberg, Erik, Franklin D. Jones, Holbrook L. Horton, and Henry H. Ryffell. *Machinery's Handbook*. 30th ed. New York: Industrial Press, 2016.
12. Pahl, Gerhard, Wolfgang Beitz, Jörg Feldhusen, and K. H. Grote. *Engineering Design: A Systematic Approach*. 3rd ed. London: Springer-Verlag, 2007.
13. Pugh, Stuart, Ron Andrade, and Don Clausing. *Creating Innovative Products Using Total Design: The Living Legacy of Stuart Pugh*: 1st ed. Upper Saddle River, NJ: Prentice Hall Professional Technical Reference, 1996.
14. Suh, Nam Pyo. *Axiomatic Design: Advances and Applications*. New York: Oxford University Press, 2001.
15. Suh, Nam Pyo. *The Principles of Design*. New York: Oxford University Press, 1990.
16. Ullman, David G. *The Mechanical Design Process*. 5th ed. New York: McGraw-Hill, 2015.
17. Micouin, Patrice. *Model Based Systems Engineering: Fundamentals and Methods*. New York: Wiley-ISTE, 2014.
18. Yang, Kai, and Basem S. El-Haik. *Design for Six Sigma: A Roadmap for Product Development*. 2nd ed. Brighton, MA: Axiomatic Design Solutions, 2009.
19. Jugulum, Rajesh, and Philip Samuel. *Design for Lean Six Sigma*. New York: Wiley, 2009.
20. Wilson, Graham and Maersk Molan. *Six Sigma and the Product Development Cycle*. New York: Routledge -Taylor & Francis Group, 2006.
21. Livotov, Pavel and Vladimir Petrov. *TRIZ: Innovation and Inventive Problem Solving Handbook*. Amazon Digital Services, 2015.
22. Fey, Victor and Eugene Rivin. *Innovation on Demand: New Product Development Using TRIZ*. Cambridge, England: Cambridge University Press, 2006.
23. Royzen, Zinovy. *Designing and Manufacturing Better Products Faster Using TRIZ*. 7th ed. Seattle, WA: TRIZ Consulting, 2009.
24. Carlson, Carl. *Effective FMEAs: Achieving Safe, Reliable, and Economical Products and Processes using Failure Mode and Effects Analysis*. New York: Wiley, 2012.
25. Kepner, Charles H., and Benjamin B. Tregoe. *The New Rational Manager (2013) – An updated edition for the new world*. Princeton, NJ: Kepner-Tregoe, Inc., 2013.
26. Dieter, George and Linda Schmidt. *Engineering Design*. 5th ed. New York: McGraw-Hill, 2012.
27. Boothroyd, Geoffrey, Peter Dewhurst, and Winston A. Knight *Product Design for Manufacture and Assembly*. 3rd ed. Boca Raton, FL: CRC Press, 2011.
28. Pandy, Vijitashwa. *Decision Based Design*. Boca Raton, FL: CRC Press, 2013.

INTERNET SITES FOR GENERAL MECHANICAL DESIGN

Included here are Internet sites that can be used in many of the chapters of this book and in general design practice to identify commercial suppliers of machine elements and standards for design or to perform stress analyses. Later chapters include sites specific to the topics covered there.

1. **American National Standards Institute (ANSI)** A private, nonprofit organization that administers and coordinates the U.S. voluntary standardization and conformity assessment system.
2. **Global Engineering Documents** A database of standards and publications offered by many standards-developing organizations such as ASME, ASTM, SAE, DIN, ISO and several other organizations.
3. **GlobalSpec** A database of a wide variety of technical products and services that provides for searching by technical specifications, access to supplier information, and comparison of suppliers for a given product. The Mechanical Components category includes many of the topics addressed in this book.
4. **MDSOLIDs** Educational software for strength of materials topics, including beams, flexure, torsion members, columns, axial structures, statically indeterminate structures, trusses, section properties, and Mohr's circle analysis. This software may serve as a review tool for the prerequisite knowledge needed in this book.
5. **Software for Structures - engineering-software.com** Source for variety of software products including beam analysis and trusses.

6. **SkyCiv Online Engineering Software.** Producer of the SkyCiv brand of software for beam analysis, trusses, frames, shafts and other applications.
7. **Power Transmission Home Page Clearinghouse** on the Internet for buyers, users, and sellers of power transmission products and services. Included are gears, gear drives, belt drives, chain drives, bearings, clutches, brakes, and many other machine elements covered in this book.

INTERNET SITES FOR INNOVATION AND MANAGING COMPLEX DESIGN PROJECTS

8. **Axiomatic Design Solutions, Inc.** An integrated method of combining customer needs and functional requirements to produce detailed design parameters, the final embodiment of the design solution, and the process needed to produce the design efficiently.
9. **QFD Institute** An organization promoting the Quality Function Deployment (QFD) method for product design and quality systems management.
10. **Applied Marketing Science (AMS), Inc.** Consulting firm providing voice of the customer (VOC) insights and using Quality Function Deployment (QFD) based on the “House of Quality” matrix described in Reference 8.
11. **iSixSigma.com** The mission of iSixSigma.com is to provide a free information resource to help business professionals successfully implement Lean Six Sigma and business process improvement tools and methodologies within their organizations.
12. **The TRIZ Journal.** A site offering case studies, theoretical articles, TRIZ history, symposia, classes, and books to help designers learn TRIZ.
13. **Technical Innovation Center, Inc.** Provider of TRIZ consulting, training, and publishing services.
14. **The Altshuller Institute for TRIZ Studies** Provider of services to the world TRIZ community, authorized by Genrikh Altshuller, the founder of TRIZ.
15. **Triz Consulting, Inc.** Provider of TRIZ training for systematic innovation, consulting, and publications.
16. **Systems2win.com** Provider of Excel templates for Lean Six Sigma to Define, Measure, Analyze, Improve, and Control quality (DMAIC 6 Σ tools).
17. **FMEA-FMECA.com** An Internet source of information about the Failure Modes and Effects Analysis (FMEA) and Failure Modes and Effects with Criticality Analysis (FMECA). Source for books, software, forms, examples, and other resources.
18. **Kepner-Tregoe, Inc.** Kepner-Tregoe provides consulting and training services to help clients implement their strategies by embedding problem-solving, decision-making, and project execution methods. Publisher of the book cited in Reference 25.
19. **TEDATA GMBH** Producer of the MDESIGN software, a large package of modules that address numerous mechanical design tasks such as gears, bearings, belt drives, chain drives, shafts, axles, beams, bolts, welded connections, springs, clutches, and others.

PROBLEMS

Functions and Design Requirements

For the devices described in Problems 1–14, write a set of functions and design requirements in a similar manner to those in Section 1–4. You or your instructor may add more specific information to the general descriptions given.

1. The hood latch for an automobile.
2. A hydraulic jack used for car repair.
3. A portable crane to be used in small garages and homes.
4. A machine to crush soft-drink or beer cans.
5. An automatic transfer device for a production line.
6. A device to raise a 55-gallon (gal) drum of bulk materials and dump the contents into a hopper.
7. A paper feed device for a copier.
8. A conveyor to elevate and load gravel into a truck.
9. A crane to lift building materials from the ground to the top of a building during construction.
10. A machine to insert toothpaste tubes into cartons.
11. A machine to insert 24 cartons of toothpaste into a shipping container.
12. A gripper for a robot to grasp a spare tire assembly and insert it into the trunk of an automobile on an assembly line.
13. A table for positioning a weldment in relation to a robotic welder.
14. A garage door opener.

Units and Conversions

For Problems 15–28, perform the indicated conversion of units. (Refer to Appendix 16 for conversion factors.) Express the results with the appropriate prefix as illustrated in Tables 1–3 and 1–4.

15. Convert a shaft diameter of 1.75 in to mm.
16. Convert the length of a conveyor from 46 ft to meters.
17. Convert the torque developed by a motor of 12 550 lb·in to N·m.
18. A wide-flange steel-beam shape, W12×14, has a cross-sectional area of 4.12 in². Convert the area to mm².
19. The W12×14 beam shape has a section modulus of 14.8 in³. Convert it to mm³.
20. The W12×14 beam shape has a moment of inertia of 88.0 in⁴. Convert it to mm⁴.
21. What standard steel equal leg angle would have a cross-sectional area closest to (but greater than) 750 mm²? See Appendix 15.
22. An electric motor is rated at 7.5 hp. What is its rating in watts (W)?
23. A vendor lists the ultimate tensile strength of a steel to be 127 000 psi. Compute the strength in MPa.
24. Compute the weight of a steel shaft, 35.0 mm in diameter and 675 mm long. (See Appendix 3 for the density of steel.)
25. A torsional spring requires a torque of 180 lb·in to rotate it 35°. Convert the torque to N·m and the rotation to radians. If the *scale of the spring* is defined as the applied torque per unit of angular rotation, compute the spring scale in both unit systems.

26. To compute the energy used by a motor, multiply the power that it draws by the time of operation. Consider a motor that draws 12.5 hp for 16 h/day, five days per week. Compute the energy used by the motor for one year. Express the result in $\text{ft} \cdot \text{lb}$ and $\text{W} \cdot \text{h}$.
27. One unit used for fluid viscosity in Chapter 16 of this book is the *reyn*, defined as $1.0 \text{ lb} \cdot \text{s/in}^2$. If a lubricating oil has a viscosity of 3.75 reyn, convert the viscosity to the standard units in the U.S. Customary System $\text{lb} \cdot \text{s/ft}^2$ and in the SI ($\text{N} \cdot \text{s/m}^2$).
28. The life of a bearing supporting a rotating shaft is expressed in number of revolutions. Compute the life of a bearing that rotates 1750 rpm continuously for 24 h/day for five years.

MATERIALS IN MECHANICAL DESIGN

The Big Picture

You Are the Designer

- 2–1 Objectives of This Chapter
- 2–2 Properties of Materials
- 2–3 Classification of Metals and Alloys
- 2–4 Variability of Material Properties Data
- 2–5 Carbon and Alloy Steel
- 2–6 Conditions for Steels and Heat Treatment
- 2–7 Stainless Steels
- 2–8 Structural Steel
- 2–9 Tool Steels
- 2–10 Cast Iron
- 2–11 Powdered Metals
- 2–12 Aluminum
- 2–13 Zinc Alloys and Magnesium
- 2–14 Nickel-based Alloys and Titanium
- 2–15 Copper, Brass, and Bronze
- 2–16 Plastics
- 2–17 Composite Materials
- 2–18 Materials Selection

THE BIG PICTURE

Materials in Mechanical Design

Discussion Map

- You must understand the behavior of materials to make good design decisions and to communicate with suppliers and manufacturing staff.

Discover

Examine consumer products, industrial machinery, automobiles, and construction machinery.

What materials are used for the various parts?

Why do you think those materials were specified?

How were they processed?

What material properties were important to the decisions to use particular materials?

Examine the appendices tables, and refer to them later as you read about specific materials.

This chapter summarizes the design properties of a variety of materials. The appendices include data for many examples of these materials in many conditions.

It is the designer's responsibility to specify suitable materials for each component of a mechanical device. Your initial efforts in specifying a material for a particular component of a mechanical design should be

directed to the basic kind of material to be used. Keep an open mind until you have specified the functions of the component, the kinds and magnitudes of loads it will carry, and the environment in which it must

operate. Your selection of a material must consider its physical and mechanical properties and match them to the expectations placed on it. First consider the following classes of materials:

| | | |
|-------------------------|----------|----------------------|
| Metals and their alloys | Plastics | Composites |
| Elastomers | Woods | Ceramics and glasses |

Each of these classes contains a large number of specific materials covering a wide range of actual properties. However, you probably know from your experience the general behavior of each kind and have some feel for the applications in which each is typically used. Most of the applications considered in the study of design of machine elements in this book use metal alloys, plastics, and composites.

Satisfactory performance of machine components and systems depends greatly on the materials that the designer specifies. As a designer, you must understand how materials behave, what properties of the material affect the performance of the parts, and how you should interpret the large amounts of data available on material properties. Your ability to effectively communicate your specifications for materials with suppliers, purchasing agents, metallurgists, manufacturing process personnel, heat treatment personnel, plastics molders, machinists, and quality assurance specialists often has a strong influence on the success of a design.

Explore what kinds of materials are used in consumer products, industrial machinery, automobiles, construction machinery, and other devices and systems that you come into contact with each day. Make judgments about why each material was specified for a particular application. Where do you see steel being used? Contrast that usage with where aluminum or other nonferrous materials are used. How are the products produced? Can you find different parts that are machined, cast, forged, roll-formed, and welded? Why do you think those processes were specified for those particular products?

Document several applications for plastics and describe the different forms that are available and that have been made by different manufacturing processes. Which are made by plastic molding processes, vacuum forming, blow molding, and others? Can you identify parts made from composite materials that have a significant amount of high-strength fibers embedded in a plastic matrix? Check out sporting goods and parts of cars, trucks, and airplanes.

From the products that you found from the exploration outlined previously, identify the basic properties of the materials that were important to the designers: strength, rigidity (stiffness), weight (density), corrosion resistance, appearance, machinability, weldability, ease of forming, cost, and others.

This chapter focuses on material selection and the use of material property data in design decisions, rather than on the metallurgy or chemistry of the materials. One of the uses of the information in this chapter is as a glossary of terms that you can use throughout the book; important terms are given in *italic* type. Also, there are numerous references to Appendix 3 through 13, where tables of data for material properties are given. Go there now and see what kinds of data are provided. Then you can study the tables in more depth as you read the text. Note that many of the problems that you will solve in this book and the design projects that you complete will use data from these tables.

The subject of this chapter is very broad and it is not possible to include in this book all the detail you may need for each design situation that arises as you study this book or in your career. Huge amounts of additional information are available on the Internet and the numerous sites listed at the end of this chapter give suggestions that may lead to what you need. Many of the listed sites are referred to within this chapter, but some are not and they provide alternate ways for you to search for what you need.

Now apply some of what you have gained from **The Big Picture** exploration to a specific design situation as outlined in **You Are the Designer**, which follows.

YOU ARE THE DESIGNER

You are part of a team responsible for the design of an electric lawn mower for the household market. One of your tasks is to specify suitable materials for the various components. Consider your own experience with such lawn mowers and think what materials would be used for these key components: *wheels*, *axles*, *housing*, and *blade*. What are their functions? What conditions of service will each encounter? What is one reasonable type of material for each component and what general properties should it have? How could they be manufactured? Possible answers to these questions follow.

Wheels

Function: Support the weight of the mower. Permit easy, rolling movement. Provide for mounting on an axle. Ensure safe operation on flat or sloped lawn surfaces.

Conditions of service: Must operate on grass, hard surfaces, and soft earth. Exposed to water, lawn fertilizers, and general outdoor conditions. Will carry moderate loads. Requires an attractive appearance.

One reasonable material: One-piece plastic wheel incorporating the tire, rim, and hub. Must have good strength, stiffness, toughness, and wear resistance.

Manufacturing method: Plastic injection molding

Axes

Function: Transfer the weight of mower from the housing to the wheels. Allow rotation of the wheels. Maintain location of the wheels relative to the housing.

Conditions of service: Exposure to general outdoor conditions. Moderate loads.

One possible material: Steel rod with provisions for mounting wheels and attaching to housing. Requires moderate strength, stiffness, and corrosion resistance.

Manufacturing method: Commercially available cylindrical rod. Parts of the rod may need machining.

Housing

Function: Support, safely enclose, and protect operating components, including the blade and motor. Accommodate the attachment of two axles and a handle. Permit cut grass to exit the cutting area.

Conditions of service: Moderate loads and vibration due to motor. Possible shock loads from wheels. Multiple attachment points for axles, handle, and motor. Exposed to wet grass and general outdoor conditions. Requires attractive appearance.

One possible material: Heavy-duty plastic with good strength, stiffness, impact resistance, toughness, and weather resistance.

Manufacturing method: Plastic injection molding. May require machining for holes and mounting points for the motor.

Blade

Function: Cut blades of grass and weeds while rotating at high speed. Facilitate connection to motor shaft. Operate safely when foreign objects are encountered, such as stones, sticks, or metal pieces.

Conditions of service: Normally moderate loads. Occasional shock and impact loads. Must be capable of sharpening a portion of the blade to ensure clean cutting of grass. Maintain sharpness for reasonable time during use.

One possible material: Steel with high strength, stiffness, impact resistance, toughness, and corrosion resistance.

Manufacturing method: Stamping from flat steel strip. Machining and/or grinding for cutting edge.

This simplified example of the material selection process should help you to understand the importance of the information provided in this chapter about the behavior of materials commonly used in the design of machine elements. A more comprehensive discussion of material selection occurs at the end of this chapter.

2-1 OBJECTIVES OF THIS CHAPTER

After completing this chapter, you will be able to:

1. State the types of material properties that are important to the design of mechanical devices and systems.
2. Define the following terms: *tensile strength*, *yield strength*, *proportional limit*, *elastic limit*, *modulus of elasticity in tension*, *ductility and percent elongation*, *shear strength*, *Poisson's ratio*, *modulus of elasticity in shear*, *hardness*, *machinability*, *impact strength*, *creep density*, *coefficient of thermal expansion*, *thermal conductivity*, and *electrical resistivity*.
3. Describe the nature of *carbon and alloy steels*, the number-designation system for steels, and the effect of several kinds of alloying elements on the properties of steels.
4. Describe the manner of designating the condition and heat treatment of steels, including *hot rolling*, *cold drawing*, *annealing*, *normalizing*, *through-hardening*, *tempering*, and *case hardening by flame hardening*, *induction hardening*, and *carburizing*.
5. Describe *stainless steels* and recognize many of the types that are commercially available.
6. Describe *structural steels* and recognize many of their designations and uses.
7. Describe *cast irons* and several kinds of *gray iron*, *ductile iron*, and *malleable iron*.
8. Describe *powdered metals* and their properties and uses.
9. Describe several types of *tool steels* and *carbides* and their typical uses.
10. Describe *aluminum alloys* and their conditions, such as *strain hardening* and *heat treatment*.
11. Describe the nature and typical properties of *zinc*, *titanium*, *copper*, *brass*, *bronze*, and *nickel-based alloys*.
12. Describe several types of *plastics*, both *thermosetting* and *thermoplastic*, and their typical properties and uses.
13. Describe several kinds of *composite materials* and their typical properties and uses.
14. Implement a rational material selection process.

2-2 PROPERTIES OF MATERIALS

Machine elements are very often made from one of the metals or metal alloys such as steel, aluminum, cast iron, zinc, titanium, or bronze. This section describes the important properties of materials as they affect mechanical design.

Strength, elastic, and ductility properties for metals, plastics, and other types of materials are usually determined from a *tensile test* in which a sample of the material, typically in the form of a round or flat bar, is clamped between jaws and pulled slowly until it breaks in tension. The magnitude of the force on the bar and the corresponding change in length (strain) are monitored and recorded continuously during the test. Because the

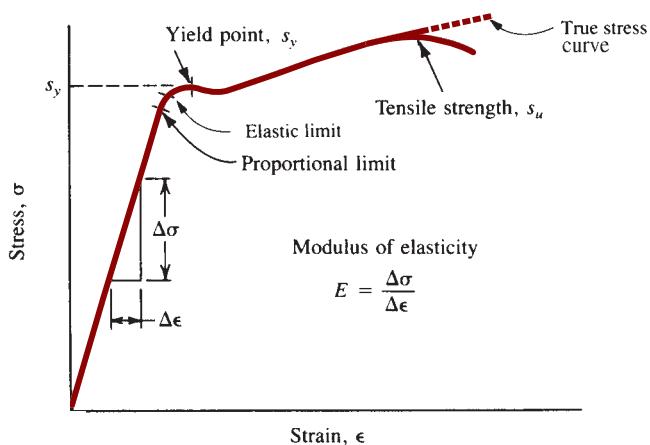


FIGURE 2-1 Typical stress-strain diagram for steel

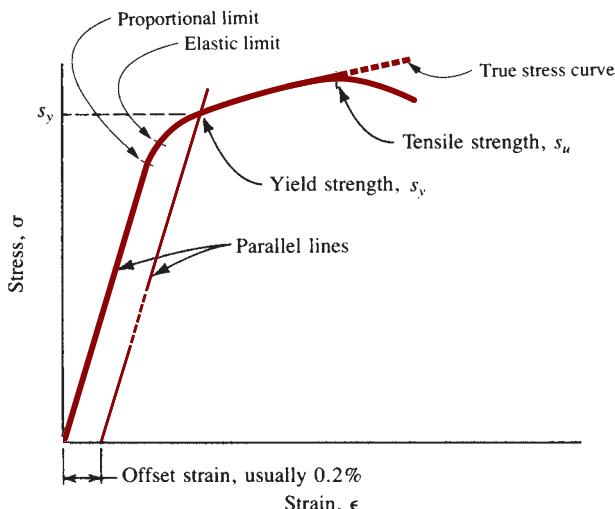


FIGURE 2-2 Typical stress-strain diagram for aluminum and other metals having no yield point

stress in the bar is equal to the applied force divided by the area, stress is proportional to the applied force. The data from such tensile tests are often shown on *stress-strain diagrams*, such as those shown in Figures 2-1 and 2-2. In the following paragraphs, several strength, elastic, and ductility properties of metals are defined.

Tensile Strength, s_u

The peak of the stress-strain curve is considered the *ultimate tensile strength* (s_u), sometimes called the *ultimate strength* or simply the *tensile strength*. At this point during the test, the highest *apparent stress* on a test bar of the material is measured. As shown in Figures 2-1 and 2-2, the curve appears to drop off after the peak. However, notice that the instrumentation used to create the diagrams is actually plotting *load versus deflection* rather than *true stress versus strain*. The apparent stress is computed by dividing the load by the original cross-sectional area of the test bar. After the peak of the curve is reached, there is a pronounced decrease in the bar's diameter, referred to as *necking down*. Thus,

the load acts over a smaller area, and the *actual stress* continues to increase until failure. It is very difficult to follow the reduction in diameter during the necking-down process, so it has become customary to use the peak of the curve as the tensile strength, although it is a more conservative value.

Yield Strength, s_y

That portion of the stress-strain diagram where there is a large increase in strain with little or no increase in stress is called the *yield strength* (s_y). This property indicates that the material has, in fact, yielded or elongated plastically, permanently, and to a large degree. If the point of yielding is quite noticeable, as it is in Figure 2-1, the property is called the *yield point* rather than the yield strength. This is typical of a plain carbon hot-rolled steel.

Figure 2-2 shows the stress-strain diagram that is typical of a nonferrous metal such as aluminum or titanium or of certain high-strength steels. Notice that there is no pronounced yield point, but the material has actually yielded at or near the stress level indicated as s_y . That point is determined by the *offset method*, in which a line is drawn parallel to the straight-line portion of the curve and is offset to the right by a set amount, usually 0.20% strain (0.002 in/in). The intersection of this line and the stress-strain curve defines the material's yield strength. In this book, the term *yield strength* will be used for s_y , regardless of whether the material exhibits a true yield point or whether the offset method is used.

Proportional Limit

That point on the stress-strain curve where it deviates from a straight line is called the *proportional limit*. That is, at or above that stress value, stress is no longer proportional to strain. Below the proportional limit, Hooke's law applies: Stress is proportional to strain. In mechanical design, materials are rarely used at stresses above the proportional limit.

Elastic Limit

At some point, called the *elastic limit*, a material experiences some amount of plastic strain and thus will not return to its original shape after release of the load. Below that level, the material behaves completely elastically. The proportional limit and the elastic limit lie quite close to the yield strength. Because they are difficult to determine, they are rarely reported.

Modulus of Elasticity in Tension, E

For the part of the stress-strain diagram that is straight, stress is proportional to strain, and the value of E , the *modulus of elasticity*, is the constant of proportionality. That is,

▷ Modulus of Elasticity in Tension

$$E = \frac{\text{stress}}{\text{strain}} = \frac{\sigma}{\epsilon} \quad (2-1)$$

This is the slope of the straight-line portion of the diagram. The modulus of elasticity indicates the stiffness of the material, or its resistance to deformation.

Ductility and Percent Elongation

Ductility is the degree to which a material will deform before ultimate fracture. The opposite of ductility is **brittleness**. When ductile materials are used in machine members, impending failure is detected easily, and sudden failure is unlikely. Also, ductile materials normally resist the repeated loads on machine elements better than brittle materials.

The usual measure of ductility is the *percent elongation* of the material after fracture in a standard tensile test. Figure 2–3 shows a typical standard tensile specimen before and after the test. Before the test, gage marks are placed on the bar, usually 2.00 in apart. Then, after the bar is broken, the two parts are fitted back together, and the final length between the gage marks is measured. The percent elongation is the difference between the final length and the original length divided by the original length, converted to a percentage. That is,

▷ Percent Elongation

$$\text{Percent elongation} = \frac{L_f - L_o}{L_o} \times 100\% \quad (2-2)$$

The percent elongation is assumed to be based on a gage length of 2.00 in unless some other gage length is specifically indicated. Tests of structural steels often use a gage length of 8.00 in.

Theoretically, a material is considered ductile if its percent elongation is greater than 5% (lower values indicate brittleness). For practical reasons, it is advisable to use a material with a value of 12% or higher for machine members subject to repeated loads or shock or impact.

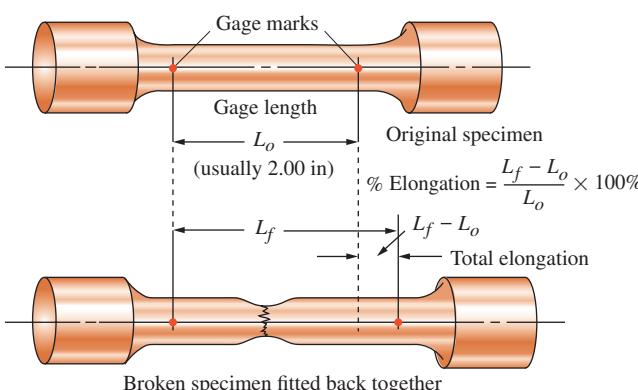


FIGURE 2–3 Measurement of percent elongation

Percent reduction in area is another indication of ductility. To find this value, compare the original cross-sectional area with the final area at the break for the tensile test specimen.

Shear Strength, s_{ys} and s_{us}

Both the yield strength and the ultimate strength in shear (s_{ys} and s_{us} , respectively) are important properties of materials. Unfortunately, these values are seldom reported. We will use the following estimates:

▷ Estimates for s_{ys} and s_{us}

$$s_{ys} = s_y/2 = 0.50 s_y = \text{yield strength in shear} \quad (2-3)$$

$$s_{us} = 0.75s_u = \text{ultimate strength in shear} \quad (2-4)$$

Poisson's Ratio, ν

When a material is subjected to a tensile strain, there is a simultaneous shortening of the cross-sectional dimensions perpendicular to the direction of the tensile strain. The ratio of the shortening strain to the tensile strain is called *Poisson's ratio*, usually denoted by ν , the Greek letter nu. (The Greek letter mu, μ , is sometimes used for this ratio.) Poisson's ratio is illustrated in Figure 2–4. Typical ranges of values for Poisson's ratio are shown in Table 2–1.

Modulus of Elasticity in Shear, G

The *modulus of elasticity in shear* (G) is the ratio of shearing stress to shearing strain. This property indicates a material's stiffness under shear loading—that is, the resistance to shear deformation. There is a simple relationship between E , G , and Poisson's ratio:

▷ Modulus of Elasticity in Shear


$$G = \frac{E}{2(1 + \nu)} \quad (2-5)$$

This equation is valid within the elastic range of the material.

Non-Destructive Measurement of Elastic Modulus and Poisson's Ratio

While most determinations for the elastic modulus in tension and in shear and the related property of Poisson's ratio are done using mechanical destructive testing as previously described, a nondestructive method exists that can be used for most metals, ceramics, and glasses. Internet sites 41 describes a method that uses a measurement of the velocity of sound in the material using an ultrasonic pulse-echo technique along with a thickness measuring device. A sample of material at least 12 mm (0.50 in) thick with smooth parallel surfaces is used. After measuring the sound velocity,

FIGURE 2–4 Illustration of Poisson’s ratio for an element in tension

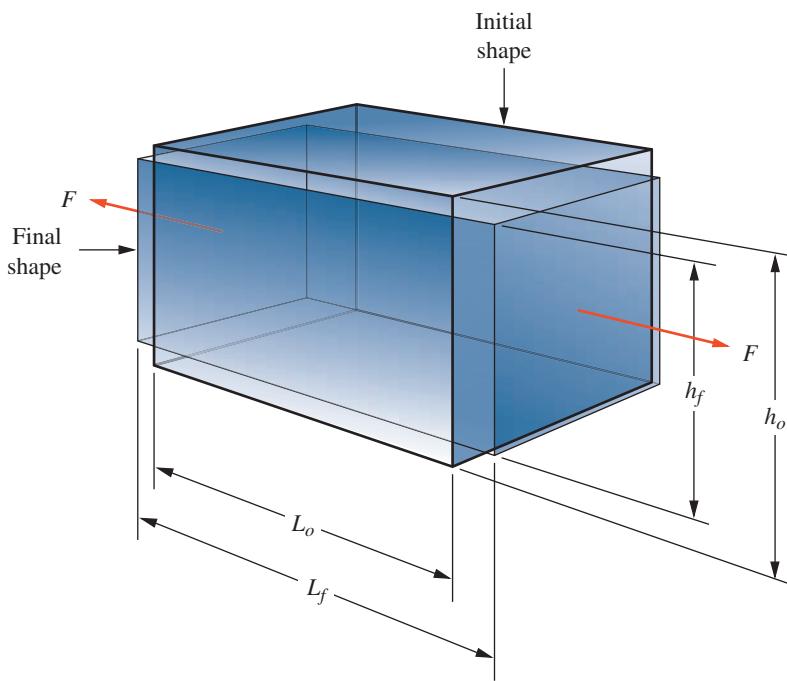

$$\text{Axial strain} = \frac{L_f - L_o}{L_o} = \epsilon_a$$

$$\text{Lateral strain} = \frac{h_f - h_o}{h_o} = \epsilon_L$$

$$\text{Poisson's ratio} = \frac{-\epsilon_L}{\epsilon_a} = \nu$$

TABLE 2–1 Approximate Values of Poisson’s Ratio, ν

| | | | |
|------------------------|-----------|------------------------|-------|
| Concrete | 0.10–0.25 | Aluminum (most alloys) | 0.33 |
| Glass | 0.24 | Brass | 0.33 |
| Ductile iron | 0.27 | Copper | 0.33 |
| Gray cast iron | 0.21 | Zinc | 0.33 |
| Plastics | 0.20–0.40 | Phosphor bronze | 0.35 |
| Carbon and alloy steel | 0.29 | Magnesium | 0.35 |
| Stainless steel (18-8) | 0.30 | Lead | 0.43 |
| Titanium | 0.30 | Rubber, elastomers | ~0.50 |

Notes: Values are approximate and vary somewhat with specific composition. Rubber and elastomers approach a limiting value of 0.50.

simple calculations enable determination of Poisson’s ratio, Young’s modulus (elastic modulus in tension), and shear modulus.


Flexural Strength and Flexural Modulus

For some materials, particularly plastics, additional properties in bending are obtained, called *flexural strength* and *flexural modulus*. Typical testing fixtures are shown in Figure 2–5 and testing should be done according to the recognized standards from either ASTM or ISO. ASTM D790¹ and ISO 178² use the 3-point bending principle [Part (a) of Figure 2–5], wherein a flat specimen is placed

on two cylindrical or knife-edge supports with a known span, L , between them. The bending force is applied at mid-span ($L/2$). The specimen for plastic materials is typically a flat strip with the dimensions shown. Its section modulus, S , is needed for bending stress calculations. From Appendix 1, $S = bh^2/6$. The maximum

¹ASTM International. *Standard Test Method for Flexural Properties of Unreinforced and Reinforced Plastics and Electrical Insulating Materials, Standard D790*. West Conshohocken, PA: ASTM International, DOI: 10.1520/D790-10, www.astm.org, 2010.

²International Standards Organization (ISO). *Plastics—Determination of Flexural Properties*. ISO 178:2001.

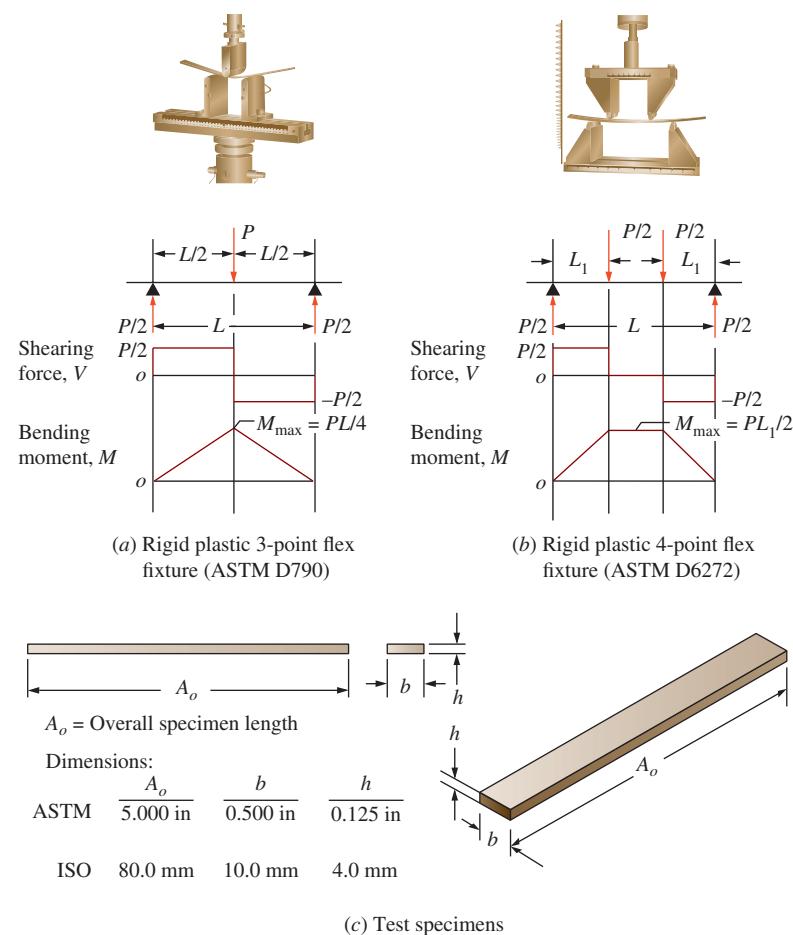FIGURE 2-5 Test fixtures for flexural testing

bending moment occurs at the point of load application and has the value, $M_{\max} = PL/4$. Then the flexural (bending) stress is:

$$\sigma = \frac{M_{\max}}{S} = \frac{PL/4}{bh^2/6} = \frac{1.5PL}{bh^2} \quad (2-6)$$

The stress at break or after a certain specified percentage of deflection is reported as the flexural strength. One disadvantage of this method is that shearing stress exists along with bending stress and that may affect the results for some specimens.

Flexural modulus is measured as the slope of the load-deflection curve taken during the test at the straight-line portion, if any. Some plastic materials exhibit a nonlinear slope for the curve and other techniques should be used. One uses a *secant* line drawn between two agreed-upon points on the curve.

The 4-point bending principle, as used in ASTM D6272³ and ISO 14125⁴, overcomes the shearing stress issue described above because the highest stressed part of the beam experiences no shearing force. See Part (b)

of Figure 2-5. The distances, L_1 , from the supports to each load are the same. Then, $M_{\max} = PL_1/2$ and the flexural stress is:

$$\sigma = \frac{M_{\max}}{S} = \frac{PL_1/2}{bh^2/6} = \frac{3PL_1}{bh^2} \quad (2-7)$$

Hardness

The resistance of a material to indentation by a penetrator is an indication of its *hardness*. Hardness in a steel indicates wear resistance as well as strength. Wear resistance will be discussed in later chapters, particularly with regard to gear teeth. Several types of devices, procedures, and penetrators measure hardness; the Brinell hardness tester and the Rockwell hardness tester are most frequently used for machine elements. For steels, the Brinell hardness tester employs a hardened steel ball 10 mm in diameter as the penetrator under a load of 3000-kg force. The load causes a permanent indentation in the test material, and the diameter of the indentation is related to the Brinell hardness number, which is abbreviated BHN or HB. The actual quantity being measured is the load divided by the contact area of the indentation. For steels, the value of HB ranges from approximately 100 for an annealed, low-carbon steel to more than 700 for high-strength, high-alloy steels in the as-quenched condition. In the high ranges, above HB 500,

³ASTM International. *Standard Test Method for Flexural Properties of Unreinforced and Reinforced Plastics and Electrical Insulating Materials by Four-Point Bending*, Standard D6272. West Conshohocken, PA: ASTM International, DOI: 10.1520/D6272-10, www.astm.org, 2010.

⁴International Standards Organization (ISO). *Fibre-Reinforced Plastic Composites—Determination of Flexural Properties*. ISO 14125:1998/Cor.1:2001(E).

the penetrator is sometimes made of tungsten carbide rather than steel. For softer metals, a 500-kg load is used.

The Rockwell hardness tester uses a hardened steel ball with a 1/16-in diameter under a load of 100-kg force for softer metals, and the resulting hardness is listed as Rockwell B, R_B , or HRB. For harder metals, such as heat-treated alloy steels, the Rockwell C scale is used. A load of 150-kg force is placed on a diamond penetrator (a *brale* penetrator) made in a spheroid-conical shape. Rockwell C hardness is sometimes referred to as R_C or HRC. Many other Rockwell scales are used.

The Brinell and Rockwell methods are based on different parameters and lead to quite different numbers. However, since they both measure hardness, there is a correlation between them, as noted in Appendix 17 and Figure 2–6. It is also important to note that, especially for highly hardenable alloy steels, there is a nearly linear relationship between the Brinell hardness number and the tensile strength of the steel, according to the equation

▷ Approximate Relationship between Hardness and Strength for Steel

$$0.50(\text{HB}) = \text{approximate tensile strength (ksi)} \quad (2-8)$$

This relationship is shown in Figure 2–6.

To compare the hardness scales with the tensile strength, consider Table 2–2. Note that there is some overlap between the HRB and HRC scales. Normally, HRB is used for the softer metals and ranges from approximately 60 to 100, whereas HRC is used for harder metals and ranges from 20 to 65. Using HRB numbers above 100 or HRC numbers below 20 is not recommended. Those shown in Table 2–2 are for comparison purposes only.

The Vickers hardness test, preferred in some European countries and elsewhere, is similar to the Brinell test except for the nature of the penetrator (square-based diamond pyramid) and the applied load, typically 50 kg. Appendix 17 includes the Vickers hardness for comparison with Brinell and Rockwell hardness values. See also Reference 38.

Whereas Rockwell B and C scales are used for substantial components made from steels, other Rockwell hardness scales can be used for different materials as listed in Table 2–3.

For plastics, rubbers, and elastomers, it is typical to use the Shore or IRHD (International rubber hardness degree) methods. Table 2–4 lists some of the more

FIGURE 2–6 Hardness conversions

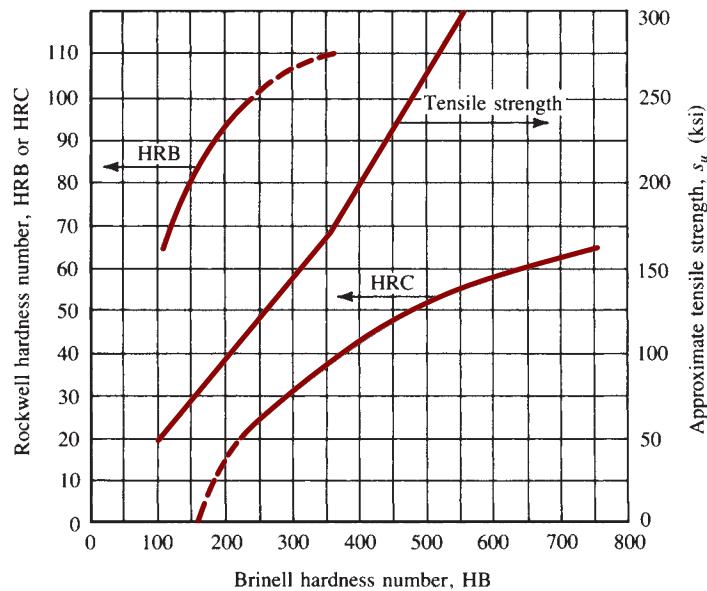


TABLE 2–2 Comparison of Hardness Scales with Tensile Strength

| Material and condition | Hardness | | | Tensile strength | |
|------------------------|----------|-----|-----|------------------|------|
| | HB | HRB | HRC | ksi | MPa |
| 1020 annealed | 121 | 70 | | 60 | 414 |
| 1040 hot-rolled | 144 | 79 | | 72 | 496 |
| 4140 annealed | 197 | 93 | 13 | 95 | 655 |
| 4140 OQT 1000 | 341 | 109 | 37 | 168 | 1160 |
| 4140 OQT 700 | 461 | | 49 | 231 | 1590 |

TABLE 2-3 Rockwell Hardness Scales and Their Uses

| Scale | Symbol | Typical uses |
|-------|--------|---|
| A | HRA | Thin steel, hardened steel with shallow case |
| B | HRB | Softer steels such as low carbon, annealed or hot-rolled; softer aluminum, copper, cast irons |
| C | HRC | Harder steels such as heat-treated alloy steels, tool steels, titanium |
| D | HRD | Medium-depth case-hardened steels, harder cast irons |
| E | HRE | Harder bearing metals, aluminum, magnesium, cast irons |
| F | HRF | Soft thin sheet metals, annealed copper and zinc alloys |
| G | HRG | Beryllium copper, phosphor bronze, softer cast irons |
| H | HRH | Aluminum, zinc, lead |
| K | HRK | Softer bearing metals, plastics, rubbers, and other soft materials. Scales L, M, P, R, S, V, and α also available |
| 15 N | HR15N | Similar to A scale but for thinner materials or thin case hardening |
| 30 N | HR30N | Similar to C scale but for thinner materials or thin case hardening |
| 45 N | HR45N | Similar to D scale but for thinner materials or thin case hardening |
| 15 T | HR15T | Similar to B scale but for thinner materials |
| 30 T | HR30T | Similar to F scale but for thinner materials |
| 45 T | HR45T | Similar to G scale but for thinner materials |

Notes: Measurement devices use different indenter sizes and shapes and applied forces. For details, consult standards ASTM E18, ISO 6508.

TABLE 2-4 Hardness Measurement for Plastics, Rubbers, and Elastomers

| Shore method | | |
|--------------------|-----------|--|
| Scale of durometer | Symbol | Typical uses |
| A | Shore A | Soft vulcanized natural rubbers, elastomers (e.g., neoprene), leather, wax, felt |
| B | Shore B | Moderately hard rubber as used for printer rolls and platens |
| C | Shore C | Medium hard rubbers and plastics |
| D | Shore D | Hard rubbers and plastics such as vinyl sheets, Plexiglas, laminate countertops |
| DO | Shore DO | Very dense textile windings |
| O | Shore O | Soft rubber such as artgum; textile windings |
| OO | Shore OO | Low density textile windings; sponge rubber |
| OOO | Shore OOO | Soft plastic foams |
| T | Shore T | Medium density textiles on spools |
| M | Shore M | Rubber O-rings and thin sheet rubber |

| IRHD method (International rubber hardness degree) | |
|--|--|
| Name | Typical uses |
| IRHD Micro | Small: O-rings, small components, thin materials |
| IRHD Macro L | Soft: Readings up to 35 IRHD L |
| IRHD Macro N | Normal: Readings from 30 IRHD N to 100 IRHD N |

Notes: Measurement devices use different indenter sizes and shapes and applied forces. For details, consult standards ASTM D2240, ISO 868, or DIN 53505.

popular scales. Also used for some plastics are the Rockwell R, L, M, E, K, and α scales. These vary by the size and geometry of the indenter and the applied force.

Other hardness measurement methods include Knoop, Universal, and rebound hardness.

Wear in Mechanical Devices

Wear is an issue whenever two components operate with relative motion between them or when liquids or solids impinge on a surface at high velocity. The action of one surface on another tends to develop material loss, scoring, or roughening of the mating surfaces. Wear is often cumulative and can eventually render the components incapable of delivering their expected performance. See References 4, 7, 24, and 34. Failure modes include developing:

- Excessive clearances between the mating objects
- Noise
- Unacceptable appearance of either mating surface
- Increased friction at the mating surfaces
- Progressive rise in temperature at the mating surfaces
- Seizure resulting in complete stoppage of the device

Designers must take steps to minimize wear by proper material selection, surface preparation during manufacture, lubrication of the mating surfaces, periodic inspection, and remedial steps to overcome the effects of wear in early stages.

While not really a material property itself, it is pertinent to mention wear in this chapter because the characteristics of the materials at the mating surfaces determine the potential for wear to occur and to what degree. Conditions that the designer must control include:

- Chemical compatibility of the materials of the two contacting surfaces, of any lubricant present, and the environment in which the equipment is to operate to inhibit corrosion that would build up on mating surfaces, cause roughening, increase friction, and initiate material removal.
- The hardness of the materials at the contacting surfaces; typically harder materials have greater ability to resist wear, although exceptions occur.
- The smoothness of the surface finish at areas of contact to minimize the tendency for microscopic hills and valleys to come into contact.
- The physical size of the mating area over which applied forces act to control the effective pressure between mating bodies to a manageable level.
- The inherent coefficient of friction between the mating surfaces at operating conditions.
- The type of lubricant used, if any, and its ability to effectively separate the sliding bodies while under load.
- Control of the temperature of the mating components and of any lubricant used because elevated

temperatures can reduce the effectiveness of the lubricant and lower the strength of the materials in contact.

- The cleanliness of the lubricant and of the surfaces themselves because even small solid particles between the mating surfaces can initiate scoring and roughening of the surfaces.

Several kinds of wear can exist.

- **Erosive wear**—The displacement of particles from a surface due to impact of solids or liquids on a surface as might occur on equipment subjected to wind and rain or the insides of pipes, elbows, and other fittings carrying liquids or gases containing solids, called slurries.
- **Abrasive wear**—The mechanical tearing of particles from one material by the action of the mating material resulting in the loss of mass from one or both materials.
- **Adhesive wear**—The tendency of one material to adhere to the mating material and subsequently remove particles by breaking the adhesion and making the surfaces rougher.
- **Fretting wear**—Cyclical relative motion of two tightly joined parts under high surface pressure as might occur with connectors, fasteners, clamps, and similar situations where even vibration can initiate fretting wear.
- **Surface fatigue**—Progressive damage caused by creating high contact stresses between mating components that eventually lead to fatigue failure of one of the mating components. Examples include the action of rolling balls or rollers on the inner or outer races of bearings, treads of wheels rolling on rails or flat surfaces, and supports for beams where high stresses and relative motion can occur.

It is virtually impossible to predict the amount of wear that may occur in a given situation and testing of the proposed design is recommended. At times, designers can benefit from test data from samples of materials under controlled loads and mating conditions. At least a measure of relative merit or ranking of certain combinations of materials can be determined. Standardized testing can be done using either of two methods described by ASTM International (See Internet site 5):

1. ASTM Standard G65-15 Standard Test Method for Measuring Abrasion Using the Dry Sand/Rubber Wheel Apparatus, DOI: 10.1520/G0065-15.
 - a. Conditions are standardized for abrasive particle size, shape, and hardness; the magnitude of the stress imposed by the particle; and the frequency of contact of the abrasive particles to create scratching abrasion. Volume loss from the test materials is measured.
2. ASTM Standard G132-2013 Standard Test Method for Pin Abrasion Testing, DOI: 10.1520/G0132-13.
 - a. Relative motion is established between flat surfaces of two materials while maintaining a measurable force between them. Mass loss from the test materials is measured.

Machinability

Machinability is related to the ease with which a material can be machined to a good surface finish with reasonable tool life. Production rates are directly affected by machinability. It is difficult to define measurable properties related to machinability, so machinability is usually reported in comparative terms, relating the performance of a given material with some standard.

Toughness, Impact Energy

Toughness is the ability of a material to absorb applied energy without failure. Parts subjected to suddenly applied loads, shock, or impact need a high level of toughness. Several methods are used to measure the amount of energy required to break a particular specimen made from a material of interest. The energy absorption value from such tests is often called *impact energy* or *impact resistance*. However, it is important to note that the actual value is highly dependent on the nature of the test sample, particularly its geometry. It is not possible to use the test results in a quantitative way when making design calculations. Rather, the impact energy for several candidate materials for a particular application can be compared with each other as a qualitative indication of their toughness. The final design should be tested under real service conditions to verify its ability to survive safely during expected use.

For metals and plastics, two methods of determining impact energy, *Izod* and *Charpy*, are popular, with data often reported in the literature from vendors of the material. Figure 2–7 shows sketches of the dimensions of standard specimens and the manner of loading. In

each method, a pendulum with a heavy mass carrying a specially designed striker is allowed to fall from a known height. The striker contacts the specimen with a high velocity at the bottom of the pendulum's arc; therefore, the pendulum possesses a known amount of kinetic energy. The specimen is typically broken during the test, taking some of the energy from the pendulum but allowing it to pass through the test area. The testing machine is configured to measure the final height to which the pendulum swings and to indicate the amount of energy removed. That value is reported in energy units of J (Joules or N·m) or ft·lb. Some highly ductile metals and many plastics do not break during the test, and the result is then reported as *No Break*.

The standard *Izod* test employs a square specimen with a V-shaped notch carefully machined 2.0 mm (0.079 in) deep according to specifications in ASTM standard D 256.⁵ The specimen is clamped in a special vise with the notch aligned with the top edge of the vise. The striker contacts the specimen at a height of 22 mm above the notch, loading it as a cantilever in bending. When used for plastics, the width dimension can be different from that shown in Figure 2–7. This obviously changes the total amount of energy that the specimen will absorb during fracture. Therefore, the data for impact energy are divided by the actual width of the specimen, and the results are reported in units of N·m/m or ft·lb/in. Also, some vendors and customers may agree to test the material with the

⁵ASTM International. *Standard Test Methods for Determining the Izod Pendulum Impact Resistance of Plastics*, Standard D256-10e1. West Conshohocken, PA: ASTM International, DOI: 10.1520/D0256-10, 2010.

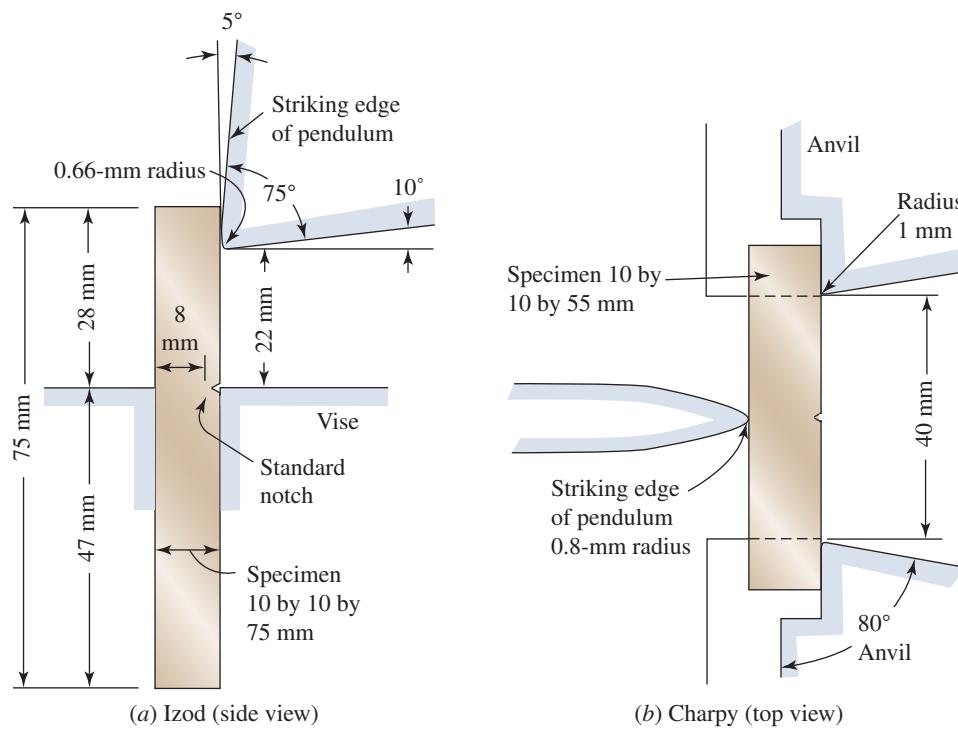


FIGURE 2–7 Impact testing using Charpy and Izod methods

notch facing away from the striker rather than toward it as shown in Figure 2–7. This gives a measure of the material's impact energy with less influence from the notch.

The *Charpy* test also uses a square specimen with a 2.0 mm (0.079 in) deep notch, but it is centered along the length. The specimen is placed against a rigid anvil without being clamped. See ASTM standard A 370⁶ for the specific geometry and testing procedure. The notch faces away from the place where the striker contacts the specimen. The loading can be described as the bending of a simply supported beam. The Charpy test is most often used for testing metals.

Another impact testing method used for some plastics, composites, and completed products is the *drop-weight* tester. Here a known mass is elevated vertically above the test specimen to a specified height. Thus, it has a known amount of potential energy. Allowing the mass to fall freely imparts a predictable amount of kinetic energy to the specimen clamped to a rigid base. The initial energy, the manner of support, the specimen geometry, and the shape of the striker (called a *tup*) are critical to the results found. One standard method, described in ASTM D 3763,⁷ employs a spherical tup with a diameter of 12.7 mm (0.50 in). The tup usually pierces the specimen. The apparatus is typically equipped with sensors that measure and plot the load versus deflection characteristics dynamically, giving the designer much information about how the material behaves during an impact event. Summary data reported typically include maximum load, deflection of the specimen at the point of maximum load, and the energy dissipated up to the maximum load point. The energy is calculated by determining the area under the load-deflection diagram. The appearance of the test

⁶ASTM International. *Standard Test Methods and Definitions for Mechanical Testing of Steel Products, Standard A370-15*. West Conshohocken, PA: ASTM International, DOI: 10.1520/A0370-2015.

⁷ASTM International. *Standard Test Methods for High Speed Puncture of Plastics Using Load and Displacement Sensors, Standard D3763-15*. West Conshohocken, PA: ASTM International, DOI: 10.1520/D3763-2015.

specimen is also described, indicating whether fracture occurred and whether it was a ductile or brittle fracture.

Fatigue Strength or Endurance Strength

Parts subjected to repeated applications of loads or to stress conditions that vary with time over several thousands or millions of cycles fail because of the phenomenon of *fatigue*. Materials are tested under controlled cyclic loading to determine their ability to resist such repeated loads. The resulting data are reported as the *fatigue strength*, also called the *endurance strength* of the material. (See Chapter 5.)

Creep

When materials are subjected to high loads continuously, they may experience progressive elongation over time. This phenomenon, called *creep*, should be considered for metals operating at high temperatures. You should check for creep when the operating temperature of a loaded metal member exceeds approximately 0.3 (T_m) where T_m is the melting temperature expressed as an absolute temperature. (See Reference 25.) Creep can be important for critical members in internal combustion engines, furnaces, steam turbines, gas turbines, nuclear reactors, or rocket engines. The stress can be tension, compression, flexure, or shear. (See Reference 12.)

Figure 2–8 shows the typical behavior of metals that creep. The vertical axis is the creep strain, in units such as in/in or mm/mm, over that which occurs initially as the load is applied. The horizontal axis is time, typically measured in hours because creep develops slowly over a long term. During the primary portion of the creep strain versus time curve, the rate of increase in strain initially rises with a rather steep slope that then decreases. The slope is constant (straight line) during the secondary portion of the curve. Then the slope increases in the tertiary portion that precedes the ultimate fracture of the material.

Creep is measured by subjecting a specimen to a known steady load, possibly through application of a

FIGURE 2–8 Typical creep behavior


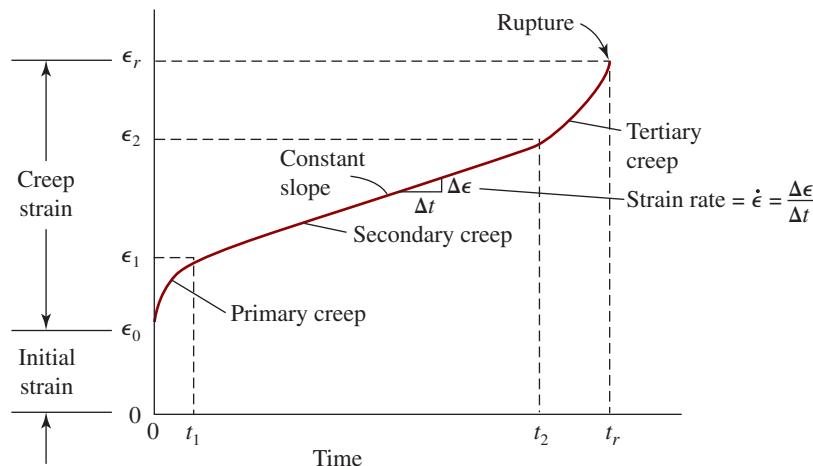


FIGURE 2–9 Example of stress versus strain as a function of time for nylon 66 plastic at 23°C (73°F)

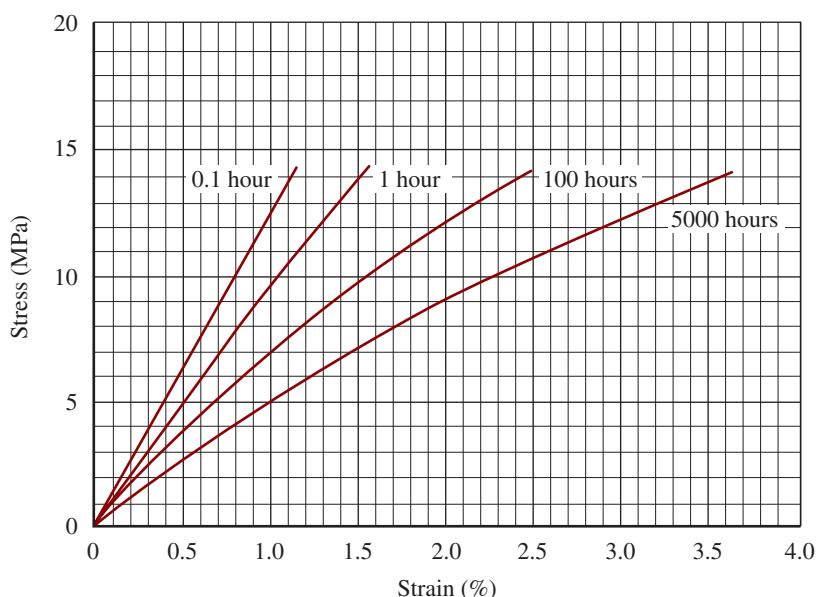

dead weight, while the specimen is heated and maintained at a uniform temperature. Data for strain versus time are taken at least into the secondary creep stage and possibly all the way to fracture to determine the creep rupture strain. Testing over a range of temperatures gives a family of curves that are useful for design.

Creep can occur for many plastics even at or near room temperature. Figure 2–9 shows one way that creep data are displayed for plastic materials. (See References 14.) It is a graph of applied stress versus strain in the member with data shown for a specific temperature of the specimen. The curves show the amount of strain that would be developed within the specified times at increasing stress levels. For example, if this material were subjected to a constant stress of

5.0 MPa for 5000 hours, the total strain would be 1.0%. That is, the specimen would elongate by an amount 0.01 times the original length. If the stress were 10.0 MPa for 5000 hours, the total strain would be approximately 2.25%. The designer must take this creep strain into account to ensure that the product performs satisfactorily over time.

Relaxation

A phenomenon related to creep occurs when a member under stress is captured under load, giving it a certain fixed length and a fixed strain. Over time, the stress in the member would decrease, exhibiting a behavior called *relaxation*. This is important in such applications

Example Problem 2–1 A solid circular bar has a diameter of 5.0 mm and a length of 250 mm. It is made from nylon 66 plastic (30% Glass, 50% R.H.) and subjected to a steady tensile load of 240 N. Compute the elongation of the bar immediately after the load is applied and after 5000 hours (approximately seven months). See Appendix 13 and See Figure 2–9 for properties of the nylon.

Solution The stress and deflection immediately after loading will first be computed using fundamental equations of strength of materials:

$$\sigma = F/A \text{ and } \delta = FL/EA$$

See Chapter 3 for a review of strength of materials.

Then creep data from Figure 2–9 will be applied to determine the elongation after 5000 hours.

Results Stress:
The cross-sectional area of the bar is

$$A = \pi D^2/4 = \pi(5.0 \text{ mm})^2/4 = 19.63 \text{ mm}^2$$

$$\sigma = \frac{F}{A} = \frac{240 \text{ N}}{19.63 \text{ mm}^2} = 12.2 \text{ N/mm}^2 = 12.2 \text{ MPa}$$

Appendix 13 lists the tensile strength for nylon 66 to be 102 MPa. Therefore, the rod is safe from fracture.

Elongation:

The tensile modulus of elasticity for nylon 66 is found from Appendix 13 to be $E = 5500 \text{ MPa}$. Then the initial elongation is,

$$\delta = \frac{FL}{EA} = \frac{(240 \text{ N})(250 \text{ mm})}{(5500 \text{ N/mm}^2)(19.63 \text{ mm}^2)} = 0.556 \text{ mm}$$

Creep:

Referring to Figure 2–9 we find that when a tensile stress of 12.2 MPa is applied to the nylon 66 plastic for 5000 hours, a total strain of approximately 2.95% occurs. This can be expressed as

$$\epsilon = 2.95\% = 0.0295 \text{ mm/mm} = \delta/L$$

Then,

$$\delta = \epsilon L = (0.0295 \text{ mm/mm})(250 \text{ mm}) = 7.375 \text{ mm}$$

Comment This is approximately seven times as much deformation as originally experienced when the load was applied. So designing with the reported value of modulus of elasticity is not appropriate when stresses are applied continuously for a long time. We can now compute an apparent modulus of elasticity, E_{app} , for this material at the 5000 hours service life.

$$E_{app} = \sigma/\epsilon = (12.2 \text{ MPa})/(0.0295 \text{ mm/mm}) = 414 \text{ MPa}$$


as clamped joints, press-fit parts, and springs installed with a fixed deflection. Figure 2–10 shows the comparison between creep and relaxation. For stresses below approximately 1/3 of the ultimate tensile strength of the material at any temperature, the apparent modulus in either creep or relaxation at any time of loading may be considered similar for engineering purposes. Furthermore, values for apparent modulus are the same for tension, compression, or flexure. (See Reference 14.) Analysis of relaxation is complicated by the fact that as the stress decreases, the rate of creep also decreases. Additional material data beyond that typically reported would be required to accurately predict the amount of relaxation at any given time. Testing under realistic conditions is recommended.

Physical Properties

Here we will discuss density, coefficient of thermal expansion, thermal conductivity, and electrical resistivity.

Density. Density is defined as the mass per unit volume of a material. Its usual units are kg/m^3 in the SI and lb/in^3 in the U.S. Customary Unit System, where the pound unit is taken to be pounds-mass. The Greek letter rho (ρ) is the symbol for density.


In some applications, the term *specific weight* or *weight density* is used to indicate the weight per unit volume of a material. Typical units are N/m^3 in the SI and lb/in^3 in the U.S. Customary Unit System, where the pound is taken to be pounds-force. The Greek letter gamma (γ) is the symbol for specific weight.

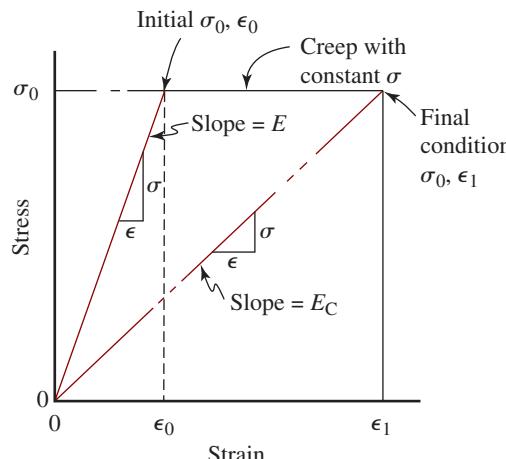

$$E = \frac{\sigma_0}{\epsilon_0} = \text{Tensile modulus}$$

$$E_C = \frac{\sigma_0}{\epsilon_1} = \text{Creep modulus}$$

(a) Creep behavior

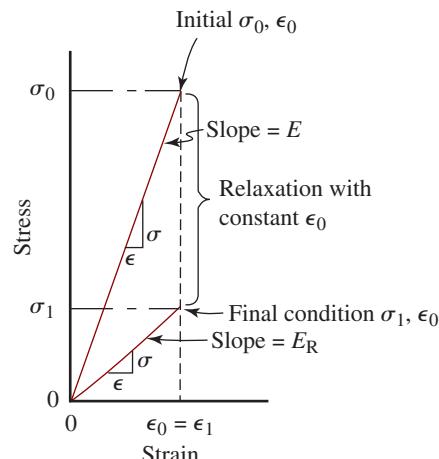

$$E = \frac{\sigma_0}{\epsilon_0} = \text{Tensile modulus}$$

$$E_R = \frac{\sigma_1}{\epsilon_0} = \text{Relaxation modulus}$$

(b) Relaxation behavior

FIGURE 2–10 Comparison of creep and relaxation

Coefficient of Thermal Expansion. The *coefficient of thermal expansion* is a measure of the change in length of a material subjected to a change in temperature. It is defined by the relation

▷ Coefficient of Thermal Expansion

$$\alpha = \frac{\text{change in length}}{L_o(\Delta T)} = \frac{\text{strain}}{(\Delta T)} = \frac{\epsilon}{(\Delta T)} \quad (2-9)$$

where L_o = original length

ΔT = change in temperature

Virtually all metals and plastics expand with increasing temperature, but different materials expand at different rates. For machines and structures containing parts of more than one material, the different rates can have a significant effect on the performance of the assembly and on the stresses produced.

Thermal Conductivity. *Thermal conductivity* is the property of a material that indicates its ability to transfer heat. Where machine elements operate in hot environments or where significant internal heat is generated, the ability of the elements or of the machine's housing to transfer heat away can affect machine performance. For example, wormgear speed reducers typically generate frictional heat due to the rubbing contact between the worm and the wormgear teeth. If not adequately transferred, heat causes the lubricant to lose its effectiveness, allowing rapid gear-tooth wear.

Electrical Resistivity. For machine elements that conduct electricity while carrying loads, the electrical resistivity of the material is as important as its strength. *Electrical resistivity* is a measure of the resistance offered by a given thickness of a material; it is measured in ohm-centimeters ($\Omega \cdot \text{cm}$). *Electrical conductivity*, a measure of the capacity of a material to conduct electric current, is sometimes used instead of resistivity. It is often reported as a percentage of the conductivity of a reference material, usually the International Annealed Copper Standard.

2-3 CLASSIFICATION OF METALS AND ALLOYS

Various industry associations take responsibility for setting standards for the classification of metals and alloys. Each has its own numbering system, convenient to the particular metal covered by the standard. But this leads to confusion at times when there is overlap between two or more standards and when widely different schemes are used to denote the metals. Order has been brought to the classification of metals by the use of the Unified Numbering Systems (UNS) as defined in the Standard E 527-12, *Standard Practice for Numbering Metals and Alloys (UNS)*, by the American Society for Testing and Materials, or ASTM. (See Reference 23.) Besides listing materials under the control of ASTM itself, the UNS coordinates designations of the following:

The Aluminum Association (AA)

The American Iron and Steel Institute (AISI)

The Copper Development Association (CDA)

The Society of Automotive Engineers (SAE)

The primary series of numbers within UNS are listed in Table 2-5, along with the organization having responsibility for assigning numbers within each series.

Recent Developments in Steel Designations

The most-used type of material for machine elements in this book is steel. Section 2-5 presents significant information on the various types of steel and their conditions as it relates to design decisions. For many years, two organizations, AISI and SAE, have played major roles in cataloging steels and in specifying the designation systems used in the United States. This work was coordinated with steel producers, professional societies, and design engineers in several steel-using sectors of industry. To a large extent, the designation systems of AISI and SAE were identical. The automotive industry tended to use the SAE system while a broad array of other industries used the AISI system. In recent years, the AISI has discontinued the practice of assigning steel designation numbers, and the SAE now plays the lead role.

In parallel with these developments, standards-writing committees of SAE, in cooperation with ASTM, began a process of broadening the designation systems for wrought and rolled steels beyond the series listed in Table 2-5. New systems for series G, H, and K have been developed and are described in SAE Standard J402 (R) *New Steel Designation System for Wrought or Rolled Steel*. These new steel designations are the same in both the SAE and UNS systems as described in SAE Standard J402 and the joint SAE J1086/ASTM E527 publication. Many of the alloys listed within series G, H, and K retain the familiar four-digit AISI and SAE designations as a part of the UNS number. Details of the new steel designations will be discussed in Section 2-5.

Aerospace Materials System (AMS). The development of the AMS system for designating materials resulted from the needs for special materials to meet the unique conditions encountered in aerospace applications. Aerospace Materials Specifications (AMS), published by SAE, are complete specifications that are generally adequate for procurement purposes. Most of the AMS designations pertain to materials intended for aerospace applications. The specifications may include mechanical property requirements significantly more severe than those for grades of steel having similar compositions but intended for other applications. Processing requirements, such as for consumable electrode remelting, are common in AMS steels.

AMS standards can be accessed through Internet site 4 for SAE International by selecting the *Standards* tab, then *Standards by Industry*, then *Aerospace*. At that point, if you are looking for a standard for a particular steel alloy, use the keyword search and enter the SAE alloy designation. For example, searching on "SAE 4340" will bring up several standards for the application

TABLE 2-5 Unified Numbering System (UNS)

| Number series | Types of metals and alloys | Responsible organization |
|-------------------------------------|--|--------------------------|
| Nonferrous metals and alloys | | |
| A00001–A99999 | Aluminum and aluminum alloys | AA |
| C00001–C99999 | Copper and copper alloys | CDA |
| E00001–E99999 | Rare earth metals and alloys | ASTM |
| L00001–L99999 | Low-melting metals and alloys | ASTM |
| M00001–M99999 | Miscellaneous nonferrous metals and alloys | ASTM |
| N00001–N99999 | Nickel and nickel alloys | SAE |
| P00001–P99999 | Precious metals and alloys | ASTM |
| R00001–R99999 | Reactive and refractory metals and alloys | SAE |
| Z00001–Z99999 | Zinc and zinc alloys | ASTM |
| Ferrous metals and alloys | | |
| D00001–D99999 | Steels; mechanical properties specified | SAE |
| F00001–F99999 | Cast irons and cast steels | ASTM |
| ¹ G00001–G99999 | Carbon and alloy steels | SAE |
| ¹ H00001–H99999 | H-steels; specified hardenability | SAE |
| J00001–J99999 | Cast steels (except tool steels) | ASTM |
| ¹ K00001–K99999 | Miscellaneous steels and ferrous alloys | SAE |
| S00001–S99999 | Heat- and corrosion-resistant (stainless) steels | ASTM |
| T00001–T99999 | Tool steels | SAE |

Note: ¹The series G, H, and K systems have been changed as described in Section 2-5. For a time, both the form listed in this table and the new system may be seen in practice.

of this alloy with SAE 4340 in red. Standards deal with this material in bars, forgings, tubing, sheet, strip, plate, welding wire, castings, and several more.

Note that the lists of SAE and AMS standards on the SAE website include many other types of materials: *Adhesives, Sealants, Fabrics, Ceramics, Composites, Foams, Polymers*, and many more.

Material Property Data Used in This Book

The following sections of this chapter provide much additional detail about the types of metals, plastics, and composites for which data are given in the appendix and which are used in example problems, problems for your solution, and design projects. Here, we give an overview of those data and you are advised to peruse the appendix tables and those included in this section to become acquainted with the type of data available. This extensive set of data provides you with many options when selecting a material for a given design and gives you experience comparing their properties.

Appendices

- A-3 Properties of carbon and alloy steels
- A-4 Properties of heat-treated steels
- A-5 Properties of carburized steels
- A-6 Properties of stainless steels

- A-7 Properties of structural steels
- A-8 Properties of cast iron
- A-9 Properties of aluminum
- A-10 Properties of die cast zinc and magnesium alloys
- A-11 Properties of nickel-based alloys and titanium alloys
- A-12 Properties of bronze, brass, and other copper alloys
- A-13 Properties of selected plastics

Typical information and property data given for the materials are:

- Material name, type, and condition
 - For metals, conditions are typically hot-rolled, cold-drawn, annealed, normalized, or heat-treated. It is essential to specify the condition in order to fully predict the properties
- Tensile strength; sometimes called ultimate strength
 - For plastics, flexural strength and flexural modulus are also given
- Yield strength
- Percent elongation, used as a measure of the ductility of metals
- Impact strength for some metals and plastics
- Physical property data: modulus of elasticity, density; sometimes given in footnotes

Other pertinent data are given for particular types of materials.

Metals Used for Commercially Available Shapes

Many designs for components of machines are fabricated from standard forms produced by metal suppliers, including round bars, hexagonal bars, square bars, rectangular bars, thin flat strip, and thicker sheets or plates. Other designs call for use of commercially available shapes having good strength and stiffness properties in bending or torsion. Appendix 15 gives 19 tables of dimensional data for several kinds of commercially available shapes:

1. Angles or L-shapes
2. Channels or C-shapes

3. I-beam shapes

4. Hollow tubing: round, pipe, square, and rectangular

Footnotes to the tables suggest suppliers offering the given shapes. You should go to companies' Internet sites to determine actual materials offered.

Suppliers of such shapes typically offer only selected types of materials in a few conditions as stock products. Table 2–6 lists some of the more commonly used materials with their properties, for carbons and alloy steels, stainless steels, and aluminum alloys. These data will be useful to you for design projects where you are asked to specify shape, size, and material for a component. While it is possible to obtain such products in other materials, it is usually less costly to specify standard alloys.

TABLE 2-6 Common Metals and Alloys Used for Commercially Available Rolled, Welded, and Extruded Shapes

| Ref. | Material and alloy | Shapes | Tensile strength (ksi) | Tensile strength (MPa) | Yield strength (ksi) | Yield strength (MPa) |
|--------------------------------|--------------------|--|---------------------------|---------------------------|-------------------------|-------------------------|
| Carbon and alloy steels | | | | | | |
| a | ASTM A36 | Rolled shapes; S-beams, angles, channels, plates, bars | 58 | 400 | 36 | 248 |
| b | ASTM A500 GR-B | Tubing; round, square, rectangular | 58 | 400 | 42 | 290 |
| c | ASTM A992 | Rolled W-shapes | 65 | 448 | 50 | 345 |
| d | 1018 HR | Bars, hexagons, squares, rectangles | 55 | 379 | 40 | 276 |
| e | 1018 CD | Bars, hexagons, squares, rectangles | 70 | 483 | 60 | 414 |
| f | 1045 HR | Bars, hexagons, squares, rectangles | 90 | 621 | 55 | 379 |
| g | 1045 CD | Bars, hexagons, squares, rectangles | 90 | 621 | 75 | 517 |
| h | 1117 HR | Bars, hexagons, squares, rectangles | 65 | 448 | 40 | 276 |
| i | 1117 CD | Bars, hexagons, squares, rectangles | 80 | 552 | 65 | 448 |
| j | 1141 HR | Bars, hexagons, squares, rectangles | 95 | 655 | 55 | 379 |
| k | 1141 CD | Bars, hexagons, squares, rectangles | 100 | 690 | 85 | 586 |
| l | 4140 Annealed | Bars, hexagons, squares, rectangles | 95 | 655 | 54 | 372 |
| m | 8620 HR | Bars, hexagons, squares, rectangles | 80 | 552 | 60 | 414 |
| n | 8620 CD | Bars, hexagons, squares, rectangles | 95 | 655 | 80 | 552 |
| Stainless steels | | | | | | |
| o | 304 Annealed | Bars, hexagons, squares, rectangles, tubing (round, square, rectangular) | 85 | 586 | 35 | 241 |
| p | 316 Annealed | Bars, hexagons, squares, rectangles, tubing (round, square, rectangular) | 80 | 552 | 30 | 207 |
| Aluminum | | | | | | |
| q | 2011-T3 | Bars, hexagons, squares, rectangles | 55 | 379 | 43 | 296 |
| r | 2017-T4 | Bars, hexagons, squares, rectangles | 62 | 427 | 40 | 276 |
| s | 2024-T4 | Bars, hexagons, squares, rectangles | 68 | 469 | 47 | 324 |
| t | 3003-H14 | Sheet, plate, tubing (round, square, rectangular) | 22 | 152 | 21 | 145 |
| u | 6061-T6 | Bars, hexagons, squares, rectangles, tubing (round, square, rectangular), extruded structural shapes | 45 | 310 | 40 | 276 |
| v | 6063-T6 | Bars, hexagons, squares, rectangles, tubing (round, square, rectangular), extruded structural shapes | 35 | 241 | 31 | 214 |

Notes: Properties are typical but not guaranteed. Other materials are available.

Obtain detailed information from vendors.

All listed alloys are ductile with percent elongation >10%.

Structural shapes (L-shapes, C-shapes, and I-beam shapes) used for building construction and some large-scale manufacturing equipment are typically made from structural steel classified by ASTM designations, described in more detail in Section 2–8.

Steel and Aluminum Designations from Different Parts of the World. While this book uses material designations from the United States and other parts of North America,

users of this book may work in any part of the world. Producers of commercially available shapes in other countries will use material designations developed for their own industries and are typically different from U.S. designations. However, many will make alloys that are compositionally similar to U.S. alloys. Table 2–7 lists some common materials and their designations in Germany, the United Kingdom (UK–England), other parts of the European Union (sometimes called Euronorm or EN), Japan, and China.

TABLE 2–7 Comparisons of Designations for Steels and Aluminums from Different Parts of the World

| Ref. | USA | European Union (Euronorm, EN) | Germany (W-Number) ¹ | UK (BS) | Japan (JIS) | China (GB) |
|-----------------------------|--------|----------------------------------|------------------------------------|------------------|----------------|---------------|
| (AISI, SAE, ASTM) | | Carbon Steels | | | | |
| a | A36 | S235JRG2 | 1.0122 | S235JRG2 | S235JRG2 | — |
| b | 1015 | C15 | 1.0401 | C15 | 080A15 | S15Ck |
| c | 1018 | C18D | 1.1141 | CK15 | 040A15 | S15 |
| d | 1045 | C45 | 1.0503 | C45 | 060A47 | S45C |
| (AISI, SAE) | | Alloy Steels | | | | |
| e | 1213 | 11SMn30 | 1.0715 | 11SMn30 | 230M07 | SUM22 |
| f | 4130 | 25CrMo4 | 1.7218 | 25CrM04 | 708A30 | SCM 420 |
| g | 4140 | 42CrMo4 | 1.7225 | 42CrMo4 | 708A42 | SCM 440H |
| h | 4340 | 34CrNiM06 | 1.6582 | 34CrNiM06 | 817M40 | SNCM 447 |
| i | 6150 | 50CrV4 | 1.7222 | 50CrV4 | 735A50 | SUP10 |
| j | 8620 | 20NiCrMo2-2 | 1.6523 | 20NiCrMo2 | 805M20 | SNCM 220 (H) |
| (AISI, SAE) | | Stainless Steels | | | | |
| k | 304 | X2CrNi18-10 | 1.4301 | X5CrNi18-10 | 304S 18 | SUS 304 |
| l | 316 | X5CrNiMo17-12-2 | 1.4401 | X5CrNiMo17-12-2 | 316S 29 | SUS 316 |
| m | 321 | X6CrNiTi18-10 | 1.4541 | X6CrNiTi18-10 | 321S 31 | SUS321 |
| n | 430 | X6Cr17 | 1.4016 | X6Cr17 | 430S 17 | SUS430 |
| o | 17-4PH | X5CrNiCuNb17-4-4 | 1.4542 | X5CrNiCuNb17-4-4 | 17Cr4Ni | SUS630 |
| Aluminum Association | | Aluminum Alloys | | | | |
| p | 1100 | Al99.0Cu | — | — | — | — |
| q | 2014 | AlCu4SiMg | 3.1255 | AlCuSiMn | L.93, L.94 | — |
| r | 2024 | AlCu4Mg1 | 3.1355 | AlCuMg2 | L.97, L.98 | — |
| s | 6061 | AlMg1SiCu | — | H20 | — | — |
| t | 6063 | AlMgSi | 3.3206 | AlMgSi0.5 | H19 | — |
| u | 7075 | AlZn6MgCu | 3.4365 | AlZnMgCu1.5 | L.95, L.96 | — |

Notes: ¹Werkstoff Number

The given examples are a small sample of the thousands of available alloys, heat treatments, and formulations. Exact comparisons are not practical. Obtain data from vendors for designations and properties before use.

Sources: Parker Steel Company, Toledo, Ohio.

Steel Strip Company, United Kingdom.

Key to Metals North America, St. Louis, Missouri.

All Metals & Forge, Parsippany, NJ.

Aluminum Association, Arlington, VA.

2-4 VARIABILITY OF MATERIAL PROPERTIES DATA

Tables of data such as those shown in Appendices 3 through 13 normally report single values for the strength, the modulus of elasticity (stiffness), or the percent elongation (ductility) of a particular material at a particular condition created by heat treatment or by the manner in which it was formed. It is important for you to understand the limitations of such data in making design decisions. You should seek information about the bases for the reported data.

Some tables of data report *guaranteed minimum values* for tensile strength, yield strength, and other values. This might be the case when you are using data obtained from a particular supplier. With such data, you should feel confident that the material that actually goes into your product has at least the reported strength. The supplier should be able to provide actual test data and statistical analyses used to determine the reported minimum strengths. Alternatively, you could arrange to have the actual materials to be used in a project tested to determine their minimum strength values. Such tests are costly, but they may be justified in critical designs.

Other tables of data report *typical values* for material properties. Thus, most batches of material (greater than 50%) delivered will have the stated values or greater. However, about 50% will have lower values, and this fact will affect your confidence in specifying a particular material and heat treatment if strength is critical. In such cases, you are advised to use higher than average design factors in your calculations of allowable (design) strength. (See Chapter 5.)

Using the guaranteed minimum values for strength in design decisions would be the safest approach. However, it is very conservative because most of the material actually delivered would have strengths significantly greater than the listed values.

One way to make the design more favorable is to acquire data for the statistical distribution of strength values taken for many samples. Then applications of probability theories can be used to specify suitable conditions for the material with a reasonable degree of confidence that the parts will perform according to specifications. Figure 2–11 illustrates some of the basic concepts of statistical distribution. The variation of strength over the entire population of samples is often assumed to have a normal distribution around some mean or average value. If you used a strength value that is one standard deviation (1σ) below the mean, 84% of the products would survive. At two standard deviations, greater than 97% would survive; at three standard deviations, more than 99.8%; and at four standard deviations, more than 99.99%.

As the designer, you must carefully judge the reliability of the data that you use. Ultimately, you should evaluate the reliability of the final product by considering the actual variations in material properties, the manufacturing considerations that may affect

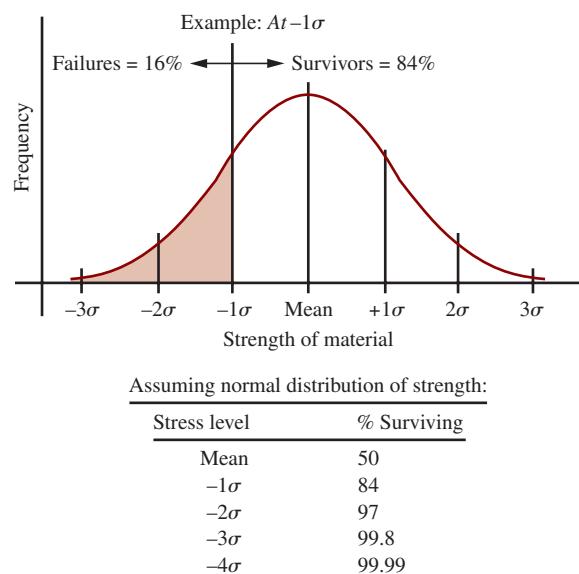


FIGURE 2-11 Normal statistical distribution of material strength

performance, and the interactions of various components with each other. There is more discussion on this point in Chapter 5.

2-5 CARBON AND ALLOY STEEL

Steel is possibly the most widely used material for machine elements because of its properties of high strength, high stiffness, durability, and relative ease of fabrication. Many types of steels are available. This section will discuss the methods used for designating steels and will describe the most frequently used types.

The term *steel* refers to an alloy of iron, carbon, manganese, and one or more other significant elements. Carbon has a very strong effect on the strength, hardness, and ductility of any steel alloy. The other elements affect hardenability, toughness, corrosion resistance, machinability, and strength retention at high temperatures. The primary alloying elements present in the various alloy steels are sulfur, phosphorus, silicon, nickel, chromium, molybdenum, and vanadium.

Designation Systems


As mentioned in Section 2-3, the designation systems for steels are managed by either SAE International or ASTM International. The wrought or rolled steels typically used for machine elements are most likely to be selected from SAE grades. Structural steels and many cast metals carry ASTM grade designations. It was pointed out earlier that, until the recent past, both SAE and AISI issued wrought or rolled steel designations that were substantially identical, but AISI no longer performs this function. However, it is likely that much published literature and commercial product information will continue to use the term *AISI* until the new systems are phased in.

Furthermore, SAE, in cooperation with ASTM, is promoting an expanded system for designating wrought steels and the new system is placed within the Unified Numbering System (UNS). Refer back to Table 2–5. See SAE Standard J402 (R) *New Steel Designation System for Wrought or Rolled Steel*. Three UNS series for steels, G, H, and K, are being changed to conform to the new system that provides for specified modifications of the chemistry of the alloys and may also define special processing methods or limits on material properties.

The system starts with the familiar four-digit designation system that has been used for several decades under both the SAE and AISI systems, as shown in Figure 2–12. The first two digits indicate the specific alloy group that identifies the primary alloying elements other than carbon in the steel as shown in Table 2–8. The last two digits indicate the amount of carbon in the steel in hundredths of a percent. For example, when the last two digits are 20,


General Form of Designation

SAE **XXXX**

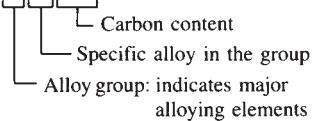

Examples

SAE **1.0.20**

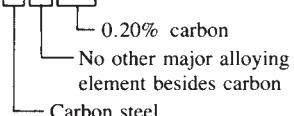

SAE **4.3.40**

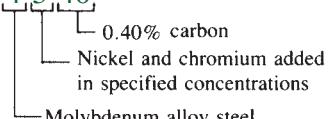


FIGURE 2–12 Steel designation system

TABLE 2–8 Alloy Groups in the SAE Numbering System

| | |
|-------|---|
| 10xx | Plain carbon steel: No significant alloying element except carbon and manganese; less than 1.0% manganese. Also called <i>nonresulfurized</i> . |
| 11xx | Free-cutting steel: Resulfurized. Sulfur content (typically 0.10%) improves machinability. |
| 12xx | Free-cutting steel: Resulfurized and rephosphorized. Presence of increased sulfur and phosphorus improves machinability and surface finish. |
| 12Lxx | Free-cutting steel: Lead added to 12xx steel further improves machinability. |
| 13xx | Manganese steel: Nonresulfurized. Presence of approximately 1.75% manganese increases hardenability. |
| 15xx | Carbon steel: Nonresulfurized; greater than 1.0% manganese. |
| 23xx | Nickel steel: Nominally 3.5% nickel. |
| 25xx | Nickel steel: Nominally 5.0% nickel. |
| 31xx | Nickel-chromium steel: Nomically 1.25% Ni; 0.65% Cr. |
| 33xx | Nickel-chromium steel: Nomically 3.5% Ni; 1.5% Cr. |
| 40xx | Molybdenum steel: 0.25% Mo. |
| 41xx | Chromium-molybdenum steel: 0.95% Cr; 0.2% Mo. |
| 43xx | Nickel-chromium-molybdenum steel: 1.8% Ni; 0.5% or 0.8% Cr; 0.25% Mo. |
| 44xx | Molybdenum steel: 0.5% Mo. |
| 46xx | Nickel-molybdenum steel: 1.8% Ni; 0.25% Mo. |
| 48xx | Nickel-molybdenum steel: 3.5% Ni; 0.25% Mo. |
| 5xxx | Chromium steel: 0.4% Cr. |
| 51xx | Chromium steel: Nomically 0.8% Cr. |
| 51100 | Chromium steel: Nominally 1.0% Cr; bearing steel, 1.0% C. |
| 52100 | Chromium steel: Nominally 1.45% Cr; bearing steel, 1.0% C. |
| 61xx | Chromium-vanadium steel: 0.50–1.10% Cr; 0.15% V. |
| 86xx | Nickel-chromium-molybdenum steel: 0.55% Ni; 0.5% Cr; 0.20% Mo. |
| 87xx | Nickel-chromium-molybdenum steel: 0.55% Ni; 0.5% Cr; 0.25% Mo. |
| 92xx | Silicon steel: 2.0% silicon. |
| 93xx | Nickel-chromium-molybdenum steel: 3.25% Ni; 1.2% Cr; 0.12% Mo. |

the alloy includes approximately 0.20% carbon, and it is often said that the steel has *20 points of carbon*. Small variations are allowed, say from 0.18% to 0.23%.

Carbon content is part of the designation system because the primary mechanical properties of strength, hardness, and ductility are strongly dependent on it. As carbon content increases, strength and hardness also increase during processing and heat treatment. Ductility typically decreases so designers must balance strength and ductility when specifying a steel and its condition. It is useful to categorize steels into four broad classes, *low carbon*, *medium carbon*, *high carbon*, and *bearing steels*.

- *Low carbon*: Less than 30 points of carbon. Relatively low strength but good formability. Used where high strength is not required.
- *Medium carbon*: From 30 to 50 points of carbon. Higher strength and hardness with moderate ductility. A large percentage of machine elements are made from steels in this class.
- *High carbon*: 50 to 95 points of carbon. Even higher strength and hardness but often with lower ductility. The high hardness provides good wear properties leading to uses such as knives requiring a durable cutting edge, parts subject to abrasion, tools, chisels, and agricultural implements.
- *Bearing steels*: typically 100 points of carbon or higher ($\geq 1.0\%$). Often specified for balls, rollers, and races of rolling contact bearings because of the very high contact stresses developed in operation.

In this book, when standard specifications for a steel alloy are intended, without modification, we will use the traditional designation as shown in Figure 2–12: for example, SAE 1020 or SAE 4340 steel. See also Appendix 3. Designers, manufacturing professionals, and engineers sometimes refer to only the number in conversation, such as 1020 steel and 4340 steel, or describe them colloquially as *plain carbon steel* and *chrome-moly steel*. Of course, when specifying a steel on design drawings or purchase orders, the complete, formal designations should be used.

The New UNS Designations for G, H, and K Steels. SAE Standard J402 defines a 12-character designation using the format:

GXXXX-XXX-XXXX

where,

- The lead letter may be G for carbon and alloy steels, H for steels with specific hardenability, or K for miscellaneous steels and ferrous alloys as previously listed in the UNS.
- The first set of four Xs are the traditional four-digit SAE designation described earlier.
- The second set of three Xs denote modifications to the standard chemistry.

- The final set of four Xs refer to special production methods, quality standards, or processing.

Details of the chemistry and other requirements of various alloys are contained in other SAE standards, including:

- J403 *Chemical Compositions of SAE Carbon Steels*; for carbon steels in the 10XX, 11XX, 12XX, and 15XX series (see Table 2–8).
- J404 *Chemical Compositions of SAE Alloy Steels*; for alloy steels in the remaining series.
- J1086 *Numbering Metals and Alloys*.
- J1249 *Former SAE Standard and Former SAE-Ex Steels*.
- J1268 *Hardenability Bands for Carbon and Alloy H Steels*.
- J1868 *Restricted Hardenability Bands for Selected Alloy Steels*.

The place of steels in the overall UNS is documented in the standard jointly published by SAE and ASTM: SAE HS-1086/ASTM DS 56H *Metals and Alloys in the Unified Numbering System*. See Internet site 4 and 5 for additional information and to acquire these standards.

The new designation system permits steel manufacturers to modify the standard chemistry for commonly used steels to meet specific customer needs without creating an entirely new four-digit designation number. Performance requirements for press-forming, roll-forming, abrasion resistance, environmental corrosion resistance, cleanliness of the steel, and similar special needs can be assured more easily and reliably with such a system. These situations often arise in production operations in the automotive, aerospace, appliance, construction equipment, agricultural equipment, manufacturing equipment, energy production equipment, and similar industries.

A *bearing steel* nominally contains 1.0% carbon. Common grades are 50100, 51100, and 52100; the usual four-digit designation is replaced by five digits, indicating 100 points of carbon.

Alloy Groups

As indicated in Table 2–8, sulfur, phosphorus, and lead improve the machinability of steels and are added in significant amounts to the 11xx, 12xx, and 12Lxx grades. These grades are used for screw machine parts requiring high production rates where the resulting parts are not subjected to high stresses or wear conditions. In the other alloys, these elements are controlled to a very low level because of their adverse effects, such as increased brittleness.

Nickel improves the toughness, hardenability, and corrosion resistance of steel and is included in most of the alloy steels. Chromium improves hardenability, wear and abrasion resistance, and strength at elevated temperatures. In high concentrations, chromium provides significant corrosion resistance, as discussed in the section on

TABLE 2-9 Uses of Some Steels

| SAE number | Applications |
|------------|--|
| 1015 | Formed sheet-metal parts; machined parts (may be carburized) |
| 1030 | General-purpose, bar-shaped parts, levers, links, keys |
| 1040 | Shafts, gears |
| 1080 | Springs; agricultural equipment parts subjected to abrasion (rake teeth, disks, plowshares, mower teeth) |
| 1112 | Screw machine parts |
| 4140 | Gears, shafts, forgings |
| 4340 | Gears, shafts, parts requiring good through-hardening |
| 4640 | Gears, shafts, cams |
| 5150 | Heavy-duty shafts, springs, gears |
| 6150 | Gears, forgings, shafts, springs |
| 8650 | Gears, shafts |
| 9260 | Springs |

stainless steels. Molybdenum also improves hardenability and high-temperature strength.

The steel selected for a particular application must be economical and must provide optimum properties of strength, ductility, toughness, machinability, and formability. Frequently, metallurgists, manufacturing engineers, and heat-treatment specialists are consulted. (See also References 3, 8, and 25.) See also Section 2-18.

Table 2-9 lists some common steels used for machine parts, with typical applications listed for the alloys. You should benefit from the decisions of experienced designers when specifying materials.

AHSS—Advanced High-Strength Steels

Significant developments are being made in the field of steels used in automotive and other transportation-related fields that depend on high strength with good ductility. Many emerging products are called *advanced high-strength steels* (AHSS). Goals for their development include safety enhancement, cost reduction, durability, reduced environmental impact, and increased fuel economy for vehicles. AHSS steels are characterized by unique microstructural phases other than ferrite and pearlite, including martensite, austenite, and/or retained austenite in quantities sufficient to produce unique mechanical properties with high strength, enhanced formability, and additional stretchability as compared with more traditional high strength-low alloy (HSLA) steels. See Reference 37 and Internet site 40. Types of AHSS steels include:

- Dual phase (DP).
- Transformation induced plasticity (TRIP).
- Complex phase (CP).
- Martensitic (MS).

Examples of grades are (numbers give yield strength/ultimate tensile strength in MPa):

| | |
|--|--------------------------|
| DP 300/500 (30–34% el.) | DP 350/600 (24–30% el.) |
| TRIP 450/800 (26–32% el.) | DP 500/800 (14–20% el.) |
| CP 700/800 (10–15% el.) | DP 700/1000 (12–17% el.) |
| MS 950/1200 (5–7% el.) | MS 1250/1520 (4–6% el.) |
| HSLA 350/450 (23–27% el.) ¹ | |

¹Listed for comparison.

2-6 CONDITIONS FOR STEELS AND HEAT TREATMENT

The final properties of steels are dramatically affected by the way the steels are produced. Some processes involve mechanical working, such as rolling to a particular shape or drawing through dies. In machine design, many bar-shaped parts, shafts, wire, and structural members are produced in these ways. But most machine parts, particularly those carrying heavy loads, are heat-treated to produce high strength with acceptable toughness and ductility.

Carbon steel bar and sheet forms are usually delivered in the *as-rolled condition*; that is, they are rolled at an elevated temperature that eases the rolling process. The rolling can also be done cold to improve strength and surface finish. Cold-drawn bar and wire have the highest strength of the worked forms, along with a very good surface finish. However, when a material is designated to be *as-rolled*, it should be assumed that it was hot-rolled.

Heat Treating

Heat treating is any process in which steel is subjected to elevated temperatures to modify its properties. Of the several processes available, those most used for machine steels are annealing, normalizing, through-hardening

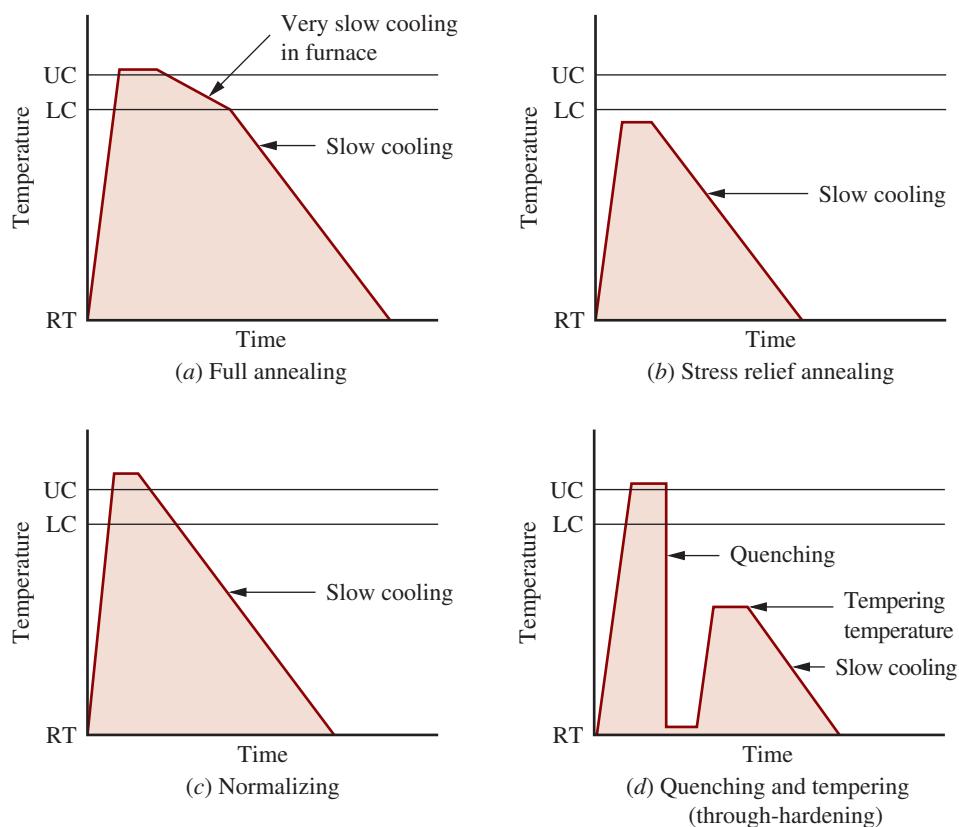


FIGURE 2-13 Heat treatments for steel

(quench and temper), and case hardening. (See References 6 and 16–18.)

Figure 2-13 shows the temperature–time cycles for these heat-treatment processes. The symbol RT indicates normal room temperature, and LC refers to the lower critical temperature at which the transformation of ferrite to austenite begins during the heating of the steel. At the upper critical temperature (UC), the transformation is complete. These temperatures vary with the composition of the steel. For most medium-carbon (0.30–0.50% carbon) steels, UC is approximately 1500°F (822°C). References giving detailed heat-treatment process data should be consulted.

Annealing. *Full annealing* [Figure 2-13(a)] is performed by heating the steel above the upper critical temperature and holding it until the composition is uniform. Then the steel is cooled very slowly in the furnace to below the lower critical temperature. Slow cooling to room temperature outside the furnace completes the process. This treatment produces a soft, low-strength form of the material, free of significant internal stresses. Parts are frequently cold-formed or machined in the annealed condition.

Stress relief annealing [Figure 2-13(b)] is often used following welding, machining, or cold-forming to relieve

residual stresses and thereby minimize subsequent distortion. The steel is heated to approximately 1000°F to 1200°F (540°C–650°C), held to achieve uniformity, and then slowly cooled in still air to room temperature.

Normalizing. *Normalizing* [Figure 2-13(c)] is performed in a similar manner to annealing, but at a higher temperature above the transformation range where austenite is formed, approximately 1600°F (870°C). The result is a uniform internal structure in the steel and somewhat higher strength than annealing produces. Machinability and toughness are usually improved over the as-rolled condition.

Through-Hardening and Quenching and Tempering. *Through-hardening* [Figure 2-13(d)] is accomplished by heating the steel to above the transformation range where austenite forms and then rapidly cooling it in a *quenching* medium. The rapid cooling causes the formation of martensite, the hard, strong form of steel. The degree to which martensite forms depends on the alloy's composition. An alloy containing a minimum of 80% of its structure in the martensite form over the entire cross section has *high hardenability*. This is an important property to look for when selecting a steel requiring high strength and hardness. The common quenching liquid media are

water, brine, and special mineral oils. Formulations of water-soluble polyalkylene glycol liquid organic polymer (PAG) with corrosion-resisting additives often replace other quenchants to provide tailored control of the rate of quenching to reduce distortion and residual stresses. They can be used either in immersion systems or applied as a spray for either steels or aluminum alloys. One brand name is UCON™ (a trademark of The Dow Chemical Company) that offers ten different formulations.

Air or other gases may also be used for quenching of some materials. Inert gases such as helium, nitrogen, hydrogen, and argon can be used in an enclosed tank, typically under low pressure (vacuum), to inhibit oxidation. Careful specification of the quenchants is critical to ensure compatibility with the particular material being heat-treated. The selection of a quenching medium depends on the rate at which cooling should proceed. Most machine steels use either oil or water quenching.

Tempering is usually performed immediately after quenching and involves reheating the steel to a temperature of 400°F to 1300°F (200°C–700°C) and then slowly cooling it in air back to room temperature. This process modifies the steel's properties: Tensile strength and yield strength decrease with increasing tempering temperature, whereas ductility improves, as indicated by an increase in the percent elongation. Thus, the designer can tailor the properties of the steel to meet specific requirements. Furthermore, the steel in its as-quenched condition has high internal stresses and is usually quite brittle. Machine parts should normally be tempered at 700°F (370°C) or higher after quenching.

To illustrate the effects of tempering on the properties of steels, several charts in Appendix 4 show graphs of strength versus tempering temperature. Included in these charts that show graphs of strength versus tempering temperature are tensile strength, yield point, percent elongation, percent reduction of area, and hardness number HB, all plotted in relation to tempering temperature. Note the difference in the shape of the curves and the absolute values of the strength and hardness when comparing the plain carbon SAE 1040 steel with the alloy steel SAE 4340. Although both have the same nominal carbon content, the alloy steel reaches a much higher strength and hardness. Note also the as-quenched hardness in the upper right part of the heading of the charts; it indicates the degree to which a given alloy can be hardened. When the case-hardening processes (described next) are used, the as-quenched hardness becomes very important.

Appendix 3 lists the range of properties that can be expected for several grades of carbon and alloy steels. The alloys are listed with their SAE numbers and conditions. For the heat-treated conditions, the designation reads, for example, SAE 4340 OQT 1000, which indicates that the alloy was oil-quenched and tempered at 1000°F. Expressing the properties at the 400°F and 1300°F tempering temperatures indicates the end-points of the possible range of properties that can be expected for that alloy. To specify a strength between these limits, you could refer to graphs such as those shown in Appendix 4, or you could determine the required

heat-treatment process from a specialist. For the purposes of material specification in this book, a rough interpolation between given values will be satisfactory. As noted before, you should seek more specific data for critical designs.

Case Hardening. In many cases, the bulk of the part requires only moderate strength although the surface must have a very high hardness. In gear teeth, for example, high surface hardness is necessary to resist wear as the mating teeth come into contact several million times during the expected life of the gears. At each contact, a high stress develops at the surface of the teeth. For applications such as this, *case hardening* is used; the surface (or *case*) of the part is given a high hardness to a depth of perhaps 0.010 to 0.040 in (0.25–1.00 mm), although the interior of the part (the *core*) is affected only slightly, if at all. The advantage of surface hardening is that as the surface receives the required wear-resisting hardness, the core of the part remains in a more ductile form, resistant to impact and fatigue. The processes used most often for case hardening are flame hardening, induction hardening, carburizing, nitriding, cyaniding, and carbo-nitriding. (See References 16–18.)

Figure 2–14 shows a drawing of a typical case-hardened gear-tooth section, clearly showing the hard case surrounding the softer, more ductile core. Case hardening is used in applications requiring high wear and abrasion resistance in normal service (gear teeth, crane wheels, wire-rope sheaves, and heavy-duty shafts).

The most commonly used processes for case hardening are described in the following list.

1. **Flame hardening and induction hardening:** The processes of flame hardening and induction hardening involve the rapid heating of the surface of the part for a limited time so that a small, controlled depth of the material reaches the transformation range. Upon immediate quenching, only that part above the transformation range produces the high level of martensite required for high hardness.

Flame hardening uses a concentrated flame impinging on a localized area for a controlled amount of time to heat the part, followed by quenching in a bath or by a stream of water or oil. *Induction hardening* is a process in which the part is surrounded by a coil through which high-frequency electric current is passed. Because of the electrical conductivity of the steel, current is *induced* primarily near the surface of the part. The resistance of the material to the flow of current results in a heating effect.

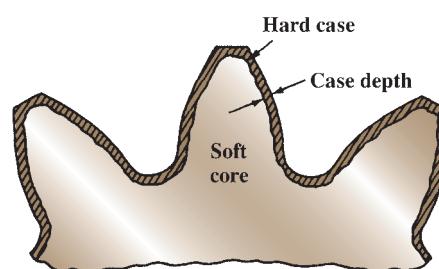


FIGURE 2–14 Typical case-hardened gear-tooth section

Controlling the electrical power and the frequency of the induction system, and the time of exposure, determines the depth to which the material reaches the transformation temperature. Rapid quenching after heating hardens the surface. (See Reference 17.)

The design of the devices for heating the part is critical, especially when localized hardening is desired, as for gear teeth and selective hardening of an area subjected to abrasive wear. For gears of relatively small overall size and small teeth, the impinging flame or the induction heating coil may encircle the entire gear, allowing all teeth to be hardened at the same time. For larger gears with larger teeth, this may be impractical and heating may be tooth-by-tooth or over a small segment of the gear. A system for immediate quenching after heating must be provided. The most critical area for hardening of gear teeth is typically the flanks where the two meshing teeth make contact and transmit the driving forces. High contact stresses where the two curved surfaces meet must be resisted. Pitting resistance of the teeth, as discussed in Chapter 9, is directly related to the hardness of the flanks and that is the most prominent failure mode for gears that are to be used for many thousands of hours of expected life. The area where the root of the tooth blends with the involute tooth form of the flank experiences the highest bending stress. For gears that are used intermittently, bending fatigue is often the predominant mode of failure. Ensuring that the fillet area is adequately hardened will optimize the fatigue life.

Note that for flame or induction hardening to be effective, the material must have a good hardenability. Usually the goal of case hardening is to produce a case hardness in the range of Rockwell C hardness HRC 55 to 60 (Brinell hardness approximately HB 550 to 650). Therefore, the material must be capable of being hardened to the desired level. Carbon and alloy steels with fewer than 30 points of carbon typically cannot meet this requirement. Thus, the alloy steels with 40 points or more of carbon are the usual types given flame- or induction-hardening treatments.

Typical steel materials specified are SAE 1045, 1552, 4140, 4150, 4340, and 5150.

2. Carburizing, nitriding, cyaniding, and carbo-nitriding:

The remaining case-hardening processes—carburizing, nitriding, cyaniding, and carbo-nitriding—actually alter the composition of the surface of the material by exposing it to carbon-bearing gases, liquids, or solids at high temperatures that produce carbon and diffuse it into the surface of the part. The concentration and the depth of penetration of carbon depend on the nature of the carbon-bearing material and the time of exposure. Nitriding and cyaniding typically result in very hard, thin cases that are good for general wear resistance. Where high load-carrying capability in addition to wear resistance is required, as with gear teeth, carburizing is preferred because of the thicker case.

Several steels are produced as carburizing grades. Among these are 1015, 1020, 1022, 1117, 1118, 4118, 4320, 4620, 4820, and 8620. Appendix 5 lists the expected properties of these carburized steels. Note when evaluating a material for use that the core properties determine its ability to withstand prevailing stresses, and the case hardness indicates its wear resistance. Carburizing, properly done, will virtually always produce a case hardness from HRC 55 to 64 (Rockwell C hardness) or from HB 550 to 700 (Brinell hardness).

Carburizing has several variations that allow the designer to tailor the properties to meet specific requirements. The exposure to the carbon atmosphere takes place at a temperature of approximately 1700°F (920°C) and usually takes eight hours. Immediate quenching achieves the highest strength, although the case is somewhat brittle. Normally, a part is allowed to cool slowly after carburizing. It is then reheated to approximately 1500°F (815°C) and then quenched. A tempering at the relatively low temperature of either 300°F or 450°F (150°C or 230°C) follows, to relieve stresses induced by quenching. As shown in Appendix 5, the higher tempering temperature lowers the core strength and the case hardness by a small amount, but in general it improves the part's toughness. The process just described is *single quenching and tempering*.

When a part is quenched in oil and tempered at 450°F, for example, the condition is *case hardening by carburizing, SOQT 450*. Reheating after the first quench and quenching again further refines the case and core properties; this process is *case hardening by carburizing, DOQT 450*. These conditions are listed in Appendix 5.

Cautions for Heat-Treating Operations. Several methods of performing heat-treating operations exist and the choice can affect the final quality and performance of the finished part. Consultation with heat-treating specialists is recommended and careful specifications should be agreed upon. Issues that arise include:

- Final range of acceptable hardness
- Distribution of hardness over critical surfaces of the parts
- Case depth from case-hardening processes
- Microstructure of heat-treated zones in either the case or the core of the part
- Distortion of the part as a result of heat-treating
- Residual stresses developed during heat-treating, particularly residual tensile stresses that reduce fatigue life of the part
- Cracking in critical areas that may affect fatigue life
- Appearance of the part after heat-treating

A wide range of equipment is used for heat-treating; a few are described briefly here. All include heating in some kind of furnace or by flame or induction heating at temperatures up to 1250°C (2300°F), controlled for

the individual types of metals being treated. Heating by immersion in molten salts is also sometimes used. Then, parts are quenched by any of several means:

1. Transfer to liquid quenching tanks manually, by gravity dropping, or by conveyor or robotic handling. The quenching liquid may be at room temperature or elevated and it may be still or agitated.
2. Air quenching either in ambient air or with high-velocity blowers or enclosed chambers
3. Impinging of the quenchant on the part by flow from a nozzle
4. High-temperature vacuum carburizing in enclosed tanks with high-pressure gas quenching using inert gases such as helium, argon, hydrogen, or neon.

Careful support of the part during heating and quenching is often needed to reduce distortion. Special racks, shelving, and material-handling equipment may be needed.

Shot Peening for Favorable Residual Stresses. As mentioned earlier in the discussion of machining, grinding, forming, and heat-treating steels, unfavorable tensile residual stresses are often created that exacerbate problems of crack formation where high applied tensile stress is also present in operation. The combination hastens the onset of fatigue failure. *Shot peening* is a secondary process that can mitigate this problem by producing favorable residual compressive stresses near the surface of a part.

Shot peening is a process in which fine steel or cast iron shot is projected at high velocity on critical surfaces of a

part. The multiple impacts plastically deform the surface and after completing the process, residual compressive stresses remain. Thus, when operating under conditions where applied tensile stresses are produced, the net result is a lower tensile stress which would reduce the likelihood of initiating fatigue cracks. Cases of increasing fatigue life by 100% by shot peening have been reported. Many variables are involved and testing is recommended to quantify the benefits in any given situation. Products for which shot peening have been used include gears, shafts, helical compression and tension springs, leaf springs, and turbine blades.

Steel Alloys for Castings. Often, the composition of steel alloys for casting is similar to some already discussed here for wrought forms of steel produced primarily by rolling processes. However, because casting results in different internal structures from those of rolled forms, special designations are made by ASTM International. General classes, in increasing level of performance, are *carbon*, *low alloy*, *high alloy*, and *special alloy*. Material selection must consider operational conditions for a given application, particularly:

- Structural strength in tension, compression, and shear
- Toughness required to resist impact loading
- High temperature operation
- Need for wear resistance
- Need for pressure containment

Table 2–10 gives some of the pertinent standards for cast steel alloys. You should refer to the indicated ASTM

TABLE 2–10 Cast Carbon and Alloy Steels

| ASTM designation | Description |
|--------------------------------------|--|
| General applications | |
| A27/A27M-13 | Carbon steel; Heat-treated to a range of tensile strengths Grades: 60–30 (415–205), 65–35 (450–240), 70–36 (485–250), and 70–40 (485–275) Each set of numbers is tensile strength–yield strength in ksi (MPa) |
| A915/A915M-08(2013) | |
| A915/A915M-08(2013) | Carbon and alloy steels; similar composition to standard wrought steels Grades: SC1020, SC1025, SC1040, SC1045, SC4130, SC4140, SC4330, SC4340, SC8620, SC8625, SC8630 Grade numbers match similarly named steel in wrought form |
| A128/A128M-93(2007) | Hadfield manganese steel castings |
| A148/A148M-15A | High strength carbon, alloy, and martensitic stainless steels for castings |
| Pressure-containing parts | |
| A757/A757M-15 and A352/352M-06(2012) | Carbon and alloy, ferritic and martensitic, for low temperature |
| A351/A351M-15 | General pressure-containing service Some grades are suitable for high temperatures or corrosive environments |
| A216/A216M-14e1 | Carbon steel for high temperature; weldable |
| A389/A389M-13 | Alloy steel for high temperatures |

specification for details of strength limits and other performance factors for the indicated steel alloys. Note that the compositions of steels in ASTM A915/915M-08(2013) are designed to be similar to commonly used wrought steels designated in the SAE system. However, properties may be different because of the production processes.

2-7 STAINLESS STEELS

The term *stainless steel* characterizes the high level of corrosion resistance offered by alloys in this group. To be classified as a stainless steel, the alloy must have a chromium content of at least 10%. Most have 12% to 18% chromium. (See Reference 9.)

The SAE designates most stainless steels by its 200, 300, and 400 series.

The three main groups of stainless steels are austenitic, ferritic, and martensitic. *Austenitic* stainless steels fall into the SAE 200 and 300 series. They are general-purpose grades with moderate strength. Most are not heat-treatable, and their final properties are determined by the amount of working, with the resulting temper referred to as 1/4 hard, 1/2 hard, 3/4 hard, and full hard. These alloys are nonmagnetic and are typically used in food processing equipment.

SAE 304 and 316 are most often used in commercially available bars, hexagons, squares rectangles, and tubing as listed in Table 2-6.

Ferritic stainless steels belong to the SAE 400 series, designated as 405, 409, 430, 446, and so on. They are magnetic and perform well at elevated temperatures, from 1300°F to 1900°F (700°C–1040°C), depending on the alloy. They are not heat-treatable, but they can be cold-worked to improve properties. Typical applications include heat exchanger tubing, petroleum refining equipment, automotive trim, furnace parts, and chemical equipment.

Martensitic stainless steels are also members of the SAE 400 series, including 403, 410, 414, 416, 420, 431, and 440 types. They are magnetic, can be heat-treated, and have higher strength than the 200 and 300 series, while retaining good toughness. Typical uses include turbine engine parts, cutlery, scissors, pump parts, valve parts, surgical instruments, aircraft fittings, and marine hardware.

There are many other grades of stainless steels, many of which are proprietary to particular manufacturers. A group used for high-strength applications in aerospace, marine, and vehicular applications is of the precipitation-hardening type. They develop very high strengths with heat treatments at relatively low temperatures, from 900°F to 1150°F (480°C–620°C). This characteristic helps to minimize distortion during treatment. Some examples are 17-4PH, 15-5PH, 17-7PH, PH15-7Mo, and AMS362 stainless steels.

2-8 STRUCTURAL STEEL

Most structural steels are designated by ASTM numbers established by the American Society for Testing and Materials. One common grade is ASTM A36, which has

a minimum yield point of 36 000 psi (248 MPa) and is very ductile. It is basically a low-carbon, hot-rolled steel available in sheet, plate, bar, and structural shapes such as some wide-flange beams, American Standard beams, channels, and angles. The geometric properties of some of each of these sections are listed in Appendix 15.

Most wide-flange beams (W-shapes) are currently made using ASTM A992 structural steel, which has a yield point of 50 to 65 ksi (345 to 448 MPa) and a minimum tensile strength of 65 ksi (448 MPa). An additional requirement is that the maximum ratio of the yield point to the tensile strength is 0.85. This is a highly ductile steel, having a minimum of 21% elongation in a 2.00-inch gage length. Using this steel instead of the lower strength ASTM A36 steel typically allows smaller, lighter structural members at little or no additional cost.

Hollow structural sections (HSS) are typically made from ASTM A500 steel that is cold-formed and either welded or made seamless. Included are round tubes and square and rectangular shapes. Note in Appendix 7 that there are different strength values for round tubes as compared with the shaped forms. Also, several strength grades can be specified. Some of these HSS products are made from ASTM A501 hot-formed steel having properties similar to the ASTM A36 hot-rolled steel shapes.

Many higher-strength grades of structural steel are available for use in construction, vehicular, and machine applications. They provide yield points in the range from 42 000 to 100 000 psi (290–700 MPa). Some of these grades, referred to as *high-strength, low-alloy (HSLA) steels*, are ASTM A242, A440, A514, A572, and A913.

Appendix 7 lists the properties of several structural steels.

2-9 TOOL STEELS

The term *tool steels* refers to a group of steels typically used for cutting tools, punches, dies, shearing blades, chisels, and similar uses. The numerous varieties of tool steel materials have been classified into seven general types as shown in Table 2-11. Whereas most uses of tool steels are related to the field of manufacturing engineering, they are also pertinent to machine design where the ability to maintain a keen edge under abrasive conditions is required (Type H and F). Also, some tool steels have rather high shock resistance which may be desirable in machine components such as parts for mechanical clutches, pawls, blades, guides for moving materials, wrench sockets, screw driver bits, and clamps (Types S, L, F, and W). (See Reference 10 for a more extensive discussion of tool steels.)

2-10 CAST IRON

Large gears, machine structures, brackets, linkage parts, and other important machine parts are made from cast iron. The several types of grades available span wide ranges of strength, ductility, machinability, wear resistance, and cost. These features are attractive in many applications.

TABLE 2-11 Examples of Tool Steel Types

| General type | Type symbol | Specific types | | Examples | |
|-----------------|-------------|-----------------------------|----------|------------------|---|
| | | Major alloying elements | AISI No. | UNS No. | Typical uses (and other common alloys) |
| High-speed | M | Molybdenum | | M2 M10 M42 | T11302 T11310 T11342 General-purpose tool steels for cutting tools and dies for forging, extrusion, bending, drawing, and piercing (M1, M3, M4–M7, M30, M34, M36, M41–M47) |
| | T | Tungsten | | T1 T15 | T12001 T12015 Similar to uses for M-types (T2, T4, T5, T6, T8) |
| Hot-worked | H | Chromium | | H10 | T20810 Cold-heading dies, shearing knives, aircraft parts, low-temperature extrusion and die-casting dies (H1–H19) |
| | | Tungsten | | H21 | T20821 Higher-temperature dies, hot shearing knives (H20–H39) |
| | | Molybdenum | | H42 | T20842 Applications that tend to produce high wear (H40–H59) |
| Cold-worked | D | High-carbon, high-chromium | | D2 | T30402 Stamping dies, punches, gages (D3–D5, D7) |
| | A | Medium-alloy, air-hardening | | A2 | T30102 Punches, thread-rolling dies, die-casting dies (A3–A10) |
| | O | Oil-hardening | | O1 | T31501 Taps, reamers, broaches, gages, jigs and fixtures, bushings, machine tool arbors, tool shanks (O2, O6, O7) |
| Shock-resisting | S | | | S1 | T41901 Chisels, pneumatic tools, heavy-duty punches, machine parts subject to shocks (S2, S4–S7) |
| Molded steels | P | | | P2 | T51602 Plastic molding dies, zinc die-casting dies (P3–P6, P20, P21) |
| Special-purpose | L | Low-alloy types | | L2 | T61202 Tooling and machine parts requiring high toughness (L3, L6) |
| | F | Carbon-tungsten types | | F1 | T60601 Similar to L-types but with higher abrasion resistance (F2) |
| Water-hardened | W | | | W1 | T72301 General-purpose tool and die uses, vise and chuck jaws, hand tools, jigs and fixtures, punches (W2, W5) |

The three most commonly used types of cast iron are gray iron, ductile iron, and malleable iron. Appendix 8 (U.S. units) and 8A (SI Units) list the properties of several types and grades of cast iron. See also Reference 13.

Gray iron is available in grades having tensile strengths ranging from 20 000 to 60 000 psi (138–414 MPa). Its ultimate compressive strength is much higher, three to five times as high as the tensile strength. One disadvantage of gray iron is that it is brittle and therefore should not be used in applications where impact loading is likely. But it has excellent wear resistance, is relatively easy to machine, has good vibration damping ability, and can be surface-hardened. Applications include engine blocks, gears, brake parts, and machine bases. The gray irons are rated by the ASTM specification A48-03 (2012) and A48M in classes 20, 25, 30, 40, 50, and 60, where the number refers to the minimum tensile strength in kips/in²(ksi). For example, class 40 gray iron has a minimum tensile strength of 40 ksi or 40 000 psi (276 MPa). Because it is brittle, gray iron does not exhibit the property of yield strength.

Malleable iron is a group of heat-treatable cast irons with moderate to high strength, high modulus of elasticity (stiffness), good machinability, and good wear resistance.

The five-digit designation roughly indicates the yield strength and the expected percent elongation of the iron. For example, Grade 40010 has a yield strength of 40 ksi (276 MPa) and a 10% elongation. The strength properties listed in Appendix 8 are for the non-heat-treated condition. Higher strengths would result from heat treating. See ASTM specifications A 47-99 (2014) and A 220-99 (2014).

Ductile irons have higher strengths than the gray irons and, as the name implies, are more ductile. However, their ductility is still much lower than that of typical steels. A three-part grade designation is used for ductile iron in the ASTM A536-84 (2014) specification. The first number refers to the tensile strength in ksi, the second is the yield strength in ksi, and the third is the approximate percent elongation. For example, the grade 80-55-06 has a tensile strength of 80 ksi (552 MPa), a yield strength of 55 ksi (379 MPa), and a 6% elongation in 2.00 in. Higher-strength cast parts, such as crankshafts and gears, are made from ductile iron.

Austempered ductile iron (ADI) is an alloyed and heat-treated ductile iron. (See Reference 13.) It has attractive properties that lead to its use in transportation equipment, industrial machinery, and other applications where

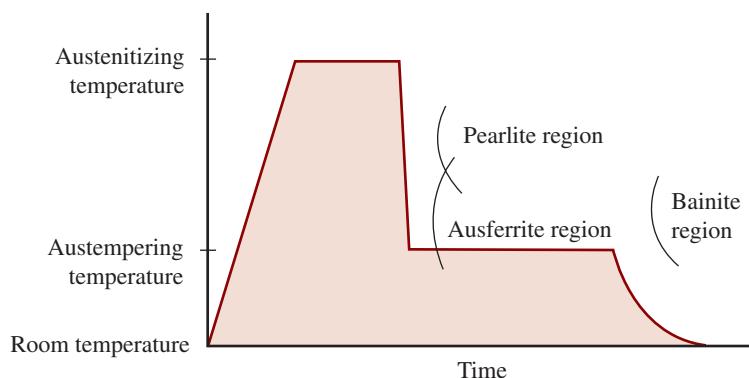


FIGURE 2–15 Heat treatment cycle for austempered ductile iron (ADI)

the low cost, good machinability, high damping characteristics, good wear resistance, and near-net-shape advantages of casting offer special benefits. Examples are drive train gears, parts for constant velocity joints, and suspension components. ASTM Standard A897/A897M-15 lists five grades of ADI ranging in tensile strength from 125 ksi (850 MPa) to 230 ksi (1600 MPa). Yield strengths range from 80 ksi (550 MPa) to 185 ksi (1300 MPa). Ductility decreases with increasing strength and hardness with percent elongation values in the range from approximately 10% to less than 1%. ADI begins as a conventional ductile iron with careful control of composition and the casting process to produce a sound, void-free casting. Small amounts of copper, nickel, and molybdenum are added to enhance the metal's response to the special heat treatment cycle shown in Figure 2–15. It is heated to the austenitizing temperature (1550°F–1750°F, or 843°C–954°C) depending on the composition. It is held at that temperature for one to three hours as the material becomes fully austenitic. A rapid quench follows in a medium at 460°F to 750°F (238°C–400°C), and the casting is held at this temperature for one-half to four hours. This is the *austempering* part of the cycle during which all of the material is converted to a mixture of mostly austenite and ferrite, sometimes called *ausferrite*. It is important that neither pearlite nor bainite form during this cycle. The casting is then allowed to cool to room temperature.

An emerging form of ADI, called *carbidic austempered ductile iron (CADI)*, is produced by alloying conventional ADI with carbide stabilizers such as chromium, molybdenum, or titanium. CADI exhibits significantly higher wear and abrasion resistance while retaining a good level of toughness. Applications are found in railroad rolling stock, earthmoving equipment, agricultural machinery, materials processing equipment, crushers, pump components, and bulk material conveyors. In these applications, it competes well with *white iron*, described next. Another good application is piping that transports aerated dry bulk materials or slurries containing suspended abrasive constituents. Wear is particularly a problem in elbows for such systems.

White iron is produced by rapidly chilling a casting of either gray iron or ductile iron during the solidification process. Chilling is typically applied to selected areas

that will experience heavy abrasion because chilled areas become very hard and have high wear resistance. Chilling does not allow the carbon in the iron to precipitate out during solidification, resulting in the white appearance. Areas away from the chilling medium solidify more slowly and acquire the normal properties of the base iron. One disadvantage of the chilling process is that the white iron is somewhat brittle. White iron can be alloyed with chromium and molybdenum to achieve high hardness ranging from 65 to 70 HRC. ASTM Standard A532/A532M-10(2014) covers the composition and heat-treatment for white iron. Typical applications include liners of ball or roll mills used to crush aggregates or other materials into powder form, the balls and rolls themselves, pulveriser components, clay-mixing equipment, brick-molding processes, and wear parts of crushers and material-handling devices.

2-11 POWDERED METALS

Making parts with intricate shapes by powder metallurgy can sometimes eliminate the need for extensive machining. Metal powders are available in many formulations whose properties approach those of the wrought form of the metal. The processing involves preparing a preform by compacting the powder in a die under high pressure. Sintering at a high temperature to fuse the powder into a uniform mass is the next step. Re-pressing is sometimes done to improve properties or dimensional accuracy of the part. Typical parts made by the powder metallurgy (PM) process are gears, gear segments, cams, eccentrics, and various machine parts having oddly shaped holes or projections. Dimensional tolerances of 0.001 in to 0.005 in (0.025–0.125 mm) are typical.

One disadvantage of PM parts is that they are sometimes brittle and should not be used in applications where high-impact loading is expected. Another important application is in sintered bearings, which are made to a relatively low density with consequent high porosity. The bearing is impregnated with a lubricant that may be sufficient for the life of the part. This type of material is discussed further in Chapter 16.

Manufacturers of metal powders have many proprietary formulations and grades. However, the Metal Powder Industries Federation (MPIF) is



FIGURE 2-16 Example of powder metal components. (Courtesy of the Metal Powder Industries Federation, Princeton, NJ)

promoting standardization of materials. Figure 2-16 shows photographs of some powder metal parts. (See Reference 6 and Internet site 9.)

A variety of metals can be used for PM parts, samples of which are listed in Table 2-12. Several processes are applied to achieve particular properties and to meet production goals. Brief descriptions are given here.

- Press and Sinter
 - Constituent powders in the proper percentage for the desired material are blended uniformly.
 - Blended metal powders are fed into a die.
 - A press compacts the powders into the desired shape, producing a *green part* having relatively low strength; the part is ejected from the die.
 - A heating process, called *sintering*, metallurgically bonds the grains of powder into a solid, strong form.
 - Optional manufacturing steps may be performed as needed, such as:

- Repressing to achieve refined properties and greater dimensional accuracy
- Machining of features that could not be made in the die
- Heat-treating to achieve higher mechanical strength
- Plating or other surface treatments
- Powder Forging
 - The steps described for the press and sinter process are completed as before. However, the geometry is not yet in final form or size.
 - As the part is withdrawn from the sintering furnace, it is coated with a lubricant, transferred to a forging press in a close-form die where it is hot worked, causing plastic flow of the material to its final shape.
 - The forging process refines the strength of the part, nearly equaling that of wrought forms of similar metals, while tending to orient the internal structure in favorable directions according to the anticipated loads.

TABLE 2-12 Materials Used for Powder Metallurgy (PM) Parts

| Material type | Designation and composition | Tensile strength | | Density | |
|-------------------------|---|--------------------------|-------|-------------------------------------|---------------------|
| | | (ksi) | (MPa) | (lb _m /in ³) | (kgm ³) |
| Ferrous metals | | | | | |
| Carbon steel | F-0008 0.8% C | 54 | 370 | 0.249 | 6900 |
| | F-0008-HT 0.8% C | 85 | 590 | 0.249 | 6900 |
| Copper steel | FC-0208 2% Cu, 0.8% C | 60 | 410 | 0.242 | 6700 |
| | FC-0208-HT 2% Cu, 0.8% C | 85 | 590 | 0.242 | 6700 |
| Nickel steel | FN-0205 2% Ni, 0.5% C | 57 | 390 | 0.257 | 7100 |
| | FN-0205-HT 2% Ni, 0.5% C | 145 | 1000 | 0.257 | 7100 |
| Low-alloy steel | FL-4405 0.85% Mo, 0.5% C | 66 | 460 | 0.257 | 7100 |
| | FL-4405-HT 0.85% Mo, 0.5% C | 160 | 1100 | 0.257 | 7100 |
| Low-alloy steel hybrid | FLN-4405 2% Ni, 0.85% Mo, 0.5% C | 80 | 550 | 0.255 | 7050 |
| | FLN-4405-HT 2% Ni, 0.85% Mo, 0.5% C | 170 | 1170 | 0.255 | 7050 |
| Diffusion-alloyed steel | FD-0205 1.75% Ni, 1.5% Cu, 0.5% Mo, 0.5% C | 78 | 540 | 0.251 | 6950 |
| | FD-0205-HT 1.75% Ni, 1.5% Cu, 0.5% Mo, 0.5% C | 130 | 900 | 0.251 | 6950 |
| Sinter-hardened steel | FLC-4608-HT 1.75% Ni, 1.5% Cu, 0.5% Mo, 0.5% C | 100 | 690 | 0.253 | 7000 |
| Stainless steel | SS-316N2 17% Cr, 12% Ni, 2.5% M | 60 | 410 | 0.235 | 6500 |
| | SS-430N2 17% Cr | 60 | 410 | 0.257 | 7100 |
| Copper | C-0000 0.2% maximum other | Electrical applications | | 0.289 | 8000 |
| Bronze | CTG-1001 10% Sn, 1% Graphite | Oil-impregnated bearings | | 0.224 | 6200 |
| Red brass | CZ-1000 10% Zn | 11 | 76 | 0.285 | 7900 |
| Yellow brass | CZ-3000 30% Zn | 16 | 110 | 0.275 | 7600 |
| Nickel silver | CNZ-1818 18% Ni, 18% Zn | 20 | 138 | 0.285 | 7900 |
| Aluminum | Aluminum 4% Cu, 0.5% Mg, 1% Si | 32 | 221 | 0.094 | 2600 |

Note: C = Carbon, Cu = Copper, Ni = Nickel, Mo = Molybdenum, Cr = Chromium, Sn = Tin, Zn = Zinc, Mg = Magnesium, Si = Silicon
 See Internet site 9 for additional data.

■ Isostatic Pressing

- The blended metal powders are placed into a hermetic chamber and restrained by a flexible membrane.
- A high pressure is exerted on the membrane compressing the powder uniformly and producing a high density.
- Compressing at room temperature is called *cold isostatic pressing*.
- Compressing at elevated temperatures is called *hot isostatic pressing*, which accomplishes the forming to the desired shape and simultaneously sintering the powders, thus eliminating one step in the process.
- The ability to make larger, more complex parts and the use of a wider range of powder types are advantages of using the isostatic pressing processes.
- The density of the completed part is typically more uniform as compared with the press and sinter process and the resulting density and mechanical properties are very close to those obtained in wrought forms of metals of similar composition.

■ Metal Injection Molding (MIM)

- Blended metal powders are enhanced with binders and additives such as waxes and thermoplastic polymers.
- The mixture is fed into an injection molding machine, similar to plastics injection molding systems to create the *green part*.
- The green part is extracted from the mold and sintered as with other powder metal processes.
- More complex shapes can be made with MIM than with other processes and dimensional accuracy is improved.
- Mechanical properties of the finished metal part are nearly equal to those of wrought forms of similar composition.

Production of powder metal products often requires expensive tooling, presses, and special equipment, lending its use for high volume or high-value products. Typical industries using powder metal products are:

| | | | |
|--------------------------------|-------------------------------|-------------------|--------------------|
| Aircraft | Space vehicles | Satellites | Military equipment |
| Medical devices | Automotive | Appliances | Power tools |
| Hydraulic systems | Agricultural machinery | Weapons | Business machines |
| Motor components | Recreational equipment | Consumer products | |
| Computer peripheral components | Chemical processing equipment | | |

Guidelines for Specifying Powder Metal Parts. While it is not practical to define all possible conditions, the following discussion presents the framework in which powder metal products fall. Consultation with an experienced supplier is recommended.

1. Part size is typically limited to those with a projected surface area of compressed powder of 50 in² (32 000 mm²) based on press capacity.
2. Part length should be less than 6 in (300 mm) but greater than 0.06 in (1.5 mm).
3. The length/diameter ratio should be less than 5.
4. The length/wall thickness ratio should be less than 8.
5. The part shape must be such that it can be formed by linear pressing by a ram.
6. No undercut, threaded, or re-entrant forms can be made.
7. Density variations should be expected from normal press and sinter processing for relatively long parts.
8. Relatively high production volumes are normally required to amortize tooling and equipment costs.
9. Consultation with the supplier is recommended on powder composition, processing method, and performance testing of the finished product.
10. Some PM parts may retain some porosity so the product may not be pressure tight without subsequent impregnation of sealing materials.

2-12 ALUMINUM

Aluminum is widely used for structural and mechanical applications. Chief among its attractive properties are light weight, good corrosion resistance, relative ease of forming and machining, and pleasing appearance. Its density is approximately one-third that of steel. However, its strength is somewhat lower, also. (See References 1, 2, 12, and 23.) Table 2-13 lists the commonly used alloy groups for wrought aluminum.

The standard designations for aluminum alloys listed by the Aluminum Association use a four-digit system. The first digit indicates the alloy type according to the major alloying element. The second digit, if it is other than zero, indicates modifications of another alloy or limits placed on impurities in the alloy. The presence of impurities is particularly important for electrical conductors. Within each group are several specific alloys, indicated by the last two digits in the designation.

TABLE 2-13 Wrought Aluminum Alloy Groups

Alloy designations (by major alloying element)

1xxx 99.00% or greater aluminum content

2xxx Copper

3xxx Manganese

4xxx Silicon

5xxx Magnesium

6xxx Magnesium and silicon

7xxx Zinc

TABLE 2-14 Common Aluminum Alloys and Their Uses

| Alloy | Applications | Forms |
|-------|--|--|
| 1060 | Chemical equipment and tanks | Sheet, plate, tube |
| 1350 | Electrical conductors | Sheet, plate, tube, rod, bar, wire, pipe, shapes |
| 2014 | Aircraft structures and vehicle frames | Sheet, plate, tube, rod, bar, wire, shapes, forgings |
| 2024 | Aircraft structures, wheels, machine parts | Sheet, plate, tube, rod, bar, wire, shapes, rivets |
| 2219 | Parts subjected to high temperatures (to 600°F) | Sheet, plate, tube, rod, bar, shapes, forgings |
| 3003 | Chemical equipment, tanks, cooking utensils, architectural parts | Sheet, plate, tube, rod, bar, wire, shapes, pipe, rivets, forgings |
| 5052 | Hydraulic tubes, appliances, sheet-metal fabrications | Sheet, plate, tube, rod, bar, wire, rivets |
| 6061 | Structures, vehicle frames and parts, marine uses | All forms |
| 6063 | Furniture, architectural hardware | Tube, pipe, extruded shapes |
| 7001 | High-strength structures | Tube, extruded shapes |
| 7075 | Aircraft and heavy-duty structures | All forms except pipe |

Table 2–14 lists 11 of the 50 or more available aluminum alloys along with the forms in which they are typically produced and some of their major applications. See also Table 2–6 that lists six aluminum alloys used for commercially available shapes. These tables should aid you in selecting suitable alloys for particular applications.

The mechanical properties of the aluminum alloys are highly dependent on their condition. For this reason, the specification of an alloy is incomplete without a reference to its *temper*. The following list describes the usual tempers given to aluminum alloys. Note that some alloys respond to heat treating, and others are processed by strain hardening. *Strain hardening* is controlled cold working of the alloy, in which increased working increases hardness and strength while reducing ductility. Commonly available tempers are described next.

F (as-fabricated): No special control of properties is provided. Actual limits are unknown. This temper should be accepted only when the part can be thoroughly tested prior to service.

O (annealed): A thermal treatment that results in the softest and lowest strength condition. Sometimes specified to obtain the most workable form of the alloy. The resulting part can be heat-treated for improved properties if it is made from alloys in the 2xxx, 4xxx, 6xxx, or 7xxx series. Also, the working itself may provide some improvement in properties similar to that produced by strain hardening for alloys in the 1xxx, 3xxx, and 5xxx series.

H (strain-hardened): A process of cold working under controlled conditions that produces improved, predictable properties for alloys in the 1xxx, 3xxx, and 5xxx groups. The greater the amount of cold work, the higher the strength and hardness, although the ductility is decreased. The *H* designation is

followed by two or more digits (usually 12, 14, 16, or 18) that indicate progressively higher strength. Temper H18 is called *full hard*, produced by approximately 75% reduction in area during the strain hardening process. H16 is 3/4 hard; H14 is 1/2 hard; and H12 is 1/4 hard. H19 extra-hard temper is available and results in harder and stronger properties than H18. Other designations are used.

T (heat-treated): A series of controlled heating and cooling processes applied to alloys in the 2xxx, 4xxx, 6xxx, and 7xxx groups. The letter *T* is followed by one or more numbers to indicate specific processes. The more common designations for mechanical and structural products are T3, T4, and T6.

Property data for aluminum alloys are included in Appendix 9. Because these data are typical values, not guaranteed values, the supplier should be consulted for data at the time of purchase.

For mechanical design applications, alloy 6061 is one of the most versatile types. Note that it is available in virtually all forms, has good strength and corrosion resistance, and is heat-treatable to obtain a wide variety of properties. It also has good weldability. In its softer forms, it is easily formed and worked. Then, if higher strength is required, it can be heat-treated after forming. However, it has low machinability.

Aluminum Casting Alloys

Aluminum casting alloys are designated by a system of three digits followed by a decimal point and one digit to the right: xxx.x. The first digit represents the alloying element in the base aluminum having the highest concentration as follows:

1xx.x—99.00% minimum aluminum

2xx.x—Copper

3xx.x—Silicon with added copper and/or magnesium

4xx.x—Silicon

5xx.x—Magnesium

7xx.x—Zinc

8xx.x—Tin

The second two digits represent a particular composition of alloying elements, typically some combination of those listed above. The last digit after the decimal point indicates the form of the product being described, as follows:

0—Casting, with specification of sand, permanent mold, or die cast.

1—Ingot form, as supplied to the caster with typical control of nonspecified elements.

2—Ingot form, with tighter limits of specified elements.

Temper designations must also be applied to the alloy, typically *F* (*as-cast*), *O* (*annealed*), or *T_x* (*heat-treated*), where *x* is one or more numbers indicating the nature of the heat-treatment similar to those used for wrought alloys. Tempers T4 and T6 are most popular.

Mechanical properties data for three popular alloys, 204.0-T4, 206.0-T6, and 356.0-T6, for permanent mold castings are listed in Appendix 9. At least 75 other alloys are available, such as 201, 222, 242, 319, 360, 380, 413, 443, 444, 512, 518, 535, 712, 713, 771, 850, 851, and 852. The 850 series alloys are used primarily for bearings in applications similar to those for which bronzes are used. For special purposes, standard alloys are modified by slightly different compositions, specifications of tighter

limits on constituents, or specifying minimum or maximum amounts of trace elements. Designations for such alloys are preceded by a letter (A, B, C, D, and so forth).

Aluminum Forging Alloys

Many of the same alloys used in wrought form are also used for forging stock. Examples are general-purpose alloys 2014, 2024, 5052, and 6061. Alloys 7075, 7175, and 7145 offer much higher strengths and are often used in aerospace applications. Alloys 2218 and 2025 have high fatigue strengths and are applied in rotating engine parts, aircraft propellers, and machine parts that are cyclically loaded. Alloys 2219, 2618, and 4032 are designed for high-temperature operation as experienced in engines. Class I forging alloys are typically supplied in extruded form with wide tolerances in F or O tempers as rounds, squares, or rectangles. Class II forging stock is wrought and cold finished with much tighter tolerances, sometimes as high as ten times tighter. See Internet site 7.


2-13 ZINC ALLOYS AND MAGNESIUM

Zinc Alloys

Zinc is the fourth most commonly used metal in the world. Much of it is in the form of zinc galvanizing used as a corrosion inhibitor for steels, but very large quantities of zinc alloys are used in castings and for bearing materials. See Reference 28 and Internet site 10. Figure 2-17 shows two examples of zinc die-cast parts having complex shapes and many cast-in holes, bosses, and other features, many of which can be used without further machining.



(a) Camera support bracket for an interactive whiteboard

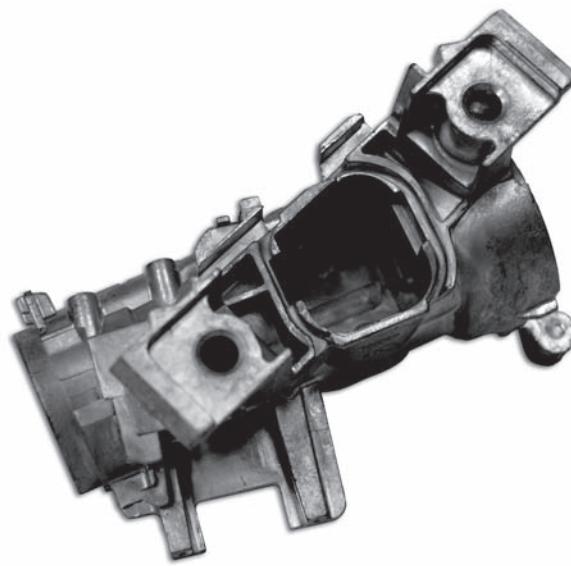

(b) Steering wheel lock housing

FIGURE 2-17 Examples of zinc die-cast parts (Photo courtesy of North American Die Casting Association, Wheeling, IL)

High production quantities are made using zinc pressure die casting, which results in very smooth surfaces and excellent dimensional accuracy. A variety of coating processes can be used to produce desirable finish appearance and to inhibit corrosion. Although the as-cast parts have inherently good corrosion resistance, the performance in some environments can be enhanced with chromate or phosphate treatments or anodizing. Painting and chrome plating are also used to produce a wide variety of attractive surface finishes.

In addition to die casting, zinc products are often made by permanent mold casting, graphite permanent mold casting, sand casting, and shell-mold casting. Other, less frequently used processes are investment casting, low-pressure permanent mold casting, centrifugal casting, continuous casting, and rubber-mold casting. Plaster-mold casting is often used for prototyping. Continuous casting is used to produce standard shapes (rod, bar, tube, and slabs). Prototypes or finished products can then be machined from these shapes.

Zinc alloys typically contain aluminum and a small amount of magnesium. Some alloys include copper or nickel. The performance of the final products can be very sensitive to small amounts of other elements, and maximum limits are placed on the content of iron, lead, cadmium, and tin in some alloys.

The most widely used zinc casting alloy is called *alloy No. 3*, sometimes referred to as *Zamak 3*. It has 4% aluminum and 0.035% magnesium. Another form, called *alloy No. 5 (Zamak 5)*, is often used in Europe and it also has 4% aluminum with 0.055% magnesium and 1.0% copper.

A group of alloys having higher aluminum content are the *ZA-alloys*, with ZA-8, ZA-12, and ZA-27 in wide use. The numbers 8, 12, and 27 indicate the nominal percentage of aluminum in the alloy, far higher than the 4% in the Zamak alloys. This results in higher strength, particularly in die-cast form. Each of the ZA alloys can be sand cast, permanent mold cast, or die cast. Percent elongation of cast zinc materials are relatively low, ranging from 2% to 13% depending on the alloy and casting method. Brittle behavior is to be expected. Appendix 10-1 gives a summary of the typical properties of these alloys.

Two additional alloys, No. 2 and No 7, are available. No. 2 is sometimes called *KIRKSITE* and is good for gravity casting. No. 7 is modified from No. 3 with lower magnesium content which gives it improved fluidity to fill more complex castings or those requiring modest forming during assembly.

Magnesium Alloys

One of the lightest metals used in common practice, magnesium is applied in many applications in automotive, military vehicles and equipment, motorcycles, construction tools, chainsaws, luggage, business equipment, ladders, consumer products, computers, cell phones,

other electronic devices, and appliances. Its density of approximately 1800 kg/m^3 ($0.065 \text{ lb}_m/\text{in}^3$) is two-thirds that of aluminum and about one-fifth that of steel. Magnesium has high inherent damping capacity to absorb vibration energy providing quieter operation of equipment when used for housings and enclosures. It is readily cast using die casting (the most prevalent choice), permanent mold casting, sand casting, and squeeze casting. However, strengths are relatively low and its modulus of elasticity, typically 45 GPa (6.5310^6 psi), is the lowest of common metals.

The most widely used alloy is AZ91, where A refers to aluminum and Z refers to zinc, the two major alloying elements. A series of three AM alloys contain aluminum and magnesium. The AS alloys contain aluminum and silicon that give them better high temperature performance. Appendix 10-2 gives values for mechanical properties of AZ91, AM-60, AM-50, and AM-20 alloys.

2-14 NICKEL-BASED ALLOYS AND TITANIUM

Nickel-Based Alloys

Nickel-based alloys are often specified for applications where high corrosion resistance and/or high strength at elevated temperatures are required. Examples are turbine engine components, rocket motors, furnace parts, chemical processing systems, marine-based systems, aerospace systems, valves, pumps, heat exchangers, food processing equipment, pharmaceutical processing systems, nuclear power systems, and air pollution equipment.

Appendix 11-1 gives typical properties of three nickel-based alloys listed according to their UNS designations in the NXXXXX series. Most nickel-based alloys are not heat-treated; however, cold working is employed to increase strength as is evident for the N04400 alloy in Appendix 11-1.

Alloys N06600 and N06110 retain approximately 70% to 80% of room-temperature strength up to 1200°F (649°C). Some alloys are usable up to 2000°F (1093°C). Alloys are often grouped under the categories of *corrosion resistant* or *heat resistant*. While nickel makes up 50% or more of these alloys, the major alloying elements include chromium, molybdenum, cobalt, iron, copper, and niobium. See Internet sites 28–30 for some producers of these alloys. Note the brand names offered by these companies and the extensive set of property data available on their websites. See Internet sites 28–30.

Creep performance is an important property for the nickel-based alloys because they often operate under significant loads and stresses at high temperatures where creep rupture is a possible failure mode. Also, the modulus of elasticity decreases with increasing temperature, which can result in unacceptable deformations that must be considered in the design phase. Producers publish creep and elastic modulus versus temperature data for their materials in addition to the basic strength data.

Titanium Alloys

The applications of titanium include aerospace structures and components, chemical tanks and processing equipment, fluids-handling devices, and marine hardware. Titanium has very good corrosion resistance and a high strength-to-weight ratio. Its stiffness and density are between those of steel and aluminum; its modulus of elasticity is approximately 16×10^6 psi (110 GPa), and its density 0.160 lb/in³ (4.429 kg/m³). Typical yield strengths range from 25 to 175 ksi (172–1210 MPa). Disadvantages of titanium include relatively high cost and difficult machining. See Reference 29.

The classification of titanium alloys usually falls into four types: commercially pure alpha titanium, alpha alloys, alpha–beta alloys, and beta alloys. The term *alpha* refers to the hexagonal, close-packed, metallurgical structure that forms at low temperatures, and *beta* refers to the high-temperature, body-centered, cubic structure.

Generally speaking, the alpha–beta alloys and the beta alloys are stronger forms of titanium. They are heat-treatable for close control of their properties. Since several alloys are available, a designer can tailor the properties to meet special needs for formability, machinability, forgeability, corrosion resistance, high-temperature strength, weldability, and creep resistance, as well as basic room-temperature strength and ductility. Alloy Ti-6Al-4V contains 6% aluminum and 4% vanadium and is used in a variety of aerospace applications.

Appendix 11–2 lists the properties of:

- Three commercially pure alpha alloys in wrought form: Ti-35A, Ti-50A, and Ti-65. For each, the number represents the nominal tensile strength in ksi.
- Alpha alloy Ti-0.2Pd in wrought form
- Beta alloy Ti-3A1-13V-11Cr in two forms of heat-treatment
- Alpha-beta alloy Ti-6Al-4V in one annealed and one heat-treated form.

2-15 COPPER, BRASS, AND BRONZE

Copper is widely used in its nearly pure form for electrical and plumbing applications because of its high electrical conductivity and good corrosion resistance. It is rarely used for machine parts because of its relatively low strength compared with that of its alloys, *brass* and *bronze*. (See Reference 6 and Internet site 8.)

Brass is a family of alloys of copper and zinc, with the content of zinc ranging from about 5% to 40%. Brass is often used in marine applications because of its resistance to corrosion in salt water. Many brass alloys also have excellent machinability and are used as connectors, fittings, and other parts made on screw machines. *Yellow brass* contains about 30% or more of zinc and often contains a significant amount of lead to improve

machinability. *Red brass* contains 5% to 15% zinc. Some alloys also contain tin, lead, nickel, or aluminum.

Bronze is a class of alloys of copper with several different elements, one of which is usually tin. They are useful in gears, bearings, and other applications where good strength and high wear resistance are desirable.

Wrought bronze alloys are available in four types:

Phosphor bronze: Copper-tin-phosphorus alloy

Leaded phosphor bronze: Copper-tin-lead-phosphorus alloy

Aluminum bronze: Copper-aluminum alloy

Silicon bronze: Copper-silicon alloy

Cast bronze alloys have four main types:

Tin bronze: Copper-tin alloy

Leaded tin bronze: Copper-tin-lead alloy

Nickel tin bronze: Copper-tin-nickel alloy

Aluminum bronze: Copper-aluminum alloy

The cast alloy called *manganese bronze* is actually a high-strength form of brass because it contains zinc, the characteristic alloying element of the brass family. Manganese bronze contains copper, zinc, tin, and manganese.

In the UNS, copper alloys are designated by the letter C, followed by a five-digit number. Numbers from 10000 to 79900 refer to wrought alloys; 80000 to 99900 refer to casting alloys. See Appendix 12 for typical properties.

Wrought forms of brass and bronze include circular rods, flat bars, hexagonal bars, sheet, strip, and wire. Over 120 different wrought alloys are available, listed on Internet site 8. Four common types of wrought brasses are:

Extra high-leaded brass—C35600 Copper-lead-tin alloy

Uses include: Gears, gear wheels, and general machined parts

Free-cutting brass—C36000 Copper-lead-tin alloy

Uses include: Screw machine parts, gears, and roll-threaded parts

Free-cutting Muntz metal—C37000 Copper-tin alloy with a small amount of lead

Uses include: Screw machine parts in high-production operations

Naval brass—C46400 Copper-tin-lead-zinc alloy

Uses include: Marine hardware, propeller shafts, valve stems, nuts, bolts, and rivets

Phosphor bronze—C54400 Copper-lead-tin-zinc-phosphorous alloy

Uses include: Gears, bushings, stamped parts, drawn parts, machine components

Silicon bronze—C65500

Copper (97%)-silicon (3%)

Uses include: Electrical fittings, marine hardware, heavy screws, bolts, propeller shafts

Manganese bronze—C67500

Copper-zinc-iron-tin-manganese alloy

Uses include: Clutch discs, pump parts, shafting, aircraft parts, forgings, valve stems

Casting alloys are made using sand casting, permanent mold casting, and centrifugal casting. See Internet site 8 for properties of over 90 casting alloys. A few common types are:

Manganese bronze—C86200 Copper-zinc, aluminum, iron, manganese alloy

Uses include: Marine castings, rudders, gun mounts, large gears, cams, machine parts

Bearing bronze—C93200 Copper-tin-lead-zinc alloy

Uses include: Bearings and bushings for heavy equipment, pump impellers, hose fittings

Aluminum bronze—C95400 Copper-aluminum-iron alloy

Uses include: Valve seats, gears, worm wheels, bearings, landing gear parts, welding tips

Copper-nickel-zinc alloy—

C96200

Uses include: Pump housings, valve bodies, marine hardware, and plumbing components

Nickel silver—C97300 Copper-zinc-nickel alloy

Uses include: Camera parts, optical equipment, jewelry, fasteners, drawn shapes

Conditions for Copper Alloys.

Copper alloys typically have a wide range of properties, heavily dependent on thermal treatment, strain hardening by cold working, or a combination of both. Thermal treatments include annealing, solution heat-treating, and precipitation hardening.

Strain hardening is categorized by many systems, one of which is called *cold-worked tempers (H)*, in which control of the degree of working produces predictable strength and ductility properties. Working tends to align the grains of the alloy's structure and higher degrees of working create finer grain sizes, a preferred condition. The range of cold-worked tempers is typically given in ten steps with the initial condition being annealed.

H00 1/8 hard

H04 Full hard

H12 Special spring

H01 1/4 hard

H06 Extra hard

H13 Ultra spring

H02 1/2 hard

H08 Spring

H14 Super spring

H03 3/4 hard

H10 Extra spring

Other conditions or tempers include:

annealed tempers (O)

average grain size control tempers (OS)

mill-hardened tempers (TM)

precipitation hardened tempers (TF)

precipitation hardened and cold-worked (TL)

Cold-worked and precipitation hardened (TH)

cold-worked and stress relieved (HR)

cold-worked and ordered strengthened (HT)

solution heat-treated (TB)

solution heat-treated and cold-worked (TD)

precipitation hardened and stress relieved (TR)

There is a strong relationship between the condition of copper alloys and the ease of which they can be fabricated, especially the tempers involving cold working. In general, as the degree of cold working increases, the strength is greater, but the ductility is lower indicated by the percent elongation. Figure 2–18 illustrates the general nature of this situation. The designer's responsibility is to specify a condition that has adequate strength while retaining sufficient ductility to permit forming and fabricating using such methods as:

| | | | |
|--------------|----------------|---------------|---------------|
| machining | thread rolling | press forming | brake forming |
| roll forming | drawing | forging | blanking |
| stamping | coining | punching | upsetting |
| cold heading | knurling | shearing | swaging |
| spinning | soldering | welding | brazing |

2-16 PLASTICS

Plastics include a wide variety of materials formed of large molecules called *polymers*. The thousands of different plastics are created by combining different chemicals to form long molecular chains.

One method of classifying plastics is by the terms *thermoplastic* and *thermosetting*. In general, the *thermoplastic* materials can be formed repeatedly by heating or molding because their basic chemical structure is unchanged from its initial linear form. *Thermosetting* plastics do undergo some change during forming and result in a structure in which the molecules are cross-linked and form a network of interconnected molecules. Some designers recommend the terms *linear* and *cross-linked* in place of the more familiar *thermoplastic* and *thermosetting*.

Listed next are several thermoplastics and several thermosets that are used for load-carrying parts and that are therefore of interest to the designer of machine elements. These listings show the main advantages and uses of a sample of the many plastics available. Appendix 13 lists typical properties.

Thermoplastics

- **Polyamide (PA or Nylon):** Good strength, wear resistance, and toughness; wide range of possible properties depending on fillers and formulations. Used for

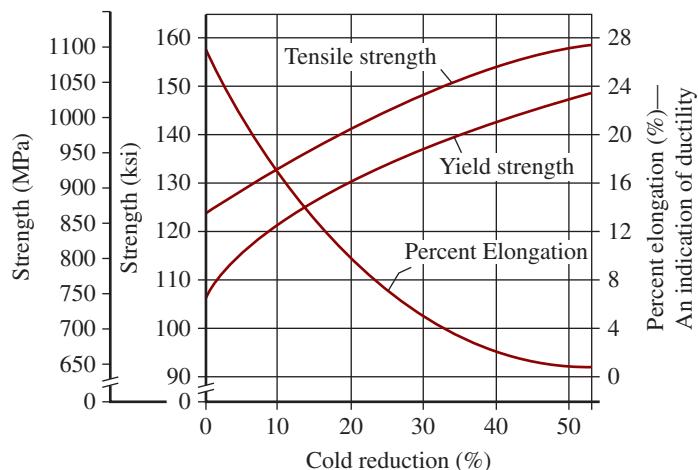


FIGURE 2-18 General characteristics of the variation of strength and ductility of brass alloys as related to the degree of cold working

structural parts, mechanical devices such as gears and bearings, and parts needing wear resistance.

- **Acrylonitrile-butadiene-styrene (ABS):** Good impact resistance, rigidity, moderate strength. Used for housings, helmets, cases, appliance parts, pipe, and pipe fittings.
- **Polycarbonate:** Excellent toughness, impact resistance, and dimensional stability. Used for cams, gears, housings, electrical connectors, food processing products, helmets, and pump and meter parts.
- **Acrylic:** Good weather resistance and impact resistance; can be made with excellent transparency or translucent or opaque with color. Used for glazing, lenses, signs, and housings.
- **Polyvinyl chloride (PVC):** Good strength, weather resistance, and rigidity. Used for pipe, electrical conduit, small housings, ductwork, and moldings.
- **Polyimide (PI):** Good strength and wear resistance; very good retention of properties at elevated temperatures up to 500°F. Used for bearings, seals, rotating vanes, and electrical parts.
- **Acetal:** High strength, stiffness, hardness, and wear resistance; low friction; good weather resistance and chemical resistance. Used for gears, bushings, sprockets, conveyor parts, and plumbing products.
- **Polyurethane elastomer:** A rubberlike material with exceptional toughness and abrasion resistance; good heat resistance and resistance to oils. Used for wheels, rollers, gears, sprockets, conveyor parts, and tubing.
- **Thermoplastic polyester resin (PET):** Polyethylene terephthalate (PET) resin with fibers of glass and/or mineral. Very high strength and stiffness, excellent resistance to chemicals and heat, excellent dimensional stability, and good electrical properties. Used for pump parts, housings, electrical parts, motor parts, auto parts, oven handles, gears, sprockets, and sporting goods.

- **Polyether-ester elastomer:** Flexible plastic with excellent toughness and resilience, high resistance to creep, impact, and fatigue under flexure, good chemical resistance. Remains flexible at low temperatures and retains good properties at moderately elevated temperatures. Used for seals, belts, pump diaphragms, protective boots, tubing, springs, and impact absorbing devices. High modulus grades can be used for gears and sprockets.

Thermosets

- **Phenolic:** High rigidity, good moldability and dimensional stability, very good electrical properties. Used for load-carrying parts in electrical equipment, switchgear, terminal strips, small housings, handles for appliances and cooking utensils, gears, and structural and mechanical parts. Alkyd, allyl, and amino thermosets have properties and uses similar to those of the phenolics.
- **Polyester:** Known as *fiber glass* when reinforced with glass fibers; high strength and stiffness, good weather resistance. Used for housings, structural shapes, and panels.

Special Considerations for Selecting Plastics

A particular plastic is often selected for a combination of properties, such as light weight, flexibility, color, strength, stiffness, chemical resistance, low friction characteristics, or transparency. Table 2-15 lists the primary plastic materials used for six different types of applications. References 14, 19, 27, and 32 provide us extensive comparative studies of the design properties of plastics.


While most of the same definitions of design properties described in Section 2-2 of this chapter can be used for plastics as well as metals, a significant amount of additional information is typically needed to

TABLE 2-15 Applications of Plastic Materials

| Applications | Desired properties | Suitable plastics |
|--|---|---|
| Housings, containers, ducts | High impact strength, stiffness, low cost, formability, environmental resistance, dimensional stability | ABS, polystyrene, polypropylene, PET, polyethylene, cellulose acetate, acrylics |
| Low friction—bearings, slides | Low coefficient of friction; resistance to abrasion, heat, corrosion | TFE fluorocarbons, nylon, acetics |
| High-strength components, gears, cams, rollers | High tensile and impact strength, stability at high temperatures, machinable | Nylon, phenolics, TFE-filled acetals, PET, polycarbonate |
| Chemical and thermal equipment | Chemical and thermal resistance, good strength, low moisture absorption | Fluorocarbons, polypropylene, polyethylene, epoxies, polyesters, phenolics |
| Electrostructural parts | Electrical resistance, heat resistance, high impact strength, dimensional stability, stiffness | Allyls, alkyls, aminos, epoxies, phenolics, polyesters, silicones, PET |
| Light-transmission components | Good light transmission in transparent and translucent colors, formability, shatter resistance | Acrylics, polystyrene, cellulose acetate, vinyls |

specify a suitable plastic material. Some of the special characteristics of plastics follow. The charts shown in Figures 2–19 to 2–22 are examples only and are not meant to indicate the general nature of the performance of the given type of material. There is a wide range of properties among the many formulations of plastics even within a given class. Consult the extensive amount of design guidance available from vendors of the plastic materials.

1. Most properties of plastics are highly sensitive to temperature. In general, tensile strength, compressive strength, elastic modulus, and impact failure energy decrease significantly as the temperature increases. Figure 2–19 shows the tensile strength of

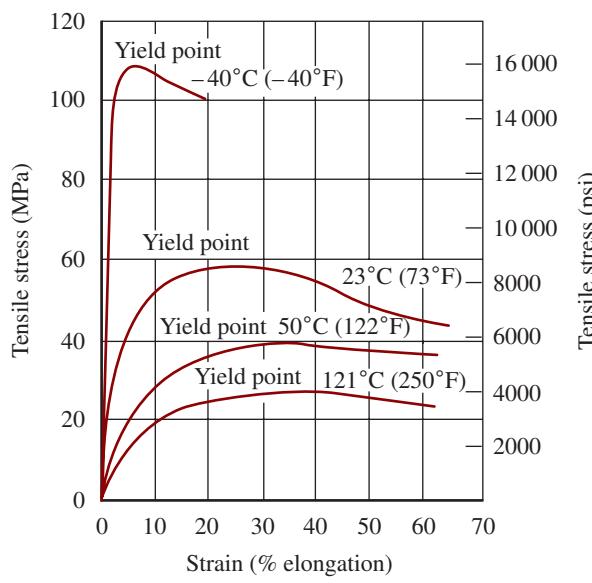

Sample has been conditioned to 50% relative humidity.

FIGURE 2-19 Stress-strain curves for nylon 66 at four temperatures

nylon 66 at four temperatures. Note also the rather different shapes of the stress-strain curves. The slope of the curve at any point indicates the elastic modulus, and you can see a large variation for each curve.

2. Many plastics absorb a considerable amount of moisture from the environment and exhibit dimensional changes and degradation of strength and stiffness properties as a result. See Figure 2–20 that shows the flexural modulus versus temperature for a nylon in dry air, 50% relative humidity (RH), and 100% RH. A consumer product may well experience a major part of this range. At a temperature of 20°C (68°F, near room temperature), the flexural modulus would decrease dramatically from approximately 2900 MPa to about 500 MPa as humidity changes from dry air to 100% RH. The product may also see a temperature range from 0°C (32°F, freezing point of water) to 40°C (104°F). Over this range, the flexural

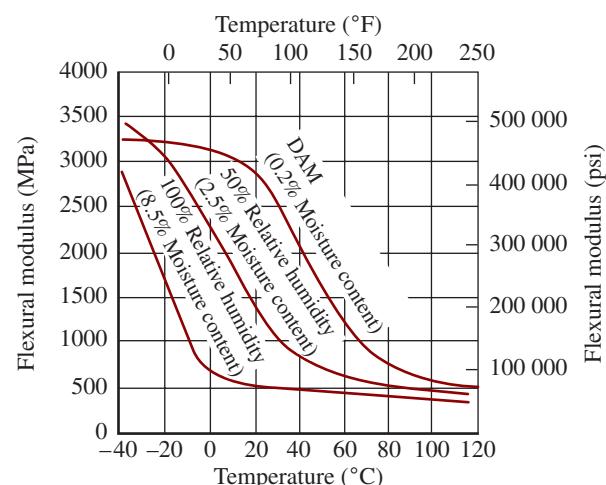


FIGURE 2-20 Effect of temperature and humidity on the flexural modulus of nylon 66

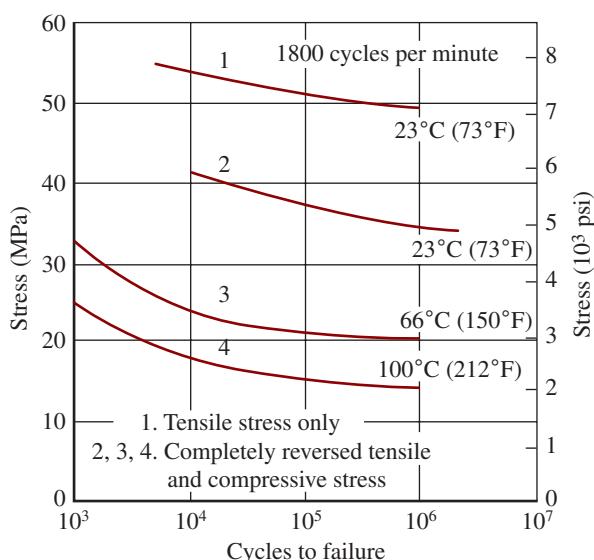


FIGURE 2-21 Fatigue stress versus number of cycles to failure for an acetal resin plastic

modulus for the nylon at 50% RH would decrease from approximately 2300 MPa to 800 MPa.

3. Components that carry loads continuously must be designed to accommodate creep or relaxation. See Figures 2-8 and 2-9 and Example Problem 2-1.
4. Fatigue resistance data of a plastic must be acquired for the specific formulation used and at a representative temperature. Chapter 5 gives more information about fatigue. Figure 2-21 shows the fatigue stress versus number of cycles to failure for an acetal resin plastic. Curve 1 is at 23°C (73°F, near room temperature) with cyclic loading in tension only as when a tensile load is applied and removed many times. Curve 2 is at the same temperature, but the loading is completely reversed tension and compression as would be experienced with a rotating beam or shaft loaded in bending. Curve 3 is the reversed bending load at 66°C (150°F), and Curve 4 is the same loading at 100°C (212°F) to show the effect of temperature on fatigue data.
5. Processing methods can have large effects on the final dimensions and properties of parts made from plastics. Molded plastics shrink significantly during solidification and curing. Parting lines produced where mold halves meet may affect strength. The rate of solidification may be widely different in a given part depending on the section thicknesses, the complexity of the shape and the location of sprues that deliver molten plastic into the mold. The same material can produce different properties depending on whether it is processed by injection molding, extrusion, blow molding, or machining from a solid block or bar. See Reference 27.
6. Resistance to chemicals, weather, and other environmental conditions must be checked.

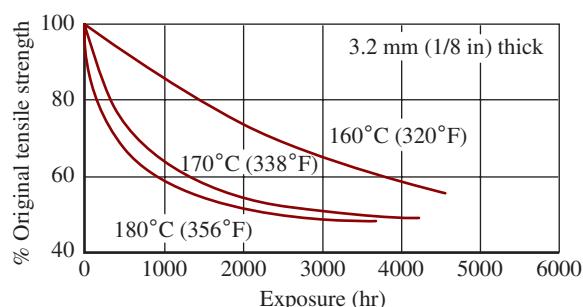


FIGURE 2-22 Effect of exposure to elevated temperature on a thermoplastic polyester resin (PET)

7. Plastics may exhibit a change in properties as they age, particularly when subjected to elevated temperatures. Figure 2-22 shows the reduction in tensile strength for a thermoplastic polyester resin when subjected to temperatures from 160°C (320°F) to 180°C (356°F) for a given number of hours of exposure. The reduction can be as much as 50% in as little time as 2000 hours (12 weeks).
8. Flammability and electrical characteristics must be considered. Some plastics are specially formulated for high flammability ratings as called for by Underwriters Laboratory and other agencies.
9. Plastics used for food storage or processing must meet U.S. Food and Drug Administration standards.

2-17 COMPOSITE MATERIALS

Composites are materials having two or more constituents blended in such a way that results in bonding between the materials. To form a composite, a discrete *reinforcement* material is distributed in a second continuous material called a *matrix* so that it adds strength, stiffness, or other desirable properties. Typically, the reinforcement material is strong and stiff while the matrix has a relatively low density and specific weight. When the two materials bond together, much of the load-carrying ability of the composite is produced by the reinforcement. The matrix serves to hold the reinforcement in a favorable orientation relative to the manner of loading and to distribute the loads to the reinforcement. The result is a somewhat optimized composite that has high strength and high stiffness with low weight. See References 3, 6, 20, 25, 33, 35, and 36 and Internet sites 1, 19–26, 31, 32, and 34–37.

Designers can tailor the properties of composite materials to meet the specific needs of a particular application by the selection of each of several variables that determine the performance of the final product. Among the factors under the designer's control are the following:

1. Matrix resin or metal.
2. Type of reinforcing fibers.
3. Amount of fiber contained in the composite.
4. Orientation of the fibers.

TABLE 2-16 Examples of Composite Materials and Their Uses

| Type of composite | Typical applications |
|-------------------|--|
| Glass/epoxy | Automotive and aircraft parts, tanks, sporting goods, printed wiring boards |
| Boron/epoxy | Aircraft structures and stabilizers, sporting goods |
| Graphite/epoxy | Aircraft and spacecraft structures, sporting goods, agricultural equipment, material handling devices, medical devices |
| Aramid/epoxy | Filament-wound pressure vessels, aerospace structures and equipment, protective clothing, automotive components |
| Glass/polyester | Sheet-molding compound (SMC), body panels for trucks and cars, large housings |

5. Number of individual layers used.
6. Overall thickness of the material.
7. Orientation of the layers relative to each other.
8. Combination of two or more types of composites or other materials into a composite structure.

Table 2-16 lists some of the composites formed by combinations of resins and fibers and their general characteristics and uses. A virtually unlimited variety of composite materials can be produced by combining different matrix materials with different reinforcements in different forms and in different orientations.

Examples of Finished Products Made from Composite Materials

The number and variety of applications for composite materials is large and growing. The following items are but a sampling of these applications.

Consumer Products and Recreation: Sporting goods such as tennis rackets, snow skis, snowboards, water skis, surfboards, baseball bats, hockey sticks, vaulting poles, and golf clubs; numerous products having the familiar fiberglass housings and panels; boat hulls and other onboard equipment; medical systems and prosthetic devices.

Ground Transportation Equipment: Bicycle frames, wheels, and seats; automotive and truck body panels and support structures, air ducts, air bags, drive-shafts, springs for high-performance sports cars and trucks, floor pans, pickup truck beds, and bumpers.

Aircraft and Aerospace Systems: Fuselage panels and internal structural elements, wings, control surfaces (ailers, spoilers, tails, rudders), floor systems, engine cowls and nacelles, landing gear doors, cargo compartment structure and fittings, interior sidewalls, trim, partitions, ceiling panels, dividers, environmental control system ducting, stowage bins, lavatory structure systems and fixtures, airfoils (blades) in the compressor section of turbine engines, rocket nozzles, helicopter rotors, propellers, and onboard tanks for storing water and wastewater.

Industrial Facilities: Storage tanks and pressure vessels for chemical, agricultural, and petroleum processing, piping for chemicals and through corrosive environments, septic systems, wastewater treatment facilities, chemical cleaning and plating systems, pulp and paper making equipment, portable tanks for trucks and railroad applications, environmental treatment equipment, protective clothing and helmets, food processing and storage systems, mining, and material handling systems.

Electrical and Electronic Systems: Printed circuit boards, printed wiring boards, surface mount cards, packaging of electronic components, and switching system components.

Building Construction: Structural shapes, exterior panels, roofing and decking systems, doors, window frames, equipment housings, gutters and downspouts, cooling towers, bridges and walkways, piping systems, and ductwork.

Classifications of Composite Materials by Matrix

One method of classifying composite materials is by the type of matrix material. Three general classifications are used as described next, along with typical matrix materials, uses, and matrix-reinforcement combinations.

Polymer Matrix Composites (PMC)

Thermoplastics: Polyethylenes, Polyamides (nylons), polystyrenes, polypropylenes, polycarbonates, polyetheretherketones (PEEK), polyphenylene sulfides (PPS), polyvinyl chloride (PVC)

Thermosets: Polyesters, epoxies, phenolics, polyimides (PI), vinyl esters, silicones

PMCs are used for their high strength and stiffness, low density, and relatively low cost in aerospace, automotive, marine, chemical, electrical, and sporting applications. Common PMC composites include polyester-glass (conventional fiber-glass), epoxy-glass, polyimide-glass, epoxy-aramid, epoxy-carbon, PEEK-carbon, and PPS-carbon.

Metal Matrix Composites (MMC) Aluminum (Al), titanium (Ti), magnesium (Mg), iron (Fe), copper (Cu), nickel (Ni), and alloys of these metals with themselves and with molybdenum (Mo), cesium (Ce), boron (B).

MMCs are preferred for high strength, high stiffness, abrasion resistance, dimensional stability, electrical and thermal conductivity, ability to operate in high temperatures, and toughness and are applied typically in aerospace and engine applications. Examples of MMC composites include Al-SiC (silicon carbide), Ti-SiC, Al-B, Al-C (carbon), Al-graphite, Mg-SiC, and Al-Al₂O₃ (aluminum oxide).

Ceramic Matrix Composites (CMC) Silicon carbide, silicon nitride, alumina, zirconia, glass-ceramic, glass, carbon, graphite.

CMCs are preferred for high strength, high stiffness, high fracture toughness relative to ceramics alone, ability to operate at high temperatures, and low thermal expansion and are attractive for furnaces, engines, and aerospace applications. Common CMC composites include carbon-carbon (C-C), silicon carbide-carbon (SiC-C), silicon carbide-silicon carbide (SiC-SiC), glass ceramic-silicon carbide, silicon carbide-lithium aluminosilicate (SiC-LAS), and silicon carbide-calcium aluminosilicate (SiC-CAS). Where the same basic material is listed as both the matrix and the reinforcement, the reinforcement is of a different form such as whiskers, chopped fibers, or strands to achieve the preferred properties.

Forms of Reinforcement Materials

Many forms of reinforcement materials are used as listed here.

- Continuous fiber strand consisting of many individual filaments bound together.
- Chopped strands in short lengths (0.75 to 50 mm or 0.03 to 2.00 in).
- Chopped longer strands randomly spread in the form of a mat.
- Chopped longer strands aligned with the principal directions of the load path.
- Roving: A group of parallel strands.
- Woven fabric made from roving or strands.
- Braided sleeves.
- Metal filaments or wires.
- Metal, glass, or mica flakes.
- Single crystal whiskers of materials such as graphite, silicon carbide, and copper.

Types of Reinforcement Materials

Reinforcement fibers come in many types based on both organic and inorganic materials. The following are some of the more popular types:

- Glass fibers in five different types:
A-glass: Good chemical resistance because it contains alkalis such as sodium oxide.
C-glass: Special formulations for even higher chemical resistance than A-glass.
E-glass: Widely used glass with good electrical insulating ability and good strength.
S-glass: High-strength, high-temperature glass.
D-glass: Better electrical properties than E-glass.
- Quartz fibers and high-silica glass: Good properties at high temperatures up to 2000°F (1095°C).
- Carbon fibers made from PAN-base carbon (PAN is polyacrylonitrile): Approximately 95% carbon with very high modulus of elasticity.
- Graphite fibers: Greater than 99% carbon and an even higher modulus of elasticity than carbon; the stiffest fibers typically used in composites.
- Boron coated onto tungsten fibers: Good strength and a higher modulus of elasticity than glass.
- Silicon carbide coated onto tungsten fibers: Strength and stiffness similar to those of boron/tungsten, but with higher temperature capability.
- Aramid fibers: A member of the polyamide family of polymers; higher strength and stiffness with lower density as compared with glass; very flexible. (Aramid fibers produced by the DuPont Company carry the name *Kevlar*™.)

Processing of Composites

One method that is frequently used to produce composite products is first to place layers of sheet-formed fabrics on a form having the desired shape and then to impregnate the fabric with wet resin. Each layer of fabric can be adjusted in its orientation to produce special properties of the finished article. After the lay-up and resin impregnation are completed, the entire system is subjected to heat and pressure while a curing agent reacts with the base resin to produce cross-linking that binds all of the elements into a three-dimensional, unified structure. The polymer binds to the fibers and holds them in their preferred position and orientation during use.

An alternative method of fabricating composite products starts with a process of preimpregnating the fibers with the resin material to produce strands, tape, braids, or sheets. The resulting form, called a *prepreg*, can then be stacked into layers or wound onto a form to produce the desired shape and thickness. The final step is the curing cycle as described for the wet process. See Internet sites 23, 24, and 31.

Injection molding and extrusion can be used for composites made from thermoplastics in conventional plastics processing equipment, provided the reinforcement fibers are short so the material can flow properly. Glass fiber reinforcement is most commonly used.

Sheet molding compounds (SMC) are used in compression molding of panels and shells used for automotive body panels, industrial and business machine cabinets, watercraft, and electrical parts. Complex three-dimensional products can be made in final form or near-net-shape using SMC materials. Glass reinforcement fibers [typically in lengths from 1/2 in to 1.0 in (12 mm to 25 mm) and from 10% to 60% volume fraction] are randomly mixed with a polymer resin (often polyester), catalysts, colorants, thickeners, release agents, and inert fillers. Plastic films of nylon or polyethylene cover the mixture top and bottom as a sandwich and the combination is rolled to the desired thickness. At the time of use, the sheets are placed into a mold and shaped and cured simultaneously under heat and pressure. The resulting product has good strength and stiffness properties and excellent surface appearance. See Internet site 32. Where higher mechanical properties are required, SMC sheets can be made from an epoxy matrix and carbon fiber reinforcements. (See Internet sites 31 and 32.)

Pultrusion is a process in which the fiber reinforcement is coated with resin as it is pulled through a heated die to produce a continuous form in the desired shape. This process is used to produce rod, tubing, structural shapes (I-beams, channels, angles, and so on), tees, and hat sections used as stiffeners in aircraft structures, truck and trailer bodies, and similar large structures.

Filament winding is used to make pipe, pressure vessels, rocket motor cases, instrument enclosures, and other cylindrical containers. The continuous filament can be placed in a variety of patterns, including helical, axial, and circumferential, to produce desired strength and stiffness characteristics.

Selection of Composite Materials

Selection of which matrix, reinforcement, and processing method to use for a component made from composites is indeed a complex process. However, some generalizations can be made depending on two major design criteria, *cost* and *performance*.

When *low cost* dominates the design criteria, fiberglass is the predominant choice. Common fiberglass made from thermosetting polyester resin and glass fiber reinforcement is most often used in boats, piping, housings, canisters, and structural components.

For *high-volume applications* that can be made from injection molding or extrusion, low-cost designs can be made using thermoplastics such as polyamides and polycarbonates with short glass reinforcements. Higher strength or stiffness properties may result when using PEEK, PPS, or PVC.

When *high performance* is required, carbon fiber in an epoxy matrix is the predominant choice. Typical applications include aircraft structural components; high-end sporting goods such as tennis rackets, golf clubs, and fishing poles; and race car components.

See also the discussion of *Materials Selection* in this chapter.

Advantages of Composites

Designers typically seek to produce products that are safe, strong, stiff, lightweight, and highly tolerant of the environment in which the product will operate. Composites often excel in meeting these objectives when compared with alternative materials such as metals, wood, and unreinforced plastics. Two parameters that are used to compare materials are *specific strength* and *specific modulus*, defined as follows:

Specific strength is the ratio of the tensile strength of a material to its specific weight.

Specific modulus is the ratio of the modulus of elasticity of a material to its specific weight.

Because the modulus of elasticity is a measure of the stiffness of a material, the specific modulus is sometimes called *specific stiffness*.

Although obviously not a length, both of these quantities have the *unit* of length, derived from the ratio of the units for strength or modulus of elasticity and the units for specific weight. In the U.S. Customary System, the units for tensile strength and modulus of elasticity are lb/in², whereas specific weight (weight per unit volume) is in lb/in³. Thus, the unit for specific strength or specific modulus is inches. In SI units, strength and modulus are expressed in N/m² (pascals), whereas specific weight is in N/m³. Then the unit for specific strength or specific modulus is meters.

Table 2–17 gives comparisons of the specific strength and specific stiffness of selected composite materials with certain steel, aluminum, and titanium alloys. Figure 2–23 shows a comparison of these materials using bar charts. Figure 2–24 is a plot of these data with specific strength on the vertical axis and specific modulus on the horizontal axis. When weight is critical, the ideal material will lie in the upper-right part of this chart. Note that data in these charts and figures are for composites having the reinforcement materials aligned in the most favorable direction to withstand the applied loads.

Advantages of composites can be summarized as follows:

1. Specific strengths for composite materials can range as high as five times those of high-strength steel alloys. See Table 2–17 and Figures 2–23 and 2–24.
2. Specific modulus values for composite materials can be as high as eight times those for steel, aluminum, or titanium alloys. See Table 2–17 and Figures 2–23 and 2–24.
3. Composite materials typically perform better than steel or aluminum in applications where cyclic loads can lead to the potential for fatigue failure.
4. Where impact loads and vibrations are expected, composites can be specially formulated with materials that provide high toughness and a high level of damping.

TABLE 2-17 Comparison of Specific Strength and Specific Modulus for Selected Materials

| Material | Modulus of elasticity, E | | Tensile strength, s_u | | Specific weight, γ | | Specific strength | | Specific modulus | |
|------------------------|----------------------------|-------|-------------------------|-------|---------------------------|------------------------|-------------------------|-------------------------|------------------------|------------------------|
| | (psi) | (GPa) | (ksi) | (MPa) | (lb/in ³) | (kN/m ³) | (in) | (m) | (in) | (m) |
| Metals | | | | | | | | | | |
| Steel | | | | | | | | | | |
| SAE 1020 HR | 30.0 × 10 ⁶ | 207 | 55 | 379 | 0.283 | 76.8 | 0.194 × 10 ⁶ | 0.494 × 10 ⁴ | 1.06 × 10 ⁸ | 2.69 × 10 ⁶ |
| SAE 5160 OQT 700 | 30.0 × 10 ⁶ | 207 | 263 | 1813 | 0.283 | 76.8 | 0.929 × 10 ⁶ | 2.36 × 10 ⁴ | 1.06 × 10 ⁸ | 2.69 × 10 ⁶ |
| Aluminum | | | | | | | | | | |
| 6061-T6 | 10.6 × 10 ⁶ | 69.0 | 45 | 310 | 0.100 | 27.1 | 0.450 × 10 ⁶ | 1.14E04 | 1.00 × 10 ⁸ | 2.54E + 06 |
| 7075-T6 | 10.4 × 10 ⁶ | 71.7 | 83 | 572 | 0.100 | 27.1 | 0.830 × 10 ⁶ | 2.11E04 | 1.04 × 10 ⁸ | 2.64E + 06 |
| Titanium | | | | | | | | | | |
| Ti-6Al-4V | 16.5 × 10 ⁶ | 114 | 160 | 1103 | 0.160 | 43.4 | 1.00 × 10 ⁶ | 2.54 × 10 ⁴ | 1.03 × 10 ⁸ | 2.62 × 10 ⁶ |
| Composites | | | | | | | | | | |
| Glass/epoxy | | | | | | | | | | |
| 4.00 × 10 ⁶ | 28 | 114 | 786 | 0.061 | 16.6 | 1.87 × 10 ⁶ | 4.75 × 10 ⁴ | 0.656 × 10 ⁸ | 1.67 × 10 ⁶ | |
| 34% fiber content | | | | | | | | | | |
| Aramid/epoxy | | | | | | | | | | |
| 11.0 × 10 ⁶ | 76 | 200 | 1379 | 0.050 | 13.6 | 4.00 × 10 ⁶ | 10.2 × 10 ⁴ | 2.20 × 10 ⁸ | 5.59 × 10 ⁶ | |
| 60% fiber content | | | | | | | | | | |
| Boron/epoxy | | | | | | | | | | |
| 30.0 × 10 ⁶ | 207 | 270 | 1862 | 0.075 | 20.4 | 3.60 × 10 ⁶ | 9.14 × 10 ⁴ | 4.00 × 10 ⁸ | 10.2 × 10 ⁶ | |
| 60% fiber content | | | | | | | | | | |
| Graphite/epoxy | | | | | | | | | | |
| 19.7 × 10 ⁶ | 136 | 278 | 1917 | 0.057 | 15.5 | 4.88 × 10 ⁶ | 12.4 × 10 ⁴ | 3.46 × 10 ⁸ | 8.78 × 10 ⁶ | |
| 62% fiber content | | | | | | | | | | |
| Graphite/epoxy | | | | | | | | | | |
| 48.0 × 10 ⁶ | 331 | 160 | 1103 | 0.058 | 15.7 | 2.76 × 10 ⁶ | 7.01 × 10 ⁴ | 8.28 × 10 ⁸ | 21.0 × 10 ⁶ | |
| Ultrahigh modulus | | | | | | | | | | |

5. Some composites have much higher wear resistance than metals.
6. Careful selection of the matrix and reinforcement materials can provide superior corrosion resistance.
7. Dimensional changes due to changes in temperature are typically much less for composites than for metals.
8. Because composite materials have properties that are highly directional, designers can tailor the placement of reinforcing fibers in directions that provide the required strength and stiffness under the particular loading conditions to be encountered.
9. Composite structures can often be made in complex shapes in one piece, thus reducing the number of parts in a product and the number of fastening operations required. The elimination of joints typically improves the reliability of such structures as well.
10. Composite structures are typically made in their final form directly or in a near-net shape, thus reducing the number of secondary operations required.

Limitations of Composites

Designers must balance many properties of materials in their designs while simultaneously considering manufacturing operations, costs, safety, life, and service of the product. Listed next are some of the major concerns when using composites.

1. Material costs for composites are typically higher than for many alternative materials.
2. Fabrication techniques are quite different from those used to shape metals. New manufacturing equipment may be required, along with additional training for production operators.
3. The performance of products made from some composite production techniques is subject to a wider range of variability than the performance of products made from most metal fabrication techniques.
4. The operating temperature limits for composites having a polymeric matrix are approximately 500°F (260°C). (But ceramic or metal matrix composites

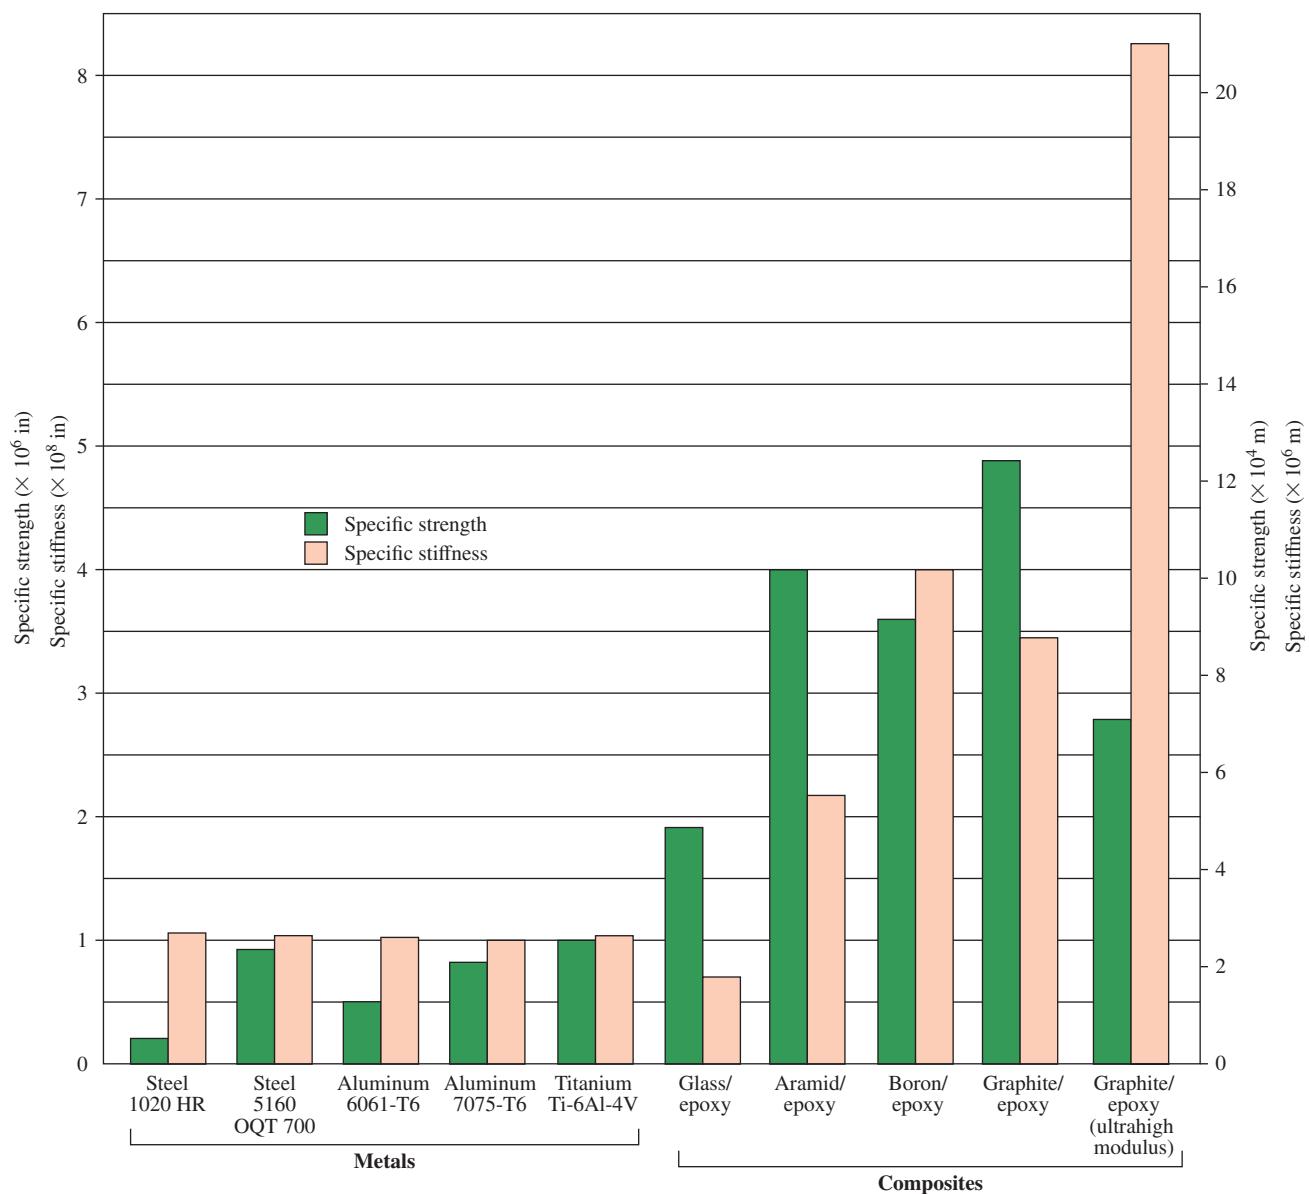


FIGURE 2-23 Comparison of specific strength and specific stiffness for selected metals and composites

- can be used at higher temperatures such as those found in engines.)
5. The properties of composite materials are not isotropic: Properties vary dramatically with the direction of the applied loads. Designers must account for these variations to ensure safety and satisfactory operation under all expected types of loading.
 6. At this time, many designers lack understanding of the behavior of composite materials and the details of predicting failure modes. Whereas major advancements have been made in certain industries such as the aerospace and recreational equipment fields, there is a need for more general understanding about designing with composite materials.
 7. The analysis of composite structures requires detailed knowledge of more properties of the materials than would be required for metals.
 8. Inspection and testing of composite structures are typically more complicated and less precise than for metal structures. Special nondestructive techniques may be required to ensure that there are no major voids in the final product that could seriously weaken the structure. Testing of the complete structure may be required rather than testing of simply a sample of the material because of the interaction of different parts on each other and because of the directionality of the material properties.
 9. Repair and maintenance of composite structures are serious concerns. Some of the initial production techniques require special environments of temperature and pressure that may be difficult to reproduce in the field when damage repair is required. Bonding of a repaired area to the parent structure may also be difficult.

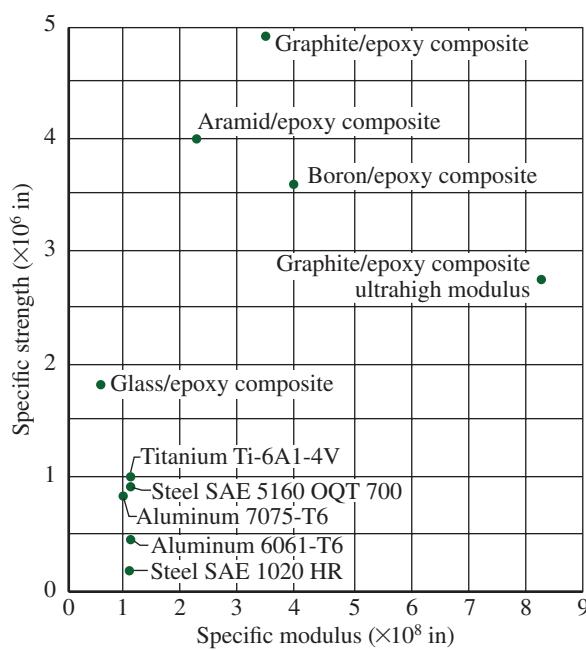


FIGURE 2-24 Specific strength versus specific modulus for selected metals and composites

Laminated Composite Construction

Many structures using composite materials are made from several layers of the basic material containing both the matrix and the reinforcing fibers. The manner in which the layers are oriented relative to one another affects the final properties of the completed structure.

As an illustration, consider that each layer is made from a set of parallel strands of the reinforcing filler material, such as E-glass fibers, embedded in the resin matrix, such as polyester. As mentioned previously, in this form, the material is sometimes called a *prepreg*, indicating that the reinforcement has been preimpregnated with the matrix prior to the forming of the structure and the curing of the assembly. To produce the maximum strength and stiffness in a particular direction, several layers or plies of the prepreg could be laid on top of one another with all of the fibers aligned in the direction of the expected tensile load. This is called a *unidirectional laminate*. After curing, the laminate would have a very high strength and stiffness when loaded in

the direction of the strands, called the *longitudinal* direction. However, the resulting product would have a very low strength and stiffness in the direction perpendicular to the fiber direction, called the *transverse* direction. If any off-axis loads are encountered, the part may fail or deform significantly. Table 2-18 gives sample data for a unidirectional laminated, carbon/epoxy composite.

To overcome the lack of off-axis strength and stiffness, laminated structures should be made with a variety of orientations of the layers. One popular arrangement is shown in Figure 2-25. Naming the longitudinal direction of the surface layer the 0° *ply*, this structure is referred to as

$$0^\circ, 90^\circ, +45^\circ, -45^\circ, +45^\circ, 90^\circ, 0^\circ$$

The symmetry and the balance of this type of layering technique result in more nearly uniform properties in two directions. The term *quasi-isotropic* is sometimes used to describe such a structure. Note that the properties perpendicular to the faces of the layered structure (through the thickness) are still quite low because fibers do not extend in that direction. Also, the strength and the stiffness in the primary directions are somewhat lower than if the plies were aligned in the same direction. Table 2-18 also shows sample data for a quasi-isotropic laminate compared with one having unidirectional fibers in the same matrix.

Laminate Orientation Code. The example shown earlier of how an eight-ply laminated composite structure, shown in Figure 2-25, is produced is convenient but that method becomes complicated and extensive for structures made from a large number of plies. The *laminate orientation code* seeks to simplify and shorten the designation for a given fabricated composite structure. Note in the previous example that the eight plies are symmetrical about the midplane between plies four and five. This is typical for many practical designs of composite structures and it is unnecessary to repeat the names of all plies. At times, two or more adjacent plies of the same orientation are used and it is simpler to indicate the number of identical plies. Some of the conventions followed in the code are:

1. The code for a given structure is enclosed within square brackets [].
2. The naming of the plies starts at the bottom, the ply that is in contact with the form tool.

TABLE 2-18 Examples of the Effect of Laminate Construction on Strength and Stiffness

| Laminate type | Tensile strength | | | | Modulus of elasticity | | | |
|-----------------|------------------|------|------------|-----|-----------------------|-----|------------|-----|
| | Longitudinal | | Transverse | | Longitudinal | | Transverse | |
| | ksi | MPa | ksi | MPa | 10^6 psi | GPa | 10^6 psi | GPa |
| Unidirectional | 200 | 1380 | 5 | 34 | 21 | 145 | 1.6 | 11 |
| Quasi-isotropic | 80 | 552 | 80 | 552 | 8 | 55 | 8 | 55 |

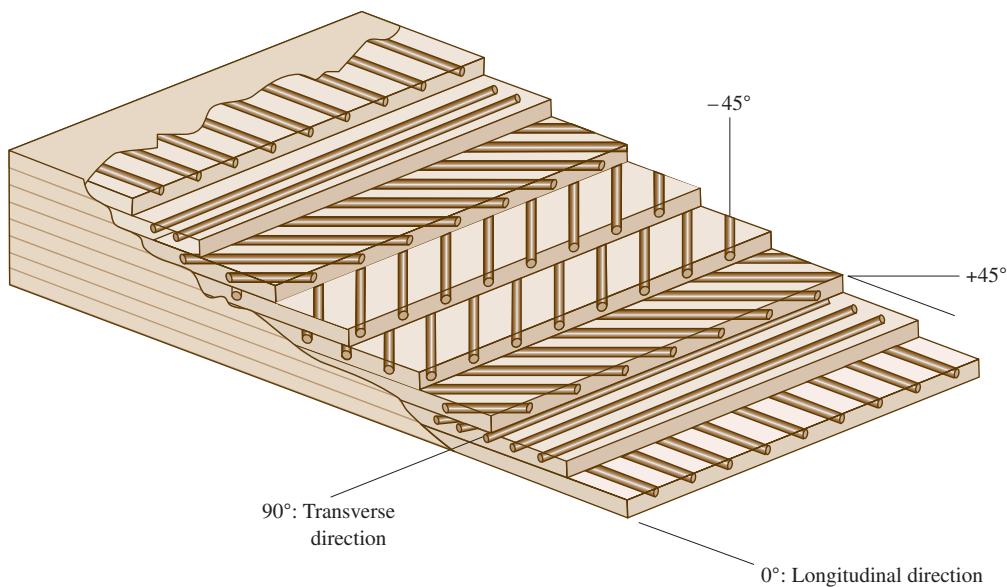


FIGURE 2-25 Multilayer, laminated, composite construction designed to produce quasi-isotropic properties

3. The degree symbol ($^{\circ}$) is not shown in the code.
4. Successive plies are separated by a forward slash (/).
5. No spaces are used.
6. When + and – plies of the same angle are adjacent, the \pm symbol is used.
7. The + sign is not applied to a single ply.
8. The 0° direction is defined in the part specifications and is typically either the primary axis of the completed component or the direction of the largest applied load. Often plies with a larger number of reinforcement fibers are aligned with the 0° direction.
9. When two or more plies have the same orientation of reinforcement fibers, a subscript indicates the number of plies.
10. For symmetrical structures, only half of the plies are defined and the subscript s is added to the final bracket.
11. For a structure having an odd number of plies, but which is otherwise symmetrical, the orientation of the central ply is written with a horizontal bar over it.

Some examples are:

- (a) Symmetrical, as in Figure 2-25:
 - $0^{\circ}, 90^{\circ}, +45^{\circ}, -45^{\circ}, -45^{\circ}, +45^{\circ}, 90^{\circ}, 0^{\circ}$
 $\rightarrow [0/90/\pm 45]_s$
- (b) Multiple plies at same orientation:
 - $0^{\circ}, 0^{\circ}, 90^{\circ}, 90^{\circ}, +45^{\circ}, -45^{\circ}, -45^{\circ}, +45^{\circ}, 90^{\circ}, 90^{\circ}, 0^{\circ}, 0^{\circ}$
 $\rightarrow [0_2/90_2/\pm 45]_s$
- (c) Odd number of plies:
 - $0^{\circ}, 90^{\circ}, +45^{\circ}, -45^{\circ}, 90^{\circ}, -45^{\circ}, +45^{\circ}, 90^{\circ}, 0^{\circ}$
 $\rightarrow [0/90/\pm 45/\overline{90}]_s$
- (d) Nonsymmetrical:
 - $90^{\circ}, 90^{\circ}, +30^{\circ}, +30^{\circ}, -30^{\circ}, -30^{\circ}, 0^{\circ}, 0^{\circ}$
 $\rightarrow [90_2/30_2/-30_2/0_2]$

- (e) Repeating sets of plies with the same orientation:
 - $0^{\circ}, 90^{\circ}, +45^{\circ}, 0^{\circ}, 90^{\circ}, +45^{\circ}, 0^{\circ}, 90^{\circ}, +45^{\circ}$
 $\rightarrow [0/90/45]_3$

Predicting Composite Properties

The following discussion summarizes some of the important variables needed to define the properties of a composite. The subscript c refers to the composite, m refers to the matrix, and f refers to the fibers. The strength and the stiffness of a composite material depend on the elastic properties of the fiber and matrix components. But another parameter is the relative volume of the composite composed of fibers, V_f , and that composed of the matrix material, V_m . That is,

$$V_f = \text{volume fraction of fiber in the composite}$$

$$V_m = \text{volume fraction of matrix in the composite}$$

Note that for a unit volume, $V_f + V_m = 1$; thus, $V_m = 1 - V_f$.

We will use an ideal case to illustrate the way in which the strength and the stiffness of a composite can be predicted. Consider a composite with unidirectional, continuous fibers aligned in the direction of the applied load. The fibers are typically much stronger and stiffer than the matrix material. Furthermore, the matrix will be able to undergo a larger strain before fracture than the fibers can. Figure 2-26 shows these phenomena on a plot of stress versus strain for the fibers and the matrix. We will use the following notation for key parameters from Figure 2-26:

$$s_{uf} = \text{ultimate strength of fiber}$$

$$\epsilon_{uf} = \text{strain in the fiber corresponding to its ultimate strength}$$

$$\sigma'_m = \text{stress in the matrix at the same strain as } \epsilon_{uf}$$

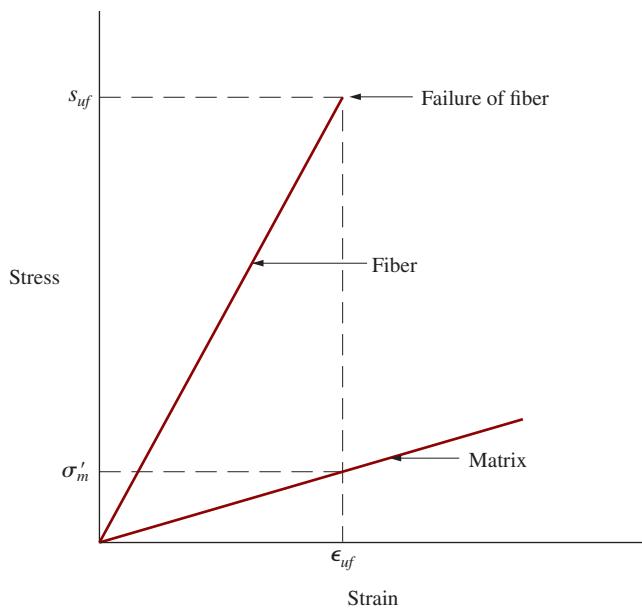


FIGURE 2-26 Stress versus strain for fiber and matrix materials

The ultimate strength of the composite, s_{uc} , is at some intermediate value between s_{uf} and σ'_m , depending on the volume fraction of fiber and matrix in the composite. That is,

◊ **Rule of Mixtures for Ultimate Strength**

$$s_{uc} = s_{uf} V_f + \sigma'_m V_m \quad (2-10)$$

At any lower level of stress, the relationship among the overall stress in the composite, the stress in the fibers, and the stress in the matrix follows a similar pattern:

◊ **Rule of Mixtures for Stress in a Composite**

$$\sigma_c = \sigma_f V_f + \sigma_m V_m \quad (2-11)$$

Figure 2-27 illustrates this relationship on a stress-strain diagram.

Both sides of Equation (2-11) can be divided by the strain at which these stresses occur. Since for each material, $\sigma/\epsilon = E$, the modulus of elasticity for the composite can be shown as

◊ **Rule of Mixtures for Modulus of Elasticity**

$$E_c = E_f V_f + E_m V_m \quad (2-12)$$

The density of a composite can be computed in a similar fashion:

◊ **Rule of Mixtures for Density of a Composite**

$$\rho_c = \rho_f V_f + \rho_m V_m \quad (2-13)$$

As mentioned previously (Section 2-2), density is defined as mass per unit volume. A related property, *specific weight*, is defined as weight per unit volume and is

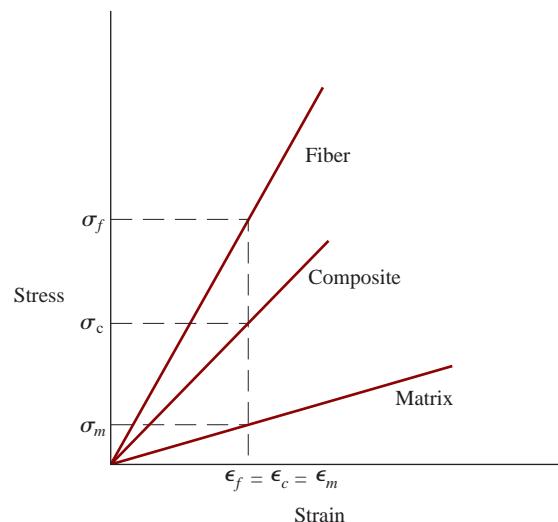


FIGURE 2-27 Relationship among stresses and strains for a composite and its fiber and matrix materials

denoted by the symbol γ (the Greek letter gamma). The relationship between density and specific weight is simply $\gamma = \rho g$, where g is the acceleration due to gravity. Multiplying each term in Equation (2-13) by g gives the formula for the specific weight of a composite:

◊ **Rule of Mixtures for Specific Weight of a Composite**

$$\gamma_c = \gamma_f V_f + \gamma_m V_m \quad (2-14)$$

The forms of Equations (2-10) through (2-14) are examples of *the rules of mixtures*.

Table 2-19 lists example values for the properties of some matrix and filler materials. Remember that wide variations can occur in such properties, depending on the exact formulation and the condition of the materials.

Design Guidelines for Members Made from Composites

The most important difference between designing with metals and designing with composites is that metals are typically taken to be homogeneous with isotropic strength and stiffness properties, whereas composites are decidedly *not* homogeneous or isotropic.

The failure modes of composite materials are complex. Tensile failure when the load is in-line with continuous fibers occurs when the individual fibers break. If the composite is made with shorter, chopped fibers, failure occurs when the fibers are pulled free from the matrix. Tensile failure when the load is perpendicular to continuous fibers occurs when the matrix itself fractures. If the fibers are in a woven form, or if a mat having shorter, randomly oriented fibers is used, other failure modes, such as fiber breakage or pullout, prevail. Such composites would have more nearly equal properties in any direction, or, as shown in Figure 2-25, multilayer laminate construction can be used.

TABLE 2-19 Example Properties of Matrix and Reinforcement Materials

| | Tensile strength | | Tensile modulus | | Specific weight | |
|----------------------------|------------------|------|-----------------|------|--------------------|-------------------|
| | ksi | MPa | 10^6 psi | GPa | lb/in ³ | kN/m ³ |
| Matrix materials: | | | | | | |
| Polyester | 10 | 69 | 0.40 | 2.76 | 0.047 | 12.7 |
| Epoxy | 18 | 124 | 0.56 | 3.86 | 0.047 | 12.7 |
| Aluminum | 45 | 310 | 10.0 | 69 | 0.100 | 27.1 |
| Titanium | 170 | 1170 | 16.5 | 114 | 0.160 | 43.4 |
| Reinforcement materials: | | | | | | |
| S-glass | 600 | 4140 | 12.5 | 86.2 | 0.09 | 24.4 |
| Carbon-PAN | 470 | 3240 | 33.5 | 231 | 0.064 | 17.4 |
| Carbon-PAN (high-strength) | 820 | 5650 | 40 | 276 | 0.065 | 17.7 |
| Carbon (high-modulus) | 325 | 2200 | 100 | 690 | 0.078 | 21.2 |
| Aramid | 500 | 3450 | 19.0 | 131 | 0.052 | 14.1 |

Example Problem 2-2 Compute the expected properties of ultimate tensile strength, modulus of elasticity, and specific weight of a composite made from unidirectional strands of carbon-PAN fibers in an epoxy matrix. The volume fraction of fibers is 30%. Use data from Table 2-19.

Solution Objective Compute the expected values of s_{uc} , E_c , and γ_c for the composite.

Given Matrix-epoxy: $s_{um} = 18$ ksi; $E_m = 0.56 \times 10^6$ psi; $\gamma_m = 0.047$ lb/in³.

Fiber-carbon-PAN: $s_{uf} = 470$ ksi; $E_f = 33.5 \times 10^6$ psi; $\gamma_f = 0.064$ lb/in³.

Volume fraction of fiber: $V_f = 0.30$, and $V_m = 1.0 - 0.30 = 0.70$.

Analysis and Results The ultimate tensile strength, s_{uc} , is computed from Equation (2-10):

$$s_{uc} = s_{uf}V_f + \sigma'_m V_m$$

To find σ'_m , we first find the strain at which the fibers would fail at s_{uf} . Assume that the fibers are linearly elastic to failure. Then

$$\epsilon_f = s_{uf}/E_f = (470 \times 10^3 \text{ psi})/(33.5 \times 10^6 \text{ psi}) = 0.014$$

At this same strain, the stress in the matrix is

$$\sigma'_m = E_m \epsilon = (0.56 \times 10^6 \text{ psi})(0.014) = 7840 \text{ psi}$$

Then, in Equation (2-10),

$$s_{uc} = (470\ 000 \text{ psi})(0.30) + (7840 \text{ psi})(0.70) = 146\ 500 \text{ psi}$$

The modulus of elasticity computed from Equation (2-12):

$$E_c = E_f V_f + E_m V_m = (33.5 \times 10^6)(0.30) + (0.56 \times 10^6)(0.70)$$

$$E_c = 10.4 \times 10^6 \text{ psi}$$

The specific weight is computed from Equation (2-14):

$$\gamma_c = \gamma_f V_f + \gamma_m V_m = (0.064)(0.30) + (0.047)(0.70) = 0.052 \text{ lb/in}^3$$

Summary of Results

$$s_{uc} = 146\ 500 \text{ psi}$$

$$E_c = 10.4 \times 10^6 \text{ psi}$$

$$\gamma_c = 0.052 \text{ lb/in}^3$$

Comment Note that the resulting properties for the composite are intermediate between those for the fibers and the matrix.

Thus, an important design guideline to produce optimum strength is as follows:

Align the fibers with the direction of the load.

Another important failure mode is *interlaminar shear*, in which the plies of a multilayer composite separate under the action of shearing forces. The following is another design guideline:

Avoid or minimize shear loading, if possible.

Connections to composite materials are sometimes difficult to accomplish and provide places where fractures or fatigue failure could initiate. The manner of forming composites often allows the integration of several components into one part. Brackets, ribs, flanges, and the like, can be molded in along with the basic form of the part. The design guideline, then, is the following:

Combine several components into an integral structure.

When high panel stiffness is desired to resist flexure, as in beams or in broad panels such as floors, the designer can take advantage of the fact that the most effective material is near the outside surfaces of the panel or beam shape. Placing the high-strength fibers on these outer layers while filling the core of the shape with a light, yet rigid, material produces an efficient design in terms of weight for a given strength and stiffness. See Internet sites 25 and 26. Figure 2–28 illustrates some examples of such designs. Another design guideline follows:

Use light core material covered with strong composite layers.


Because most composites use a polymeric material for the matrix, the temperatures that they can withstand are limited. Both strength and stiffness decrease as temperature increases. The polyimides provide better high-temperature properties [up to 600°F (318°C)] than most other polymer matrix materials. Epoxies are typically limited to from 250°F to 350°F (122°C–178°C). Any application above room temperature should be checked with material suppliers. The following is a design guideline:

Avoid high temperatures.


When high temperatures [above 350°F (178°C)] must be encountered, matrix materials other than polymers should be considered, leading to this guideline:

Consider using ceramic matrix composites (CMCs) or metal matrix composites (MMCs) when high temperatures are encountered.

When using sandwich structures such as those illustrated in Figure 2–28, it is essential to have strong adhesive bonding between the various cover layers and with the core material or honeycomb to inhibit interlaminar shear or peeling. Some choices for adhesives for composites are polyester, epoxy, cyanoacrylate, polyurethane, silicone, and anaerobic adhesives (similar to thread-locking compounds). In addition, the surfaces of materials to be joined may be treated to enhance adhesion and the resulting strength of the bond.

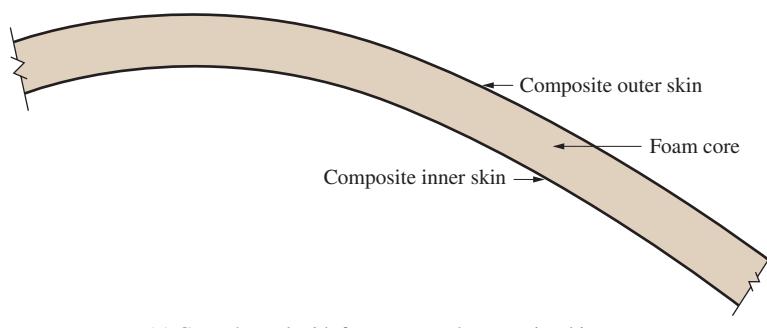

(a) Curved panel with foam core and composite skins

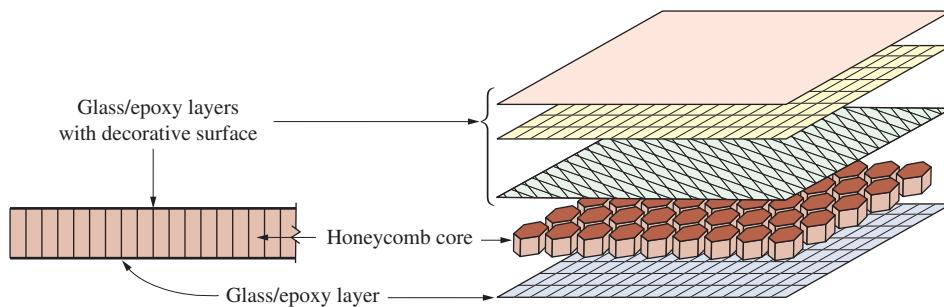

(b) Flat panel with honeycomb core and composite skins

FIGURE 2–28 Laminated panels with lightweight cores

Select carefully adhesives used to bond core materials with composite surface layers and prepare properly the contact surfaces.

When a structure requires wide panels, sometimes called plates, the resulting stiffness is a function of the thickness of the wall (i.e., the number of plies in the composite) and the overall geometry. A balance can be sought by adding stiffeners to the panel to break the wide surface into a series of smaller areas. The stiffeners can be molded into the panel or applied separately with adhesives or mechanical fasteners. Three popular shapes for stiffeners are the *hat section*, *channel*, and *Z-section* that can be made of composite material using the pultrusion process or roll-formed from metal sheet. See Figure 2-29.

Consider using stiffeners on large panels to achieve adequate rigidity with minimum weight.

As described earlier in this section, many different fabrication techniques are used for composite materials. The shape can dictate a part's manufacturing technique. This is a good reason to implement the principles of concurrent engineering and adopt another design guideline:

Involve manufacturing considerations early in the design.

References 33 and 35 present broad and in-depth coverage of the design and manufacture of composite structures with emphasis on the applications of the principles. Reference 36 is one of the landmark documents defining analytical methods of design and analysis of composites.

The complete analysis of composite structures requires detailed knowledge of the mechanical and physical properties of the composite materials at the layer stage, at the finished laminate stage, during curing, at joints, at fastening points, and around complex geometric forms. Because of the anisotropic nature of composites, data for strength, modulus of elasticity in tension and shear, and Poisson's ratio in each of the three dimensions, *x*, *y*, and *z* are required for reliable analysis. Furthermore, many of these properties are nonlinear and dependent on detailed knowledge of loading patterns and magnitudes, and environmental conditions (temperature, moisture exposure, chemical exposure, and so forth). Dynamic response and fatigue resistance should also be analyzed.

Some of the material property data can be acquired from suppliers such as those listed in Internet sites 23–26

and 31–32. Databases and research reports from organizations such as those listed in Internet sites 19–22 and 33 are good sources of information on material properties and processing methods.

Analysis of composites structures inherently requires computer-aided design and analysis tools, including finite-element analysis, because of the special nature of the three-dimensional, nonlinear analysis required for reliable results. Several commercially available software products are tailored to composite analysis, such as those mentioned in Internet site 34.

Nanotechnology Applications in Materials. The world of materials science, engineering, and technology is rapidly changing with the commercialization of *nano-technology*, the practice of applying tiny particles of matter. The term *nanotechnology* is derived from the measure of length as small as 1×10^{-9} meters (1.0 nanometer or 1.0 nm). While arbitrary, some consider a nanomaterial particle to be any with a characteristic dimension from 1 to 100 nanometers. Applying this technology is having major influence on developments in physics, biology, and chemistry in fields such as materials science, electronics, biotechnology, food processing, environmental technology, medical technology, sensors, coatings for surface protection, tire reinforcements, solar cells, highly efficient batteries and energy storage devices, adhesives, and so-called *smart materials* that change their characteristics in response to electrical stimuli, temperature, stress, strain, and so forth. See Reference 21.

One type of nanomaterial that is involved in much materials research and development is the carbon nanotube (CNT), very fine layers of graphite oriented in cylindrical form with diameters of only 1 to 3 nm and lengths from fine whiskers, platelets, and powders up to fibers 20 microns ($20 \mu\text{m}$) long. Reported strengths of CNTs range to 20 times that of high-alloy steels with approximately one-sixth the weight. Thus its strength to weight ratio is approximately 120 times higher. CNTs also have excellent electrical conductivity allowing their use in a variety of electrical and electronic systems. Another form of nanomaterial is the set of organic nanoparticles, called *dendrimers*. Some of the emerging applications for nanomaterials include:

- Creation of a series of *nanocomposites* (NCs), in which CNTs or other nanoparticles are blended with common materials to enhance their strength, stiffness, or toughness. Examples are:

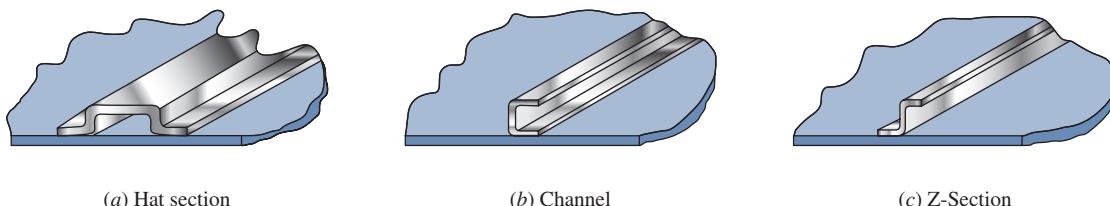


FIGURE 2-29 Panel stiffening techniques

- Adding CNTs to CMCs (ceramic matrix composites) enhances the toughness of the matrix while retaining the other desirable properties of high hardness, wear resistance, and high temperature resistance. They are called CMNCs.
- Adding CNTs to PMCs (polymer matrix composites) produce PMNCs that have enhanced matrix strength and stiffness and higher overall capabilities of the composite. An issue is the adherence of the polymers to the surface of the carbon nanotubes and the homogeneous distribution of the nanoparticles in the matrix.
- Adding CNTs to a MMCs (metal matrix composite) also enhances the strength and stiffness of the composite, which becomes a MMNC.
- Blending CNTs with common metal powders (iron, copper, magnesium, aluminum, and others) prior to sintering enhances the performance of powder metal products.
- Internet sites 35 describes high performance materials that use CNTs to enhance polymer matrix composites. PMNCs are produced as preps along with woven fabrics and unidirectional fibers of carbon, E-glass, S-glass, aramid, and others. Applications are in aerospace, marine, sports equipment, and motor sports.
- Internet sites 36 describes multiple applications in nanotechnology, nanomaterials, and nanoelectronics. A series of nanotools and nanodevices are produced to aid in the manipulation of matter at the nano and atomic regime for fabrication, metrology, lithography, chemical vapor deposition, 3D printing, and nanofluidics—the study of the behavior of fluids in nanoscale applications.
- Internet sites 37 describes a process for applying surface coatings of nanoparticles of aluminum oxide to provide enhanced scratch resistance of hard surfaces, plastics, architectural, and automotive applications.
- Internet sites 38 describes a process of applying patented steel alloys with microstructural grain sizes in the 10 to 100 nm size. A thermal spray technique is used to apply the coatings using atomized powder, cored wire, or electrode forms to produce coating thicknesses in the 5 to 30 mil (0.13–0.75 mm) range. Also, weld overlays in thicknesses from 1/8 in to 1/2 in (3–12 mm) are produced. Applications include coating shovel buckets, hydraulic cylinder rods, inside surfaces of piping systems that carry abrasive materials, storage bins, conveyor components, and similar products to reduce significantly wear, corrosion, and erosion.

2-18 MATERIALS SELECTION

One of the most important tasks for a designer is the specification of the material from which any individual component of a product is to be made. The decision must consider a huge number of factors, many of which have been discussed in this chapter.

The process of material selection must commence with a clear understanding of the functions and design requirements for the product and the individual component. Refer to Section 1–4 for a discussion of these concepts. Then, the designer should consider the interrelationships among the following:

- The functions of the component.
- The component's shape.
- The material from which the component is to be made.
- The manufacturing process used to produce the component.

Overall requirements for the performance of the component must be detailed. This includes, for example:

- The nature of the forces applied to the component.
- The types and magnitudes of stresses created by the applied forces.
- The allowable deformation of the component at critical points.
- Interfaces with other components of the product.
- The environment in which the component is to operate.
- Physical size and weight of the component.
- Aesthetics expected for the component and the overall product.
- Cost targets for the product as a whole and this component in particular.
- Anticipated manufacturing processes available.

A much more detailed list may be made with more knowledge of specific conditions.

From the results of the exercises described previously, you should develop a list of key material properties that are important. Examples often include:

1. Strength as indicated by ultimate tensile strength, yield strength, compressive strength, fatigue strength, shear strength, and others.
2. Stiffness as indicated by the tensile modulus of elasticity, shear modulus of elasticity, or flexural modulus.
3. Weight and mass as indicated by specific weight or density.
4. Ductility as indicated by the percent elongation.
5. Toughness as indicated by the impact energy (Izod, Charpy, etc.).
6. Creep performance data.
7. Corrosion resistance and compatibility with the environment.
8. Cost for the material.
9. Cost to process the material.

A list of candidate materials should then be created using your knowledge of the behavior of several material types, successful similar applications, and emerging materials technologies. A rational decision analysis should be applied to determine the most suitable types of materials from the list of candidates. This could take the form of a matrix in which data for the properties just listed for each candidate material are entered and ranked. An analysis of the complete set of data will aid in making the final decision.

Decision Analysis Process. An example of how decision analysis may be used to aid in deciding which material to specify in a given application is shown in Figure 2–30. The process described here is relatively simple and is sometimes called the *criteria rating process*. The decision analysis chart, sometimes called a matrix, is at the top, listing five candidate materials being considered for the production of a set of 300 wheels for use on special material handling carts. The left column lists five criteria

for evaluation. Observe also the three sets of supporting information below the matrix:

- 1. Notes about the proposed materials:** Describes pertinent mechanical properties (from the appendix) and qualitative evaluations of the materials' corrosion resistance, cost of purchasing the materials, and costs to process the materials. With more information available, actual costs could be listed for a more detailed analysis. Note that the ratings for the processing costs for both magnesium and zinc are affected by the proposed use of die casting that entails relatively high cost for die design and fabrication for only 300 parts to be produced. The low rating for processing titanium is based on the relative difficulty of machining titanium compared with steel or aluminum.
- 2. Application:** Gives more detail about the use of the wheels and the environment in which the carts will be operated, including the quantity to be produced, weather, and other environmental issues,

MATERIAL SELECTION—DECISION ANALYSIS CHART EXAMPLE

| Desired property | Candidate materials | | | | |
|--|------------------------|----------------------------|----------------|-----------------|-----------------------------------|
| | Steel | Aluminum | Magnesium | Zinc | Titanium |
| | Rating [1 to 10 scale] | | | | |
| Yield strength (High is better) | 9 | 6 | 3 | 7 | 10 |
| Modulus of elasticity (High is better) | 10 | 4 | 2 | 6 | 8 |
| Ductility (High is better) | 10 | 8 | 7 | 4 | 5 |
| Density (Low is better) | 3 | 8 | 10 | 5 | 6 |
| Corrosion resistance (High is better) | 4 | 10 | 7 | 7 | 10 |
| Material cost (Low is better) | 10 | 7 | 7 | 7 | 2 |
| Processing cost (Low is better) | 10 | 10 | 5 | 5 | 5 |
| Totals: | 56 | 53 | 41 | 41 | 46 |
| Ranking: | 1 | 2 | 4 | 4 | 3 |
| <i>Notes about the proposed materials:</i> | | <i>s_y (MPa)</i> | <i>E (GPa)</i> | <i>% Elong.</i> | <i>Density (kg/m³)</i> |
| 1. Steel: Wrought SAE 3140 OQT 1000 | | 920 | 207 | 17 | 7680 |
| 2. Aluminum wrought 6061-T6 | | 276 | 69 | 12 | 2774 |
| 3. Magnesium: Die-cast AM-50 | | 120 | 45 | 10 | 1770 |
| 4. Zinc: Die-cast ZA-12 | | 320 | 82.7 | 5.5 | 6000 |
| 5. Titanium: Wrought Ti-6Al-4V Quenched and aged at 1000°F | | 1030 | 114 | 7 | 4432 |
| <i>Application:</i> Wheel hub for four-wheel cart used in material handling within a factory environment | | | | | |
| 1. Quantity: 300 pieces 2. Exposed to weather in a variety of climates throughout North America 3. Wheel hub; light shock loading; moderate level of load 4. Must maintain good fit with solid tire made from urethane polymer | | | | | |
| <i>Desirable characteristics:</i> | | | | | |
| 1. High strength to survive factory conditions 2. High ductility to provide high impact strength and toughness 3. High stiffness to exhibit rigidity during operation 4. Low weight and mass to achieve low inertia and effort to accelerate cart 5. Low overall cost of acquisition and service | | | | | |

FIGURE 2–30 Example of a decision analysis technique to aid decision making for materials selection

general nature of the loading in regard to its level and whether shock loading is expected, and the relationship with the mating tire. This is an abbreviated list and additional detail would be expected such as actual loads to be carried, proposed size, mounting details, and so forth.

3. Desirable characteristics: Support the criteria for judging the proposed materials.

In the matrix, each material is rated against each desired property on a scale of 1 to 10. Admittedly, these ratings are subjective, but they are based on the data given and the nature of the application. Then the seven ratings for each material are summed and the total is listed. Finally, the sums for the five candidate materials are ranked from highest (rank = 1) to lowest.

Note that the decision analysis matrix is not a decision-making device; rather it is an aid to decision making.

It is still the responsibility of the designer to make the final decision. However, the results suggest that either steel or aluminum would perform well in this application relative to the other three suggested materials. More careful examination of the comparative ratings of steel and aluminum is recommended and perhaps additional data collection can be done. Questions can be asked such as:

- Are all the criteria of equal weight? If not, weighting factors can be applied to the list of criteria. This is commonly done.
- How can the lower corrosion resistance of the steel be managed: painting, plating, or other secondary processes?
- How do those processes affect the final overall cost for the steel wheels?
- Is the relatively low rating for modulus of elasticity for aluminum an important factor? Does it affect the final design for the wheels, perhaps by requiring thicker sections for critical features? How does this affect the final overall cost for the aluminum wheels?
- Is the lighter projected weight of the aluminum due to lower density compared with steel a strong advantage? Is this judgment firm?
- Should more detailed designs of the wheels be pursued for both steel and aluminum before committing to a final decision?

We leave the process at this point, pending answers to questions such as these, but the value of using the decision-analysis process should be evident to compare the performance of a variety of proposed materials using several parameters. See also the discussion in Chapter 1 in Sections 1–4 and 1–5 along with Chapter 1 Reference 25 and Internet Site 18.

More comprehensive materials selection processes are described in References 3–6, 25, 26, 29, and 30.

Internet sites 1, 2, 14–17, and 33 provide vast amounts of data for material properties that can be used in combination with the appendix to generate suitable candidate materials.

Other Considerations for Materials Selection. Most of the discussion in this book deals with metallic materials that are common choices for machine elements such as gears, bearings, shafts, and springs. For design in general, a wider list of types of materials from which a designer may choose for a particular application should be considered. Refer back to earlier sections of this chapter for additional information. Consider the following list of six primary classes of materials with a few examples for each listed as well:

- **Metals** Steel, aluminum, copper alloys, titanium, magnesium, cast iron, zinc
- **Polymers** PA, ABS, PC, acrylic, PVC, acetal, polyurethane, PET, polyester
- **Ceramics** Silicon nitride, zirconia, silicon carbide, alumina
- **Glasses** Silica glass, borosilicate glass, soda glass
- **Elastomers** Natural rubber, butyl rubber, neoprene, isoprene, silicones
- **Hybrids** Composites, foams, sandwich structures, honeycomb structures

The sheer number of different materials from which to choose makes material selection a daunting task. Specialized approaches, as described in References 3–6, offer significant guidance in the selection process. Furthermore, computer software packages are available to permit rapid searching and sorting based on numerous parameters to produce refined lists of candidate materials with quantitative data about their performance, cost, producibility, or other important criteria. Two examples of selection aids help to illustrate the application of this method. See Internet sites 39 for more information about one set of software packages.

When designing a machine element or a structure, both strength and stiffness must be considered and performance requirements in each area must be met. Some designs are *strength limited* (e.g., *yield strength* or *tensile strength*) while others are *stiffness limited* (e.g., *tensile modulus of elasticity* or *shear modulus of elasticity*). In addition, most design projects seek minimal or optimal weight and mass because performance of the overall system tends to be improved and there is often a strong relationship between mass and cost. For these reasons, designers should look for materials that have both high strength and low mass and also high stiffness and low mass. The material's mass is represented by density.

A good approach to meeting this design goal is to consider the *strength to density ratio* and the *stiffness to density ratio* of candidate materials. The software

mentioned in Internet sites 39 allows the determination of both ratios for virtually any material in its database and the graphic display of *strength versus density* and *stiffness versus density* charts. Figures 2–31 and 2–32 show the basic concept with general orders of magnitude indicated for comparison. The better performing materials would tend to have both high strength and low density but trade-offs are inevitable. The shaded areas show the approximate range of data for materials within a given class or type of material.

This is but a small example of the capabilities of industry-oriented material selection software packages. Additional searches and graphic charts can display almost any combination of properties such as:

- Cost of the material and its processing.
- Other mechanical properties: elongation, hardness, fatigue strength, and fracture toughness.
- Thermal properties: conductivity, specific heat, thermal expansion, and maximum service temperature.

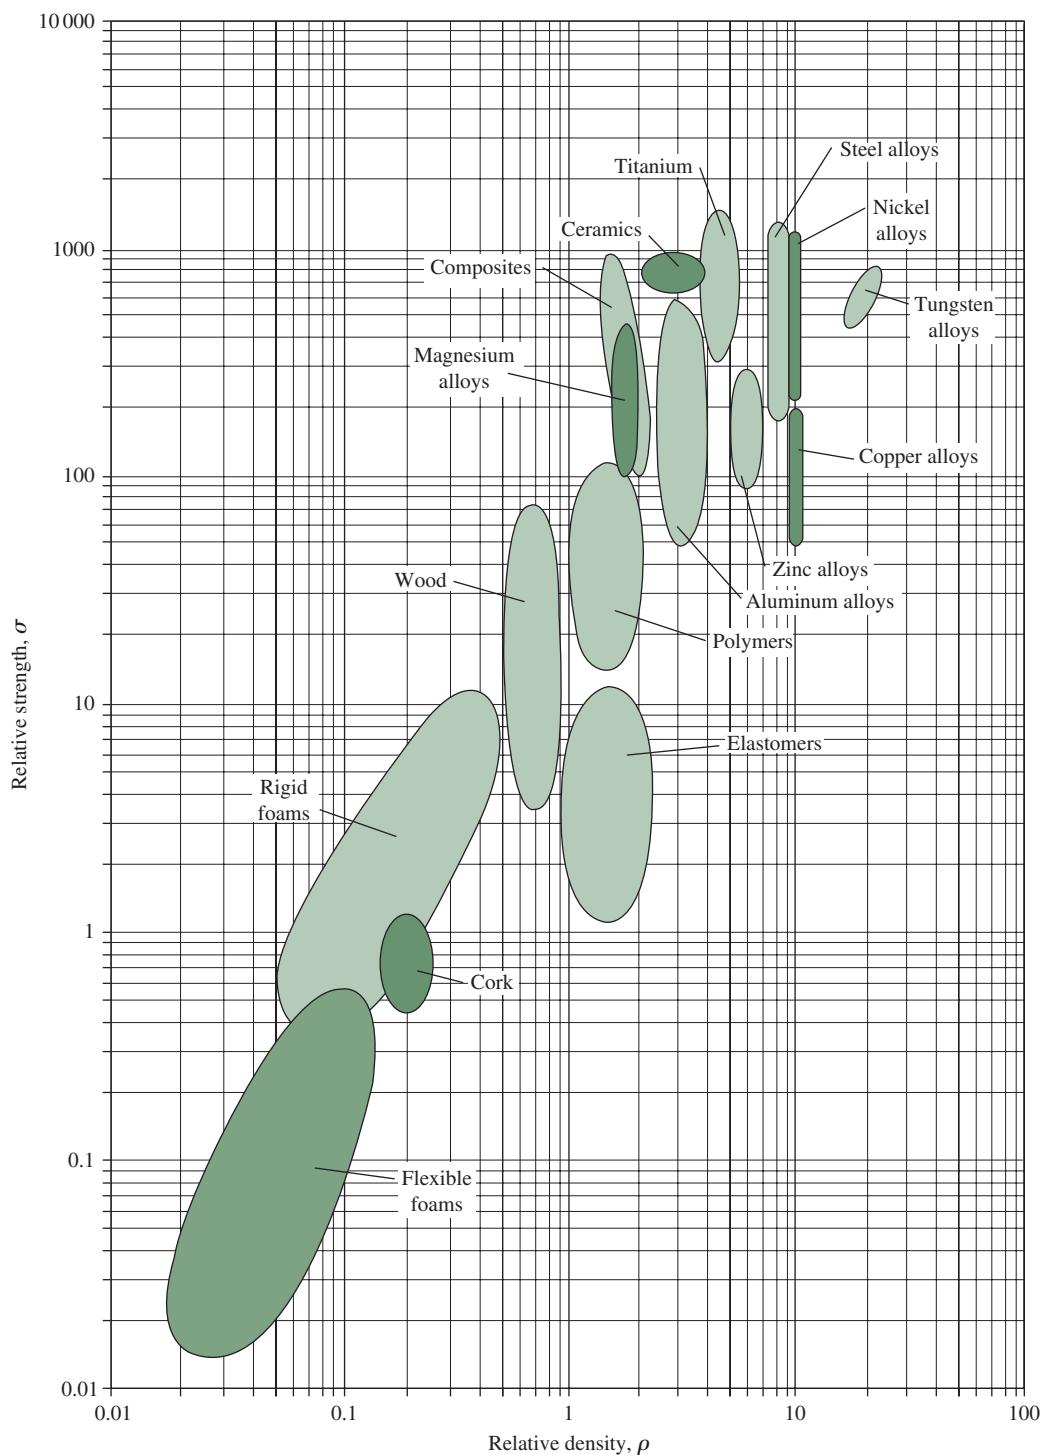


FIGURE 2–31 Relative Strength versus Relative Density

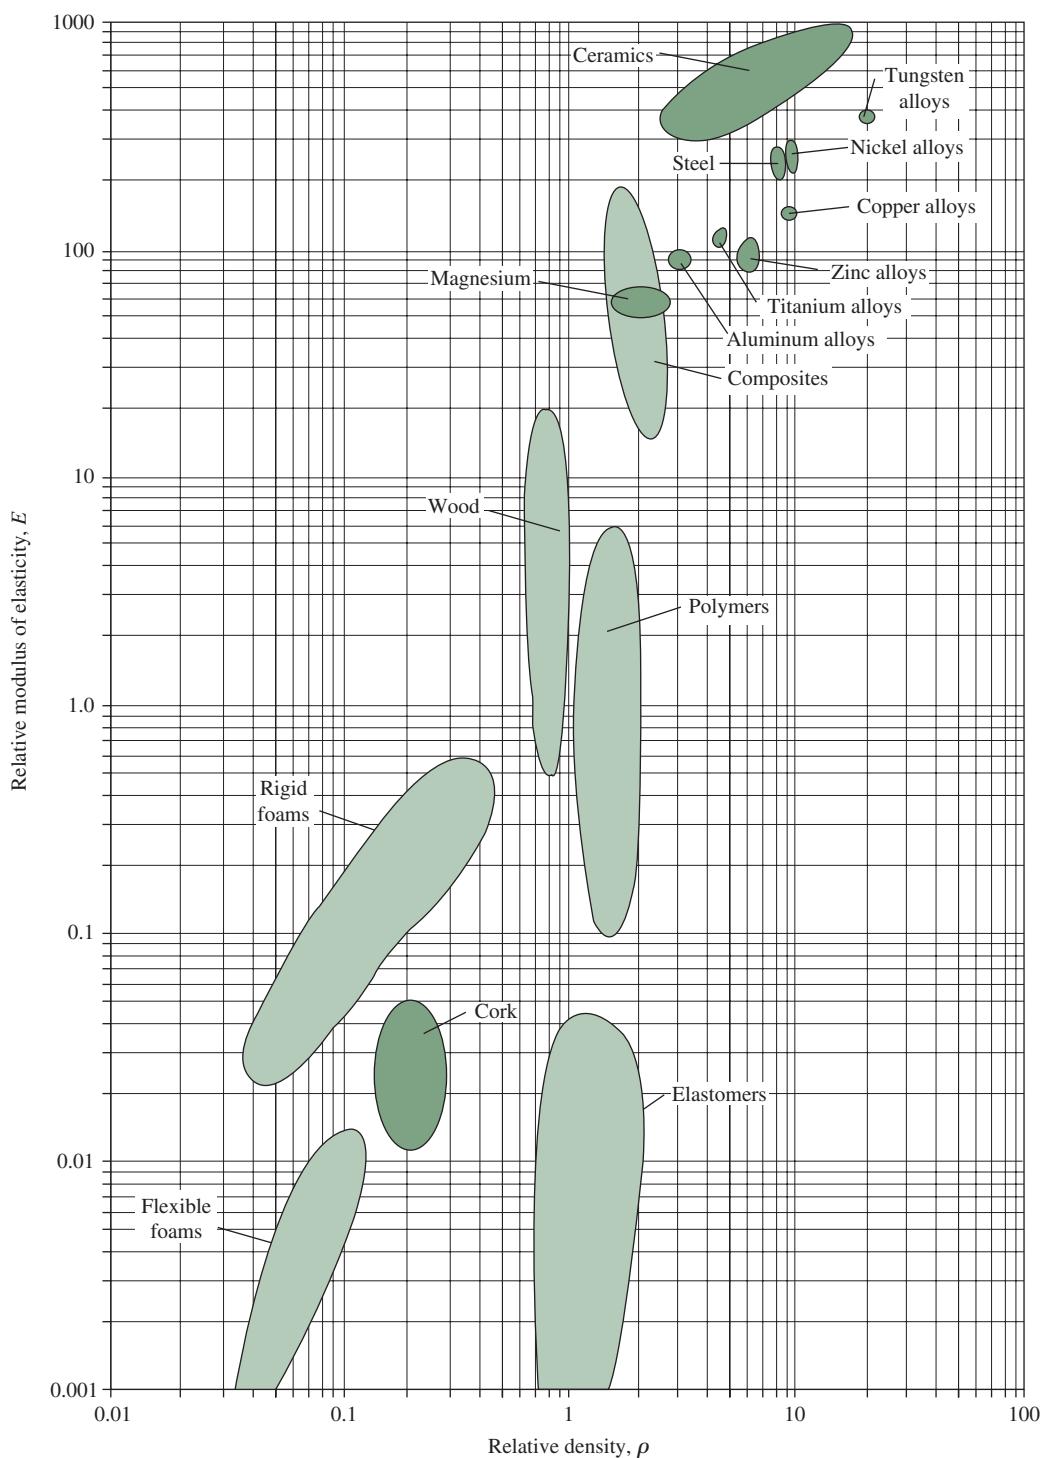


FIGURE 2-32 Relative Modulus of Elasticity versus Relative Density

- Optical properties: transparent or opaque?
- Corrosion and related properties: resistance to acids, alkalis, freshwater, seawater, organic solvents, and ultraviolet light (UV); flammability; and oxidation.
- Electrical properties: conductor or insulator?

Extensive tree-structures of processes appropriate to each material, within the families of *shaping*, *joining*, and *surfacing/internal structure modification*, are also part of the databases. Examples are:

- **Shaping:** Casting, machining, molding, rapid prototyping, and others.
- **Joining:** Welding, fastening, adhesives, soldering, brazing, and others.
- **Surfacing/internal structure modification:** Heat-treating, induction hardening, flame hardening, carburizing, coating, anodizing, polishing, painting, plating, and others.

Specialized searches and analyses: In addition to general searches, special modules of some software help

to focus on certain attributes and applications of materials. Among them are:

- Materials and the Environment—Eco Audits (See Reference 5 and Internet site 39)
 - Energy required to produce a material, energy to transport a product made from a particular material, and energy needed during use.
 - Emissions, disposal issues.
 - Product life cycle cost.
- Aerospace materials.
- Materials for medical devices.
- Metals and alloys.
- Polymeric materials.

REFERENCES

1. Aluminum Association. *Aluminum Design Manual*, 2015. Washington, DC: The Aluminum Association, 2015. Includes specifications for aluminum structures, design guide, material properties, section properties, design aids, and illustrative design examples.
2. Aluminum Association. *Aluminum Standards and Data*, 2013. Washington, DC: The Aluminum Association, 2013. Includes data on mechanical and physical properties of commercial aluminum alloys. Available in both U.S. Customary and Metric SI units.
3. Ashby, Michael F. *Materials Selection in Mechanical Design*. 5th ed. Oxford, England: Butterworth-Heinemann, 2016.
4. Ashby, Michael F., Hugh Shercliff, and David Cebon. *Materials: Engineering Science, Processing, and Design*. 2nd ed. Oxford, England: Butterworth-Heinemann, 2013.
5. Ashby, Michael F. *Materials: Materials and the Environment: Eco-informed Material Choice*. 2nd ed. Oxford, England: Butterworth-Heinemann, 2012.
6. ASM International. *ASM Handbook*. Vol. 1, *Properties and Selection: Iron, Steels, and High-Performance Alloys* (1990). Vol. 2, *Properties and Selection: Nonferrous Alloys and Special-Purpose Materials* (1990). Vol. 3, *Alloy Phase Diagrams* (2016). Vol. 4, *Heat Treating* (2015). Vol. 7, *Powder Metal Technologies and Applications* (2015). Vol. 11, *Failure Analysis and Prevention* (2002). Vol. 19, *Fatigue and Fracture* (1996). Vol. 20, *Materials Selection and Design* (1997). Vol. 21, *Composites* (2001). Materials Park, OH: ASM International.
7. ASM International. *Friction and Wear Testing*. Materials Park, OH: ASM International, 2003. Author: Rebecca Tuszynski.
8. ASM International. *ASM Specialty Handbook: Carbon and Alloy Steels*. Edited by J. R. Davis. Materials Park, OH: ASM International, 1996.
9. ASM International. *ASM Specialty Handbook: Stainless Steels*. Edited by J. R. Davis. Materials Park, OH: ASM International, 1994.
10. ASM International. *ASM Specialty Handbook: Tool Materials*. Edited by J. R. Davis. Materials Park, OH: ASM International, 1995.
11. ASM International. *ASM Specialty Handbook: Heat-Resistant Materials*. Edited by J. R. Davis. Materials Park, OH: ASM International, 1997.
12. ASM International. *ASM Specialty Handbook: Aluminum and Aluminum Alloys*. Edited by J. R. Davis. Materials Park, OH: ASM International, 1993.
13. ASM International. *ASM Specialty Handbook: Cast Irons*. Edited by J. R. Davis. Materials Park, OH: ASM International, 1996.
14. ASM International. *Engineering Plastics*. F. C. Campbell. Materials Park, OH: ASM International, 2012.
15. ASM International. *Atlas of Fatigue Curves*. Edited by H. E. Boyer. Materials Park, OH: ASM International, 1986.
16. ASM International. *Introduction to Surface Hardening of Steels*. Michael Schneider and Madhu Chatterjee. Materials Park, OH: ASM International, 2013.
17. ASM International. *Induction Heat Treating Systems*. Richard Haimbaugh. Materials Park, OH: ASM International, 2014.
18. ASM International. *Heat Treatment of Steel Gears*. Satyam Sahay. Materials Park, OH: ASM International, 2014.
19. ASM International. *Plastics for Gears*. Materials Park, OH: ASM International, 2005.
20. ASM International. *Structural Materials for Aerospace and Defense*. Materials Park, OH: ASM International, 2009. Reviews of recently developed classes of materials and their applications.
21. ASM International. *Handbook of Innovative Nanomaterials*. Xiaosheng Fang and Limin Wu. Materials Park, OH: ASM International, 2012. Overview of nanomaterials field and their applications to ceramics, metals, polymers, and biomaterials.
22. ASM International. *Biomaterials: A Basic Introduction*. Qizhi Chen and George Thomas. Materials Park, OH: ASM International, 2004. (Available also from CRC Press).
23. ASTM International. *Standard Practice for Numbering Metals and Alloys in the Unified Numbering System (UNS)*. West Conshohocken, PA: ASTM International Standard, DOI: 10.1520/E0527-12, www.astm.org, 2012.
24. Budinski, Kenneth G. *Friction, Wear, and Erosion Atlas*. Boca Raton, FL: CRC Press, 2013.
25. Budinski, Kenneth G. and Michael K. Budinski. *Engineering Materials: Properties and Selection*. 9th ed. Upper Saddle River, NJ: Prentice Hall, 2009.
26. Callister, William D. *Materials Science and Engineering: An Introduction*. 9th ed. New York: Wiley Higher Education, 2013.
27. DuPont Engineering Polymers. *Plastic Design: Selecting Polymer Properties for Specific Applications*. Wilmington, DE: E. I. du Pont de Nemours and Company, 2016. (Online only).
28. INTERZINC. *Zinc Casting: A Systems Approach*. Algonac, MI: INTERZINC. (Online only)
29. Lesko, Jim. *Industrial Design Materials and Manufacturing*. 2nd ed. New York: John Wiley & Sons, 2008.

30. Shackelford, James F., William Alexander, and Jun S. Park. *CRC Practical Handbook of Materials Selection*. Boca Raton, FL: CRC Press, 1995.
31. Shackelford, James F., Young-Hwan Han, Sukyoung Kim, and Se-Hun Kwan. *CRC Materials Science and Engineering Handbook*, 4th ed. Boca Raton, FL: CRC Press, 2015.
32. Strong, A. Brent. *Plastics: Materials and Processing*. 3rd ed. Upper Saddle River, NJ: Pearson/Prentice Hall, 2006.
33. Strong, A. Brent. *Fundamentals of Composites Manufacturing: Materials, Methods, and Applications*. 2nd ed. Dearborn, MI: Society of Manufacturing Engineers, 2008.
34. Roy, Manish. *Surface Engineering for Enhanced Performance against Wear*. New York: Springer Publishing Co., 2015.
35. Barbero, Ever J. *Introduction to Composite Materials Design*. 2nd ed. Boca Raton, FL: Taylor and Francis, CRC Press, 2011.
36. Tsai, Stephen W. *Composites Design*. Palo Alto, CA: Think Composites, Inc. 1988.
37. Keeler, Stuart (editor). *Advanced High Strength Steel Application Guidelines V5*. Middletown, OH: WorldAuto-Steel, 2015.
38. Oberg, Eric, H. L. Horton, and H. H. Ryffel. *Machinery's Handbook*, 30th ed. New York: Industrial Press, 2016.

INTERNET SITES RELATED TO DESIGN PROPERTIES OF MATERIALS

The sites listed here provide additional details about the subject of this chapter, beyond what is included here. Most, but not all, sites are mentioned in the text. You should consider perusing this list to find sites that may help you with questions about materials whenever they arise.

1. **AZoM.com (The A to Z of Materials).** Materials information resource for the design community. No cost, databases for metals, ceramics, polymers, and composites. Can also search by keyword, application, or industry type.
2. **Matweb.** Database of material properties for many metals, plastics, ceramics, and other engineering materials.
3. **ASM International.** The society for materials engineers and scientists, a worldwide network dedicated to advancing industry, technology, and applications of metals and other materials.
4. **SAE International.** The engineering society for advancing mobility for the benefit of mankind. A resource for technical information and standards used in designing self-propelled vehicles of all kinds. Site includes access to SAE and AMS (Aerospace Materials Standards) standards on metals, polymers, composites, and many other materials, along with components and subsystems of vehicles such as steering, suspension, engines, and many others.
5. **ASTM International.** Formerly known as the American Society for Testing and Materials. Develops and sells standards for material properties, testing procedures, and numerous other technical standards.

6. **Aluminum Association.** The association of the aluminum industry. Provides numerous publications that can be purchased.
7. **Alcoa, Inc.** A producer of aluminum and fabricated products. Website can be searched for properties of specific alloys.
8. **Copper Development Association.** Provides a large database of properties of wrought and cast copper, copper alloys, brasses, and bronzes. Allows searching for appropriate alloys for typical industrial uses based on several performance characteristics. Select the *Resources* tab and then *Properties*.
9. **Metal Powder Industries Federation.** The international trade association representing the powder metal producers. Standards and publications related to the design and production of products using powder metals.
10. **INTERZINC.** A market development and technology transfer group dedicated to increasing awareness of zinc casting alloys. The site contains numerous references to aid designers in using zinc effectively, such as alloy selection, zinc casting processes, design guides, and case histories. The organization sponsors the Zinc Challenge competition for college and university students to design novel products using zinc die-casting processes.
11. **Association for Iron & Steel Technology (AIST).** An organization that advances the technical development, production, processing, and application of iron and steel.
12. **American Iron and Steel Institute.** AISI serves as the voice of the North American steel industry, promotes the use of steel, and has played a role in the development and application of steels and steelmaking technology.
13. **Techstreet.** A part of Thompson Reuters Corporation, it provides engineers, librarians, and technical professionals with efficient, convenient, reliable access to mission-critical industry codes and standards from over 350 sources including AGMA, ASM, ANSI, ASME, ASTM, DOD, DIN, ISO, MIL, SAE, and SME.
14. **DuPont Engineering Plastics.** Information on DuPont plastics and their properties and processing. Database by type of plastic or application.
15. **PolymerPlace.com.** A web-based portal for information on the development of products and applications from plastics materials and processes.
16. **Plastics Technology Online.** The online resource for the Plastics Technology magazine. Information about plastics materials and processes.
17. **PLASPEC Global.** Affiliated with Plastics Technology Online. Provides a materials selection database, articles, and information about plastics, injection molding, extrusion, blow molding, tooling, and auxiliary equipment. Search for PLASPEC Global on the Plastics Technology Online website.
18. **Society of Plastics Engineers.** SPE promotes scientific and engineering knowledge and education about plastics and polymers worldwide. Site includes an online Plastics Encyclopedia.
19. **Composites World.** Online site for *High Performance Magazine* and *Composites Technology Magazine*. Articles on current practices in composites technology

- with emphasis on engineering, design, and manufacturing solutions. A service of Gardner Business Media, Inc.
20. **National Center for Advanced Materials Performance (NCAMP).** Part of the National Institute for Aviation Research (NIAR) in cooperation with National Aeronautics and Space Agency (NASA) and the Federal Aviation Administration, NCAMP promotes validation and quality assurance of composite materials to be applied in the commercial and military aviation industry. The center is based at Wichita State University.
 21. **Center of Excellence for Composites & Advanced Materials (CECAM).** An academic team of universities led by Wichita State University and the NIAR (see Internet site 20) to perform research, testing, certification, and technology transfer in composites technology; to promote coordination and cooperation among the FAA, aircraft manufacturers, materials suppliers, and airline companies; and the education of the aircraft manufacturing and maintenance workforces.
 22. **Center for Advanced Materials in Transport Aircraft Structures (AMTAS).** An FAA supported center of excellence based at the University of Washington that addresses the engineering and science issues associated with safety, regulation, and product certification of advanced materials and structures. It also establishes engineering standards and develops an advanced materials and structures knowledge base.
 23. **A&P Technology.** A producer of precision braided textiles for use in the composites industry, including braided carbon fiber and fiberglass biaxial sleevings, biaxial tapes, unidirectional tapes, and bias braided fabrics.
 24. **Cytec Solvay Group.** A provider of technologically advanced materials for composites used in commercial aerospace, military aircraft, automotive, marine, and high-performance industrial markets. Products include prepreg systems, woven fabrics, tape, roving, tooling, carbon fiber reinforcements, and thermoplastics.
 25. **Triumph Group, Inc.** Producer of composite systems used for floor panels, employing light-weight cores with fiberglass or carbon graphite skins.
 26. **General Plastics Manufacturing Company.** Producer of high-performance *Last-A-Foam*[®] cellular solid polyurethane and polyisocyanurate systems for use in light-weight cores for composite structures, other industrial applications, and graphics products.
 27. **Steel Founders' Society of America.** A trade association representing steel foundries that promotes the use of cast steel products and disseminates information about steel castings, materials, and casting processes. The site provides general overviews of castings and working with foundries.
 28. **Special Metals Corporation.** Producer of nickel-based alloys with brand names INCONEL, INCOLOY, NIMONIC, UDIMET, MONEL, and NILO.
 29. **Allegheny Technologies, Inc. (ATI).** Producer of alloys of titanium, nickel, cobalt, zirconium and other metals for aerospace, electrical energy, medical, automotive, food equipment, construction, mining and other industries.
 30. **Haynes International, Inc.** Producer of nickel- and cobalt-based alloys with brand names HASTELLOY, HAYNES, and ULTIMET.
 31. **Hexcel Corporation.** Producer of carbon fibers and matrix products for the composites industry, including pre-pregs, core materials, fabrics, laminates, sheet molding compounds, and systems for film infusion technology, resin transfer molding, and resin film infusion.
 32. **IDI Composites International.** A producer of sheet molding compounds and bulk molding compounds.
 33. **CINDAS LLC.** Developer of databases of materials properties: Aerospace Structural Metals Database (ASMD), Damage Tolerant Design Handbook (DTDH), Structural Alloys Handbook (SAH), Microelectronics Packaging Materials Database (MPMD), and Thermophysical Properties of Matter Database (TPMD).
 34. **Think Composites, Inc.** A consulting firm specializing in design and analysis of structures made from advanced composites. Develops and markets software and provides education and training programs in this field. Software products include GENLAM (strength and stiffness of laminates), LAMRANK (ranking of the performance of laminates), MIC-MAC (micro- and macromechanics analysis of composites), and 3DBEAM (design and analysis of three-dimensional beams).
 35. **Zyvex Technologies.** Producer of advanced high-performance materials using nanotechnology for aerospace, automotive, industrial, marine, and sports applications.
 36. **Sigma-Aldrich.** Producer of nanomaterials for the materials development market. Included are carbon nanotubes, dendrimers, nanocomposites, and others. The site includes many articles on nanomaterials and related topics.
 37. **Nanophase Technologies Corporation.** Producer of a family of nanomaterial technologies for automotive, electronics, plastics, textiles, exterior coatings, and other industries.
 38. **Nanosteel Company.** Producer of NanoSteel alloys that are applied as coatings or overlays to surfaces to enhance their hardness and resistance to wear, erosion, and corrosion. Also provides powders for additive manufacturing and 3D printing.
 39. **Granta Material Intelligence.** Producer and marketer of numerous products and services related to the effective management of materials property data and software to support materials selection in industry and academia. Included is the CES EduPack materials selection software using concepts developed by Professor Michael F. Ashby.
 40. **WorldAutoSteel.** The automotive group of the World Steel Association advances and communicates steel's unique ability to meet the automotive industry's needs and challenges in a sustainable and environmentally responsible way. Publisher of *Advanced High Strength Steel Application Guidelines* (AHSS Guidelines), available for download from the site.
 41. **Olympus Corporation.** Producer of equipment for non-destructive velocity measurements in materials to enable calculations for Young's modulus and Poisson's ratio.

PROBLEMS

1. Define *ultimate tensile strength*.
2. Define *yield point*.
3. Define *yield strength* and tell how it is measured.

4. What types of materials would have a yield point?
5. What is the difference between proportional limit and elastic limit?
6. Define *Hooke's law*.
7. What property of a material is a measure of its stiffness?
8. What property of a material is a measure of its ductility?
9. If a material is reported to have a percent elongation in a 2.00-in gage length of 2%, is it ductile?
10. Define *Poisson's ratio*.
11. If a material has a tensile modulus of elasticity of 114 GPa and a Poisson's ratio of 0.33, what is its modulus of elasticity in shear?
12. A material is reported to have a Brinell hardness of 525. What is its approximate hardness on the Rockwell C scale?
13. A steel is reported to have a Brinell hardness of 450. What is its approximate tensile strength?
For Problems 14–17, describe what is wrong with each statement.
14. "After annealing, the steel bracket had a Brinell hardness of 750."
15. "The hardness of that steel shaft is HRB 120."
16. "The hardness of that bronze casting is HRC 12."
17. "Based on the fact that this aluminum plate has a hardness of HB 150, its approximate tensile strength is 75 ksi."
18. Name two tests used to measure impact energy.
19. What are the principal constituents in steels?
20. What are the principal alloying elements in SAE 4340 steel?
21. How much carbon is in SAE 4340 steel?
22. What is the typical carbon content of a low-carbon steel? Of a medium-carbon steel? Of a high-carbon steel?
23. How much carbon does a bearing steel typically contain?
24. What is the main difference between SAE 1213 steel and SAE 12L13 steel?
25. Name four materials that are commonly used for shafts.
26. Name four materials that are typically used for gears.
27. Describe the properties desirable for the auger blades of a post hole digger, and suggest a suitable material.
28. Appendix 3 lists SAE 5160 OQT 1000. Describe the basic composition of this material, how it was processed, and its properties in relation to other steels listed in that table.
29. If a shovel blade is made from SAE 1040 steel, would you recommend flame hardening to give its edge a surface hardness of HRC 40? Explain.
30. Describe the differences between through-hardening and carburizing.
31. Describe the process of induction hardening.
32. Name 10 steels used for carburizing. What is their approximate carbon content prior to carburizing?
33. What types of stainless steels are nonmagnetic?
34. What is the principal alloying element that gives a stainless steel corrosion resistance?
35. Of what material is a typical wide-flange beam made?
36. With regard to structural steels, what does the term

- HSLA* mean? What strengths are available in HSLA steel?
37. Name three types of cast iron.
 38. Describe the following cast iron materials according to type, tensile strength, yield strength, ductility, and stiffness:
ASTM A48, Grade 30
ASTM A536, Grade 100-70-03
ASTM A47, Grade 32510
ASTM A220, Grade 70003
 39. Describe the process of making parts from powdered metals.
 40. What properties are typical for parts made from Zamak 3 zinc casting alloy?
 41. What are the typical uses for Group D tool steels?
 42. What does the suffix O in aluminum 6061-O represent?
 43. What does the suffix H in aluminum 3003-H14 represent?
 44. What does the suffix T in aluminum 6061-T6 represent?
 45. Name the aluminum alloy and condition that has the highest strength of those listed in Appendix 9.
 46. Which is one of the most versatile aluminum alloys for mechanical and structural uses?
 47. Name three typical uses for titanium alloys.
 48. What is the principal constituent of bronze?
 49. Describe the bronze having the UNS designation C86200.
 50. Name two typical uses for bronze in machine design.
 51. Describe the difference between thermosetting plastics and thermoplastics.
 52. Suggest a suitable plastic material for each of the following uses:
 - (a) Gears
 - (b) Football helmets
 - (c) Transparent shield
 - (d) Structural housing
 - (e) Pipe
 - (f) Wheels
 - (g) Electrical switch-gear, structural part
 53. Name eight factors over which the designer has control when specifying a composite material.
 54. Define the term *composite*.
 55. Name four base resins often used for composite materials.
 56. Name four types of reinforcement fibers used for composite materials.
 57. Name three types of composite materials used for sporting equipment, such as tennis rackets, golf clubs, and skis.
 58. Name three types of composite materials used for aircraft and aerospace structures.
 59. What base resin and reinforcement are typically used for sheet-molding compound (SMC)?
 60. For what applications are sheet-molding compounds used?
 61. Describe six forms in which reinforcing fibers are produced.
 62. Describe *wet processing* of composite materials.
 63. Describe *preimpregnated materials*.
 64. Describe the production processing of sheet-molding compounds.

65. Describe *pultrusion*, and list four shapes produced by this process.
66. Describe *filament winding* and four types of products made by this process.
67. Define the term *specific strength* as it is applied to structural materials.
68. Define the term *specific stiffness* as it is applied to structural materials.
69. Discuss the advantages of composite materials relative to metals with regard to specific strength and specific stiffness.
70. Compare the specific strength of SAE 1020 hot-rolled steel with that of SAE 5160 OQT 700 steel, the two aluminum alloys 6061-T6 and 7075-T6, and titanium Ti-6Al-4V.
71. Compare the specific stiffness of SAE 1020 hot-rolled steel with that of SAE 5160 OQT 700 steel, the two aluminum alloys 6061-T6 and 7075-T6, and titanium Ti-6Al-4V.
72. Compare the specific strengths of each of the five composite materials shown in Figure 2–23 with that of SAE 1020 hot-rolled steel.
73. Compare the specific stiffness of each of the five composite materials shown in Figure 2–23 with that of SAE 1020 hot-rolled steel.
74. Describe the general construction of a composite material identified as $[0/+30/-30/90]$.
75. List and discuss six design guidelines for the application of composite materials.
76. Why is it desirable to form a composite material in layers or plies with the angle of orientation of the different plies in different directions?
77. Why is it desirable to form a composite structural element with relatively thin skins of the stronger composite material over a core of light foam?
78. Describe why concurrent engineering and early manufacturing involvement are important when you are designing parts made from composite materials.
79. Describe a PMC material.
80. Describe a MMC material.
81. Describe a CMC material.
- Problems 82–90. For composites made with the given matrix material and reinforcement fiber, which of the three classifications of composites mentioned in Questions 79, 80, and 81 is it in?
- | Matrix material | Reinforcement material |
|---|------------------------|
| 82. PEEK | Carbon |
| 83. SiC | LAS |
| 84. C | C |
| 85. Mg | SiC |
| 86. PPS | C |
| 87. SiC | CAS |
| 88. Al | B |
| 89. PI | glass |
| 90. epoxy | aramid |
| 91. Recommend a type of composite and materials for a high-performance application such as an aircraft structural component. | |
| 92. Recommend a type of composite and materials and a processing method for a high-volume application with low per-part cost. | |
| 93. Name the predominant choice of composite type and | |
- materials for low-cost applications.
- Problems 94–96. For the given specification for a laminate-type composite, describe the layers.
94. $[0/\pm 45/\pm 30]_s$
95. $[90_3/\pm 45/0_2]_s$
96. $[0_4/90_2/\pm 30/0_2/90/\pm 60/0_2]_s$
97. Describe a nanometer.
98. Describe a CNT.
99. Describe how CNTs are used in a MMNC and what benefits can be expected compared with a MMC.
100. Describe how CNTs are used in a CMNC and what benefits can be expected compared with a CMC.

SUPPLEMENTARY PROBLEMS

- List the approximate value of Poisson's ratio for the following materials: (a) carbon and alloy steel; (b) aluminum; (c) lead; (d) gray cast iron; (e) concrete; (f) elastomers.
- Describe and compare the methods for measuring flexural strength and flexural modulus for rigid plastics using the 3-point bending method and the 4-point bending method.
- List five kinds of wear.
- Name four types of carbon and alloy steel commonly used for commercially available shapes.
- Name two types of stainless steel commonly used for commercially available shapes.
- Name four types of aluminum alloys commonly used for commercially available shapes.
- Name three U.S. organizations whose names are commonly used in designations for steels used in machine design.
- Name the U.S. organization chiefly responsible for assigning aluminum alloy designations.
- A U.S. designer specifies SAE 4140 steel for a machine component. Name the alloy designation if the same component were to be produced in: (a) Germany; (b) the United Kingdom; (c) the European Union; (d) China; (e) Japan.
- Repeat Problems 9 for SAE 1045 steel.
- Repeat Problems 9 for SAE 430 stainless steel.
- Repeat Problems 9, parts a–c, for aluminum alloy 7075.
- List four liquid media used as quenchants during heat-treating operations.
- Describe the process of shot peening and the benefits of using it.
- List four carbon and alloy casting steels used in general applications.
- List four carbon and alloy casting steels used for parts that must sustain pressurized fluids.
- Describe the cast material called *CADI* and list four typical applications.
- Describe the cast material called *white iron* and list four typical applications.
- Describe the *press and sinter* procedure for producing machine components from powder metallurgy technology.
- Describe the *isostatic pressing* procedure for producing machine components from powder metallurgy technology.
- Describe the *metal injection molding* procedure for producing machine components from powder metallurgy technology.

22. Describe the *powder forging* procedure for producing machine components from powder metallurgy technology.
23. List four carbon or alloy powdered steel designations and give their tensile strength rating in the heat-treated condition.
24. List powdered metal designations for the following types of metals and give their tensile strength rating: (a) nickel silver; (b) bronze; (c) copper; (d) aluminum.
25. State the typical limit on part size for powder metal parts?
26. Name at least two aluminum casting alloys in each of the series: 200, 300, 400, 500, 700, and 800.
27. Name three general-purpose aluminum forging alloys.
28. Name the most widely used zinc casting alloy and give its typical tensile strength.
29. Name the three widely used ZA zinc alloys and describe the significance of the *A* in the designation name. For each named alloy, give its typical tensile strength.
30. Give two major reasons for specifying nickel-based alloys for a machine component.
31. Specify at least one brass or bronze alloy for the following applications: (a) bearings; (b) gears; (c) screw machine parts; (d) marine hardware; (e) pump housings; (f) aircraft parts.
32. Describe the conditions for copper alloys designated by: (a) H04; (b) H02; (c) H01; d) H08.
33. Describe what the temper designation TD means.
34. Using Figure 2–18, describe the effect of the degree of cold work between 10% and 40% on the properties of brass alloys.
35. List the six general classifications of materials that designers may specify for machine components.
36. Give three examples of hybrid materials.
37. Using Figure 2–31, rank the following general classifications of materials with regard to their relative strength: (a) natural materials (wood, rubber); (b) ceramics; (c) polymers; (d) metals; (e) cork; (f) foams; (g) composites; (h) elastomers.
38. Using Figure 2–32, rank the following general classifications of materials with regard to their relative stiffness as indicated by its Young's modulus: (a) natural materials (wood, rubber); (b) ceramics; (c) polymers; (d) metals; (e) cork; (f) foams; (g) composites; (h) elastomers.
39. Using Figure 2–32, rank the following general classifications of materials with regard to their relative density: (a) natural materials (wood, rubber); (b) ceramics;

- (c) polymers; (d) metals; (e) cork; (f) foams; (g) composites; (h) elastomers.
40. Compare the three lists generated for Problems 37, 38, and 39.

INTERNET-BASED ASSIGNMENTS

1. Use the Matweb website to determine at least three appropriate materials for a shaft design. An alloy steel is preferred with a minimum yield strength of 150 ksi (1035 MPa) and a good ductility as represented by an elongation of 10% or greater.
2. Use the Matweb website to determine at least three appropriate plastic materials for use as a cam. The materials should have good strength properties and a high toughness.
3. Use the DuPont Plastics website to determine at least three appropriate plastic materials for use as a cam. The materials should have good strength properties and a high toughness.
4. Use the DuPont Plastics website to determine at least three appropriate plastic materials for use as a housing for an industrial product. Moderate strength, high rigidity, and high toughness are required.
5. Use the Alcoa website to determine at least three appropriate aluminum alloys for a mechanical component that requires moderate strength, good machinability, and good corrosion resistance.
6. Use the INTERZINC website to determine at least three appropriate zinc casting alloys for a structural component that requires good strength and that is recommended for die casting.
7. Use the Copper Development Association website to recommend at least three copper alloys for a wormgear. Good strength and ductility are desirable along with good wear properties.
8. Use the Copper Development Association website to recommend at least three copper alloys for a bearing application. Moderate strength and good friction and wear properties are required.
9. Locate the description of the ASTM Standard A992 structural steel that is commonly used for rolled-steel beam shapes. Determine how to acquire a copy of the standard.

STRESS AND DEFORMATION ANALYSIS

The Big Picture

You Are the Designer

- 3–1 Objectives of This Chapter
- 3–2 Philosophy of a Safe Design
- 3–3 Representing Stresses on a Stress Element
- 3–4 Normal Stresses Due to Direct Axial Load
- 3–5 Deformation under Direct Axial Load
- 3–6 Shear Stress Due to Direct Shear Load
- 3–7 Torsional Load—Torque, Rotational Speed, and Power
- 3–8 Shear Stress Due to Torsional Load
- 3–9 Torsional Deformation
- 3–10 Torsion in Members Having Non-Circular Cross Sections
- 3–11 Torsion in Closed Thin-Walled Tubes
- 3–12 Torsion in Open Thin-Walled Tubes
- 3–13 Shear Stress Due to Bending
- 3–14 Shear Stress Due to Bending—Special Shear Stress Formulas
- 3–15 Normal Stress Due to Bending
- 3–16 Beams with Concentrated Bending Moments
- 3–17 Flexural Center for Beam Bending
- 3–18 Beam Deflections
- 3–19 Equations for Deflected Beam Shape
- 3–20 Curved Beams
- 3–21 Superposition Principle
- 3–22 Stress Concentrations
- 3–23 Notch Sensitivity and Strength Reduction Factor

THE BIG PICTURE

Stress and Deformation Analysis

Discussion Map

- As a designer, you are responsible for ensuring the safety of the components and systems you design.
- You must apply your prior knowledge of the principles of strength of materials.

This chapter presents a brief review of the fundamentals of stress analysis. It will help you design products that do not fail, and it will prepare you for other topics later in this book.

Discover

How could consumer products and machines fail?

Describe some product failures you have seen.

A designer is responsible for ensuring the safety of the components and systems that he or she designs. Many factors affect safety, but one of the most critical aspects of design safety is that the level of stress to

which a machine component is subjected must be safe under reasonably foreseeable conditions. This principle implies, of course, that nothing actually breaks. Safety may also be compromised if components are

permitted to deflect excessively, even though nothing breaks.

You have already studied the principles of strength of materials to learn the fundamentals of stress analysis. Thus, at this point, you should be competent to analyze load-carrying members for stress and deflection due to direct tensile and compressive loads, direct shear, torsional shear, and bending.

Think, now, about consumer products and machines with which you are familiar, and try to explain how they *could fail*. Of course, we do not expect them to fail, because most such products are well designed. But some do fail. Can you recall any? How did they fail? What were the operating conditions when they failed? What was the material of the components that failed? Can you visualize and describe the kinds of loads that were placed on the components that failed? Were they subjected to bending, tension, compression, shear, or torsion? Could

there have been more than one type of stress acting at the same time? Are there evidences of accidental overloads? Should such loads have been anticipated by the designer? Could the failure be due to the manufacture of the product rather than its design?

Talk about product and machine failures with your associates and your instructor. Consider parts of your car, home appliances, lawn maintenance equipment, or equipment where you have worked. If possible, bring failed components to the meetings with your associates, and discuss the components and their failure.


Most of this book emphasizes developing special methods to analyze and design machine elements. These methods are all based on the fundamentals of stress analysis, and it is assumed that you have completed a course in strength of materials. This chapter presents a brief review of the fundamentals. (See References 2–4.)

YOU ARE THE DESIGNER


You are the designer of a utility crane that might be used in an automotive repair facility, in a manufacturing plant, or on a mobile unit such as a truck bed. Its function is to raise heavy loads.

A schematic layout of one possible configuration of the crane is shown in Figure 3–1. It is comprised of four primary load-carrying members, labeled 1, 2, 3, and 4. These members are connected to each other with pin-type joints at A, B, C, D, E, and F. The load is

applied to the end of the horizontal boom, member 3. Anchor points for the crane are provided at joints A and B that carry the loads from the crane to a rigid structure. Note that this is a simplified view of the crane showing only the primary structural components and the forces in the plane of the applied load. The crane would also need stabilizing members in the plane perpendicular to the drawing.

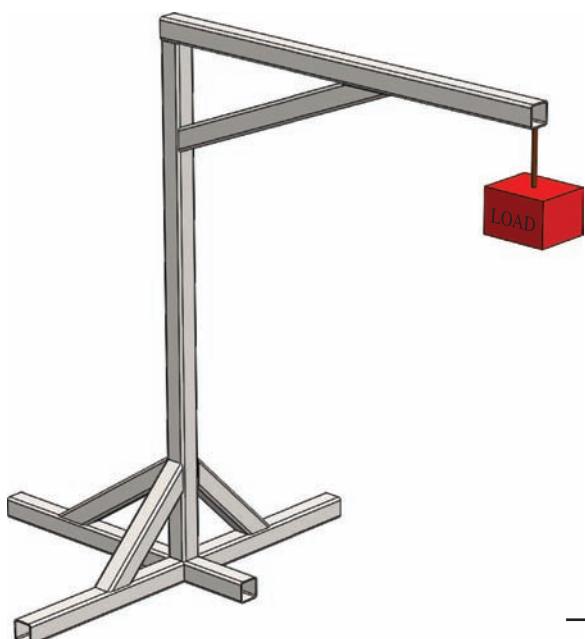

(a) Pictorial view

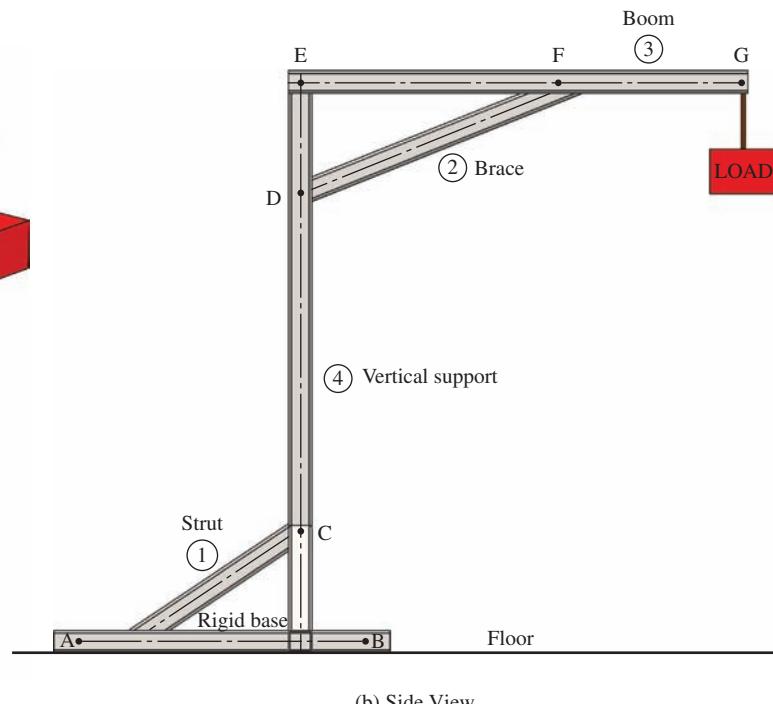

(b) Side View

FIGURE 3–1 Schematic layout of a crane

You will need to analyze the kinds of forces that are exerted on each of the load-carrying members before you can design them. This calls for the use of the principles of statics in which you should have already gained competence. The following discussion provides a review of some of the key principles you will need in this course.

Your work as a designer proceeds as follows:

- Analyze the forces that are exerted on each load-carrying member using the principles of statics.
- Identify the kinds of stresses that each member is subjected to by the applied forces.
- Propose the general shape of each load-carrying member and the material from which each is to be made.
- Complete the stress analysis for each member to determine its final dimensions.

Let's work through steps 1 and 2 now as a review of statics. You will improve your ability to do steps 3 and 4 as you perform several practice problems in this chapter and in Chapters 4 and 5 by reviewing strength of materials and adding competencies that build on that foundation.

Force Analysis

One approach to the force analysis is outlined here.

- Consider the entire crane structure as a free-body with the applied force acting at point G and the reactions acting at support points A and B. See Figure 3–2, which shows these forces and important dimensions of the crane structure.

- Break the structure apart so that each member is represented as a free-body diagram, showing all forces acting at each joint. See the result in Figure 3–3.
- Analyze the magnitudes and directions of all forces.

Comments are given here to summarize the methods used in the static analysis and to report results. You should work through the details of the analysis yourself or with colleagues to ensure that you can perform such calculations. All of the forces are directly proportional to the applied force F . We will show the results with an assumed value of $F = 10.0 \text{ kN}$ (approximately 2250 lb).

Step 1: The pin joints at A and B can provide support in any direction. We show the x and y components of the reactions in Figure 3–2. Then, proceed as follows:

- Sum moments about B to find
 $R_{Ay} = 2.667 F = 26.67 \text{ kN}$
- Sum forces in the vertical direction to find
 $R_{By} = 3.667 F = 36.67 \text{ kN}$.

At this point, we need to recognize that the strut AC is pinned connected at each end and carries loads only at its ends. Therefore, it is a *two-force member*, and the direction of the total force, R_A , acts along the member itself. Then R_{Ay} and R_{Ax} are the rectangular components of R_A as shown in the lower left of Figure 3–2. We can then say that

$$\tan(33.7^\circ) = R_{Ay}/R_{Ax}$$

and then

$$R_{Ax} = R_{Ay}/\tan(33.7^\circ) = 26.67 \text{ kN}/\tan(33.7^\circ) = 40.0 \text{ kN}$$

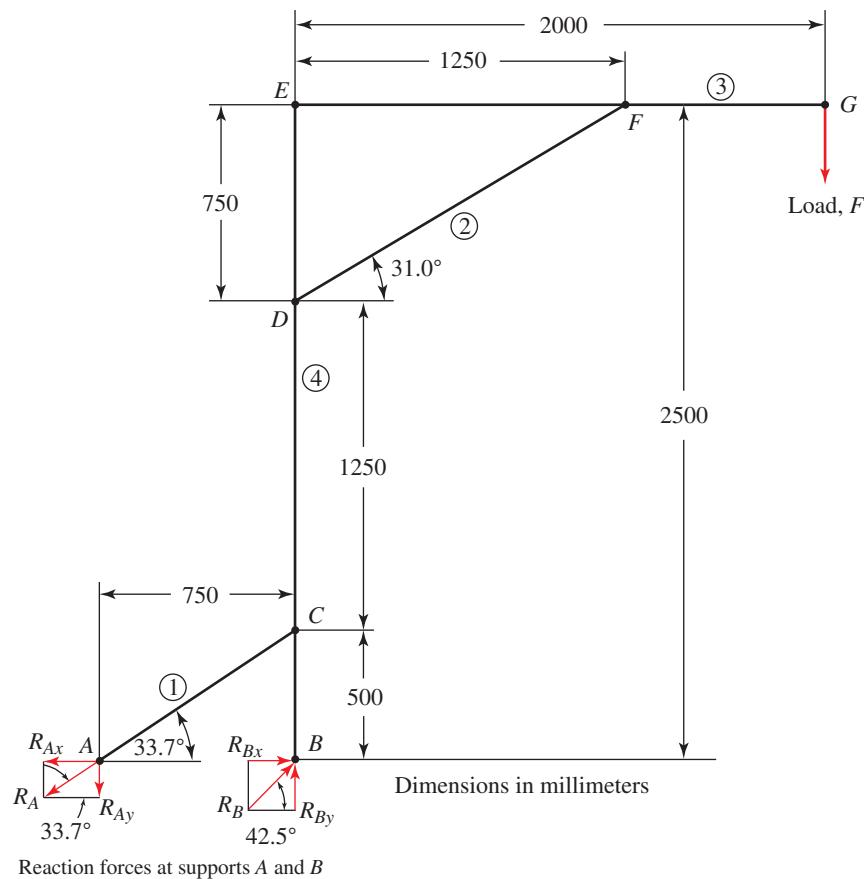


FIGURE 3–2 Free-body diagram of complete crane structure

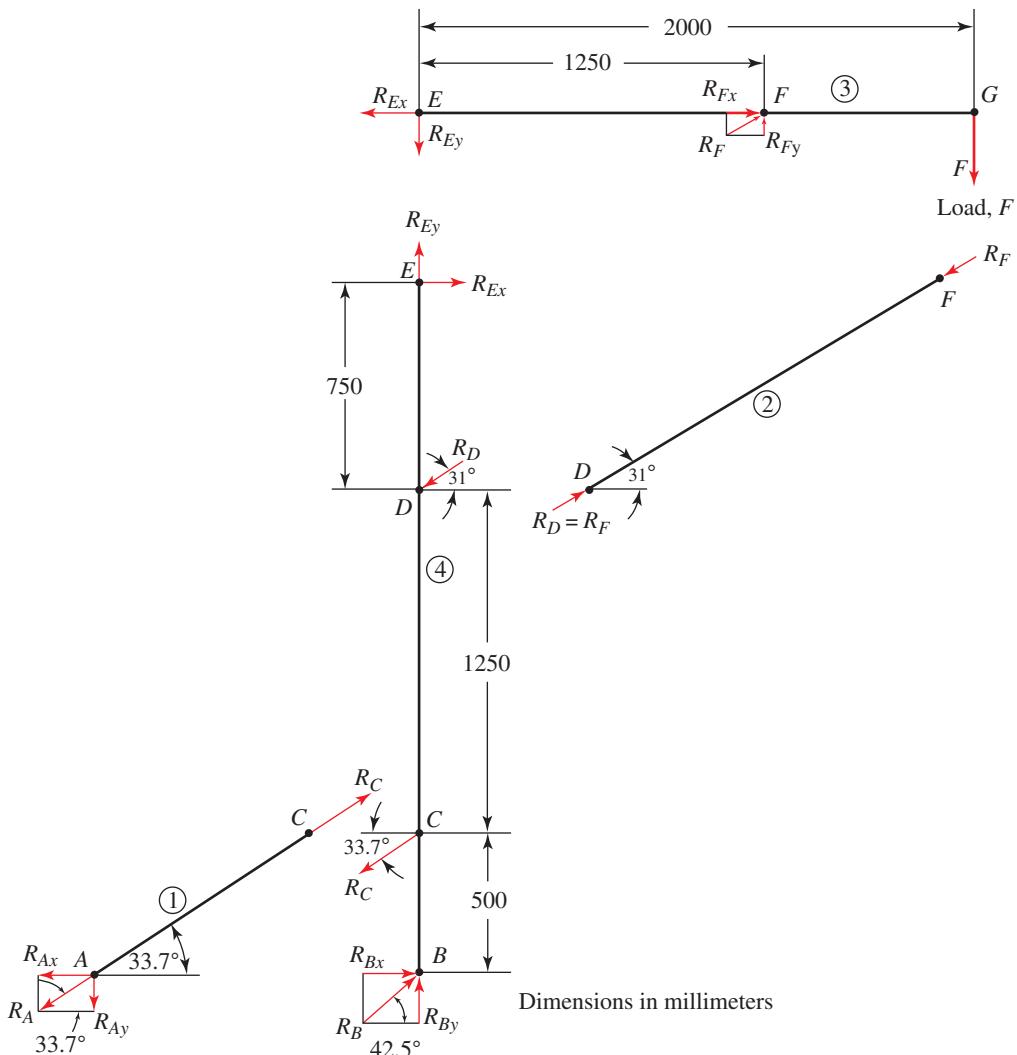


FIGURE 3–3 Free-body diagrams of each component of the crane

The total force, R_A , can be computed from the Pythagorean theorem,

$$R_A = \sqrt{R_{Ax}^2 + R_{Ay}^2} = \sqrt{(40.0)^2 + (26.67)^2} = 48.07 \text{ kN}$$

This force acts along the strut AC , at an angle of 33.7° above the horizontal, and it is the force that tends to shear the pin in joint A . The force at C on the strut AC is also 48.07 kN acting upward to the right to balance R_A on the two-force member as shown in Figure 3–3. Member AC is therefore in pure tension.

We can now use the sum of the forces in the horizontal direction on the entire structure to show that $R_{Ax} = R_{Bx} = 40.0 \text{ kN}$.

The resultant of R_{Bx} and R_{By} is 54.3 kN acting at an angle of 42.5° above the horizontal, and it is the total shearing force on the pin in joint B . See the diagram in the lower right of Figure 3–2.

Step 2: The set of free-body diagrams is shown in Figure 3–3.

Step 3: Now consider the free-body diagrams of all of the members in Figure 3–3. We have already discussed member 1, recognizing it as a two-force member in tension carrying forces R_A and R_C equal to 48.07 kN . The reaction to R_C acts on the vertical member 4.

Now note that member 2 is also a two-force member, but it is in compression rather than tension. Therefore, we know that the forces on points D and F are equal and that they act in line with member 2, 31.0° with respect to the horizontal. The reactions to

these forces, then, act at point D on the vertical support, member 4, and at point F on the horizontal boom, member 3. We can find the value of R_F by considering the free-body diagram of member 3. You should be able to verify the following results using the methods already demonstrated.

$$\begin{aligned} R_{Fy} &= 1.600 F = (1.600)(10.0 \text{ kN}) = 16.00 \text{ kN} \\ R_{Fx} &= 2.667 F = (2.667)(10.0 \text{ kN}) = 26.67 \text{ kN} \\ R_F &= 3.110 F = (3.110)(10.0 \text{ kN}) = 31.10 \text{ kN} \\ R_{Ey} &= 0.600 F = (0.600)(10.0 \text{ kN}) = 6.00 \text{ kN} \\ R_{Ex} &= 2.667 F = (2.667)(10.0 \text{ kN}) = 26.67 \text{ kN} \\ R_E &= 2.733 F = (2.733)(10.0 \text{ kN}) = 27.33 \text{ kN} \end{aligned}$$

Now all forces on the vertical member 4 are known from earlier analyses using the principle of action-reaction at each joint.

Types of Stresses on Each Member

Consider again the free-body diagrams in Figure 3–3 to visualize the kinds of stresses that are created in each member. This will lead to the use of particular kinds of stress analysis as the design process is completed. Members 3 and 4 carry forces perpendicular to their long axes and, therefore, they act as beams in bending. Figure 3–4 shows these members with the additional shearing force and bending moment diagrams. You should have learned to prepare such

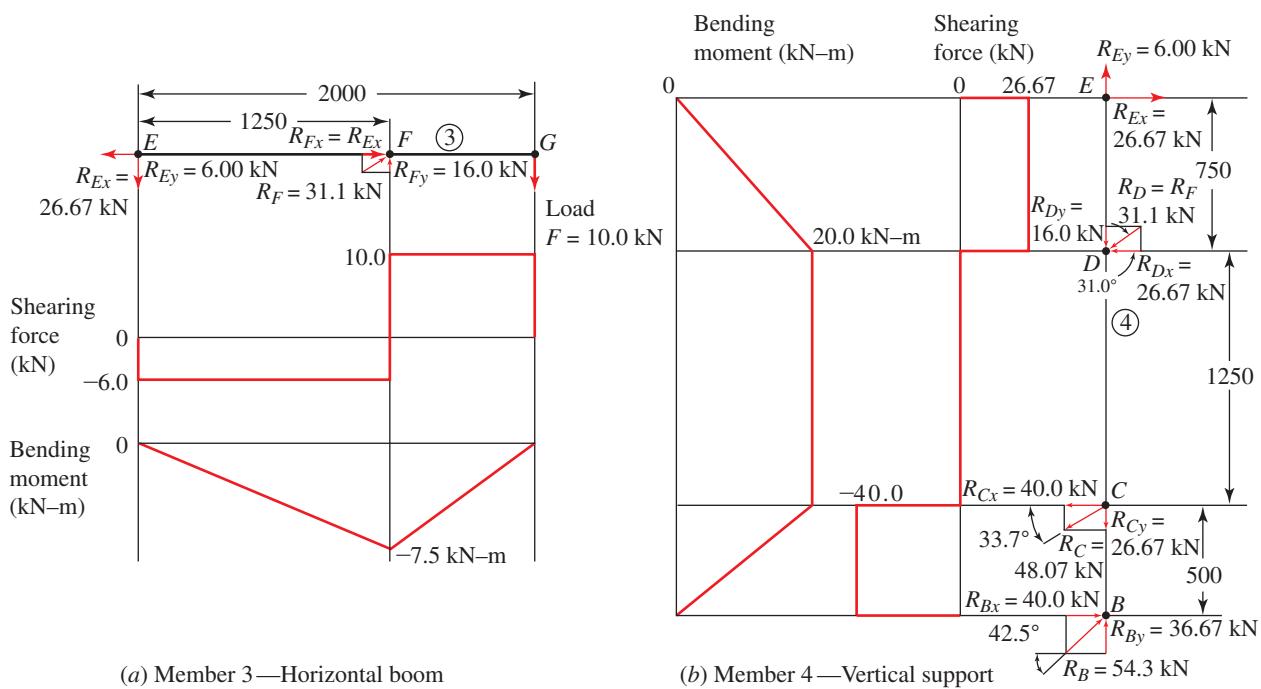


FIGURE 3–4 Shearing force and bending moment diagrams for members 3 and 4

diagrams in the prerequisite study of strength of materials. The following is a summary of the kinds of stresses in each member.

Member 1: The strut is in pure tension.

Member 2: The brace is in pure compression. Column buckling should be checked.

Member 3: The boom acts as a beam in bending. The right end between *F* and *G* is subjected to bending stress and vertical shear stress. Between *E* and *F* there is bending and shear combined with an axial tensile stress.

Member 4: The vertical support experiences a complex set of stresses depending on the segment being considered as described here.

Between *E* and *D*: Combined bending stress, vertical shear stress, and axial tension.

Between *D* and *C*: Combined bending stress and axial compression.

Between *C* and *B*: Combined bending stress, vertical shear stress, and axial compression.

Pin Joints: The connections between members at each joint must be designed to resist the total reaction force acting at each, computed in the earlier analysis. In general, each connection will likely include a cylindrical pin connecting two parts. The pin will typically be in direct shear. ■

3-1 OBJECTIVES OF THIS CHAPTER

After completing this chapter, you will:

1. Have reviewed the principles of stress and deformation analysis for several kinds of stresses, including the following:

Normal stresses due to direct tension and compression forces

Shear stress due to direct shear force

Shear stress due to torsional load for both circular and non-circular sections

Shear stress in beams due to bending

Normal stress in beams due to bending

2. Be able to interpret the nature of the stress at a point by drawing the *stress element* at any point in a load-carrying member for a variety of types of loads.

3. Have reviewed the importance of the *flexural center* of a beam cross section with regard to the alignment of loads on beams.
4. Have reviewed beam-deflection formulas.
5. Be able to analyze beam-loading patterns that produce abrupt changes in the magnitude of the bending moment in the beam.
6. Be able to use the principle of superposition to analyze machine elements that are subjected to loading patterns that produce combined stresses.
7. Be able to properly apply stress concentration factors in stress analyses.

3-2 PHILOSOPHY OF A SAFE DESIGN

In this book, every design approach will ensure that the stress level is below yield in ductile materials, automatically ensuring that the part will not break under a static

load. For brittle materials, we will ensure that the stress levels are well below the ultimate tensile strength. We will also analyze deflection where it is critical to safety or performance of a part.

Two other failure modes that apply to machine members are fatigue and wear. *Fatigue* is the response of a part subjected to repeated loads (see Chapter 5). Wear is discussed within the chapters devoted to the machine elements, such as gears, bearings, and chains, for which it is a major concern.

3-3 REPRESENTING STRESSES ON A STRESS ELEMENT

One major goal of stress analysis is to determine *the point* within a load-carrying member that is subjected to the highest stress level. You should develop the ability to visualize a *stress element*, a single, infinitesimally small cube from the member in a highly stressed area, and to show vectors that represent the kind of stresses that exist on that element. The orientation of the stress element is critical, and it must be aligned with specified axes on the member, typically called *x*, *y*, and *z*.

Figure 3–5 shows three examples of stress elements with two basic fundamental kinds of stress: Normal (tensile and compressive) and shear. Both the complete three-dimensional cube and the simplified, two-dimensional square forms for the stress elements are shown. The square is one face of the cube in a selected plane. The

sides of the square represent the projections of the faces of the cube that are perpendicular to the selected plane. It is recommended that you visualize the cube form first and then represent a square stress element showing stresses on a particular plane of interest in a given problem. In some problems with more general states of stress, two or three square stress elements may be required to depict the complete stress condition.

Tensile and compressive stresses, called *normal stresses*, are shown acting perpendicular to opposite faces of the stress element. Tensile stresses tend to pull on the element, whereas compressive stresses tend to crush it.

Shear stresses are created by direct shear, vertical shear in beams, or torsion. In each case, the action on an element subjected to shear is a tendency to *cut* the element by exerting a stress downward on one face while simultaneously exerting a stress upward on the opposite, parallel face. This action is that of a simple pair of shears or scissors. But note that if only one pair of shear stresses acts on a stress element, it will not be in equilibrium. Rather, it will tend to spin because the pair of shear stresses forms a couple. To produce equilibrium, a second pair of shear stresses on the other two faces of the element must exist, acting in a direction that opposes the first pair.

In summary, shear stresses on an element will always be shown as two pairs of equal stresses acting on (parallel to) the four sides of the element. Figure 3–5(c) shows an example.

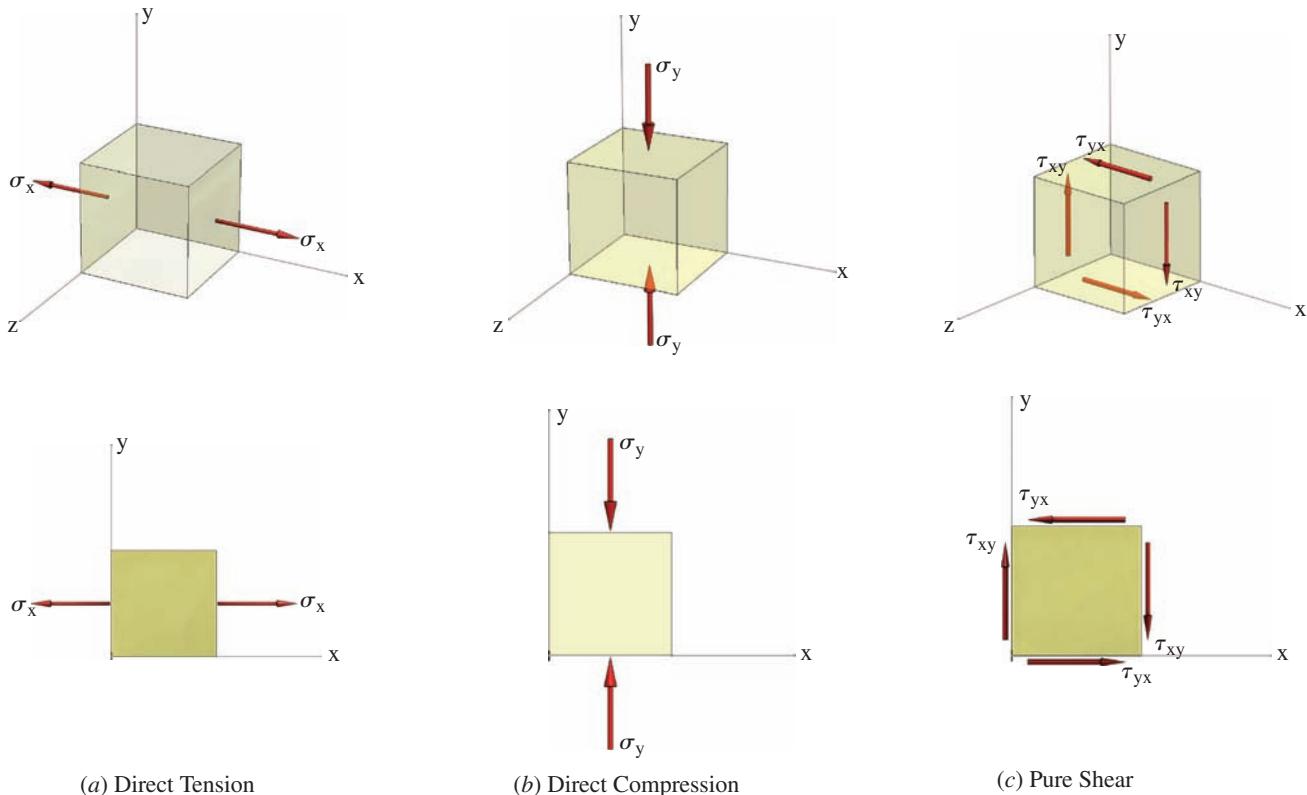


FIGURE 3-5 Stress elements for normal and shear stresses

Sign Convention for Shear Stresses

This book adopts the following convention:

Positive shear stresses tend to rotate the element in a clockwise direction.

Negative shear stresses tend to rotate the element in a counterclockwise direction.

A double subscript notation is used to denote shear stresses in a plane. For example, in Figure 3–5(c), drawn for the x - y plane, the pair of shear stresses, τ_{xy} , indicates a shear stress acting on the element face that is perpendicular to the x -axis and parallel to the y -axis. Then τ_{yx} acts on the face that is perpendicular to the y -axis and parallel to the x -axis. In this example, τ_{xy} is positive and τ_{yx} is negative.

3-4 NORMAL STRESSES DUE TO DIRECT AXIAL LOAD

Stress can be defined as the internal resistance offered by a unit area of a material to an externally applied load. *Normal stresses* (σ) are either *tensile* (positive) or *compressive* (negative).

For a load-carrying member in which the external load is uniformly distributed across the cross-sectional area of the member, the magnitude of the stress can be calculated from the direct stress formula:

⇒ Direct Tensile or Compressive Stress

$$\sigma = \text{force/area} = F/A \quad (3-1)$$

The units for stress are always *force per unit area*, as is evident from Equation (3–1). Common units in the U.S. Customary system and the SI metric system follow.

U.S. Customary Units

$$\text{lb/in}^2 = \text{psi}$$

$$\text{kips/in}^2 = \text{ksi}$$

$$\text{Note: } 1.0 \text{ kip} = 1000 \text{ lb}$$

$$1.0 \text{ ksi} = 1000 \text{ psi}$$

SI Metric Units

$$\text{N/m}^2 = \text{pascal} = \text{Pa}$$

$$\text{N/mm}^2 = \text{megapascal}$$

$$= 10^6 \text{ Pa} = \text{MPa}$$

The conditions on the use of Equation (3–1) are as follows:

1. The load-carrying member must be straight.
2. The line of action of the load must pass through the centroid of the cross section of the member.
3. The member must be of uniform cross section near where the stress is being computed.
4. The material must be homogeneous and isotropic.
5. In the case of compression members, the member must be short to prevent buckling. The conditions under which buckling is expected are discussed in Chapter 6.

Example Problem 3-1 A tensile force of 9500 N is applied to a 12-mm-diameter round bar, as shown in Figure 3–6. Compute the direct tensile stress in the bar.

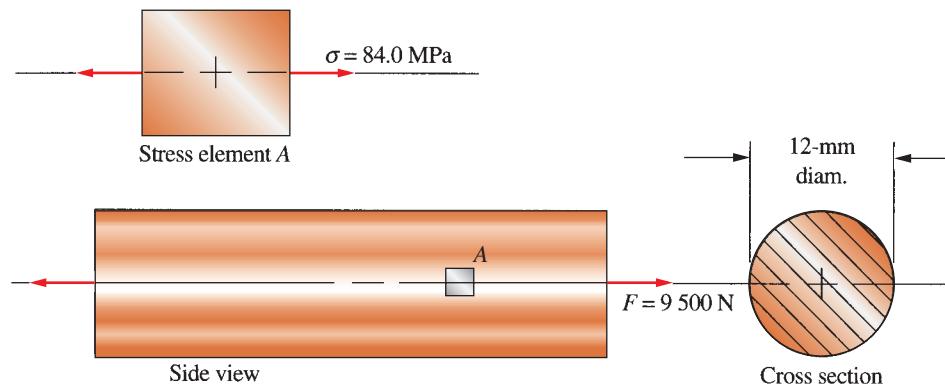


FIGURE 3–6 Tensile stress in a round bar

Solution

Objective Compute the tensile stress in the round bar.

Given Force = $F = 9500 \text{ N}$; diameter = $D = 12 \text{ mm}$.

Analysis Use the direct tensile stress formula, Equation (3–1): $\sigma = F/A$. Compute the cross-sectional area from $A = \pi D^2/4$.

$$A = \pi D^2/4 = \pi(12 \text{ mm})^2/4 = 113 \text{ mm}^2$$

$$\sigma = F/A = (9500 \text{ N})/(113 \text{ mm}^2) = 84.0 \text{ N/mm}^2 = 84.0 \text{ MPa}$$

Comment The results are shown on stress element A in Figure 3–6, which can be taken to be anywhere within the bar because, ideally, the stress is uniform on any cross section. The cube form of the element is as shown in Figure 3–5 (a).

Example Problem**3–2**

For the round bar subjected to the tensile load shown in Figure 3–6, compute the total deformation if the original length of the bar is 3600 mm. The bar is made from a steel having a modulus of elasticity of 207 GPa.

Solution

Objective Compute the deformation of the bar.

Given Force = $F = 9500 \text{ N}$; diameter = $D = 12 \text{ mm}$.
Length = $L = 3600 \text{ mm}$; $E = 207 \text{ GPa}$

Analysis From Example Problem 3–1, we found that $\sigma = 84.0 \text{ MPa}$. Use Equation (3–3).

Results

$$\delta = \frac{\sigma L}{E} = \frac{(84.0 \times 10^6 \text{ N/m}^2)(3600 \text{ mm})}{(207 \times 10^9 \text{ N/m}^2)} = 1.46 \text{ mm}$$

3–5 DEFORMATION UNDER DIRECT AXIAL LOAD

The following formula computes the stretch due to a direct axial tensile load or the shortening due to a direct axial compressive load:

$$\delta = FL/EA \quad (3-2)$$

◊ **Deformation Due to Direct Axial Load**

where δ = total deformation of the member carrying the axial load

F = direct axial load

L = original total length of the member

E = modulus of elasticity of the material

A = cross-sectional area of the member

Noting that $\sigma = F/A$, we can also compute the deformation from

$$\delta = \sigma L/E \quad (3-3)$$

3–6 SHEAR STRESS DUE TO DIRECT SHEAR LOAD

Direct shear stress occurs when the applied force tends to cut through the member as scissors or shears do or when a punch and a die are used to punch a slug of material from a sheet. Another important example of direct shear in machine design is the tendency for a key to be sheared off at the section between the shaft and the hub of a machine element when transmitting torque. Figure 3–7 shows the action.

The method of computing direct shear stress is similar to that used for computing direct tensile stress because the applied force is assumed to be uniformly distributed across the cross section of the part that is resisting the force. But the kind of stress is *shear stress* rather than *normal stress*. The symbol used for shear stress is the

Greek letter tau (τ). The formula for direct shear stress can thus be written

◊ **Direct Shear Stress**

$$\tau = \text{shearing force/area in shear} = F/A_s \quad (3-4)$$

This stress is more properly called the *average shearing stress*, but we will make the simplifying assumption that the stress is uniformly distributed across the shear area.

3–7 TORSIONAL LOAD—TORQUE, ROTATIONAL SPEED, AND POWER

The relationship among the power (P), the rotational speed (n), and the torque (T) in a shaft is described by the equation

◊ **Power–Torque–Speed Relationship**

$$T = P/n \quad (3-5)$$


In SI units, power is expressed in the unit of *watt* (W) or its equivalent, *newton meter per second* (N · m/s), and the rotational speed is in *radians per second* (rad/s).

In the U.S. Customary Unit System, power is typically expressed as *horsepower*, equal to 550 ft · lb/s. The typical unit for rotational speed is rpm, or revolutions per minute. But the most convenient unit for torque is the pound-inch (lb · in). Considering all of these quantities and making the necessary conversions of units, we use the following formula to compute the torque (in lb · in) in a shaft carrying a certain power P (in hp) while rotating at a speed of n rpm.


◊ **P–T–n Relationship for U.S. Customary Units**

$$T = 63\,000 P/n \quad (3-6)$$


The resulting torque will be in lb · in. You should verify the value of the constant, 63 000.

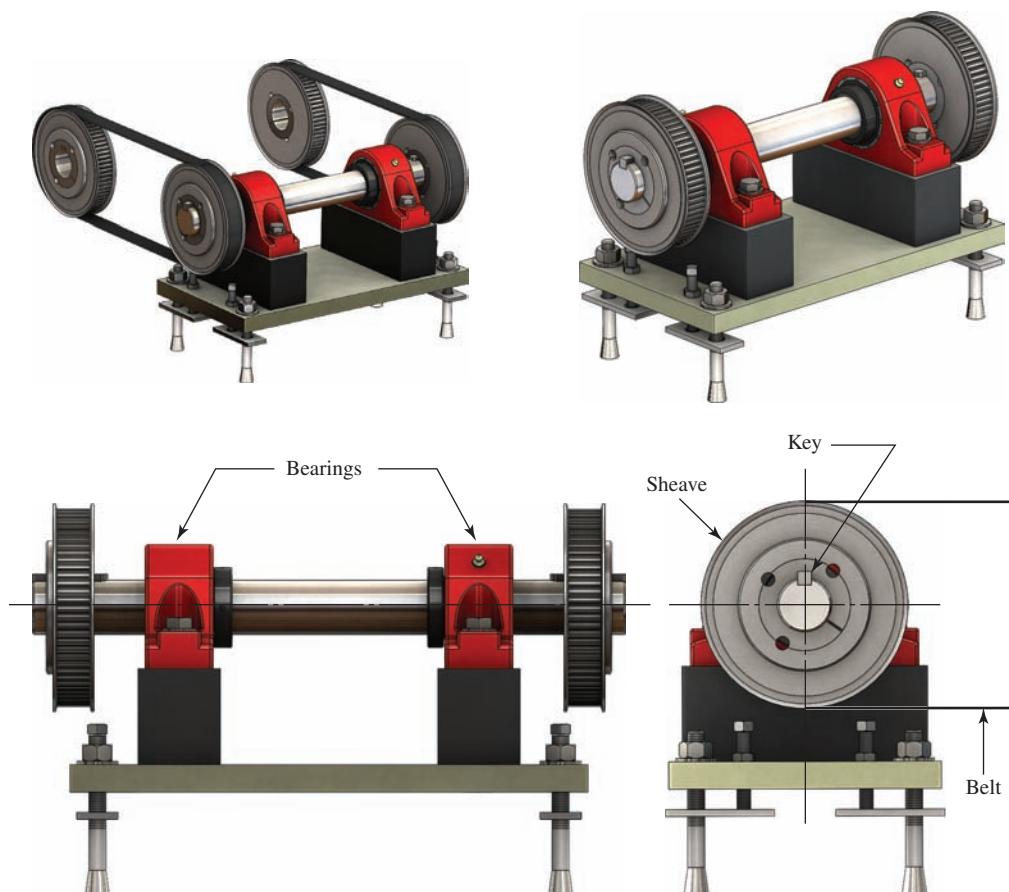

(a) Shaft/sheave arrangement

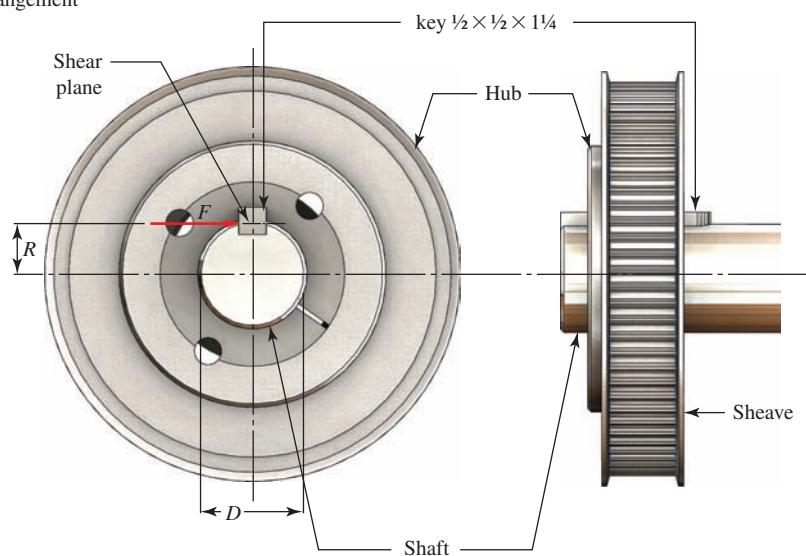

(b) Enlarged view of hub/shaft/key

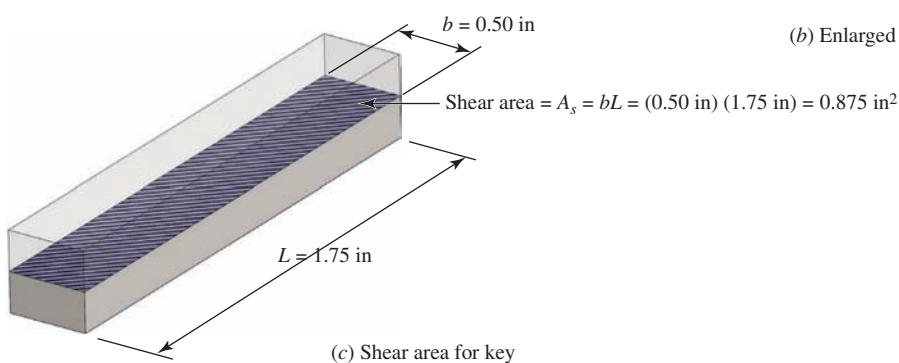

(c) Shear area for key

FIGURE 3–7 Direct shear on a key

**Example Problem
3–3**

Figure 3–7 shows a shaft carrying two sprockets for synchronous belt drives that are keyed to the shaft. Figure 3–7 (b) shows that a force F is transmitted from the shaft to the hub of the sprocket through a square key. The shaft has a diameter of 2.25 in and transmits a torque of 14 063 lb·in. The key has a square cross section, 0.50 in on a side, and a length of 1.75 in. Compute the force on the key and the shear stress caused by this force.

Solution

| | |
|-----------|---|
| Objective | Compute the force on the key and the shear stress. |
| Given | Layout of shaft, key, and hub shown in Figure 3–7. Torque = $T = 14\ 063 \text{ lb}\cdot\text{in}$; key dimensions = 0.5 in \times 0.5 in \times 1.75 in. Shaft diameter = $D = 2.25 \text{ in}$; radius = $R = D/2 = 1.125 \text{ in}$. |
| Analysis | Torque $T = \text{force } F \times \text{radius } R$. Then $F = T/R$. Use equation (3–4) to compute shearing stress: $\tau = F/A_s$. Shear area is the cross section of the key at the interface between the shaft and the hub: $A_s = bL$. |
| Results | $F = T/R = (14\ 063 \text{ lb}\cdot\text{in})/(1.125 \text{ in}) = 12\ 500 \text{ lb}$ $A_s = bL = (0.50 \text{ in})(1.75 \text{ in}) = 0.875 \text{ in}^2$ $\tau = F/A = (12\ 500 \text{ lb})/(0.875 \text{ in}^2) = 14\ 300 \text{ lb/in}^2$ |
| Comment | This level of shearing stress will be uniform on all parts of the cross section of the key. |

**Example Problem
3–4**

Compute the torque on a shaft transmitting 750 W of power while rotating at 183 rad/s. (*Note:* This is equivalent to the output of a 1.0-hp, 4-pole electric motor, operating at its rated speed of 1750 rpm. See Chapter 21.)

Solution

| | |
|-----------|---|
| Objective | Compute the torque T on the shaft. |
| Given | Power = $P = 750 \text{ W} = 750 \text{ N}\cdot\text{m/s}$. Rotational speed = $n = 183 \text{ rad/s}$. |
| Analysis | Use Equation (3–5). |
| Results | $T = P/n = (750 \text{ N}\cdot\text{m/s})/(183 \text{ rad/s})$ $T = 4.10 \text{ N}\cdot\text{m/rad} = 4.10 \text{ N}\cdot\text{m}$ |
| Comments | In such calculations, the unit of $\text{N}\cdot\text{m/rad}$ is dimensionally correct, and some advocate its use. Most, however, consider the radian to be dimensionless, and thus torque is expressed in $\text{N}\cdot\text{m}$ or other familiar units of force times distance. |

**Example Problem
3–5**

Compute the torque on a shaft transmitting 1.0 hp while rotating at 1750 rpm. Note that these conditions are approximately the same as those for which the torque was computed in Example Problem 3–4 using SI units.

Solution

| | |
|-----------|---|
| Objective | Compute the torque on the shaft. |
| Given | $P = 1.0 \text{ hp}; n = 1750 \text{ rpm}$. |
| Analysis | Use Equation (3–6). |
| Results | $T = 63\ 000 \text{ P/n} = [63\ 000(1.0)]/1750 = 36.0 \text{ lb}\cdot\text{in}$ |

3–8 SHEAR STRESS DUE TO TORSIONAL LOAD

When a *torque*, or twisting moment, is applied to a member, it tends to deform by twisting, causing a rotation of one part of the member relative to another. Such twisting causes a shear stress in the member. For a small element

of the member, the nature of the stress is the same as that experienced under direct shear stress. However, in *torsional shear*, the distribution of stress is not uniform across the cross section.

The most frequent case of torsional shear in machine design is that of a round circular shaft transmitting power. Chapter 12 covers shaft design.

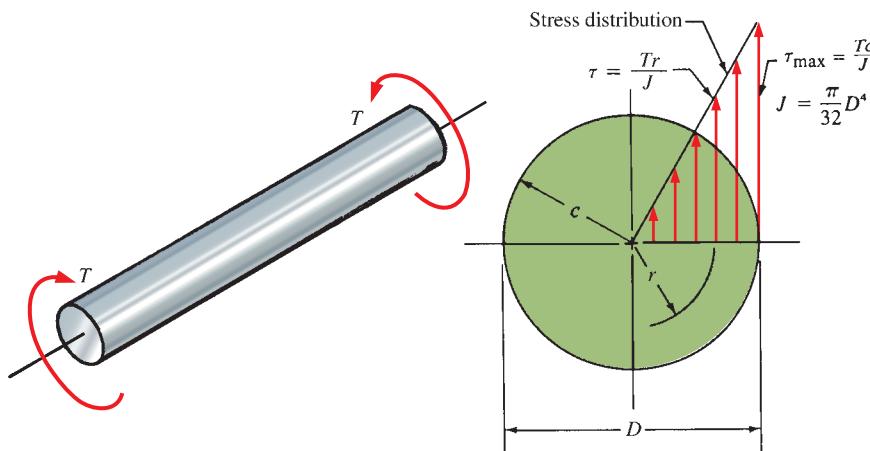


FIGURE 3–8 Stress distribution in a solid shaft

Torsional Shear Stress Formula

When subjected to a torque, the outer surface of a solid round shaft experiences the greatest shearing strain and therefore the largest torsional shear stress. See Figure 3–8. The value of the maximum torsional shear stress is found from

♦ Maximum Torsional Shear Stress in a Circular Shaft

$$\tau_{\max} = Tc/J \quad (3-7)$$

where c = radius of the shaft to its outside surface

J = polar moment of inertia

See Appendix 1 for formulas for J .

If it is desired to compute the torsional shear stress at some point inside the shaft, the more general formula is used:

♦ General Formula for Torsional Shear Stress

$$\tau = Tr/J \quad (3-8)$$

where r = radial distance from the center of the shaft to the point of interest

Figure 3–8 shows graphically that this equation is based on the linear variation of the torsional shear stress from zero at the center of the shaft to the maximum value at the outer surface.

Equations (3–7) and (3–8) apply also to hollow shafts (Figure 3–9 shows the distribution of shear stress). Again note that the maximum shear stress occurs at the outer surface. Also note that the entire cross section carries a relatively high stress level. As a result, the hollow shaft is more efficient. Notice that the material near the center of the solid shaft is not highly stressed.

For design, it is convenient to define the *polar section modulus*, Z_p :

♦ Polar Section Modulus

$$Z_p = J/c \quad (3-9)$$

Then the equation for the maximum torsional shear stress is

$$\tau_{\max} = T/Z_p \quad (3-10)$$

Formulas for the polar section modulus are also given in Appendix 1. This form of the torsional shear stress equation is useful for design problems because the polar section modulus is the only term related to the geometry of the cross section.

Example Problem 3–6

Compute the maximum torsional shear stress in a shaft having a diameter of 10 mm when it carries a torque of 4.10 N·m.

| | | |
|-----------------|-----------|---|
| Solution | Objective | Compute the torsional shear stress in the shaft. |
| | Given | Torque = $T = 4.10 \text{ N}\cdot\text{m}$; shaft diameter = $D = 10 \text{ mm}$. c = radius of the shaft = $D/2 = 5.0 \text{ mm}$. |
| | Analysis | Use Equation (3–7) to compute the torsional shear stress: $\tau_{\max} = Tc/J$. J is the polar moment of inertia for the shaft: $J = \pi D^4/32$ (see Appendix 1). |
| | Results | $J = \pi D^4/32 = [(\pi)(10 \text{ mm})^4]/32 = 982 \text{ mm}^4$ $\tau_{\max} = \frac{(4.10 \text{ N}\cdot\text{m})(5.0 \text{ mm})10^3 \text{ mm}}{982 \text{ mm}^4} = 20.9 \text{ N/mm}^2 = 20.9 \text{ MPa}$ |
| | Comment | The maximum torsional shear stress occurs at the outside surface of the shaft around its entire circumference. |

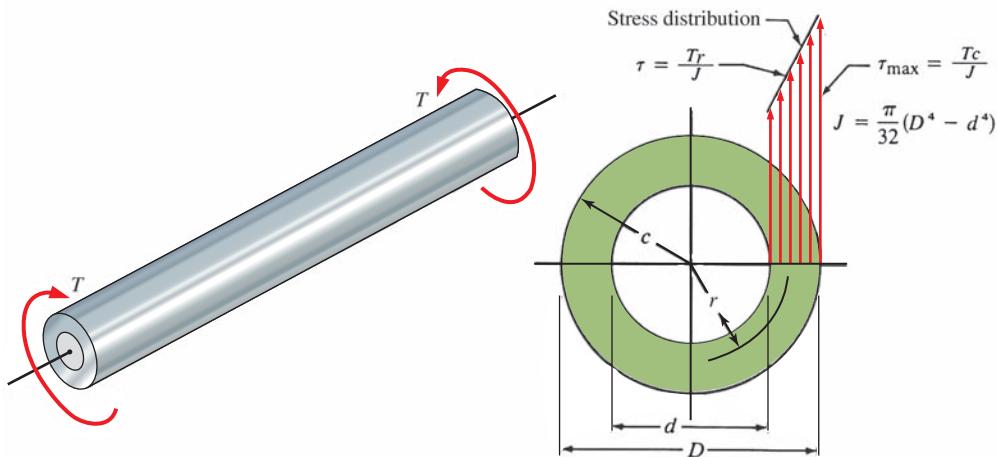


FIGURE 3-9 Stress distribution in a hollow shaft

3-9 TORSIONAL DEFORMATION

When a shaft is subjected to a torque, it undergoes a twisting in which one cross section is rotated relative to other cross sections in the shaft. The angle of twist is computed from

▷ Torsional Deformation

$$\theta = TL/GJ \quad (3-11)$$

Example Problem

3-7

Compute the angle of twist of a 10-mm-diameter shaft carrying 4.10 N·m of torque if it is 250 mm long and made of steel with $G = 80$ GPa. Express the result in both radians and degrees.

Solution

Objective Compute the angle of twist in the shaft.

Given Torque = $T = 4.10$ N·m; length = $L = 250$ mm.
Shaft diameter = $D = 10$ mm; $G = 80$ GPa.

Analysis Use Equation (3-11). For consistency, let $T = 4.10 \times 10^3$ N·mm and $G = 80 \times 10^3$ N/mm². From Example Problem 3-6, $J = 982$ mm⁴.

Results

$$\theta = \frac{TL}{GJ} = \frac{(4.10 \times 10^3 \text{ N} \cdot \text{mm})(250 \text{ mm})}{(80 \times 10^3 \text{ N/mm}^2)(982 \text{ mm}^4)} = 0.013 \text{ rad}$$

Using π rad = 180°,

$$\theta = (0.013 \text{ rad})(180^\circ/\pi \text{ rad}) = 0.75^\circ$$

Comment Over the length of 250 mm, the shaft twists 0.75°.

3-10 TORSION IN MEMBERS HAVING NON-CIRCULAR CROSS SECTIONS

The behavior of members having noncircular cross sections when subjected to torsion is radically different from that for members having circular cross sections. However, the factors of most use in machine design are the maximum stress and the total angle of twist for such

where θ = angle of twist (radians)

L = length of the shaft over which the angle of twist is being computed

G = modulus of elasticity of the shaft material in shear

members. The formulas for these factors can be expressed in similar forms to the formulas used for members of circular cross section (solid and hollow round shafts).

The following two formulas can be used:

▷ Torsional Shear Stress

$$\tau_{\max} = T/Q \quad (3-12)$$

| Cross-sectional shape | $K = \text{for use in } \theta = TL/GK$ $Q = \text{for use in } \tau = T/Q$ | Colored dot (●) denotes location of τ_{\max} | | | | | | | | | | | | | | | | | | | | | |
|--|---|--|-------|------|------|------|-----|-----|-----|-------|------|------|------|------|------|------|-------|------|------|------|------|------|------|
| Square | $K = 0.141a^4$ $Q = 0.208a^3$ | ● at midpoint of each side τ_{\max} at midpoint of each side | | | | | | | | | | | | | | | | | | | | | |
| Rectangle | $K = bh^3 \left[\frac{1}{3} - 0.21 \frac{h}{b} \left(1 - \frac{(h/b)^4}{12} \right) \right]$ $Q = \frac{bh^2}{[3 + 1.8(h/b)]}$ | (Approximate; within $\approx 5\%$) ● at midpoint of long sides τ_{\max} at midpoint of long sides | | | | | | | | | | | | | | | | | | | | | |
| Triangle (equilateral) | $K = 0.0217a^4$ $Q = 0.050a^3$ | | | | | | | | | | | | | | | | | | | | | | |
| Shaft with One Flat | $K = C_1 r^4$ $Q = C_2 r^3$ | <table border="1"> <tr> <td>h/r</td> <td>0</td> <td>0.2</td> <td>0.4</td> <td>0.6</td> <td>0.8</td> <td>1.0</td> </tr> <tr> <td>C_1</td> <td>0.30</td> <td>0.51</td> <td>0.78</td> <td>1.06</td> <td>1.37</td> <td>1.57</td> </tr> <tr> <td>C_2</td> <td>0.35</td> <td>0.51</td> <td>0.70</td> <td>0.92</td> <td>1.18</td> <td>1.57</td> </tr> </table> | h/r | 0 | 0.2 | 0.4 | 0.6 | 0.8 | 1.0 | C_1 | 0.30 | 0.51 | 0.78 | 1.06 | 1.37 | 1.57 | C_2 | 0.35 | 0.51 | 0.70 | 0.92 | 1.18 | 1.57 |
| h/r | 0 | 0.2 | 0.4 | 0.6 | 0.8 | 1.0 | | | | | | | | | | | | | | | | | |
| C_1 | 0.30 | 0.51 | 0.78 | 1.06 | 1.37 | 1.57 | | | | | | | | | | | | | | | | | |
| C_2 | 0.35 | 0.51 | 0.70 | 0.92 | 1.18 | 1.57 | | | | | | | | | | | | | | | | | |
| Shaft with Two Flats | $K = C_3 r^4$ $Q = C_4 r^3$ | <table border="1"> <tr> <td>h/r</td> <td>0.5</td> <td>0.6</td> <td>0.7</td> <td>0.8</td> <td>0.9</td> <td>1.0</td> </tr> <tr> <td>C_3</td> <td>0.44</td> <td>0.67</td> <td>0.93</td> <td>1.19</td> <td>1.39</td> <td>1.57</td> </tr> <tr> <td>C_4</td> <td>0.47</td> <td>0.60</td> <td>0.81</td> <td>1.02</td> <td>1.25</td> <td>1.57</td> </tr> </table> | h/r | 0.5 | 0.6 | 0.7 | 0.8 | 0.9 | 1.0 | C_3 | 0.44 | 0.67 | 0.93 | 1.19 | 1.39 | 1.57 | C_4 | 0.47 | 0.60 | 0.81 | 1.02 | 1.25 | 1.57 |
| h/r | 0.5 | 0.6 | 0.7 | 0.8 | 0.9 | 1.0 | | | | | | | | | | | | | | | | | |
| C_3 | 0.44 | 0.67 | 0.93 | 1.19 | 1.39 | 1.57 | | | | | | | | | | | | | | | | | |
| C_4 | 0.47 | 0.60 | 0.81 | 1.02 | 1.25 | 1.57 | | | | | | | | | | | | | | | | | |
| Hollow Rectangle | $K = \frac{2t(a-t)^2(b-t)^2}{(a+b-2t)}$ $Q = 2t(a-t)(b-t)$ | Gives average stress; good approximation of maximum stress if t is small—thin-walled tube Inner corners should have generous fillets | | | | | | | | | | | | | | | | | | | | | |
| Split Tube Mean radius (r) | $K = 2\pi r t^3 / 3$ $Q = \frac{4\pi^2 r^2 t^2}{(6\pi r + 1.8t)}$ | t must be small—thin-walled tube | | | | | | | | | | | | | | | | | | | | | |

FIGURE 3–10 Methods for determining values for K and Q for several types of cross sections**Deflection for Noncircular Sections**

$$\theta = TL/GK \quad (3-13)$$

Note that Equations (3–12) and (3–13) are similar to Equations (3–10) and (3–11), with the substitution of Q for Z_p and K for J . Refer Figure 3–10 for the methods of

determining the values for K and Q for several types of cross sections useful in machine design. These values are appropriate only if the ends of the member are free to deform. If either end is fixed, as by welding to a solid structure, the resulting stress and angular twist are quite different. (See References 1–3, 6, and 7.)

Example Problem 3–8 A 2.50-in-diameter shaft carrying a chain sprocket has one end milled in the form of a square to permit the use of a hand crank. The square is 1.75 in on a side. Compute the maximum shear stress on the square part of the shaft when a torque of 15 000 lb·in is applied.

Also, if the length of the square part is 8.00 in, compute the angle of twist over this part. The shaft material is steel with $G = 11.5 \times 10^6$ psi.

Solution

Objective Compute the maximum shear stress and the angle of twist in the shaft.

Given Torque = $T = 15\,000 \text{ lb}\cdot\text{in}$; length = $L = 8.00 \text{ in}$.
The shaft is square; thus, $a = 1.75 \text{ in}$.
 $G = 11.5 \times 10^6 \text{ psi}$.

Analysis Figure 3–10 shows the methods for calculating the values for Q and K for use in Equations (3–12) and (3–13).

Results $Q = 0.208a^3 = (0.208)(1.75 \text{ in})^3 = 1.115 \text{ in}^3$

$$K = 0.141a^4 = (0.141)(1.75 \text{ in})^4 = 1.322 \text{ in}^4$$

Now the stress and the deflection can be computed.

$$\tau_{\max} = \frac{T}{Q} = \frac{15000 \text{ lb}\cdot\text{in}}{(1.115 \text{ in}^3)} = 13460 \text{ psi}$$

$$\theta = \frac{TL}{GK} = \frac{(15000 \text{ lb}\cdot\text{in})(8.00 \text{ in})}{(11.5 \times 10^6 \text{ lb/in}^2)(1.322 \text{ in}^4)} = 0.0079 \text{ rad}$$

Convert the angle of twist to degrees:

$$\theta = (0.0079 \text{ rad})(180^\circ/\pi \text{ rad}) = 0.452^\circ$$

Comments Over the length of 8.00 in, the square part of the shaft twists 0.452°. The maximum shear stress is 13460 psi, and it occurs at the midpoint of each side as shown in Figure 3–10.

3-11 TORSION IN CLOSED, THIN-WALLED TUBES

A general approach for closed, thin-walled tubes of virtually any shape uses Equations (3–12) and (3–13) with special methods of evaluating K and Q . Figure 3–11 shows such a tube having a constant wall thickness. The values of K and Q are

$$K = 4A^2t/U \quad (3-14)$$

$$Q = 2tA \quad (3-15)$$

where A = area enclosed by the median boundary (indicated by the dashed line in Figure 3–11)

t = wall thickness (which must be uniform and thin)

U = length of the median boundary

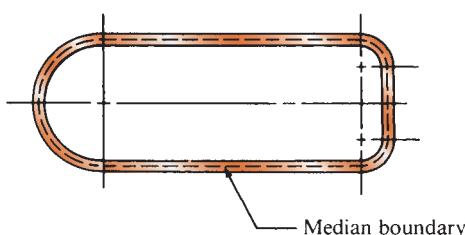


FIGURE 3–11 Closed, thin-walled tube with a constant wall thickness

The shear stress computed by this approach is the *average stress* in the tube wall. However, if the wall thickness t is small (a thin wall), the stress is nearly uniform throughout the wall, and this approach will yield a close approximation of the maximum stress. For the analysis of tubular sections having nonuniform wall thickness, see References 1–3, 6, and 7.

To design a member to resist torsion only, or torsion and bending combined, it is advisable to select hollow tubes, either round or rectangular, or some other closed shape. They possess good efficiency both in bending and in torsion.

3-12 TORSION IN OPEN, THIN-WALLED TUBES

The term *open tube* refers to a shape that appears to be tubular but is not completely closed. For example, some tubing is manufactured by starting with a thin, flat strip of steel that is roll-formed into the desired shape (circular, rectangular, square, and so on). Then the seam is welded along the entire length of the tube. It is interesting to compare the properties of the cross section of such a tube before and after it is welded. The following example problem illustrates the comparison for a particular size of circular tubing.

Example Problem 3-9

Figure 3–12 shows a tube before [Part (b)] and after [Part (a)] the seam is welded. Compare the stiffness and the strength of each shape.

Solution

Objective Compare the torsional stiffness and the strength of the closed tube of Figure 3–12(a) with those of the open-seam (split) tube shown in Figure 3–12(b).

Given The tube shapes are shown in Figure 3–12. Both have the same length, diameter, and wall thickness, and both are made from the same material.

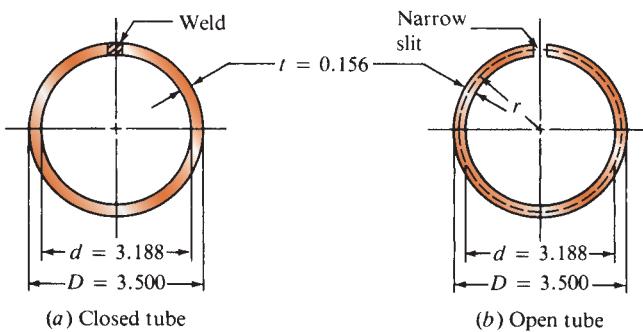


FIGURE 3-12 Comparison of closed and open tubes

Analysis Equation (3-13) gives the angle of twist for a noncircular member and shows that the angle is inversely proportional to the value of K . Similarly, Equation (3-11) shows that the angle of twist for a hollow circular tube is inversely proportional to the polar moment of inertia J . All other terms in the two equations are the same for each design. Therefore, the ratio of θ_{open} to θ_{closed} is equal to the ratio J/K . From Appendix 1, we find

$$J = \pi(D^4 - d^4)/32$$

From Figure 3-10, we find

$$K = 2\pi r t^3/3$$

Using similar logic, Equations (3-12) and (3-10) show that the maximum torsional shear stress is inversely proportional to Q and Z_p for the open and closed tubes, respectively. Then we can compare the strengths of the two forms by computing the ratio Z_p/Q . By Equation (3-9), we find that

$$Z_p = J/c = J/(D/2)$$

The equation for Q for the split tube is listed in Figure 3-10.

Results We make the comparison of torsional stiffness by computing the ratio J/K . For the closed, hollow tube,

$$J = \pi(D^4 - d^4)/32$$

$$J = \pi(3.500^4 - 3.188^4)/32 = 4.592 \text{ in}^4$$

For the open tube before the slit is welded, from Figure 3-10,

$$K = 2\pi r t^3/3$$

$$K = [(2)(\pi)(1.672)(0.156)^3]/3 = 0.0133 \text{ in}^4$$

$$\text{Ratio} = J/K = 4.592/0.0133 = 345$$

Then we make the comparison of the strengths of the two forms by computing the ratio Z_p/Q .

The value of J has already been computed to be 4.592 in^4 . Then

$$Z_p = J/c = J/(D/2) = (4.592 \text{ in}^4)/[(3.500 \text{ in})/2] = 2.624 \text{ in}^3$$

For the open tube,

$$Q = \frac{4\pi^2 r^2 t^2}{(6\pi r + 1.8t)} = \frac{4\pi^2 (1.672 \text{ in})^2 (0.156 \text{ in})^2}{[6\pi(1.672 \text{ in}) + 1.8(0.156 \text{ in})]} = 0.0845 \text{ in}^3$$

Then the strength comparison is

$$\text{Ratio} = Z_p/Q = 2.624/0.0845 = 31.1$$

Comments Thus, for a given applied torque, the slit tube would twist 345 times as much as the closed tube. The stress in the slit tube would be 31.1 times higher than in the closed tube. Also note that if the material for the tube is thin, it will likely buckle at a relatively low stress level, and the tube will collapse suddenly. This comparison shows the dramatic superiority of the closed form of a hollow section to an open form. A similar comparison could be made for shapes other than circular.

3-13 SHEAR STRESS DUE TO BENDING

A beam carrying loads transverse to its axis will experience shearing forces, denoted by V . In the analysis of beams, it is usual to compute the variation in shearing force across the entire length of the beam and to draw the *shearing force diagram*. Then the resulting vertical shearing stress can be computed from

◊ Vertical Shearing Stress in Beams

$$\tau = VQ/It \quad (3-16)$$

where I = rectangular moment of inertia of the cross section of the beam

t = thickness of the section at the place where the shearing stress is to be computed

Q = *first moment*, with respect to the overall centroidal axis, of the area of that part of the cross section that lies away from the axis where the shearing stress is to be computed.

To calculate the value of Q , we define it by the following equation,

◊ First Moment of the Area

$$Q = A_p \bar{y} \quad (3-17)$$

where A_p = that part of the area of the section above the place where the stress is to be computed

\bar{y} = distance from the neutral axis of the section to the centroid of the area A_p

In some books or references, and in earlier editions of this book, Q was called the *statical moment*. Here we will use the term *first moment of the area*.

For most section shapes, the maximum vertical shearing stress occurs at the centroidal axis. Specifically, if the thickness is not less at a place away from the centroidal axis, then it is assured that the maximum vertical shearing stress occurs at the centroidal axis.

Figure 3-13 shows three examples of how Q is computed in typical beam cross sections. In each, the maximum vertical shearing stress occurs at the neutral axis.

Note that the vertical shearing stress is equal to the *horizontal shearing stress* because any element of material subjected to a shear stress on one face must have a shear stress of the same magnitude on the adjacent face

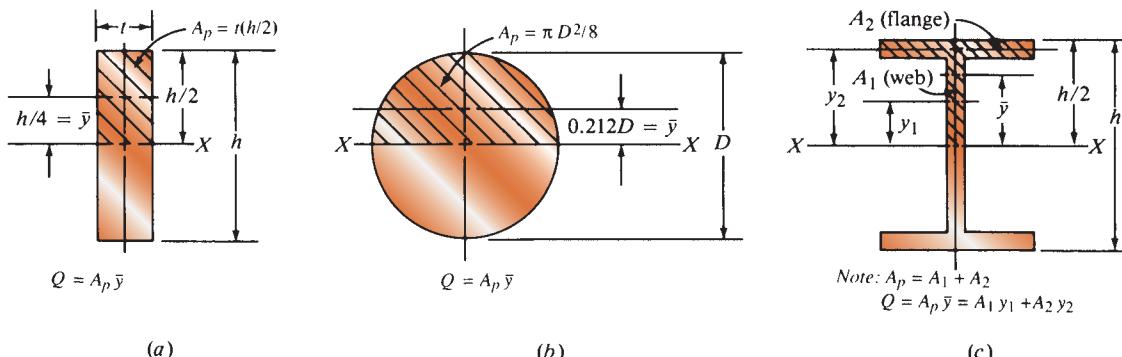


FIGURE 3-13 Illustrations of A_p and \bar{y} used to compute Q for three shapes

Example Problem

3-10 Figure 3-14 shows a simply supported beam carrying two concentrated loads. The shearing force diagram is shown, along with the rectangular shape and size of the cross section of the beam. The stress distribution is parabolic, with the maximum stress occurring at the neutral axis. Use Equation (3-16) to compute the maximum shearing stress in the beam.

Solution

Objective Compute the maximum shearing stress τ in the beam in Figure 3-14.

Given The beam shape is rectangular: $h = 8.00$ in; $t = 2.00$ in.

Maximum shearing force = $V = 1000$ lb at all points between A and B .

Analysis Use Equation (3-16) to compute τ . V and t are given. From Appendix 1,

$$I = th^3/12$$

The value of the first moment of the area Q can be computed from Equation (3-17). For the rectangular cross section shown in Figure 3-13(a), $A_p = t(h/2)$ and $\bar{y} = h/4$. Then

$$Q = A_p \bar{y} = (th/2)(h/4) = th^2/8$$

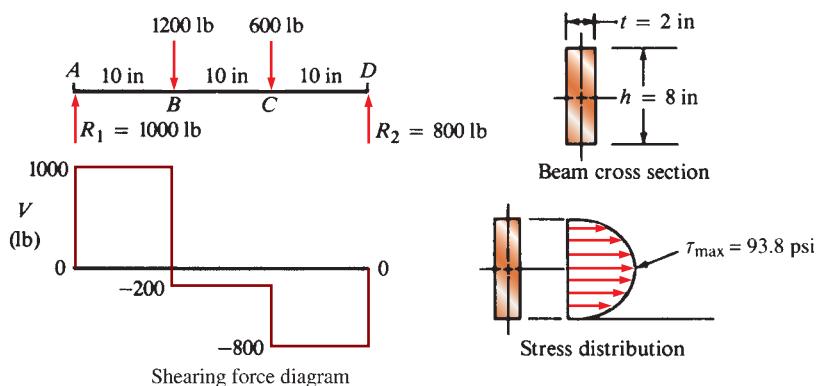


FIGURE 3-14 Shearing force diagram and vertical shearing stress for beam

Results

$$I = th^3/12 = (2.0 \text{ in})(8.0 \text{ in})^3/12 = 85.3 \text{ in}^4$$

$$Q = A_p\bar{y} = th^2/8 = (2.0 \text{ in})(8.0 \text{ in})^2/8 = 16.0 \text{ in}^3$$

Then the maximum shearing stress is

$$\tau = \frac{VQ}{It} = \frac{(1000 \text{ lb})(16.0 \text{ in}^3)}{(85.3 \text{ in}^4)(2.0 \text{ in})} = 93.8 \text{ lb/in}^2 = 93.8 \text{ psi}$$

Comments

The maximum shearing stress of 93.8 psi occurs at the neutral axis of the rectangular section as shown in Figure 3-14. The stress distribution within the cross section is generally parabolic, ending with zero shearing stress at the top and bottom surfaces. This is the nature of the shearing stress everywhere between the left support at A and the point of application of the 1200-lb load at B. The maximum shearing stress at any other point in the beam is proportional to the magnitude of the vertical shearing force at the point of interest.

for the element to be in equilibrium. Figure 3-15 shows this phenomenon.

In most beams, the magnitude of the vertical shearing stress is quite small compared with the bending stress (see the following section). For this reason, it is frequently not computed at all. Those cases where it is of importance include the following:

1. When the material of the beam has a relatively low shear strength (such as wood).
2. When the bending moment is zero or small (and thus the bending stress is small), for example, at the ends of simply supported beams and for short beams.
3. When the thickness of the section carrying the shearing force is small, as in sections made from rolled sheet, some extruded shapes, and the web of rolled structural shapes such as wide-flange beams.

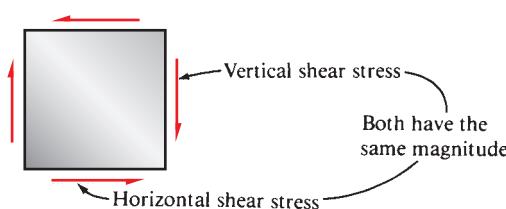


FIGURE 3-15 Shear stresses on an element

3-14 SHEAR STRESS DUE TO BENDING – SPECIAL SHEAR STRESS FORMULAS

Equation (3-16) can be cumbersome because of the need to evaluate the first moment of the area Q . Several commonly used cross sections have special, easy-to-use formulas for the maximum vertical shearing stress:

⇒ τ_{\max} for Rectangle

$$\tau_{\max} = 3V/2A \quad (\text{exact}) \quad (3-18)$$

where A = total cross-sectional area of the beam

⇒ τ_{\max} for Circle

$$\tau_{\max} = 4V/3A \quad (\text{exact}) \quad (3-19)$$

⇒ τ_{\max} for I-Shape

$$\tau_{\max} \approx V/th \quad (\text{approximate: about 15\% low}) \quad (3-20)$$

where t = web thickness

h = height of the web (e.g., a wide-flange beam)

⇒ τ_{\max} for Thin-walled Tube

$$\tau_{\max} \approx 2V/A \quad (\text{approximate: a little high}) \quad (3-21)$$

In all of these cases, the maximum shearing stress occurs at the neutral axis.

**Example Problem
3–11**

Compute the maximum shearing stress in the beam described in Example Problem 3–10 using the special shearing stress formula for a rectangular section.

Solution

Objective Compute the maximum shearing stress τ in the beam in Figure 3–14.

Given The data are the same as stated in Example Problem 3–10 and as shown in Figure 3–14.

Analysis Use Equation (3–18) to compute $\tau = 3V/2A$. For the rectangle, $A = th$.

Results

$$\tau_{\max} = \frac{3V}{2A} = \frac{3(1000 \text{ lb})}{2[(2.0 \text{ in})(8.0 \text{ in})]} = 93.8 \text{ psi}$$


Comment This result is the same as that obtained for Example Problem 3–10, as expected.

3–15 NORMAL STRESS DUE TO BENDING

A *beam* is a member that carries loads transverse to its axis. Such loads produce bending moments in the beam, which result in the development of bending stresses. Bending stresses are *normal stresses*, that is, either tensile or compressive. The maximum bending stress in a beam cross section will occur in the part farthest from the neutral axis of the section. At that point, the *flexure formula* gives the stress:

Flexure Formula for Maximum Bending Stress

$$\sigma = Mc/I \quad (3-22)$$

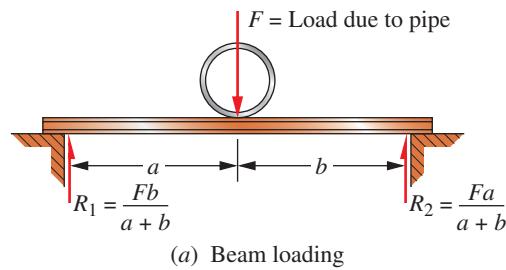

where M = magnitude of the bending moment at the section

I = moment of inertia of the cross section with respect to its neutral axis

c = distance from the neutral axis to the outermost fiber of the beam cross section

The magnitude of the bending stress varies linearly within the cross section from a value of zero at the neutral axis, to the maximum tensile stress on one side of the neutral axis, and to the maximum compressive stress on the other side. Figure 3–16 shows a typical stress distribution in a beam cross section. Note that the stress distribution is independent of the shape of the cross section.

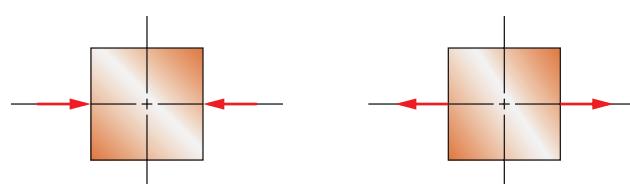
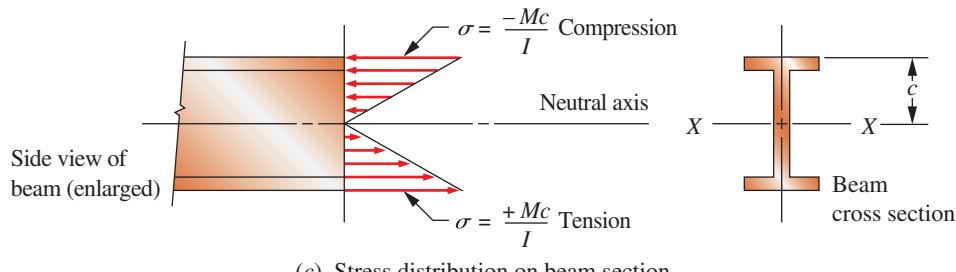
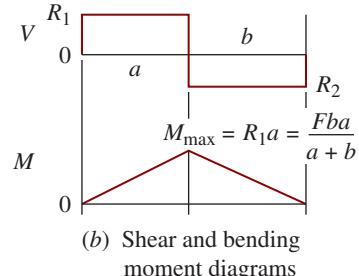


FIGURE 3–16 Typical bending stress distribution in a beam cross section

Note that *positive bending* occurs when the deflected shape of the beam is concave upward, resulting in compression on the upper part of the cross section and tension on the lower part. Conversely, *negative bending* causes the beam to be concave downward.

The flexure formula was developed subject to the following conditions:

1. The beam must be in pure bending. Shearing stresses must be zero or negligible. No axial loads are present.
2. The beam must not twist or be subjected to a torsional load.
3. The material of the beam must obey Hooke's law.
4. The modulus of elasticity of the material must be the same in both tension and compression.
5. The beam is initially straight and has a constant cross section.
6. Any plane cross section of the beam remains plane during bending.
7. No part of the beam shape fails because of local buckling or wrinkling.

If condition 1 is not strictly met, you can continue the analysis by using the method of combined stresses presented in Chapter 4. In most practical beams, which are long relative to their height, shear stresses are

sufficiently small as to be negligible. Furthermore, the maximum bending stress occurs at the outermost fibers of the beam section, where the shear stress is in fact zero. A beam with varying cross section, which would violate condition 5, can be analyzed by the use of stress concentration factors discussed later in this chapter.

For design, it is convenient to define the term *section modulus*, S , as

$$S = I/c \quad (3-23)$$

The flexure formula then becomes

⇒ **Flexure Formula**

$$\sigma = M/S \quad (3-24)$$

Since I and c are geometrical properties of the cross section of the beam, S is also. Then, in design, it is usual to define a design stress, σ_d , and, with the bending moment known, solve for S :

⇒ **Required Section Modulus**

$$S = M/\sigma_d \quad (3-25)$$

This results in the required value of the section modulus. From this, the required dimensions of the beam cross section can be determined.

**Example Problem
3-12**

For the beam shown in Figure 3–16, the load F due to the pipe is 12 000 lb. The distances are $a = 4$ ft and $b = 6$ ft. Determine the required section modulus for the beam to limit the stress due to bending to 30 000 psi, the recommended design stress for a typical structural steel in static bending. Then specify the lightest suitable steel beam.

Solution

Objective Compute the required section modulus S for the beam in Figure 3–16.

Given The layout and the loading pattern are shown in Figure 3–16.

Lengths: Overall length = $L = 10$ ft; $a = 4$ ft; $b = 6$ ft.

Load = $F = 12\ 000$ lb.

Design stress = $\sigma_d = 30\ 000$ psi.

Analysis Use Equation (3–25) to compute the required section modulus S . Compute the maximum bending moment that occurs at the point of application of the load using the formula shown in Part (b) of Figure 3–16.

Results

$$M_{max} = R_1 a = \frac{Fba}{a + b} = \frac{(12\ 000 \text{ lb})(6 \text{ ft})(4 \text{ ft})}{(6 \text{ ft} + 4 \text{ ft})} = 28\ 800 \text{ lb}\cdot\text{ft}$$

$$S = \frac{M}{\sigma_d} = \frac{28\ 800 \text{ lb}\cdot\text{ft}}{30\ 000 \text{ lb/in}^2} \frac{12 \text{ in}}{\text{ft}} = 11.5 \text{ in}^3$$

Comments A steel beam section can now be selected from Tables A15–9 and A15–10 that has at least this value for the section modulus. The lightest section, typically preferred, is the W8×15 wide-flange shape with $S = 11.8 \text{ in}^3$.

3-16 BEAMS WITH CONCENTRATED BENDING MOMENTS

Figures 3–16 and 3–17 show beams loaded only with concentrated forces or distributed loads. For such loading in any combination, the moment diagram is

continuous. That is, there are no points of abrupt change in the value of the bending moment. Many machine elements such as cranks, levers, helical gears, and brackets carry loads whose line of action is offset from the centroidal axis of the beam in such a way that a concentrated moment is exerted on the beam.

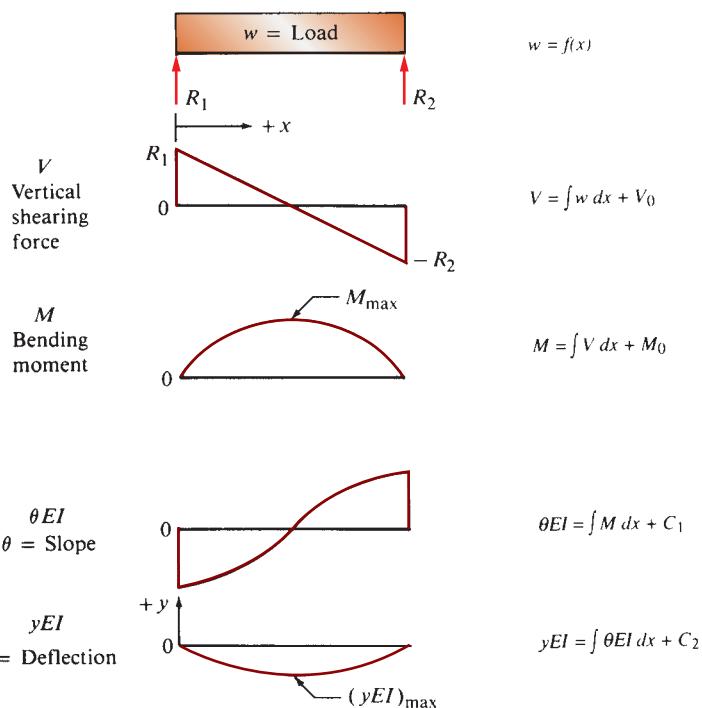


FIGURE 3-17 Relationships of load, vertical shearing force, bending moment, slope of deflected beam shape, and actual deflection curve of a beam

Figures 3-18, 3-19, and 3-20 show three different examples where concentrated moments are created on machine elements. The bell crank in Figure 3-18 pivots

around point O and is used to transfer an applied force to a different line of action. Each arm behaves similar to a cantilever beam, bending with respect to an axis through the pivot. For analysis, we can isolate an arm by making an imaginary cut through the pivot and showing the reaction force at the pivot pin and the internal moment in the arm. The shearing force and bending moment diagrams included in Figure 3-18 show the results, and Example Problem 3-13 gives the details of the analysis. Note the similarity to a cantilever beam with the internal concentrated moment at the pivot reacting to the force, F_2 , acting at the end of the arm.

Figure 3-19 shows a print head for an impact-type printer in which the applied force, F , is offset from the neutral axis of the print head itself. Thus the force creates a concentrated bending moment at the right end where the vertical lever arm attaches to the horizontal part. The free-body diagram shows the vertical arm cut off and an internal axial force and moment replacing the effect of the extended arm. The concentrated moment causes the abrupt change in the value of the bending moment at the right end of the arm as shown in the bending moment diagram. Example Problem 3-14 gives the details of the analysis.

Figure 3-20 shows an isometric view of a crankshaft that is actuated by the vertical force acting at the end of the crank. One result is an applied torque that tends to rotate the shaft ABC clockwise about its x -axis. The reaction torque is shown acting at the forward end of the crank. A second result is that the vertical force acting

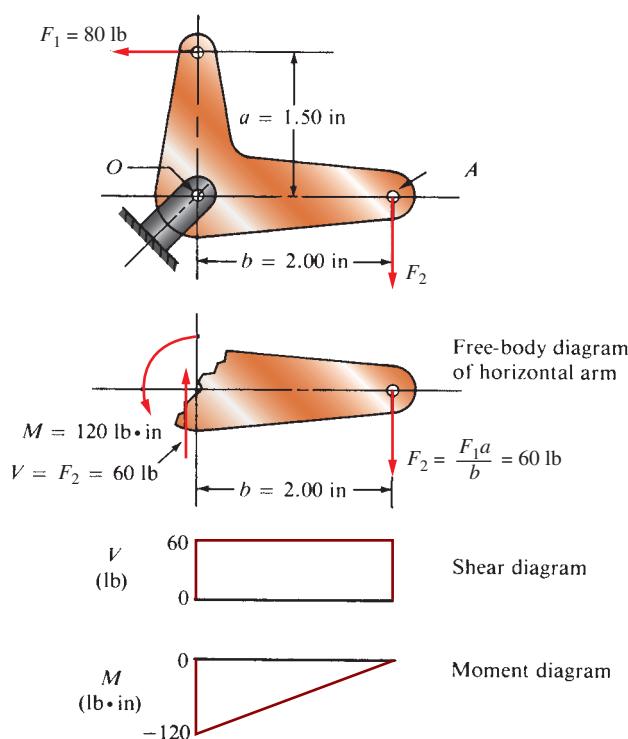


FIGURE 3-18 Bending moment in a bell crank

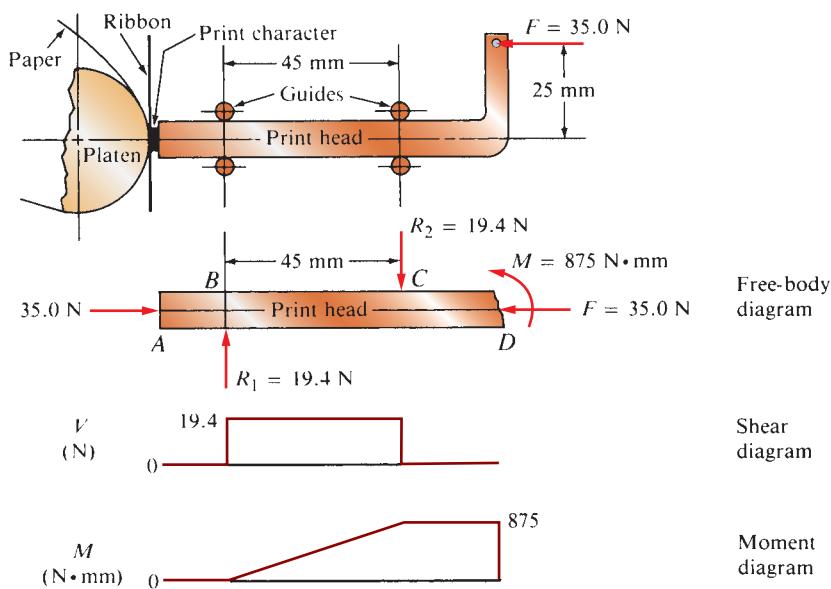


FIGURE 3–19 Bending moment on a print head

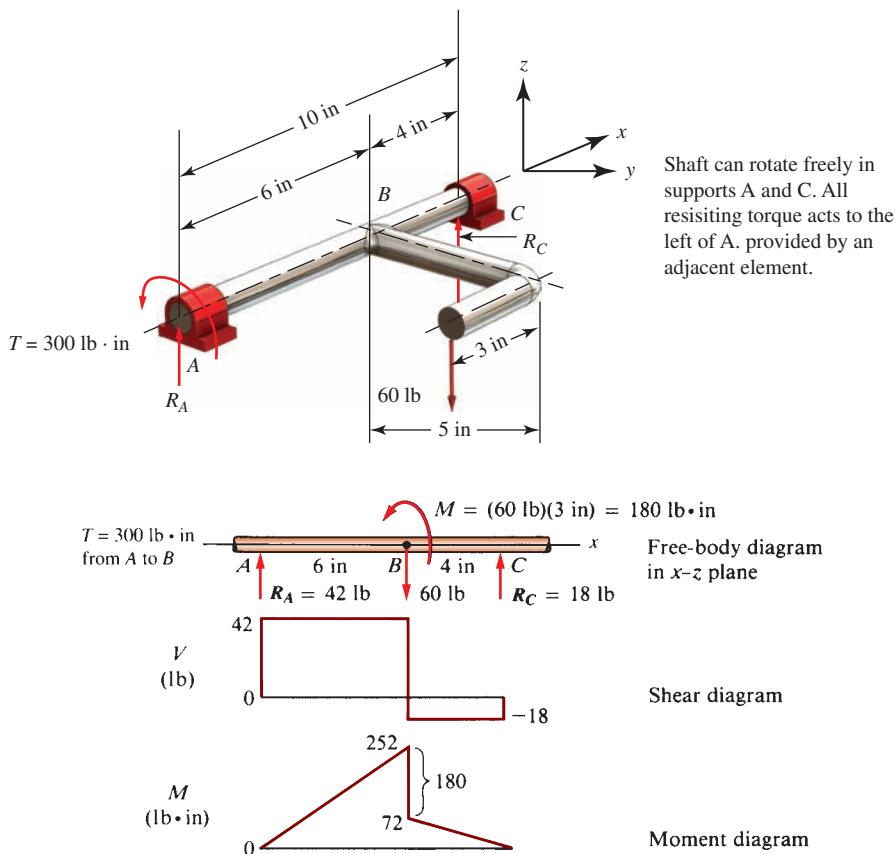


FIGURE 3–20 Bending moment on a shaft carrying a crank

at the end of the crank creates a twisting moment in the rod attached at B and thus tends to bend the shaft ABC in the $x-z$ plane. The twisting moment is treated as a concentrated moment acting at B with the resulting abrupt change in the bending moment at that location as can be seen in the bending moment diagram. Example Problem 3–15 gives the details of the analysis.

When drawing the bending moment diagram for a member to which a concentrated moment is applied, the following sign convention will be used.

When a concentrated bending moment acts on a beam in a counterclockwise direction, the moment diagram drops; when a clockwise concentrated moment acts, the moment diagram rises.

**Example Problem
3–13**

The bell crank shown in Figure 3–18 is part of a linkage in which the 80-lb horizontal force is transferred to F_2 acting vertically. The crank can pivot about the pin at O . Draw a free-body diagram of the horizontal part of the crank from O to A . Then draw the shearing force and bending moment diagrams that are necessary to complete the design of the horizontal arm of the crank.

Solution

- Objective** Draw the free-body diagram of the horizontal part of the crank in Figure 3–18. Draw the shearing force and bending moment diagrams for that part.
- Given** The layout from Figure 3–18.
- Analysis** Use the entire crank first as a free body to determine the downward force F_2 that reacts to the applied horizontal force F_1 of 80 lb by summing moments about the pin at O .
Then create the free-body diagram for the horizontal part by breaking it through the pin and replacing the removed part with the internal force and moment acting at the break.
- Results** We can first find the value of F_2 by summing moments about the pin at O using the entire crank:

$$\begin{aligned} F_1 \cdot a &= F_2 \cdot b \\ F_2 &= F_1(a/b) = 80 \text{ lb}(1.50/2.00) = 60 \text{ lb} \end{aligned}$$

Below the drawing of the complete crank, we have drawn a sketch of the horizontal part, isolating it from the vertical part. The internal force and moment at the cut section are shown. The externally applied downward force F_2 is reacted by the upward reaction at the pin. Also, because F_2 causes a moment with respect to the section at the pin, an internal reaction moment exists, where

$$M = F_2 \cdot b = (60 \text{ lb})(2.00 \text{ in}) = 120 \text{ lb} \cdot \text{in}$$

The shear and moment diagrams can then be shown in the conventional manner. The result looks much like a cantilever that is built into a rigid support. The difference here is that the reaction moment at the section through the pin is developed in the vertical arm of the crank.

- Comments** Note that the shape of the moment diagram for the horizontal part shows that the maximum moment occurs at the section through the pin and that the moment decreases linearly as we move out toward point A . As a result, the shape of the crank is optimized, having its largest cross section (and section modulus) at the section of highest bending moment. You could complete the design of the crank using the techniques reviewed in Section 3–15.

**Example Problem
3–14**

Figure 3–19 represents a print head for a computer printer. The force F moves the print head toward the left against the ribbon, imprinting the character on the paper that is backed up by the platen. Draw the free-body diagram for the horizontal portion of the print head, along with the shearing force and bending moment diagrams.

Solution

- Objective** Draw the free-body diagram of the horizontal part of the print head in Figure 3–19. Draw the shearing force and bending moment diagrams for that part.
- Given** The layout from Figure 3–19.
- Analysis** The horizontal force of 35 N acting to the left is reacted by an equal 35 N horizontal force produced by the platen pushing back to the right on the print head. The guides provide simple supports in the vertical direction. The applied force also produces a moment at the base of the vertical arm where it joins the horizontal part of the print head.
We create the free-body diagram for the horizontal part by breaking it at its right end and replacing the removed part with the internal force and moment acting at the break. The shearing force and bending moment diagrams can then be drawn.
- Results** The free-body diagram for the horizontal portion is shown below the complete sketch. Note that at the right end (section D) of the print head, the vertical arm has been removed and replaced with the internal horizontal force of 35.0 N and a moment of 875 N·mm caused by the 35.0 N force acting 25 mm above it. Also note that the 25 mm-moment arm for the force is taken from the line of action of the force *to the neutral axis of the horizontal part*. The 35.0 N reaction of the platen on the print head tends to place the head in compression over the entire length. The rotational tendency of the moment is reacted by the couple created by R_1 and R_2 acting 45 mm apart at B and C .
Below the free-body diagram is the vertical shearing force diagram in which a constant shear of 19.4 N occurs only between the two supports.

The bending moment diagram can be derived from either the left end or the right end. If we choose to start at the left end at *A*, there is no shearing force from *A* to *B*, and therefore there is no change in bending moment. From *B* to *C*, the positive shear causes an increase in bending moment from 0 to 875 N·mm. Because there is no shear from *C* to *D*, there is no change in bending moment, and the value remains at 875 N·mm. The counterclockwise-directed concentrated moment at *D* causes the moment diagram to drop abruptly, closing the diagram.

Example Problem 3–15

Figure 3–20 shows a crank in which it is necessary to visualize the three-dimensional arrangement. The 60-lb downward force tends to rotate the shaft *ABC* around the *x*-axis. The reaction torque acts only at the end of the shaft outboard of the bearing support at *A*. Bearings *A* and *C* provide simple supports. Draw the complete free-body diagram for the shaft *ABC*, along with the shearing force and bending moment diagrams.

Solution

- Objective** Draw the free-body diagram of the shaft *ABC* in Figure 3–20. Draw the shearing force and bending moment diagrams for that part.
- Given** The layout from Figure 3–20.
- Analysis** The analysis will take the following steps:
1. Determine the magnitude of the torque in the shaft between the left end and point *B* where the crank arm is attached.
 2. Analyze the connection of the crank at point *B* to determine the force and moment transferred to the shaft *ABC* by the crank.
 3. Compute the vertical reactions at supports *A* and *C*.
 4. Draw the shearing force and bending moment diagrams considering the concentrated moment applied at point *B*, along with the familiar relationships between shearing force and bending moments.

Results The free-body diagram is shown as viewed looking at the *x*-*z* plane. Note that the free body must be in equilibrium in all force and moment directions. Considering first the torque (rotating moment) about the *x*-axis, note that the crank force of 60 lb acts 5.0 in from the axis. The torque, then, is

$$T = (60 \text{ lb})(5.0 \text{ in}) = 300 \text{ lb} \cdot \text{in}$$

This level of torque acts from the left end of the shaft to section *B*, where the crank is attached to the shaft.

Now the loading at *B* should be described. One way to do so is to visualize that the crank itself is separated from the shaft and is replaced with a force and moment caused by the crank. First, the downward force of 60 lb pulls down at *B*. Also, because the 60-lb applied force acts 3.0 in to the left of *B*, it causes a concentrated moment in the *x*-*z* plane of 180 lb·in to be applied at *B*.

Both the downward force and the moment at *B* affect the magnitude and direction of the reaction forces at *A* and *C*. First, summing moments about *A*,

$$(60 \text{ lb})(6.0 \text{ in}) - 180 \text{ lb} \cdot \text{in} - R_C(10.0 \text{ in}) = 0$$

$$R_C = [(360 - 180) \text{ lb} \cdot \text{in}] / (10.0 \text{ in}) = 18.0 \text{ lb upward}$$

Now, summing moments about *C*,

$$(60 \text{ lb})(4.0 \text{ in}) + 180 \text{ lb} \cdot \text{in} - R_A(10.0 \text{ in}) = 0$$

$$R_A = [(240 + 180) \text{ lb} \cdot \text{in}] / (10.0 \text{ in}) = 42.0 \text{ lb upward}$$

Now the shear and bending moment diagrams can be completed. The moment starts at zero at the simple support at *A*, rises to 252 lb·in at *B* under the influence of the 42-lb shear force, then drops by 180 lb·in due to the counterclockwise concentrated moment at *B*, and finally returns to zero at the simple support at *C*.

- Comments** In summary, shaft *ABC* carries a torque of 300 lb·in from point *B* to its left end. The maximum bending moment of 252 lb·in occurs at point *B* where the crank is attached. The bending moment then suddenly drops to 72 lb·in under the influence of the concentrated moment of 180 lb·in applied by the crank.

3-17 FLEXURAL CENTER FOR BEAM BENDING

A beam section must be loaded in a way that ensures symmetrical bending; that is, there must be no tendency for the section to twist under the load. Figure 3–21 shows several shapes that are typically used for beams having a vertical axis of symmetry. If the line of action of the loads on such sections passes through the axis of symmetry, then there is no tendency for the section to twist, and the flexure formula applies.

When there is no vertical axis of symmetry, as with the sections shown in Figure 3–22, care must be exercised in placement of the loads. If the line of action of the loads were shown as F_1 in the figure, the beam would twist and bend, so the flexure formula would not give accurate results for the stress in the section. For such sections, the load must be placed in line with the *flexural center*, sometimes called the *shear center*. Figure 3–22 shows the approximate location of the flexural center for these shapes (indicated by the symbol Q). Applying the load in line with Q , as shown with the forces labeled F_2 , would result in pure bending. A table of formulas for the location of the flexural center is available (see Reference 7).

3-18 BEAM DEFLECTIONS

The bending loads applied to a beam cause it to deflect in a direction perpendicular to its axis. A beam that was originally straight will deform to a slightly curved shape. In most cases, the critical factor is either the maximum deflection of the beam or its deflection at specific locations.

Consider the double-reduction speed reducer shown in Figure 3–23. The four gears (A , B , C , and D) are mounted on three shafts, each of which is supported by two bearings. The action of the gears in transmitting power creates a set of forces that in turn act on the shafts to cause bending. One component of the total force on the gear teeth acts in a direction that tends to separate the two gears. Thus, gear A is forced upward, while gear B is forced downward. For good gear performance, the net deflection of one gear relative to the other should not exceed 0.005 in (0.13 mm) for medium-sized industrial gearing.

To evaluate the design, there are many methods of computing shaft deflections. We will review briefly those methods using deflection formulas, superposition, and a general analytical approach.

A set of formulas for computing the deflection of beams at any point or at selected points is useful in many practical problems. Appendix 14 includes several cases.

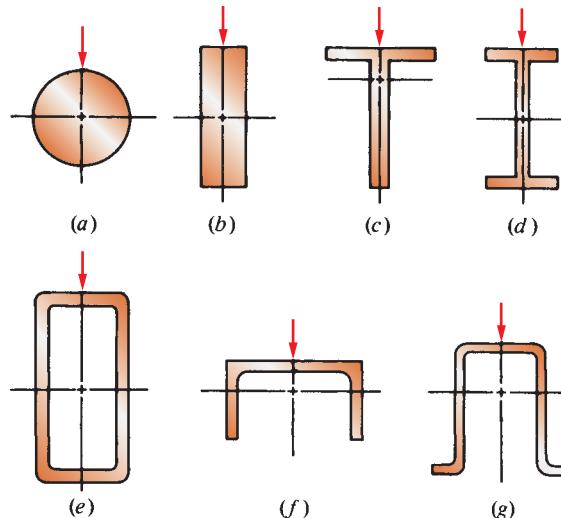


FIGURE 3-21 Symmetrical sections. A load applied through the axis of symmetry results in pure bending in the beam.

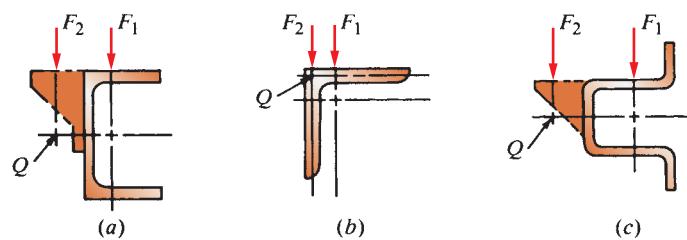


FIGURE 3-22 Nonsymmetrical sections. A load applied as at F_1 would cause twisting; loads applied as at F_2 through the flexural center Q would cause pure bending.

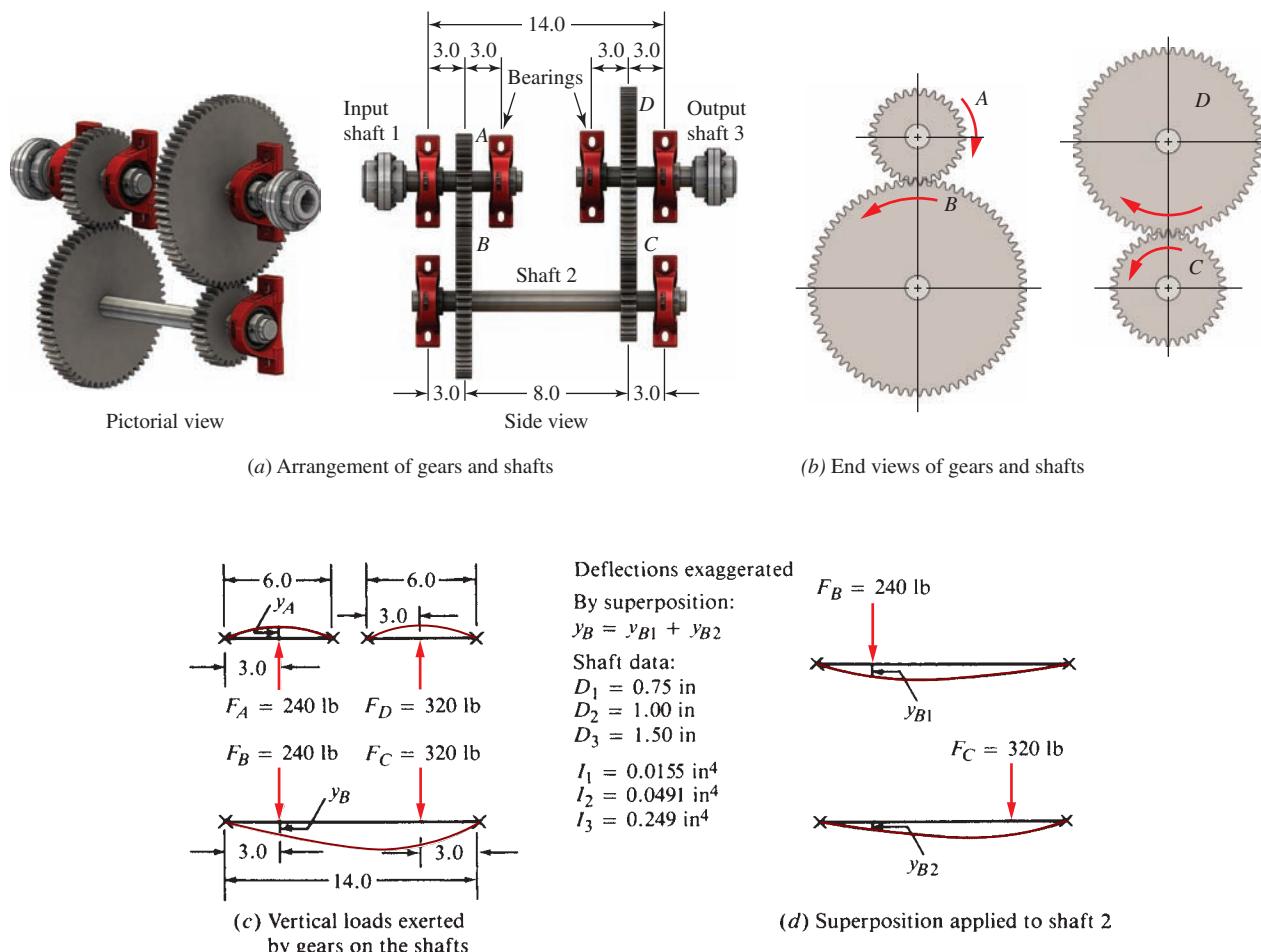


FIGURE 3-23 Shaft deflection analysis for a double-reduction speed reducer

For many additional cases, superposition is useful if the actual loading can be divided into parts that can be computed by available formulas. The deflection for each loading is computed separately, and then the individual deflections are summed at the points of interest.

Many commercially available computer software programs allow the modeling of beams having rather

complex loading patterns and varying geometry. The results include reaction forces, shearing force and bending moment diagrams, and deflections at any point. It is important that you understand the principles of beam deflection, studied in strength of materials and reviewed here, so that you can apply such programs accurately and interpret the results carefully.

Example Problem 3-16

For the two gears, *A* and *B*, in Figure 3-23, compute the relative deflection between them in the plane of the paper that is due to the forces shown in Figure 3-23 (c). These *separating forces*, or *normal forces*, are discussed in Chapters 9 and 10. It is customary to consider the loads at the gears and the reactions at the bearings to be concentrated. The shafts carrying the gears are steel and have uniform diameters as listed in the figure.

Solution

Objective Compute the relative deflection between gears *A* and *B* in Figure 3-23.

Given The layout and loading pattern are shown in Figure 3-23. The separating force between gears *A* and *B* is 240 lb. Gear *A* pushes downward on gear *B*, and the reaction force of gear *B* pushes upward on gear *A*. Shaft 1 has a diameter of 0.75 in and a moment of inertia of 0.0155 in^4 . Shaft 2 has a diameter of 1.00 in and a moment of inertia of 0.0491 in^4 . Both shafts are steel. Use $E = 30 \times 10^6 \text{ psi}$.

Analysis Use the deflection formulas from Appendix 14 to compute the upward deflection of shaft 1 at gear *A* and the downward deflection of shaft 2 at gear *B*. The sum of the two deflections is the total deflection of gear *A* with respect to gear *B*.

Case (a) from Table A14–1 applies to Shaft 1 because there is a single concentrated force acting at the midpoint of the shaft between the supporting bearings. We will call that deflection y_A .

Shaft 2 is a simply supported beam carrying two nonsymmetrical loads. No single formula from Appendix 14 matches that loading pattern. But we can use superposition to compute the deflection of the shaft at gear B by considering the two forces separately as shown in Part (d) of Figure 3–23. Case (b) from Table A14–1 is used for each load.

We first compute the deflection at B due only to the 240-lb force, calling it y_{B1} . Then we compute the deflection at B due to the 320-lb force, calling it y_{B2} . The total deflection at B is $y_B = y_{B1} + y_{B2}$.

Results The deflection of shaft 1 at gear A is

$$y_A = \frac{F_A L_1^3}{48 EI} = \frac{(240)(6.0)^3}{48(30 \times 10^6)(0.0155)} = 0.0023 \text{ in}$$

The deflection of shaft 2 at B due only to the 240-lb force is

$$y_{B1} = -\frac{F_B a^2 b^2}{3 EI_2 L_2} = -\frac{(240)(3.0)^2(11.0)^2}{3(30 \times 10^6)(0.0491)(14)} = -0.0042 \text{ in}$$

The deflection of shaft 2 at B due only to the 320-lb force at C is

$$\begin{aligned} y_{B2} &= -\frac{F_C bx}{6 EI_2 L_2} (L_2^2 - b^2 - x^2) \\ y_{B2} &= -\frac{(320)(3.0)(3.0)}{6(30 \times 10^6)(0.0491)(14)} [(14)^2 - (3.0)^2 - (3.0)^2] \\ y_{B2} &= -0.0041 \text{ in} \end{aligned}$$

Then the total deflection at gear B is

$$y_B = y_{B1} + y_{B2} = -0.0042 - 0.0041 = -0.0083 \text{ in}$$

Because shaft 1 deflects upward and shaft 2 deflects downward, the total relative deflection is the sum of y_A and y_B :

$$y_{\text{total}} = y_A + y_B = 0.0023 + 0.0083 = 0.0106 \text{ in}$$

Comment This deflection is very large for this application. How could the deflection be reduced?

3-19 EQUATIONS FOR DEFLECTED BEAM SHAPE

The general principles relating the deflection of a beam to the loading on the beam and its manner of support are presented here. The result will be a set of relationships among the load, the vertical shearing force, the bending moment, the slope of the deflected beam shape, and the actual deflection curve for the beam. Figure 3–17 shows diagrams for these five factors, with θ as the slope and y indicating deflection of the beam from its initial straight position. The product of modulus of elasticity and the moment of inertia, EI , for the beam is a measure of its stiffness or resistance to bending deflection. It is convenient to combine EI with the slope and deflection values to maintain a proper relationship, as discussed next.

One fundamental concept for beams in bending is

$$\frac{M}{EI} = \frac{d^2y}{dx^2}$$

where M = bending moment

x = position on the beam measured along its length

y = deflection

Thus, if it is desired to create an equation of the form $y = f(x)$ (i.e., y as a function of x), it would be related to the other factors as follows:

$$\begin{aligned} y &= f(x) \\ \theta &= \frac{dy}{dx} \\ \frac{M}{EI} &= \frac{d^2y}{dx^2} \\ \frac{V}{EI} &= \frac{d^3y}{dx^3} \\ \frac{w}{EI} &= \frac{d^4y}{dx^4} \end{aligned}$$

where w = general term for the load distribution on the beam

The last two equations follow from the observation that there is a derivative (slope) relationship between shear and bending moment and between load and shear.

In practice, the fundamental equations just given are used in reverse. That is, the load distribution as a function of x is known, and the equations for the other

factors are derived by successive integrations. The results are

$$\begin{aligned} w &= f(x) \\ V &= \int w \, dx + V_0 \\ M &= \int V \, dx + M_0 \end{aligned}$$

where V_0 and M_0 = constants of integration evaluated from the boundary conditions.

In many cases, the load, shear, and bending moment diagrams can be drawn in the conventional manner, and the equations for shear or bending moment can be created directly by the principles of analytic geometry. With M as a function of x , the slope and deflection relations can be found:

$$\begin{aligned} \theta EI &= \int M \, dx + C_1 \\ yEI &= \int \theta EI \, dx + C_2 \end{aligned}$$

The constants of integration must be evaluated from boundary conditions. Texts on strength of materials show the details. (See Reference 4.)

3-20 CURVED BEAMS

The analysis of stress due to bending in beams summarized earlier in this chapter is limited to beams that are straight or very nearly so. It was noted that when a beam, that is originally straight, is bent:

1. The radius of curvature of the neutral axis of the beam is very large.
2. Plane sections perpendicular to the axis of the beam remain plane as the beam bends and they rotate in opposite directions under the influence of the bending moment placing part of the section in compression and part in tension.
3. The location of the neutral axis of the cross section of the beam is:
 - a. Where the bending stress is zero.
 - b. Coincident with the centroidal axis of the cross section of the beam.
4. The maximum tensile and compressive stresses occur at the outermost fibers of the beam.
5. There is a linear variation of the bending stress from the place of maximum compression to the place of maximum tension.
6. Under these conditions, the maximum bending stress is computed from the familiar flexure formula:
 - a. $\sigma = Mc/I$.
 - b. where M is the bending moment at the section; c is the distance from the neutral axis to the outermost fiber; and I is the moment of inertia of the cross section with respect to its centroidal axis.

The flexure formula applies reasonably well when the ratio of the radius of curvature, R , to the depth of the cross section is larger than 10. That is $R/h > 10$ (Reference 6).

When a component has a smaller radius of curvature, the maximum stress due to bending is significantly higher than that which would be predicted from the flexure formula and different analysis procedures apply. There are many practical cases where smaller radii of curvature for beams occur. Examples include:

- Crane hooks used for lifting loads.
- Clamps such as the C-clamp.
- Open, C-section frames for machinery such as punch presses.
- Building beams that are curved for architectural and aesthetic reasons.
- Parts of hand tools such as saws, pliers, and wire cutters.
- Structural or functional members of machinery where the curvature of the member allows clearance of obstructions.
- Parts of some types of furniture such as tables and chairs.
- Automotive frames, suspension elements, and actuation arms for window lifts and seats.

Major features and the general nature of the results of the analysis for curved beams include:

1. When the applied bending moment tends to *straighten the beam* by increasing the radius of curvature, it is considered to be *positive*.
2. When the applied bending moment tends to decrease the radius of curvature, it is considered to be *negative*.
3. The stress distribution within the cross section of the member is *not* linear; rather it is hyperbolic. Figure 3-24 shows the general pattern of the stress distribution for the case of a curved beam with a rectangular cross section when a positive bending moment is applied. Note the following:
 - a. The inside surface is placed in tension and the maximum tensile stress occurs on that surface.
 - b. The outside surface is placed in compression and the maximum compressive stress occurs at that surface.
 - c. The place within the cross section where the stress becomes zero is called the *neutral axis* as it is for straight beams. However, the neutral axis is *not* coincident with the centroidal axis of the shape of the cross section. For the case shown in Figure 3-24, it is displaced toward the center of curvature by an amount called e .

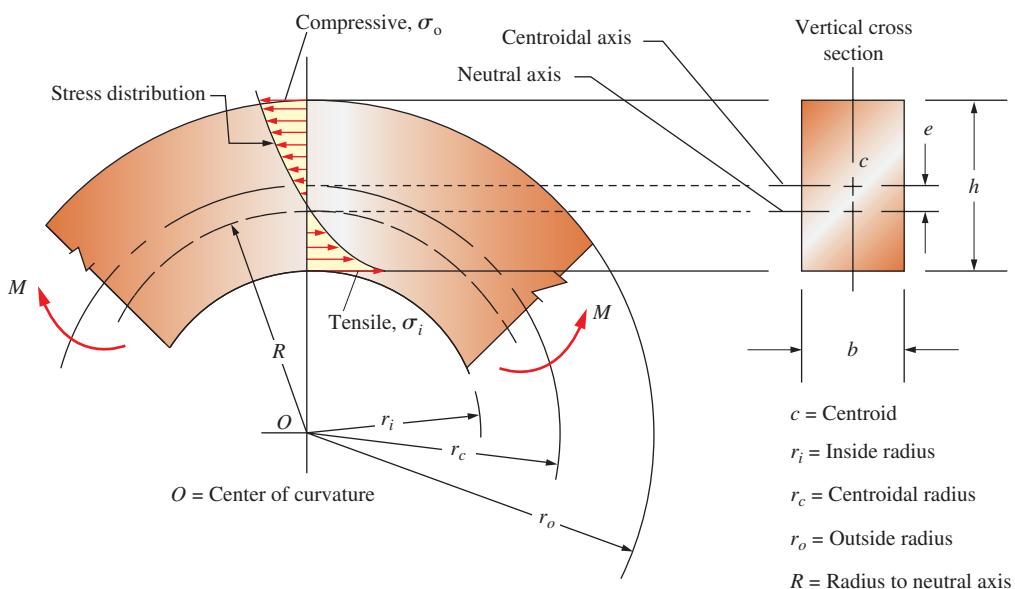


FIGURE 3-24 Segment of a curved beam carrying a positive bending moment

- The *curved beam formula* given below for the stress distribution has been derived in References 1, 2, and 6.

$$\sigma = \frac{M(R - r)}{Ar(r_c - R)} \quad (3-26)$$

where:

A = cross-sectional area of the shape

M = bending moment applied

The three radii are measured from the center of curvature of the beam:

r to the place where the stress is to be computed

r_c to the centroid of the area

R to the *neutral axis* of the cross section

R depends on the shape of the cross section using the *area shape factor*, *ASF*, found from the relations shown in Figure 3-25. Then compute:

$$R = A/\text{ASF} \quad (3-27)$$

The quantity $(r_c - R)$ in the denominator of Equation (3-26) is the radial distance from the centroidal axis of the cross section to the neutral axis. This value, called e , is typically a very small number, requiring that it be computed with high accuracy, at least three significant figures.

General Procedure for Analyzing Curved Beams Carrying a Pure Bending Moment

This procedure is used to compute the maximum tensile and compressive stresses for a curved beam at the inside (at r_i) and outside (at r_o) surfaces. The results are then compared to determine which value is the true maximum stress.

- Determine the value of the applied bending moment, M , including its sign.

- For the cross-sectional area of the beam:

- Compute the total area, A .
- Compute the location of the centroid of the area.
- Determine the value of four radii from the center of curvature of the beam; r_i , r_o , r_c , and R , using Equation (3-27).
- Compute the area shape factor, *ASF*. See Figure 3-25.

- Compute the stress at the outside surface from:

$$\sigma_o = \frac{M(R - r_o)}{Ar_o(r_c - R)} \quad (3-28)$$

- Compute the stress at the inside surface from:

$$\sigma_i = \frac{M(R - r_i)}{Ar_i(r_c - R)} \quad (3-29)$$

- Compare σ_o and σ_i to determine the maximum value.

Cross Sections Comprised Two or More Shapes. Designers often work toward optimizing the shape of the cross section of curved beams to more nearly balance the maximum tensile and compressive stresses when the material is isotropic. Similarly, for materials like cast irons having different strengths in compression and tension, the goal is to achieve a nearly equal design factor for both the tensile and compressive parts of the section. The cross-sectional shape of the curved beam may also be modified to optimize the casting or machining processes or to make the shape more pleasing. Adjusting the shape and dimensions of the cross section of the curved beam can accomplish these goals. Reaching these goals typically results in a cross section that is a composite of two or more of the standard shapes shown in Figure 3-25. Examples of the composite shapes are shown in Figure 3-27.

| Shape of cross section | Area, A | Area shape factor, ASF |
|----------------------------|---|--|
| Rectangle | $bh = b(r_o - r_i)$ | $b \ln(r_o / r_i)$ |
| Triangle | $\frac{1}{2} b(r_o - r_i)$ | $\frac{b r_o}{(r_o - r_i)} [\ln(r_o/r_i)] - b$ |
| Circle | $\pi D^2/4$ | $2 \pi [r_c - \sqrt{r_c^2 - D^2/4}]$ |
| Ellipse | $\pi h b/4$ | $(2 \pi b/h) [r_c - \sqrt{r_c^2 - h^2/4}]$ |
| Trapezoid | $\frac{1}{2} (r_o - r_i)(b_1 + b_2)$ | $\frac{b_1 r_o - b_2 r_i}{(r_o - r_i)} \ln(r_o/r_i) - (b_1 - b_2)$ |
| Inverted T-section \perp | $b_1 f_1 + b_2 f_2$ $\bar{y} = \frac{1}{A} [(b_1 f_1) (f_1/2) + (b_2 f_2) (f_1 + f_2/2)]$ | $b_1 \ln(r_1/r_i) + b_2 \ln(r_o/r_1)$ |
| I-Shape I | $b_1 f_1 + b_2 f_2 + b_3 f_3$ $\bar{y} = \frac{1}{A} [(b_1 f_1)(f_1/2) + (b_2 f_2)(f_1 + f_2/2) + (b_3 f_3)(f_1 + f_2 + f_3/2)]$ | $b_1 \ln(r_1/r_i) + b_2 \ln(r_2/r_1) + b_3 \ln(r_o/r_2)$ |

FIGURE 3–25 Area shape factors for selected cross sections of curved bars

| Shape of cross section | Area, A | Area shape factor, ASF |
|-------------------------------|-------------|--|
| Semicircle—On outside of area | $\pi D^2/8$ | <p>Center of curvature For $D/2 > r_i$ $r_i\pi - D + 2\sqrt{D^2/4 - r_i^2} \ln \left[\frac{D/2 + \sqrt{D^2/4 - r_i^2}}{r_i} \right]$</p> <p>For $r_i > D/2$ $r_i\pi - D - \pi\sqrt{r_i^2 - D^2/4} + 2\sqrt{r_i^2 - D^2/4} \sin^{-1}(D/2r_i)$ <small>[Note: Argument of inverse sine is in radians]</small></p> |
| Semicircle—On inside of area | $\pi D^2/8$ | $r_i\pi + D - \pi\sqrt{r_i^2 - D^2/4} - 2\sqrt{r_i^2 - D^2/4} \sin^{-1}(D/r_i)$ <small>[Note: Argument of inverse sine is in radians]</small> |

FIGURE 3-25 Area shape factors for selected cross sections of curved bars (Continued)

**Example Problem
3-17**

A curved bar has a rectangular cross section 15.0 mm thick by 25.0 mm deep as shown in Figure 3-26. The bar is bent into a circular arc producing an inside radius of 25.0 mm. For an applied bending moment of +400 N·m, compute the maximum tensile and compressive stresses in the bar.

Solution Objective Compute the maximum tensile and compressive stresses.

Given $M = +400 \text{ N}\cdot\text{m}$ that tends to straighten the bar. $r_i = 25.0 \text{ mm}$.

Analysis Apply Equations (3-28) and (3-29).

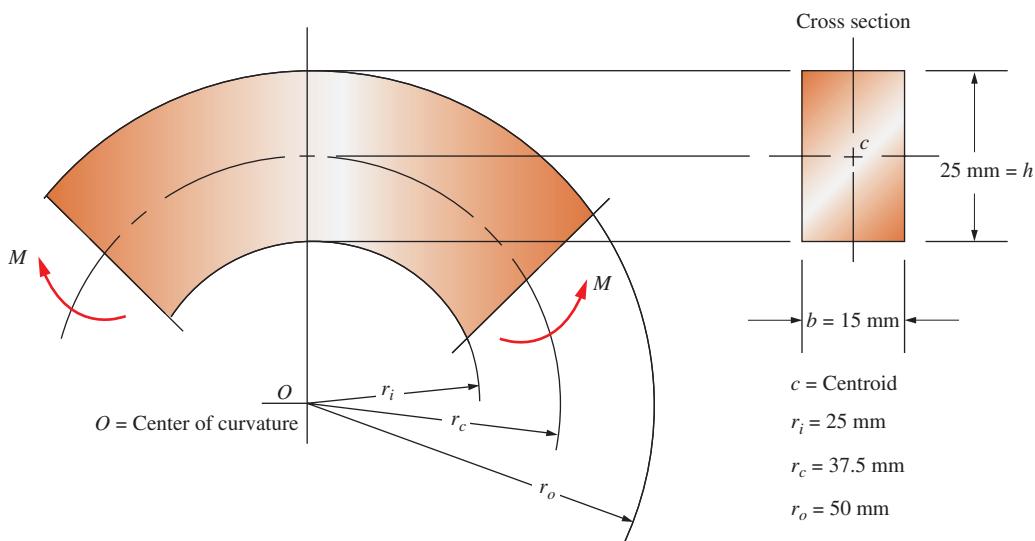


FIGURE 3-26 Curved bar with a rectangular cross section for Example Problem 3-17

Results First compute the cross-sectional area:

$$A = bh = (15.0 \text{ mm})(25.0 \text{ mm}) = 375.0 \text{ mm}^2$$

Now compute the quantities involving radii. See Figure 3–26 for related dimensions:

$$r_o = r_i + h = 25.0 \text{ mm} + 25.0 \text{ mm} = 50.0 \text{ mm}$$

$$r_c = r_i + h/2 = 25.0 \text{ mm} + (25.0/2) \text{ mm} = 37.5 \text{ mm}$$

$$R = A/ASF$$

From Figure 3–25, for a rectangular cross section:

$$ASF = b \cdot \ln(r_o/r_i) = (15 \text{ mm})[\ln(50.0/25.0)] = 10.3972 \text{ mm}$$

$$\text{Then, } R = A/ASF = (375 \text{ mm}^2)/10.3972 \text{ mm} = 36.0674 \text{ mm}$$

Quantities needed in the stress equations include:

$$r_c - R = 37.5 \text{ mm} - 36.0674 \text{ mm} = 1.4326 \text{ mm}$$

This is the distance e as shown in Figure 3–24.

$$R - r_o = 36.0674 \text{ mm} - 50.0 \text{ mm} = -13.9326 \text{ mm}$$

$$R - r_i = 36.0674 \text{ mm} - 25.0 \text{ mm} = 11.0674 \text{ mm}$$

This is the distance from the inside surface to the neutral axis.

Stress at outer surface, using Equation (3–28):

$$\begin{aligned}\sigma_o &= \frac{M(R - r_o)}{Ar_o(r_c - R)} = \frac{(400 \text{ N} \cdot \text{m})(-13.9326 \text{ mm})[1000 \text{ mm}/\text{m}]}{(375 \text{ mm}^2)(50.0 \text{ mm})(1.4326 \text{ mm})} \\ \sigma_o &= -207.5 \text{ N/mm}^2 = -207.5 \text{ MPa}\end{aligned}$$

This is the maximum compressive stress in the bar.

Stress at inner surface, using Equation (3–29):

$$\begin{aligned}\sigma_i &= \frac{M(R - r_i)}{Ar_i(r_c - R)} = \frac{(400 \text{ N} \cdot \text{m})(11.0674 \text{ mm})[1000 \text{ mm}/\text{m}]}{(375 \text{ mm}^2)(25.0 \text{ mm})(1.4326 \text{ mm})} \\ \sigma_i &= 329.6 \text{ N/mm}^2 = 329.6 \text{ MPa}\end{aligned}$$

This is the maximum tensile stress in the bar.

Comment The stress distribution between the outside and the inside is similar to that shown in Figure 3–24.

The analysis process introduced earlier can be modified to consider a composite shape for the cross section of the curved beam.

Procedure for Analyzing Curved Beams with Composite Cross-sectional Shapes Carrying a Pure Bending Moment

This procedure is used to compute the maximum tensile and compressive stresses for a curved beam at the inside (at r_i) and outside (at r_o) surfaces. The results are then compared to determine which value is the true maximum stress.

1. Determine the value of the applied bending moment, M , including its sign.
2. For the composite cross-sectional area of the beam:
 - a. Determine the inside radius, r_i , and the outside radius, r_o .
 - b. Separate the composite area into two or more parts that are shapes from Figure 3–25.
 - c. Compute the area of each component part, A_i , and the total area, A .

- d. Locate of the centroid of each component area.
- e. Compute the radius of the centroid of the composite area, r_c .
- f. Compute the value of the area shape factor, ASF_i , for each component area using the equations in Figure 3–25.
- g. Compute the radius, R , from the center of curvature to the neutral axis from:

$$R = A/\sum(ASF_i)$$

3. Compute the stress at the outside surface from:

$$\sigma_o = \frac{M(R - r_o)}{Ar_o(r_c - R)} \quad (3-30)$$

4. Compute the stress at the inside surface from:

$$\sigma_i = \frac{M(R - r_i)}{Ar_i(r_c - R)} \quad (3-31)$$

5. Compare σ_o and σ_i to determine the maximum value.

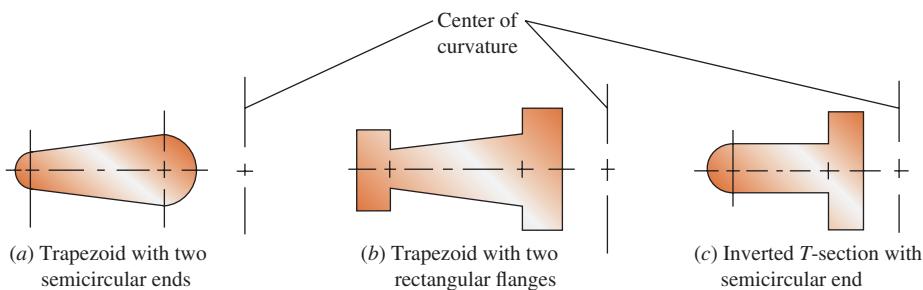


FIGURE 3-27 Examples of composite shapes for cross sections of curved beams

**Example Problem
3-18**

A curved beam has the shape shown in Figure 3-28 and is subjected to a pure bending moment of $-640 \text{ lb}\cdot\text{in}$. The inside radius is 2.90 in. Compute the maximum tensile and compressive stresses in the beam.

Solution

Objective Compute the maximum tensile and compressive stresses.

Given $M = -640 \text{ lb}\cdot\text{in}$ that tends to decrease the radius of curvature.
 $r_i = 2.90 \text{ in}$ (see Figure 3-28 for related dimensions).

Analysis Apply Equations (3-28) and (3-29)

Results Separate the shape into a composite of an inverted T-section 1 and a semicircular area 2. Compute cross-sectional area for each part:

$$\begin{aligned}A_1 &= b_1 f_1 + b_2 f_2 = (0.80 \text{ in})(0.20 \text{ in}) + (1.0 \text{ in})(0.40 \text{ in}) \\A_1 &= 0.560 \text{ in}^2 \\A_2 &= \pi D^2/8 = \pi(0.40 \text{ in})^2/8 = 0.06283 \text{ in}^2\end{aligned}$$

$$\text{Total area } A = A_1 + A_2 = 0.560 + 0.06283 = 0.62283 \text{ in}^2$$

Now locate the centroid of each area with respect to the inside surface; from Figure 3-25:

$$\begin{aligned}\bar{y}_1 &= [1/A_1][(b_1 f_1)(f_1/2) + (b_2 f_2)(f_1 + f_2/2)] \\&= [1/0.560 \text{ in}^2][(0.80)(0.20)(0.10) + (1.0)(0.40)(0.70)] \text{ in}^3 \\&= 0.5286 \text{ in} \\&\bar{y}_2 = 1.20 \text{ in} + 2D/3\pi = 1.20 \text{ in} + (2)(0.40 \text{ in})/(3)(\pi) \\&= 1.2849 \text{ in}\end{aligned}$$

Now locate the centroid of the composite area:

$$\begin{aligned}\bar{y}_c &= [1/A][A_1 \bar{y}_1 + A_2 \bar{y}_2] \\&= [1/0.62283 \text{ in}^2][(0.560)(0.5286) + (0.06283)(1.2849)] \text{ in}^3 \\&= 0.60489 \text{ in}\end{aligned}$$

Now define the pertinent radii from the center of curvature:

$$\begin{aligned}r_o &= r_i + 1.40 \text{ in} = 2.90 \text{ in} + 1.40 \text{ in} = 4.30 \text{ in} \\r_c &= r_i + \bar{y}_c = 2.90 \text{ in} + 0.60489 \text{ in} = 3.5049 \text{ in}\end{aligned}$$

Compute the value of the area shape factor, ASF_i , for each part:

For the T-shape:

$$\begin{aligned}ASF_1 &= b_1 \ln(r_1/r_i) + b_2 \ln(r_{o1}/r_1) \\&= (0.80 \text{ in}) \ln(3.1/2.9) + (0.40 \text{ in}) \ln(4.1/3.1) \\&= 0.16519 \text{ in}\end{aligned}$$

For the semicircular area, we must determine the relationship between r_{i2} and $D/2$:

$$r_{i2} = 4.10 \text{ in} \text{ at the base of the semicircle}$$

$$D/2 = (0.40 \text{ in})/2 = 0.20 \text{ in}$$

Because $r_{i2} > D/2$, we use the equation,

$$ASF_2 = r_i \pi - D - \pi \sqrt{r_{i2}^2 - D^2/4} + 2\sqrt{r_{i2}^2 - D^2/4} [\sin^{-1}(D/2r_i)]$$

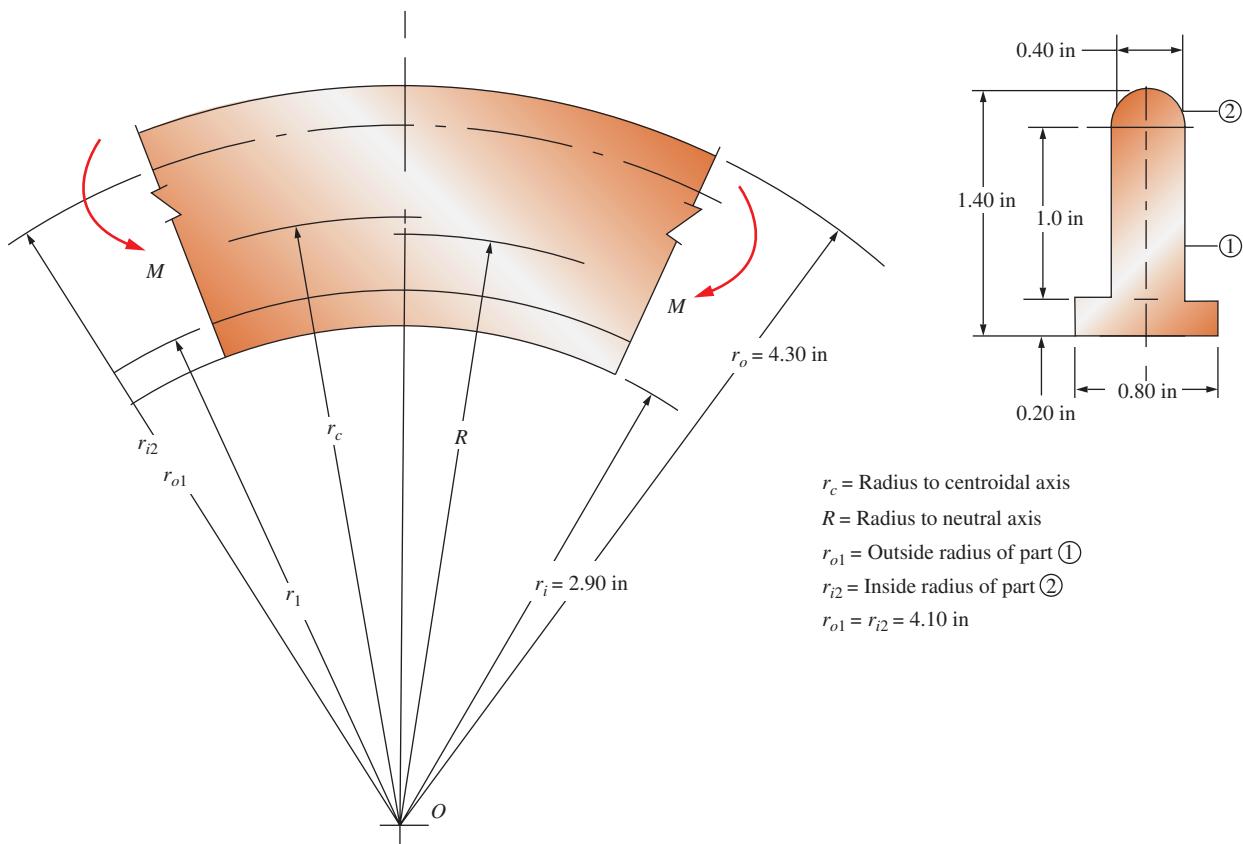


FIGURE 3–28 Curved beam with a composite shape carrying a negative bending moment for Example Problem 3–18

[Note: Argument of inverse sine is in radians]

$$\begin{aligned} ASF_2 &= (4.10)\pi - 0.40 - \pi\sqrt{(4.1)^2 - (0.40)^2}/4 \\ &\quad + 2\sqrt{(4.1)^2 - (0.40)^2}/4 [\sin^{-1}(0.40)/(2)(4.1)] = 0.015016 \text{ in} \end{aligned}$$

Compute the radius, R , from the center of curvature to the neutral axis from:

$$\begin{aligned} R &= A/\Sigma(ASF_i) = 0.62283 \text{ in}^2/(0.16519 + 0.015016) \text{ in} \\ R &= 3.4563 \text{ in} \end{aligned}$$

Now compute:

$$\begin{aligned} r_c - R &= 3.5049 \text{ in} - 3.4563 \text{ in} = 0.0486 \text{ in} = e \\ R - r_o &= 3.4563 \text{ in} - 4.30 \text{ in} = -0.8437 \text{ in} \\ R - r_i &= 3.4563 \text{ in} - 2.90 \text{ in} = 0.5563 \text{ in} \end{aligned}$$

This locates the neutral axis from the inner surface.

Now compute the stress at outer surface, using Equation (3–28):

$$\begin{aligned} \sigma_o &= \frac{M(R - r_o)}{Ar_o(r_c - R)} = \frac{(-640 \text{ lb} \cdot \text{in})(-0.8437 \text{ in})}{(0.62283 \text{ in}^2)(4.30 \text{ in})(0.0486 \text{ in})} \\ \sigma_o &= 4149 \text{ lb/in}^2 = 4149 \text{ psi} \end{aligned}$$

This is the maximum tensile stress in the bar.

Stress at inner surface, using Equation (3–29):

$$\begin{aligned} \sigma_i &= \frac{M(R - r_i)}{Ar_i(r_c - R)} = \frac{(-640 \text{ lb} \cdot \text{in})(0.5563 \text{ in})}{(0.62283 \text{ in}^2)(2.90 \text{ in})(0.0486 \text{ in})} \\ \sigma_i &= -4056 \text{ lb/in}^2 = -4056 \text{ psi} \end{aligned}$$

This is the maximum compressive stress in the bar.

Comment This problem demonstrated the process for analyzing a composite section. Note that the maximum tensile and compressive stresses are very nearly equal for this design, a desirable condition for homogeneous, isotropic materials.

Curved Beams with Combined Bending Moment and Normal Load. Each of the example curved beams considered thus far carried only a moment that tended to either increase or decrease the radius of curvature for the beam. Only the bending stress was computed. However, many curved beams carry a combination of a moment and a normal load acting perpendicular to the cross section of the beam. Examples are a crane hook and a C-clamp.

The complete stress analysis requires that the normal stress, $\sigma = P/A$, be added to the bending stress computed from Equations (3–28) and (3–29). This process is discussed in Section 3–21, “Superposition Principle.” Apply Equation (3–30) as illustrated in Example Problem 3–19.

Alternate Approaches to Analyzing Stresses in Curved Beams. An alternate approach to analyzing curved beams is reported in Reference 5. Using the concept of stress concentration factors, data are reported for an equivalent K_t value for curved beams having five different shapes: Circular, elliptical, hollow circular, rectangular, and I-shapes for one specific set of proportions. The controlling parameter is r_c/c , where r_c is the radius to the centroidal axis of the shape and c is one-half of the total height of each section. Then K_t is used in the same manner that is discussed in Section 3–22. That is,

$$K_t = \frac{\sigma_{\max}}{\sigma_{\text{nom}}} \quad \text{or} \quad \sigma_{\max} = K_t \sigma_{\text{nom}} = K_t (Mc/I)$$

Note that this is *not* strictly a stress concentration in the sense that there is no geometric discontinuity or abrupt change in shape or size of the cross section. However, the approach gives a reasonable approximation of the maximum stress in the curved beam.

Reference 7 presents a similar approach to the analysis of curved beams but data are presented in tabular form. Again, the primary parameter is r_c/c which is used to compute the eccentricity, e , the radial distance from the centroidal axis to the true neutral axis. Then two factors

are determined from the table: k_o for the stress at the outside surface and k_i for the stress at the inside surface. Then,

$$\begin{aligned}\sigma_{o-\max} &= k_o \sigma_{\text{nom}} = k_o (Mc/I) \quad \text{and} \\ \sigma_{i-\max} &= k_i \sigma_{\text{nom}} = k_i (Mc/I)\end{aligned}$$

3-21 SUPERPOSITION PRINCIPLE

When the same cross section of a load-carrying member is subjected to both a direct tensile or compressive stress and a stress due to bending, the resulting normal stress can be computed by the method of superposition. The formula is

$$\sigma = \pm Mc/I \pm F/A \quad (3-32)$$

where *tensile stresses are positive and compressive stresses are negative*.

An example of a load-carrying member subjected to combined bending and axial tension is shown in Figure 3–29. It shows a beam subjected to a load applied downward and to the right through a bracket below the beam. Resolving the load into horizontal and vertical components shows that its effect can be broken into three parts:

1. The vertical component tends to place the beam in bending with tension on the top and compression on the bottom.
2. The horizontal component, because it acts away from the neutral axis of the beam, causes bending with tension on the bottom and compression on the top.
3. The horizontal component causes direct tensile stress across the entire cross section.

We can proceed with the stress analysis by using the techniques from the previous section to prepare the shearing force and bending moment diagrams and then using Equation (3–30) to combine the effects of the bending stress and the direct tensile stress at any point. The details are shown within Example Problem 3–19.

Example Problem 3-19

The cantilever beam in Figure 3–29 is a steel American Standard beam, S6×12.5. The force F is 10 000 lb, and it acts at an angle of 30° below the horizontal, as shown. Use $a = 24$ in and $e = 6.0$ in. Draw the free-body diagram and the shearing force and bending moment diagrams for the beam. Then compute the maximum tensile and maximum compressive stresses in the beam and show where they occur.

Solution

- Objective** Determine the maximum tensile and compressive stresses in the beam.
- Given** The layout from Figure 3–29(a). Force $= F = 10\ 000$ lb; angle $\theta = 30^\circ$. The beam shape: S6×12.5; length $= a = 24$ in. Section modulus $= S = 7.37$ in 3 ; area $= A = 3.67$ in 2 (Appendix 15–10).

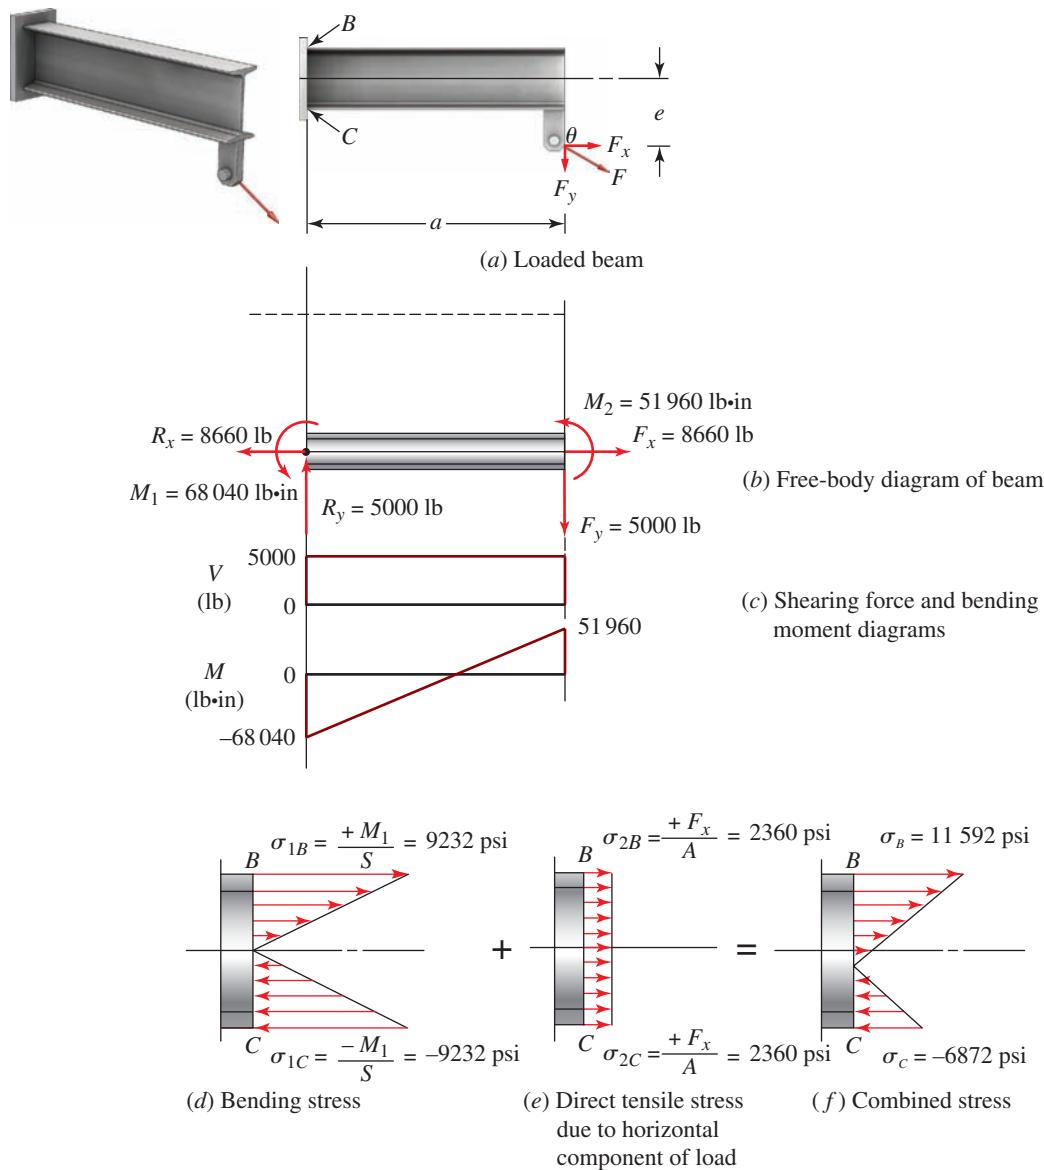


FIGURE 3-29 Beam subjected to combined stresses

Eccentricity of the load = $e = 6.0$ in from the neutral axis of the beam to the line of action of the horizontal component of the applied load.

Analysis The analysis takes the following steps:

1. Resolve the applied force into its vertical and horizontal components.
2. Transfer the horizontal component to an equivalent loading at the neutral axis having a direct tensile force and a moment due to the eccentric placement of the force.
3. Prepare the free-body diagram using the techniques from Section 3-16.
4. Draw the shearing force and bending moment diagrams and determine where the maximum bending moment occurs.
5. Complete the stress analysis at that section, computing both the maximum tensile and maximum compressive stresses.

Results The components of the applied force are:

$$F_x = F \cos(30^\circ) = (10\,000 \text{ lb})[\cos(30^\circ)] = 8660 \text{ lb} \text{ acting to the right}$$

$$F_y = F \sin(30^\circ) = (10\,000 \text{ lb})[\sin(30^\circ)] = 5000 \text{ lb} \text{ acting downward}$$

The horizontal force produces a counterclockwise concentrated moment at the right end of the beam with a magnitude of:

$$M_2 = F_x(6.0 \text{ in}) = (8660 \text{ lb})(6.0 \text{ in}) = 51\,960 \text{ lb}\cdot\text{in}$$

The free-body diagram of the beam is shown in Figure 3–29(b).

Figure 3–29(c) shows the shearing force and bending moment diagrams.

The maximum bending moment, 68 040 lb in, occurs at the left end of the beam where it is attached firmly to a column.

The bending moment, taken alone, produces a tensile stress (+) on the top surface at point *B* and a compressive stress (−) on the bottom surface at *C*. The magnitudes of these stresses are:

$$\sigma_1 = \pm M_1/S = \pm(68\,040 \text{ lb in})/(7.37 \text{ in}^3) = \pm 9232 \text{ psi}$$

Figure 3–29(d) shows the stress distribution due only to the bending stress.

Now we compute the tensile stress due to the axial force of 8660 lb.

$$\sigma_2 = F_x/A = (8660 \text{ lb})/(3.67 \text{ in}^2) = 2360 \text{ psi}$$

Figure 3–29(e) shows this stress distribution, uniform across the entire section.

Next, let's compute the combined stress at *B* on the top of the beam.

$$\sigma_B = +\sigma_1 + \sigma_2 = 9232 \text{ psi} + 2360 \text{ psi} = 11\,592 \text{ psi—Tensile}$$

At *C* on the bottom of the beam, the stress is:

$$\sigma_C = -\sigma_1 + \sigma_2 = -9232 \text{ psi} + 2360 \text{ psi} = -6872 \text{ psi—Compressive}$$

Figure 3–29(f) shows the combined stress condition that exists on the cross section of the beam at its left end at the support. It is a superposition of the component stresses shown in Figure 3–29(d) and (e).

3-22 STRESS CONCENTRATIONS

The formulas reviewed earlier for computing simple stresses due to direct tensile and compressive forces, bending moments, and torsional moments are applicable under certain conditions. One condition is that the geometry of the member is uniform throughout the section of interest.

In many typical machine design situations, inherent geometric discontinuities are necessary for the parts to perform their desired functions. For example, as shown in Figure 12–2 shafts carrying gears, chain sprockets, or belt sheaves usually have several diameters that create a series of shoulders that seat the power transmission members and support bearings. Grooves in the shaft allow the installation of retaining rings. Keyseats milled into the shaft enable keys to drive the elements. Similarly, tension members in linkages may be designed with retaining ring grooves, radial holes for pins, screw threads, or reduced sections.

Any of these geometric discontinuities will cause the actual maximum stress in the part to be higher than the simple formulas predict. Defining *stress concentration factors* as the factors by which the actual maximum stress exceeds the nominal stress, σ_{nom} or τ_{nom} , predicted from the simple equations allows the designer to analyze these situations. The symbol for these factors is K_t . In general, the K_t factors are used as follows:

$$\sigma_{\text{max}} = K_t \sigma_{\text{nom}} \quad \text{or} \quad \tau_{\text{max}} = K_t \tau_{\text{nom}} \quad (3-33)$$

depending on the kind of stress produced for the particular loading. The value of K_t depends on the shape of the discontinuity, the specific geometry, and the type of stress.

Figure 3–30 shows two examples of how geometric discontinuities affect the stress levels in mechanical components, creating stress concentrations. Figure 3–30 (a) shows a drawing of a model of a beam made from a flat plate using a photoelastic material that reacts to stress levels by producing light and dark areas proportional to variations in stresses when viewed through a polarizing filter. Each dark line, called a *fringe*, indicates a change in stress of a certain amount.

The beam is simply supported at its ends and carries a concentrated load at its middle, where the breadth of the section is made larger. To the right side of the middle, there is a reduction in the breadth with a circular fillet. To the left side of the middle, the breadth of the section is much smaller and the circular fillet is also used. You should visualize that for this simply supported beam, the maximum bending moment occurs at the middle and it decreases linearly to zero at the supports. The predicted maximum bending stress would be in the left portion where the cross section is smaller and toward the right end of that portion where the moment is higher. The fringe lines verify this observation because the number of fringes increases as you look toward the right end of the smaller section. However, note that near where the fillet is located, there are many more, closely spaced fringe lines. This indicates that the local stress around this geometric discontinuity is much higher than would be predicted by simple bending stress calculations. This illustrates the concept of *stress concentrations*. A similar pattern exists in the right portion of the beam, but the overall stress levels are lower because the section size is larger.

Another detail that can be observed from the beam in Figure 3–30(a) is in the area under where the force is applied. The numerous, closely spaced fringes there illustrate the concept of *contact stress* that can be very high

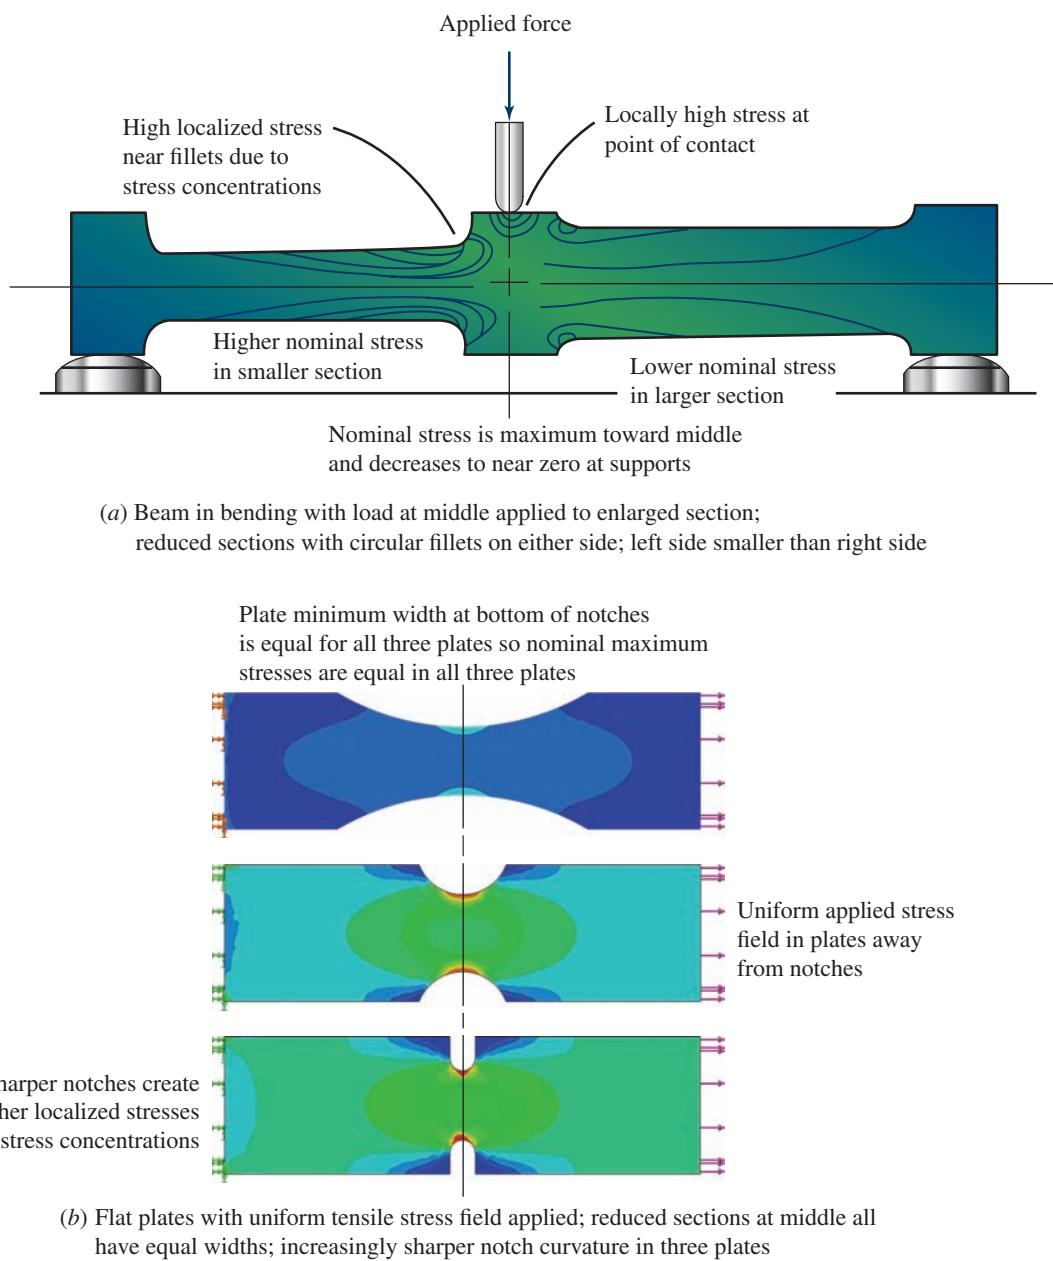


FIGURE 3-30 Sketches of stress distributions near stress concentrations at circular fillets in a beam in bending

locally. Special care should be applied in the design of that part of the beam to withstand the high contact stress. This concept is also pertinent to stresses in gear teeth (Chapters 9 and 10) and rolling contact bearings (Chapter 14).

Figure 3-30(b) shows a different loading and stress concentration phenomenon. Three flat plates are each subjected to identical levels of uniformly distributed tensile stresses in the larger part of each plate toward the ends. Each plate has an equal-width, reduced-breadth section at the middle but with quite different geometry for each. The top plate's width is reduced very gradually and the stress in the material increases essentially only due to the reduction in cross-sectional area. In the plate in the middle, the reduction is made by machining a circular notch with a relatively large radius. The stress at

the notch again increases because of the reduction in cross-sectional area, but there is also an increased stress level near the two notches because of the sudden change in geometry. The larger number of fringe lines is the indication of a *stress concentration* near the notches. The lower plate also contains a notch, but it is much narrower and the radius at its bottom is much sharper than that for the middle plate. Here, there are even more fringe lines, more closely spaced, indicating a much higher local stress near the small notches.

Stress concentrations are generally highly local phenomena, affecting only the region close to the geometric discontinuity. The entire component must be examined to determine where maximum stresses may occur and often two or more areas must be analyzed to ensure that no failure occurs. More is said about this in Chapter 5.

As a designer, you are responsible for applying stress concentration factors correctly and careful judgment is required. Numerous geometries and loading cases have been evaluated analytically, empirically, and by the use of finite element stress analysis methods to produce data from which values for K_t can be found. This section summarizes the basic principles and shows examples of the application of stress concentration factors. General guidelines are listed next.

General Guidelines for the Use of Stress Concentration Factors

1. Stress concentration factors must always be applied for brittle materials because locally high stresses typically lead to fracture.
2. For ductile materials under static tensile loading, it is typical to ignore stress concentrations in small local areas because the ductility permits yielding that redistributes the stress over a larger area and ultimate failure does not occur. However, some designers prefer to ensure that no yielding occurs anywhere in the component.
3. Areas of ductile members under cyclical compressive stress are unlikely to produce failure unless the local maximum stress exceeds the ultimate compressive stress. At lower stresses, a small amount of material near the highest stress area may yield and permit the load to be redistributed over a larger area.
4. Flexing a member in tension tends to cause excessively high local stresses where there are geometric discontinuities, where small internal voids occur, or where surface imperfections occur such as cracks, tool marks, nicks, roughness, corrosion, plating, or scratches. Small cracks appear that will grow to cover larger areas over time, leading to ultimate failure. This type of failure, called *fatigue*, is discussed further in Chapter 5. *Therefore, always apply stress concentration factors in areas of cyclical tensile stress where fatigue failures initiate.*
5. Designing components to avoid the occurrence of factors listed in item 4 is recommended. Maintaining smooth surfaces and homogeneous internal structure of the material and avoiding damage in manufacturing and handling are critical.
6. Stress concentration factors are highest in regions of acutely abrupt changes in geometry. Therefore, good design will call for more gradual changes such as by providing generous fillet radii and blending mating surfaces smoothly.

Reference 5 is arguably the most comprehensive source of data for stress concentration factors. Reference 7 also contains much useful data.

Stress concentration factors are often presented in graphical form to aid designers in visualizing the effect

of specific geometrical decisions on local stresses. Examples of the general forms of such graphs are shown in Figure 3–31. The horizontal axis is typically defined in terms of the ratio of the sizes for primary geometrical features such as diameters, widths, and fillet radii. *It is essential that you understand the basis for the nominal stress for use in Equation (3–33).* For each case in Figure 3–31, the equation for the nominal stress is reported. It is typical for the geometry of the smaller section to be used to compute nominal stress because that will give the largest stress in the region around the discontinuity before accounting for the specific geometry. However, exceptions occur. Additional discussion of the four general types of graphs follows.

- (a) **Stepped flat plate in tension:** The magnitude of the ratio of the larger width, H , to the smaller width, b , is a major factor and it is typically shown as a family of curves like the three in the figure. The horizontal axis is the ratio of r/b , where r is the fillet radius at the step. Note that the larger the ratio, the smaller the value of K_t . Small fillet radii should be avoided if possible because the stress concentration factor typically increases exponentially for very small r/t ratios. *The nominal stress is based on the applied force, F , divided by the minimum cross-sectional area in the smaller section as shown in the figure.*
- (b) **Round bar in bending:** A family of curves is shown for the ratio of the larger diameter, D , to the smaller diameter, d , similar to the discussion for Part (a). The horizontal axis is the ratio of r/d and, again, it is obvious that small fillet radii should be avoided. *The nominal stress is based on the applied bending moment, M , divided by the section modulus of the smaller cross section as shown in the figure.*
- (c) **Flat plate in tension with a central hole:** This case assumes that the applied force is uniformly distributed to all parts of the plate in areas away from the hole. The maximum stress rises in the near vicinity of the hole and it occurs at the top and bottom of the hole. The horizontal axis of the chart is the ratio of d/w , where d is the hole diameter and w is the width of the plate. Note that the plate thickness is called t . *The nominal stress is based on the applied force divided by the net area found at the cross section through the hole.* The figure shows that $A_{\text{net}} = (w - d)t$.
- (d) **Circular bar in torsion with a central hole:** *The stress concentration factor in this case is based on the gross polar section modulus for the full cross section of the bar.* This is one of the few cases where the gross section is used instead of the net section. The primary reason is the complexity of the calculation for the polar section modulus around the hole. The result is that the value of K_t accounts for both the reduction in polar section modulus and the increase in the stress due to the discontinuity around the hole, resulting in rather large values for K_t . The horizontal

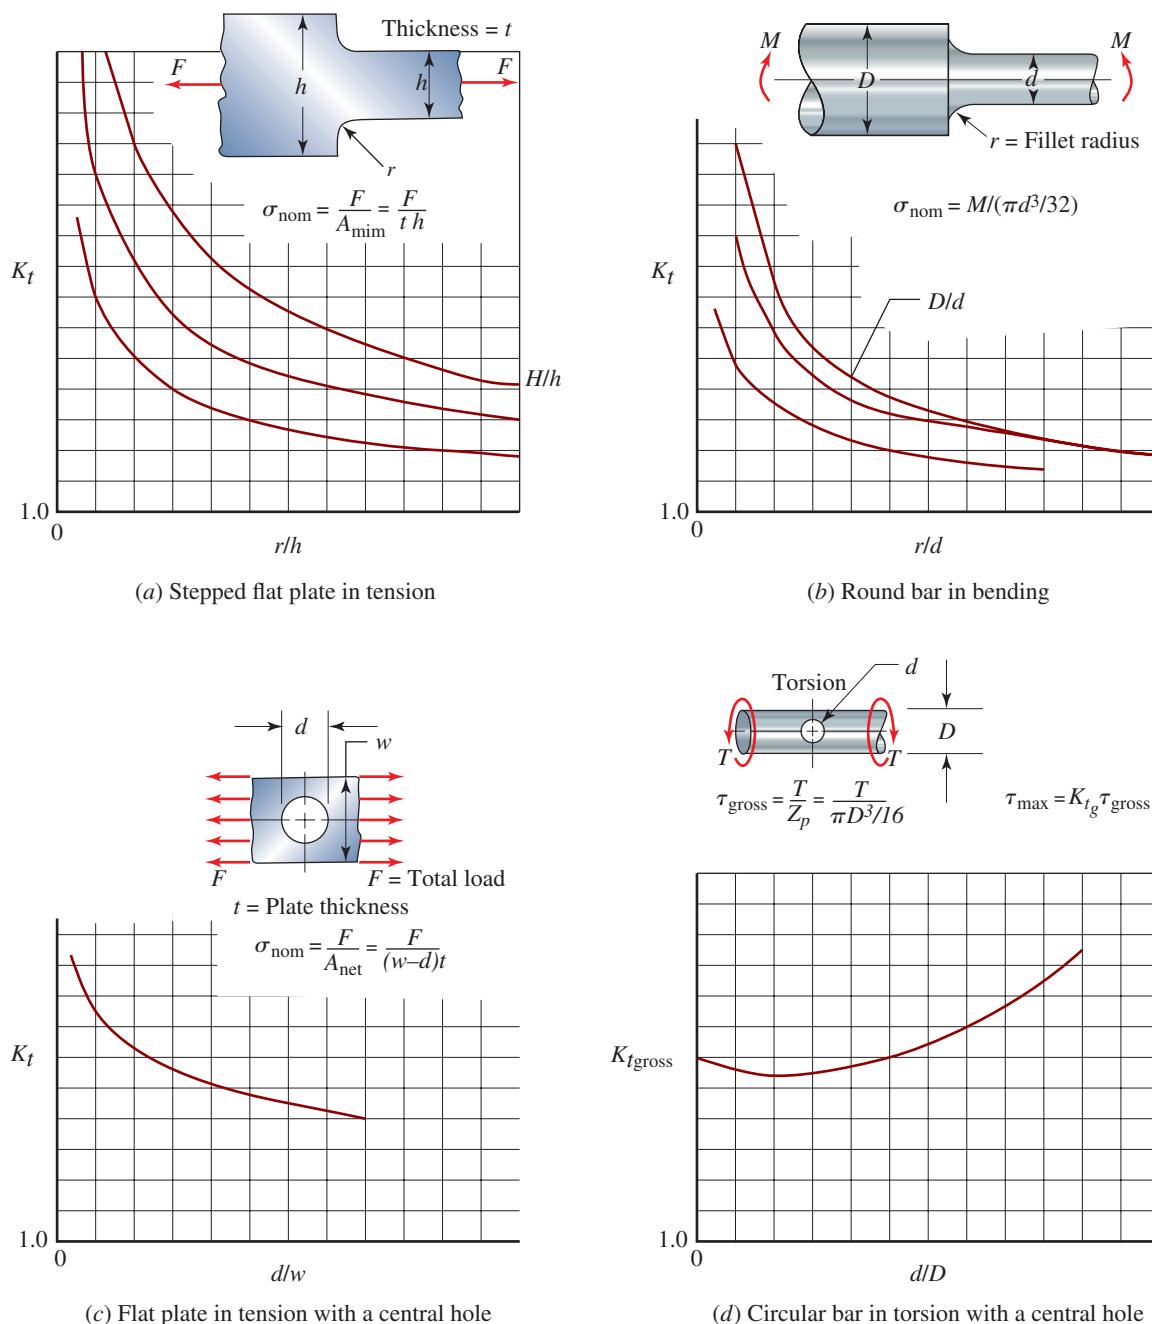


FIGURE 3-31 General Forms of Stress Concentration Factor Curves

axis is the ratio of d/D , where D is the full diameter of the bar and d is the diameter of the hole.

Appendix 18 includes 10 examples of the types of data available for stress concentration factors and should be used for problems in this book. Figures 18-1 through 18-4 are for shapes loaded in direct tension. Figures 18-5 through 18-8 are for bending loads. Figure 18-9 and 18-10 are for torsional loads.

References 5 and 7 are excellent sources of large numbers of cases for stress concentration factors.

Internet site 3 is another useful source for K_t data. Four categories of shapes, listed below, are included on

the site with multiple kinds of stresses, typically axial tension, bending, and torsion.

1. Rectangular bars with several types of notches, holes, slots, and changes in thickness (17 geometry types; 31 cases).
2. Round bars and shafts with steps in diameter, grooves, keyseats, and holes (8 geometry types; 23 cases).
3. Infinite or semi-infinite plates (3 geometry types; 7 cases).
4. Special shapes (3 geometry types; 6 cases).

Example Problem 3–20 Compute the maximum stress in a stepped flat plate subjected to an axial tensile force of 9800 N. The geometry is shown in Figure 3–32.

Solution Objective Compute the maximum stress in the stepped flat plate in Figure 3–32.

Plate thickness = $t = 6.0$ mm.

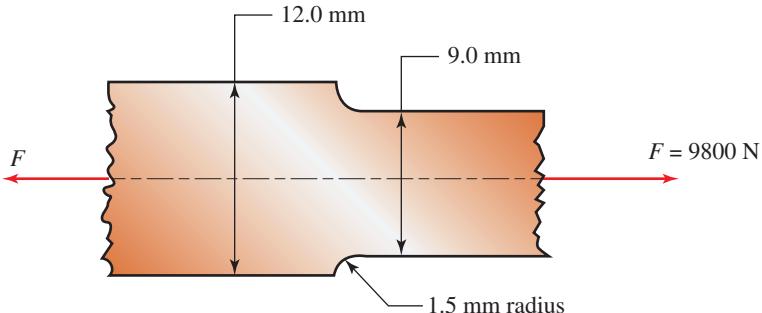


FIGURE 3–32 Stepped flat plate for Example Problem 3–20

- Given The layout from Figure 3–32. Force = $F = 9800$ N
Using the notation from Figure 3–31(a): widths $H = 12.0$ mm; $h = 9.0$ mm
Plate thickness: $t = 6.0$ mm
Fillet radius at the step: $r = 1.50$ mm
- Analysis The presence of the change in width at the step causes a stress concentration to occur. The geometry is of the type shown in Figure 3–31(a) and Appendix A18–2 that we will use to find the value of K_t for this problem. That value is used in Equation (3–33) to compute the maximum stress.
- Results The values of the ratios H/h and r/h are required:

$$H/h = 12.0 \text{ mm}/9.0 \text{ mm} = 1.33$$

$$r/h = 1.5 \text{ mm}/9.0 \text{ mm} = 0.167$$

The value of $K_t = 1.83$ can be read from Appendix A18–2.

The nominal stress is computed for the small section having a cross section of 6.0 mm by 9.0 mm.

$$A_{\text{net}} = h \cdot t = (9.0 \text{ mm})(6.0 \text{ mm}) = 54.0 \text{ mm}^2$$

The nominal stress is:

$$\sigma_{\text{nom}} = F/A_{\text{net}} = (9800 \text{ N})/(54.0 \text{ mm}^2) = 181.5 \text{ N/mm}^2 = 181.5 \text{ MPa}$$

The maximum stress in the area of the fillet at the step is:

$$\sigma_{\text{max}} = K_t \sigma_{\text{nom}} = (1.83)(181.5 \text{ MPa}) = 332 \text{ MPa}$$

- Comments The maximum stress of 332 MPa occurs in the fillet area at both the top and bottom of the small section. A short distance to the right of the fillet, the local stress reduces to the nominal value of 181.5 MPa. The stress in the larger section is obviously much smaller because of the larger cross-sectional area of the plate. Note that specifying a smaller fillet radius would cause a much larger maximum stress because the curve for K_t increases sharply as the ratio of r/t decreases. Modestly smaller maximum stress would be produced for larger fillet radii.

Stress Concentration Factors for Lug Joints.

A common machine element is the familiar *clevis joint* or *lug joint*, sketched in Figure 3–33. For this discussion, the bar-shaped plate is called the *lug* that may have either a flat, square-ended design as shown or a rounded end that is sometimes used to provide clearance for rotation of the lug. The generic name for the lug in stress analysis is *flat plate with a central hole with a load applied through a pin in tension*. Figure 3–34

shows approximate data for the stress concentration factors that occur around the hole for typical conditions, described below. The plate is assumed to have a uniform distribution of the load across any cross section well away from the hole. The critical section with regard to axial tensile stress in the plate occurs in the section through the hole where the minimum net cross-sectional area occurs. The stress concentration factor accounts for the geometric discontinuity at this section.

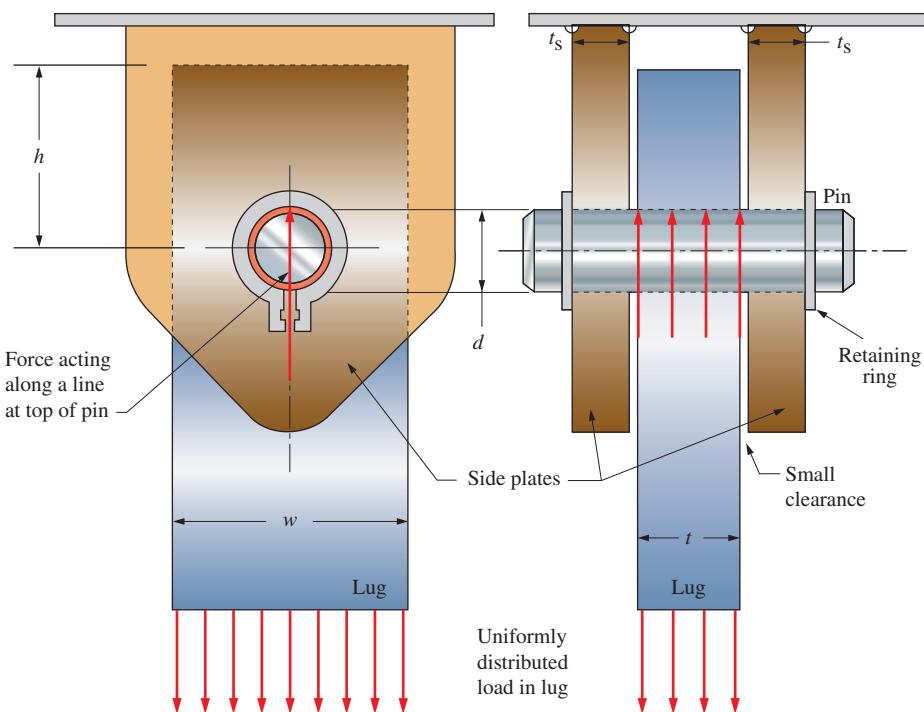


FIGURE 3–33 Clevis joint showing a pin–lug connection including a flat plate with a central hole as used in Figure 3–34.

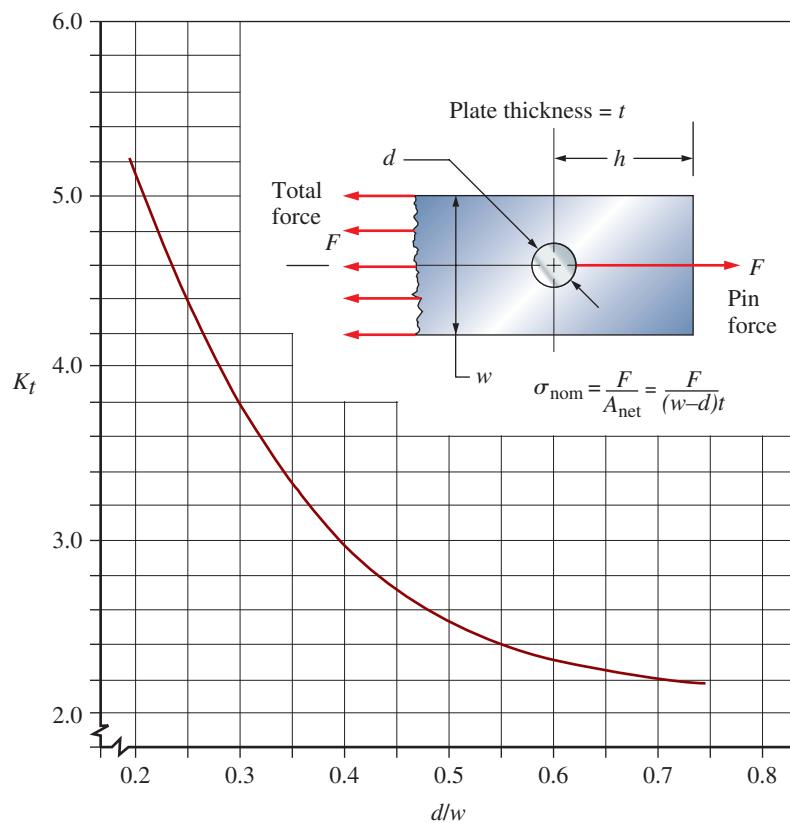


FIGURE 3–34 Stress concentration factor for flat plate with tensile load applied through a pin

**Example Problem
3-21**

The lug for a clevis joint of the type shown in Figure 3-33 is being designed for an applied force of 8.75 kN. The steel pin nominal diameter has been specified to be $d = 12.0$ mm. Specify the dimensions w , h , and t for the steel lug to be consistent with the parameters listed in this section and a d/w ratio of 0.40. Also specify the nominal clearance between the pin and the hole in the lug. Then determine the expected maximum stress in the lug.

Objective Specify w , h , and t and the nominal clearance.

Given $d = 12.0$ mm; $d/w = 0.40$. $F = 8.75$ kN

Analysis *Lug thickness, t :* Recommended $t/d \leq 0.50$. Using the upper limit gives:
 $t = 0.50 d = (0.50)(12.0 \text{ mm}) = 6.0 \text{ mm}$

Lug width, w : Using $d/w = 0.40$, $w = d/0.40 = 12 \text{ mm}/0.40 = 30.0 \text{ mm}$

End distance, h : Recommended ratio $h/w = 1.0$. Then,

$$h = w = 30.0 \text{ mm}$$

Close-fitting pin: $d_{\text{hole}} \approx d_{\text{pin}}(1.002) = 12.0 \text{ mm}(1.002) = 12.024 \text{ mm}$

Maximum stress: $\sigma_{\max} = K_t \times \sigma_{\text{nom}}$

$$\sigma_{\text{nom}} = F/(w - d)t = [8.75 \text{ kN}/(30.0 - 12.0)(6.0)\text{mm}^2](1000 \text{ N/kN})$$

$$\sigma_{\text{nom}} = 81.8 \text{ N/mm}^2 = 81.8 \text{ MPa}$$

To find K_t : At $d/w = 0.40$ in Figure 3-33, $K_t \approx 3.0$. Then

$$\sigma_{\max} = K_t \times \sigma_{\text{nom}} = (3.0)(81.8 \text{ MPa}) = 243 \text{ MPa}$$

Results The design details for the lug of the clevis joint in Figure 3-33 are:

$$d = 12.0 \text{ mm}; w = 30.0 \text{ mm}; t = 6.0 \text{ mm}; h = 30.0 \text{ mm}$$

Nominal clearance between pin and hole: $\delta = 0.02 \text{ mm}$

Maximum stress in lug at hole: $\sigma_{\max} = 243 \text{ MPa}$

In general, the axial tensile stress near the hole in the lug depends on several factors:

1. The width and thickness of the lug and the size and placement of the hole relative to the end of the lug.
2. The clearances between the faces of the lug and the side plates of the clevis.
3. The diameter and length of the pin.
4. The clearance between the pin and the hole.
5. The materials of the pin and the lug.

A typical lug connection should have the following features:

- a square-ended lug.
- close-fitting pin: $d_{\text{hole}} \approx d_{\text{pin}}(1.002)$.
- $t/d \leq 0.5$ [t = thickness of lug parallel to axis of pin; d = nominal hole diameter].
- Both pin and lug have the same modulus of elasticity; $E_{\text{pin}}/E_{\text{lug}} = 1.0$.
- $h/w = 1.0$.
- h = distance from centerline of hole to the top of the lug.
- w = width of the lug across the location of the hole.

Problems in this book will assume the conditions listed above and use the values for K_t from Internet site 3. The curve in Figure 3-34 gives approximate data for K_t vs. the ratio d/w .

Reference 5 includes extensive data that allow consideration of factors different from those assumed above.

Very loose fitting pins should be avoided because:

- The pin makes a virtual line contact on the top of the hole.
- The stress concentration factor for the lug is somewhat higher than shown in Figure 3-34.
- The maximum stress occurs at the line of contact.
- There is the danger that the contact stress between the pin and the hole will cause failure in bearing, a local crushing of the pin or the inside surface of the hole.

Other factors to consider in the design of a clevis or lug joint are:

1. The pin should be as short as practical to minimize the tendency for it to bend, causing nonuniform contact of the pin in the hole.
2. The diameter of the pin must be adequate to resist failure by direct shear and to keep bending deflection to an acceptable level.

3. The distance, h , from the centerline of the hole to the top of the lug should be nominally equal to the width of the plate, w , and as large as practical to minimize the bending stresses in the upper part of the lug and to prevent shearing tear-out of the lug.
4. The bearing stress between the pin surface and the inside of the hole of the lug must be acceptable, typically less than $0.9s_y$.
5. Similarly, the bearing stress between the pin surface and the holes in the side plates must be acceptable.
6. The clearance between the faces of the lug and the side plates of the clevis should be small to minimize bending of the pin.

3-23 NOTCH SENSITIVITY AND STRENGTH REDUCTION FACTOR

The amount by which a load-carrying member is weakened by the presence of a stress concentration (notch), considering both the material and the sharpness of the notch, is defined as

$$K_f = \text{fatigue strength reduction factor}$$

$$K_f = \frac{\text{endurance limit of a notch-free specimen}}{\text{endurance limit of a notched specimen}}$$

This factor could be determined by actual test. However, it is typically found by combining the stress concentration factor, K_t , defined in Section 3-22, and a material factor called the *notch sensitivity*, q . We define

$$q = (K_f - 1)/(K_t - 1) \quad (3-34)$$

When q is known, K_f can be computed from

$$K_f = 1 + q(K_t - 1) \quad (3-35)$$

Values of q range from 0 to 1.0, and therefore K_f varies from 1.0 to K_t . Under repeated bending loads, very ductile steels typically exhibit values of q from 0.5 to 0.7. High-strength steels with hardness approximately HB 400 ($s_u \approx 200$ ksi or 1400 MPa) have values of q from 0.90 to 0.95. (See Reference 2 for further discussion of values of q .)

Because reliable values of q are difficult to obtain, the problems in this book will typically assume that $q = 1.0$ and $K_f = K_t$, the safest, most conservative value.

REFERENCES

4. Mott, Robert L. *Applied Strength of Materials*. 6th ed. Boca Raton, FL: CRC Press, 2017.
5. Pilkey, Walter D., and Deborah F. Pilkey. *Peterson's Stress Concentration Factors*. 3rd ed. New York: John Wiley & Sons, 2008.
6. Timoshenko, S. *Strength of Materials, Part II—Advanced Theory and Problems*. New York: D. Van Nostrand Co., 1930.
7. Young, Warren C., and Richard G. Budynas. *Roark's Formulas for Stress and Strain*. 8th ed. New York: McGraw-Hill, 2012.

INTERNET SITES RELATED TO STRESS AND DEFORMATION ANALYSIS

1. **BEAM 2D-Stress Analysis 3.1** Software for mechanical, structural, civil, and architectural designers providing detailed analysis of statically indeterminate and determinate beams. From Orand Systems.
2. **MDSolids** Educational software devoted to introductory mechanics of materials. Includes modules on basic stress and strain; beam and strut axial problems; trusses; statically indeterminate axial structures; torsion; determinate beams; section properties; general analysis of axial, torsion, and beam members; column buckling; pressure vessels; and Mohr's circle transformations.
3. **eFatigue.com** An Internet source for consultation and information related to design of machine components subjected to fatigue loading. From the home page, select "Constant Amplitude" then "Stress Concentrations." This site permits online calculation of stress concentration factors for 60 cases covering a variety of geometry types and loading conditions.

PROBLEMS

Direct Tension and Compression

1. A tensile member in a machine structure is subjected to a steady load of 4.50 kN. It has a length of 750 mm and is made from a steel tube having an outside diameter of 18 mm and an inside diameter of 12 mm. Compute the tensile stress in the tube and the axial deformation.
2. Compute the stress in a round bar having a diameter of 10.0 mm and subjected to a direct tensile force of 3500 N.
3. Compute the stress in a rectangular bar having cross-sectional dimensions of 10.0 mm by 30.0 mm when a direct tensile force of 20.0 kN is applied.
4. A link in a packaging machine mechanism has a square cross section 0.40 in on a side. It is subjected to a tensile force of 860 lb. Compute the stress in the link.
5. Two circular rods support the 3800 lb weight of a space heater in a warehouse. Each rod has a diameter of 0.375 in and carries 1/2 of the total load. Compute the stress in the rods.

1. Boresi, Arthur P., and Richard J. Schmidt. *Advanced Mechanics of Materials*. 6th ed. New York: John Wiley & Sons, 2003.
2. Javidinejad, Amir. *Essentials of Mechanical Stress Analysis*. Boca Raton, FL: CRC Press, 2014.
3. Huston, Ronald, and Harold Josephs. *Practical Stress Analysis in Engineering Design*. 3rd ed. Boca Raton, FL: CRC Press, Taylor & Francis Group, 2009.

6. A tensile load of 5.00 kN is applied to a square bar, 12 mm on a side and having a length of 1.65 m. Compute the stress and the axial deformation in the bar if it is made from (a) SAE 1020 hot-rolled steel, (b) SAE 8650 OQT 1000 steel, (c) ductile iron A536(60-40-18), (d) aluminum 6061-T6, (e) titanium Ti-6Al-4V, (f) rigid PVC plastic, and (g) phenolic plastic.
7. An aluminum rod is made in the form of a hollow square tube, 2.25 in outside, with a wall thickness of 0.120 in. Its length is 16.0 in. What axial compressive force would cause the tube to shorten by 0.004 in? Compute the resulting compressive stress in the aluminum.
8. Compute the stress in the middle portion of rod AC in Figure P3-8 if the vertical force on the boom is 2500 lb. The rod is rectangular, 1.50 in by 3.50 in.

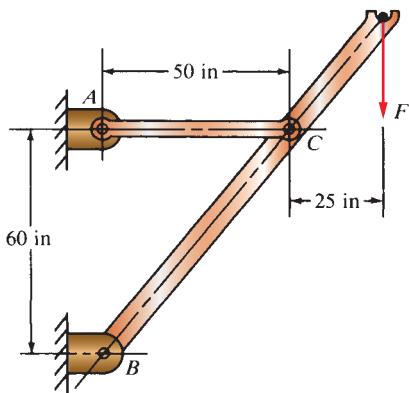


FIGURE P3-8 (Problems 8, 16, 56, and 80)

9. Compute the forces in the two angled rods in Figure P3-9 for an applied force, $F = 1500$ lb, if the angle θ is 45° .


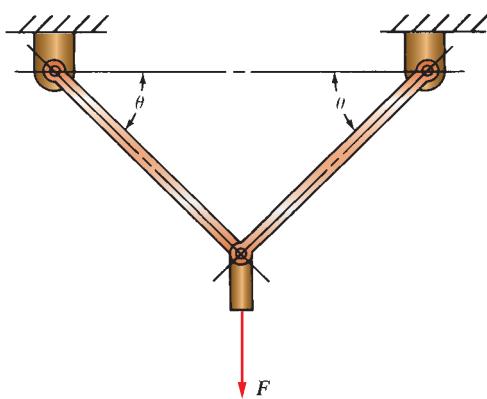


FIGURE P3-9 (Problems 9, 10, 11, 17, and 18)

10. If the rods from Problem 9 are circular, determine their required diameter if the load is static and the allowable stress is 18 000 psi.
11. Repeat Problems 9 and 10 if the angle θ is 15° .
12. Figure P3-12 shows a small truss spanning between solid supports and suspending a 10.5 kN load. The cross sections for the three main types of truss members are shown. Compute the stresses in all of the members of the truss near their midpoints away from the connections. Consider all joints to be pinned.
13. The truss shown in Figure P3-13 spans a total space of 18.0 ft and carries two concentrated loads on its top chord. The members are made from standard steel angle and channel shapes as indicated in the figure. Consider all joints to be pinned. Compute the stresses in all members near their midpoints away from the connections.

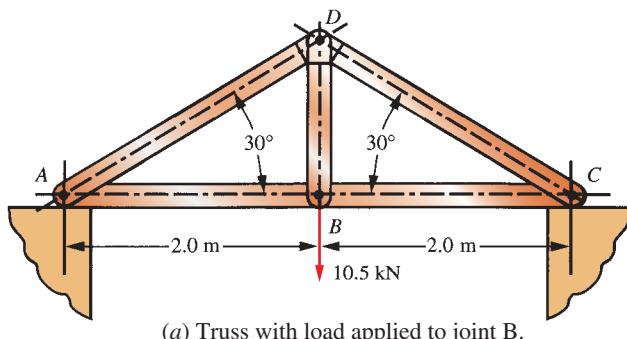

(a) Truss with load applied to joint B.

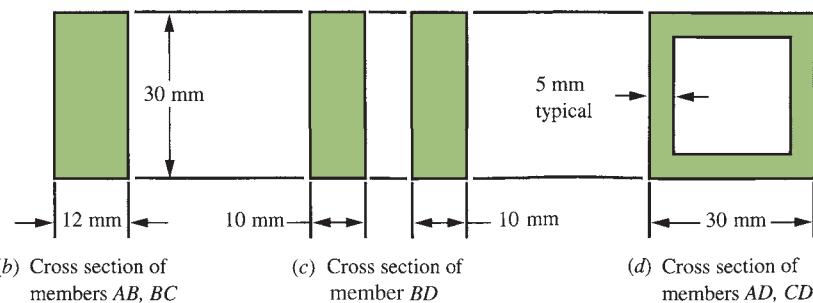


FIGURE P3-12 (Problem 12)

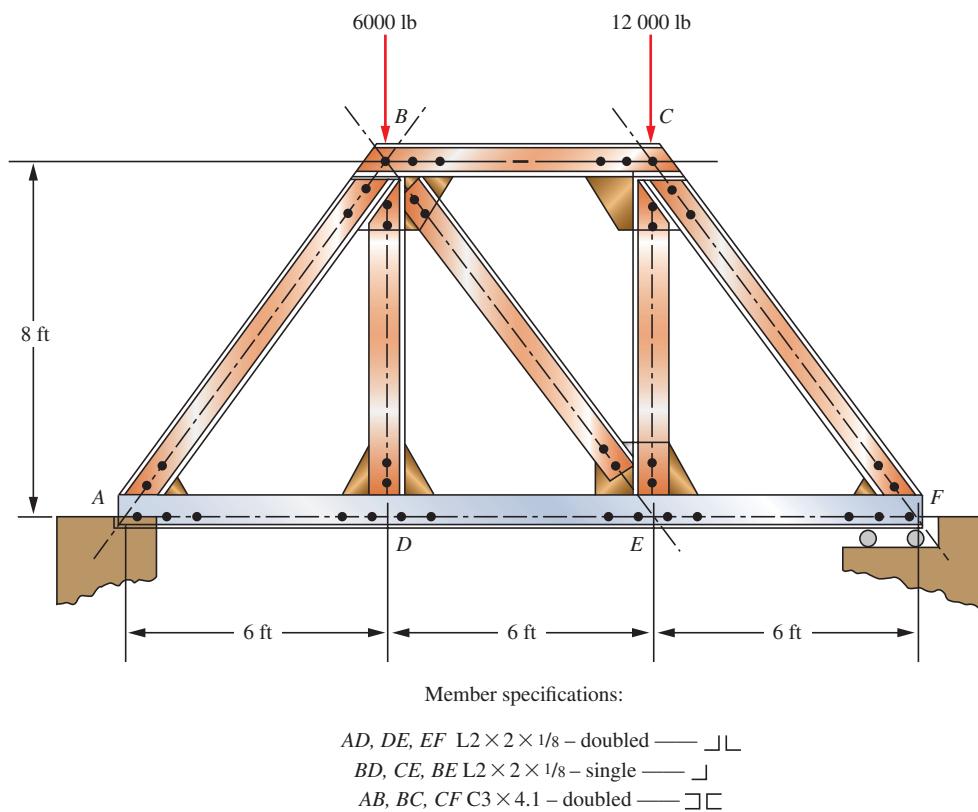


FIGURE P3-13 (Problem 13)

14. Figure P3-14 shows a short leg for a machine that carries a direct compression load. Compute the compressive stress if the cross section has the shape shown and the applied force is $F = 52 000$ lb.
15. Consider the short compression member shown in Figure P3-15. Compute the compressive stress if the cross section has the shape shown and the applied load is 640 kN.

Direct Shear Stress

16. Refer Figure P3-8. Each of the pins at A, B, and C has a diameter of 0.50 in and is loaded in double shear. Compute the shear stress in each pin.
17. Compute the shear stress in the pins connecting the rods shown in Figure P3-9 when a load of $F = 1500$ lb is carried. The pins have a diameter of 0.75 in. The angle $\theta = 40^\circ$.

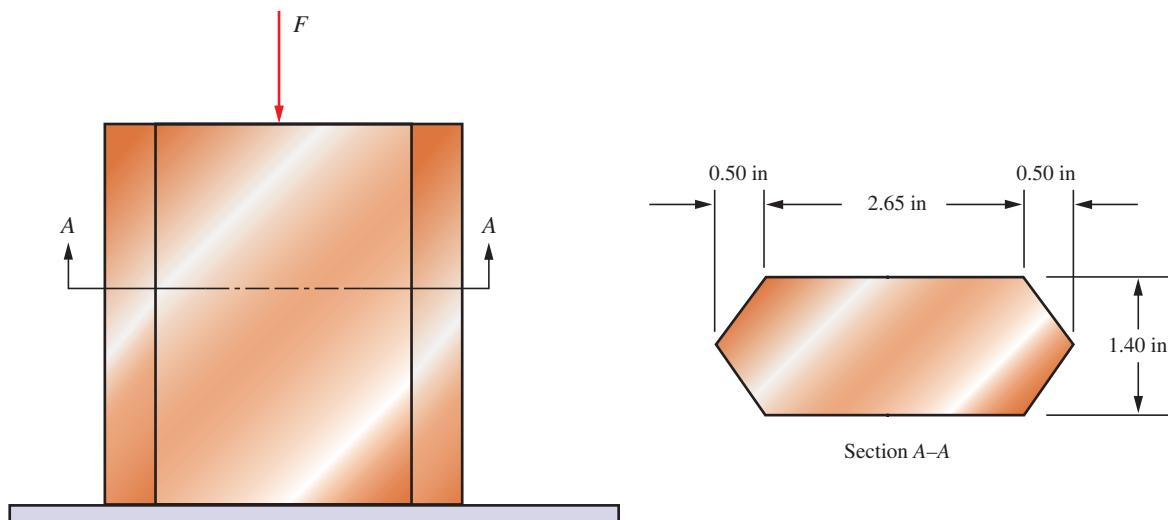


FIGURE P3-14 (Problem 14)

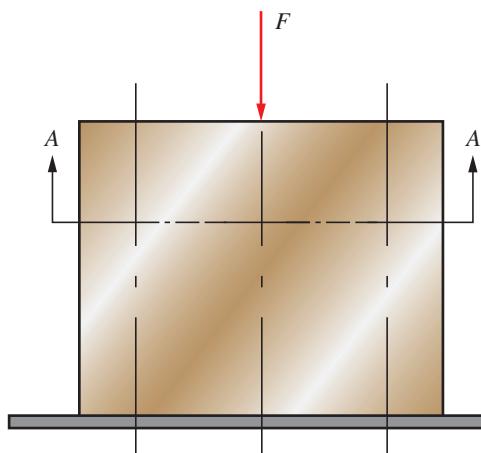


FIGURE P3-15 (Problem 15)

18. Repeat Problem 17, but change the angle to $\theta = 15^\circ$.
19. Refer Figure 3-7. Compute the shear stress in the key if the shaft transmits a torque of $1600 \text{ N}\cdot\text{m}$. The shaft diameter is 60 mm. The key is square with $b = 12 \text{ mm}$, and it has a length of 45 mm.
20. A punch is attempting to cut a slug having the shape shown in Figure P3-20 from a sheet of aluminum having a thickness of 0.060 in. Compute the shearing stress in the aluminum when a force of 52 000 lb is applied by the punch.


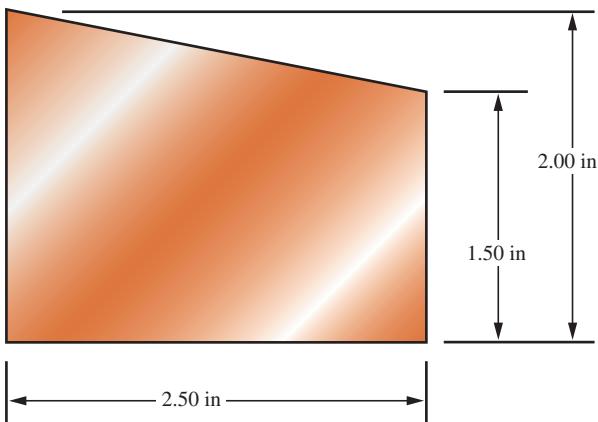


FIGURE P3-20 (Problem 20)

21. Figure P3-21 shows the shape of a slug that is to be cut from a sheet of steel having a thickness of 2.0 mm. If the punch exerts a force of 225 kN, compute the shearing stress in the steel.

Torsion

22. Compute the torsional shear stress in a circular shaft with a diameter of 50 mm that is subjected to a torque of $800 \text{ N}\cdot\text{m}$.
23. If the shaft of Problem 22 is 850 mm long and is made of steel, compute the angle of twist of one end in relation to the other.
24. Compute the torsional shear stress due to a torque of $88.0 \text{ lb}\cdot\text{in}$ in a circular shaft having a 0.40-in diameter.

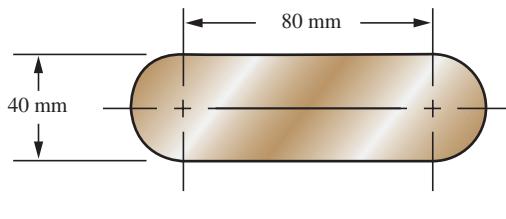

Section A-A

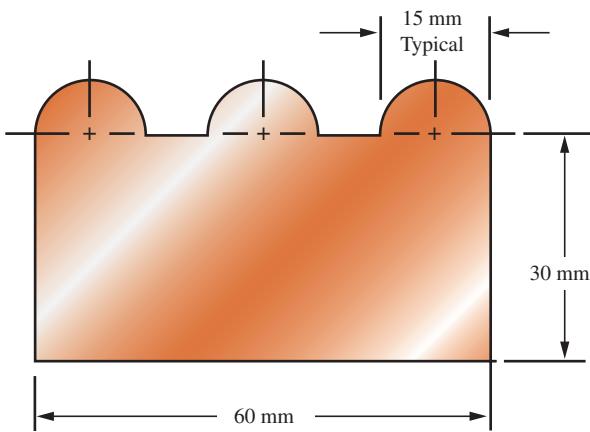


FIGURE P3-21 (Problem 21)

25. Compute the torsional shear stress in a solid circular shaft having a diameter of 1.25 in that is transmitting 110 hp at a speed of 560 rpm.
26. Compute the torsional shear stress in a hollow shaft with an outside diameter of 40 mm and an inside diameter of 30 mm when transmitting 28 kilowatts (kW) of power at a speed of 45 rad/s.
27. Compute the angle of twist for the hollow shaft of Problem 26 over a length of 400 mm. The shaft is steel.

Noncircular Members in Torsion

28. A square steel bar, 25 mm on a side and 650 mm long, is subjected to a torque of $230 \text{ N}\cdot\text{m}$. Compute the shear stress and the angle of twist for the bar.
29. A 3.00 in-diameter steel bar has a flat milled on one side, as shown in Figure P3-29. If the shaft is 44.0 in long and carries a torque of $10\,600 \text{ lb}\cdot\text{in}$, compute the stress and the angle of twist.
30. A commercial steel supplier lists rectangular steel tubing having outside dimensions of 4.00 by 2.00 in and a wall thickness of 0.109 in. Compute the maximum torque that can be applied to such a tube if the shear stress is to be limited to 6000 psi. For this torque, compute the angle of twist of the tube over a length of 6.5 ft.

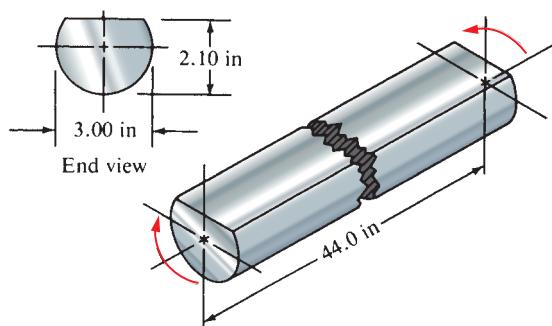


FIGURE P3-29 (Problem 29)

Beams

31. A beam is simply supported and carries the load shown in Figure P3-31. Specify suitable dimensions for the beam if it is steel and the stress is limited to 18 000 psi, for the following shapes:
 (a) Square
 (b) Rectangle with height three times the width
 (c) Rectangle with height one-third the width
 (d) Solid circular section
 (e) American Standard beam section
 (f) American Standard channel with the legs down
 (g) Standard steel pipe

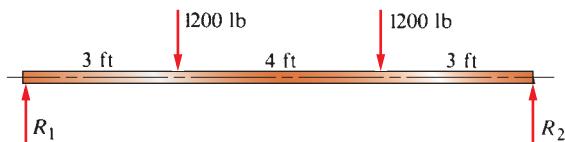


FIGURE P3-31 (Problems 31, 32, and 33)

32. For each beam of Problem 31, compute its weight if the steel weighs 0.283 lb/in³.
 33. For each beam of Problem 31, compute the maximum deflection and the deflection at the loads.
 34. For the beam loading of Figure P3-34, draw the complete shearing force and bending moment diagrams, and determine the bending moments at points A, B, and C.
 35. For the beam loading of Figure P3-34, design the beam choosing a commercially available shape in standard SI units from Appendix 15 with the smallest cross-sectional area that will limit the bending stress to 100 MPa.

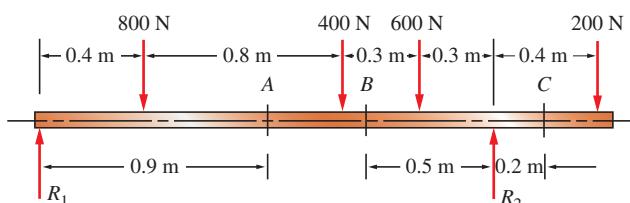


FIGURE P3-34 (Problems 34 and 35)

36. Figure P3-36 shows a beam made from 4 in schedule 40 steel pipe. Compute the deflection at points A and B for two cases: (a) the simple cantilever and (b) the supported cantilever.

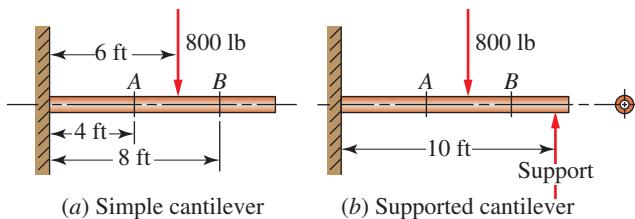


FIGURE P3-36 (Problem 36)

37. Select an aluminum I-beam shape to carry the load shown in Figure P3-37 with a maximum stress of 12 000 psi. Then compute the deflection at each load.

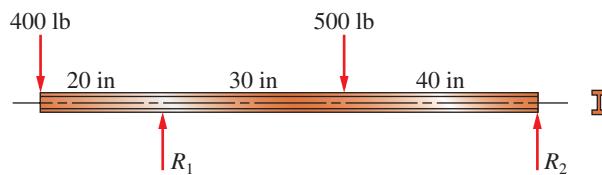


FIGURE P3-37 (Problem 37)

38. Figure P3-38 represents a wood joist for a platform, carrying a uniformly distributed load of 120 lb/ft and two concentrated loads applied by some machinery. Compute the maximum stress due to bending in the joist and the maximum vertical shear stress.

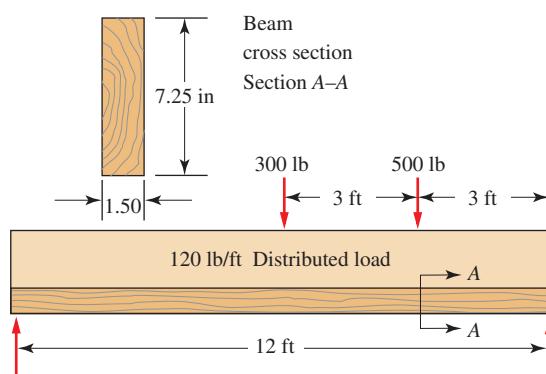


FIGURE P3-38 (Problem 38)

Beams with Concentrated Bending Moments

For Problems 39 through 50, draw the free-body diagram of only the horizontal beam portion of the given figures. Then draw the complete shear and bending moment diagrams. Where used, the symbol X indicates a simple support capable of exerting a reaction force in any direction but having no moment resistance. For beams having unbalanced axial loads, you may specify which support offers the reaction.

39. Use Figure P3-39.

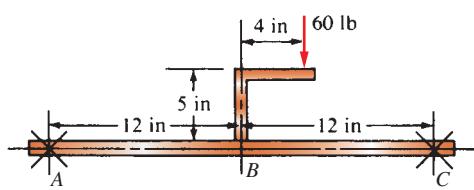


FIGURE P3-39 (Problems 39 and 57)

40. Use Figure P3-40.

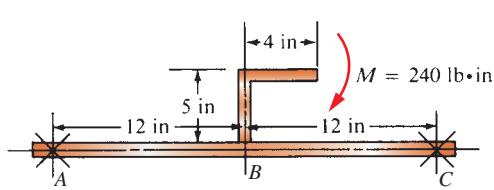


FIGURE P3-40 (Problem 40)

41. Use Figure P3-41.

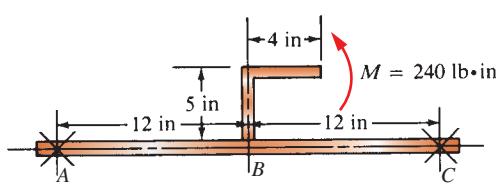


FIGURE P3-41 (Problem 41)

42. Use Figure P3-42.

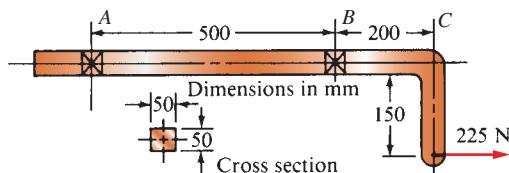


FIGURE P3-42 (Problems 42 and 58)

43. Use Figure P3-43.

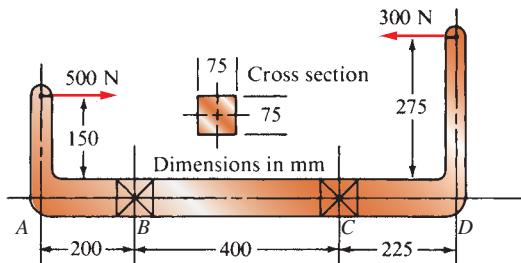


FIGURE P3-43 (Problems 43 and 59)

44. Use Figure P3-44.

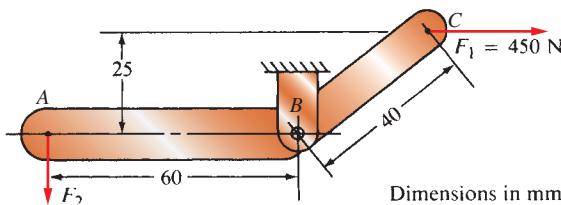


FIGURE P3-44 (Problem 44)

45. Use Figure P3-45.

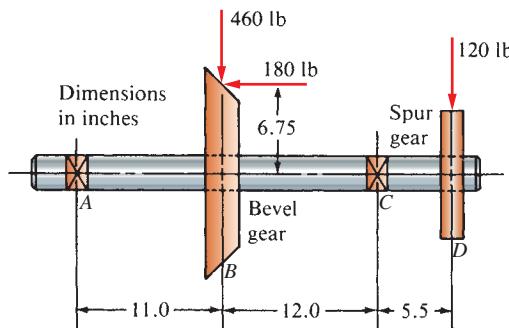


FIGURE P3-45 (Problem 45)

46. Use Figure P3-46.

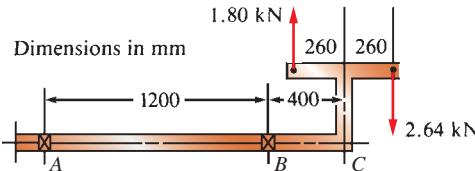


FIGURE P3-46 (Problem 46)

47. Use Figure P3-47.

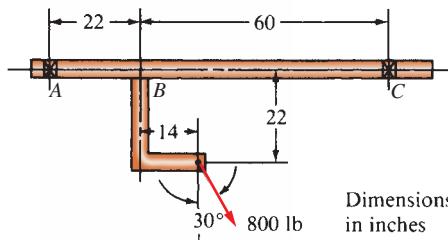


FIGURE P3-47 (Problems 47 and 60)

For Problems 48–50, draw the free-body diagram of the main shaft portion, labeled A, B, and C. Include any unbalanced torque on the shaft that tends to rotate it about the z-axis. In each case, the reaction to the unbalanced torque is taken at the right end of the shaft labeled C. Then draw the complete shearing force and bending moment diagrams for loading in the y-z plane. Also prepare a graph of the torque in the shaft as a function of position along the shaft from A to C.

48. Use Figure P3–48.

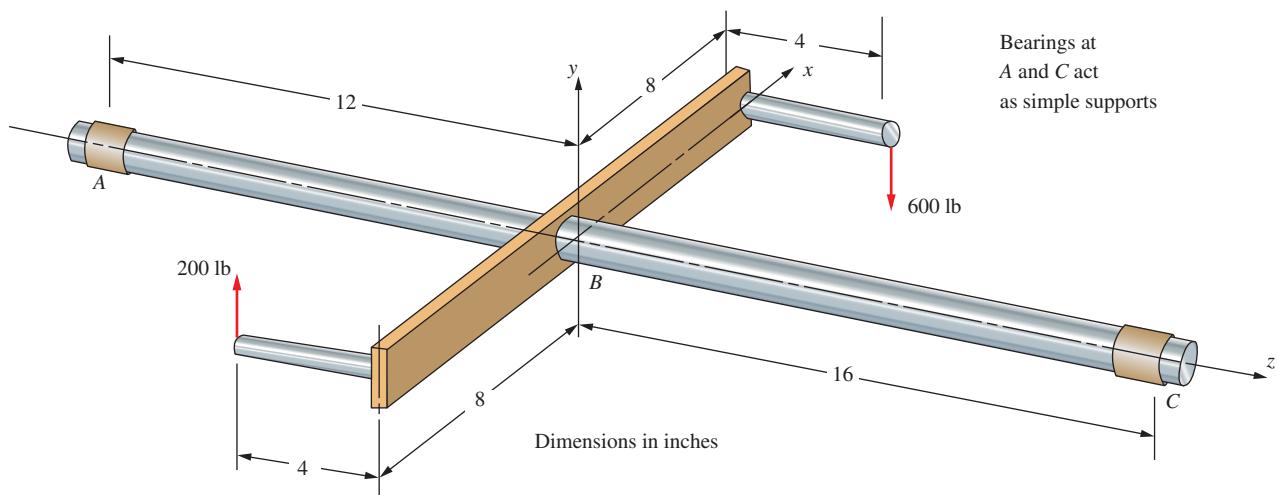


FIGURE P3–48 (Problem 48)

49. Use Figure P3–49.

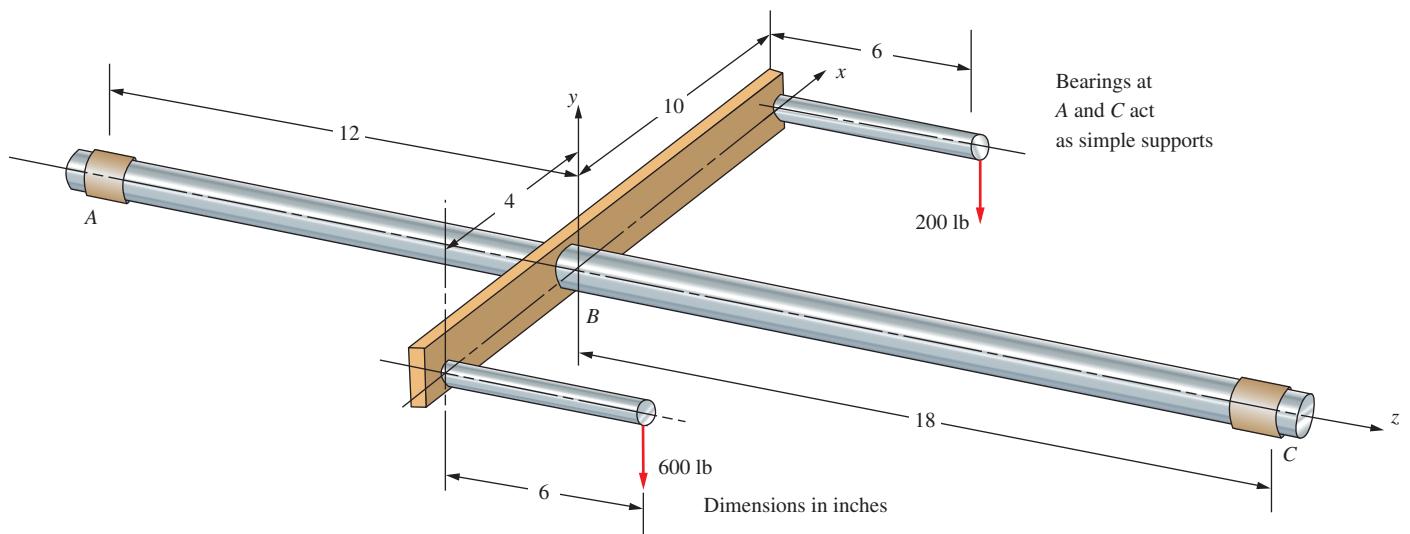


FIGURE P3–49 (Problem 49)

50. Use Figure P3–50.

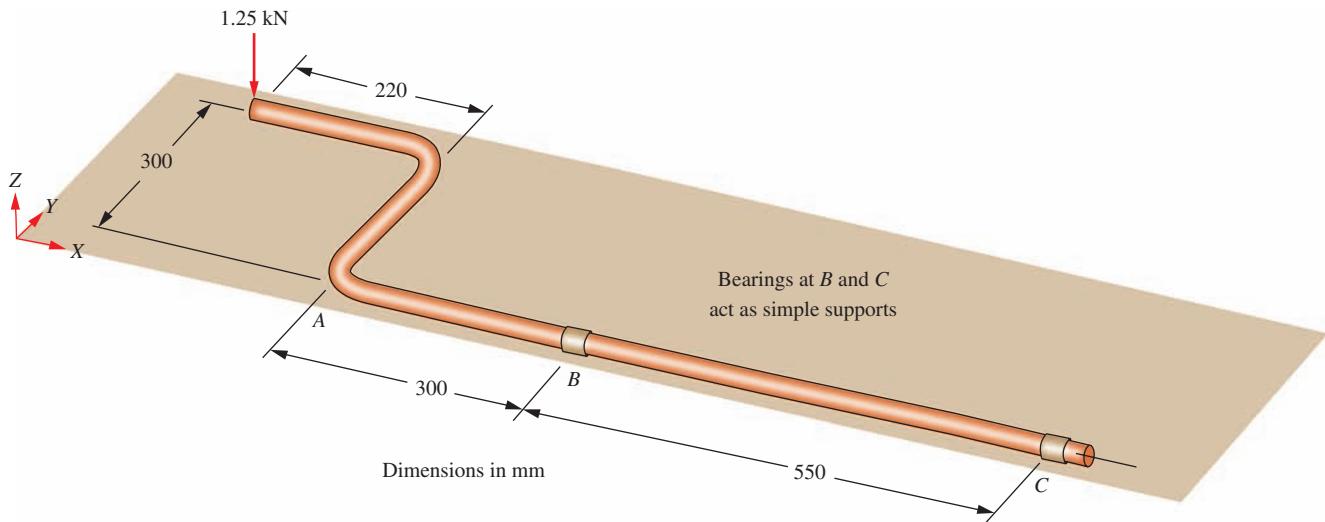


FIGURE P3–50 (Problem 50)

Combined Normal Stresses

51. Compute the maximum tensile stress in the bracket shown in Figure P3–51.

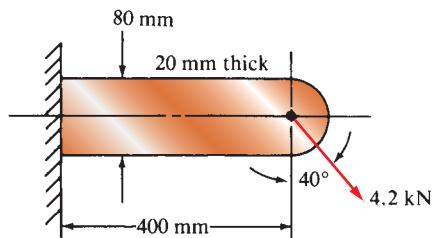


FIGURE P3–51 (Problem 51)

52. Compute the maximum tensile and compressive stresses in the horizontal beam shown in Figure P3–52.

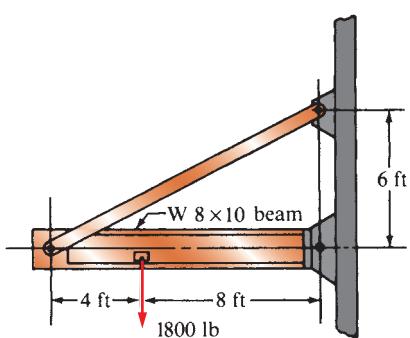


FIGURE P3–52 (Problem 52)

53. For the lever shown in Figure P3–53(a), compute the stress at section A near the fixed end. Then redesign the lever to the tapered form shown in Figure P3–5 (b) by adjusting only the height of the cross section at

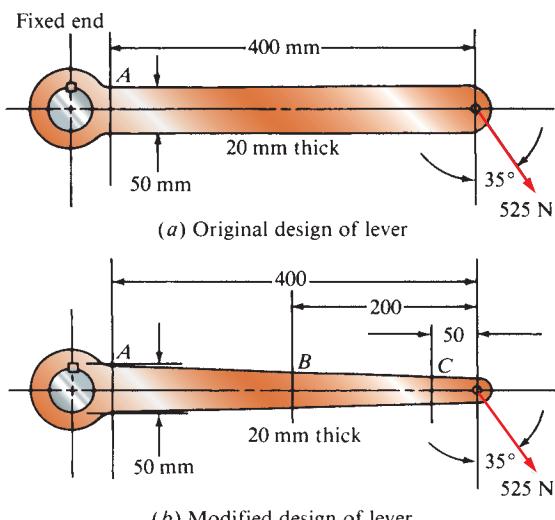


FIGURE P3–53 (Problem 53)

sections B and C so that they have no greater stress than section A.

54. Compute the maximum tensile stress at sections A and B on the crane boom shown in Figure P3–54.
55. Refer to Figure 3–22. Compute the maximum tensile stress in the print head just to the right of the right guide. The head has a rectangular cross section, 5.0 mm high in the plane of the paper and 2.4 mm thick.
56. Refer to Figure P3–8. Compute the maximum tensile and compressive stresses in the member B-C if the load F is 1800 lb. The cross section of B-C is a HSS $6 \times 4 \times 1/4$ rectangular tube.
57. Refer to P3–39. The vertical member is to be made from steel with a maximum allowable stress of 12 000 psi. Specify the required size of a standard

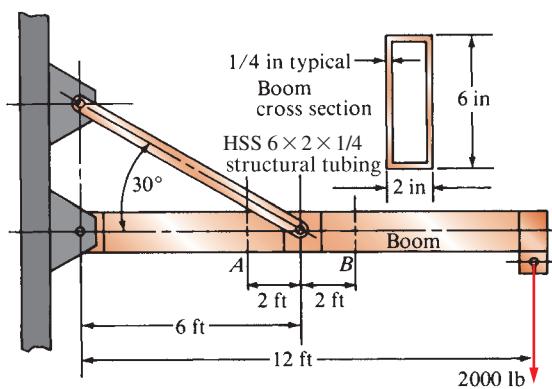


FIGURE P3-54 (Problem 54)

square cross section if sizes are available in increments of $1/16$ in.

58. Refer to P3-42. Compute the maximum stress in the horizontal portion of the bar, and tell where it occurs on the cross section. The left support resists the axial force.
59. Refer to P3-43. Compute the maximum stress in the horizontal portion of the bar, and indicate where it occurs on the cross section. The right support resists the unbalanced axial force.
60. Refer to P3-47. Specify a suitable diameter for a solid circular bar to be used for the top horizontal member, which is supported in the bearings. The left bearing resists the axial load. The allowable normal stress is 25 000 psi.

Stress Concentrations

61. Figure P3-61 shows a valve stem from an engine subjected to an axial tensile load applied by the valve spring. For a force of 1.25 kN, compute the maximum stress at the fillet under the shoulder.
62. The conveyor fixture shown in Figure P3-62 carries three heavy assemblies (1200 lb each). Compute the maximum stress in the fixture, considering stress concentrations at the fillets and assuming that the load acts axially.
63. For the flat plate in tension in Figure P3-63, compute the stress at each hole, assuming that the holes are sufficiently far apart that their effects do not interact.

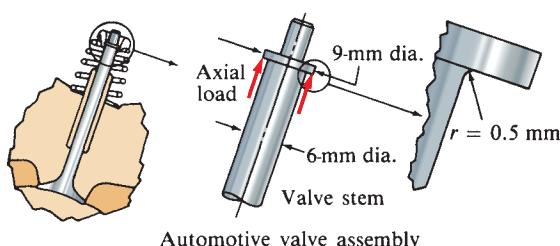


FIGURE P3-61 (Problem 61)

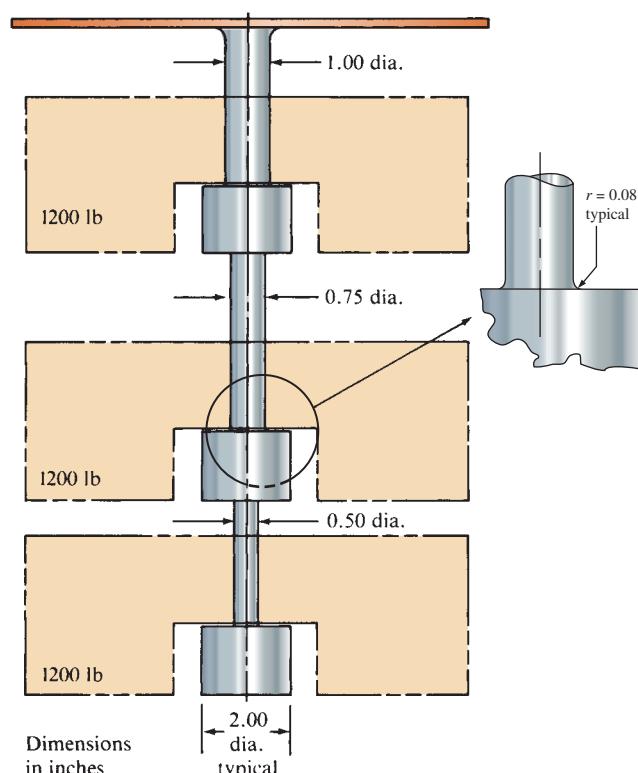


FIGURE P3-62 (Problem 62)

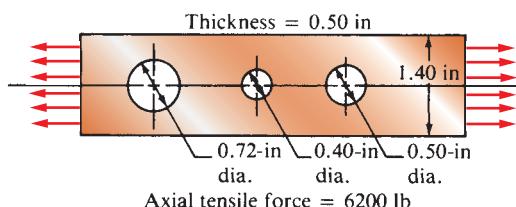


FIGURE P3-63 (Problem 63)

For Problems 64 through 68, compute the maximum stress in the member, considering stress concentrations.

64. Use Figure P3-64.

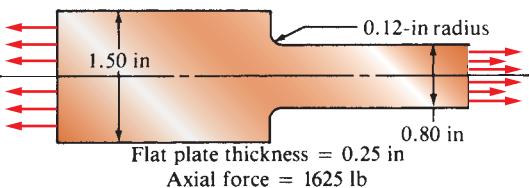


FIGURE P3-64 (Problem 64)

65. Use Figure P3-65.

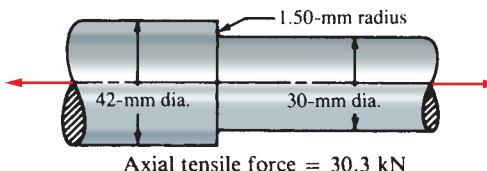


FIGURE P3-65 (Problem 65)

66. Use Figure P3–66.

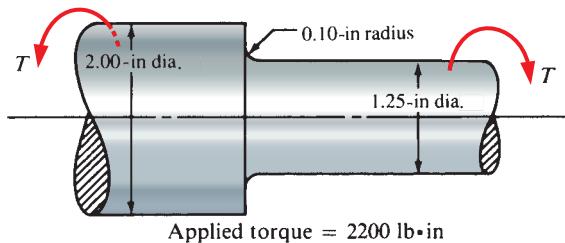


FIGURE P3–66 (Problem 66)

67. Use Figure P3–67.

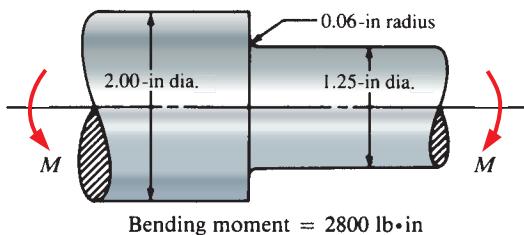


FIGURE P3–67 (Problem 67)

68. Use Figure P3–68.

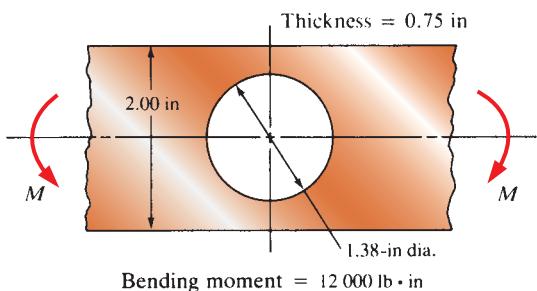


FIGURE P3–68 (Problem 68)

Problems of a General Nature

69. Figure P3–69 shows a horizontal beam supported by a vertical tension link. The cross sections of both the beam and the link are 20 mm square. All connections use 8.00 mm-diameter cylindrical pins in double shear. Compute the tensile stress in member A-B, the

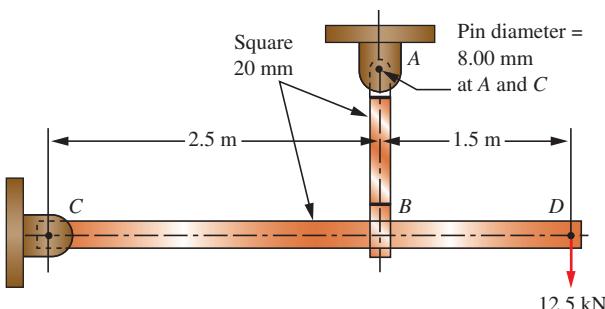


FIGURE P3–69 (Problem 69)

stress due to bending in C-D, and the shearing stress in the pins A and C.

70. Figure P3–70 shows a tapered flat bar that has a uniform thickness of 20 mm. The depth tapers from $h_1 = 40$ mm near the load to $h_2 = 20$ mm at each support. Compute the stress due to bending in the bar at points spaced 40 mm apart from the support to the load. Let the load $P = 5.0$ kN.
71. For the flat bar shown in Figure P3–70, compute the stress in the middle of the bar if a hole of 25 mm diameter is drilled directly under the load on the horizontal centerline. The load is $P = 5.0$ kN. See data in Problem 70.

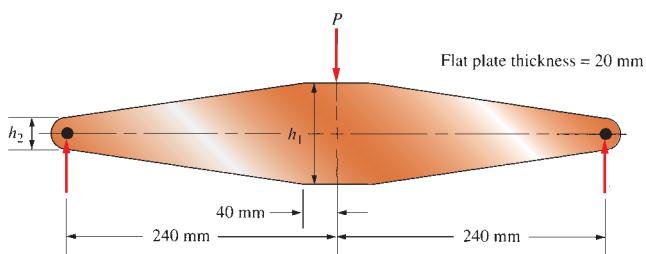


FIGURE P3–70 Tapered flat bar for Problems 70 and 71

72. The beam shown in Figure P3–72 is a stepped, flat bar having a constant thickness of 1.20 in. It carries a single concentrated load at C of 1500 lb. Compare the stresses at the following locations:
- In the vicinity of the load
 - At the section through the smaller hole to the right of section C
 - At the section through the larger hole to the right of section C
73. Figure P3–73 shows a stepped, flat bar having a constant thickness of 8.0 mm. It carries three concentrated loads as shown. Let $P = 200$ N, $L_1 = 180$ mm, $L_2 = 80$ mm, and $L_3 = 40$ mm. Compute the maximum stress due to bending, and state where it occurs. The bar is braced against lateral bending and twisting. Note that the dimensions in the figure are not drawn to scale.
74. Figure P3–74 shows a bracket carrying opposing forces of $F = 2500$ N. Compute the stress in the upper horizontal part through one of the holes as at B. Use $d = 15.0$ mm for the diameter of the holes.
75. Repeat Problem 74, but use a hole diameter of $d = 12.0$ mm.
76. Figure P3–76 shows a lever made from a rectangular bar of steel. Compute the stress due to bending at the fulcrum (20 in from the pivot) and at the section through the bottom hole. The diameter of each hole is 1.25 in.
77. For the lever in P3–76, determine the maximum stress if the attachment point is moved to each of the other two holes.
78. Figure P3–78 shows a shaft that is loaded only in bending. Bearings are located at points B and D to allow the shaft to rotate. Pulleys at A, C, and E carry cables that support loads from below while allowing

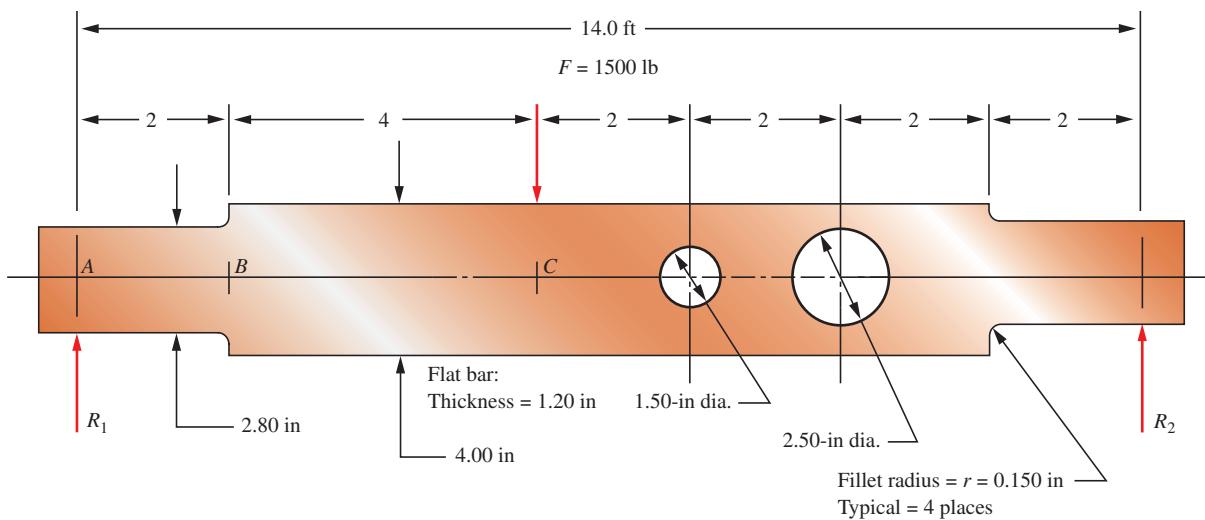


FIGURE P3-72 (Problem 72)

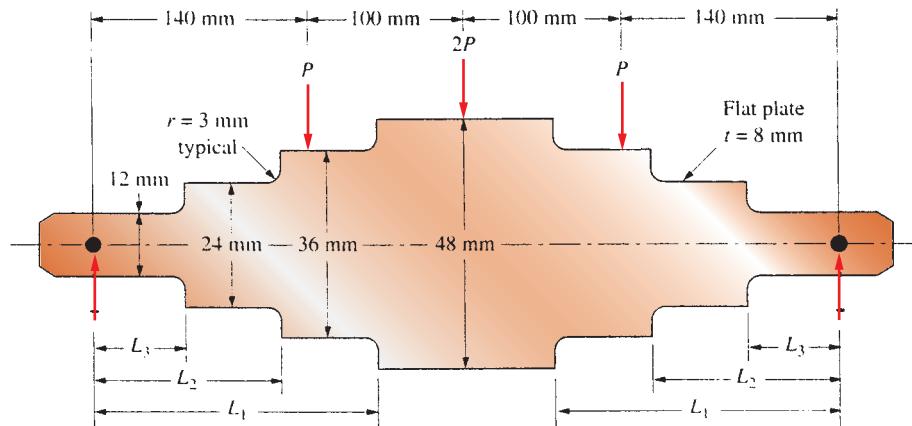


FIGURE P3-73 Stepped flat bar for Problem 73

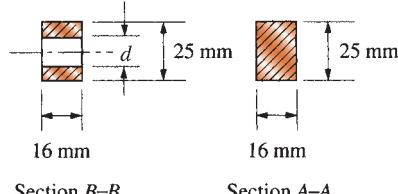
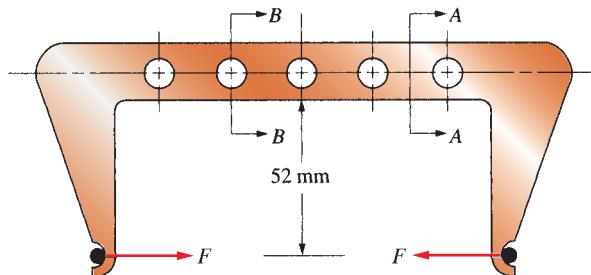


FIGURE P3-74 Bracket for Problems 74 and 75

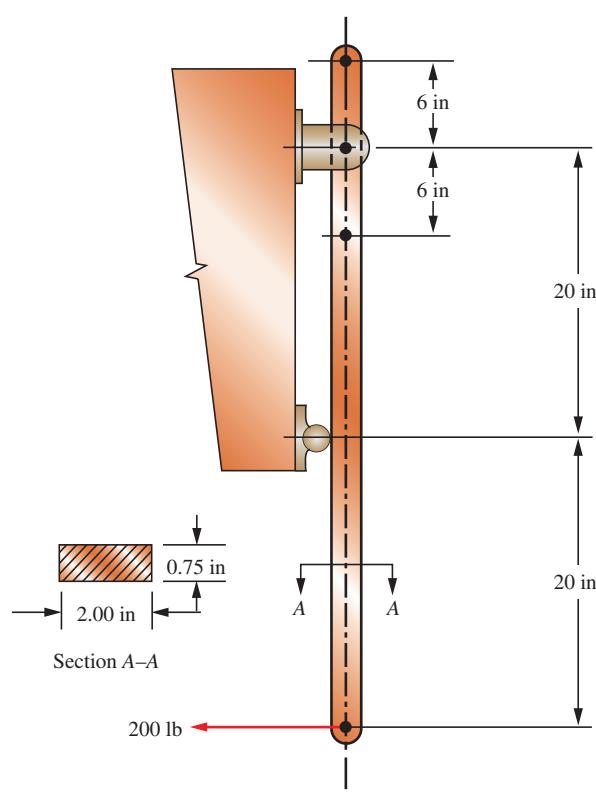


FIGURE P3-76 Lever for Problems 76 and 77

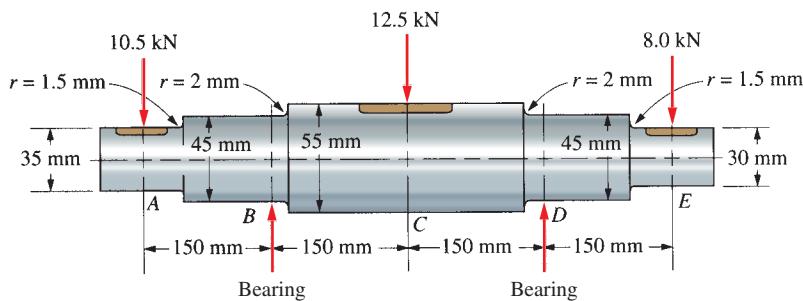


FIGURE P3-78 Data for Problem 78

the shaft to rotate. Compute the maximum stress due to bending in the shaft considering stress concentrations.

Lug Joints

79. For the vertical beam support shown in Figure P3-69, design the clevis joint at point A according to the recommendations described in Section 3-21 on stress concentrations. Use the given pin diameter, $d = 8.0 \text{ mm}$, and lug width, $w = 20.0 \text{ mm}$, using the terminology shown in Figure 3-28. The primary design decisions are the thickness of the lug, t , and the materials for the lug and the pin. Work toward a design factor of $N = 5$ based on ultimate strength for both tension in the lug and shearing of the pin.
80. Repeat Problem 3-79 for Joint A in Figure P3-8, using the data from Problem 3-8. All dimensions for the pin and the lug of the clevis are to be specified.

Curved Beams

81. A hanger is made from ASTM A36 structural steel bar with a square cross section, 10 mm on a side, as shown in Figure P3-81. The radius of curvature is 150 mm to the inside surface of the bar. Determine the load F that would cause yielding of the steel.

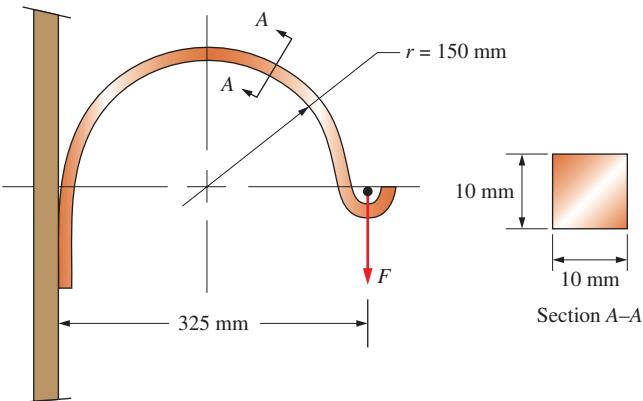


FIGURE P3-81 Hanger for Problem 3-81

82. A coping saw frame shown in Figure P3-82 is made from SAE 1020 CD steel. A screw thread in the handle draws the blade of the saw into a tension of 120 N. Determine the resulting design factor based on yield strength in the area of the corner radii of the frame.

83. Repeat Problem 3-82 for the hacksaw frame shown in Figure P3-83 when the tensile force in the blade is 480 N.

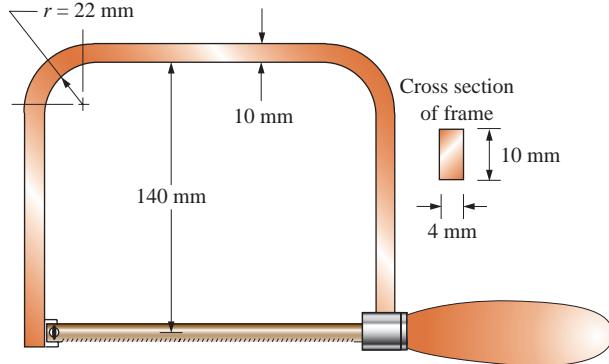


FIGURE P3-82 Coping saw frame for Problem 3-82

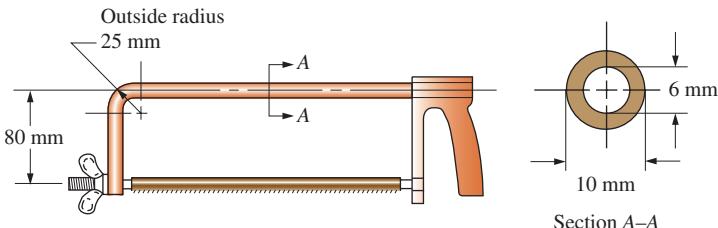


FIGURE P3-83 Hacksaw frame for Problem 3-83

84. Figure P3-84 shows a hand garden tool used to break up soil. Compute the force applied to the end of one prong that would cause yielding in the curved area. The tool is made from cast aluminum, alloy 356.0-T6.
85. Figure P3-85 shows a basketball backboard and goal attached to a steel pipe that is firmly cemented into the ground. The force, $F = 230 \text{ lb}$, represents a husky player hanging from the back of the rim. Compute the design factor based on yield strength for the pipe if it is made from ASTM A53 Grade B structural steel.
86. The C-clamp in Figure P3-86 is made of cast zinc, ZA12. Determine the force that the clamp can exert for a design factor of 3 based on ultimate strength in either tension or compression.

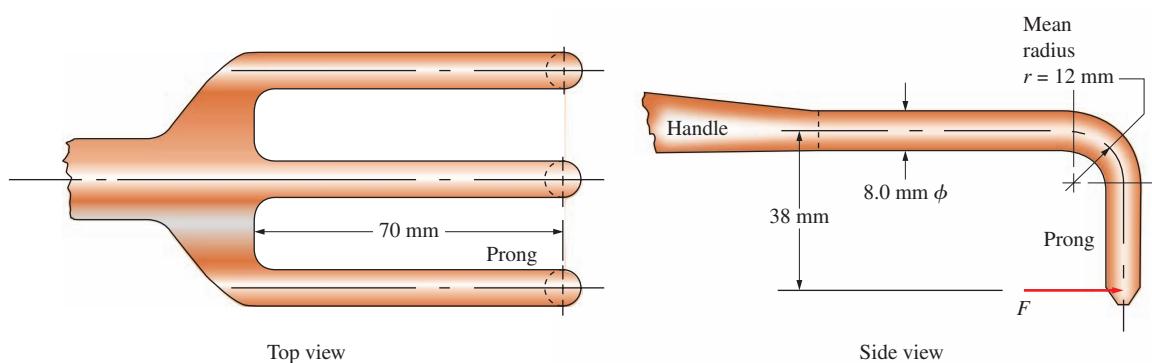


FIGURE P3-84 Garden tool for Problem 3-84

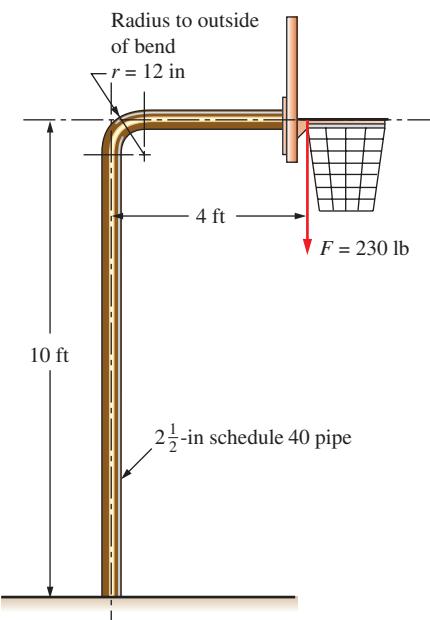


FIGURE P3-85 Basketball backboard for Problem 3-85

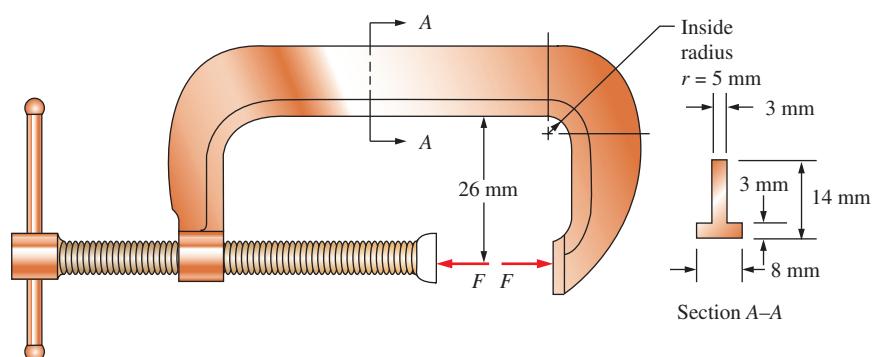


FIGURE P3-86 C-clamp for problem 3-86

COMBINED STRESSES AND STRESS TRANSFORMATION

The Big Picture

You Are the Designer

- 4–1 Objectives of This Chapter
- 4–2 General Case of Combined Stress
- 4–3 Stress Transformation
- 4–4 Mohr's Circle and Tresca and von Mises Stresses
- 4–5 Mohr's Circle Practice Problems
- 4–6 Mohr's Circle for Special Stress Conditions
- 4–7 Analysis of Complex Loading Conditions

THE BIG PICTURE

Combined Stresses and Stress Transformation

Discussion Map

- You must build your ability to analyze more complex parts and loading patterns.

This chapter helps you analyze complex objects to determine maximum stresses. We will use *Mohr's circle*, a graphical tool for stress transformation, as an aid in understanding how stresses can be transformed to obtain principal stresses.

In Chapter 3, you reviewed the basic principles of stress and deformation analysis, practiced the application of those principles to machine design problems, and solved some problems by superposition when two or more types of loads caused normal, either tensile or compressive, stresses.

But what happens when the loading pattern is more complex?

Many practical machine components experience combinations of normal and shear stresses. Sometimes the pattern of loading or the geometry of the component causes the analysis to be very difficult to solve directly using the methods of basic stress analysis.

Look around you and identify products, parts of structures, or machine components that have a more complex loading or geometry. Perhaps some of those identified in **The Big Picture** for Chapter 3 have this characteristic.

Discuss how the selected items are loaded, where the maximum stresses are likely to occur, and how the loads and the geometry are related. Did the designer

Discover

Find products around you that have complex geometries or loading patterns.

Discuss these products with your colleagues.

tailor the shape of the object to be able to carry the applied loads in an efficient manner? How are the shape and the size of critical parts of the item related to the expected stresses?

When we move on to **Chapter 5: Design for Different Types of Loading**, we will need tools to determine the magnitude and the direction of maximum shear stresses or maximum principal (normal) stresses.

Completing this chapter will help you develop a clear understanding of the distribution of stress in a load-carrying member, and it will help you determine the maximum stresses, either normal or shear, so that you can complete a reliable design or analysis.

Some of the techniques of combining stresses require the application of fairly involved equations. A graphical tool, *Mohr's circle*, can be used as an aid in completing the analysis. Applied properly, the method is precise and should aid you in understanding how the stresses can be represented in a complex load-carrying member. It should also help you correctly use the commercially available stress analysis software.

YOU ARE THE DESIGNER

Your company is designing a special machine to test a high-strength fabric under prolonged exposure to a static load to determine whether it continues to deform a greater amount with time. The tests will be run at a variety of temperatures requiring a controlled environment around the test specimen. Figure 4–1 shows the general layout of one proposed design. Two rigid supports are available

at the rear of the machine with a 24-in gap between them. The line of action of the load on the test fabric is centered on this gap and 15.0 in out from the middle of the supports. You are asked to design a bracket to hold the upper end of the load frame.

Assume that one of your design concepts uses the arrangement shown in Figure 4–2. Two circular bars are bent 90°. One end of

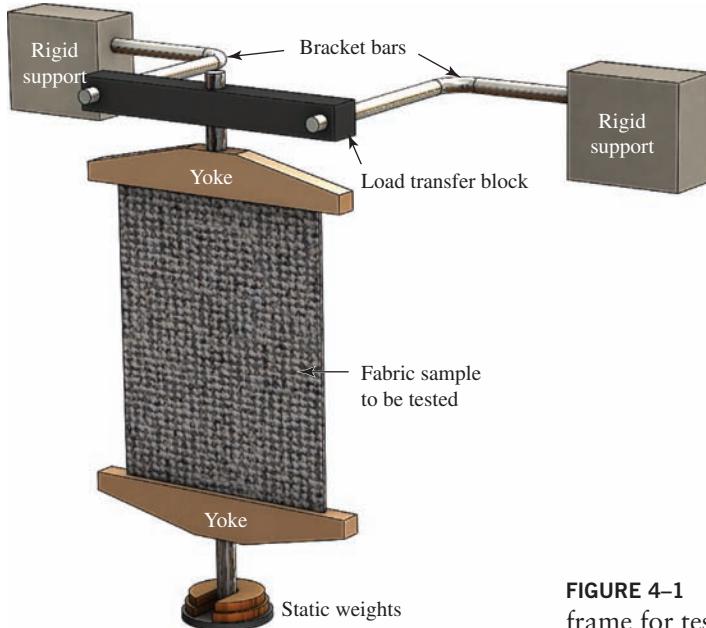


FIGURE 4–1 General concept for a load frame for testing fabric strength

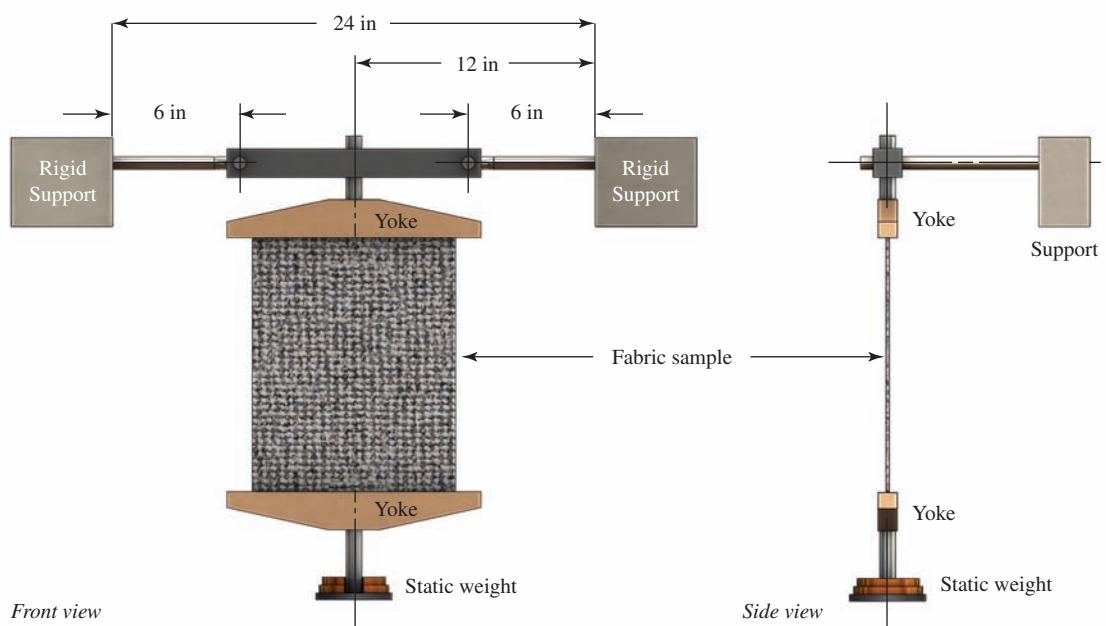
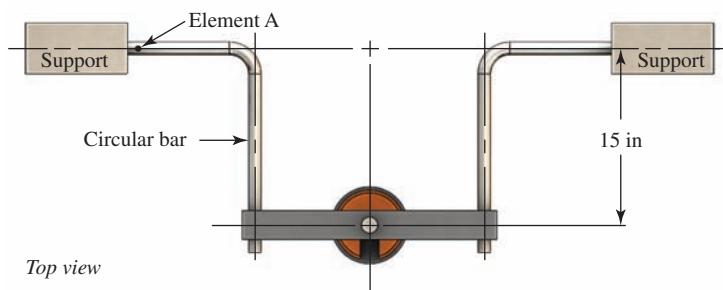


FIGURE 4–2
Proposed
bracket design

each bar is securely welded to the vertical support surface. A flat load transfer block is attached across the outboard end of each bar so that the load is shared evenly by the two bars.

One of your design problems is to determine the maximum stress that exists in the bent bars to ensure that they are safe. What kinds of stress are developed in the bars? Where are the stresses likely to be the greatest? How can the magnitude of the stresses be computed? Note that the part of the bar near its attachment to the support has a combination of stresses exerted on it.

Consider the element on the top surface of the bar, labeled element A in Figure 4–2. The moment caused by the force acting at an

extension of 6.0 in from the support places element A in tension due to the bending action. The torque caused by the force acting 15.0 in out from the axis of the bar at its point of support creates a torsional shear stress on element A. Both of these stresses act in the x - y plane, subjecting element A to a combined normal and shear stress. How do you analyze such a stress condition? How do the tensile and shear stresses act together? What are the maximum normal stress and the maximum shear stress on element A, and where do they occur?

You would need such answers to complete the design of the bars. The material in this chapter will enable you to complete the necessary analyses. ■

4-1 OBJECTIVES OF THIS CHAPTER

After completing this chapter, you will be able to:

1. Illustrate a variety of combined stresses on stress elements.
2. Analyze a load-carrying member subjected to combined stress to determine the principal stresses, the maximum normal stress and the maximum shear stress on any given element.
3. Determine the coordinate system in which the principal stresses are aligned.
4. Determine the state of stress on an element in any specified coordinate system.
5. Draw the complete Mohr's circle as an aid in completing the analyses for the maximum stresses.

4-2 GENERAL CASE OF COMBINED STRESS

To visualize the general case of combined stress, it is helpful to consider a small element of the load-carrying member on which combined normal and shear stresses act. Figure 4–3(a) shows the general case of a three-dimensional stress element.

The most general representation of stress at a point is three dimensional (triaxial), visualized as a cube-like structure shown in Figure 4–3(a) on an x -, y -, and z -axis system. The following characteristics describe the system of stresses that can act on the cubic element.

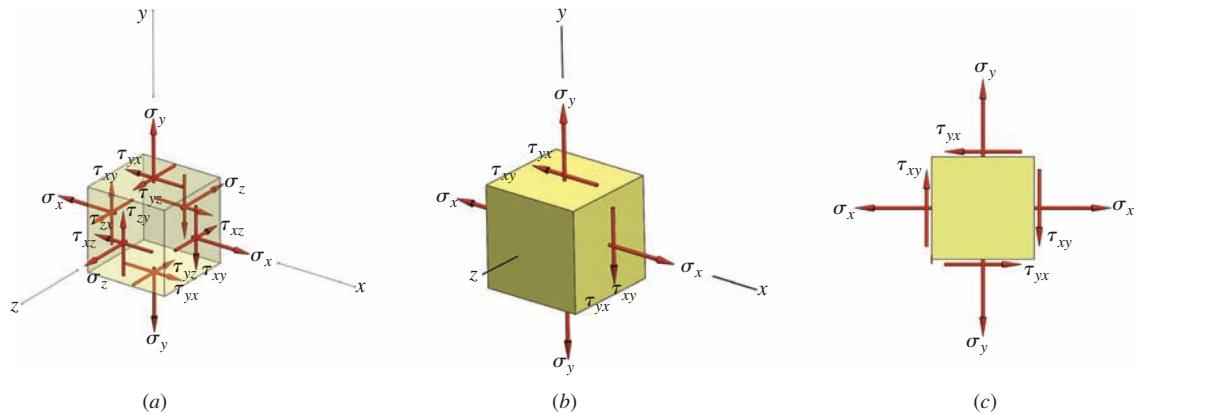


FIGURE 4–3 General three-dimensional (a) and two-dimensional stress states (b) and (c)

Figure 4–3. If the normal stresses were compressive (negative), the vectors would be pointing in the opposite sense, into the stress element.

The shear stress could be due to direct shear, torsional shear, or vertical shear stress. The double-subscript notation helps to orient the direction of shear stresses. For example, τ_{xy} indicates the shear stress acting on the element face that is perpendicular to the x -axis, and the direction of the shear stress is parallel to the y -axis.

Sign Convention

A positive shear stress is one that tends to rotate the stress element clockwise. In Figure 4–3, τ_{xy} is positive and τ_{yx} is negative. Their magnitudes must be equal to maintain the element in equilibrium. It is necessary to determine the magnitudes and the signs of each of these stresses in order to show them properly on the stress element. Example Problem 4–1, which follows the definition of principal stresses, illustrates the process.

With the stress element defined, the objectives of the remaining analysis are to use stress transformation techniques to determine the principal stresses, the maximum and minimum normal stresses, the maximum shear stress, and the planes on which these stresses occur.

4–3 STRESS TRANSFORMATION

In mechanical design, we need to evaluate if the applied stresses would exceed the capability of the selected material. The capability of the material (e.g., yield strength) is typically obtained from one-dimensional uniaxial tensile test. If the stress state at the location of interest is one dimensional, the comparison is straightforward. In reality, a stress element is always in three-dimensional, and it can have six stress components. We will need a methodology to reduce the complexity of the stress state to do the comparison. For static loading, for example, we will reduce these six stress components to one single value and compare it to the yield strength of the material. To achieve this objective, the first step is to perform stress transformation to find the principal stresses. The second step is to find the “effective stress,” a single value, from the three principal stresses for the comparison. In this section, we show the following:

- The process of reducing six stress components (σ_x , σ_y , σ_z , τ_{xy} , τ_{xz} , and τ_{yz}) shown in part (a) of Figure 4–3, to three principal stresses (σ_1 , σ_2 , and σ_3) in a three-dimensional stress state is introduced.
- Similarly, for the two-dimensional plane-stress condition, in part (b) of the figure, the three stress components (σ_x , σ_y , and τ_{xy}), are reduced to three principle stresses. Note that in this case, one of the principal stresses is zero.
- It is important to note that the stress states before and after the transformation are “equivalent.”

Considering a small two-dimensional stress element, the applied normal and shear stresses, σ_x , σ_y , and τ_{xy} , in a given (x - y) coordinate system can be represented as a different set of normal and shear stresses, $\sigma'_{x'}$, $\sigma'_{y'}$, and $\tau'_{x'y'}$, in a different (x - y) coordinate system. The stress components in the new coordinate system can be obtained from the stress components in the original coordinate system through rotating the coordinate frame. The governing formulas for such *plane-stress transformation* follow. (See Reference 1 for the derivations.) Using ϕ as the angle of rotation of the coordinate system,

$$\sigma'_{x'} = \frac{\sigma_x + \sigma_y}{2} + \frac{\sigma_x - \sigma_y}{2} \cos 2\phi + \tau_{xy} \sin 2\phi \quad (4-1)$$

$$\sigma'_{y'} = \frac{\sigma_x + \sigma_y}{2} - \frac{\sigma_x - \sigma_y}{2} \cos 2\phi - \tau_{xy} \sin 2\phi \quad (4-2)$$

$$\tau'_{x'y'} = -\frac{\sigma_x - \sigma_y}{2} \sin 2\phi + \tau_{xy} \cos 2\phi \quad (4-3)$$

Maximum and Minimum Principal Stresses

The maximum and the minimum normal stresses can be obtained from differentiating Equations (4–1) and (4–2) with respect to ϕ and setting the results to zero. Using ϕ_σ for the rotation angle required to obtain the maximum and minimum normal stresses, we get:

$$\tan 2\phi_\sigma = \frac{\tau_{xy}}{\left(\frac{\sigma_x - \sigma_y}{2}\right)} \quad (4-4)$$

Solving for ϕ_σ and substituting the result into Equations (4–1) and (4–2) leads to the following:

Maximum normal stress

$$\sigma_1 = \frac{1}{2}(\sigma_x + \sigma_y) + \sqrt{\left[\frac{1}{2}(\sigma_x - \sigma_y)\right]^2 + \tau_{xy}^2} \quad (4-5)$$

Minimum normal stress

$$\sigma_2 = \frac{1}{2}(\sigma_x + \sigma_y) - \sqrt{\left[\frac{1}{2}(\sigma_x - \sigma_y)\right]^2 + \tau_{xy}^2} \quad (4-6)$$

These two stresses are also called the maximum and the minimum principal stresses, such that

$$\sigma_1 > \sigma_2.$$

Particularly in experimental stress analysis, it is important to know the orientation of the principal stresses. The angle of inclination of the planes on which the principal stresses act, called the principal planes, can be found from Equation (4–4).

Angle for Principal Stress Element

$$\phi_\sigma = \frac{1}{2} \arctan \left[\frac{\tau_{xy}}{(\sigma_x - \sigma_y)/2} \right] \quad (4-7)$$

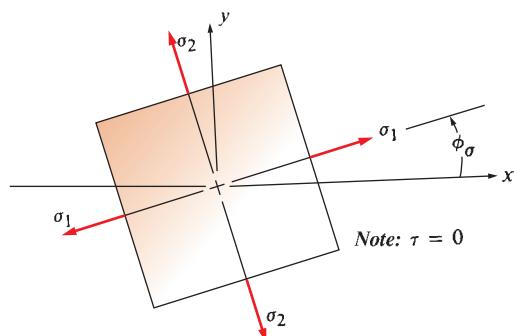


FIGURE 4-4 Principal stress element

The angle ϕ_σ is measured from the positive x -axis of the original stress element to the maximum principal stress σ_1 . Then the minimum principal stress, σ_2 , is on the plane 90° from σ_1 . When the stress element is oriented as discussed so that the principal stresses are acting on it, the shear stress is zero ($\tau_{x'y'} = \tau_{12} = 0$). The resulting stress element is shown in Figure 4-4.

Maximum Shear Stress

When the stress element is rotated to a different orientation, the maximum shear stress can occur. This can be derived by differentiating Equation (4-3) and setting the result equal to zero to obtain

$$\tan 2\phi_\tau = \frac{\left(\frac{\sigma_x - \sigma_y}{2}\right)}{\tau_{xy}} \quad (4-8)$$

where ϕ_τ is the rotation angle to obtain the maximum shear stress. Substituting ϕ_τ into Equation (4-3) results in the following:

♦ Maximum shear stress

$$\tau_{\max} = \sqrt{\left[\frac{1}{2}(\sigma_x - \sigma_y)\right]^2 + \tau_{xy}^2} \quad (4-9)$$

The angle of inclination of the element on which the maximum shear stress occurs is computed from Equation (4-8):

♦ Angle for maximum shear stress element

$$\phi_\tau = \frac{1}{2} \arctan \left[\frac{-(\sigma_x - \sigma_y)/2}{\tau_{xy}} \right] \quad (4-10)$$

The angle between the principal stress element and the maximum shear stress element is always 45° . On the maximum shear stress element, there will be normal stresses of equal magnitude acting perpendicular to the planes on which the maximum shear stresses are acting. These normal stresses have the following value:

♦ Average normal stress

$$\sigma_{\text{avg}} = (\sigma_x + \sigma_y)/2 \quad (4-11)$$

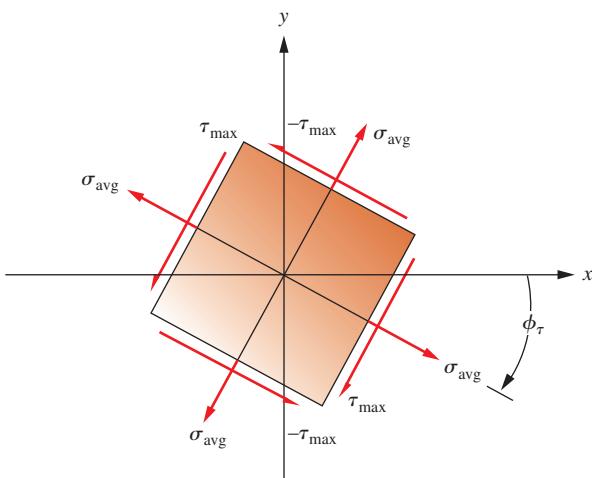


FIGURE 4-5 Maximum shear stress element

Note that this is the average of the two applied normal stresses. The resulting maximum shear stress element is shown in Figure 4-5. Note, as stated above, that the angle between the principal stress element and the maximum shear stress element is always 45° .

Three-Dimensional Stress Transformation

As discussed earlier, the most general state of a stress element has three normal and three shear stress components: σ_x , σ_y , σ_z , τ_{xy} , τ_{yz} , and τ_{zx} . The three-dimensional stress element can be rotated in three dimensions to a certain configuration such that there are three principal stresses, σ_1 , σ_2 , and σ_3 (and no shear stress) acting on the stress element. The derivation of the three-dimensional stress transformation is not presented here. The three principal stresses, however, can be determined by finding the roots of the following cubic equation:

$$\sigma^3 - C_2\sigma^2 + C_1\sigma - C_0 = 0 \quad (4-12)$$

where

$$C_2 = \sigma_x + \sigma_y + \sigma_z$$

$$C_1 = \sigma_x\sigma_y + \sigma_y\sigma_z + \sigma_z\sigma_x - \tau_{xy}^2 - \tau_{yz}^2 - \tau_{zx}^2$$

$$C_0 = \sigma_x\sigma_y\sigma_z + 2\tau_{xy}\tau_{yz}\tau_{zx} - \sigma_x\tau_{yz}^2 - \sigma_y\tau_{zx}^2 - \sigma_z\tau_{xy}^2$$

For design decision making (to be presented in Chapter 5), the principal stresses are typically ranked such that

$$\sigma_1 > \sigma_2 > \sigma_3 \quad (4-13)$$

Summary and General Procedure for Analyzing Combined Stresses

The following list gives a summary of the techniques presented in this section; it also outlines the general procedure for applying the techniques to a given stress analysis problem.

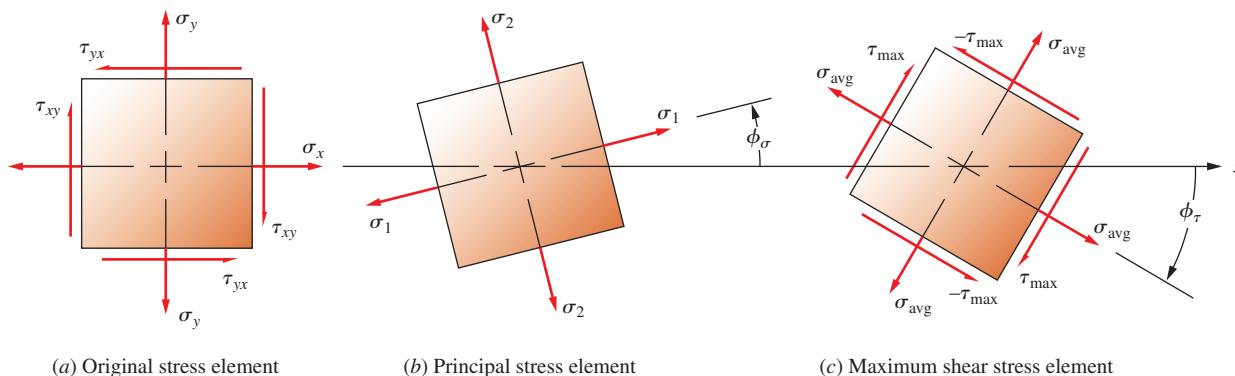


FIGURE 4-6 Relationships among original stress element, principal stress element, and maximum shear stress element for a given loading

GENERAL PROCEDURE FOR COMPUTING PRINCIPAL STRESSES AND MAXIMUM SHEAR STRESSES ▾

- Decide for which point you want to compute the stresses.
- Clearly specify the coordinate system for the object, the free-body diagram, and the magnitude and direction of forces.
- Compute the stresses on the selected point due to the applied forces, and show the stresses acting on a stress element at the desired point with careful attention to directions. Figure 4-3 is a model for how to show these stresses.
- Compute the principal stresses on the point and the directions in which they act. Use Equations (4-5) to (4-7).
- Draw the stress element on which the principal stresses act, and show its orientation relative to the original x-axis.

It is recommended that the principal stress element be drawn beside the original stress element to illustrate the relationship between them.

- Compute the maximum shear stress on the element and the orientation of the plane on which it acts. Also, compute the normal stress that acts on the maximum shear stress element. Use Equations (4-9) to (4-11).
- Draw the stress element on which the maximum shear stress acts, and show its orientation to the original x-axis. It is recommended that the maximum shear stress element be drawn beside the maximum principal stress element to illustrate the relationship between them.
- The resulting set of three stress elements will appear as shown in Figure 4-6.

The following example problem illustrates the use of this procedure.

Example Problem

4-1

The shaft shown in Figure 4-7 is supported by two bearings and carries two V-belt sheaves. The tensions in the belts exert horizontal forces on the shaft, tending to bend it in the x-z plane. Sheave B exerts a clockwise torque on the shaft when viewed toward the origin of the coordinate system along the x-axis. Sheave C exerts an equal but opposite torque on the shaft. For the loading condition shown, determine the principal stresses and the maximum shear stress on element K on the front surface of the shaft (on the positive z-side) just to the right of sheave B. Follow the general procedure for analyzing combined stresses given in this section.

Solution

Objective Compute the principal stresses and the maximum shear stresses on element K.

Given Shaft and loading pattern shown in Figure 4-7. The forces at locations B and C are identified as 550 lb and 275 lb, respectively. These forces are determined by the tight side and slack side of the belt forces discussed in Section 12-3.

Analysis Use the general procedure for analyzing combined stresses.

Results Element K is subjected to bending that produces a tensile stress acting in the x-direction. Also, there is a torsional shear stress acting at K. Figure 4-8 shows the shearing force and bending moment diagrams for the shaft and indicates that the bending moment at K is 1540 lb · in. The bending stress is therefore

$$\sigma_x = M/S$$

$$S = \pi D^3/32 = [\pi(1.25 \text{ in})^3]/32 = 0.192 \text{ in}^3$$

$$\sigma_x = (1540 \text{ lb} \cdot \text{in})/(0.192 \text{ in}^3) = 8030 \text{ psi}$$

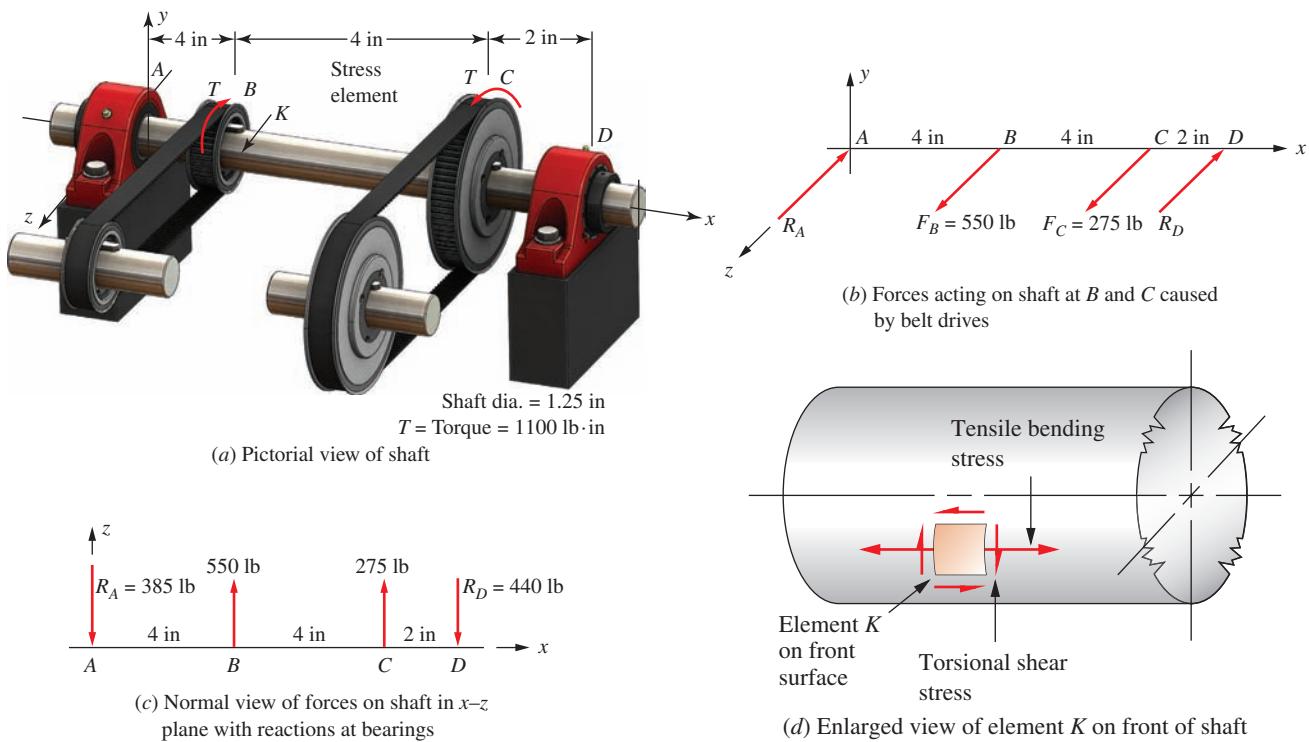


FIGURE 4-7 Shaft supported by two bearings and carrying two V-belt sheaves

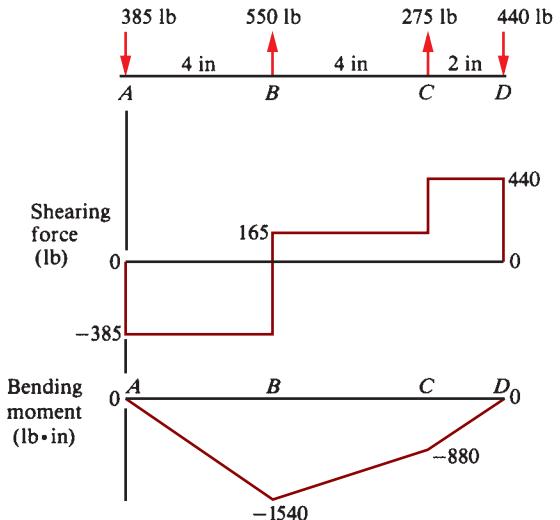



FIGURE 4-8 Shearing force and bending moment diagrams for the shaft

The torsional shear stress acts on element K in a way that causes a downward shear stress on the right side of the element and an upward shear stress on the left side. This action results in a tendency to rotate the element in a *clockwise* direction, which is the *positive* direction for shear stresses according to the standard convention. Also, the notation for shear stresses uses double subscripts. For example, τ_{xy} indicates the shear stress acting on the face of an element that is perpendicular to the x -axis and parallel to the y -axis. Thus, for element K ,

$$\tau_{xy} = T/Z_p$$

$$Z_p = \pi D^3/16 = \pi(1.25 \text{ in})^3/16 = 0.383 \text{ in}^3$$

$$\tau_{xy} = (1100 \text{ lb}\cdot\text{in})/(0.383 \text{ in}^3) = 2870 \text{ psi}$$

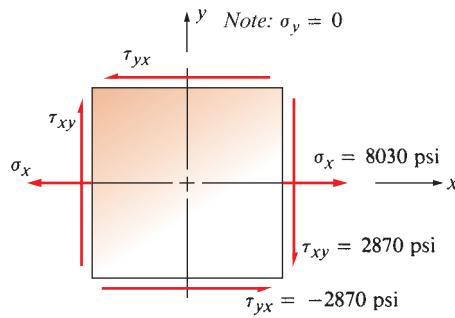**FIGURE 4-9** Stresses on element *K*

The values of the normal stress, σ_x , and the shear stress, τ_{xy} , are shown on the stress element *K* in Figure 4-9. Note that the stress in the *y*-direction is zero for this loading. Also, the value of the shear stress, τ_{yx} , must be equal to τ_{xy} , and it must act as shown in order for the element to be in equilibrium.

We can now compute the principal stresses on the element, using previously developed equations. Noting that σ_y is zero, the maximum principal stress is

$$\sigma_1 = \frac{\sigma_x + \sigma_y}{2} + \sqrt{\left(\frac{\sigma_x - \sigma_y}{2}\right)^2 + \tau_{xy}^2} \quad (4-5)$$

$$\sigma_1 = [(8030 - 0 \text{ psi})/2] + \sqrt{[(8030 \text{ psi} - 0 \text{ psi})/2]^2 + (2870 \text{ psi})^2}$$

$$\sigma_1 = 4015 \text{ psi} + 4935 \text{ psi} = 8950 \text{ psi}$$

The minimum principal stress is

$$\sigma_2 = \frac{\sigma_x + \sigma_y}{2} - \sqrt{\left(\frac{\sigma_x - \sigma_y}{2}\right)^2 + \tau_{xy}^2} \quad (4-6)$$

$$\sigma_2 = [(8030 \text{ psi} - 0 \text{ psi}/2)] - \sqrt{[(8030 \text{ psi} - 0 \text{ psi})/2]^2 + (2870 \text{ psi})^2}$$

$$\sigma_2 = 4015 \text{ psi} - 4935 \text{ psi} = -920 \text{ psi (compression)}$$

The direction in which the maximum principal stress acts is

$$\phi_\sigma = \frac{1}{2} \arctan [2\tau_{xy}/(\sigma_x - \sigma_y)] \quad (4-7)$$

$$\phi_\sigma = \frac{1}{2} \arctan [(2)(2870 \text{ psi})/(8030 \text{ psi} - 0 \text{ psi})] = +17.8^\circ$$

The positive sign calls for a *clockwise* rotation of the element.

The principal stresses can be shown on a stress element as illustrated in Figure 4-10(b). Note that the element is shown in relation to the original element to emphasize the direction of the principal stresses in relation to the original *x*-axis. The positive sign for ϕ_σ indicates that the principal stress element is rotated *clockwise* from its original position.

Now the maximum shear stress element can be defined using Equations (4-9) through (4-11):

$$\tau_{\max} = \sqrt{\left(\frac{\sigma_x - \sigma_y}{2}\right)^2 + \tau_{xy}^2} \quad (4-9)$$

$$\tau_{\max} = \sqrt{(8030 \text{ psi} - 0)/2)^2 + (2870 \text{ psi})^2}$$

$$\tau_{\max} = \pm 4935 \text{ psi}$$

The two pairs of shear stresses $+\tau_{\max}$ and $-\tau_{\max}$ are equal in magnitude but opposite in direction.

The orientation of the element on which the maximum shear stress acts is found from Equation (4-10):

$$\phi_\tau = \frac{1}{2} \arctan [-(\sigma_x - \sigma_y)/2\tau_{xy}] \quad (4-10)$$

$$\phi_\tau = \frac{1}{2} \arctan [-(8030 \text{ psi} - 0)/[(2)(2870 \text{ psi})]] = -27.2^\circ$$

The negative sign calls for a *counterclockwise* rotation of the element.

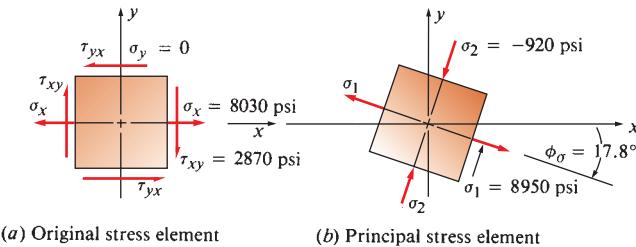


FIGURE 4-10 Principal stress element

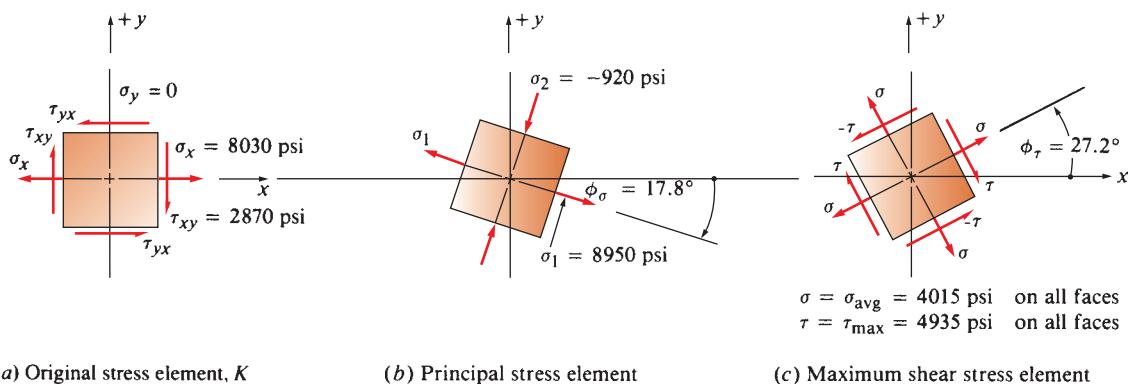


FIGURE 4-11 Relation of maximum shear stress element to the original stress element and the principal stress element

There are equal normal stresses acting on the faces of this stress element, which have the value of

$$\begin{aligned}\sigma_{\text{avg}} &= (\sigma_x + \sigma_y)/2 \\ \sigma_{\text{avg}} &= (8030 \text{ psi} - 0)/2 = 4015 \text{ psi}\end{aligned}\quad (4-11)$$

Comments Figure 4-11(c) shows the stress element on which the maximum shear stress acts in relation to the original stress element. Note that the angle between this element and the principal stress element is 45°. It is typical to show all three stress elements side by side as shown in Figure 4-9.

Examine the results of Example Problem 4-1. The maximum principal stress, $\sigma_1 = 8950$ psi, is 11 percent greater than the value of $\sigma_x = 8030$ psi computed for the bending stress in the shaft acting in the x -direction. The maximum shear stress, $\tau_{\text{max}} = 4935$ psi, is 72% greater than the computed applied torsional shear stress of $\tau_{xy} = 2870$ psi. You will see in Chapter 5 that either the maximum normal stress or the maximum shear stress is often required for accurate failure prediction and for safe design decisions. The angles of the final stress elements also predict the alignment of the most damaging stresses that can be an aid in experimental stress analysis and the analysis of actual failed components.

4-4 MOHR'S CIRCLE

The process of computing the principal stresses and the maximum shear stress shown in Example Problem 4-1 may seem somewhat abstract. These same results can be obtained using a method called *Mohr's circle*, which

is discussed next. This method uses a combination of a graphical aid and simple calculations. With practice, the use of Mohr's circle should provide you with a more intuitive feel for the variations in stress that exist at a point in relation to the angle of orientation of the stress element. In addition, it provides a streamlined approach to determining the stress condition on any plane of interest. Because of the many terms and signs involved, and the many calculations required in the computation of the principal stresses and the maximum shear stress, there is a rather high probability of error. Using the graphic aid Mohr's circle helps to minimize errors and gives a better "feel" for the stress condition at the point of interest.

After Mohr's circle is constructed, it can be used for the following:

1. Finding the maximum and minimum principal stresses and the directions in which they act.
2. Finding the maximum shear stresses and the orientation of the planes on which they act.

3. Finding the value of the normal stresses that act on the planes where the maximum shear stresses act.
4. Finding the values of the normal and shear stresses that act on an element with any orientation.

The data needed to construct Mohr's circle are, of course, the same as those needed to compute the preceding values, because the graphical approach is an exact analogy to the computations.

If the normal and shear stresses that act on any two mutually perpendicular planes of an element are known, the circle can be constructed and any of items 1 through 4 can be found.

Mohr's circle is actually a plot of the combinations of normal and shearing stresses that exist on a stress element for all possible angles of orientation of the element. This method is particularly valuable in experimental stress analysis work because the results obtained from many types of standard strain gage instrumentation techniques give the necessary inputs for the creation of Mohr's circle. (See Reference 1.) When the principal stresses and the maximum shear stress are known, the complete design and analysis can be done, using the various theories of failure discussed in Chapter 5.

The following *Procedure for Constructing Mohr's Circle* first focuses on given stresses in a 2D plane only. Finding the principal stresses 1 and 2 are the primary goal along with the maximum shear stress and pertinent angles.

After this procedure is developed, an additional section called *Mohr's Circles for Three-Dimensional Stresses* describes how the more general 3D stress system can be analyzed.

PROCEDURE FOR CONSTRUCTING MOHR'S CIRCLE FOR A 2D STRESS SYSTEM ▾

1. Perform the stress analysis to determine the magnitudes and directions of the normal and shear stresses acting at the point of interest.
2. Draw the stress element at the point of interest as shown in Figure 4-12(a). Normal stresses on any two mutually perpendicular planes are drawn with tensile stresses positive—projecting outward from the element. Compressive stresses are negative—directed inward on the face. Note that the *resultants* of all normal stresses acting in the chosen directions are plotted. Shear stresses are considered to be positive if they tend to rotate the element in a *clockwise* (cw) direction, and negative otherwise. Note that on the stress element illustrated, σ_x is positive, σ_y is negative, τ_{xy} is positive, and τ_{yx} is negative. This assignment is arbitrary for the purpose of illustration. In general, any combination of positive and negative values could exist.
3. Refer to Figure 4-12(b). Set up a rectangular coordinate system in which the positive horizontal axis represents positive (tensile) normal stresses, and the positive vertical axis represents positive (clockwise) shear stresses. Thus, the plane created will be referred to as the $\sigma-\tau$ plane.

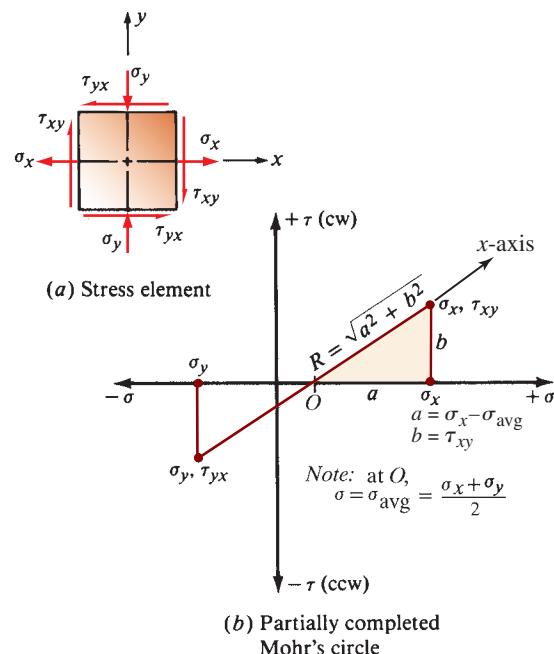


FIGURE 4-12 General form of a partially completed 2D Mohr's circle, Steps 1–7

4. Plot points on the $\sigma-\tau$ plane corresponding to the stresses acting on the faces of the stress element. If the element is drawn in the $x-y$ plane, the two points to be plotted are (σ_x, τ_{xy}) and (σ_y, τ_{yx}) . These are two points on Mohr's circle.
5. Draw the line connecting the two points. The resulting line crosses the σ -axis at the center of Mohr's circle at the average of the two applied normal stresses, where

$$\sigma_{avg} = (\sigma_x + \sigma_y)/2$$

The center of Mohr's circle is called O in Figure 4-12.

6. Now it is important to note that the line from the center of Mohr's circle, at O , and through the first plotted point, (σ_x, τ_{xy}) , represents the x -axis from the original stress element. **Draw and label an extension of this line at this time.** The direction of this line, of course, corresponds to a known direction on the actual component being analyzed. Angles of rotation for the principle stress element and the maximum shear stress element, found from Steps 11–14 later in this process, will be measured from this x -axis.
7. Note in Figure 4-12(b) that a right triangle has been formed, having the sides a , b , and R , where

$$R = \sqrt{a^2 + b^2}$$

By inspection, we can see that

$$a = \sigma_x - \sigma_{avg}$$


$$b = \tau_{xy}$$

Also compute the angle α within the triangle between lines a and R . You can see that


$$\alpha = \tan^{-1}(b/a) \quad \text{or} \quad \alpha = \sin^{-1}(b/R)$$

we can now proceed with the construction of the circle.

8. Draw the complete circle with the center at O and a radius of R , as shown in Figure 4-13(a).

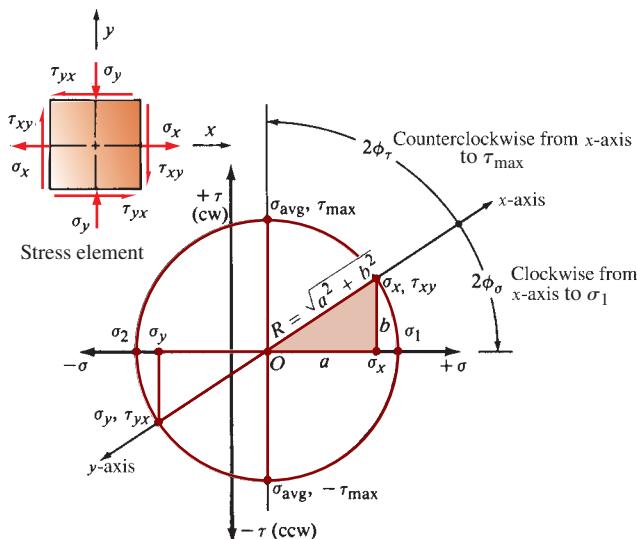

(a) Completed 2D Mohr's circle

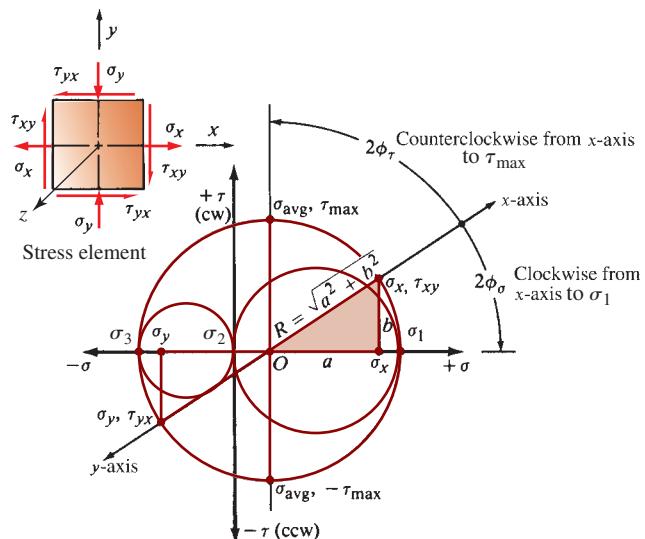

(b) Completed 3D Mohr's circle (Discussed after Example Problem 4-2)

FIGURE 4-13 General form for a completed 2D Mohr's circle, Steps 8–14; Complete 3D Mohr's circle (discussed later)

9. Find σ_1 , the maximum principal stress, at the point where the circle crosses the σ -axis at the right. Note that $\sigma_1 = \sigma_{avg} + R$. Because the Mohr's circle represents a plot of all possible combinations of normal and shear stresses on the element for any angle of orientation, it stands to reason that σ_1 lies at the right end of the horizontal diameter.

10. Find σ_2 , the minimum principal stress, at the left end of the horizontal diameter. Note that $\sigma_2 = \sigma_{avg} - R$.

11. Find τ_{max} , the maximum shear stress, at the top end of the vertical diameter of the circle. By observation, $\tau_{max} = R$, the radius of the circle. Note also that the coordinates for the point at the top of the circle are $(\sigma_{avg}, \tau_{max})$.

At this point in the process, it is important to realize that angles on Mohr's circle are actually double the true angles.


The following steps define the general method for finding the angles of orientation of the principal stress element and the maximum shear stress element in relation to the original x -axis, located in Step 6 and shown in Figure 4-13(a). Now we can observe that the line from the center of the circle to the second

plotted point, (σ_y, τ_{xy}) , represents the y -axis from the original stress element. Of course, the x -axis and the y -axis are truly 90° apart, whereas they are 180° apart on Mohr's circle, illustrating the double-angle phenomenon.

12. Find the angle called $2\phi_\sigma$, always measured **from the x -axis to the σ -axis**, and **note the direction—either clockwise or counterclockwise**. In the **current problem**, we can observe that $2\phi_\sigma = \alpha$, the angle found in Step 7, and the rotation is clockwise. **However, in other problems, the angle must be found from the geometry of the circle.** (This is illustrated in example practice problems that follow.) Now compute $\phi_\sigma = 2\phi_\sigma/2$.

13. Draw the **principal stress element** as shown in Figure 4-14(b). In Part (a) of the figure, we have reproduced the **original stress element** to indicate the direction of the x -axis and we draw a new element in relation to that axis at an angle of ϕ_σ . The new element must be rotated in the same direction, clockwise or counterclockwise, as observed in Step 12.

a. On the face of the element found from the rotation, draw the vector σ_1 .

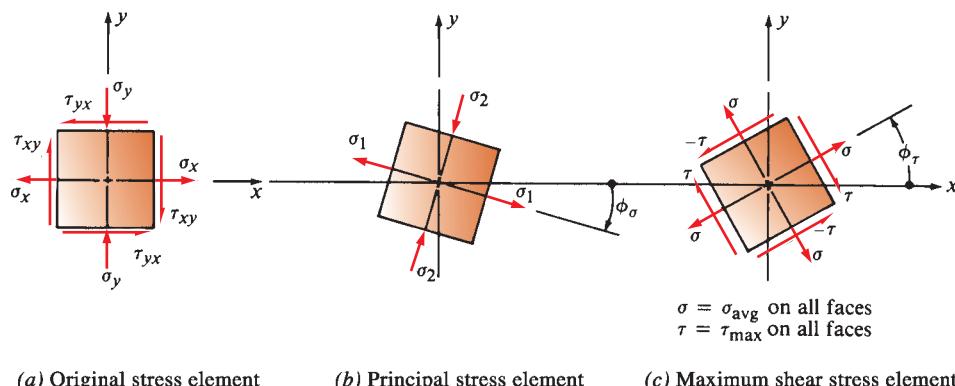**FIGURE 4-14** Display of results from 2D Mohr's circle

- b. Then show that the vector σ_1 is acting on the opposite parallel face in the opposite sense to indicate the tension or compression stress.
- c. Draw two σ_2 vectors on the other perpendicular faces in the proper sense.
- d. Note that ***on the principal stress element, the shear stress is always zero***. This is evident from the Mohr's circle where the coordinates of the principal stresses are always $(\sigma_1, 0)$ and $(\sigma_2, 0)$, indicating zero shear stress.

- 14. Find the angle called $2\varphi_\tau$, always measured ***from the x-axis to the τ_{\max} -axis, and note the direction—either clockwise or counterclockwise***. In the ***current problem***, we can observe that $2\varphi_\tau = 90^\circ - \alpha$, the angle found in Step 7, and the rotation is counterclockwise. ***However, in other problems, the angle must be found from the geometry of the circle***. Now compute $\varphi_\tau = 2\varphi_\tau/2$.
- 15. Draw the ***maximum shear stress element*** as shown in Figure 4–14(c). Here, we draw a new element in relation to the x-axis at an angle of φ_τ . The new element must be rotated in the direction of either clockwise or counterclockwise, as observed in Step 14.
 - a. On the face of the element found from the rotation, draw the vector τ_{\max} .

- b. Then show that the vector τ_{\max} is acting on the opposite parallel face in the opposite sense to indicate the shearing action.
- c. Draw two $-\tau_{\max}$ vectors on the other perpendicular faces. The combination of all four shearing vectors must indicate equilibrium of the element.
- d. Note that ***on the maximum shear stress element, the average normal stress acts on all four faces***. This is evident from the Mohr's circle where the coordinates of the maximum shear stress is always $(\sigma_{avg}, \tau_{\max})$ and for the minimum shear stress it is always $(\sigma_{avg}, -\tau_{\max})$.

- 16. The final step in the process of preparing the 2D Mohr's circle is to summarize the primary results, typically: $\sigma_1, \sigma_2, \tau_{\max}, \sigma_{avg}, \varphi_\sigma$, and φ_τ .

We will now illustrate the construction of a 2D Mohr's circle by using the same data as in Example Problem 4–1, in which the principal stresses and the maximum shear stress were computed directly from the equations.

Example Problem 4–2

The shaft shown in Figure 4–7 is supported by two bearings and carries two V-belt sheaves. The tensions in the belts exert horizontal forces on the shaft, tending to bend it in the x - z plane. Sheave B exerts a clockwise torque on the shaft when viewed toward the origin of the coordinate system along the x -axis. Sheave C exerts an equal but opposite torque on the shaft. For the loading condition shown, determine the principal stresses and the maximum shear stress on element K on the front surface of the shaft (on the positive z -side) just to the right of sheave B. Use the procedure for constructing the 2D Mohr's circle in this section.

Solution

Objective Determine the principal stresses and the maximum shear stresses on element K.

Given Shaft and loading pattern shown in Figure 4–7.

Analysis Use the *Procedure for Constructing a 2D Mohr's Circle*. Some intermediate results will be taken from the solution to Example Problem 4–1 and from Figures 4–7 to 4–9.

Results **Steps 1 and 2.** The stress analysis for the given loading was completed in Example Problem 4–1. Figure 4–15 is identical to Figure 4–9 and represents the results of Step 2 of the 2D Mohr's circle procedure, the original stress element.

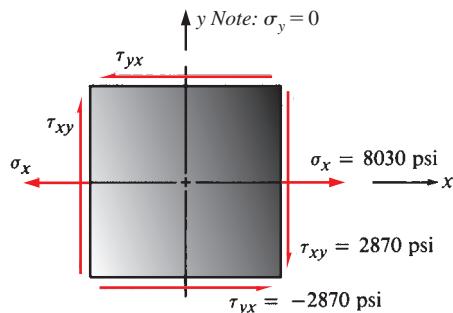


FIGURE 4–15 Stresses on element K

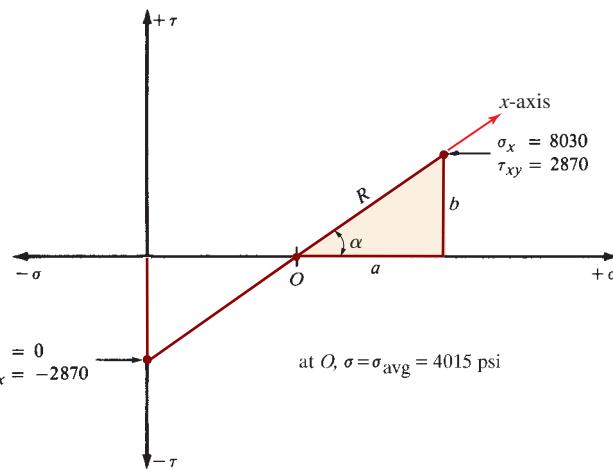


FIGURE 4–16 Partially completed 2D Mohr's circle

Steps 3–6. Figure 4–16 shows the results. The first point plotted was

$$\sigma_x = 8030 \text{ psi}, \tau_{xy} = 2870 \text{ psi}$$

The second point was plotted at

$$\sigma_y = 0 \text{ psi}, \tau_{yx} = -2870 \text{ psi}$$

Then a line was drawn between them, crossing the σ -axis at O . The value of the stress at O is

$$\sigma_{\text{avg}} = (\sigma_x + \sigma_y)/2 = (8030 \text{ psi} + 0 \text{ psi})/2 = 4015 \text{ psi}$$

Extend the line through the point (σ_x, τ_{xy}) and label it, x -axis.

Step 7. We compute the values for a , b , and R from

$$a = (\sigma_x - \sigma_{\text{avg}}) = (8030 \text{ psi} - 4018 \text{ psi}) = 4015 \text{ psi}$$

$$b = \tau_{xy} = 2870 \text{ psi}$$

$$R = \sqrt{a^2 + b^2} = \sqrt{(4015 \text{ psi})^2 + (2870 \text{ psi})^2} = 4935 \text{ psi}$$

Step 8. Figure 4–17(a) shows the completed 2D Mohr's circle. The circle has its center at O and the radius R . Note that the circle passes through the two points originally plotted. It must do so because the circle represents all possible states of stress on the element K .

Step 9. The maximum principal stress is at the right side of the circle.

$$\sigma_1 = \sigma_{\text{avg}} + R$$

$$\sigma_1 = 4015 + 4935 = 8950 \text{ psi}$$

Step 10. The minimum principal stress is at the left side of the circle.

$$\sigma_2 = \sigma_{\text{avg}} - R$$

$$\sigma_2 = 4015 - 4935 = -920 \text{ psi}$$

Step 11. At the top of the circle,

$$\sigma = \sigma_{\text{avg}} = 4015 \text{ psi}$$

$$\tau = \tau_{\text{max}} = R = 4935 \text{ psi}$$

The value of the normal stress on the element that carries the maximum shear stress is the same as the coordinate of O , the center of the circle.

Step 12. Compute the angles α , $2\phi_\sigma$, and then ϕ_σ . Use the circle as a guide.

$$\alpha = 2\phi_\sigma = \arctan(b/a) = \arctan(2870 \text{ psi})/(4015 \text{ psi}) = 35.6^\circ$$

$$\phi_\sigma = 35.6^\circ/2 = 17.8^\circ$$

Note that ϕ_σ must be measured *clockwise* from the original x -axis to the direction of the line of action of σ_1 for this set of data. The principal stress element will be rotated in the same direction as part of step 13.

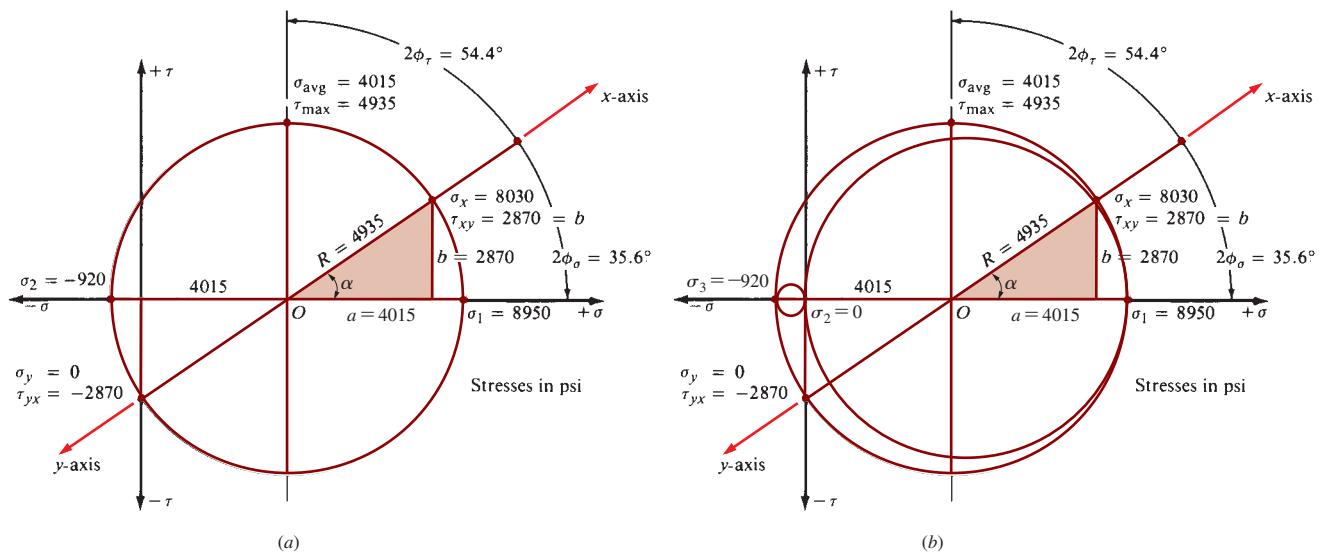


FIGURE 4-17 Completed Mohr's circles for (a) 2D result and (b) 3D result

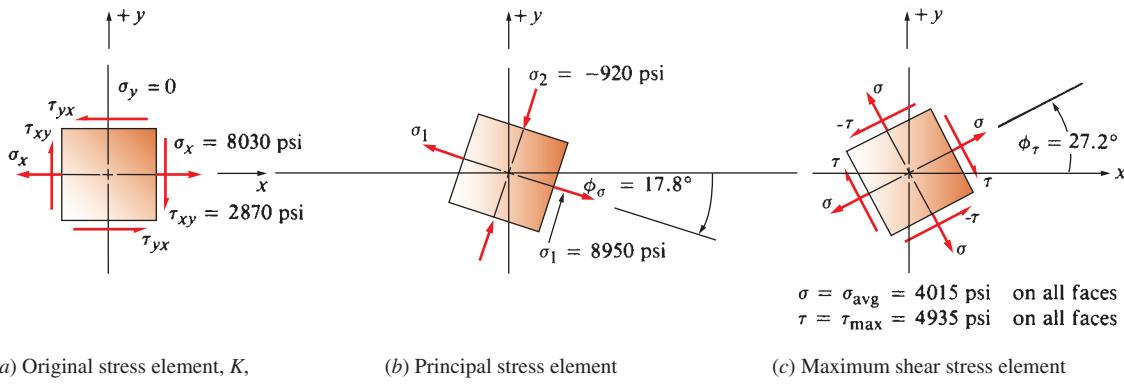


FIGURE 4-18 Results from 2D Mohr's circle analysis

Step 13. See Figure 4-18(a) where the original stress element has been reproduced. Now draw the principal stress element to the right (Part (b) of the figure). Rotate the element 17.8° clockwise from the x-axis as shown. Then draw the vectors for the maximum principal stress, $\sigma_1 = 8950$ psi (tensile), on that face and the one opposite. Complete the element by drawing vectors for $\sigma_2 = -920$ psi (compressive) on the other two faces. Label the element as shown in the figure.

Step 14. Compute the angle $2\phi_\tau$ and then ϕ_τ . From the circle we see that

$$2\phi_\tau = 90^\circ - \alpha = 90^\circ - 35.6^\circ = 54.4^\circ$$

$$\phi_\tau = 54.4^\circ / 2 = 27.2^\circ$$

Note that the stress element on which the maximum shear stress acts must be rotated *counterclockwise* from the orientation of the original element for this set of data.

Step 15. In Figure 4-18(c), we draw the maximum shear stress element to the right of the principal stress element. It is rotated *counterclockwise* 27.2° from the x-axis.

- a. On that face we show the positive maximum shearing stress, $\tau_{max} = 4935$ psi.
- b. Then we complete τ_{max} by drawing an equal shearing stress vector on the opposite face acting in the opposite direction so that the two vectors tend to rotate the element clockwise, indicating a positive shearing stress.
- c. Now we can draw the two vectors that make up $-\tau_{max}$ on the other two faces. The set of four vectors now put the element in rotational equilibrium.
- d. The element is completed by drawing four equal vectors, σ_{avg} , on all four faces of the element.

Step 16. Summary of results:

- Maximum principal stress = $\sigma_1 = 8950$ psi—Tension
- Minimum principal stress = $\sigma_2 = -920$ psi—Compression
- Maximum shear stress = $\tau_{\max} = 4935$ psi
- Angle of rotation of principal stress element = $\varphi_\sigma = 17.8^\circ$ clockwise below the x -axis
- Angle of rotation of the maximum shear stress element = $\sigma_\tau = 27.2^\circ$ counterclockwise above the x -axis
- Figure 4–18 shows the resulting stress elements. These are identical to those shown in Figure 4–11 from the hand calculations performed in Example Problem 4–1.

Mohr's Circles for Three-Dimensional Stresses

Obviously, real load-carrying members are three-dimensional objects, and all stress elements should be three-dimensional elements. In Example Problem 4–1, Figure 4–13(a), the Mohr's circle represents the stress transformation of a two-dimensional, plane-stress element. The maximum and minimum principal stresses are identified as σ_1 and σ_2 . It is clear that the z direction is one of the principal directions, as the stress components involving the z direction are all zero, $\sigma_z = \tau_{yz} = \tau_{zx} = 0$. Rearranging/ranking the three principle stresses, $\sigma_1 > \sigma_2 > \sigma_3$, the Mohr's circles for the three-dimensional stress element in plane stress state is shown in Figure 4–13(b), where $\sigma_2 = \sigma_z = 0$. Note that the additional two circles are drawn from the stress states in the 1-2 plane and the 2-3 plane.

The largest circle is the same as that developed for the 2D example with the maximum stress labeled as σ_1 as before at the right end. The smallest stress is at the left end of the largest circle and it is now labeled as σ_3 . The second circle is drawn with σ_1 as before at the right end and $\sigma_2 = 0$ at the left end. Finally, the third circle is drawn with $\sigma_2 = 0$ at the right end and σ_3 at the left end.

In Example Problem 4–2, the element at the location of interest is subjected to plane stress. In the full

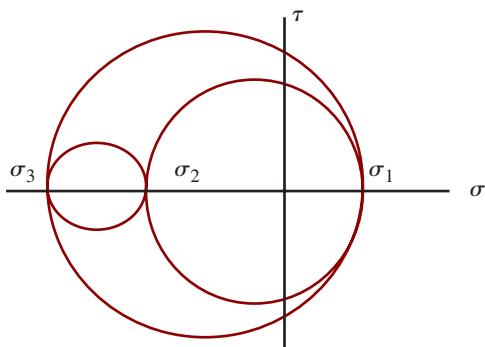


FIGURE 4–19 General example of Mohr's circles for three-dimensional stress state for which all three principal stresses are non-zero

three-dimensional model of the stress element, the principal stresses are again rearranged/reordered:

$$\begin{aligned}\sigma_1 &= 8950 \text{ psi} \\ \sigma_2 &= 0 \text{ psi} \\ \sigma_3 &= -920 \text{ psi}\end{aligned}$$

The corresponding Mohr's circles for three-dimensional stress state is shown in Figure 4–17(b).

In three-dimensional stress transformation, it is possible that all of the roots in Equation (4–12) are non-zero. With three non-zero principal stresses, the resulting Mohr's circles are shown in Figure 4–19. Note that the three principal stresses are again ordered such that $\sigma_1 > \sigma_2 > \sigma_3$.

Tresca Stress

Based on the three principal stresses obtained from stress transformation, a special form of stress, called the Tresca stress (after Henri Tresca), can be calculated for design decision making. The Tresca stress is defined as

$$\sigma' = (\sigma_1 - \sigma_3)/2 \quad (4-14)$$

Observing from the Mohr's circles (three-dimensional), the Tresca stress is the maximum shear stress. In design, a failure criterion can be established to evaluate if yielding will occur. For a ductile material under static loading, a stress element is considered to have failed when $\sigma' > s_{sy}$, where s_{sy} is the shear yield strength of the material. The failure theory involving the Tresca stress is therefore called the Maximum Shear Stress Theory (MSST).

von Mises Stress

A more accurate assessment of the stress state for design with ductile material under static loading is the von Mises stress. It is defined as

$$\sigma_e = \sqrt{\frac{(\sigma_1 - \sigma_2)^2 + (\sigma_2 - \sigma_3)^2 + (\sigma_3 - \sigma_1)^2}{2}} \quad (4-15)$$

The failure criterion based on the von Mises stress postulates that material will yield when $\sigma_e > s_y$, where s_y is the yield strength of the material. The application of the Tresca and the von Mises stresses in design will be further discussed in Chapter 5.

TABLE 4-1 Practice Problems for Mohr's Circle

| Example Problem | x-axis | σ_x | σ_y | τ_{xy} | Fig. No. |
|-----------------|--------------|------------|------------|-------------|----------|
| 4-3 | 1st quadrant | +10.0 ksi | +4.0 ksi | +5.0 ksi | 4-20 |
| 4-4 | 2nd quadrant | -80 MPa | +20 MPa | +50 MPa | 4-21 |
| 4-5 | 3rd quadrant | -80 MPa | +20 MPa | -50 MPa | 4-22 |
| 4-6 | 4th quadrant | +10.0 ksi | -2.0 ksi | -4.0 ksi | 4-23 |

4-5 MOHR'S CIRCLE PRACTICE PROBLEMS

To a person seeing the construction of Mohr's circle for the first time, it may seem long and involved. But with practice under a variety of combinations of normal and shear stresses, you should be able to execute the 16 steps quickly and accurately.

Table 4-1 gives four sets of data (Example Problems 4-3 through 4-6) for normal and shear stresses in the x - y plane. You are advised to complete the Mohr's circle for each before looking at the solutions in Figures 4-20

through 4-23. From the circle, determine the two principal stresses, the maximum shear stress, and the planes on which these stresses act. Then draw the given stress element, the principal stress element, and the maximum shear stress element, all oriented properly with respect to the x - and y -directions. Note that each problem results in the x -axis being in a different quadrant.

After completing the solution for two-dimensional data, values are given for "3D stresses" considering that the z -axis stress is zero. The new values are the three principal stresses, σ_1 , σ_2 , and σ_3 as used in Sections 4-3 and 4-4.


Example Problem 4-3

Given:


$$\begin{aligned}\sigma_x &= +10.0 \text{ ksi} \\ \sigma_y &= -4.0 \text{ ksi} \\ \tau_{xy} &= +5.0 \text{ ksi (cw)}\end{aligned}$$

Results:

$$\begin{aligned}\sigma_1 &= +11.60 \text{ ksi} \\ \sigma_2 &= -5.60 \text{ ksi} \\ \phi_\sigma &= 17.8^\circ \text{ cw} \\ \tau_{\max} &= 8.60 \text{ ksi} \\ \phi_\tau &= 27.2^\circ \text{ ccw} \\ \sigma_{\text{avg}} &= +3.0 \text{ ksi} \\ \text{x-axis in 1st quadrant}\end{aligned}$$

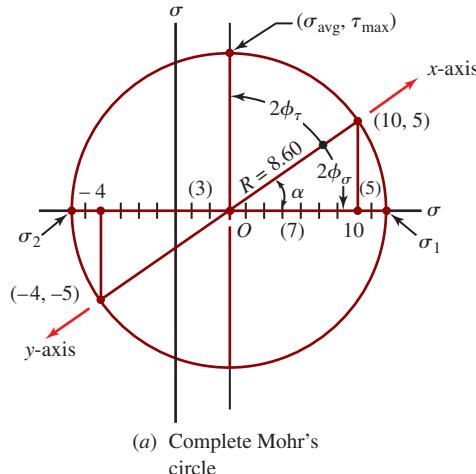

(a) Complete Mohr's circle

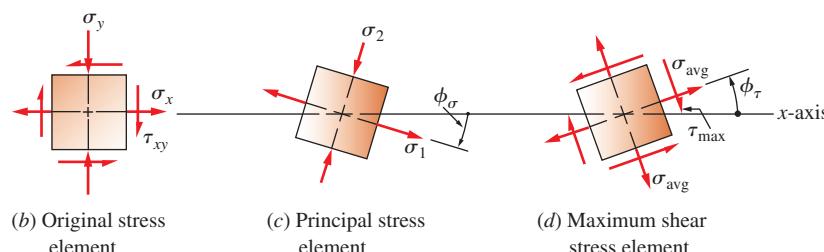

3D stresses: $\sigma_1 = +11.60 \text{ ksi}$, $\sigma_2 = 0 \text{ ksi}$, $\sigma_3 = -5.60 \text{ ksi}$

FIGURE 4-20 Solution for Example Problem 4-3, x -axis in 1st quadrant


**Example Problem
4-4**

Given:


$$\begin{aligned}\sigma_x &= -80 \text{ MPa} \\ \sigma_y &= +20 \text{ MPa} \\ \tau_{xy} &= +50 \text{ MPa}\end{aligned}$$

Results:


$$\begin{aligned}\sigma_1 &= +40.7 \text{ MPa} \\ \sigma_2 &= -100.7 \text{ MPa} \\ \phi_\sigma &= 67.5^\circ \text{ cw} \\ \tau_{\max} &= 70.7 \text{ MPa} \\ \phi_\tau &= 22.5^\circ \text{ cw} \\ \sigma_{\text{avg}} &= -30 \text{ MPa} \\ \text{x-axis in 2nd quadrant}\end{aligned}$$

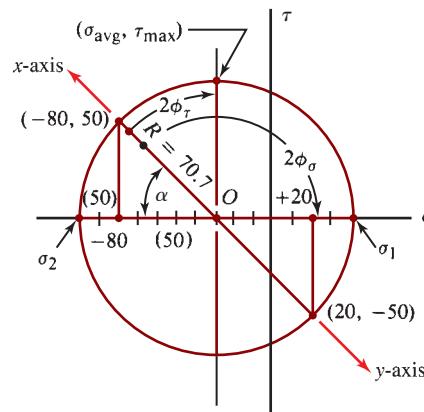

(a) Complete Mohr's circle

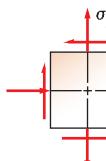

(b) Original stress element

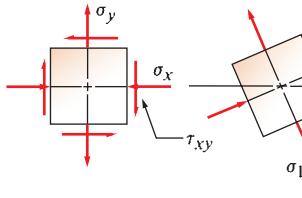

(c) Principal stress element



(d) Maximum shear stress element


3D stresses: $\sigma_1 = +40.7 \text{ MPa}$, $\sigma_2 = 0 \text{ MPa}$, $\sigma_3 = -100.7 \text{ MPa}$ **FIGURE 4-21** Solution for Example Problem 4-4 x-axis in 2nd quadrant
**Example Problem
4-5**

Given:


$$\begin{aligned}\sigma_x &= -80 \text{ MPa} \\ \sigma_y &= +20 \text{ MPa} \\ \tau_{xy} &= -50 \text{ MPa}\end{aligned}$$

Results:


$$\begin{aligned}\sigma_1 &= +40.7 \text{ MPa} \\ \sigma_2 &= -100.7 \text{ MPa} \\ \phi_\sigma &= 67.5^\circ \text{ ccw} \\ \tau_{\max} &= 70.7 \text{ MPa} \\ \phi_\tau &= 22.5^\circ \text{ ccw to } -\tau_{\max} \\ \sigma_{\text{avg}} &= -30 \text{ MPa} \\ \text{x-axis in 3rd quadrant}\end{aligned}$$

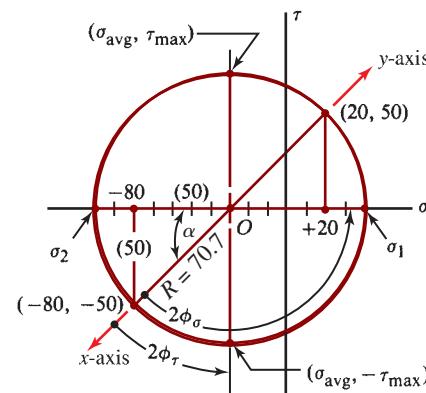


(a) Complete Mohr's circle

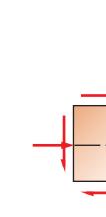

(b) Original stress element

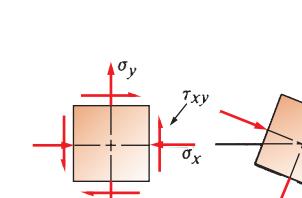

(c) Principal stress element

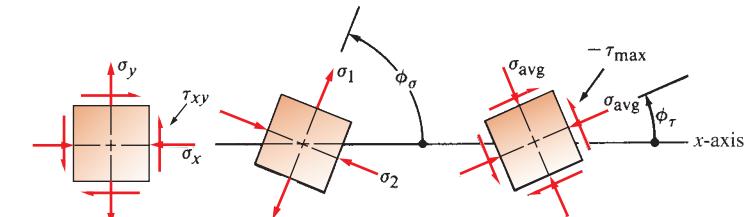


(d) Maximum shear stress element

3D stresses: $\sigma_1 = +40.7 \text{ MPa}$, $\sigma_2 = 0 \text{ MPa}$, $\sigma_3 = -100.7 \text{ MPa}$ **FIGURE 4-22** Solution for Example Problem 4-5, x-axis in 3rd quadrant


**Example Problem
4–6**

Given:
 $\sigma_x = +10.0 \text{ ksi}$
 $\sigma_y = -2.0 \text{ ksi}$
 $\tau_{xy} = -4.0 \text{ ksi}$ (ccw)


Results:
 $\sigma_1 = +11.21 \text{ ksi}$
 $\sigma_2 = -3.21 \text{ ksi}$
 $\phi_\sigma = 16.8^\circ \text{ ccw}$
 $\tau_{\max} = 7.21 \text{ ksi}$
 $\phi_\tau = 28.2^\circ \text{ cw to } -\tau_{\max}$
 $\sigma_{\text{avg}} = +4.0 \text{ ksi}$
 $x\text{-axis in 4th quadrant}$

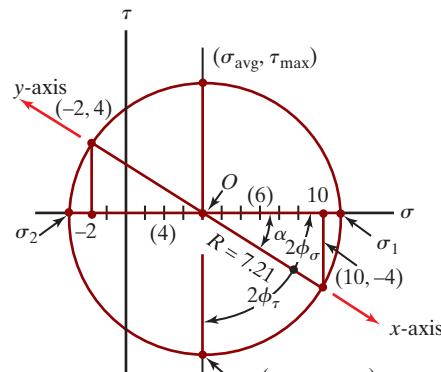


(a) Complete Mohr's circle

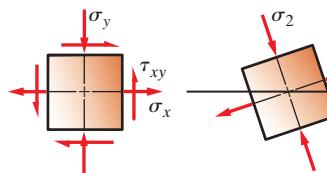

(b) Original stress element

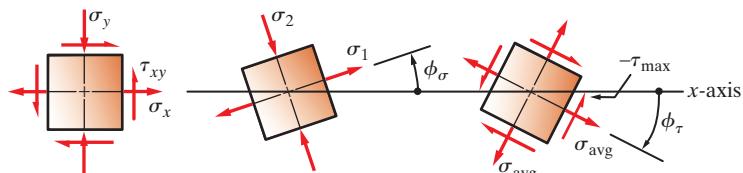

(c) Principal stress element

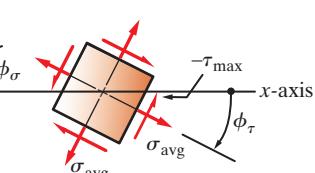

(d) Maximum shear stress element

3D stresses: $\sigma_1 = +11.21 \text{ ksi}$, $\sigma_2 = 0 \text{ ksi}$, $\sigma_3 = -3.21 \text{ ksi}$

FIGURE 4–23 Solution for Example Problem 4–6, x -axis in 4th quadrant

4–6 MOHR'S CIRCLE FOR SPECIAL STRESS CONDITIONS

Mohr's circle is used here to demonstrate the relationship among the applied stresses, the principal stresses, and the maximum shear stress for the following special cases:



- Uniaxial tension
- Uniaxial compression
- Biaxial tension
- Biaxial tension and compression
- Pure shear
- Combined tension and shear

These are important, frequently encountered stress conditions, and they will be used in later chapters to

illustrate failure theories and design methods. These failure theories are based on the values of the principal stresses and the maximum shear stress.

Uniaxial Tension

The stress condition produced in all parts of a standard tensile test specimen is pure uniaxial tension. Figure 4–24 shows the stress element and the corresponding Mohr's circle. Note that the maximum principal stress, σ_1 , is equal to the applied stress, σ_x ; the minimum principal stress, σ_3 , is zero; and the maximum shear stress, τ_{\max} , is equal to $\sigma_x/2$. Note that in three-dimensional stress state, the Mohr's circle drawn from the 1-2 plane coincides with that from the 1-3 plane, and the Mohr's circle drawn from the 2-3 plane is a point.

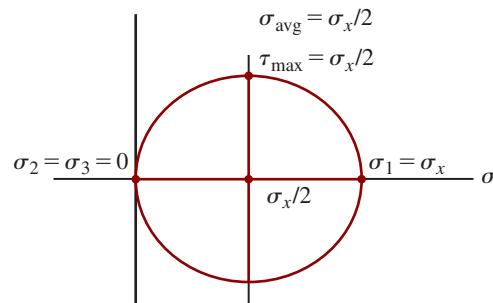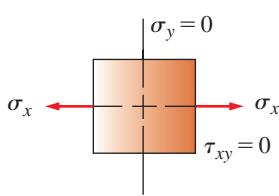
FIGURE 4–24 Mohr's circle for pure uniaxial tension

Uniaxial Compression

Figure 4–25 shows pure uniaxial compression as it would be produced by a standard compression test. Mohr's circle shows that $\sigma_1 = \sigma_2 = 0$ and $\sigma_3 = \sigma_x$ (a negative value); and the magnitude of the maximum shear stress is $\tau_{\max} = \sigma_x/2$. Note that in a three-dimensional stress state, the Mohr's circle drawn from the 1-2 plane is a point, and the Mohr's circle drawn from the 1-3 plane coincides with that from the 2-3 plane.

Biaxial Tension

The stress condition produced in a spherical thin-walled pressure vessel or a filled balloon is biaxial tension. Figure 4–26 shows the stress element, where $\sigma_x = \sigma_y$,

and the corresponding Mohr's circle. Note that the Mohr's circle drawn from the original two-dimensional stress element in the 1-2 plane is a point. Considering the third principal direction, two more circles are added. The Mohr's circle drawn from the 1-3 plane coincides with that from the 2-3 plane. The magnitude of the maximum shear stress is $\tau_{\max} = \sigma_x/2$.

Biaxial Tension and Compression

Figure 4–27 shows that the element is subjected to biaxial tension and compression where σ_x is positive (tension) and σ_y is negative (compression) with the same magnitude. The resulting Mohr's circles show that $\sigma_1 = \sigma_x$, $\sigma_2 = 0$, and $\sigma_3 = \sigma_y$. The magnitude of the maximum shear stress is $\tau_{\max} = \sigma_x$.

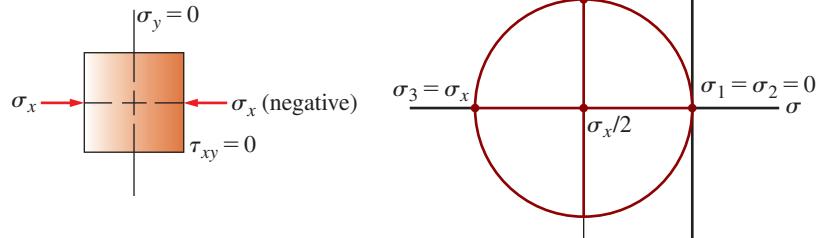


FIGURE 4–25 Mohr's circle for pure uniaxial compression

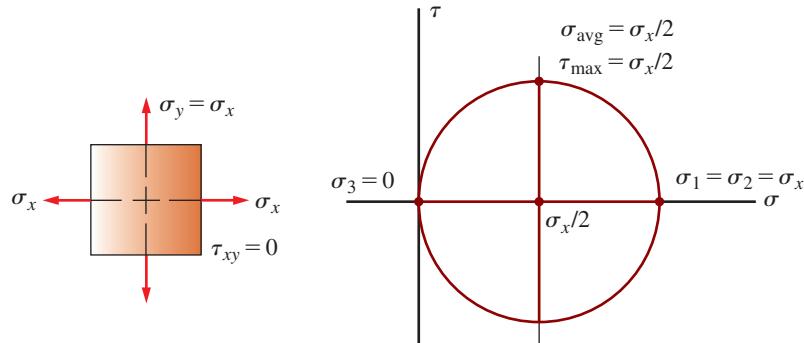


FIGURE 4–26 Mohr's circle for biaxial tension

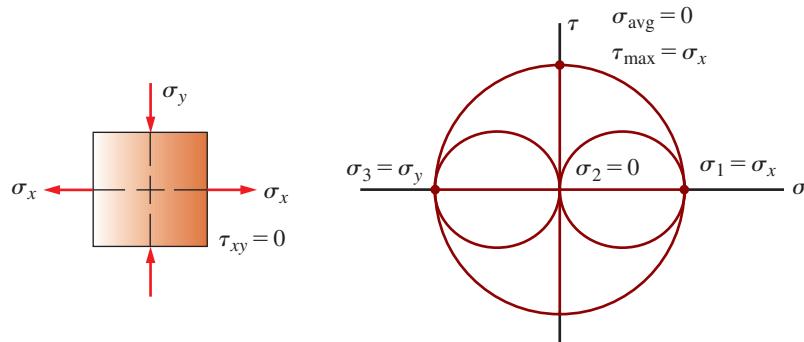


FIGURE 4–27 Mohr's circle for biaxial tension and compression

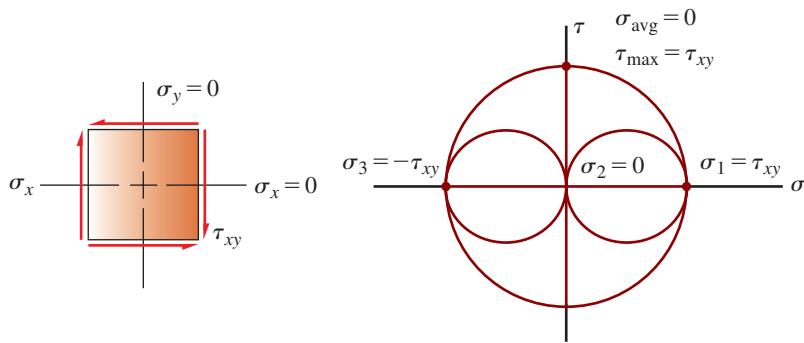


FIGURE 4-28 Mohr's circle for pure shear

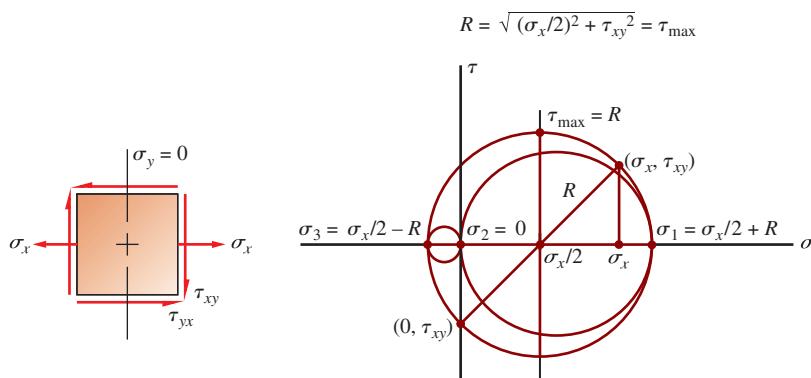


FIGURE 4-29 Mohr's circles for uniaxial tension and torsional shear

Pure Shear

Figure 4-28 shows the Mohr's circles for the case of pure shear that can result from a torsional load. The plane stress circle has its center at the origin of the $\sigma-\tau$ axes and that the radius of the circle is equal to the value of the applied shear stress, τ_{xy} . Considering the third principal direction, we have $\sigma_1 = \tau_{xy}$, $\sigma_2 = 0$, and $\sigma_3 = -\tau_{xy}$. The maximum shear $\tau_{\max} = \tau_{xy}$. From Figures 4-27 and 4-28, it can be observed that if the magnitude of tensile stress σ_x and compressive stress σ_y in Figure 4-27 is the same as that of the shear stress τ_{xy} in Figure 4-28, the Mohr's circles in the two figures are identical. The two stress elements are identified to be in the *equivalent stress state*. That is, the two different stress states have the same effect on the material.

Combined Tension and Shear

This is an important special case because it describes the stress condition in a rotating shaft carrying bending loads while simultaneously transmitting torque. This is the type of stress condition on which the procedure for designing shafts, presented in Chapter 12, is based. If the applied stresses are called σ_x and τ_{xy} , the Mohr's circle in Figure 4-29 shows that

$$\tau_{\max} = R = \text{radius of circle} = \sqrt{(\sigma_x/2)^2 + \tau_{xy}^2} \quad (4-16)$$

$$\sigma_1 = \sigma_x/2 + R = \sigma_x/2 + \sqrt{(\sigma_x/2)^2 + \tau_{xy}^2} \quad (4-17)$$

$$\sigma_2 = \sigma_x/2 - R = \sigma_x/2 - \sqrt{(\sigma_x/2)^2 + \tau_{xy}^2} \quad (4-18)$$

A convenient and useful concept called *equivalent torque* can be developed from Equation (4-16) for the special case of a body subjected to only bending and torsion.

An example is shown in Figure 4-30, where a circular bar is loaded at one end by a downward force and a torsional moment. The force causes bending in the bar with the maximum moment at the point where the bar is attached to the support. The moment causes a tensile stress on the top of the bar in the x -direction at the point called A, where the magnitude of the stress is

$$\sigma_x = M/S \quad (4-19)$$

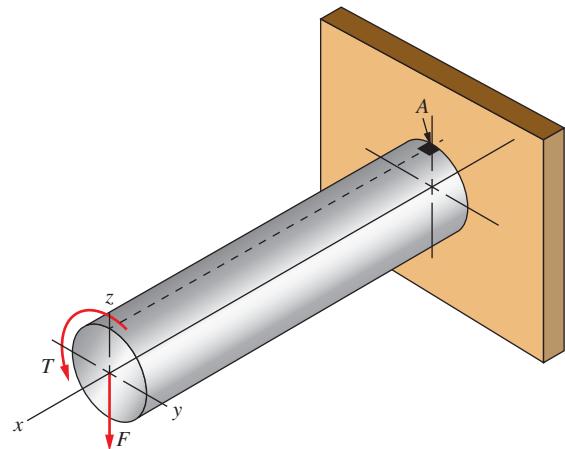


FIGURE 4-30 Circular bar in bending and torsion

where S = section modulus of the round bar.

Now the torsional moment causes torsional shear stress in the $x-y$ plane at point A having a magnitude of

$$\tau_{xy} = T/Z_p \quad (4-20)$$

where Z_p = polar section modulus of the bar.

Point A then is subjected to a tensile stress combined with shear, the special case shown in the Mohr's circle of Figure 4-29. The maximum shear stress can be computed from Equation (4-16). If we substitute Equations (4-19) and (4-20) in to Equation (4-16), we get

$$\tau_{\max} = \sqrt{(M/2S)^2 + (T/Z_p)^2} \quad (4-21)$$

Note from Appendix 1 that $Z_p = 2S$. Equation (4-21) can then be written as

$$\tau_{\max} = \frac{\sqrt{M^2 + T^2}}{Z_p} \quad (4-22)$$

It is convenient to define the quantity in the numerator of this equation to be the *equivalent torque*, T_e . Then the equation becomes

$$\tau_{\max} = T_e/Z_p \quad (4-23)$$

Stresses in a Cylinder with Internal Pressure

Another important special case of stress state is the set of stresses developed in a closed-end cylinder with internal pressure. In strength of materials, you learned that the outer surfaces of the walls of such cylinders are subjected to tensile stresses in two directions: (1) tangent to its circumference and (2) axially, parallel to the axis of the cylinder. The stress perpendicular to the wall at the outer surface is zero.

Figure 4-31 shows the stress condition on an element of the surface of the cylinder. The tangential stress, also called *hoop stress*, is aligned with the x -direction and is labeled σ_x . The axially directed stress, also called *longitudinal stress*, acts in line with the y -direction and is labeled σ_y .

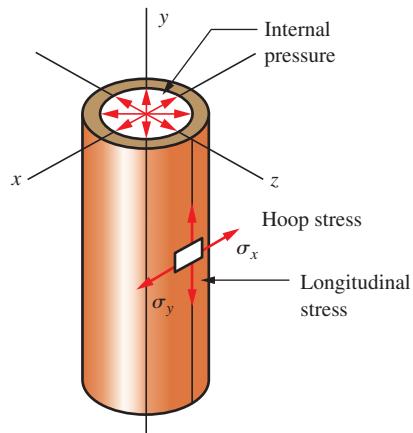


FIGURE 4-31 Thin-walled cylinder subjected to pressure with its ends closed

In strength of materials, you learned that if the wall of the cylinder is relatively thin, the maximum hoop stress is

$$\sigma_x = pD/2t$$

where p = internal pressure in the cylinder

D = mean diameter of the cylinder

t = thickness of the cylinder wall

Also, the longitudinal stress is

$$\sigma_y = pD/4t$$

Both stresses are tensile, and the hoop stress is twice as large as the longitudinal stress.

The analysis would be similar for any kind of thin-walled cylindrical vessel carrying an internal pressure. Examples are storage tanks for compressed gases, pipes carrying moving fluids under pressure, and the familiar beverage can that releases internal pressure when the top is popped open.

Let's use the following example to demonstrate the use of Mohr's circles for stress analysis.

Example Problem


4-7

As shown in Figure 4-32, a hydraulic motor drives a speed increaser gearbox which in turn drives the air screw compressor at 8000 rpm. The air screw compressor draws in outside air, compresses it, and discharges it into the air receiver tank. The receiver tank supplies service air to power air tools. A cut section of a receiver tank is shown below. The maximum design pressure of the system is set at 175 psi. The air receiver tank is made from aluminum tubing and has a 6 in outside diameter with a wall thickness of $1/8$ in.


- Can the receiver tank be considered a thin-walled pressure vessel?
- Calculate the longitudinal and circumferential stresses on the receiver tank.
- Use Mohr's circle to calculate the principal stresses and the maximum shear stress.

Solution

Given: The outside diameter of the tank, $D = 6.0$ in and the wall thickness, $t = 0.125$ in. The internal pressure in the tank is 175 psi. [Note: Mean diameter $D_m = D_o - t = 5.875$ in]

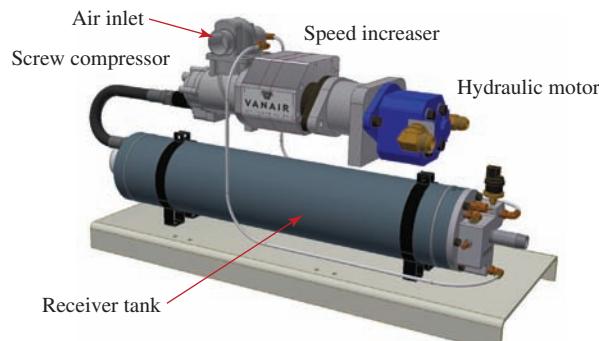

(a) Air compressor system

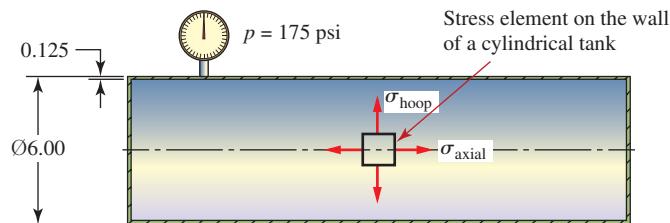

(b) Cut section through the compressed air receiver tank

FIGURE 4-32 Screw-type air compressor system with a receiver tank
(Courtesy of Vanair, Inc., Michigan City, IN)

Results First check to determine if the pressure vessel is to be considered a thin-walled or thick-walled cylinder:

$$\frac{D_m}{t} = \frac{5.875}{0.125} = 47 > 20$$

Therefore, the vessel is considered to be a thin-walled cylinder.

The stress element obtained from the cylindrical wall has the following stress components:

$$\text{Longitudinal/axial stress: } \frac{pD_m}{4t} = \frac{175 \times 5.875}{4 \times 0.125} = 2056 \text{ psi}$$

$$\text{Circumferential/hoop stress: } \sigma_{\text{hoop}} = \frac{pD_m}{2t} = \frac{175 \times 5.875}{2 \times 0.125} = 4113 \text{ psi}$$

$$\text{Radial stress: } \sigma_{\text{radial}} = 0$$

Since there is no shear stress, the stress components are already in principal directions. Ordering the three principal stresses, we have

$$\sigma_1 = \sigma_{\text{hoop}} = 4113 \text{ psi}$$

$$\sigma_2 = \sigma_{\text{axial}} = 2056 \text{ psi}$$

$$\sigma_3 = \sigma_{\text{radial}} = 0$$

The corresponding three-dimensional stress element and Mohr's circles are shown in Figure 4-33. Note that the maximum shear stress is based on the consideration of the largest circle where

$$\tau_{\max} = 2056 \text{ psi}$$

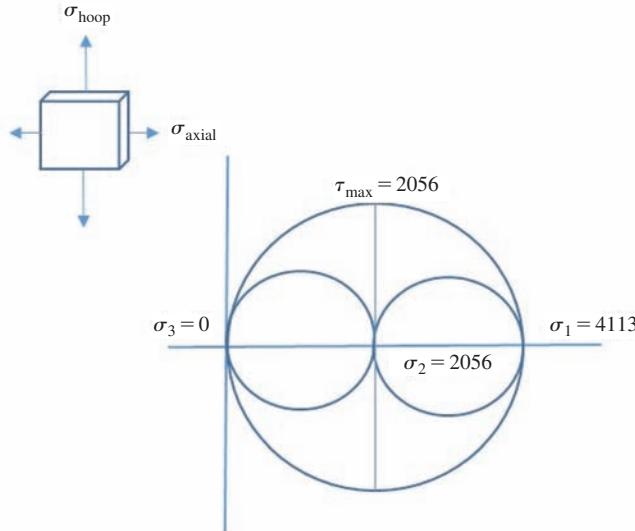


FIGURE 4-33 Stress element on the surface of the cylindrical tank and the resulting Mohr's circles

Example Problem 4–7 demonstrates the procedure of analyzing a stress element, a plane stress element in this case, and converting the stress components to three ranked principal stresses. In this case, one of the principal stresses is zero. In a design problem, we will need to further reduce the three principal stresses to an “effective stress” and make sure the yield strength of the selected material is greater than the effective stress to prevent yielding. While more is said in Chapter 5 about the concept of design stress, we now follow with the type of analysis necessary to judge the suitability of the tank design in Example Problem 4–7. Two approaches are demonstrated: the Maximum Shear Stress Theory (MSST), also called the *Tresca criterion*; and the Distortion Energy Theory, also called the *von Mises criterion*.

Using the Tresca criterion, the effective stress is

$$\sigma' = (\sigma_1 - \sigma_3)/2 = 4113/2 = 2056 > s_y \text{ (psi)}$$

Then the selected material should have a shear yield strength greater than 2013 psi. Since $s_{sy} = s_y/2$, the yield strength of the material should be greater than 4113 psi.

Using the von Mises criterion, the effective stress is

$$\sigma_{\text{eff}} = \sqrt{\frac{(\sigma_1 - \sigma_2)^2 + (\sigma_2 - \sigma_3)^2 + (\sigma_3 - \sigma_1)^2}{2}}$$

$$\sigma_{\text{eff}} = \sqrt{\frac{(4113 - 2056)^2 + (2056 - 0)^2 + (0 - 4113)^2}{2}} = 3562 \text{ psi}$$

Therefore, the yield strength of the selected material needs to be greater than 3562 psi.

Before we introduce the failure theories in Chapter 5, it is tempting to use the maximum principal stress to select the material. While considering only the maximum principle stress also results in $s_y \geq 4113$ psi, it should be noted that the solution $s_y \geq 4113$ psi is based on MSST with $\sigma_1 = 4113$ psi and $\sigma_3 = 0$. The above example also shows that when all three principal stresses are considered in the von Mises criterion, it yields a different result.

4–7 ANALYSIS OF COMPLEX LOADING CONDITIONS

The examples shown in this chapter involve relatively simple part geometries and loading conditions for which the necessary stress analysis can be performed using familiar methods of statics and strength of materials. If more complex geometries or loading conditions are involved, you may not be able to complete the required analysis to

create the original stress element from which the Mohr’s circle is constructed, as discussed in Section 4–4.

Consider, for example, a cast wheel for a high-performance racing car. The geometry would likely involve webs or spokes of a unique design connecting the hub to the rim to create a lightweight wheel. The loading would be a complex combination of torsion, bending, and compression generated by the cornering action of the wheel.

One method of analysis of such a load-carrying member would be accomplished by experimental stress analysis using strain gages or photoelastic techniques. The results would identify the stress levels at selected points in certain specified directions that could be used as the input to the construction of the Mohr’s circle for critical points in the structure.

Another method of analysis would involve the modeling of the geometry of the wheel as a *finite-element model*. The three-dimensional model would be divided into several hundred small-volume elements. Points of support and restraint would be defined on the model, and then external loads would be applied at appropriate points. The complete data set would be input to a special type of computer analysis program called *finite-element analysis* (FEA). The output from the program lists the stresses and the deflection for each of the elements. These data can be plotted on the computer model so that the designer can visualize the stress distribution within the model. Most such programs list the principal stresses and the von Mises stress, eliminating the need to actually draw the Mohr’s circle. (The application of von Mises stress is introduced in Chapter 5.) Several different finite-element analysis programs are commercially available for use on personal computers, on engineering work stations, or on mainframe computers. See Internet sites 1–5.

REFERENCE

1. Mott, Robert L. *Applied Strength of Materials*. 6th ed. Boca Raton, FL: CRC Press, 2017.

INTERNET SITES RELATED TO STRESS TRANSFORMATION

The following is a short list of the numerous companies that develop and provide finite-element analysis software for a wide variety of applications including static and dynamic structural analysis, thermal analysis, dynamic performance of mechanical systems, vibration analysis, computational fluid dynamics analysis, and other computer-aided engineering (CAE) capabilities.

1. ADINA R&D, Inc.
2. Autodesk Algor Simulation
3. ANSYS, Inc.
4. MSC Software, Inc.
5. NEi Software, Inc.

PROBLEMS

For the sets of given stresses on an element given in Table 4–2, draw a complete Mohr's circle, find the principal stresses and the maximum shear stress, and draw the principal stress element and the maximum shear stress element. Any stress components not shown are assumed to be zero.

31. Refer to Figure 3–20. For the shaft aligned with the x -axis, create a stress element on the bottom of the shaft just to the left of section B . Then draw the Mohr's circle for that element. Use $D = 0.50$ in.
32. Refer to Figure P3–48. For the shaft ABC , create a stress element on the bottom of the shaft just to the right of section B . The torque applied to the shaft at B is resisted at support C only. Draw the Mohr's circle for the stress element. Use $D = 1.50$ in.
33. Repeat Problem 32 for the shaft in Figure P3–49. Use $D = 0.50$ in.
34. Refer to Figure P3–50. For the shaft ABC , create a stress element on the bottom of the shaft just to the left of section B . The torque applied to the shaft by the crank is resisted at support B only. Draw the Mohr's circle for the stress element. Use $D = 50$ mm.
35. A short cylindrical bar having a diameter of 4.00 in is subjected to an axial compressive force of 75 000 lb and a torsional moment of 20 000 lb · in. Draw a stress element on the surface of the bar. Then draw the Mohr's circle for the element.
36. A torsion bar is used as a suspension element for a vehicle. The bar has a diameter of 20 mm. It is subjected to a torsional moment of 450 N · m and an axial tensile force of 36.0 kN. Draw a stress element on the surface of the bar, and then draw the Mohr's circle for the element.

TABLE 4–2 Given Stresses for Problems 1–30

| Problem | σ_x | σ_y | τ_{xy} |
|---------|------------|------------|-------------|
| 1 | 20 ksi | 0 ksi | 10 ksi |
| 2 | −85 ksi | 40 ksi | 30 ksi |
| 3 | 40 ksi | −40 ksi | −30 ksi |
| 4 | −80 ksi | 40 ksi | −30 ksi |
| 5 | −120 ksi | 40 ksi | −20 ksi |
| 6 | −120 ksi | 40 ksi | 20 ksi |
| 7 | 60 ksi | −40 ksi | −35 ksi |
| 8 | 120 ksi | −40 ksi | 100 ksi |
| 9 | −100 MPa | 0 MPa | 80 MPa |
| 10 | −250 MPa | 80 MPa | −110 MPa |
| 11 | 50 MPa | −80 MPa | 40 MPa |
| 12 | 150 MPa | −80 MPa | −40 MPa |
| 13 | −150 MPa | 80 MPa | −40 MPa |
| 14 | 0 MPa | 0 MPa | 40 MPa |
| 15 | 250 MPa | −80 MPa | 0 MPa |
| 16 | 50 MPa | −80 MPa | −30 MPa |
| 17 | 400 MPa | −300 MPa | 200 MPa |
| 18 | −120 MPa | 180 MPa | −80 MPa |
| 19 | −30 MPa | 20 MPa | 40 MPa |
| 20 | 220 MPa | −120 MPa | 0 MPa |
| 21 | 40 ksi | 0 ksi | 0 ksi |
| 22 | 0 ksi | 0 ksi | 40 ksi |
| 23 | 38 ksi | −25 ksi | −18 ksi |
| 24 | 55 ksi | 0 ksi | 0 ksi |
| 25 | 22 ksi | 0 ksi | 6.8 ksi |
| 26 | −4250 psi | 3250 psi | 2800 psi |
| 27 | 300 MPa | 100 MPa | 80 MPa |
| 28 | 250 MPa | 150 MPa | 40 MPa |
| 29 | −840 kPa | −335 kPa | −120 kPa |
| 30 | −325 kPa | −50 kPa | −60 kPa |

DESIGN FOR DIFFERENT TYPES OF LOADING

The Big Picture

You Are the Designer

- 5–1 Objectives of This Chapter
- 5–2 Types of Loading and Stress Ratio
- 5–3 Failure Theories
- 5–4 Design for Static Loading
- 5–5 Endurance Limit and Mechanisms of Fatigue Failure
- 5–6 Estimated Actual Endurance Limit, s'_n
- 5–7 Design for Cyclic Loading
- 5–8 Recommended Design and Processing for Fatigue Loading
- 5–9 Design Factors
- 5–10 Design Philosophy
- 5–11 General Design Procedure
- 5–12 Design Examples
- 5–13 Statistical Approaches to Design
- 5–14 Finite Life and Damage Accumulation Method

THE BIG PICTURE

Design for Different Types of Loading

Discussion Map

- This chapter provides additional tools you can use to design load-carrying components that are safe and reasonably efficient in their use of materials.
- You must learn how to classify the kind of loading the component is subjected to: *static, repeated and reversed, fluctuating, shock, or impact*.
- You will learn to identify the appropriate analysis techniques based on the type of load and the type of material.

Using the techniques you learn in this chapter will help you to complete a wide variety of design tasks.

For the concepts considered in this chapter, the big picture encompasses a huge array of examples in which you will build on the principles of strength of materials that you reviewed in Chapters 3 and 4 and extend them from the analysis mode to the design mode. Several steps are involved, and you must learn to make rational judgments about the appropriate method to apply to complete the design.

Discover

Identify components of real products or structures that are subjected to static loads.

Identify components that are subjected to equal, repeated loads that reverse directions.

Identify components that experience fluctuating loads that vary with time.

Identify components that are loaded with shock or impact, such as being struck by a hammer or dropped onto a hard surface.

In this chapter, you will learn how to do the following:

1. Recognize the manner of loading for a part: Is it static, repeated and reversed, fluctuating, shock, or impact?
2. Select the appropriate method to analyze the stresses produced.

3. Determine the strength property for the material that is appropriate to the kind of loading and to the kind of material: Is the material a metal or a nonmetal? Is it brittle or ductile? Should the design be based on the yield strength, ultimate tensile strength, compressive strength, endurance limit, or some other material property?
4. Specify a suitable *design factor*, often called a *factor of safety*.
5. Design a wide variety of load-carrying members to be safe under their particular expected loading patterns.

The following paragraphs show by example some of the situations to be studied in this chapter.

An ideal *static load* is one that is applied slowly and is never removed. Some loads that are applied slowly and removed and replaced very infrequently can also be considered to be static. What examples can you think of for products or their components that are subjected to static loads? Consider load-carrying members of structures, parts of furniture pieces, and brackets or support rods holding equipment in your home or in a business or factory. Try to identify specific examples, and describe them to your colleagues. Discuss how the load is applied and which parts of the load-carrying member are subjected to the higher stress levels. Some of the examples that you discovered during **The Big Picture** discussion for Chapter 3 could be used again here.

Fluctuating loads are those that vary during the normal service of the product. They typically are applied for quite a long time so the part experiences many thousands or millions of cycles of stress during its expected life. There are many examples in consumer products around your home, in your car, in commercial buildings, and in manufacturing facilities. Consider virtually anything that has moving parts. Again, try to identify specific examples, and describe them to your colleagues. How does the load fluctuate? Is it applied and then completely removed each cycle? Or is there always some level of mean or average load with an alternating load superimposed on it? Does the load swing from a positive maximum value to a negative minimum value of equal magnitude during each cycle of loading? Consider parts with rotating shafts, such as engines or agricultural, production, and construction machinery.

Consider products that have failed. You may have identified some from **The Big Picture** discussion for Chapter 3. Did they fail the first time they were used? Or did they fail after some fairly long service? Why do you think they were able to operate for some time before failure?

Can you find components that failed suddenly because the material was brittle, such as cast iron, some ceramics, or some plastics? Can you find others that failed only after some considerable deformation? Such failures are called *ductile fractures*.

What were the consequences of the failures that you have found? Was anyone hurt? Was there damage to some other valuable component or property? Or was the failure simply an inconvenience? What was the order of magnitude of cost related to the failure? The answer to some of these questions can help you make rational decisions about design factors to be used in your designs.

It is the designer's responsibility to ensure that a machine part is safe for operation under reasonably foreseeable conditions. This requires that a stress analysis be performed in which the predicted stress levels in the part are compared with the *design stress*, or that level of stress permitted under the operating conditions.

The stress analysis can be performed either analytically or experimentally, depending on the degree of complexity of the part, the knowledge about the loading conditions, and the material properties. The designer must be able to verify that the stress to which a part is subjected is safe.

The manner of computing the design stress depends on the manner of loading and on the type of material. Loading types include the following:

- Static
- Repeated and reversed
- Fluctuating
- Shock or impact
- Random

Material types are many and varied. Among the metallic materials, the chief classification is between *ductile* and *brittle* materials. Other considerations include the manner of forming the material (casting, forging, rolling, machining, and so on), the type of heat treatment, the surface finish, the physical size, the environment in which it is to operate, and the geometry of the part. Different factors must be considered for plastics, composites, ceramics, wood, and others.

This chapter outlines methods of analyzing load-carrying machine parts to ensure that they are safe. Several different cases are described in which knowledge of the combinations of material types and loading patterns leads to the determination of the appropriate method of analysis. It will then be your job to apply these tools correctly and judiciously as you continue your career.

YOU ARE THE DESIGNER

Recall the task presented at the start of Chapter 4, in which you were the designer of a bracket to hold a fabric sample during a test to determine its long-term stretch characteristics. Figure 4–2 showed a proposed design.

Now you are asked to continue this design exercise by selecting a material from which to make the two bent circular bars that are welded to the rigid support. Also, you must specify a suitable diameter for the bars when a certain load is applied to the test material. ■

5-1 OBJECTIVES OF THIS CHAPTER

After completing this chapter, you will be able to:

1. Identify various kinds of loading commonly encountered by machine parts, including *static, repeated and reversed, fluctuating, shock or impact, and random*.
2. Define the term *stress ratio* and compute its value for the various kinds of loading.
3. Describe the stress analysis process and the concept of failure theories for mechanical design.
4. Define the *maximum shear stress theory of failure* for design with ductile materials.
5. Define the *distortion energy theory*, also called the *von Mises theory* or the *Mises-Hencky theory* for design with ductile materials.
6. Define the *maximum normal stress theory*, the *Coulomb-Mohr Theory* and the *modified Mohr theory* for design with brittle materials under static loading.
7. Define the concept of *fatigue*.
8. Define the material property of *endurance limit* and determine estimates of its magnitude for different materials.
9. Recognize the factors that affect the magnitude of endurance limit.
10. Describe the *Soderberg* and the *Goodman methods* and apply them to the design of parts subjected to fluctuating stresses.
11. Define the term *design factor*.
12. Specify a suitable value for the design factor.
13. Consider *statistical approaches, finite life, fracture mechanics, and damage accumulation methods* for design.

5-2 TYPES OF LOADING AND STRESS RATIO

The primary factors to consider when specifying the type of loading to which a machine part is subjected are the manner of variation of the load and the resulting variation of stress with time. Stress variations are characterized by four key values, expressed here as normal stresses:

1. Maximum stress, σ_{\max}
2. Minimum stress, σ_{\min}

3. Mean (average) stress, σ_m
4. Alternating stress, σ_a (*stress amplitude*)

The maximum and minimum stresses are usually computed from known information by stress analysis or finite-element methods, or they are measured using experimental stress analysis techniques. Then the mean and alternating stresses can be computed from

$$\sigma_m = (\sigma_{\max} + \sigma_{\min})/2 \quad (5-1)$$

$$\sigma_a = (\sigma_{\max} - \sigma_{\min})/2 \quad (5-2a)$$

$$\sigma_a = (\sigma_{\max} - \sigma_m) \quad (5-2b)$$

The behavior of a material under varying stresses is dependent on the manner of the variation. One method used to characterize the variation is called *stress ratio*. Two types of stress ratios that are commonly used are defined as follows:

$$\text{Stress ratio } R = \frac{\text{minimum stress}}{\text{maximum stress}} = \frac{\sigma_{\min}}{\sigma_{\max}} \quad (5-3)$$

$$\text{Stress ratio } A = \frac{\text{alternating stress}}{\text{mean stress}} = \frac{\sigma_a}{\sigma_m}$$

Stress ratio R is used in this book.

Static Stress

When a part is subjected to a load that is applied slowly, without shock, and is held at a constant value, the resulting stress in the part is called *static stress*. An example is the load on a structure due to the dead weight of the building materials. Figure 5–1 shows a diagram of stress versus time for static loading. Because $\sigma_{\max} = \sigma_{\min}$, the stress ratio for static stress is $R = 1.0$.

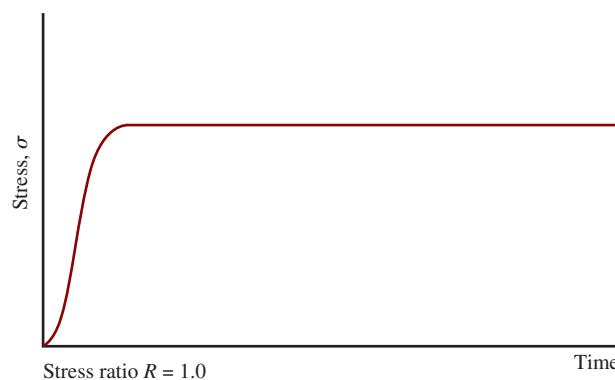


FIGURE 5–1 Static stress

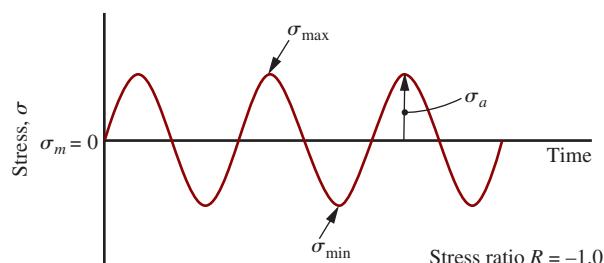


FIGURE 5-2 Repeated and reversed stress or pure oscillation

Static loading can also be assumed when a load is applied and is removed slowly and then reapplied, if the number of load applications is small, that is, under a few thousand cycles of loading.


Repeated and Reversed Stress— Pure Oscillation

A stress reversal occurs when a given element of a load-carrying member is subjected to a certain level of tensile stress followed by the *same level* of compressive stress. If this stress cycle is repeated many thousands of times, the stress is called *repeated and reversed* or *pure oscillation*. Figure 5-2 shows the diagram of stress versus time for repeated and reversed stress. Because $\sigma_{\min} = -\sigma_{\max}$, the stress ratio is $R = -1.0$, and the mean stress is zero.




An important example in machine design is a rotating circular shaft loaded in bending such as that shown

in Figure 5-3. In the position shown, an element on the bottom of the shaft experiences tensile stress while an element on the top of the shaft sees a compressive stress of equal magnitude. As the shaft is rotated 180° from the given position, these two elements experience a complete reversal of stress. Now if the shaft continues to rotate, all parts of the shaft that are in bending see repeated, reversed stress. This is a description of the classic loading case of *repeated and reversed bending*.

This type of loading is often called *fatigue loading*, and a machine of the type shown in Figure 5-3 is often used to test the fatigue behavior of materials. The device shown is called the *R. R. Moore fatigue test device* and the material property thus measured is called *endurance limit* and this property is discussed in detail in Section 5-5. The shaft is supported by a bearing at each end while a yoke is supported on bearings. A known loading is applied to the yoke resulting in two concentrated loads being applied; one at each bearing that supports the yoke. Note from the shearing force and bending moment diagrams that this type of loading provides uniform bending moment between the yoke arms while the shearing force is zero. Thus pure bending occurs in the test section. The shaft is machined to precise dimensions with the middle portion having a very gradual taper down to a small diameter. That diameter is typically 0.300 in. With the gradual taper, the stress concentration factor is virtually 1.0. Furthermore, the shaft is polished to a fine surface finish so that machining marks do not affect the stress

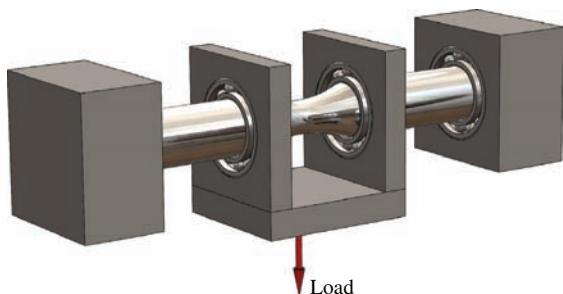

(a) Pictorial view of the loading device

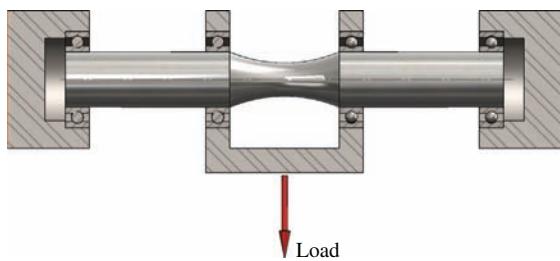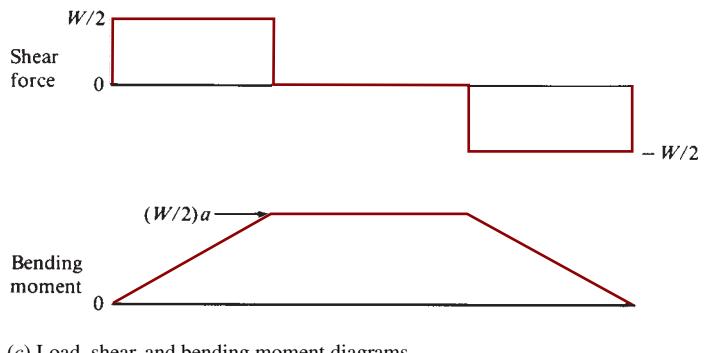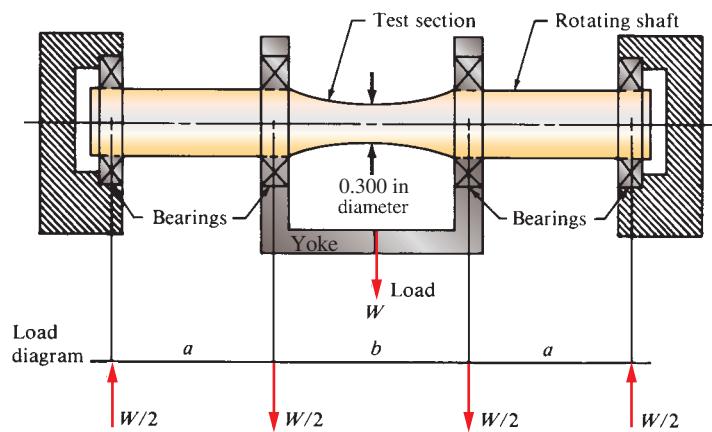

(b) Side view showing the shaft and four bearings

(c) Load, shear, and bending moment diagrams

FIGURE 5-3 R. R. Moore fatigue test device; example of reversed bending

levels in the bar. The shaft is rotated by an electric motor while the system counts the number of revolutions. It also has a device to sense when the specimen breaks so that there is a known relationship between the stress level and the number of cycles to failure.

Actually, reversed bending is only a special case of fatigue loading, since any stress that varies with time can lead to fatigue failure of a part. Many materials test laboratories are using computer-controlled, repeated and reversed axial loading instead of rotating bending to acquire fatigue strength data. It is described later that there are differences between these two methods in regard to the strength values obtained. It is essential that care be exercised to determine what type of stress is used to measure the fatigue strength when using published data.

Fluctuating Stress—Pulsating Stress

When a load-carrying member is subjected to an alternating stress with a nonzero mean, the loading produces *fluctuating stress*, sometimes called *pulsating stress*. Figure 5–4 shows four diagrams of stress versus time for this type of stress. Differences among the four diagrams occur in whether the various stress levels are positive (tensile) or negative (compressive). **Any varying stress with a nonzero mean is considered a fluctuating stress.** Figure 5–4 also shows the possible ranges of values for the stress ratio R for the given loading patterns.

A special, frequently encountered case of fluctuating stress is *repeated, one-direction stress*, or pure pulsating

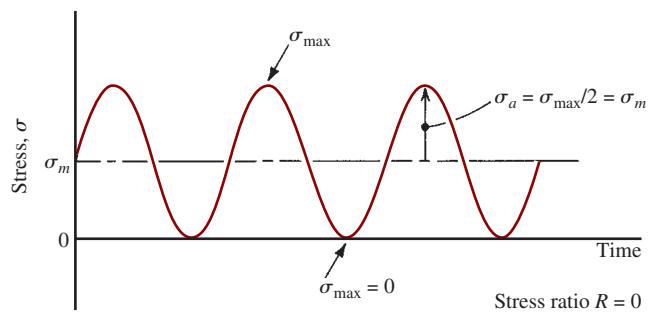


FIGURE 5–5 Repeated, one-direction stress, a special case of fluctuating stress or pure pulsating stress


stress, in which the load is applied and removed many times. As shown in Figure 5–5, the stress varies from zero to a maximum with each cycle. Then, by observation,

$$\sigma_{\min} = 0$$


$$\sigma_m = \sigma_a = \sigma_{\max}/2$$

$$R = \sigma_{\min}/\sigma_{\max} = 0$$


An example of a machine part subjected to the more general nature of fluctuating stress of the type shown in Figure 5–4(a) is shown in Figure 5–6, in which a reciprocating cam follower feeds spherical balls one at a time from a chute. The follower is held against the rotating eccentric cam by a flat spring loaded as a cantilever. Part (a) of the figure shows the entire layout of the ball feed device and part (b) shows the cross section of the flat spring. Parts (c) and (d) show two views of just the cam, follower, and flat spring. When the follower is farthest

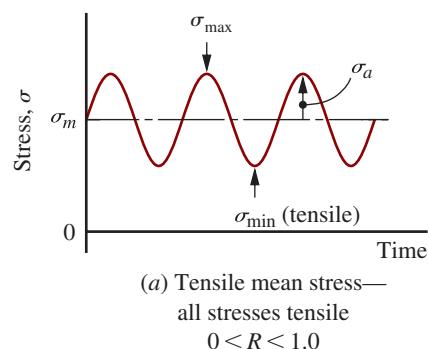


(a) Tensile mean stress—
all stresses tensile
 $0 < R < 1.0$

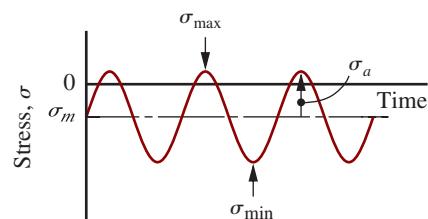

(c) Compressive mean stress—
 σ_{\max} tensile
 σ_{\min} compressive
 $-1.0 < R < 0$

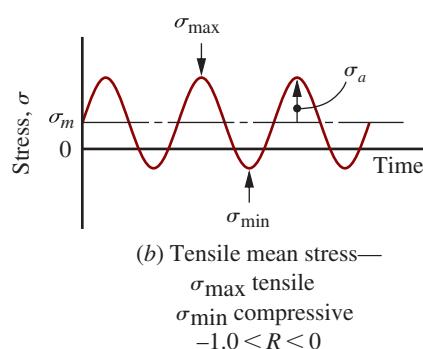

(b) Tensile mean stress—
 σ_{\max} tensile
 σ_{\min} compressive
 $-1.0 < R < 0$

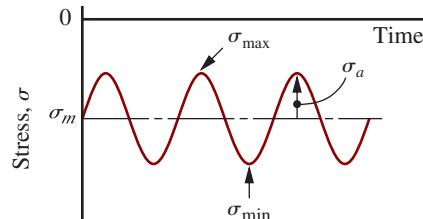

(d) Compressive mean stress—
all stresses compressive
 $1.0 < R < \infty$

FIGURE 5–4 Fluctuating stresses—pulsating stresses

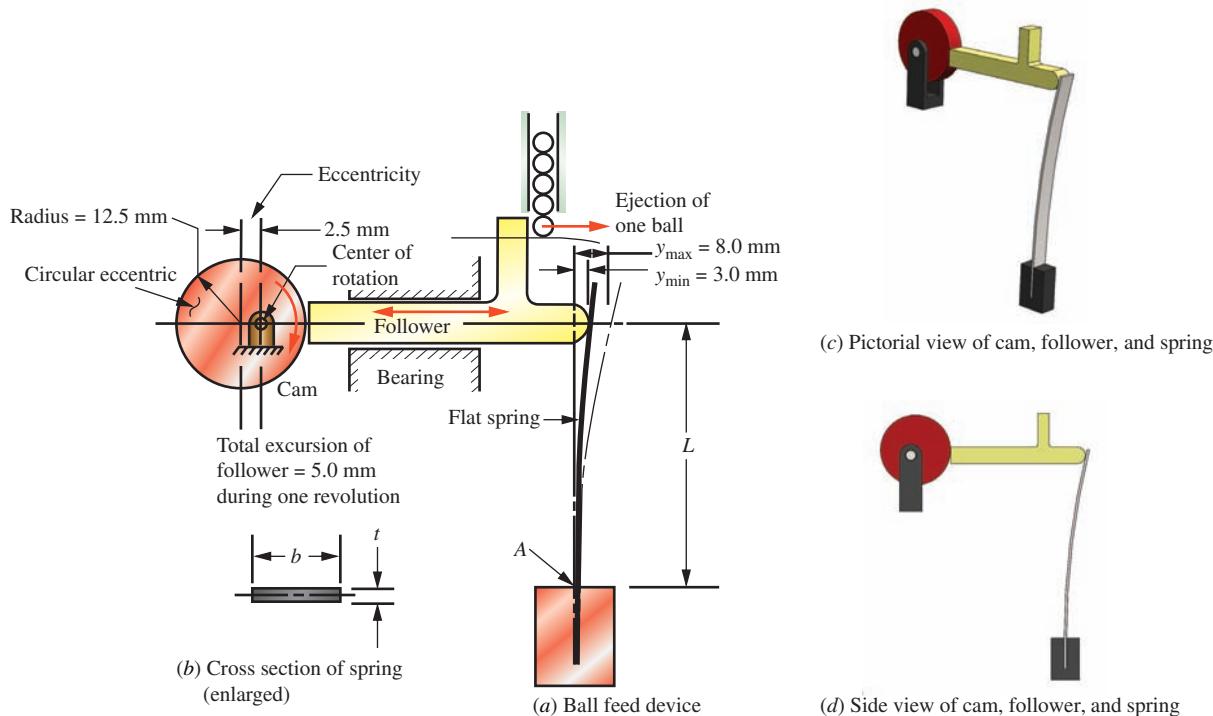


FIGURE 5-6 Example of cyclic loading in which the flat spring is subjected to fluctuating stress

to the left, the spring is deflected from its free (straight) position by an amount $y_{\min} = 3.0 \text{ mm}$. When the follower is farthest to the right, the spring is deflected to $y_{\max} = 8.0 \text{ mm}$. Then, as the cam continues to rotate, the spring sees the cyclic loading between the minimum

and maximum values. Point A at the base of the spring on the convex side experiences the varying tensile stresses of the type shown in Figure 5-4(a). Example Problem 5-1 completes the analysis of the stress in the spring at point A.

Example Problem

5-1

For the flat steel spring shown in Figure 5-6, compute the maximum stress, the minimum stress, the mean stress, and the alternating stress. Also compute the stress ratio, R . The length L is 65 mm. The dimensions of the spring cross section are $t = 0.80 \text{ mm}$ and $b = 6.0 \text{ mm}$.

Solution

Objective Compute the maximum, minimum, mean, and alternating tensile stresses in the flat spring. Compute the stress ratio, R .

Given

Layout shown in Figure 5-6. The spring is steel: $L = 65 \text{ mm}$.

Spring cross-sectional dimensions: $t = 0.80 \text{ mm}$ and $b = 6.0 \text{ mm}$.

Maximum deflection of the spring at the follower = 8.0 mm.

Minimum deflection of the spring at the follower = 3.0 mm.

Analysis Point A at the base of the spring experiences the maximum tensile stress. Determine the force exerted on the spring by the follower for each level of deflection using the formulas from Table A14-2, Case (a). Compute the bending moment at the base of the spring for each deflection. Then compute the stresses at point A using the bending stress formula, $\sigma = Mc/I$. Use Equations (5-1), to (5-3) for computing the mean, alternating stresses, and R .

Results Case (a) of Table A14-2 gives the following formula for the amount of deflection of a cantilever for a given applied force:

$$y = PL^3/3EI$$

Solve for the force as a function of deflection:

$$P = 3Ely/L^3$$

Appendix 3 gives the modulus of elasticity for steel to be $E = 207 \text{ GPa}$. The moment of inertia, I , for the spring cross section is found from

$$I = bt^3/12 = (6.00 \text{ mm})(0.80 \text{ mm})^3/12 = 0.256 \text{ mm}^4$$

Then the force on the spring when the deflection y is 3.0 mm is

$$P = \frac{3(207 \times 10^9 \text{ N/m}^2)(0.256 \text{ mm}^4)(3.0 \text{ mm})}{(65 \text{ mm})^3} \frac{(1.0 \text{ m}^2)}{(10^6 \text{ mm}^2)} = 1.74 \text{ N}$$

The bending moment at the support is

$$M = P \cdot L = (1.74 \text{ N})(65 \text{ mm}) = 113 \text{ N} \cdot \text{mm}$$

The bending stress at point A caused by this moment is

$$\sigma = \frac{Mc}{I} = \frac{(113 \text{ N} \cdot \text{mm})(0.40 \text{ mm})}{0.256 \text{ mm}^4} = 176 \text{ N/mm}^2 = 176 \text{ MPa}$$

This is the lowest stress that the spring sees in service, and therefore $\sigma_{\min} = 176 \text{ MPa}$.

Because the force on the spring is proportional to the deflection, the force exerted when the deflection is 8.0 mm is

$$P = (1.74 \text{ N})(8.0 \text{ mm})/(3.0 \text{ mm}) = 4.63 \text{ N}$$

The bending moment is

$$M = P \cdot L = (4.63 \text{ N})(65 \text{ mm}) = 301 \text{ N} \cdot \text{mm}$$

The bending stress at point A is

$$\sigma = \frac{Mc}{I} = \frac{(301 \text{ N} \cdot \text{mm})(0.40 \text{ mm})}{0.256 \text{ mm}^4} = 470 \text{ N/mm}^2 = 470 \text{ MPa}$$

This is the maximum stress that the spring sees, and therefore $\sigma_{\max} = 470 \text{ MPa}$.

Now the mean stress can be computed:

$$\sigma_m = (\sigma_{\max} + \sigma_{\min})/2 = (470 + 176)/2 = 323 \text{ MPa}$$

Finally, the alternating stress is

$$\sigma_a = (\sigma_{\max} - \sigma_{\min})/2 = (470 - 176)/2 = 147 \text{ MPa}$$

The stress ratio is found using Equation (5–3):

$$\text{Stress ratio } R = \frac{\text{minimum stress}}{\text{maximum stress}} = \frac{\sigma_{\min}}{\sigma_{\max}} = \frac{176 \text{ MPa}}{470 \text{ MPa}} = 0.37$$

Comments

The sketch of stress versus time shown in Figure 5–4(a) illustrates the form of the fluctuating stress on the spring. In Section 5–8, you will see how to design parts subjected to this kind of stress.

Shock or Impact Loading

Loads applied suddenly and rapidly cause shock or impact. Examples include a hammer blow, a weight falling onto a structure, and the action inside a rock crusher. The design of machine members to withstand shock or impact involves an analysis of their energy-absorption capability, a topic not considered in this book. (See References 3, 6, 10, and 12.)

Random Loading

When varying loads are applied that are not regular in their amplitude, the loading is called *random*. Statistical analysis is used to characterize random loading for purposes of design and analysis. This topic is not covered in this book. See Reference 11.

5–3 FAILURE THEORIES

When a part is designed, it is of primary interest to know if the part will fail during service. As described in Section 4–3, one of the design objectives is to ensure that the material has the *strength* to sustain the *stress*. Since materials behave differently under different types of loading conditions, various failure theories have been proposed and tested. The theories presented here are accepted practices for designers to compare some defined stresses to some defined strengths. For ductile materials under static loading, a stress element is considered to have failed when yielding occurs. Thus, the failure theories are based on established yield criteria. As brittle materials do not exhibit yielding before fracture, the evaluation of failure is based on postulated fracture criteria. For cyclic loading, other failure theories for evaluating the

mean and alternating stresses have been proposed. In Section 5–4, we will introduce the failure theories for static loading. Sections 5–5 and 5–6 present the concepts of fatigue strength and endurance limit that are critical in designing parts for cyclic loading. The theories for fatigue failure are presented in Section 5–7.

5–4 DESIGN FOR STATIC LOADING

Ductile Materials under Static Loading

There are two widely accepted ductile material failure theories for parts under static loading: *Maximum Shear Stress Theory* and *Distortion Energy Theory*. These theories predict failure due to yielding that produce permanent, plastic deformation.

Maximum Shear Stress Theory (MSST). The MSST of failure prediction states that a ductile material begins to yield when the maximum shear stress at a critical location in a load-carrying component exceeds that in a tensile-test specimen when yielding begins. A Mohr's circle analysis for the uniaxial tension test, discussed in Chapter 4, shows that the maximum shear stress is one-half of the applied tensile stress. At yield, then, $s_{sy} = s_y/2$. We use this approach in this book to estimate s_{sy} . Then, for design, the stress element at the location of interest is safe when:

$$\tau_{\max} \leq \frac{s_{sy}}{N} = \frac{s_y}{2N} \quad (5-4)$$

where N is the design factor (to be discussed in Section 5–9). As shown in Section 4–4, the maximum shear stress is the Tresca stress:

$$\tau_{\max} = \frac{\sigma_1 - \sigma_3}{2} \leq \frac{s_y}{N} \quad (5-5)$$

Thus, because $s_{sy} = s_y/2$,

$$\sigma_1 - \sigma_3 \leq \frac{s_y}{N} \quad (5-6)$$

where σ_1 and σ_3 are the maximum and minimum principal stresses. Both Equations (5–5) and (5–6) evaluate the diameter of the Mohr's circle against the yield strength of the material. When considering all three principal stresses, two additional cases should also be noted. For the condition that all of the principal stresses are in tension, $\sigma_1 > \sigma_2 > \sigma_3 > 0$, the stress element is safe when

$$\sigma_1 \leq \frac{s_y}{N} \quad (5-7)$$

For the condition that all of the principal stresses are in compression, $0 > \sigma_1 > \sigma_2 > \sigma_3$, the stress element is safe when

$$\sigma_3 \geq -\frac{s_y}{N} \quad (5-8)$$

This concept can be illustrated by the *yield locus* shown in Figure 5–7. The numerical scales on the graph are normalized to the yield strength, $\sigma_1/s_y = 1.0$. The materials are even materials for which the values of yield strength

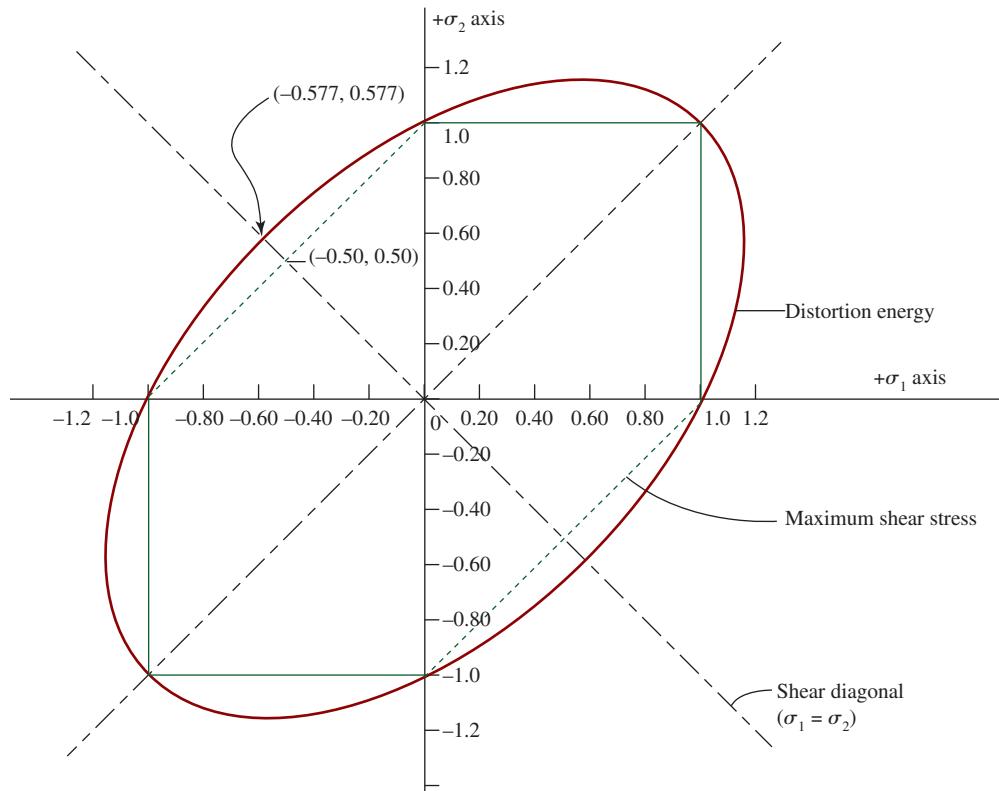


FIGURE 5–7 Maximum shear stress and distortion energy failure criteria

in tension and compression are the same, a characteristic of ductile materials. Plotting the principal stresses, the stress states that lie within the hexagon are predicted to be safe, while those outside would predict failure.

The maximum shear stress method of failure prediction has been shown by experimentation to be somewhat conservative. It is relatively easy to use and is often chosen by designers. For more precise analysis, the distortion energy method is preferred.

Distortion Energy Theory (DET). The distortion energy Theory has been shown to be the best predictor of failure for ductile materials under static loads. It is applied using the von Mises stress, σ_e , which was described in Section 4–4.

The von Mises stress can be presented in different forms, including the general form for 3D stress element:

$$\sigma_e = \sqrt{\frac{(\sigma_1 - \sigma_2)^2 + (\sigma_2 - \sigma_3)^2 + (\sigma_3 - \sigma_1)^2}{2}} \quad (5-9)$$

A stress element is considered safe when

$$\sigma_e \leq \frac{s_y}{N} \quad (5-10)$$

A number of variations based on 2D stress state can be derived from Equation (5–9). For example, the von Mises stress of the stress element $\sigma_1 > \sigma_2 > 0$ and $\sigma_3 = 0$ is expressed as

$$\sigma_e = \sqrt{\sigma_1^2 + \sigma_2^2 - \sigma_1\sigma_2} \quad (5-11)$$

It is also helpful to visualize the distortion energy failure prediction theory by plotting the von Mises yield locus on a graph, as shown in Figure 5–7. The yield locus is an ellipse centered at the origin and passing through the yield strength on each axis, in both the tensile and compressive regions. As the concept demonstrated in the MSST, the stress states that lie within the ellipse are predicted to be safe, while those outside would predict failure.

The comparison of the MSST and DET is shown in Figure 5–7. With data showing that the distortion energy theory is the best predictor, it can be seen that the MSST is generally conservative and that it coincides with the distortion energy ellipse at six points. In other regions, it is as much as 16% lower. Note the 45° diagonal line through the second and fourth quadrants, called the *pure shear diagonal*. It was demonstrated in Section 4–6 that for pure shear the stress state is

$$\sigma_1 = \tau_{xy}, \quad \sigma_2 = 0, \quad \sigma_3 = -\tau_{xy}$$

Substituting into Equation (5–9):

$$\begin{aligned} \sigma_e &= \sqrt{\frac{(\tau_{xy} - 0)^2 + (0 + \tau_{xy})^2 + (-\tau_{xy} - \tau_{xy})^2}{2}} \\ &= \sqrt{3}\tau_{xy} \leq \frac{s_y}{N} \end{aligned} \quad (5-12)$$

and thus

$$\tau_{xy} \leq \frac{s_y}{\sqrt{3}} = 0.577s_y \quad (5-13)$$

for $N = 1$. This predicts yielding when the shear stress is $0.577s_y$. The MSST predicts failure at $0.50s_y$, thus quantifying the conservatism of the MSST.

Brittle Materials under Static Loading

Brittle materials do not yield. Thus, their failure prediction is based on fracture criteria. Brittle materials are typically “non-even” meaning that their compressive strength is higher than the tensile strength. This characteristic is reflected in the three failure theories that are presented here.

Maximum Normal Stress Theory (MNST). The MNST states that a material will fracture when the maximum normal stress (either tension or compression) exceeds the ultimate strength of the material as obtained from a standard tensile or compressive test. Its use is limited, namely for brittle materials under pure uniaxial static tension or compression. When applying this theory, any stress concentration factor, K_t , at the region of interest should be applied to the computed stress because brittle materials do not yield and therefore cannot redistribute the increased stress. Given the principal stresses, $\sigma_1 > \sigma_2 > \sigma_3$, the following equations apply the maximum normal stress theory for safe design.

$$K_t\sigma_1 \leq \frac{s_{ut}}{N} \quad (5-14)$$

$$K_t\sigma_3 \geq \frac{s_{uc}}{N} \quad (5-15)$$

where s_{ut} and s_{uc} are the uniaxial ultimate strength in tension and compression, respectively. It should be noted that the value of s_{uc} is negative. Figure 5–8 shows the failure line defined by MNST. The stress states within the square area are predicted to be safe.

Coulomb-Mohr Theory (CMT). As discussed in the previous section, the MNST is useful for failure prediction of brittle materials subjected to uniaxial tension and uniaxial compression. For a biaxial stress element, a failure criterion known as the Coulomb-Mohr Theory can better predict failure by fracture. The following equation expresses the basis for the CMT:

$$\frac{\sigma_1}{s_{ut}} + \frac{\sigma_3}{s_{uc}} = \frac{1}{N} \quad (5-16)$$

The fracture prediction based on the CMT is an uneven hexagon as shown in Figure 5–8. Equation (5–16) represents the line connecting the points $(s_{ut}, 0)$ and $(0, s_{uc})$. It can be observed that the CMT is an extension of MSST with consideration of the non-even material

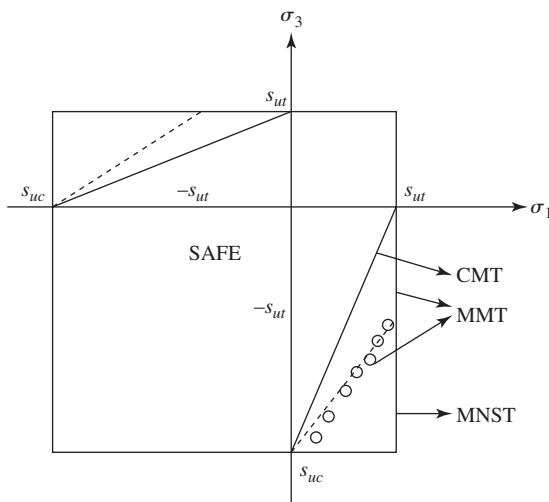


FIGURE 5-8 Failure predictions of brittle materials under static loading

property of brittle materials. Similar to MSST, when considering all three principal stresses, two additional cases should also be evaluated. When all of the principal stresses are in tension, $\sigma_1 > \sigma_2 > \sigma_3 > 0$, the stress element is safe when

$$\sigma_1 \leq \frac{s_{ut}}{N} \quad (5-17)$$

When all of the principal stresses are in compression, $0 > \sigma_1 > \sigma_2 > \sigma_3$, the stress element is safe when

$$\sigma_3 \geq \frac{s_{uc}}{N} \quad (5-18)$$

Note that the value of s_{uc} is negative.

Modified Mohr Theory (MMT). The Modified Mohr Theory is a semi-empirical data fitting method that best predicts fracture of brittle material under static loading, especially for the stress states in the fourth quadrant as depicted in Figure 5-8 where the circles illustrate examples of experimental results. Failure is predicted when the stress state is outside of the region defined by connecting the points (s_{ut}, s_{ut}) , $(-s_{ut}, s_{ut})$, $(s_{uc}, 0)$, (s_{uc}, s_{uc}) , $(0, s_{uc})$, $(s_{ut}, -s_{ut})$, and (s_{ut}, s_{ut}) .

For design, because of the many different shapes and dimensions of safe-stress zones, it is suggested that a rough plot be made of the pertinent part of the modified Mohr diagram from actual material strength data as shown in Figure 5-9. Then the actual values of σ_1 and σ_2 can be plotted to ensure that they lie within the safe zone of the diagram as shown in Figure 5-9. A *load line* can be an aid in determining the design factor, N , using the modified Mohr diagram. The assumption is made that stresses increase proportionally as loads increase. Apply the following steps for an example stress state, A , for which $\sigma_{1A} = 15$ ksi and $\sigma_{2A} = -80$ ksi. The material is Grade 40A gray cast iron having $s_{ut} = 40$ ksi and $s_{uc} = -140$ ksi.

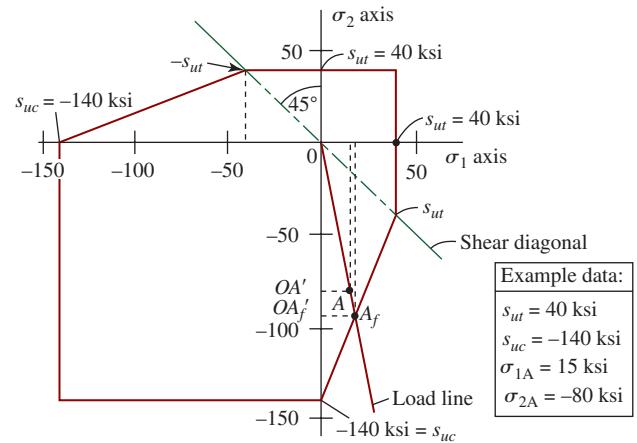


FIGURE 5-9 Modified Mohr diagram with example data and a load line plotted

1. Draw the modified Mohr diagram as shown in Figure 5-9.
2. Plot point $A (15, -80)$.
3. Draw the load line from the origin through point A until it intersects the failure line on the diagram at the point labeled A_f .
4. Determine the distances $OA = 81.4$ ksi and $OA_f = 96.0$ ksi by scaling the diagram.
5. Compute the design factor from $N = OA_f/OA = 96.0/81.4 = 1.18$.

Summary of Static Loading Failure Theories

It is shown in this section that the selection of static loading failure theories mainly depends on the material (ductile or brittle). The information needed for failure prediction includes the principal stresses and the yield strength or ultimate tensile/compressive strength as shown in the various equations. A summary of the presented failure theories is shown in Table 5-1.

5-5 ENDURANCE LIMIT AND MECHANISMS OF FATIGUE FAILURE

Whenever a machine element is subjected to cyclical loading characterized by the patterns like those shown in Figures 5-2, 5-4, and 5-5, the loading is generally called *fatigue loading*, common to machinery components. Yield strength and ultimate tensile strength of a material are not adequate to represent the ability of materials to resist fatigue loading. This section presents the concept of *endurance limit*, sometimes called *fatigue limit*, that must be used in such cases. Components may fail at stress levels lower than ultimate or yield strengths after experiencing applied stresses for several cycles. Fatigue failures are often classified as either *low-cycle*

TABLE 5-1 Summary of static loading failure theories

| | Static Loading Failure Theories | Equations |
|-------------------|---------------------------------|------------------------|
| Ductile Materials | Maximum Shear Stress Theory | (5-6), (5-7), (5-8) |
| | Distortion Energy Theory | (5-9), (5-10) |
| Brittle Materials | Maximum Normal Stress Theory | (5-14), (5-15) |
| | Coulomb-Mohr Theory | (5-16), (5-17), (5-18) |
| | Modified Mohr Theory | Graphic method |

fatigue (LCF) or *high-cycle fatigue* (HCF) because the mechanism of failure is different for each. While no specific dividing line can be defined, designers often use up to 1000 cycles (10^3) for LCF and higher numbers of cycles—up to infinite life—as HCF.

Fatigue failures start at small surface cracks, internal imperfections, or even at grain boundaries in the material in areas subjected to tensile stress. With repeated applications of stress, the cracks grow and progress to larger areas of the cross section. Eventually, the component fails, often suddenly and catastrophically. Such failures frequently occur within areas of stress concentration such as keyways or grooves in shafts, steps in the size of a cross section, notches, or other geometric discontinuities as discussed in Section 3–22. Even surface roughness from machining or accidental nicks and scratches can serve as points of crack initiation. Therefore, designers must consider the possibility of fatigue failure when sizing critical sections of components. Manufacturers must also understand this phenomenon and produce parts with good finishes that are free from damage. End users of critical components must also handle them with care.

In low-cycle fatigue, local stresses experience high strain levels, approaching or exceeding the strain at yield of the material. Such events may be due to accidental overloading, or infrequently encountered situations during fabrication of a component, installation into an assembly, shock during transportation or handling, evasive maneuvers, takeoffs or landings of aircraft, launch of a ship or spacecraft, initial testing, seismic shock during an earthquake, or operating for prolonged periods near the limits of the capability of a system. The high strain may cause microscopic cracks that progress to ultimate failure. Prediction of the life of a component under such conditions falls under the analysis procedure called *fracture mechanics* that requires extensive knowledge of the geometry of the crack and the ability to characterize how a specific material behaves in the highly localized region of high strain and stress around the crack. A life prediction method called *strain-life* is used. References 1, 2, 7, and 9 and Internet sites 1–8 contain extensive detail about these topics. This book will not cover the topic of fracture mechanics encountered in low-cycle fatigue and will concentrate on designing to prevent high-cycle fatigue.

The endurance limit of a material under high-cycle fatigue loading is determined from tests that apply cyclic patterns of stress for long periods of time, and data are obtained for the number of cycles to failure for a given stress level. As expected, higher stress levels produce failure at fewer numbers of cycles and lower stresses permit higher numbers of cycles—up to a point. For many common materials used in machinery, a stress level is reached where a virtually unlimited number of cycles of stress can be applied without fatigue failure. This stress level is called the *endurance limit* or *fatigue limit* of the material. In this book, we use the symbol s_n for this property.

Data for endurance limit are reported on charts such as that shown in Figure 5–10, called a *stress-life diagram*. The vertical axis is the *stress amplitude*, σ_a , as defined by Equation (5–2) and shown in Figure 5–2, and it is assumed that the same amplitude occurs for each cycle for many thousands of cycles. The horizontal axis is the number of cycles to failure, N . Both axes are logarithmic scales, resulting in the data plotting as straight lines. The data are average values of endurance limit through the scattered data points taken from numerous tests at each stress level. The transition from the sloped line to the horizontal line at the fatigue limit for any given material typically occurs at approximately one million cycles (10^6), and the curves shown are idealized, showing the break to be sharp. The following equation represents the sloped portion of the curve:

$$s_a = s_n(N)^b \quad (5-19)$$

where

s_a = stress amplitude level for a given number of cycles to failure

N = number of cycles to failure at a given stress level

s_n = fatigue limit or endurance limit of the material

b = exponent related to the slope of the curve

Data for these properties for many materials are presented in References 1, 2, 7, and 9, and Internet sites 1–8 describe software programs that contain sizable databases of such data. Table 5–2 shows the data for the five

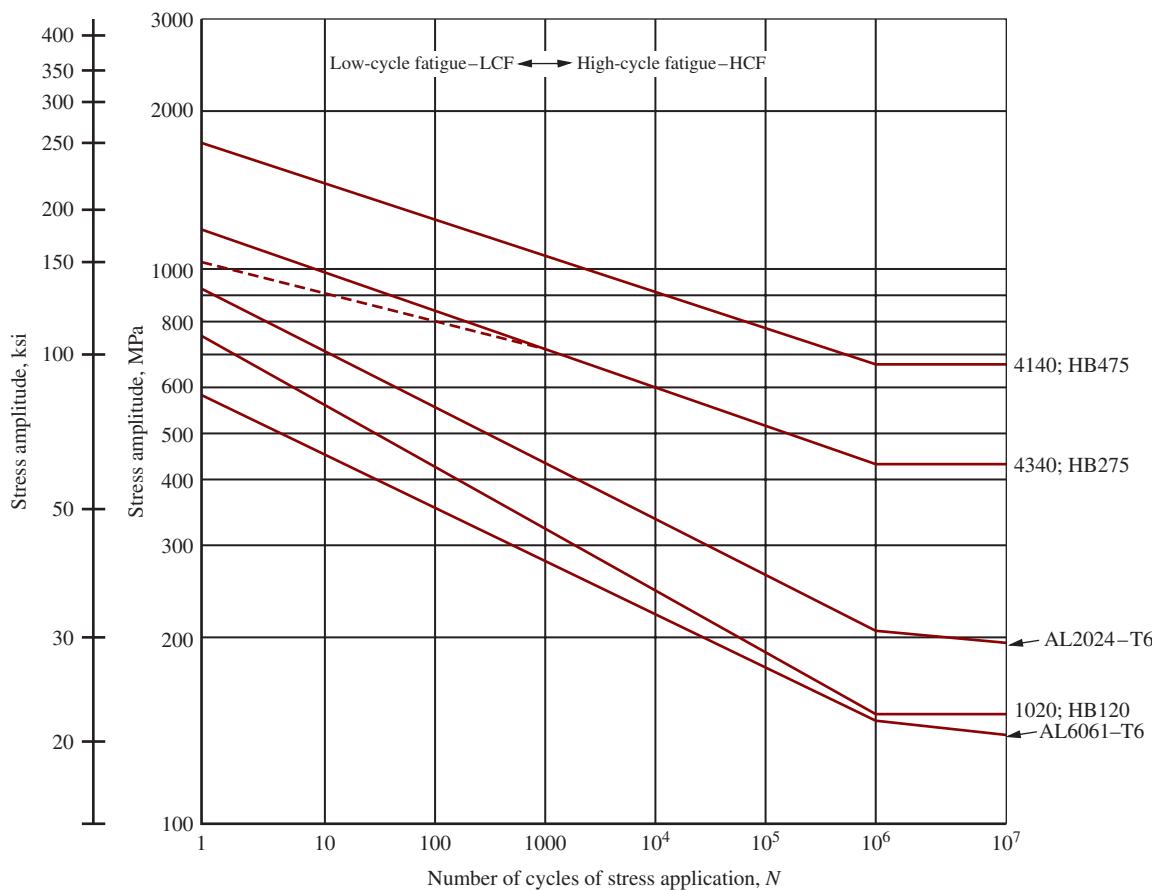


FIGURE 5–10 Representative endurance limits and endurance strengths at lower numbers of cycles

selected materials shown in Figure 5–10 for one plain carbon steel, two alloy steels, and two aluminum alloys, taken from Internet site 1.

The last column for *curve intercept*, s'_f , represents the stress value where the curve intersects the vertical axis. This value has no further use as discussed later for low-cycle fatigue.

Note the difference between the curves for the three steels and those for the two aluminum alloys. The steels exhibit a true fatigue limit resulting in the horizontal line to the right of 10^6 cycles, and should never fail by fatigue

at higher numbers of cycles of loading. The curves for aluminum continue to drop after 10^6 cycles, although at a much reduced slope. Therefore, data for endurance limits of aluminum, many other nonferrous metals, and some very-high-strength ferrous metals are quoted as a value of s_n at a stated number of cycles, typically 10^6 or 10^7 . For higher numbers of cycles, additional data should be sought.

The rotating bending test, as shown in Figure 5–3, has been used for many years to acquire endurance limit data and much of the reported data are based on this

TABLE 5–2 Materials and Fatigue Property Data for Curves Shown in Figure 5–10

| Material | Condition | Ultimate Strength, s_u | | Fatigue Limit, s_n | | Curve Slope, b | Curve Intercept, s'_f | |
|--------------------------------|-----------|--------------------------|-----|----------------------|-----|------------------|-------------------------|-----|
| | | MPa | ksi | MPa | ksi | | MPa | ksi |
| Carbon and alloy steels | | | | | | | | |
| 1020 | HB120 | 393 | 57 | 142 | 21 | -0.121 | 754 | 109 |
| 4340 | HB275 | 1048 | 152 | 430 | 62 | -0.075 | 1211 | 176 |
| 4140 | HB475 | 2033 | 295 | 663 | 96 | -0.070 | 1745 | 253 |
| Aluminum | | | | | | | | |
| 6061 | T6 | 310 | 45 | 138 | 20 | -0.102 | 565 | 82 |
| 2024 | T6 | 476 | 69 | 205 | 30 | -0.110 | 938 | 136 |

test. The specimen has a small diameter (typically 0.30 in or 7.62 mm) and is highly polished to eliminate any effect of surface texture. The shape and manner of loading produces pure bending with zero shearing stress and no stress concentrations in the central section. The magnitude of the load can be varied to produce a desired stress level and the shaft is rotated until it breaks. The total number of revolutions to failure is recorded. The test produces the classic repeated and reversed stress shown in Figure 5–2 having a mean stress of zero, stress amplitude of s_a , and stress ratio, $R = -1.0$.

In recent times, other methods have gained favor, particularly programmable servo-controlled axial tension testing devices. Test specimens can be loaded in many different patterns, simulating any of the conditions shown in Figures 5–2, 5–4, 5–5, and others. When the load is reversed and repeated, seemingly similar to the rotating bending test, the stress cycle shown in Figure 5–2 is produced, resulting in a mean stress of zero and a stress ratio, $R = -1.0$. However, an important difference in the behavior of the material occurs because the stress distribution created in the specimens is ideally uniform across the entire section. Note that for rotating bending, only the outermost part of the cylindrical specimen sees the maximum stress and the stress decreases linearly to zero at the center of the bar. Fatigue failures are more likely to initiate in regions of high tensile stress. Because in the axial load test all of the material is subjected to the highest stress, reported endurance limit data are typically lower than those for the rotating bending test by approximately 20%. This situation is discussed more in Section 5–6.

The servo-controlled testing devices are also used to evaluate the effect of loading that produces a fluctuating or pulsating cyclical stress pattern with a nonzero mean stress such as those shown in Figures 5–4 and 5–5. The *mean stress effect* is discussed later.

References 4 and 11 include many tables of data for fatigue strengths of materials along with additional detail on the nature of fatigue failures. Data for the endurance limit should be used wherever it is available, either from test results or from reliable published data. However, such data are not always available. Reference 5 suggests the following approximation for the basic rotating bending endurance limit for wrought steel having $s_u \leq 1500$ MPa (220 ksi).

$$\text{Endurance limit} = s_n = 0.50 \text{ (ultimate tensile strength)}$$

$$s_n = 0.50s_u \quad (5-20)$$

Low-cycle Fatigue

That part of Figure 5–10 to the left of the line for 1000 cycles is the low-cycle fatigue region and the discussion above does not apply. In fact, the parts of the lines from $N = 1000$ down to $N = 1$ are not used at all, except for providing a convenient way of drawing the sloped part of the curves—a straight line from the

curve intercept to the fatigue limit. Failure at a single cycle ($N = 1$), of course, occurs at the ultimate tensile strength for the material, s_u . Some designers add a supplementary line from $N = 1000$ to $N = 1$, as shown in dashed form for 4340 steel. However, it is recommended that the strain-life technique mentioned earlier be used in this region.

5–6 ESTIMATED ACTUAL ENDURANCE LIMIT, s'_n

If the actual material characteristics or operating conditions for a machine part are different from those for which the basic endurance limit was determined, the fatigue strength must be reduced from the reported value. Some of the factors that decrease the endurance limit are discussed in this section. The discussion relates only to the endurance limit for materials subjected to reversed and repeated bending stress. Cases involving endurance limit in shear are discussed separately in Section 5–11.

We begin by presenting a procedure for estimating the *actual endurance limit*, s'_n , for the material for the part being designed. It involves applying several factors to the basic endurance limit for the material. Additional elaboration on the factors follows.

PROCEDURE FOR ESTIMATING ACTUAL ENDURANCE LIMIT, s'_n

1. Specify the material for the part and determine its ultimate tensile strength, s_u , considering its condition, as it will be used in service.
2. Specify the manufacturing process used to produce the part with special attention to the condition of the surface in the most highly stressed area.
3. Use Figure 5–11 to estimate the modified endurance limit, s_n .
4. Apply a material factor, C_m , from the following list.

| | |
|----------------------|--------------|
| Wrought steel: | $C_m = 1.00$ |
| Cast steel: | $C_m = 0.80$ |
| Powdered steel: | $C_m = 0.76$ |
| Malleable cast iron: | $C_m = 0.80$ |
| Gray cast iron: | $C_m = 0.70$ |
| Ductile cast iron: | $C_m = 0.66$ |
5. Apply a type-of-stress factor: $C_{st} = 1.0$ for bending stress; $C_{st} = 0.80$ for axial tension.
6. Apply a reliability factor, C_R , from Table 5–3.
7. Apply a size factor, C_s , using Figure 5–12 and Table 5–4 as guides.
8. Compute the estimated actual endurance limit, s'_n , from

$$s'_n = s_n(C_m)(C_{st})(C_R)(C_s) \quad (5-21)$$

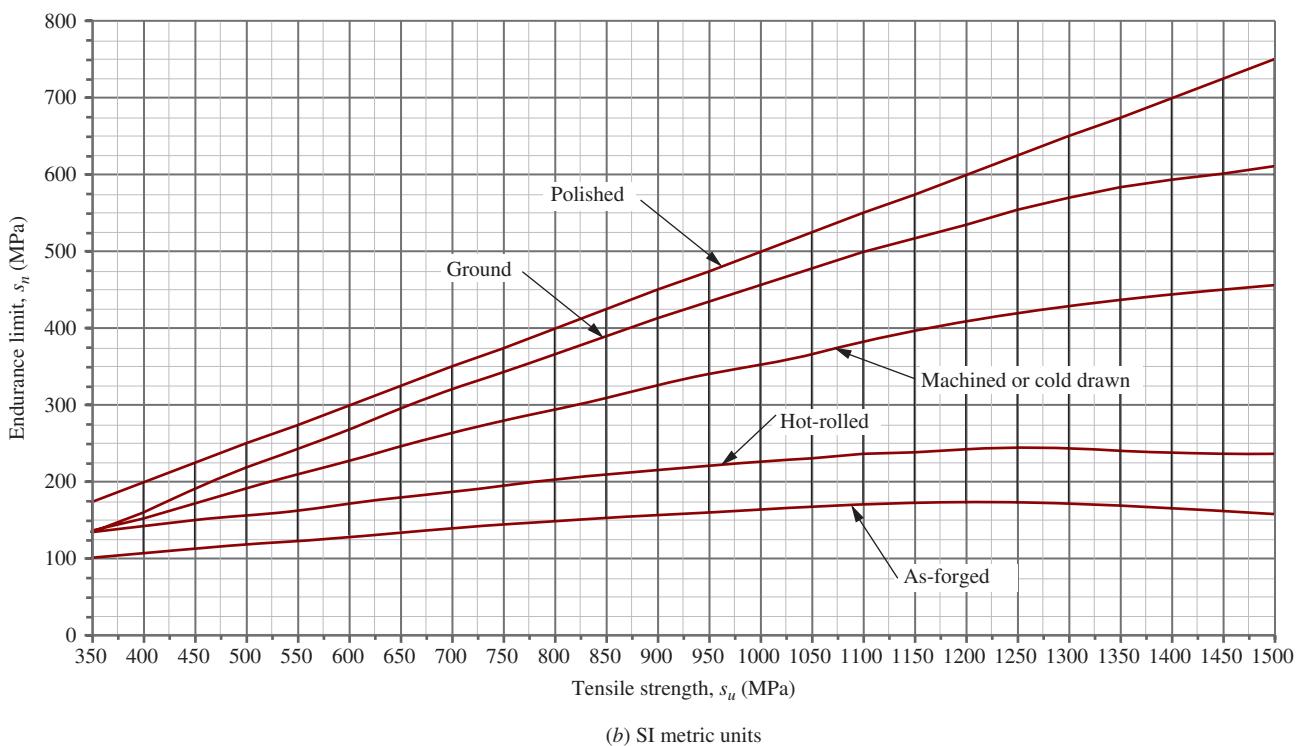
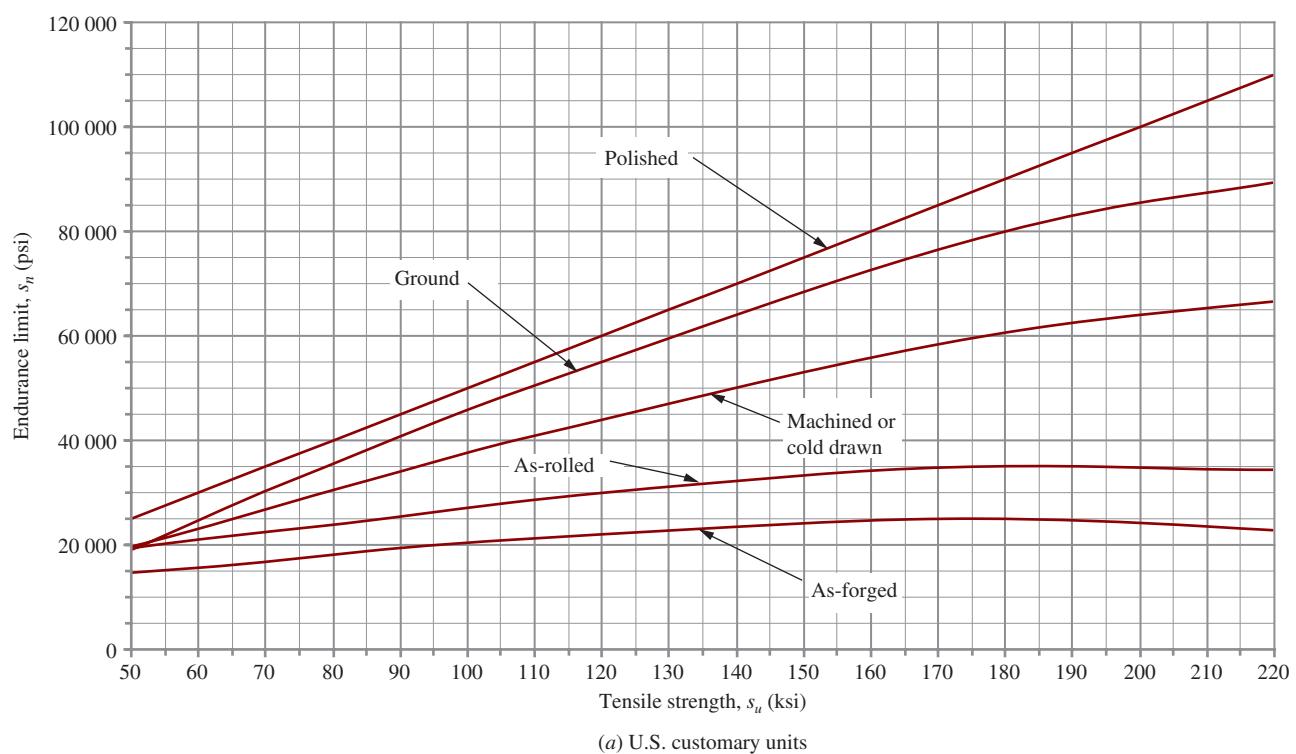


FIGURE 5-11 Endurance limit modified for surface condition versus tensile strength for wrought steel

These are the only factors that will be used consistently in this book. If data for other factors can be determined from additional research, they should be multiplied as additional terms in Equation (5–21). In most cases, we suggest accounting for other factors for which reasonable data cannot be found by adjusting the value of the design factor as discussed in Section 5–9.

Stress concentrations caused by sudden changes in geometry are, indeed, likely places for fatigue failures to occur. Care should be taken in the design and manufacture of cyclically loaded parts to keep stress concentration factors to a low value. We will apply stress concentration factors to the computed stress rather than to the endurance limit. See Section 5–11.

While 12 factors affecting endurance limit are discussed in the following section, note that the procedure just given includes only the first five. They are *surface finish, material factor, type-of-stress factor, reliability factor, and size factor*. The others are mentioned to alert you to the variety of conditions you should investigate as you complete a design. However, generalized data are difficult to acquire for all factors. Special testing or additional literature searching should be done when conditions exist for which no data are provided in this book. The end-of-chapter references contain a huge amount of such information (see References 2, 4, 7, 9, 11, and 13–16).

Surface Finish

Any deviation from a polished surface reduces endurance limit because the rougher surface provides sites where locally increased stresses or irregularities in the material structure promote the initiation of microscopic cracks that can progress to fatigue failures. Manufacturing processes, corrosion, and careless handling produce detrimental surface roughening.

Figure 5–11, adapted from data in Reference 8, shows estimates for the endurance limit s_n compared with the ultimate tensile strength of wrought steels for several practical surface conditions. The data first estimate the endurance limit for the polished specimen to be 0.50 times the ultimate strength and then apply a factor related to the surface condition. U.S. Customary units are used in Figure 5–11(a) while SI units are shown in Figure 5–11(b). Project vertically from the s_u axis to the appropriate curve and then horizontally to the endurance limit axis.

The data from Figure 5–11 should not be extrapolated for $s_u > 220 \text{ ksi}$ or 1500 MPa without specific testing as empirical data reported in Reference 4 are inconsistent at higher strength levels.

Note that the curve labeled *Polished* is actually the straight line, $s_n = 0.50s_u$, implying a factor of 1.0 because endurance limit test specimens are polished.

Ground surfaces are fairly smooth and reduce the endurance limit by a factor of approximately 0.90 for

$s_u < 160 \text{ ksi}$ (1100 MPa), decreasing to about 0.80 for $s_u = 220 \text{ ksi}$ (1500 MPa). Machining or cold drawing produce a somewhat rougher surface because of tooling marks resulting in a reduction factor in the range of 0.80 to 0.60 over the range of strengths shown. The outer part of a hot-rolled steel has a roughened oxidized scale that produces a reduction factor from 0.72 to 0.30 if a part is used in the as-rolled condition. For a forged part, not subsequently machined, the factor ranges from 0.57 to 0.20.

From these data, it should be obvious that you must give special attention to surface finish for critical surfaces exposed to fatigue loading in order to benefit from the steel's basic strength. Also, critical surfaces of fatigue-loaded parts must be protected from nicks, scratches, and corrosion because they drastically reduce fatigue strength.

Material Factors, C_m

Metal alloys having similar chemical composition can be wrought, cast, or made by powder metallurgy to produce the final form. Wrought materials are usually rolled or drawn, and they typically have higher endurance limit than cast materials. The grain structure of many cast materials or powder metals and the likelihood of internal flaws and inclusions tend to reduce their endurance limit. Reference 5 provides data from which the *material factors* listed in step 4 of the procedure outlined previously are taken.

Type-of-Stress Factor, C_{st}

As discussed in Section 5–6, most endurance limit data are obtained from tests using a rotating cylindrical bar subjected to repeated and reversed bending in which the outer part experiences the highest stress. Stress levels decrease linearly to zero at the center of the bar. Because fatigue cracks usually initiate in regions of high tensile stress, a relatively small proportion of the material experiences such stresses. Contrast this with the case of a bar subjected to direct axial tensile stress for which *all* of the material experiences the maximum stress. There is a higher statistical probability that local flaws anywhere in the bar may start fatigue cracks. The result is that the endurance limit of a material subjected to repeated and reversed axial stress is approximately 80% of that from repeated and reversed bending. In this book, we assume that basic endurance limit data are obtained from rotating bending tests and recommend the factors $C_{st} = 1.0$ for bending stress and $C_{st} = 0.80$ for axial loading.

Reliability Factor, C_R

The data for endurance limit for steel shown in Figure 5–11 represent average values derived from many tests of specimens having the appropriate ultimate strength and surface conditions. Naturally, there is variation among

TABLE 5-3 Approximate Reliability Factors, C_R

| Desired reliability | C_R |
|---------------------|-------|
| 0.50 | 1.0 |
| 0.90 | 0.90 |
| 0.99 | 0.81 |
| 0.999 | 0.75 |

the data points; that is, half are higher and half are lower than the reported values on the given curve. The curve, then, represents a reliability of 50%, indicating that half of the parts would fail. Obviously, it is advisable to design for a higher reliability, say, 90%, 99%, or 99.9%. A factor can be used to estimate a lower endurance limit that can be used for design to produce the higher reliability values. Ideally, a statistical analysis of actual data for the material to be used in the design should be obtained. By making certain assumptions about the form of the distribution of strength data, Reference 8 reports the values in Table 5-3 as approximate reliability factors, C_R .


Size Factor, C_s —Circular Sections in Rotating Bending

Recall that the basic endurance limit data were taken for a specimen with a circular cross section that has a diameter of 0.30 in (7.62 mm) and that it was subjected to repeated and reversed bending while rotating. Therefore, each part of the surface is subjected to the maximum tensile bending stress with each revolution. Furthermore, the most likely place for fatigue failure to initiate is in the zone of maximum tensile stress within a small distance of the outer surface.

Data from References 5 and 8 show that as the diameter of a rotating circular bending specimen increases, the endurance limit decreases because the stress gradient (change in stress as a function of radius) places a greater proportion of the material in the highly stressed region. Figure 5-12 and Table 5-4 show the size factor to be used in this book, adapted from Reference 8. These data can be used for either solid or hollow circular sections.

Size Factor, C_s —Other Conditions

We need different approaches to determining the size factor when a part with a circular section is subjected to repeated and reversed bending but it is *not rotating*, or if the part has a noncircular cross section. Here we show a procedure adapted from Reference 8 that focuses on the volume of the part that experiences 95% or more of the maximum stress. It is in this volume that fatigue failure is most likely to be initiated. Furthermore, in order to relate the physical size of such sections to the

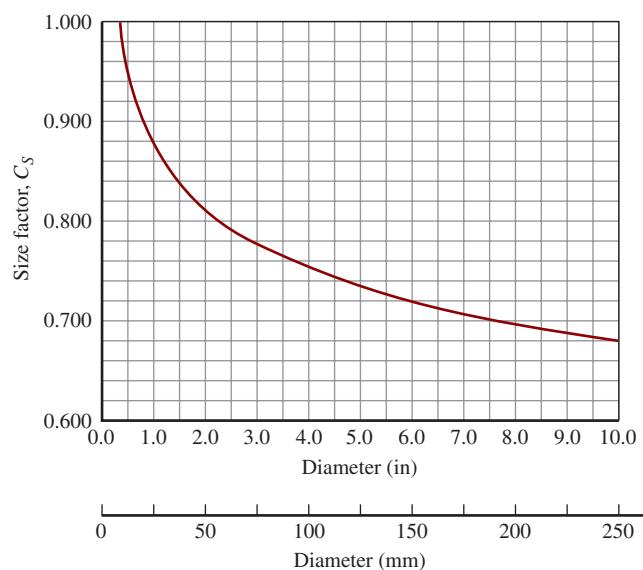**FIGURE 5-12 Size factor, C_s**

size factor data in Figure 5-12, we develop an equivalent diameter, D_e .

When the parts in question have a uniform geometry over the length of interest, the volume is the product of the length and the cross-sectional area. We can compare different shapes by considering a unit length for each and looking only at the areas. As a base, let's begin by determining an expression for that part of a circular section subjected to 95% or more of the maximum rotating bending stress, calling this area, A_{95} . Because the stress is directly proportional to the radius, we need the area of the thin ring between the outside surface with the full diameter D and a circle whose diameter is $0.95D$, as shown in Figure 5-13(a). Then,

$$A_{95} = (\pi/4)[D^2 - (0.95D)^2] = 0.0766D^2 \quad (5-22)$$

You should demonstrate that this same equation applies to a hollow circular section as shown in Figure 5-13(b). This verifies that the data for size factor shown in Figure 5-12

TABLE 5-4 Size Factors

| U.S. customary units | |
|----------------------|-----------------------------|
| Size range | For D in inches |
| $D \leq 0.30$ | $C_s = 1.0$ |
| $0.30 < D \leq 2.0$ | $C_s = (D/0.3)^{-0.11}$ |
| $2.0 < D < 10.0$ | $C_s = 0.859 - 0.021\ 25D$ |
| SI units | |
| Size range | For D in mm |
| $D \leq 7.62$ | $C_s = 1.0$ |
| $7.62 < D \leq 50$ | $C_s = (D/7.62)^{-0.11}$ |
| $50 < D < 250$ | $C_s = 0.859 - 0.000\ 837D$ |

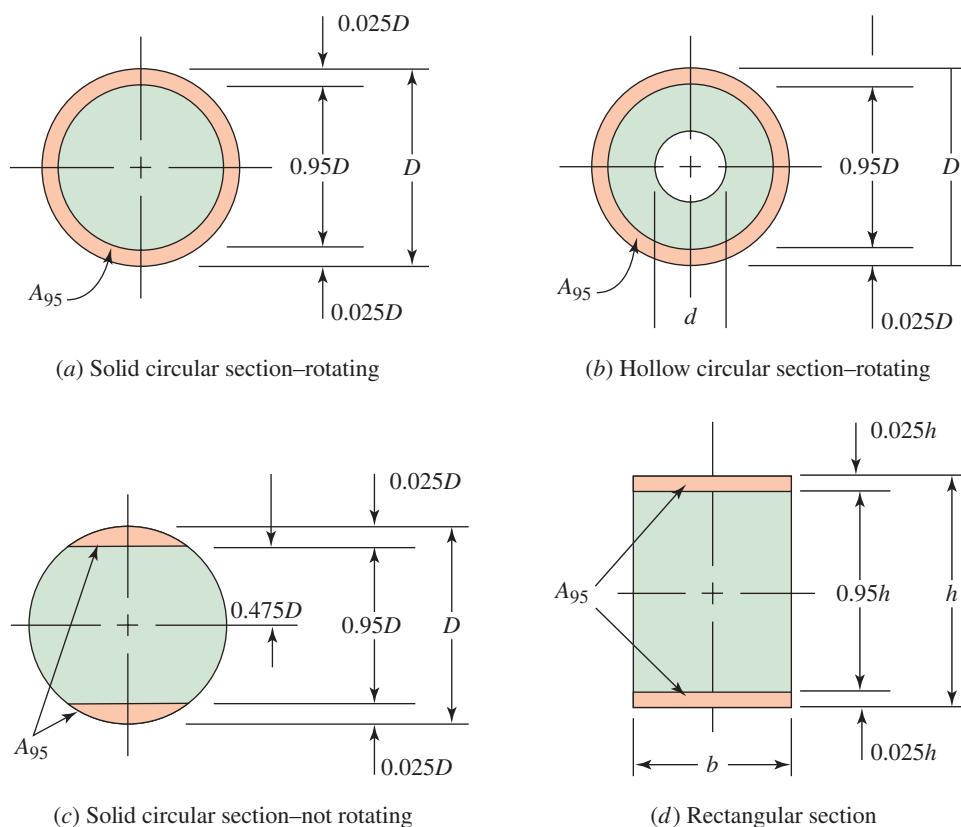


FIGURE 5–13 Geometry of sections for computing A_{95} area

and Table 5–4 apply directly to either the solid or hollow circular sections when they experience rotating bending.

Nonrotating Circular Section in Repeated and Reversed Flexure. Now consider a solid circular section that does not rotate but that is flexed back and forth in repeated and reversed bending. Only the top and bottom segments beyond a radius of $0.475D$ experience 95% or higher of the maximum bending stress, as shown in Figure 5–13(c). By using properties of a segment of a circle, it can be shown that

$$A_{95} = 0.0105D^2 \quad (5-23)$$

Now we can determine the *equivalent diameter*, D_e , for this area by equating Equations (5–22) and (5–23) while designating the diameter in Equation (5–21), as D_e and then solving for D_e .

$$\begin{aligned} 0.0766D_e^2 &= 0.0105D^2 \\ D_e &= 0.370D \end{aligned} \quad (5-24)$$

This same equation applies to a hollow circular section. The diameter D_e can be used in Figure 5–12 or in Table 5–4 to find the size factor.

Rectangular Section in Repeated and Reversed Flexure. The A_{95} area is shown in Figure 5–13(d) as the two strips having a thickness of $0.025h$ at the top and the bottom of the section. Therefore,

$$A_{95} = 0.05hb$$

Equating this to A_{95} for a circular section gives,

$$\begin{aligned} 0.0766D_e^2 &= 0.05hb \\ D_e &= 0.808\sqrt{hb} \end{aligned} \quad (5-25)$$

This diameter can be used in Figure 5–12 or in Table 5–4 to find the size factor.

Other shapes can be analyzed in a similar manner.

Any Shape in Repeated Direct Axial Tensile Stress. This special case is based on the concept that the greatest likelihood of initiating a fatigue failure is in zones of highest tensile stress. For bending and torsion, the highest tensile stress occurs in the outermost parts of the cross section and that is the basis for the data in Figure 5–12. However, for axial tensile stress, all parts of the cross section experience the same level of tensile stress and, therefore, all parts are equally susceptible to initiation of a fatigue crack.

For this case, use $C_s = 1.0$ regardless of the size of the member.

Other Factors

The following factors are not included quantitatively in problem solutions in this book because of the difficulty of finding generalized data. However, you should

consider each one as you engage in future designs and seek additional data as appropriate.

Flaws. Internal flaws of the material, especially likely in cast parts, are places in which fatigue cracks initiate. Critical parts can be inspected by x-ray techniques for internal flaws. If they are not inspected, a higher-than-average design factor should be specified for cast parts, and a lower endurance limit should be used.

Temperature. Most materials have a lower endurance limit at high temperatures. The reported values are typically for room temperatures. Operation above 500°F (260°C) will reduce the endurance limit of most steels. See Reference 8.

Nonuniform Material Properties. Many materials have different strength properties in different directions because of the manner in which the material was processed. Rolled sheet or bar products are typically stronger in the direction of rolling than they are in the transverse direction. Fatigue tests are likely to have been run on test bars oriented in the stronger direction. Stressing of such materials in the transverse direction may result in lower endurance limit.

Nonuniform properties are also likely to exist in the vicinity of welds because of incomplete weld penetration, slag inclusions, and variations in the geometry of the part at the weld. Also, welding of heat-treated materials may alter the strength of the material because of local annealing near the weld. Some welding processes may result in the production of residual tensile stresses that decrease the effective endurance limit of the material. Annealing or normalizing after welding is often used to relieve these stresses, but the effect of such treatments on the strength of the base material must be considered.

Residual Stresses. Fatigue failures typically initiate at locations of relatively high tensile stress. Any manufacturing process that tends to produce residual tensile stress will decrease the endurance limit of the component. Welding has already been mentioned as a process that may produce residual tensile stress. Grinding and machining, especially with high material removal rates, also cause undesirable residual tensile stresses. Critical areas of cyclically loaded components should be machined or ground in a gentle fashion.

Processes that produce residual *compressive* stresses can prove to be beneficial. Shot blasting and peening are two such methods. *Shot blasting* is performed by directing a high-velocity stream of hardened balls or pellets at the surface to be treated. *Peening* uses a series of hammer blows on the surface. Crankshafts, springs, gears, and other cyclically loaded machine parts can benefit from these methods.

Corrosion and Environmental Factors. Endurance limit data are typically measured with the specimen in air. Operating conditions that expose a component to

water, salt solutions, or other corrosive environments can significantly reduce the effective endurance limit. Corrosion may cause harmful local surface roughness and may also alter the internal grain structure and chemistry of the material. Steels exposed to hydrogen are especially affected adversely.

Nitriding. Nitriding is a surface-hardening process for alloy steels in which the material is heated to 950°F (514°C) in a nitrogen atmosphere, typically ammonia gas, followed by slow cooling. Improvement of endurance limit of 50% or more can be achieved with nitriding.

Effect of Stress Ratio on Endurance Limit. Figure 5–14 shows the general variation of endurance-strength data for a given material when the stress ratio R varies from -1.0 to $+1.0$, covering the range of cases including the following:

- Repeated, reversed stress (Figure 5–2); $R = -1.0$
- Partially reversed fluctuating stress with a tensile mean stress [Figure 5–4(b)]; $-1.0 < R < 0$
- Repeated, one-direction tensile stress (Figure 5–5); $R = 0$
- Fluctuating tensile stress [Figure 5–4(a)]; $0 < R < 1.0$
- Static stress (Figure 5–1); $R = 1$

Note that Figure 5–14 is only an example, and it should not be used to determine actual data points. If such data are desired for a particular material, specific data for that material must be found either experimentally or in published literature.

The most damaging kind of stress among those listed is the repeated, reversed stress with $R = -1$. (See Reference 4.) Recall that the rotating shaft in bending as shown in Figure 5–2 is an example of a load-carrying member subjected to a stress ratio, $R = -1$.

Fluctuating stresses with a compressive mean stress, as shown in Figures 5–4(c) and (d), do not significantly affect the endurance limit of the material because fatigue failures tend to originate in the regions of tensile stress.

Note that the curves of Figure 5–14 show estimates of the endurance limit, s_n , as a function of the ultimate tensile strength for steel. These data apply to ideal polished specimens and do not include any of the other factors discussed in this section. For example, the curve for $R = -1.0$ (reversed bending) shows that the endurance limit for steel is approximately 0.5 times the ultimate strength ($0.50 \times s_u$) for large numbers of cycles of loading (approximately 10^5 or higher). This is a good general estimate for steels. The chart also shows that types of loads producing R greater than -1.0 but less than 1.0 have less of an effect on the endurance limit. This illustrates that using data from the reversed bending test is the most conservative.

We will not use Figure 5–14 directly for problems in this book because our procedure for

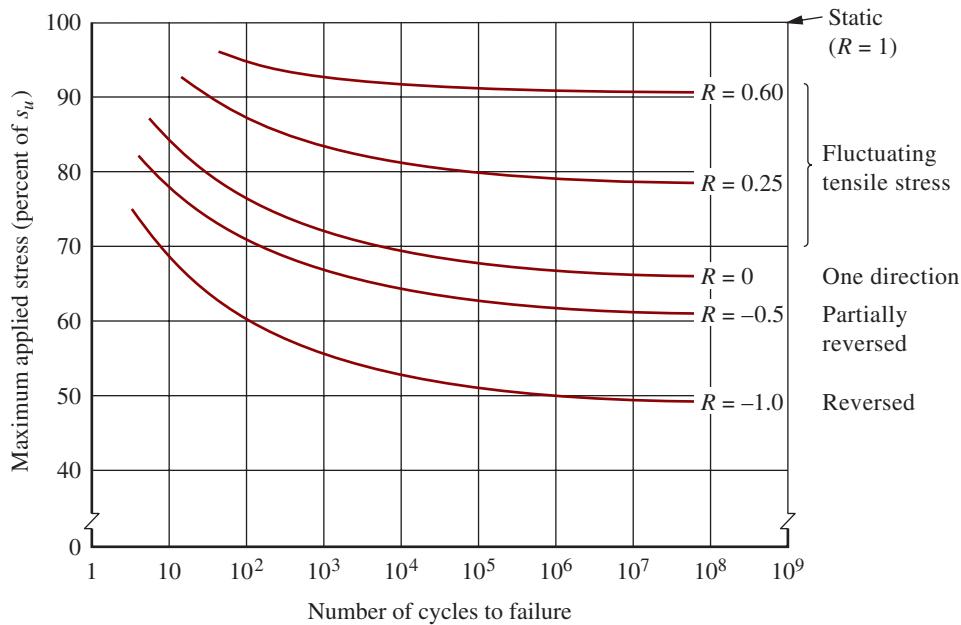


FIGURE 5–14 Effect of stress ratio, R , on endurance limit of a material

estimating the actual endurance limit starts with the use of Figure 5–11, which presents data from reversed bending tests. Therefore, the effect of stress ratio is already included. Section 5–7 includes methods of analysis for loading cases in which the fluctuating stress produces a stress ratio different from $R = -1.0$.

Example Problems for Estimating Actual Endurance Limit

This section shows two examples that demonstrate the application of the *Procedure for Estimating Actual Endurance Limit*, s'_n .

Example Problem 5–2

Estimate the actual endurance limit of SAE 1050 cold-drawn steel when used in a circular shaft subjected to rotating bending only. The shaft will be machined to a diameter of approximately 1.75 in.

Solution

Objective Compute the estimated actual endurance limit of the shaft material.

Given SAE 1050 cold-drawn steel, machined.

Size of section: $D = 1.75$ in.

Type of stress: Reversed, repeated bending.

Analysis Use the Procedure for Estimating Actual Endurance Limit, s'_n .

Step 1: The ultimate tensile strength: $s_u = 100$ ksi from Appendix 3.

Step 2: Diameter is machined.

Step 3: From Figure 5–11, $s_n = 38$ ksi.

Step 4: Material factor for wrought steel: $C_m = 1.0$.

Step 5: Type-of-stress factor for reversed bending: $C_{st} = 1.0$.

Step 6: Specify a desired reliability of 0.99. Then $C_R = 0.81$ (Design decision).

Step 7: Size factor for circular section with $D = 1.75$ in.

From Figure 5–12, $C_s = 0.83$.

Step 8: Use Equation (5–21) to compute the estimated actual endurance limit.

$$s'_n = s_n(C_m)(C_{st})(C_R)(C_s) = 38 \text{ ksi}(1.0)(1.0)(0.81)(0.83) = 25.5 \text{ ksi}$$

Comments This is the level of stress that would be expected to produce fatigue failure in a rotating shaft due to the action of reversed bending. It accounts for the basic endurance limit of the wrought SAE 1050 cold-drawn material, the effect of the machined surface, the size of the section, and the desired reliability.

Example Problem 5–3 Estimate the actual endurance limit of cast steel having an ultimate strength of 120 ksi when used in a bar subjected to a reversed, repeated, bending load. The bar will be machined to a rectangular cross section, 1.50 in wide \times 2.00 in high.

Solution

Objective Compute the estimated actual endurance limit of the bar material.

Given Cast steel, machined: $s_u = 120$ ksi.

Size of section: $b = 1.50$ in., $h = 2.00$ in rectangular

Type of stress: Repeated, reversed bending.

Analysis Use the Procedure for Estimating Actual Endurance Limit, s'_n .

Step 1: The ultimate tensile strength is given to be $s_u = 120$ ksi.

Step 2: Surfaces are machined.

Step 3: From Figure 5–11, $s_n = 44$ ksi.

Step 4: Material factor for cast steel: $C_m = 0.80$.

Step 5: Type-of-stress factor for bending: $C_{st} = 1.00$.

Step 6: Specify a desired reliability of 0.99. Then $C_R = 0.81$ (Design decision).

Step 7: Size factor for rectangular section: First use Equation (5–25) to determine the equivalent diameter,

$$D_e = 0.808\sqrt{hb} = 0.808\sqrt{(2.00 \text{ in})(1.50 \text{ in})} = 1.40 \text{ in}$$

Then from Figure 5–12, $C_s = 0.85$.

Step 8: Use Equation (5–21), to compute the estimated actual endurance limit.

$$s'_n = s_n(C_m)(C_{st})(C_R)(C_s) = 44 \text{ ksi}(0.80)(1.00)(0.81)(0.85) = 24.2 \text{ ksi}$$

5-7 DESIGN FOR CYCLIC LOADING

Ductile Materials under Cyclic Loading

Similar to the static loading failure theories, prediction of fatigue failure involves comparison of the stresses to the strengths. The stresses required are the mean stress and alternating stress introduced in Section 5–2. The strengths considered are endurance limit and either yield strength or ultimate strength of the material. The concept of fatigue failure theories can be illustrated by introducing the *Yield Line* in the σ_m - σ_a coordinate system as shown in Figure 5–15 where the abscissa is σ_m and

the ordinate is σ_a . The yield strength of the material is identified on both axes. By connecting these two points, the Yield Line is defined and it is represented by the following equation:

$$\frac{\sigma_a}{s_y} + \frac{\sigma_m}{s_y} = 1 \quad (5-26)$$

A failure theory can be postulated that, when plotting the mean and alternating stresses of a stress element, the element is safe if the stress state is below the Yield Line in the triangle region. Examining the stress state at $(s_y, 0)$ where the mean stress is at the yield strength and the alternating stress is zero (static loading), the postulated theory seems valid as in static loading the element is considered safe before the stress reaches the yield strength. However, for the stress state at $(0, s_y)$, the element is subjected to repeated and reversed cyclic loading with alternating stress reaching the yield strength. As it is clear that failure would have occurred when the alternating stress exceeds the endurance limit of the material, modification of yield line is needed to predict fatigue failure. Three empirical fatigue failure criteria are presented below and they are shown in Figure 5–15.

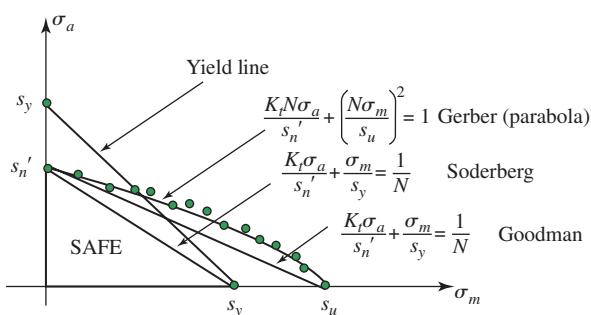


FIGURE 5-15 Fatigue failure theories for cyclic loading

Soderberg Criterion. The Soderberg criterion gives a conservative fatigue failure prediction. As shown in

Figure 5–15, the Soderberg line connects s_y on the σ_m axis to s'_n on the σ_a axis. Its equation is

$$\frac{K_t \sigma_a}{s'_n} + \frac{\sigma_m}{s_y} = \frac{1}{N} \quad (5-27)$$

where K_t is the stress concentration factor and N is the factor of safety. For $N = 1$, the safe zone is the triangular area below the Soderberg line. It is recommended that any stress concentration factor be applied to the alternating stress component. However, as it is not necessary to apply a stress concentration factor to the mean stress because the material is ductile and experimental evidence shows that the presence of a stress concentration does not affect the contribution of mean stress to fatigue failure.

Goodman Criterion. The Goodman criterion is perhaps the most-often used analysis for machine components subjected to cyclic loads. The criterion can be expressed by connecting the ultimate strength s_u on the σ_m axis to s'_n on the σ_a axis. Its equation is

$$\frac{K_t \sigma_a}{s'_n} + \frac{\sigma_m}{s_u} = \frac{1}{N} \quad (5-28)$$

For failure prediction, combinations of mean and alternating stresses that lie under the Goodman line are considered to be safe. It can be observed that the main difference between the Goodman and the Soderberg criterion is the stress states near the lower right-hand side of the safe zone where the alternating stress is low and the mean stress is beyond the yield strength of the material. Therefore, the possibility of yielding must be considered as described next.

Checking for Early Cycle Yielding. The Goodman line appears to allow a pure mean stress above the yield strength of the material. While it is possible for ductile material to acquire additional strength to prevent further yielding (due to work hardening), early cycle yielding is not commonly acceptable. As such, an evaluation for early cycle yielding is needed. It is desirable to limit any possible stress to below the yield strength, and any stress concentration should be considered for both the alternating and the mean stress to ensure that even infrequently applied high stresses will not cause damaging strains that could precipitate fatigue cracks. Applying a design factor to the yield line results in a design equation to protect against yield as,

$$\frac{K_t \sigma_a}{s_y} + \frac{K_t \sigma_m}{s_y} = \frac{1}{N} \quad (5-29)$$

Gerber Criterion. The Gerber Criterion is a parabolic function that starts at s_u on the σ_m axis and ends at s'_n on the σ_a axis:

$$\frac{K_t N \sigma_a}{s'_n} + \left(\frac{N \sigma_m}{s_u} \right)^2 = 1 \quad (5-30)$$

As can be observed from Figure 5–15, the Gerber line passes generally through the array of experimental data points (examples of experimental results shown as circles in the figure) for failures under specific combinations of mean and alternating stresses. The starting and end points of the Gerber criterion is the same as that of the Goodman criterion, and it can be seen that the Goodman line is slightly conservative. While the Gerber criterion provides more accurate failure predictions, the parabolic function is somewhat complicated to implement. See References 5 and 8 for more details on the Gerber Criterion.

Smith Diagram for Showing the Effect of Mean Stress on Fatigue

Some stress analysts, for example many in Germany, use the *Smith Diagram* to map a region of acceptable combinations of mean and alternating stresses. Additional materials property data are required to apply this method as compared with the Goodman approach defined earlier and used in this book. Figure 5–16 shows one approach to drawing the Smith Diagram for bending stress. Data required are as follows:

1. Fatigue limit strength for completely reversed and repeated bending stress ($R = -1$), called s_n in this book. Some call this loading pattern *pure oscillation*, $s_{n(-1)}$, as shown in Figure 5–2. The mean stress is zero [$\sigma_m = 0$] and the stress oscillates between $+\sigma_{\max}$ and $-\sigma_{\min}$ having the same absolute value. The alternating stress, $\sigma_a = \sigma_{\max}$.
2. Fatigue limit strength for repeated, one-direction bending stress ($R = 0$), sometimes called *pure pulsating stress*, $s_{n(0)}$, and shown in Figure 5–5. The stress oscillates between the value of σ_{\max} and $\sigma_{\min} = 0$. The alternating stress and the mean stress are equal: $\sigma_a = \sigma_m = \sigma_{\max}/2$.
3. Ultimate strength, s_u .

The steps used to draw the diagram in Figure 5–16 are as follows:

1. Draw the vertical axis for alternating stress, σ_a , and the horizontal axis for mean stress, σ_m .
2. Draw a dashed line at 45° from the origin. This represents the line of increasing mean stress.
3. On the vertical axis, plot two points: Point I at $+\sigma_{\max} = s_{n(-1)}$ and Point II at $-\sigma_{\min} = -s_{n(-1)}$ for the pure oscillation case.
4. Plot data for the pure pulsating case: Point III at $s_{n(0)/2}, 0$ and Point IV at $s_{n(0)/2}, s_{n(0)}$.
5. Draw a line from Point I through Point IV toward its intersection with the 45° line.
6. Draw another line from Point II through Point III toward its intersection with the 45° line.

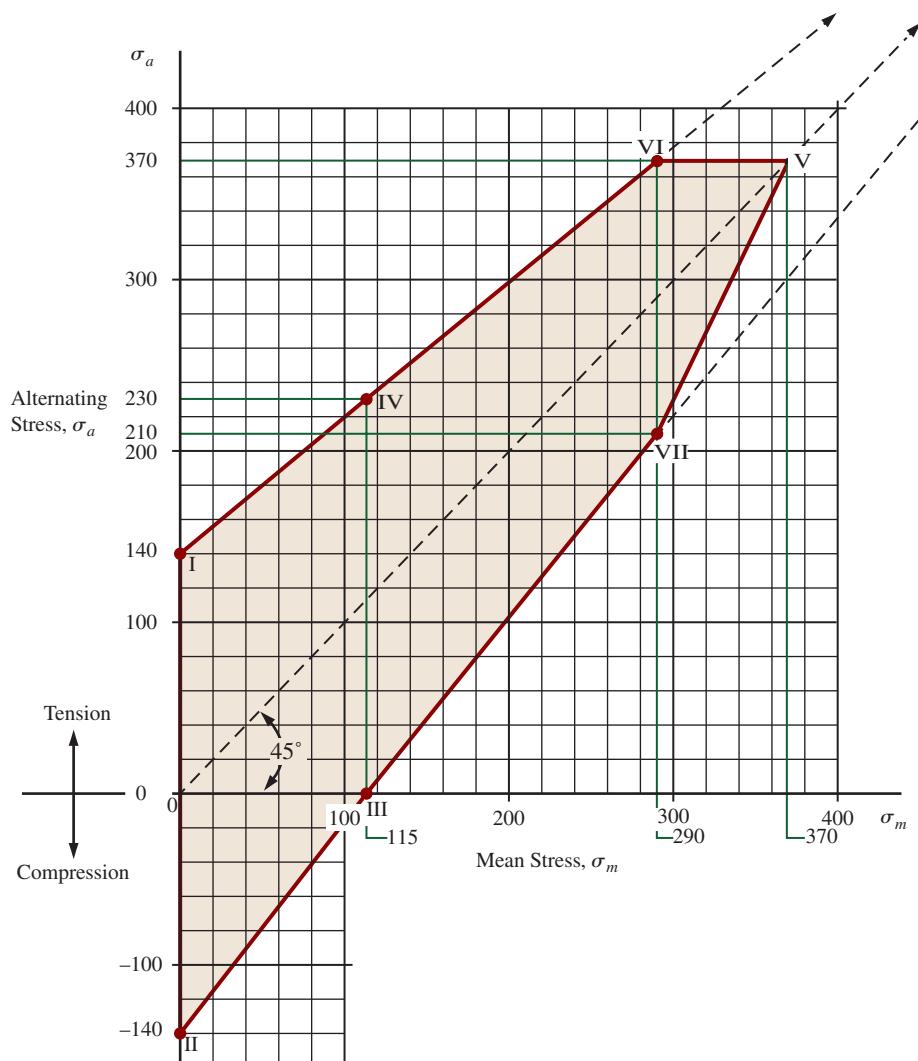


FIGURE 5–16 Example of a Smith diagram for fatigue due to fluctuating bending stress

7. Draw a horizontal line from the value of the ultimate strength on the vertical axis to its intersection with the 45° line, calling that intersection Point V.
8. Call the intersection of the line from Step 7 and the line from Step 5 Point VI.
9. Drop a vertical line from Point VI to its intersection with the line from Step 6, calling that intersection Point VII.
10. Draw a line from Point V to Point VII.
11. The resulting polygon from Points I \rightarrow VI \rightarrow V \rightarrow VII \rightarrow II \rightarrow I encloses an area of theoretically safe combinations of mean and alternating stresses.
12. The upper part of the polygon from Points I \rightarrow VI \rightarrow V is a plot of the maximum stress that can be applied to a component.
13. The lower part of the polygon from Points V \rightarrow VII \rightarrow II is a plot of the minimum stress

corresponding to any maximum stress directly vertically above.

14. For any vertical line drawn through the upper and lower parts of the polygon:
 - The top intersection is $+\sigma_{\max}$.
 - The intersection with the dashed line is σ_m .
 - The lower intersection is σ_{\min} .
15. Actual allowable applied stresses, of course, would be lower than these points according to the desired design factor, N .

The example data used for drawing Figure 5–16 are as follows:

$$\begin{aligned} \text{Ultimate strength} &= s_u = 370 \text{ MPa} \\ \text{Fatigue strength for pure oscillation, } s_{n(-1)} &= 140 \text{ MPa} \\ \text{Fatigue strength for pure pulsation, } s_{n(0)} &= 230 \text{ MPa and } s_{n(0)}/2 = 115 \text{ MPa} \end{aligned}$$

Point coordinates:

| | Horizontal coordinate | Vertical coordinate | |
|-----|--------------------------------|-----------------------------|----------|
| I | 0 | 140 MPa | [Step 3] |
| II | 0 | -140 MPa | [Step 3] |
| III | 115 MPa | 0 | [Step 4] |
| IV | 115 MPa | 230 MPa | [Step 4] |
| V | 370 MPa | 370 MPa | [Step 7] |
| VI | 290 MPa (read from diagram) | 370 MPa | [Step 8] |
| VII | 290 MPa | 210 MPa (read from diagram) | [Step 9] |

This method is an approximation of data from fatigue tests from many combinations of mean and alternating stresses. A modification of this method is to limit any applied stress to the yield strength of the material instead of the ultimate strength. Other charts of similar nature are often drawn for torsional shear stresses and for alternating direct tension-compression.

Brittle Materials under Cyclic Loading

In the past, other than cast iron in compression, brittle materials were not commonly used for cyclic loading. Recent work has increased the acceptance of composite and ceramic materials for fatigue applications. For brittle materials, stress is significantly increased at locations of stress concentration and crack tips. It is recommended to apply a stress concentration factor to both mean and alternating stresses, similar to the approach of checking early cycle yielding, Equation (5–29), when using the fatigue failure theory.

Summary of Cyclic Loading Failure Theories

In the three cyclic loading failure theories introduced, the mean and alternating stresses are presented as σ_m and σ_a , indicating one-dimensional loading. The failure criteria can be extended to multi-dimensional loading by replacing σ_m and σ_a with σ'_m and σ'_a :

Soderberg criterion:

$$\frac{K_t \sigma'_a}{s'_n} + \frac{\sigma'_m}{s_y} = \frac{1}{N} \quad (5-31)$$

Goodman criterion:

$$\frac{K_t \sigma'_a}{s'_n} + \frac{\sigma'_m}{s_u} = \frac{1}{N} \quad (5-32)$$

Gerber criterion:

$$\frac{K_t N \sigma'_a}{s'_n} + \left(\frac{N \sigma'_m}{s_u} \right)^2 = 1 \quad (5-33)$$

TABLE 5–5 Summary of Fatigue Failure Theories

| Fatigue Failure Criteria | Equations |
|--------------------------|----------------|
| Soderberg | (5–31) |
| Goodman | (5–32), (5–34) |
| Gerber | (5–33), (5–34) |
| Smith Diagram | Graphic method |

Check for early cycle yielding:

$$\frac{K_t \sigma'_a}{s_y} + \frac{K_t \sigma'_m}{s_y} = \frac{1}{N} \quad (5-34)$$

where σ'_m is the mean stress and σ'_a is the alternating stress based on Tresca (MSST) or von Mises (DET) criterion. The calculation of σ'_m and σ'_a is accomplished by drawing two Mohr's circles, one for the mean stresses and one for the alternating stresses. From these circles, determine the three principal stresses. Then compute the "effective stresses" based on MSST or DET for both the mean and the alternating components. Since one-dimensional loading is a special case of three-dimensional loading, Equations (5–27) to (5–30) can be replaced by Equations (5–31) to (5–34). A summary of the presented fatigue failure theories is given in Table 5–5.

5–8 RECOMMENDED DESIGN AND PROCESSING FOR FATIGUE LOADING

Throughout this chapter, we have described factors that influence the fatigue life of components subjected to cyclical loads. This section presents some summary recommendations for designers when specifying size, shape, and processing techniques for a given component. See Reference 15 for additional methods and supporting data.

1. Where critical stress levels are encountered, prepare the surface with low roughness and specify a processing method that will produce well rounded valleys between peaks. Examples are to use a turning tool for cylindrical parts with a broad tip radius or a ball end mill with a large diameter for milling operations.
2. Design parts having inherent abrupt changes in geometry with low values of stress concentrations. An important example is to provide large radii at sites of change in diameter or width of a component. Consult Section 3–22 and Appendix 18.
3. Design the part so that the predominant direction of processing is parallel to the major axis of the part.
4. Increase the fatigue strength of critical areas of a component by using processing methods that leave

- compressive residual stresses. Examples include shot peening, cold working by rolling or burnishing.
5. Avoid processing methods that produce tensile residual stresses that decrease the fatigue strength of the material. Examples are (a) aggressive grinding operations that rapidly remove large amounts of material, (b) some heat-treating operations that use rapid quenching from high temperatures, and (c) some welding processes near the heat-affected zone. If such processes are used, supplementary processing is recommended to relieve the tensile residual stress.
 6. If processing leaves surface irregularities such as burning, cracks, decarburized materials, or rough welds, take additional steps to remove those irregularities by light finishing cuts, electropolishing, or lapping.
 7. Control the entire path of manufacturing processes to ensure that (a) design specifications are met; (b) material properties are within the values used in design analyses; and (c) parts are handled carefully to prohibit accidental surface damage from nicks, scratches, or corrosion.

5-9 DESIGN FACTORS

The term *design factor*, N , is a measure of the relative safety of a load-carrying component. In most cases, the strength of the material from which the component is to be made is divided by the design factor to determine a *design stress*, σ_d , sometimes called the *allowable stress*. Then the actual stress to which the component is subjected should be less than the design stress. For some kinds of loading, it is more convenient to set up a relationship from which the design factor, N , can be computed from the actual applied stresses and the strength of the material. Still in other cases, particularly for the case of the buckling of columns, as discussed in Chapter 6, the design factor is applied to the *load* on the column rather than the strength of the material.

Sections 5-4 and 5-7 present methods for computing the design stress or design factor for several different kinds of loading and materials.

The designer must determine what a reasonable value for the design factor should be in any given situation. Often the value of the design factor or the design stress is governed by codes established by standards-setting organizations such as the American Society of Mechanical Engineers, the American Gear Manufacturers Association, the U.S. Department of Defense, the Aluminum Association, or the American Institute of Steel Construction. For structures, local or state building codes often prescribe design factors or design stresses. Some companies have adopted their own policies specifying design factors based on past experience with similar conditions.

In the absence of codes or standards, the designer must use judgment to specify the desired design factor.

Part of the design philosophy, discussed in Section 5-10, identifies issues such as the nature of the application, environment, nature of the loads on the component to be designed, stress analysis, material properties, and the degree of confidence in data used in the design processes. All of these considerations affect the decision about what value for the design factor is appropriate. This book will use the following guidelines.

Ductile Materials

1. $N = 1.25$ to 2.0 . Design of structures under static loads for which there is a high level of confidence in all design data.
2. $N = 2.0$ to 2.5 . Design of machine elements under dynamic loading with average confidence in all design data. (Typically used in problem solutions in this book.)
3. $N = 2.5$ to 4.0 . Design of static structures or machine elements under dynamic loading with uncertainty about loads, material properties, stress analysis, or the environment.
4. $N = 4.0$ or higher. Design of static structures or machine elements under dynamic loading with uncertainty about some combination of loads, material properties, stress analysis, or the environment. The desire to provide extra safety to critical components may also justify these values.

Brittle Materials

5. $N = 3.0$ to 4.0 . Design of structures under static loads for which there is a high level of confidence in all design data.
6. $N = 4.0$ to 8.0 . Design of static structures or machine elements under dynamic loading with uncertainty about loads, material properties, stress analysis, or the environment.

Sections 5-11 and 5-12 provide guidance on the introduction of the design factor into the design process with particular attention to the selection of the strength basis for the design and the computation of the design stress. In general, design for static loading involves applying the design factor to the yield strength or ultimate strength of the material. Dynamic loading requires the application of the design factor to the endurance limit using the methods described in Section 5-6 to estimate the actual endurance limit for the conditions under which the component is operating.

5-10 DESIGN PHILOSOPHY

It is the designer's responsibility to ensure that a machine part is safe for operation under reasonably foreseeable conditions. You should evaluate carefully the application in which the component is to be used, the environment in which it will operate, the nature of applied loads, the

types of stresses to which the component will be exposed, the type of material to be used, and the degree of confidence you have in your knowledge about the application. Some general considerations are as follows:

- 1. Application.** Is the component to be produced in large or small quantities? What manufacturing techniques will be used to make the component? What are the consequences of failure in terms of danger to people and economic cost? How cost-sensitive is the design? Are small physical size or low weight important? With what other parts or devices will the component interface? For what life is the component being designed? Will the component be inspected and serviced periodically? How much time and expense for the design effort can be justified?
- 2. Environment.** To what temperature range will the component be exposed? Will the component be exposed to electrical voltage or current? What is the potential for corrosion? Will the component be inside a housing? Will guarding protect access to the component? Is low noise important? What is the vibration environment?
- 3. Loads.** Identify the nature of loads applied to the component being designed in as much detail as practical. Consider all modes of operation, including startup, shut down, normal operation, and foreseeable overloads. The loads should be characterized as *static, repeated and reversed, fluctuating, shock, or impact* as discussed in Section 5–2. Key magnitudes of loads are the *maximum, minimum, and mean*. Variations of loads over time should be documented as completely as practical. Will high mean loads be applied for extended periods of time, particularly at high temperatures, for which creep must be considered? This information will influence the details of the design process.
- 4. Types of Stresses.** Considering the nature of the loads and the manner of supporting the component, what kinds of stresses will be created: direct tension, direct compression, direct shear, bending, or torsional shear? Will two or more kinds of stresses be applied simultaneously? Are stresses developed in one direction (*uniaxially*), two directions (*biaxially*), or three directions (*triaxially*)? Is buckling likely to occur?
- 5. Material.** Consider the required material properties of yield strength, ultimate tensile strength, ultimate compressive strength, endurance limit, stiffness, ductility, toughness, creep resistance, corrosion resistance, and others in relation to the application, loads, stresses, and the environment. Will the component be made from a ferrous metal such as plain carbon, alloy, stainless, or structural steel, or cast iron? Or will a nonferrous metal such as aluminum, brass, bronze, titanium, magnesium, or zinc be used? Is the material brittle (percent elongation < 5%) or

ductile (percent elongation > 5%)? Ductile materials are highly preferred for components subjected to fatigue, shock, or impact loads. Will plastics be used? Is the application suitable for a composite material? Should you consider other nonmetals such as ceramics or wood? Are thermal or electrical properties of the material important?

- 6. Confidence.** How reliable are the data for loads, material properties, and stress calculations? Are controls for manufacturing processes adequate to ensure that the component will be produced as designed with regard to dimensional accuracy, surface finish, and final as-made material properties? Will subsequent handling, use, or environmental exposure create damage that can affect the safety or life of the component? These considerations will affect your decision for the design factor, N , to be discussed in the next section.

All design approaches must define the relationship between the applied stresses on a component and the strength of the material from which it is to be made, considering the conditions of service. The strength basis for design can be yield strength in tension, compression, or shear; ultimate strength in tension, compression, or shear; endurance limit; or some combination of these. The goal of the design process is to achieve a suitable *design factor, N* (sometimes called a *factor of safety*) that ensures the component is safe. That is, the strength of the material must be greater than the applied stresses. Design factors are discussed in the next section.

The sequence of design analysis will be different depending on what has already been specified and what is left to be determined. For example,

- 1. Geometry of the component and the loading are known:** We apply the desired design factor, N , to the actual expected stress to determine the required strength of the material. Then a suitable material can be specified.
- 2. Loading is known and the material for the component has been specified:** We compute a *design stress* by applying the desired design factor, N , to the appropriate strength of the material. This is the maximum allowable stress to which any part of the component can be exposed. We can then complete the stress analysis to determine what shape and size of the component will ensure that stresses are safe.
- 3. Loading is known, and the material and the complete geometry of the component have been specified:** We compute both the expected maximum applied stress and the design stress. By comparing these stresses, we can determine the resulting design factor, N , for the proposed design and judge its acceptability. A redesign may be called for if the design factor is either too low (unsafe) or too high (over designed).

Practical Considerations. While ensuring that a component is safe, the designer is expected to also make the design practical to produce, considering several factors.

- Each design decision should be tested against the cost of achieving it.
- Material availability must be checked.
- Manufacturing considerations may affect final specifications for overall geometry, dimensions, tolerances, or surface finish.
- In general, components should be as small as practical unless operating conditions call for larger size or weight.
- After computing the minimum acceptable dimension for a feature of a component, standard or preferred sizes should be specified using normal company practice or tables of preferred sizes such as those listed in Appendix 2.
- Before a design is committed to production, tolerances on all dimensions and acceptable surface finishes must be specified so the manufacturing engineer and the production technician can specify suitable manufacturing processes.
- Surface finishes should only be as smooth as required for the function of a particular area of a component, considering appearance, effects on fatigue strength, and whether or not the area mates with another component. Producing smoother surfaces increases cost dramatically. See Chapter 13.
- Tolerances should be as large as possible while maintaining acceptable performance of the component. The cost to produce smaller tolerances rises dramatically. See Chapter 13.
- The final dimensions and tolerances for some features may be affected by the need to mate with other components. Proper clearances and fits must be defined, as discussed in Chapter 13. Another example is the mounting of a commercially available bearing on a shaft for which the bearing manufacturer specifies the nominal size and tolerances for the bearing seat on the shaft. Chapter 16 gives guidelines for clearances between the moving and stationary parts where either boundary or hydrodynamic lubrication is used.
- Will any feature of the component be subsequently painted or plated, affecting the final dimensions?

Deformations. Machine elements can also fail because of excessive deformation or vibration. From your study of strength of materials, you should be able to compute deformations due to axial tensile or compressive loads, bending, torsion, or changes in temperature. Some of the basic concepts are reviewed in Chapter 3. For more complex shapes or loading patterns, computer-based analysis techniques such as finite-element analysis or beam analysis software are important aids.

Criteria for failure due to deformation are often highly dependent on the machine's use. Will excessive deformation cause two or more members to touch when they should not? Will the desired precision of the machine be compromised? Will the part look or feel too flexible (flimsy)? Will parts vibrate excessively or resonate at the frequencies experienced during operation? Will rotating shafts exhibit a critical speed during operation, resulting in wild oscillations of parts carried by the shaft?

This chapter will not pursue the quantitative analysis of deformation, leaving that to be your responsibility as the design of a machine evolves. Later chapters do address some critical cases such as the interference fit between two mating parts (Chapter 13), the position of the teeth of one gear relative to its mating gear (Chapter 9), the radial clearance between a journal bearing and the shaft rotating within it (Chapter 16), and the deformation of springs (Chapter 18). Also, Section 5–11, as a part of the general design procedure, suggests some guidelines for limiting deflections.

5–11 GENERAL DESIGN PROCEDURE

The earlier parts of this chapter have provided guidance related to the many factors involved in design of machine elements that must be safe when carrying the applied loads. This section brings these factors together so that you can complete the design. The general design procedure described here is meant to give you a feel for the process. It is not practical to provide a completely general procedure. You will have to adapt it to the specific situations that you encounter.

The procedure is set up assuming that the following factors are known or can be specified or estimated:

- General design requirements: Objectives and limitations on size, shape, weight, desired precision, and so forth
- Nature of the loads to be carried
- Types of stresses produced by the loads
- Type of material from which the element is to be made
- General description of the manufacturing process to be used, particularly with regard to the surface finish that will be produced
- Desired reliability

GENERAL DESIGN PROCEDURE ▾

1. Specify the objectives and limitations, if any, of the design, including desired life, size, shape, and appearance.
2. Determine the environment in which the element will be placed, considering such factors as corrosion potential and temperature.

3. Determine the nature and characteristics of the loads to be carried by the element, such as
 - Static, dead, slowly applied loads.
 - Dynamic, live, varying, repeated loads that may potentially cause fatigue failure.
 - Shock or impact loads.
4. Determine the magnitudes for the loads and the operating conditions, such as
 - Maximum expected load.
 - Minimum expected load.
 - Mean and alternating levels for fluctuating loads.
 - Frequency of load application and repetition.
 - Expected number of cycles of loading.
5. Analyze how loads are to be applied to determine the type of stresses produced, such as direct normal stress, bending stress, direct shear stress, torsional shear stress, or some combination of stresses.
6. Propose the basic geometry for the element, paying particular attention to
 - Its ability to carry the applied loads safely.
 - Its ability to transmit loads to appropriate support points. Consider the *load paths*.
 - The use of efficient shapes according to the nature of the loads and the types of stresses encountered. This applies to the general shape of the element and to each of its cross sections. Achieving efficiency involves optimizing the amount and the type of material involved. Section 20–2 gives some suggestions for efficient design of frames and members in bending and torsion.
 - Providing appropriate attachments to supports and to other elements in the machine or structure.
 - Providing for the positive location of other components that may be installed on the element being designed. This may call for shoulders, grooves, holes, retaining rings, keys and keyseats, pins, or other means of fastening or holding parts.
7. Propose the method of manufacturing the element with particular attention to the precision required for various features and the surface finish that is desired. Will it be cast, machined, ground, or polished, or produced by some other process? These design decisions have important impacts on the performance of the element, its ability to withstand fatigue loading, and the cost to produce it.
8. Specify the material from which the element is to be made, along with its condition. For metals the specific alloy should be specified, and the condition could include such processing factors as hot rolling, cold drawing, and a specific heat treatment. For nonmetals, it is often necessary to consult with vendors to specify the composition and the mechanical and physical properties of the desired material. Consult Chapter 2 and Section 20–2 for additional guidance.
9. Determine the expected properties of the selected material, for example
 - Ultimate tensile strength, s_u .
 - Ultimate compressive strength, s_{uc} , if appropriate.
 - Yield strength, s_y .
10. Specify an appropriate design factor, N , for the stress analysis using the guidelines discussed in Section 5–9.
11. Determine which stress analysis method from those outlined in Sections 5–4 and 5–7 applies to the design being completed.
12. Compute the appropriate design stress for use in the stress analysis. If fatigue loading is involved, the actual expected endurance limit of the material should be computed as outlined in Section 5–6. This requires the consideration of the expected size of the section, the type of material to be used, the nature of the stress, and the desired reliability. Because the size of the section is typically unknown at the start of the design process, an estimate must be made to allow the inclusion of a reasonable size factor, C_s . You should check the estimate at the end of the design process to verify that reasonable values were assumed at this stage of the design.
13. Determine the nature of any stress concentrations that may exist in the design at places where geometry changes occur. Stress analysis should be considered at all such places because of the likelihood of localized high tensile stresses that may produce fatigue failure. If the geometry of the element in these areas is known, determine the appropriate stress concentration factor, K_t . If the geometry is not yet known, it is advisable to estimate the expected magnitude of K_t . The estimate must then be checked at the end of the design process.
14. Complete the required stress analyses at all points where the stress may be high and at changes of cross section to determine the minimum acceptable dimensions for critical areas.
15. Specify suitable, convenient dimensions for all features of the element. Many design decisions are required, such as
 - The use of preferred basic sizes as listed in Table A2–1.
 - The size of any part that will be installed on or attached to the element being analyzed. Examples of this are shown in Chapter 12 on shaft design where gears, chain sprockets, bearings, and other elements are to be installed on the shafts. But many machine elements have similar needs to accommodate mating elements.
 - Elements should not be significantly oversized without good reason in order to achieve an efficient overall design.
 - Sometimes the manufacturing process to be used has an effect on the dimensions. For example, a company may have a preferred set of cutting tools for use in producing the elements. Casting, rolling, or molding processes often have limitations on the dimensions of certain features such as the thickness of ribs, radii produced by machining or bending, variation in cross section within different parts of the element, and convenient handling of the element during manufacture.
 - Consideration should be given to the sizes and shapes that are commercially available in the desired

- material. This could result in significant cost reductions both in material and in processing.
- Sizes should be compatible with standard company practices if practical.
16. After completing all necessary stress analyses and proposing the basic sizes for all features, check all assumptions made earlier in the design to ensure that the element is still safe and reasonably efficient. See Steps 7, 12, and 13.
 17. Specify suitable tolerances for all dimensions, considering the performance of the element, its fit with mating elements, the capability of the manufacturing process, and cost. Chapter 13 may be consulted. The use of computer-based tolerance-analysis techniques may be appropriate.
 18. Check to determine whether some part of the component may deflect excessively. If that is an issue, complete an analysis of the deflection of the element as designed to this point. Sometimes there are known limits for deflection based on the operation of the machine of which the element being designed is a part. In the absence of such limits, the following guidelines may be applied based on the degree of precision desired:

Deflection of a Beam Due to Bending

| | |
|-----------------------|---------------------------------------|
| General machine part: | 0.000 5 to 0.003 in/in of beam length |
| Moderate precision: | 0.000 01 to 0.000 5 in/in |
| High precision: | 0.000 001 to 0.000 01 in/in |

Deflection (Rotation) Due to Torsion

| | |
|-----------------------|------------------------------|
| General machine part: | 0.001° to 0.01°/in of length |
| Moderate precision: | 0.000 02° to 0.000 4°/in |
| High precision: | 0.000 001° to 0.000 02°/in |

See also Section 20–2 for additional suggestions for efficient design. The results of the deflection analysis may cause you to redesign the component. Typically, when high stiffness and precision are required, deflection, rather than strength, will govern the design.

19. Document the final design with drawings and specifications.
20. Maintain a careful record of the design analyses for future reference. Keep in mind that others may have to consult these records whether or not you are still involved in the project.

5-12 DESIGN EXAMPLES

Example design problems are shown here to give you a feel for the application of the process outlined in Section 5–11. It is not practical to illustrate all possible situations, and you must develop the ability to adapt the design procedure to the specific characteristics of each problem. Also note that there are many possible solutions to any given design problem. The selection of a final solution is the responsibility of you, the designer.

In most design situations, a great deal more information will be available than is given in the problem statements in this book. But, often, you will have to seek out that information. We will make certain assumptions in the examples that allow the design to proceed. In your job, you must ensure that such assumptions are appropriate. The design examples focus on only one or a few of the components of the given systems. In real situations, you must ensure that each design decision is compatible with the totality of the design.

Design Example 5–1 A large electrical transformer is to be suspended from a roof truss of a building. The total weight of the transformer is 32 000 lb. Design the means of support.

| | | |
|-----------------|------------------------|---|
| Solution | Objective | Design the means of supporting the transformer. |
| | Given | The total load is 32 000 lb. The transformer will be suspended below a roof truss inside a building. The load can be considered to be static. It is assumed that it will be protected from the weather and that temperatures are not expected to be severely cold or hot in the vicinity of the transformer. |
| | Basic Design Decisions | Two straight, cylindrical rods will be used to support the transformer, connecting the top of its casing to the bottom chord of the roof truss. The ends of the rod will be threaded to allow them to be secured by nuts or by threading them into tapped holes. This design example will be concerned only with the rods. It is assumed that appropriate attachment points are available to allow the two rods to share the load equally during service. However, it is possible that only one rod will carry the entire load at some point during installation. Therefore, each rod will be designed to carry the full 32 000 lb. |
| | | We will use steel for the rods, and because neither weight nor physical size is critical in this application, a plain, medium-carbon steel will be used. We specify SAE 1040 cold-drawn steel. From Appendix 3, we find that it has a yield strength of 71 ksi and moderately high ductility as represented by its 12% elongation. The rods should be protected from corrosion by appropriate coatings. |
| | | The objective of the design analysis that follows is to determine the size of the rod. |
| | Analysis | The rods are to be subjected to static direct normal tensile stress. Assuming that the threads at the ends of the rods are cut or rolled into the nominal diameter of the rods, the critical place for stress analysis is in the threaded portion. |
| | | Use the direct tensile stress formula, $\sigma = F/A$. We will first compute the design stress and then compute the required cross-sectional area to maintain the stress in service below that value. Finally, |

a standard thread will be specified from the data in Appendix Table A2–2(b) for American Standard threads.

Results In the basic tensile stress equation, $\sigma = F/A$. The stress state of the 3D stress element is $\sigma_1 = \sigma = F/A$, $\sigma_2 = \sigma_3 = 0$.

From Section 5–4, Design for Static Loading, Equation (5–7) applies for MSST, the maximum shear stress theory. Letting $\sigma_1 = F/A = \sigma_d$,

$$\sigma_d = \sigma_1 \leq \frac{s_y}{N}$$

From Section 5–9, for the design factor, we can specify $N = 3$, typical for general machine design with some uncertainty about installation procedures. Then,

$$\sigma_d = s_y/N = (71\,000 \text{ psi})/3 = 23\,667 \text{ psi}$$

Now we can solve for the required cross-sectional area of each rod.

$$A = F/\sigma_d = (32\,000 \text{ lb})/(23\,667 \text{ lb/in}^2) = 1.35 \text{ in}^2$$

A standard size thread will now be specified. Appendix Table A2–2(b) lists the tensile stress area for American Standard threads. A $1\frac{1}{2}$ –6 UNC thread ($1\frac{1}{2}$ -in-diameter rod with 6 threads per in) has a tensile stress area of 1.405 in^2 which should be satisfactory for this application.

Comments The final design specifies a $1\frac{1}{2}$ -in-diameter rod made from SAE 1040 cold-drawn steel with $1\frac{1}{2}$ –6 UNC threads machined on each end to allow the attachment of the rods to the transformer and to the truss. Note that for this problem, both the MSST [Equation (5–7)] and the distortion energy theory DET [Equation (5–10)] yield the same result because the loading is uniaxial tension.

Design Example 5–2

A part of a conveyor system for a production operation is shown in Figure 5–17. Design the pin that connects the horizontal bar to the fixture. The empty fixture weighs 85 lb. A cast iron engine block weighing 225 lb is hung on the fixture to carry it from one process to another, where it is then removed. It is expected that the system will experience many thousands of cycles of loading and unloading of the engine blocks.

Solution Objective Design the pin for attaching the fixture to the conveyor system.

Given The general arrangement is shown in Figure 5–17. The fixture places a shearing load that is alternately 85 lb and 310 lb ($85 + 225$) on the pin many thousands of times in the expected life of the system.

Basic Design Decisions It is proposed to make the pin from SAE 1020 cold-drawn steel. “Design Properties of Carbon and Alloy Steels” lists $s_y = 51 \text{ ksi}$ and $s_u = 61 \text{ ksi}$. The steel is ductile with 15% elongation. This material is inexpensive, and it is not necessary to achieve a particularly small size for the pin.

The connection of the fixture to the bar is basically a clevis joint with two tabs at the top of the fixture, one on each side of the bar. There will be a close fit between the tabs and the bar to minimize bending action on the pin. Also, the pin will be a fairly close fit in the holes while still allowing rotation of the fixture relative to the bar.

Analysis The Goodman criterion, expressed in Equation (5–32) in Section 5–7, applies for completing the design analysis because fluctuating shearing stresses are experienced by the pin. Therefore, we will have to determine relationships for the mean and alternating stresses (τ_m and τ_a) in terms of the applied loads and the cross-sectional area of the bar. Note that the pin is in double shear, so two cross sections resist the applied shearing force. In general, $\tau = F/2A$.

Now we will use the basic forms of Equations (5–1) and (5–2) to compute the values for the mean and alternating forces on the pin:

$$F_m = (F_{\max} + F_{\min})/2 = (310 + 85)/2 = 198 \text{ lb}$$

$$F_a = (F_{\max} - F_{\min})/2 = (310 - 85)/2 = 113 \text{ lb}$$

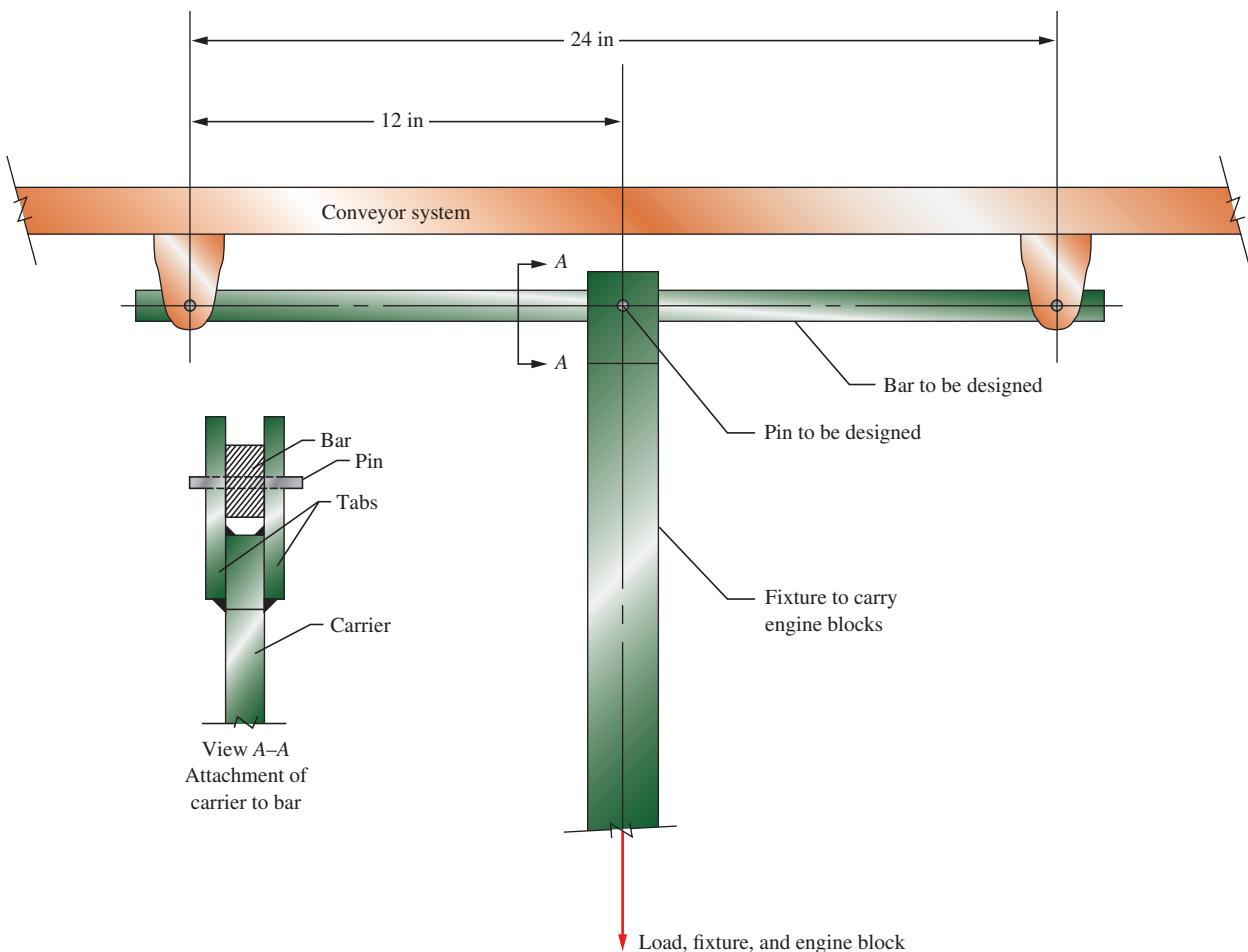


FIGURE 5-17 Conveyor system

The stresses will be found from $\tau_m = \frac{F_m}{2A}$ and $\tau_a = \frac{F_a}{2A}$.

From stress transformation, the three mean principal stresses are as follows:

$$\sigma_{m1} = \frac{F_m}{2A}, \sigma_{m2} = 0, \sigma_{m3} = -\frac{F_m}{2A}$$

Similarly, the three alternating principal stresses are as follows:

$$\sigma_{a1} = \frac{F_a}{2A}, \sigma_{a2} = 0, \sigma_{a3} = -\frac{F_a}{2A}$$

We can now apply the Goodman criterion [Equation (5-32)]

$$\frac{K_t \sigma'_a}{s_n'} + \frac{\sigma'_m}{s_u} = \frac{1}{N}$$

$$\frac{K_t (\sigma_{a1} - \sigma_{a3})}{s_n'} + \frac{\sigma_{m1} - \sigma_{m3}}{s_u} = \frac{1}{N}$$

Therefore,

$$\frac{K_t F_a}{A s_n'} + \frac{F_m}{A s_u} = \frac{1}{N}$$

The material strength values needed are $s_u = 61\,000$ psi and s_n' . We must find the value of s_n' using the method from Section 5-6. We find from Figure 5-11 that $s_n = 23$ ksi for the machined pin having a value of $s_u = 61$ ksi. It is expected that the pin will be fairly small, so we will use $C_s = 1.0$. The material is wrought steel rod, so $C_m = 1.0$. Let's use $C_{st} = 1.0$ to be conservative because there is little

information about such factors for direct shearing stress. A high reliability is desired for this application, so let's use $C_R = 0.75$ to produce a reliability of 0.999 (see Table 5-3). Then

$$s'_n = C_R(s_n) = (0.75)(23 \text{ ksi}) = 17.25 \text{ ksi} = 17\,250 \text{ psi}$$

Because the pins will be of uniform diameter, $K_t = 1.0$. Let's use $N = 4$ because mild shock is expected. Therefore,

$$\frac{K_t F_a}{A s'_n} + \frac{F_m}{A s_u} = \frac{1}{N}$$

$$\frac{(1.0)(113 \text{ lb})}{A(17\,250 \frac{\text{lb}}{\text{in}^2})} + \frac{198 \text{ lb}}{A(61\,000 \frac{\text{lb}}{\text{in}^2})} = \frac{1}{4}$$

Results

Based on the above analysis, we can solve for the required area, $A = 0.03919 \text{ in}^2$
Then the required diameter is $D = 0.223 \text{ in.}$

Final Design Decisions and Comments

The computed value for the minimum required diameter for the pin, 0.223 in, is quite small. Other considerations such as bearing stress and wear at the surfaces that contact the tabs of the fixture and the bar indicate that a larger diameter would be preferred. Let's specify $D = 0.50 \text{ in}$ for the pin at this location. The pin will be of uniform diameter within the area of the bar and the tabs. It should extend beyond the tabs, and it could be secured with cotter pins or retaining rings.

This completes the design of the pin. But the next design example deals with the horizontal bar for this same system. There are pins at the conveyor hangers to support the bar. They would also have to be designed. However, note that each of these pins carries only half the load of the pin in the fixture connection. These pins would experience less relative motion as well, so wear should not be so severe. Thus, let's use pins with $D = 3/8 \text{ in} = 0.375 \text{ in}$ at the ends of the horizontal bar.

Design Example 5-3

A part of a conveyor system for a production operation is shown in Figure 5-17. The complete system will include several hundred hanger assemblies like this one. Design the horizontal bar that extends between two adjacent conveyor hangers and that supports a fixture at its midpoint. The empty fixture weighs 85 lb. A cast iron engine block weighing 225 lb is hung on the fixture to carry it from one process to another, where it is then removed. It is expected that the bar will experience several thousand cycles of loading and unloading of the engine blocks. Design Example 5-2 considered this same system with the objective of specifying the diameter of the pins. The pin at the middle of the horizontal bar where the fixture is hung has been specified to have a diameter of 0.50 in. Those at each end where the horizontal bar is connected to the conveyor hangers are each 0.375 in.

Solution

Objective Design the horizontal bar for the conveyor system.

Given

The general arrangement is shown in Figure 5-17. The bar is simply supported at points 24 in apart. A vertical load that is alternately 85 lb and 310 lb (85 + 225) is applied at the middle of the bar through the pin connecting the fixture to the bar. The load will cycle between these two values many thousands of times in the expected life of the bar. The pin at the middle of the bar has a diameter of 0.50 in, while the pins at each end are 0.375 in.

Basic Design Decisions

It is proposed to make the bar from steel in the form of a rectangular bar with the long dimension of its cross section vertical. Cylindrical holes will be machined on the neutral axis of the bar at the support points and at its center to receive cylindrical pins that will attach the bar to the conveyor carriers and to the fixture. Figure 5-18 shows the basic design for the bar.

The thickness of the bar, t , should be fairly large to provide a good bearing surface for the pins and to ensure lateral stability of the bar when subjected to the bending stress. A relatively thin bar would tend to buckle along its top surface where the stress is compressive. As a design decision, we will use a thickness of $t = 0.50 \text{ in}$. The design analysis will determine the required height of the bar, h , assuming that the primary mode of failure is stress due to bending. Other possible modes of failure are discussed in the comments at the end of this example.

An inexpensive steel is desirable because several hundred bars will be made. We specify SAE 1020 hot-rolled steel having a yield strength of $s_y = 30 \text{ ksi}$ and an ultimate strength of $s_u = 55 \text{ ksi}$ (Appendix 3).

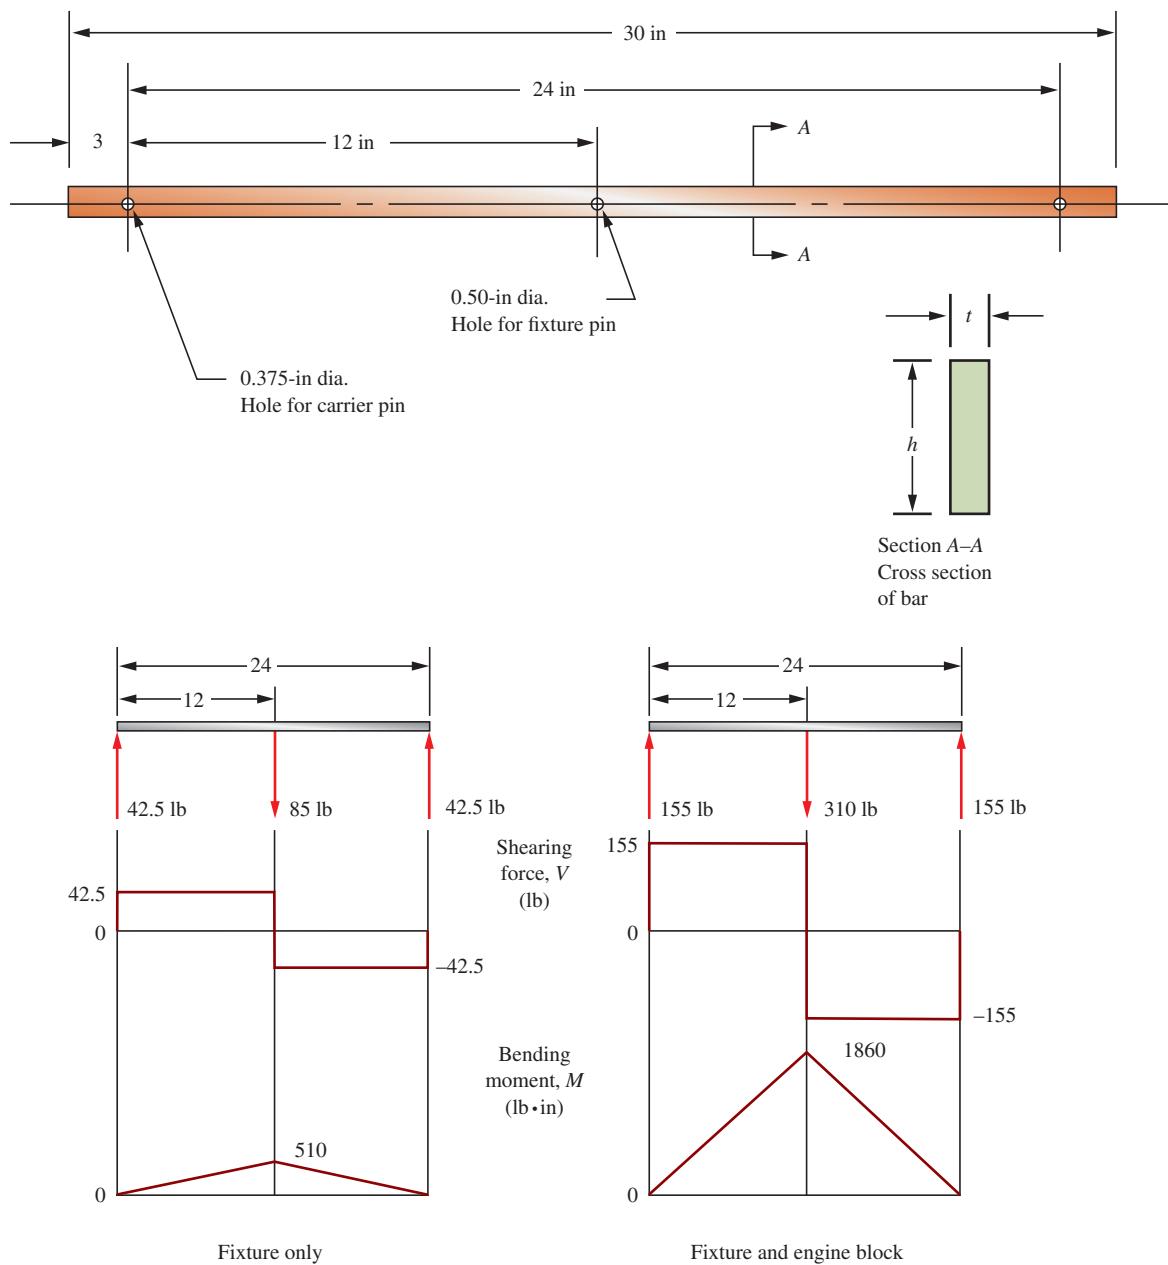


FIGURE 5-18 Basic design of the horizontal bar and the load, shearing force, and bending moment diagrams

Analysis The Goodman criterion applies for completing the design analysis because fluctuating normal stress due to bending is experienced by the bar. Equation (5-32) will be used:

$$\frac{1}{N} = \frac{\sigma_m}{s_u} + \frac{K_f \sigma_a}{s'_n}$$

In general, the bending stress in the bar will be computed from the flexure formula:

$$\sigma = M/S$$

where M = bending moment

$$S = \text{section modulus of the cross section of the bar} = th^2/6 \text{ (Appendix 1)}$$

Our approach will be to first determine the values for both the mean and the alternating bending moments experienced by the bar at its middle. Then the yield and endurance limit values for the steel will be found. Reference 5 in Chapter 3 indicates that a small hole, with diameter d , in a plate-beam does not weaken the beam if the ratio d/h is less than 0.50. That is, if $d/h < 0.50$, $K_f = 1.0$. We will make that assumption and check it later. Based on the application conditions, let's use $N = 4$ as

advised in item 4 in Section 5–9 because the actual use pattern for this conveyor system in a factory environment is somewhat uncertain and shock loading is likely.

Bending Moments Figure 5–18 shows the shearing force and bending moment diagrams for the bar when carrying just the fixture and then both the fixture and the engine block. The maximum bending moment occurs at the middle of the bar where the load is applied. The values are $M_{\max} = 1860 \text{ lb}\cdot\text{in}$ with the engine block on the fixture and $M_{\min} = 510 \text{ lb}\cdot\text{in}$ for the fixture alone. Now the values for the mean and alternating bending moments are calculated using modified forms of Equations (5–1) and (5–2):

$$M_m = (M_{\max} + M_{\min})/2 = (1860 + 510)/2 = 1185 \text{ lb}\cdot\text{in}$$

$$M_a = (M_{\max} - M_{\min})/2 = (1860 - 510)/2 = 675 \text{ lb}\cdot\text{in}$$

The stresses will be found from $\sigma_m = \frac{M_m}{S}$ and $\sigma_a = \frac{M_a}{S}$. Note that the stress element at the location of interest is subjected to uniaxial tension/compression without any shear. For 1D loading,

$$\sigma_{m1} = \sigma_m = \frac{M_m}{S}, \sigma_{m2} = \sigma_{m3} = 0$$

$$\sigma_{a1} = \sigma_a = \frac{M_a}{S}, \sigma_{a2} = \sigma_{a3} = 0$$

As such, we can now apply the Goodman criterion from Equation (5–32) with

$$\sigma'_m = \sigma_m = \frac{M_m}{S}$$

$$\sigma'_a = \sigma_a = \frac{M_a}{S}$$

Material Strength Values The material strength properties required are the ultimate strength s_u and the estimated actual endurance limit s'_n . We know that the ultimate strength $s_u = 55 \text{ ksi}$. We now find s'_n using the method outlined in Section 5–6.

Size factor, C_s : From Section 5–6, Equation (5–10) defines an equivalent diameter, D_e , for the rectangular section as

$$D_e = 0.808\sqrt{ht}$$

We have specified the thickness of the bar to be $t = 0.50 \text{ in}$. The height is unknown at this time. As an estimate, let's assume $h \approx 2.0 \text{ in}$. Then,

$$D_e = 0.808\sqrt{ht} = 0.808\sqrt{(2.0 \text{ in})(0.50 \text{ in})} = 0.808 \text{ in}$$

We can now use Figure 5–12 or the equations in Table 5–4 to find $C_s = 0.90$. This value should be checked later after a specific height dimension is proposed.

Material factor, C_m : Use $C_m = 1.0$ for the wrought, hot-rolled steel.

Stress-type factor, C_{st} : Use $C_{st} = 1.0$ for repeated bending stress.

Reliability factor, C_R : A high reliability is desired. Let's use $C_R = 0.75$ to achieve a reliability of 0.999 as indicated in Table 5–3.

The value of $s_n = 20 \text{ ksi}$ is found from Figure 5–11 for hot-rolled steel having an ultimate strength of 55 ksi.

Now, applying Equation (5–21) from Section 5–6, we have

$$s'_n = (C_m)(C_{st})(C_R)(C_s)s_n = (1.0)(1.0)(0.75)(0.90)(20 \text{ ksi}) = 13.5 \text{ ksi}$$

Solution for the Required Section Modulus At this point, we have specified all factors in Equation (5–32) except the section modulus of the cross section of the bar that is involved in each expression for stress as shown above. We will now solve the equation for the required value of S .

Recall that we showed earlier that $\sigma_m = M_m/S$ and $\sigma_a = M_a/S$. Then

$$\frac{1}{N} = \frac{\sigma_m}{s_u} + \frac{K_t\sigma_a}{s'_n} = \frac{M_m}{Ss_u} + \frac{K_tM_a}{Ss'_n} = \frac{1}{S} \left[\frac{M_m}{s_u} + \frac{K_tM_a}{s'_n} \right]$$

$$S = N \left[\frac{M_m}{s_u} + \frac{K_tM_a}{s'_n} \right] = 4 \left[\frac{1185 \text{ lb}\cdot\text{in}}{55\,000 \text{ lb/in}^2} + \frac{1.0(675 \text{ lb}\cdot\text{in})}{13\,500 \text{ lb/in}^2} \right]$$

$$S = 0.286 \text{ in}^3$$

Results The required section modulus has been found to be $S = 0.286 \text{ in}^3$. We observed earlier that $S = th^2/6$ for a solid rectangular cross section, and we decided to use this form to find an initial estimate for the required height of the section, h . We have specified $t = 0.50 \text{ in}$. Then the estimated minimum acceptable value for the height h is

$$h = \sqrt{6S/t} = \sqrt{6(0.286 \text{ in}^3)/(0.50 \text{ in})} = 1.85 \text{ in}$$

The table of preferred basic sizes in the decimal-inch system (Table A2–1) recommends $h = 2.00 \text{ in}$. We should first check the earlier assumption that the ratio $d/h < 0.50$ at the middle of the bar. The actual ratio is

$$d/h = (0.50 \text{ in})/(2.00 \text{ in}) = 0.25 (\text{okay})$$

This indicates that our earlier assumption that $K_t = 1.0$ is correct. Also, our assumed value of $C_s = 0.90$ is correct because the actual height, $h = 2.0 \text{ in}$, is identical to our assumed value.

We will now compute the actual value for the section modulus of the cross section with the hole in it. See Figure A15–6 in the appendix.

$$S = \frac{t(h^3 - d^3)}{6h} = \frac{(0.50 \text{ in})[(2.00 \text{ in})^3 - (0.50 \text{ in})^3]}{6(2.00 \text{ in})} = 0.328 \text{ in}^3$$

This value is larger than the minimum required value of 0.286 in^3 . Therefore, the size of the cross section is satisfactory with regard to stress due to bending.

Final Design Decisions and Comments In summary, the following are the design decisions for the horizontal bar of the conveyor hanger shown in Figure 5–18.

1. **Material:** SAE 1020 hot-rolled steel.
2. **Size:** Rectangular cross section. Thickness $t = 0.50 \text{ in}$; height $h = 2.00 \text{ in}$.
3. **Overall design:** Figure 5–18 shows the basic features of the bar.
4. **Other considerations:** Remaining to be specified are the tolerances on the dimensions for the bar and the finishing of its surfaces. The potential for corrosion should be considered and may call for paint, plating, or some other corrosion protection. The size of the cross section can likely be used with the as-received tolerances on thickness and height, but this is somewhat dependent on the design of the fixture that holds the engine block and the conveyor hangers. So the final tolerances will be left open pending later design decisions. The holes in the bar for the pins should be designed to produce a close sliding fit with the pins, and the details of specifying the tolerances on the hole diameters for such a fit are discussed in Chapter 13. See also the discussion on lug joints in Section 3–21.
5. **Other possible modes of failure:** The analysis used in this problem assumed that failure would occur due to the bending stresses in the rectangular bar. The dimensions were specified to preclude this from happening. Other possible modes are discussed as follows:
 - a. **Deflection of the bar as an indication of stiffness:** The type of conveyor system described in this problem should not be expected to have extreme rigidity because moderate deflection of members should not impair its operation. However, if the horizontal bar deflects so much that it appears to be rather flexible, it would be deemed unsuitable. This is a subjective judgment. We can use Case (a) in Table A14–1 to compute the deflection.

$$y = FL^3/48EI$$

In this design,

$$F = 310 \text{ lb} = \text{maximum load on the bar}$$

$$L = 24.0 \text{ in} = \text{distance between supports}$$

$$E = 30 \times 10^6 \text{ psi} = \text{modulus of elasticity of steel}$$

$$I = th^3/12 = \text{moment of inertia of the cross section}$$

$$I = (0.50 \text{ in})(2.00 \text{ in})^3/12 = 0.333 \text{ in}^4$$

Then,

$$y = \frac{(310 \text{ lb})(24.0 \text{ in})^3}{48(30 \times 10^6 \text{ lb/in}^2)(0.333 \text{ in}^4)} = 0.0089 \text{ in}$$

This value seems satisfactory. In Section 5–11, some guidelines were given for deflection of machine elements. One stated that bending deflections for general machine parts should be

limited to the range of 0.0005 to 0.003 in/in of beam length. For the bar in this design, the ratio of y/L can be compared to this range:

$$y/L = (0.0089 \text{ in})/(24.0 \text{ in}) = 0.0004 \text{ in/in of beam length}$$

Therefore, this deflection is well within the recommended range.

- b. **Buckling of the bar:** When a beam with a tall, thin, rectangular cross section is subjected to bending, it would be possible for the shape to distort due to buckling before the bending stresses would cause failure of the material. This is called *elastic instability*, and a complete discussion is beyond the scope of this book. However, Reference 14 shows a method of computing the critical buckling load for this kind of loading. The pertinent geometrical feature is the ratio of the thickness t of the bar to its height h . It can be shown that the bar as designed will not buckle.
- c. **Bearing stress on the inside surfaces of the holes in the beam:** Pins transfer loads between the bar and the mating elements in the conveyor system. It is possible that the bearing stress at the pin-hole interface could be large, leading to excessive deformation or wear. Reference 4 in Chapter 3 indicates that the allowable bearing stress for a steel pin in a steel hole is $0.90s_y$.

$$\sigma_{bd} = 0.90s_y = 0.90(30\,000 \text{ psi}) = 27\,000 \text{ psi}$$

The actual bearing stress at the center hole is found using the projected area, $D_p t$.

$$\sigma_b = F/D_p t = (310 \text{ lb})/(0.50 \text{ in})(0.50 \text{ in}) = 1240 \text{ psi}$$

Thus the pin and hole are very safe for bearing.

Design Example 5–4

A bracket is made by welding a rectangular bar to a circular rod, as shown in Figure 5–19. Design the bar and the rod to carry a static load of 250 lb.

Solution

Objective The design process will be divided into two parts:

1. Design the rectangular bar for the bracket.
2. Design the circular rod for the bracket.

Rectangular Bar

Given

The bracket design is shown in Figure 5–19. The rectangular bar carries a load of 250 lb vertically downward at its end. An effectively fixed support is provided by the weld at its left end where the loads are transferred to the circular rod. The bar acts as a cantilever beam, 12 in long. The design task is to specify the material for the bar and the dimensions of its cross section.

Basic Design Decisions

We will use steel for both parts of the bracket because of its relatively high stiffness, the ease of welding, and the wide range of strengths available. Let's specify SAE 1340 annealed steel having $s_y = 63 \text{ ksi}$ and $s_u = 102 \text{ ksi}$ (Appendix 3). The steel is highly ductile, with a 26% elongation.

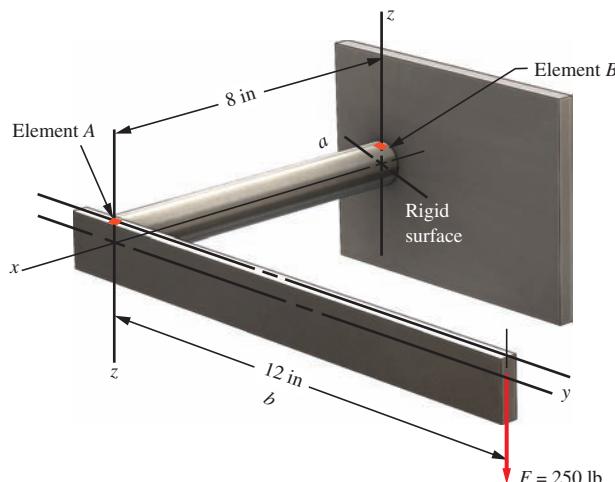


FIGURE 5–19 Bracket design

The objective of the design analysis that follows is to determine the size of the cross section of the rectangular bar. Assuming that the bar acts as a cantilever and the loading and processing conditions are well known, we will use a design factor of $N = 2$ because of the static load.

Analysis and Results

The free-body diagram of the cantilever bar is shown in Figure 5–20, along with the shearing force and bending moment diagrams. This should be a familiar case, leading to the judgment that the maximum tensile stress occurs at the top of the bar near to where it is supported by the circular rod. This point is labeled element A in Figure 5–20. The maximum bending moment there is $M = 3000 \text{ lb} \cdot \text{in}$.

The stresses at A are

$$\sigma_1 = \sigma_A = \frac{M}{S}, \sigma_2 = \sigma_3 = 0$$

where S = section modulus of the cross section of the bar.

We will first compute the minimum allowable value for S and then determine the dimensions for the cross section.

The MSST criterion, Equation (5–7), applies because of the static loading. We will first compute the design stress from

$$\sigma_d = s_y/N$$

$$\sigma_d = s_y/N = (63\,000 \text{ psi})/2 = 31\,500 \text{ psi}$$

Now we must ensure that the expected maximum stress $\sigma_A = M/S$ does not exceed the design stress. We can substitute $\sigma_A = \sigma_d$ and solve for S .

$$S = M/\sigma_d = (3000 \text{ lb} \cdot \text{in})/(31\,500 \text{ lb/in}^2) = 0.095 \text{ in}^3$$

The relationship for S is

$$S = th^2/6$$

As a design decision, let's specify the approximate proportion for the cross-sectional dimensions to be $h = 3t$. Then,

$$S = th^2/6 = t(3t)^2/6 = 9t^3/6 = 1.5t^3$$

The required minimum thickness is then


$$t = \sqrt[3]{S/1.5} = \sqrt[3]{(0.095 \text{ in}^3)/1.5} = 0.399 \text{ in}$$

The nominal height of the cross section should be, approximately,

$$h = 3t = 3(0.399 \text{ in}) = 1.20 \text{ in}$$

Final Design Decisions and Comments In the fractional-inch system, preferred sizes are selected to be $t = 3/8 \text{ in} = 0.375 \text{ in}$ and $h = 1\frac{1}{4} \text{ in} = 1.25 \text{ in}$ (see Table A2–1). Note that we chose a slightly smaller value for t but a slightly larger value for h . We must check to see that the resulting value for S is satisfactory.

$$S = th^2/6 = (0.375 \text{ in})(1.25 \text{ in})^2/6 = 0.0977 \text{ in}^3$$

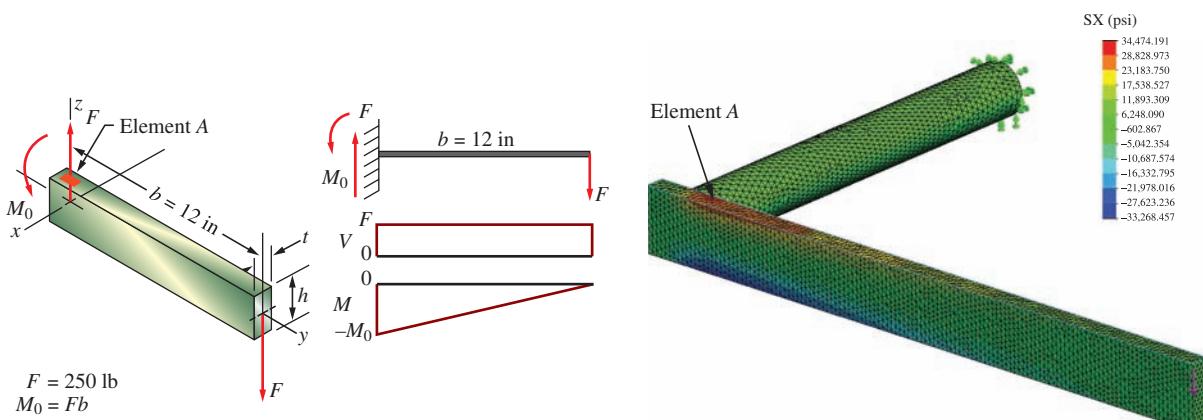

(a) Free-body diagram of the bar

(b) Finite-element model of the bar

FIGURE 5–20 Free-body diagram of bar

This is larger than the required value of 0.095 in³, so the design is satisfactory.

Part (b) of Figure 5–20 shows a finite-element analysis (FEA) model for the rectangular bar only. The variations in color on the bar represent stress levels with red being the highest and blue the lowest. This model verifies the observation that the highest stress is at Element A.

Circular Rod

- Given** The bracket design is shown in Figure 5–19. The design task is to specify the material for the rod and the diameter of its cross section.
- Basic Design Decisions** Let's specify SAE 1340 annealed steel, the same as that used for the rectangular bar. Its properties are $s_y = 63$ ksi and $s_u = 102$ ksi.
- Analysis and Results** Figure 5–21 is the free-body diagram for the rod. The rod is loaded at its left end by the reactions at the end of the rectangular bar, namely, a downward force of 250 lb and a moment of 3000 lb·in. The figure shows that the moment acts as a torque on the circular rod, and the 250-lb force causes bending with a maximum bending moment of 2000 lb·in at the right end. Reactions are provided by the weld at its right end where the loads are transferred to the support. The rod then is subjected to a combined stress due to torsion and bending. Element B on the top of the rod is subjected to the maximum combined stress.

The manner of loading on the circular rod is identical to that analyzed earlier. It was shown that when only bending and torsional shear occur, a procedure called the *equivalent torque method* can be used to complete the analysis. First we define the equivalent torque, T_e :

$$T_e = \sqrt{M^2 + T^2} = \sqrt{(2000 \text{ lb}\cdot\text{in})^2 + (3000 \text{ lb}\cdot\text{in})^2} = 3606 \text{ lb}\cdot\text{in}$$

Then the shear stress in the bar is

$$\tau = T_e/Z_p$$

where Z_p = polar section modulus

For a solid circular rod,

$$Z_p = \pi D^3/16$$

Our approach is to determine the design shear stress and T_e and then solve for Z_p . The maximum shear stress theory of failure can be applied and the design shear stress is

$$\tau_d = 0.50s_y/N = (0.5)(63\,000 \text{ psi})/2 = 15\,750 \text{ psi}$$

We let $\tau = \tau_d$ and solve for Z_p :

$$Z_p = T_e/\tau_d = (3606 \text{ lb}\cdot\text{in})/(15\,750 \text{ lb/in}^2) = 0.229 \text{ in}^3$$

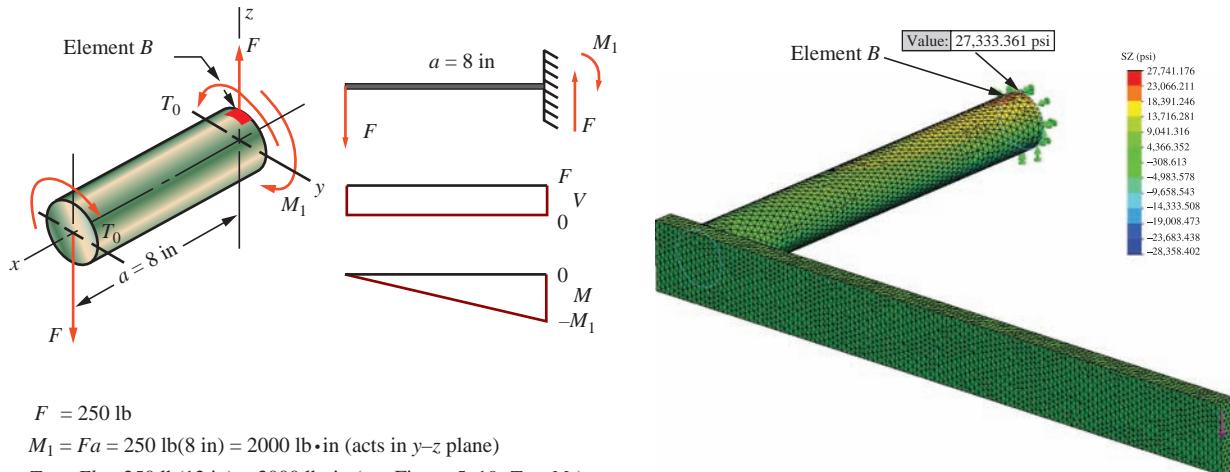


FIGURE 5–21 Free-body diagram of rod

Now that we know Z_p , we can compute the required diameter from

$$D = \sqrt[3]{16Z_p/\pi} = \sqrt[3]{16(0.229 \text{ in}^3)/\pi} = 1.053 \text{ in}$$

This is the minimum acceptable diameter for the rod.

Final Design Decisions and Comments

The circular rod is to be welded to the side of the rectangular bar, and we have specified the height of the bar to be $1\frac{1}{4}$ in. Let's specify the diameter of the circular rod to be machined to 1.10 in. This will allow welding all around its periphery.

Figure 5–21(b) shows a finite-element analysis (FEA) model for the circular bar only. The variations in color on the bar represent stress levels with red being the highest and blue the lowest. This model verifies the observation that the highest stress is at Element B.

5-13 STATISTICAL APPROACHES TO DESIGN

The design approaches presented in this chapter are somewhat deterministic in the sense that data are taken to be discrete values, and analyses use the data to determine specific results. The method of accounting for uncertainty with regard to the data themselves lies with the selection of an acceptable value for the design factor represented by the final design decision. Obviously this is a subjective judgment. Often decisions that are made to ensure the safety of a design cause many designs to be quite conservative.

Competitive pressures call for ever more efficient, less conservative designs. Throughout this book, recommendations are made to seek more reliable data for loads, material properties, and environmental factors, providing more confidence in the results of design analyses and allowing lower values for the design factor as discussed in Section 5–9. A more robust and reliable product results from testing samples of the actual material to be used in the product; performing extensive measurements of loads to be experienced; investing in more detailed performance testing, experimental stress analysis, and finite-element analysis; exerting more careful control of manufacturing processes; and life testing of prototype products in realistic conditions where possible. All of these measures typically come with significant additional costs, and difficult decisions must be made about whether or not to implement them.

In combination with the approaches listed previously, a greater use of statistical methods (also called *stochastic methods*) is emerging to account for the inevitable variability of data by determining the mean values of critical parameters from several sets of data and quantifying the variability using the concepts of distributions and standard deviations. References 5 and 11 provide guidance in these methods. Section 2–4 provided a modest discussion of this approach to account for the variability of materials property data.

Industries such as automotive, aerospace, construction equipment, and machine tools devote considerable

resources to acquiring useful data for operating conditions that will aid designers in producing more efficient designs.

Samples of Statistical Terminology and Tools

- Statistical methods analyze data to present useful information about the source of the data.
- Stochastic methods apply probability theories to characterize variability in the data.
- Data sets can be analyzed to determine the mean (average), the range of variation, and the standard deviation.
- Inferences can be made about the nature of the distribution of the data, such as normal or lognormal.
- Linear regression and other means of curve fitting can be employed to represent a set of data by mathematical functions.
- The distributions for applied loads and stresses can be compared with the distribution for the strength of the material to determine to what degree they overlap and the probability that a certain number of failures will occur. See Figure 5–22.
- The reliability of a component or a complete product can be quantified.

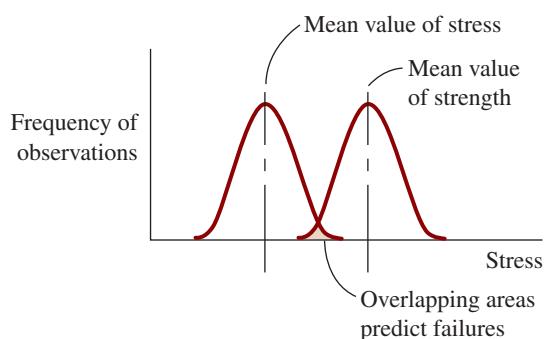


FIGURE 5–22 Illustration of statistical variation in failure potential

- The optimum assignment of tolerances can be made to reasonably ensure satisfactory performance of a product while allowing as broad a range of tolerances as practical.

5-14 FINITE LIFE AND DAMAGE ACCUMULATION METHOD

The fatigue design methods described thus far in this chapter have the goal to design a component for infinite life by using the estimated actual endurance limit as the basis for design. Applied repeated stress levels below this value will provide infinite life. Furthermore, the analyses were based on the assumption that the loading pattern was uniform over the life of the component. That is, the mean and alternating stresses do not vary over time.

There are, however, many common examples for which a finite life is adequate for the application and where the loading pattern does vary with time. Consider the following.

Finite Life Examples

First, let's discuss the concept of finite life. Refer to the endurance strength curves in Figure 5-10 in Section 5-5. Data are plotted on a stress versus number of cycles to failure graph (σ vs. N) with both axes using logarithmic scales. For the materials that exhibit an endurance limit, it can be seen that the limit occurs for a life of approximately 10^6 cycles. How long would it take to accumulate 1 million cycles of load applications? Here are some examples.

Bicycle brake lever: Assume that the brake is applied every 5.0 minutes while riding 4.0 hours per day every day of each year. It would take more than 57 years to apply the brake 1 million times.

Lawn mower height-adjustment mechanism: Consider a lawn mower used by a commercial lawn maintenance company. Assume that the cutting height for the mower is adjusted to accommodate varying terrain three times per mowing and that the mower is used 40 times per week for all 12 months per year. It would take 160 years to accumulate 1 million cycles of load on the height adjustment mechanism.

Automotive lift in a service station: Assume that the service technician lifts four automobiles per hour, 10 hours per day, 6 days per week, each week of the year. It would take more than 80 years to accumulate 1 million cycles of load on the lift mechanism.

Each of these examples indicates that it may be appropriate to design the load-carrying members of the example systems for something less than infinite life. But

many industrial examples do require design for infinite life. Here is an example.

Parts feeding device: On an automated assembly system, a feeding device inserts 120 parts per minute. If the system operates 16 hours per day, 6 days per week, each week of the year, it would take only 8.7 days to accumulate 1 million cycles of loading. It would see 35.9 million cycles in one year.

When it can be justified to design for a finite life less than the number of cycles corresponding to the endurance limit, you will need data similar to that in Figure 5-10 for the actual material to be used in the component. Testing the material yourself is preferred, but it would be a time-consuming and costly exercise to acquire sufficient data to make statistically valid σ - N curves. References 2–4, 9, 11, and 13 may provide suitable data, or an additional literature search may be required. Once reliable data are identified, use the endurance strength at the specified number of cycles as the starting point for computing the estimated actual endurance strength as described in Section 5-6. Then use that value in subsequent analyses as described in Section 5-10.

Varying Stress Amplitude Examples

Here we are looking for examples where the component experiences cyclical loading for a large number of cycles but for which the amplitude of the stress varies over time.

Bicycle brake lever: Let's reconsider the braking action on a bicycle. Sometimes you need to bring the bike to a stop very quickly from a high speed, requiring a rather high force on the brake lever. Other times you may apply a lighter force to simply slow down a bit to safely negotiate a curve.

Automotive suspension member: Suspension parts such as strut, spring, shock absorber, control arm, or fastener pass loads from the wheel to the frame of a car. The magnitude of the load depends on vehicle speed, the condition of the road, and driver action. Roads may be smoothly paved, potholed, or rough-surfaced gravel. The vehicle may even be driven off-road where violent peaks of stress will be encountered.

Machine tool drive system: Consider the lifetime of a milling machine. Its primary function is to cut metal, and it takes a certain amount of torque to drive the cutter depending on the machinability of the material, the depth of cut, and the feed rate. Surely the torque will vary significantly from job to job. During part of its operating time, there may be no cutting action at all as a new part is positioned or as the operation completes one cut and adjusts before making another. At times the cutter will encounter locally harder material, requiring higher torque for a short period of time.

Cranes, power shovels, bulldozers, and other construction equipment: Here there are obviously varying loads as the equipment is used for numerous tasks, such as hoisting large steel beams or small bracing members, digging through hard clay or soft sandy soil, rapidly grading a hillside or performing the final smoothing of a driveway, or encountering a tree stump or large rock.

How would you determine the loads that these devices would experience over time? One method involves building a prototype and instrumenting critical elements with strain gages, load cells, or accelerometers. Then the system would be “put through its paces” over a wide range of tasks while loads and stresses are recorded as a function of time. Similar vehicles could be monitored to determine the frequency that different kinds of loading would be encountered over its expected life. Combining such data would produce a record from which the total number of cycles of stress at any given level can be estimated. Statistical techniques such as spectrum analysis, Fast Fourier Transform analysis, and time compression analysis produce charts that summarize stress amplitude and frequency data that are useful for fatigue and vibration analysis. See Reference 11 for extended discussion of these techniques.

Damage Accumulation Method

The principle of *damage accumulation* is based on the assumption that any given level of stress applied for one cycle of loading contributes to a certain amount of damage to a component. Refer again to Figure 5–10 and observe the S–N curve for the alloy steel, SAE 4340 at a hardness of HB275 and having an ultimate strength of 1048 MPa (152 ksi). Reading a few points from that curve gives the following set of data:

| Stress amplitude | Number of cycles to failure |
|-------------------|--|
| 710 MPa (103 ksi) | 1.0×10^3 |
| 600 MPa (87 ksi) | 1.0×10^4 |
| 505 MPa (73 ksi) | 1.0×10^5 |
| 415 MPa (60 ksi) | 1.0×10^6 [Considered the endurance limit, s_n] |
| <415 MPa | ∞ |

There is a theoretically infinite life for stresses below the endurance limit and no damage occurs.

Now, let's say that the component experiences 480 cycles of stress at the 600 MPa (87 ksi) level. It can be said that it suffers a damage of the ratio of $480/(1.0 \times 10^4) = 0.048$. Being subjected to 250 cycles of stress at 710 MPa (103 ksi) produces a damage of $250/(1.0 \times 10^3) = 0.250$. The cumulative damage of both events is the sum, $0.048 + 0.250 = 0.298$. When the sum of these types of calculations is equal to 1.0, it is predicted that the component would fail. Therefore, this brief example predicts that approximately 30% of the component's life has been accumulated.

This kind of logic can be used to predict the total life of a component subjected to a sequence of loading levels. Let n_i represent the number of cycles of a specific stress level experienced by a component. Let N_i be the number of cycles to failure for this stress level as indicated by a σ – N curve such as those shown in Figure 5–10. Then the damage contribution from this loading is

$$D_i = n_i/N_i$$

When several stress levels are experienced for different numbers of cycles, the cumulative damage, D_c , can be represented as,

$$D_c = \sum_{i=1}^{i=k} (n_i/N_i) \quad (5-35)$$

Failure is predicted when $D_c \geq 1.0$. This process is called the *Miner linear cumulative-damage rule* or simply *Miner's rule* in honor of his work in 1945. An example problem will now demonstrate the application of Miner's rule.

The example data in Figure 5–10 and listed above are taken for completely reversed and repeated bending stress on a small [0.30 in (7.62 mm)] diameter circular bar with a mirror polished surface as used in the standard R. R. Moore test device (Figure 5–3). For other conditions (the typical situation), the S–N curve can be adjusted by first computing the actual expected endurance limit of the material, s'_n , using Equation 5–21 from Section 5–6 as has been done throughout this chapter. Then a ratio of s'_n/s_n can be applied to stress data from the S–N curves before determining the number of cycles to failure. The process is illustrated in Example Problem 5–5.

Example Problem

5–5

Determine the cumulative damage experienced by a ground circular rod, 38 mm diameter, subjected to the combination of the cycles of loading and varying levels of reversed, repeated bending stress shown in Table 5–5.

The bar is made from SAE 4340, HB275 alloy steel with an ultimate strength of 1048 MPa and an endurance limit of 430 MPa. Use Figure 5–10 for the S–N curve.

TABLE 5–5 Loading Pattern for Example Problem 5–5

| Stress Level | | Number of Cycles |
|--------------|------|------------------|
| MPa | ksi | n_i |
| 650 | 94.3 | 2 000 |
| 600 | 87.0 | 3 000 |
| 500 | 72.5 | 10 000 |
| 350 | 50.8 | 25 000 |
| 300 | 43.5 | 15 000 |

Solution

Given SAE 4340, HB 275 alloy steel rod. $s_u = 1048 \text{ MPa}$ $D = 38 \text{ mm}$. Ground surface.

Endurance strength data ($S\text{-}N$) shown in Figure 5–10 $s_n = 430 \text{ MPa}$.

Loading is reversed, repeated bending. Load history shown in Table 5–5.

Analysis First adjust the $S\text{-}N$ data for actual conditions using methods of Section 5–6. Use Miner's rule to estimate the portion of life used by the loading pattern.

Results For SAE 4340, HB 275, $s_u = 1048 \text{ MPa}$

From Figure 5–11, basic $s_n = 475 \text{ MPa}$ for ground surface

Material factor, $C_m = 1.00$ for wrought steel

Type-of-stress factor, $C_{st} = 1.0$ for reversed, rotating bending stress

Reliability factor, $C_R = 0.81$ (Table 5–3) for $R = 0.99$ (Design decision)

Size factor, $C_s = 0.84$ (Figure 5–12 and Table 5–4 for $D = 38 \text{ mm}$)

Estimated actual endurance limit, s'_n – Computed:

$$s'_n = s_n C_m C_{st} C_R C_s = (475 \text{ MPa})(1.0)(1.0)(0.81)(0.84) = 323 \text{ MPa}$$

This is the estimate for the actual endurance limit of the steel. In Figure 5–10, the endurance limit for the standard specimen is 430 MPa. The ratio of the actual to the standard data is $323/430 = 0.75$. We can now adjust the entire $S\text{-}N$ curve by this factor. The result is shown in Figure 5–23.

Now we can read the number of cycles of life, N_i , corresponding to each of the given loading levels from Table 5–5. The combined data for the number of applied load cycles, n_i , and the life cycles, N_i , are now used in Miner's rule, Equation 5–35, to determine the cumulative damage, D_c . Results are shown in Table 5–6.

TABLE 5–6 Cumulative Life Calculations for Example Problem 5–5

| Stress Level | | Number of Cycles | Life Cycles | |
|--------------|------|------------------|-------------------|-------------|
| MPa | ksi | n_i | N_i | n_i/N_i |
| 650 | 94.3 | 2000 | 1.1×10^4 | 0.182 |
| 600 | 87.0 | 3000 | 1.8×10^4 | 0.167 |
| 500 | 72.5 | 10 000 | 5.8×10^4 | 0.172 |
| 350 | 50.8 | 25 000 | 5.6×10^5 | 0.045 |
| 300 | 43.5 | 15 000 | ∞ | 0.000 |
| | | | | Total 0.566 |

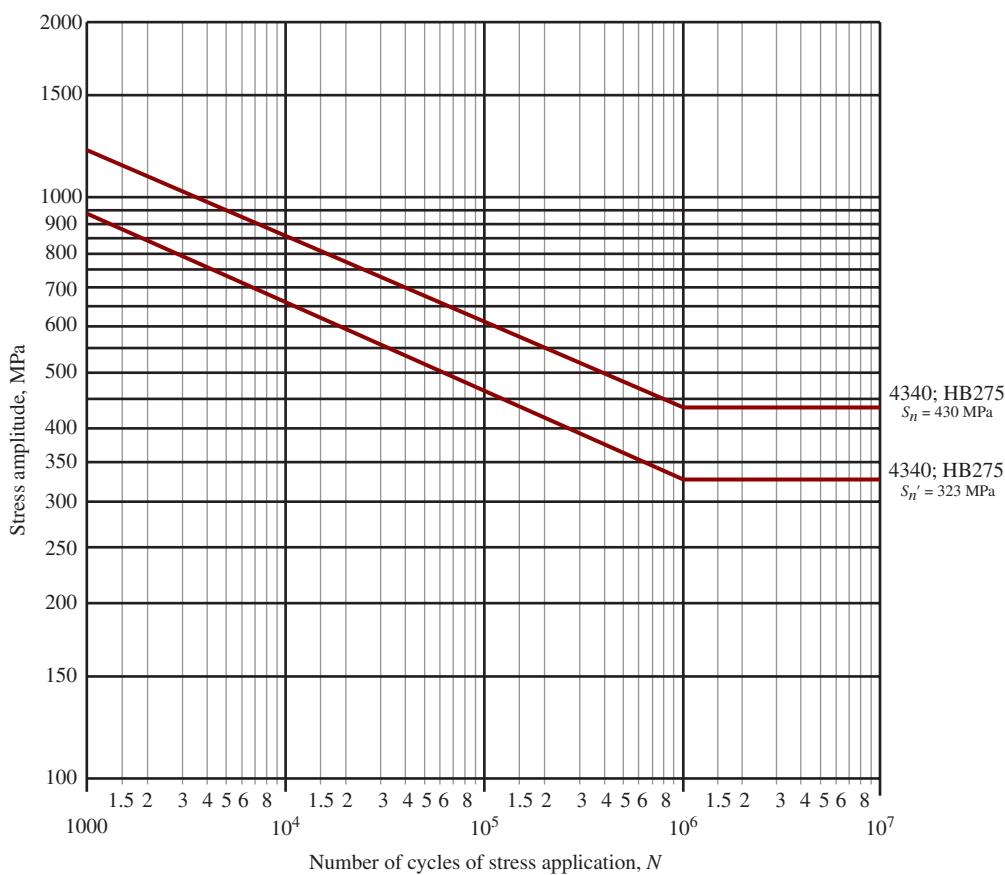


FIGURE 5–23 Endurance strength for Example Problem 5–5

Comment We can conclude from this number that approximately 57% of the life of the component has been accumulated by the given loading. For these data, the greatest damage occurs from the 650 MPa loading for 2000 cycles. An almost equal amount of damage is caused by the 500 MPa loading for 10 000 cycles. Note that the cycles of loading at 300 MPa contributed nothing to the damage because they are below the endurance limit of the steel.

REFERENCES

- Anderson, Ted L. *Fracture Mechanics: Fundamentals and Applications*. 3rd ed. Boca Raton, FL: CRC Press, 2005.
- Campbell, F. C. *Fatigue and Fracture: Understanding the Basics*. Materials Park, OH: ASM International, 2012.
- Balandin, Dimitri V., Nikolaj N. Bolotnik, and Walter D. Pilkey. *Optimal Protection from Impact, Shock and Vibration*. Boca Raton, FL: CRC Press, 2001.
- Boyer, Howard E. *Atlas of Fatigue Curves*. Materials Park, OH: ASM International, 1986.
- Budynas, Richard G., and Keith J. Nisbett. *Shigley's Mechanical Engineering Design*. 10th ed. New York: McGraw-Hill, 2015.
- deSilva, Clarence W. *Vibration and Shock Handbook*. Boca Raton, FL: CRC Press, 2005.
- Dowling, Norman E. *Mechanical Behavior of Materials*. 4th ed. Upper Saddle River, NJ: Pearson/Prentice-Hall, 2013.
- Juvinal, Robert C., and Kurt M. Marshek. *Fundamentals of Machine Component Design*. 5th ed. New York: John Wiley & Sons, 2011.
- Meyers, Marc A., and K. Krishan Chawla. *Mechanical Behavior of Materials*. 2nd ed. Cambridge, UK: Cambridge University Press, 2009.
- Paez, Thomas, and Allan Piersol. *Harris' Shock and Vibration Handbook*. 6th ed. New York, NY: McGraw-Hill, 2010.
- Yung-Li Lee, Hong-Tae Kang, and Mark E. Barkey. *Metal Fatigue Analysis Handbook: Practical Problem-Solving Techniques for Computer-Aided Engineering*. New York: Elsevier, 2011.
- Spotts, Merhyle F., Terry E. Shoup, and Lee E. Hornberger. *Design of Machine Elements*. 8th ed. Upper Saddle River, NJ: Pearson/Prentice-Hall, 2004.
- McEvily, Arthur J., and Jirapong Kasivitamnuay. *Metal Failures: Mechanisms, Analysis, Prevention*. 2nd ed. New York: Wiley, 2013.

14. Young, Warren C., Richard G. Budynas, and Ali Sadegh. *Roark's Formulas for Stress and Strain*. 8th ed. New York, NY: McGraw-Hill, 2012.
15. Zahavi, Eliaju, and Vladimir Torbilo. *Fatigue Design—Life Expectancy of Machine Parts*. Boca Raton, FL: CRC Press, 1996.
16. Huston, Ronald, and Harold Josephs. *Practical Stress Analysis in Engineering Design*. 3rd ed. Boca Raton, FL: CRC Press, 2009.

INTERNET SITES RELATED TO DESIGN

1. **eFatigue.com** An online source for stress concentration factor information and a fatigue calculator.
2. **Safe Technology** A developer of the fe-safe™ line of software for fatigue analysis that can be linked with finite-element models. Uses several analysis methods such as stress-life, strain-life, von Mises stress, multiaxial fatigue, and damage accumulation.
3. **HBM-nCode** Provider of software and measurement systems for acquiring and processing data for fatigue analysis. Systems also work with finite-element analysis data systems. Uses stress-life, strain-life, multiaxial, weld analysis, and other methods.
4. **ProsigLtd** A producer of the DATS Fatigue Life and Analysis software along with hardware for measurement and testing of vibration and noise of vehicles and industrial equipment. From the home page, select *What we do* and then choose *Analysis Software*.
5. **Comsol Multiphysics** A producer of simulation software covering many types of physical phenomena including structural mechanics, thermal analysis, computational fluid mechanics, and others. An overview of the range of structural mechanics analysis methods is illustrated in the several videos under the menu *Video Gallery*.
6. **AutoFEM Software, LLP** A producer of finite-element analysis software linked with AutoCAD. Includes five modules: static, fatigue, frequency, buckling, and thermal analyses. Offers free AutoFEM Analysis Lite for users of AutoCAD with somewhat restricted capabilities.
7. **ANSYS** Structural analysis finite-element software that includes linear and nonlinear static and dynamic analysis of structures and mechanical devices. Also includes the nCode Design Life fatigue analysis software.
8. **MSC Software** Provider of desktop versions of many types of NASTRAN software for static and dynamic analysis of structures and moving devices, including fatigue analysis.

PROBLEMS

Stress Ratio

For each of Problems 1–9, draw a sketch of the variation of stress versus time, and compute the maximum stress, minimum stress, mean stress, alternating stress, and stress ratio, R . For Problems 6–9, analyze the beam at the place where the maximum stress would occur at any time in the cycle.

1. A link in a mechanism is made from a round bar having a diameter of 10.0 mm. It is subjected to a tensile force that varies from 3500 to 500 N in a cyclical fashion as the mechanism runs.
2. A strut in a space frame has a rectangular cross section of 10.0 mm by 30.0 mm. It sees a load that varies from a tensile force of 20.0 kN to a compressive force of 8.0 kN.
3. A link in a packaging machine mechanism has a square cross section of 0.40 in on a side. It is subjected to a load that varies from a tensile force of 860 lb to a compressive force of 120 lb.
4. A circular rod with a diameter of 3/8 in supports part of a storage shelf in a warehouse. As products are loaded and unloaded, the rod is subjected to a tensile load that varies from 1800 to 150 lb.
5. A part of a latch for a car door is made from a circular rod having a diameter of 3.0 mm. With each actuation, it sees a tensile force that varies from 780 to 360 N.
6. A part of the structure for a factory automation system is a beam that spans 30.0 in as shown in Figure P5–6. Loads are applied at two points, each 8.0 in from a support. The left load $F_1 = 1800$ lb remains constantly applied, while the right load $F_2 = 1800$ lb is applied and removed frequently as the machine cycles. Evaluate the beam at both B and C .

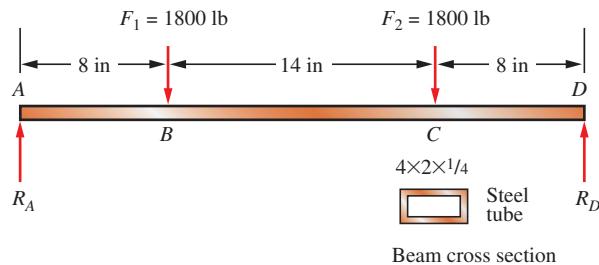


FIGURE P5–6 (Problems 6 and 23)

7. A cantilevered boom is part of an assembly machine and is made from an American Standard steel beam, S4×7.7. A tool with a weight of 500 lb moves continuously from the end of the 60-in beam to a point 10 in from the support.
8. A part of a bracket in the seat assembly of a bus is shown in Figure P5–8. The load varies from 1450 to 140 N as passengers enter and exit the bus.

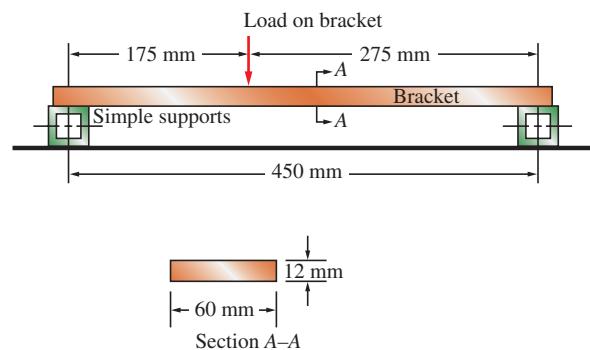


FIGURE P5–8 Seat bracket (Problems 8, 19, and 20)

9. A flat steel strip is used as a spring to maintain a force against part of a cabinet latch in a commercial printer, as shown in Figure P5–9. When the cabinet door is open, the spring is deflected by the latch pin by an amount $y_1 = 0.25$ mm. The pin causes the deflection to increase to 0.40 mm when the door is closed.

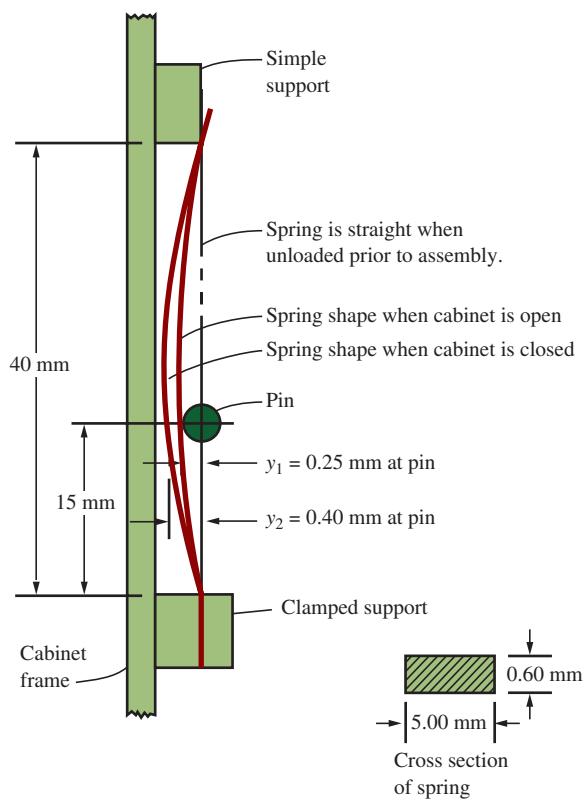


FIGURE P5–9 Cabinet latch spring (Problems 9 and 22)

Endurance Limit

For Problems 10–14, use the method outlined in Section 5–4 to determine the expected actual endurance limit for the material.

10. Compute the estimated endurance limit for a 0.75-in-diameter rod made from SAE 1040 cold-drawn steel. It is to be subjected to repeated and reversed bending stress. A reliability of 99% is desired.
11. Compute the estimated actual endurance limit for SAE 5160 OQT 1300 steel rod with a diameter of 20.0 mm. It is to be machined and subjected to repeated and reversed bending stress. A reliability of 99% is desired.
12. Compute the estimated actual endurance limit for SAE 4130 WQT 1300 steel bar with a rectangular cross section of 20.0 mm by 60 mm. It is to be machined and subjected to repeated and reversed bending stress. A reliability of 99% is desired.
13. Compute the estimated actual endurance limit for SAE 301 stainless steel rod, 1/2 hard, with a diameter of 0.60 in. It is to be machined and subjected to repeated axial tensile stress. A reliability of 99.9% is desired.
14. Compute the estimated actual endurance limit for a machined rectangular steel bar (ASTM A242) 3.5 in high by

0.375 in thick, subjected to repeated and reversed bending stress. A reliability of 99% is desired.

Design and Analysis

15. A link in a mechanism is to be subjected to a tensile force that varies from 3500 to 500 N in a cyclical fashion as the mechanism runs. It has been decided to use SAE 1040 cold-drawn steel. Complete the design of the link, specifying a suitable cross-sectional shape and dimensions.
16. A circular rod is to support part of a storage shelf in a warehouse. As products are loaded and unloaded, the rod is subjected to a tensile load that varies from 1800 to 150 lb. Specify a suitable shape, material, and dimensions for the rod.
17. A strut in a space frame sees a load that varies from a tensile force of 20.0 kN to a compressive force of 8.0 kN. Specify a suitable shape, material, and dimensions for the strut.
18. A part of a latch for a car door is to be made from a straight bar. With each actuation, it sees a tensile force that varies from 780 to 360 N. Small size is important. Complete the design, and specify a suitable shape, material, and dimensions for the rod.
19. A part of a bracket in the seat assembly of a bus is shown in Figure P5–8. The load varies from 1450 to 140 N as passengers enter and exit the bus. The bracket is made from SAE 1020 hot-rolled steel. Determine the resulting design factor.
20. For the bus seat bracket described in Problem 19 and shown in Figure P5–8, propose an alternate design for the bracket, different from that shown in the figure, to achieve a lighter design with a design factor of approximately 4.0.
21. A cantilevered boom is part of an assembly machine. A tool with a weight of 500 lb moves continuously from the end of the 60-in beam to a point 10 in from the support. Specify a suitable design for the boom, giving the material, the cross-sectional shape, and the dimensions.
22. A flat steel strip is used as a spring to maintain a force against part of a cabinet latch in a commercial printer as shown in Figure P5–9. When the cabinet door is open, the spring is deflected by the latch pin by an amount $y_1 = 0.25$ mm. The pin causes the deflection to increase to 0.40 mm when the door is closed. Specify a suitable material for the spring if it is made to the dimensions shown in the figure.
23. A part of the structure for a factory automation system is a beam that spans 30.0 in, as shown in Figure P5–6. Loads are applied at two points, each 8.0 in from a support. The left load $F_1 = 1800$ lb remains constantly applied, while the right load $F_2 = 1800$ lb is applied and removed frequently as the machine cycles. If the rectangular tube is made from ASTM A500 Grade B steel, is the proposed design satisfactory? Improve the design to achieve a lighter beam.
24. Figure P5–24 shows a hydraulic cylinder that pushes a heavy tool during the outward stroke, placing a compressive load of 400 lb in the piston rod. During the return stroke, the rod pulls on the tool with a force of 1500 lb. Compute the resulting design factor for the 0.60-in-diameter

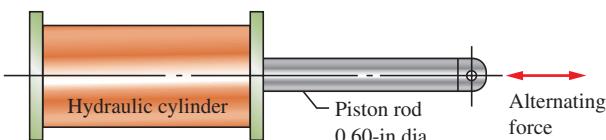


FIGURE P5-24 (Problem 24)

rod when subjected to this pattern of forces for many cycles. The material is SAE 4130 WQT 1300 steel. If the resulting design factor is much different from 4.0, determine the size of the rod that would produce $N = 4.0$.

25. The cast iron cylinder shown in Figure P5-25 carries only an axial compressive load of 75 000 lb. (The torque $T = 0$.) Compute the design factor if it is made from gray cast iron, Grade 40A, having a tensile ultimate strength of 40 ksi and a compressive ultimate strength of 140 ksi.
26. Repeat Problem 25, except using a tensile load with a magnitude of 12 000 lb.
27. Repeat Problem 25, except using a load that is a combination of an axial compressive load of 75 000 lb and a torsion of 20 000 lb · in.

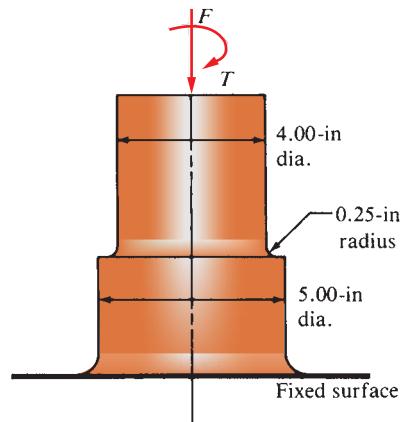


FIGURE P5-25 (Problems 25, 26, and 27)

28. The shaft shown in Figure P5-28 is supported by bearings at each end, which have bores of 20.0 mm. Design the shaft to carry the given load if it is steady and the shaft is stationary. Make the dimension a as large as possible while keeping the stress safe. Determine the required

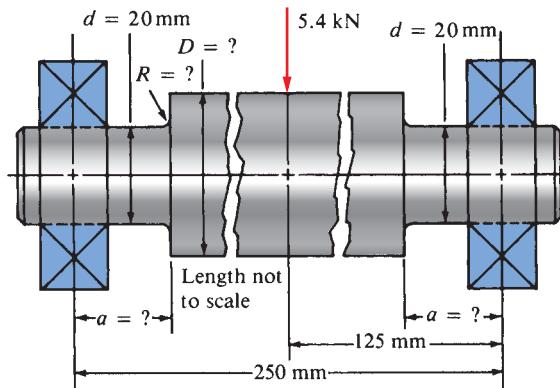


FIGURE P5-28 (Problems 28, 29, and 30)

diameter in the middle portion. The maximum fillet permissible is 2.0 mm. Use SAE 1137 cold-drawn steel. Use a design factor of 3.

29. Repeat Problem 28, except using a rotating shaft.
30. Repeat Problem 28, except using a shaft that is rotating and transmitting a torque of 150 N · m from the left bearing to the middle of the shaft. Also, there is a profile key-seat at the middle under the load.
31. Figure P5-31 shows a proposed design for a seat support. The vertical member is to be a standard hollow circular shape selected from either Appendices 15–17 (steel pipe) or 15–18 (mechanical tubing). The two loads are static and act simultaneously. The material is similar to SAE 1020 hot-rolled steel. Use a design factor of 3.

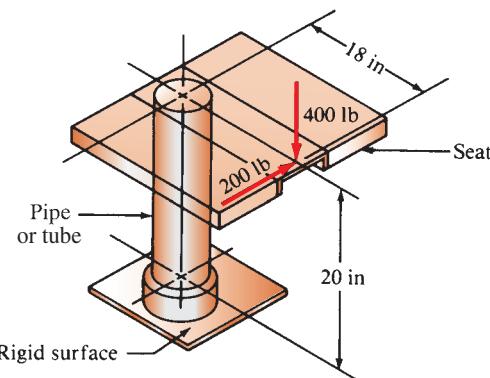


FIGURE P5-31 (Problem 31)

32. A torsion bar is to have a solid circular cross section. It is to carry a fluctuating torque from 30 to 65 N · m. Use SAE 4140 OQT 1000 for the bar, and determine the required diameter for a design factor of 2. Attachments produce a stress concentration of 2.5 near the ends of the bar.
33. Determine the required size for a square bar to be made from SAE 1213 cold-drawn steel. It carries a constant axial tensile load of 1500 lb and a bending load that varies from zero to a maximum of 800 lb at the center of the 48-in length of the bar. Use a design factor of 3.
34. Repeat Problem 33, but add a constant torsional moment of 1200 lb · in to the other loads.

In some of the following problems, you are asked to compute the design factor resulting from the design proposed for the given loading. Unless stated otherwise, assume that the element being analyzed has a machined surface. If the design factor is significantly different from $N = 3$, redesign the component to achieve approximately $N = 3$. (Some problems use figures found in Chapter 3.)

35. A tensile member in a machine structure is subjected to a steady load of 4.50 kN. It has a length of 750 mm and is made from a steel tube, SAE 1040 hot-rolled, having an outside diameter of 18 mm and an inside diameter of 12 mm. Compute the resulting design factor.
36. A steady tensile load of 5.00 kN is applied to a square bar, 12 mm on a side and having a length of 1.65 m. Compute the stress in the bar and the resulting design factor if it is made from (a) SAE 1020 hot-rolled steel; (b) SAE 8650 OQT 1000 steel; (c) ductile iron A536 (60-40-18);

- (d) aluminum alloy 6061-T6; (e) titanium alloy Ti-6Al-4V, annealed; (f) rigid PVC plastic; and (g) phenolic plastic.
37. An aluminum rod, made from alloy 6061-T6, is made in the form of a hollow square tube, 2.25 in outside with a wall thickness of 0.125 in. Its length is 16.0 in. It carries an axial compressive force of 12 600 lb. Compute the resulting design factor. Assume that the tube does not buckle.
38. Compute the design factor in the middle portion only of the rod AC in Figure P3-8 if the steady vertical force on the boom is 2500 lb. The rod is rectangular, 1.50 in by 3.50 in, and is made from SAE 1144 cold-drawn steel.
39. Compute the forces in the two angled rods in Figure P3-9 for a steady applied force, $F = 1500$ lb, if the angle θ is 45° . Then design the middle portion of each rod to be circular and made from SAE 1040 hot-rolled steel. Specify a suitable diameter.
40. Repeat Problem 39 if the angle θ is 15° .
41. A circular bar of SAE 4140 OQT 1000 steel steps from 12 mm to 10 mm with a fillet radius of 1.5 mm and carries a repeated/reversed 7500 N axial force. Compute the design factor.
42. Compute the torsional shear stress in a circular shaft having a diameter of 50 mm when subjected to a torque of 800 N·m. If the torque is completely reversed and repeated, compute the resulting design factor. The material is SAE 1040 WQT 1000.
43. If the torque in Problem 42 fluctuates from zero to the maximum of 800 N·m, compute the resulting design factor.
44. Compute the torsional shear stress in a circular shaft 0.40 in in diameter that is due to a steady torque of 88.0 lb·in. Specify a suitable aluminum alloy for the rod.
45. Compute the required diameter for a solid circular shaft if it is transmitting a maximum of 110 hp at a speed of 560 rpm. The torque varies from zero to the maximum. There are no other significant loads on the shaft. Use SAE 4130 WQT 700.
46. Specify a suitable material for a hollow shaft with an outside diameter of 40 mm and an inside diameter of 30 mm when transmitting 28 kilowatts (kW) of steady power at a speed of 45 radians per second (rad/s).
47. Repeat Problem 46 if the power fluctuates from 15 to 28 kW.
48. Figure P5-48 shows part of a support bar for a heavy machine, suspended on springs to soften applied loads. The tensile load on the bar varies from 12 500 lb to a minimum of 7500 lb. Rapid cycling for many million cycles is expected. The bar is made from SAE 6150 OQT 1300 steel. Compute the design factor for the bar in the vicinity of the hole.
49. Figure P3-61 shows a valve stem from an engine subjected to an axial tensile load applied by the valve spring. The force varies from 0.80 to 1.25 kN. Compute the resulting design factor at the fillet under the shoulder. The valve is made from SAE 8650 OQT 1300 steel.
50. A conveyor fixture shown in Figure P3-62 carries three heavy assemblies (1200 lb each). The fixture is machined from SAE 1144 OQT 900 steel. Compute the resulting design factor in the fixture, considering stress concentrations

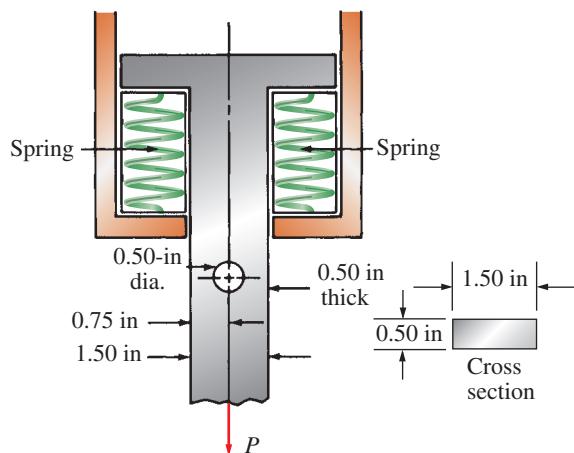


FIGURE P5-48 (Problem 48)

at the fillets and assuming that the load acts axially. The load will vary from zero to the maximum as the conveyor is loaded and unloaded.

51. For the flat plate in tension in Figure P3-63, compute the minimum resulting design factor, assuming that the holes are sufficiently far apart that their effects do not interact. The plate is machined from stainless steel, UNS S17400 in condition H1150. The load is repeated and varies from 4000 to 6200 lb.

For Problems 52–56, select a suitable material for the member, considering stress concentrations, for the given loading to produce a design factor of $N = 3$.

52. Use Figure P3-64. The load is steady. The material is to be some grade of gray cast iron, ASTM A48.
53. Use Figure P3-65. The load varies from 20.0 to 30.3 kN. The material is to be titanium.
54. Use Figure P3-66. The torque varies from zero to 2200 lb·in. The material is to be steel.
55. Use Figure P3-67. The bending moment is steady. The material is to be ductile iron, ASTM A536.
56. Use Figure P3-68. The bending moment is completely reversed. The material is to be stainless steel.
57. Figure P5-67 shows part of an automatic screwdriver designed to drive several million screws. The maximum torque required to drive a screw is 100 lb·in. Compute the design factor for the proposed design if the part is made from SAE 8740 OQT 1000.
58. The beam in Figure P5-58 carries two steady loads, $P = 750$ lb. Evaluate the design factor that would result if the beam were made from class 40A gray cast iron.
59. A tension link is subjected to a repeated, one-direction load of 3000 lb. Specify a suitable material if the link is to be steel and is to have a diameter of 0.50 in.
60. One member of an automatic transfer device in a factory must withstand a repeated tensile load of 800 lb and must not elongate more than 0.010 in in its 25.0-in length. Specify a suitable steel material and the dimensions for the rod if it has a square cross section.
61. Figure P5-61 shows two designs for a beam to carry a repeated central load of 1200 lb. Which design would have the highest design factor for a given material?

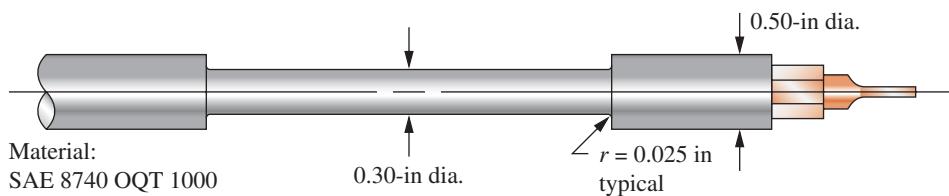


FIGURE P5-57 Screwdriver for Problem 57

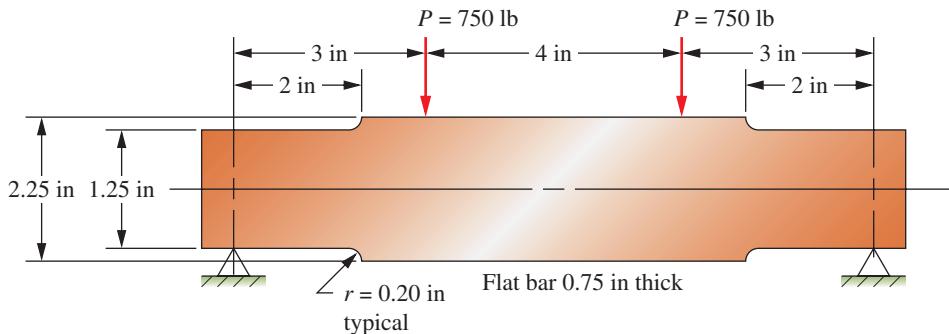


FIGURE P5-58 Beam for Problem 58

62. Refer Figure P5-61. By reducing the 8.0-in dimension, redesign the beam in Part (b) of the figure so that it has a design factor equal to or higher than that for the design in Part (a).
63. Refer Figure P5-61. Redesign the beam in Part (b) of the figure by first increasing the fillet radius to 0.40 in and then by reducing the 8.0-in dimension so that the new design has a design factor equal to or higher than that for the design in Part (a).
64. The part shown in Figure P5-64 is made from SAE 1040 HR steel. It is to be subjected to a repeated, one-direction force of 5000 lb applied through two 0.25-in-diameter

pins in the holes at each end. Compute the resulting design factor.

65. For the part described in Problem 64, make at least three improvements in the design that will significantly reduce the stress without increasing the weight. The dimensions marked \odot are critical and cannot be changed. After the redesign, specify a suitable material to achieve a design factor of at least 3.
66. The link shown in Figure P5-66 is subjected to a tensile force that varies from 3.0 to 24.8 kN. Evaluate the design factor if the link is made from SAE 1040 CD steel.

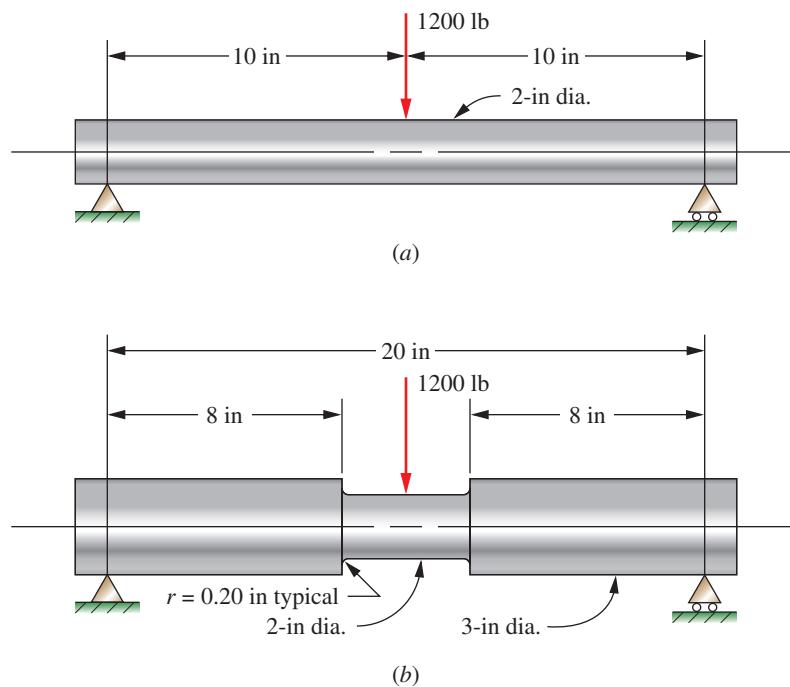


FIGURE P5-61 Beam for Problems 61, 62, and 63

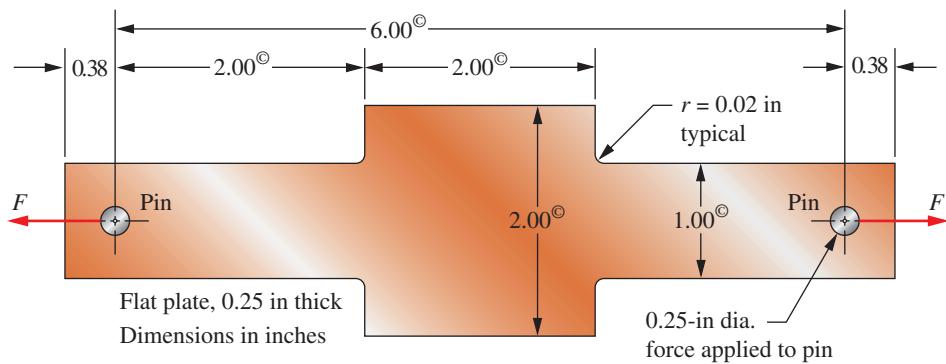


FIGURE P5-64 Beam for Problems 64 and 65

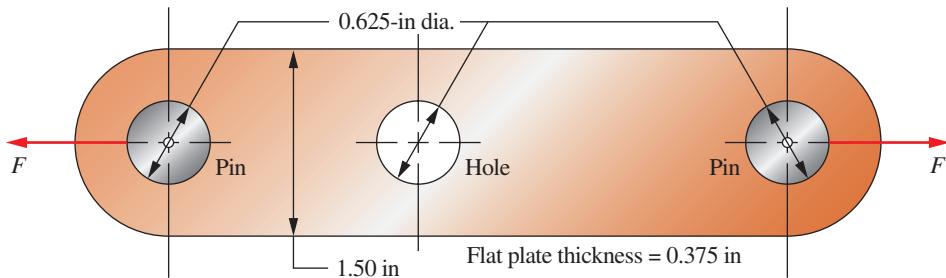


FIGURE P5-66 Link for Problem 66

67. The beam shown in Figure P5-67 carries a repeated, reversed load of 400 N applied at section C. Compute the resulting design factor if the beam is made from SAE 1340 OQT 1300.
68. For the beam described in Problem 67, change the steel's tempering temperature to achieve a design factor of at least 2.5.

69. The cantilever shown in Figure P5-69 carries a downward load that varies from 300 to 700 lb. Compute the resulting design factor if the bar is made from SAE 1050 HR steel.
70. For the cantilever described in Problem 69, increase the size of the fillet radius to improve the design factor to at least 3.0 if possible.

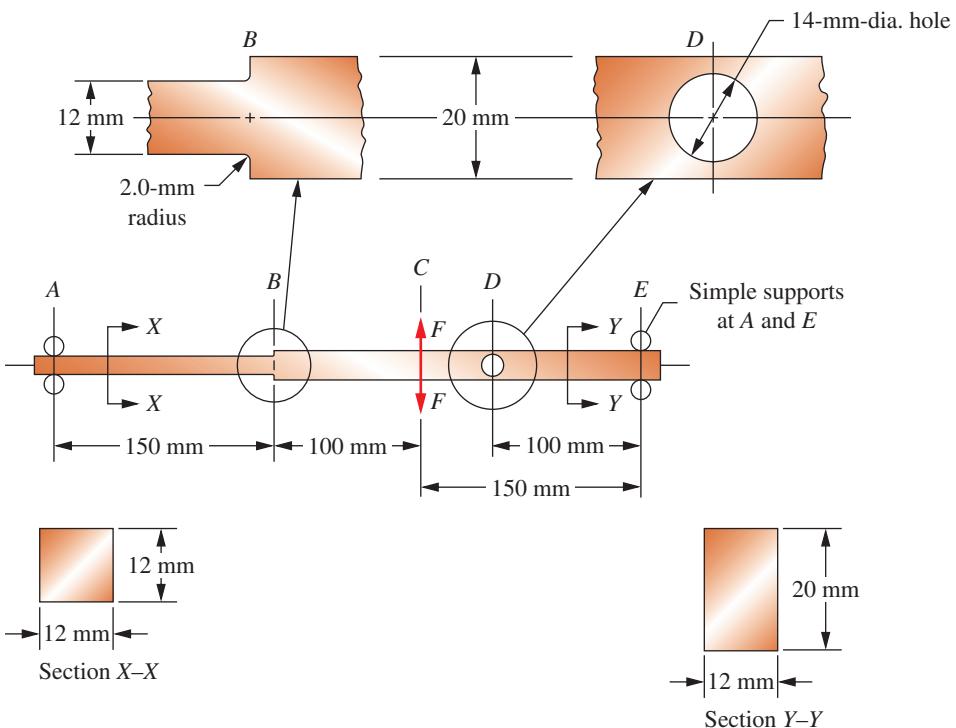


FIGURE P5-67 Beam for Problems 67 and 68


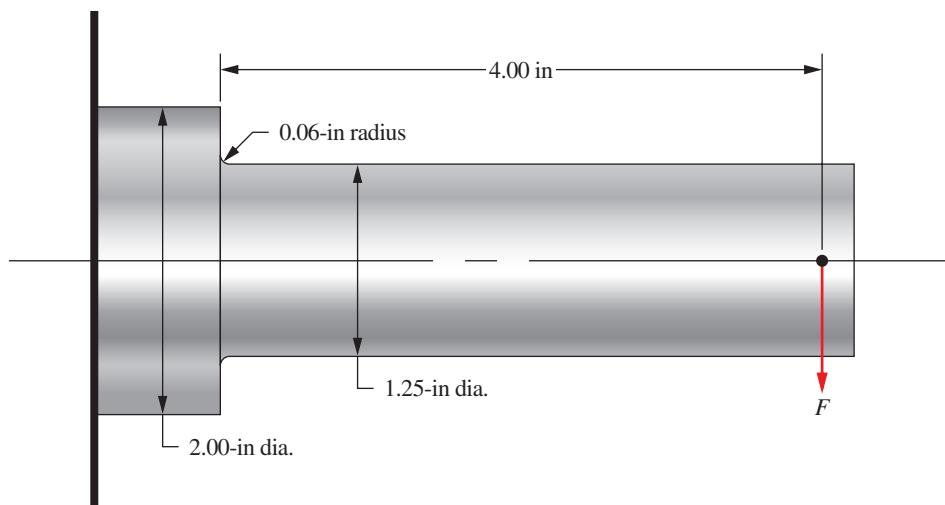



FIGURE P5–69 Cantilever for Problems 69, 70, and 71

71. For the cantilever described in Problem 69, specify a suitable material to achieve a design factor of at least 3.0 without changing the geometry of the beam.
72. Figure P5–72 shows a rotating shaft carrying a steady downward load of 100 lb at C. Specify a suitable material.
73. The stepped rod shown in Figure P5–73 is subjected to a direct tensile force that varies from 8500 to 16 000 lb. If the rod is made from SAE 1340 OQT 700 steel, compute the resulting design factor.
74. For the rod described in Problem 73, complete a redesign that will achieve a design factor of at least 3.0.

75. The beam shown in Figure P5–75 carries a repeated, reversed load of 800 lb alternately applied upward and downward. If the beam is made from SAE 1144 OQT 1100, specify the smallest acceptable fillet radius at A to ensure a design factor of 3.0.
76. For the beam described in Problem 75, design the section at B to achieve a minimum design factor of 3.0. Specify the shape, dimensions, and fillet radius where the smaller part joins the 2.00-by-2.00-in section.

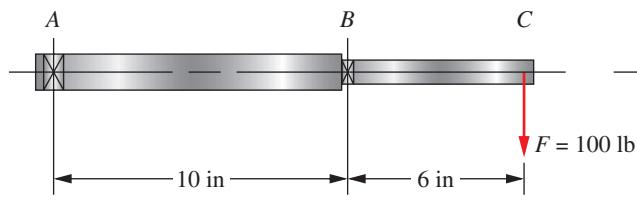

Simple support at A and B.

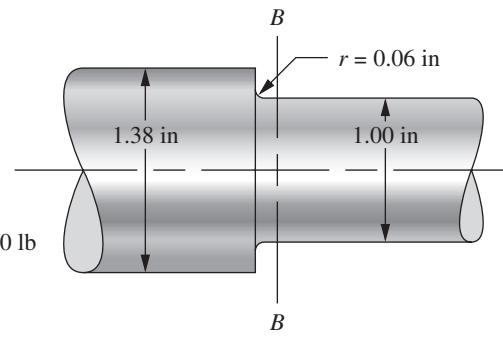

Detail near B

FIGURE P5–72 Shaft for Problem 72

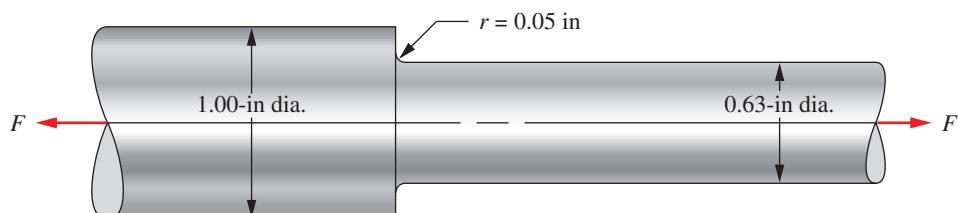


FIGURE P5–73 Rod for Problems 73 and 74

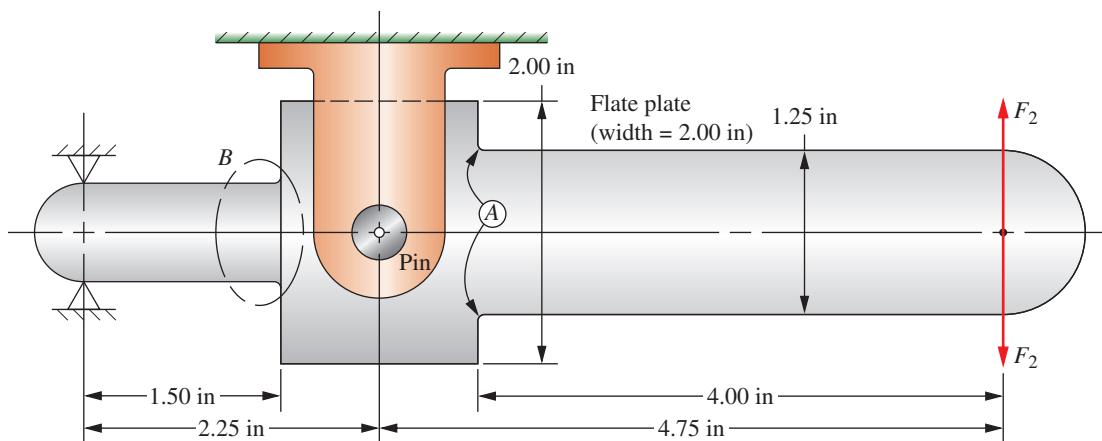


FIGURE P5-75 Beam for Problems 75 and 76

Design Problems

For each of the following problems, complete the requested design to achieve a minimum design factor of 3.0. Specify the shape, the dimensions, and the material for the part to be designed. Work toward an efficient design that will have a low weight.

77. The link shown in Figure P5-77 carries a load of 3000 N that is applied and released many times. The link is machined from a square bar, 12.0 mm on a side, from SAE 1144 OQT 1100 steel. The ends must remain 12.0-mm square to facilitate the connection to mating parts. It is desired to reduce the size of the middle part of the link to reduce weight. Complete the design.

78. Complete the design of the beam shown in Figure P5-78 to carry a large hydraulic motor. The beam is attached to the two side rails of the frame of a truck. Because of the vertical accelerations experienced by the truck, the load on the beam varies from 1200 lb upward to 5000 lb downward. One-half of the load is applied to the beam by each foot of the motor.

79. A tensile member in a truss frame is subjected to a load that varies from 0 to 6500 lb as a traveling crane moves across the frame. Design the tensile member.

80. A hanger for a conveyor system extends outward from two supports, as shown in Figure P5-80. The load at

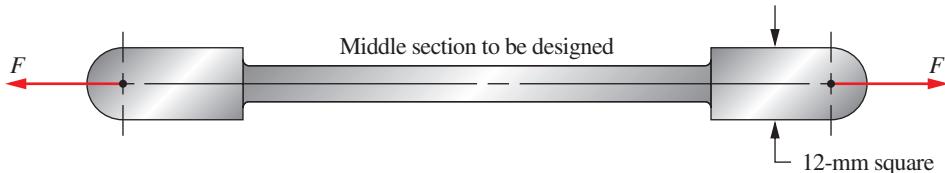


FIGURE P5-77 Link for Problem 77

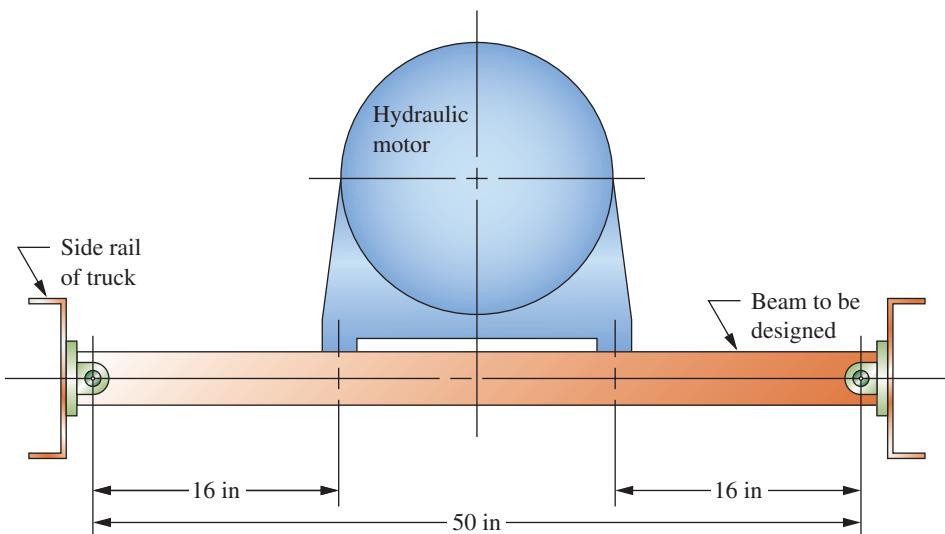


FIGURE P5-78 Beam for Problem 78

the right end varies from 600 to 3800 lb. Design the hanger.

81. Figure P5–81 shows a yoke suspended beneath a crane beam by two rods. Design the yoke if the loads are applied and released many times.

82. For the system shown in Figure P5–81, design the two vertical rods if the loads are applied and released many times.
 83. Design the connections between the rods and the yoke and the crane beam shown in Figure P5–81.

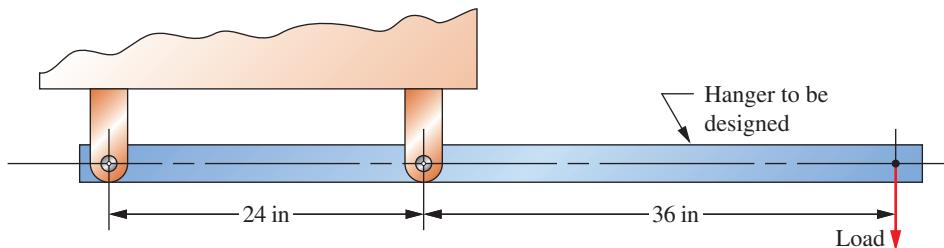


FIGURE P5–80 Hanger for the conveyor system for Problem 80

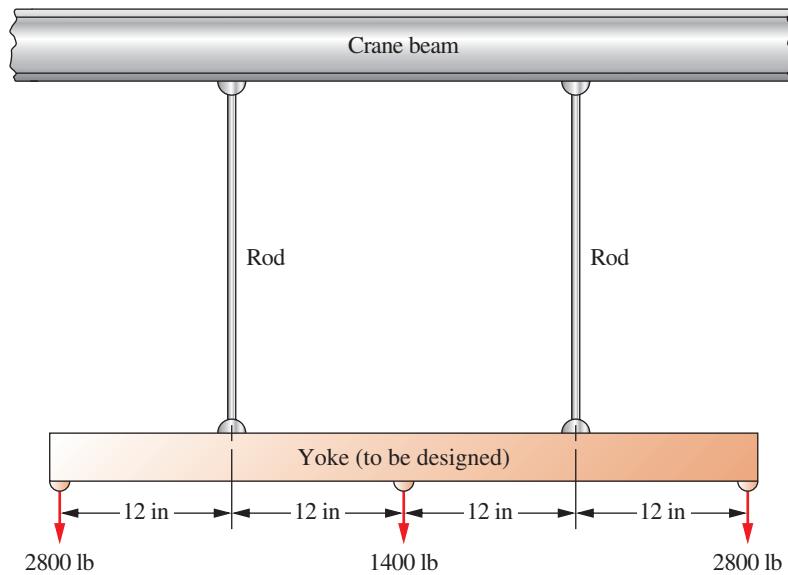


FIGURE P5–81 Yoke and rods for Problems 81, 82, and 83

COLUMNS

The Big Picture

You Are the Designer

- 6–1 Objectives of This Chapter
- 6–2 Properties of the Cross Section of a Column
- 6–3 End Fixity and Effective Length
- 6–4 Slenderness Ratio
- 6–5 Long Column Analysis: The Euler Formula
- 6–6 Transition Slenderness Ratio
- 6–7 Short Column Analysis: The J. B. Johnson Formula
- 6–8 Column Analysis Spreadsheet
- 6–9 Efficient Shapes for Column Cross Sections
- 6–10 The Design of Columns
- 6–11 Crooked Columns
- 6–12 Eccentrically Loaded Columns

THE BIG PICTURE

Columns

Discussion Map

- A column is a long, slender member that carries an axial compressive load and that fails due to buckling rather than due to failure of the material of the column.

Discover

Find at least 10 examples of columns. Describe them and how they are loaded, and discuss them with your colleagues.

Try to find at least one column that you can load conveniently by hand, and observe the buckling phenomenon.

Discuss with your colleagues the variables that seem to affect how a column fails and how much load it can carry before failing.

This chapter will help you acquire some of the analytical tools necessary to design and analyze columns.

A *column* is a structural member that carries an axial compressive load and that tends to fail by elastic instability, or buckling, rather than by crushing of material. *Elastic instability* is the condition of failure in which the shape of the column is insufficiently rigid to hold it straight under load. At the point of buckling, a radical deflection of the axis of the column occurs suddenly. Then, if the load is not reduced, the column will collapse. Obviously this kind of catastrophic failure must be avoided in structures and machine elements.

Columns are ideally straight and relatively long and slender. If a compression member is so short that

it does not tend to buckle, failure analysis must use the methods presented in Chapter 5. This chapter presents several methods of analyzing and designing columns to ensure safety under a variety of loading conditions.

Take a few minutes to visualize examples of column buckling. Find any object that appears to be long and slender—for example, a meter stick, a plastic ruler, a long wooden dowel with a small diameter, a drinking straw, or a thin metal or plastic rod. Carefully apply a downward load on your column while resting the bottom on a desk or the floor. Try to make sure that it does

not slide. Gradually increase the load, and observe the behavior of the column until it begins to bend noticeably in the middle. This large deformation is called *buckling*. Then hold that level of load. Don't increase it much beyond that level, or the column will likely break!

Now release the load; the column should return to its original shape. The material should not have broken or yielded. But wouldn't you have considered the column to have failed at the point of buckling? Wouldn't it be important to keep the applied load well below the load that caused the buckling to be initiated?

Now look around you. Think of things you are familiar with, or take time to go out and find other examples of columns. Remember, look for relatively long, slender, load-carrying members subjected to compressive loads. Consider parts of furniture, buildings, cars, trucks, toys, play structures, industrial machinery, and construction machinery. Try to find at least 10 examples. Describe their appearance: the material from which they are made, the way they are supported, and the way they are loaded. Do this activity in the classroom or with colleagues; bring the descriptions to class next session for discussion.

Notice that you were asked to find *relatively long, slender*, load-carrying members. How will you know when a member is long and slender? At this point, you should just use your judgment. If the column is available and you are strong enough to load

it to buckling, go ahead and try it. Later in this chapter, we will quantify what the terms *long* and *slender* mean.

If the columns you have seen did not actually collapse, what property of the material is highly related to the phenomenon of buckling failure? Remember that the failure was described as *elastic instability*. Then it should seem that the *modulus of elasticity* of the material is a key property, and it is. Review the definition of this property from Chapter 1, and look up representative values in the tables of material properties in Appendices 3–13.

Also note that we specified that the columns are to be initially straight and that loads are to be applied axially. What if these conditions are not met? What if the column is a little crooked before loading? Do you think that it would carry as much compressive loading as one that was straight? Why or why not? What if the column is loaded *eccentrically*, that is, the load is directed off-center, away from the centroidal axis of the column? How will that affect the load-carrying ability? How does the manner of supporting the ends of the column affect its load-carrying ability? What standards exist that guide designers when dealing with columns?

These and other questions will be addressed in this chapter. Any time you are involved in a design in which a compressive load is applied, you should think about analyzing it as a column. The following You Are the Designer situation is a good example of such a machine design problem.

6-1 OBJECTIVES OF THIS CHAPTER

After completing this chapter, you will be able to:

1. Recognize that any relatively long, slender compression member must be analyzed as a column to prevent buckling.
2. Specify efficient shapes for the cross section of columns.
3. Compute the *radius of gyration* of a column cross section.
4. Specify a suitable value for the *end-fixity factor*, K , and determine the *effective length* of a column.
5. Compute the *slenderness ratio* for columns.
6. Select the proper method of analysis or design for a column based on the manner of loading, the type

of support, and the magnitude of the slenderness ratio.

7. Determine whether a column is *long* or *short* based on the value of the slenderness ratio in comparison with the *column constant*.
8. Use the *Euler formula* for the analysis and design of long columns.
9. Use the *J. B. Johnson formula* for the analysis and design of short columns.
10. Analyze crooked columns to determine the allowable load.
11. Analyze columns in which the load is applied with a modest amount of eccentricity to determine the maximum predicted stress and the maximum amount of deflection of the centerline of such columns under load.

YOU ARE THE DESIGNER

You are a member of a team that is designing a commercial compactor to reduce the volume of cardboard and paper waste so that the waste can be transported easily to a processing plant. Figure 6–1 is a sketch of the compaction ram that is driven by a hydraulic cylinder under several thousand pounds of force. The connecting rod between the hydraulic cylinder and the ram must

be designed as a column because it is a relatively long, slender compression member. What shape should the cross section of the connecting rod be? From what material should it be made? How is it to be connected to the ram and to the hydraulic cylinder? What are the final dimensions of the rod to be? You, the designer, must specify all of these factors. ■

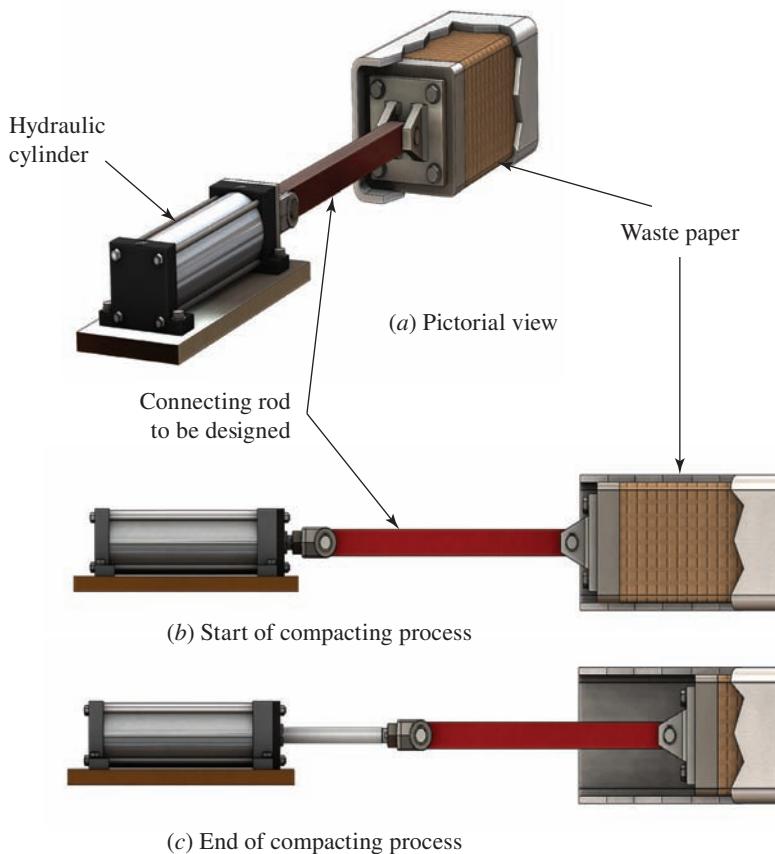


FIGURE 6–1 Waste paper compactor

6–2 PROPERTIES OF THE CROSS SECTION OF A COLUMN

The tendency for a column to buckle is dependent on the shape and the dimensions of its cross section, along with its length and the manner of attachment to adjacent members or supports. Cross-sectional properties that are important are as follows:

1. The cross-sectional area, A .
2. The area moment of inertia of the cross section, I , with respect to the axis about which the value of I is minimum.
3. The least value of the radius of gyration of the cross section, r .

The radius of gyration is computed from

▷ **Radius of Gyration**

$$r = \sqrt{I/A} \quad (6-1)$$

A column tends to buckle about the axis for which the radius of gyration and the area moment of inertia are minimum. Figure 6–2 shows a sketch of a column that has a rectangular cross section. The expected buckling axis is Y-Y because both I and r are much smaller for that axis than for the X-X axis. You can demonstrate this phenomenon by loading a common ruler or meter stick with an axial load of sufficient magnitude to cause buckling. See Appendix 1 for formulas for I and r for common shapes. See Appendix 15 for structural shapes.

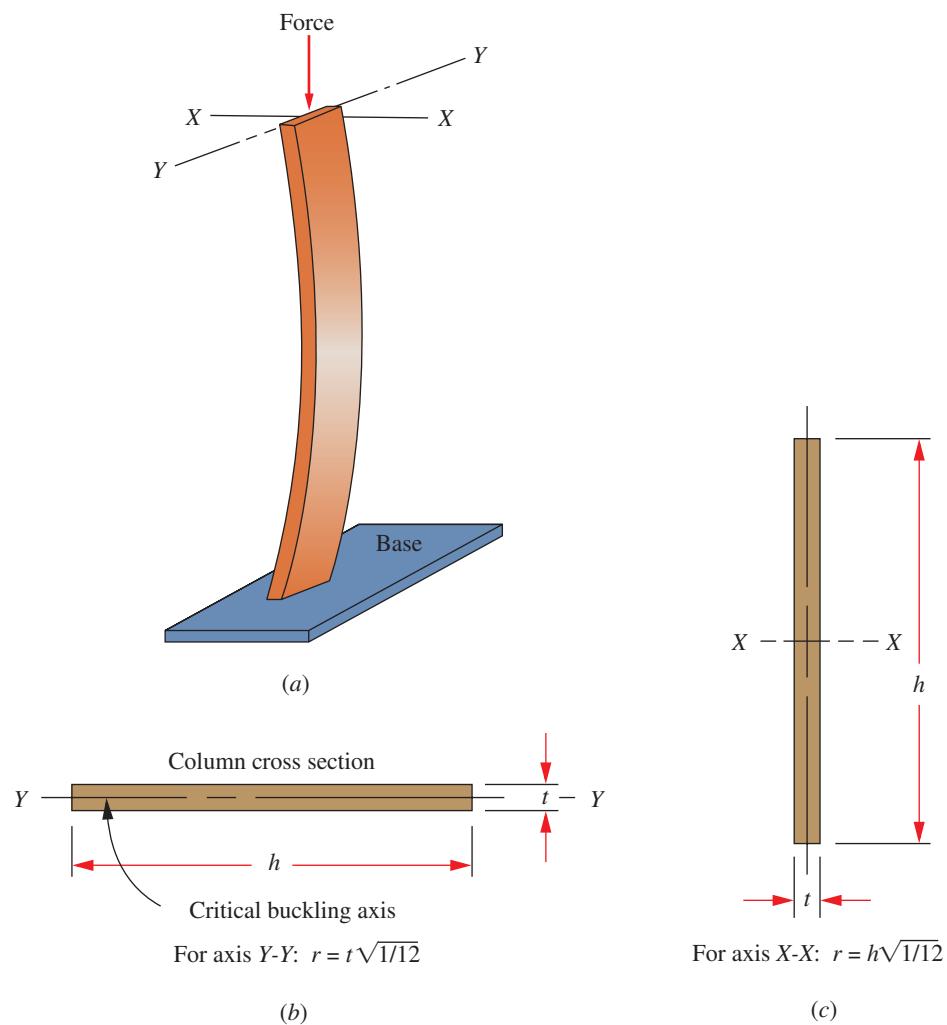


FIGURE 6-2 Buckling of a thin, rectangular column. (a) General appearance of the buckled column. (b) Radius of gyration for $Y-Y$ axis. (c) Radius of gyration for $X-X$ axis

6-3 END FIXITY AND EFFECTIVE LENGTH

The term *end fixity* refers to the manner in which the ends of a column are supported. The most important variable is the amount of restraint offered at the ends of the column to the tendency for rotation. Three forms of end restraint are *pinned*, *fixed*, and *free*.

A *pinned-end* column is guided so that the end cannot sway from side to side, but it offers no resistance to rotation of the end. The best approximation of the pinned end would be a frictionless ball-and-socket joint. A cylindrical pin joint offers little resistance about one axis, but it may restrain the axis perpendicular to the pin axis.

A *fixed end* is one that is held against rotation at the support. An example is a cylindrical column inserted into a tight-fitting sleeve that itself is rigidly supported. The sleeve prohibits any tendency for the fixed end of the column to rotate. A column end securely welded to a rigid base plate is also a good approximation of a fixed-end column.

The *free end* can be illustrated by the example of a flagpole. The top end of a flagpole is unrestrained and unguided, the worst case for column loading.

The manner of support of both ends of the column affects the *effective length* of the column, defined as

◊ Effective Length

$$L_e = KL \quad (6-2)$$

where L = actual length of the column between supports

K = constant dependent on the end fixity, as illustrated in Figure 6-3

The K values are related to the shape of the buckled column. With the pinned-pinned end condition as the base case, it can be observed from the deflected shape in Figure 6-3 that the fixed-fixed, fixed-free, and fixed-pinned columns have effective lengths of $0.5L$, $2.0L$, and $0.7L$, respectively.

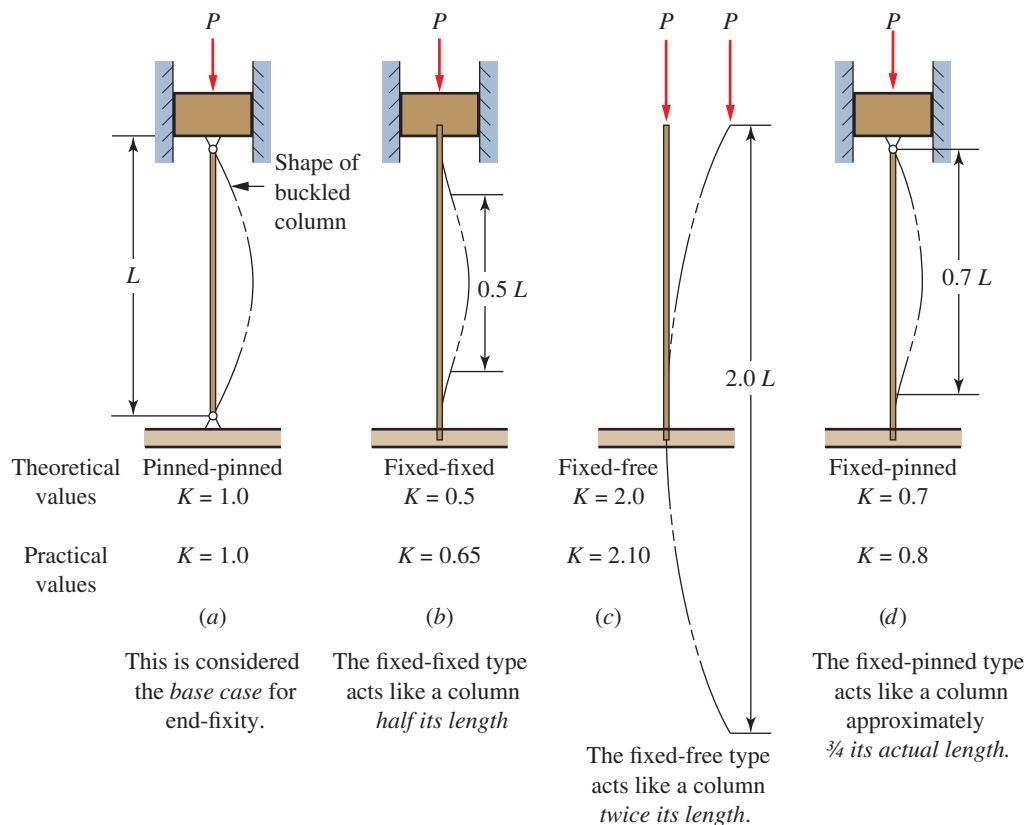


FIGURE 6–3 Values of K for effective length, $L_e = KL$, for different end connections

The first values given for K are theoretical values based on the shape of the deflected column. The second values take into account the expected fixity of the column ends in real, practical structures. It is particularly difficult to achieve a true fixed-end column because of the lack of complete rigidity of the support or the means of attachment. Therefore, the higher value of K is recommended.

6–4 SLENDERNESS RATIO

The *slenderness ratio* is the ratio of the effective length of the column to its least radius of gyration. That is,

▫ Slenderness Ratio, S_r

$$S_r = L_e/r_{\min} = KL/r_{\min} \quad (6-3)$$

We will use the slenderness ratio to aid in the selection of the method of performing the analysis of straight, centrally loaded columns.

6–5 LONG COLUMN ANALYSIS: THE EULER FORMULA

Analysis of a column employs the Euler formula (see Reference 4):

▫ Euler Formula for Long Columns

$$P_{cr} = \frac{\pi^2 EI}{L_e^2} \quad (6-4)$$

The equation gives the critical load, P_{cr} , at which the column would begin to buckle. Notice that the buckling load is dependent only on the geometry (length and cross section) of the column and the stiffness of the material represented by the modulus of elasticity. The strength of the material is not involved at all. For these reasons, it is often of no benefit to specify a high-strength material in a long column application. A lower-strength material having the same stiffness, E , would perform as well.

In a design problem, the objective is to specify a size and a shape of a column cross section to carry a certain load. From Equation (6–4), the area moment of inertia for the required cross section can be easily determined.

An alternative form of the Euler formula is often desirable. Note that, from Equation (6–1),

$$r = \sqrt{\frac{I}{A}} \Rightarrow I = r^2 A \quad (6-5)$$

Substituting (6–5) into (6–4):

$$P_{cr} = \frac{\pi^2 EA}{(L_e/r)^2} = \frac{\pi^2 EA}{S_r^2} \quad (6-6)$$

Design Factor and Allowable Load

Because failure is predicted to occur at a limiting load, rather than a stress, the concept of a design factor is applied differently than it is for most other load-carrying members. Rather than applying the design factor to the yield strength or the ultimate strength of the material, we apply it to the critical load, from Equation (6–4) or (6–6).

For typical machine design applications, a design factor of 3 is used. For stationary columns with well-known loads and end fixity, a lower factor can be used, such as 2.0.

A factor of 1.92 is used in some construction applications.

Conversely, for very long columns, where there is some uncertainty about the loads or the end fixity, or where special dangers are presented, larger factors are advised. (See References 1 and 2.)

In summary, the objective of column analysis and design is to ensure that the load applied to a column is safe, well below the critical buckling load. The following definitions of terms must be understood:

P_{cr} = critical buckling load

P_a = allowable load

P = actual applied load

N = design factor

Then

Allowable Load

$$P_a = P_{cr}/N$$

The actual applied load, P , must be less than P_a .

6-6 TRANSITION SLENDERNESS RATIO

The Euler formula for critical load prediction, Equation (6–6), can be expressed as:

$$\frac{P_{cr}}{A} = \frac{\pi^2 E}{S_r^2} \quad (6-7)$$

Plotting stress versus slenderness ratio, P_{cr}/A vs. S_r , the Euler formula is an inverse square function as shown in Figure 6–4. It is observed that when a column is “short” (a low slenderness value), Euler formula gives inaccurate predictions with unrealistic high stresses. As such, the J. B. Johnson formula, a parabolic function also shown in Figure 6–4, is used to determine the critical load for short columns. See Section 6–7 for the definition of the J. B. Johnson formula.

The choice of Euler or Johnson formula depends on the value of the slenderness ratio of the column being analyzed in relation to the transition slenderness ratio, S_{rT} , or column constant, C_c . For a given column with the slenderness ratio greater than the column constant, the column is considered “long” and Euler formula should be used. If the slenderness ratio is less than column constant, the column is considered “short” and Johnson formula should be used to predict the critical load.

The Euler–Johnson transition is set at the stress equal to half of the yield strength, s_y , of the material:

$$\frac{s_y}{2} = \frac{\pi^2 E}{S_{rT}^2} \Rightarrow C_c = S_{rT} = \sqrt{\frac{2\pi^2 E}{s_y}} \quad (6-8)$$

The value of the column constant, or transition slenderness ratio, is dependent on the material properties of modulus of elasticity and yield strength. For any

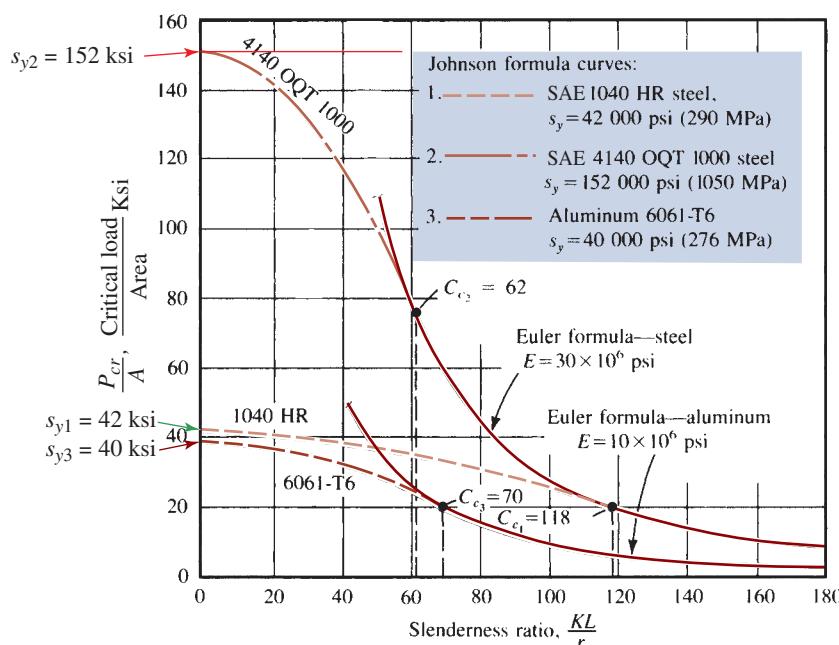


FIGURE 6–4 Euler–Johnson buckling curves

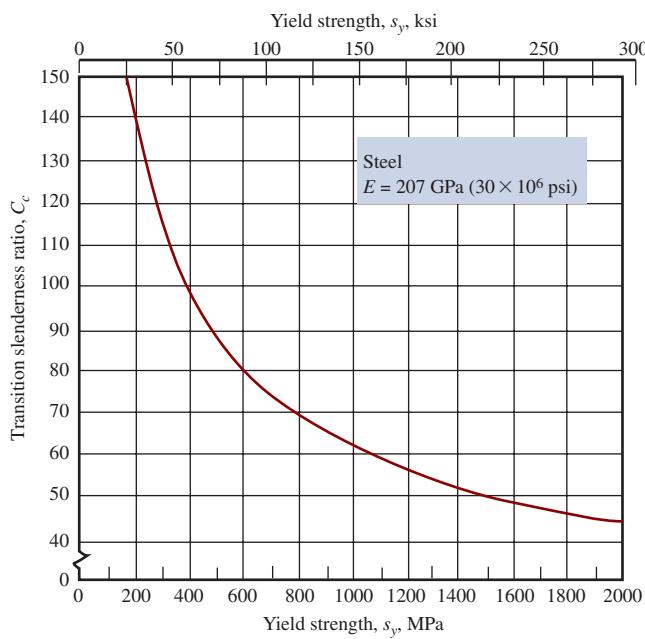


FIGURE 6–5 Transition slenderness ratio C_c vs. yield strength for steel

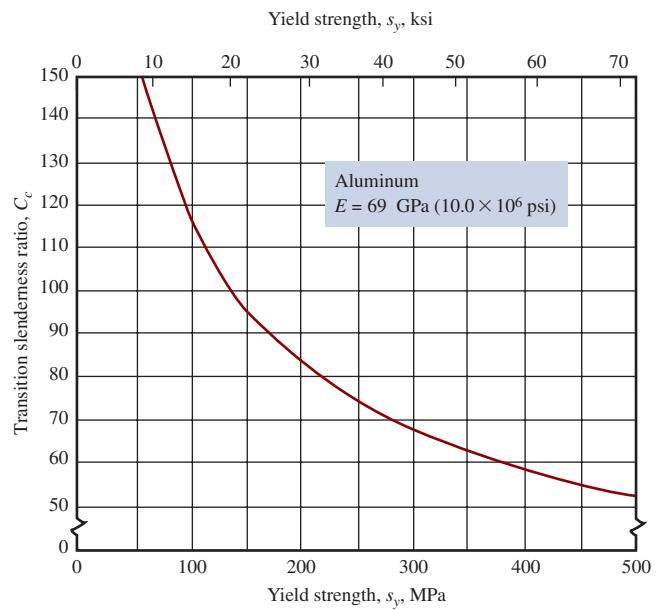


FIGURE 6–6 Transition slenderness ratio C_c vs. yield strength for aluminum

given class of material, for example, steel, the modulus of elasticity is nearly constant. Thus, the value of C_c varies inversely as the square root of the yield strength. Figures 6–5 and 6–6 show the resulting values for steel and aluminum, respectively, for the range of yield strengths expected for each material. The Figures show that the value of C_c decreases as the yield strength increases.

6–7 SHORT COLUMN ANALYSIS: THE J. B. JOHNSON FORMULA

As stated, when the actual slenderness ratio, S_r , for a column is less than the transition value, C_c , then the column is short, and the J. B. Johnson formula should be used. Use of the Euler formula in this range would predict a critical load greater than it really is.

The J. B. Johnson formula is written as follows:

◇ J. B. Johnson Formula for Short Columns

$$P_{cr} = As_y \left[1 - \frac{s_y S_r^2}{4\pi^2 E} \right] \quad (6-9)$$

Notice that in Figure 6–4 the Johnson formula curves becomes tangent to the result of the Euler formula at the transition slenderness ratio, the limit of its application. Also, at very low values for the slenderness ratio, the second term of the equation approaches zero, and the critical load approaches the yield load. Curves for three

different materials are included in the figure to illustrate the effect of E and s_y on the critical load and the transition slenderness ratio.

The critical load for a short column is affected by the strength of the material in addition to its stiffness, E . As shown in the preceding section, strength is not a factor for a long column when the Euler formula is used. Note that if a column is to be used as part of a building structure, the methods described in References 1 or 2 must be used.

In summary, a procedure for analyzing straight, centrally loaded columns is illustrated below, and Figure 6–7 is a logical flowchart for this procedure.

PROCEDURE FOR ANALYZING STRAIGHT, CENTRALLY LOADED COLUMNS ▼

1. For the given column, compute its actual slenderness ratio.
2. Compute the value of C_c .
3. Compare C_c with KL/r . Because C_c represents the value of the slenderness ratio that separates a long column from a short one, the result of the comparison indicates which type of analysis should be used.
4. If the actual KL/r is greater than C_c , the column is *long*. Use Euler's equation, as described in Section 6–5.
5. If KL/r is less than C_c , the column is *short*. Use the J. B. Johnson formula, described in Section 6–7.

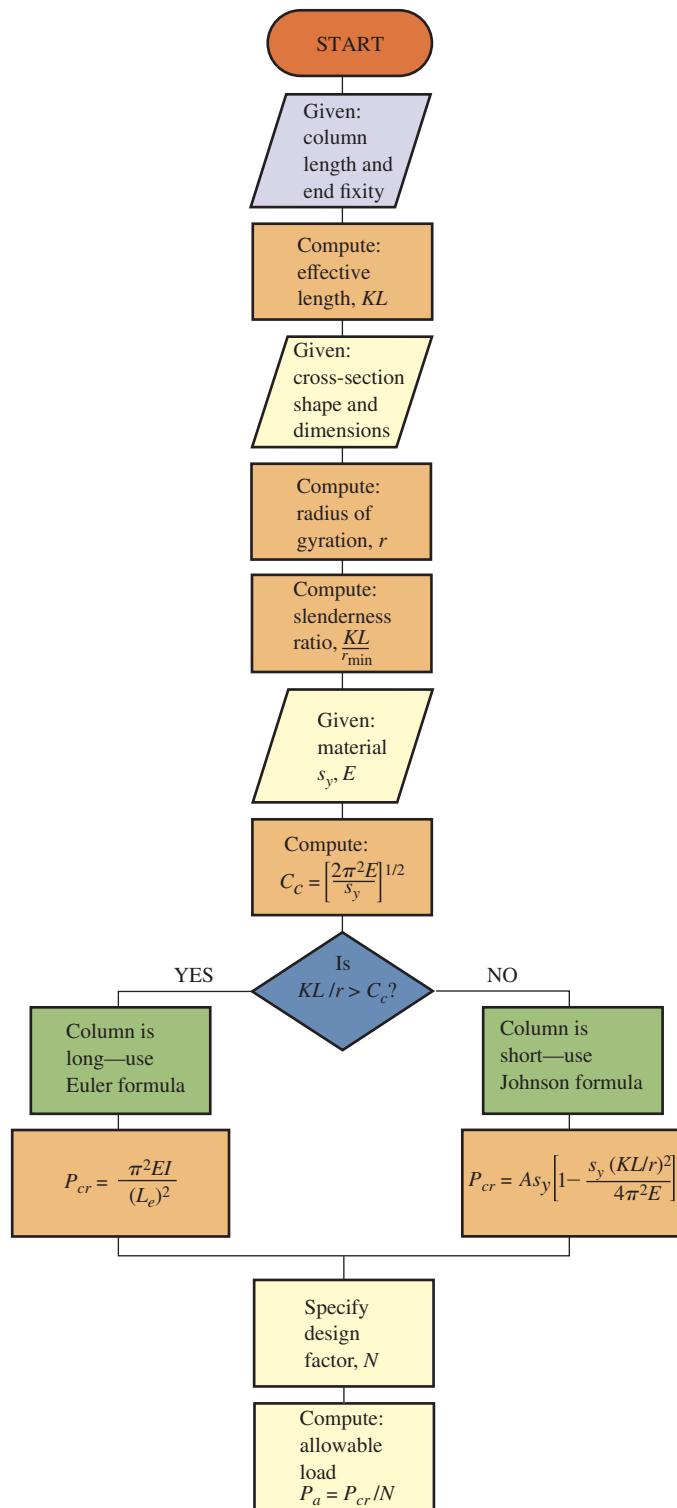


FIGURE 6–7 Analysis of a straight, centrally loaded column

**Example Problem
6–1**

A column has a solid circular cross section, 1.25 inches in diameter; it has a length of 4.50 ft and is pinned at both ends. If it is made from SAE 1020 cold-drawn steel, what would be a safe column loading?

Solution

Objective Specify a safe loading for the column.

Given

Solid circular cross section: diameter = $D = 1.25$ in; length = $L = 4.50$ ft.
Both ends of the column are pinned.
Material: SAE 1020 cold-drawn steel.

Analysis Use the procedure in Figure 6–7.

Results **Step 1.** For the pinned-end column, the end-fixity factor is $K = 1.0$. The effective length equals the actual length; $KL = 4.50 \text{ ft} = 54.0 \text{ in} = L_e$.

Step 2. From Appendix 1, for a solid round section,

$$r = D/4 = 1.25/4 = 0.3125 \text{ in}$$

Step 3. Compute the slenderness ratio:

$$\frac{KL}{r} = \frac{1.0(54)}{0.3125} = 173$$

Step 4. Compute the column constant from Equation (6–8). For SAE 1020 cold-drawn steel, the yield strength is 51 000 psi, and the modulus of elasticity is 30×10^6 psi. Then

$$C_c = \sqrt{\frac{2\pi^2 E}{s_y}} = \sqrt{\frac{2\pi^2(30 \times 10^6)}{51000}} = 108$$

Step 5. Because KL/r is greater than C_c , the column is long, and Euler's formula should be used. The area is

$$I = \frac{\pi D^4}{64} = \frac{\pi(1.25)^4}{64} = 0.1198 \text{ in}^4$$

Then the critical load is

$$P_{cr} = \frac{\pi^2 EI}{(L_e)^2} = \frac{\pi^2(30 \times 10^6)(0.1198)}{(54)^2} = 12169 \text{ lb}$$

At this load, the column should just begin to buckle. A safe load would be a reduced value, found by applying the design factor to the critical load. Let's use $N = 3$ to compute the *allowable load*, $P_a = P_{cr}/N$:

$$P_a = (12169 \text{ lb})/3 = 4056 \text{ lb}$$

Comment The safe load on the column is 4056 lb.

Example Problem

6–2

Determine the critical load on a steel column having a rectangular cross section, 12 mm by 18 mm, and a length of 280 mm. It is proposed to use SAE 1040 hot-rolled steel. The lower end of the column is inserted into a close-fitting socket and is welded securely. The upper end is pinned (see Figure 6–8).

Solution

Objective Compute the critical load for the column.

Given Solid rectangular cross section: $B = 12 \text{ mm}$; $H = 18 \text{ mm}$; $L = 280 \text{ mm}$.

Cross sectional area = $A = BH = (12)(18) = 216 \text{ mm}^2$

The bottom of column is fixed; the top is pinned (see Figure 6–8).

Material: SAE 1040 hot-rolled steel.

Analysis Use the procedure in Figure 6–7.

Results **Step 1.** Compute the slenderness ratio. The radius of gyration must be computed about the axis that gives the least value. This is the $Y-Y$ axis, for which

$$r = \frac{B}{\sqrt{12}} = \frac{12 \text{ mm}}{\sqrt{12}} = 3.46 \text{ mm}$$

The column has a fixed-pinned end fixity for which $K = 0.8$. Then

$$KL/r = [(0.8)(280)]/3.46 = 64.7$$

Step 2. Compute the transition slenderness ratio. For the SAE 1040 hot-rolled steel, $E = 207 \text{ GPa}$ and $s_y = 290 \text{ MPa}$. Then, from Equation (6–8),

$$C_c = \sqrt{\frac{2\pi^2(207 \times 10^9 \text{ Pa})}{290 \times 10^6 \text{ Pa}}} = 119$$

Step 3. Then $KL/r < C_c$; thus the column is short. Use the J. B. Johnson formula (Eqn. 6–9) to compute the critical load.

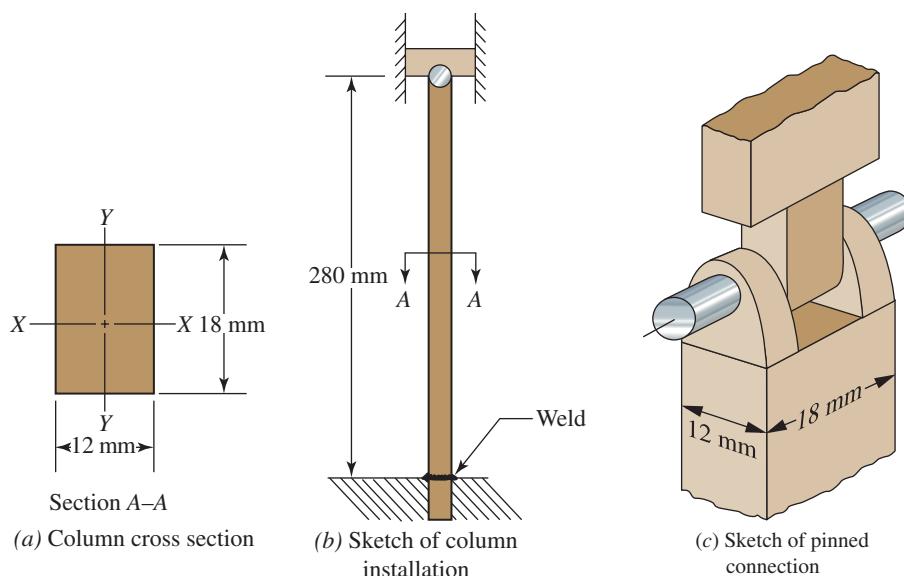


FIGURE 6-8 Steel column

$$P_{cr} = As_y \left[1 - \frac{s_y(KL/r)^2}{4\pi^2 E} \right]$$

$$P_{cr} = (216 \text{ mm}^2)(290 \text{ N/mm}^2) \left[1 - \frac{(290 \times 10^6 \text{ Pa})(64.7)^2}{4\pi^2(207 \times 10^9 \text{ Pa})} \right]$$

$$P_{cr} = 53.3 \times 10^3 \text{ N} = 53.3 \text{ kN}$$

Comments This is the critical buckling load. We would have to apply a design factor to determine the allowable load. Specifying $N = 3$ results in $P_a = 17.8 \text{ kN}$.

6-8 COLUMN ANALYSIS SPREADSHEET

Completing the process described in Figure 6-4 using a calculator, pencil, and paper is tedious. A spreadsheet automates the calculations after you have entered the pertinent data for the particular column to be analyzed. Figure 6-9 shows the output of a spreadsheet used to solve Example Problem 6-1. The layout of the spreadsheet could be done in many ways, and you are encouraged to develop your own style. The following comments describe the features of the given spreadsheet:

- At the top of the sheet, instructions to the user are given for entering data and for units. This sheet is for U.S. Customary units only. A different sheet would be used if SI metric data were to be used. (See Figure 6-10, which gives the solution for Example Problem 6-2.)
- On the left side of the sheet are listed the various data that must be provided by the user to run the calculations. On the right are listed the output values. Formulas for computing L_e , C_c , KL/r , and allowable load are written directly into the cell where the computed values show. The output data for the message “Column is: *long*” and the critical buckling load are

produced by *functions* set up within *macros* written in Visual Basic and placed on a separate sheet of the spreadsheet. Figure 6-11 shows the two macros used. The first (*LorS*) carries out the decision process to test whether the column is long or short as indicated by comparison of its slenderness ratio with the column constant. The second (*Pcr*) computes the critical buckling load using either the Euler formula or the J. B. Johnson formula, depending on the result of the *LorS* macro. These functions are called by statements in the cells where “*long*” and the computed value of the critical buckling load (12 197 lb) are located.

- Having such a spreadsheet can enable you to analyze several design options quickly. For example, the given problem statement indicated that the ends were pinned, resulting in an end-fixity value of $K = 1$. What would happen if both ends were fixed? Simply changing the value of that one cell to $K = 0.65$ would cause the entire sheet to be recalculated, and the revised value of critical buckling load would be available almost instantly. The result is that $P_{cr} = 28 868 \text{ lb}$, an increase of 2.37 times the original value. With that kind of improvement, you, the designer, might be inclined to change the design to produce fixed ends.

| COLUMN ANALYSIS PROGRAM | | Data from: | Example Problem 6-1 |
|---|--|--------------------------------------|---------------------|
| Refer to Figure 6-7 for analysis logic. | | | |
| Enter data for variables in <i>italics</i> in shaded boxes. | | Use consistent U.S. Customary units. | |
| Data to Be Entered: | | Computed Values: | |
| Length and End Fixity: | | | |
| Column length, L = 54 in | | Eff. length, $L_e = KL = 54.0$ in | |
| End fixity, K = 1 | | | |
| Material Properties: | | | |
| Yield strength, s_y = 51 000 psi | | | |
| Modulus of elasticity, E = 3.00E + 07 psi | | Column constant, $C_c = 107.8$ | |
| Cross Section Properties: | | | |
| [Note: Enter r or compute $r = \sqrt{I/A}$.] | | | |
| [Always enter Area.] | | | |
| [Enter zero for I or r if not used.] | | | |
| Area, A = 1.23 in ² | | | |
| Moment of inertia, I = 0 in ⁴ | | | |
| Or | | Slender ratio, $KL/r = 172.8$ | |
| Radius of gyration, r = 0.3125 in | | Column is: <i>long</i> | |
| | | Critical buckling load = 12 197 lb | |
| Design Factor: | | | |
| Design factor on load, N = 3 | | Allowable load = 4 066 lb | |

FIGURE 6-9 Spreadsheet for column analysis with data from Example Problem 6-1

6-9 EFFICIENT SHAPES FOR COLUMN CROSS SECTIONS

An *efficient shape* is one that provides good performance with a small amount of material. In the case of columns, the shape of the cross section and its dimensions determine the value of the radius of gyration, r . From the definition of the slenderness ratio, KL/r , we can see that as r gets larger, the slenderness ratio gets smaller. In the critical load equations, a smaller slenderness ratio results in a larger critical load, the most desirable situation. Therefore, it is desirable to maximize the radius of gyration to design an efficient column cross section.

Unless end fixity varies with respect to the axes of the cross section, the column will tend to buckle with respect to the axis with the *least* radius of gyration. So a column with equal values for the radius of gyration in any direction is desirable.

Review again the definition of the radius of gyration:

$$r = \sqrt{I/A}$$

This equation indicates that for a given area of material, we should try to maximize the moment of inertia

to maximize the radius of gyration. A shape with a high moment of inertia has its area distributed far away from its centroidal axis.

Shapes that have the desirable characteristics described include circular hollow pipes and tubes, square hollow tubing, and fabricated column sections made from structural shapes placed at the outer boundaries of the section. Solid circular sections and solid square sections are also good, although not as efficient as the hollow sections. Figure 6-12(a-d) illustrates some of these shapes. The built-up section in (e) gives a rigid, boxlike section approximating the hollow square tube in larger sizes. In the case of the section in Figure 6-12(f), the angle sections at the corners provide the greatest contribution to the moment of inertia. The lacing bars merely hold the angles in position. The H-column in (g) has an equal depth and width and relatively heavy flanges and web. The moment of inertia with respect to the Y-Y axis is still smaller than for the X-X axis, but they are more nearly equal than for most other I-shapes designed to be used as beams with bending in only one direction. Thus, this shape would be more desirable for columns.

| COLUMN ANALYSIS PROGRAM | Data from: | Example Problem 6-2 |
|---|------------|--|
| Refer to Figure 6-7 for analysis logic. | | |
| Enter data for variables in <i>italics</i> in shaded boxes. | | Use consistent SI metric units. |
| Data to Be Entered: | | Computed Values: |
| Length and End Fixity: | | |
| <i>Column length, L = 280 mm</i> | → | Eff. length, $L_e = KL = 224.0 \text{ mm}$ |
| <i>End fixity, K = 0.8</i> | | |
| Material Properties: | | |
| <i>Yield strength, $s_y = 290 \text{ MPa}$</i> | → | Column constant, $C_c = 118.7$ |
| <i>Modulus of elasticity, E = 207 GPa</i> | | |
| Cross Section Properties: | | |
| [Note: Enter r or compute $r = \sqrt{I/A}$.] | | |
| [Always enter Area.] | | |
| [Enter zero for I or r if not used.] | | |
| <i>Area, A = 216 mm²</i> | → | |
| <i>Moment of inertia, I = 0 mm⁴</i> | | Slender ratio, $KL/r = 64.7$ |
| <i>Or</i> | | Column is: <i>short</i> |
| <i>Radius of gyration, r = 3.5 mm</i> | → | Critical buckling load = 53.32 kN |
| Design factor: | | Allowable load = 17.77 kN |
| <i>Design factor on load, N = 3</i> | → | |

FIGURE 6-10 Spreadsheet for column analysis with data from Example Problem 6-2

```

' Lors Macro
' Determines if column is long or short.
Function Lors(SR, CC)
    If SR > CC Then
        Lors = "long"
    Else
        Lors = "short"
    End if
End Function
' Critical Load Macro
' Uses Euler formula for long columns
' Uses Johnson formula for short columns
Function Pcr(LorS, SR, E, A, Sy)
Const Pi = 3.1415926
    If LorS = "long" Then
        Pcr = Pi ^ 2 * E * A / SR ^ 2
        ' Euler Equation; Eq. (6-4)
    Else
        Pcr = A * Sy(1 - (Sy * SR ^ 2 / (4 * Pi ^ 2 * E)))
        ' Johnson Equation; Eq. (6-7)
    End if
End Function

```

FIGURE 6-11 Macros used in the column analysis spreadsheet

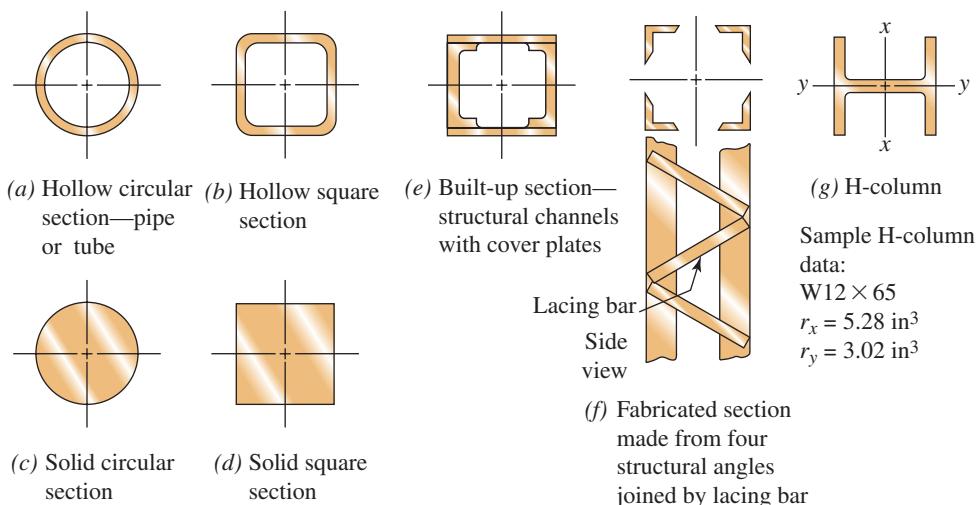


FIGURE 6-12 Column cross sections

6-10 THE DESIGN OF COLUMNS

In a design situation, the expected load on the column would be known, along with the length required by the application. The designer would then specify the following:

1. The manner of attaching the ends to the structure that affects the end fixity.
2. The general shape of the column cross section (e.g., round, square, rectangular, and hollow tube).
3. The material for the column.
4. The design factor, considering the application.
5. The final dimensions for the column.

It may be desirable to propose and analyze several different designs to approach an optimum for the application. A computer program or spreadsheet facilitates the process.

It is assumed that items 1 through 4 are specified by the designer for any given trial. For some simple shapes, such as the solid round or square section, the final dimensions are computed from the appropriate formula: the Euler formula, Equation (6-4) or (6-6), or the J. B. Johnson formula, Equation (6-9). If an algebraic solution is not possible, iteration can be done.

In a design situation, the unknown cross-sectional dimensions make computing the radius of gyration and therefore the slenderness ratio, KL/r , impossible. Without the slenderness ratio, we cannot determine whether the column is long (Euler) or short (Johnson). Thus, the proper formula to use is not known.

We overcome this difficulty by making an assumption that the column is either long or short and proceeding with the corresponding formula. Then, after the dimensions are determined for the cross section, the actual value of KL/r will be computed and compared with C_c . This will show whether the correct

formula has been used. If so, the computed answer is correct. If not, the alternate formula must be used and the computation is repeated to determine new dimensions. Figure 6-13 shows a flowchart for the design logic described here.

Design: Assuming a Long Column

Euler's formula is used if the assumption is that the column is long. Equation (6-4) would be the most convenient form because it can be solved for the moment of inertia, I :

⇒ Euler's Formula Solved for Required Value of I

$$I = \frac{P_{cr}(KL)^2}{\pi^2 E} = \frac{NP_a(KL)^2}{\pi^2 E} \quad (6-10)$$

where P_a = allowable load, usually set equal to the actual maximum expected load.

Having the required value for I , we can determine the dimensions for the shape by additional computations or by scanning tables of data of the properties of commercially available sections.

The solid circular section is one for which it is possible to derive a final equation for the characteristic dimension, the diameter. The moment of inertia is

$$I = \frac{\pi D^4}{64}$$

Substituting this into Equation (6-10) gives

$$I = \frac{\pi D^4}{64} = \frac{NP_a(KL)^2}{\pi^2 E}$$

Solving for D yields

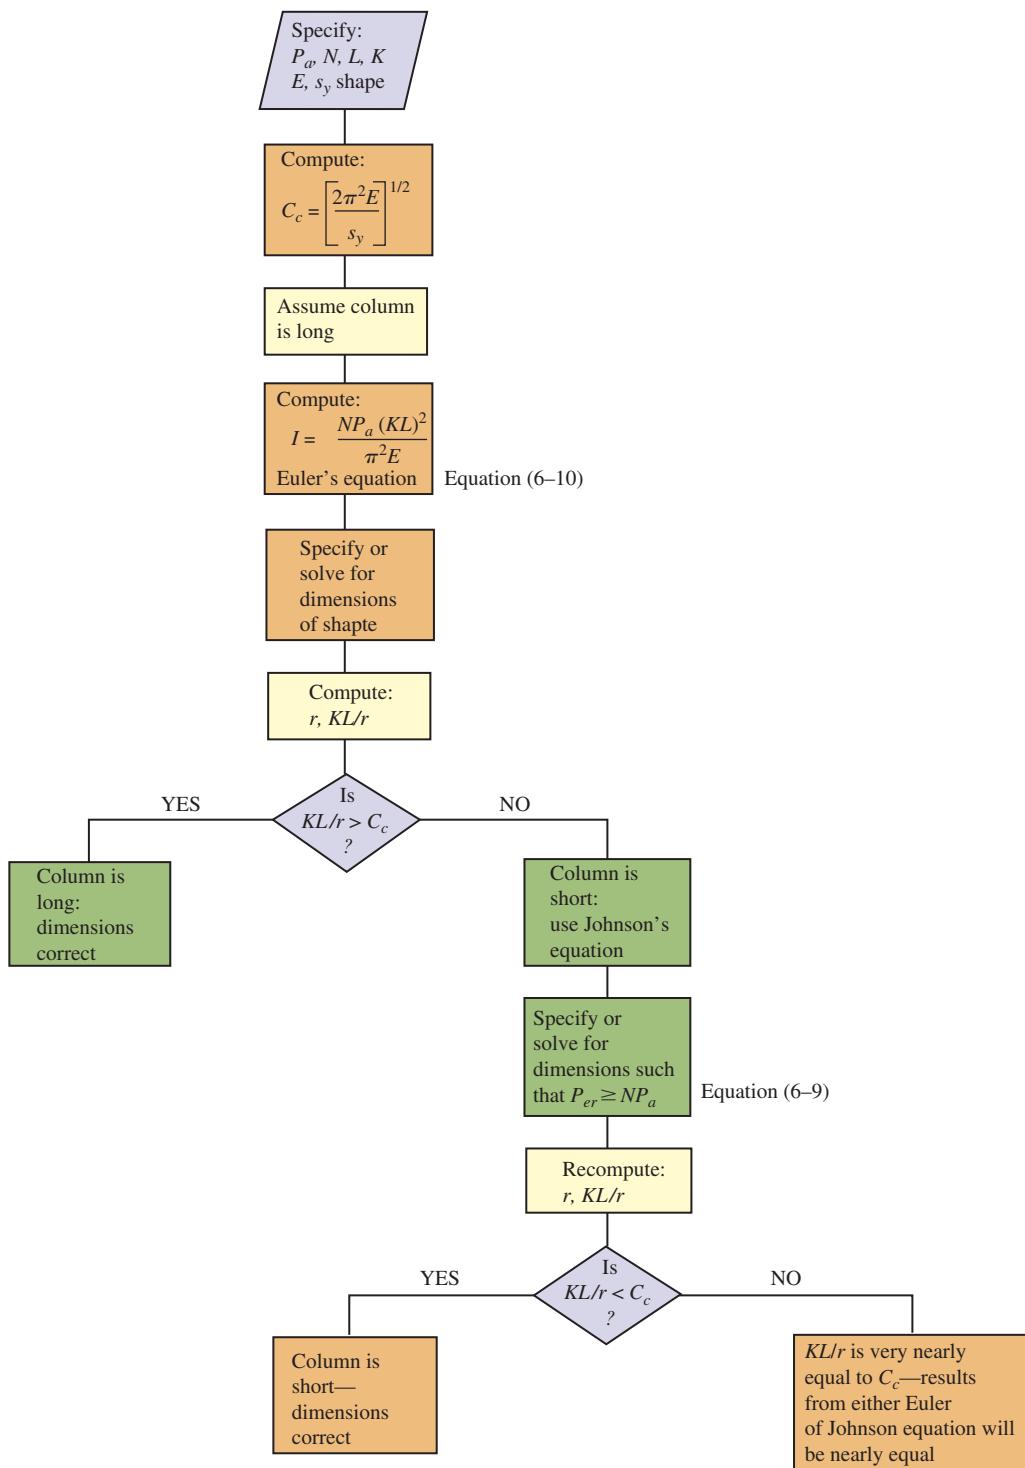


FIGURE 6-13 Design of a straight, centrally loaded column

❖ **Required Diameter for a Long, Solid Circular Column**

$$D = \left[\frac{64NP_a(KL)^2}{\pi^3 E} \right]^{1/4} \quad (6-11)$$

Design: Assuming a Short Column

The J. B. Johnson formula is used to analyze a short column. It is difficult to derive a convenient form for

use in design. In the general case, then, trial and error is used.

For some special cases, including the solid circular section, it is possible to solve the Johnson formula (Eqn. 6-9) for the characteristic dimension, the diameter:

$$P_{cr} = As_y \left[1 - \frac{s_y(KL/r)^2}{4\pi^2 E} \right]$$

Since

$$A = \pi D^2/4$$

$$r = D/4 \text{ (from Appendix 1)}$$

$$P_{cr} = NP_a$$

Then

$$NP_a = \frac{\pi D^2}{4} s_y \left[1 - \frac{s_y(KL)^2}{4\pi^2 E(D/4)^2} \right]$$

$$\frac{4NP_a}{\pi s_y} = D^2 \left[1 - \frac{s_y(KL)^2(16)}{4\pi^2 E D^2} \right]$$

Solving for D gives

◇ **Required Diameter for a Short, Solid Circular Column**

$$D = \left[\frac{4NP_a}{\pi s_y} + \frac{4s_y(KL)^2}{\pi^2 E} \right]^{1/2} \quad (6-12)$$

Example Problem 6-3 Specify a suitable diameter of a solid, round cross section for a machine link if it is to carry 9800 lb of axial compressive load. The length will be 25 in, and the ends will be pinned. Use a design factor of 3. Use SAE 1020 hot-rolled steel.

Solution Objective Specify a suitable diameter for the column.

Given Solid circular cross section: $L = 25$ in; use $N = 3$.
Both ends are pinned.
Material: SAE 1020 hot-rolled steel.

Analysis Use the procedure in Figure 6-13. Assume first that the column is long.

Results From Equation (6-11),

$$D = \left[\frac{64NP_a(KL)^2}{\pi^3 E} \right]^{1/4} = \left[\frac{64(3)(9800)(25)^2}{\pi^3 (30 \times 10^6)} \right]^{1/4}$$

$$D = 1.06 \text{ in}$$

The radius of gyration can now be found:

$$r = D/4 = 1.06/4 = 0.265 \text{ in}$$

The slenderness ratio is

$$KL/r = [(1.0)(25)]/0.265 = 94.3$$

For the SAE 1020 hot-rolled steel, $s_y = 30\,000$ psi. The graph in Figure 6-5 shows C_c to be approximately 138. Thus, the actual KL/r is less than the transition value, and the column must be redesigned as a short column, using Equation (6-12) derived from the Johnson formula:

$$D = \left[\frac{4NP_a}{\pi s_y} + \frac{4s_y(KL)^2}{\pi^2 E} \right]^{1/2}$$

$$D = \left[\frac{4(3)(9800)}{(\pi)(30\,000)} + \frac{4(30\,000)(25)^2}{\pi^2 (30 \times 10^6)} \right]^{1/2} = 1.23 \text{ in}$$

Checking the slenderness ratio again, we have

$$KL/r = [(1.0)(25)]/(1.23/4) = 81.3$$

Comments This is still less than the transition value, so our analysis is acceptable. A preferred size of $D = 1.25$ in could be specified.

An alternate method of using spreadsheets to design columns is to use an analysis approach similar to that shown in Figure 6-9 but to use it as a convenient “trial and error” tool. You could compute data by hand, or you could look them up in a table for A , I , and r for any desired cross-sectional shape and dimensions and insert the values into the spreadsheet. Then you could compare the computed allowable load with the required value and choose smaller or larger sections to bring the computed value close to the required value. Many iterations could be completed in a short amount of time. For shapes that allow computing r and A fairly simply, you could add a new section to the spreadsheet to calculate these values. An example is shown in Figure 6-14, where the differently shaded box shows the calculations for the properties of a round cross section. The data are from Example Problem 6-3, and the result shown was arrived at with only four iterations.

| CIRCULAR COLUMN ANALYSIS | Data from: | Example Problem 6-3 |
|---|---|--------------------------------------|
| Refer to Figure 6-7 for analysis logic. | | |
| Enter data for variables in <i>italics</i> in shaded boxes. | | Use consistent U.S. Customary units. |
| Data to Be Entered: | | Computed Values: |
| Length and End Fixity: | | |
| Column length, $L = 25 \text{ in}$ | → Eff. Length, $L_e = KL = 25.0 \text{ in}$ | |
| End fixity, $K = 1$ | | |
| Material Properties: | | |
| Yield strength, $s_y = 30\,000 \text{ psi}$ | → Column constant, $C_c = 140.5$ | |
| Modulus of elasticity, $E = 3.00E + 07 \text{ psi}$ | | |
| Cross Section Properties: | | |
| [Note: A and r computed from] [dimensions for circular cross section] [in following section of this spreadsheet.] | | |
| Area, $A = 1.188 \text{ in}^2$ | → Slender ratio, $KL/r = 81.3$ | |
| Radius of gyration, $r = 0.3075 \text{ in}$ | | |
| Properties for Round Column: | | |
| Diameter for round column = 1.23 in | → Column is: <i>short</i> | |
| Area, $A = 1.188 \text{ in}^2$ | Critical buckling load = 29 679 lb | |
| Radius of gyration, $r = 0.3075 \text{ in}$ | | |
| Design Factor: | | |
| Design factor on load, $N = 3$ | → Allowable load = 9893 lb | |

FIGURE 6-14 Spreadsheet for column analysis used as a tool to design a column with a round cross section

6-11 CROOKED COLUMNS

The Euler and Johnson formulas assume that the column is straight and that the load acts in line with the centroid of the cross section of the column. If the column is somewhat crooked, bending occurs in addition to the column action (see Figure 6-15).

The crooked column formula allows an initial crookedness, a , to be considered (see References 6, 7, and 8):

◆ Crooked Column Formula

$$P_a^2 - \frac{1}{N} \left[s_y A + \left(1 + \frac{ac}{r^2} \right) P_{cr} \right] P_a + \frac{s_y A P_{cr}}{N^2} = 0 \quad (6-13)$$

where c = distance from the neutral axis of the cross section about which bending occurs to its outer edge

P_{cr} is defined to be the critical load found from the *Euler formula*.

Although this formula may become increasingly inaccurate for shorter columns, it is not appropriate to switch to the Johnson formula as it is for straight columns.

The crooked column formula is a quadratic with respect to the allowable load P_a . Evaluating all constant

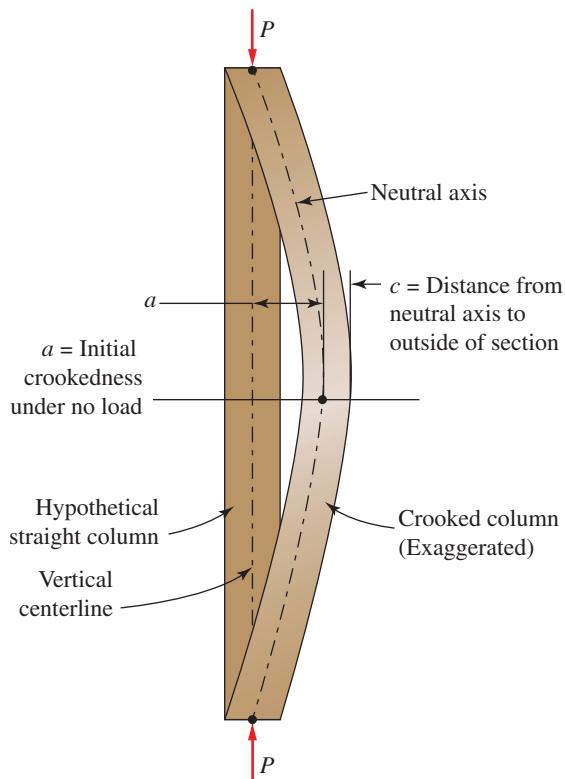


FIGURE 6-15 Illustration of crooked column

terms in Equation (6–13) produces an equation of the form

$$P_a^2 + C_1 P_a + C_2 = 0$$

Then, from the solution for a quadratic equation,

$$P_a = 0.5 [-C_1 \pm \sqrt{C_1^2 - 4C_2}]$$

The smaller of the two possible solutions is selected.

Figure 6–16 shows the solution of Example Problem 6–4 using a spreadsheet. Whereas its appearance is similar to that of the earlier column analysis spreadsheets, the details follow the calculations needed to solve Equation (6–13). On the lower left, two special data values are needed: (1) the crookedness a and (2) the distance c

from the neutral axis for buckling to the outer surface of the cross section. In the middle of the right part are listed some intermediate values used in Equation (6–13): C_1 and C_2 as defined in the solution to Example Problem 6–4. The result, the allowable load, P_a , is at the lower right of the spreadsheet. Above that, for comparison, the computed value of the critical buckling load is given for a straight column of the same design. Note that this solution procedure is most accurate for long columns. If the analysis indicates that the column is *short* rather than *long*, the designer should take note of how short it is by comparing the slenderness ratio, KL/r , with the column constant, C_c . If the column is quite short, the designer should not rely on the accuracy of the result from Equation (6–13).

Example Problem 6–4 A column has both ends pinned and has a length of 32 in. It has a circular cross section with a diameter of 0.75 in and an initial crookedness of 0.125 in. The material is SAE 1040 hot-rolled steel. Compute the allowable load for a design factor of 3.

Solution Objective Specify the allowable load for the column.

Given Solid circular cross section: $D = 0.75$ in; $L = 32$ in; use $N = 3$.
Both are ends pinned. Initial crookedness = $a = 0.125$ in.
Material: SAE 1040 hot-rolled steel.

Analysis Use Equation (6–13). First evaluate C_1 and C_2 . Then solve the quadratic equation for P_a .

Results

$$s_y = 42\,000 \text{ psi}$$

$$A = \pi D^2/4 = (\pi)(0.75)^2/4 = 0.442 \text{ in}^2$$

$$r = D/4 = 0.75/4 = 0.188 \text{ in}$$

$$c = D/2 = 0.75/2 = 0.375 \text{ in}$$

$$KL/r = [(1.0)(32)]/0.188 = 171$$

$$P_{cr} = \frac{\pi^2 EA}{(KL/r)^2} = \frac{\pi^2 (30\,000\,000)(0.442)}{(171)^2} = 4476 \text{ lb}$$

$$C_1 = \frac{-1}{N} \left[s_y A + \left(1 + \frac{ac}{r^2} \right) P_{cr} \right] = -9649$$

$$C_2 = \frac{s_y A P_{cr}}{N^2} = 9.232 \times 10^6$$

The quadratic is therefore

$$P_a^2 - 9649 P_a + 9.232 \times 10^6 = 0$$

Comment From this, $P_a = 1076$ lb is the allowable load.

6-12 ECCENTRICALLY LOADED COLUMNS

An *eccentric load* is one that is applied away from the centroidal axis of the cross section of the column, as shown in Figure 6–17. The eccentricity, e , is the perpendicular distance from the line of action between the applied end-loads to the centroidal axis of the initially straight column. Such a load exerts bending in addition to the column action that results in the deflected shape shown in the figure. The maximum stress in the deflected column occurs in the outermost fibers of the cross

section at the midlength of the column where the maximum deflection, y_{max} , occurs. Let's denote the stress at this point as $\sigma_{L/2}$. Then, for any applied load, P ,

♦ Secant Formula for Eccentrically Loaded Columns

$$\sigma_{L/2} = \frac{P}{A} \left[1 + \frac{ec}{r^2} \sec \left(\frac{KL}{2r} \sqrt{\frac{P}{AE}} \right) \right] \quad (6-14)$$

(see References 3, 5, and 9.) Note that this stress is *not* directly proportional to the load. When evaluating the secant in this formula, note that its argument in the

| CROOKED COLUMN ANALYSIS | | Data from: Example Problem 6–4 |
|---|-----------------------|--------------------------------------|
| Solves Equation (6–13) for allowable load. | | Use consistent U.S. Customary units. |
| Enter data for variables in <i>italics</i> in shaded boxes. | | Computed Values: |
| Data to Be Entered: | | |
| Length and End Fixity: | | |
| Column length, L = | 32 in | Eff. length, $L_e = KL$ = 32.0 in |
| End fixity, K = | 1 | |
| Material Properties: | | |
| Yield strength, s_y = | 42 000 psi | |
| Modulus of elasticity, E = 3.00E + 07 psi | | |
| Cross Section Properties: | | |
| [Note: Enter r or compute $r = \sqrt{I/A}$.] | | |
| [Always enter Area.] | | |
| [Enter zero for I or r if not used.] | | |
| Area, A = | 0.442 in ² | |
| Moment of inertia, I = | 0 in ² | |
| Radius of gyration, r = | 0.188 in | |
| Values for Eq. (6–11): | | |
| Initial crookedness = a = | 0.125 in | |
| Neutral axis to outside = c = | 0.375 in | |
| Design Factor: | | |
| Design factor on load, N = | 3 | Slender ratio, KL/r = 170.7 |
| | | Column is: <i>long</i> |
| | | Straight Column |
| | | Critical buckling load = 4491 lb |
| | | Crooked Column |
| | | Allowable load = 1076 lb |

FIGURE 6–16 Spreadsheet for analysis of crooked columns

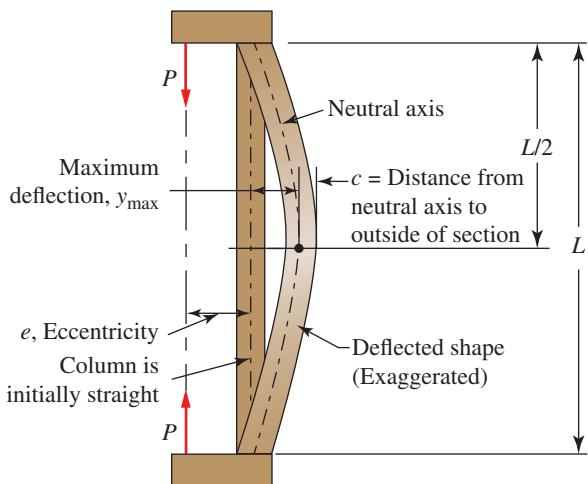


FIGURE 6–17 Illustration of eccentrically loaded columns

parentheses is in *radians*. Also, because most calculators do not have the secant function, recall that the secant is equal to 1/cosine.

For design purposes, we would like to specify a design factor, N , that can be applied to the *failure load* similar to that defined for straight, centrally loaded

columns. However, in this case, failure is predicted when the maximum stress in the column exceeds the yield strength of the material. Let's now define a new term, P_y , to be the load applied to the eccentrically loaded column when the maximum stress is equal to the yield strength. Equation (6–14) then becomes

$$s_y = \frac{P_y}{A} \left[1 + \frac{ec}{r^2} \sec \left(\frac{KL}{2r} \sqrt{\frac{P_y}{AE}} \right) \right]$$

Now, if we define the *allowable load* to be

$$P_a = P_y/N$$

or

$$P_y = N P_a$$

this equation becomes

◇ Design Equation for Eccentrically Loaded Columns

$$\text{Required } s_y = \frac{N P_a}{A} \left[1 + \frac{ec}{r^2} \sec \left(\frac{KL}{2r} \sqrt{\frac{N P_a}{AE}} \right) \right] \quad (6-15)$$

This equation cannot be solved analytically for either A or P_a . Therefore, an iterative solution is required, as will be demonstrated in Example Problem 6–6.

Example Problem 6–5 For the column of Example Problem 6–4, compute the maximum stress and deflection if a load of 1075 lb is applied with an eccentricity of 0.75 in. The column is initially straight.

| | | |
|-----------------|-----------|--|
| Solution | Objective | Compute the stress and the deflection for the eccentrically loaded column. |
| | Given | Data from Example Problem 6–4, but eccentricity = $e = 0.75$ in. Solid circular cross section: $D = 0.75$ in; $L = 32$ in; Initially straight Both ends are pinned; $KL = 32$ in; $r = 0.188$ in; $c = D/2 = 0.375$ in. Material: SAE 1040 hot-rolled steel; $E = 30 \times 10^6$ psi, $s_y = 42$ psi |
| | Analysis | Use Equation (6–14) to compute maximum stress. Then use Equation (6–16) to compute maximum deflection. |
| | Results | All terms have been evaluated before. Then the maximum stress is found from Equation (6–14): |
| | | $\sigma_{U2} = \frac{1075}{0.422} \left[1 + \frac{(0.75)(0.375)}{(0.188)^2} \sec \left(\frac{32}{2(0.188)} \sqrt{\frac{1075}{(0.442)(30 \times 10^6)}} \right) \right]$ $\sigma_{U2} = 29\,300 \text{ psi}$ |
| | | The maximum deflection is found from Equation (6–16): |
| | | $y_{\max} = 0.75 \left[\sec \left(\frac{32}{2(0.188)} \sqrt{\frac{1075}{(0.442)(30 \times 10^6)}} \right) - 1 \right] = 0.293 \text{ in}$ |
| | Comments | The maximum stress is 29 300 psi at the midlength of the column. The deflection there is 0.293 in from the original straight central axis of the column. |

Example Problem 6–6 The stress in the column found in Example Problem 6–5 seems high for the SAE 1040 hot-rolled steel. Redesign the column to achieve a design factor of at least 3.

| | | |
|-----------------|-----------|--|
| Solution | Objective | Redesign the eccentrically loaded column of Example Problem 6–5 to reduce the stress and achieve a design factor of at least 3. |
| | Given | Data from Example Problems 6–4 and 6–5. |
| | Analysis | Use a larger diameter. Use Equation (6–15) to compute the required strength. Then compare that with the strength of SAE 1040 hot-rolled steel. Iterate until the stress is satisfactory. |
| | Results | Appendix 3 gives the value for the yield strength of SAE 1040 HR to be 42 000 psi. If we choose to retain the same material, the cross-sectional dimensions of the column must be increased to decrease the stress. Equation (6–15) can be used to evaluate a design alternative. The objective is to find suitable values for A , c , and r for the cross section such that $P_a = 1075$ lb; $N = 3$; $L_e = 32$ in; $e = 0.75$ in; and the value of the entire right side of the equation is less than 42 000 psi. The original design had a circular cross section with a diameter of 0.75 in. Let's try increasing the diameter to $D = 1.00$ in. Then |

$$A = \pi D^2/4 = \pi(1.00 \text{ in})^2/4 = 0.785 \text{ in}^2$$

$$r = D/4 = (1.00 \text{ in})/4 = 0.250 \text{ in}$$

$$r^2 = (0.250 \text{ in})^2 = 0.0625 \text{ in}^2$$

$$c = D/2 = (1.00 \text{ in})/2 = 0.50 \text{ in}$$

Now let's call the right side of Equation (6–15) s'_y . Then

$$s'_y = \frac{3(1075)}{0.785} \left[1 + \frac{(0.75)(0.50)}{(0.0625)} \sec \left(\frac{32}{2(0.250)} \sqrt{\frac{(3)(1075)}{(0.785)(30 \times 10^6)}} \right) \right]$$

$$s'_y = 37\,740 \text{ psi} = \text{required value of } s_y$$

This is a satisfactory result because it is just slightly less than the value of s_y of 42 000 psi for the steel.

Now we can evaluate the expected maximum deflection with the new design using Equation (6–16):

$$y_{\max} = 0.75 \left[\sec \left(\frac{32}{2(0.250)} \sqrt{\frac{1075}{(0.785)(30 \times 10^6)}} \right) - 1 \right]$$

$$y_{\max} = 0.076 \text{ in}$$

Comments The diameter of 1.00 in is satisfactory. The maximum deflection for the column is 0.076 in.

| ECCENTRIC COLUMN ANALYSIS | | Data from: | Example Problem 6–6 |
|--|-----------------------|------------|--|
| Solves Equation (6–15) for design stress and Equation (6–16) for maximum deflection. | | | |
| Enter data for variables in <i>italics</i> in shaded boxes. | | | Use consistent U.S. Customary units. |
| Data to Be Entered: | | | Computed Values: |
| Length and End Fixity: | | | |
| Column length, L = | 32 in | → | Eff. length, $L_e = KL = 32.0$ in |
| End fixity, K = | 1 | | |
| Material Properties: | | | |
| Yield strength, s_y = | 42 000 psi | → | Column constant, $C_c = 118.7$ |
| Modulus of elasticity, E = | 3.00E + 07 psi | | |
| Cross Section Properties: | | | |
| [Note: Enter r or compute $r = \sqrt{I/A}$.] | | | Argument of sec = 0.749 for strength |
| [Always enter Area.] | | | Value of secant = 1.3654 |
| [Enter zero for I or r if not used.] | | | |
| Area, A = | 0.785 in ² | → | Argument of sec = 0.432 for deflection |
| Moment of inertia, I = | 0 in ⁴ | | Value of secant = 1.1014 |
| OR | | | |
| Radius of gyration, r = | 0.250 in | → | Slender ratio, $KL/r = 128.0$ |
| Values for Eqs. (6–15) and (6–16) | | | Column is: <i>long</i> |
| Eccentricity, e = | 0.75 in | | |
| Neutral axis to outside, c = | 0.5 in | | |
| Allowable load, P_a = | 1,075 lb | | |
| Design Factor: | | | FINAL RESULTS |
| Design factor on load, N = | 3 | | Req'd yield strength = 37 764 psi |
| | | | Must be less than actual yield strength: $s_y = 42 000$ psi |
| | | | Max deflection, $y_{\max} = 0.076$ in |

FIGURE 6–18 Spreadsheet for analysis of eccentric columns

Another critical factor may be the amount of deflection of the axis of the column due to the eccentric load:

► Maximum Deflection in an Eccentrically Loaded Column

$$y_{\max} = e \left[\sec \left(\frac{KL}{2r} \sqrt{\frac{P}{AE}} \right) - 1 \right] \quad (6-16)$$

Note that the argument of the secant is the same as that used in Equation (6–14).

Figure 6–18 shows the solution of the eccentric column problem of Example Problem 6–6 using a spreadsheet to evaluate Equations (6–15) and (6–16). It is a design aid that facilitates the iteration required to

determine an acceptable geometry for a column to carry a specified load with a desired design factor. Note that the data are in U.S. Customary units. At the lower left of the spreadsheet, data required for Equations (6–15) and (6–16) are entered by the designer, along with the other data discussed for earlier column analysis spreadsheets. The “FINAL RESULTS” at the lower right show the computed value of the required yield strength of the material for the column and compare it with the given value entered by the designer near the upper left. The designer must ensure that the actual value is greater than the computed value. The last part of the right side of the spreadsheet gives the computed maximum deflection of the column that occurs at its midlength.

REFERENCES

- Aluminum Association. *Aluminum Design Manual*. Washington, DC: Aluminum Association, 2015.
- American Institute of Steel Construction. *Steel Construction Manual*. 14th ed. Chicago: American Institute of Steel Construction, 2011.
- Budynas, Richard G., and Keith J. Nisbett. *Shigley's Mechanical Engineering Design*. 10th ed. New York: McGraw-Hill, 2015.
- Javidinejad, Amir. *Essentials of Mechanical Stress Analysis*. New York: CRC Press, 2015.
- Popov, Egor P. *Engineering Mechanics of Solids*. 2nd ed. Upper Saddle River, NJ: Pearson Prentice Hall, 1999.
- Spotts, Merhyle F., Terry E. Shoup, and Lee E. Hornberger. *Design of Machine Elements*. 8th ed. Upper Saddle River, NJ: Pearson Prentice Hall, 2004.
- Timoshenko, Stephen P. *Strength of Materials*. Vol. 2. 2nd ed. New York: Van Nostrand Reinhold, 1941.
- Timoshenko, Stephen P., and James M. Gere. *Theory of Elastic Stability*. 2nd ed. New York: McGraw-Hill, 1961.
- Young, Warren C., Richard G. Budynas, and Ali Sadegh. *Roark's Formulas for Stress and Strain*. 8th ed. New York: McGraw-Hill, 2012.

PROBLEMS

- A column has both ends pinned and has a length of 32 in. It is made of SAE 1040 HR steel and has a circular shape with a diameter of 0.75 in. Determine the critical load.
- Repeat Problem 1 using a length of 15 in.
- Repeat Problem 1 with the bar made of aluminum 6061-T4.
- Repeat Problem 1 assuming both ends fixed.
- Repeat Problem 1 using a square cross section, 0.65 in on a side, instead of the circular cross section.
- Repeat Problem 1 with the bar made from high-impact acrylic plastic.
- A rectangular steel bar has a cross section 0.50 by 1.00 in and is 8.5 in long. The bar has pinned ends and is made of SAE 4150 OQT 1000 steel. Compute the critical load.

- A steel pipe has an outside diameter of 1.60 in, a wall thickness of 0.109 in, and a length of 6.25 ft. Compute the critical load for each of the end conditions shown in Figure 6–2. Use SAE 1020 HR steel.
- Compute the required diameter of a circular bar to be used as a column carrying a load of 8500 lb with pinned ends. The length is 50 in. Use SAE 4140 OQT 1000 steel and a design factor of 3.0.
- Repeat Problem 9 using SAE 1020 HR steel.
- Repeat Problem 9 with aluminum 2014-T4.
- In Section 6–10, equations were derived for the design of a solid circular column, either long or short. Perform the derivation for a solid square cross section.
- Repeat the derivations called for in Problem 12 for a hollow circular tube for any ratio of inside to outside diameter. That is, let the ratio $R = ID/OD$, and solve for the required OD for a given load, material, design factor, and end fixity.
- Determine the required dimensions of a column with a square cross section to carry an axial compressive load of 6500 lb if its length is 64 in and its ends are fixed. Use a design factor of 3.0. Use aluminum 6061-T6.
- Repeat Problem 14 for a hollow aluminum tube (6061-T6) with the ratio of $ID/OD = 0.80$. Compare the weight of this column with that of Problem 14.
- A toggle device is being used to compact scrap steel shavings, as illustrated in Figure P6–16. Design the two links of the toggle to be steel, SAE 5160 OQT 1000, with a circular cross section and pinned ends. The force P required to crush the shavings is 5000 lb. Use $N = 3.50$.
- Repeat Problem 16, but propose a design that will be lighter than the solid circular cross section.
- A sling, sketched in Figure P6–18, is to carry 18 000 lb. Design the spreader.
- For the sling in Problem 18, design the spreader if the angle shown is changed from 30° to 15° .
- A rod for a certain hydraulic cylinder behaves as a fixed-free column when used to actuate a compactor of industrial waste. Its maximum extended length will be 10.75 ft. If it is to be made of SAE 1144 OQT 1300 steel, determine the required diameter of the rod for a design factor of 2.5 for an axial load of 25 000 lb.
- Design a column to carry 40 000 lb. One end is pinned, and the other is fixed. The length is 12.75 ft.

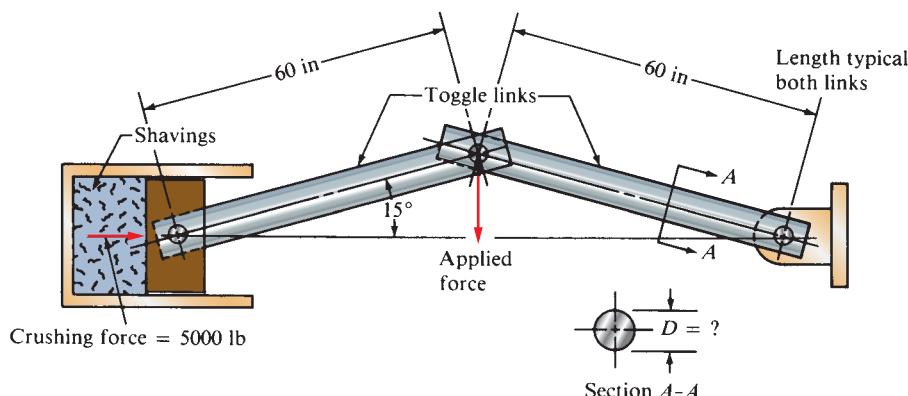


FIGURE P6–16 (Problems 16 and 17)

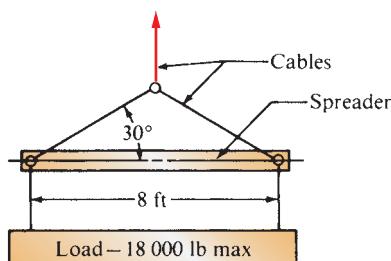


FIGURE P6-18 (Problems 18 and 19)

22. Repeat Problem 21 using a length of 4.25 ft.
23. Repeat Problem 1 if the column has an initial crookedness of 0.08 in. Determine the allowable load for a design factor of 3.
24. Repeat Problem 7 if the column has an initial crookedness of 0.04 in. Determine the allowable load for a design factor of 3.
25. Repeat Problem 8 if the column has an initial crookedness of 0.15 in. Determine the allowable load for a design factor of 3 and pinned ends only.
26. An aluminum (6063-T4) column is 42 in long and has a square cross section, 1.25 in on a side. If it carries a compressive load of 1250 lb, applied with an eccentricity of 0.60 in, compute the maximum stress in the column and the maximum deflection.
27. A steel (SAE 1020 hot-rolled) column is 3.2 m long and is made from a standard 3-in Schedule 40 steel pipe (see Table A15-17). If a compressive load of 30.5 kN is applied with an eccentricity of 150 mm, compute the maximum stress in the column and the maximum deflection.
28. A link in a mechanism is 14.75 in long and has a square cross section, 0.250 in on a side. It is made from annealed SAE 410 stainless steel. Use $E = 28 \times 10^6$ psi. If it carries a compressive load of 45 lb with an eccentricity of 0.30 in, compute the maximum stress and the maximum deflection.
29. A hollow square steel tube, 40 in long, is proposed for use as a prop to hold up the ram of a punch press during installation of new dies. The ram weighs 75,000 lb. The prop is made from 4×4×1/4 structural tubing. It is made from steel similar to structural steel, ASTM A500 Grade C. If the load applied by the ram could have an eccentricity of 0.50 in, would the prop be safe?
30. Determine the allowable load on a column 16.0 ft long made from a wide-flange beam shape, W5×19. The load will be centrally applied. The end conditions are somewhat between fixed and hinged, say, $K = 0.8$. Use a design factor of 3. Use ASTM A36 structural steel.
31. Determine the allowable load on a fixed-end column having a length of 66 in if it is made from a steel American Standard Beam, S4×7.7. The material is ASTM A36 structural steel. Use a design factor of 3.
32. Compute the maximum stress and deflection that can be expected in the steel machine member carrying an eccentric load as shown in Figure P6-32. The load P is 1000 lb. If a design factor of 3 is desired, specify a suitable steel.
33. Specify a suitable steel tube from Table A15-14 to support one side of a platform as shown in Figure P6-33. The material has a yield strength of 36 ksi. The total load on the platform is 55,000 lb, uniformly distributed.
34. Compute the allowable axial load on a steel channel, C5×9, made from ASTM A36 structural steel. The channel is 112 in long and can be considered to be pinned at its ends. Use a design factor of 3.
35. Repeat Problem 34 with the ends fixed rather than pinned.
36. Repeat Problem 34, except consider the load to be applied along the outside of the web of the channel instead of being axial.
37. Figure P6-37 shows a 4×4×1/2 steel column made from ASTM A500 Grade B structural steel. To accommodate a special mounting restriction, the load is applied eccentrically as shown. Determine the amount of load that the column can safely support. The column is supported laterally by the structure.
38. The device shown in Figure P6-38 is subjected to opposing forces F . Determine the maximum allowable load to achieve a design factor of 3. The device is made from aluminum 6061-T6.
39. A hydraulic cylinder is capable of exerting a force of 5200 N to move a heavy casting along a conveyor. The design of the pusher causes the load to be applied eccentrically to the piston rod as shown in Figure P6-39. Is the piston rod safe under this loading if it is made from SAE 416 stainless steel in the Q&T 1000 condition? Use $E = 200$ GPa.

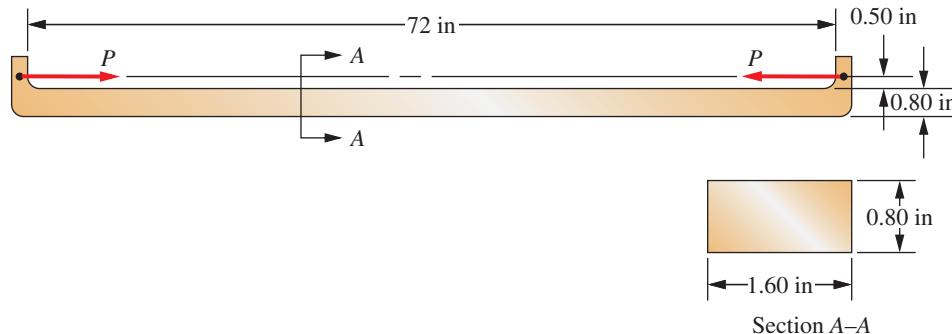


FIGURE P6-32 (Problem 32)

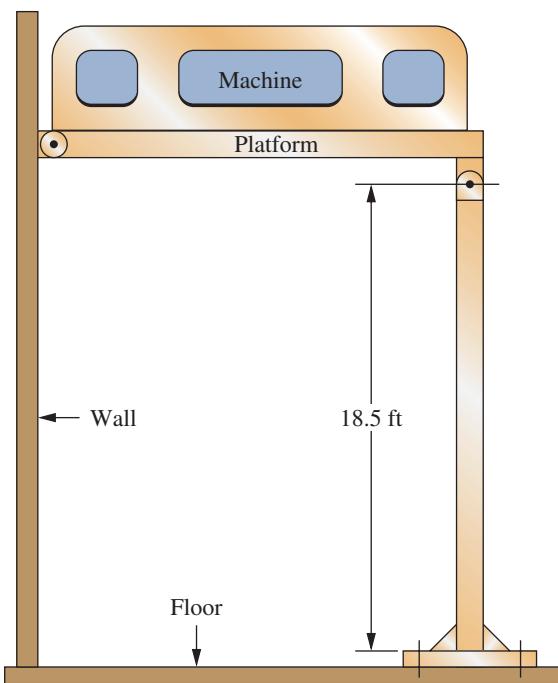


FIGURE P6-33 (Problem 33)

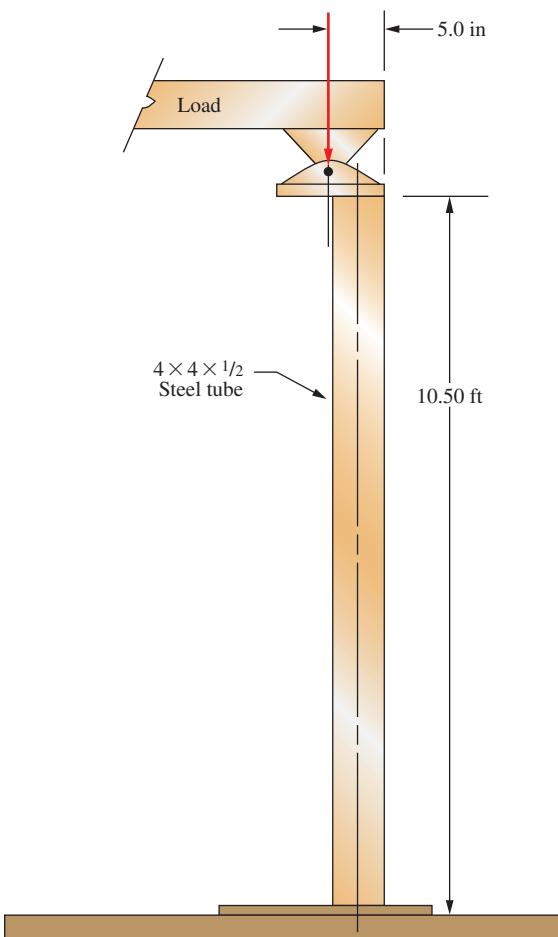


FIGURE P6-37 (Problem 37)

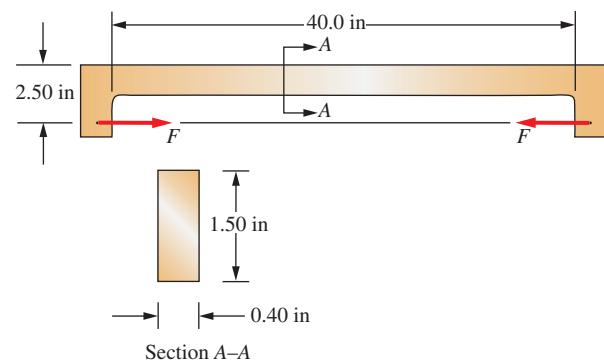


FIGURE P6-38 (Problem 38)

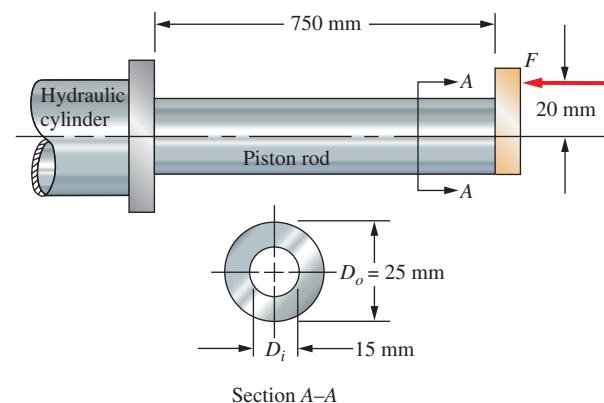


FIGURE P6-39 (Problem 39)

40. A standard 2-in schedule 40 steel pipe is proposed to be used to support the roof of a porch during renovation. Its length is 13.0 ft. The pipe is made from ASTM A501 structural steel.
- Determine the safe load on the pipe to achieve a design factor of 3 if the pipe is straight.
 - Determine the safe load if the pipe has an initial crookedness of 1.25 in.

This page intentionally left blank

DESIGN OF A MECHANICAL DRIVE

OBJECTIVES AND CONTENT OF PART II

Part II of this book contains nine chapters (Chapters 7–15) that help you gain experience in approaching the design of an important complete device—a *mechanical drive*. The drive, sometimes called a *power transmission*, serves the following functions:

- It receives power from some kind of rotating source such as an electric motor, an internal combustion engine, a gas turbine engine, a hydraulic or pneumatic motor, a steam or water turbine, or even hand rotation provided by the operator.
- The drive typically causes some change in the speed of rotation of the shafts that make up the drive so that the output shaft operates more slowly or faster than the input shaft. Speed reducers are more prevalent than speed increasers.
- The active elements of the drive transmit the power from the input to the output shafts.
- When there is a speed reduction, there is a corresponding increase in the torque transmitted. Conversely, a speed increase causes a reduction in torque at the output compared with the input of the drive.

The chapters of Part II provide the detailed descriptions of the various machine elements that are typically used in power transmissions: *belt drives*, *chain drives*, *gears*, *shafts*, *bearings*, *keys*, *couplings*, *seals*, and *housings* to hold all the elements together. You will learn the important features of these elements and the methods of analyzing and designing them.

Of equal importance is the information provided on how the various elements interact with each other. You must be sensitive, for example, to how gears are mounted on shafts, how the shafts are supported by bearings, and how the bearings must be mounted securely and precisely in a housing that holds the system together. The final completed design must function as an integrated unit.

THE PROCESS OF DESIGNING A MECHANICAL DRIVE

In the design of a power transmission, you would typically know the following:

- *The nature of the driven machine:* It might be a machine tool in a factory that cuts metal parts for engines; an electric drill used by professional carpenters or home craft workers; the axle of a farm tractor; the propeller shaft of a turbojet for an airplane; the propeller shaft for a large ship; the wheels of a toy train; a mechanical timing mechanism; or any other of the numerous products that need a controlled-speed drive.
- *The level of power to be transmitted:* From the examples just listed, the power demanded may range from thousands of horsepower for a ship, hundreds of horsepower for a large farm tractor or airplane, or a few watts for a timer or a toy.

- ***The rotational speed of the drive motor or other prime mover:*** Typically the prime mover operates at a rather high speed of rotation. The shafts of standard electric motors rotate at about 1200, 1800, or 3600 revolutions per minute (rpm). Actual full-load operating speeds are somewhat less than these speeds, say 1150, 1750, or 3550 rpm. Automotive engines operate from about 1000 to 6000 rpm. Universal motors in some hand tools (drills, saws, and routers) and household appliances (mixers, blenders, and vacuum cleaners) operate from 3500 to 20 000 rpm. Gas turbine engines for aircraft rotate many thousands of rpm.
- ***The desired output speed of the transmission:*** This is highly dependent on the application. Some gear motors for instruments rotate less than 1.0 rpm. Production machines in factories may run a few hundred rpm. Drives for assembly conveyors may run fewer than 100 rpm. Aircraft propellers may operate at several thousand rpm.

You, the designer, must then do the following:

- Choose the type of power transmission elements to be used: gears, belt drives, chain drives, or other types. In fact, some power transmission systems use two or more types in series to optimize the performance of each.
- Specify how the rotating elements are arranged and how the power transmission elements are mounted on shafts.
- Design the shafts to be safe under the expected torques and bending loads and properly locate the power transmission elements and the bearings. It is likely that the shafts will have several diameters and special features to accommodate keys, couplings, retaining rings, and other details. The dimensions of all features must be specified, along with the tolerances on the dimensions and surface finishes.
- Specify suitable bearings to support the shafts and determine how they will be mounted on the shafts and how they will be held in a housing.
- Specify keys to connect the shaft to the power transmission elements; couplings to connect the shaft from the driver to the input shaft of the transmission or to connect the output shaft to the driven machine; seals to effectively exclude contaminants from entering the transmission; and other accessories.
- Place all of the elements in a suitable housing that provides for the mounting of all elements and for their protection from the environment and their lubrication.

CHAPTERS THAT MAKE UP PART II

To guide you through this process of designing a mechanical drive, Part II includes the following chapters:

Chapter 7: Belt Drives, Chain Drives and Wire Rope emphasizes recognizing the variety of commercially available belt and chain drives, the critical design parameters, and the methods used to specify reasonably optimum components of the drive systems.

Chapter 8: Kinematics of Gears describes and defines the important geometric features of gears. Methods of manufacturing gears are discussed, along with the importance of precision in the operation of the gears. The details of how a pair of gears operates are described, and the design and the operation of two or more gear pairs in a gear train are analyzed.

Chapter 9: Spur Gear Design illustrates how to compute forces exerted by one tooth of a gear on its mating teeth. Methods of computing the stresses in the gear teeth are presented, and design procedures for specifying gear-tooth geometry and material are given to produce a safe, long-life gear transmission system.

Chapter 10: Helical Gears, Bevel Gears, and Wormgearing contains approaches similar to those described for spur gears, with special attention to the unique geometry of these types of gears.

Chapter 11: Keys, Couplings, and Seals discusses how to design keys to be safe under the prevailing loads caused by the torque transmitted by them from the shaft to the gears or other elements. Couplings must be specified that accommodate the possible

misalignment of connected shafts while transmitting the required torque at operating speeds. Seals must be specified for shafts that project through the sides of the housing and for bearings that must be kept free of contaminants. The maintenance of a reliable supply of clean lubricant for the active elements is essential.

Chapter 12: Shaft Design discusses the fact that in addition to being designed to safely transmit the required torque levels at given speeds, the shafts will probably have several diameters and special features to accommodate keys, couplings, retaining rings, and other details. Shaft deflections, vibration, and the dynamic performance of the shaft assembly must also be considered. The dimensions of all features must be specified, along with the tolerances on the dimensions and surface finishes. Completion of these tasks requires some of the skills developed in following chapters. So you will have to come back to this task later.

Chapter 13: Tolerances and Fits discusses the fit of elements that are assembled together and that may operate on one another; this fit is critical to the performance and life of the elements. In some cases, such as fitting the inner race of a ball or roller bearing onto a shaft, the bearing manufacturer specifies the allowable dimensional variation on the shaft so that it is compatible with the tolerances to which the bearing is produced. There is typically an interference fit between the bearing inner race and the shaft diameter where the bearing is to be mounted. But there is a close sliding fit between the outer race and the housing that holds the bearing in place. In general, it is important for you to take charge of specifying the tolerances for all dimensions to ensure proper operation while allowing economical manufacture.

Chapter 14: Rolling Contact Bearings focuses on commercially available rolling contact bearings such as ball bearings, roller bearings, and tapered roller bearings. You must be able to compute or specify the loads that the bearings will support, their speed of operation, and their expected life. From these data, standard bearings from manufacturers' catalogs will be specified. Then you must review the design process for the shafts as described for Chapter 12 to complete the specification of dimensions and tolerances. It is likely that iteration among the design processes for the power transmission elements, the shafts, and the bearings will be needed to achieve an optimum arrangement.

Chapter 15: Completion of the Design of a Power Transmission merges all of the preceding topics together. You will resolve the details of the design of each element and ensure the compatibility of mating elements. You will review all previous design decisions and assumptions and verify that the design meets specifications. After the individual elements have been analyzed and the iteration among them is complete, they must be packaged in a suitable housing to hold them securely, to protect them from contaminants, and to protect the people who may work around them. The housing must also be designed to be compatible with the driver and the driven machine. That often requires special fastening provisions and means of locating all connected devices relative to one another. Assembly and service must be considered. Then you will present a final set of specifications for the entire power transmission system and document your design with suitable drawings and a written report.

BELT DRIVES, CHAIN DRIVES, AND WIRE ROPE

The Big Picture

You Are the Designer

- 7–1 Objectives of This Chapter
- 7–2 Kinematics of Belt and Chain Drive Systems
- 7–3 Types of Belt Drives
- 7–4 V-Belt Drives
- 7–5 Synchronous Belt Drives
- 7–6 Chain Drives
- 7–7 Wire Rope

THE BIG PICTURE

Belt Drives, Chain Drives and Wire Rope

Discussion Map

- Belts and chains are the major types of flexible power transmission elements. V-belts operate on smooth sheaves or pulleys, whereas the cogs of synchronous belts operate on sprockets. Chains operate on toothed wheels also called sprockets.
- Wire rope, sometimes called cable, is another type of flexible machine element, used primarily for lifting heavy loads.

Discover

Look around and identify at least one mechanical device having a belt drive, one having a chain drive system, and one using wire rope for lifting.

Describe each drive system, and make a sketch showing how it receives power from some source and how it transfers power to a driven machine.

Describe the differences between belt drives and chain drives.

Describe the application of the wire rope lifting system you have found.

In this chapter, you will learn how to select suitable components for belt drives and chain drives from commercially available designs. You will also learn about available types of wire rope and principles of their application.

Belt drives and chain drives represent the major types of flexible power transmission elements. Figure 7–1 shows a typical industrial application of these elements combined with a gear-type speed reducer. This application illustrates where belts, gear drives, and chains are each used to best advantage.

Rotary power is developed by the electric motor, but motors typically operate at too high a speed and deliver too low a torque to be appropriate for the final drive application. Remember, for a given power transmission, the torque is increased in proportion to the amount that rotational speed is reduced. So some speed reduction is often desirable. The high speed

of the motor makes belt drives somewhat ideal for that first stage of reduction. A smaller drive sheave is attached to the motor shaft, while a larger diameter sheave is attached to a parallel shaft that operates at a correspondingly lower speed. Sheaves for belt drives are also called *pulleys*.

However, if very large ratios of speed reduction are required in the drive, gear reducers are desirable because they can typically accomplish large reductions in a rather small package. The output shaft of the gear-type speed reducer is generally at low speed and high torque. If both speed and torque are satisfactory for the application, it could be directly coupled to the driven machine.

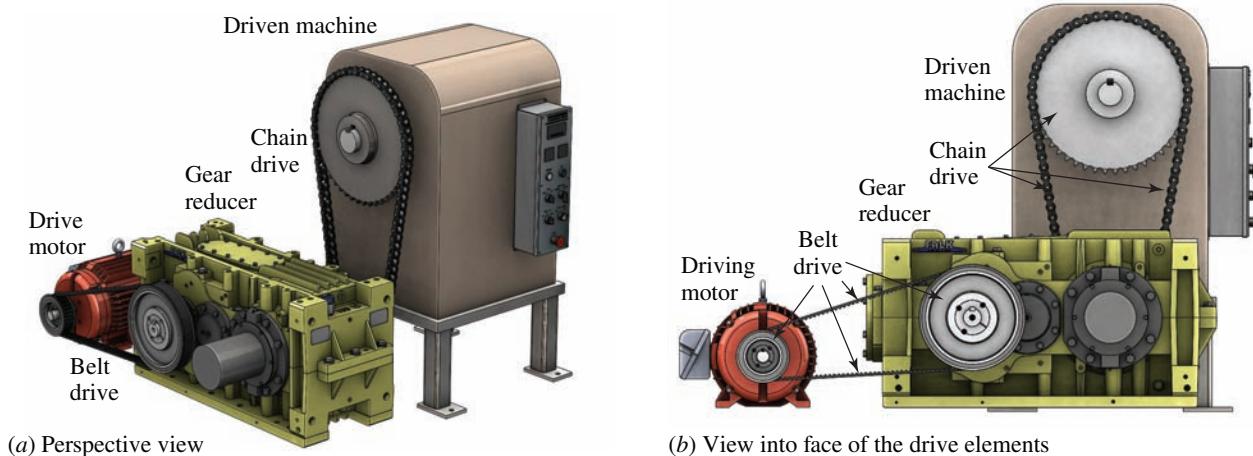


FIGURE 7-1 Drive system for an industrial application employing a belt drive, a gear reducer, and a chain drive

However, because gear reducers are available only at discrete reduction ratios, the output must often be reduced more before meeting the requirements of the driven machine. At the low-speed, high-torque condition, chain drives become desirable. The high torque causes high tensile forces to be developed in the chain. The elements of the chain are typically metal, and they are sized to withstand the high forces. The links of chains are engaged in toothed wheels called *sprockets* to provide positive mechanical drive, desirable at the low-speed, high-torque conditions.

In general, belt drives are applied where the rotational speeds are relatively high, as on the first stage of speed reduction from an electric motor or engine. The linear speed of a belt is usually 2500–6500 ft/min, which results in relatively low tensile forces in the belt. At lower speeds, the tension in the belt becomes too large for typical belt cross sections, and slipping may occur between the sides of the belt and the sheave or pulley that carries it. At higher speeds, dynamic effects such as centrifugal forces, belt whip, and vibration reduce the effectiveness of the drive and its life. A speed of 4000 ft/min is generally ideal.

The *synchronous belt drive* employs precision cogs on the inside surface of the belt that engage in matching grooves in the pulleys to enhance their ability to transmit high forces at low speeds. There is also precise timing between the driver and driven pulleys so this type of belt is sometimes called a *timing belt*. Such belt drives often compete with chain drives and gear drives in some applications.

Where have you seen belt drives? Consider mechanical devices around your home or office;

vehicles; construction equipment; heating, air-conditioning, and ventilation systems; and industrial machinery. Describe their general appearance. To what was the input sheave attached? Was it operating at a fairly high speed? What was the size of the next sheave? Did it cause the second shaft to rotate at a slower speed? How much slower? Were there more stages of reduction accomplished by belts or by some other reducer? Was the belt of the V-belt type operating in smooth v-shaped grooves or was it a synchronous belt having cogs that mate with grooves in sprockets? Make a sketch of the layout of the drive system. Make measurements if you can get access to the equipment safely.

Where have you seen chain drives? One obvious place is likely to be the chain on a bicycle where the sprocket attached to the pedal-crank assembly is fairly large and that attached to the rear wheel is smaller. The drive sprocket and/or the driven sprocket assemblies may have several sizes to allow the rider to select many different speed ratios to permit optimum operation under different conditions of speed and hill-climbing demands. Where else have you seen chain drives? Again consider vehicles, construction equipment, and industrial machinery. Describe and sketch at least one chain drive system.

This chapter will help you learn to identify the typical design features of commercially available belt and chain drives. You will be able to specify suitable types and sizes to transmit a given level of power at a certain speed and to accomplish a specified speed ratio between the input and the output of the drive. Installation considerations are also described so that you can put your designs into successful systems.

YOU ARE THE DESIGNER

A plant in Hawaii that produces sugar needs a drive system designed for a machine that chops long pieces of sugar cane into short lengths prior to processing. The machine's drive shaft is to rotate slowly at 30 rpm so that the cane is chopped smoothly and not beaten. The large machine requires a torque of 31 500 lb · in to drive the chopping blades.

Your company is asked to design the drive, and you are given the assignment. What kind of power source should be used? You might consider an electric motor, a gasoline engine, or a hydraulic motor. Most of these run at relatively high speeds, significantly higher than 30 rpm. Therefore, some type of speed reduction is needed. Perhaps you decide to use a drive similar to that shown in Figure 7–1.

Three stages of speed reduction are used. The input sheave of the belt drive rotates at the speed of the motor, while the larger driven sheave rotates at a slower speed and delivers the power to the input of the gear reducer. The larger part of the speed reduction is likely to be accomplished in the gear reducer, with the output shaft rotating slowly and providing a large torque. Remember, as the speed of rotation of a rotating shaft decreases, the torque delivered increases for a given power transmitted. But because there are only

a limited number of reducer designs available, the output speed of the reducer will probably not be ideal for the cane chopper input shaft. The chain drive then provides the last stage of reduction.

As the designer, you must decide what type and size of belt drive to use and what the speed ratio between the driving and the driven sheave should be. How is the driving sheave attached to the motor shaft? How is the driven sheave attached to the input shaft of the gear reducer? Where should the motor be mounted in relation to the gear reducer, and what will be the resulting center distance between the two shafts? What speed reduction ratio will the gear reducer provide? What type of gear reducer should be used: helical gears, a worm and worm-gear drive, or bevel gears? How much additional speed reduction must the chain drive provide to deliver the proper speed to the cane-chopper shaft? What size and type of chain should be specified? What is the center distance between the output of the gear reducer and the input to the chopper? Then what length of chain is required? Finally, what motor power is required to drive the entire system at the stated conditions? The information in this chapter will help you answer questions about the design of power transmission systems incorporating belts and chains. Gear reducers are discussed in Chapters 8–10.

7-1 OBJECTIVES OF THIS CHAPTER

After completing this chapter, you will be able to:

1. Describe the basic features of a belt drive system.
2. Describe several types of belt drives.
3. Specify suitable types and sizes of belts and sheaves to transmit a given level of power at specified speeds for the input and output sheaves.
4. Specify the primary installation variables for belt drives, including center distance and belt length.
5. Describe the basic features of a chain drive system.
6. Describe several types of chain drives.
7. Specify suitable types and sizes of chains and sprockets to transmit a given level of power at specified speeds for the input and output sprockets.
8. Specify the primary installation variables for chain drives, including center distance between the sheaves, chain length, and lubrication requirements.
9. Describe the basic types of commercially available wire rope, the preferred methods of applying them, and the typical working loads.

7-2 KINEMATICS OF BELT AND CHAIN DRIVE SYSTEMS

Mechanical drives are used to transmit power and rotational motion. A drive system can include chain drives, belt drives, and gear drives. Gear drives will be covered in later chapters. The requirements of the application will determine the selection of the type of drive system. A chain drive may be used when high rotational power is transmitted at relatively slow speeds and when lifting

heavy loads, as on a fork-lift truck. Belt drives are typically used for higher speeds and on applications requiring accurate registration between the shafts of driving and driven machines.

Belts and chains are both flexible elements that transmit power from a driver, such as an electric motor, engine, or turbine to a driven machine. Details of their design are presented in later sections of this chapter. The belts and chains are placed on rotating elements attached to the output shaft of the driver and to the input shaft of the driven machine.

- Belts have continuous cross sections that are mounted on *sheaves*, sometimes called *pulleys*. This chapter discusses two types of belt drives:
 - *V-belts* that operate without slipping on smooth, V-shaped grooves in the sheaves
 - *Synchronous belts* that have molded cogs that engage grooved sprockets producing positive driving
- Chains are comprised of a set of discrete links that engage teeth on *sprockets*, producing positive driving.

The kinematics of the drive system ensures correct relative positioning, angular velocity, and acceleration of the input driver and the driven machine. In each case, the flexible belt or chain has a uniform linear velocity as it passes around its sheave or sprocket. The linear velocity is often called *belt speed* or *chain speed*. The following development relates the linear velocity to the rotational speeds of the driver and the driven machine. Other relevant geometry of the drive system is also developed. Refer to Figures 7–2 to 7–4.

Figure 7–2 shows a simple disk rotating about its center. If the disk (2) is rotating at an angular velocity (ω_A),

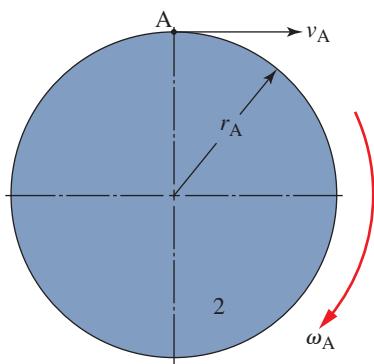


FIGURE 7–2 Linear velocity related to angular velocity of a rotating disk

the linear velocity of point A (v_A), located a distance (r_A) from its axis of rotation is given by the equation

$$v_A = r_A \omega_A \quad (7-1)$$

where

v_A = Linear velocity of point A [in/s], [m/s], [ft/min or fpm]

r_A = Radius to point A [in], [m], [ft]

ω_A = Angular velocity of the disk [rad/s]

This equation allows us to relate the angular velocity (ω) to the linear velocity (v) based on the distance (r) from its axis of rotation. This motion corresponds to the motion of a belt or chain drive system, where the linear velocity of point A is equivalent to the belt or chain linear velocity and the angular velocity of disk 2 is equivalent to the angular velocity of the rotating sprocket or sheave of the drive system. The radius, r , is equal to the radius of the *pitch diameter of the sheave or sprocket*, PD, the kinematically characteristic diameter.

Figure 7–3 shows the pitch diameters on a chain sprocket, synchronous belt sprocket, and a V-belt sheave. Note the following:

- The pitch diameter of a chain sprocket, also called the *pitch circle diameter*, goes through the center of the chain bearing pin when the chain is wrapped around the sprocket.
- The pitch diameter of the synchronous belt sprocket is along the theoretical belt pitch line defined by the belt manufacturer and is always greater than the outside diameter of the grooves on the sprocket.
- The pitch diameter of the V-belt sheave is slightly inside the top of the cross section of the belt near where the tensile cords are placed.

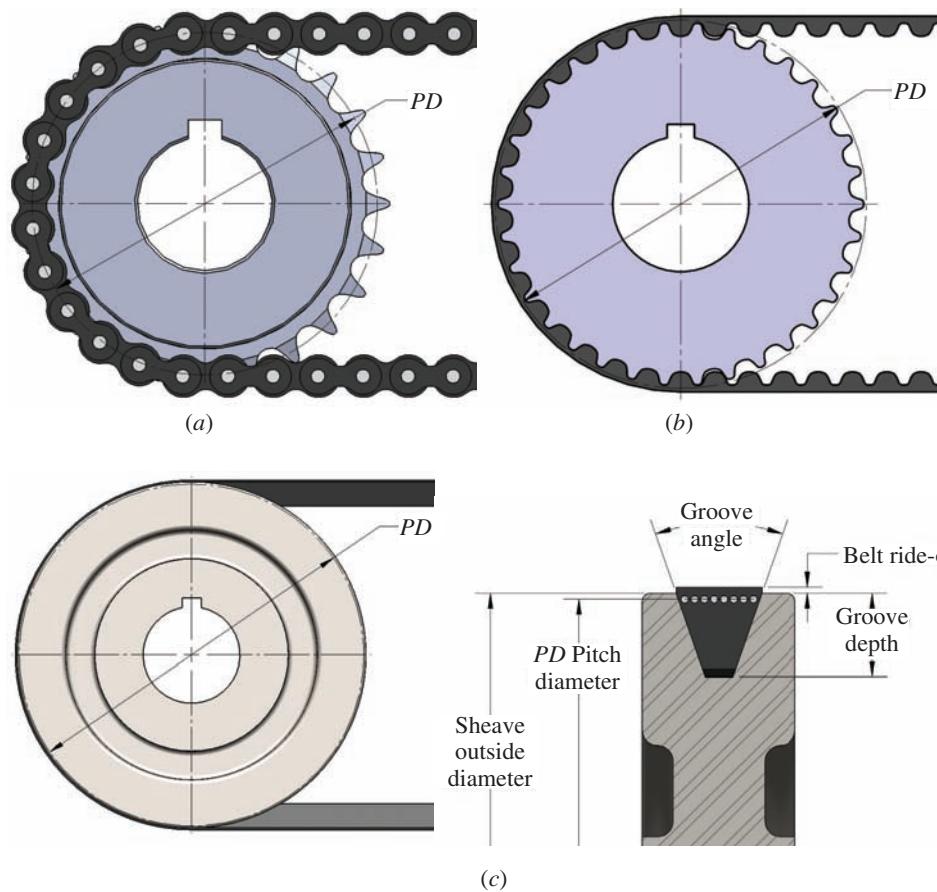


FIGURE 7–3 Pitch diameter on a (a) chain sprocket, (b) synchronous belt sprocket, and (c) V-belt sheave with section view

Typically the input sprocket/sheave is rotating at a faster speed than the output sprocket/sheave. This is called a *speed reducer* and is very common in many applications. When the belt or chain is used for a speed reduction, the smaller sprocket/sheave is mounted on the high-speed shaft, such as an electrical motor. The larger sprocket/sheave is mounted on the driven machine where the shaft is turning at a slower speed. The other scenario is when the output sprocket is rotating faster than the input sprocket and is called a *speed increaser*. In this case, the larger sprocket/sheave is mounted on the input shaft and the smaller sprocket/sheave is mounted on the output shaft.

The belt or chain linear velocity is uniform throughout its length, and it can be related to the angular velocities of the driving sprocket and driven sprocket using the following equation, based on Equation (7-1) developed earlier. Figure 7-4 shows the basic layout where ω_1 is equal to the input angular velocity ($\omega_{driving}$) and ω_2 is equal to the output angular velocity (ω_{driven}).

$$\nu \frac{belt}{chain} = \frac{PD_{driving}}{2} \cdot \omega_{driving} = \frac{PD_{driven}}{2} \cdot \omega_{driven} \quad (7-2)$$

Letting the driving member to be 1 as used in Figure 7-4 and the driven member to be 2, we can restate Equation (7-2) as

$$\nu \frac{belt}{chain} = \frac{PD_1}{2} \cdot \omega_1 = \frac{PD_2}{2} \cdot \omega_2 \quad (7-3)$$

Since the belt or chain linear velocity is the same for both the driving and driven sprockets, we can equate the last two parts of Equation (7-2) and define the velocity ratio, VR, which is the driving angular velocity over the driven angular velocity. The angular velocity ratio can

also be expressed by the ratios of the pitch diameters or the numbers of teeth of the driving and driven sprockets.

$$VR = \frac{\omega_{driving}}{\omega_{driven}} = \frac{PD_{driven}}{PD_{driving}} = \frac{N_{driven}}{N_{driving}} \quad (7-4)$$

The angle of wrap on the driving and driven sprockets can be found from,

$$\sin(\phi) = \frac{\left(\frac{PD_2 - PD_1}{2} \right)}{CD} \quad (7-5)$$

The angle of wrap on sprocket (1)

$$\theta_1 = 180^\circ - 2 \cdot \phi \quad (7-6)$$

The angle of wrap on sprocket (2)

$$\theta_2 = 180^\circ + 2 \cdot \phi \quad (7-7)$$

The length of the belt or chain wrap on sprocket 1 and sprocket 2 is the arc length s_1 and s_2 .

$$s_1 = \frac{PD_1}{2} \cdot \theta_1 \quad (7-8)$$

$$s_2 = \frac{PD_2}{2} \cdot \theta_2 \quad (7-9)$$

where θ_1 and θ_2 are in radians.

The distance, d , represents the belt or chain length that is tangent to sprocket 1 and sprocket 2.

$$d = CD \cdot \cos\phi \quad (7-10)$$

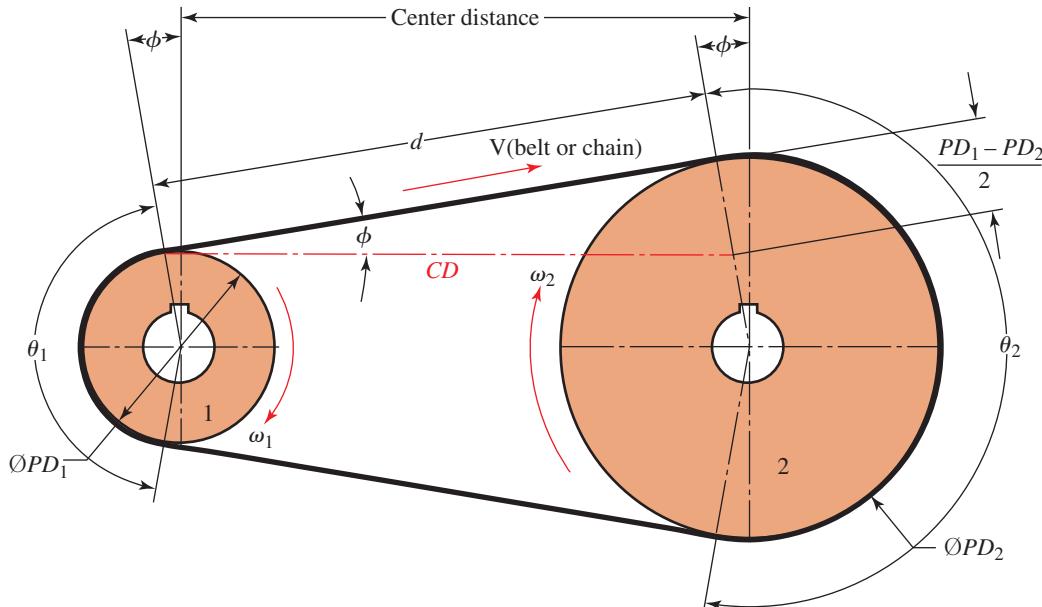


FIGURE 7-4 Belt/chain drive configuration

The belt or chain perimeter length, L_p , can now be calculated.

$$\begin{aligned} \text{Belt or chain perimeter length} &= L_p \\ L_p &= 2 \cdot d + s_1 + s_2 \quad (7-11) \end{aligned}$$

The distance, d , is often called the *span* of the belt or chain drive system, giving the unsupported length of the belt or chain. Long spans sometimes lead to vibration during operation, called *whip*, and should be avoided where possible.

Example Problem

7-1

A synchronous belt drive system shown in Figure 7-5 is used as a speed reducer. The input shaft rotates at 1000 rpm and has a 36-tooth sprocket with a pitch diameter of 3.609 in. The output shaft has a 72-tooth sprocket with a pitch diameter of 7.218 in. The center distance between the two shafts is 15.01 in.

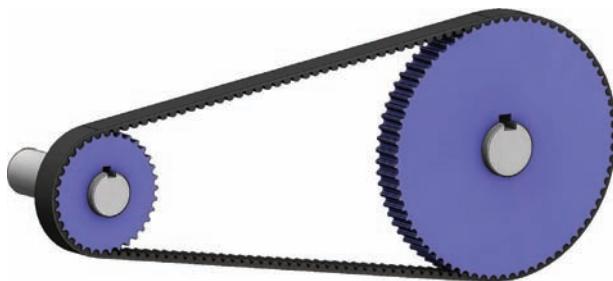


FIGURE 7-5 Speed reducer belt drive

Determine the following for the belt drive:

- The velocity ratio
- The angular velocity of the output shaft
- The linear belt speed
- The belt wrap on the input and output sprockets
- The belt perimeter length
- Optional: Draw the schematic of the belt drive system using CAD

Solution

Objective Use the equations developed in this section to solve for the kinematics of the belt drive system.

| | | | |
|-------|---------------------------|--|---|
| Given | $N_{\text{driving}} = 36$ | $PD_{\text{driving}} = 3.609 \text{ in}$ | $n_{\text{driving}} = 1000 \text{ rpm}$ |
| | $N_{\text{driven}} = 72$ | $PD_{\text{driven}} = 7.218 \text{ in}$ | |
| | $CD = 15.01 \text{ in}$ | | |

Results a. Use Equation (7-4) to calculate the velocity ratio.

$$\begin{aligned} VR &= \frac{\omega_{\text{driving}}}{\omega_{\text{driven}}} = \frac{PD_{\text{driven}}}{PD_{\text{driving}}} = \frac{N_{\text{driven}}}{N_{\text{driving}}} \\ VR &= \frac{72}{36} = 2.0 \end{aligned}$$

This tells us the input sprocket turns twice as fast as the output sprocket and the belt drive is a speed reducer. The velocity ratio can be used to find the reduced speed of the output shaft.

- b. Manipulating Equation (7-4), we can now solve for the driven speed of the output shaft.

$$\begin{aligned} \omega_{\text{driven}} &= \frac{\omega_{\text{driving}}}{VR} \\ \omega_{\text{driven}} &= \frac{1000 \text{ rpm}}{2} \\ \omega_{\text{driven}} &= 500 \text{ rpm} \end{aligned}$$

c. The belt linear velocity can be calculated using Equation (7-2)

$$v_{belt} = \frac{PD_{driving}}{2} \cdot \omega_{driving} = \frac{PD_{driven}}{2} \cdot \omega_{driven}$$

Using the input sprocket,

$$v_{belt} = \frac{3.609 \text{ in}}{2} \cdot 1000 \text{ rpm} \cdot \frac{2 \cdot \pi \text{ rad}}{1 \text{ rev}} \cdot \frac{1 \text{ ft}}{12 \text{ in}} = 944.83 \text{ fpm}$$

Using the output sprocket,

$$v_{belt} = \frac{7.218 \text{ in}}{2} \cdot 500 \text{ rpm} \cdot \frac{2 \cdot \pi \text{ rad}}{1 \text{ rev}} \cdot \frac{1 \text{ ft}}{12 \text{ in}} = 944.83 \text{ fpm}$$

d. In order to solve for the angle of the belt wrap on both sprockets, first we need to find the angle \emptyset using Equation (7-5)

$$\begin{aligned} \sin(\emptyset) &= \frac{\left(\frac{PD_2 - PD_1}{2} \right)}{CD} \\ \sin(\emptyset) &= \frac{\left(\frac{7.218 \text{ in} - 3.609}{2} \right)}{15.01 \text{ in}} = 0.120 \\ \emptyset &= \sin^{-1}(0.120) \\ \emptyset &= 6.905^\circ \end{aligned}$$

The angle of wrap on sprocket (1) is given by Equation (7-6)

$$\begin{aligned} \theta_1 &= 180^\circ - 2 \cdot \emptyset \\ \theta_1 &= 180^\circ + 2 \cdot 6.905^\circ \\ \theta_1 &= 166.2^\circ \end{aligned}$$

The angle of wrap on sprocket (2) is given by Equation (7-7)

$$\begin{aligned} \theta_2 &= 180^\circ + 2 \cdot \emptyset \\ \theta_2 &= 180^\circ - 2 \cdot 6.905^\circ \\ \theta_2 &= 193.8^\circ \end{aligned}$$

e. To find the belt perimeter length, the belt span distance and the arc lengths of belt wrap on both sprockets need to be found. Use Equation (7-10) to first calculate the belt span distance, d

$$\begin{aligned} d &= CD \cdot \cos \emptyset \\ d &= 15.01 \text{ in} \cdot \cos(6.905^\circ) \\ d &= 14.90 \text{ in} \end{aligned}$$

Next solve for the arc length s_1 using Equation (7-8),

$$\begin{aligned} s_1 &= \frac{PD_1}{2} \cdot \theta_1 \\ s_1 &= \frac{3.609 \text{ in}}{2} \cdot 166.2^\circ \cdot \frac{2 \cdot \pi \text{ rad}}{360^\circ} \\ s_1 &= 5.23 \text{ in} \end{aligned}$$

Now solve for the arc length s_2 using Equation (7-9),

$$s_2 = \frac{PD_2}{2} \cdot \theta_2$$

$$s_2 = \frac{7.218 \text{ in}}{2} \cdot 193.8^\circ \cdot \frac{2 \cdot \pi \text{ rad}}{360^\circ}$$

$$s_2 = 12.21 \text{ in}$$

Lastly, use Equation (7-11) to add the belt span distance and the two arc lengths to solve for the belt perimeter length,

$$\text{Belt perimeter length} = 2 \cdot d + s_1 + s_2$$

$$\text{Belt perimeter length} = 2 \cdot 14.90 \text{ in} + 5.23 \text{ in} + 12.21 \text{ in}$$

$$\text{Belt perimeter length} = 47.24 \text{ in}$$

The belt perimeter length would be used to purchase the correct belt length from the belt manufacturer. Since belt manufacturer make belts of specific lengths, the calculated center distance and belt perimeter length must correspond to the manufacturer's belt specifications.

- f. The layout of the belt drive system using a CAD package is shown in Figure 7-6.

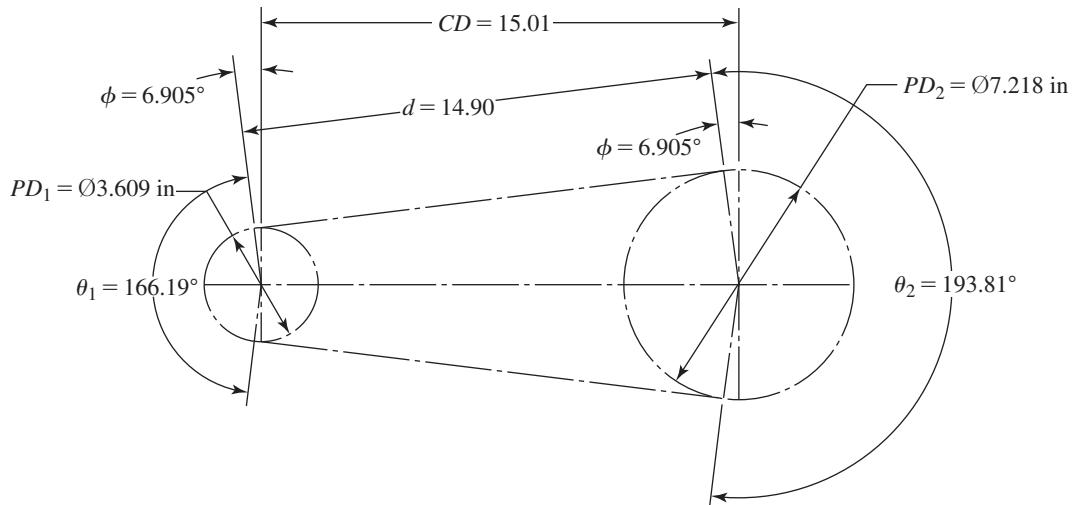


FIGURE 7-6 Schematic drawing of the speed reducer belt drive for Example Problem 7-1

7-3 TYPES OF BELT DRIVES

A belt is a flexible power transmission element that seats tightly on a set of pulleys, sprockets, or sheaves. Figure 7-4 shows the basic layout.

Many types of belts are available: flat belts, grooved or cogged belts, standard V-belts, double-angle V-belts, and others. See Figure 7-7 for examples. References 3a–g and 4–8 give more examples and technical data. See also Internet sites 2–6, 8–11, 14, and 16 for industry data.

The *flat belt* is the simplest type, often made from leather or rubber-coated fabric. The sheave surface is also flat and smooth, and the driving force

is therefore limited by the pure friction between the belt and the sheave. Some designers prefer flat belts for delicate machinery because the belt *will* slip if the torque tends to rise to a level high enough to damage the machine. The design of flat belt drives is not covered in this book.

Synchronous belts, sometimes called *timing belts* [see Figure 7-7(b)], ride on sprockets having mating grooves into which the teeth on the belt seat. This is a positive drive, limited only by the tensile strength of the belt and the shear strength of the teeth. See Section 7-6.

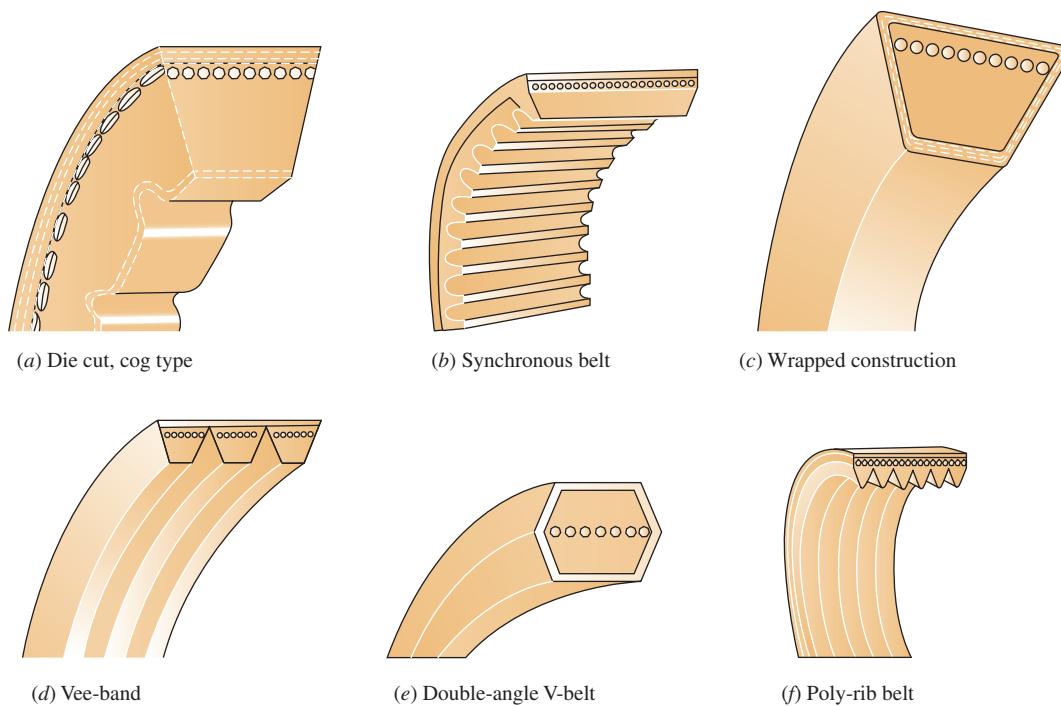


FIGURE 7-7 Examples of belt construction

The belt is installed by placing it around the two sheaves while the center distance between them is reduced. Then the sheaves are moved apart, placing the belt in a rather high initial tension. When the belt is transmitting power, friction causes the belt to grip the driving sheave, increasing the tension in one side, called the "tight side," of the drive. The tensile force in the belt exerts a tangential force on the driven sheave, and thus a torque is applied to the driven shaft. The opposite side of the belt is still under tension, but at a smaller value. Thus, it is called the "slack side."

Some cog belts, such as that shown in Figure 7-7(a), are applied to standard V-grooved sheaves. The cogs give the belt greater flexibility and higher efficiency compared with standard belts. They can operate on smaller sheave diameters.

A widely used type of belt, particularly in industrial drives and vehicular applications, is the *V-belt drive*, shown in Figures 7-7(a) and 7-7(c). Figure 7-8 shows the V-belt section seated in its groove in the sheave. The V-shape causes the belt to wedge tightly into the groove, increasing friction and allowing high torques to be transmitted before slipping occurs. Most belts have high-strength cords positioned at the pitch diameter of the belt cross section to increase the tensile strength of the belt. The cords, made from natural fibers, synthetic strands, or steel, are embedded in a firm rubber compound to provide the flexibility needed to allow the belt to pass around the sheave. Often an outer fabric cover is added to give the belt good durability. The belt is designed to ride around the two sheaves without slipping.

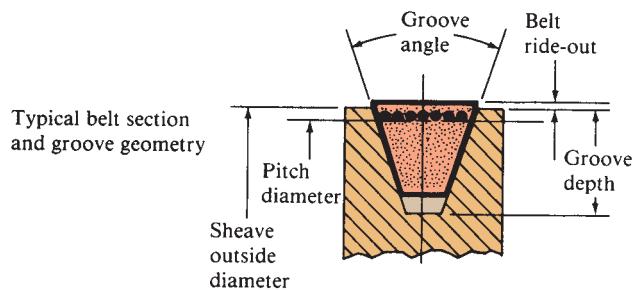


FIGURE 7-8 Cross section of V-belt and sheave groove

The groove angle ranges from 34° to 42° depending on the belt cross-section style and the pitch diameter. Refer to manufacturer's data for sheaves.

7-4 V-BELT DRIVES

The typical arrangement of the elements of a V-belt drive is shown in Figure 7-4. The geometry and kinematics of the drive were described in Section 7-2. Equations 7-1 through 7-11 can be used as part of the belt drive design process. Other relationships are added in this section. The important design-related observations to be derived from this arrangement are summarized as follows:

1. The relationships between perimeter length, L_p , center distance, CD , and the sheave diameters are given as

$$L_p = 2CD + 1.57(D_2 + D_1) + \frac{(D_2 - D_1)^2}{4CD} \quad (7-12)$$

$$CD = \frac{B + \sqrt{B^2 - 32(D_2 - D_1)^2}}{16} \quad (7-13)$$

where $B = 4L_p - 6.28(D_2 + D_1)$

2. The angle of contact of the belt on each sheave can be found directly by combining Equations (7-5) to (7-7) from Section 7-2, yielding

$$\theta_1 = 180^\circ - 2 \sin^{-1} \left[\frac{D_2 - D_1}{2CD} \right] \quad (7-14)$$

$$\theta_2 = 180^\circ + 2 \sin^{-1} \left[\frac{D_2 - D_1}{2CD} \right] \quad (7-15)$$

These angles are important because commercially available belts are rated with an assumed contact angle of 180° . This will occur only if the drive ratio is 1 (no speed change). The angle of contact on the smaller of the two sheaves of unequal diameters will always be less than 180° , requiring a lower power rating.

3. In place of Equation (7-10) for the span, d , the following equation can be used. The length of the span between the two sheaves, over which the belt is unsupported, is

$$d = \sqrt{CD^2 - \left[\frac{D_2 - D_1}{2} \right]^2} \quad (7-16)$$

This is important for two reasons: You can check the proper belt tension by measuring the amount of force required to deflect the belt at the middle of the span by a given amount. Also, the tendency for the belt to vibrate or whip is dependent on this length as reported in Section 7-2.

4. The contributors to the stress in the belt are as follows:
- The tensile force in the belt, maximum on the tight side of the belt.
 - The bending of the belt around the sheaves, maximum as the tight side of the belt bends around the smaller sheave.
 - Centrifugal forces created as the belt moves around the sheaves.

The maximum total stress occurs where the belt enters the smaller sheave, and the bending stress is a major part. Thus, there are recommended minimum sheave diameters for standard belts. Using smaller sheaves drastically reduces belt life.

5. The design value of the ratio of the tight side tension to the slack side tension is 5.0 for V-belt drives. The actual value may range as high as 10.0.

Standard V-Belt Cross Sections

Commercially available V-belts are made to one of the standards shown in Figures 7-9 through 7-12. The alignment between the inch sizes and the metric sizes indicates that the paired sizes are actually the same cross section. A “soft conversion” was used to rename the familiar inch sizes with the number for the metric sizes giving the nominal top width in millimeters.

The nominal value of the included angle between the sides of the V-groove ranges from 34° to 42° . The angle on the belt may be slightly different to achieve a tight fit in the groove. Some belts are designed to “ride out” of the groove somewhat.

The designations shown for the various cross sections apply when the belt construction is like that shown in Figure 7-7(c). For the cog-type belt [Figure 7-7(a)] of the same cross section, the letter X is added to the designation. For example, a 5V belt has a smooth inner surface, while a 5VX belt is of the cog type. Power transmission ratings are typically higher for the cogged type because they bend more easily around the sheaves with less stress in the belt.

Single automotive V-belts have cross sections ranging across the nine sizes shown in Figure 7-12 and may have either the smooth or cogged (X) type inner surfaces. Many applications employ the vee-band [Figure 7-7(d)] or the poly-rib style [Figure 7-7(f)]. Refer to References 3a, 3f, 5, or 8.

V-Belt Drive Design

The factors involved in the selection of a V-belt and the driving and driven sheaves and proper installation of the drive are summarized in this section. Abbreviated examples of the data available from suppliers are given for illustration. Catalogs contain extensive data, and step-by-step instructions are given for their use. The basic data required for drive selection are the following:

- The rated power of the driving motor or other prime mover
- The service factor based on the type of driver and driven load
- The center distance
- The power rating for one belt as a function of the size and speed of the smaller sheave
- The belt length
- The size of the driving and driven sheaves
- The correction factor for belt length
- The correction factor for the angle of wrap on the smaller sheave
- The number of belts
- The initial tension on the belt

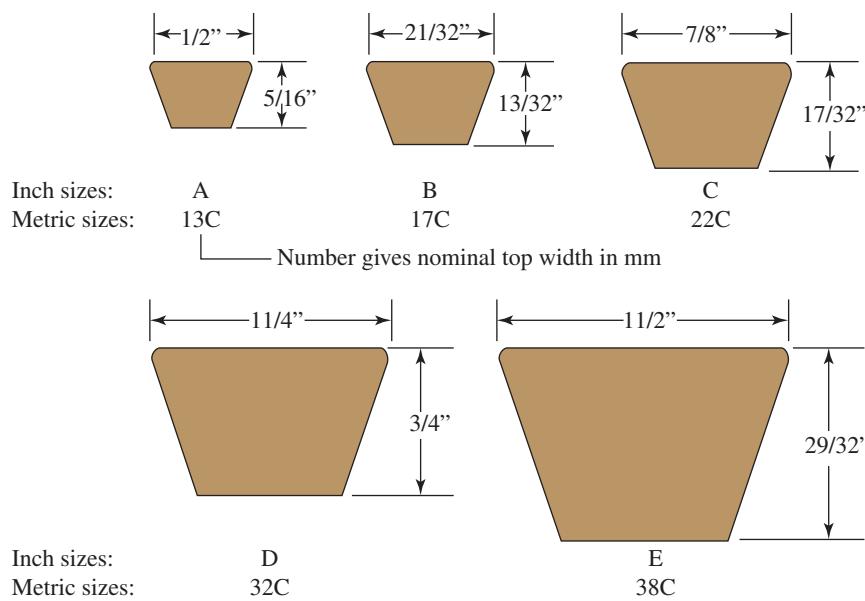


FIGURE 7-9 Heavy-duty industrial V-belts

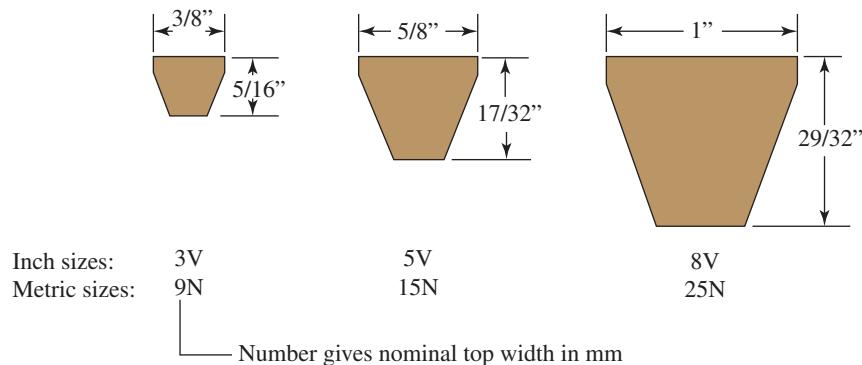


FIGURE 7-10 Industrial narrow-section V-belts

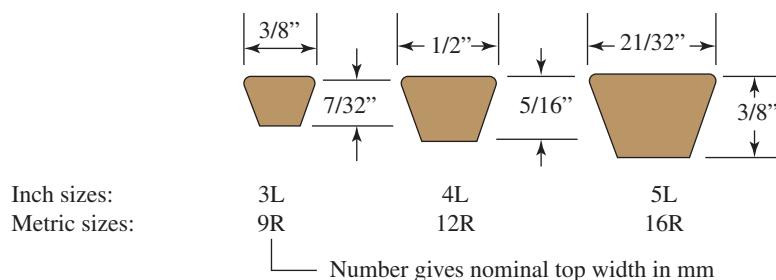
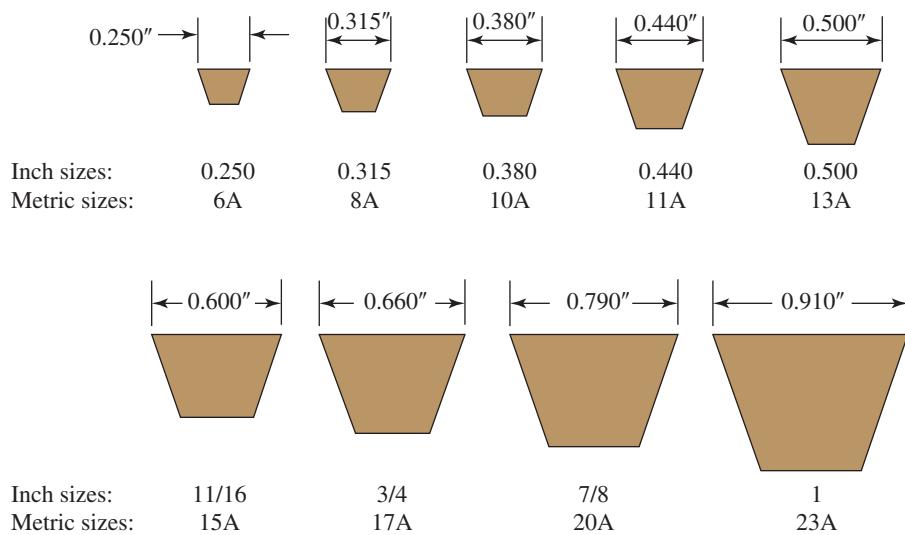


FIGURE 7-11 Light-duty, fractional horsepower (FHP) V-belts

Many design decisions depend on the application and on space limitations. A few guidelines are given as follows:

- The recommended maximum reduction ratio for a plain V-belt drive is 6:1. For cogged belts it is 7:1.
- For higher desired ratios use two or more stages of reduction.
- Adjustment for the center distance must be provided in both directions from the nominal value. The center

**FIGURE 7-12** Automotive V-belts

distance must be shortened at the time of installation to enable the belt to be placed in the grooves of the sheaves without force. Provision for increasing the center distance must be made to permit the initial tensioning of the drive and to take up for belt stretch. Manufacturers' catalogs give the data. One convenient way to accomplish the adjustment is the use of a take-up unit, as shown in Figures 14–10(b) and (c).

- If fixed centers are required, idler pulleys should be used. It is best to use a grooved idler on the inside of the belt, close to the large sheave. Adjustable tensioners are commercially available to carry the idler. More discussion of the use of idlers is included in Section 7–6.
 - The nominal range of center distances should be
- $$D_2 < CD < 3(D_2 + D_1) \quad (7-17)$$
- The angle of wrap on the smaller sheave should be greater than 120°.
 - Because of balancing, centrifugal stresses, belt whip, and other dynamic considerations, belt speeds should be under 5000 ft/min or the supplier of the sheaves should be consulted. A recommended maximum belt speed is 6500 ft/min.
 - Consider an alternative type of drive, such as a gear type, synchronous belt drive, or chain, if the belt speed is less than 1000 ft/min.
 - Avoid elevated temperatures around belts.
 - Ensure that the shafts carrying mating sheaves are parallel and that the sheaves are in alignment so that the belts track smoothly into the grooves.
 - In multibelt installations, matched belts are required. Match numbers are printed on industrial belts, with 50 indicating a belt length very close to nominal.

Longer belts carry match numbers above 50; shorter belts below 50.

- Belts must be installed with the initial tension recommended by the manufacturer. Tension should be checked after the first few hours of operation because seating and initial stretch occur.
- Reported power transmission ratings typically are based on belt life of approximately 5000–7000 hours of operation and about 25 000 hours for the sheaves.

Design Data

Catalogs from commercial belt drive manufacturers typically give several dozen pages of design data for the various sizes of belts and sheave combinations to ease the job of drive design. See Internet sites 3–6, 8, and 16 for examples. The data typically are given in tabular form. Graphical form is used here so that you can get a feel for the variation in performance with design choices. Any design made from the data in this book should be checked against a particular manufacturer's ratings before use.

The data given here are for the narrow-section belts: 3V, 5V, and 8V. These three sizes cover a wide range of power transmission capacities. Note that the cogged versions of these narrow section belts—3VX, 5VX, and 8VX—have higher power ratings and are reported separately in catalogs. Figure 7–13 can be used to choose the basic size for the belt cross section. Note that the power axis is *design power*, the rated power of the prime mover times the service factor from Table 7–1.

Figures 7–13 to 7–19 and Tables 7–1 and 7–2 are for use in problem solving in this book and they are similar to those found in many manufacturers' catalogs, but they

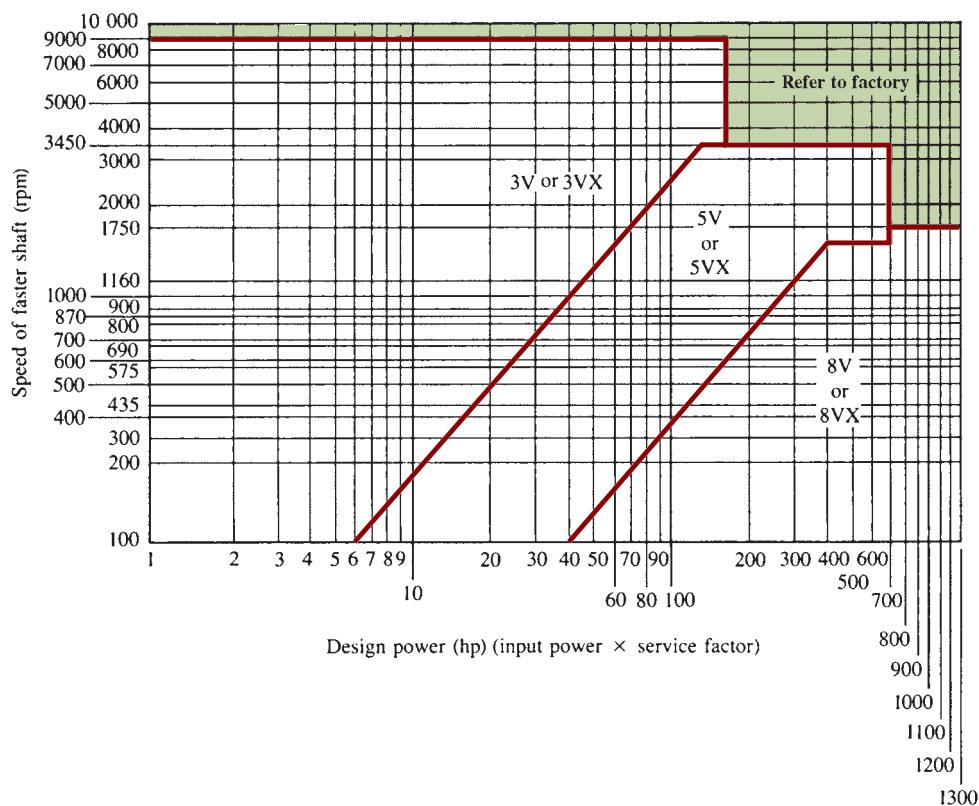


FIGURE 7-13 Sample selection chart for narrow-section industrial V-belts

TABLE 7-1 V-Belt Service Factors¹

| Driven machine type | Driver type | | | | | |
|--|---|----------------|---------------|--|----------------|---------------|
| | AC motors: Normal torque ² DC motors: Shunt-wound Engines: Multiple-cylinder | | | AC motors: High torque ³ DC motors: Series-wound, or compound-wound Engines: 4-cylinder or less | | |
| | <6 h per day | 6–15 h per day | >15 h per day | <6 h per day | 6–15 h per day | >15 h per day |
| Smooth loading Agitators, light conveyors, centrifugal pumps fans and blowers under 10 hp (7.5 kW) | 1.0 | 1.1 | 1.2 | 1.1 | 1.2 | 1.3 |
| Light shock loading Generators, machine tools mixers, fans and blowers over 10 hp (7.5 kW) gravel conveyors | 1.1 | 1.2 | 1.3 | 1.2 | 1.3 | 1.4 |
| Moderate shock loading Bucket elevators, piston pumps textile machinery, hammer mills heavy conveyors, pulverizers | 1.2 | 1.3 | 1.4 | 1.4 | 1.5 | 1.6 |
| Heavy shock loading Crushers, ball mills, hoists rubber mills, and extruders | 1.3 | 1.4 | 1.5 | 1.5 | 1.6 | 1.8 |
| Machinery that can choke | 2.0 | 2.0 | 2.0 | 2.0 | 2.0 | 2.0 |

¹Factors given are for speed reducers. For speed increases, multiply listed factors by 1.2.²Synchronous, split-phase, three-phase with starting torque or breakdown torque less than 175% of full-load torque.³Single-phase, three-phase with starting torque or breakdown torque greater than 175% of full-load torque.

do not represent any particular company's data. Refer to Internet Sites 3–6, 8, 9, 14, and 16 for examples of V-belt drive products and specific design data.

Reference 3c gives the generic formula for the power rating of a V-belt as

$$P_{\text{nom}} = K(P_b + \Delta P_R + \Delta P_L)$$

Where,

K = factor based on the angle of wrap on the sheave

P_b = Basic power rating for a ratio of 1.0 and a set belt length

ΔP_R = Added power capacity based on speed ratio

ΔP_L = Added power capacity based on belt length

Additional detail is provided in the reference for the individual terms. Manufacturers provide rating data for the particular styles and quality factors for their products. This section gives sample data to demonstrate the process for specifying a particular belt design.

Figures 7–14 to 7–16 give the rated power per belt for the three cross sections as a function of the pitch diameter of the smaller sheave and its speed of rotation.

The labeled vertical lines in each figure give the standard sheave pitch diameters available.

The basic power rating for a speed ratio of 1.00 is given as the solid curve. A given belt can carry a greater power as the speed ratio increases, up to a ratio of approximately 3.38. Further increases have little effect and may also lead to trouble with the angle of wrap on the smaller sheave. Figure 7–17 is a plot of the data for power to be added to the basic rating as a function of speed ratio for the 5V belt size. The catalog data are given in a step-wise fashion. The maximum power added, for ratios of above 3.38, was used to draw the dashed curves in Figures 7–14 to 7–16. In most cases, a rough interpolation between the two curves is satisfactory.

Figure 7–18 gives the value of a correction factor, C_θ , as a function of the angle of wrap of the belt on the small sheave.

Figure 7–19 gives the value of the correction factor, C_L , for belt length. A longer belt is desirable because it reduces the frequency with which a given part of the belt encounters the stress peak as it enters the small sheave. Only certain standard belt lengths are available. For problems in this book, we use those listed in Table 7–2.

Example Problem 7–1 illustrates the use of the design data.

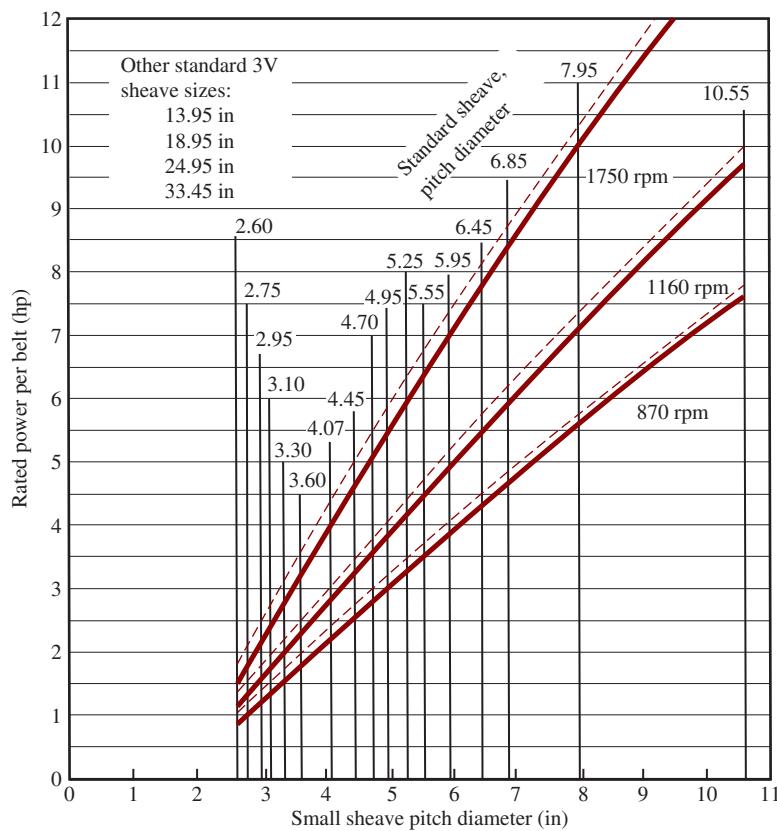


FIGURE 7–14 Power rating: 3V belts

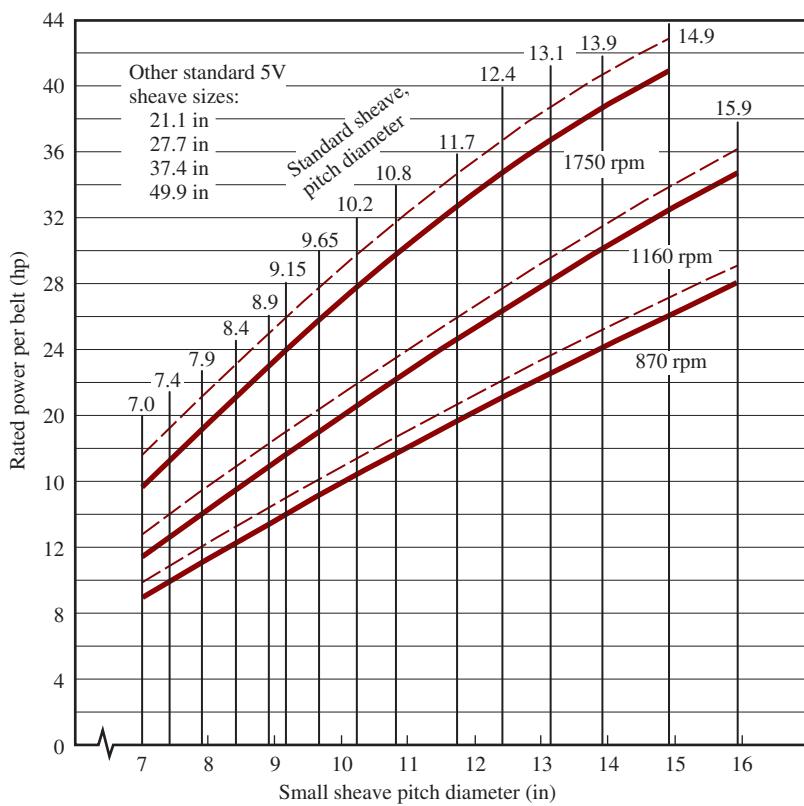


FIGURE 7-15 Power rating: 5V belts

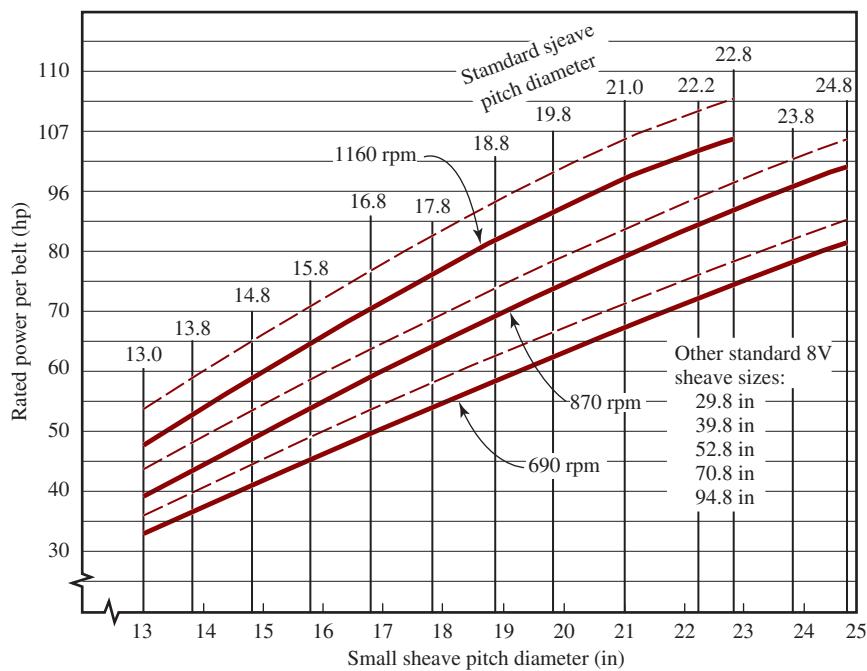


FIGURE 7-16 Power rating: 8V belts

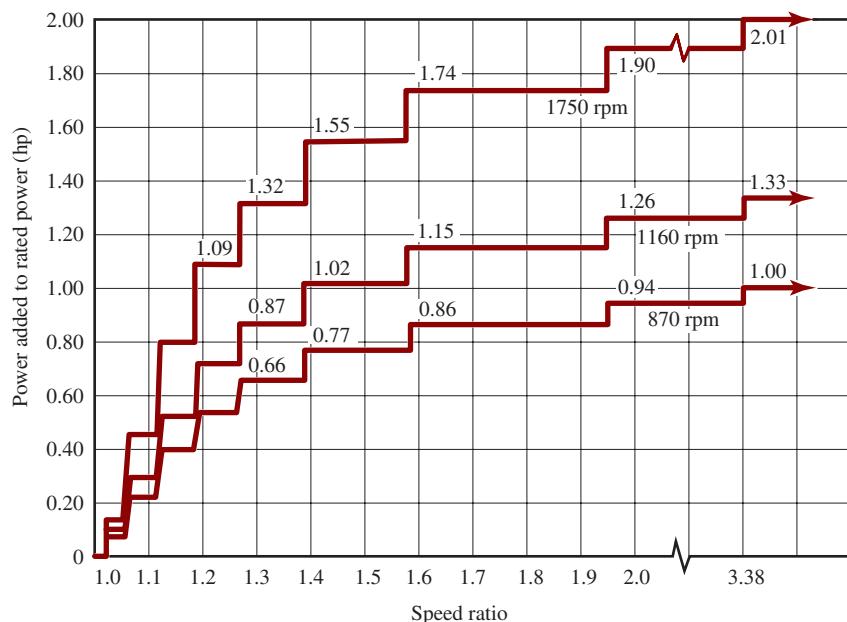


FIGURE 7-17 Power added versus speed ratio: 5V belts

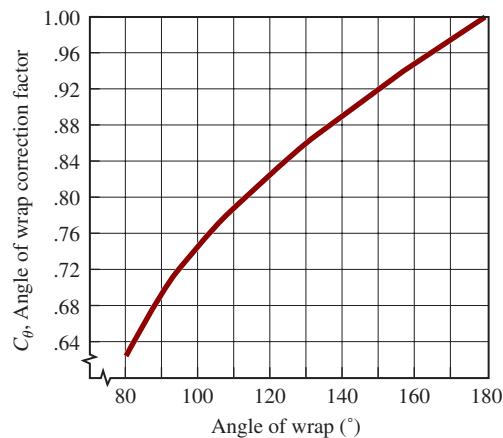


FIGURE 7-18 Angle of wrap correction factor, C_θ

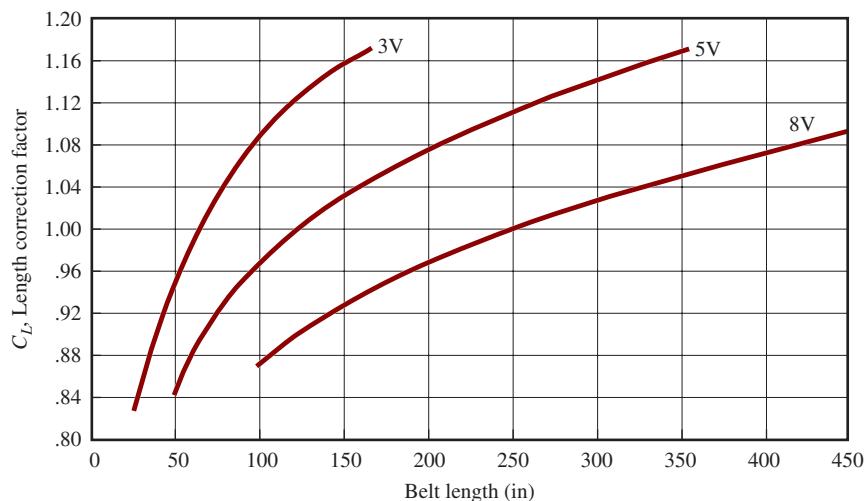


FIGURE 7-19 Belt length correction factor, C_L

TABLE 7-2 Standard Belt Lengths for 3V, 5V, and 8V Belts (in)

| 3V only | 3V and 5V | 3V, 5V, and 8V | 5V and 8V | 8V only |
|----------------|------------------|-----------------------|------------------|----------------|
| 25 | 50 | 100 | 150 | 375 |
| 26.5 | 53 | 106 | 160 | 400 |
| 28 | 56 | 112 | 170 | 425 |
| 30 | 60 | 118 | 180 | 450 |
| 31.5 | 63 | 125 | 190 | 475 |
| 33.5 | 67 | 132 | 200 | 500 |
| 35.5 | 71 | 140 | 212 | |
| 37.5 | 75 | | 224 | |
| 40 | 80 | | 236 | |
| 42.5 | 85 | | 250 | |
| 45 | 90 | | 265 | |
| 47.5 | 95 | | 280 | |
| | | | 300 | |
| 165 | | | 315 | |
| | | | 335 | |
| | | | 355 | |

**Example Problem
7-2**

Design a V-belt drive that has the input sheave on the shaft of an electric motor (normal torque) rated at 50.0 hp at 1160-rpm, full-load speed. The drive is to a bucket elevator in a potash plant that is to be used 12 hours (h) daily at approximately 675 rpm.

Solution

Objective Design the V-belt drive.

Given Power transmitted = 50 hp to bucket elevator
Speed of motor = 1160 rpm; output speed = 675 rpm

Analysis Use the design data presented in this section. The solution procedure is developed within the Results section of the problem solution.

Results **Step 1.** Compute the design power. From Table 7-1, for a normal torque electric motor running 12 h daily driving a bucket elevator, the service factor is 1.30. Then the design power is $1.30(50.0 \text{ hp}) = 65.0 \text{ hp}$.

Step 2. Select the belt section. From Figure 7-13, a 5V belt is recommended for 70.0 hp at 1160-rpm input speed.

Step 3. Compute the nominal speed ratio:

$$\text{Ratio} = 1160/675 = 1.72$$

Step 4. Compute the driving sheave size that would produce a belt speed of $v_b = 4000 \text{ ft/min}$, as a guide to selecting a standard sheave, adapted from Equation (7-2):

$$\text{Belt speed} = v_b = \frac{D_1 n_1}{2}$$

Then the required diameter to give $v_b = 4000 \text{ ft/min}$ is

$$D_1 = \frac{2v_b}{n_1} = \frac{2(4000 \text{ ft/min})}{1160 \text{ rev/min}} \times (12 \text{ in/ft})(1 \text{ rev}/(2\pi \text{ rad})) = 13.17 \text{ in}$$

Step 5. Select trial sizes for the input sheave, and compute the desired size of the output sheave. Select a standard size for the output sheave, and compute the actual ratio and output speed.

TABLE 7-3 Trial Sheave Sizes for Example Problem 7-1

| Standard driving sheave size, D_1 | Approximate driven sheave size ($1.72D_1$) | Nearest standard sheave, D_2 | Actual output speed (rpm) |
|-------------------------------------|--|--------------------------------|---------------------------|
| 13.10 | 22.5 | 21.1 | 720 |
| 12.4 | 21.3 | 21.1 | 682 |
| 11.7 | 20.1 | 21.1 | 643 |
| 10.8 | 18.6 | 21.1 | 594 |
| 10.2 | 17.5 | 15.9 | 744 |
| 9.65 | 16.6 | 15.9 | 704 |
| 9.15 | 15.7 | 15.9 | 668 |
| 8.9 | 15.3 | 14.9 | 693 |

For this problem, the trials are given in Table 7-3 (diameters are in inches).

The two trials in **boldface** in Table 7-3 give only about 1% variation from the desired output speed of 675 rpm, and the speed of a bucket elevator is not critical. Because no space limitations were given, let's choose the larger size; $D_1 = 12.4$ in; $D_2 = 21.1$ in.

We can now compute the actual belt speed:

$$v_b = D_1 n_1 / 2 = (12.4 \text{ in}/2)(1160 \text{ rev/min})(2\pi \text{ rad/rev})(1 \text{ ft}/12 \text{ in}) = 3766 \text{ ft/min}$$

Step 6. Determine the rated power from Figures 7-14 to 7-16.

For the 5V belt that we have selected, Figure 7-15 is appropriate. For a 12.4-in sheave at 1160 rpm, the basic rated power is 26.4 hp. Multiple belts will be required. The ratio is relatively high, indicating that some added power rating can be used. This value can be estimated from Figure 7-15 or taken directly from Figure 7-17 for the 5V belt. Power added is 1.15 hp. Then the actual rated power is $26.4 + 1.15 = 27.55$ hp.

Step 7. Specify a trial center distance, CD .

We can use Equation (7-17) to determine a nominal acceptable range for CD :

$$D_2 < CD < 3(D_2 + D_1)$$

$$21.1 < CD < 3(21.1 + 12.4)$$

$$21.1 < CD < 100.5 \text{ in}$$

In the interest of conserving space, let's try $CD = 24.0$ in.

Step 8. Compute the required belt length for our preliminary choices for pitch diameters of the sheaves and this center distance from Equation (7-12):

$$L = 2CD + 1.57(D_2 + D_1) + \frac{(D_2 - D_1)^2}{4C}$$

$$L = 2(24.0) + 1.57(21.1 + 12.4) + \frac{(21.1 - 12.4)^2}{4(24.0)} = 101.4 \text{ in}$$

Step 9. Select a standard belt length from Table 7-2, and compute the resulting actual center distance from Equation (7-13).

In this problem, the nearest standard length is 100.0 in. Then, from Equation (7-13),

$$B = 4L - 6.28(D_2 + D_1) = 4(100) - 6.28(21.1 + 12.4) = 189.6$$

$$CD = \frac{189.6 + \sqrt{(189.6)^2 - 32(21.1 - 12.4)^2}}{16} = 23.30 \text{ in}$$

Step 10. Compute the angle of wrap of the belt on the small sheave from Equation (7-14):

$$\theta_1 = 180^\circ - 2 \sin^{-1} \left[\frac{D_2 - D_1}{2CD} \right] = 180^\circ - 2 \sin^{-1} \left[\frac{21.1 - 12.4}{2(23.30)} \right] = 158^\circ$$

Step 11. Determine the correction factors from Figures 7–18 and 7–19. For $\theta = 158^\circ$, $C_\theta = 0.94$. For $L = 100$ in, $C_L = 0.96$.

Step 12. Compute the corrected rated power per belt and the number of belts required to carry the design power:

$$\text{Corrected power rating per belt} = C_\theta C_L P = (0.94)(0.96)(27.55 \text{ hp}) = 24.86 \text{ hp}$$

Minimum number of belts = Design power/Corrected power rating

Minimum number of belts = $65.0 \text{ hp}/24.86 \text{ hp} = 2.61$ belts (Use 3 belts.)

Comments

Summary of Design

Input: Electric motor, 50.0 hp at 1160 rpm

Service factor: 1.3

Design power: 65.0 hp

Belt: 5V cross section, 100-in length, 3 belts

Sheaves: Driver, 12.4-in pitch diameter, 3 grooves, 5V. Driven, 21.1-in pitch diameter, 3 grooves, 5V

Actual output speed: 682 rpm

Center distance: 23.30 in

Belt Tension

The initial tension given to a belt is critical because it ensures that the belt will not slip under the design load. At rest, the two sides of the belt have the same tension. As power is being transmitted, the tension in the tight side increases while the tension in the slack side decreases. Without the initial tension, the slack side would go totally loose, and the belt would not seat in the groove; thus, it would slip. Manufacturers' catalogs give data for the proper belt-tensioning procedures.

7-5 SYNCHRONOUS BELT DRIVES

Synchronous belts are constructed with ribs or teeth across the underside of the belt, as shown in Figure 7-7(b). The teeth mate with corresponding grooves in the driving and driven pulleys, called sprockets, providing a positive drive without slippage. Therefore, there is a fixed relationship between the speed of the driver and the speed of the driven sprocket. For this reason synchronous belts are often called timing belts and when properly designed will have an efficiency as high as 98%. In contrast, V-belts can creep or slip with respect to their mating sheaves, especially under heavy loads and varying power demand and typically are 95%–98% efficient. The efficiency of properly maintained chain drives range between 92% and 98%. Synchronous action is critical to the successful operation of such systems as printing, material handling, packaging, and assembly. Synchronous belt drives are increasingly being considered for applications in which gear drives or chain drives had been used previously. Synchronous

belts provide a positive and trouble-free transmission of power and offer these advantages:

- High capacity
- Highly accurate registration
- Low vibration
- Low noise
- No lubrication required
- No stretching due to wear
- Corrosion resistance
- Abrasion resistance
- Clean operation

Figure 7-20 shows a synchronous belt mating with the toothed driving sprocket and driven sprocket.

Figure 7-21 shows commonly available commercial shapes for synchronous belts. Two series are in use,



FIGURE 7-20 Synchronous belt on driving and driven sprockets

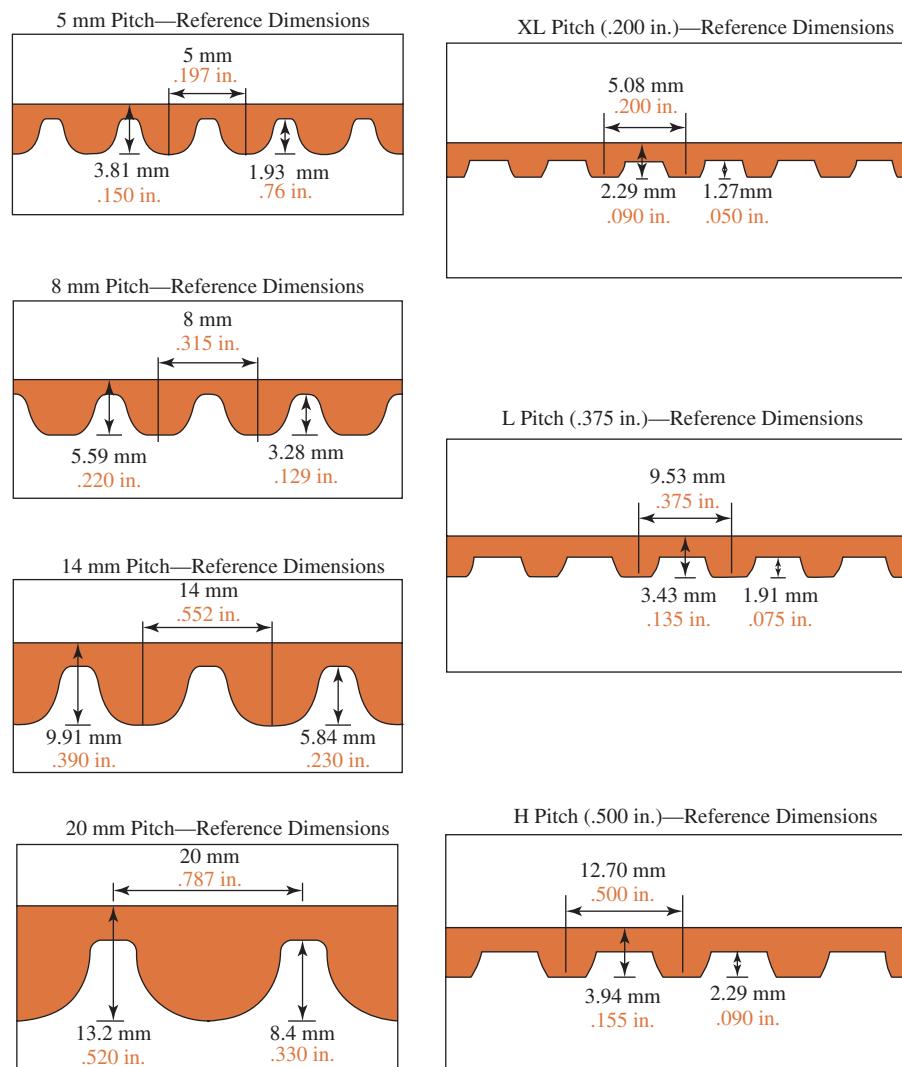


FIGURE 7-21 Sizes and shapes for synchronous belt-cogs.

Metric sizes (mm) and U.S. customary sizes (in). The shapes of the cross sections are drawn full size, showing the pitch lengths from the center of one tooth to the next adjacent tooth. Check individual manufacturers' catalogs for available stock sizes.

The trapezoidal shape of timing belts in Figure 7-22(c) offer better timing and indexing for systems that require

good registration control. The HTD standard curvilinear tooth profile belt in Figure 7-22(b) has a high load-carrying capacity and is used in high-torque applications. HTD belt drives require increased clearance between the belt tooth and the sprocket groove to operate properly. This reduces the registration accuracy of HTD belts. The GT style belt in Figure 7-22(a) has a modified

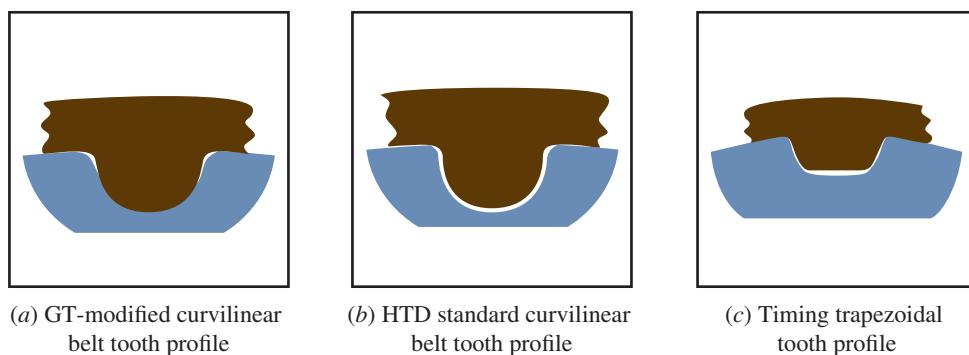


FIGURE 7-22 Belt tooth and pulley groove contact

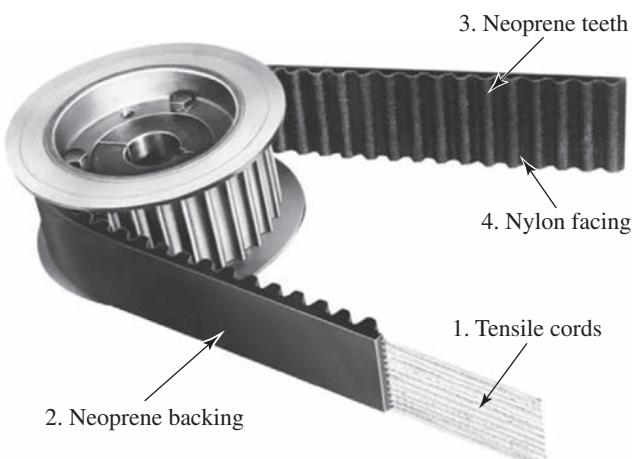


FIGURE 7-23 Synchronous belt construction

curvilinear tooth profile that offers improved indexing accuracy over the HTD style belt, higher load-carrying capacity, and longer life than timing belts.

Figure 7-23 shows detail of the construction of the cross section of a synchronous belt. The tensile strength is provided predominantly by high-strength cords made from fiberglass or similar materials. The cords are encased in a rubber backing material, and the teeth are formed integrally with the backing. Often the fabric covering is used on those parts of the belt that contact the sprockets to provide additional wear resistance and high net shear strength for the teeth.

Various widths of belts are available for each given pitch to provide a wide range of power transmission capacity. Belts are also available in various perimeter lengths. This allows a two sprocket belt drive system to have a wide range of center distances. An example of a belt designation is

Belt Designation: 1760-8MGT-30

The first set of numbers (in mm) represents the belt perimeter, the second set represents the belt pitch with the style of the tooth profile, and the last number represents the belt width. Therefore, this belt has a length of 1760 mm, a belt pitch of 8 mm with a GT tooth profile, and a belt width of 30 mm. The belt drive center distance is determined by the belt perimeter and the pitch diameters of the driven and driving sprocket combination used.

Typical driving and driven sprockets with taper-lock bushings are shown in Figure 7-24. At least one of the two sprockets will have side flanges to ensure that the belt does not move axially. Commercially available sprockets typically employ a split-taper bushing in their hubs with a precise bore. The taper-lock bushing is available in different bore sizes to fit a range of shaft diameters for a given bushing. The keyway in the bushing is a standard size for the shaft diameter and prevents rotational movement of the sprocket and bushing on the shaft. The bore of the sprocket and the outside diameter of the bushing are both tapered. As the sprocket, split



FIGURE 7-24 Driven and driving sprockets with taper-lock bushings for synchronous belt drive

taper-lock bushing, and key are positioned on the shaft and tightened together, the taper-lock bushing squeezes the shaft and creates a clamping force which prevents axial movement on the shaft.

Table 7-4 shows the available sprockets with a pitch of 8 mm. The pitch diameter and flange diameter are given for the corresponding sprocket number of teeth and are common for all belt widths. The 8-mm pitch sprocket is available for 20 mm, 30 mm, 50 mm, and 85-mm belt widths. The corresponding taper-lock bushing number is given for each sprocket and is based on the sprocket width. An example of a sprocket designation is

Sprocket Designation: P72-8MGT-50

The first set of numbers (in mm) represents the number of teeth, the second set represents the belt pitch with the style of tooth profile, and the last number is the belt width. Therefore this sprocket has 72 teeth, a 8-mm belt pitch with GT tooth profile, and a belt width of 50 mm. The pitch diameter of the 72-tooth sprocket is 7.218 in and the flange diameter is 7.598 in. Table 7-5 shows the available taper-lock bushings with their minimum and maximum bore diameters. The taper-lock bushing minimum and maximum bore diameters will limit the size of the shaft for a specific sprocket. Figure 7-25 shows a typical taper-lock bushing. The three half holes are aligned with the three half holes in the sprocket and are used to tighten the taper-lock bushing to the sprocket and remove the taper-lock bushing from the sprocket. The P72-8MGT-50 sprocket requires taper-lock bushing number 2517. The 2517 taper-lock bushing has a minimum bore diameter of 0.50 in and a maximum bore diameter of 2.25 in and would not fit any shaft diameter larger than 2.250 in.

Table 7-6 gives some overall data for the range of belt widths, number of teeth in pulleys, and belt lengths available for both metric and English belt pitches.

TABLE 7-4 Sprockets with 8 mm Belt Pitch

| Dim's all widths | | | 20-mm Wide belt | | 30-mm Wide belt | | 50-mm Wide belt | | 85-mm Wide belt | |
|------------------|------------|-------------|-----------------|--------------|-----------------|--------------|-----------------|--------------|-----------------|--------------|
| No. of teeth | Pitch dia. | Flange dia. | Sprocket number | Bushing size |
| 22 | 2.206 | 2.559 | P22-8MGT-20 | 1108 | P22-8MGT-30 | 1108 | N/A | N/A | N/A | N/A |
| 24 | 2.406 | 2.756 | P24-8MGT-20 | 1108 | P24-8MGT-30 | 1108 | N/A | N/A | N/A | N/A |
| 26 | 2.607 | 2.953 | P26-8MGT-20 | 1108 | P26-8MGT-30 | 1108 | N/A | N/A | N/A | N/A |
| 28 | 2.807 | 3.15 | P28-8MGT-20 | 1108 | P28-8MGT-30 | 1108 | P28-8MGT-50 | MPB | N/A | N/A |
| 30 | 3.008 | 3.346 | P30-8MGT-20 | 1210 | P30-8MGT-30 | 1210 | P30-8MGT-50 | 1210 | N/A | N/A |
| 32 | 3.208 | 3.543 | P32-8MGT-20 | 1210 | P32-8MGT-30 | 1210 | P32-8MGT-50 | 1210 | N/A | N/A |
| 34 | 3.409 | 3.819 | P34-8MGT-20 | 1610 | P34-8MGT-30 | 1610 | P34-8MGT-50 | 1610 | P34-8MGT-85 | 1615 |
| 36 | 3.609 | 3.937 | P36-8MGT-20 | 1610 | P36-8MGT-30 | 1610 | P36-8MGT-50 | 1610 | P36-8MGT-85 | 1615 |
| 38 | 3.810 | 4.134 | P38-8MGT-20 | 1610 | P38-8MGT-30 | 1610 | P38-8MGT-50 | 1610 | P38-8MGT-85 | 1610 |
| 40 | 4.010 | 4.331 | P40-8MGT-20 | 1610 | P40-8MGT-30 | 2012 | P40-8MGT-50 | 2012 | P40-8MGT-85 | 2012 |
| 44 | 4.411 | 4.764 | P44-8MGT-20 | 2012 | P44-8MGT-30 | 2012 | P44-8MGT-50 | 2012 | P44-8MGT-85 | 2012 |
| 48 | 4.812 | 5.157 | P48-8MGT-20 | 2012 | P48-8MGT-30 | 2012 | P48-8MGT-50 | 2012 | P48-8MGT-85 | 2012 |
| 56 | 5.614 | 5.945 | P56-8MGT-20 | 2012 | P56-8MGT-30 | 2012 | P56-8MGT-50 | 2517 | P56-8MGT-85 | 2517 |
| 64 | 6.416 | 6.772 | P64-8MGT-20 | 2012 | P64-8MGT-30 | 2517 | P64-8MGT-50 | 2517 | P64-8MGT-85 | 2517 |
| 72 | 7.218 | 7.598 | P72-8MGT-20 | 2012 | P72-8MGT-30 | 2517 | P72-8MGT-50 | 2517 | P72-8MGT-85 | 3020 |
| 80 | 8.020 | 8.386 | P80-8MGT-20 | 2517 | P80-8MGT-30 | 2517 | P80-8MGT-50 | 2517 | P80-8MGT-85 | 3020 |
| 90 | 9.023 | N/A | P90-8MGT-20 | 2517 | P90-8MGT-30 | 2517 | P90-8MGT-50 | 3020 | P90-8MGT-85 | 3020 |
| 112 | 11.229 | N/A | N/A | N/A | P112-8MGT-30 | 2517 | P112-8MGT-50 | 3020 | P112-8MGT-85 | 3020 |
| 144 | 14.437 | N/A | N/A | N/A | P144-8MGT-30 | 2517 | P144-8MGT-50 | 3020 | P144-8MGT-85 | 3535 |
| 192 | 19.249 | N/A | N/A | N/A | N/A | N/A | P192-8MGT-50 | 3020 | P192-8MGT-85 | 3535 |

TABLE 7-5 Taper-Lock Bushing

| Bushing size | Min bore | Max bore |
|--------------|----------|----------|
| 1008 | 0.500 | 0.875 |
| 1108 | 0.500 | 1.000 |
| 1210 | 0.500 | 1.250 |
| 1610 | 0.500 | 1.500 |
| 1615 | 0.500 | 1.500 |
| 2012 | 0.500 | 1.875 |
| 2517 | 0.500 | 2.250 |
| 3020 | 0.875 | 2.750 |
| 3525 | 1.188 | 3.250 |
| 3535 | 1.188 | 3.250 |
| 4030 | 1.438 | 3.625 |
| 4040 | 1.438 | 3.625 |
| 4535 | 1.938 | 4.250 |
| 4545 | 1.938 | 4.250 |
| 5040 | 2.438 | 4.500 |
| 6050 | 4.438 | 6.000 |
| 7060 | 4.938 | 7.000 |

Installation of sprockets and the belt requires a nominal amount of center distance adjustment to enable the belt teeth to slide into the sprocket grooves without force, as shown in Figure 7-26. Subsequently, the center distance will be adjusted inward to install the belt over the flanges of the sprockets and then be adjusted

**FIGURE 7-25** Taper-lock bushing

TABLE 7-6 Types and Sizes of Synchronous Belt Drives**Metric Sizes (Dimensions in mm)**

| Pitch | Belt widths (typical) | Range of number of teeth on sprockets (typical) | Range of belt pitch lengths | |
|-------|-------------------------|---|-----------------------------|--------------|
| | | | (mm) | No. of teeth |
| 5 | 15, 25 | 32–112 | 350–2000 | 70–400 |
| 8 | 20, 30, 50, 85 | 22–192 | 480–4400 | 60–550 |
| 14 | 40, 55, 85, 115, 170 | 28–216 | 966–6860 | 69–490 |
| 20 | 115, 170, 230, 290, 340 | 34–216 | 2000–6600 | 100–330 |

U.S. Customary Sizes (Dimensions in inches)

| Pitch | Belt widths (typical) | Range of number of teeth in sprockets | Range of belt pitch lengths | |
|-----------|------------------------------------|---------------------------------------|-----------------------------|--------------|
| | | | (in) | No. of teeth |
| XL-0.200 | 0.25, 0.375 | 10–72 | 5.00–77.00 | 25–385 |
| L-0.375 | 0.50, 0.75, 1.00 | 10–120 | 12.38–90.00 | 33–240 |
| H-0.500 | 0.75, 1.00, 1.50, 2.00, 3.00 | 14–156 | 21.00–170.0 | 42–340 |
| XH-0.875 | 2.00, 3.00, 4.00, 5.00, 6.00, 8.00 | 18–120 | 50.75–175.0 | 58–200 |
| XXH-1.250 | 2.00, 3.00, 4.00, 5.00, 6.00, 8.00 | 18–90 | | |

Note: Check manufacturers' catalogs for available stock sizes.

outward to provide a suitable amount of initial tension as defined by the manufacturer. The initial tension is typically less than required for a V-belt drive since the synchronous belt is a positive drive.

In operation, the final tension in the tight side of the belt is much less than that developed by a V-Belt and the slack side tension is virtually zero. The results are lower net forces on the belt, lower side loads on the shafts carrying the sprockets, and reduced bearing loads.

The value for the belt perimeter length, L_p , can be calculated using the Equation (7-11) in Section (7-2) or by applying Equations (7-12) and (7-13) in Section (7-4). Similarly, for drives with two different diameters for the sprockets, the angle of belt wrap can be calculated using Equations (7-6) and (7-7) in Section (7-2) or Equations (7-14) and (7-15) in Section (7-4).

Various center distances, calculated based on belt lengths and the velocity ratios of the sprocket combinations, have been compiled in Table 7-7. This table

only shows a sample of the combinations available. See Internet sites 3, 5, 8, 14, or 16 to see the entire table for a given manufacturer.

General Selection Procedure for Synchronous Belt Drives

- Specify the speed of the driving sprocket (typically a motor or engine) and the desired speed of the driven sprocket.
- Specify the rated power for the driving motor or engine. The rated power of the motor or engine is based on the calculated power of the driven machine. For the belt drive problems we will be solving, the rated power will be a given value.
- Determine a service factor (SF) using Table 7-8. The service factor is based on the type of driving motor, the nature of the driven machine, and the required hours of operation of the application.

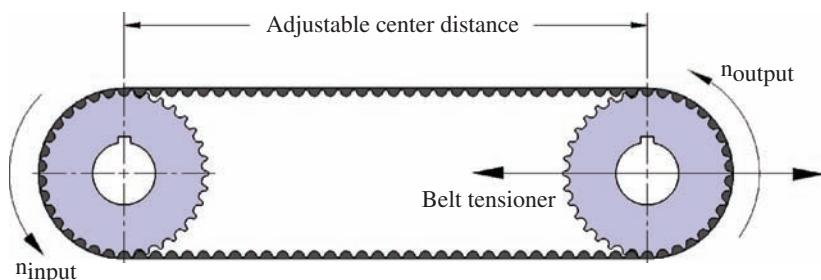


FIGURE 7-26 Belt drive with an adjustable center distance

TABLE 7-7 8-mm Pitch GT Drive Selection Table

| Sprocket combinations | | Center distance (inches) | | | | | | | | | | | | | | | | |
|-----------------------|--------|--------------------------|-------------------------|-------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|
| Driver | Driven | Velocity ratio | 920-8MGT P.L. 36.220 | 960-8MGT P.L. 37.795 | 1040-8MGT P.L. 40.945 | 1064-8MGT P.L. 41.890 | 1120-8MGT P.L. 44.094 | 1160-8MGT P.L. 45.669 | 1200-8MGT P.L. 47.244 | 1224-8MGT P.L. 48.189 | 1280-8MGT P.L. 50.394 | 1440-8MGT P.L. 56.693 | 1512-8MGT P.L. 59.528 | 1584-8MGT P.L. 62.362 | 1600-8MGT P.L. 62.992 | 1760-8MGT P.L. 69.291 | 1800-8MGT P.L. 70.866 | 2000-8MGT P.L. 78.740 |
| 22 | 22 | 1.000 | 14.65 | 15.43 | 17.01 | 17.48 | 18.58 | 19.37 | 20.16 | 20.63 | 21.73 | 24.88 | 26.30 | 27.72 | 28.03 | 31.18 | 31.97 | 35.90 |
| 24 | 24 | 1.000 | 14.33 | 15.12 | 16.69 | 17.17 | 18.27 | 19.06 | 19.84 | 20.32 | 21.42 | 24.57 | 25.98 | 27.40 | 27.72 | 30.87 | 31.65 | 35.59 |
| 26 | 26 | 1.000 | 14.02 | 14.80 | 16.38 | 16.85 | 17.95 | 18.74 | 19.53 | 20.00 | 21.10 | 24.25 | 25.67 | 27.09 | 27.40 | 30.55 | 31.34 | 35.28 |
| 28 | 28 | 1.000 | 13.70 | 14.49 | 16.06 | 16.54 | 17.64 | 18.43 | 19.21 | 19.69 | 20.79 | 23.94 | 25.35 | 26.77 | 27.09 | 30.24 | 31.02 | 34.96 |
| 30 | 30 | 1.000 | 13.39 | 14.17 | 15.75 | 16.22 | 17.32 | 18.11 | 18.90 | 19.37 | 20.47 | 23.62 | 25.04 | 26.46 | 26.77 | 29.92 | 30.71 | 34.65 |
| 32 | 32 | 1.000 | 13.07 | 13.86 | 15.43 | 15.91 | 17.01 | 17.80 | 18.58 | 19.06 | 20.16 | 23.31 | 24.72 | 26.14 | 26.46 | 29.61 | 30.39 | 34.33 |
| 34 | 34 | 1.000 | 12.76 | 13.54 | 15.12 | 15.59 | 16.69 | 17.48 | 18.27 | 18.74 | 19.84 | 22.99 | 24.41 | 25.83 | 26.14 | 29.29 | 30.08 | 34.02 |
| 36 | 36 | 1.000 | 12.44 | 13.23 | 14.80 | 15.28 | 16.38 | 17.17 | 17.95 | 18.43 | 19.53 | 22.68 | 24.09 | 25.51 | 25.83 | 28.98 | 29.76 | 33.70 |
| 38 | 38 | 1.000 | 12.13 | 12.91 | 14.49 | 14.96 | 16.06 | 16.85 | 17.64 | 18.11 | 19.21 | 22.36 | 23.78 | 25.20 | 25.51 | 28.66 | 29.45 | 33.39 |
| 40 | 40 | 1.000 | 11.67 | 12.46 | 14.03 | 14.50 | 15.61 | 16.39 | 17.18 | 17.65 | 18.76 | 21.91 | 23.32 | 24.74 | 25.06 | 28.21 | 28.99 | 32.93 |
| 44 | 44 | 1.000 | 11.18 | 11.97 | 13.54 | 14.02 | 15.12 | 15.91 | 16.69 | 17.17 | 18.27 | 21.42 | 22.83 | 24.25 | 24.57 | 27.72 | 28.50 | 32.44 |
| 48 | 48 | 1.000 | 10.55 | 11.34 | 12.91 | 13.39 | 14.49 | 15.28 | 16.06 | 16.54 | 17.64 | 20.79 | 22.21 | 23.62 | 23.94 | 27.09 | 27.87 | 31.81 |
| 56 | 56 | 1.000 | 9.29 | 10.08 | 11.65 | 12.13 | 13.23 | 14.02 | 14.80 | 15.28 | 16.38 | 19.53 | 20.95 | 22.36 | 22.68 | 25.83 | 26.61 | 30.55 |
| 64 | 64 | 1.000 | 8.03 | 8.82 | 10.39 | 10.87 | 11.97 | 12.76 | 13.54 | 14.02 | 15.12 | 18.27 | 19.69 | 21.10 | 21.42 | 24.57 | 25.35 | 29.29 |
| 72 | 72 | 1.000 | - | - | 9.13 | 9.61 | 10.71 | 11.50 | 12.28 | 12.76 | 13.86 | 17.01 | 18.43 | 19.84 | 20.16 | 23.31 | 24.10 | 28.03 |
| 80 | 80 | 1.000 | - | - | - | - | 9.45 | 10.24 | 11.02 | 11.50 | 12.60 | 15.75 | 17.17 | 18.58 | 18.90 | 22.05 | 22.84 | 26.77 |
| 24 | 30 | 1.250 | 13.85 | 14.64 | 16.22 | 16.69 | 17.79 | 18.58 | 19.37 | 19.84 | 20.94 | 24.09 | 25.51 | 26.93 | 27.24 | 30.39 | 31.18 | 35.12 |
| 32 | 40 | 1.250 | 12.43 | 13.22 | 14.80 | 15.27 | 16.37 | 17.16 | 17.95 | 18.42 | 19.52 | 22.67 | 24.09 | 25.51 | 25.82 | 28.97 | 29.76 | 33.70 |
| 64 | 80 | 1.250 | - | - | 9.10 | 9.57 | 10.68 | 11.47 | 12.26 | 12.73 | 13.84 | 16.99 | 18.41 | 19.83 | 20.14 | 23.29 | 24.08 | 28.02 |
| 72 | 90 | 1.250 | - | - | - | - | 9.25 | 10.04 | 10.83 | 11.30 | 12.41 | 15.56 | 16.98 | 18.40 | 18.72 | 21.87 | 22.66 | 26.60 |
| 24 | 32 | 1.333 | 13.70 | 14.48 | 16.06 | 16.53 | 17.63 | 18.42 | 19.21 | 19.68 | 20.78 | 23.93 | 25.35 | 26.77 | 27.08 | 30.23 | 31.02 | 34.96 |
| 30 | 40 | 1.333 | 12.59 | 13.38 | 14.95 | 15.42 | 16.53 | 17.32 | 18.10 | 18.58 | 19.68 | 22.83 | 24.25 | 25.66 | 25.98 | 29.13 | 29.92 | 33.85 |

(continued)

TABLE 7-7 (continued)

| Sprocket combinations | | Center distance (inches) | | | | | | | | | | | | | | | | |
|-----------------------|--------|--------------------------|-------------------------|-------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|
| Driver | Driven | Velocity ratio | 920-8MGT P.L. 36.220 | 960-8MGT P.L. 37.795 | 1040-8MGT P.L. 40.945 | 1064-8MGT P.L. 41.890 | 1120-8MGT P.L. 44.094 | 1160-8MGT P.L. 45.669 | 1200-8MGT P.L. 47.244 | 1224-8MGT P.L. 48.189 | 1280-8MGT P.L. 50.394 | 1440-8MGT P.L. 56.693 | 1512-8MGT P.L. 59.528 | 1584-8MGT P.L. 62.362 | 1600-8MGT P.L. 62.992 | 1760-8MGT P.L. 69.291 | 1800-8MGT P.L. 70.866 | 2000-8MGT P.L. 78.740 |
| 36 | 48 | 1.333 | 11.48 | 12.27 | 13.85 | 14.32 | 15.42 | 16.21 | 17.00 | 17.47 | 18.57 | 21.72 | 23.14 | 24.56 | 24.87 | 28.03 | 32.75 | |
| 48 | 64 | 1.333 | 9.26 | 10.05 | 11.63 | 12.10 | 13.20 | 13.99 | 14.78 | 15.25 | 16.36 | 19.51 | 20.93 | 22.35 | 22.66 | 25.81 | 26.60 | 30.54 |
| 24 | 36 | 1.500 | 13.36 | 14.15 | 15.73 | 16.20 | 17.30 | 18.09 | 18.88 | 19.35 | 20.46 | 23.61 | 25.02 | 26.44 | 26.76 | 29.91 | 30.70 | 34.63 |
| 32 | 48 | 1.500 | 11.78 | 12.57 | 14.15 | 14.62 | 15.73 | 16.52 | 17.30 | 17.78 | 18.88 | 22.03 | 23.45 | 24.87 | 25.18 | 28.34 | 29.12 | 33.06 |
| 48 | 72 | 1.500 | 8.58 | 9.37 | 10.96 | 11.43 | 12.54 | 13.33 | 14.12 | 14.60 | 15.70 | 18.86 | 20.28 | 21.70 | 22.01 | 25.17 | 25.96 | 29.90 |
| 22 | 44 | 2.000 | 12.87 | 13.66 | 15.24 | 15.71 | 16.81 | 17.60 | 18.39 | 18.87 | 19.97 | 23.12 | 24.54 | 25.96 | 26.28 | 29.43 | 30.22 | 34.16 |
| 24 | 48 | 2.000 | 12.38 | 13.17 | 14.75 | 15.23 | 16.33 | 17.12 | 17.91 | 18.39 | 19.49 | 22.65 | 24.06 | 25.48 | 25.80 | 28.95 | 29.74 | 33.68 |
| 28 | 56 | 2.000 | 11.41 | 12.20 | 13.79 | 14.26 | 15.37 | 16.16 | 16.95 | 17.42 | 18.53 | 21.69 | 23.11 | 24.53 | 24.84 | 28.00 | 28.79 | 32.73 |
| 32 | 64 | 2.000 | 10.43 | 11.22 | 12.81 | 13.29 | 14.40 | 15.19 | 15.98 | 16.46 | 17.56 | 20.73 | 22.15 | 23.57 | 23.88 | 27.04 | 27.83 | 31.77 |
| 36 | 72 | 2.000 | 9.43 | 10.24 | 11.83 | 12.31 | 13.42 | 14.22 | 15.01 | 15.49 | 16.60 | 19.76 | 21.18 | 22.61 | 22.92 | 26.08 | 26.87 | 30.81 |
| 40 | 80 | 2.000 | 8.42 | 9.23 | 10.84 | 11.32 | 12.44 | 13.23 | 14.03 | 14.51 | 15.62 | 18.79 | 20.22 | 21.64 | 21.96 | 25.12 | 25.91 | 29.85 |
| 56 | 112 | 2.000 | - | - | - | - | - | 9.18 | 10.00 | 10.49 | 11.63 | 14.85 | 16.29 | 17.73 | 18.05 | 21.23 | 22.03 | 25.99 |
| 72 | 144 | 2.000 | - | - | - | - | - | - | - | - | - | - | 12.22 | 13.70 | 14.02 | 17.26 | 18.06 | 22.07 |
| 32 | 80 | 2.500 | 8.97 | 9.78 | 11.40 | 11.88 | 13.01 | 13.81 | 14.61 | 15.08 | 16.20 | 19.38 | 20.81 | 22.23 | 22.55 | 25.71 | 26.51 | 30.46 |
| 36 | 90 | 2.500 | 7.71 | 8.55 | 10.19 | 10.68 | 11.82 | 12.62 | 13.43 | 13.91 | 15.03 | 18.22 | 19.66 | 21.09 | 21.40 | 24.58 | 25.37 | 29.32 |
| 24 | 72 | 3.000 | 10.27 | 11.08 | 12.69 | 13.17 | 14.29 | 15.08 | 15.88 | 16.36 | 17.47 | 20.65 | 22.07 | 23.50 | 23.82 | 26.98 | 27.77 | 31.72 |
| 30 | 90 | 3.000 | 8.10 | 8.94 | 10.60 | 11.09 | 12.23 | 13.04 | 13.85 | 14.33 | 15.46 | 18.65 | 20.09 | 21.52 | 21.84 | 25.02 | 25.81 | 29.77 |
| 48 | 144 | 3.000 | - | - | - | - | - | - | - | - | - | 12.29 | 13.81 | 15.31 | 15.64 | 18.92 | 19.73 | 23.76 |

TABLE 7-8 Service Factor

| DriveN machine | | | | DriveR | | |
|--|---|-----------------------------------|--|--|-----------------------------------|--|
| The driveN machines listed below are representative samples only. Select a driveN machine whose load characteristics most closely approximate those of the machine being considered. | AC Motors: Normal Torque, Squirrel Cage, Synchronous, Split Phase, Inverter Controlled DC Motors: Shunt Wound Stepper Motors Engines: Multiple Cylinder Internal Combustion | | | AC Motors: High Torque, High Slip, Repulsion-Induction, Single Phase, Series Wound, Slip Ring DC Motors: Series Wound, Compound Wound Servo Motors Engines: Single Cylinder Internal Combustion, Line Shafts, Clutches | | |
| | Intermittent Service (Up to 8 Hours Daily or Seasonal) | Normal Service (8–16 Hours Daily) | Continuous Service (16–24 Hours Daily) | Intermittent Service (Up to 8 Hours Daily or Seasonal) | Normal Service (8–16 Hours Daily) | Continuous Service (16–24 Hours Daily) |
| Display, Dispensing Equipment Instrumentation | 1.0 | 1.2 | 1.4 | 1.2 | 1.4 | 1.6 |
| Measuring Equipment Medical Equipment Office, Projection Equipment | 1.1 | 1.3 | 1.5 | 1.3 | 1.5 | 1.7 |
| Appliances, Sweepers, Sewing Machines Screens, Oven Screens, Drum, Conical Woodworking Equipment (Light): Band Saws, Drills Lathes | 1.2 | 1.4 | 1.6 | 1.6 | 1.8 | 2.0 |
| Agitators for Liquids Conveyors: Belt, Light Package Drill Press, Lathes, Saws Laundry Machinery Wood Working Equipment (Heavy): Circular Saws, Jointers, Planers | 1.3 | 1.5 | 1.7 | 1.6 | 1.8 | 2.0 |
| Agitators for Semi-Liquids Compressor: Centrifugal Conveyor Belt: Ore, Coal, Sand Dough Mixers Line Shafts Machine Tools: Grinder, Shaper, Boring Mill, Milling Machines Paper Machinery (except Pulpers): Presses, Punches, Shears Printing Machinery Pumps: Centrifugal, Gear Screens: Revolving, Vibratory | 1.4 | 1.6 | 1.8 | 1.8 | 2.0 | 2.2 |
| Brick Machinery (except Pug Mills) Conveyor: Apron, Pan, Bucket, Elevator Extractors, Washers Fans, Centrifugal Blowers Generators & Exciters Hoists Rubber Calender, Mills, Extruders | 1.5 | 1.7 | 1.9 | 1.9 | 2.1 | 2.3 |
| Blowers: Positive Displacement, Mine Fans Pulvertizers | 1.6 | 1.8 | 2.0 | 2.0 | 2.2 | 2.4 |
| Compressors: Reciprocating Crushers: Gyratory, Jaw, Rol Mills: Ball, Rod, Pebble, etc. Pumps: Reciprocating Saw Mill Equipment | 1.7 | 1.9 | 2.1 | 2.1 | 2.3 | 2.5 |

These service factors are adequate for most belt drive applications. Note that service factors cannot be substituted for good engineering judgment. Service factors may be adjusted based upon an understanding of the severity of actual drive operating conditions.

4. Calculate the design power by multiplying the driver rated power by the service factor.

$$\text{Design power} = P_{des} = P_{rated} \cdot SF$$

5. Determine the required pitch of the belt using the belt pitch selection guide Figure (7–27). The belt pitch is based on the design power and the angular velocity of the faster (smaller) sprocket. The belt pitches available are 5 mm, 8 mm, 14 mm, and 20 mm. The design horsepower is along the x-axis and the rpm of the faster sprocket is along the y-axis. As the design power increases or the smaller sprocket angular velocity decreases, a larger belt pitch would be required. The 14-mm belt pitch is selected for the design power and angular velocity in its shaded area, but would work for any application to the left of its shaded area. This means that the 14-mm belt pitch would work for a point located in the 5-mm and 8-mm belt pitch areas, but would be considered over-designed and not an economical design choice.

6. Calculate the velocity ratio VR between the driver and driven sprockets. Review Section 7–2 for this equation.

$$VR = \frac{\omega_{driving}}{\omega_{driven}} = \frac{PD_{driven}}{PD_{driving}} = \frac{N_{driven}}{N_{driving}}$$

7. Select the candidate combinations using Table 7–7 of the number of teeth in the driver sprocket to that in the driven sprocket that will produce the calculated velocity ratio, VR.

8. Eliminate the sprocket combinations that will not work due to space limitations and shaft diameter requirements. Some of the larger sprockets may interfere with the machine or guarding and can be eliminated due to these space limitations. The shaft diameter will dictate the minimum taper-lock bushing (Figure 7–25) that will fit on the shaft. Once the taper-lock bushing is known the minimum sprocket can be determined. This will eliminate any sprockets smaller than this minimum sprocket.

9. Using the desired range of acceptable center distances, determine a standard belt length that will produce a suitable value. Table 7–7 shows that the center distance is determined by the belt length and sprocket velocity ratio. The available belt lengths are determined by the manufacturer. The belt center distance selection is influenced by the belt drive design center distance. A fixed or adjustable center distance design should be considered when selecting the proper belt length. A belt drive design that has an

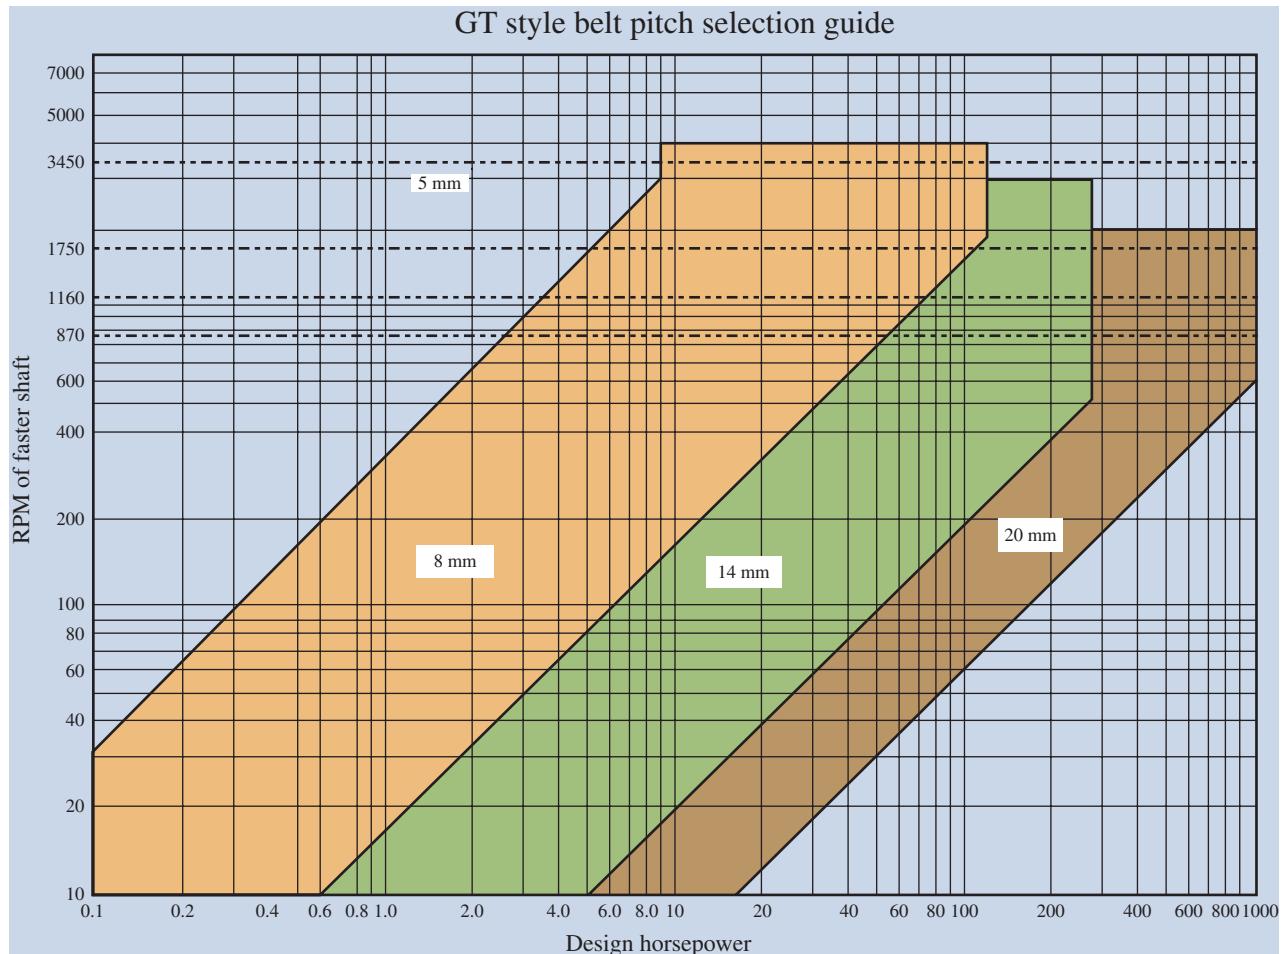


FIGURE 7–27 Belt pitch selection guide for GT style belts

adjustable center distance (Figure 7–26) will require the belt center distance to be within this range. If the belt drive design has a fixed center distance, the belt center distance must be larger than the fixed center distance. This belt drive system will require the use of a tensioner (Figure 7–30, discussed later) to take up the difference in belt lengths. An inside or outside tensioner will be selected, depending on how much the belt center distance exceeds the fixed center distance. This will require a drive belt layout to determine the best available solution.

- 10.** Selection of the width of the belt: Although there are four belt pitches available (5 mm, 8 mm, 14 mm, and 20 mm), we will focus on the 8-mm belt

pitch. An 8-mm pitch belt is available in four different widths: 20 mm, 30 mm, 50 mm, and 85 mm. The belt width selection Tables 7–9 and 7–10 are shown for the 30-mm and 50-mm wide belts. The 20-mm and 85-mm wide belt tables can be found in the manufacturer's website. The angular velocity of the faster (smaller) sprocket along with the number of teeth of this smaller sprocket is used to find the base rated horsepower. Let's first look at the 30 mm belt width table. You will notice for a given sprocket size as the speed increases, the power rating of the belt increases. For a given speed of the sprocket, the belt power rating will increase as the size of the sprocket (or number of teeth) increases. The 50 mm

TABLE 7–9 8M GT Style Belt Power Rating Table—30-mm Belt Width

| RPM of faster shaft | Base rated horsepower for small sprocket (Number of grooves and pitch diameter, inches) | | | | | | | | | | | | | | | |
|---------------------------|--|-------------|-------------|-------------|-------------|-------------|-------------|-------------|-------------|-------------|-------------|-------------|-------------|-------------|-------------|-------------|
| | 22 2.206 | 24 2.406 | 26 2.607 | 28 2.807 | 30 3.008 | 32 3.208 | 34 3.409 | 36 3.609 | 38 3.810 | 40 4.010 | 44 4.411 | 48 4.812 | 56 5.614 | 64 6.416 | 72 7.218 | 80 8.020 |
| 10 | 0.10 | 0.12 | 0.13 | 0.15 | 0.16 | 0.17 | 0.19 | 0.20 | 0.22 | 0.23 | 0.26 | 0.29 | 0.34 | 0.40 | 0.45 | 0.51 |
| 20 | 0.20 | 0.22 | 0.25 | 0.28 | 0.31 | 0.33 | 0.36 | 0.39 | 0.42 | 0.44 | 0.50 | 0.55 | 0.66 | 0.76 | 0.87 | 0.98 |
| 40 | 0.37 | 0.43 | 0.48 | 0.53 | 0.59 | 0.64 | 0.69 | 0.75 | 0.80 | 0.85 | 0.96 | 1.06 | 1.27 | 1.47 | 1.68 | 1.88 |
| 60 | 0.54 | 0.62 | 0.70 | 0.78 | 0.86 | 0.94 | 1.01 | 1.09 | 1.17 | 1.25 | 1.40 | 1.55 | 1.86 | 2.16 | 2.46 | 2.76 |
| 100 | 0.87 | 1.00 | 1.12 | 1.25 | 1.38 | 1.51 | 1.63 | 1.76 | 1.89 | 2.01 | 2.26 | 2.51 | 3.00 | 3.49 | 3.98 | 4.47 |
| 200 | 1.64 | 1.89 | 2.13 | 2.38 | 2.63 | 2.87 | 3.12 | 3.36 | 3.60 | 3.84 | 4.33 | 4.80 | 5.76 | 6.70 | 7.64 | 8.58 |
| 300 | 2.37 | 2.74 | 3.10 | 3.46 | 3.82 | 4.18 | 4.54 | 4.90 | 5.25 | 5.61 | 6.32 | 7.02 | 8.42 | 9.80 | 11.2 | 12.5 |
| 400 | 3.08 | 3.56 | 4.04 | 4.51 | 4.99 | 5.46 | 5.93 | 6.40 | 6.87 | 7.33 | 8.26 | 9.18 | 11.0 | 12.8 | 14.6 | 16.4 |
| 500 | 3.77 | 4.36 | 4.95 | 5.54 | 6.13 | 6.71 | 7.29 | 7.87 | 8.45 | 9.02 | 10.2 | 11.3 | 13.6 | 15.8 | 18.0 | 20.2 |
| 600 | 4.45 | 5.15 | 5.85 | 6.55 | 7.25 | 7.94 | 8.63 | 9.31 | 10.0 | 10.7 | 12.0 | 13.4 | 16.1 | 18.7 | 21.4 | 24.0 |
| 700 | 5.11 | 5.93 | 6.74 | 7.54 | 8.35 | 9.15 | 9.95 | 10.7 | 11.5 | 12.3 | 13.9 | 15.5 | 18.6 | 21.6 | 24.7 | 27.7 |
| 800 | 5.77 | 6.69 | 7.61 | 8.52 | 9.44 | 10.3 | 11.2 | 12.1 | 13.0 | 13.9 | 15.7 | 17.5 | 21.0 | 24.5 | 27.9 | 31.4 |
| 870 | 6.22 | 7.22 | 8.22 | 9.20 | 10.2 | 11.2 | 12.2 | 13.1 | 14.1 | 15.1 | 17.0 | 18.9 | 22.7 | 26.5 | 30.2 | 33.9 |
| 1000 | 7.05 | 8.19 | 9.33 | 10.5 | 11.6 | 12.7 | 13.8 | 14.9 | 16.0 | 17.1 | 19.3 | 21.5 | 25.8 | 30.1 | 34.3 | 38.5 |
| 1160 | 8.06 | 9.37 | 10.7 | 12.0 | 13.3 | 14.5 | 15.8 | 17.1 | 18.4 | 19.6 | 22.2 | 24.7 | 29.6 | 34.5 | 39.4 | 44.2 |
| 1200 | 8.31 | 9.66 | 11.0 | 12.3 | 13.7 | 15.0 | 16.3 | 17.6 | 19.0 | 20.3 | 22.9 | 25.4 | 30.6 | 35.6 | 40.6 | 45.6 |
| 1400 | 9.54 | 11.1 | 12.7 | 14.2 | 15.7 | 17.3 | 18.8 | 20.3 | 21.8 | 23.3 | 26.3 | 29.3 | 35.2 | 41.0 | 46.8 | 52.4 |
| 1600 | 10.7 | 12.5 | 14.3 | 16.0 | 17.8 | 19.5 | 21.2 | 23.0 | 24.7 | 26.4 | 29.8 | 33.1 | 39.8 | 46.3 | 52.8 | 59.1 |
| 1750 | 11.6 | 13.6 | 15.5 | 17.4 | 19.3 | 21.2 | 23.0 | 24.9 | 26.8 | 28.6 | 32.3 | 36.0 | 43.2 | 50.3 | 57.2 | 64.1 |
| 2000 | 13.1 | 15.3 | 17.5 | 19.6 | 21.8 | 23.9 | 26.0 | 28.1 | 30.2 | 32.3 | 36.5 | 40.6 | 48.7 | 56.7 | 64.5 | 72.1 |
| 2400 | 15.4 | 18.0 | 20.5 | 23.1 | 25.6 | 28.1 | 30.7 | 33.1 | 35.6 | 38.1 | 43.0 | 47.8 | 57.3 | 66.6 | 75.6 | 84.4 |
| 2800 | 17.6 | 20.6 | 23.6 | 26.5 | 29.4 | 32.3 | 35.2 | 38.0 | 40.9 | 43.7 | 49.3 | 54.8 | 65.6 | 76.1 | 86.2 | 96.0 |
| 3200 | 19.8 | 23.2 | 26.5 | 29.8 | 33.1 | 36.4 | 39.6 | 42.8 | 46.0 | 49.2 | 55.4 | 61.6 | 73.6 | 85.2 | 96.2 | |
| 3450 | 21.1 | 24.7 | 28.3 | 31.9 | 35.4 | 38.9 | 42.3 | 45.8 | 49.2 | 52.5 | 59.2 | 65.7 | 78.4 | 90.6 | 102.2 | |
| 4000 | 24.0 | 28.1 | 32.2 | 36.2 | 40.3 | 44.2 | 48.1 | 52.0 | 55.9 | 59.7 | 67.1 | 74.5 | 88.5 | | | |
| 4500 | 26.6 | 31.1 | 35.6 | 40.1 | 44.5 | 48.9 | 53.2 | 57.5 | 61.7 | 65.9 | 74.0 | 82.0 | | | | |
| 5000 | 29.0 | 34.0 | 39.0 | 43.8 | 48.7 | 53.4 | 58.1 | 62.8 | 67.3 | 71.8 | 80.6 | 89.1 | | | | |
| 5500 | 31.4 | 36.8 | 42.2 | 47.5 | 52.7 | 57.8 | 62.9 | 67.8 | 72.7 | 77.5 | 86.8 | | | | | |

TABLE 7-10 8M GT Style Belt Power Rating Table—50-mm Belt Width

| RPM of faster shaft | Base rated horsepower for small sprocket (Number of grooves and pitch diameter, inches) | | | | | | | | | | | | |
|---------------------------|--|-------------|-------------|-------------|-------------|-------------|-------------|-------------|-------------|-------------|-------------|-------------|-------------|
| | 28 2.807 | 30 3.008 | 32 3.208 | 34 3.409 | 36 3.609 | 38 3.810 | 40 4.010 | 44 4.411 | 48 4.812 | 56 5.614 | 64 6.416 | 72 7.218 | 80 8.020 |
| 10 | 0.25 | 0.28 | 0.30 | 0.33 | 0.35 | 0.38 | 0.40 | 0.45 | 0.50 | 0.59 | 0.69 | 0.78 | 0.88 |
| 20 | 0.49 | 0.53 | 0.58 | 0.63 | 0.68 | 0.72 | 0.77 | 0.86 | 0.96 | 1.14 | 1.33 | 1.51 | 1.70 |
| 40 | 0.93 | 1.02 | 1.11 | 1.21 | 1.30 | 1.39 | 1.48 | 1.66 | 1.84 | 2.20 | 2.56 | 2.92 | 3.27 |
| 60 | 1.35 | 1.49 | 1.63 | 1.76 | 1.90 | 2.03 | 2.17 | 2.43 | 2.70 | 3.23 | 3.75 | 4.28 | 4.80 |
| 100 | 2.18 | 2.40 | 2.62 | 2.84 | 3.06 | 3.28 | 3.50 | 3.93 | 4.36 | 5.22 | 6.08 | 6.92 | 7.77 |
| 200 | 4.14 | 4.57 | 4.99 | 5.42 | 5.84 | 6.26 | 6.68 | 7.52 | 8.35 | 10.0 | 11.7 | 13.3 | 14.9 |
| 300 | 6.02 | 6.65 | 7.27 | 7.90 | 8.52 | 9.14 | 9.75 | 11.0 | 12.2 | 14.6 | 17.0 | 19.4 | 21.8 |
| 400 | 7.85 | 8.67 | 9.49 | 10.3 | 11.1 | 11.9 | 12.7 | 14.4 | 16.0 | 19.2 | 22.3 | 25.5 | 28.6 |
| 500 | 9.63 | 10.7 | 11.7 | 12.7 | 13.7 | 14.7 | 15.7 | 17.7 | 19.7 | 23.6 | 27.5 | 31.4 | 35.2 |
| 600 | 11.4 | 12.6 | 13.8 | 15.0 | 16.2 | 17.4 | 18.6 | 20.9 | 23.3 | 28.0 | 32.6 | 37.2 | 41.7 |
| 700 | 13.1 | 14.5 | 15.9 | 17.3 | 18.7 | 20.1 | 21.4 | 24.2 | 26.9 | 32.3 | 37.6 | 42.9 | 48.2 |
| 800 | 14.8 | 16.4 | 18.0 | 19.6 | 21.1 | 22.7 | 24.2 | 27.3 | 30.4 | 36.5 | 42.6 | 48.6 | 54.5 |
| 870 | 16.0 | 17.7 | 19.4 | 21.1 | 22.8 | 24.5 | 26.2 | 29.5 | 32.9 | 39.5 | 46.0 | 52.5 | 58.9 |
| 1000 | 18.2 | 20.1 | 22.1 | 24.0 | 25.9 | 27.9 | 29.8 | 33.6 | 37.4 | 44.9 | 52.4 | 59.7 | 67.0 |
| 1160 | 20.8 | 23.1 | 25.3 | 27.5 | 29.7 | 32.0 | 34.1 | 38.5 | 42.9 | 51.5 | 60.0 | 68.5 | 76.8 |
| 1200 | 21.5 | 23.8 | 26.1 | 28.4 | 30.7 | 33.0 | 35.2 | 39.8 | 44.2 | 53.1 | 61.9 | 70.6 | 79.2 |
| 1400 | 24.7 | 27.4 | 30.0 | 32.7 | 35.3 | 38.0 | 40.6 | 45.8 | 51.0 | 61.2 | 71.3 | 81.3 | 91.2 |
| 1600 | 27.9 | 30.9 | 33.9 | 36.9 | 39.9 | 42.9 | 45.9 | 51.8 | 57.6 | 69.2 | 80.6 | 91.8 | 102.9 |
| 1750 | 30.2 | 33.5 | 36.8 | 40.1 | 43.3 | 46.6 | 49.8 | 56.2 | 62.5 | 75.0 | 87.4 | 99.5 | 111.4 |
| 2000 | 34.1 | 37.8 | 41.5 | 45.2 | 48.9 | 52.6 | 56.2 | 63.4 | 70.6 | 84.7 | 98.5 | 112.1 | 125.4 |
| 2400 | 40.2 | 44.6 | 48.9 | 53.3 | 57.6 | 62.0 | 66.2 | 74.7 | 83.1 | 99.7 | 115.8 | 131.5 | 146.8 |
| 2800 | 46.1 | 51.2 | 56.2 | 61.2 | 66.2 | 71.1 | 76.0 | 85.7 | 95.3 | 114.1 | 132.3 | 149.9 | 166.9 |
| 3200 | 51.9 | 57.6 | 63.2 | 68.9 | 74.5 | 80.0 | 85.5 | 96.4 | 107.1 | 128.0 | 148.1 | 167.4 | |
| 3450 | 55.4 | 61.5 | 67.6 | 73.6 | 79.6 | 85.5 | 91.3 | 102.9 | 114.3 | 136.4 | 157.5 | 177.7 | |
| 4000 | 63.0 | 70.0 | 76.9 | 83.7 | 90.4 | 97.1 | 103.7 | 116.8 | 129.5 | 154.0 | | | |
| 4500 | 69.7 | 77.4 | 85.0 | 92.6 | 100.0 | 107.3 | 114.5 | 128.7 | 142.5 | | | | |
| 5000 | 76.2 | 84.7 | 92.9 | 101.1 | 109.1 | 117.1 | 124.9 | 140.1 | 154.9 | | | | |
| 5500 | 82.5 | 91.6 | 100.5 | 109.3 | 117.9 | 126.4 | 134.7 | 150.9 | | | | | |

belt width will have a higher power rating than the 30 mm belt width. A larger sprocket will decrease the belt width required and yield a longer service life. The belt width should not exceed the sprocket diameter. This base rated horsepower must be adjusted by the belt length correction factor shown in Table 7-11. Catalog data will show factors less than 1.0 for shorter belt lengths and greater than 1.0 for longer belt lengths. This reflects the frequency with which a given tooth of the belt encounters a high-stress area as it enters the smaller sprocket.

$$\text{Base Rated Power}_{\text{adjusted}} = \text{Base Rated Power} \cdot \text{Length Correction Factor}$$

- Calculate the belt linear velocity. Belt speeds above 3500 fpm increase the noise level of the synchronous belt drive. Also verify that the belt linear velocity does not exceed 6500 fpm, due to the excessive centrifugal forces that are placed on a sprocket.

$$v_{\text{belt}} = \frac{PD_1}{2} \cdot \omega_1 = \frac{PD_2}{2} \cdot \omega_2$$

- Specify the final design details for the belt drive system. This includes all sprockets, type and bore size of taper-lock bushings, belt, and tensioner if required. Summarize the design, check compatibility with other components of the system, and prepare the purchasing documents.

TABLE 7-11 8M GT Style Belt Length Correction Factor

| Pitch/Length designation | No. of feet | Correction factor | Pitch/Length designation | No. of teeth | Correction factor | Pitch/Length designation | No. of teeth | Correction factor | Pitch/Length designation | No. of teeth | Correction factor |
|--------------------------|-------------|-------------------|--------------------------|--------------|-------------------|--------------------------|--------------|-------------------|--------------------------|--------------|-------------------|
| 384-8MGT | 48 | 0.70 | 920-8MGT | 115 | 1.00 | 1440-8MGT | 180 | 1.10 | 2600-8MGT | 325 | 1.20 |
| 480-8MGT | 60 | 0.80 | 960-8MGT | 120 | 1.00 | 1512-8MGT | 189 | 1.10 | 2800-8MGT | 350 | 1.20 |
| 560-8MGT | 70 | 0.80 | 1040-8MGT | 130 | 1.00 | 1584-8MGT | 198 | 1.10 | 3048-8MGT | 381 | 1.20 |
| 600-8MGT | 75 | 0.80 | 1064-8MGT | 133 | 1.00 | 1600-8MGT | 200 | 1.10 | 3280-8MGT | 410 | 1.20 |
| 640-8MGT | 80 | 0.90 | 1120-8MGT | 140 | 1.00 | 1760-8MGT | 220 | 1.10 | 3600-8MGT | 450 | 1.20 |
| 720-8MGT | 90 | 0.90 | 1160-8MGT | 145 | 1.00 | 1800-8MGT | 225 | 1.20 | 4400-8MGT | 550 | 1.20 |
| 800-8MGT | 100 | 0.90 | 1200-8MGT | 150 | 1.00 | 2000-8MGT | 250 | 1.20 | | | |
| 840-8MGT | 105 | 0.90 | 1224-8MGT | 153 | 1.00 | 2200-8MGT | 275 | 1.20 | | | |
| 880-8MGT | 110 | 0.90 | 1280-8MGT | 160 | 1.10 | 2400-8MGT | 300 | 1.20 | | | |

**Example Problem
7-3**

For the belt drive layout shown in Figure 7-28 perform the following calculations for the kinematics of the drive:

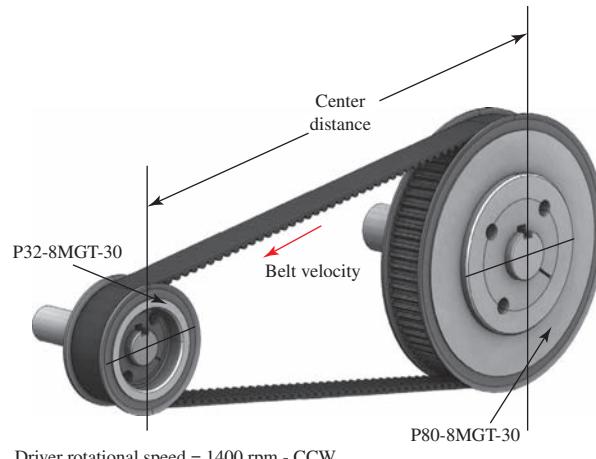


FIGURE 7-28 Synchronous belt drive for Example Problem 7-3

- Specify the number of teeth and the pitch diameter of each sheave.
- Calculate the velocity ratio of the belt drive and the angular velocity of the driven sheave.
- Calculate the belt linear velocity.
- Determine the center distance using a 1200-8MGT-30 belt.

Solution

Given Data in Figure 7-28. Input sprocket speed = 1400 rpm

- Pitch diameters: From Table 7-4,

P32-8MGT-30 sprocket: 32 teeth; Pitch diameter = 3.208 in
P80-8MGT-30 sprocket: 80 teeth; Pitch diameter = 8.020 in

- Velocity ratio: Using Equation (7-4) in Section 7-2,

$$VR = \frac{n_{driving}}{n_{driven}} = \frac{N_{driven}}{N_{driving}} = \frac{80}{32} = 2.50$$

Driven speed of the driven sprocket:

$$n_{driven} = \frac{n_{driving}}{VR} = \frac{1400 \text{ rpm}}{2.5} = 560 \text{ rpm}$$

- Belt speed: Using Equation (7-3) in Section 7-2,

$$v_{belt} = \frac{PD_{driving}}{2} n_{driving} = \frac{3.208 \text{ in}}{2} \cdot 1400 \frac{\text{rev}}{\text{min}} \cdot \frac{2\pi \text{ rad}}{\text{rev}} \cdot \frac{1.0 \text{ ft}}{12 \text{ in}} = 1175.8 \text{ ft/min}$$

- Center distance: From Table 7-7, using 32 and 80 teeth and 1200-8MGT-30 belt,

$$CD = 14.61 \text{ in}$$

**Example Problem
7–4**

Figure 7–29 shows a 20-hp electric motor driving a gear pump using a synchronous belt drive. The normal torque motor speed is 1750 rpm and the gear pump speed is to be 875 rpm. The drive system is on a steel mounting plate with slots permitting an adjustment of the pump position by ± 0.375 in from the nominal center distance of 22.00 in. The motor shaft diameter is 1.625 in and the gear pump shaft diameter is 1.375 in. The sprocket on the pump shaft cannot exceed 14.00 in due to potential interference with the base plate. The pump will operate 16–24 h/day, 5 days per week. Specify the complete drive system.

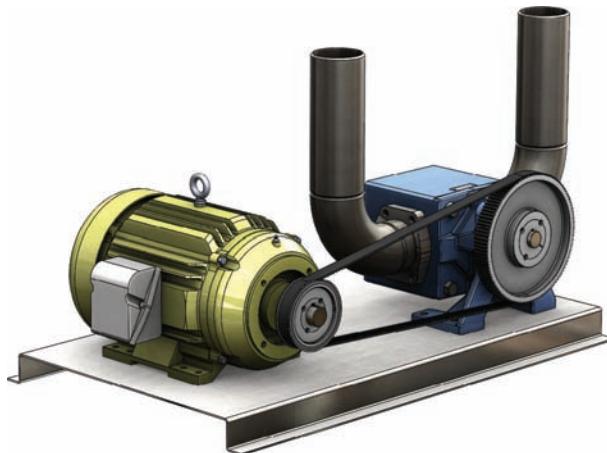


FIGURE 7–29 Gear pump drive system for Example Problem 7–4

Solution Use the General Selection Procedure for Synchronous Belt Drives

Given Motor: 20 hp; 1750 rpm; Normal torque; shaft diameter = 1.625 in
 Gear pump: 875 rpm; shaft diameter = 1.375 in; Maximum OD = 14.00 in
 Center distance between motor and pump shafts = 22.00 in ± 0.375 in; The range is 21.625 in minimum to 22.375 in maximum
 Operating conditions: 16 to 24 h/day, 5 days per week.
 Specify the synchronous belt drive system including driving and driven sprockets, bushings, and the belt.

- Results
1. Motor speed = 1750 rpm; Pump speed = 875 rpm
 2. Rated power = 20 hp
 3. Service factor: From Table 7–8, SF = 1.7
 4. Design power: $P_{des} = P_{rated} \cdot SF = 20 \text{ hp} \cdot 1.7 = 34 \text{ hp}$
 5. Required pitch for the belt: Using Figure 7–27, the intersection of 34 hp and 1750 rpm of the driver falls in the range of the 8 mm, 8MGT belt system.
 6. Velocity ratio:

$$VR = \frac{n_{driving}}{n_{driven}} = \frac{1750 \text{ rpm}}{875 \text{ rpm}} = 2.00$$

7. Select candidate combinations of driver and driven sprockets: Table 7–7 lists eight possible combinations having $VR = 2.00$. They are

22:44, 24:48, 28:56, 32:64, 36:72, 40:80, 56:112, 72:144

8. Eliminate the sprocket combinations that are not acceptable because of space limitations and shaft diameter requirements:
 For shaft diameters, the bushing style and the maximum bore sizes must be checked using data in Tables 7–4 and 7–5.

First check the motor shaft size of 1.625 in.

| Sprocket | Bushing no. | Max. Bore (in) | |
|----------|-------------|----------------|--|
| 22 | 1108 | 1.00 | |
| 24 | 1108 | 1.00 | |
| 28 | 1108 | 1.00 | |
| 32 | 1210 | 1.25 | |
| 36 | 1610 | 1.50 | |
| 40 | 1610 | 1.50 | |
| 56 | 2012 | 1.875 | |
| 72 | 2012 | 1.875 | |

Not acceptable; too small

Acceptable

Now check the size of the pump sprockets; Maximum OD = 14.00 in. From Table 7–4, all pump sprockets up through 112 teeth have a flange size less than 14.00 in.

For 144 teeth, OD = 14.437 in—Too large.

Therefore, the only combination that satisfies all limitations is 56:112.

For this design: $PD_1 = 5.614$ in, $PD_2 = 11.229$ in

9. Now check the belt length and center distance for this combination:

From Table 7–7, we find that the 1800-8MGT belt will have a center distance of 22.03 in for a 56-tooth driving sprocket and a 112-tooth driven sprocket. That is within the required range. The 0.75-in long slots in the base plate will permit the installation of the belt and then setting the proper belt tension.

10. Select the belt width: Data in Tables 7–9 to 7–11 can be used. Table 7–9 is for a belt width of 30 mm and for a motor speed of 1750 rpm and 56 grooves in that sprocket, we find the rated power is 43.2 hp. To this value, a belt length correction factor must be applied, found in Table 7–11: For the 1800-8MGT belt, $C_L = 1.20$. Then the adjusted rated power is

$$P_{adjusted} = P_{rated} \cdot C_L = 43.2 \text{ hp} \cdot 1.20 = 51.8 \text{ hp}$$

This value is well above the design power of 34.0 hp found in Step 4.

11. Calculate the belt speed to ensure that it does not exceed 6500 rpm.

$$V_{belt} = \frac{PD_1}{2} \cdot \omega_1 = \frac{5.614 \text{ in}}{2} \cdot \frac{1750 \text{ rev}}{\text{min}} \cdot \frac{2\pi \text{ rad}}{\text{rev}} \cdot \frac{1 \text{ ft}}{12 \text{ in}} = 2572 \text{ ft/min} = 2572 \text{ fpm}$$

This is an acceptable belt speed.

12. Specify the final design details: [Quantity (1) each]

P56-8MGT-30 Sprocket—Motor shaft

2012-1.625 in diameter bore—Taper-lock bushing

P112-8MGT-30 Sprocket—Pump shaft

2517-1.375 in diameter bore—Taper-lock bushing

1800-8MGT-30 Belt

Alternate Configurations for Synchronous Belt Drives

Idlers and belt tensioners are used to set the correct belt length and take up belt slack if fixed centers are required between the driver and driven sprockets. Idlers do not directly drive any component and are

fixed in the belt drive system. A tensioner is an idler that is adjustable to provide the correct belt tension. The location of a tensioner should be on the slack side of the belt span. The tensioner can be located on either the inside or outside of the slack side belt span shown in Figure 7–30. Tensioners located on the inside of the

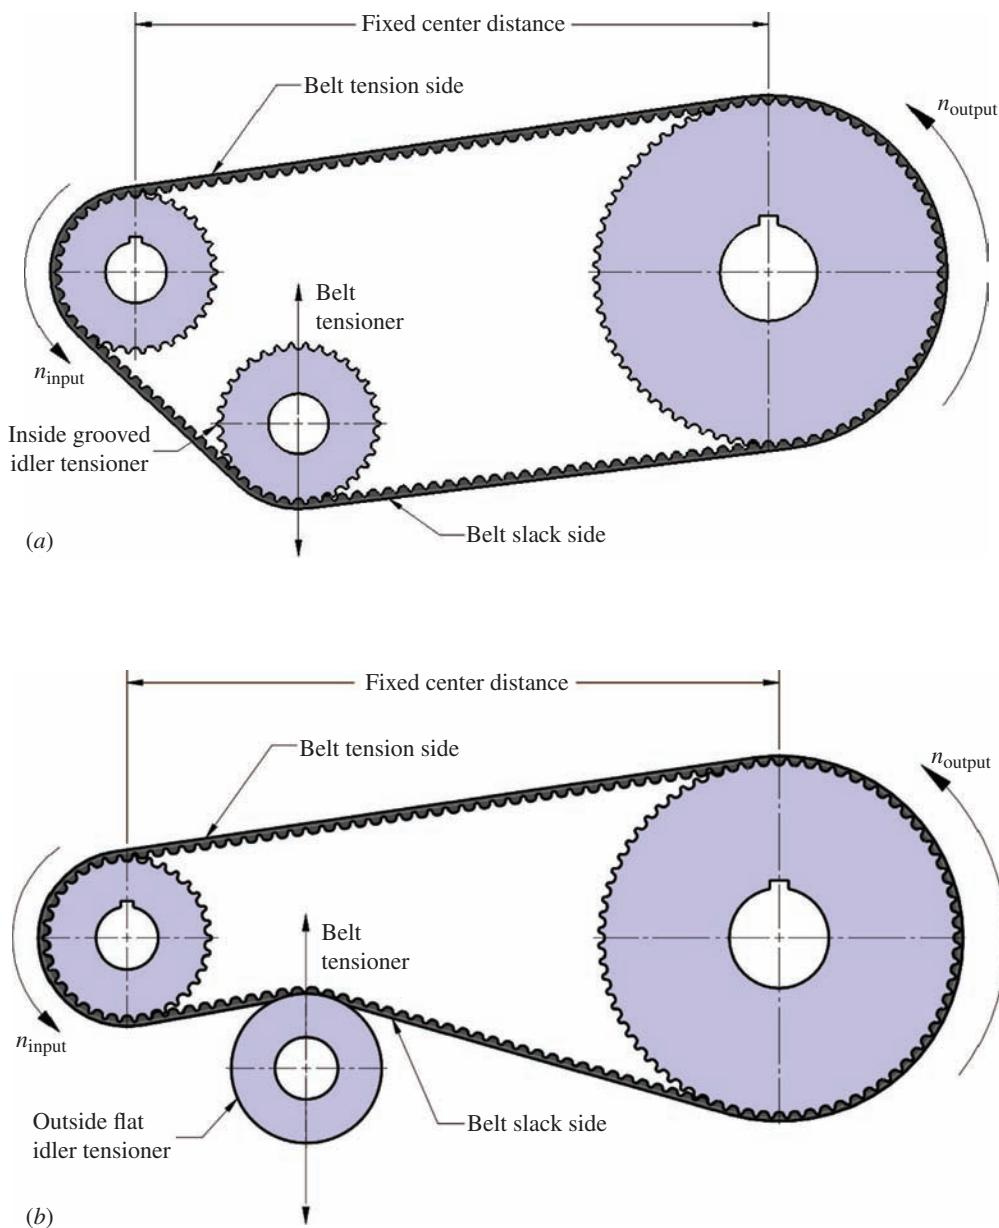


FIGURE 7-30 Belt drives with fixed center distances and added tensioners. (a) Inside grooved-idler tensioner. (b) Outside flat-idler tensioner

belt should use a grooved sprocket and a flat pulley should be used if the idler is located on the outside of the belt. The tensioner may decrease the life of the belt and the belt manufacturer should be consulted.

Belt drives can be used to transmit motion and power reliably and efficiently in a variety of configurations. Figure 7-31 shows two different multiple shaft belt drive configurations. Figure 7-31(a) shows a belt drive that has four sprockets that are the same size. The input sprocket (1) is driving two output sprockets (2 and 3) and an inside tensioner (4) is used to set the length and proper tension of the belt. The sprockets

are all rotating in the same direction at the same speed. Figure 7-31(b) shows a belt drive that has an input sprocket (1) that drives two output sprockets (2) and (3). The belt drive also has a flat pulley used as an outside belt tensioner (4). All sprockets are rotating in the same direction. The larger sprocket (2) is rotating slower than the input sprocket. Output sprocket (3) is the same size as the input sprocket and will rotate at the same speed.

Twin power belts shown in Figure 7-32 have teeth on both sides of the belt to provide a positive drive from either side of the belt. Serpentine belt drives allow

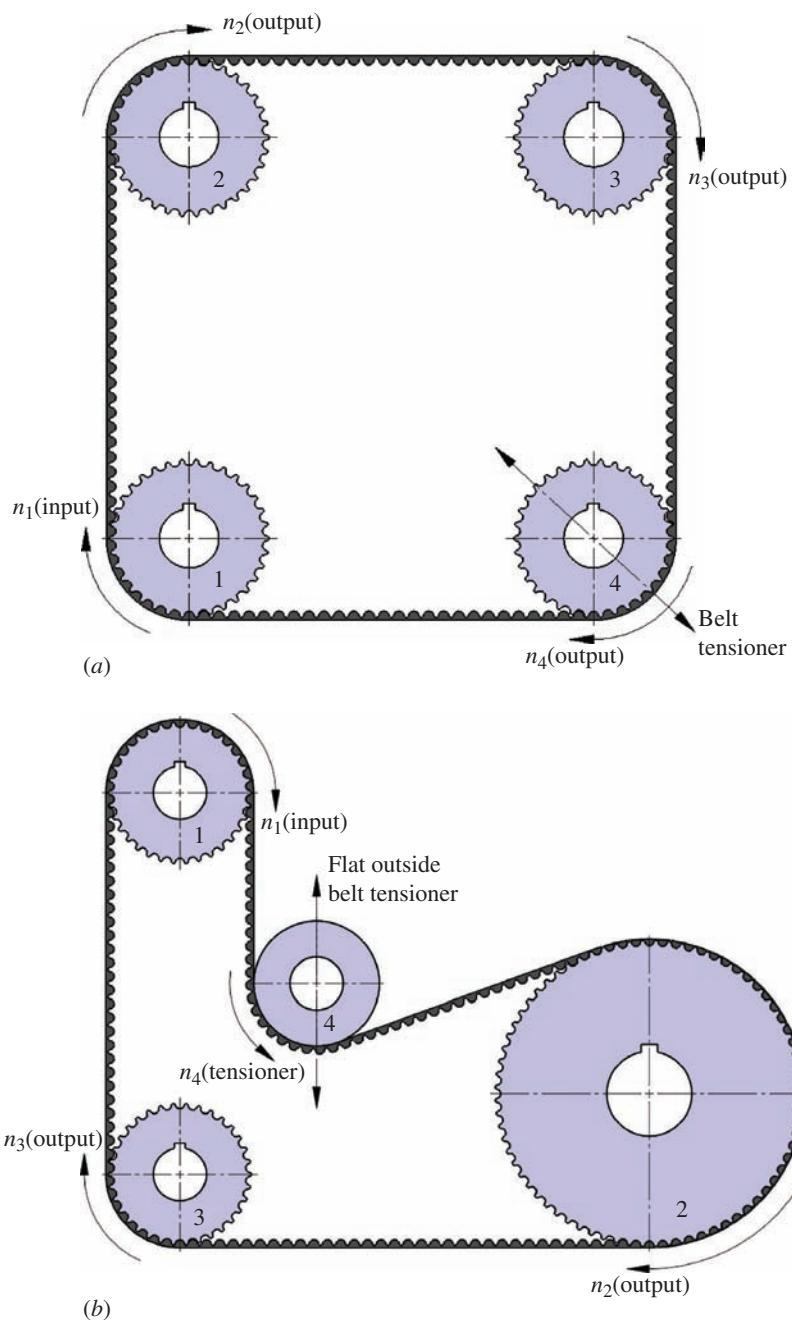


FIGURE 7–31 Multiple shaft drive configurations

designs with multiple drive points to reverse the shaft rotation. Figure 7–32(a) shows a twin tooth serpentine belt drive with the input sprocket (1), output sprocket (2), fixed idler (3), and inside belt tensioner (4). The objective of this design is to have the output sprocket (2) rotate in the opposite direction of the input sprocket (1). The fixed idler (3) does not drive anything, but it is used to wrap the belt around the output sprocket (2) to provide more teeth to carry the belt driving tension. The inside belt tensioner (4) is an idler that is movable

and is used to position the belt to wrap the output sprocket (2) and to set proper belt tension. The belt tensioner (4) also does not drive any output directly. Figure 7–31(b) shows a twin tooth serpentine belt drive with an input sprocket (1) and five driven sprockets. The input and output sprockets (2), (4), and (6) have clockwise rotation while the output sprockets (3) and (5) have opposite rotation due to the serpentine belt wrap. The speed of the five output sprockets are dependent on the input and output sprocket ratios.

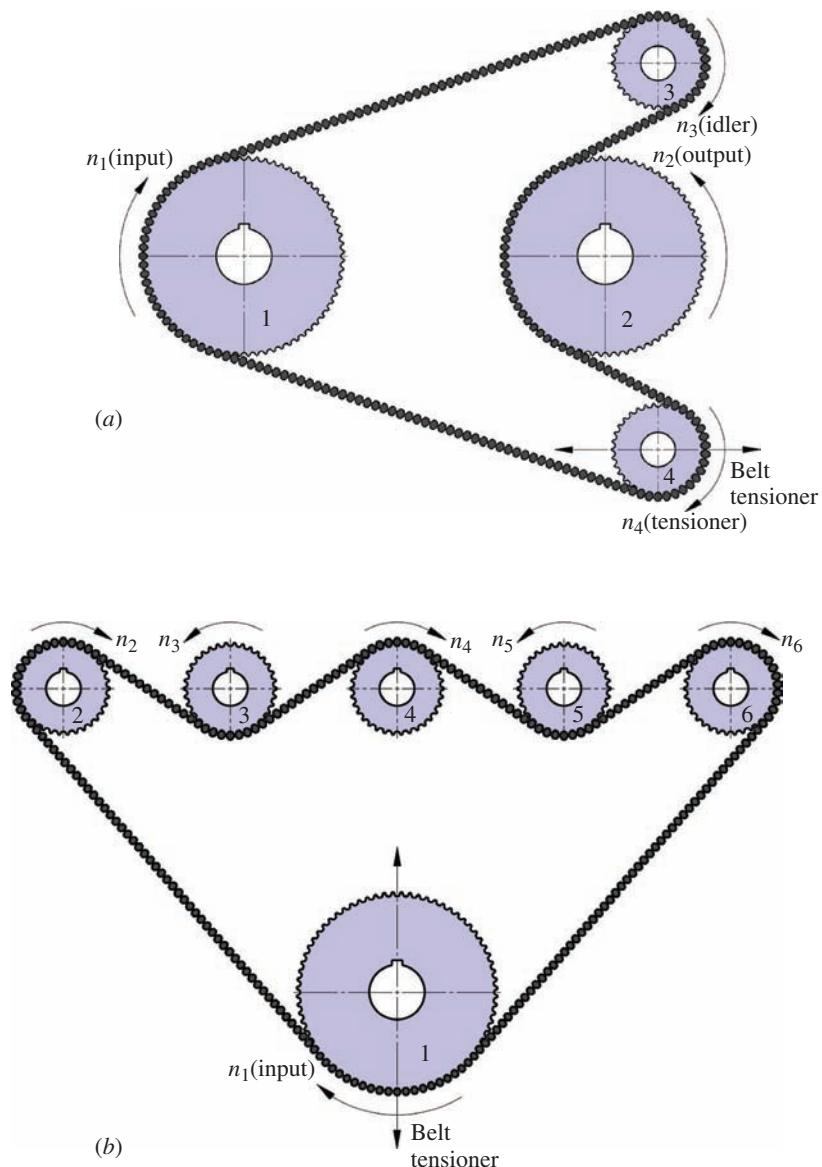


FIGURE 7-32 Serpentine belt drive configurations

7-6 CHAIN DRIVES

A chain is a power transmission element made as a series of pin-connected links. The design provides for flexibility while enabling the chain to transmit large tensile forces. See References 1–3 and Internet sites 1, 4, 6–12, 14, and 15 for more technical information and manufacturers' data.

When transmitting power between rotating shafts, the chain engages mating toothed wheels, called sprockets. Figure 7-33 shows a typical chain drive.

The most common type of chain is the *roller chain*, in which the roller on each pin provides exceptionally low friction between the chain and the sprockets.

Roller chain is classified by its *pitch*, the distance between corresponding parts of adjacent links. The pitch is usually illustrated as the distance between the centers of adjacent pins. U.S. Standard roller chain carries a size designation from 40 to 240, as listed in Table 7-11.

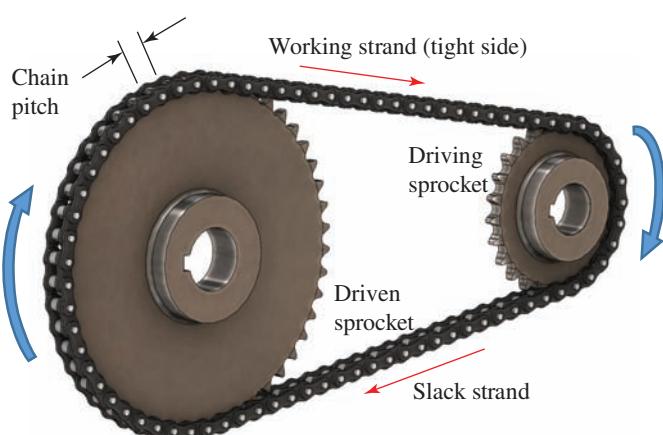


FIGURE 7-33 Basic arrangement of an industrial chain drive

See Reference 2. The digits (other than the final zero) indicate the pitch of the chain in eighths of an inch, as in the table. For example, the no. 100 chain has a pitch of 10/8 or $1\frac{1}{4}$ in. A series of heavy-duty sizes, with the suffix H on the designation (60H–240H), has the same basic dimensions as the standard chain of the same number except for thicker side plates. In addition, there are the smaller and lighter sizes: 25, 35, and 41.

The average tensile strengths of the various chain sizes are also listed in Table 7–12. These data can be used for very-low-speed drives or for applications in which the function of the chain is to apply a tensile force or to support a load. It is recommended that only 10% of the average tensile strength be used in such applications. For power transmission, the rating of a given chain size as a function of the speed of rotation must be determined, as explained later in this chapter.

ISO standards define several different chain types, data for three of which are listed in Table 7–13. One commonly used style from ISO-606 has basically the same design dimensions as for many of the standard U.S. roller chains. Then the pitch and dimensions for sprocket features and bore sizes are listed in the metric unit of mm making it more convenient to integrate familiar chain designs into an all-metric piece of equipment. ISO-3512 includes eight sizes of chain used for heavy-duty power transmission and lifting equipment. Some of the pitches for these chains are also equal to common U.S. sizes. Agricultural equipment such as tractor accessories, planters, harvesters, and mowers employ many chain drives to actuate moving systems. ISO-487 defines eight S-designations that cover a wide range of power transmission and

tension pull applications. See Reference 3 and Internet sites 7, 9, 14, and 15 for more information on metric-style chains and for manufacturers' data.

Another ISO document that is closely related to U.S. roller chain sizes is ISO 10823 and those designations are shown in Table 7–12. The designations are very similar to those listed in Table 7–13 from ISO 606, except the letter following the number is A instead of B.

Other types of chains include multiple strand designs, heavy series chains, double-pitch chains, and double-pitch conveyor chains as shown on the left side of Figure 7–34. A wide variety of attachments are available to facilitate the application of roller chain to conveying or other material handling uses. Usually in the form of extended plates or tabs with holes provided, the attachments make it easy to connect rods, buckets, parts pushers, part support devices, or conveyor slats to the chain. The right side of Figure 7–34 shows some attachment styles.

Figure 7–35 shows a variety of chain types used especially for conveying and similar applications. Such chain typically has a longer pitch than standard roller chain (usually twice the pitch), and the link plates are heavier. The larger sizes have cast link plates.

Design of Chain Drives

The rating of chain for its power transmission capacity considers three modes of failure: (1) fatigue of the link plates due to the repeated application of the tension in the tight side of the chain, (2) impact of the rollers as they engage the sprocket teeth, and (3) galling between the pins of each link and the bushings on the pins.

The ratings are based on empirical data with a smooth driver and a smooth load (service factor = 1.0) and with a rated life of approximately 15 000 h. The important variables are the pitch of the chain and the size and rotational speed of the smaller sprocket. Lubrication is critical to the satisfactory operation of a chain drive. Manufacturers recommend the type of lubrication method for given combinations of chain size, sprocket size, and speed. Details are discussed later.

Tables 7–14 to 7–16 list the rated power for three sizes of standard chain: no. 40 (1/2 in), no. 60 (3/4 in), and no. 80 (1.00 in). These are typical of the types of data available for all chain sizes in manufacturers' catalogs and can be used for problems in this book. When making final designs and specification, you should consult the catalog data for the particular manufacturer you are using. Notice these features of the data:

1. The ratings are based on the speed of the smaller sprocket and an expected life of approximately 15 000 h.
2. For a given speed, the power capacity increases with the number of teeth on the sprocket. Of course, the larger the number of teeth, the larger the diameter of the sprocket. Note that the use of a chain with a small pitch on a large sprocket produces the quieter drive.

TABLE 7–12 U.S. Roller Chain Sizes

| Chain number | ISO 10823 | Pitch (in) | Average tensile strength (lb) |
|--------------|-----------|-----------------|-------------------------------|
| 25 | 4A | 1/4 | 925 |
| 35 | 6A | 3/8 | 2100 |
| 41 | | 1/2 | 2000 |
| 40 | 8A | 1/2 | 3700 |
| 50 | 10A | 5/8 | 6100 |
| 60 | 12A | 3/4 | 8500 |
| 80 | 18A | 1 | 14 500 |
| 100 | 20A | 1 $\frac{1}{4}$ | 24 000 |
| 120 | 24A | 1 $\frac{1}{2}$ | 34 000 |
| 140 | 28A | 1 $\frac{3}{4}$ | 46 000 |
| 160 | 32A | 2 | 58 000 |
| 180 | 36A | 2 $\frac{1}{4}$ | 80 000 |
| 200 | 40A | 2 $\frac{1}{2}$ | 95 000 |
| 240 | 48A | 3 | 130 000 |

Reference: ANSI Standard B29.1.

TABLE 7-13 Metric Roller Chain Sizes and Strength Ratings**General-Purpose power transmission****ISO-606**

| Chain number | Pitch in | Pitch mm | Breaking strength lb | Breaking strength kN | Alternate designation |
|--------------|-------------|-------------|-------------------------|-------------------------|-----------------------|
| 04B | 0.250 | 6.350 | — | — | — |
| 05B | 0.315 | 8.000 | 989 | 4.4 | — |
| 06B | 0.375 | 9.525 | 2 001 | 8.9 | Metric 35 |
| 08B | 0.500 | 12.700 | 4 002 | 17.8 | Metric 40 |
| 10B | 0.625 | 15.88 | 4 991 | 22.2 | Metric 50 |
| 12B | 0.75 | 19.05 | 6 497 | 28.9 | Metric 60 |
| 16B | 1.00 | 25.40 | 9 510 | 42.3 | Metric 80 |
| 20B | 1.25 | 31.75 | 14 501 | 64.5 | Metric 100 |
| 24B | 1.50 | 38.10 | 22 010 | 97.9 | Metric 120 |
| 28B | 1.75 | 44.45 | 29 002 | 129.0 | Metric 140 |
| 32B | 2.00 | 50.8 | 37 995 | 169.0 | Metric 160 |
| 40B | 2.50 | 63.5 | 58 993 | 262.4 | Metric 200 |
| 48B | 3.00 | 76.2 | 89 996 | 400.3 | Metric 240 |
| 56B | 3.50 | 88.9 | 122 010 | 542.7 | — |
| 64B | 4.00 | 101.6 | 160 004 | 711.7 | — |
| 72B | 4.50 | 114.3 | 202 001 | 898.5 | — |

Heavy-Duty power transmission**ISO-3512**

| Chain number | Pitch in | Pitch mm | Breaking strength lb | Breaking strength kN |
|--------------|-------------|-------------|-------------------------|-------------------------|
| 2010 | 2.500 | 63.5 | 58 903 | 262.0 |
| 2512 | 3.067 | 77.9 | 84 982 | 378 |
| 2814 | 3.500 | 88.9 | 116 007 | 516 |
| 3315 | 4.073 | 103.5 | 133 993 | 596 |
| 3618 | 4.500 | 114.3 | 183 004 | 814 |
| 4020 | 5.000 | 127.0 | 236 960 | 1054 |
| 4824 | 6.000 | 152.4 | 341 951 | 1521 |
| 5628 | 7.000 | 177.8 | 464 928 | 2068 |

Power transmission for agricultural uses**ISO-487**

| Chain number | Pitch in | Pitch mm | Breaking strength lb | Breaking strength kN |
|--------------|-------------|-------------|-------------------------|-------------------------|
| S32 | 1.150 | 29.2 | 1 799 | 8.0 |
| S42 | 1.375 | 34.9 | 6 003 | 26.7 |
| S45 | 0.843 | 21.4 | 4 002 | 17.8 |
| S52 | 1.500 | 38.1 | 4 002 | 17.8 |
| S55 | 1.630 | 41.4 | 4 002 | 17.8 |
| S62 | 1.650 | 41.9 | 6 003 | 26.7 |
| S77 | 2.297 | 58.3 | 10 004 | 44.5 |
| S88 | 2.609 | 66.3 | 10 004 | 44.5 |

Notes: Not all suppliers offer all sizes.

Breaking strength data must be verified with specific supplier.

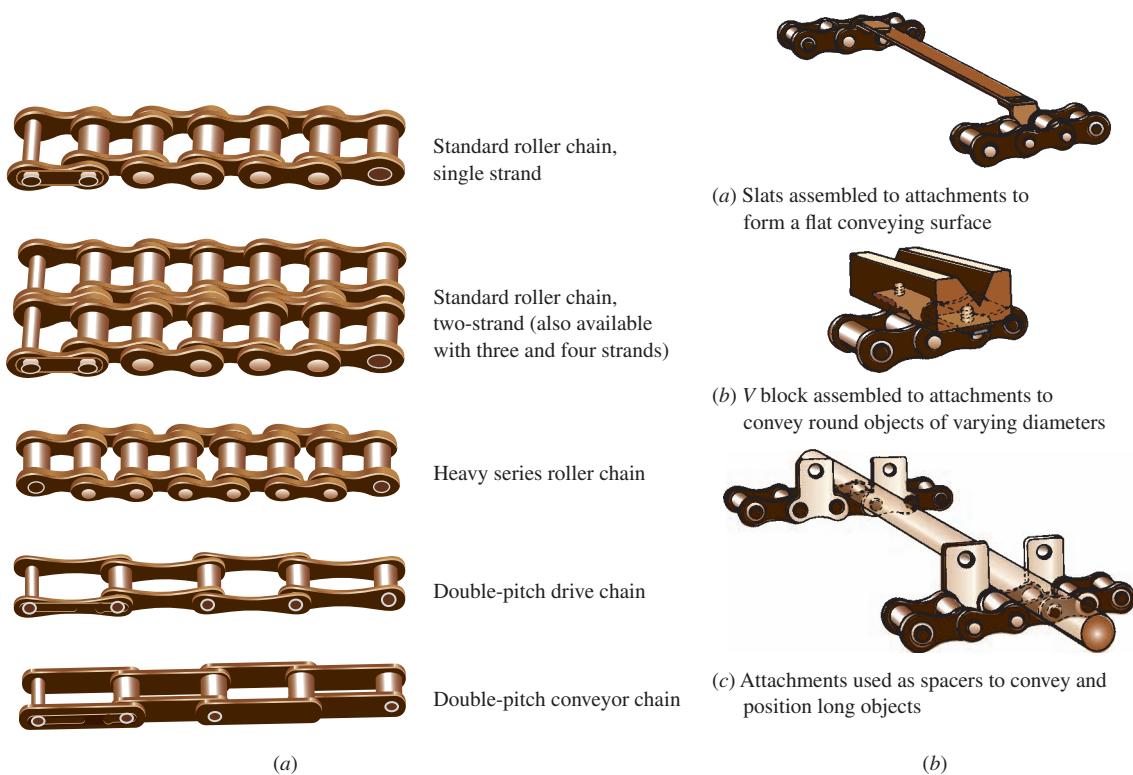


FIGURE 7-34 Other roller chain and examples of attachments

3. For a given sprocket size (a given number of teeth), the power capacity increases with increasing speed up to a point; then it decreases. Fatigue due to the tension in the chain governs at the low to moderate speeds; impact on the sprockets governs at the higher speeds. Each sprocket size has an absolute upper-limit speed due to the onset of galling between the pins and the bushings of the chain. This explains the abrupt drop in power capacity to zero at the limiting speed.

4. The ratings are for a single strand of chain. Although multiple strands do increase the power capacity, they do not provide a direct multiple of the single-strand capacity. Multiply the capacity in the tables by the following factors.

Two strands: Factor = 1.7

Three strands: Factor = 2.5

Four strands: Factor = 3.3

5. The chain manufacturer's ratings are for a service factor of 1.0. Specify a service factor for a given application as shown in Table 7-16. The combination of the nature of the driving member and the driven machine permit the selection of the service factor. Then compute the design power, P_{des} , from,

$$P_{des} = SF(P)$$

where P is the power delivered to the chain drive.

DESIGN GUIDELINES FOR CHAIN DRIVES ▾

The following are general recommendations for designing chain drives:

1. The minimum number of teeth in a sprocket should be 17 unless the drive is operating at a very low speed, under 100 rpm.
2. The maximum speed ratio should be 7.0, although higher ratios are feasible. Two or more stages of reduction can be used to achieve higher ratios.
3. The center distance between the sprocket axes should be approximately 30 to 50 pitches (30–50 times the pitch of the chain).
4. The larger sprocket should normally have no more than 120 teeth.
5. The preferred arrangement for a chain drive is with the centerline of the sprockets horizontal and with the tight side on top.
6. The chain length must be an integral multiple of the pitch, and *an even number of pitches is recommended*. The center distance should be made adjustable to accommodate the chain length and to take up for tolerances and wear. Excessive sag on the slack side should be avoided, especially on drives that are not horizontal. A convenient relation between center distance (CD), chain length (L_c), number of teeth in the small sprocket (N_1), and number of teeth in the large sprocket (N_2), expressed in *pitches*, is

◊ **Chain Length in Pitches**

$$L_c = 2CD + \frac{N_2 + N_1}{2} + \frac{(N_2 - N_1)^2}{4\pi^2 CD} \quad (7-18)$$

The center distance for a given chain length, again *in pitches*, is

◊ **Center Distance in Pitches**

$$CD = \frac{1}{4} \left[L_c - \frac{N_2 + N_1}{2} + \sqrt{\left[L_c - \frac{N_2 + N_1}{2} \right]^2 - \frac{8(N_2 - N_1)^2}{4\pi^2}} \right] \quad (7-19)$$

The computed center distance assumes no sag in either the tight or the slack side of the chain, and thus it is a *maximum*. Negative tolerances or adjustment must be provided. Adjustment for wear must also be provided.

7. The pitch diameter of a sprocket with N teeth for a chain with a pitch of p is

◊ **Pitch Diameter of Sprocket**

$$PD = \frac{p}{\sin(180^\circ/N)} \text{ inches or mm} \quad (7-20)$$

8. The minimum sprocket diameter and therefore the minimum number of teeth in a sprocket are often limited by the size of the shaft on which it is mounted. Check the sprocket catalog.
9. The arc of contact, θ_1 , often called the *angle of wrap*, of the chain on the smaller sprocket should be greater than 120° .

◊ **Angle of Wrap Smaller Sprocket**

$$\theta_1 = 180^\circ - 2\sin^{-1}[(PD_2 - PD_1)/2CD] \quad (7-21)$$

10. For reference, the arc of contact, θ_2 , on the larger sprocket is


◊ **Angle of Wrap Large Sprocket**

$$\theta_2 = 180^\circ + 2\sin^{-1}[(PD_2 - PD_1)/2CD] \quad (7-22)$$



Mill, narrow series
(drive and conveyor sizes)

Offset cast-link chain used primarily in the lumber industry for conveyor applications.

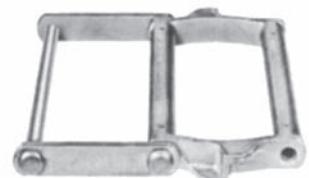

Combination mill
(wide conveyor sizes)
Cast block links and steel sidebar construction for drag conveyor applications.



Heavy-duty drag chain
Cast steel offset block links. Used in ash and clinker conveyors.



Pintle chain
Chain constructed of a series of cast offset links coupled by steel pins or rivets. Suitable for slow-to moderate-speed drive, conveyor and elevator service.



Roller-top transfer
Cast links with top rollers used in several strands to convey material transversely.



Roof-top
Cast roof-shaped links used in several strands on transfer conveyors.



Detachable
Consists of unit links, each with an open-type hook that flexes on the end bar of the adjacent link. Used for slow- to moderate-speed drive and conveyor application.



Drop-forged
Drop-forged inner and outer links coupled by headed pins. Used for trolley, scraper, flight, and similar conveyors.

FIGURE 7-35 Conveyor chains (Rexnord Industries, LLC, Milwaukee, WI)

TABLE 7-14 Horsepower Ratings—Single-Strand Roller Chain No. 40

| No. of teeth | 0.500-in pitch | | | | | | | | | | Rotational speed of small sprocket, rev/min | | | | | | | | | | | | | | | |
|--------------|----------------|------|------|------|--------|------|------|------|-------|-------|---|-------|-------|-------|--------|-------|-------|-------|------|------|------|------|------|------|------|--|
| | 10 | 25 | 50 | 100 | 180 | 200 | 300 | 500 | 700 | 900 | 1000 | 1200 | 1400 | 1600 | 1800 | 2100 | 2500 | 3000 | 3500 | 4000 | 5000 | 6000 | 7000 | 8000 | 9000 | |
| 11 | 0.06 | 0.14 | 0.27 | 0.52 | 0.91 | 1.00 | 1.48 | 2.42 | 3.34 | 4.25 | 4.70 | 5.60 | 6.49 | 5.57 | 4.66 | 3.70 | 2.85 | 2.17 | 1.72 | 1.41 | 1.01 | 0.77 | 0.61 | 0.50 | 0.00 | |
| 12 | 0.06 | 0.15 | 0.29 | 0.56 | 0.99 | 1.09 | 1.61 | 2.64 | 3.64 | 4.64 | 5.13 | 6.11 | 7.09 | 6.34 | 5.31 | 4.22 | 3.25 | 2.47 | 1.96 | 1.60 | 1.15 | 0.87 | 0.69 | 0.57 | 0.00 | |
| 13 | 0.07 | 0.16 | 0.31 | 0.61 | 1.07 | 1.19 | 1.75 | 2.86 | 3.95 | 5.02 | 5.56 | 6.62 | 7.68 | 7.15 | 5.99 | 4.76 | 3.66 | 2.79 | 2.21 | 1.81 | 1.29 | 0.98 | 0.78 | 0.00 | | |
| 14 | 0.07 | 0.17 | 0.34 | 0.66 | 1.15 | 1.28 | 1.88 | 3.08 | 4.25 | 5.41 | 5.98 | 7.13 | 8.27 | 7.99 | 6.70 | 5.31 | 4.09 | 3.11 | 2.47 | 2.02 | 1.45 | 1.10 | 0.87 | 0.00 | | |
| 15 | 0.08 | 0.19 | 0.36 | 0.70 | 1.24 | 1.37 | 2.02 | 3.30 | 4.55 | 5.80 | 6.41 | 7.64 | 8.86 | 8.86 | 7.43 | 5.89 | 4.54 | 3.45 | 2.74 | 2.24 | 1.60 | 1.22 | 0.97 | 0.00 | | |
| 16 | 0.08 | 0.20 | 0.39 | 0.75 | 1.32 | 1.46 | 2.15 | 3.52 | 4.86 | 6.18 | 6.84 | 8.15 | 9.45 | 9.76 | 8.18 | 6.49 | 5.00 | 3.80 | 3.02 | 2.47 | 1.77 | 1.34 | 0.00 | | | |
| 17 | 0.09 | 0.21 | 0.41 | 0.80 | 1.40 | 1.55 | 2.29 | 3.74 | 5.16 | 6.57 | 7.27 | 8.66 | 10.04 | 10.69 | 8.96 | 7.11 | 5.48 | 4.17 | 3.31 | 2.71 | 1.94 | 1.47 | 1.00 | | | |
| 18 | 0.09 | 0.22 | 0.43 | 0.84 | 1.48 | 1.64 | 2.42 | 3.96 | 5.46 | 6.95 | 7.69 | 9.17 | 10.63 | 11.65 | 9.76 | 7.75 | 5.97 | 4.54 | 3.60 | 2.95 | 2.11 | 1.60 | 1.00 | | | |
| 19 | 0.10 | 0.24 | 0.46 | 0.89 | 1.57 | 1.73 | 2.56 | 4.18 | 5.77 | 7.34 | 8.12 | 9.66 | 11.22 | 12.64 | 10.59 | 8.40 | 6.47 | 4.92 | 3.91 | 3.20 | 2.29 | 0.99 | 0.00 | | | |
| 20 | 0.10 | 0.25 | 0.48 | 0.94 | 1.65 | 1.82 | 2.69 | 4.39 | 6.07 | 7.73 | 8.55 | 10.18 | 11.81 | 13.42 | 11.44 | 9.07 | 6.99 | 5.31 | 4.22 | 3.45 | 2.47 | 2.00 | | | | |
| 21 | 0.11 | 0.26 | 0.51 | 0.98 | 1.73 | 1.91 | 2.83 | 4.61 | 6.37 | 8.11 | 8.98 | 10.69 | 12.40 | 14.10 | 12.30 | 9.76 | 7.52 | 5.72 | 4.54 | 3.71 | 2.65 | 0.00 | | | | |
| 22 | 0.11 | 0.27 | 0.53 | 1.03 | 1.81 | 2.01 | 2.96 | 4.83 | 6.68 | 8.50 | 9.40 | 11.20 | 12.99 | 14.77 | 13.19 | 10.47 | 8.06 | 6.13 | 4.87 | 3.98 | 2.85 | 0.00 | | | | |
| 23 | 0.12 | 0.28 | 0.56 | 1.08 | 1.90 | 2.10 | 3.10 | 5.05 | 6.98 | 8.89 | 9.83 | 11.71 | 13.58 | 15.44 | 14.10 | 11.19 | 8.62 | 6.55 | 5.20 | 4.26 | 3.05 | 0.00 | | | | |
| 24 | 0.12 | 0.30 | 0.58 | 1.12 | 1.98 | 2.19 | 3.23 | 5.27 | 7.28 | 9.27 | 10.26 | 12.22 | 14.17 | 16.11 | 15.03 | 11.93 | 9.18 | 6.99 | 5.54 | 4.54 | 0.87 | 0.00 | | | | |
| 25 | 0.13 | 0.31 | 0.60 | 1.17 | 2.06 | 2.28 | 3.36 | 5.49 | 7.59 | 9.66 | 10.69 | 12.73 | 14.76 | 16.78 | 15.98 | 12.68 | 9.76 | 7.43 | 5.89 | 4.82 | 0.00 | | | | | |
| 26 | 0.13 | 0.32 | 0.63 | 1.22 | 2.14 | 2.37 | 3.50 | 5.71 | 7.89 | 10.04 | 11.11 | 13.24 | 15.35 | 17.45 | 16.95 | 13.45 | 10.36 | 7.88 | 6.25 | 5.12 | 0.00 | | | | | |
| 28 | 0.14 | 0.35 | 0.67 | 1.31 | 2.31 | 2.55 | 3.77 | 6.15 | 8.50 | 10.82 | 11.97 | 14.26 | 16.53 | 18.79 | 18.94 | 15.03 | 11.57 | 8.80 | 6.99 | 5.72 | 0.00 | | | | | |
| 30 | 0.15 | 0.37 | 0.72 | 1.41 | 2.47 | 2.74 | 4.04 | 6.59 | 9.11 | 11.59 | 12.82 | 15.28 | 17.71 | 20.14 | 21.01 | 16.67 | 12.84 | 9.76 | 7.75 | 6.34 | 0.00 | | | | | |
| 32 | 0.16 | 0.40 | 0.77 | 1.50 | 2.64 | 2.92 | 4.31 | 7.03 | 9.71 | 12.38 | 13.66 | 16.30 | 18.89 | 21.48 | 23.14 | 18.37 | 14.14 | 10.76 | 8.54 | 1.41 | | | | | | |
| 35 | 0.18 | 0.43 | 0.84 | 1.64 | 2.88 | 3.19 | 4.71 | 7.69 | 10.62 | 13.52 | 14.96 | 17.82 | 20.67 | 23.49 | 26.30 | 21.01 | 16.17 | 12.30 | 9.76 | 0.00 | | | | | | |
| 40 | 0.21 | 0.50 | 0.96 | 1.87 | 3.30 | 3.65 | 5.38 | 8.79 | 12.14 | 15.45 | 17.10 | 20.37 | 23.62 | 26.85 | 30.06 | 25.67 | 19.76 | 15.03 | 0.00 | | | | | | | |
| 45 | 0.23 | 0.56 | 1.08 | 2.11 | 3.71 | 4.10 | 6.06 | 9.89 | 13.66 | 17.39 | 19.24 | 22.92 | 26.57 | 30.20 | 33.82 | 30.63 | 23.58 | 5.53 | 0.00 | | | | | | | |
| | Type A | | | | Type B | | | | | | | | | | Type C | | | | | | | | | | | |

Type A: Manual or drip lubrication

Type B: Bath or disc lubrication

Type C: Oil stream lubrication

TABLE 7-15 Horsepower Ratings—Single-Strand Roller Chain No. 60

| No. of teeth | 0.750-in pitch | | | | | | | | | | Rotational speed of small sprocket, rev/min | | | | | | | | | | | | | | |
|--------------|----------------|------|------|------|------|-------|-------|-------|-------|-------|---|-------|-------|-------|-------|-------|-------|-------|-------|------|------|------|------|------|------|
| | 10 | 25 | 50 | 100 | 120 | 200 | 300 | 400 | 500 | 600 | 800 | 1000 | 1200 | 1400 | 1600 | 1800 | 2000 | 2500 | 3000 | 3500 | 4000 | 4500 | 5000 | 5500 | 6000 |
| 11 | 0.19 | 0.46 | 0.89 | 1.72 | 2.05 | 3.35 | 4.95 | 6.52 | 8.08 | 9.63 | 12.69 | 15.58 | 11.85 | 9.41 | 7.70 | 6.45 | 5.51 | 3.94 | 3.00 | 2.38 | 1.95 | 1.63 | 1.39 | 1.21 | 0.00 |
| 12 | 0.21 | 0.50 | 0.97 | 1.88 | 2.24 | 3.66 | 5.40 | 7.12 | 8.82 | 10.51 | 13.85 | 17.15 | 13.51 | 10.72 | 8.77 | 7.35 | 6.28 | 4.49 | 3.42 | 2.71 | 2.22 | 1.86 | 1.59 | 1.38 | 0.00 |
| 13 | 0.22 | 0.54 | 1.05 | 2.04 | 2.43 | 3.96 | 5.85 | 7.71 | 9.55 | 11.38 | 15.00 | 18.58 | 15.23 | 12.08 | 9.89 | 8.29 | 7.08 | 5.06 | 3.85 | 3.06 | 2.50 | 2.10 | 1.79 | 0.00 | |
| 14 | 0.24 | 0.58 | 1.13 | 2.19 | 2.61 | 4.27 | 6.30 | 8.30 | 10.29 | 12.26 | 16.15 | 20.01 | 17.02 | 13.51 | 11.05 | 9.26 | 7.91 | 5.66 | 4.31 | 3.42 | 2.80 | 2.34 | 2.01 | 0.00 | |
| 15 | 0.26 | 0.62 | 1.21 | 2.35 | 2.80 | 4.57 | 6.75 | 8.90 | 11.02 | 13.13 | 17.31 | 21.44 | 18.87 | 14.98 | 12.26 | 10.27 | 8.77 | 6.28 | 4.77 | 3.79 | 3.10 | 2.60 | 2.00 | | |
| 16 | 0.27 | 0.66 | 1.29 | 2.51 | 2.99 | 4.88 | 7.20 | 9.49 | 11.76 | 14.01 | 18.46 | 22.87 | 20.79 | 16.50 | 13.51 | 11.32 | 9.66 | 6.91 | 5.26 | 4.17 | 3.42 | 2.78 | 2.00 | | |
| 17 | 0.29 | 0.70 | 1.37 | 2.66 | 3.17 | 5.18 | 7.65 | 10.08 | 12.49 | 14.88 | 19.62 | 24.30 | 22.77 | 18.07 | 14.79 | 12.40 | 10.58 | 7.57 | 5.76 | 4.57 | 3.74 | 3.00 | | | |
| 18 | 0.31 | 0.75 | 1.45 | 2.82 | 3.36 | 5.49 | 8.10 | 10.68 | 13.23 | 15.76 | 20.77 | 25.73 | 24.81 | 19.69 | 16.11 | 13.51 | 11.53 | 8.25 | 6.28 | 4.98 | 4.08 | 3.00 | | | |
| 19 | 0.33 | 0.79 | 1.53 | 2.98 | 3.55 | 5.79 | 8.55 | 11.27 | 13.96 | 16.63 | 21.92 | 27.16 | 26.91 | 21.35 | 17.48 | 14.65 | 12.50 | 9.95 | 6.81 | 5.40 | 4.20 | 3.00 | | | |
| 20 | 0.34 | 0.83 | 1.61 | 3.13 | 3.73 | 6.10 | 9.00 | 11.86 | 14.70 | 17.51 | 23.08 | 28.59 | 29.06 | 23.06 | 18.87 | 15.82 | 13.51 | 9.66 | 7.35 | 5.83 | 4.00 | | | | |
| 21 | 0.36 | 0.87 | 1.69 | 3.29 | 3.92 | 6.40 | 9.45 | 12.46 | 15.43 | 18.38 | 24.23 | 30.02 | 31.26 | 24.81 | 20.31 | 17.02 | 14.53 | 10.40 | 7.91 | 6.28 | 4.00 | | | | |
| 22 | 0.38 | 0.91 | 1.77 | 3.45 | 4.11 | 6.71 | 9.90 | 13.05 | 16.17 | 19.26 | 25.39 | 31.45 | 33.52 | 26.60 | 21.77 | 18.25 | 15.58 | 11.15 | 8.48 | 6.00 | | | | | |
| 23 | 0.40 | 0.95 | 1.85 | 3.61 | 4.29 | 7.01 | 10.35 | 13.64 | 16.90 | 20.13 | 26.54 | 32.88 | 35.84 | 28.44 | 23.28 | 19.51 | 16.66 | 11.92 | 9.07 | 7.00 | | | | | |
| 24 | 0.41 | 0.99 | 1.93 | 3.76 | 4.48 | 7.32 | 10.80 | 14.24 | 17.64 | 21.01 | 27.69 | 34.31 | 38.20 | 30.31 | 24.81 | 20.79 | 17.75 | 12.70 | 9.66 | 7.00 | | | | | |
| 25 | 0.43 | 1.04 | 2.01 | 3.92 | 4.67 | 7.62 | 11.25 | 14.83 | 18.37 | 21.89 | 28.85 | 35.74 | 40.61 | 32.23 | 26.38 | 22.11 | 18.87 | 13.51 | 10.27 | 7.00 | | | | | |
| 26 | 0.45 | 1.08 | 2.09 | 4.08 | 4.85 | 7.93 | 11.70 | 15.42 | 19.11 | 22.76 | 30.00 | 37.17 | 43.07 | 34.18 | 27.98 | 23.44 | 20.02 | 14.32 | 10.90 | 7.00 | | | | | |
| 28 | 0.48 | 1.16 | 2.26 | 4.39 | 5.23 | 8.54 | 12.60 | 16.61 | 20.58 | 24.51 | 32.31 | 40.03 | 47.68 | 38.20 | 31.26 | 26.20 | 22.37 | 16.01 | 10.00 | | | | | | |
| 30 | 0.52 | 1.24 | 2.42 | 4.70 | 5.60 | 9.15 | 13.50 | 17.79 | 22.05 | 26.26 | 34.62 | 42.89 | 51.09 | 42.36 | 34.67 | 29.06 | 24.81 | 17.75 | 10.00 | | | | | | |
| 32 | 0.55 | 1.33 | 2.58 | 5.02 | 5.98 | 9.76 | 14.40 | 18.98 | 23.52 | 28.01 | 36.92 | 45.75 | 54.50 | 46.67 | 38.20 | 32.01 | 27.33 | 19.56 | 10.00 | | | | | | |
| 35 | 0.60 | 1.45 | 2.82 | 5.49 | 6.54 | 10.67 | 15.75 | 20.76 | 25.72 | 30.64 | 40.39 | 50.03 | 59.60 | 53.38 | 43.69 | 36.62 | 31.26 | 1.35 | 0.00 | | | | | | |
| 40 | 0.69 | 1.66 | 3.22 | 6.27 | 7.47 | 12.20 | 18.00 | 23.73 | 29.39 | 35.02 | 46.16 | 57.18 | 68.12 | 65.22 | 53.38 | 44.74 | 38.20 | 0.00 | | | | | | | |
| 45 | 0.77 | 1.86 | 3.63 | 7.05 | 8.40 | 13.72 | 20.25 | 26.69 | 33.07 | 38.39 | 51.92 | 64.33 | 76.63 | 77.83 | 63.70 | 53.38 | 42.45 | 0.00 | | | | | | | |

Type A

Type B

Type C

Type A: Manual or drip lubrication
 Type B: Bath or disc lubrication
 Type C: Oil stream lubrication

TABLE 7-16 Horsepower Ratings—Single-Strand Roller Chain No. 80

| No. of teeth | 1.000-in pitch | | | | | | | | | | Rotational speed of small sprocket, rev/min | | | | | | | | | | | | | | |
|--------------|----------------|------|------|-------|--------|-------|-------|-------|-------|-------|---|--------|--------|--------|--------|--------|-------|-------|-------|-------|-------|------|------|------|--------|
| | 10 | 25 | 50 | 75 | 88 | 100 | 200 | 300 | 400 | 500 | 600 | 700 | 800 | 900 | 1000 | 1200 | 1400 | 1600 | 1800 | 2000 | 2500 | 3000 | 3500 | 4000 | 4500 |
| 11 | 0.44 | 1.06 | 2.07 | 3.05 | 3.56 | 4.03 | 7.83 | 11.56 | 15.23 | 18.87 | 22.48 | 26.07 | 27.41 | 22.97 | 19.61 | 14.92 | 11.84 | 9.69 | 8.12 | 6.83 | 4.96 | 3.77 | 3.00 | 2.45 | 0.00 |
| 12 | 0.48 | 1.16 | 2.26 | 3.33 | 3.88 | 4.39 | 8.54 | 12.61 | 16.82 | 20.59 | 24.53 | 28.44 | 31.23 | 26.17 | 22.35 | 17.00 | 13.49 | 11.04 | 9.25 | 7.90 | 5.65 | 4.30 | 3.41 | 2.79 | 0.00 |
| 13 | 0.52 | 1.26 | 2.45 | 3.61 | 4.21 | 4.76 | 9.26 | 13.66 | 18.00 | 22.31 | 26.57 | 30.81 | 35.02 | 29.51 | 25.20 | 19.17 | 15.21 | 12.45 | 10.43 | 8.91 | 6.37 | 4.85 | 3.85 | 3.15 | |
| 14 | 0.56 | 1.35 | 2.63 | 3.89 | 4.53 | 5.12 | 9.97 | 14.71 | 19.39 | 24.02 | 28.62 | 33.18 | 37.72 | 32.98 | 28.16 | 21.42 | 17.00 | 13.91 | 11.66 | 9.96 | 7.12 | 5.42 | 4.30 | 3.52 | |
| 15 | 0.60 | 1.45 | 2.82 | 4.16 | 4.86 | 5.49 | 10.68 | 15.76 | 20.77 | 25.74 | 30.66 | 35.55 | 40.41 | 36.58 | 31.23 | 23.76 | 18.85 | 15.43 | 12.93 | 11.04 | 7.90 | 6.01 | 4.77 | 0.00 | |
| 16 | 0.64 | 1.55 | 3.01 | 4.44 | 5.18 | 5.86 | 11.39 | 16.81 | 22.16 | 27.45 | 32.70 | 37.92 | 43.11 | 40.30 | 34.41 | 26.17 | 20.77 | 17.00 | 14.25 | 12.16 | 8.70 | 6.62 | 5.25 | 0.00 | |
| 17 | 0.68 | 1.64 | 3.20 | 4.72 | 5.50 | 6.22 | 12.10 | 17.86 | 23.54 | 29.17 | 34.75 | 40.29 | 45.80 | 44.13 | 37.68 | 28.66 | 22.75 | 18.62 | 15.60 | 13.32 | 9.53 | 7.25 | 0.00 | | |
| 18 | 0.72 | 1.74 | 3.39 | 5.00 | 5.83 | 6.59 | 12.81 | 18.91 | 24.93 | 30.88 | 36.79 | 42.66 | 48.49 | 48.08 | 41.05 | 31.23 | 24.78 | 20.29 | 17.00 | 14.51 | 10.39 | 7.90 | 0.00 | | |
| 19 | 0.76 | 1.84 | 3.57 | 5.28 | 6.15 | 6.95 | 13.53 | 19.96 | 26.31 | 32.60 | 38.84 | 45.03 | 51.19 | 52.15 | 44.52 | 33.87 | 26.88 | 22.00 | 18.44 | 15.74 | 11.26 | 0.36 | 0.00 | | |
| 20 | 0.80 | 1.93 | 3.76 | 5.55 | 6.47 | 7.32 | 14.24 | 21.01 | 27.70 | 34.32 | 40.88 | 47.40 | 53.88 | 56.32 | 48.08 | 36.58 | 29.03 | 23.76 | 19.91 | 17.00 | 12.16 | 0.00 | | | |
| 21 | 0.84 | 2.03 | 3.95 | 5.83 | 6.80 | 7.69 | 14.95 | 22.07 | 29.08 | 36.03 | 42.92 | 49.77 | 56.58 | 60.59 | 51.73 | 39.36 | 31.23 | 25.56 | 21.42 | 18.29 | 13.09 | 0.00 | | | |
| 22 | 0.88 | 2.13 | 4.14 | 6.11 | 7.12 | 8.05 | 15.66 | 23.12 | 30.47 | 37.75 | 44.97 | 52.14 | 59.27 | 64.97 | 55.47 | 42.20 | 33.49 | 27.41 | 22.97 | 19.61 | 14.03 | | | | |
| 23 | 0.92 | 2.22 | 4.33 | 6.39 | 7.45 | 8.42 | 16.37 | 24.17 | 31.85 | 39.46 | 47.01 | 54.51 | 61.97 | 69.38 | 59.30 | 45.11 | 35.80 | 29.30 | 24.55 | 20.97 | 15.00 | | | | |
| 24 | 0.96 | 2.32 | 4.52 | 6.66 | 7.77 | 8.78 | 17.09 | 25.22 | 33.24 | 41.18 | 49.06 | 56.88 | 64.66 | 72.40 | 63.21 | 48.08 | 38.16 | 31.23 | 26.17 | 22.35 | 15.99 | | | | |
| 25 | 1.00 | 2.42 | 4.70 | 6.94 | 8.09 | 9.15 | 17.80 | 26.27 | 34.62 | 42.89 | 51.10 | 59.25 | 67.35 | 75.42 | 67.20 | 51.12 | 40.57 | 33.20 | 27.83 | 23.76 | 8.16 | | | | |
| 26 | 1.04 | 2.51 | 4.89 | 7.22 | 8.42 | 9.52 | 18.51 | 27.32 | 36.01 | 44.61 | 53.14 | 61.62 | 70.05 | 78.43 | 71.27 | 54.22 | 43.02 | 36.22 | 29.51 | 25.20 | 0.00 | | | | |
| 28 | 1.12 | 2.71 | 5.27 | 7.77 | 9.06 | 10.25 | 19.93 | 29.42 | 38.78 | 48.04 | 57.23 | 66.36 | 75.44 | 84.47 | 79.65 | 60.59 | 48.08 | 39.36 | 32.98 | 28.16 | 0.00 | | | | |
| 30 | 1.20 | 2.90 | 5.64 | 8.33 | 9.71 | 10.98 | 21.36 | 31.52 | 41.55 | 51.47 | 61.32 | 71.10 | 80.82 | 90.50 | 88.33 | 67.20 | 53.33 | 43.65 | 36.58 | 31.23 | | | | | |
| 32 | 1.28 | 3.09 | 6.02 | 8.89 | 10.36 | 11.71 | 22.78 | 33.62 | 44.32 | 54.91 | 65.41 | 75.84 | 86.21 | 96.53 | 97.31 | 74.03 | 58.75 | 48.08 | 40.30 | 5.65 | | | | | |
| 35 | 1.40 | 3.38 | 6.58 | 9.72 | 11.33 | 12.81 | 24.92 | 36.78 | 48.47 | 60.05 | 71.54 | 82.95 | 94.29 | 105.58 | 111.31 | 84.68 | 67.20 | 55.00 | 28.15 | 0.00 | | | | | |
| 40 | 1.61 | 3.87 | 7.53 | 11.11 | 12.95 | 14.64 | 28.48 | 42.03 | 55.40 | 68.63 | 81.76 | 94.80 | 107.77 | 120.67 | 133.51 | 103.46 | 82.10 | 40.16 | 0.00 | | | | | | |
| 45 | 1.81 | 4.35 | 8.47 | 12.49 | 14.57 | 16.47 | 32.04 | 47.28 | 62.32 | 77.21 | 91.98 | 106.65 | 121.24 | 135.75 | 150.20 | 123.45 | 72.28 | 0.00 | | | | | | | |
| | Type A | | | | Type B | | | | | | | | | | | | | | | | | | | | Type C |

TABLE 7-17 Service Factors for Chain Drives

| Load type | Type of driver | | |
|---|-----------------|---------------------------|--|
| | Hydraulic drive | Electric motor or turbine | Internal combustion engine with mechanical drive |
| Smooth Agitators; fans; generators; grinders; centrifugal pumps; rotary screens; light, uniformly loaded conveyors | 1.0 | 1.0 | 1.2 |
| Moderate shock Bucket elevators; machine tools; cranes; heavy conveyors; food mixers and grinders; ball mills; reciprocating pumps; woodworking machinery | 1.2 | 1.3 | 1.4 |
| Heavy shock Punch presses; hammer mills; boat propellers; crushers; reciprocating conveyors; rolling mills; logging hoists; dredges; printing presses | 1.4 | 1.5 | 1.7 |

Lubrication

It is essential that adequate lubrication be provided for chain drives. There are numerous moving parts within the chain, along with the interaction between the chain and the sprocket teeth. The designer must define the lubricant properties and the method of lubrication.

Lubricant Properties. Petroleum-based lubricating oil similar to engine oil is recommended. Its viscosity must enable the oil to flow readily between chain surfaces that move relative to each other while providing adequate lubrication action. The oil should be kept clean and free of moisture. Table 7-18 gives the recommended lubricants for different ambient temperatures.

Method of Lubrication. The American Chain Association recommends three different types of lubrication depending on the speed of operation and the power being transmitted. See Tables 7-14 to 7-16 or manufacturers' catalogs for recommendations. Refer to the following descriptions of the methods and the illustrations in Figure 7-36.

Type A. Manual or drip lubrication: For manual lubrication, oil is applied copiously with a brush or a spout can, at least once every 8 hours of operation. For drip

TABLE 7-18 Recommended Lubricant for Chain Drives

| Ambient temperature °F | °C | Recommended lubricant |
|---------------------------|----------|-----------------------|
| 20 to 40 | -7 to 5 | SAE 20 |
| 40 to 100 | 5 to 38 | SAE 30 |
| 100 to 120 | 38 to 49 | SAE 40 |
| 120 to 140 | 49 to 60 | SAE 50 |

feed lubrication, oil is fed directly onto the link plates of each chain strand.

Type B. Bath or disc lubrication: The chain cover provides a sump of oil into which the chain dips continuously. Alternatively, a disc or a slinger can be attached to one of the shafts to lift oil to a trough above the lower strand of chain. The trough then delivers a stream of oil to the chain. The chain itself, then, does not need to dip into the oil.

Type C. Oil stream lubrication: An oil pump delivers a continuous stream of oil on the lower part of the chain.

Example Problem 7-5

Figure 7-37 shows a drive for a heavily loaded conveyor for use in the fields of a large commercial produce farm to take heavy containers of potatoes from the field onto trucks that will transport them to the processing plant. The conveyor is to be driven by a gasoline engine delivering 15.0 hp at a speed of 900 rpm. The conveyor pulley speed is to be 230 to 240 rpm. Design the chain drive.

Solution

Objective Design the chain drive.

Given Power transmitted = 15 hp to a heavily loaded produce conveyor
Speed of motor = 900 rpm; output speed range = 230 to 240 rpm

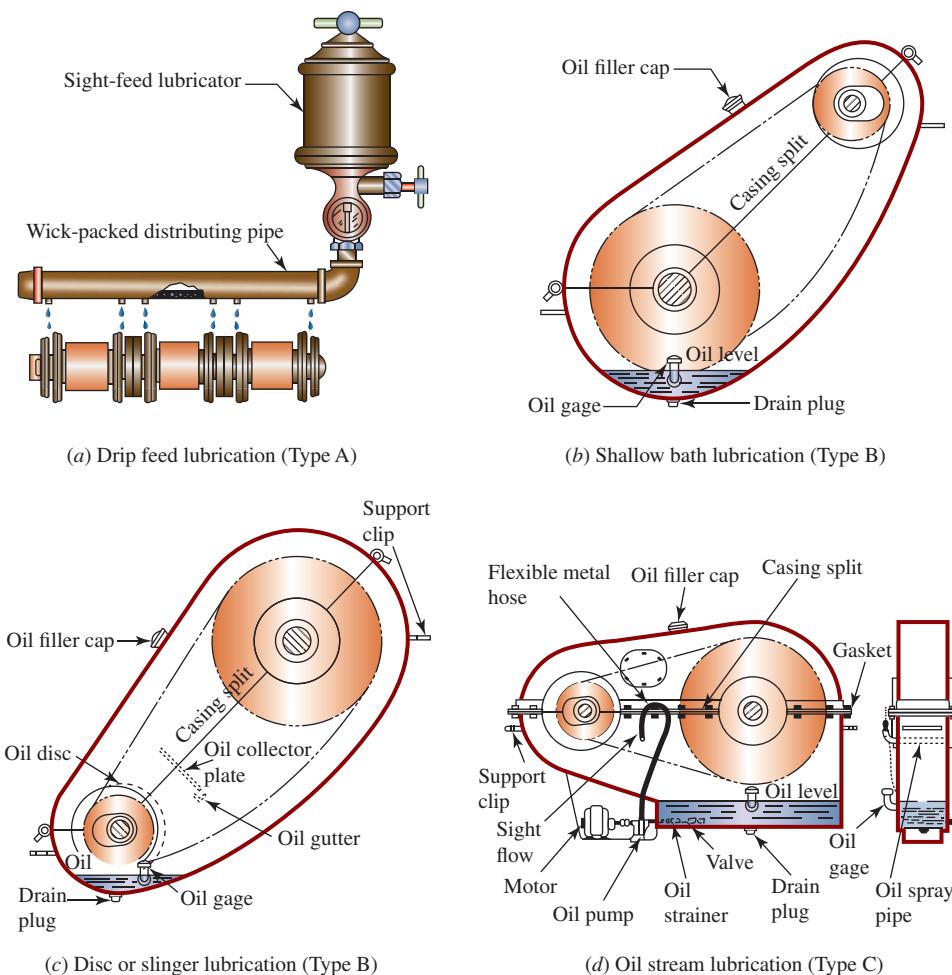


FIGURE 7-36 Lubrication methods

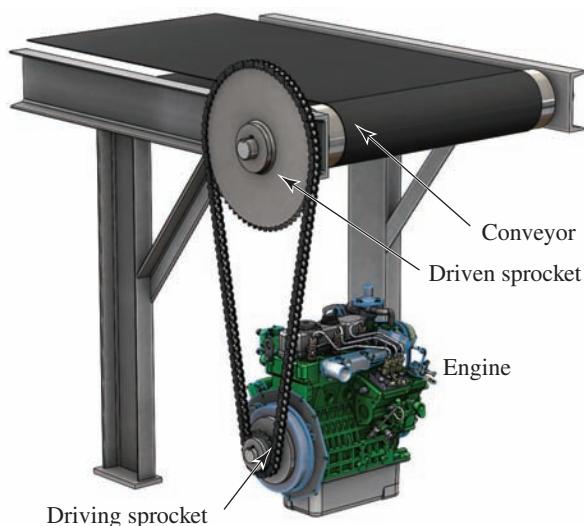


FIGURE 7-37 Chain drive for a heavy-duty conveyor for Example Problem 7-5

- Analysis Use the design data presented in this section. The solution procedure is developed within the Results section of the problem solution.
- Results **Step 1.** Specify a service factor and compute the design power. From Table 7–17, for moderate shock from the loads applied to the heavy-duty conveyor and a gasoline engine drive, use a service factor of $SF = 1.4$. Then,

$$\text{Design power} = P_{des} = SF(P) = 1.4(15.0 \text{ hp}) = 21.0 \text{ hp}$$

Step 2. Compute the desired ratio. Using the middle of the required range of output speeds, we have

$$\text{Ratio} = (900 \text{ rpm})/(235 \text{ rpm}) = 3.83$$

Step 3. Refer to the tables for power capacity (Tables 7–14 to 7–16), and select the chain pitch. For a single strand, the no. 60 chain with $p = 3/4$ in seems best. A 17-tooth sprocket is rated at 21.96 hp at 900 rpm by interpolation. At this speed, Type B lubrication (oil bath) is required.

Step 4. Compute the required number of teeth on the large sprocket:

$$N_2 = N_1 \times \text{ratio} = 17(3.83) = 65.11$$

Let's use the integer: 65 teeth.

Step 5. Compute the actual expected output speed:

$$n_2 = n_1(N_1/N_2) = 900 \text{ rpm}(17/65) = 235.3 \text{ rpm} (\text{Okay! The speed is within the specified range.})$$

Step 6. Compute the pitch diameters of the sprockets using Equation (7–20):

$$PD_1 = \frac{p}{\sin(180^\circ/N_1)} = \frac{0.75 \text{ in}}{\sin(180^\circ/17)} = 4.082 \text{ in}$$

$$PD_2 = \frac{p}{\sin(180^\circ/N_2)} = \frac{0.75 \text{ in}}{\sin(180^\circ/65)} = 15.524 \text{ in}$$

Step 7. Specify the nominal center distance. Let's use the middle of the recommended range, 40 pitches.

Step 8. Compute the required chain length in pitches from Equation (7–18):

$$L_c = 2CD + \frac{N_2 + N_1}{2} + \frac{(N_2 - N_1)^2}{4\pi^2 CD}$$

$$L_c = 2(40) + \frac{65 + 17}{2} + \frac{(65 - 17)^2}{4\pi^2(40)} = 122.5 \text{ pitches}$$

Step 9. Specify an integral number of pitches for the chain length, and compute the actual theoretical center distance. Let's use 122 pitches, an even number. Then, from Equation (7–19),

$$CD = \frac{1}{4} \left[L_c - \frac{N_2 + N_1}{2} + \sqrt{\left[L_c - \frac{N_2 + N_1}{2} \right]^2 - \frac{8(N_2 - N_1)^2}{4\pi^2}} \right]$$

$$CD = \frac{1}{4} \left[122 - \frac{65 + 17}{2} + \sqrt{\left[122 - \frac{65 + 17}{2} \right]^2 - \frac{8(65 - 17)^2}{4\pi^2}} \right]$$

$$CD = 39.766 \text{ pitches} = 39.766(0.75 \text{ in}) = 29.825 \text{ in}$$

Step 10. Compute the angle of wrap of the chain for each sprocket using Equations (7–21) and (7–22). Note that the minimum angle of wrap should be 120° .

For the small sprocket,

$$\theta_1 = 180^\circ - 2\sin^{-1}[(PD_2 - PD_1)/2CD]$$

$$\theta_1 = 180^\circ - 2\sin^{-1}[(15.524 - 4.082)/(2(29.825))] = 158^\circ$$

Because this is greater than 120°, it is acceptable.
For the larger sprocket,

$$\theta_2 = 180^\circ + 2\sin^{-1}[(PD_2 - PD_1)/2CD]$$

$$\theta_2 = 180^\circ + 2\sin^{-1}[(15.524 - 4.082)/(2(29.825))] = 202^\circ$$

Comments **Summary of Design**

Figure 7–38(a) shows a sketch of the design to scale.

Pitch: No. 60 chain, 3/4-in pitch

Length: 122 pitches = 122(0.75) = 91.50 in

Center distance: $CD = 29.825$ in (maximum)

Sprockets: Single-strand, no. 60, 3/4-in pitch

Small: 17 teeth, $PD = 4.082$ in

Large: 65 teeth, $PD = 15.524$ in

Type B lubrication is required. The large sprocket can dip into an oil bath.

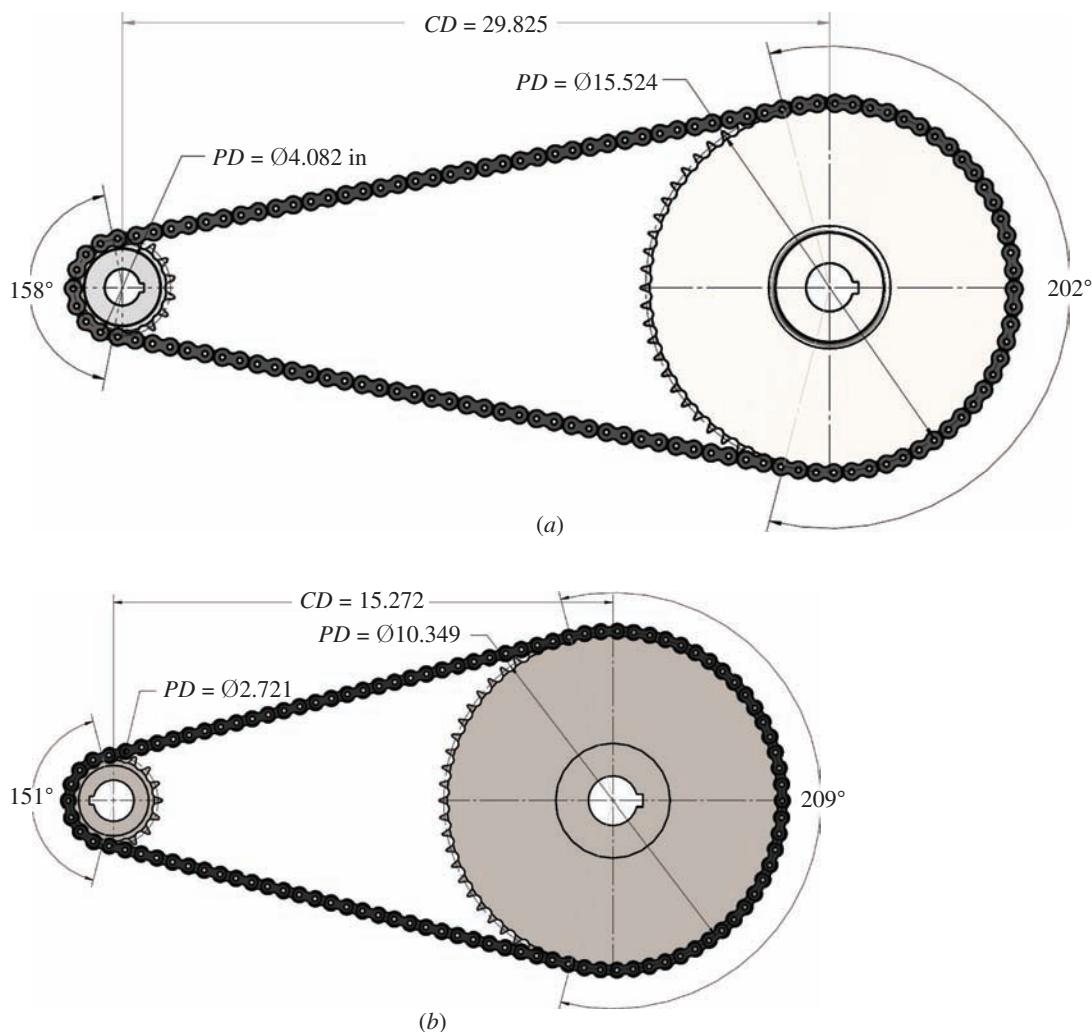


FIGURE 7-38 Scale drawings of layouts for chain drives for Example Problems 7-5 and 7-6

**Example Problem
7–6** Create an alternate design for the conditions of Example Problem 7–5 to produce a smaller drive.

| | | |
|-----------------|-----------|---|
| Solution | Objective | Design a smaller chain drive for the application in Example Problem 7–5. |
| | Given | Power transmitted = 15 hp to a conveyor Speed of motor = 900 rpm; output speed range = 230 to 240 rpm |
| | Analysis | Use a multistrand design to permit a smaller-pitch chain to be used to transmit the same design power (21.0 hp) at the same speed (900 rpm). Use the design data presented in this section. The solution procedure is developed within the Results section of the problem solution. |
| | Results | Let's try a four-strand chain for which the power capacity factor is 3.3. Then the required power per strand is |

$$P = 21.0/3.3 = 6.36 \text{ hp}$$

From Table 7–14, we find that a no. 40 chain (1/2-in pitch) with a 17-tooth sprocket will be satisfactory. Type B lubrication, oil bath, can be used.

For the required large sprocket,

$$N_2 = N_1 \times \text{ratio} = 17(3.83) = 65.11$$

Let's use $N_2 = 65$ teeth.

The sprocket diameters are

$$PD_1 = \frac{p}{\sin(180^\circ/N_1)} = \frac{0.500 \text{ in}}{\sin(180^\circ/17)} = 2.721 \text{ in}$$

$$PD_2 = \frac{p}{\sin(180^\circ/N_2)} = \frac{0.500 \text{ in}}{\sin(180^\circ/65)} = 10.349 \text{ in}$$

For the center distance, let's try the minimum recommended: $C = 30$ pitches.

$$30(0.50 \text{ in}) = 15.0 \text{ in}$$

The chain length is

$$L_c = 2(30) + \frac{65 + 17}{2} + \frac{(65 - 17)^2}{4\pi^2(30)} = 102.9 \text{ pitches}$$

Specify the integer length, $L_c = 104$ pitches = 104(0.50) = 52.0 in. The actual maximum center distance is

$$CD = \frac{1}{4} \left[104 - \frac{65 + 17}{2} + \sqrt{\left[104 - \frac{65 + 17}{2} \right]^2 - \frac{8(65 - 17)^2}{4\pi^2}} \right]$$

$$CD = 30.54 \text{ pitches} = 30.54(0.50) = 15.272 \text{ in}$$

Compute the angle of wrap of the chain for each sprocket using Equations (7–21) and (7–22). Note that the minimum angle of wrap should be 120°.

For the small sprocket,

$$\theta_1 = 180^\circ - 2\sin^{-1}[(PD_2 - PD_1)/2C]$$

$$\theta_1 = 180^\circ - 2\sin^{-1}[(10.349 - 2.721)/(2(15.272))] = 151.1^\circ$$

Because this is greater than 120°, it is acceptable.

For the larger sprocket,

$$\theta_2 = 180^\circ + 2\sin^{-1}[(PD_2 - PD_1)/2C]$$

$$\theta_2 = 180^\circ + 2\sin^{-1}[(10.349 - 2.721)/(2(15.272))] = 208.9^\circ$$

Comments **Summary**

Figure 7–38(b) shows the new design to the same scale as the first design. The space reduction is significant.

Chain: No. 40, 1/2-in pitch, four-strand, 104 pitches, 52.0 in length

Sprockets: No. 40–4 (four strands), 1/2-in pitch

Small: 17 teeth, $PD_1 = 2.721$ in

Large: 65 teeth, $PD_2 = 10.349$ in

Maximum center distance: 15.272 in

Type B lubrication (oil bath)

Spreadsheet for Chain Design

Figure 7–39 shows a spreadsheet that assists in the design of chain drives using the procedure developed in this section.

The user enters data shown in italics in the gray-shaded cells. Refer to Tables 7–11 to 7–17 for required data. Results for Example Problem 7–6 are shown in the figure.

| CHAIN DRIVE DESIGN | | | | | |
|---|--|--|--------------------------------|------------------------------|-----|
| Initial Input Data: | | Example Problem 7–6—Multiple strands | | | |
| | | Application: | <i>Coal conveyor</i> | | |
| | | Drive/type: | <i>Engine-mechanical drive</i> | | |
| | | Driven machine: | <i>Heavily loaded conveyor</i> | | |
| | | Power input: | 15 hp | | |
| | | Service factor: | 1.4 | | |
| | | Input speed: | 900 rpm | | |
| | | Desired output speed: | 235 rpm | | |
| Computed Data: | | | | | |
| | | Design power: | 21 hp | | |
| | | Speed ratio: | 3.83 | | |
| Design Decisions—Chain Type and Teeth Numbers: | | | | | |
| | | Number of strands: | 4 | 1 | 2 |
| | | Strand factor: | 3.3 | 1.0 | 1.7 |
| | | Required power per strand: | 6.36 hp | | |
| | | Chain number: | 40 | Table 7–14, 7–15, or 7–16 | |
| | | Chain pitch: | 0.5 in | | |
| | | Number of teeth—driver sprocket: | 17 | | |
| | | Computed no. of teeth—driven sprocket: | 65.11 | | |
| | | Enter: Chosen number of teeth: | 65 | | |
| Computed Data: | | | | | |
| | | Actual output speed: | 235.4 rpm | | |
| | | Pitch diameter—driver sprocket: | 2.721 in | | |
| | | Pitch diameter—driven sprocket: | 10.349 in | | |
| Center Distance, Chain Length, and Angle of Wrap: | | | | | |
| | | Enter: Nominal center distance: | 30 pitches | 30 to 50 pitches recommended | |
| | | Computed nominal chain length: | 102.9 pitches | | |
| | | Enter: Specified no. of pitches: | 104 pitches | Even number recommended | |
| | | Actual chain length: | 52.00 in | | |
| | | Computed actual center distance: | 30.545 pitches | | |
| | | Actual center distance: | 15.272 in | | |
| | | Angle of wrap—driver sprocket: | 151.1° | Should be greater than 120° | |
| | | Angle of wrap—driven sprocket: | 208.9° | | |

FIGURE 7–39 Spreadsheet for chain design

7-7 WIRE ROPE

Application of Wire Rope

Wire rope is used in many industries such as oil and gas, cranes and lifting, construction, mining, military, and shipping. Many types of machines and structures require wire rope for lifting, moving, and stabilizing bodies and it is used in both dynamic and static systems. Examples of dynamic systems entailing wire ropes are material handling, elevators, shovels, and heavy lifting equipment for mechanical power transmission shown in Figure 7–40. Static wire ropes are used to support towers and create suspension bridges.

Due to wire ropes having a variety of functions, there is a complete range of wire rope sizes, steel grades, finishes, and construction types available. A balance of wire rope properties such as strength, abrasion resistance, crush resistance, bending fatigue resistance, and corrosion resistance are used to optimize the selection of wire rope. Understanding the requirements of these applications and wire rope design will optimize wire rope selection leading to optimal performance. Wire ropes must be properly selected for each application while being periodically inspected and maintained during the life of its operation. This will ensure that the wire rope's service life is longer and safer.

Wire Rope Construction

The design of a typical wire rope is shown in Figure 7–41. It is made from three components: wires, strands, and the core. The various combinations of wire arrangement and size form a strand. These strands are helically laid over the center or core to form the wire rope and most wire ropes are constructed with 6, 7, or 8 strands. The center of the wire rope is called a core and is made from steel or fiber and its function is to provide support for the strands and keep the strands properly positioned as the rope flexes and bends under loaded conditions. Two commonly used core designations are a *fiber core* (FC) and an *independent wire rope core* (IWRC). Fiber cores are manufactured from natural or synthetic fibers and the independent wire rope core is made from steel.



FIGURE 7–40 Overhead crane

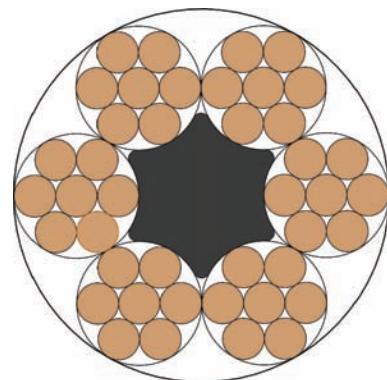


FIGURE 7–41 Wire rope construction

A fiber core provides excellent flexibility while the independent wire rope core provides crush resistance and increased strength. The wire, strands, and core components of the wire rope continuously interact with each other during operation.

The nominal wire rope diameters available are shown in Table 7–19. The wire rope diameter, d , is measured at the extreme outer limits of the strand as shown in Figure 7–42. See Internet sites 17–19 for wire rope producers.

Wire Rope Classification

Wire ropes are grouped into standard classifications based on the number of strands and the number of wires per strand, as shown in Table 7–20. A classification

TABLE 7–19 Nominal Wire Rope Diameter

| inches | mm | inches | mm |
|--------|------|--------|-----|
| 1/4 | 6.5 | 2 1/8 | 54 |
| 5/16 | 8 | 2 1/4 | 58 |
| 3/8 | 9.5 | 2 3/8 | 60 |
| 7/16 | 11.5 | 2 1/2 | 64 |
| 1/2 | 13 | 2 5/8 | 67 |
| 9/16 | 14.5 | 2 3/4 | 71 |
| 5/8 | 16 | 2 7/8 | 74 |
| 3/4 | 19 | 3 | 77 |
| 7/8 | 22 | 3 1/8 | 80 |
| 1 | 26 | 3 1/4 | 83 |
| 1 1/8 | 29 | 3 3/8 | 87 |
| 1 1/4 | 32 | 3 1/2 | 90 |
| 1 3/8 | 35 | 3 3/4 | 96 |
| 1 1/2 | 38 | 4 | 103 |
| 1 5/8 | 42 | 4 1/4 | 109 |
| 1 3/4 | 45 | 4 1/2 | 115 |
| 1 7/8 | 48 | 4 3/4 | 122 |
| 2 | 52 | 5 | 128 |

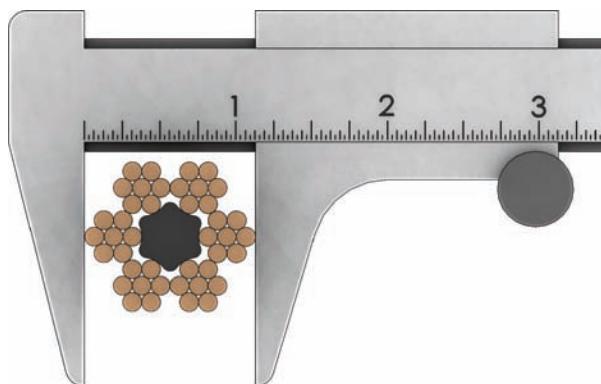


FIGURE 7-42 Correct method of measurement of a wire rope

TABLE 7-20 Wire Rope Classification

| Classification | Wires per strand | Maximum number of outer wires in strand |
|----------------|------------------|---|
| 6×7 | 7 through 15 | 9 |
| 6×19 | 16 through 26 | 12 |
| 6×36 | 27 through 49 | 18 |
| 6×61 | 50 through 74 | 24 |

*Classifications are the same in 7 and 8 strand wire ropes

of 6×19 has a wire count of 16 through 26 wires per strand. Wire ropes within a classification have the same strength, weight per foot, and cost.

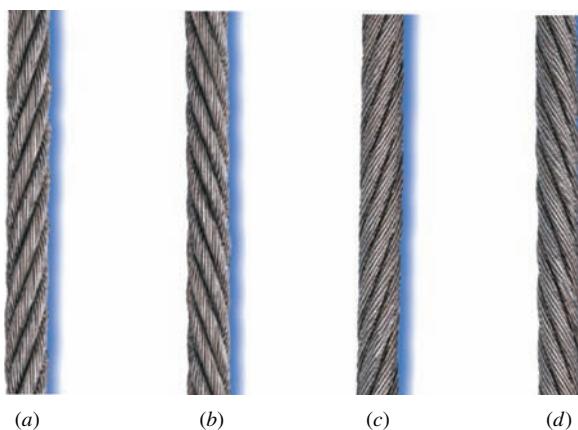
Basic Strand Construction

Table 7-21 shows the various strands that are constructed from different combinations of wire arrangements and diameters. *Warrington*, *Seale*, and *Filler Wire* are basic strand constructions discussed in this table. The strand design affects the physical characteristics of the wire rope's resistance to abrasion and fatigue. A strand made up of a large number of smaller wires will be less abrasion resistant and more fatigue resistant compared to a strand made up of small number of large wires which will be more abrasion resistant and less fatigue resistant.

The direction of lay of individual wires within the strand, and the direction of lay of the strand in the wire rope are described next. Figure 7-43 shows the different combinations of how the wires and strands are wound within a wire rope. The terms *Right Lay* and *Left Lay* describe the direction the strands are wound in the wire rope. Figures 7-43(a) and (c) show the strands wound with Right Lay. When looking at the wire rope, the strands are angled to the right as shown. Figures 7-43(b) and (d) show the strands wound with Left Lay. This

TABLE 7-21 Strand Construction

| | | |
|------------------|--|---|
| Single layer | | Single wire in the center with six wires of the same diameter |
| Seale | | Equal number of wires in each layer All wires in layer are the same diameter Large outer wires rest in the valley between the small inner wires |
| Filler wire | | Inner layer having half the number of wires as outer layer Smaller filler wires equal in number to the inner layer are laid in the valleys of the inner layer |
| Warrington | | One diameter of wire in the inner layer Two diameters of wire alternating large and small in the outer layer The large outer layer wires rest in the valleys The smaller wires rest on the crowns of the inner layer |
| Combined pattern | | Strand is formed using two or more of the above constructions |

**FIGURE 7-43** Types of lay of wire rope

(a) Right Lay – Regular Lay, (b) Left Lay – Regular Lay,
(c) Right Lay – Lang Lay, (d) Left Lay – Lang Lay

shows the strands angled to the left as they are wound around the center core of the wire rope.

The terms *Regular Lay* and *Lang Lay* describe the direction the individual wires are wound in the strand.

- In Regular Lay, the individual wires are wound (lay) in the opposite direction of the strand lay.
- In Lang Lay wire rope, the individual wires have the same lay direction as the strands.

Let's look at the wire rope in Figure 7-43(a) which has *Right Lay – Regular Lay*. The term Right Lay tells us the strand lay is angled to the right in the wire rope. The term Regular Lay tells us the individual wires lay in the opposite direction of the strands, so if the strand is Right Lay the individual wires will lay to the left as shown in Figure 7-44(a). As these strands are wound with Right Lay to form the wire rope, the individual wires in the strands appear to run parallel with the rope length. Figure 7-44(b) shows one strand with Right Lay – Regular Lay and Figure 7-43(a) shows the complete wire rope.


Next, let's look at a wire rope that has *Right Lay – Lang Lay* shown in Figure 7-43(c). The strands in this wire rope also have Right Lay, so the strands will be angled to the right as the previous wire rope. Since this wire rope is Lang Lay, the individual wires are wound in the same direction as the strand. Therefore the individual

wires will lay right since the strand is Right Lay as shown in Figure 7-45(a). The individual wires will appear to run perpendicular to the direction of the wire rope as the strands are wound with Right Lay. Figure 7-45(b) shows one strand wound with Right Lay and the complete wire rope is shown in Figure 7-43(c).


Lang Lay wire ropes are more flexible than Regular Lay wire ropes. As the wire rope bends over a sheave, the individual wires in Lang Lay are not bent as sharply as Regular Lay. The individual wires in Regular Lay lie in parallel with the wire rope axis, and the radius of curvature is equal to the radius of the sheave plus the diameter of the wire rope. The individual wires in a Lang Lay wire rope lie at an angle to the wire rope axis and have a larger radius of curvature. This reduces the stresses in the Lang Lay wire rope compared to the Regular Lay wire rope. Lang Lay will have a higher fatigue resistance due to the lower bending stress. Lang Lay also has a higher abrasion resistance than Regular Lay wire rope, since the wear is distributed differently in each of these types of lays. In Lang Lay, the wear is distributed over a longer distance of the wire, whereas in Regular Lay the wear is concentrated over a shorter distance in the wire. This gives Lang Lay a longer period before the individual wires will be worn and break due to bending stresses compared to Regular Lay. Regular Lay is more resistant to crushing which tends to distort the shape of the wire rope. Regular Lay also tends to be more stable. A stable wire rope is resistant to kinking, does not tangle when relaxed, and spools smoothly on and off the drum.

The distance a strand makes as it is wound one complete revolution around the core of the wire rope is called *Lay Length* and is shown in Figure 7-46.

The selection of the proper lay in the winding of wire rope on a smooth or grooved drum is illustrated in Figures 7-47(a) and (b). Right Lay wire rope is used when winding from the left to the right on a drum rotating clockwise (looking from the left end of the drum). Left Lay wire rope is used when winding from the right to the left on a drum rotating clockwise (looking from the left end of the drum). Another way to look at it is if the drum is left hand grooved, use a Right Lay wire rope. A drum that has a right hand groove will use Left Lay wire rope. The correct lay of rope will keep the winding tight if the load is released.

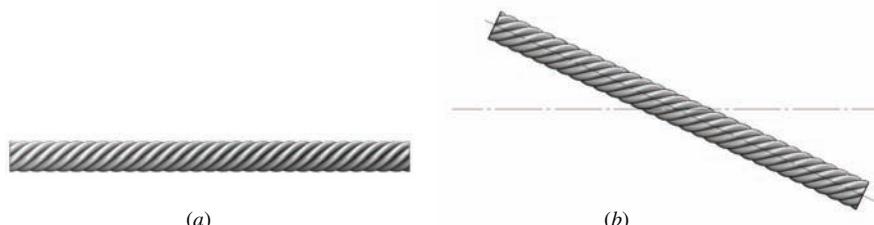**FIGURE 7-44** Right Lay – Regular Lay wire rope

- (a) One strand shown straight with Regular Lay—individual wires lay left, opposite of strand lay
- (b) One strand shown with Right Lay—individual wires run parallel with length of wire rope

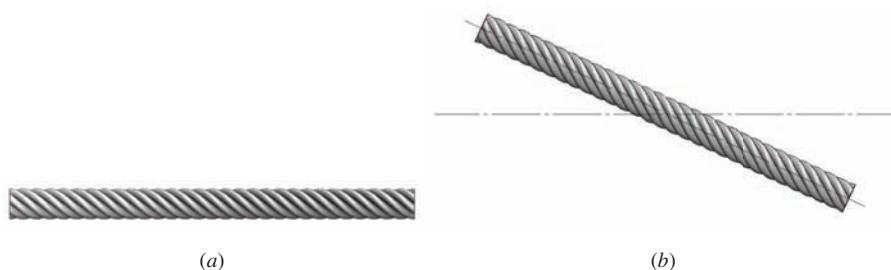**FIGURE 7-45** Right Lay – Lang Lay wire rope

- (a) One strand shown straight with Lang lay—individual wires lay right, same direction as strand lay
- (b) One strand shown with Right Lay—individual wires run perpendicular to the length of wire rope

**FIGURE 7-46** Lay length

A non-rotating wire rope is designed to be counterbalanced with little tendency to twist in either direction. This is accomplished by having one layer of strands wound with Right Lay and a second layer wound with Left Lay.

Sheave and Drum Design


Sheaves, drums, and rollers must be properly designed to optimize the service life of the wire rope. The wire rope strands and wires move relative to one another, as the wire rope travels over a sheave or drum. As the wire rope bends over a sheave, the inside wires would travel a shorter distance than the outside wires.

This distance is compensated by the relative movement of the wires. The wire rope is subjected to bending stresses as it travels over a sheave or drum. This cyclic bending stress will cause fatigue, and eventually failure, of the wire rope. The magnitude of the stresses are related to the load, sheave diameter, and wire rope diameter.

A suggested and minimum diameter (D) of the sheave or drum is selected based on the wire rope diameter (d) and the construction of the wire rope. This diameter is called the *tread diameter* (D) and is where the wire rope rides on the sheave or grooved drum. The D/d ratio measures how tightly the wire rope bends over a sheave. The smaller the ratio, the tighter the bend in the wire rope. The suggested and minimum D/d ratios based on wire rope construction are shown in Table 7-22. Figure 7-48

TABLE 7-22 Sheave and Drum Diameter Factors

| Construction | Suggested D/d ratio | Minimum D/d ratio |
|------------------------|---------------------|-------------------|
| 6×7 | 72 | 42 |
| 6×19 Seale | 51 | 34 |
| 6×21 Filler Wire | 45 | 30 |
| 6×25 Filler Wire | 39 | 26 |
| 6×31 Warrington Seale | 39 | 26 |
| 6×36 Warrington Seale | 35 | 23 |
| 6×41 Seale Filler Wire | 20 | 20 |
| 6×41 Warrington Seale | 32 | 21 |
| 6×42 Tiller | 21 | 14 |
| 8×19 Seale | 41 | 27 |
| 8×25 Filler Wire | 32 | 21 |

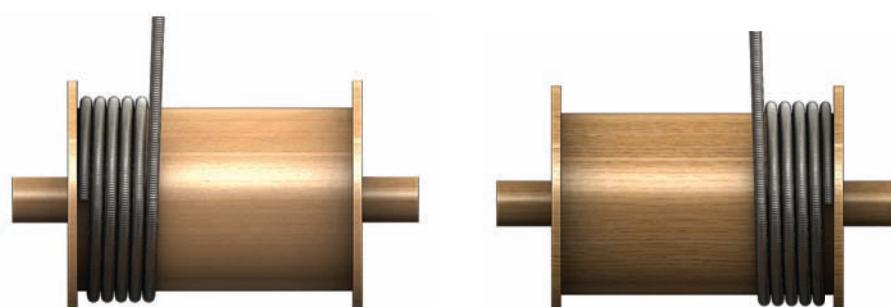

(a) Right Lay wire rope used on a smooth drum

(b) Left Lay wire rope used on a smooth drum

FIGURE 7-47 Proper lay of wire rope on a smooth drum

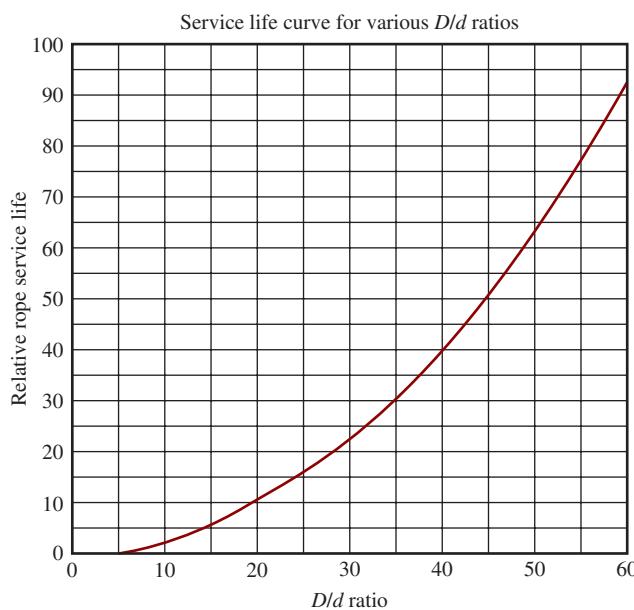


FIGURE 7-48 Service life curve

shows the effects of the D/d ratio on the service life of the wire rope. A larger D/d ratio will extend the life of the wire rope and the sheave and should be based on the practical limit of the machine application, along with cost and weight limitations. Bending a wire rope over a sheave with a small diameter will result in excessive wear in the wire rope and sheave. This is caused by excessive bending and straightening of the wire rope as it enters and exits the sheave. Reverse bending of the wire rope will accelerate wire rope fatigue and should be avoided if possible.

Sheave and Drum Design and Dimensions

As shown in Figure 7-49(a) a typical sheave design will have a hub and bore that will be used to mount a bearing


element. The bearing element can be a ball bearing, roller bearing, or a bronze bushing and is selected based on rotational speed, loading, and operating conditions of the sheave. The sheave has a groove designed in the rim that the wire rope will ride in. The web supports this rim and may have lightening holes in order to decrease the inertia of the sheave. Figure 7-49(b) shows the dimensional specifications and terminology of the sheave. The tread diameter (D) is based on the suggested minimum D/d ratio. The sheave throat angle should be between 35° and 45° . The groove depth of a sheave should be between

$$h_{\min} = 1.50 \times d \text{ and } h_{\max} = 1.75 \times d \quad (7-23)$$

The throat angle, along with the groove depth (h), allows the wire rope to enter and exit the sheave with minimum wear on the wire rope and sheave. The proper groove radius (r) of a sheave will give the maximum support to the wire rope. If the groove radius is tight or small, it will pinch the wire rope and increase the groove pressure along this contact point. If the groove radius is oversized, the wire rope will not be properly supported and will tend to flatten out. This will cause the wire rope to be unbalanced and will lead to wire rope crushing and early fatigue. The correct groove radius and angle of contact will improve wire rope support and maximize the wire rope's lifespan. The groove radius for new sheaves and sheaves that are in operation are given in Table 7-23. The groove radius is shown for the different wire rope diameters. A groove gage is used to measure the size and contour of the groove for both new and used sheaves. The gage should make an angle of contact of 150° with the groove and verify the radius. Scheduled maintenance includes periodic inspections of the sheave groove radius. If the groove radius measures smaller than the value listed as "Worn" in Table 7-23, the sheave groove should be re-machined to the "New" radius dimension.



(a) Sheave with roller bearing

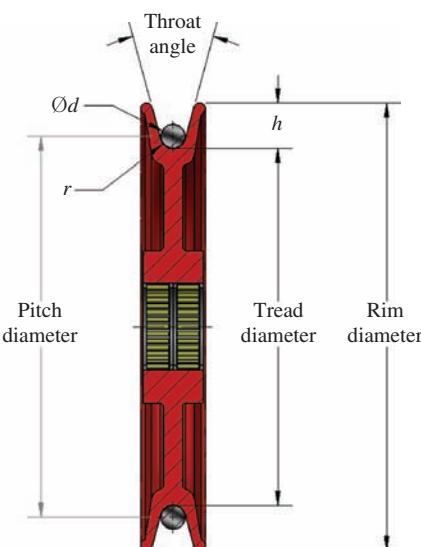


(b) Sheave dimensional specifications

FIGURE 7-49 Design of a roller bearing wire rope sheave

TABLE 7-23 Recommended Sheave and Drum Groove Radius

| | | Groove radius | | | |
|----------------------------|-----|---------------|-------|--------|-------|
| Nominal wire rope diameter | | New | | Worn | |
| inches | mm | inches | mm | inches | mm |
| 1/4 | 6.5 | 0.137 | 3.48 | 0.129 | 3.28 |
| 3/8 | 9.5 | 0.201 | 5.11 | 0.190 | 4.83 |
| 1/2 | 13 | 0.271 | 6.88 | 0.256 | 6.50 |
| 5/8 | 16 | 0.334 | 8.48 | 0.320 | 8.13 |
| 3/4 | 19 | 0.401 | 10.19 | 0.380 | 9.65 |
| 7/8 | 22 | 0.468 | 11.89 | 0.440 | 11.18 |
| 1 | 26 | 0.543 | 13.79 | 0.513 | 13.03 |
| 1 1/4 | 32 | 0.669 | 16.99 | 0.639 | 16.23 |
| 1 1/2 | 38 | 0.803 | 20.40 | 0.759 | 19.28 |
| 1 3/4 | 45 | 0.939 | 23.85 | 0.897 | 22.78 |
| 2 | 52 | 1.070 | 27.18 | 1.019 | 25.88 |
| 2 1/2 | 64 | 1.338 | 33.99 | 1.279 | 32.49 |
| 3 | 77 | 1.607 | 40.82 | 1.538 | 39.07 |
| 3 1/2 | 90 | 1.869 | 47.47 | 1.794 | 45.57 |
| 4 | 103 | 2.139 | 54.33 | 2.050 | 52.07 |
| 4 1/2 | 115 | 2.396 | 60.86 | 2.298 | 58.37 |
| 5 | 128 | 2.663 | 67.64 | 2.557 | 64.95 |

Figure 7-50(a) shows the design of a helically grooved drum. The drum will have end flanges and journal ends that will be mounted in bearing units such as a pillow block to allow the drum to rotate. The drum will also require a means of securing the wire rope to the drum. This could be a clamping device that is bolted to the drum. Figure 7-50(b) shows the dimensional specifications of the grooved drum. The groove radius (r) must be proper for the wire rope diameter used. The pitch (p) of the helical groove is the distance from one groove to

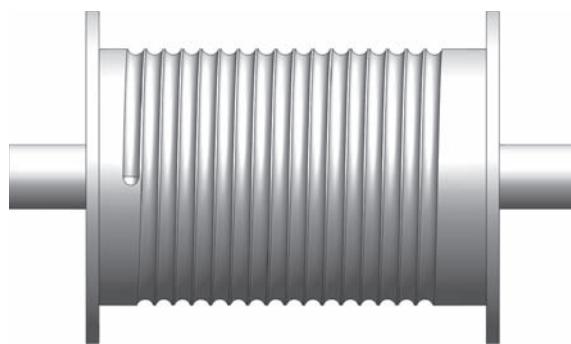

(a) Grooved drum with flanges and journal ends

the next adjacent groove along the pitch diameter of the wire rope. The pitch distance should range between

$$\text{Pitch} = p = 2.065 \times r \text{ and } p = 2.18 \times r \quad (7-24)$$

The minimum groove depth (h) is the distance from the drum diameter to the tread diameter (D) on a helically grooved drum. This distance is given by

$$h = 0.374 \times d \quad (7-25)$$


The *fleet angle* is the included angle between the wire rope which extends from the sheave to the drum and the perpendicular line to the axis of the drum. It is desirable to have a small fleet angle to reduce wear between the wire rope and flange of the sheave as the wire rope wraps the drum. The minimum fleet angle should be $\frac{1}{2}^\circ$ to prevent the wire rope from piling up on the drum. The maximum fleet angle should be $1\frac{1}{2}^\circ$ on a smooth drum and 2° on a grooved drum. Figure 7-51 shows the right and left fleet angles between a sheave and a smooth drum.

Wire Material and Grades

The most common wire material is an uncoated (bright) high-carbon steel. The properties of steel allow it to be drawn into wires with high strength, and good wear and fatigue resistance. Stainless steel or galvanized steel wire are used in applications with corrosive environments.

Plow steel is a term used for wire rope grades. Each different plow steel grade has improved tensile strength as shown in Table 7-24. *Improved plow steel* (IPS) is the most commonly used grade for wire rope, while *Extra improved plow steel* (XIP) is used for special applications.

The hardness of a wire rope can range from 42 to 50 Rc and will wear a sheave or drum if made out of a material that is too soft. A recommended sheave groove hardness should be 250–300 Brinell for a steel material. If a sheave is too soft, the wire rope will score and corrugate the groove of the sheave. A new wire rope will not track in a corrugated sheave and will cause excessive wear in the wire rope.

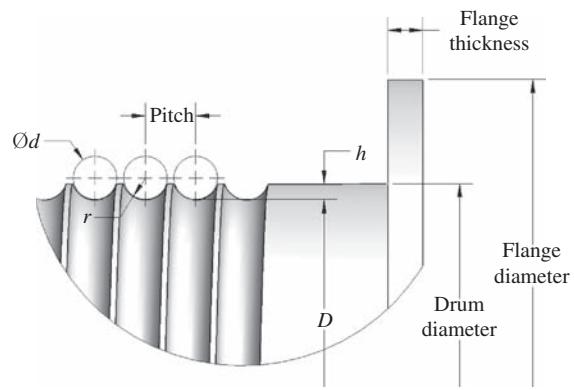

(b) Grooved drum dimensional specifications

FIGURE 7-50 Design details for a grooved wire rope drum

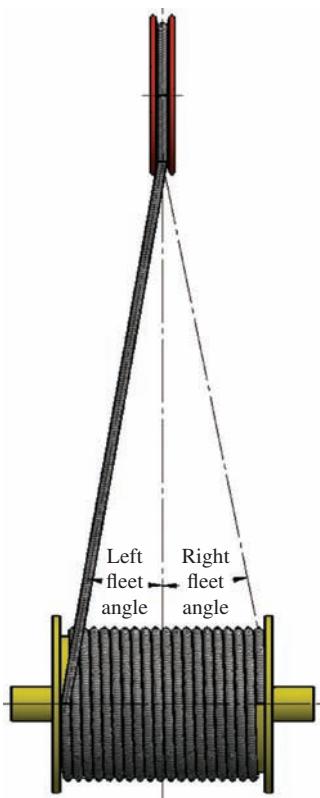


FIGURE 7-51 Fleet angle

TABLE 7-24 Grades of Wire Rope

| Grade | Tensile strength |
|---------------------------|------------------------|
| Plow Steel | 1570 N/mm ² |
| Improved Plow Steel | 1770 N/mm ² |
| Extra Improved Plow Steel | 1960 N/mm ² |

Wire Rope Selection

Wire rope construction refers to the arrangement of wires, strands, and the type of core used. The construction produces specific operating characteristics of the wire rope that will allow it to meet the performance requirements of its application. The attributes of a wire rope include strength, flexibility, resistance to bending fatigue, abrasion resistance, and resistance to crushing. A compromise between these attributes may have to be made in order to select the best wire rope for a specific application.

A wire rope's *strength* is shown as a minimum breaking force and is measured in tons (2000 lb/ton). Its minimum breaking force is determined by placing a new rope in a pull testing machine that applies a constantly increasing force until the wire rope breaks. The strength of the wire rope can be increased by increasing the diameter of the wire rope, using a better grade of steel, using a steel core construction, or increasing the cross-sectional steel content of the wire rope.

Flexibility relates to the wire rope's ability to bend around a sheave or drum. Some applications require the use of more sheaves where the wire rope will have to make a lot of bends or smaller-diameter sheaves where the wire rope will have to make a tighter bend. Flexibility can be increased by increasing the quantity of smaller-diameter wires in a strand. Some wire rope constructions are more flexible than others. The same diameter wire rope that has a strand with 37 smaller-diameter wires instead of 26 larger-diameter wires would improve the flexibility of the wire rope. Using a fiber core instead of a steel core will also improve the flexibility of the wire rope.

Fatigue resistance is required when wire ropes are subjected to repeated bending over sheaves and drums. This phenomenon involves metal fatigue of the individual wires that make up the wire rope. This is similar to taking a paper clip and bending it back and forth until it breaks. The same occurrence takes place in the individual wires as they are repeatedly bent around sheaves and drums. Sharper bends and reverse bending will accelerate the rate of fatigue of the wire rope. Using a larger number of smaller individual wires, while keeping the overall diameter of the wire rope the same, will increase the fatigue resistance of the wire rope. The smaller individual wires have a greater ability to bend than a larger wire. As discussed previously, the bending fatigue can also be reduced by having a large D/d ratio.

Abrasion resistance refers to the actual wearing of material away from the individual wires in a wire rope. The removal of material creates a destructive condition and weakens the wire rope which will lead to eventual failure. Abrasion can occur when the wire rope is dragged through a gritty material or across a stationary object. Abrasion also happens to individual wires within the wire rope as the wires rub against each other when the wire rope is bending and unbending or being loaded and unloaded. Abrasion will also manifest when the wire rope is being wound or unwound from a drum and the wire rope will have rope-to-rope contact. Proper sheave alignment, groove diameter, fleet angle, and drum winding will minimize abrasion of the wire rope. These should be checked during regular scheduled maintenance outages. Large-diameter wires will improve the wire rope's resistance to abrasion.

Crushing resistance is the ability of the wire rope to maintain its cross-sectional shape while under an external pressure. IWRC core, six strand, and regular lay wire rope construction will improve crush resistance. A crushed or distorted wire rope will not allow the individual wires to move relative to one another and operate properly. An IRWC core has a higher crush resistance compared to a fiber core.

As was discussed earlier, using a small number of larger-diameter wires will improve abrasion resistance, but a lower resistance to bending fatigue while using a large number of small-diameter wires will improve the resistance to bending fatigue and reduce the resistance

to abrasion. A fiber core is more flexible than an IWRC core but has less crush resistance and strength. Lang lay has a higher abrasion resistance, fatigue resistance, and is more flexible than a regular lay wire rope. Regular lay wire rope is more resistant to crushing and is more stable than Lang lay. Based on the best suitable wire rope design for the application, a compromise between these characteristics of the wire ropes will need to be made.

Several characteristics of the design application should be considered:

- Speed of operation
- Acceleration and deceleration
- Length of rope
- Number, size, and location of sheaves and drums
- Conditions of the environment
- Human and property safety concerns

These design characteristics will be used to select of the best wire rope for the application.

Design Factors and Working Loads

Industry standards and regulations require minimum design factors to be applied when using wire rope. The design factor is applied to the minimum breaking force of the wire rope. A minimum design factor (*SF*) of 5 is used in overhead cranes, gantry cranes, and overhead hoists. The maximum working load of a wire rope can then be determined in the following equation.

$$\text{Maximum working load} = \text{Minimum breaking force}/SF$$

This allowable working load is the load the wire rope is expected to carry not only due to static loading, but also loading resulting from accelerations and shock loading conditions on a system. Shock loads can be significantly higher than static loads. Shock loading can occur when there is a sudden change or jerking movement of the load and should be avoided.

The technical data are the same for both 6×19 and 6×36 classification of wire rope and are shown in Table 7–25. The minimum breaking force is given for

TABLE 7–25 6×19 and 6×36 Classes Technical Data

| Diameter in | Fiber core | | | IWRC | | |
|----------------|--------------------|--------------------|------|--------------------|--------------------|------|
| | Weight per foot | Min breaking force | | Weight per foot | Min breaking force | |
| | | IPS | XIP | | IPS | XIP |
| 1/4 | 0.105 | 2.74 | 3.02 | 0.116 | 2.94 | 3.4 |
| 5/16 | 0.164 | 4.26 | 4.69 | 0.18 | 4.58 | 5.27 |
| 3/8 | 0.236 | 6.1 | 6.72 | 0.26 | 6.56 | 7.55 |
| 7/16 | 0.32 | 8.27 | 9.1 | 0.35 | 8.89 | 10.2 |
| 1/2 | 0.42 | 10.7 | 11.8 | 0.46 | 11.5 | 13.3 |
| 9/16 | 0.53 | 13.5 | 14.9 | 0.59 | 14.5 | 16.8 |
| 5/8 | 0.66 | 16.7 | 18.3 | 0.72 | 17.9 | 20.6 |
| 3/4 | 0.95 | 23.8 | 26.2 | 1.04 | 25.6 | 29.4 |
| 7/8 | 1.29 | 32.2 | 35.4 | 1.42 | 34.6 | 39.8 |
| 1 | 1.68 | 41.8 | 46 | 1.85 | 44.9 | 51.7 |
| 1 1/8 | 2.13 | 52.6 | 57.8 | 2.34 | 56.5 | 65 |
| 1 1/4 | 2.63 | 64.6 | 71.1 | 2.89 | 69.4 | 79.9 |
| 1 3/8 | 3.18 | 77.7 | 85.5 | 3.5 | 83.5 | 96 |
| 1 1/2 | 3.78 | 92 | 101 | 4.16 | 98.9 | 114 |
| 1 5/8 | 4.44 | 107 | 118 | 4.88 | 115 | 132 |
| 1 3/4 | 5.15 | 124 | 137 | 5.67 | 133 | 153 |
| 1 7/8 | 5.91 | 141 | 156 | 6.5 | 152 | 174 |
| 2 | 6.72 | 160 | 176 | 7.39 | 172 | 198 |
| 2 1/8 | 7.59 | 179 | 197 | 8.35 | 192 | 221 |
| 2 1/4 | 8.51 | 200 | 220 | 9.36 | 215 | 247 |

TABLE 7-26 Properties of Standard 6×19 and 6×36 Wire Ropes

| | | |
|-------------------------|--|--|
| 6×19S (Seale) | | Good resistance to abrasion and crushing Fatigue resistance is less than 6×25 |
| 6×25F (Filler Wire) | | Higher resistance to fatigue than 6×19 class Best combination of flexibility and wear resistance for 6×19 class Filler wire provides support and stability to the strand |
| 6×26 (Warrington Seale) | | High resistance to crushing Good wear resistance Good Flexibility |
| 6×36 (Warrington Seale) | | Provides good fatigue resistance without having wires that are too small Most flexible due to large number of small wires Susceptible to crushing, use IWRC to minimize |

both improved plow steel and extra improved plow steel with a fiber core and an IWRC core. The weight per foot is shown for both fiber and IWRC cores.

The 6×19 steel core and fiber core classifications of wire rope are the most widely used. The combination of flexibility and wear resistance makes it suitable for diverse types of machinery and equipment. Compared to the 6×19 classification, the 6×36 classification of wire rope is more flexible but less abrasion resistant. Table

7-26 gives the operating properties of some 6×19 and 6×36 wire ropes.

The nomenclature of a wire rope defines the length, size (diameter), direction of lay, grade of rope, finish, construction, and type of core. An example of a complete wire rope designation is

500 ft × 5/8 in diameter 6×19 Filler Wire – Right Lay–Left Lang Improved Plow Steel IWRC

Example Problem 7-7

Recommend the diameter for a grooved drum on which a wire rope with a diameter of 16 mm is to be wound as part of a winch system. The construction of the rope is to be 6×36 Warrington Seale type.

Solution

Given 6×36 Warrington Seale type wire rope with a diameter of $d = 16 \text{ mm}$

Results Table 7-22 lists the suggested D/d ratio for this size and type wire rope to be 35, where the value of D is the tread diameter of the drum. Then,

$$D = 35 d = 35 \cdot 16 \text{ mm} = 560 \text{ mm}$$

The tread diameter, D , is the measurement between the lowest point of the groove on the top and bottom of the drum, as shown in Figure 7-50(b).

The minimum groove depth, h , can be calculated from Equation (7-20).

$$h = 0.374 \cdot d = 0.374 \cdot 16 \text{ mm} = 6 \text{ mm}$$

Therefore, the drum diameter is

$$\text{Drum diameter} = D + 2 \cdot h = 560 \text{ mm} + 2 \cdot 6 \text{ mm} = 572 \text{ mm}$$

Example Problem
7–8 Recommend the allowable working load for a wire rope having 6×19 construction, a diameter of 1.25 in, and made from XIP steel to be used in a crane application.

| | | |
|-----------------|-------|---|
| Solution | Given | Wire rope, 6×19 construction, $D = 1.25$ in |
| Results | | Table 7–25 lists the minimum breaking load for 1.25-in diameter wire rope made from XIP (Extra improved plow steel) to be 71.1 tons. A minimum service factor (SF) of 5 is recommended. Then, |
| | | Maximum working load = Breaking force/ SF = 71.1 tons/5 = 14.22 tons |
| | | Converting to pounds force gives, |

$$14.22 \text{ tons} \times 2000 \text{ lb/ton} = 28\,440 \text{ lb}$$

REFERENCES

1. American Chain Association. *Chains for Power Transmission and Material Handling*. 2nd ed., Boca Raton, FL: CRC Press Taylor & Francis, 2006.
2. American Society of Mechanical Engineers. *ASME Standard B29.1:2011, Precision Power Transmission Roller Chains, Attachments, and Sprockets*. New York: American Society of Mechanical Engineers, 2011.
3. International Organization for Standardization (ISO). (*Various standards listed below*). Geneva, Switzerland: ISO.
 - (a) ISO 2790:2004. *Belt Drives—V-Belts for the Automotive Industry and Corresponding Pulleys—Dimensions*, 2004.
 - (b) ISO 5290:2001. *Belt Drives—Grooved Pulleys for Joined Narrow V-Belts—Groove Sections 9N/J, 15N/J, and 25N/J*, 2001.
 - (c) ISO 5292:1995. *Belt Drives—V-Belts and V-Ribbed Belts—Calculation of Power Ratings*, 1995.
 - (d) ISO 5296:2012. *Synchronous Belt Drives—Belts: Pitch Codes MXL, XL, L, H, XH, and XXH—Metric and Inch Dimensions*, 2012.
 - (e) ISO 8419: 2003. *Belt Drives—Narrow V-Belts—Sections 9N/J, 15N/J, and 25N/J (Lengths in the Effective System)*, 2003.
 - (f) ISO 9981:1998. *Belt Drives—Pulleys and V-Ribbed Belts for the Automotive Industry—PK Profile: Dimensions*, 1998.
 - (g) ISO 9982:1998. *Belt Drives—Pulleys and V-Ribbed Belts for the Industrial Applications—PH, PJ, PK, PL and PM Profiles: Dimensions*, 1998.
 - (h) ISO 487:1998. *Steel Roller Chains, Type S and C*, 1998.
 - (i) ISO 10823:2004. *Guidelines for the Selection of Roller Chain Drives*, 2004.
 - (j) ISO 606:2015. *Short-Pitch Precision Roller and Bush Chains, Attachments and Associated Chain Sprockets*, 2015.
 - (k) ISO 3512:1992. *Heavy-Duty Cranked-Link Transmission Chains*, 1992.
4. Society of Automotive Engineers. *SAE Standard J636—V-Belts and Pulleys*. Warrendale, PA: Society of Automotive Engineers, 2012.
5. Society of Automotive Engineers. *SAE Standard J637—Automotive V-Belt Drives*. Warrendale, PA: Society of Automotive Engineers, 2012.

6. Society of Automotive Engineers. *SAE Standard J1278—SI (Metric) Synchronous Belts and Pulleys*. Warrendale, PA: Society of Automotive Engineers, 2012.
7. Society of Automotive Engineers. *SAE Standard J1313—Automotive Synchronous Belt Drives*. Warrendale, PA: Society of Automotive Engineers, 2012.
8. Society of Automotive Engineers. *SAE Standard J1459—V-Ribbed Belts and Pulleys*. Warrendale, PA: Society of Automotive Engineers, 2009.

INTERNET SITES RELATED TO BELT DRIVES AND CHAIN DRIVES

1. **American Chain Association.** A national trade organization for companies providing products for the chain drive industry. Publishes standards and design aids for designing, applying, and maintaining chain drives and engineering chain conveyor systems.
2. **Dayco Products LLC.** Manufacturer of Dayco industrial and automotive belt drive systems of the poly-v and timing belt designs
3. **Baldor-Dodge.** Manufacturer of numerous power transmission components, including V-belt and synchronous belt drive systems.
4. **Regal Beloit Americas, Inc.** Manufacturer of a variety of power transmission products under several brand names, including Browning V-belt drives and Morse roller-chain drives.
5. **Gates Rubber Company.** Rubber products for the automotive and industrial markets, including V-belt drives and synchronous belt drives.
6. **Grainger Industrial Supply.** A distributor of a wide array of industrial products, including belts, sheaves, chain, and sprockets for power transmission.
7. **International Organization for Standardization.** The premier organization for establishing and promulgating technical standards for worldwide implementation. Search on Standards and the subject for which you are seeking ISO standards.
8. **Martin Sprocket and Gear Company.** Manufacturer of a wide range of mechanical power transmission products, including chain sprockets, V-belt sheaves, synchronous belt sprockets, and bushings.

9. **Maryland Metrics.** U.S. based company that supplies metric power transmission products rated by the ISO, BS, and DIN standards.
 10. **Power Transmission.** A comprehensive website for companies providing products for the power transmission industry, many of which supply belt and chain drive systems.
 11. **Ensinger Precision Components.** Producer of plastic injection-molded mechanical drive components, including plastic chain, sprockets, and synchronous belt pulleys.
 12. **Rexnord Corporation.** Manufacturer of power transmission and conveying components, including roller chain drives and engineered chain drive systems.
 13. **SAE International.** The Society of Automotive Engineers, the engineering society for advancing mobility on land or sea, in air or space. Offers standards on V-belts, synchronous belts, pulleys, and drives for automotive applications.
 14. **SDP/SI.** The Stock Drive Products/Sterling Instruments Company distributes a wide array of mechanical drive components with a heavy emphasis on small, precision mechanical drive components, including synchronous belts, pulleys, chain, and sprockets. Both U.S. Customary and Metric styles of components are included.
 15. **Wippermann Company.** Manufacturer of a wide range of chain drive products based in Germany; wide selection of German DIN standard chains and sprockets.
 16. **T. B. Wood's Sons Company.** Manufacturer of many mechanical drives products, including V-belt drives, synchronous belt drives, and adjustable speed drives.
 17. **Bridon.** Manufacturer of wire rope for the crane, oil-field, surface mining, underground mining, and related industries.
 18. **Union - A WireCo(R) WorldGroup Brand.** Manufacturer of wire rope for crane, oil and gas, surface mining, logging, slings, and related products. The site includes a Technical Reference section providing guidance on installation, operation, maintenance, inspection and other topics.
 19. **Wirerope Works, Inc.** Manufacturer of Bethlehem Wire Rope(R) for elevators, oilfield and marine applications, logging, mining, ski lifts, bridge suspension, and other applications.
- 8.4 in and 27.7 in with a center distance of no more than 60.0 in.
5. For the standard belt specified in Problem 4, compute the actual center distance that would result.
 6. For the standard belt specified in Problem 4, compute the angle of wrap on both of the sheaves.
 7. Specify the standard 8V belt length (from Table 7-2) that would be applied to two sheaves with pitch diameters of 13.8 in and 94.8 in with a center distance of no more than 144 in.
 8. For the standard belt specified in Problem 7, compute the actual center distance that would result.
 9. For the standard belt specified in Problem 7, compute the angle of wrap on both of the sheaves.
 10. If the small sheave of Problem 1 is rotating at 1750 rpm, compute the linear speed of the belt.
 11. If the small sheave of Problem 4 is rotating at 1160 rpm, compute the linear speed of the belt.
 12. If the small sheave of Problem 7 is rotating at 870 rpm, compute the linear speed of the belt.
 13. For the belt drive from Problems 1 and 10, compute the rated power, considering corrections for speed ratio, belt length, and angle of wrap.
 14. For the belt drive from Problems 4 and 11, compute the rated power, considering corrections for speed ratio, belt length, and angle of wrap.
 15. For the belt drive from Problems 7 and 12, compute the rated power, considering corrections for speed ratio, belt length, and angle of wrap.
 16. Describe a standard 15N belt cross section. To what size belt (inches) would it be closest?
 17. Describe a standard 17A belt cross section. To what size belt (inches) would it be closest?
- For Problems 18–22 (Table 7-27), design a V-belt drive. Specify the belt size, the sheave sizes, the number of belts, the actual output speed, and the center distance.

PROBLEMS

V-Belt Drives

1. Specify the standard 3V belt length (from Table 7-2) that would be applied to two sheaves with pitch diameters of 5.25 in and 13.95 in with a center distance of no more than 24.0 in.
2. For the standard belt specified in Problem 1, compute the actual center distance that would result.
3. For the standard belt specified in Problem 1, compute the angle of wrap on both of the sheaves.
4. Specify the standard 5V belt length (from Table 7-2) that would be applied to two sheaves with pitch diameters of

- 8.4 in and 27.7 in with a center distance of no more than 60.0 in.
5. For the standard belt specified in Problem 4, compute the actual center distance that would result.
6. For the standard belt specified in Problem 4, compute the angle of wrap on both of the sheaves.
7. Specify the standard 8V belt length (from Table 7-2) that would be applied to two sheaves with pitch diameters of 13.8 in and 94.8 in with a center distance of no more than 144 in.
8. For the standard belt specified in Problem 7, compute the actual center distance that would result.
9. For the standard belt specified in Problem 7, compute the angle of wrap on both of the sheaves.
10. If the small sheave of Problem 1 is rotating at 1750 rpm, compute the linear speed of the belt.
11. If the small sheave of Problem 4 is rotating at 1160 rpm, compute the linear speed of the belt.
12. If the small sheave of Problem 7 is rotating at 870 rpm, compute the linear speed of the belt.
13. For the belt drive from Problems 1 and 10, compute the rated power, considering corrections for speed ratio, belt length, and angle of wrap.
14. For the belt drive from Problems 4 and 11, compute the rated power, considering corrections for speed ratio, belt length, and angle of wrap.
15. For the belt drive from Problems 7 and 12, compute the rated power, considering corrections for speed ratio, belt length, and angle of wrap.
16. Describe a standard 15N belt cross section. To what size belt (inches) would it be closest?
17. Describe a standard 17A belt cross section. To what size belt (inches) would it be closest?

Roller Chain

23. Describe a standard roller chain, no. 140.
24. Describe a standard roller chain, no. 60.
25. Specify a suitable standard chain to exert a static pulling force of 1250 lb.
26. Roller chain is used in a hydraulic forklift truck to elevate the forks. If two strands support the load equally, which size would you specify for a design load of 5000 lb?
27. List three typical failure modes of roller chain.
28. Determine the power rating of a no. 60 chain, single-strand, operating on a 20-tooth sprocket at 750 rpm. Describe the preferred method of lubrication. The chain connects a hydraulic drive with a meat grinder.
29. For the data of Problem 28, what would be the rating for three strands?
30. Determine the power rating of a no. 40 chain, single-strand, operating on a 12-tooth sprocket at 860 rpm. Describe the preferred method of lubrication. The small

TABLE 7-27 V-Belt Drive Design Problems

| Problem number | Driver type | Driven machine | Service (h/day) | Input speed (rpm) | Input power | | Nominal output speed (rpm) |
|----------------|---------------------|-----------------|-----------------|-------------------|-------------|------|----------------------------|
| | | | | | (hp) | (kW) | |
| 18. | AC motor (HT) | Hammer mill | 8 | 870 | 25 | 18.6 | 310 |
| 19. | AC motor (NT) | Fan | 22 | 1750 | 5 | 3.73 | 725 |
| 20. | 6-cylinder engine | Heavy conveyor | 16 | 1500 | 40 | 29.8 | 550 |
| 21. | DC motor (compound) | Milling machine | 16 | 1250 | 20 | 14.9 | 695 |
| 22. | AC motor (HT) | Rock crusher | 8 | 870 | 100 | 74.6 | 625 |

Note: NT indicates a normal-torque electric motor. HT indicates a high-torque electric motor.

TABLE 7-28 Chain Drive Design Problems

| Problem number | Driver type | Driven machine | Input speed (rpm) | Input power | | Nominal output speed (rpm) |
|----------------|-------------------|------------------|-------------------|-------------|------|----------------------------|
| | | | | (hp) | (kW) | |
| 38. | AC motor | Hammer mill | 310 | 25 | 18.6 | 160 |
| 39. | AC motor | Agitator | 750 | 5 | 3.73 | 325 |
| 40. | 6-cylinder engine | Heavy conveyor | 500 | 40 | 29.8 | 250 |
| 41. | Steam turbine | Centrifugal pump | 2200 | 20 | 14.9 | 775 |
| 42. | Hydraulic drive | Rock crusher | 625 | 100 | 74.6 | 225 |

sprocket is applied to the shaft of an electric motor. The output is to a coal conveyor.

31. For the data of Problem 30, what would be the rating for four strands?
32. Determine the power rating of a no. 80 chain, single-strand, operating on a 32-tooth sprocket at 1160 rpm. Describe the preferred method of lubrication. The input is an internal combustion engine, and the output is to a fluid agitator.
33. For the data of Problem 32, what would be the rating for two strands?
34. Specify the required length of no. 60 chain to mount on sprockets having 15 and 50 teeth with a center distance of no more than 36 in.
35. For the chain specified in Problem 34, compute the actual center distance.
36. Specify the required length of no. 40 chain to mount on sprockets having 11 and 45 teeth with a center distance of no more than 24 in.
37. For the chain specified in Problem 36, compute the actual center distance.

For Problems 38–42 (Table 7-28), design a roller chain drive. Specify the chain size, the sizes and number of teeth in the sprockets, the number of chain pitches, and the center distance.

Synchronous Belts

For any of the sets of problem data in Tables 7-27 and 7-28, use manufacturers' catalogs to specify the belt size and sprocket sizes for synchronous belts. See Internet sites 3–6, 8, 9, 11, 14, and 16 for manufacturers of synchronous belts and sprockets.

43. A synchronous belt drive is to have an input sprocket rotational speed of 800 rpm and an output sprocket speed of 600 rpm.
 - (a) List the sprocket combinations that could be used and list the pitch diameters for each sprocket.
 - (b) For each sprocket combination from (a) and using a 1440-8MGT belt, compute the center distance and the belt linear velocity.
44. A synchronous belt drive is to have an input sprocket rotational speed of 1200 rpm and an output sprocket speed of 600 rpm.
 - (a) List the sprocket combinations with an 8-mm pitch that could be used and list the pitch diameters for each sprocket.
 - (b) For each sprocket combination from (a) and using a 1800-8MGT-30 belt, compute the center distance and the belt linear velocity.
 - (c) For each sprocket, list the taper-lock bushing required and the minimum and maximum bores.

KINEMATICS OF GEARS

The Big Picture

You Are the Designer

- 8–1 Objectives of This Chapter
- 8–2 Spur Gear Styles
- 8–3 Spur Gear Geometry-Involute-Tooth Form
- 8–4 Spur Gear Nomenclature and Gear-Tooth Features
- 8–5 Interference between Mating Spur Gear Teeth
- 8–6 Internal Gear Geometry
- 8–7 Helical Gear Geometry
- 8–8 Bevel Gear Geometry
- 8–9 Types of Wormgearing
- 8–10 Geometry of Worms and Wormgears
- 8–11 Gear Manufacturing
- 8–12 Gear Quality
- 8–13 Velocity Ratio and Gear Trains
- 8–14 Devising Gear Trains

THE BIG PICTURE

Kinematics of Gears

Discussion Map

- Gears are toothed, cylindrical wheels used for transmitting motion and power from one rotating shaft to another.
- Most gear drives cause a change in the speed of the output gear relative to the input gear.
- Some of the most common types of gears are *spur gears, helical gears, bevel gears, and worm/wormgear sets*.

This chapter will help you learn about the features of different kinds of gears, the kinematics of a pair of gears operating together, and the operation of gear trains having more than two gears.

Gears are toothed, cylindrical wheels used for transmitting motion and power from one rotating shaft to another. The teeth of a driving gear mesh accurately in the spaces between teeth on the driven gear as shown in Figure 8–1. The driving teeth push on the driven teeth, exerting a force perpendicular to the radius of the gear. Thus, a torque is transmitted, and because the gear is rotating, power is also transmitted.

Speed Reduction Ratio. Often gears are employed to produce a change in the speed of rotation of the

Discover

Identify at least two machines or devices that employ gears. Describe the operation of the machines or devices and the appearance of the gears.

driven gear relative to the driving gear. In Figure 8–1, if the smaller top gear, called a *pinion*, is driving the larger lower gear, simply called the *gear*, the larger gear will rotate more slowly. The amount of speed reduction is dependent on the ratio of the number of teeth in the pinion to the number of teeth in the gear according to this relationship:

$$n_P/n_G = N_G/N_P \quad (8-1)$$

The basis for this equation will be shown later in this chapter. But to show an example of its application

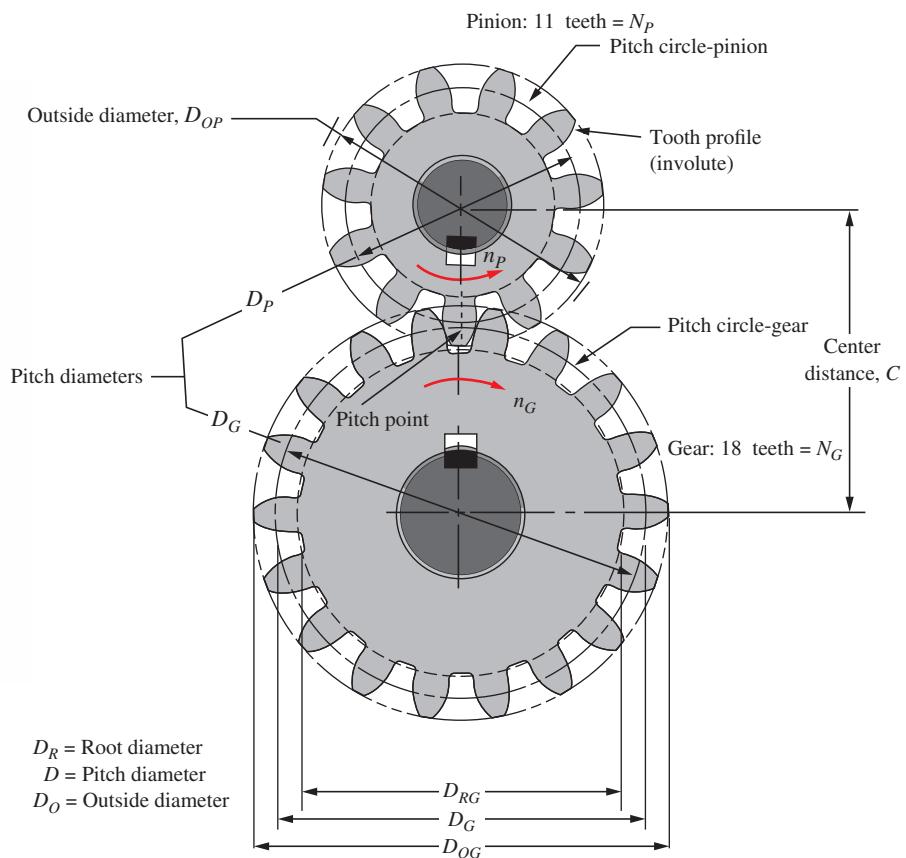


FIGURE 8–1 Pair of spur gears. The pinion drives the gear.

here, consider that the pinion in Figure 8–1 is rotating at 1800 rpm. You can count the number of teeth in the pinion to be 11 and the number of teeth in the gear to be 18. Then we can compute the rotational speed of the gear by solving Equation (8–1) for n_G :

$$n_G = n_p(N_p/N_G) = (1800 \text{ rpm})(11/18) = 1100 \text{ rpm}$$

When there is a reduction in the speed of rotation of the gear, there is a simultaneous proportional *increase* in the torque transmitted to the shaft carrying the gear. More will be said about this later, also.

Kinds of Gears. Several kinds of gears having different tooth geometries are in common use. To acquaint you with the general appearance of some, their basic descriptions are given here. Later we will describe their geometry more completely.

Figure 8–2 shows a photograph of many kinds of gears. Labels indicate the major types of gears that are discussed in this chapter: *spur gears*, *helical gears*, *bevel gears*, and *worm/wormgear sets*. Obviously, the shafts that would carry the gears are not included in this photograph. See References 4, 7, 10, 11–13, and 19 and Internet sites 1, 4, and 5 for more information on gearing.

Spur gears have teeth that are straight and arranged parallel to the axis of the shaft that carries

the gear. The curved shape of the faces of the spur gear teeth have a special geometry called an *involute curve*, described later in this chapter. This shape makes it possible for two gears to operate together with smooth, positive transmission of power. Figure 8–1 also shows the side view of spur gear teeth, and the involute curve shape is evident there. The shafts carrying the gears are parallel.

The teeth of *helical gears* are arranged so that they lie at an angle with respect to the axis of the shaft. The angle, called the *helix angle*, can be virtually any angle. Typical helix angles range from approximately 10° to 30°, but angles up to 45° are practical. The helical teeth operate more smoothly than equivalent spur gear teeth, and stresses are lower. Therefore, a smaller helical gear can be designed for a given power-transmitting capacity as compared with spur gears. One disadvantage of helical gears is that an axial force, called a *thrust force*, is generated in addition to the driving force that acts tangent to the basic cylinder on which the teeth are arranged. The designer must consider the thrust force when selecting bearings that will hold the shaft during operation. Shafts carrying helical gears are typically arranged parallel to each other. However, a special design, called *crossed helical gears*, has 45° helix angles, and their shafts operate 90° to each other.



FIGURE 8–2 A variety of gear types
(Courtesy of Boston Gear, an Altra Industrial Motion Company)

Bevel gears have teeth that are arranged as elements on the surface of a cone. The teeth of straight bevel gears appear to be similar to spur gear teeth, but they are tapered, being wider at the outside and narrower at the top of the cone. Bevel gears typically operate on shafts that are 90° to each other. Indeed, this is often the reason for specifying bevel gears in a drive system. Specially designed bevel gears can operate on shafts that are at some angle other than 90° . When bevel gears are made with teeth that form a helix angle similar to that in helical gears, they are called *spiral bevel gears*. They operate more smoothly than straight bevel gears and can be made smaller for a given power transmission capacity. When both bevel gears in a pair have the same number of teeth, they are called *miter gears* and are used only to change the axes of the shafts to 90° . No speed change occurs.

Now look closely at Figure 8–3 that shows an example of a large, commercially available reducer with three stages that employs a combination of bevel, helical, and spur gears that were just described. See Internet site 6. Seeing them in one unit can help you appreciate the similarities and differences among them. Follow the flow of power through the reducer as outlined here:

1. The input shaft at the left end carries the spiral bevel pinion for the right angle first stage of reduction.
2. The helical pinion behind the output gear of the bevel gear pair drives the large helical output gear of the second stage of reduction.
3. The output shaft from the helical gear pair carries the spur-type sun gear of a planetary gear train whose output shaft drives the final output shaft projecting from the front of the reducer.


A *rack* is a straight gear that moves linearly instead of rotating. When a circular gear is mated with a rack, as shown toward the right side of Figure 8–2, the

combination is called *a rack and pinion drive*. You may have heard that term applied to the steering mechanism of a car or to a part of other machinery. See Section 8–3 for more discussion about a rack.


A *worm and its mating wormgear* operate on shafts that are at 90° to each other. They typically accomplish a rather large speed reduction ratio compared with other types of gears. The worm is the driver, and the wormgear is the driven gear. The teeth on the worm appear similar to screw threads, and, indeed, they are often called *threads* rather than *teeth*. The teeth of the wormgear can be straight like spur gear teeth, or they can be helical. Often the shape of the tip of the wormgear teeth is enlarged to partially wrap around the threads of the worm to improve the power transmission capacity of the set. One disadvantage of the worm/wormgear drive is that it has a somewhat lower mechanical efficiency than most other kinds of gears because there is extensive rubbing contact between the surfaces of the worm threads and the sides of the wormgear teeth.

Where Have You Observed Gears? Think of examples where you have seen gears in actual equipment. Describe the operation of the equipment, particularly the power transmission system. Sometimes, of course, the gears and the shafts are enclosed in a housing, making it difficult for you to observe the actual gears. Perhaps you can find a manual for the equipment that shows the drive system. Or look elsewhere in this chapter and in Chapters 9 and 10 for some photographs of commercially available gear reducers. (*Note: If the equipment you are observing is operating, be very careful not to come in contact with any moving parts!*) Try to answer these questions:

- What was the source of the power? An electric motor, a gasoline engine, a steam turbine, a hydraulic motor? Or were the gears operated by hand?

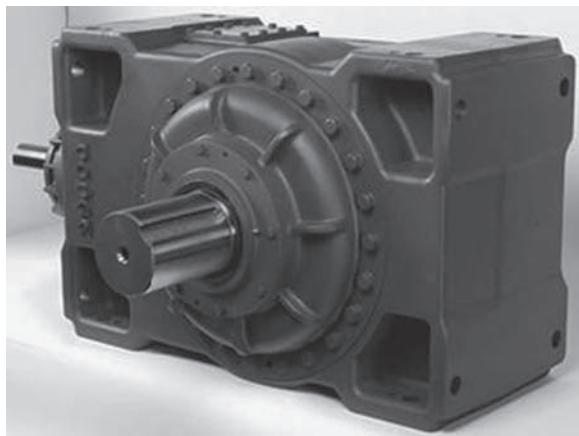

(a) External view of reducer

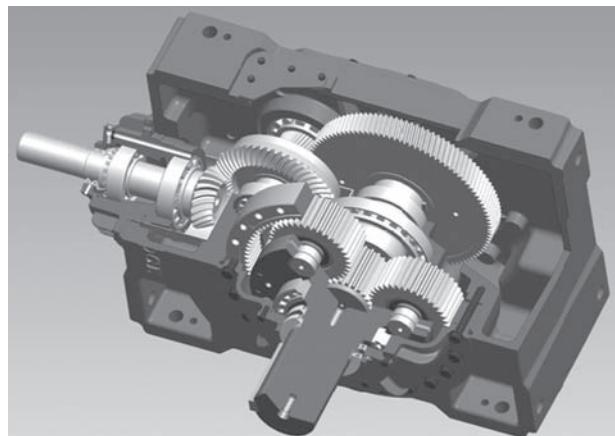

(b) Cutaway view showing internal components

FIGURE 8–3 Triple reduction gear reducer employing bevel, helical, and spur gears
(Baldor/Dodge, Greenville, SC)

- How were the gears arranged together, and how were they attached to the driving source and the driven machine?
- Was there a speed change? Can you determine how much of a change?
- Were there more than two gears in the drive system?
- What types of gears were used? (You should refer to Figure 8–2.)
- What materials were the gears made from?
- How were the gears attached to the shafts that supported them?
- Were the shafts for mating gears aligned parallel to each other, or were they perpendicular to one another?

- How were the shafts themselves supported?
- Was the gear transmission system enclosed in a housing? If so, describe it.

This chapter will help you learn the basic geometries and kinematics of gears and pairs of gears operating together. You will also learn how to analyze gear trains having more than two gears so that you can describe the motion of each gear. Then you will learn how to devise a gear train to produce a given speed reduction ratio. In later chapters, you will learn how to analyze gears for their power transmission capacity and to design gear trains to transmit a given amount of power at a specified ratio of the speed of the input shaft to the speed of the output shaft.

YOU ARE THE DESIGNER

A gear-type speed reducer was described in Chapter 1, and a sketch of the layout of the gears within the reducer was shown in Figure 1–12. You are advised to review that discussion now because it will help you understand how the present chapter on *gear geometry* and *kinematics* fits into the design of the complete speed reducer.

Assume that you are responsible for the design of a speed reducer that will take the power from the shaft of an electric motor rotating at 1750 rpm and deliver it to a machine that is to operate at approximately 292 rpm. You have decided to use gears to transmit the power, and you are proposing a double-reduction speed reducer like the concept sketch shown in Figure 1–12. This chapter will give you the information you need to define the general nature of the gears, including their arrangement and their relative sizes.

The input shaft (shaft 1) is coupled to the motor shaft. The first gear of the gear train is mounted on this shaft and rotates at the same speed as the motor, 1750 rpm. Gear 1 drives the mating gear 2, which is larger, causing the speed of rotation of shaft 2 to be slower than that of shaft 1. But the speed is not yet down to 292 rpm as desired.

The next step is to mount a third gear (gear 3) on shaft 2 and mate it with gear 4 mounted on the output shaft, shaft 3. With proper sizing of all four gears, you should be able to produce an output speed equal or quite close to the desired speed. This process requires knowledge of the concept of *velocity ratio* and the techniques of designing gear trains as presented in this chapter.

But you will also need to specify the appearance of the gears and the geometry of the several features that make up each gear. Whereas the final specification also requires the information from following chapters, you will learn how to recognize common

forms of gears and to compute the dimensions of key features. This will be important when completing the design for strength and wear resistance in later chapters.

Let's say that you have chosen to use spur gears in your design. What design decisions must you make to complete the specification of all four gears? The following list gives some of the important parameters for each gear:

- The number of teeth.
- The form of the teeth.
- The size of the teeth as indicated by the *pitch*.
- The width of the face of the teeth.
- The style and dimensions of the gear blank into which the gear teeth are to be machined.
- The design of the hub for the gear that facilitates its mounting to the shaft.
- The degree of precision of the gear teeth and the corresponding method of manufacture that can produce that precision.
- The means of attaching the gear to its shaft.
- The means of locating the gear axially on the shaft.

To make reliable decisions about these parameters, you must understand the special geometry of spur gears as presented first in this chapter. However, there are other forms of gears that you could choose. Later sections give the special geometry of helical gears, bevel gears, and worm/wormgear sets. The methods of analyzing the forces on these various kinds of gears are described in later chapters, including the stress analysis of the gear teeth and recommendations on material selection to ensure safe operation with long life. ■

8-1 OBJECTIVES OF THIS CHAPTER

After completing this chapter, you will be able to:

1. Recognize and describe the main features of *spur gears*, *helical gears*, *bevel gears*, and *worm/wormgear sets*.
2. Describe the important operating characteristics of these various types of gears with regard to the

similarities and differences among them and their general advantages and disadvantages.

3. Describe the *involute-tooth form* and discuss its relationship to the *law of gearing*.
4. Describe the basic functions of the American Gear Manufacturers Association (AGMA) and identify pertinent standards developed and published by this organization.

5. Define *velocity ratio* as it pertains to two gears operating together.
6. Specify appropriate numbers of teeth for a mating pair of gears to produce a given velocity ratio.
7. Define *train value* as it pertains to the overall speed ratio between the input and output shafts of a gear-type speed reducer (or speed increaser) that uses more than two gears.

8-2 SPUR GEAR STYLES

Figure 8–4 shows several different styles of commercially available spur gears. When gears are large, the spoked design in Part (a) is often used to save weight. The gear teeth are machined into a relatively thin rim that is held by a set of spokes connecting to the hub. The bore of the hub is typically designed to be a close sliding fit with the shaft that carries the gear. A keyway is usually machined into the bore to allow a key to be inserted for positive transmission of torque. The first illustration does not include a keyway because this gear is sold as a stock item, and the ultimate user finishes the bore to match a given piece of equipment.

The solid hub design in Figure 8–4(b) is typical of smaller spur gears. Here the finished bore with a keyway is visible. The set screw over the keyway allows the locking of the key in place after assembly.

When spur gear teeth are machined into a straight, flat bar, the assembly is called a rack, as shown in Figure 8–4(c). The rack is essentially a spur gear with an infinite radius. In this form, the teeth become straight-sided, rather than the curved, involute form typical of smaller gears.

Gears with diameters between the small solid form [Part (b)] and the larger spoked form [Part (a)] are often

produced with a thinned web as shown in Part (d), again to save weight.

You as a designer may create special designs for gears that you implement into a mechanical device or system. One useful approach is to machine the gear teeth of small pinions directly into the surface of the shaft that carries the gear. This is very often done for the input shaft of gear reducers.

8-3 SPUR GEAR GEOMETRY- INVOLUTE-TOOTH FORM

The most widely used spur gear tooth form is the full-depth involute form. Its characteristic shape is shown in Figure 8–5. See References 10–15 and 18 for more on the kinematics of gearing.

The involute is one of a class of geometric curves called *conjugate curves*. When two such gear teeth are in mesh and rotating, there is a *constant angular velocity* ratio between them: From the moment of initial contact to the moment of disengagement, the speed of the driving gear is in a constant proportion to the speed of the driven gear. The resulting action of the two gears is very smooth. If this were not the case, there would be some speeding up and slowing down during the engagement, with the resulting accelerations causing vibration, noise, and dangerous torsional oscillations in the system.

You can easily visualize an involute curve by taking a cylinder and wrapping a string around its circumference. Tie a pencil to the end of the string. Then start with the pencil tight against the cylinder, and hold the string taut. Move the pencil away from the cylinder while keeping the string taut. The curve that you will draw is an involute. Figure 8–6 is a sketch of the process.

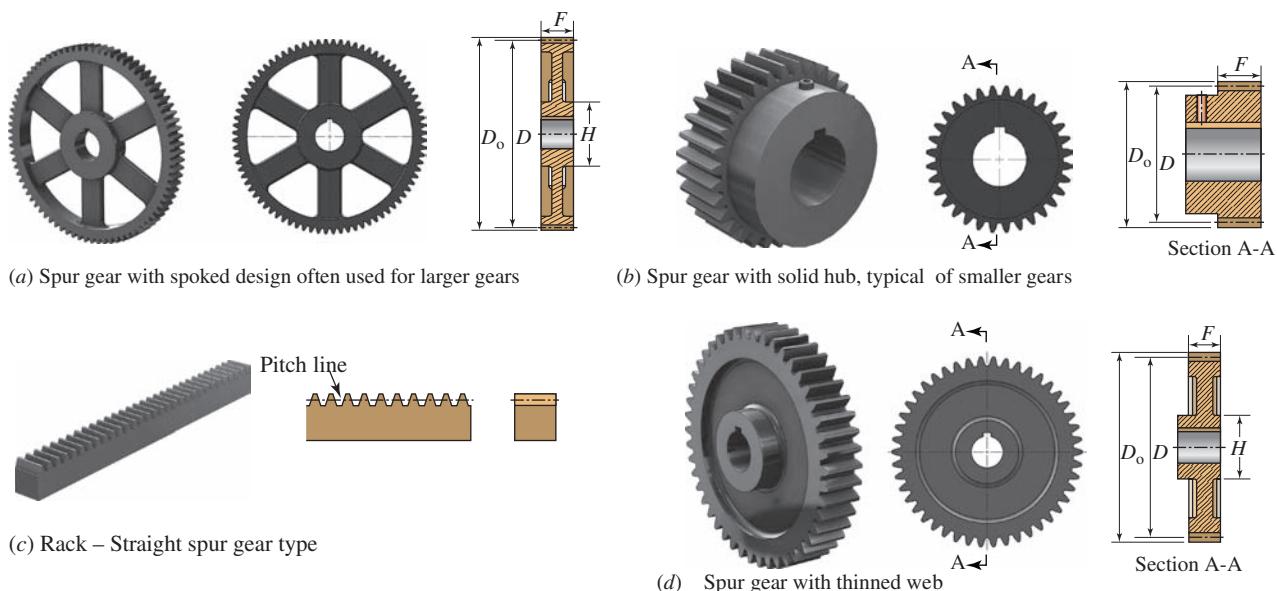


FIGURE 8-4 Examples of spur gears and a rack

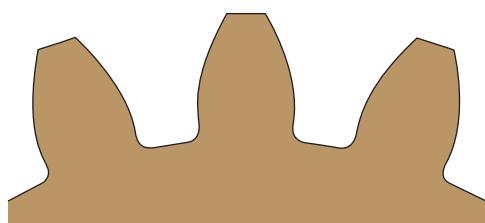


FIGURE 8-5 Involute-tooth form

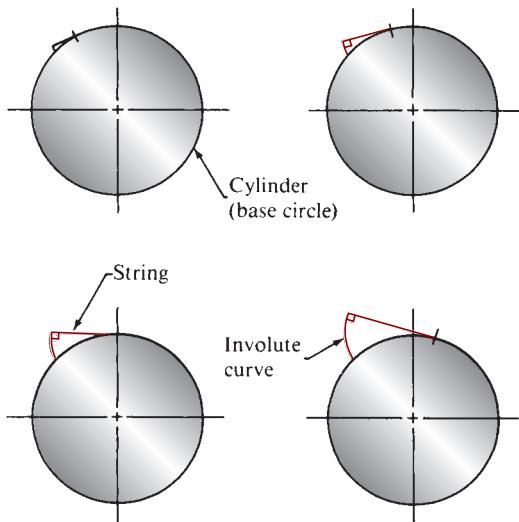


FIGURE 8-6 Graphical presentation of an involute curve

The circle, the end view of the cylinder, is called the *base circle*. Notice that at any position on the curve, the string represents a line tangent to the base circle and, at

the same time, perpendicular to the involute. Drawing another base circle along the same centerline in such a position that the resulting involute is tangent to the first one, as shown in Figure 8-7, demonstrates that at the point of contact, the two lines tangent to the base circles are coincident and will stay in the same position as the base circles rotate. This is what happens when two gear teeth are in mesh.

It is a fundamental principle of *kinematics*, the study of motion, that if the line drawn perpendicular to the surfaces of two rotating bodies at their point of contact always crosses the centerline between the two bodies at the same place, the angular velocity ratio of the two bodies will be constant. This is a statement of the *law of gearing*. As demonstrated here, the gear teeth made in the involute-tooth form obey the law.

Of course, only the part of the gear tooth that actually comes into contact with the mating tooth needs to be in the involute form.

Figure 8-8 shows the gear tooth involute profile. The tooth profile is the curve forming the side of the tooth and is bounded by the major diameter and minor diameters of the gear. The active profile is the portion of the gear tooth involute curve that makes contact with the mating gear. The *start of the active profile* (SAP) corresponds to the lowest point on the active profile. The *true involute form* (TIF) diameter is the diameter above which the tooth profile is a true involute, but the mating gear teeth do not contact. The tip chamfer is a tooth modification used to eliminate the sharp edge of the gear tooth flank and the major diameter of the gear.

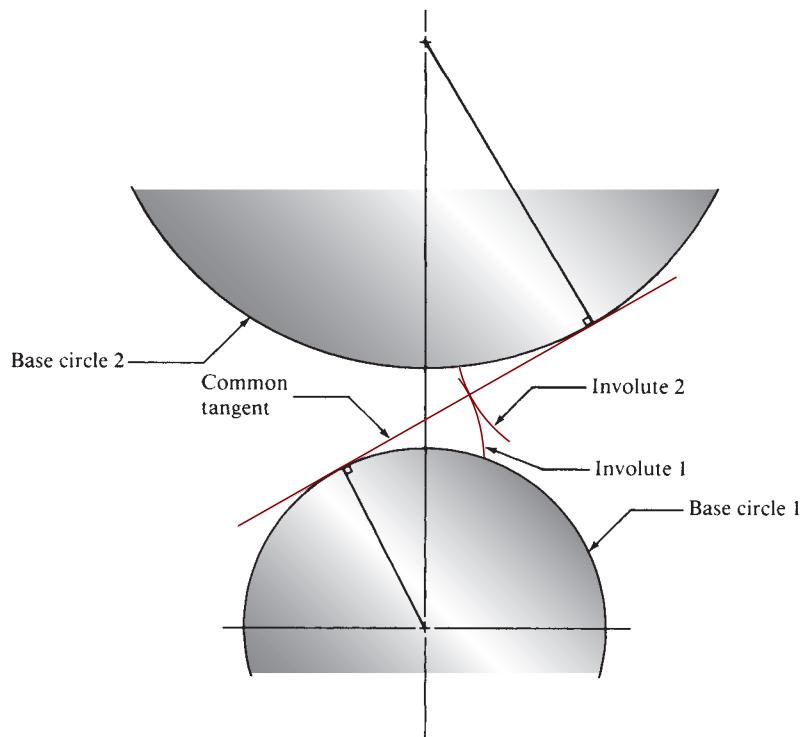


FIGURE 8-7 Mating involutes

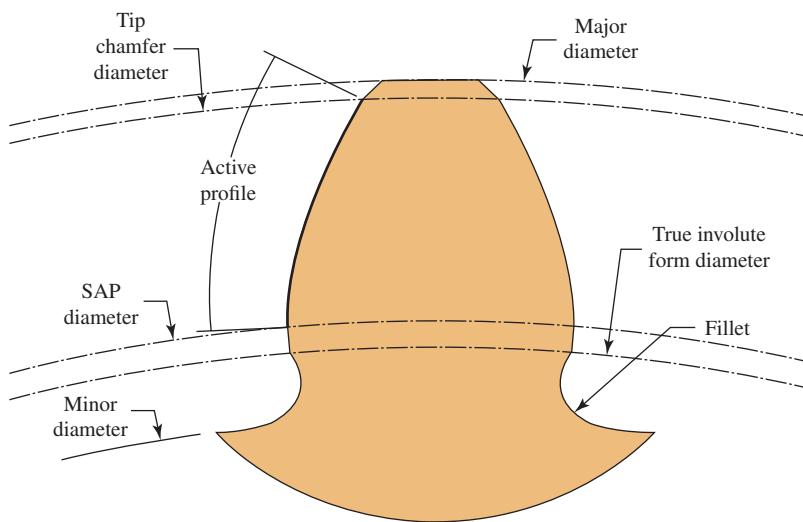


FIGURE 8-8 Gear tooth profile

8-4 SPUR GEAR NOMENCLATURE AND GEAR-TOOTH FEATURES

This section describes several features of individual spur gear teeth, complete gears, and the basic geometry of two mating gears. Terms and symbols used here conform mostly to American Gear Manufacturers Association (AGMA) standards. Because there is variation among the several applicable standards, the primary reference is AGMA 2001-D04 *Fundamental Rating Factors and Calculation Methods for Involute Spur and Helical Gear Teeth*. This standard is the basis for analytical design methods that are described in Chapters 9 and 10 for spur gears and helical gears, respectively. Where appropriate, the terms and symbols used by other AGMA standards and international standards such as ISO, DIN (Germany), and JIS (Japan) are noted. Both the conventional U.S. system of units, called the *Diametral Pitch System*, and the SI metric system, called the *Metric Module System*, are discussed.

Reference is made to several figures and tables that depict the geometry of interest in the design of gear pairs:

1. Figure 8-1 shows two mating spur gears, indicating the dimensions related to diameters and center distance.
2. Figure 8-9 shows details of spur gear teeth with the many terms used to denote specific parts of the teeth and their relationship with the pitch diameter. These terms are defined later in this section.
3. Figure 8-10 shows two gears in mesh with several important diameters, center distance, and other features. See also Internet sites 7 and 8 for animations of teeth engagement.
4. Figure 8-11 shows how spur gear teeth engage as the gears rotate. Gear 1 rotates clockwise and drives gear 2 that rotates counterclockwise. The teeth on gear 1, labeled A_1, B_1, C_1 , and D_1 , contact the teeth on gear 2, labeled A_2, B_2, C_2 , and D_2 respectively. The contact between any two teeth remains along the line of action, until the teeth are no longer engaged.
5. Figures 8-12 and 8-13 show various sizes of gear teeth in both the diametral pitch and metric module systems. Both figures are full size, enabling you to compare physical gears to the drawings to gain an appreciation of gear tooth sizes.
6. Table 8-1 is a composite reference tool for identifying the names, symbols, definitions, units, and formulas related to the several features of gear teeth and mating gears.

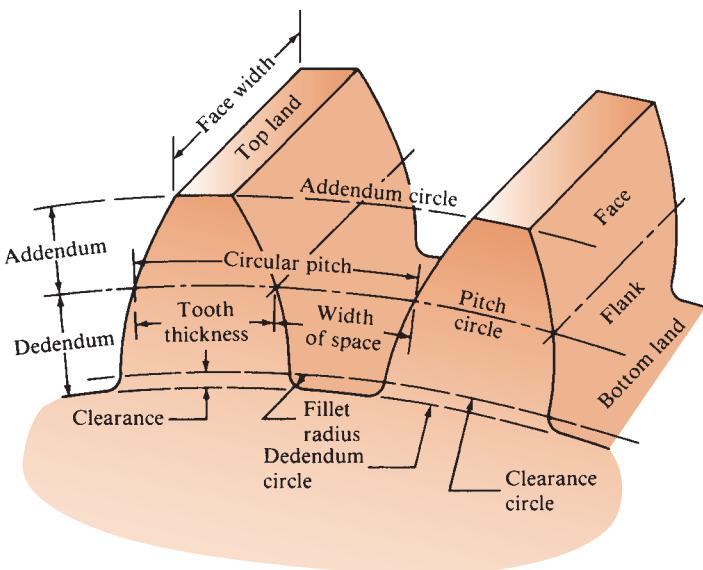


FIGURE 8-9 Spur gear teeth features

A note about accuracy: Gears and gear trains are precision mechanical devices with tolerances on critical dimensions typically in the range of a few ten thousandths of an inch (0.0001 in or about 0.0025 mm). Therefore, it is expected that such dimensions be

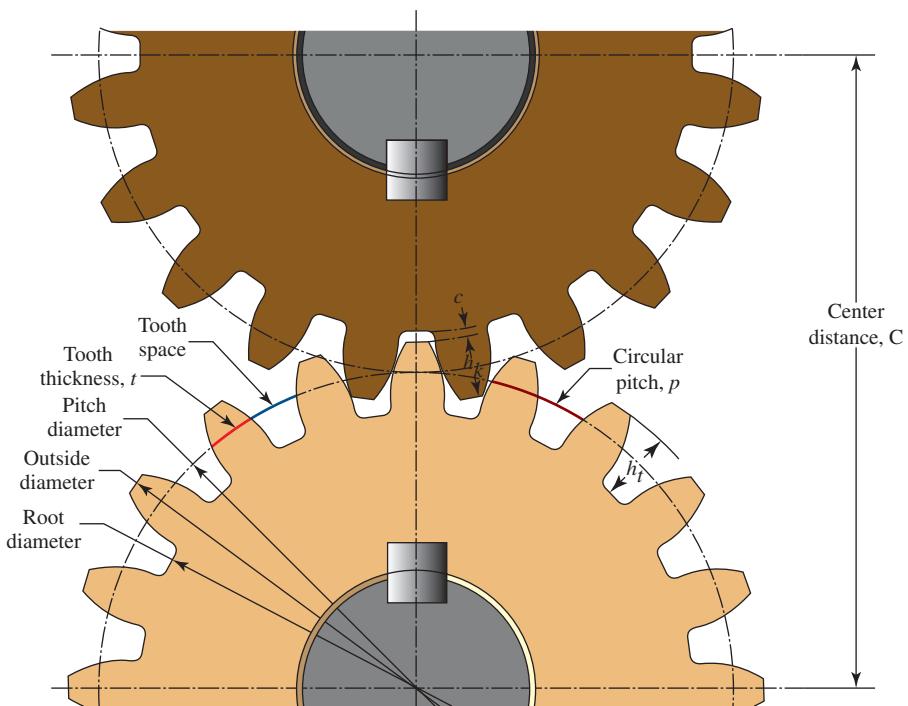


FIGURE 8-10 Details of two meshing spur gears showing several important geometric features.

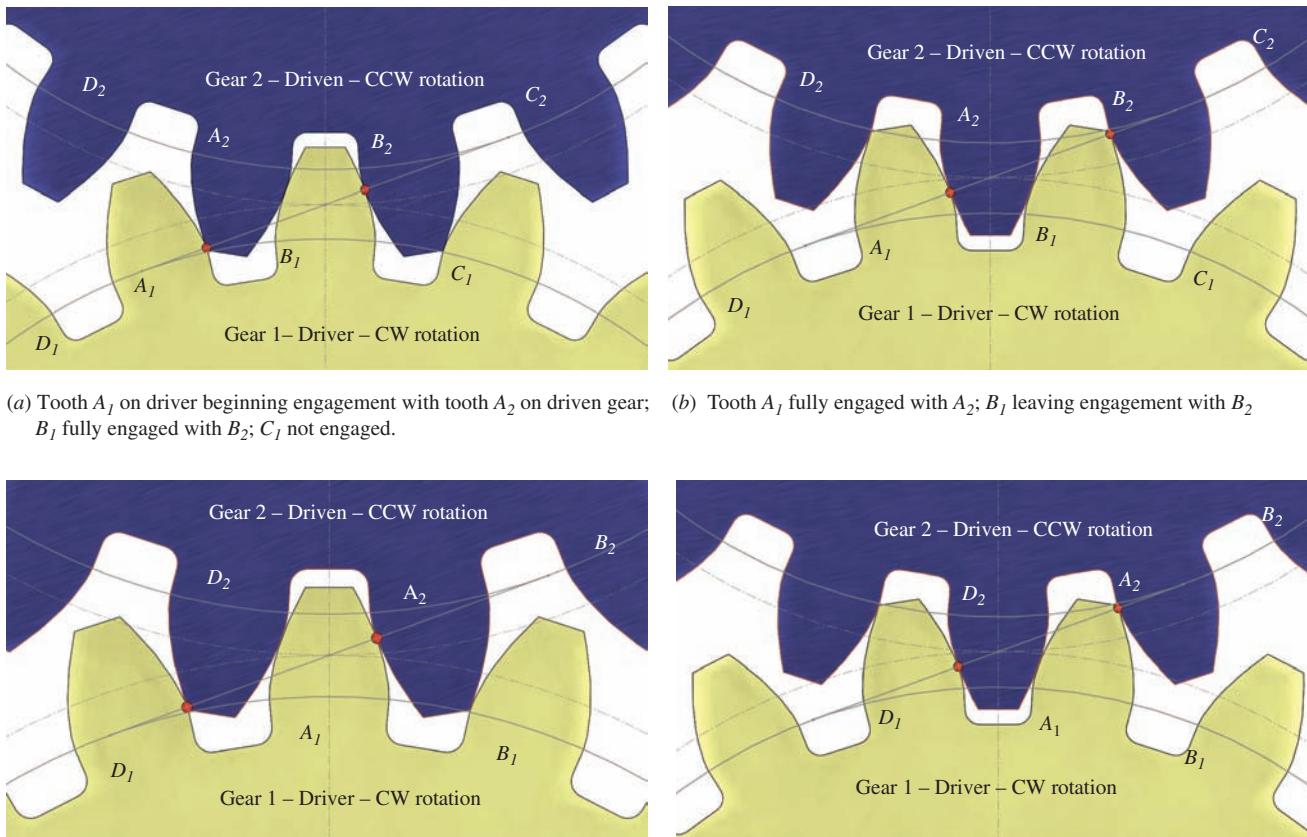


FIGURE 8-11 Cycle of engagement of gear teeth

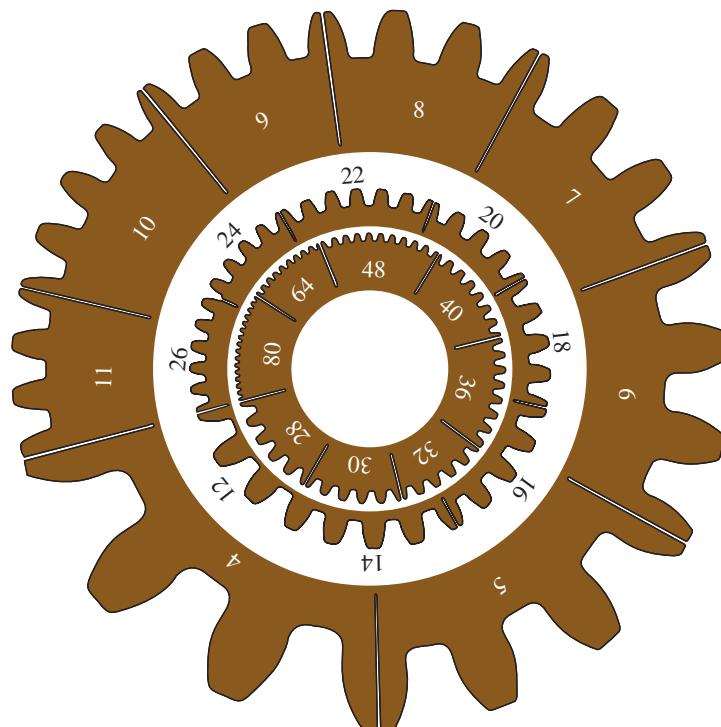


FIGURE 8-12 Gear-tooth size as a function of diametral pitch—actual size

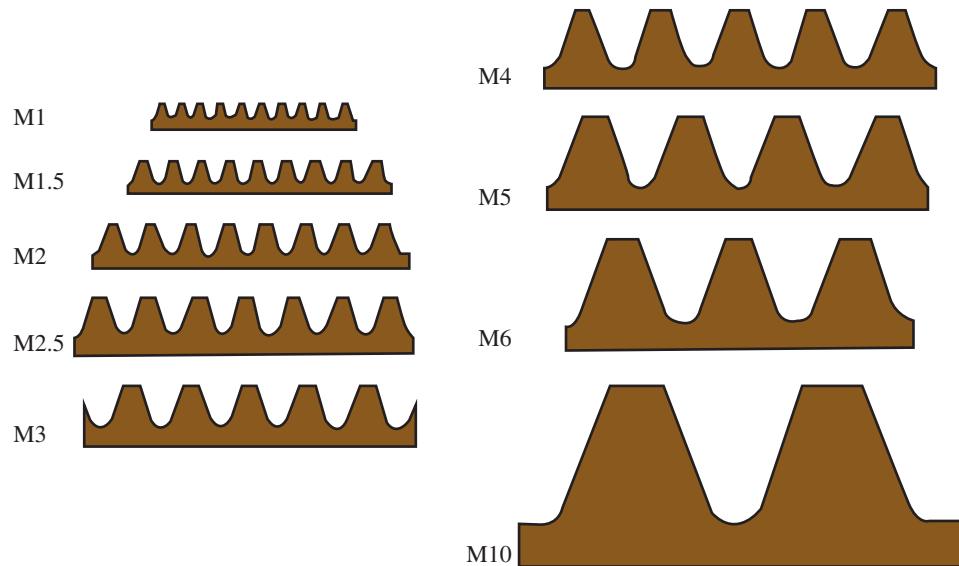


FIGURE 8-13 Selected standard metric modules in rack form—actual size

TABLE 8-1 Gear and Tooth Features, Diameters, Center Distance for a Gear Pair

| Number of teeth and Pitches | Symbol | Definition | Typical unit | General formula | U.S. Full-depth involute system | | Formulas | |
|-----------------------------|--------|---|------------------|------------------------|--|--------------------------|-----------------|--|
| | | | | | Coarse pitch $P_d < 20$ (in) | | | |
| | | | | | Fine pitch $P_d \geq 20$ (in) | | | |
| Number of teeth | N | Integer count of teeth on a gear | in or mm | $p = \pi D/N$ | $\rho = \pi/P_d$ | $\rho = \pi m$ | | |
| Circular pitch | ρ | Arc distance between corresponding points on adjacent teeth | in or mm | | | | | |
| Diametral pitch | P_d | Number of teeth per inch of pitch diameter | in ⁻¹ | $P_d = N/D$ | | | | |
| Module | m | Pitch diameter divided by number of teeth | mm | $m = D/N$ | | $m = 25.4/P_d$ | | |
| Diameters | | | | | | | | |
| Pitch diameter | D | Kinematic characteristic diameter for a gear; Diameter of the pitch circle | in or mm | | $D = N/P_d$ | $D = mN$ | | |
| Outside diameter | D_o | Diameter to the outside surface of the gear teeth | in or mm | | $D_o = (N + 2)/P_d$ | $D_o = m(N + 2)$ | | |
| Root diameter | D_R | Diameter to the root circle of the gear at the base of the teeth | in or mm | $D_R = D - 2b$ | | | | |
| Gear Tooth Features | | | | | | | | |
| Addendum | a | Radial distance from pitch circle to outside of tooth | in or mm | | $a = 1.00/P_d$ | $a = 1.00/m$ | | |
| Dedendum | b | Radial distance from pitch circle to bottom of tooth space | in or mm | | $b = 1.25/P_d$ | $b = 1.20/P_d + 0.002$ | $b = 1.25m^1$ | |
| Clearance | c | Radial distance from top of fully engaged tooth of mating gear to bottom of tooth space | in or mm | | $c = 0.25/P_d$ | $c = 0.20/P_d + 0.002$ | $c = 0.25m^1$ | |
| Whole depth | h_t | Radial distance from top of a tooth to bottom of tooth space | in or mm | $h_t = a + b$ | $h_t = 2.25/P_d$ | $h_t = 2.20/P_d + 0.002$ | $h_t = 2.25m^1$ | |
| Working depth | h_k | Radial distance a gear tooth projects into tooth space of mating gear | in or mm | $h_k = a + a = 2a$ | $h_k = 2.00/P_d$ | $h_k = 2.00/P_d$ | $h_k = 2.00m^1$ | |
| Tooth thickness | t | Theoretical arc distance equal to 1/2 of circular pitch | in or mm | $t = p/2$ | $t = \pi/[2(P_d)]$ | $t = \pi m/2$ | | |
| Face width | F | Width of tooth parallel to axis of gear | in or mm | <i>Design decision</i> | Approximately $12/P_d$ | | | |
| Pressure angle | ϕ | Angle between the tangent to the pitch circle and the perpendicular to the gear tooth surface | degrees | <i>Design decision</i> | Most common value = 20° Others: $14.1/2^\circ, 25^\circ$ | | | |
| Center Distance | C | Distance from between centerlines of mating gears | in or mm | $C = (D_P + D_G)/2$ | $C = (N_P + N_G)/2P_d$ | | | |

Note: ¹Factors in formula for dedendum may vary in metric module system to obtain custom clearance.

reported to at least the nearest ten thousandth of an inch (four decimal places) or the nearest 0.001 mm. Some applications require even more precision. See References 8 and 9 for more on accuracy of gearing. Additional discussion about accuracy is included later in Section 8–12 on Gear Quality.

Pinion and Gear. For two gears in mesh, the smaller gear is called the *pinion* and the larger is called, simply, the *gear*.

Number of Teeth, N . It is essential that there are an integer number of teeth in any gear. This text uses the symbol N for the number of teeth, with N_p for the pinion and N_G for the gear. These subscripts are applied to other gear features as well. Another commonly used symbol for the number of teeth is z , with similar subscripts or simply called z_1 and z_2 .

Pitch. Refer to Figures 8–9 and 8–10. The *pitch* of a gear, in general, is defined as follows:

The pitch of a gear is the arc distance from a point on a tooth at the pitch circle to the corresponding point on the next adjacent tooth, measured along the pitch circle.

The pitch circle is defined next. It is important to note that the pitch of both mating gears must be identical to ensure the smooth engagement of the teeth as the gears rotate. Standard pitches are defined in three different systems, described later in this section.

Pitch Circle and Pitch Diameter. When two gears are in mesh, they behave as if two smooth rollers are rolling on each other without slipping. The surface of each roller defines the *pitch circle* and its diameter is called the *pitch diameter*. The *pitch diameter*, called D in this book, is used as the characteristic size of the gear for calculations of speeds. Note that the pitch diameter for a gear is a theoretical concept and cannot be measured directly. It falls within the gear teeth and is dependent on which standard system for pitch is specified for a particular gear pair. The commonly used units for D are inches (in) for the U.S. system and millimeters (mm) for the SI metric system. Figures 8–1, 8–10, and 8–15 show the pitch diameters on meshing gears.

TABLE 8–2 Standard Circular Pitches (in)

| | | |
|------|-----|-----|
| 10.0 | 7.5 | 5.0 |
| 9.5 | 7.0 | 4.5 |
| 9.0 | 6.5 | 4.0 |
| 8.5 | 6.0 | 3.5 |
| 8.0 | 5.5 | |

Circular Pitch, p . The pitch corresponding exactly to the basic definition of pitch given above is called the *circular pitch*, p . Some large gears that are made by casting are made to standard sizes of circular pitch such as those listed in Table 8–2. They represent a very small portion of gears in common use. The formula for p comes from dividing the circumference of the pitch circle of the gear into N parts. That is,

⇒ **Circular Pitch**

$$p = \pi D/N \quad (8-2)$$

Diametral Pitch, P_d . The most common pitch system in use in the United States at this time is *diametral pitch system*. We use the symbol, P_d , to denote *diametral pitch*. Note that some references use the term *DP*. The definition of P_d is stated here for either the pinion or the gear and both must be identical.

⇒ **Diametral Pitch**

$$P_d = N_p/D_p = N_G/D_G \quad (8-3)$$

Analysis of units shows that P_d has the unit of in^{-1} , but the unit is rarely reported. It is necessary to not confuse the terms *diametral pitch*, P_d , and *pitch diameter*, D . Note that designers often refer to gears in this system as, for example, 8-pitch for $P_d = 8$ and 20-pitch for $P_d = 20$.

In this book, we use only those values of P_d listed in Table 8–3 because they are the most readily available as stock gears and most gear manufacturers have tooling for these sizes. Smaller pitches have larger teeth; larger pitches have smaller teeth. Note that pitches under 20 are called *coarse*, while those 20 and higher are called

TABLE 8–3 Standard Diametral Pitches (teeth/in)

| Coarse pitch ($P_d < 20$) | | | | Fine pitch ($P_d \geq 20$) | |
|-----------------------------|-----|----|----|------------------------------|-----|
| 1 | 2 | 5 | 12 | 20 | 72 |
| 1.25 | 2.5 | 6 | 14 | 24 | 80 |
| 1.5 | 3 | 8 | 16 | 32 | 96 |
| 1.75 | 4 | 10 | 18 | 48 | 120 |
| | | | | 64 | |

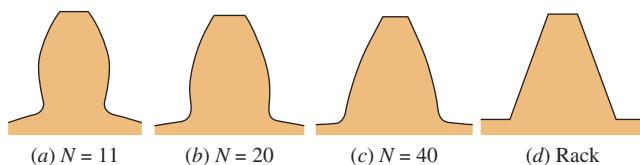


FIGURE 8-14 Involute curve shape for varying numbers of teeth for a diametral pitch of 5

fine. Refer to Figure 8-13 that shows actual sizes of teeth with certain diametral pitches. Note that not all listed values of P_d are readily available and those such as 7, 9, 11, 22, and 26 should not be specified.

Number of Teeth Related to Pitch Diameter

The relationship between the pitch diameter, diametral pitch, and the number of teeth is given by Equation 8-3. As the number of teeth increases for a given diametral pitch, the pitch diameter increases. So as the pitch diameter increases, the base circle diameter increases. A larger base circle will decrease the curvature of the involute curve of the gear tooth. Figure 8-14 shows as the number of teeth increases for a given diametral pitch, the radius of the involute curve of the gear tooth will decrease. Inversely, as the number of teeth decrease the radius of the involute curve of the gear tooth will increase. The teeth in this figure are all drawn with a diametral pitch of 5. The gear rack can be thought of as a gear with an infinitely large diameter, where the involute curve of the tooth profile becomes a straight line.

Metric Module, m . The basic definition of the metric module, m , is given here for both the pinion and the gear and they must be identical.

♦ Metric Module

$$m = D_p/N_p = D_G/N_G \quad (8-4)$$

The unit of mm is typically used. Note that smaller values of m denote smaller teeth and vice versa. Some references and vendors' tables use the symbol, M, for module and write M5 for $m = 5$, for example. Figure 8-13 shows actual sizes of nine standard modules, illustrated as the teeth of *racks*, straight gears with infinite diameters. Many more modules are available and Table 8-4 lists a total of 19 values that cover typical applications featured in this book.

Relation between P_d and m . With globally integrated design and marketing of products and systems, it is likely that the need to convert from one system to another will be needed. Note that the definition of P_d is fundamentally the inverse of the definition of m . That is,

$$m = 1/P_d \quad \text{or} \quad P_d = 1/m$$

However, because different units are employed for each term, a conversion factor of 25.4 mm/in is required, resulting in useful forms of the relationship as

TABLE 8-4 Standard modules

| Module (mm) | Equivalent P_d | Closest standard P_d (teeth/in) |
|-------------|------------------|-----------------------------------|
| 0.3 | 84.667 | 80 |
| 0.4 | 63.500 | 64 |
| 0.5 | 50.800 | 48 |
| 0.8 | 31.750 | 32 |
| 1 | 25.400 | 24 |
| 1.25 | 20.320 | 20 |
| 1.5 | 16.933 | 16 |
| 2 | 12.700 | 12 |
| 2.5 | 10.160 | 10 |
| 3 | 8.466 | 8 |
| 4 | 6.350 | 6 |
| 5 | 5.080 | 5 |
| 6 | 4.233 | 4 |
| 8 | 3.175 | 3 |
| 10 | 2.540 | 2.5 |
| 12 | 2.117 | 2 |
| 16 | 1.587 | 1.5 |
| 20 | 1.270 | 1.25 |
| 25 | 1.016 | 1 |

♦ Relation between Module and Diametral Pitch

$$m = 25.4/P_d \quad \text{or} \quad P_d = 25.4/m \quad (8-5)$$

Table 8-4 uses this relationship to compute the equivalent diametral pitch, P_d , for given standard metric modules, m . Note that the conversions do not deliver standard values of P_d such as those listed in Table 8-3. Therefore, we list the nearest standard P_d value in Table 8-4 as an aid to designers who are considering converting a design from one system to the other. We can say, for example, that a module of $m = 1.25$ is a closely similar size to $P_d = 20$. Of course, the design for either system must be completed independently.

Gear Tooth Features. Table 8-1 includes the definitions of several other features of individual teeth that designers must be familiar with. Refer to Figures 8-9 and 8-10 to visualize those features.

Face Width, F . Face width is the width of the gear parallel to the axis of the gear. It is defined by the designer as one of the required *design decisions*. More is said about face width in Chapter 9, where strength of the teeth is considered. For now, we can state that a nominal value for face width is approximately $F \sim 12/P_d$, but a wide range is permitted.

Center Distance, C. One of the most critical dimensions for a gear pair is the *center distance*, defined as the linear distance from the centerline of the pinion to the centerline of the gear as shown in Figure 8–1. The theoretical value is best represented as the sum of the pitch radii of the pinion and the gear. That is,

$$\begin{aligned} \text{Pitch radii: } R_P &= D_P/2 \quad \text{and} \quad R_G = D_G/2 \\ \text{Center distance: } C &= R_P + R_G = D_P/2 + D_G/2 \\ C &= (D_P + D_G)/2 \end{aligned} \quad (8-6)$$

Other useful equations for C , recommended for use in this book, are developed here.

Diametral pitch system: From Equation (8–3),

▷ **Center Distance in terms of N_G , N_P , and P_d**

$$\begin{aligned} D_P &= N_P/P_d \quad \text{and} \quad D_G = N_G/P_d \\ C &= (D_P + D_G)/2 = (N_P/P_d + N_G/P_d)/2 \\ C &= (N_P + N_G)/2P_d \end{aligned} \quad (8-7)$$

Metric module system: From Equation (8–4),

▷ **Center Distance in terms of N_G , N_P , and m**

$$\begin{aligned} D_P &= mN_P \quad \text{and} \quad D_G = mN_G \\ C &= (D_P + D_G)/2 = (mN_P + mN_G)/2 \\ C &= m(N_P + N_G)/2 \end{aligned} \quad (8-8)$$

An important advantage of the final forms of the center distance Equation (8–7) and (8–8) is that all numbers on the right side are typically integers or exact fractional dimensions such as 1.25, 1.5, or 2.5. Therefore, the highest level of accuracy is obtained from using those forms. Conversely, some values for pitch diameters are irrational numbers. For example, a 12-pitch gear with 65 teeth has a pitch diameter of

$$\begin{aligned} D &= N/P_d = 65/12 = 5.416666 \dots \text{ in} \quad \text{and} \\ R &= D/2 = 2.708333 \dots \text{ in} \end{aligned}$$

Depending on rounding, an inaccurate calculation for center distance could result from using these values.

Comments on Gear Tooth Features. The definitions and formulas given in Table 8–1 yield the theoretical values and it is typical for gear designers and manufacturers to modify some features to produce preferred performance characteristics. It is important to realize that some of these practices change the fundamental geometry of the gears and they may result in weaker tooth shapes, vibration during operation, and/or increased noise. Some examples are given below:

1. **Addendum modification:** The upper part of the flank of a gear tooth is the first to engage its mating tooth and it penetrates most deeply into the tooth space of the mating gear. Some applications benefit from relieving the true surface of the tooth or

from shortening the addendum to promote smooth engagement or to avoid damage.

2. **Dedendum modification:** Some designers prefer greater clearance between the bottom of the tooth space and the fully engaged mating tooth to facilitate lubrication. Using a longer dedendum dimension provides this capability. Plastic gears may also employ dedendum modification to accommodate thermal expansion and/or swelling because of moisture absorption.

3. **Center distance modification:** Some combinations of gear tooth geometry result in very small clearances between teeth and possibly interference between the top of the engaging tooth and the lower part of the flank of the mating tooth. These conditions should be avoided by proper design decisions to avoid the interference and this topic is discussed in Chapter 9. However, some designers remove the interference by expanding the center distance slightly from its theoretical dimension.

4. **Tooth thickness modification:** A tooth thickness defined exactly as $\frac{1}{2}$ of the circular pitch will result in a tight fit of a tooth in the tooth space of the mating gear, possibly causing binding or precluding entry of lubrication at the contact point on the teeth. Using a smaller tooth thickness provides space for lubrication and facilitates assembly. The space created is called *backlash* and it is discussed next.

■ **Backlash:** To provide backlash, the cutter generating the gear teeth can be fed more deeply into the gear blank than the theoretical value on either or both of the mating gears. Alternatively, backlash can be created by adjusting the center distance to a larger value than the theoretical value.

The magnitude of backlash depends on the desired precision of the gear pair and on the size and the pitch of the gears. It is actually a design decision, balancing cost of production with desired performance. The American Gear Manufacturers Association (AGMA) provides recommendations for backlash in their standards. (See Reference 2.) Table 8–5 lists examples of recommended ranges for several values of pitch.

Pressure Angle

The pressure angle is the angle between the tangent to the pitch circles and the line drawn normal (perpendicular) to the surface of the gear tooth (see Figure 8–15).

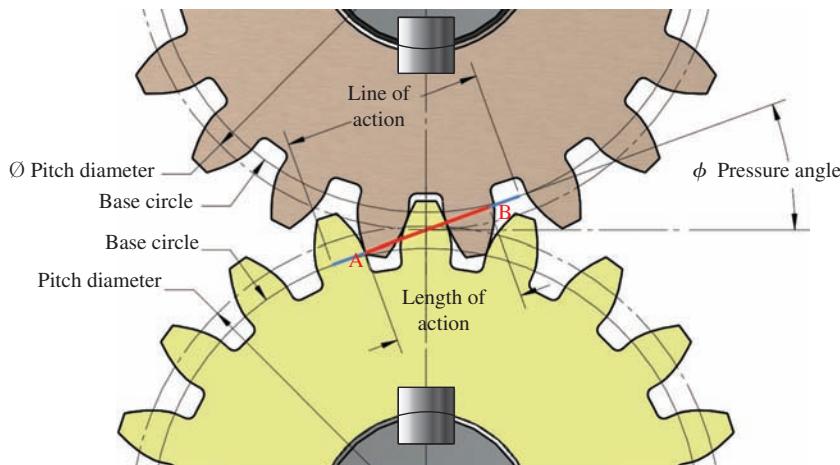
The normal line is sometimes referred to as the *line of action*. When two gear teeth are in mesh and are transmitting power, the force transferred from the driver to the driven gear tooth acts in a direction along the line of action. The *length of action* is the distance AB along

TABLE 8-5 Recommended Minimum Backlash for Coarse Pitch Gears**A. Diametral pitch system (backlash in inches)**

| P_d | 2 | 4 | 8 | 16 | 32 |
|-------|-------|-------|-------|-------|-------|
| 18 | 0.005 | 0.006 | | | |
| 12 | 0.006 | 0.007 | 0.009 | | |
| 8 | 0.007 | 0.008 | 0.010 | 0.014 | |
| 5 | | 0.010 | 0.012 | 0.016 | |
| 3 | | 0.014 | 0.016 | 0.020 | 0.028 |
| 2 | | | 0.021 | 0.025 | 0.033 |
| 1.25 | | | | 0.034 | 0.042 |

B. Metric module system (backlash in millimeters)

| Module, m | 50 | 100 | 200 | 400 | 800 |
|-------------|------|------|------|------|------|
| 1.5 | 0.13 | 0.16 | | | |
| 2 | 0.14 | 0.17 | 0.22 | | |
| 3 | 0.18 | 0.20 | 0.25 | 0.35 | |
| 5 | | 0.26 | 0.31 | 0.41 | |
| 8 | | 0.35 | 0.40 | 0.50 | 0.70 |
| 12 | | | 0.52 | 0.62 | 0.82 |
| 18 | | | | 0.80 | 1.00 |

**FIGURE 8-15** Two spur gears in mesh showing the pressure angle, line of action, base circles, pitch diameters, and other features

the line of action. This length represents the path of the point of contact during the meshing of the two gears.

Also, the actual shape of the gear tooth depends on the pressure angle, as illustrated in Figure 8-16. The teeth in this figure were drawn according to the proportions for a 20-tooth, 5-pitch gear having a pitch diameter of 4.000 in.

All three teeth have the same tooth thickness because, as stated in Table 8-1 the thickness at the

pitch line depends only on the pitch. The difference between the three teeth shown is due to the different pressure angles because the pressure angle determines the size of the base circle. Remember that the base circle is the circle from which the involute is generated. The line of action is always tangent to the base circle. Therefore, the size of the base circle can be found from

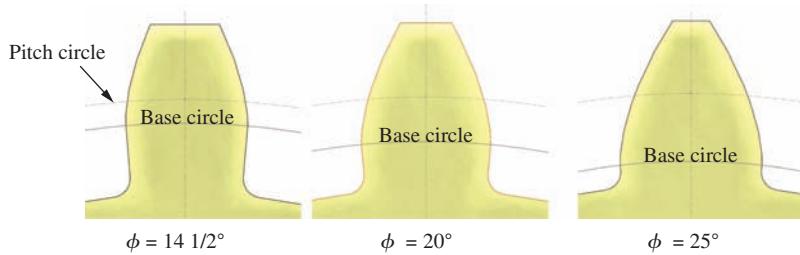


FIGURE 8-16 Illustration of how the shape of gear teeth change as the pressure angle, (phi), changes

▷ Base Circle Diameter

$$D_b = D \cos \phi \quad (8-9)$$

As the pressure angle increases, the thickness at the bottom of the tooth increases. Therefore the larger the pressure angle, the stronger the tooth and the higher the load carrying capacity of the tooth. A higher pressure angle may not run as smoothly or quietly as the smaller pressure angle. As the pressure angle decreases, the top land of the tooth will increase. This can create interference problems when a small number of pinion teeth are required. The topic of gear interference will be covered in more detail in Section 8-5.

Standard values of the pressure angle are established by gear manufacturers, and the pressure angles of two gears in mesh must be the same. Current standard pressure angles are $14\frac{1}{2}^\circ$, 20° , and 25° as illustrated in Figure 8-16. Actually, the $14\frac{1}{2}^\circ$ tooth form is considered obsolete. Although it is still available, it should be avoided for new designs. The 20° tooth form is the most readily available at this time. The advantages and disadvantages of the different values of pressure angle relate to the strength of the teeth, the occurrence of interference, and the magnitude of forces exerted on the shaft. Interference is discussed in Section 8-5. The other points are discussed in a later chapter.

Contact Ratio

When two gears mesh, it is essential for smooth operation that a second tooth begin to make contact before a given tooth disengages. The term *contact ratio* is used to indicate the average number of teeth in contact during the transmission of power. A recommended minimum contact ratio is 1.2 and typical spur gear combinations often have values of 1.5 or higher.

The contact ratio is defined as the ratio of the length of the line-of-action to the base pitch for the gear. The line-of-action is the straight-line path of a tooth from where it encounters the outside diameter of the mating gear to the point where it leaves engagement. The base pitch is the diameter of the base circle divided by the number of teeth in the gear. A convenient formula for computing the contact ratio, m_f , is,

▷ Contact Ratio

$$m_f = \frac{\sqrt{R_{oP}^2 - R_{bP}^2} + \sqrt{R_{oG}^2 - R_{bG}^2} - C \sin \phi}{p \cos \phi} \quad (8-10)$$

where,

ϕ = Pressure angle

$$\begin{aligned} R_{oP} &= \text{Outside radius of the pinion} = D_{oP}/2 \\ &= (N_p + 2)/(2P_d) \end{aligned}$$

$$\begin{aligned} R_{bP} &= \text{Radius of the base circle for the pinion} \\ &= D_{bP}/2 = (D_p/2) \cos \phi = (N_p/2P_d) \cos \phi \end{aligned}$$

$$\begin{aligned} R_{oG} &= \text{Outside radius of the gear} = D_{oG}/2 \\ &= (N_G + 2)/(2P_d) \end{aligned}$$

$$\begin{aligned} R_{bG} &= \text{Radius of the base circle for the gear} = D_{bG}/2 \\ &= (D_G/2) \cos \phi = (N_G/2P_d) \cos \phi \end{aligned}$$

$$C = \text{Center distance} = (N_p + N_G)/(2P_d)$$

$$p = \text{Circular pitch} = (\pi D_p/N_p) = \pi/P_d$$

For example, consider a pair of gears with the following data:

$$N_p = 18, N_G = 64, P_d = 8, \phi = 20^\circ$$

Then,

$$R_{oP} = (N_p + 2)/(2P_d) = (18 + 2)/[2(8)] = 1.2500 \text{ in}$$

$$R_{bP} = (N_p/2P_d) \cos \phi = 18/[2(8)] \cos 20^\circ = 1.05715 \text{ in}$$

$$R_{oG} = (N_G + 2)/(2P_d) = (64 + 2)/[2(8)] = 4.1250 \text{ in}$$

$$R_{bG} = (N_G/2P_d) \cos \phi = 64/[2(8)] \cos 20^\circ = 3.75877 \text{ in}$$

$$C = (N_p + N_G)/(2P_d) = (18 + 64)/[2(8)] = 5.1250 \text{ in}$$

$$p = \pi/P_d = \pi/8 = 0.392699 \text{ in}$$

Finally, the contact ratio is,

$$m_f = \frac{\sqrt{(1.250)^2 - (1.05715)^2} + \sqrt{(4.125)^2 - (3.75877)^2} - (5.125) \sin 20^\circ}{(0.392699) \cos 20^\circ}$$

$$m_f = 1.66$$

This states that for these two gears in mesh, there will always be one tooth in full contact and for 66% of the time there will be two teeth in contact. The value of $m_f = 1.66$ is comfortably above the recommended minimum value of 1.20.

Similar developments can be used to determine the factors needed to implement the contact ratio calculation in Equation (8-10) with terms expressed in the Metric Module System. Table 8-6 summarizes the relationships for both systems.

TABLE 8–6 Formulas for Use When Implementing Gear Pair Contact Ratio Calculation In U.S. and SI Systems in Terms of Diametral Pitch and Module

| Factors | Diametral Pitch System | Metric Module System |
|----------|---------------------------|------------------------|
| ϕ | Pressure angle | |
| R_{oP} | Outside radius—pinion | $(N_p + 2)/(2P_d)$ |
| R_{bP} | Base circle radius—pinion | $(N_p/2P_d) \cos \phi$ |
| R_{oG} | Outside radius—gear | $(N_G + 2)/(2P_d)$ |
| R_{bG} | Base circle radius—gear | $(N_G/2P_d) \cos \phi$ |
| C | Center distance | $(N_p + N_G)/(2P_d)$ |
| p | Circular pitch | π/P_d |

Example Problem 8–1 For the pair of gears shown in Figure 8–1, compute all of the features of the gear teeth described in this section. The gears conform to the standard AGMA form and have a diametral pitch of 12 and a 20° pressure angle.

Solution Given $P_d = 12$; $N_p = 11$; $N_G = 18$; $\phi = 20^\circ$.

Analysis Unless otherwise noted, we use equations from Table 8–1 to compute the features. Refer to the text in this section for explanation of terms.

Note that results are reported to four decimal places as is typical for precise mechanical devices like gears. A similar level of accuracy is expected for problems in this book.

Results *Pitch Diameters*
For the pinion,

$$D_p = N_p/P_d = 11/12 = 0.9167 \text{ in}$$

For the gear,

$$D_G = N_G/P_d = 18/12 = 1.5000 \text{ in}$$

Circular Pitch

Three different approaches could be used.

$$p = \pi/P_d = \pi/12 = 0.2618 \text{ in}$$

Note that data for either the pinion or the gear data may also be used. For the pinion,

$$p = \pi D_p/N_p = \pi(0.9167 \text{ in})/11 = 0.2618 \text{ in}$$

For the gear,

$$p = \pi D_G/N_G = \pi(1.500 \text{ in})/18 = 0.2618 \text{ in}$$

Addendum

$$a = 1/P_d = 1/12 = 0.8333 \text{ in}$$

Dedendum

Note that the 12-pitch gear is considered to be coarse. Thus,

$$b = 1.25/P_d = 1.25/12 = 0.1042 \text{ in}$$

Clearance

$$c = 0.25/P_d = 0.25/12 = 0.0208 \text{ in}$$

Outside Diameters

For the pinion,

$$D_{oP} = (N_p + 2)/P_d = (11 + 2)/12 = 1.0833 \text{ in}$$

For the gear,

$$D_{oG} = (N_G + 2)/P_d = (18 + 2)/12 = 1.6667 \text{ in}$$

Root Diameters

First, for the pinion,

$$D_{RP} = D_p - 2b = 0.9167 \text{ in} - 2(0.1042 \text{ in}) = 0.7083 \text{ in}$$

For the gear,

$$D_{RG} = D_G - 2b = 1.500 \text{ in} - 2(0.1042 \text{ in}) = 1.2917 \text{ in}$$

Whole Depth

$$h_t = a + b = 0.0833 \text{ in} + 0.1042 \text{ in} = 0.1875 \text{ in}$$

Working Depth

$$h_k = 2a = 2(0.0833 \text{ in}) = 0.1667 \text{ in}$$

Tooth Thickness

$$t = \pi/[2(P_d)] = \pi/[2(12)] = 0.1309 \text{ in}$$

Center Distance

$$C = (N_G + N_P)/(2P_d) = (18 + 11)/[2(12)] = 1.2083 \text{ in}$$

Base Circle Diameter

$$D_{bP} = D_P \cos \phi = (0.9167 \text{ in}) \cos (20^\circ) = 0.8614 \text{ in}$$

$$D_{bG} = D_G \cos \phi = (1.5000 \text{ in}) \cos (20^\circ) = 1.4095 \text{ in}$$

8-5 INTERFERENCE BETWEEN MATING SPUR GEAR TEETH

For certain combinations of numbers of teeth in a gear pair, there is interference between the tip of the teeth on the pinion and the fillet or root of the teeth on the gear. Obviously this cannot be tolerated because the gears simply will not mesh. The probability that interference will occur is greatest when a small pinion drives a large gear, with the worst case being a small pinion driving a rack. A *rack* is a gear with a straight pitch line; it can be thought of as a gear with an infinite pitch diameter [see Figure 8-4(c)].

It is the designer's responsibility to ensure that interference does not occur in a given application. The surest way to do this is to control the minimum number of teeth in the pinion to the limiting values shown on the left side of Table 8-7. With this number of teeth or a greater number, there will be no interference with a rack or with any other gear. A designer who desires to use fewer than the listed number of teeth can use a graphical layout to test the combination of pinion and gear for interference.

Texts on kinematics provide the necessary procedure. The right side of Table 8-7 indicates the maximum number of 20° full depth gear teeth that you can use for a given number of pinion teeth to avoid interference. (See References 11 and 17.)

Using the information in Table 8-7, we can draw the following conclusions:

1. If a designer wants to be sure that there will not be interference between any two gears when using the $14\frac{1}{2}^\circ$, full-depth, involute system, the pinion of the gear pair must have no fewer than 32 teeth.
2. For the 20° , full-depth, involute system, using no fewer than 18 teeth will ensure that no interference occurs.
3. For the 25° , full-depth, involute system, using no fewer than 12 teeth will ensure that no interference occurs.
4. If a designer desires to use fewer than 18 teeth in a pinion having 20° , full-depth teeth, there is an upper limit to the number of teeth that can be used on

TABLE 8-7 Number of Pinion Teeth to Ensure No Interference

| For a pinion meshing with a rack | | For a 20° , full-depth pinion meshing with a gear | | |
|--|-------------------------|--|------------------------------|---------------|
| Tooth form | Minimum number of teeth | Number of pinion teeth | Maximum number of gear teeth | Maximum ratio |
| $14\frac{1}{2}^\circ$, involute, full-depth | 32 | 17 | 1309 | 77.00 |
| 20° , involute, full-depth | 18 | 16 | 101 | 6.31 |
| 25° , involute, full-depth | 12 | 15 | 45 | 3.00 |
| | | 14 | 26 | 1.85 |
| | | 13 | 16 | 1.23 |

the mating gear without interference. For 17 teeth in the pinion, any number of teeth on the gear can be used up to 1309, a very high number. Most gear drive systems use no more than about 200 teeth in any gear. But a 17-tooth pinion *would* have interference with a *rack* which is effectively a gear with an infinite number of teeth or an infinite pitch diameter. Similarly, the following requirements apply for 20° full-depth teeth:

A 16-tooth pinion requires a gear having 101 or fewer teeth, producing a maximum velocity ratio of $N_G/N_P = 101/16 = 6.31$.

A 15-tooth pinion requires a gear having 45 or fewer teeth, producing a maximum velocity ratio of $45/15 = 3.00$.

A 14-tooth pinion requires a gear having 26 or fewer teeth, producing a maximum velocity ratio of $26/14 = 1.85$.

A 13-tooth pinion requires a gear having 16 or fewer teeth, producing a maximum velocity ratio of $16/13 = 1.23$.

As noted earlier, the $14\frac{1}{2}^\circ$ system is considered to be obsolete. The data in Table 8-7 indicate one of the main disadvantages with that system: its potential for causing interference.

Overcoming Interference

If a proposed design encounters interference, there are ways to make it work. But caution should be exercised because the tooth form or the alignment of the mating gears is changed, causing the stress and wear analysis to be inaccurate. With this in mind, the designer can provide for undercutting, modification of the addendum on the pinion or the gear, or modification of the center distance:

Undercutting is the process of cutting away the material at the fillet or root of the gear teeth, thus relieving the interference.

Figure 8-17 shows the result of undercutting. It should be obvious that this process weakens the tooth; this point is discussed further in Chapter 9 in the section on stresses in gear teeth.

To alleviate the problem of interference, increase the addendum of the pinion while decreasing the addendum of the gear. The center distance can remain the same as its theoretical value for the number of teeth in the pair. But the resulting gears are, of course, non-standard. (See Reference 12.) It is possible to make the pinion of a gear pair larger than standard while keeping the gear standard if the center distance for the pair is enlarged. (See Reference 11.)

Also shown in Figure 8-17 is tip relief that modifies the top of the tooth profile to provide clearance when a gear tooth bends under load.

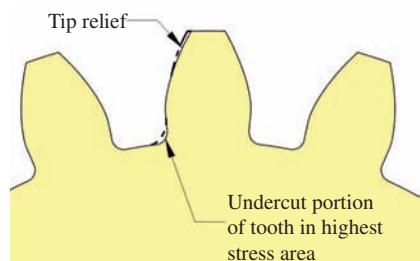


FIGURE 8-17 Undercutting and tip relief of gear teeth

8-6 INTERNAL GEAR GEOMETRY

An internal gear is one for which the teeth are machined on the inside of a ring instead of on the outside of a gear blank.

A small internal gear mating with a standard, external pinion is illustrated at the lower left in Figure 8-2, along with a variety of other kinds of gears.

Figure 8-18 is a drawing of an external pinion driving an internal gear. Note the following:

1. The gear rotates in the *same direction* as the pinion. This is different from the case when an external pinion drives an external gear.
2. The center distance is

□ Center Distance-Internal Gear

$$C = D_G/2 - D_p/2 = (D_G - D_p)/2$$

$$C = (N_G/P_d - N_p/P_d)/2 = (N_G - N_p)/(2P_d) \quad (8-10)$$

The last form is preferred because its factors are all integers for typical gear trains, giving maximum precision in calculations.

3. The descriptions of most other features of internal gears are the same as those for external gears presented earlier. Exceptions for an internal gear are as follows:

The addendum, a , is the radial distance from the pitch circle to the inside of a tooth.

The inside diameter, D_i , is

$$D_i = D - 2a$$

The root diameter, D_R , is

$$D_R = D + 2b$$

where b = dedendum.

Internal gears are used when it is desired to have the same direction of rotation for the input and the output. Also note that less space is taken for an internal gear mating with an external pinion compared with two external gears in mesh.

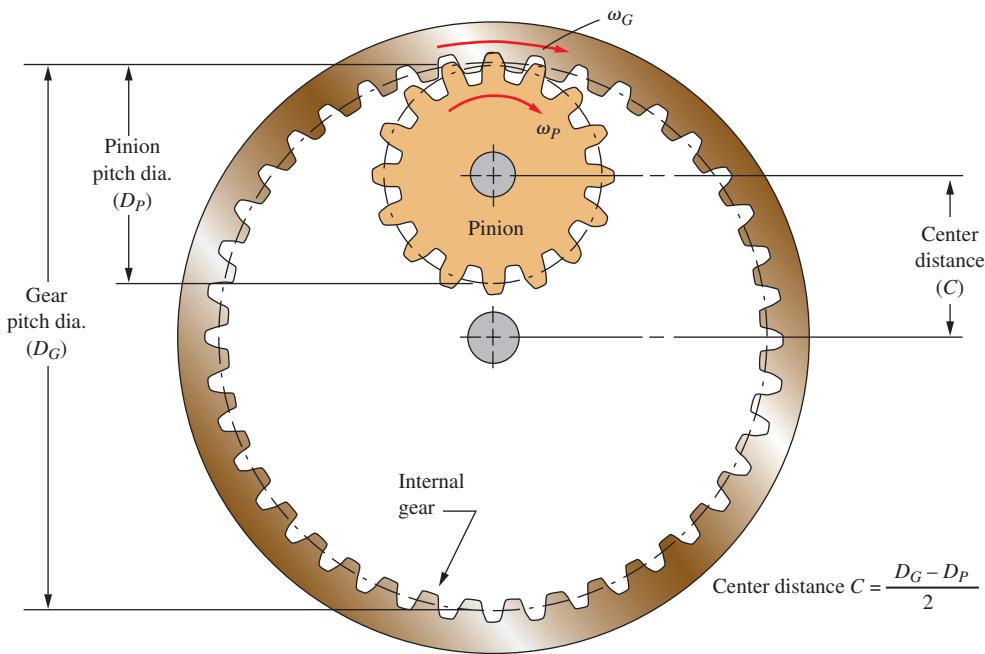


FIGURE 8-18 Internal gear driven by an external pinion

8-7 HELICAL GEAR GEOMETRY

Helical and spur gears are distinguished by the orientation of their teeth. On spur gears, the teeth are straight and are aligned with the axis of the gear. On helical gears, the teeth are inclined at an angle with the axis, that angle being called the *helix angle*. If the gear were very wide, it would appear that the teeth wind around the gear blank in a continuous, helical path. However, practical considerations limit the width of the gears so that the teeth normally appear to be merely inclined with respect to the axis. Figure 8-19 shows two examples of commercially available helical gears.

The forms of helical gear teeth are very similar to those discussed for spur gears. The basic task is to account for the effect of the helix angle.

Helix Angle

The helix for a given gear can be either *left-hand* or *right-hand*. The teeth of a right-hand helical gear would appear to lean to the right when the gear is lying on a flat surface. Conversely, the teeth of a left-hand helical gear would lean to the left. In normal installation, helical gears would be mounted on parallel shafts as shown in Figure 8-19(a). To achieve this arrangement, it is required that one gear be of the right-hand design and that the other be left-hand with an equal helix angle. If both gears in mesh are of the same hand, as shown in Figure 8-19(b), the shafts will be at 90° to each other. Such gears are called *crossed helical gears*.

The parallel shaft arrangement for helical gears is preferred because it results in a much higher power-transmitting capacity for a given size of gear than the crossed helical arrangement. In this book, we will assume that

the parallel shaft arrangement is being used unless otherwise stated.

The main advantage of helical gears over spur gears is smoother engagement because a given tooth assumes its load gradually instead of suddenly. Contact starts at one end of a tooth near the tip and progresses across the face in a path downward across the pitch line to the lower flank of the tooth, where it leaves engagement. Simultaneously, other teeth are coming into engagement before a given tooth leaves engagement, with the result that a larger average number of teeth are engaged and are sharing the applied loads compared with a spur gear. The lower average load per tooth allows a greater power transmission capacity for



(a) Right hand and left hand helical gears with 20° helix angle and parallel axes
 (b) Two right handed helical gears with 45° helix angle and crossed axes

FIGURE 8-19 Two varieties of pairs of helical gears

a given size of gear, or a smaller gear can be designed to carry the same power. Helical gears also generate less noise and vibration than spur gears due to the smoother tooth engagement.

The main disadvantage of helical gears is that an *axial thrust load* is produced as a natural result of the inclined arrangement of the teeth. The bearings that hold the shaft carrying the helical gear must be capable of reacting against the thrust load.

The helix angle is specified for each given gear design. A balance should be sought to take advantage of the smoother engagement of the gear teeth when the helix angle is high while maintaining a reasonable value of the axial thrust load that increases with increasing helix angle. A typical range of values of helix angles is from 15° to 45° .

Primary Planes for Helical Gears

The three primary planes of a helical gear are illustrated in Figure 8–20(a) for a circular gear and 8–21(b) for a rack.

The *tangential plane* shown in Figure 8–20(b) is tangent to the pitch diameter (pitch circle) of the helical gear and is also called the pitch plane. The *transverse plane* shown in Figure 8–20(c) is perpendicular to the axis of the helical gear and the tangential plane. The transverse plane coincides with the plane of rotation. The *normal plane* shown in Figure 8–20(d) is perpendicular to the tooth and the tangential plane.

Pressure Angles for Helical Gears

In design of a helical gear, there are three angles of interest as illustrated in Figure 8–21(d): (1) the *helix angle*, ψ ; (2) the *normal pressure angle*, ϕ_n ; and (3) the *transverse pressure angle*, ϕ_t . Designers must specify the helix angle

and one of the two pressure angles. The other pressure angle can be computed from the following relationship:

$$\tan \phi_n = \tan \phi_t \cos \psi \quad (8-11)$$

For example, one manufacturer's catalog offers standard helical gears with a normal pressure angle of $14\frac{1}{2}^\circ$ and a 45° helix angle. Then the transverse pressure angle is found from

$$\tan \phi_n = \tan \phi_t \cos \psi$$

$$\tan \phi_t = \tan \phi_n / \cos \psi = \tan(14.5^\circ) / \cos(45^\circ) = 0.3657$$

$$\phi_t = \tan^{-1}(0.3657) = 20.09^\circ$$

Pitches for Helical Gears

To obtain a clear picture of the geometry of helical gears, you must understand the following five different pitches. The helical rack shown in Figure 8–21 will be used to describe and explain the different pitches of a helical gear.

Transverse circular pitch, p_t . The transverse circular pitch is the distance from a point on one tooth to the corresponding point on the next adjacent tooth, measured at the pitch line in the transverse plane. The transverse circular pitch is the length of line AB shown on the transverse plane and the tangential plane in Figure 8–21(d). This is the same definition used for spur gears. Then

◊ Transverse Circular Pitch

$$p_t = \pi D/N = \pi/P_d \quad (8-12)$$


Normal Circular Pitch, p_n . *Normal circular pitch* is the distance between corresponding points on adjacent teeth measured on the pitch surface in the normal direction. The normal circular pitch is the length of the line



(a) The three primary planes defining helical gears



(b) The tangential plane only

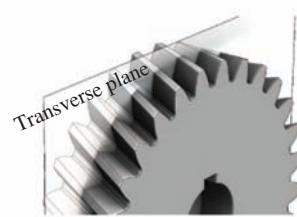

(c) The transverse plane only



(d) The normal plane only

FIGURE 8–20 Identities of the three primary planes for helical gears

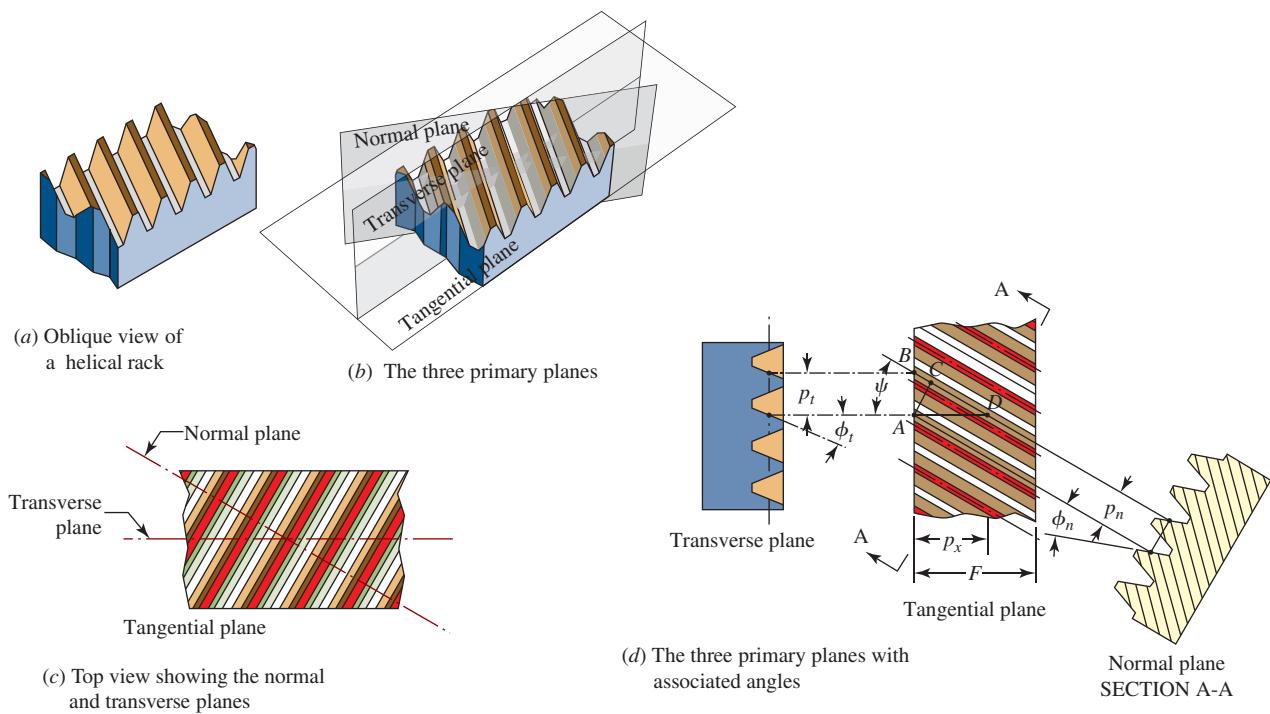


FIGURE 8-21 Identities of the three primary planes and associated angles shown on a helical rack

AC shown on the normal plane in Figure 8-21(d). The triangle ABC is a right triangle with the angle BAC equal to the helix angle. Pitches p_t and p_n are related by the following equation:

▷ Normal Circular Pitch

$$p_n = p_t \cos \psi \quad (8-13)$$

Axial Pitch, p_x . *Axial pitch* is the distance AD between corresponding points on adjacent teeth, measured on the pitch surface in the axial direction.

▷ Axial Pitch

$$p_x = p_t / \tan \psi = \pi(P_d / \tan \psi) = \pi m > \tan \psi \quad (8-14)$$

It is necessary to have at least two axial pitches in the face width to have the benefit of full helical action and its smooth transfer of the load from tooth to tooth. A convenient method of checking this concept is to compute the *face contact ratio* defined as:

$$\text{Face Contact Ratio} = F/P_x$$

The face contact ratio is also called the *helical overlap*. Then we can check a given design to ensure that

$$F/P_x > 2.0$$

Diametral Pitch, P_d . *Diametral pitch* is the ratio of the number of teeth in the gear to the pitch diameter. This is the same definition as the one for spur gears; it applies in considerations of the form of the teeth in the diametral or transverse plane. Thus, this pitch is sometimes called the *transverse diametral pitch*:

▷ Diametral Pitch

$$P_d = N/D \quad (8-15)$$

Normal Diametral Pitch, P_{nd} . Normal diametral pitch is the equivalent diametral pitch in the plane normal to the teeth:

▷ Normal Diametral Pitch

$$P_{nd} = P_d / \cos \psi \quad (8-16)$$

It is helpful to remember these relationships:

$$P_d p = \pi \quad (8-17)$$

$$P_{nd} p_n = \pi \quad (8-18)$$

Metric Module, m . As stated for spur gears, the metric module is essentially the inverse of the diametral pitch with the value reported in mm.

▷ Metric Module

$$m = D/N$$

This applies in the transverse plane of the gear.

Normal Metric Module, m_n . This is the inverse of the normal diametral pitch with the value reported in mm. It is the module in the plane normal to the gear tooth.

▷ Normal Metric Module

$$m_n = 1/P_{nd} = 1/(P_d / \cos \psi) = \cos \psi / P_d$$

$$m_n = \cos \psi / (N/D) = D \cos \psi / N = m \cos \psi \quad (8-19)$$

The use of Equations (8-11) through (8-16) is now illustrated in the following example problem.

**Example Problem
8–2**

A helical gear has a transverse diametral pitch of 12, a transverse pressure angle of $14\frac{1}{2}^\circ$, 28 teeth, a face width of 1.25 in, and a helix angle of 30° . Compute the transverse circular pitch, normal circular pitch, normal diametral pitch, axial pitch, pitch diameter, and the normal pressure angle. Compute the number of axial pitches in the face width.

Solution *Transverse Circular Pitch*
Use Equation (8–12):

$$p_t = \pi/P_d = \pi/12 = 0.262 \text{ in}$$

Normal Circular Pitch
Use Equation (8–13):

$$p_n = p_t \cos \psi = (0.262) \cos(30) = 0.227 \text{ in}$$

Normal Diametral Pitch
Use Equation (8–16)

$$P_{nd} = P_d / \cos \psi = 12 / \cos(30) = 13.856$$

Axial Pitch
Use Equation (8–14):

$$p_x = p_t / \tan \psi = 0.262 / \tan(30) = 0.453 \text{ in}$$

Pitch Diameter
Use Equation (8–15):

$$D = N/P_d = 28/12 = 2.333 \text{ in}$$

Normal Pressure Angle
Use Equation (8–11):

$$\phi_n = \tan^{-1}(\tan \phi_t \cos \psi)$$

$$\phi_n = \tan^{-1}[\tan(14\frac{1}{2}^\circ) \cos(30)] = 12.62^\circ$$

Number of Axial Pitches in the Face Width

$$F/p_x = 1.25/0.453 = 2.76 \text{ pitches}$$

Since this is greater than 2.0, there will be full helical action.

8–8 BEVEL GEAR GEOMETRY

Bevel gears are used to transfer motion between non-parallel shafts, usually at 90° to one another. The four primary styles of bevel gears are straight bevel, spiral bevel, zero spiral bevel, and hypoid. Figure 8–22 shows the general appearance of these four types of bevel gear sets. The surface on which bevel gear teeth are machined is inherently a part of a cone. The differences occur in the specific shape of the teeth and in the orientation of the pinion relative to the gear. (See References 3, 5, 14, and 16.)

Straight Bevel Gears

The teeth of a straight bevel gear are straight and lie along an element of the conical surface. See Figure 8–22 (a), (e) and (f). Lines along the face of the teeth through the pitch circle meet at the apex of the pitch cone. As shown in Figure 8–22(f), the centerlines of both the

pinion and the gear also meet at this apex. In the standard configuration, the teeth are tapered toward the center of the cone.

Key dimensions are specified either at the outer end of the teeth or at the mean, midface position. The relationships that control some of these dimensions are listed in Table 8–8 for the case when the shafts are at the 90° angle. The pitch cone angles for the pinion and the gear are determined by the ratio of the number of teeth, as shown in the table. Note that their sum is 90° . Also, for a pair of bevel gears having a ratio of unity, each has a pitch cone angle of 45° . Such gears, called *miter gears*, are used simply to change the direction of the shafts in a machine drive without affecting the speed of rotation.

You should understand that many more features need to be specified before the gears can be produced. Furthermore, many successful, commercially available gears are made in some nonstandard form. For example,

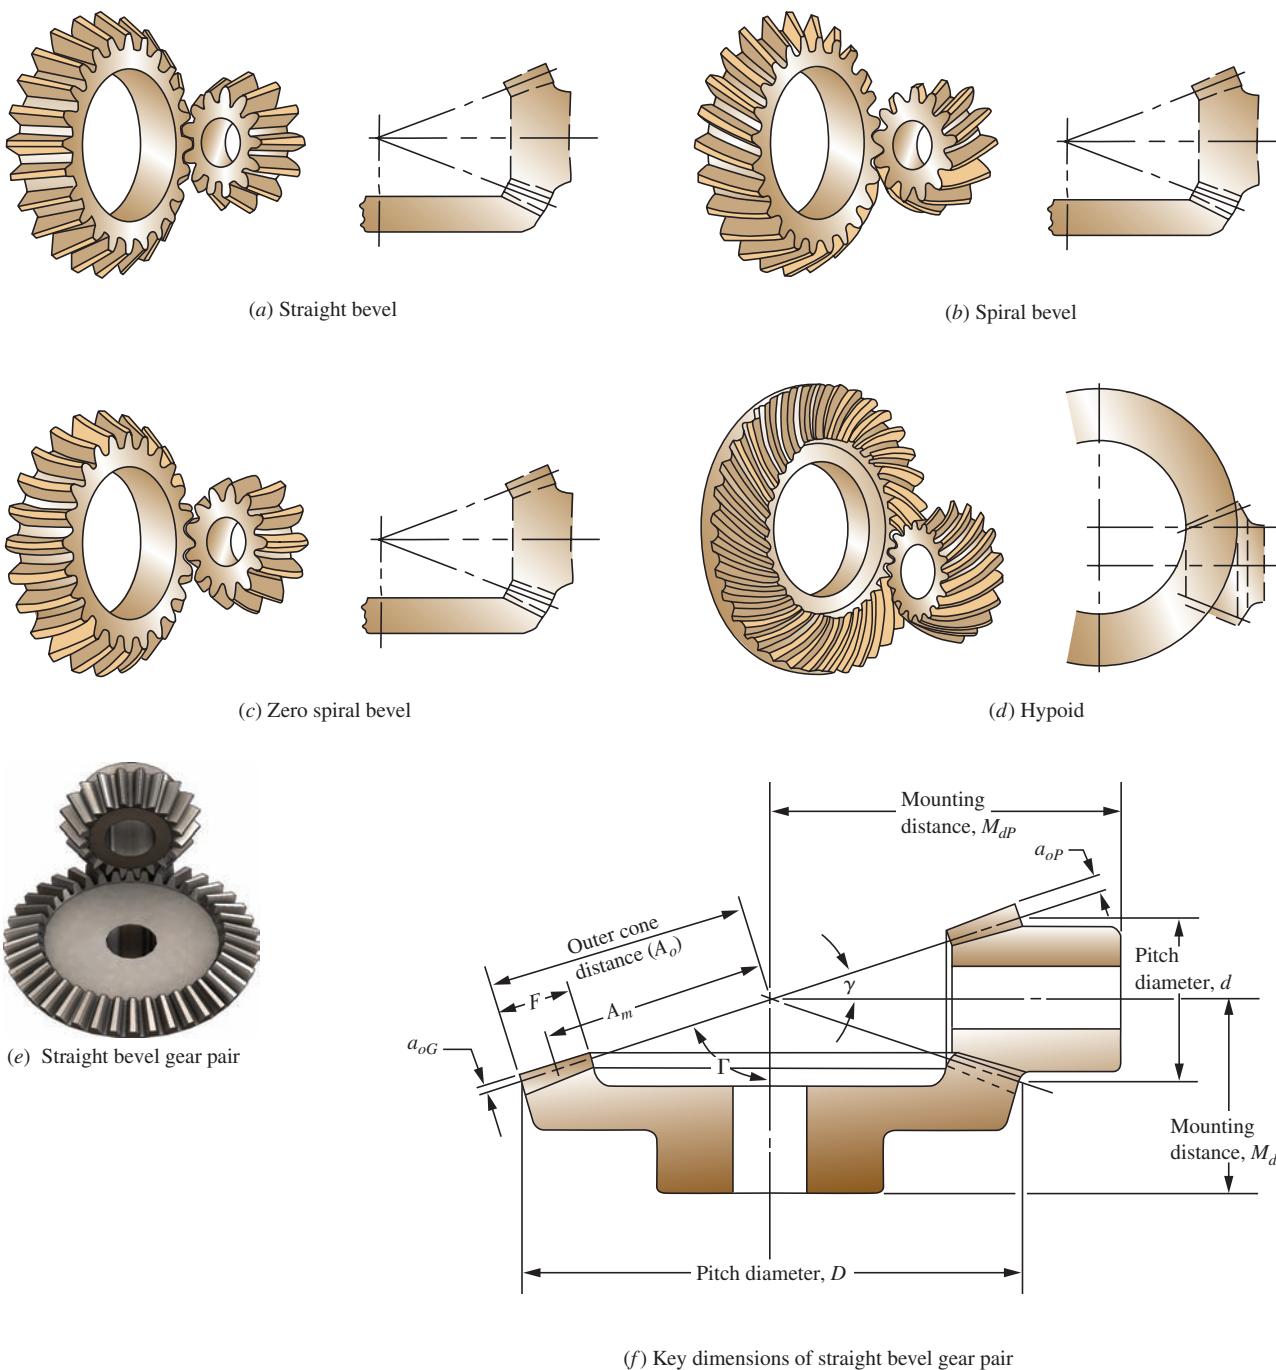


FIGURE 8-22 Types of bevel gears [Parts (a) through (d) extracted from ANSI/AGMA 2005-C96, *Design Manual for Bevel Gears*, with the permission of the publisher]

the addendum of the pinion is often made longer than that of the gear. Some manufacturers modify the slope of the root of the teeth to produce a uniform depth, rather than using the standard, tapered form. Reference 5 gives many more data.

The pressure angle, ϕ , is typically 20° , but 22.5° and 25° are often used to avoid interference. The minimum number of teeth for straight bevel gears is typically 12. More is said about the design of straight bevel gears in Chapter 10.

The mounting of bevel gears is critical if satisfactory performance is to be achieved. Most commercial gears have a defined mounting distance similar to that shown in Figure 8-22(f). It is the distance from some reference surface, typically the back of the hub of the gear, to the apex of the pitch cone. Because the pitch cones of the mating gears have coincident apices, the mounting distance also locates the axis of the mating gear. If the gear is mounted at a distance smaller than the recommended mounting distance, the teeth will

TABLE 8-8 Geometrical Features of Straight Bevel Gears

Given Diametral pitch = $P_d = N_p/d = N_g/D$ or $m = d/N_p = D/N_g$

where N_p = number of teeth in pinion

N_g = number of teeth in gear

| Dimension | Formula |
|-------------------------------|---|
| Gear ratio | $m_g = N_g/N_p$ |
| Pitch diameters: | |
| Pinion | $d = N_p/P_d$ or $d = mN_p$ |
| Gear | $D = N_g/P_d$ or $D = mN_g$ |
| Pitch cone angles: | |
| Pinion | $\gamma = \tan^{-1}(N_p/N_g)$ (lowercase Greek <i>gamma</i>) |
| Gear | $\Gamma = \tan^{-1}(N_g/N_p)$ (uppercase Greek <i>gamma</i>) |
| Outer cone distance | $A_o = 0.5D/\sin(\Gamma)$ |
| Face width must be specified: | $F =$ |
| Nominal face width | $F_{\text{nom}} = 0.30A_o$ |
| Maximum face width | $F_{\text{max}} = A_o/3$ or $F_{\text{max}} = 10/P_d$ or $m/2.54$ (whichever is less) |
| Mean cone distance | $A_m = A_o - 0.5F$ |
| | (Note: A_m is defined for the gear, also called A_{mg} .) |
| Mean circular pitch | $p_m = (\pi/P_d)(A_m/A_o)$ or $\pi m(A_m/A_o)$ |
| Mean working depth | $h = (2.00/P_d)(A_m/A_o)$ or $2.00 m(A_m/A_o)$ |
| Clearance | $c = 0.125h$ |
| Mean whole depth | $h_m = h + c$ |
| Mean addendum factor | $c_1 = 0.210 + 0.290/(m_g)^2$ |
| Gear mean addendum | $a_g = c_1 h$ |
| Pinion mean addendum | $a_p = h - a_g$ |
| Gear mean dedendum | $b_g = h_m - a_g$ |
| Pinion mean dedendum | $b_p = h_m - a_p$ |
| Gear dedendum angle | $\delta_g = \tan^{-1}(b_g/A_{mg})$ |
| Pinion dedendum angle | $\delta_p = \tan^{-1}(b_p/A_{mg})$ |
| Gear outer addendum | $a_{og} = a_g + 0.5F \tan \delta_g$ |
| Pinion outer addendum | $a_{op} = a_p + 0.5F \tan \delta_p$ |
| Gear outside diameter | $D_o = D + 2a_{og} \cos \Gamma$ |
| Pinion outside diameter | $d_o = d + 2a_{op} \cos \gamma$ |

likely bind. If it is mounted at a greater distance, there will be excessive backlash, causing noisy and rough operation.

Spiral Bevel Gears

The teeth of a spiral bevel gear are curved and sloped with respect to the surface of the pitch cone. See Figure 8-22(b). Spiral angles, ψ , of 20° to 45° are used, with 35° being

typical. Contact starts at one end of the teeth and moves along the tooth to its end. For a given tooth form and number of teeth, more teeth are in contact for spiral bevel gears than for straight bevel gears. The gradual transfer of loads and the greater average number of teeth in contact make spiral bevel gears smoother and allow smaller designs than for typical straight bevel gears. Recall that similar advantages were described for a helical gear relative to a spur gear.

The pressure angle, ϕ , is typically 20° for spiral bevel gears, and the minimum number of teeth is typically 12 to avoid interference. But nonstandard spiral gears allow as few as five teeth in the pinion of high-ratio sets if the tips of the teeth are trimmed to avoid interference. The rather high average number of teeth in contact (high contact ratio) for spiral gears makes this approach acceptable and can result in a very compact design. Reference 5 gives the relationships for computing the geometric features of spiral bevel gears that are extensions of those given in Table 8–8.

Zero Spiral Bevel Gears

The teeth of a zero spiral bevel gear are curved somewhat as in a spiral bevel gear, but the spiral angle is zero. See Figure 8–22(c). These gears can be used in the same mountings as straight bevel gears, but they operate more smoothly. They are sometimes called ZEROL® bevel gears.

Hypoid Gears

The major difference between hypoid gears and the others just described is that the centerline of the pinion for a set of hypoid gears is offset either above or below the centerline of the gear. See Figure 8–22(d). The teeth are designed specially for each combination of offset distance and spiral angle of the teeth. A major advantage is the more compact design that results, particularly when applied to vehicle drive trains and machine tools. (See References 5, 14, and 16 for more data.)

The hypoid gear geometry is the most general form of bevel gearing, and the others are special cases. The hypoid gear has an offset axis for the pinion, and its curved teeth are cut at a spiral angle. Then the spiral bevel gear is a hypoid gear with a zero offset distance. A ZEROL® bevel gear is a hypoid gear with a zero offset and a zero spiral angle. A straight bevel gear is a hypoid gear with a zero offset, a zero spiral angle, and straight teeth.

Example Problem

8–3

Compute the values for the geometrical features listed in Table 8–8 for a pair of straight bevel gears having a diametral pitch of 8, a 20° pressure angle, 16 teeth in the pinion, and 48 teeth in the gear. Specify a suitable face width. The shafts are at 90° .

Solution

Given $P_d = 8$; $N_p = 16$; $N_G = 48$.

Computed Values *Gear Ratio*

$$m_G = N_G/N_P = 48/16 = 3.000$$

Pitch Diameter
For the pinion,

$$d = N_P/P_d = 16/8 = 2.000 \text{ in}$$

For the gear,

$$D = N_G/P_d = 48/8 = 6.000 \text{ in}$$

Pitch Cone Angles
For the pinion,

$$\gamma = \tan^{-1}(N_P/N_G) = \tan^{-1}(16/48) = 18.43^\circ$$

For the gear,

$$\Gamma = \tan^{-1}(N_G/N_P) = \tan^{-1}(48/16) = 71.57^\circ$$

Outer Cone Distance

$$A_o = 0.5 D/\sin(\Gamma) = 0.5(6.00 \text{ in})/\sin(71.57^\circ) = 3.162 \text{ in}$$

Face Width

The face width must be specified based on the following guidelines:

Nominal face width:

$$F_{\text{nom}} = 0.30A_o = 0.30(3.162 \text{ in}) = 0.949 \text{ in}$$

Maximum face width:

$$F_{\text{max}} = A_o/3 = (3.162 \text{ in})/3 = 1.054 \text{ in}$$

or

$$F_{\text{max}} = 10/P_d = 10/8 = 1.25 \text{ in}$$

Therefore the face width should be in the range from 0.949 in to 1.054 in. Let's specify $F = 1.000$ in.

Mean Cone Distance

$$A_m = A_{mG} = A_o - 0.5F = 3.162 \text{ in} - 0.5(1.00 \text{ in}) = 2.662 \text{ in}$$

Ratio $A_m/A_o = 2.662/3.162 = 0.842$ (This ratio occurs in several following calculations.)
Mean Circular Pitch

$$p_m = (\pi/P_d)(A_m/A_o) = (\pi/8)(0.842) = 0.331 \text{ in}$$

Mean Working Depth

$$h = (2.00/P_d)(A_m/A_o) = (2.00/8)(0.842) = 0.210 \text{ in}$$

Clearance

$$c = 0.125h = 0.125(0.210 \text{ in}) = 0.026 \text{ in}$$

Mean Whole Depth

$$h_m = h + c = 0.210 \text{ in} + 0.026 \text{ in} = 0.236 \text{ in}$$

Mean Addendum Factor

$$c_1 = 0.210 + 0.290/(m_G)^2 = 0.210 + 0.290/(3.00)^2 = 0.242$$

Gear Mean Addendum

$$a_G = c_1 h = (0.242)(0.210 \text{ in}) = 0.051 \text{ in}$$

Pinion Mean Addendum

$$a_p = h - a_G = 0.210 \text{ in} - 0.051 \text{ in} = 0.159 \text{ in}$$

Gear Mean Dedendum

$$b_G = h_m - a_G = 0.236 \text{ in} - 0.051 \text{ in} = 0.185 \text{ in}$$

Pinion Mean Dedendum

$$b_P = h_m - a_P = 0.236 \text{ in} - 0.159 \text{ in} = 0.077 \text{ in}$$

Gear Dedendum Angle

$$\delta_G = \tan^{-1}(b_G/A_{mG}) = \tan^{-1}(0.185/2.662) = 3.975^\circ$$

Pinion Dedendum Angle

$$\delta_P = \tan^{-1}(b_P/A_{mG}) = \tan^{-1}(0.077/2.662) = 1.657^\circ$$

Gear Outer Addendum

$$a_{oG} = a_G + 0.5F \tan \delta_G$$

$$a_{oG} = (0.051 \text{ in}) + (0.5)(1.00 \text{ in}) \tan(1.657^\circ) = 0.0655 \text{ in}$$

Pinion Outer Addendum

$$a_{oP} = a_P + 0.5F \tan \delta_G$$

$$a_{oP} = (0.159 \text{ in}) + (0.5)(1.00 \text{ in}) \tan(3.975^\circ) = 0.1937 \text{ in}$$

Gear Outside Diameter

$$D_o = D + 2a_{oG} \cos \Gamma$$

$$D_o = 6.000 \text{ in} + 2(0.0655 \text{ in}) \cos(71.57^\circ) = 6.041 \text{ in}$$

Pinion Outside Diameter

$$d_o = d + 2a_{oP} \cos \gamma$$

$$d_o = 2.000 \text{ in} + 2(0.1937 \text{ in}) \cos(18.43^\circ) = 2.368 \text{ in}$$

8-9 TYPES OF WORMGEARING

Wormgearing is used to transmit motion and power between nonintersecting shafts, usually at 90° to each other. The drive consists of a worm on the high-speed shaft which has the general appearance of a power screw

thread: a cylindrical, helical thread. The worm drives a wormgear, which has an appearance similar to that of a helical gear. Figures 8-23 shows a typical worm and wormgear set. Sometimes the wormgear is referred to as a *worm wheel* or simply a *wheel* or *gear*. (See Reference 6.)

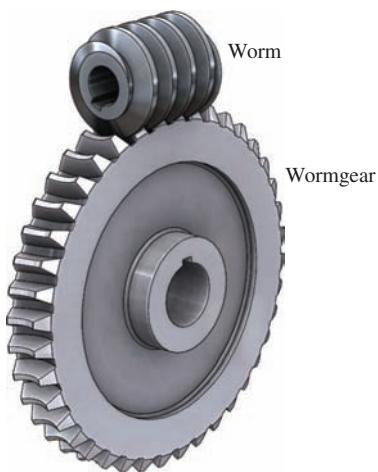


FIGURE 8-23 Worm and wormgear with a single-threaded worm

Worms and wormgears can be provided with either right hand or left hand threads on the worm and correspondingly designed teeth on the wormgear affecting the rotational direction of the wormgear.

Several variations of the geometry of wormgear drives are available. The most common one, shown in Figures 8-23 and 8-24, employs a cylindrical worm mating with a wormgear having teeth that are throated, wrapping partially around the worm. This is called a

single-enveloping type of wormgear drive. The contact between the threads of the worm and wormgear teeth is along a line, and the power transmission capacity is quite good. Many manufacturers offer this type of wormgear set as a stocked item. Installation of the worm is relatively easy because axial alignment is not very critical. However, the wormgear must be carefully aligned radially in order to achieve the benefit of the enveloping action. Figure 8-25 shows a cutaway of a commercial wormgear reducer.

A simpler form of wormgear drive allows a special cylindrical worm to be used with a standard spur gear or helical gear. Neither the worm nor the gear must be aligned with great accuracy, and the center distance is not critical. However, the contact between the worm threads and the wormgear teeth is theoretically a point, drastically reducing the power transmission capacity of the set. Thus, this type is used mostly for nonprecision positioning applications at low speeds and low power levels.

A third type of wormgear set is the *double-enveloping type* in which the worm is made in an hourglass shape and mates with an enveloping type of wormgear. This results in area contact rather than line or point contact and allows a much smaller system to transmit a given power at a given reduction ratio. However, the worm is more difficult to manufacture, and the alignment of both the worm and the wormgear is very critical.

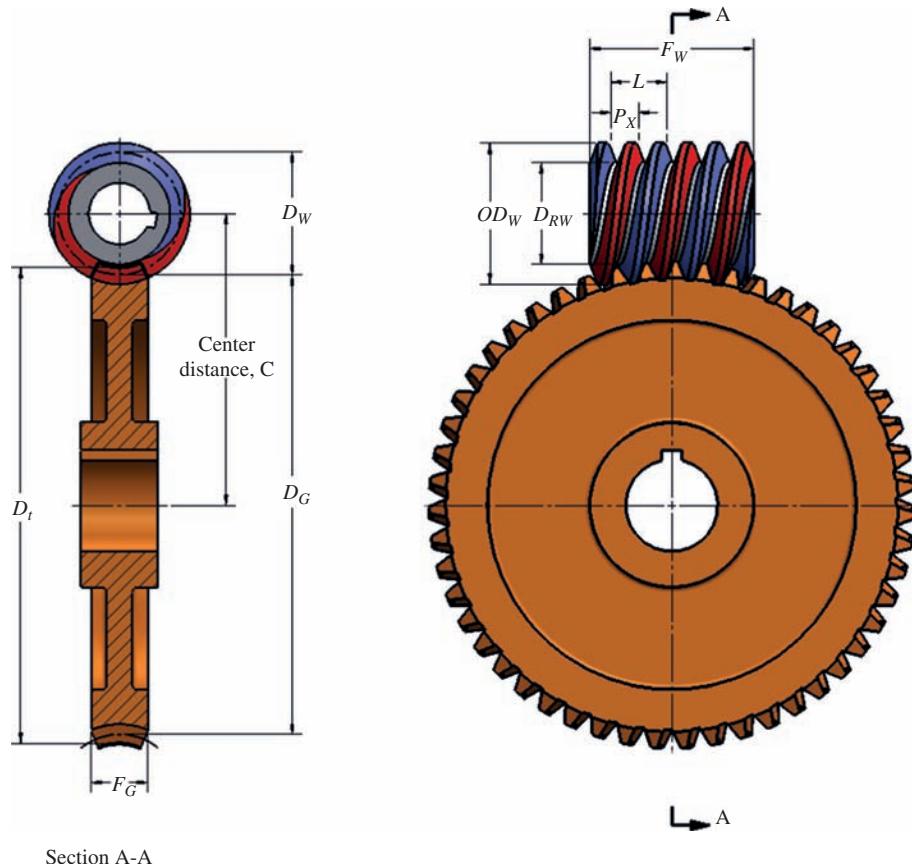


FIGURE 8-24 Single-enveloping wormgear set with a double-threaded worm

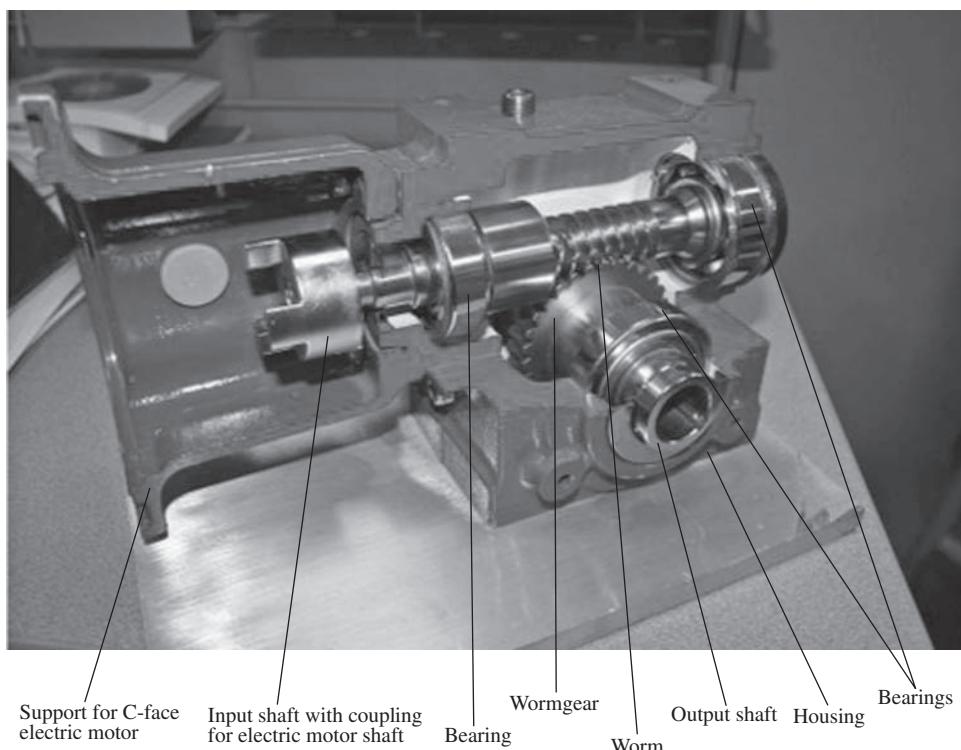


FIGURE 8-25 Cutaway view of a wormgear reducer
(Baldor/Dodge, Greenville, SC)

8-10 GEOMETRY OF WORMS AND WORMGEARS

Pitches, p , P_d , and m

A basic requirement of the worm and wormgear set is that the *axial pitch* of the worm must be equal to the *circular pitch* of the wormgear in order for them to mesh. Figure 8-24 shows the basic geometric features of a single-enveloping worm and wormgear set. *Axial pitch*, P_x , is defined as the distance from a point on the worm thread to the corresponding point on the next adjacent thread, measured axially on the pitch cylinder. As before, the circular pitch is defined for the wormgear as the distance from a point on a tooth on the pitch circle of the gear to the corresponding point on the next adjacent tooth, measured along the pitch circle. Thus, the circular pitch is an arc distance that can be calculated from

◇ Circular Pitch

$$p = \pi D_G / N_G \quad (8-20)$$

where D_G = pitch diameter of the gear

N_G = number of teeth in the gear

Some wormgears are made according to the circular pitch convention. But, as noted with spur gears, commercially available wormgear sets are usually made to a diametral pitch convention with the following pitches readily available: 48, 32, 24, 16, 12, 10, 8, 6, 5, 4, and

3. See Internet sites 2, 3, 10, and 11. The diametral pitch is defined for the gear as

◇ Diametral Pitch

$$P_d = N_G / D_G \quad (8-21)$$

The conversion from diametral pitch to circular pitch can be made from the following equation:

$$P_d p = \pi \quad (8-22)$$

Metric module worms and wormgears are available commercially with modules from 0.50 to 6.00. See Internet sites 9 and 10. As for other types of gears, the module is defined for the wormgear as

$$m = D/N$$

Then the pitch of the wormgear is $p = \pi m$ and this is also the axial pitch of the worm.

Number of Worm Threads, N_W

Worms can have a single thread, as in a typical screw, or multiple threads, usually 2 or 4, but sometimes 3, 5, 6, 8, or more. It is common to refer to the number of threads as N_W and then to treat that number as if it were the number of teeth in the worm. The number of threads in the worm is frequently referred to as the number of *starts*; this is convenient because if you look at the end of a worm, you can count the number of threads that start at the end and wind down the cylindrical worm.

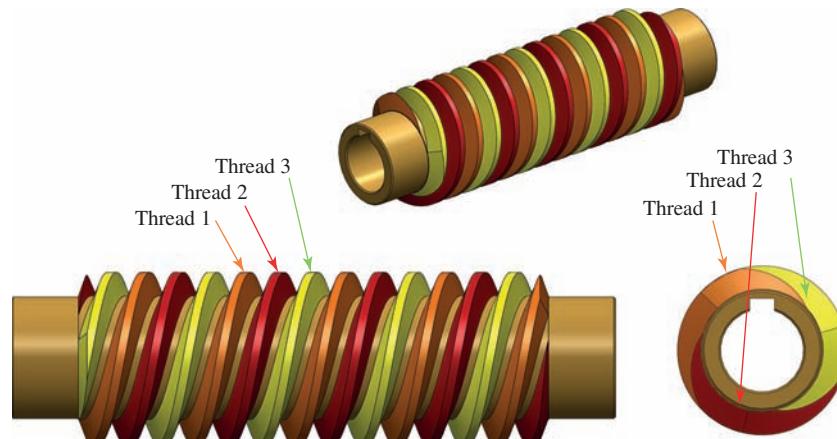


FIGURE 8-26 Worm with triple thread

Figure 8–26 shows a worm with a triple thread, with each thread shown as a different color.

Lead, L

The *lead* of a worm is the axial distance that a point on the worm would move as the worm is rotated one revolution. Lead is related to the axial pitch, P_x , by

▷ Lead

$$L = N_W P_x \quad (8-23)$$

See Figure 8–24 that shows the axial pitch and lead on a double-threaded worm.

Lead Angle, λ

The *lead angle* is the angle between the tangent to the worm thread and the line perpendicular to the axis of the worm. To visualize the method of calculating the lead angle, refer to Figure 8–27, which shows a simple triangle that would be formed if one thread of the worm were unwrapped from the pitch cylinder and laid flat

on the paper. The length of the hypotenuse is the length of the thread itself. The horizontal side is the lead, L . The vertical side is the circumference of the pitch cylinder, πD_W , where D_W is the pitch diameter of the worm. Then

▷ Lead Angle

$$\tan \lambda = L / \pi D_W \quad (8-24)$$

Pitch Line Speed, v_t

As before, the pitch line speed is the linear velocity of a point on the pitch line for the worm or the wormgear. For the worm having a pitch diameter D_W in, rotating at n_W rpm,

▷ Pitch Line Speed for worm

$$v_{tW} = \frac{\pi D_W n_W}{12} \text{ ft/min} \quad \text{or} \quad v_{tW} = \frac{\pi D_W n_W}{60000} \text{ m/s}$$

For the wormgear having a pitch diameter D_G in, rotating at n_G rpm,

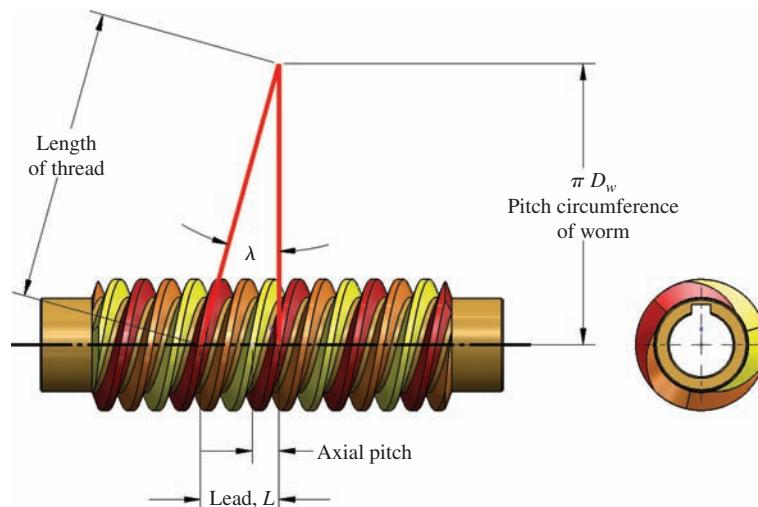


FIGURE 8-27 Lead angle

▷ **Pitch Line Speed for Gear**

$$\nu_{tG} = \frac{\pi D_G n_G}{12} \text{ ft/min} \quad \text{or} \quad \nu_{tG} = \frac{\pi D_G n_G}{60000} \text{ m/s}$$

Note that these two values for pitch line speed are *not* equal.

Velocity Ratio, VR

It is most convenient to calculate the velocity ratio of a worm and wormgear set from the ratio of the input rotational speed to the output rotational speed:

▷ **Velocity Ratio for Worm/Wormgear Set**

$$VR = \frac{\text{speed of worm}}{\text{speed of gear}} = \frac{n_W}{n_G} = \frac{N_G}{N_W} \quad (8-25)$$

Typical commercially available wormgear drives have ratios of 5, 7.5, 10, 12.5, 15, 20, 25, 30, 35, 40, 45, 50, 60, and 70. Drives may have a single worm/wormgear pair or two or more pairs in series. Of course, specially designed drives can have a virtually unlimited array of ratios within limits of size and practicality.

**Example Problem
8-4**

A wormgear has 52 teeth and a diametral pitch of 6. It mates with a triple-threaded worm that rotates at 1750 rpm. The pitch diameter of the worm is 2.000 in. Compute the circular pitch, the axial pitch, the lead, the lead angle, the pitch diameter of the wormgear, the center distance, the velocity ratio, and the rotational speed of the wormgear. See Figure 8-28.

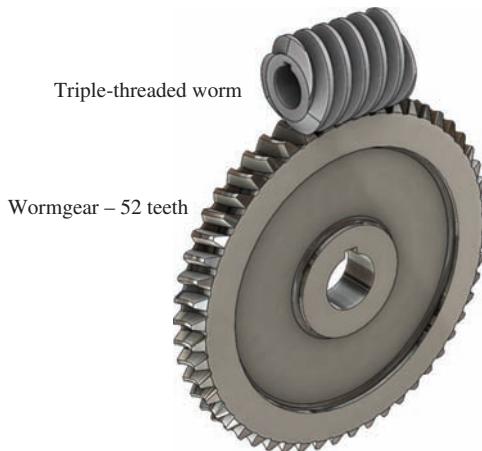


FIGURE 8-28 Worm and wormgear set for Example Problem 8-4

Solution Circular Pitch

$$p = \pi/P_d = \pi/6 = 0.5236 \text{ in}$$

Axial Pitch

$$P_x = p = 0.5236 \text{ in}$$

Lead

$$L = N_W P_x = (3)(0.5236) = 1.5708 \text{ in}$$

Lead Angle

$$\lambda = \tan^{-1}(L/\pi D_W) = \tan^{-1}(1.5708/\pi 2.000)$$

$$\lambda = 14.04^\circ$$

Gear Pitch Diameter

$$D_G = N_G/P_d = 52/6 = 8.667 \text{ in}$$

Center Distance

$$C = (D_W + D_G)/2 = (2.000 + 8.667)/2 = 5.333 \text{ in}$$

Velocity Ratio

$$VR = N_G/N_W = 52/3 = 17.333$$

Gear rpm

$$n_G = n_W/VR = 1750/17.333 = 101 \text{ rpm}$$

Pressure Angle

Most commercially available wormgears are made with pressure angles of $14\frac{1}{2}^\circ$, 20° , 25° , or 30° . The low pressure angles are used with worms having a low lead angle and/or a low diametral pitch. For example, a $14\frac{1}{2}^\circ$ pressure angle may be used for lead angles up to about 17° . For higher lead angles and with higher diametral pitches (smaller teeth), the 20° or 25° pressure angle is used to eliminate interference without excessive undercutting. The 20° pressure angle is the preferred value for lead angles up to 30° . From 30° to 45° of lead angle, the 25° pressure angle is recommended. Either the normal pressure angle, ϕ_n , or the transverse pressure angle, ϕ_t , may be specified. These are related by

▷ Pressure Angle

$$\tan \phi_n = \tan \phi_t \cos \lambda \quad (8-26)$$

Self-Locking Wormgear Sets

Self-locking is the condition in which the worm drives the wormgear, but if torque is applied to the gear shaft,

the worm does not turn. It is locked! This means the wormgear cannot back-drive the worm. The locking action is produced by the friction force between the worm threads and the wormgear teeth, and this is highly dependent on the lead angle. It is recommended that a lead angle no higher than about 5.0° be used in order to ensure that self-locking will occur. This lead angle usually requires the use of a single-threaded worm. Note that the triple-threaded worm in Example Problem 8-4 has a lead angle of 14.04° . It is *not* likely to be self-locking.

Although a worm gear set may be self-locking, they are not meant to be used as a holding device. If vibration and shock are present in the system, the worm gear set could back-drive. A brake should be designed in the system if a wormgear set is required not to backdrive, especially if safety is a concern.

Typical Designs of Wormgear Sets

Considerable latitude is permissible in the design of wormgear sets because the worm and wormgear combination is designed as a unit. However, there are some guidelines as shown next.

GENERAL GUIDELINES FOR WORM AND WORMGEAR DIMENSIONS ▼

Typical Tooth Dimensions

Table 8-9 shows typical values used for the dimensions of worm threads and gear teeth.

TABLE 8-9 Typical Tooth Dimensions for Worms and Wormgears

| Dimension | Formula |
|--------------------------|---------------------------------------|
| Addendum | $a = 0.3183P_x = 1/P_d$ |
| Whole depth | $h_t = 0.6866P_x = 2.157/P_d$ |
| Working depth | $h_k = 2a = 0.6366P_x = 2/P_d$ |
| Dedendum | $b = h_t - a = 0.3683P_x = 1.157/P_d$ |
| Root diameter of worm | $D_{rw} = D_w - 2b$ |
| Outside diameter of worm | $D_{ow} = D_w + 2a = D_w + h_k$ |
| Root diameter of gear | $D_{rg} = D_g - 2b$ |
| Throat diameter of gear | $D_t = D_g + 2a$ |

Worm Diameter

The diameter of the worm affects the lead angle, which in turn affects the efficiency of the set. For this reason, small diameters are desirable. But for practical reasons and proper

proportion with respect to the wormgear, it is recommended that the worm diameter be approximately $C^{0.875}/2.2$, where C is the center distance in inches between the worm and the wormgear. Variation of about 30% is allowed. (See Reference 6.) Thus, the worm diameter should fall in the range

▷ Wormgear Drive Center Distance-in

$$1.6 < \frac{C^{0.875}}{D_w} < 3.0 \quad (8-27)$$

For metric designs with dimensions in mm,

▷ Wormgear Drive Center Distance, mm

$$1.07 < \frac{C^{0.875}}{D_w} < 2.0 \quad (8-27M)$$

The recommended nominal worm diameter is approximately $C^{0.875}/1.54$.

But some commercially available wormgear sets fall outside this range, especially in the smaller sizes. Also, those worms designed to have a through-hole bored in them for installation on a shaft are typically larger than you would find from Equation (8-27). Proper proportion and efficient use of material should be the guide. The worm shaft must also be checked for deflection under operating loads. For worms machined integral with the shaft, the root of the worm threads determines the minimum shaft diameter. For worms having bored holes, sometimes called *shell worms*, care must be exercised to leave sufficient material between the thread root and the keyway in the bore. Figure 8-29 shows the recommended thickness above the keyway to be a minimum of one-half the whole depth of the threads.

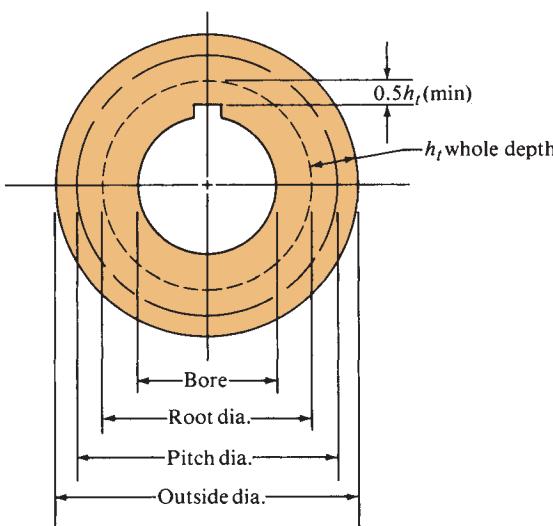


FIGURE 8-29 Shell worm

Wormgear Dimensions

We are concerned here with the single-enveloping type of wormgear, as shown in Figures 8-23 and 8-30. Its addendum, dedendum, and depth dimensions are assumed to be the same as those listed in Table 8-9, measured at the throat of the wormgear teeth. The throat is in line with the vertical centerline of the worm. The recommended face width for the wormgear is

Face Width of Wormgear

$$F_G = (D_{ow}^2 - D_W^2)^{1/2} \quad (8-28)$$

This corresponds to the length of the line tangent to the pitch circle of the worm and limited by the outside diameter of the worm. Any face width beyond this value would not be effective in resisting stress or wear, but a convenient value slightly greater than the minimum should be used. The outer edges of the wormgear teeth should be chamfered approximately as shown in Figure 8-30.

Another recommendation, which is convenient for initial design, is that the face width of the gear should be approximately 2.0 times the circular pitch. Because we are working in the diametral pitch system, we will use

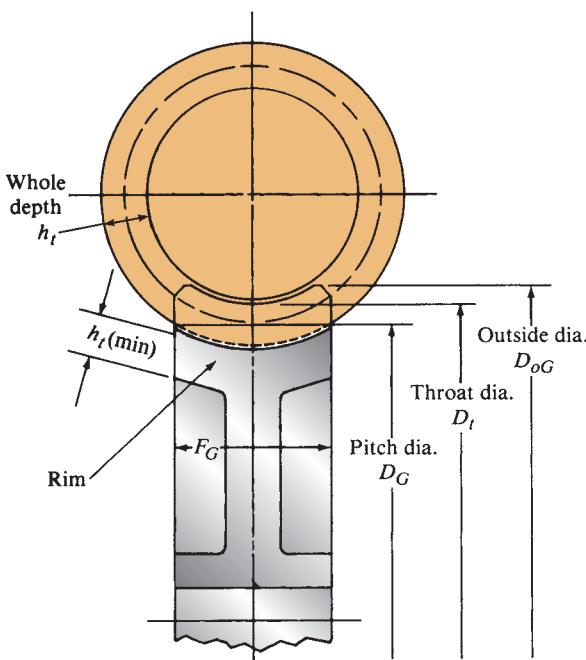


FIGURE 8-30 Wormgear details

$$F_G = 2p = 2\pi/P_d \quad (8-29)$$

However, since this is only approximate and 2π is approximately 6, we will use

$$F_G = 6/P_d \quad (8-30)$$

If the gear web is thinned, a rim thickness at least equal to the whole depth of the teeth should be left.

Face Length of the Worm

For maximum load sharing, the worm face length should extend to at least the point where the outside diameter of the worm intersects the throat diameter of the wormgear. This length is

Face Length of Worm

$$F_w = 2[(D_t/2)^2 - (D_G/2 - a)^2]^{1/2} \quad (8-31)$$

Example Problem

8-5

A worm and wormgear set is to be designed to produce a velocity ratio of 40. It has been proposed that the diametral pitch of the wormgear be 8, based on the torque that must be transmitted. (This will be discussed in Chapter 10.) Using the relationships presented in this section, specify the following:

Worm diameter, D_W

Number of threads in the worm, N_W

Number of teeth in the gear, N_G

Actual center distance, C

Face width of the gear, F_G

Face length of the worm, F_w

Minimum thickness of the rim of the gear

Solution

Many design decisions need to be made, and multiple solutions could satisfy the requirements. Presented here is one solution, along with comparisons with the various guidelines discussed in this section. This

type of analysis precedes the stress analysis and the determination of the power-transmitting capacity of the worm and wormgear drive which is discussed in Chapter 10.

Trial Design: Let's specify a double-threaded worm: $N_W = 2$. Then there must be 80 teeth in the wormgear to achieve a velocity ratio of 40. That is,

$$VR = N_G/N_W = 80/2 = 40$$

With the known diametral pitch, $P_d = 8$, the pitch diameter of the wormgear is

$$D_G = N_G/P_d = 80/8 = 10.000 \text{ in}$$

An initial estimate for the magnitude of the center distance is approximately $C = 6.50$ in. We know that it will be greater than 5.00 in, the radius of the wormgear. Using Equation (8-27), the recommended minimum size of the worm is

$$D_W = C^{0.875}/3.0 = 1.71 \text{ in}$$

Similarly, the maximum diameter should be

$$D_W = C^{0.875}/1.6 = 3.21 \text{ in}$$

A small worm diameter is desirable. Let's specify $D_W = 2.25$ in. The actual center distance is

$$C = (D_W + D_G)/2 = 6.125 \text{ in}$$

Worm Outside Diameter

$$D_{OW} = D_W + 2a = 2.25 + 2(1/P_d) = 2.25 + 2(1/8) = 2.50 \text{ in}$$

Whole Depth

$$h_t = 2.157/P_d = 2.157/8 = 0.270 \text{ in}$$

Face Width for Gear

Let's use Equation (8-28):

$$F_G = (D_{OW}^2 - D_W^2)^{1/2} = (2.50^2 - 2.25^2)^{1/2} = 1.090 \text{ in}$$

Let's specify $F_G = 1.25$ in.

Addendum

$$a = 1/P_d = 1/8 = 0.125 \text{ in}$$

Throat Diameter of Wormgear

$$D_t = D_G + 2a = 10.000 + 2(0.125) = 10.250 \text{ in}$$

Recommended Minimum Face Length of Worm

$$F_W = 2[(D_t/2)^2 - (D_G/2 - a)^2]^{1/2} = 3.16 \text{ in}$$

Let's specify $F_W = 3.25$ in.

Minimum Thickness of the Rim of the Gear

The rim thickness should be greater than the whole depth:

$$h_t > 0.270 \text{ in}$$

8-11 GEAR MANUFACTURE

The discussion of gear manufacture will begin with the method of producing the gear blank. Small gears are frequently made from wrought plate or bar, with the hub, web, spokes, and rim machined to final or near-final dimensions before the gear teeth are produced. The

face width and the outside diameter of the gear teeth are also produced at this stage. Other gear blanks may be forged, sand cast, or die cast to achieve the basic form prior to machining. A few gears in which only moderate precision is required may be die cast with the teeth in virtually final form.

Large gears are frequently fabricated from components. The rim and the portion into which the teeth are machined may be rolled into a ring shape from a flat bar and then welded. The web or spokes and the hub are then welded inside the ring. Very large gears may be made in segments with the final assembly of the segments by welding or by mechanical fasteners.

The popular methods of machining the gear teeth are form milling, shaping, and hobbing. (See References 11, 12 and 19.)

In *form milling* [Figure 8–31(a)], a milling cutter that has the shape of the tooth space is used, and each space is cut completely before the gear blank is indexed to the position of the next adjacent space. This method is used mostly for large gears, and great care is required to achieve accurate results.

Shaping [Figures 8–31(b) and 8–32] is a process in which the cutter reciprocates, usually on a vertical spindle. The shaping cutter rotates as it reciprocates and is fed into the gear blank. Thus, the involute-tooth form is

generated gradually. This process is frequently used for internal gears.


Scudding is a process similar to shaping but it is much faster, and closer to hobbing in production rate. The workpiece and the scudding cutter rotate synchronously and the cutter feeds directly through the workpiece. Both internal and external gears can be produced by scudding. See Internet site 12.

Hobbing [Figures 8–31(c) and (d) and 8–33] is a process similar to milling except that the workpiece (the gear blank) and the cutter (the hob) rotate in a coordinated fashion. Here also, the tooth form is generated gradually as the hob is fed into the blank.


The gear teeth are finished to greater precision after form milling, shaping, or hobbing by the processes of grinding, shaving, and honing. Being products of secondary processes, they are expensive and should be used only where the operation requires high accuracy in the tooth form and spacing. Figure 8–34 shows a gear grinding machine.




(a) Form milling cutter

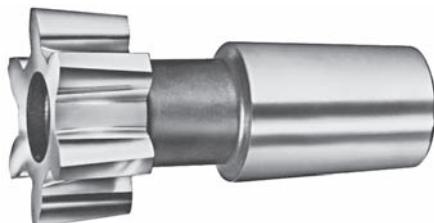

(b) Spur gear shaper cutter

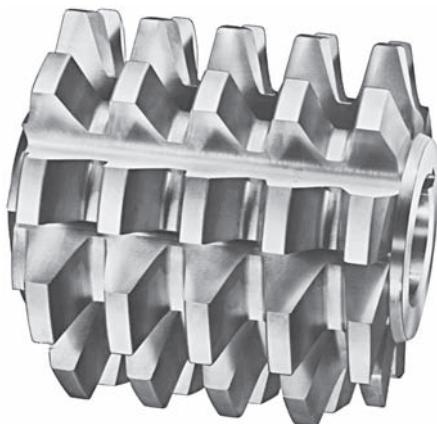


(c) Hob for small pitch gears having large teeth

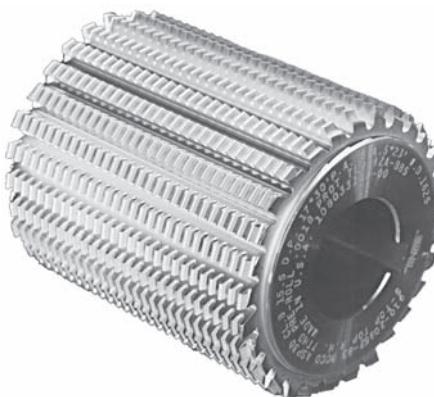

(d) Hob for high pitch gears having small teeth


FIGURE 8–31 A variety of gear cutting tools (Courtesy of Gleason Cutting Tools Corporation)

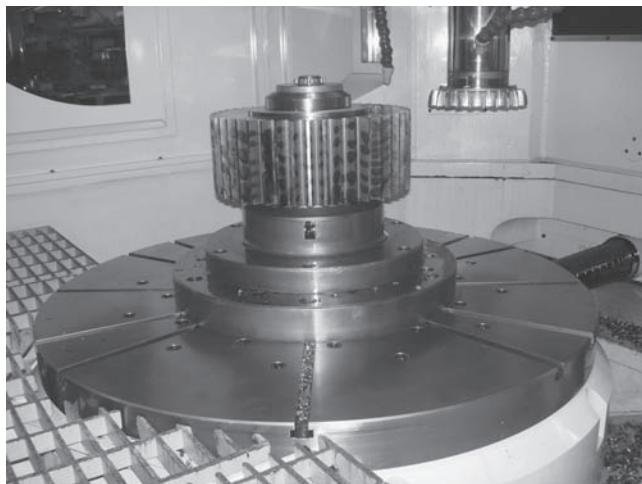


(a) Gear being shaped with shaping cutter




(b) Gear shaping machine

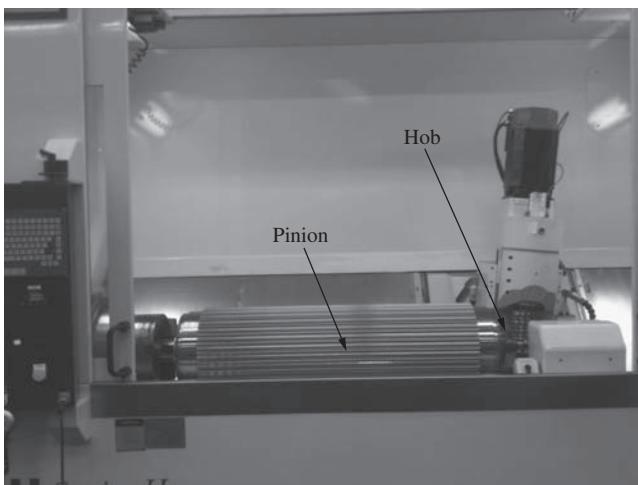FIGURE 8-32 Gear shaping operation and shaping machine (Supplied by Bourn & Koch Inc)

(a) Long pinion and a hob in a hobbing machine

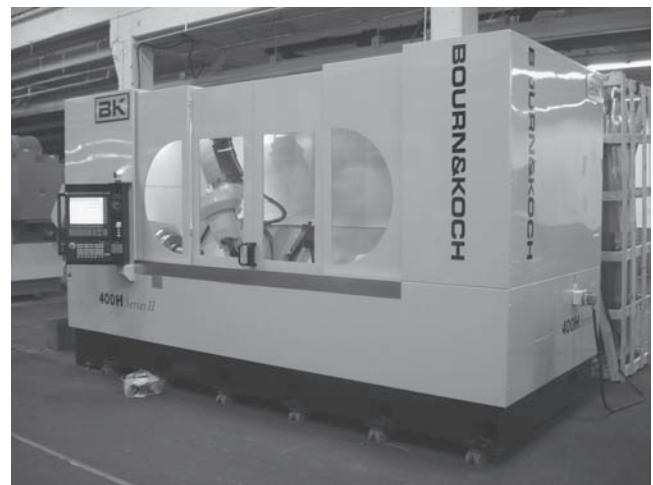

(b) Large hobbing machine

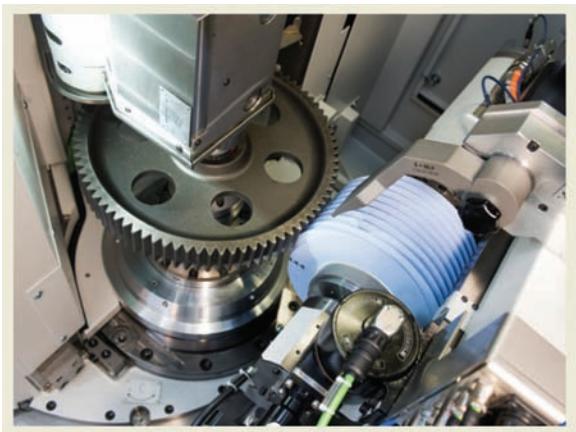FIGURE 8-33 Gear hobbing operation and hobbing machine (Supplied by Bourn & Koch Inc)

(a) Gear with grinding wheel



(b) Gear grinding machine

FIGURE 8-34 Gear grinding operation and grinding machine (Supplied by Bourn & Koch Inc)

8-12 GEAR QUALITY

Ensuring proper dimensional accuracy of power-transmission gears is essential to their suitability for use in machinery. Stresses in gears, smoothness of operation, life, and noise are affected by the degree of precision obtained in manufacturing. References 2, 8, and 12 provide comprehensive treatments of gear quality. Here, we give an overview of the fundamentals and equipment used to measure gear quality.

Quality in gearing is indicated by either of two methods: (1) the composite variation of a product test gear rotating in mesh with a precise master gear, called *functional measurement* or (2) the precision of specific features of a single gear, called *analytical measurement*. These two methods are described next.

Functional Measurement

Functional measurement employs a device called a *double flank roll tester* to measure the *total radial composite deviation* and the *tooth-to-tooth radial composite*


variation. Figure 8–35 shows a photograph (a) of one commercially available roll tester and a schematic diagram of its construction (b). The primary features of the physical testing device are:

1. Fixed mounting of the axis for the product gear to be tested
2. Mounting for an accurate master gear on a linearly movable slide with means for maintaining full double flank contact between the two gears
3. Measurement device for indicating the movement of the axis for the master gear as the product gear rotates one complete revolution
4. Recorder to display the total excursion of the master gear during the cycle

Figure 8–36 shows an example of a test report for a gear generated by the double-flank roll tester shown in part (a). Shown are the *Total composite error*, the *Tooth-to-tooth error*, and the *Runout*. These data are sensitive to the amount of radial force exerted on the test gear by the master gear and that force is indicated on the test report; 13 oz in this example.



(a) Double flank roll testing device (PECO - Process Equipment Company)

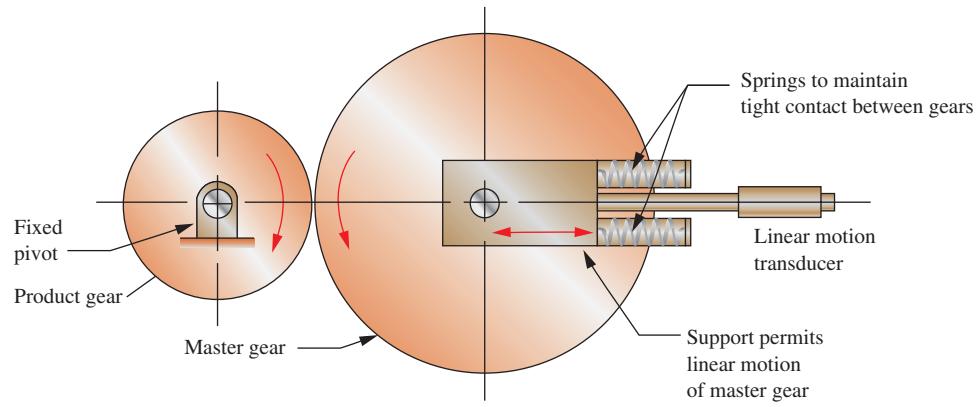

(b) Schematic diagram of double flank roll tester

FIGURE 8-35 Radial composite deviation testing of gears “Penta Gear Metrology, Dayton, Ohio”



FIGURE 8-36 Example of a report from a double flank roll test of a gear.

Analytical Measurement

Analytical measurement measures numerous features of individual teeth using a highly sensitive probe moving over the surface of the tooth under the control of a specially designed coordinate measurement machine (CMM). The computer in the complete system guides the probe over specified trajectories while accurately measuring its position. Figure 8–37(a) shows a commercially available system. Figure 8–37(b) shows a test gear in position for making the measurements using sensitive probes that can be seen at the right of the gear. The probe is guided over a prescribed path, making a complete survey of the geometry of the tooth features described next.

Figure 8–38 shows an example report giving extensive detailed information about the test gear provided by an analytical measurement system. On the left side are graphs for the *Profile* and *Helix* variations on both the right and left sides for selected teeth on the gear.

On the right side, data are reported on *Index Variation*, *Pitch Variation*, *Pitch Line Runout*, and *Tooth Thickness*.

Profile: The measurement of the actual profile of the surface of a gear tooth from the point of the start of the active profile to the tip of the tooth. The theoretical profile is a true involute curve. Variations of the actual profile from the theoretical profile cause variations in the instantaneous velocity ratio between the two gears in

mesh, affecting the smoothness of the motion and noise.

Helix: The deviation of the actual line on the gear tooth surface at the pitch circle from the theoretical line. Measurements are made across the face from one end to the other. For a spur gear, the theoretical line is straight. For a helical gear, it is a part of a helix. Helix measurement is sometimes called the *tooth alignment* measurement. It is important because excessive misalignment causes nonuniform loading on the gear teeth.

Index variation: The difference between the actual location of a point on the face of a gear tooth at the pitch circle and the corresponding point of a reference tooth measured on the pitch circle. The variation causes inaccuracy in the action of mating gear teeth.

Pitch variation: The measurement of the variation of the pitch between gear teeth through a complete revolution.


Pitch line runout: A measure of the eccentricity and out of roundness of a gear. Excessive runout causes the contact point on mating gear teeth to move radially during each revolution.

Tooth thickness: A measure of the thickness of each tooth on the gear.

As the analytical measurement system completes its tests, comparisons are automatically made with the theoretical tooth forms and with tolerance values from the



(a) Analytical gear measurement system

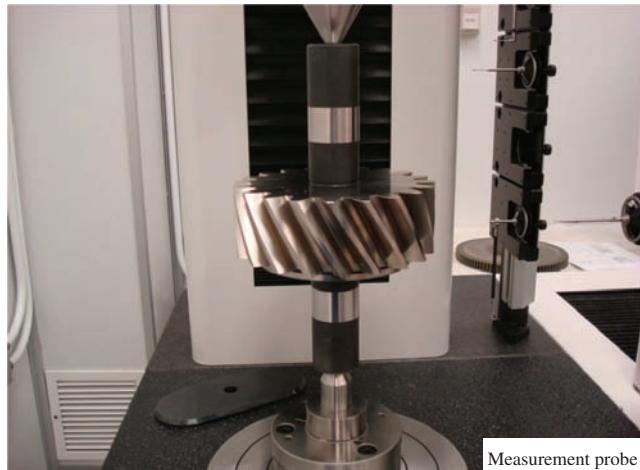

(b) Gear installed in an analytical gear measurement system. Note probe at right.

FIGURE 8–37 Analytical measurement system for gear quality “Penta Gear Metrology, Dayton, Ohio” (PECO- Process Equipment Company)

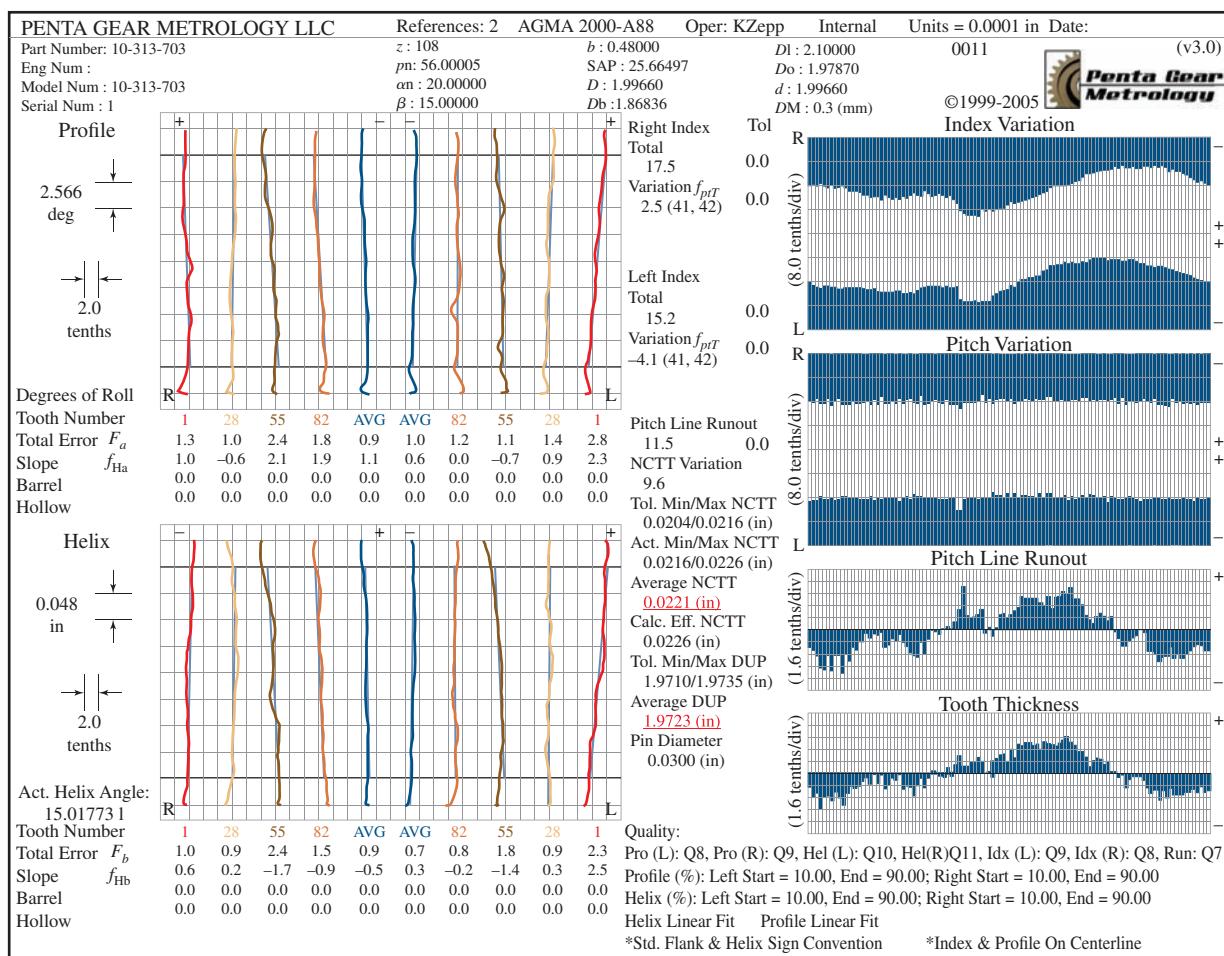


FIGURE 8-38 Example test data report for an analytical measurement of a helical gear “Penta Gear Metrology, Dayton, Ohio”

applicable standard (described in Chapter 9.) to report the resulting *quality number*. The data are also useful to manufacturing staff for making adjustments to gear cutting and grinding machine control settings to improve the accuracy of the total process.

Using the general capabilities of the analytical measurement system, dimensions of features other than those of the gear teeth may also be determined while the gear is in its fixture. For example, when a gear is machined onto a shaft, diameters, keyseats, shoulder fillets, and other geometric features may be checked for dimensions, perpendicularity, parallelism, and concentricity. Gear segments, composite gears having two or more gears on the same shaft, splines, and cam surfaces can also be measured.

8-13 VELOCITY RATIO AND GEAR TRAINS

A gear train is one or more pairs of gears operating together to transmit power.

Normally there is a speed change from one gear to the next due to the different sizes of the gears in mesh. The fundamental building block of the total speed change

ratio in a gear train is the *velocity ratio* between two gears in a single pair.

Velocity Ratio

The velocity ratio (VR) is defined as the ratio of the rotational speed of the input gear to that of the output gear for a single pair of gears.

To develop the equation for computing the velocity ratio, it is helpful to view the action of two gears in mesh, as shown in Figure 8-39. The action is equivalent to the action of two smooth wheels rolling on each other without slipping, with the diameters of the two wheels equal to the pitch diameters of the two gears. Remember that when two gears are in mesh, their pitch circles are tangent, obviously, the gear teeth prohibit any slipping.

As shown in Figure 8-39, without slipping there is no relative motion between the two pitch circles at the pitch point, and therefore the tangential linear velocity of a point on either pitch circle is the same. We will use the symbol v_t for this velocity. The linear velocity of a point that is in rotation at a distance R from its center

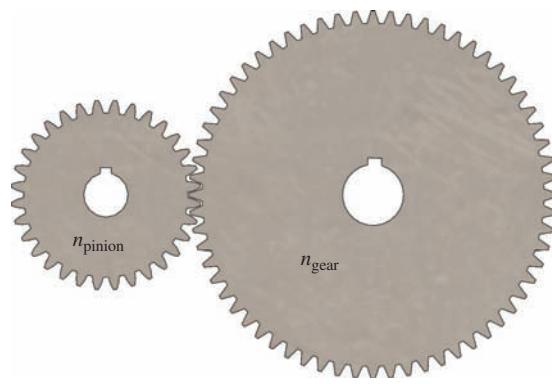


FIGURE 8-39 Two spur gears in mesh with the pinion driving the gear

of rotation and rotating with an angular velocity, ω , is found from

◊ **Pitch Line Speed of a Gear**

$$v_t = R \omega \quad (8-32)$$

Using the subscript P for the pinion and G for the gear for two gears in mesh, we have

$$v_t = R_P \omega_P \quad \text{and} \quad v_t = R_G \omega_G$$

This set of equations says that the pitch line speeds of the pinion and the gear are the same. Equating these two and solving for ω_P/ω_G gives our definition for the velocity ratio, VR :

$$VR = \omega_P/\omega_G = R_G/R_P$$

In general, it is convenient to express the velocity ratio in terms of the pitch diameters, the rotational speeds, or

the numbers of teeth of the two gears in mesh. Remember that

$$R_G = D_G/2$$

$$R_P = D_P/2$$

$$D_G = N_G/P_d$$

$$D_P = N_P/P_d$$

n_P = rotational speed of the pinion (in rpm)

n_G = rotational speed of the gear (in rpm)

The velocity ratio can then be defined in any of the following ways:

◊ **Velocity Ratio for Gear Pair**

$$VR = \frac{\omega_P}{\omega_G} = \frac{n_P}{n_G} = \frac{R_G}{R_P} = \frac{D_G}{D_P} = \frac{N_G}{N_P} = \frac{\text{speed}_P}{\text{speed}_G} = \frac{\text{size}_G}{\text{size}_P} \quad (8-33)$$

Another useful form for velocity ratio is shown next and is used in following example problems.

$$VR = \frac{\omega_{\text{input}}}{\omega_{\text{output}}} = \frac{N_{\text{output}}}{N_{\text{input}}}$$

Most gear drives are *speed reducers*; that is, their output speed is lower than their input speed. This results in a velocity ratio greater than 1. If a *speed increaser* is desired, then VR is less than 1. Note that not all books and articles use the same definition for velocity ratio. Some define it as the ratio of the output speed to the input speed, the inverse of our definition. It is thought that the use of VR greater than 1 for the reducer—that is, the majority of the time—is more convenient.

Let's look at examples of both a speed decreaser and a speed increaser.

**Example Problem
8-6**

- a. Figure 8-40 shows a gear pair in which a 20-tooth pinion drives a 40-tooth gear. The pinion has an angular velocity of 1000 rpm. Determine the velocity ratio and the angular velocity of the gear.

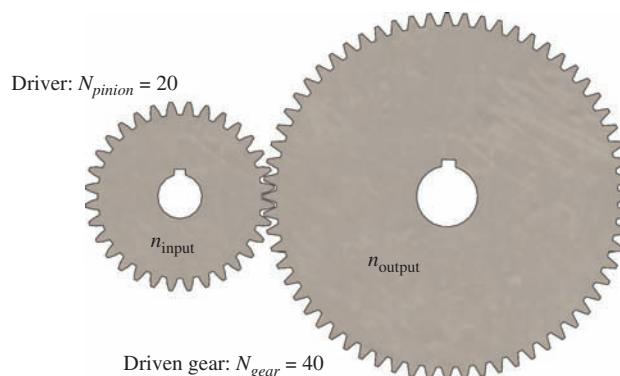


FIGURE 8-40 Speed decreaser gear drive

The pinion is the input that drives the gear. The gear is the output that is driven by the pinion. The velocity ratio is:

$$VR = \frac{\omega_{\text{input}}}{\omega_{\text{output}}} = \frac{N_{\text{output}}}{N_{\text{input}}} = \frac{40}{20} = \frac{2}{1}$$

This gear drive system is a speed reducer where the input angular velocity is twice the output angular velocity. The output angular velocity can be determined by:

$$\begin{aligned} VR &= \frac{\omega_{\text{input}}}{\omega_{\text{output}}} \\ \omega_{\text{output}} &= \frac{\omega_{\text{input}}}{VR} = \frac{1000 \text{ rpm}}{2} = 500 \text{ rpm} \end{aligned}$$

The input angular velocity is 1000 rpm and the velocity ratio is 2 which gives us an output angular velocity of 500 rpm.

- b. Let's take the gear and place it on the input drive shaft and place the pinion on the output drive shaft as shown in Figure 8–41. The 40-tooth gear is now the input and drives the 20-tooth pinion which is now the output. Determine the velocity ratio and the output angular velocity if the input shaft rotates at 1000 rpm.

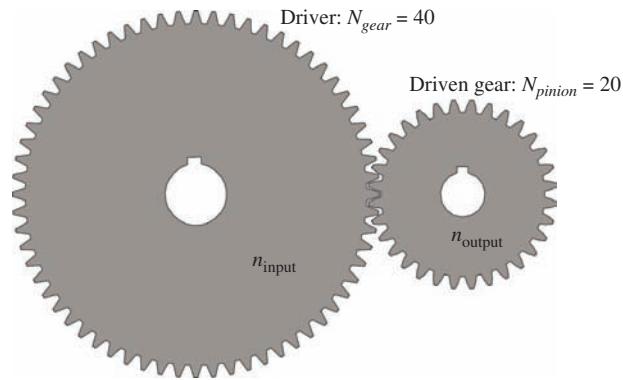


FIGURE 8–41 Speed increaser gear drive

In this example, the gear is the input and drives the pinion. The pinion is the output and is driven by the gear. The velocity ratio is:

$$VR = \frac{\omega_{\text{input}}}{\omega_{\text{output}}} = \frac{N_{\text{output}}}{N_{\text{input}}} = \frac{20}{40} = \frac{1}{2}$$

This gear drive system is a speed increaser. The output angular velocity can be determined:

$$\begin{aligned} VR &= \frac{\omega_{\text{input}}}{\omega_{\text{output}}} \\ \omega_{\text{output}} &= \frac{\omega_{\text{input}}}{VR} = \frac{1000 \text{ rpm}}{0.5} = 2000 \text{ rpm} \end{aligned}$$

Keeping the input angular velocity at 1000 rpm, the velocity ratio is 1/2 which gives us an output angular velocity of 2000 rpm. While most gear drives are speed reducers, some gear drives are speed increasers.

Train Value

When more than two gears are in mesh, the term train value (TV) refers to the ratio of the input speed (for the first gear in the train) to the output speed (for the last gear in the train). By definition the train value is the product of the values of VR for

each gear pair in the train. In this definition, a gear pair is any set of two gears with a driver and a follower (driven) gear.

Again, TV will be greater than 1 for a reducer and less than 1 for an increaser. For example, consider the gear train shown in Figure 8–42. The input is through the

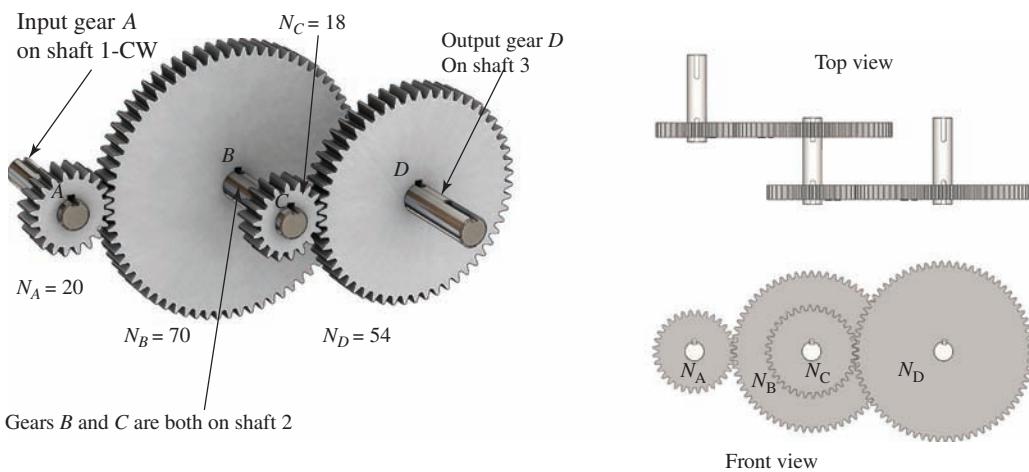


FIGURE 8-42 Double-reduction gear train

shaft carrying gear A. Gear A drives gear B. Gear C is on the same shaft with gear B and rotates at the same speed. Gear C drives gear D, which is connected to the output shaft. Then gears A and B constitute the first gear pair, and gears C and D constitute the second pair. The velocity ratios are

$$VR_1 = n_A/n_B \quad VR_2 = n_C/n_D$$

The train value is

$$TV = (VR_1)(VR_2) = \frac{n_A n_C}{n_B n_D}$$

But, because they are on the same shaft, $n_B = n_C$, and the preceding equation reduces to

$$TV = n_A/n_D$$

This is the input speed divided by the output speed, the basic definition of the train value. This process can be expanded to any number of stages of reduction in a gear train.

Remember that any of the forms for velocity ratio shown in Equation (8-33) can be used for computing the train value. In design, it is often most convenient to express the velocity ratio in terms of the numbers of teeth in each gear because they must be integers. Then, once the diametral pitch or module is defined, the values of the diameters or radii can be determined.

The train value of the double-reduction gear train in Figure 8-42 can be expressed in terms of the numbers of teeth in the four gears as follows:

$$VR_1 = N_B/N_A$$

Note that this is the number of teeth in the *driven gear* B divided by the number of teeth in the *driving gear* A. This is the typical format for velocity ratio. Then VR_2 can be found similarly:

$$VR_2 = N_D/N_C$$

Thus, the train value is

$$TV = (VR_1)(VR_2) = (N_B/N_A)(N_D/N_C)$$

This is usually shown in the form

⇒ Train Value

$$TV = \frac{N_B N_D}{N_A N_C}$$

$$TV = \frac{\text{product of number of teeth in the driven gears}}{\text{product of number of teeth in the driving gears}} \quad (8-34)$$

This is the form for train value that we will use most often.

The direction of rotation can be determined by observation, noting that there is a direction reversal for each pair of external gears.

We will use the term positive train value to refer to one in which the input and output gears rotate in the same direction. Conversely, if they rotate in the opposite direction, the train value will be negative.

Example Problem 8-7

For the gear train shown in Figure 8-42, if the input shaft rotates at 1750 rpm clockwise, compute the speed of the output shaft and its direction of rotation.

Solution We can find the output speed if we can determine the train value:

$$TV = n_A/n_D = \text{input speed}/\text{output speed}$$

Then

$$n_D = n_A/TV$$

But

$$TV = (VR_1)(VR_2) = \frac{N_B}{N_A} \frac{N_D}{N_C} = \frac{70}{20} \frac{54}{18} = \frac{3.5}{1} \frac{3.0}{1} = \frac{10.5}{1} = 10.5$$

Now

$$n_D = n_A/TV = (1750 \text{ rpm})/10.5 = 166.7 \text{ rpm}$$

Gear A rotates clockwise; gear B rotates counterclockwise.

Gear C rotates counterclockwise; gear D rotates clockwise.

Thus, the train in Figure 8–42 is a positive train.

Idler Gear

The gear train shown in Figure 8–42 is sometimes referred to as a compound gear train. A compound gear has two gears mounted on one shaft. Gears B and C are mounted on the same shaft and would be considered compound gears. Since gears B and C are mounted on the same shaft, they also have the same angular velocity. Figure 8–43 shows a gear train that has only one gear mounted on each shaft and is referred to as a simple gear train.

The train value for the simple gear train can be expressed as the ratio of the number of teeth of the output gear to the number of teeth of the input gear. Looking at the first two gears in the drive train, gear A is the driving gear and gear B is the driven gear. The velocity ratio for these two gears in mesh is:

$$VR_1 = \frac{N_B}{N_A}$$

The next set of gears in mesh are gear B which is the driving gear and gear C which is the driven gear. The velocity ratio for this gear set is:

$$VR_2 = \frac{N_C}{N_B}$$

Similarly, the velocity ratios can be determined for each of the remaining gear sets in mesh.

$$VR_3 = \frac{N_D}{N_C}$$

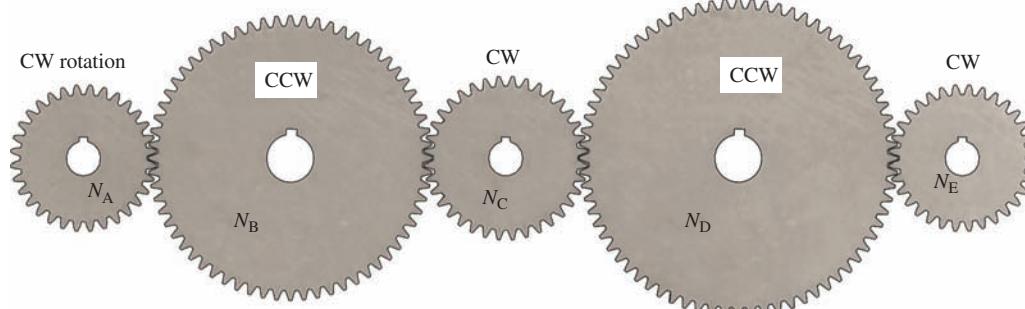


FIGURE 8–43 Simple gear train

$$VR_4 = \frac{N_E}{N_D}$$

Thus the train value for the simple gear train is:

$$TV = \frac{\omega_A}{\omega_E} = (VR_1)(VR_2)(VR_3)(VR_4)$$

Substituting the number of gear teeth into the equation, the train value is:

$$TV = \frac{\omega_A}{\omega_E} = \frac{N_B}{N_A} \cdot \frac{N_C}{N_B} \cdot \frac{N_D}{N_C} \cdot \frac{N_E}{N_D}$$

This equation can be reduced by cancelling the number of teeth of gears B, C, and D. This leaves the following train value:

$$TV = \frac{\omega_A}{\omega_E} = \frac{N_E}{N_A}$$

The train value or velocity ratio of the entire gear drive system is reduced to the ratio of the number of teeth on the output gear to the number of teeth on the input gear. Gears B, C, and D, do not have any effect on the ratio. These gears are classified as *idler gears*.

The example above introduces the concept of the idler gear, defined as follows:

Any gear in a gear train that performs as both a driving gear and a driven gear is called an idler gear or simply an idler.

The main features of an idler are as follows:

1. An idler does not affect the train value of a gear train because, since it is both a driver and driven gear, its number of teeth appears in both the numerator and denominator of the train value equation, Equation (8-34)
2. Placing an idler in a gear train causes a direction reversal of the output gear. In Figure 8-43, input

gear A rotates clockwise and output gear E also rotates clockwise. If any one of the idler gears B, C, or D is removed, the direction of rotation of the output gear E will be counter-clockwise.

3. An idler gear may be used to fill a space between two gears in a gear train when the desired distance between their centers is greater than the center distance for the two gears alone.

Example Problem 8-8

Determine the train value for the train shown in Figure 8-44. If the shaft carrying gear A rotates at 1750 rpm clockwise, compute the speed and the direction of the shaft carrying gear E.

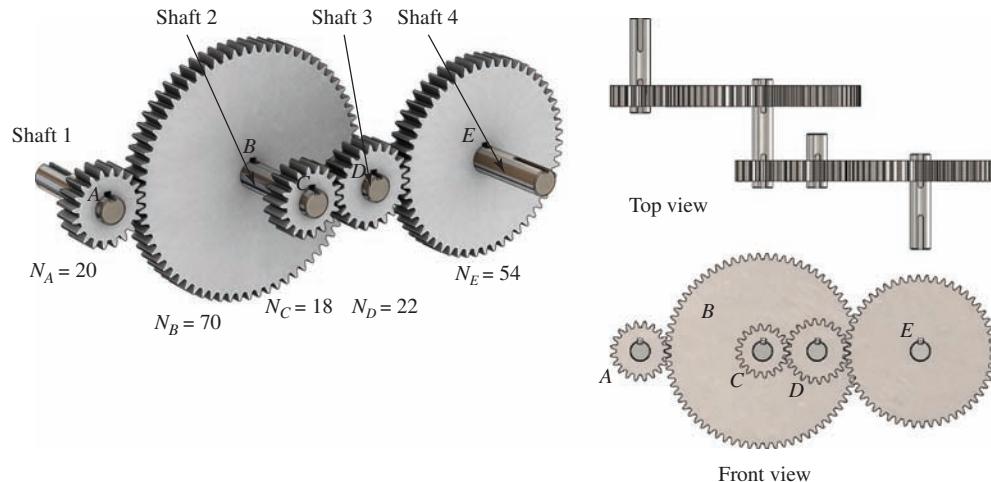


FIGURE 8-44 Double-reduction gear train with an idler. Gear D is an idler

Solution Look first at the direction of rotation. Remember that a gear pair is defined as any two gears in mesh (a driver and a follower). There are actually three gear pairs:

Gear A drives gear B: A rotates clockwise; B, counterclockwise.

Gear C drives gear D: C rotates counterclockwise; D, clockwise.

Gear D drives gear E: D rotates clockwise; E, counterclockwise.

Because gears A and E rotate in opposite directions, the train value is negative. Now

$$TV = -(VR_1)(VR_2)(VR_3)$$

In terms of the number of teeth,

$$TV = -\frac{N_B}{N_A} \frac{N_D}{N_C} \frac{N_E}{N_D}$$

Note that the number of teeth in gear D appears in both the numerator and the denominator and thus can be canceled. The train value then becomes

$$TV = -\frac{N_B}{N_A} \cdot \frac{N_E}{N_C} = -\frac{70}{20} \cdot \frac{54}{18} = -\frac{3.5}{1} \frac{3.0}{1} = -10.5$$

Gear D is called an *idler*. As demonstrated here, it has no effect on the magnitude of the train value, but it does cause a direction reversal. The output speed is then found from

$$TV = n_A/n_E$$

$$n_E = n_A/TV = (1750 \text{ rpm})/(-10.5) = -166.7 \text{ rpm (counterclockwise)}$$

Velocity of a Rack

Figure 8–45 shows the basic configuration of a *rack-and-pinion* drive. The function of such a drive is to produce a linear motion of the rack from the rotational motion of the driving pinion. The opposite is also true: If the rack is the driver having a linear motion, it produces a rotational motion of the pinion.

The linear velocity of the rack, v_R , must be the same as the pitch line velocity of the pinion, v_t , as defined by Equation (8–32), repeated here. Recall that ω_p is the angular velocity of the pinion:

$$v_R = v_t = R_p \omega_p = (D_p/2) \omega_p$$

Note on Units for Pitch Line Speed. In general, any velocity units may be used for pitch line speed at the discretion of the designer as long as careful manipulation of units is exercised. However, there are certain units that are preferred for later calculations in this book and for gear design in particular. The preferred units for pitch line speed are as follows:

U.S. Standard Diametral Pitch System: ft/min or fpm

Metric Module System: m/s

Certain data, design guidelines, and subsequent calculations are keyed to pitch line speed in these units. Because such calculations appear often in the following chapters, we develop here some unit-specific relationships to facilitate calculations in these units. Other assumptions for typical units for related quantities are included in these developments.

U.S. Standard Diametral Pitch System: Assumptions: Dimensions are in inches; Rotational speed is in rpm

$$v_t = (D/2)\omega = \frac{D(\text{in})}{2} \frac{n(\text{rev})}{(\text{min})} \frac{2\pi(\text{rad})}{(\text{rev})} \frac{1.0(\text{ft})}{12(\text{in})}$$

$$v_t = \frac{\pi D n}{12} \text{ ft/min} \quad (8-35)$$

Metric Module System: Assumptions: Dimensions are in mm; Rotational speed is in rpm

$$v_t = (D/2)\omega$$

$$v_t = \frac{D (\text{mm})}{2} \frac{n (\text{rev})}{(\text{min})} \frac{2\pi (\text{rad})}{(\text{rev})} \frac{1.0 (\text{min})}{60 (\text{s})} \frac{1.0 \text{ m}}{1000 \text{ mm}}$$

$$v_t = \frac{\pi D n}{60 000} \text{ m/s} \quad (8-36)$$

Provided that data are supplied in the given units, the final form of Equations (8–35) or (8–36) can be used for problems and designs for this book. We refer to this type of equation as *unit specific*, meaning that it is only valid for input data in the proper units.

The linear displacement or position of the rack can be related to the angular displacement of the pinion, θ , by the following equation:

$$s_{\text{RACK}} = \frac{D_p}{2} \cdot \theta_p \quad (8-37)$$

The concept of center distance does not apply directly for a rack-and-pinion set because the center of the rack is at infinity. But it is critical that the pitch circle of the pinion be tangent to the pitch line of the rack as

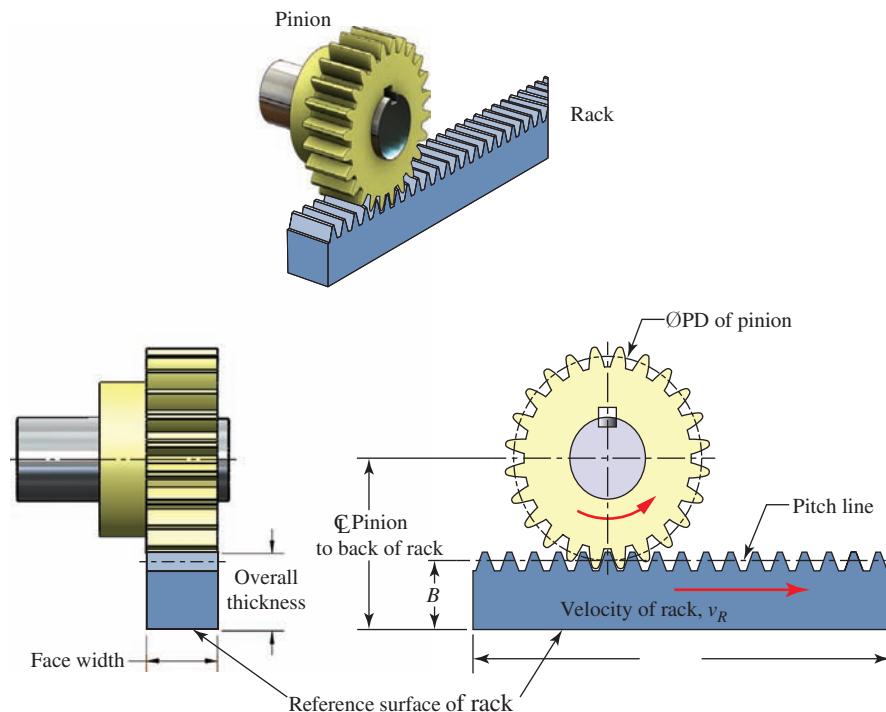


FIGURE 8–45 Rack driven by a pinion

TABLE 8-10 Example rack specifications

| Diametral pitch | Pitch line to back (<i>B</i>) | Overall thickness | Face width | Nominal length [ft] |
|-----------------|---------------------------------|-------------------|------------|---------------------|
| 64 | 0.109 | 0.125 | 0.125 | 2 |
| 48 | 0.104 | 0.125 | 0.125 | 2 |
| 32 | 0.156 | 0.187 | 0.187 | 4 |
| 24 | 0.208 | 0.250 | 0.25 | 4 |
| 20 | 0.450 | 0.500 | 0.5 | 6 |
| 16 | 0.688 | 0.750 | 0.75 | 6 |
| 12 | 0.917 | 1.000 | 1 | 6 |
| 10 | 1.150 | 1.250 | 1.25 | 6 |
| 8 | 1.375 | 1.500 | 1.5 | 6 |
| 6 | 1.333 | 1.500 | 2 | 6 |
| 5 | 1.300 | 1.500 | 2.5 | 6 |
| 4 | 1.750 | 2.000 | 3.5 | 6 |

shown in Figure 8–28. The rack will be machined so that there is a specified dimension between the pitch line and a reference surface, typically the back of the rack. This is dimension *B* in Figure 8–28. Then the location of the center of the pinion can be computed using the relationships shown in the figure.

Table 8–10 gives examples of the basic rack dimensional information for different diametral pitches that can be used for problems in this book. This includes the pitch line to back of rack dimension, *B*, which is used to locate the rack from the centerline of the pinion. Data from each specific manufacturer should be used.

**Example Problem
8–9**

A rack is driven by pinion shown in Figure 8–46. The pinion rotates at 125 rpm, has 24 teeth, and a diametral pitch of 6.

- Determine the pitch diameter of the pinion.
- Determine the dimension from the pitch line to the back of the rack, *B*.
- Calculate the distance of the pinion center line to the back of the rack.
- Determine the linear velocity of the rack.
- How long would it take to move a rack that has a length of 20 ft?
- How many revolutions would the pinion turn in moving the rack 20 ft?

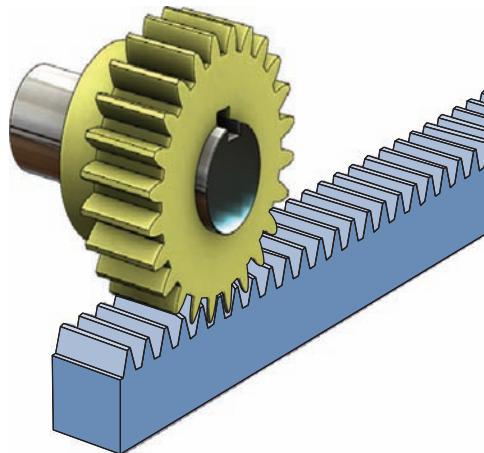


FIGURE 8–46 Pinion and rack for Example Problem 8–9

Solution Given: $n_{\text{pinion}} = 125 \text{ rpm}$; Pinion $P_d = 6$; $N_{\text{pinion}} = 24$; Length of rack = $L = 20 \text{ ft}$

- $D_p = N_p/P_d = 24/6 = 4.000 \text{ in}$
- Distance from the pitch line to the back of the rack: $B = 1.333 \text{ in}$ [From Table 8–10]

- c. Distance from back of the rack to the pinion centerline: [Call this value $B-C$]

$$B-C = B + \text{Pinion radius} = B + D_p/2 = 1.333 \text{ in} + (4.000 \text{ in})/2 = 3.333 \text{ in}$$

- d. Linear velocity of the rack = $V_{\text{rack}} = r\omega = (D_p/2)(n_p)$

$$V_{\text{rack}} = (2.000 \text{ in})(125 \text{ rev/min})(2\pi \text{ rad/rev})(1.0 \text{ ft}/12 \text{ in}) = 130.9 \text{ ft/min} = 130.9 \text{ fpm}$$

- e. Time to move rack 20 ft: Using $V = s/t$, then $t = s/V$

$$t = \frac{s}{V} = \frac{20 \text{ ft}}{130.9 \text{ ft/min}} \cdot \frac{60 \text{ sec}}{\text{min}} = 9.167 \text{ sec}$$

- f. Number of pinion revolutions, θ_P , to move rack 20 ft:

From Equation 8-37:

$$s_{\text{RACK}} = \frac{D_p}{2} \cdot \theta_P$$

Then

$$\theta_P = \frac{s_{\text{RACK}}}{D_p/2} = \frac{20 \text{ ft}}{2.0 \text{ in}} \cdot \frac{12 \text{ in}}{\text{ft}} = 120 \text{ rad} \cdot \frac{1 \text{ rev}}{2\pi \text{ rad}} = 19.09 \text{ rev}$$

8-14 DEVISING GEAR TRAINS

Now we will show several methods for devising gear trains to produce a desired train value. The result will typically be the specification of the number of teeth in each gear and the general arrangement of the gears relative to each other. The determination of the types of gears will generally not be considered except for how they may affect the direction of rotation or the general alignment of the shafts. Additional details can be specified after completion of the study of the design procedures in later chapters.

Hunting Tooth

Some designers recommend that integer velocity ratios be avoided, if possible, because the same two teeth would come into contact frequently and produce uneven wear patterns on the teeth. For example when using a velocity ratio of exactly 2.0, a given tooth on the pinion would contact the same two teeth on the gear with every two revolutions. In Chapter 9 you will learn that the pinion teeth are often made harder than the gear because the pinion experiences higher stresses. As the gears rotate, the pinion teeth tend to smooth any inherent roughness of the gear teeth, a process sometimes called *wearing in*. Each tooth on the pinion then has a slightly different geometry causing unique wear patterns on the few teeth with which it mates.

A more uniform wear pattern will result if the velocity ratio is not an integer. Adding or subtracting one tooth from the number of teeth in the gear produces the result that each pinion tooth would contact a different gear tooth with each revolution and the wear pattern would be more uniform. The added or subtracted tooth is called the *hunting tooth*. Obviously the velocity ratio

for the gear pair will be slightly different, but that is often not a concern unless precise timing between the driver and driven gears is required. Consider the following example.

An initial design for a gear pair calls for the pinion to be mounted to the shaft of an electric motor having a nominal speed of 1750 rpm. The pinion has 18 teeth and the gear has 36 teeth, resulting in a velocity ratio of 36/18 or 2.000. The output speed would then be:

$$\begin{aligned} \text{Initial design: } n_2 &= n_1(N_p/N_G) \\ &= 1750 \text{ rpm} (18/36) = 875 \text{ rpm} \end{aligned}$$

Now consider adding or subtracting one tooth from the gear. The output speeds would be,

$$\begin{aligned} \text{Modified design: } n_2 &= n_1(N_p/N_G) \\ &= 1750 \text{ rpm} (18/35) = 900 \text{ rpm} \end{aligned}$$

$$\begin{aligned} \text{Modified design: } n_2 &= n_1(N_p/N_G) \\ &= 1750 \text{ rpm} (18/37) = 851 \text{ rpm} \end{aligned}$$

The output speeds for the modified designs are less than 3.0 percent different from the original design. You would have to decide if that is acceptable in a given design project. However, be aware that the motor speed is typically not exactly 1750 rpm. As discussed in Chapter 21, 1750 rpm is a typical *full load speed* of a four-pole alternating current electric motor. When operating at a torque less than the full load torque the speed would be greater than 1750 rpm. Conversely, a greater torque would result in a slower speed. When precise speeds are required, a variable speed drive that can be adjusted according to actual loads is recommended.

A few general principles that were discussed earlier in this chapter are reviewed next.

GENERAL PRINCIPLES FOR DEVISING GEAR TRAINS ▾

1. The velocity ratio for any pair of gears can be computed in a variety of ways as indicated in Equation (8–33).
2. The number of teeth in any gear must be an integer.
3. Mating gears must have the same tooth form, pressure angle, and pitch.
4. When external gears mesh, there is a direction reversal of their shafts.
5. When an external pinion meshes with an internal gear, their shafts rotate in the same direction.
6. An idler is a gear that performs as both a driver and a driven gear in the same train. Its size and number of teeth have no effect on the magnitude of the train value, but the direction of rotation is changed.
7. Spur and typical helical gears operate on parallel shafts.
8. Bevel gears, crossed helical gears, and a worm/wormgear set operate on shafts perpendicular to each other.
9. The number of teeth in the pinion of a gear pair should not be such that it causes interference with the teeth of its mating gear. Refer to Table 8–7.
10. In general, the number of teeth in the gear should not be larger than about 150. This is somewhat arbitrary, but it is typically more desirable to use a double-reduction gear train rather than a very large, single-reduction gear pair.
11. Any given gear train design problem may require one or more pairs of gears depending on the overall train value required, space available, and practical gear size.
12. It is generally desirable to design the gear train with the fewest practical number of gears. Each added gear requires its own shaft that must be supported by bearings.
13. In general, it is expected that the overall gear train be small in size, compact, and arranged in a manner that facilitates assembly.
14. You should determine the required directions of the driver for the gear train and for the output shaft; at least whether the input and output should rotate in the same direction (a positive train) or the opposite direction (a negative train).
15. The use of the “hunting tooth” concept described above for any gear pair is desirable. However, in this book we will consider any practical ratio for a given gear pair to be acceptable.
16. It will be shown in Chapters 9 and 10 that gear pairs operating at slower speeds will be subjected to higher torque and tooth loads as compared with those operating at higher speed. This results in the slower gear teeth having a larger tooth size and circular pitch for a given velocity ratio. For this reason, it is desirable to allocate a higher percentage of the total train value to the higher speed pairs of gears to obtain a more optimal overall design for the train.

Three different design procedures are outlined next and demonstrated in example problems. It is recommended that all three be studied and understood so you can select the method most suitable to any given design situation. Introductory comments are given here on the

types of design situations where each procedure should be applied.

- 1. Single pair of gears to produce a desired velocity ratio:** This is the fundamental process required to define the number of teeth in the pinion and the gear to produce a desired ratio.
- 2. Residual ratio:** This process is used when two or more pairs of gears in a train are required. It calls for specifying all but one of the required ratios to produce an overall train value. Then you will be able to compute the required value of the final ratio. *This is the most general approach and the most frequently used approach in this book.*
- 3. Factoring approach:** When two or more pairs of gears in a train are required and an exact ratio for the overall train value is also required, then the velocity ratio of each gear pair must be a factor of the overall train value. Determining the factors of the desired ratio is a necessary skill to apply this method.

Getting started: For any gear train design problem, first determine the minimum number of pairs of gears necessary to produce the overall train value. Here is an outline of the recommended approach.

1. Determine the overall train value, TV , required from the application data.
2. Determine the maximum velocity ratio, VR_{max} , that can be achieved with one pair of gears, considering a reasonable maximum number of teeth for the gear and a number of teeth for the pinion that will not result in interference according to Table 8–7.
3. If the train value is greater than the ratio found from Step 2, divide TV/VR_{max} . This will aid in determining how many pairs of gears are required.
4. Note that the overall train value is the product of the velocity ratio for each pair of gears. That is,

$$TV = VR_1 \times VR_2 \times VR_3 \dots$$

5. Determine if an idler gear is necessary to achieve the required output shaft direction.
6. Specify each individual velocity ratio using the guidelines listed above.
7. Specify the numbers of teeth in each gear of each pair of gears.
8. Sketch the arrangement of the gears to show how they are placed on shafts in proper relation to each other. At this stage, a schematic diagram is adequate.

Three methods are given in Example Problems 8–10, 8–11, and 8–12 that give tools that can be used to devise gear trains for a variety of applications.

- Example Problem 8–10 shows a method that is fundamental to the process of deciding on the number of teeth in each of two mating gears that will produce a desired velocity ratio.

- Example Problem 8–11 describes the *Residual Ratio Method*, used when two or more stages of speed reduction are employed. All but one of the component ratios are decided first and then the remaining part, called the residual ratio, is computed.
- The *Factoring Approach* is used when an exact train value is desired that can be achieved by using individual stages of reduction that are factors of the overall train value.

Design of a Single Pair of Gears to Produce a Desired Velocity Ratio

Example Problem 8–10 Devise a gear train to reduce the speed of rotation of a drive from an electric motor shaft operating at 3450 rpm to approximately 650 rpm. Use $N_{\max} = 150$ teeth.

Solution First we will compute the nominal train value:

$$TV = (\text{input speed})/(\text{output speed}) = 3450/650 = 5.308$$

If a single pair of gears is used then the train value is equal to the velocity ratio for that pair. That is, $TV = VR = N_G/N_P$.

Let's decide that spur gears having 20° , full-depth, involute teeth are to be used. Then we can refer to Table 8–7 and determine that no fewer than 16 teeth should be used for the pinion in order to avoid interference. We can specify the number of teeth in the pinion and use the velocity ratio to compute the number of teeth in the gear:

$$N_G = (VR)(N_P) = (5.308)(N_P)$$

All possible examples are given in Table 8–11.

Conclusion and Comments The combination of $N_P = 26$ and $N_G = 138$ gives the most ideal result for the output speed. But all of the trial values give output speeds reasonably close to the desired value. Only two are more than 2.0 rpm off the desired value. It remains a design decision as to how close the output speed must be to the stated value of 650 rpm. Note that the input speed is given as 3450 rpm, the full load speed of an electric motor. But how accurate is that? The actual speed of the input will vary depending on the load on the motor. Therefore, it is not likely that the ratio must be precise.

TABLE 8–11 All Possible Values for N_P and N_G to Produce the Desired Velocity Ratio

| N_P | Computed $N_G = (5.308)(N_P)$ | Nearest integer N_G | Actual VR: $VR = N_G/N_P$ | Actual output speed (rpm): $n_G = n_P/VR = n_P(N_P/N_G)$ |
|-------|----------------------------------|-----------------------|------------------------------|---|
| 16 | 84.92 | 85 | 85/16 = 5.31 | 649.4 |
| 17 | 90.23 | 90 | 90/17 = 5.29 | 651.7 |
| 18 | 95.54 | 96 | 96/18 = 5.33 | 646.9 |
| 19 | 100.85 | 101 | 101/19 = 5.32 | 649.0 |
| 20 | 106.15 | 106 | 106/20 = 5.30 | 650.9 |
| 21 | 111.46 | 111 | 111/21 = 5.29 | 652.7 |
| 22 | 116.77 | 117 | 117/22 = 5.32 | 648.7 |
| 23 | 122.08 | 122 | 122/23 = 5.30 | 650.4 |
| 24 | 127.38 | 127 | 127/24 = 5.29 | 652.0 |
| 25 | 132.69 | 133 | 133/25 = 5.32 | 648.5 |
| 26 | 138.00 | 138 | 138/26 = 5.308 | 650.0 Exact |
| 27 | 143.31 | 143 | 143/27 = 5.30 | 651.4 |
| 28 | 148.61 | 149 | 149/28 = 5.32 | 648.3 |
| 29 | 153.92 | 154 | Too large | |

Residual Ratio Method

Example Problem 8–11

Devise a gear train for a conveyor drive. The drive motor rotates at 1150 rpm, and it is desired that the output speed for the shaft that drives the conveyor be in the range of 24 to 28 rpm. Use a double-reduction gear train. Power transmission analysis indicates that it would be desirable for the reduction ratio for the first pair of gears to be somewhat greater than that for the second pair.

Solution We use the *getting started* recommendations given earlier to start the solution.

Permissible Train Values

First let's compute the nominal train value that will produce an output speed of 26.0 rpm at the middle of the allowable range:

$$TV_{\text{nom}} = (\text{input speed})/(\text{nominal output speed}) = 1150/26 = 44.23$$

Now we can compute the minimum and maximum allowable speed ratio:

$$TV_{\text{min}} = (\text{input speed})/(\text{maximum output speed}) = 1150/28 = 41.07$$

$$TV_{\text{max}} = (\text{input speed})/(\text{minimum output speed}) = 1150/24 = 47.92$$

Possible Ratio for Single Pair

The maximum ratio that any one pair of gears can produce occurs when the gear has 150 teeth and the pinion has 17 teeth (see Table 8–7). Then

$$VR_{\text{max}} = N_G/N_P = 150/17 = 8.82 \text{ (too low)}$$

Possible Train Value for Double-Reduction Train

$$TV = (VR_1)(VR_2)$$

But the maximum value for either VR is 8.82. Then the maximum train value is

$$TV_{\text{max}} = (8.82)(8.82) = (8.82)^2 = 77.9$$

A double-reduction train is practical.

Optional Designs

The general layout of the proposed train is shown in Figure 8–47. Its train value is

$$TV = (VR_1)(VR_2) = (N_B/N_A)(N_D/N_C)$$

We need to specify the number of teeth in each of the four gears to achieve a train value within the range just computed. Our approach is to specify two ratios, VR_1 and VR_2 , such that their product is within the desired range. If the two ratios were equal, each would be the square root of the target ratio, 44.23. That is,

$$VR_1 = VR_2 = \sqrt{44.23} = 6.65$$

But, as described in Item 16 of the *General Principles for Devising Gear Trains*, we want the first ratio to be somewhat larger than the second. Let's specify

$$VR_1 = 8.0 = (N_B/N_A)$$

If we let pinion A have 17 teeth, the number of teeth in gear B must be

$$N_B = (N_A)(8) = (17)(8) = 136$$

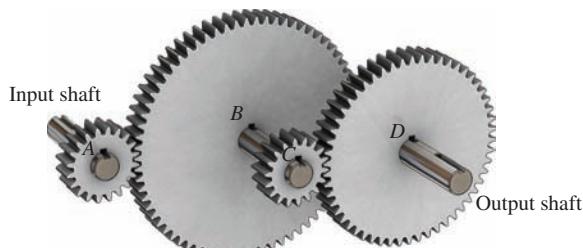


FIGURE 8–47 General layout of the proposed gear train for Example Problem 8–11

Then the second ratio should be approximately

$$VR_2 = TV/(VR_1) = 44.23/8.0 = 5.53$$

This is the *residual ratio* left after the first ratio has been specified. Now if we specify 17 teeth for pinion C, gear D must be

$$VR_2 = 5.53 = N_D/N_C = N_D/17$$

$$N_D = (5.53)(17) = 94.01$$

Rounding this off to 94 is likely to produce an acceptable result. Finally,

$$N_A = 17 \quad N_B = 136 \quad N_C = 17 \quad N_D = 94$$

We should check the final design:

$$TV = (136/17)(94/17) = 44.235 = n_A/n_D$$

The actual output speed is

$$n_D = n_A/TV = (1150 \text{ rpm})/44.235 = 26.0 \text{ rpm}$$

This is right in the middle of the desired range.

Factoring Approach for Compound Gear Trains

Example Problem 8–12

Devise a gear train for a recorder for a precision measuring instrument. The input is a shaft that rotates at exactly 3600 rpm. The output speed must be exactly 11.25 rpm. Use 20°, full-depth, involute teeth; no fewer than 17 teeth; and no more than 150 teeth in any gear.

Solution Target TV

$$TV_{\text{nom}} = 3600/11.25 = 320$$

Maximum Single VR

$$VR_{\text{max}} = 150/17 = 8.824$$

Maximum TV for Double Reduction

$$TV_{\text{max}} = (8.824)^2 = 77.8 \text{ (too low)}$$

Maximum TV for Triple Reduction

$$TV_{\text{max}} = (8.824)^3 = 687 \text{ (okay)}$$

Design a triple-reduction gear train such as that shown in Figure 8–48. The train value is the product of the three individual velocity ratios:

$$TV = (VR_1)(VR_2)(VR_3)$$

If we can find three factors of 320 that are within the range of the possible ratio for a single pair of gears, they can be specified for each velocity ratio.

Factors of 320

One method is to divide by the smallest prime numbers that will divide evenly into the given number, typically 2, 3, 5, or 7. For example,

$$320/2 = 160$$

$$160/2 = 80$$

$$80/2 = 40$$

$$40/2 = 20$$

$$20/2 = 10$$

$$10/2 = 5$$

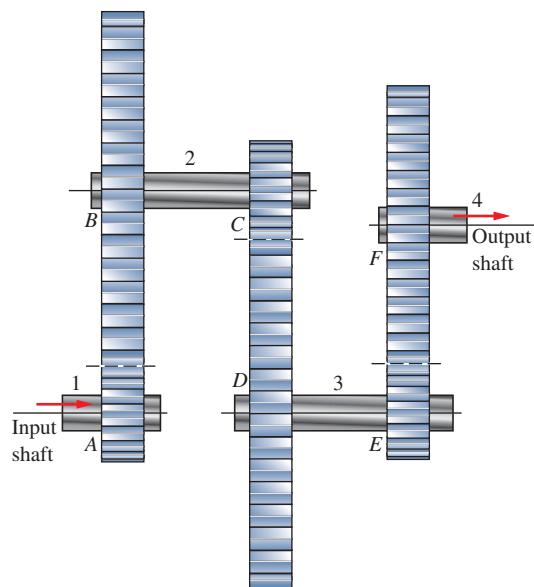


FIGURE 8–48 Triple-reduction gear train

Then the prime factors of 320 are 2, 2, 2, 2, 2, 2, and 5. We desire a set of three factors, which we can find by combining each set of three “2” factors into their product. That is,

$$(2)(2)(2) = 8$$

Then the three factors of 320 are

$$(8)(8)(5) = 320$$

Now let the number of teeth in the pinion of each pair be 17. The number of teeth in the gears will then be $(8)(17) = 136$ or $(5)(17) = 85$. Finally, we can specify

$$\begin{array}{lll} N_A = 17 & N_C = 17 & N_E = 17 \\ N_B = 136 & N_D = 136 & N_F = 85 \end{array}$$

REFERENCES

1. American Gear Manufacturers Association. Standard 1012-G05 (R2011). *Gear Nomenclature, Definitions of Terms with Symbols*. Alexandria, VA: American Gear Manufacturers Association, 2011.
2. American Gear Manufacturers Association. Standard 2002-B88 (R2012). *Tooth Thickness Specification and Measurement*. Alexandria, VA: American Gear Manufacturers Association, 2012.
3. American Gear Manufacturers Association. Standard 2008-D11. *Assembling Bevel Gears*. Alexandria, VA: American Gear Manufacturers Association, 2011.
4. American Gear Manufacturers Association. Standard 917-B97. *Design Manual for Parallel Shaft Fine-Pitch Gearing*. Alexandria, VA: American Gear Manufacturers Association, 1997.
5. American Gear Manufacturers Association. Standard 22849-A12. *Design Recommendations for Bevel Gears*. Alexandria, VA: American Gear Manufacturers Association, 2012.
6. American Gear Manufacturers Association. Standard 6022-C93(R2014). *Design Manual for Cylindrical Wormgearing*. Alexandria, VA: American Gear Manufacturers Association, 2014.
7. American Gear Manufacturers Association. Standard 6001-E08 (R2014). *Design and Selection of Components for Enclosed Gear Drives*. Alexandria, VA: American Gear Manufacturers Association, 2014.
8. American Gear Manufacturers Association. Standard 2000-A88. *Gear Classification and Inspection Handbook—Tolerances and Measuring Methods for Unassembled Spur and Helical Gears (Including Metric Equivalents)*. Alexandria, VA: American Gear Manufacturers Association, 1988.
9. American Gear Manufacturers Association. Standard 2015/915-1-A02. *Accuracy Classification System—Tangential Measurement Tolerance Tables for Cylindrical Gears*. Alexandria, VA: American Gear Manufacturers Association, 2002.
10. Dooner, David B., and Ali A. Seireg. *The Kinematic Geometry of Gearing: A Concurrent Engineering Approach*. New York: John Wiley & Sons, 1995.

11. Drago, Raymond J. *Fundamentals of Gear Design*. New York: Elsevier Science & Technology Books, 1988.
12. Radzevich, Stephen. *Dudley's Handbook of Practical Gear Design and Manufacture*, 3rd ed. Boca Raton, FL: CRC Press, 2016.
13. International Standards Organization. Standard ISO 54:1996. *Cylindrical Gears for General Engineering and for Heavy Engineering—Modules*. Geneva, Switzerland: International Standards Organization, 1996.
14. International Standards Organization. Standard ISO 677:1976. *Straight Bevel Gears for General Engineering and Heavy Engineering*. Geneva, Switzerland: International Standards Organization, 1976.
15. International Standards Organization. Standard ISO 1122-1:1998. *Vocabulary of Gear Terms—Part 1: Definitions Related to Geometry*. Geneva, Switzerland: International Standards Organization, 1998.
16. International Standards Organization. Standard ISO 23509:2006. *Bevel and Hypoid Gear Geometry*. Geneva, Switzerland: International Standards Organization, 2006.
17. Lipp, Robert. "Avoiding Tooth Interference in Gears." *Machine Design* 54, no. 1 (January 7, 1982).
18. Litvin, Faydor, and Alfonso Fuentes. *Gear Geometry and Applied Theory*, 2nd ed. Cambridge, UK: Cambridge University Press, 2004.
19. Oberg, Erik, Franklin D. Jones, Holbrook L. Horton, and Henry H. Ryffel. *Machinery's Handbook*, 30th ed. New York: Industrial Press, 2016.

INTERNET SITES RELATED TO KINEMATICS OF GEARS

1. **American Gear Manufacturers Association (AGMA)**. Develops and publishes voluntary, consensus standards for gears and gear drives. Some standards are jointly published with the American National Standards Institute (ANSI).
2. **Boston Gear Company**. A manufacturer of gears and complete gear drives. Part of Altra Industrial Motion, Inc. Data provided for spur, helical, bevel, and worm gearing.
3. **Regal-Beloit Corporation**. The Browning and Morse Divisions produce spur, helical, bevel, and worm gearing and complete gear drives.
4. **Gear Industry Home Page**. Information source for many companies that manufacture or use gears or gearing systems. Includes gear machinery, gear cutting tools, gear materials, gear drives, open gearing, tooling & supplies, software, training and education. Publishes *Gear Technology Magazine, The Journal of Gear Manufacturing*.
5. **Power Transmission Home Page**. Clearinghouse on the Internet for buyers, users, and sellers of power transmission-related products and services. Included are gears, gear drives, and gearmotors.
6. **Baldor/Dodge**. Manufacturer of many power transmission components, including complete gear-type speed reducers,

bearings, and components such as belt drives, chain drives, clutches, brakes, and couplings.

7. **Gear—Wikipedia site** General discussion of the kinematics and gears, including an animated drawing of meshing gears.
8. **Gear tooth engagement animation** Search the Internet on "gears meshing animation." Several sites appear showing involute gear teeth engaging.
9. **Maryland Metrics Co.** Distributor of a wide variety of metric hardware and power transmission products, including many types of gears. On the home page, search on "Mechanical Power Transmission Products."
10. **Stock Drive Products/Sterling Instruments Co.** Distributor of a wide variety of U.S. styles and metric hardware and mechanical power transmission products, including many types of gears.
11. **W. M. Berg Co.** Distributor of a wide variety of U.S. styles of hardware and power transmission products, including many types of gears.
12. **Profilator**. Germany-based manufacturer of a variety of machine tools for the gear-cutting industry, using several processes, including scudding. U.S. based representation is by the German Machine Tools of America (GMTA).

PROBLEMS

Gear Geometry

1. A gear has 44 teeth of the 20° , full-depth, involute form and a diametral pitch of 12. Compute the following:
 - (a) Pitch diameter
 - (b) Circular pitch
 - (c) Equivalent module
 - (d) Nearest standard module
 - (e) Addendum
 - (f) Dedendum
 - (g) Clearance
 - (h) Whole depth
 - (i) Working depth
 - (j) Tooth thickness
 - (k) Outside diameter

Repeat Problem 1 for the following gears:

2. $N = 34; P_d = 24$
3. $N = 45; P_d = 2$
4. $N = 18; P_d = 8$
5. $N = 22; P_d = 1.75$
6. $N = 20; P_d = 64$
7. $N = 180; P_d = 80$
8. $N = 28; P_d = 18$
9. $N = 28; P_d = 20$

For Problems 10–17, repeat Problem 1 for the following gears in the metric module system. Replace Part (c) with equivalent P_d and Part (d) with nearest standard P_d .

10. $N = 34; m = 3$
11. $N = 45; m = 1.25$
12. $N = 18; m = 12$
13. $N = 22; m = 20$
14. $N = 20; m = 1$
15. $N = 180; m = 0.4$
16. $N = 28; m = 1.5$

17. $N = 28; m = 0.8$
18. Define *backlash*, and discuss the methods used to produce it.
19. For the gears of Problems 1 and 12, recommend the amount of backlash.

Velocity Ratio

20. An 8-pitch pinion with 18 teeth mates with a gear having 64 teeth as shown in Figure P8-20. The pinion rotates at 2450 rpm. Compute the following:
 - (a) Center distance
 - (b) Velocity ratio
 - (c) Speed of gear
 - (d) Pitch line speed

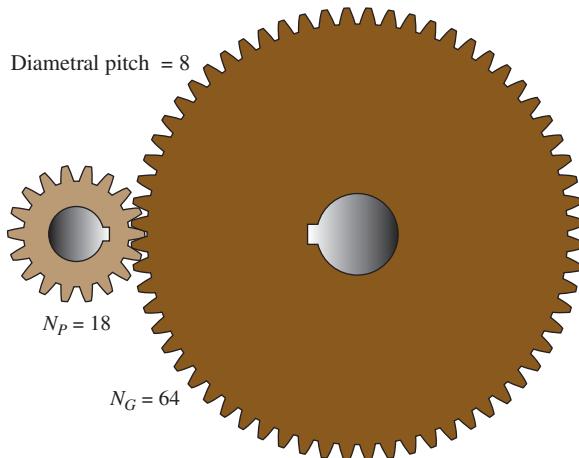


FIGURE P8-20 Gear pair for Problem 8-20

Repeat Problem 20 for the following data:

21. $P_d = 4; N_p = 20; N_G = 92; n_p = 225 \text{ rpm}$
22. $P_d = 20; N_p = 30; N_G = 68; n_p = 850 \text{ rpm}$
23. $P_d = 64; N_p = 40; N_G = 250; n_p = 3450 \text{ rpm}$
24. $P_d = 12; N_p = 24; N_G = 88; n_p = 1750 \text{ rpm}$
25. $m = 2; N_p = 22; N_G = 68; n_p = 1750 \text{ rpm}$
26. $m = 0.8; N_p = 18; N_G = 48; n_p = 1150 \text{ rpm}$
27. $m = 4; N_p = 36; N_G = 45; n_p = 15 \text{ rpm}$
28. $m = 12; N_p = 15; N_G = 36; n_p = 480 \text{ rpm}$

For Problems 29–32, all gears are made in standard 20° , full-depth, involute form. Tell what is wrong with the following statements:

29. An 8-pitch pinion having 24 teeth mates with a 10-pitch gear having 88 teeth. The pinion rotates at 1750 rpm, and the gear at approximately 477 rpm. The center distance is 5.900 in.
30. A 6-pitch pinion having 18 teeth mates with a 6-pitch gear having 82 teeth. The pinion rotates at 1750 rpm, and the gear at approximately 384 rpm. The center distance is 8.3 in.
31. A 20-pitch pinion having 12 teeth mates with a 20-pitch gear having 62 teeth. The pinion rotates at 825 rpm, and the gear at approximately 160 rpm. The center distance is 1.850 in.
32. A 16-pitch pinion having 24 teeth mates with a 16-pitch gear having 45 teeth. The outside diameter of the pinion is 1.625 in. The outside diameter of the gear is 2.938 in. The center distance is 2.281 in.

Housing Dimensions

33. The gear pair described in Problem 20 is to be installed in a rectangular housing. Specify the dimensions X and Y as sketched in Figure P8-33 that would provide a minimum clearance of 0.10 in.

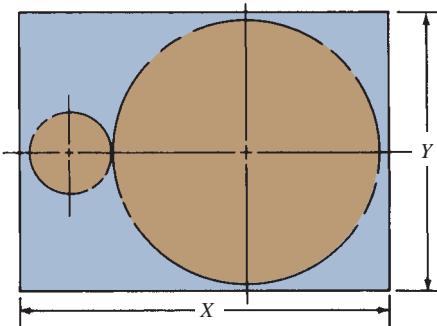


FIGURE P8-33 (Problems 33, 34, 35, and 36)

34. Repeat Problem 33 for the data of Problem 23.
35. Repeat Problem 33 for the data of Problem 26, but make the clearance 2.0 mm.
36. Repeat Problem 33 for the data of Problem 27, but make the clearance 2.0 mm.

Analysis of Simple Gear Trains: Problems 37–40

For the gear trains sketched in the given figures, compute the output speed and the direction of rotation of the output shaft if the input shaft rotates at 1750 rpm clockwise.

37. Use Figure P8-37.
38. Use Figure P8-38.
39. Use Figure P8-39.
40. Use Figure P8-40.

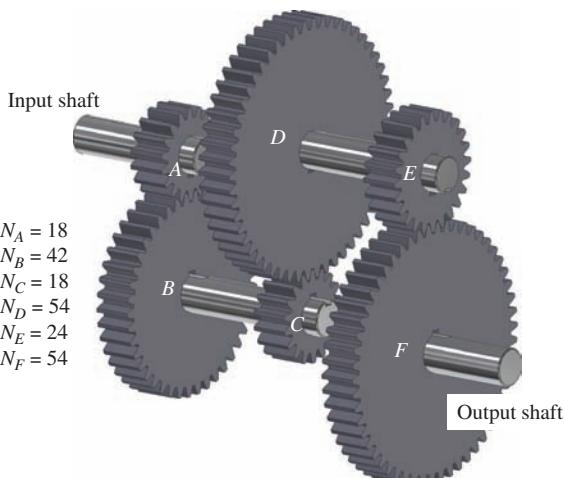


FIGURE P8-37 Gear train layout for Problem 8-37

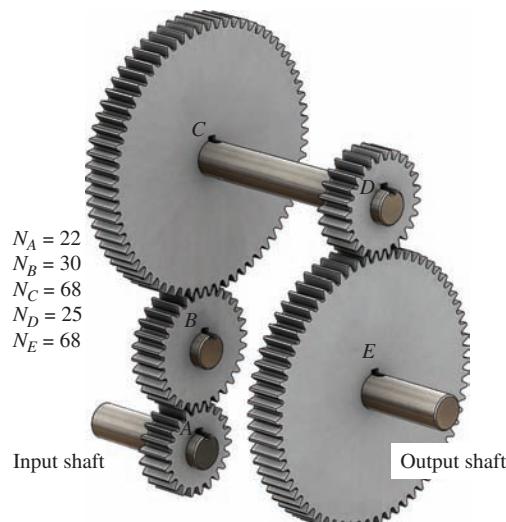


FIGURE P8-38 Gear train layout for Problem 8-38

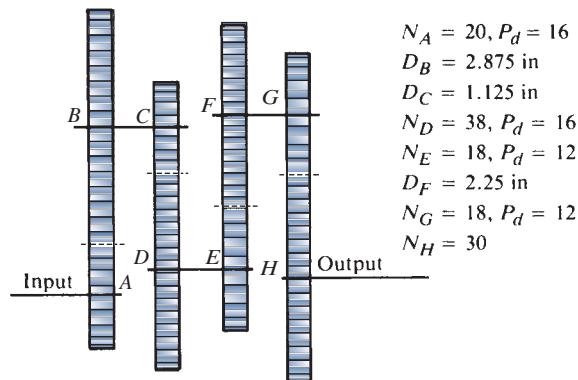


FIGURE P8-39 Gear train layout for Problem 8-39

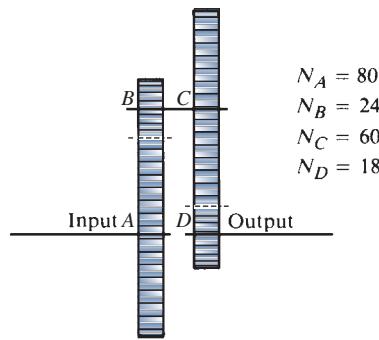


FIGURE P8-40 Gear train layout for Problem 8-40

Helical Gearing

41. A helical gear has a transverse diametral pitch of 8, a transverse pressure angle of $14\frac{1}{2}^\circ$, 45 teeth, a face width of 2.00 in, and a helix angle of 30° . Compute the circular pitch, normal circular pitch, normal diametral pitch, axial pitch, pitch diameter, and normal pressure angle. Then compute the number of axial pitches in the face width.

42. See Figure P8-42. A helical gear has a normal diametral pitch of 12, a normal pressure angle of 20° , 48 teeth, a face width of 1.50 in, and a helix angle of 45° . Compute the circular pitch, normal circular pitch, transverse diametral pitch, axial pitch, pitch diameter, and transverse pressure angle. Then compute the number of axial pitches in the face width.

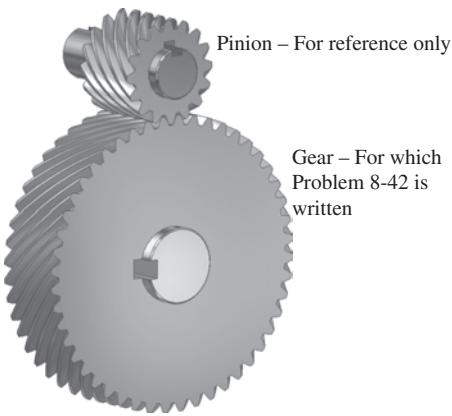


FIGURE P8-42 Helical gear for Problem 8-42

43. A helical gear has a transverse diametral pitch of 6, a transverse pressure angle of $14\frac{1}{2}^\circ$, 36 teeth, a face width of 1.00 in, and a helix angle of 45° . Compute the circular pitch, normal circular pitch, normal diametral pitch, axial pitch, pitch diameter, and normal pressure angle. Then compute the number of axial pitches in the face width.

44. A helical gear has a normal diametral pitch of 24, a normal pressure angle of $14\frac{1}{2}^\circ$, 72 teeth, a face width of 0.25 in, and a helix angle of 45° . Compute the circular pitch, normal circular pitch, transverse diametral pitch, axial pitch, pitch diameter, and transverse pressure angle. Then compute the number of axial pitches in the face width.

Bevel Gears

45. A straight bevel gear pair has the following data: $N_p = 15$; $N_G = 45$; $P_d = 6$; 20° pressure angle. Compute all of the geometric features from Table 8-8.
46. Draw the gear pair of Problem 45 to scale. The following additional dimensions are given (refer to Figure 8-17). Mounting distance (M_{dp}) for the pinion = 5.250 in; M_{dG} for the gear = 3.000 in; face width = 1.250 in. Supply any other needed dimensions.
47. A straight bevel gear pair has the following data: $N_p = 25$; $N_G = 50$; $P_d = 10$; 20° pressure angle. Compute all of the geometric features from Table 8-8.
48. Draw the gear pair of Problem 47 to scale. The following additional dimensions are given (refer to Figure 8-17). Mounting distance (M_{dp}) for the pinion = 3.375 in; M_{dG} for the gear = 2.625 in; face width = 0.700 in. Supply any other needed dimensions.
49. A straight bevel gear pair has the following data: $N_p = 18$; $N_G = 72$; $P_d = 12$; 20° pressure angle. Compute all of the geometric features from Table 8-8.

50. A straight bevel gear pair has the following data: $N_p = 16$; $N_G = 64$; $P_d = 32$; 20° pressure angle. Compute all of the geometric features from Table 8–8.
51. A straight bevel gear pair has the following data: $N_p = 12$; $N_G = 36$; $P_d = 48$; 20° pressure angle. Compute all of the geometric features from Table 8–8.

Wormgearing

52. A wormgear set has a single-thread worm with a pitch diameter of 1.250 in, a diametral pitch of 10, and a normal pressure angle of 14.5° . If the worm meshes with a wormgear having 40 teeth and a face width of 0.625 in, compute the lead, axial pitch, circular pitch, lead angle, addendum, dedendum, worm outside diameter, worm root diameter, gear pitch diameter, center distance, and velocity ratio.
53. Three designs are being considered for a wormgear set to produce a velocity ratio of 20 when the wormgear rotates at 90 rpm. All three have a diametral pitch of 12, a worm pitch diameter of 1.000 in, a gear face width of 0.500 in, and a normal pressure angle of 14.5° . One has a single-thread worm and 20 wormgear teeth; the second has a double-thread worm and 40 wormgear teeth; the third has a four-thread worm and 80 wormgear teeth. For each design, compute the lead, axial pitch, circular pitch, lead angle, gear pitch diameter, and center distance.
54. A wormgear set has a double-threaded worm with a normal pressure angle of 20° , a pitch diameter of 0.625 in, and a diametral pitch of 16. Its mating wormgear has 100 teeth and a face width of 0.3125 in. Compute the lead, axial pitch, circular pitch, lead angle, addendum, dedendum, worm outside diameter, center distance, and velocity ratio.
55. A wormgear set has a four-threaded worm with a normal pressure angle of $14\frac{1}{2}^\circ$, a pitch diameter of 2.000 in, and a diametral pitch of 6. Its mating wormgear has 72 teeth and a face width of 1.000 in. Compute the lead, axial pitch, circular pitch, lead angle, addendum, dedendum, worm outside diameter, center distance, and velocity ratio.
56. A wormgear set has a single-threaded worm with a normal pressure angle of $14\frac{1}{2}^\circ$, a pitch diameter of 4.000 in, and a diametral pitch of 3. Its mating wormgear has 54 teeth and a face width of 2.000 in. Compute the lead, axial pitch, circular pitch, lead angle, addendum, dedendum, worm outside diameter, center distance, and velocity ratio.
57. A wormgear set has a four-threaded worm with a normal pressure angle of 25° , a pitch diameter of 0.333 in, and a diametral pitch of 48. Its mating wormgear has 80 teeth and a face width of 0.156 in. Compute the lead, axial pitch, circular pitch, lead angle, addendum, dedendum, worm outside diameter, center distance, and velocity ratio.

Analysis of Complex Gear Trains

58. The input shaft for the gear train shown in Figure P8–58 rotates at 3450 rpm cw. Compute the rotational speed and direction of the output shaft.
59. The input shaft for the gear train shown in Figure P8–59 rotates at 12 200 rpm. Compute the rotational speed of the output shaft.
60. The input shaft for the gear train shown in Figure P8–60 rotates at 6840 rpm. Compute the rotational speed of the output shaft.

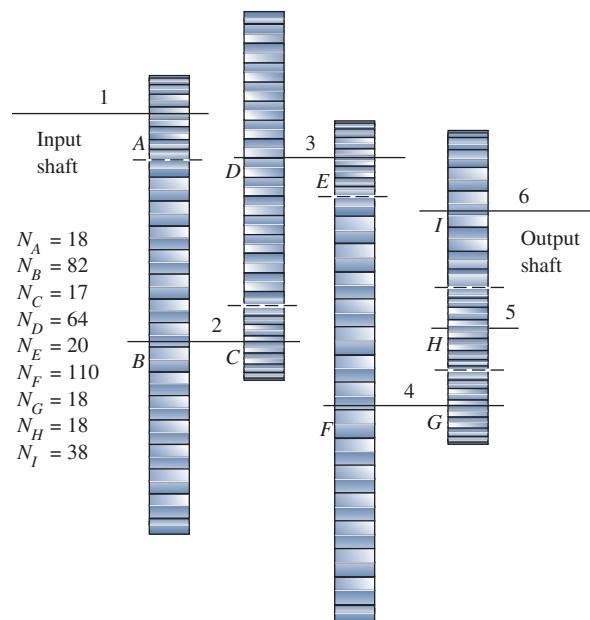


FIGURE P8–58 Gear train for Problem 8–58

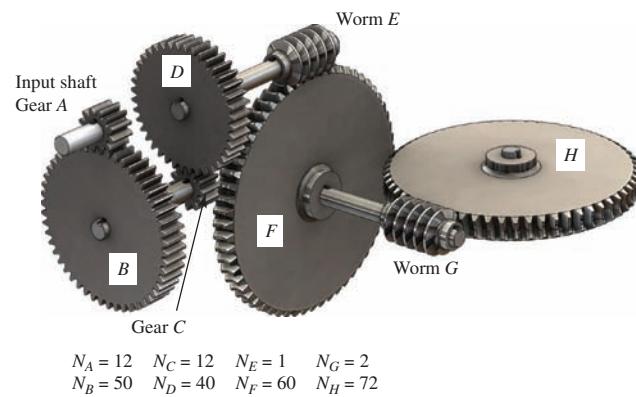


FIGURE P8–59 Gear train for Problem 8–59

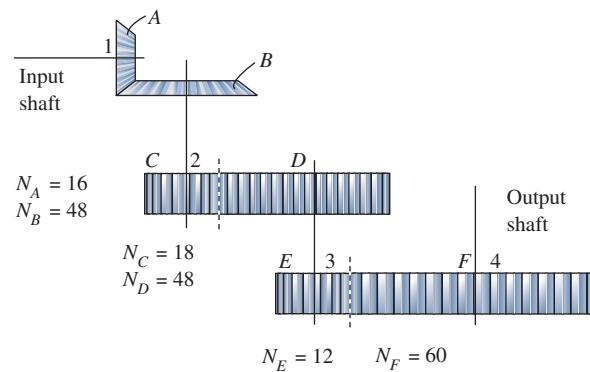


FIGURE P8–60 Gear train for Problem 8–60

61. The input shaft for the gear train shown in Figure P8–61 rotates at 2875 rpm. Compute the rotational speed of the output shaft.

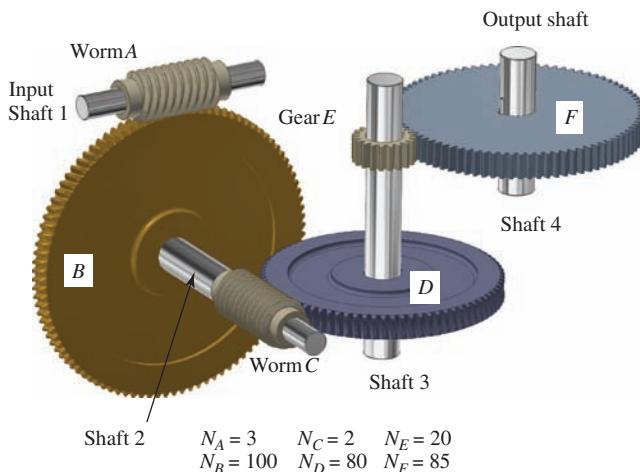


FIGURE P8–61 Gear train for Problem 8–61

Kinematic Design of a Single Gear Pair

62. Specify the numbers of teeth for the pinion and gear of a single gear pair to produce a velocity ratio of π as closely as possible. Use no fewer than 16 teeth nor more than 24 teeth in the pinion.
 63. Specify the numbers of teeth for the pinion and gear of a single gear pair to produce a velocity ratio of $\sqrt{3}$ as closely as possible. Use no fewer than 16 teeth nor more than 24 teeth in the pinion.
 64. Specify the numbers of teeth for the pinion and gear of a single gear pair to produce a velocity ratio of $\sqrt{38}$ as closely as possible. Use no fewer than 18 teeth nor more than 24 teeth in the pinion.
 65. Specify the numbers of teeth for the pinion and gear of a single gear pair to produce a velocity ratio of 7.42 as closely as possible. Use no fewer than 18 teeth nor more than 24 teeth in the pinion.

Kinematic Design of Gear Trains

For Problems 66–75, devise a gear train using all external gears on parallel shafts. Use 20° full-depth involute teeth and no more than 150 teeth in any gear. Ensure that there is no interference. Sketch the layout for your design.

| Problem no. | Input speed (rpm) | Output speed range (rpm) |
|-------------|-------------------|--------------------------|
| 66. | 1800 | 2.0 Exactly |
| 67. | 1800 | 21.0 to 22.0 |
| 68. | 3360 | 12.0 Exactly |
| 69. | 4200 | 13.0 to 13.5 |
| 70. | 5500 | 221 to 225 |
| 71. | 5500 | 13.0 to 14.0 |
| 72. | 1750 | 146 to 150 |
| 73. | 850 | 40.0 to 44.0 |
| 74. | 3000 | 548 to 552 Use two pairs |
| 75. | 3600 | 3.0 to 5.0 |

For Problems 76–80, devise a gear train using any type of gears. Try for the minimum number of gears while avoiding interference and having no more than 150 teeth in any gear. Sketch your design.

| Problem no. | Input speed (rpm) | Output speed (rpm) |
|-------------|-------------------|--------------------|
| 76. | 3600 | 3.0 to 5.0 |
| 77. | 1800 | 8.0 Exactly |
| 78. | 3360 | 12.0 Exactly |
| 79. | 4200 | 13.0 to 13.5 |
| 80. | 5500 | 13.0 to 14.0 |

Rack and Pinion Analysis

81. In Figure P8–81, the rack is driven by the pinion that has a rotational speed of 50 rpm. The diametral pitch is 12, $N_p = 30$, and the length of the rack is 7.00 ft. Find the following:
 (a) The pitch diameter of the pinion
 (b) The distance from the pitch line to the back of the rack
 (c) The center distance
 (d) The linear velocity of the rack
 (e) The time required to move the rack 7.00 ft.
 (f) The number of revolutions of the pinion as the rack moves 7.00 ft.

Pinion, $N_p = 30$, $n_p = 50$ rpm CW

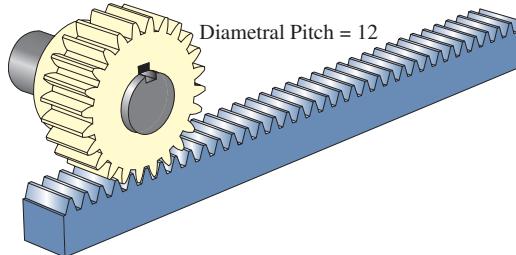


FIGURE P8–81 Rack and pinion for Problem 8–81

SPUR GEAR DESIGN

The Big Picture

You Are the Designer

- 9–1 Objectives of This Chapter
- 9–2 Concepts from Previous Chapters
- 9–3 Forces, Torque, and Power in Gearing
- 9–4 Introduction to Stress Analysis for Gears
- 9–5 Bending Stress in Gear Teeth
- 9–6 Contact Stress in Gear Teeth
- 9–7 Metallic Gear Materials
- 9–8 Selection of Gear Materials
- 9–9 Design of Spur Gears to Specify Suitable Materials
- 9–10 Gear Design for the Metric Module System
- 9–11 Computer-Aided Spur Gear Design and Analysis
- 9–12 Use of the Spur Gear Design Spreadsheet
- 9–13 Power-Transmitting Capacity
- 9–14 Plastics Gearing
- 9–15 Practical Considerations for Gears and Interfaces with Other Elements

THE BIG PICTURE

Spur Gear Design

Discussion Map

- A spur gear has involute teeth that are straight and parallel to the axis of the shaft that carries the gear.
- You need to understand how to design spur gears, specifying the form and size of the teeth, the face width, the material and its heat treatment.

This chapter will help you acquire the skills to perform the necessary analyses and to design safe spur gear drive systems that demonstrate long life.

The goal of this chapter is to help you gain the knowledge and skills necessary to design spur gears to transmit power from a source such as an electric motor, gasoline engine, fluid power motor, turbine, or other prime mover to a driven machine while changing the speed of the input shaft to some other speed at the output shaft. Most gear-type power transmissions are *speed reducers* that deliver the power to the driven machine at a lower speed and a higher torque. Examples of such transmissions are:

1. Electric motor drives through the transmission to a conveyor in a factory.

Discover

Describe the action of the teeth of the driving gear on those of the driven gear. What kinds of stresses are produced?

How do the geometry of the gear teeth, the materials from which they are made, and the operating conditions affect the stresses and the life of the drive system?

2. Gasoline engine for a vehicle drives through the transmission to the drive wheels.
3. Fluid power motor drives through the transmission to a winch on a tractor.
4. Water turbine drives through the transmission to an electric generator.
5. Gas turbine (jet) engine drives through the transmission to the rotor of a helicopter.

Although more rare than speed reducers, transmissions may also be used as *speed increasers*. An important example is a wind turbine that rotates relatively

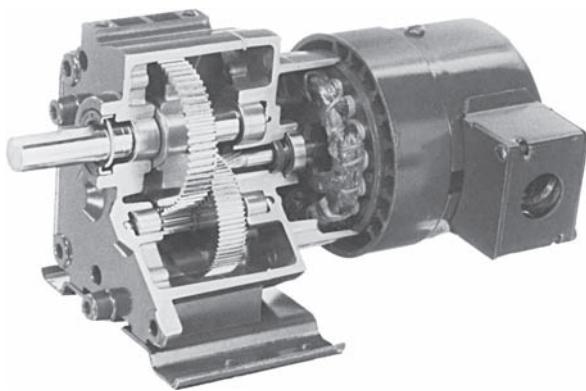


FIGURE 9–1 Double-reduction spur gear reducer (Bison Gear & Engineering Corporation, St. Charles, IL)

slowly, say 20.0 rpm, and the speed must be increased to 1800 rpm to drive an electric generator.

Figure 9–1 shows a commercially available double-reduction, spur gear type speed reducer driven by an electric motor that can be applied to many kinds of applications. This is an example of the type of reducer addressed in this chapter and about which much of design process discussed in Part II of this book (Chapters 7–15) is directed. Make note of how the gears are positioned and how they are mounted on shafts that are then supported by bearings mounted in a rigid housing.

A *spur gear* is one of the most fundamental types of gears. Its teeth are straight and parallel to the axis of the shaft that carries the gear. The teeth have the involute form described in Chapter 8. So, in general, the action of one tooth on a mating tooth is like that of two convex, curved members in contact: As the driving gear rotates, its teeth exert a force on the mating gear that is tangential to the pitch circles of the two gears. Because this force acts at a distance equal to the pitch radius of the gear, a torque is developed in the shaft that carries the gear. When the two gears rotate, they transmit power that is proportional to the torque. Indeed, that is the primary purpose of the spur gear drive system.

Consider the action described in the preceding paragraph:

- How does that action relate to the design of the gear teeth? Look back at Figure 8–1 as you consider this question and those that follow.

- As the force is exerted by the driving tooth on the driven tooth, what kinds of stresses are produced in the teeth? Consider both the point of contact of one tooth on the other and the whole tooth. Where are stresses a maximum?
- How could the teeth fail under the influence of these stresses?
- What material properties are critical to allow the gears to carry such loads safely and with a reasonable life span?
- What important geometric features affect the level of stress produced in the teeth?
- How does the precision of the tooth geometry affect its operation?
- How does the nature of the application affect the gears? What if the machine that the gears drive is a rock crusher that takes large boulders and reduces them to gravel made up of small stones? How would that loading compare with that of a gear system that drives a fan providing ventilation air to a building?
- What is the influence of the driving machine? Would the design be different if an electric motor were the driver or if a gasoline engine were used?
- The gears are typically mounted on shafts that deliver power from the driver to the input gear of a gear train and that take power from the output gear and transmit it to the driven machine. Describe various ways that the gears can be attached to the shafts and located with respect to each other. How can the shafts be supported?

This chapter contains the kinds of information that you can use to answer such questions and to complete the analysis and design of spur gear power transmission systems.

Chapters 10–15 cover similar topics for helical gears, bevel gears, and worm gearing, along with the design and specification of keys, couplings, seals, shafts, and bearings—all of which are needed to design a complete mechanical drive.

YOU ARE THE DESIGNER

You have already made the design decision that a spur gear type of speed reducer is to be used for a particular application. How do you complete the design of the gears themselves?

This is a continuation of a design scenario that was started in Chapter 1 of this book when the original goals were stated and when an overview of the entire book was given. The introduction to Part II continued this theme by indicating that the arrangement of the

chapters is aligned with the design process that you could use to complete the design of the speed reducer.

Then in Chapter 8, you, as the designer, dealt with the kinematics of a gear reducer that would take power from the shaft of an electric motor rotating at 1750 rpm and deliver it to a machine that was to operate at approximately 292 rpm. There you limited your interest to the decisions that affected motion and the basic

geometry of the gears. It was decided that you would use a double-reduction gear train to reduce the speed of rotation of the drive system in two stages using two pairs of gears in series. You also learned how to specify the layout of the gear train, along with key design decisions such as the numbers of teeth in all of the gears and the relationships among the diametral pitch, the number of teeth in the gears, the pitch diameters, and the distance between the centers of the shafts that carry those gears. For a chosen diametral pitch, you learned how to compute the dimensions of key features of the gear teeth such as the addendum, dedendum, and tooth width.

But the design is not complete until you have specified the material from which the gears are to be made and until you have verified that the gears will withstand the forces exerted on the gears

as they transmit power and the corresponding torque. The teeth must not break, and they must have a sufficiently long life to meet the needs of the customer who uses the reducer.

To complete the design, you need more data: How much power is to be transmitted? To what kind of machine is the power from the output of the reducer being delivered? How does that affect the design of the gears? What is the anticipated duty cycle for the reducer in terms of the number of hours per day, days per week, and years of life expected? What options do you have for materials that are suitable for gears? Which material will you specify, and what will be its heat treatment?

You are the designer. The information in this chapter will help you complete the design. ■

9-1 OBJECTIVES OF THIS CHAPTER

After completing this chapter, you will be able to demonstrate the competencies listed below. They are presented in the order that they are covered in this chapter. The primary objectives are numbers 6, 7, and 8, which involve (a) the calculation of the bending strength and the ability of the gear teeth to resist pitting and (b) the design of gears to be safe with regard to both strength and pitting resistance. The competencies are as follows:

1. Compute the forces exerted on gear teeth as they rotate and transmit power.
2. Describe various methods for manufacturing gears and the levels of precision and quality to which they can be produced.
3. Specify a suitable level of quality for gears according to the use to which they are to be put.
4. Describe suitable metallic materials from which to make the gears, in order to provide adequate performance for both strength and pitting resistance.
5. Use the standards of the American Gear Manufacturers Association (AGMA) as the basis for completing the design of the gears.
6. Use appropriate stress analyses to determine the relationships among the applied forces, the geometry of the gear teeth, the precision of the gear teeth, and other factors specific to a given application, in order to make final decisions about those variables.
7. Perform the analysis of the tendency for the contact stresses exerted on the surfaces of the teeth to cause pitting of the teeth, in order to determine an adequate hardness of the gear material that will provide an acceptable level of pitting resistance for the reducer.
8. Complete the design of the gears, taking into consideration both the stress analysis and the analysis of pitting resistance. The result will be a complete specification of the gear geometry, the material for the gear, and the heat treatment of the material.

Outline of the Chapter: The process of designing spur gear drives contains numerous steps and requires

the determination of several quantities that affect the performance of the drives. This chapter builds that process within the following sections, all of which contribute to the final design process described in Section 9-9. The list below gives the primary steps in the process for the design of a drive consisting of two steel gears.

1. Define the goals of the gear drive design: power to be transmitted, speed of the input gear, desired speed of the output gear, the kind of driver that provides the power, the kind of driven machine, and any special design features.
2. Determine the forces applied to the gear (Section 9-3).
3. Define the precision required for the gears by specifying the quality number (Section 9-5).
4. Understand the types of steel alloys typically used for gears and the kinds of heat treatment available (Section 9-7).
5. Propose the geometry of the gears including the pitch, number of teeth in each gear, pitch diameter, form of the teeth, and face width (Section 9-9).
6. Determine the expected stress due to bending in the gear teeth. This step requires specification of several factors that are functions of the manner of use and the manufacturing processes that will be used to produce the gears (Section 9-5).
7. Determine the expected actual contact stress experienced by the face of the teeth (Section 9-6).
8. Using the bending stress from Step 6 and the contact stress from Step 7, determine the strength and hardness required for the materials from which the gears are to be made to ensure adequate safety and life and specify the steel alloy and heat treatment that will meet these requirements (Section 9-8).
9. Summarize the design details.

9-2 CONCEPTS FROM PREVIOUS CHAPTERS

As you study this chapter, it is assumed that you are familiar with the geometry of gear features and the kinematics of one gear driving another as presented in Chapter 8.

(See also References 4 and 25.) Key relationships that you should be able to use include the following:

$$\text{Pitch line speed} = v_t = R\omega = (D/2)\omega$$

where R = radius of the pitch circle

D = pitch diameter

ω = angular velocity of the gear

Because the pitch line speed is the same for both the pinion and the gear, values for R , D , and ω can be for either. In the computation of stresses in gear teeth, in the U.S. system, it is usual to express the pitch line speed in the units of ft/min, while the size of the gear is given as its pitch diameter expressed in inches. Speed of rotation is typically given as n rpm—that is, n rev/min. Let's compute the unit-specific equation that gives pitch line speed in ft/min:

▷ Pitch Line Speed U.S. Units

$$v_t = (D/2)\omega = \frac{D \text{ in}}{2} \cdot \frac{n \text{ rev}}{\text{min}} \cdot \frac{2\pi \text{ rad}}{\text{rev}} \cdot \frac{1 \text{ ft}}{12 \text{ in}} \\ = (\pi Dn/12) \text{ ft/min} \quad (9-1)$$

In the SI metric system, diameter is typically expressed in mm and speed in rpm while the pitch line speed is in m/s. Using a process similar to that used above for Equation (9-1), the following unit-specific expression was developed in Chapter 8.

▷ Pitch Line Speed SI Units

$$v_t = (\pi Dn/60\,000) \text{ m/s} \quad (9-2)$$

The velocity ratio can be expressed in many ways. For the particular case of a pinion driving a larger gear,

▷ Velocity Ratio

The general definition of velocity ratio, VR, for gear drives is:

$$VR = (\omega_{\text{input}})/(\omega_{\text{output}}) = N_{\text{output}}/N_{\text{input}}$$

When the pinion is the driver and the gear is driven, the velocity ratio can be written as:

$$\text{Velocity ratio} = VR = \frac{\omega_p}{\omega_G} = \frac{n_p}{n_G} = \frac{R_G}{R_p} = \frac{D_G}{D_p} = \frac{N_G}{N_p} \quad (9-3)$$

A related ratio, m_G , called the *gear ratio*, is often used in analysis of the performance of gears. It is always defined as the ratio of the number of teeth in the larger gear to the number of teeth in the pinion, regardless of which is the driver. Thus, m_G is always greater than or equal to 1.0. When the pinion is the driver, as it is for a speed reducer, m_G is equal to VR. That is,

▷ Gear Ratio

$$\text{Gear ratio} = m_G = N_G/N_p \geq 1.0 \quad (9-4)$$

In the U.S. system the diametral pitch, P_d , characterizes the physical size of the teeth of a gear. It is related to the pitch diameter and the number of teeth as follows:

▷ Diametral Pitch

$$P_d = N_G/D_G = N_p/D_p \quad (9-5)$$

In the SI metric system, the metric module, m , characterizes the size of the teeth. It is defined as

▷ Metric Module

$$m = D_G/N_G = D_p/N_p \quad (9-6)$$

The pressure angle, ϕ , is an important feature that characterizes the form of the involute curve that makes up the active face of the teeth of standard gears. See Figure 8-13. Also notice in Figure 8-12 that the angle between a normal to the involute curve and the tangent to the pitch circle of a gear is equal to the pressure angle.

9-3 FORCES, TORQUE, AND POWER IN GEARING

To understand the method of computing stresses in gear teeth, consider the way power is transmitted by the gear system shown in Figure 9-2. Part (a) is a perspective view and part (b) is the side view. The electric motor delivers power at the speed of its shaft through a flexible coupling to the input gear. The input gear drives the larger output gear to achieve a speed reduction. The shaft carrying the output gear transmits the power through a second flexible coupling to drive a roller in a printing press. It is important to determine the torque in both the input and output shafts using the following equation:

▷ Torque

$$\text{Torque} = \text{power}/\text{rotational speed} = P/n \quad (9-7)$$

Because the speed of the pinion is higher than the speed of the gear, the output torque is higher than the input torque. The power is transmitted from the input shaft to the pinion through a key. The teeth of the pinion drive the teeth of the gear and thus transmit the power to the gear. But again, power transmission actually involves the application of a torque during rotation at a given speed. The torque is the product of the force acting tangent to the pitch circle of the pinion times the pitch radius of the pinion. We will use the symbol W_t to indicate the *tangential force*. As described, W_t is the force exerted by the pinion teeth on the gear teeth. This force is used to transmit power from one gear to the other and is referred to as the *driving force*. But if the gears are rotating at a constant speed and are transmitting a uniform level of power, the system is in equilibrium. Therefore, there must be an equal and opposite tangential force exerted by the gear teeth back on the pinion teeth as shown in Figure 9-2(c). This is an application of the principle of action and reaction.

To complete the description of the power flow, the tangential force on the gear teeth produces a torque on the gear equal to the product of W_t times the pitch radius of the gear. Because W_t is the same on the pinion and the gear, but the pitch radius of the gear is larger than that of the pinion, the torque on the gear (the output torque)

is greater than the input torque. However, note that the power transmitted to the gear is only slightly less because of the high mechanical inefficiency of the gearing. The power then flows from the gear through the key to the output shaft, the second flexible coupling, and finally to the driven machine.

From this description of power flow, we can see that gears transmit power by exerting a force by the driving teeth on the driven teeth while the reaction force acts back on the teeth of the driving gear. Figure 9–3 shows a single gear tooth with the tangential force W_t acting on it. But this is not the total force on the tooth as shown in Figure 9–2(d). Because of the involute form of the

tooth, the total force transferred from one tooth to the mating tooth acts normal to the involute profile. This action is shown as W_n . The tangential force W_t is actually the horizontal component of the total force. To complete the picture, note that there is a vertical component of the total force acting radially on the gear tooth, indicated by W_r . The radial force tends to separate the gear set and is called the *separating force*.

The normal and radial forces on the gears must be resisted by the bearings that support the shafts as shown in Figure 9–2(e). This observation is important for the design of the shafts carrying the gears as will be demonstrated in Chapter 12.

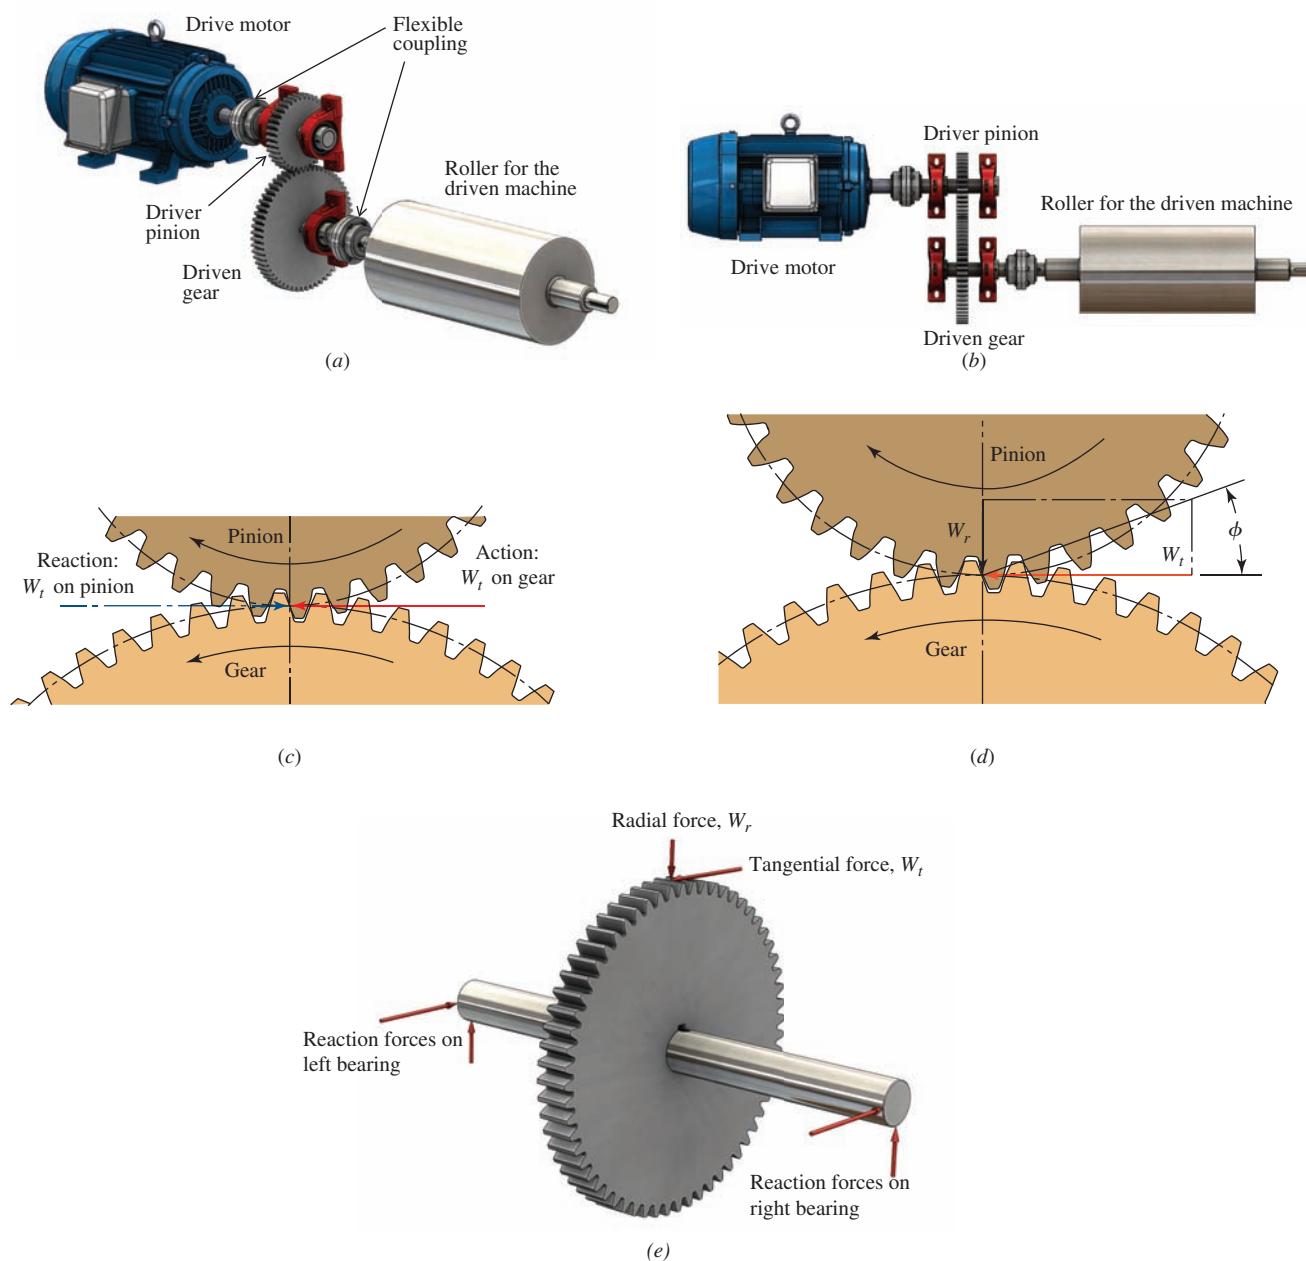


FIGURE 9–2 (a) Power flow through a gear pair (b) Side view of drive train (c) View of gear teeth in mesh showing tangential forces on both gears (d) Tangential and radial forces exerted by the pinion tooth on the gear tooth (e) Forces on the shaft carrying the driven gear

The discussion about power flow and forces existing in gears thus far is generic and independent of units. Following discussion is developed primarily for the U.S. unit system based on the diametral pitch, P_d . Later, we adapt the results to the SI metric unit system and module, m .

We will start the computation of forces with the transmitted force, W_t , because its value is based on the given data for power and speed. It is convenient to develop unit-specific equations for W_t because standard practice typically calls for the following units for key quantities pertinent to the analysis of gear sets:

Forces in pounds (lb)

Power in horsepower (hp) (Note that

$$1.0 \text{ hp} = 550 \text{ lb} \cdot \text{ft/s.}$$

Rotational speed in rpm, that is, rev/min

Pitch line speed in ft/min

Torque in lb · in

The torque exerted on a gear is the product of the transmitted load, W_t , and the pitch radius of the gear. The torque is also equal to the power transmitted divided by the rotational speed. Then

$$T = W_t(R) = W_t(D/2) = P/n$$

Then we can solve for the force, and the units can be adjusted as follows:

▷ Tangential Force

$$W_t = \frac{2P}{Dn} = \frac{2P(\text{hp})}{D(\text{in}) \cdot n(\text{rev/min})} \cdot \frac{550 \text{ lb} \cdot \text{ft/s}}{(\text{hp})} \cdot \frac{1.0 \text{ rev}}{2\pi \text{ rad}} \cdot \frac{60 \text{ s/min}}{\text{min}} \cdot \frac{12 \text{ in}}{\text{ft}}$$

$$W_t = (126,000)(P)/(nD) \text{ lb} \quad (9-8)$$

Data for either the pinion or the gear can be used in this equation. Other relationships are now developed because they are needed in other parts of the process of analyzing the gears or the shafts that carry them.

Power is also the product of transmitted force, W_t , and the pitch line velocity:

$$P = W_t \cdot v_t$$

Then, solving for the force and adjusting units, we have

▷ Tangential Force

$$W_t = \frac{P}{v_t} = \frac{P(\text{hp})}{v_t(\text{ft/min})} \cdot \frac{550 \text{ lb} \cdot \text{ft/s}}{1.0 \text{ hp}} \cdot \frac{60 \text{ s/min}}{\text{min}}$$

$$= 33,000(P)/(v_t) \text{ lb} \quad (9-9)$$

We may also need to compute torque in lb · in:

▷ Torque

$$T = \frac{P}{\omega} = \frac{P(\text{hp})}{n(\text{rev/min})} \cdot \frac{550 \text{ lb} \cdot \text{ft/s}}{1.0 \text{ hp}} \cdot \frac{1.0 \text{ rev}}{2\pi \text{ rad}} \cdot \frac{60 \text{ s/min}}{\text{min}} \cdot \frac{12 \text{ in}}{\text{ft}}$$

$$T = 63,000(P)/n \text{ lb} \cdot \text{in} \quad (9-10)$$

These values can be computed for either the pinion or the gear by appropriate substitutions. Remember that the pitch line speed is the same for the pinion and the gear and that the transmitted loads on the pinion and the gear are the same, except that they act in opposite directions.

The normal force, W_n , and the radial force, W_r , can be computed from the known W_t by using the right triangle relations evident in Figure 9–3:

▷ Radial Force

$$W_r = W_t \tan \phi \quad (9-11)$$

▷ Normal Force

$$W_n = W_t / \cos \phi \quad (9-12)$$

where ϕ = pressure angle of the tooth form

In addition to causing the stresses in the gear teeth, these forces act on the shaft. In order to maintain equilibrium, the bearings that support the shaft must provide the reactions. Figure 9–2(e) shows the free-body diagram of the output shaft of the reducer.

Let's look at an example of a pinion driving a gear to see how the rotational speed, torque, and forces are determined.

Power Flow and Efficiency

The discussion thus far has focused on power, torque, and forces for a single pair of gears. For compound gearing having two or more pairs of gears, the flow of power and the overall efficiency become increasingly important.

Power losses in gear drives made from spur, helical, and bevel gears depend on the action of each tooth on its mating tooth, a combination of rolling and sliding. For accurate, well-lubricated gears, the power loss ranges from 0.5% to 2.0% and is typically taken to be approximately 1.0%. (See Reference 20.) Because this is quite small, it is customary to neglect it in sizing individual gear pairs; we do that in this book.

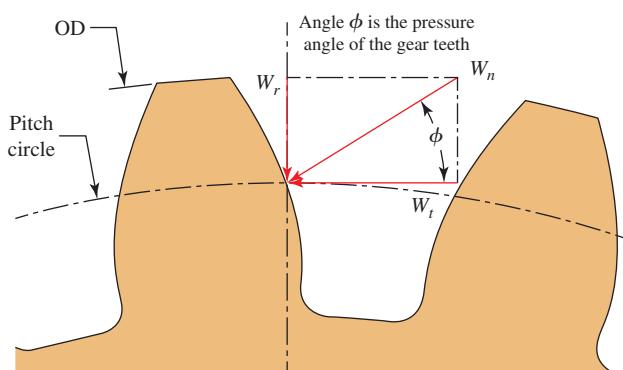


FIGURE 9–3 Forces on gear teeth: Tangential force, W_t ; Radial force, W_r ; Normal force, W_n

**Example Problem
9–1**

A pair of spur gears with a 20° pressure angle, full depth, involute teeth transmit 30 hp. The pinion is mounted on a jack shaft assembly that is directly coupled to the shaft of the electric motor operating at 600 rpm as shown in Figure 9–2(a) and (b). The pinion has 36 teeth and a diametral pitch of 5. The gear has 60 teeth and is mounted on a jack shaft assembly that is directly coupled to the output roller. The output roller is part of the driven machinery. Compute the following:

- The velocity ratio and the gear ratio for the gear pair.
- The rotational speed of the gear.
- The pitch diameter of the pinion and the gear.
- The center distance of the shafts carrying the pinion and the gear.
- The pitch line speed for both the pinion and the gear.
- The torque on the pinion shaft and gear shaft.
- The tangential force and on the teeth of each gear.
- The radial force acting on the teeth of each gear.
- The normal force acting on the teeth of each gear.

Solution a. From Equation (9–3), with the pinion as the driver and the gear being driven, the velocity ratio is:

$$\text{Velocity ratio} = VR = \frac{\omega_p}{\omega_g} = \frac{N_g}{N_p} = \frac{60}{36} = 1.667$$

b. The velocity ratio can be rewritten to solve for the rotational speed of the gear:

$$\omega_g = \frac{\omega_p}{VR} = \frac{600 \text{ rpm}}{1.667} = 360 \text{ rpm}$$

c. The pitch diameters of the pinion and gear are:

$$D_p = \frac{N_p}{P_d} = \frac{36}{5} = 7.200 \text{ in} \quad D_g = \frac{N_g}{P_d} = \frac{60}{5} = 12.000 \text{ in}$$

d. The center distance for the pinion and gear:

$$CD = \frac{D_p + D_g}{2} = \frac{7.200 \text{ in} + 12.000 \text{ in}}{2} = 9.600 \text{ in}$$

e. The pitch line speed can be solved using either the pinion or the gear:

$$v_t = \frac{D}{2} \cdot \omega$$

$$v_{tp} = \frac{D_p}{2} \cdot \omega_p = \frac{7.200 \text{ in}}{2} \cdot \frac{600 \text{ rev}}{\text{min}} \cdot \frac{2\pi \text{ rad}}{1 \text{ rev}} \cdot \frac{1 \text{ ft}}{12 \text{ in}} = 1130 \text{ fpm}$$

$$v_{tg} = \frac{D_g}{2} \cdot \omega_g = \frac{12.000 \text{ in}}{2} \cdot \frac{360 \text{ rev}}{\text{min}} \cdot \frac{2\pi \text{ rad}}{1 \text{ rev}} \cdot \frac{1 \text{ ft}}{12 \text{ in}} = 1130 \text{ fpm}$$

f. The torque on the pinion shaft and gear shaft can be determined by solving the power equation in terms of torque

$$T = \frac{P}{\omega}$$

$$T_p = \frac{P}{\omega_p} = \frac{30 \text{ hp}}{600 \text{ rpm}} \cdot \frac{33000 \frac{\text{lb} \cdot \text{ft}}{\text{min}}}{1 \text{ hp}} \cdot \frac{1 \text{ rev}}{2\pi \text{ rad}} \cdot \frac{12 \text{ in}}{1 \text{ ft}} = 3151.3 \text{ lb} \cdot \text{in}$$

$$T_g = \frac{P}{\omega_g} = \frac{30 \text{ hp}}{360 \text{ rpm}} \cdot \frac{33000 \frac{\text{lb} \cdot \text{ft}}{\text{min}}}{1 \text{ hp}} \cdot \frac{1 \text{ rev}}{2\pi \text{ rad}} \cdot \frac{12 \text{ in}}{1 \text{ ft}} = 5252.1 \text{ lb} \cdot \text{in}$$

You will notice the ratio of the torque on the gear shaft to the torque on the pinion shaft is the same as the gear ratio: The power through each shaft is 30 hp. If the rotational speed of the shaft decreases, the torque will increase proportionally keeping the power constant.

$$m_g = \frac{T_g}{T_p} = \frac{5252.1 \text{ lb}\cdot\text{in}}{3151.3 \text{ lb}\cdot\text{in}} = 1.67$$

- g. The tangential force is solved using the pinion torque and the pitch circle radius or the gear torque and gear pitch circle radius. This is the drive force the pinion tooth applies to the gear tooth and equal and opposite reaction force the gear tooth applies to the pinion tooth.

$$W_t = \frac{T_p}{\left(\frac{D_p}{2}\right)} = \frac{3151.3 \text{ lb}\cdot\text{in}}{\left(\frac{7.200 \text{ in}}{2}\right)} = 875.4 \text{ lb}$$

$$W_t = \frac{T_g}{\left(\frac{D_g}{2}\right)} = \frac{5252.1 \text{ lb}\cdot\text{in}}{\left(\frac{12.000 \text{ in}}{2}\right)} = 875.4 \text{ lb}$$

- h. The radial force is calculated using the tangential force and the pressure angle. As you can see the direction of the force is toward the centerline of the shaft and tends to separate the gear set.

$$W_r = W_t \cdot \tan(\phi) = 875.4 \text{ lb} \cdot \tan(20^\circ) = 318.6 \text{ lb}$$

- i. The normal force to the tooth profile is solved using Pythagorean theorem. This force is along the line of action and is normal to the tooth profile as shown in Figure 9–4.

$$W_n = \sqrt{(W_t)^2 + (W_r)^2} = \sqrt{(875.4 \text{ lb})^2 + (318.6 \text{ lb})^2} = 931.5 \text{ lb}$$

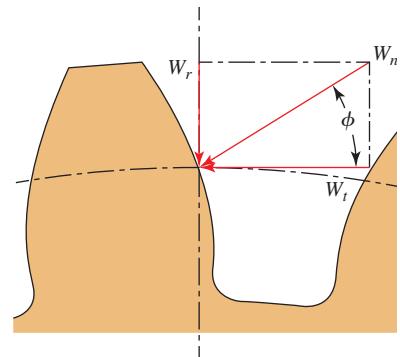


FIGURE 9–4 Forces on the gear tooth

Example Problem 9–2 follows, in which the power from a drive motor is delivered through a gear train to four separate output shafts, demonstrating the concept of

power flow through a gear train. Tracking the power, torque, and speed of each gear in the train is critical to proper analysis.

Example Problem 9–2

Figure 9–5 represents the power flow through a gear drive to multiple output shafts. Gear A is mounted on an electric motor that has a rotational speed of 1500 rpm (CW). Gear A drives a simple gear train consisting of gears B, C, D, and E. Gear A transfers the input power through each gear to the shaft on which it is mounted. The power levels delivered from shafts B, C, D, and E are 3 hp, 8 hp, 3 hp, and 3 hp, respectively. All gears have a diametral pitch of 10 and the following numbers of teeth:

$$N_A = 60 \quad N_B = 30 \quad N_C = 90 \quad N_D = 30 \quad N_E = 30 \quad P_d = 8$$

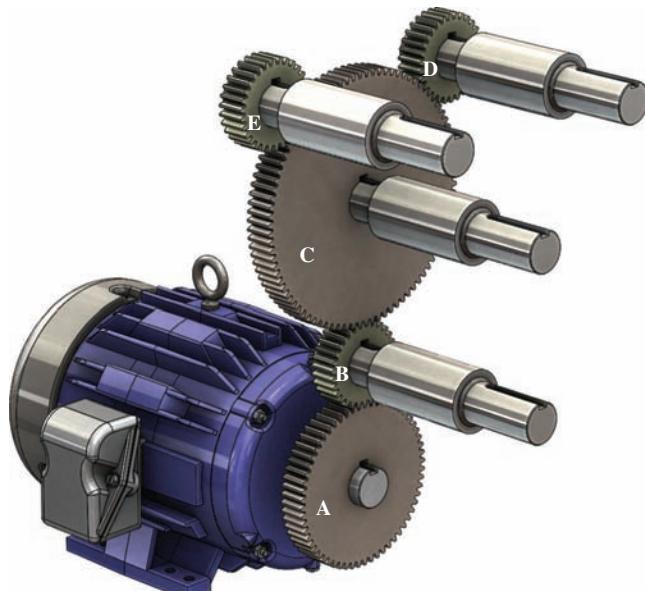


FIGURE 9–5 Power flow through gear drive system

Determine the following data for the drive system:

- The pitch diameter of each gear
- The center distance of each gear mesh
- The rotational speed of each output shaft
- Neglecting efficiency losses, find the power requirement of the electric motor
- The torque through each output shaft and the tangential force on the gear teeth

Solution

- a. Pitch Diameter for each gear:

$$D_A = \frac{N_A}{p_d} = \frac{60}{10} = 6.000 \text{ in} \quad D_B = \frac{N_B}{p_d} = \frac{30}{10} = 3.000 \text{ in} \quad D_C = \frac{N_C}{p_d} = \frac{90}{10} = 9.000 \text{ in}$$

$$D_D = \frac{N_D}{p_d} = \frac{30}{10} = 3.000 \text{ in} \quad D_E = \frac{N_E}{p_d} = \frac{30}{10} = 3.000 \text{ in}$$

- b. The center distance for each gear mesh:

$$CD_{A-B} = \frac{D_A + D_B}{2} = \frac{6.0 \text{ in} + 3.0 \text{ in}}{2} = 4.500 \text{ in} \quad CD_{B-C} = \frac{D_B + D_C}{2} = \frac{3.0 \text{ in} + 9.0 \text{ in}}{2} = 6.000 \text{ in}$$

$$CD_{C-D} = \frac{D_C + D_D}{2} = \frac{9.0 \text{ in} + 3.0 \text{ in}}{2} = 6.000 \text{ in} \quad CD_{C-E} = \frac{D_C + D_E}{2} = \frac{9.0 \text{ in} + 3.0 \text{ in}}{2} = 6.000 \text{ in}$$

- c. The next item we want to solve for is the rotational speed of each gear of the gear train. Let's step through one gear mesh at a time, starting with gear A that drives gear B:

$$VR_{A-B} = \frac{n_A}{n_B} = \frac{N_B}{N_A} = \frac{30}{60} = \frac{1}{2}$$

The equation $VR_{A-B} = \frac{n_A}{n_B}$ is used to solve for the rotational speed of gear B. The velocity ratio gives a speed increase from gear A to gear B:

$$n_B = \frac{n_A}{VR_{A-B}} = \frac{1500 \text{ rpm}}{0.5} = 3000 \text{ rpm}$$

Likewise, considering gear B driving gear C, the velocity ratio is:

$$VR_{B-C} = \frac{n_B}{n_C} = \frac{N_C}{N_B} = \frac{90}{30} = 3$$

The rotation speed of gear C: $n_C = \frac{n_B}{VR_{B-C}} = \frac{3000 \text{ rpm}}{3} = 1000 \text{ rpm}$

It is important to note, however, that using the velocity ratio equation from gear A to gear C would give us the same result:

$$VR_{A-C} = \frac{n_A}{n_C} = \frac{N_B}{N_A} \cdot \frac{N_C}{N_B} = \frac{30}{60} \cdot \frac{90}{30} = 1.5$$

The rotational speed of gear C: $n_C = \frac{n_A}{VR_{A-C}} = \frac{1500 \text{ rpm}}{1.5} = 1000 \text{ rpm}$

The rotational speed of gear D and gear E will be the same since both gears have the same number of teeth and are driven by gear C.

$$VR_{C-D} = \frac{n_C}{n_D} = \frac{N_D}{N_C} = \frac{30}{90} = \frac{1}{3}$$

$$n_E = n_D = \frac{n_C}{VR_{C-D}} = \frac{1000 \text{ rpm}}{0.333} = 3000 \text{ rpm}$$

Again, we could have used the velocity ratio equation from gear A to gear D or E. That would have given us the same results:

$$VR_{A-D} = \frac{n_A}{n_D} = \frac{N_B}{N_A} \cdot \frac{N_C}{N_B} \cdot \frac{N_D}{N_C} = \frac{30}{60} \cdot \frac{90}{30} \cdot \frac{30}{90} = \frac{1}{2}$$

$$\text{The rotational speed of gear D and gear E } n_D = n_E = \frac{n_A}{VR_{A-D}} = \frac{1500 \text{ rpm}}{0.5} = 1000 \text{ rpm}$$

- d. The power required by the motor, assuming no losses in the system, is equal to the sum of the power required by each drive shaft. This can be written as:

$$\begin{aligned} Power_{in} &= Power_{out} \\ P_{in} &= P_B + P_C + P_D + P_E \\ P_{in} &= 3 \text{ hp} + 8 \text{ hp} + 3 \text{ hp} + 3 \text{ hp} = 17 \text{ hp} \end{aligned}$$

- e. The next part of the problem is asking us to find the torque transmitted through each output shaft and the tangential force on the gear teeth. Start with gear E and work through to the drive motor gear A. The torque transmitted through shaft E can be found using the required output power and the rotational speed of shaft.

$$\begin{aligned} P_{out E} &= T_E \cdot n_E \\ T_E &= \frac{P_{out E}}{n_E} = \frac{3.0 \text{ hp}}{3000 \text{ rev/min}} \cdot \frac{33000 \cdot \frac{\text{lb} \cdot \text{ft}}{\text{min}}}{1 \text{ hp}} \cdot \frac{1 \text{ rev}}{2\pi \text{ rad}} \cdot \frac{12 \text{ in}}{1 \text{ ft}} = 63.0 \text{ lb} \cdot \text{in} \end{aligned}$$

The tangential gear force, $W_{tC/E}$, is the force gear C applies to gear E to obtain the torque required to transmit the required power through shaft E. The tangential force, $W_{tE/C}$ is the equal to but opposite the reaction force gear E applies to gear C. The tangential gear force can be determined:

$$W_{tD/C} = W_{tE/C} = \frac{T_E}{\left(\frac{D_E}{2}\right)} = \frac{63.0 \text{ lb} \cdot \text{in}}{\left(\frac{3.0 \text{ in}}{2}\right)} = 42.0 \text{ lb}$$

Since gear E has the same rotational speed, power requirement, and pitch diameter as gear D, the torque through shaft E and the tangential gear tooth force is the same. This is illustrated in Figure 9–6.

$$T_D = T_E = 63.0 \text{ lb} \cdot \text{in}$$

$$W_{tC/D} = W_{tD/C} = 42.0 \text{ lb}$$

8 hp is transmitted through shaft C at a rotational speed of 1000 rpm. The torque through shaft C can then be determined by rearranging this equation:

$$P_{out C} = T_C \cdot n_C$$

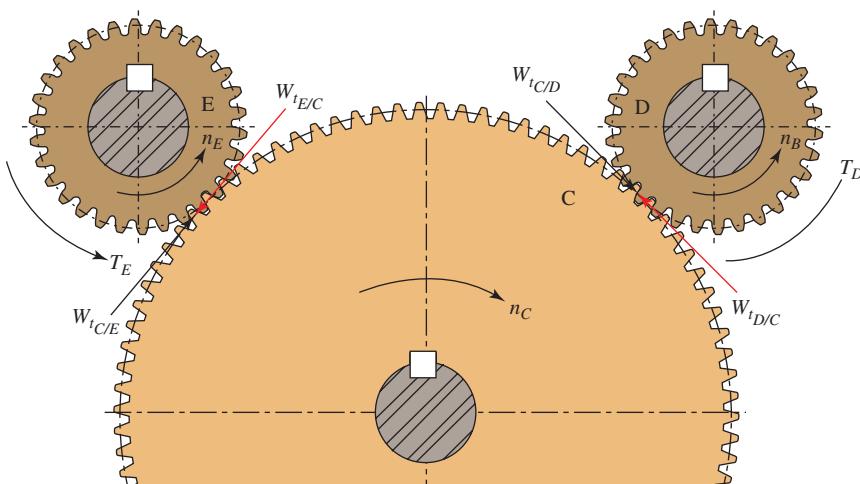


FIGURE 9–6 Torques and tangential gear force shown on gears C, D, and E

$$T_C = \frac{P_{out C}}{n_C} = \frac{8.0 \text{ hp}}{1000 \text{ rev/min}} \cdot \frac{33000 \frac{\text{lb} \cdot \text{ft}}{\text{min}}}{1 \text{ hp}} \cdot \frac{1 \text{ rev}}{2\pi \text{ rad}} \cdot \frac{12 \text{ in}}{1 \text{ ft}} = 504.2 \text{ lb} \cdot \text{in}$$

The total torque required to drive gears C, D, and E:

$$T_{C \text{ total}} = T_C + W_{t E/C} \cdot \left(\frac{D_C}{2} \right) + W_{t D/C} \cdot \left(\frac{D_C}{2} \right)$$

$$T_{C \text{ total}} = 504.2 \text{ lb} \cdot \text{in} + 42.0 \text{ lb} \cdot \left(\frac{9.0 \text{ in}}{2} \right) + 42.0 \text{ lb} \cdot \left(\frac{9.0 \text{ in}}{2} \right) = 882.3 \text{ lb} \cdot \text{in}$$

We can verify this torque, using the sum of the power required by shafts C, D, and E.

$$P_{C \text{ total}} = P_C + P_D + P_E = 8 \text{ hp} + 3 \text{ hp} + 3 \text{ hp} = 14 \text{ hp}$$

The total torque required to drive gears C, D, and E:

$$T_{C \text{ total}} = \frac{P_{C \text{ total}}}{n_C} = \frac{14 \text{ hp}}{1000 \text{ rev/min}} \cdot \frac{33000 \frac{\text{lb} \cdot \text{ft}}{\text{min}}}{1 \text{ hp}} \cdot \frac{1 \text{ rev}}{2\pi \text{ rad}} \cdot \frac{12 \text{ in}}{1 \text{ ft}} = 882.3 \text{ lb} \cdot \text{in}$$

We can see this gives us the same value as was shown above. This torque is used to find the tangential force gear C applies to gear B:

$$W_{t C/B} = \frac{T_{C \text{ total}}}{\left(\frac{D_C}{2} \right)} = \frac{882.3 \text{ lb} \cdot \text{in}}{\left(\frac{9.0 \text{ in}}{2} \right)} = 196.0 \text{ lb}$$

The tangential force gear C applies to gear B is equal to the reaction force gear B applies to gear C.

$$W_{t C/B} = W_{t B/C} = 196.0 \text{ lb}$$

This is shown in Figure 9–7.

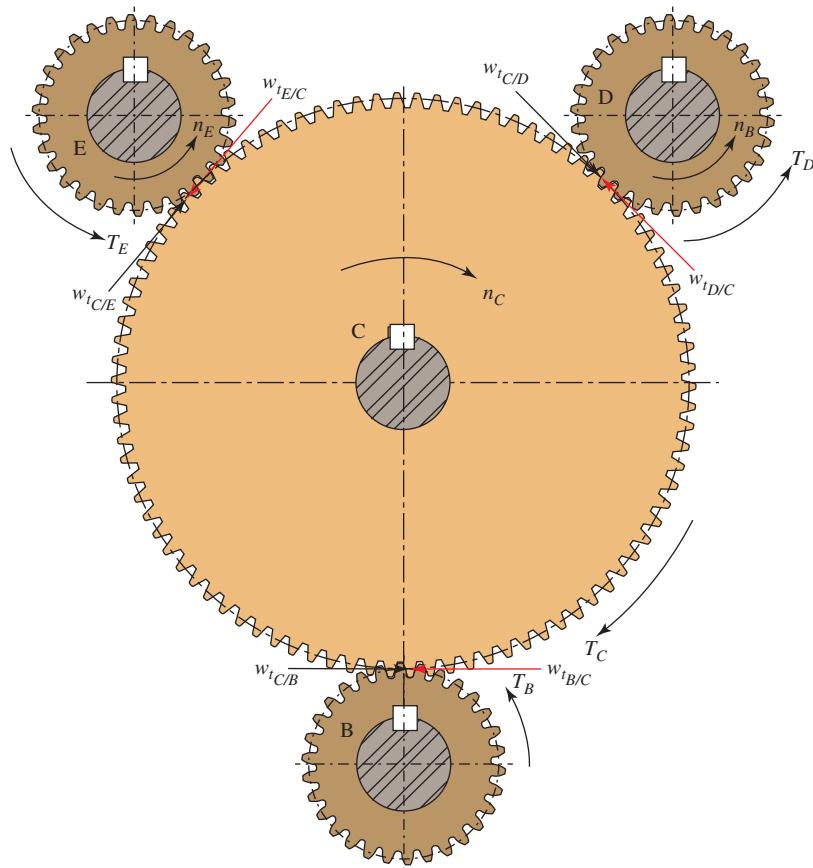


FIGURE 9–7 Tangential gear forces on gears B, C, D, and E

Shaft B transmits 3 hp at a rotational speed of 3000 rpm. The torque applied to shaft B to drive the output:

$$T_B = \frac{P_B}{n_B} = \frac{3.0 \text{ hp}}{3000 \text{ rev/min}} \cdot \frac{33000 \frac{\text{lb}\cdot\text{ft}}{\text{min}}}{1 \text{ hp}} \cdot \frac{1 \text{ rev}}{2\pi \text{ rad}} \cdot \frac{12 \text{ in}}{1 \text{ ft}} = 63.0 \text{ lb}\cdot\text{in}$$

The total torque required to drive gears B, C, D, and E

$$T_{B\ total} = T_B + W_{tC/B} \cdot \left(\frac{D_B}{2} \right) = 63.0 \text{ lb}\cdot\text{in} + 196.0 \text{ lb} \cdot \left(\frac{3.0 \text{ in}}{2} \right) = 357.1 \text{ lb}\cdot\text{in}$$

We can verify this torque using the sum of the power required by shafts B, C, D, and E.

$$P_{B\ total} = P_B + P_C + P_D + P_E = 3 \text{ hp} + 8 \text{ hp} + 3 \text{ hp} + 3 \text{ hp} = 17 \text{ hp}$$

The total torque required to drive gears B, C, D, and E:

$$T_{B\ total} = \frac{P_{B\ total}}{n_C} = \frac{17 \text{ hp}}{1000 \text{ rev/min}} \cdot \frac{33000 \frac{\text{lb}\cdot\text{ft}}{\text{min}}}{1 \text{ hp}} \cdot \frac{1 \text{ rev}}{2\pi \text{ rad}} \cdot \frac{12 \text{ in}}{1 \text{ ft}} = 357.1 \text{ lb}\cdot\text{in}$$

This gives us the same result as was shown above. This torque is used to find the tangential force gear B applies to gear A:

$$W_{tB/A} = \frac{T_{B\ total}}{\left(\frac{D_B}{2} \right)} = \frac{357.1 \text{ lb}\cdot\text{in}}{\left(\frac{3.0 \text{ in}}{2} \right)} = 238.1 \text{ lb}$$

The tangential force gear B applies to gear A is equal to the reaction force gear A applies to gear B and is shown in Figure 9–8.

$$W_{tB/A} = W_{tA/B} = 238.1 \text{ lb}$$

The required torque of the motor is:

$$T_{Motor} = T_A = W_{tA/B} \cdot \left(\frac{D_A}{2} \right) = 238.1 \text{ lb}\cdot\text{in} \cdot \left(\frac{6.0 \text{ in}}{2} \right) = 714.3 \text{ lb}\cdot\text{in}$$

The motor torque and rotational speed can be used to verify the input power requirement.

$$P_{Motor} = T_{Motor} \cdot n_{Motor} = 714.3 \text{ lb}\cdot\text{in} \cdot 1500 \text{ rpm} \cdot \frac{1 \text{ hp}}{33000 \frac{\text{lb}\cdot\text{ft}}{\text{min}}} \cdot \frac{2\pi \text{ rad}}{1 \text{ rev}} \cdot \frac{1 \text{ ft}}{12 \text{ in}} = 17 \text{ hp}$$

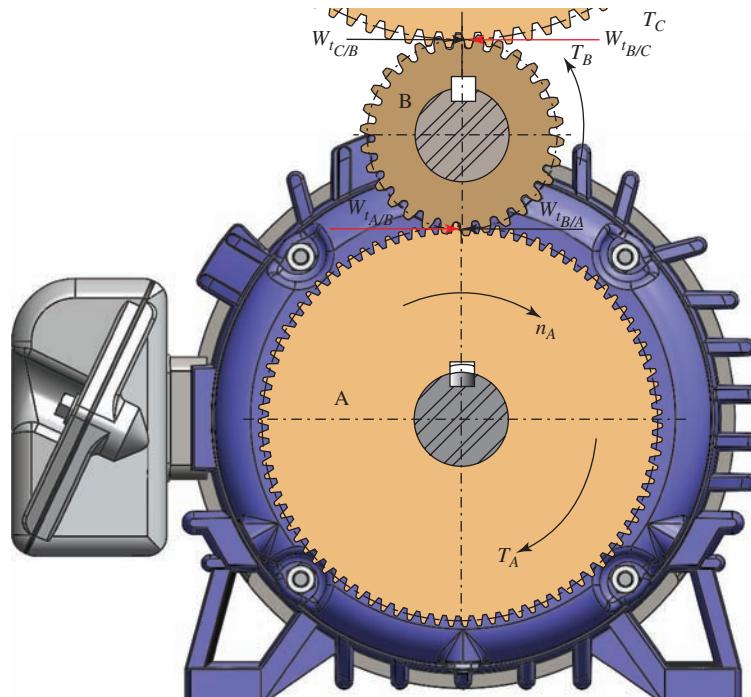


FIGURE 9–8 Tangential gear forces on gears A and B

Compound gear drives employ several pairs of gears in series to produce large speed reduction ratios. With 1.0% power loss in each pair, the accumulated power loss for the system can become significant, and it can affect the size of motor to drive the system or the ultimate power and torque available for use at the output. Furthermore, the power loss is transferred to the environment or into the gear lubricant and, for large power transmissions, the management of the heat generated is critical to the overall performance of the unit. The viscosity and load-carrying ability of lubricants is degraded with increasing temperature.

Tracking power flow in a simple or compound gear train is simple, the power is transferred from one gear pair to the next with only a small power loss at each mesh. More complex designs may split the power flow at some point to two or more paths. This is typical of planetary gear trains. In such cases, you should consider the basic relationship among power, torque, and rotational speed shown in Equation (9–7), $P = T \times n$. We can present this in another form. Let the rotational speed, n , that is typically taken to be in the units of rpm, be the more general term *angular velocity*, ω , in the units of rad/s. Now express the torque in terms of the transmitted forces, W_t , and the pitch radius of the gear, R . That is, $T = W_t R$. Equation (9–7) then becomes,

$$P = T \times n = W_t R \omega$$

But $R \omega$ is the pitch line velocity for the gears, v_t . Then,

$$P = W_t R \omega = W_t v_t$$

Knowing how the power splits enables the determination of the transmitted load at each mesh.

9–4 INTRODUCTION TO STRESS ANALYSIS FOR GEARS

Later in this chapter, design procedures are presented in which two forms of gear-tooth failure are considered.

A gear tooth acts like a cantilever beam in resisting the force exerted on it by the mating tooth. The point of highest tensile bending stress is at the root of the tooth where the involute curve blends with the fillet. The AGMA has developed a set of *allowable bending stress numbers*, called s_{at} , which are compared to computed bending stress levels in the tooth to rate the acceptability of a design.

A second, independent form of failure is the pitting of the surface of the teeth, usually near the pitch line, where high contact stresses occur. The transfer of force from the driving to the driven tooth theoretically occurs across a line contact because of the action of two convex curves on each other. Repeated application of these high contact stresses can cause a type of fatigue failure of the surface, resulting in local fractures and an actual loss of material. This is called *pitting*. The AGMA has developed a set of *allowable contact stress numbers*, called s_{ac} , which are compared to computed contact stress levels in the tooth to rate the acceptability of a design.

Both bending stress and contact stress must be at safe levels in any pair of gears. The processes involved in verifying those safe stress levels are developed and demonstrated in the following sections 9–5 through 9–12, as outlined here:

- Section 9–5 describes the method for calculating the bending stress in gear teeth and demonstrates that process in Example Problem 9–3.
- Section 9–6 describes the method for calculating the contact stress in gear teeth and demonstrates that process in Example Problem 9–4.
- Section 9–7 describes typical metallic materials that are used for gearing and provides sample data for allowable stresses that can be used for problem solving in this book. Additional data of this type can be found in References 6, 8, and 9.
- Section 9–8 describes the process for evaluating the safety of materials proposed for application to a particular pair of gears.
 - Example Problem 9–5 demonstrates the evaluation of three proposed materials for a given application with regard to bending stress.
 - Example Problem 9–6 then demonstrates a similar evaluation for contact stress.
 - The comparison of the results for Example Problems 9–3 to 9–6 is then presented and conclusions are drawn on which proposed material is most satisfactory.
- Section 9–9 then presents an alternate approach to the design of gear pairs in which the final step is the specification of the material that will satisfy both the bending stress and the contact stress. Example Problem 9–7 demonstrates that process.
- Section 9–10 modifies the process developed in Section 9–9 for design of gearing in the metric module system. Example Problem 9–8 demonstrates that process.
- Sections 9–11 and 9–12 show examples of the use of spreadsheets to perform the many calculations required for analysis and design of gear pairs, along with the use of the spreadsheets to work toward an optimum design.

9–5 BENDING STRESS IN GEAR TEETH

The stress analysis of gear teeth is facilitated by consideration of the orthogonal force components, W_t and W_r , as shown in Figure 9–3.

The tangential force, W_t , produces a bending moment on the gear tooth similar to that on a cantilever beam. The resulting bending stress is maximum at the base of the tooth in the fillet that joins the involute profile to the bottom of the tooth space. Taking the detailed geometry of the tooth into account, Wilfred Lewis developed the equation for the stress at the base of the involute profile, which is now called the *Lewis equation*:

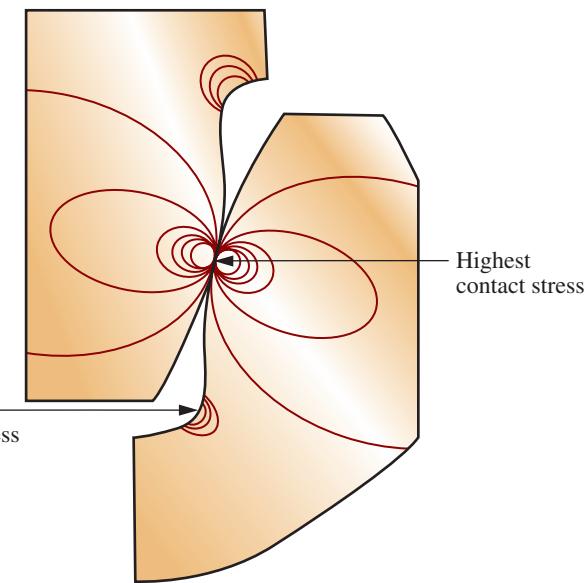


FIGURE 9-9 Photoelastic study of gear teeth under load

◆ Lewis Equation for Bending Stress in Gear Teeth

$$\sigma_t = \frac{W_t P_d}{F Y} \quad (9-13)$$

where

W_t = tangential force

P_d = diametral pitch of the tooth

F = face width of the tooth

Y = *Lewis form factor*, which depends on the tooth form, the pressure angle, the diametral pitch, the number of teeth in the gear, and the place where W_t acts

While the theoretical basis for the stress analysis of gear teeth is presented, the Lewis equation must be modified for practical design and analysis. One important limitation is that it does not take into account the stress concentration that exists in the fillet of the tooth. Figure 9-9 is a drawing made from an experimental stress analysis of the stress distribution in gear teeth. It indicates a stress concentration in the fillet at the root of the tooth as well as high contact stresses at the mating surface (contact stress is discussed in the following section). Comparing the actual stress at the root with that predicted by the Lewis equation enables us to determine the stress concentration factor, K_f , for the fillet area. Placing this into Equation (9-13) gives

$$\sigma_t = \frac{W_t P_d K_f}{F Y} \quad (9-14)$$

The value of the stress concentration factor is dependent on the form of the tooth, the shape and size of the fillet at the root of the tooth, and the point of application of the force on the tooth. Note that the value of the Lewis form factor, Y , also depends on the tooth geometry. Therefore, the two factors are combined into one term, the *geometry factor*, J , where $J = Y/K_f$. The value of J also, of course, varies with the location of the point

of application of the force on the tooth because Y and K_f vary.

Figure 9-10 shows graphs giving the values for the geometry factor for 20° and 25° , full-depth, involute teeth. The safest value to use is the one for the load applied at the tip of the tooth. However, this value is overly conservative because there is some load sharing by another tooth at the time that the load is initially applied at the tip of a tooth. The critical load on a given tooth occurs when the load is at the highest point of single-tooth contact, when the tooth carries the entire load. The upper curves in Figure 9-10 give the values for J for this condition.

Using the geometry factor, J , in the stress equation gives

$$\sigma_t = \frac{W_t P_d}{F J} \quad (9-15)$$

The graphs in Figure 9-10 are taken from the former AGMA Standard 218.01 which has been superseded by the two new standards: AGMA 2001, *Fundamental Rating Factors and Calculation Methods for Involute Spur and Helical Gear Teeth*, (Reference 6), and AGMA 908 *Geometry Factors for Determining the Pitting Resistance and Bending Strength of Spur, Helical and Herringbone Gear Teeth*, (Reference 3). Standard 908 includes an analytical method for calculating the geometry factor, J . But the values for J are unchanged from those in the former standard. Rather than graphs, the new standard reports values for J for a variety of tooth forms in tables. The graphs from the former standard are shown in Figure 9-10 so that you can visualize the variation of J with the number of teeth in the pinion and the gear.

Note also that J factors for only two tooth forms are included in Figure 9-10 and that the values are valid only for those forms. Designers must ensure that J factors for the tooth form actually used, including the form of the fillet, are included in the stress analysis.

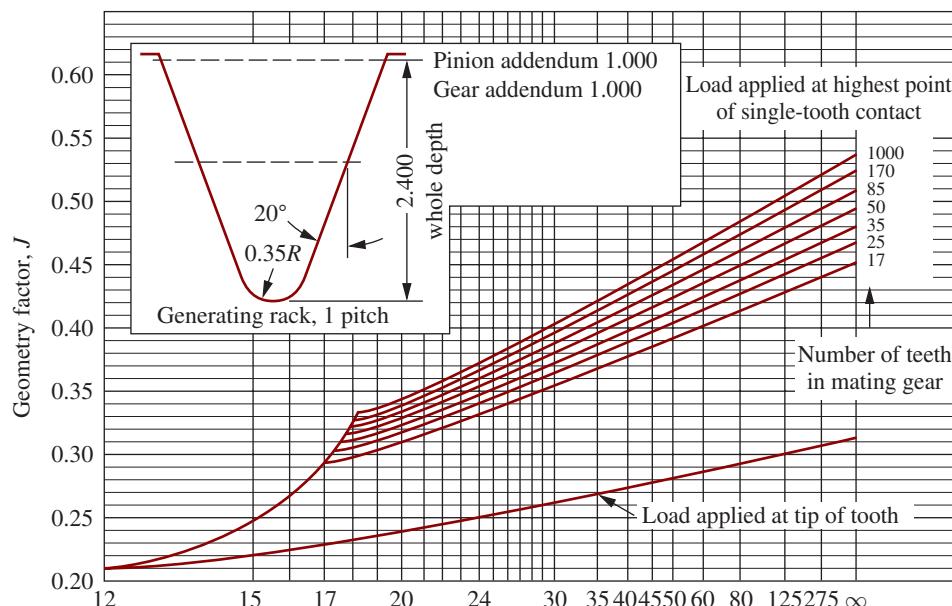
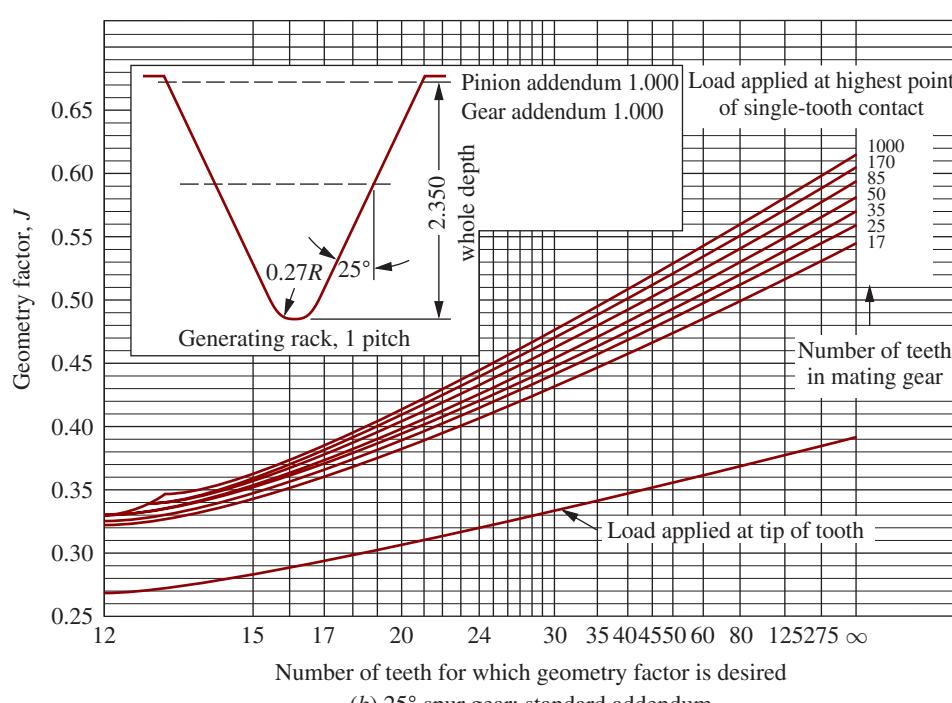
(a) 20° spur gear: standard addendum(b) 25° spur gear: standard addendum

FIGURE 9-10 Geometry factor, J (Extracted from AGMA 218.01 Standard, *Rating the Pitting Resistance and Bending Strength of Spur and Helical Involute Gear Teeth*, with the permission of the publisher, American Gear Manufacturers Association, 1001 North Fairfax Street, 5th floor, Alexandria, VA 22314)

Equation (9-15) can be called the *modified Lewis equation*. Other modifications to the equation are recommended by the AGMA in Standard 2001 for practical design to account for the variety of conditions that can be encountered in service.

The approach used by the AGMA is to apply a series of additional modifying factors to the bending stress from the modified Lewis equation to compute a value called the *bending stress number*, s_t . These factors

represent the degree to which the actual loading case differs from the theoretical basis of the Lewis equation. The result is a better estimate of the real level of bending stress that is produced in the teeth of the gear and the pinion.

Then, separately, the allowable bending stress number, s_{at} , is modified by a series of factors that affect that value when the environment is different from the nominal situation assumed when the values for s_{at} are set.

The result here is a better estimate of the real level of the bending strength of the material from which the gear or the pinion is made.

The design is completed in a manner that ensures that the bending stress number is less than the modified allowable bending stress number. This process should be completed for both the pinion and the gear of a given pair because materials may be different; the geometry factor, J , is different; and other operating conditions may be different. This is demonstrated in example problems later in this chapter.

Often the major decision to be made is the specification of suitable materials from which to make the pinion and the gear. In such cases, the required basic allowable bending stress number, s_{at} , will be computed. When steel is used, the required hardness of the material is found from the data described in Section 9–7. Finally, the material and its heat treatment are specified to ensure that it will have at least the required hardness.

We proceed now with the discussion of the bending stress number, s_t .

Bending Stress Number, s_t

The design analysis method used here is based primarily on AGMA Standard 2001. However, because values for some of the factors are not included in the standard, data from other sources are added. These data illustrate the kinds of conditions that affect the final design. The designer ultimately has the responsibility for making appropriate design decisions.

The following equation will be used in this book:

□ Bending Stress Number, s_t

$$s_t = \frac{W_t P_d}{F} K_o K_s K_m K_B K_v \quad (9-16)$$

where W_t = tangential force

P_d = diametral pitch

F = face width

J = geometry factor

K_o = overload factor for bending strength

K_s = size factor for bending strength

K_m = load-distribution factor for bending strength

K_B = rim thickness factor

K_v = dynamic factor for bending strength

Methods for specifying values for these factors are discussed below.

Tangential Force, W_t

The tangential force, W_t , is the driving force of the gear mesh. The pinion transmits a force tangent to the pitch circle on the gear. The method for calculating this force is described in detail in Section 9–3.

Diametral Pitch, P_d

The diametral pitch is the size of the gear tooth and is related to the number of teeth and the pitch diameter. If the diametral pitch is not given as a specific value in a problem, use Figure 9–11 to select a trial value. Figure 9–11 provides initial guidance when selecting a diametral pitch for a pair of steel gears. The graph of design power transmitted versus the pinion rotational speed was derived for selected pitches and pinion diameters. Steel that is through hardened to HB 300 is used to generate the graph. Because of the numerous variables involved, the value of P_d read from the figure is only an initial target value. Subsequent iterations may require considering a different value, either higher or lower.

The design power equation is:


$$P_{\text{design}} = K_o \cdot P$$

where

K_o is the overload factor which will be explained in detail in this section

P is the power being transmitted by the gear pair

P_{design} is the power level used for the design of the gear drive system

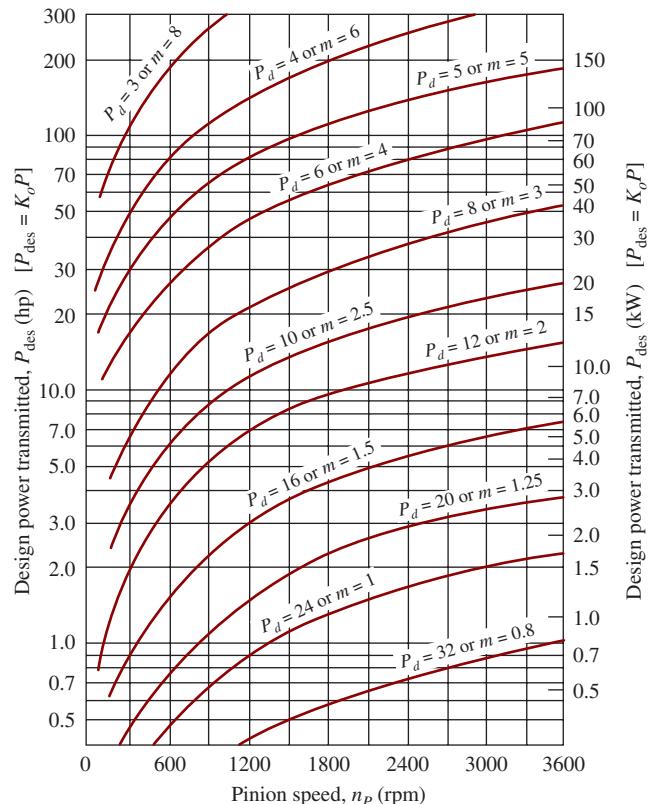

For all curves: 20° full depth teeth;

$N_p = 24$; $N_G = 96$; $m_G = 4.00$; $F = 12/P_d$; $A_V = 11$

Steel gears, HB 300; $s_{at} = 36000$ psi (250 MPa); $s_{ac} = 126000$ psi (869 MPa)

FIGURE 9-11 Design power transmitted versus pinion speed for spur gears with different pitches and diameters

Face Width, F

The face width of the gear tooth should fall within this range

$$\frac{8}{P_d} < F < \frac{16}{P_d}$$

The upper limit given tends to minimize alignment problems and ensures reasonable loading across the face. When the face width is less than the lower limit, it is probable that a more compact design can be achieved with a smaller diametral pitch. Also, the face width normally is less than twice the pitch diameter of the pinion.

For problems solved in this book, either a face width will be given that falls within the range or the nominal face width value can be calculated using:

$$F = \frac{12}{P_d}$$

Geometry Factor, J

The geometry factor, as discussed in the previous section, is found for both the pinion and gear. Figure 9–10(a) and (b) are used to select the geometry factor, based on the pressure angle and the number of teeth of the meshing gear set. For a 30 tooth pinion and a 50 tooth gear with a pressure angle of 20° , the geometry factor from Figure 9–10(a) would be 0.38 for the pinion and 0.41 for the gear.

Overload Factor, K_o

Overload factors consider the probability that load variations, vibrations, shock, speed changes, and other application-specific conditions may result in peak loads greater than W_t being applied to the gear teeth during operation. A careful analysis of actual conditions should be made, and the AGMA Standard 2001-D04 gives no specific values for K_o . Reference 20 gives some recommended values, and many industries have established suitable values based on experience.

For problem solutions in this book, we will use the values shown in Table 9–1. The primary considerations are the nature of *both* the driving power source and the driven machine. An overload factor of 1.00 would be applied for a perfectly smooth electric motor driving a perfectly smooth generator through a gear-type speed

reducer. Any rougher conditions call for a value of K_o greater than 1.00. For power sources we will use the following:

Uniform: Electric motor or constant-speed gas turbine

Light shock: Water turbine, variable-speed drive

Moderate shock: Multicylinder engine

Examples of the roughness of driven machines include the following:

Uniform: Continuous-duty generator, paper, and film winders.

Light shock: Fans and low-speed centrifugal pumps, liquid agitators, variable-duty generators, uniformly loaded conveyors, rotary positive displacement pumps, and metal strip processing.

Moderate shock: High-speed centrifugal pumps, reciprocating pumps and compressors, heavy-duty conveyors, machine tool drives, concrete mixers, textile machinery, meat grinders, saws, bucket elevators, freight elevators, escalators, concrete mixers, plastics molding and processing, sewage disposal equipment, winches, and cable reels.

Heavy shock: Rock crushers, punch press drives, pulverizers, processing mills, tumbling barrels, wood chippers, vibrating screens, railroad car dumpers, log conveyors, lumber handling equipment, metal shears, hammer mills, commercial washers, heavy-duty hoists and cranes, reciprocating feeders, dredges, rubber processing, compactors, and plastics extruders.

Size Factor, K_s

The AGMA indicates that the size factor can be taken to be 1.00 for most gears. But for gears with large-size teeth or large face widths, a value greater than 1.00 is recommended. Reference 20 recommends a value of 1.00 for diametral pitches of 5 or greater or for a metric module of 5 or smaller. For larger teeth, the values shown in Table 9–2 can be used.

Load-Distribution Factor, K_m

The determination of the load-distribution factor is based on many variables in the design of the gears themselves

TABLE 9–1 Suggested Overload Factors, K_o

| Driven Machine | | | | |
|----------------|---------|-------------|----------------|-------------|
| Power source | Uniform | Light shock | Moderate shock | Heavy shock |
| Uniform | 1.00 | 1.25 | 1.50 | 1.75 |
| Light shock | 1.20 | 1.40 | 1.75 | 2.25 |
| Moderate shock | 1.30 | 1.70 | 2.00 | 2.75 |

TABLE 9–2 Suggested Size Factors, K_s

| Diametral pitch, P_d | Metric module, m | Size factor, K_s |
|------------------------|--------------------|--------------------|
| ≥ 5 | ≤ 5 | 1.00 |
| 4 | 6 | 1.05 |
| 3 | 8 | 1.15 |
| 2 | 12 | 1.25 |
| 1.25 | 20 | 1.40 |

as well as in the shafts, bearings, housings, and the structure in which the gear drive is installed. Therefore, it is one of the most difficult factors to specify. Much analytical and experimental work is continuing on the determination of values for K_m .

If the intensity of loading on all parts of all teeth in contact at any given time were uniform, the value of K_m would be 1.00. However, this is seldom the case. Any of the following factors can cause misalignment of the teeth on the pinion relative to those on the gear:

1. Inaccurate gear teeth.
2. Misalignment of the axes of shafts carrying gears.
3. Elastic deformations of the gears, shafts, bearings, housings, and support structures.
4. Clearances between the shafts and the gears, the shafts and the bearings, or the bearings and the housing.
5. Thermal distortions during operation.
6. Crowned or end relief of gear teeth.

AGMA Standard 2001 presents extensive discussions of methods of determining values for K_m . One is empirical and considers gears up to 40 in (1000 mm) wide. The other method is analytical and considers the stiffness and mass of individual gears and gear teeth and the total mismatch between mating teeth. We will not provide so much detail. However, rough guidelines are given below.

The designer can minimize the load-distribution factor by specifying the following:

1. Accurate teeth (a low quality number from AGMA 2015).
2. Narrow face widths.
3. Gears centered between bearings (straddle mounting).
4. Short shaft spans between bearings.
5. Large shaft diameters (high stiffness).
6. Rigid, stiff housings.
7. High precision and small clearances on all drive components.

You are advised to study the details of AGMA Standard 2001 which covers a wide range of physical sizes for gear systems. But the gear designs discussed in this book are of moderate size, typical of power transmissions in light industrial and vehicular applications. A more limited set of data are reported here to illustrate the concepts that must be considered in gear design.

We will use the following equation for computing the value of the load-distribution factor:

$$K_m = 1.0 + C_{pf} + C_{ma} \quad (9-17)$$

where C_{pf} = pinion proportion factor (see Figure 9-12)

C_{ma} = mesh alignment factor (see Figure 9-13)

In this book, we are limiting designs to those with face widths of 15 in or less. Wider face widths call for additional factors. Also, some commercially successful designs employ modifications to the basic tooth form to achieve a more uniform meshing of the teeth. Such methods are not discussed in this book.

Figure 9-12 shows that the pinion proportion factor is dependent on the actual face width of the pinion and on the ratio of the face width to the pinion pitch diameter. Figure 9-13 relates the mesh alignment factor to expected accuracy of different methods of applying gears.

- *Open gearing* refers to drive systems in which the shafts are supported in bearings that are mounted on structural elements of the machine with the expectation that relatively large misalignments will result.
- In *commercial-quality enclosed gear units*, the bearings are mounted in a specially designed housing that provides more rigidity than for open gearing, but for which the tolerances on individual dimensions are fairly loose.
- *Precision enclosed gear units* are made to tighter tolerances.
- *Extra-precision enclosed gear units* are made to exacting precision and are often adjusted at assembly to achieve excellent alignment of the gear teeth.

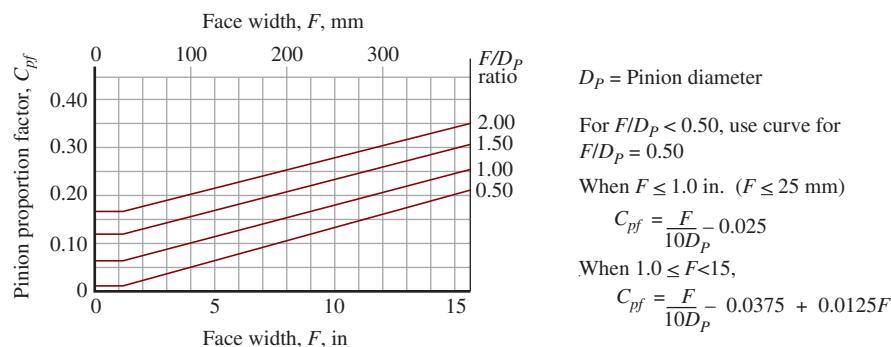


FIGURE 9-12 Pinion proportion factor, C_{pf} (Extracted from AGMA 2001 Standard, *Fundamental Rating Factors and Calculation Methods for Involute Spur and Helical Gear Teeth*, with permission of the publisher, American Gear Manufacturers Association, 1001 North Fairfax Street, 5th floor, Alexandria, VA 22314)

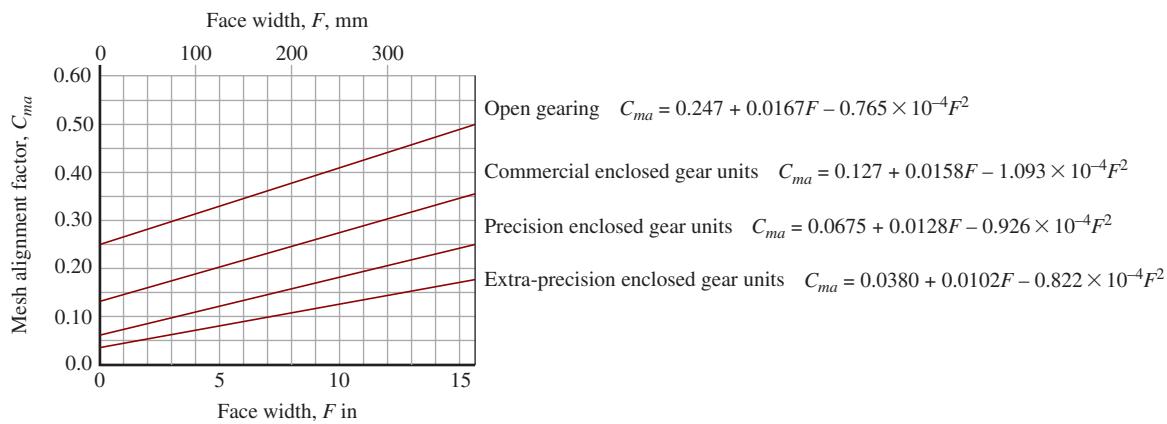


FIGURE 9-13 Mesh alignment factor, C_{ma} (Extracted from AGMA 2001 Standard, *Fundamental Rating Factors and Calculation Methods for Involute Spur and Helical Gear Teeth*, with permission of the publisher, American Gear Manufacturers Association, 1001 North Fairfax Street, 5th floor, Alexandria, VA 22314)

Experience with similar units in the field will help you gain better understanding among the different types of designs. *Commercial* or *precision* types are recommended for this book.

Rim Thickness Factor, K_B

The basic analysis used to develop the Lewis equation assumes that the gear tooth behaves as a cantilever attached to a perfectly rigid support structure at its base. This is true if the gear is made from a solid blank as shown in Figure 8-4(b) or with a blank that has a thinned web as shown in Part (d) of that figure. These are typical of small to medium-sized gears. Larger gears are often made with the spoked design shown in Figure 8-4(a) in order to save material and produce a lighter gear. Commercially made spoked gears can be expected to have a well-supported rim. For these kinds of gears, $K_B = 1.0$ can be used.

However, when designing a spoked gear for a special application, care must be exercised that the rim is sufficiently stiff to support the gear teeth without dangerous

stresses created in the rim. Figure 9-14 should be used to estimate the influence of rim thickness. The key geometry parameter is called the *backup ratio*, m_B , where

$$m_B = t_R/h_t$$

t_R = rim thickness

h_t = whole depth of the gear tooth

For $m_B > 1.2$, the rim is sufficiently strong and stiff to support the tooth, and $K_B = 1.0$.

Special Case for Small Pinions Mounted to a Shaft with a Keyseat. A frequent design option is to mount a small pinion onto a shaft as shown in Figure 9-15, with a key used to transmit the torque from the pinion to the shaft, and requiring a keyway to be machined into the bore of the pinion and into the shaft. Care must be taken to ensure that there is sufficient material above the keyway. It is recommended that the condition of $m_B > 1.2$ be applied in such cases where the t_R , dimension is measured above the top of the keyway. Then the factor $K_B = 1.0$ can be used.

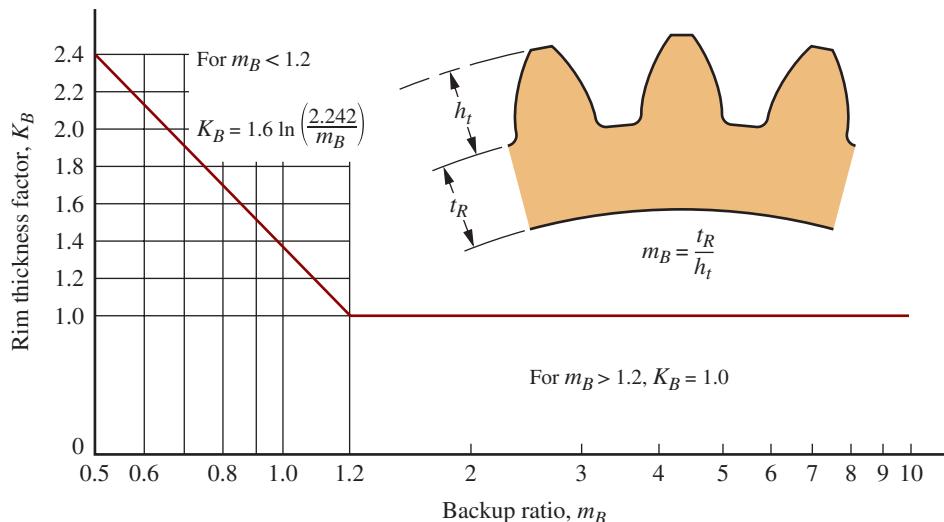


FIGURE 9-14 Rim thickness factor, K_B (Extracted from AGMA 2001 Standard, *Fundamental Rating Factors and Calculation Methods for Involute Spur and Helical Gear Teeth*, with permission of the publisher, American Gear Manufacturers Association, 1001 North Fairfax Street, 5th floor, Alexandria, VA 22314)

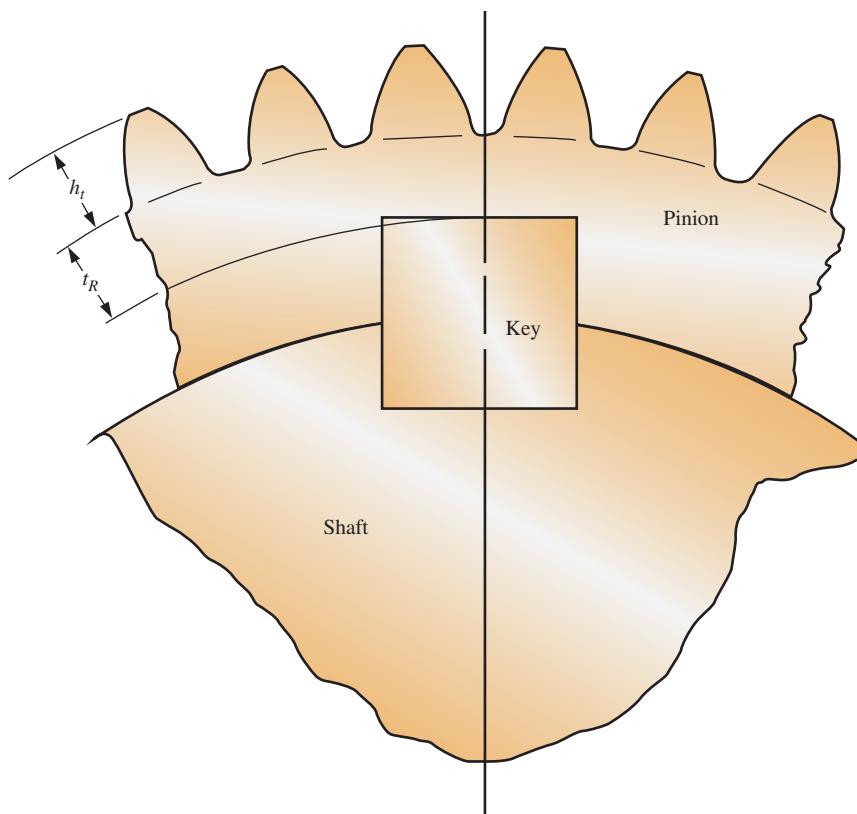


FIGURE 9-15 Pinion mounted on a shaft

If it is impractical to provide $m_B > 1.2$, it is recommended that *the pinion be machined integral with the shaft*, thus eliminating the need for a key and then using $K_B = 1.0$.

Dynamic Factor, K_v

The dynamic factor accounts for the fact that the load is assumed by a tooth with some degree of impact and that the actual load subjected to the tooth is higher than the transmitted load alone. The value of K_v depends on the accuracy of the tooth profile, the elastic properties of the tooth, and the speed with which the teeth come into contact. These factors are quantified by the use of *quality numbers* as described next.

Standards for Gear Quality

Manufacturers, designers, and users of gears must agree on standards used to determine the acceptability of gears produced. Several standard-setting organizations exist, including the AGMA (United States), ISO (International), DIN (German), JIS (Japan), and others. While the standards are similar, they are not identical. Designers and manufacturers

should become familiar with the provisions of these standards in order to communicate effectively the intent of their designs, the capability of manufacturing processes, and the acceptability of a given gear.

As indicated in Table 9-3, the current AGMA standard 2015-1-A01 (Reference 15), employs 10 accuracy grades from A2 (most precise) to A11 (least precise). An analytical measurement system [Figure 8-37] performs a total of nine elemental tangential measurements required for high-accuracy gears (A2–A5); five measurements for medium accuracy gears (A6–A9); and three for low accuracy gears (A10–A11).

The AGMA 2015-1-A01 standard replaces standard AGMA 2000-A88 that was used in the previous edition of this book and for which there are many gears in

TABLE 9-4 General Correlations of AGMA 2000, AGMA 2015, and ISO 1328 Gear Quality Systems

| AGMA 2000 | AGMA 2015 | ISO 1328 | AGMA 2000 | AGMA 2015 | ISO 1328 |
|-----------------|--------------|----------|----------------|--------------|----------|
| —Least precise— | | | | | |
| Q5 | — | 12 | Q11 | A6 | 6 |
| Q6 | A11 | 11 | Q12 | A5 | 5 |
| Q7 | A10 | 10 | Q13 | A4 | 4 |
| Q8 | A9 | 9 | Q14 | A3 | 3 |
| Q9 | A8 | 8 | Q15 | A2 | 2 |
| Q10 | A7 | 7 | —Most precise— | | |

TABLE 9-3 Accuracy Groups for AGMA 2015 Gear Quality System

| | |
|------------|---------|
| Low (L) | A10–A11 |
| Medium (M) | A6–A9 |
| High (H) | A2–A5 |

service that were made to that standard. It also replaces ISO 1328-1 that had been an interim standard modeled on the ISO methodology. For reference, Table 9–4 shows the rough relationships among the three standards although the actual values of tolerances are not identical. One notable difference is that the former AGMA 2000 standard employed classifications from Q5 (least precise) to Q15 (most precise); the order is opposite from AGMA 2015. A convenient comparison can be made by noting that the sum of the quality numbers from AGMA 2015 and AGMA 2000 is always 17. For example, Q12 and A5 are closely equivalent.

In this book, we use the AGMA 2015-1-A01 standard. Its classifications of A2 to A11 are keyed to a term called the *dynamic factor*, K_v , introduced later in this chapter. Note that the actual tables of data for tolerances are listed in terms of the metric module system with tolerance values given in micrometers (μm). Be aware that the tolerance values are quite small. For tolerance grade A5, tolerances are in the order of around $6.0 \mu\text{m}$ (0.00024 in) for single pitch deviation for small gears (100 mm ; 3.94 in) with small teeth ($m = 1 \text{ mm}$; $P_d = 25.4$) to about $22 \mu\text{m}$ (0.00088 in) for larger gears (800 mm ; 31.5 in) with large teeth ($m = 50 \text{ mm}$; $P_d = 0.51$). Gears are *very precise* mechanical components.

For some applications, often for those of the low accuracy types, the parties involved may agree to use another part of the standard, AGMA 2015-2-A06 for radial measurements based on the total radial composite deviation and the tooth-to-tooth radial composite deviation as shown in Figure 8-36. For this standard, nine classifications are called C4 (most precise) through C12

(least precise). The *double flank roll tester*, described earlier, is used to perform the testing.

Recommended Quality Numbers

All gear-type machinery should be manufactured with good levels of precision reflecting the accuracy with which the gears must operate for good performance, long life, smooth operation, and low noise. The design of the entire system, including shafts, bearings, and the housing must be consistent with the expected degree of precision. Of course, the system should not be made more precise than necessary because of cost. For this reason, manufacturers recommend quality numbers that will give satisfactory performance at a reasonable cost for a variety of applications. Table 9–5 lists several examples.

Machine tools, such as lathes, machining centers, and grinders, are included in the lower part of Table 9–5 with the recommended quality numbers keyed to the pitch line speed of the gears, as defined in Equations (9–1) and (9–2). Higher speeds require greater accuracy. *These values should be used for other kinds of precision industrial equipment not listed in the first part of the table.*

We now continue with the discussion of the dynamic factor, K_v . Figure 9–16 shows a graph of the AGMA-recommended values for K_v , where the A_v numbers are the AGMA-quality numbers described in this section. Gears in typical machine design would fall into the classes represented by curves 8 to 11 which are for gears made by hobbing or shaping with average to good tooling. If the teeth are finish-ground or shaved to improve the accuracy

TABLE 9–5 Recommended AGMA Quality Numbers

| Application | Quality number | Application | Quality number |
|--------------------------|----------------|-------------------------|----------------|
| Cement mixer drum drive | A11 | Small power drill | A9 |
| Cement kiln | A11 | Clothes washing machine | A8 |
| Steel mill drives | A11 | Printing press | A7 |
| Grain harvester | A10 | Computing mechanism | A6 |
| Cranes | A10 | Automotive transmission | A6 |
| Punch press | A10 | Radar antenna drive | A5 |
| Mining conveyor | A10 | Marine propulsion drive | A5 |
| Paper-box-making machine | A9 | Aircraft engine drive | A4 |
| Gas meter mechanism | A9 | Gyroscope | A2 |

Machine tool drives and drives for other high-quality mechanical systems

| Pitch line speed (fpm) | Quality number | Pitch line speed (m/s) |
|------------------------|----------------|------------------------|
| 0–800 | A10 | 0–4 |
| 800–2000 | A8 | 4–11 |
| 2000–4000 | A6 | 11–22 |
| Over 4000 | A4 | Over 22 |

of the tooth profile and spacing, curves 6 or 7 should be used. Under special conditions where teeth of high precision are used in applications where there is little chance of developing external dynamic loads, the shaded area can be used ($A_v = 2-5$). If the teeth are cut by form milling, curve 12 or higher should be used. Note that the quality 12 gears should not be used at pitch line speeds above 3000 ft/min (15 m/s). Note also that the dynamic factors are approximate. For severe applications, especially those

operating above 4000 ft/min (20 m/s), approaches taking into account the material properties, the mass and inertia of the gears, and the actual error in the tooth form should be used to predict the dynamic load. (See References 6, 19, 20, 22, and 24.)

Equations for Dynamic Factor, K_v . Reading values for K_v from either part of Figure 9–16 gives adequate accuracy because the charts are approximate and slight

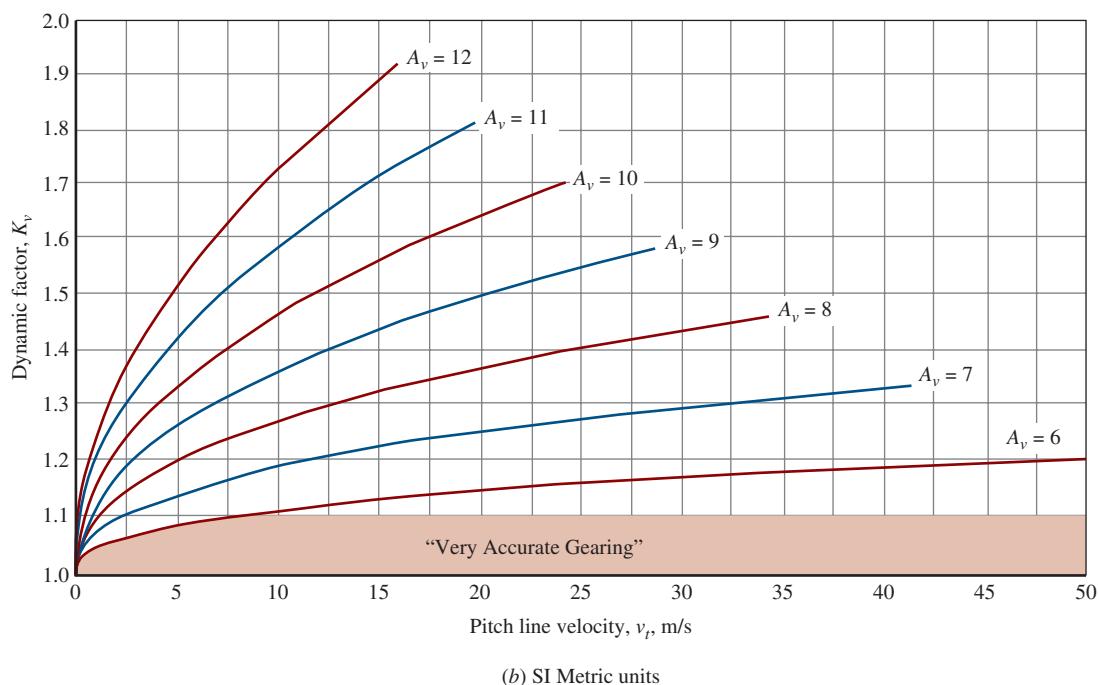
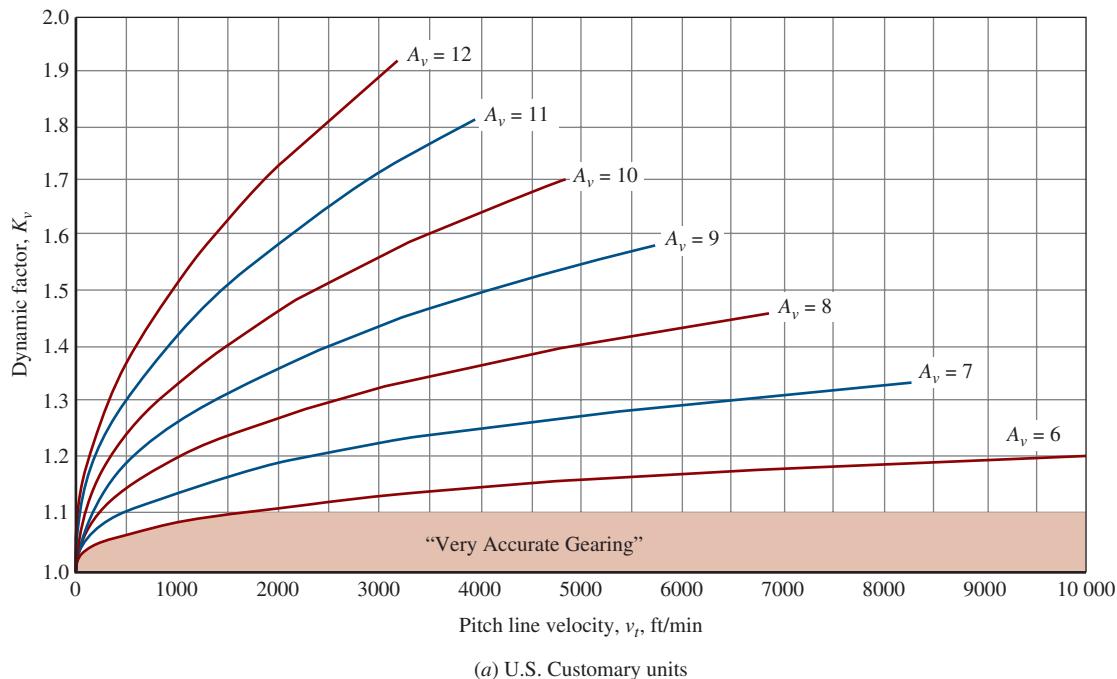


FIGURE 9–16 Dynamic factor, K_v (Adapted from AGMA 2001 Standard, *Fundamental Rating Factors and Calculation Methods for Involute Spur and Helical Gear Teeth*, with the permission of the publisher, American Gear Manufacturers Association, 1001 North Fairfax Street, 5th floor, Alexandria, VA 22314)

differences in reading should not cause difficulty with a gear design. However, it is recommended that an analytical method be used when performing several designs. Later in this chapter, a computer-aided approach using a spreadsheet is shown with the analytical method embedded. Table 9–6 shows equations adapted from Reference 6 and presented in both the U.S. and SI Metric unit systems. Variables involved are the dimensionless quality number (A_v) and the pitch line velocity in ft/min for the U.S. system and m/s for the SI Metric system. Both of these data are specified or computed in early stages of the gear design process. The method involves the calculation of two intermediate terms, B and C , and then computing K_v .

Completing the Calculation of Bending Stress

At this point, all of the data required for completing the calculation of the bending stress number, s_{ats} , using Equation 9–16, have been defined. Example Problem 9–3 demonstrates the final calculation of that value. Note that some of the same data are used for computing the contact stress in the next section.

TABLE 9–6 Analytical Method for Computing Dynamic Factor, K_v

| U.S. units | SI Metric units |
|--|--|
| Given A_v and v_t (ft/min) | Given A_v and v_t (m/s) |
| $B = 0.25(A_v - 5.0)^{0.667}$ | $B = 0.25(A_v - 5.0)^{0.667}$ |
| $C = 50 + 56(1.0 - B)$ | $C = 3.5637 + 3.9914(1.0 - B)$ |
| $K_v = \left[\frac{C}{C + \sqrt{v_t}} \right]^{-B}$ | $K_v = \left[\frac{C}{C + \sqrt{v_t}} \right]^{-B}$ |
| Maximum velocity for a given A_v : | Maximum velocity for a given A_v : |
| $v_{t\max} = [C + (14 - A_v)]^2$ | $v_{t\max} = [C + (14 - A_v)]^2$ |
| A_v | A_v |
| 6 | 10 000 |
| 7 | 8239 |
| 8 | 6867 |
| 9 | 5731 |
| 10 | 4767 |
| 11 | 3937 |
| 12 | 3219 |
| | $v_{t\max}$ (m/s) |
| | 6 |
| | 41.9 |
| | 34.9 |
| | 29.1 |
| | 24.2 |
| | 20.0 |
| | 16.4 |

Example Problem 9–3

Compute the bending stress numbers for the pinion and gear of the pair of gears similar to the pair shown in Figure 9–2(a) and (b). The pinion rotates at 1750 rpm, driven directly by an electrical motor. The driven machine is an industrial saw requiring 25 hp. The gear unit is enclosed and is made to commercial standards. Gears are straddle mounted between bearings. The following gear data apply:

$$N_p = 20 \quad N_g = 70 \quad A_v = 10$$

The gear teeth are 20°, full depth, involute teeth and the gear blanks are solid. The gears will be made from steel, so Figure 9–11 can be used to select an initial value for the diametral pitch.

Solution The equation for the design power is:

$$P_{\text{design}} = K_o \cdot P$$

The required power for the industrial saw is known to be 25 hp. The overload factor is found from Table 9–1. For a smooth, uniform electric motor driving an industrial saw generating moderate shock, a reasonable value would be:

$$\begin{aligned} K_o &= 1.5 \\ P_{\text{design}} &= 1.5 \cdot (25 \text{ hp}) = 37.5 \text{ hp} \end{aligned}$$

Since the gears will be made of steel, Figure 9–11 can be used to find an initial diametral pitch based on the design power and the pinion angular velocity, $n_p = 1750$ rpm.

The diametral pitch selected is then $P_d = 6$. Recall that this value has the unit of teeth/in or in⁻¹. We will use this form later to ensure proper units in the calculation for stresses in the pinion and the gear.

Data that are useful to visualize the overall size of the gear pair and that serve as input to later decisions are now computed:

Pitch diameters of gear set:

$$D_P = \frac{N_p}{P_d} = \frac{20}{6} = 3.333 \text{ in}$$

$$D_G = \frac{N_g}{P_d} = \frac{70}{6} = 11.667 \text{ in}$$

Center distance of gear set:

$$C = \frac{D_P + D_G}{2} = \frac{3.333 \text{ in} + 11.667 \text{ in}}{2} = 7.500 \text{ in}$$

Velocity ratio of gear set:

$$VR = m_G = \frac{n_P}{n_G} = \frac{N_G}{N_P} = \frac{70}{20} = 3.50$$

The speed of the gear can be found from by rewriting the equation for the velocity ratio:

$$\begin{aligned} VR &= \frac{n_P}{n_G} \\ n_G &= \frac{n_P}{VR} = \frac{1750 \text{ rpm}}{3.50} = 500 \text{ rpm} \end{aligned}$$

The pitch line speed (in ft/min or fpm) can be calculated using the pitch diameter and the angular velocity of the pinion:

$$v_t = \frac{D_p}{2} \cdot n_P = \frac{3.333 \text{ in}}{2} \cdot 1750 \text{ rev/min} \cdot \frac{2\pi \text{ rad}}{1 \text{ rev}} \cdot \frac{1 \text{ ft}}{12 \text{ in}} = 1527 \text{ fpm}$$

We can also use the gear pitch diameter and angular velocity to calculate the pitch line speed:

$$v_t = \frac{D_G}{2} \cdot n_G = \frac{11.667 \text{ in}}{2} \cdot 500 \text{ rev/min} \cdot \frac{2\pi \text{ rad}}{1 \text{ rev}} \cdot \frac{1 \text{ ft}}{12 \text{ in}} = 1527 \text{ fpm}$$

We can then use the principles from Section 9–3 to compute the transmitted load on the gear teeth. First find the torque on the pinion and gear:

$$\begin{aligned} T_P &= \frac{\text{Power}}{n_P} = \frac{25 \text{ hp}}{1750 \text{ rev/min}} \cdot \frac{33000 \frac{\text{lb} \cdot \text{ft}}{\text{min}}}{1 \text{ hp}} \cdot \frac{1 \text{ rev}}{2\pi \text{ rad}} \cdot \frac{12 \text{ in}}{1 \text{ ft}} = 900.4 \text{ lb} \cdot \text{in} \\ T_G &= \frac{\text{Power}}{n_G} = \frac{25 \text{ hp}}{500 \text{ rev/min}} \cdot \frac{33000 \frac{\text{lb} \cdot \text{ft}}{\text{min}}}{1 \text{ hp}} \cdot \frac{1 \text{ rev}}{2\pi \text{ rad}} \cdot \frac{12 \text{ in}}{1 \text{ ft}} = 3151.3 \text{ lb} \cdot \text{in} \end{aligned}$$

We can see that a smaller torque on the pinion shaft will produce a larger torque on the gear shaft.

$$\frac{T_G}{T_P} = \frac{3151.3 \text{ lb} \cdot \text{in}}{900.4 \text{ lb} \cdot \text{in}} = 3.50$$

You will notice this is the same value as the velocity ratio. The output torque will increase in proportion to the decrease in angular velocity. This means that the motor torque required is 900.4 lb-in for an output torque of 3151.3 lb-in.

We will use the Equation (9–16) to compute the bending stress number:

$$s_t = \frac{W_t P_d}{FJ} K_o K_s K_m K_B K_v$$

Let's go through each term of this equation:

The tangential force (gear driving force) is based on the pinion torque and pinion pitch diameter:

$$W_t = \frac{T_P}{\left(\frac{D_P}{2}\right)} = \frac{900.4 \text{ lb} \cdot \text{in}}{\left(\frac{3.333 \text{ in}}{2}\right)} = 540.3 \text{ lb}$$

The tangential force can also be calculated using the gear torque and gear pitch diameter:

$$W_t = \frac{T_G}{\left(\frac{D_G}{2}\right)} = \frac{3151.3 \text{ lb} \cdot \text{in}}{\left(\frac{10.667 \text{ in}}{2}\right)} = 540.3 \text{ lb}$$

Although the radial and normal gear forces are not required for the bending stress equation, we will calculate all the forces on the spur gear teeth. The radial force (gear separating force) is:

$$W_r = W_t \cdot \tan(20^\circ) = 540.3 \text{ lb} \cdot \tan(20^\circ) = 196.6 \text{ lb}$$

The normal force along the line of action is:

$$W_n = \sqrt{W_t^2 + W_r^2} = \sqrt{(540.3 \text{ lb})^2 + (196.6 \text{ lb})^2} = 575 \text{ lb}$$

The nominal face width of the gears has been defined as $F = 12/P_d$ and we know $P_d = 6$.

$$F = \frac{12}{P_d} = \frac{12}{6} = 2.00 \text{ in}$$

The geometry factor, J , will be determined for both the pinion and the gear. The pressure angle is 20° so we use Figure 9–10(a).

$$\begin{aligned} J_P &= 0.335 \\ J_G &= 0.420 \end{aligned}$$

The overload factor was already determined:

$$K_o = 1.5$$

Teeth with a diametral pitch, $P_d = 6$, are relatively small so, from Table 9–2, the size factor is:

$$K_S = 1$$

The load-distribution factor, K_m , can be found from Equation (9–17) for commercial enclosed gear drives. For this design, $F = 2.00$ in and

$$\frac{F}{D_p} = \frac{2.00 \text{ in}}{3.333 \text{ in}} = 0.60$$

From Figure 9–12 we can find the approximate value for the pinion proportion factor:

$$C_{pf} \approx 0.04$$

To obtain a more precise value for the pinion proportion factor, we can use the equation that represents the curve in Figure 9–12, when $1.0 \leq F < 15$:

$$C_{pf} = \frac{F}{10D_p} - 0.0375 + 0.0125F = \frac{2.00}{10 \cdot 3.333} - 0.0375 + 0.0125 \cdot 2.00 = 0.047$$

The mesh alignment factor, C_{ma} , can be determined from Figure 9–13 using the commercial enclosed gear unit curve:

$$C_{ma} = 0.16$$

We can also use the equation that represents the commercial enclosed gear unit curve to calculate a more precise value:

$$\begin{aligned} C_{ma} &= 0.127 + 0.0158 \cdot F - 1.093 \times 10^{-4} \cdot F^2 \\ C_{ma} &= 0.127 + 0.0158 \cdot 2.00 - 1.093 \times 10^{-4} \cdot (2.00)^2 = 0.158 \end{aligned}$$

Substitute these two factors into Equation (9–17) to calculate the load distribution factor:

$$K_m = 1.0 + C_{pf} + C_{ma} = 1.0 + 0.047 + 0.158 = 1.21$$

The rim thickness factor, K_B , can be taken as 1.00 because the gears are to be made from solid blanks with no cast or machined rim.

$$K_B = 1.00$$

The dynamic factor, K_v , can be read from Figure 9–16. For a pitch line velocity, $v_t = 1527$ fpm and a gear quality number of, $A_v = 10$, the dynamic factor is:

$$K_v = 1.41$$

The bending stress can now be computed from Equation (9–16). We will compute the bending stress of the pinion first:

$$s_{IP} = \frac{540 \text{ lb} \cdot 6 \text{ in}^{-1}}{2.00 \text{ in} \cdot 0.335} \cdot 1.50 \cdot 1.0 \cdot 1.21 \cdot 1.0 \cdot 1.41 = 12\,376 \text{ psi}$$

Notice all factors in the stress equation are the same for the gear except the value of the geometry factor, J . The bending stress number for the gear is

$$s_{IG} = \frac{540 \text{ lb} \cdot 6 \text{ in}^{-1}}{2.00 \text{ in} \cdot 0.420} \cdot 1.50 \cdot 1.0 \cdot 1.21 \cdot 1.0 \cdot 1.41 = 9871 \text{ psi}$$

The stress in the pinion teeth will always be higher than the stress in the gear teeth because the value of J increases as the number of teeth increases.

9-6 CONTACT STRESS IN GEAR TEETH

In addition to being safe from bending, gear teeth must also be capable of operating for the desired life without significant pitting of the tooth form. *Pitting* is the phenomenon in which small particles are removed from the surface of the tooth faces because of the high contact stresses, causing fatigue. Refer again to Figure 9–9 showing the high, localized contact stresses. Prolonged operation after pitting begins causes the teeth to roughen, and eventually the form is deteriorated. Rapid failure follows. Note that both the driving and driven teeth are subjected to these high contact stresses equally. Reference 11 provides a comprehensive treatment of the wear and failure of gear teeth.

The action at the contact point on gear teeth is that of two externally curved surfaces. If the gear materials were infinitely rigid, the contact would be a simple line. Actually, because of the elasticity of the materials, the tooth shape deforms slightly, resulting in the transmitted force acting on a small rectangular area. The resulting stress is called a *contact stress* or *Hertz stress*. Reference 17 gives the following form of the equation for the Hertz stress,

▷ Hertz Contact Stress on Gear Teeth

$$\sigma_c = \sqrt{\frac{W_c}{F} \frac{1}{\pi[(1 - \nu_1^2)/E_1 + [(1 - \nu_2^2)/E_2]} \left(\frac{1}{r_1} + \frac{1}{r_2} \right)} \quad (9-18)$$

where the subscripts 1 and 2 refer to the materials of the two bodies in contact. The tensile modulus of elasticity is E and the Poisson's ratio is ν . W_c is the contact force exerted between the two bodies, and F is the length of the contacting surfaces. The radii of curvature of the two surfaces are called r_1 and r_2 .

When Equation (9-18) is applied to gears, F is the face width of the gear teeth and W_c is the normal force delivered by the driving tooth on the driven tooth, found from Equation (9-12) to be,

$$W_N = W_t \cos \phi \quad (9-19)$$

The second term in Equation (9-18) (including the square root) can be computed if the elastic properties of the materials for the pinion and gear are known. It is given the name *elastic coefficient*, C_p . That is,

▷ Elastic Coefficient

$$C_p = \sqrt{\frac{1}{\pi \{[(1 - \nu_P^2)/E_P] + [(1 - \nu_G^2)/E_G]\}}} \quad (9-20)$$

Table 9-7 gives values for the most common combinations of materials for pinions and gears.

The terms r_1 and r_2 are the radii of curvature of the involute tooth forms of the two mating teeth. These radii change continuously during the meshing cycle as the contact point moves from the top of the tooth through the pitch

TABLE 9-7 Elastic Coefficient, C_p

| Pinion material | Modulus of elasticity, E_P , lb/in ² (MPa) | Gear material and modulus of elasticity, E_G , lb/in ² (MPa) | | | | | |
|-----------------|---|---|---|---|--|--|---|
| | | Steel 30×10^6 (2×10^5) | Malleable iron 25×10^6 (1.7×10^5) | Nodular iron 24×10^6 (1.7×10^5) | Cast iron 22×10^6 (1.5×10^5) | Aluminum bronze 17.5×10^6 (1.2×10^5) | Tin bronze 16×10^6 (1.1×10^5) |
| Steel | 30×10^6 (2×10^5) | 2300 (191) | 2180 (181) | 2160 (179) | 2100 (174) | 1950 (162) | 1900 (158) |
| Mall. iron | 25×10^6 (1.7×10^5) | 2180 (181) | 2090 (174) | 2070 (172) | 2020 (168) | 1900 (158) | 1850 (154) |
| Nod. iron | 24×10^6 (1.7×10^5) | 2160 (179) | 2070 (172) | 2050 (170) | 2000 (166) | 1880 (156) | 1830 (152) |
| Cast iron | 22×10^6 (1.5×10^5) | 2100 (174) | 2020 (168) | 2000 (166) | 1960 (163) | 1850 (154) | 1800 (149) |
| Al. bronze | 1.75×10^6 (1.2×10^5) | 1950 (162) | 1900 (158) | 1880 (156) | 1850 (154) | 1750 (145) | 1700 (141) |
| Tin bronze | 16×10^6 (1.1×10^5) | 1900 (158) | 1850 (154) | 1830 (152) | 1800 (149) | 1700 (141) | 1650 (137) |

Source: Extracted from AGMA Standard 2001-D04, *Fundamental Rating Factors and Calculation Methods for Involute Spur and Helical Gear Teeth*, with the permission of the publisher, American Gear Manufacturers Association, 1001 North Fairfax Street, 5th floor, Alexandria, VA 22314.

Note: Poisson's ratio = 0.30; units for C_p are (lb/in^2)^{0.5} or (MPa)^{0.5}.

circle, and onto the lower flank of the tooth before leaving engagement. We can write the following equations for the radius of curvature when contact is at the pitch point,

$$r_1 = (D_p/2) \sin \phi \quad \text{and} \quad r_2 = (D_G/2) \sin \phi \quad (9-21)$$


However, the AGMA calls for the computation of the contact stress to be made at the lowest point of single tooth contact (LPSTC) because above that point, the load is being shared with other teeth. Computation of the radii of curvature for the LPSTC is somewhat complex. A geometry factor for pitting, I , is defined by the AGMA to include the radii of curvature terms and the

$\cos \phi$ term in Equation (9-19) because they all involve the specific geometry of the tooth. The variables required to compute I are the pressure angle ϕ , the gear ratio $m_G = N_G/N_p$, and the number of teeth in the pinion N_p .


Another factor in the contact stress equation is the pinion diameter that is not included in I . The contact stress equation then becomes,

$$\sigma_c = C_p \sqrt{\frac{W_t}{FDI}} \quad (9-22)$$

Values for the geometry factor, I , for a few common cases are graphed in Figure 9-17 and should be used for

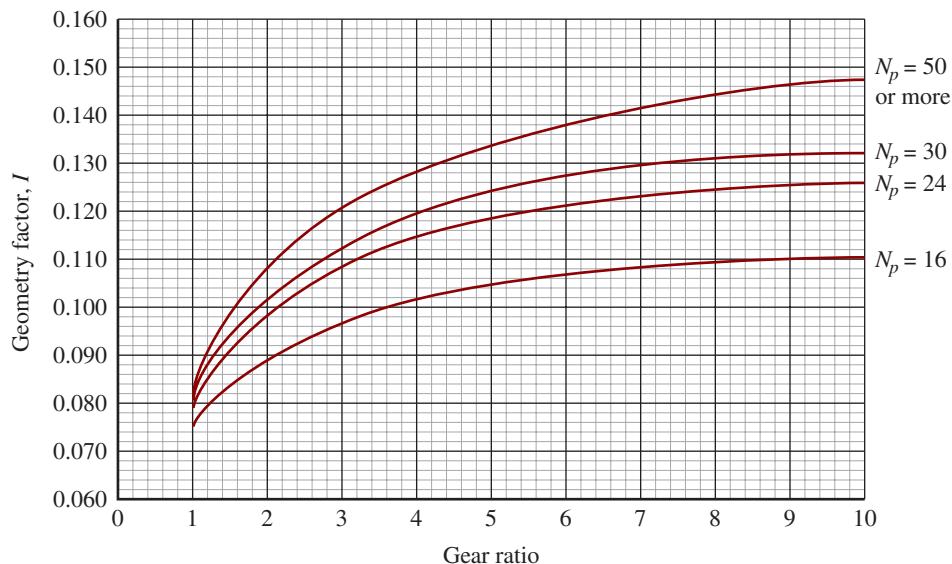

(a) 20° pressure angle, full-depth teeth (standard addendum = $1/P_d$)

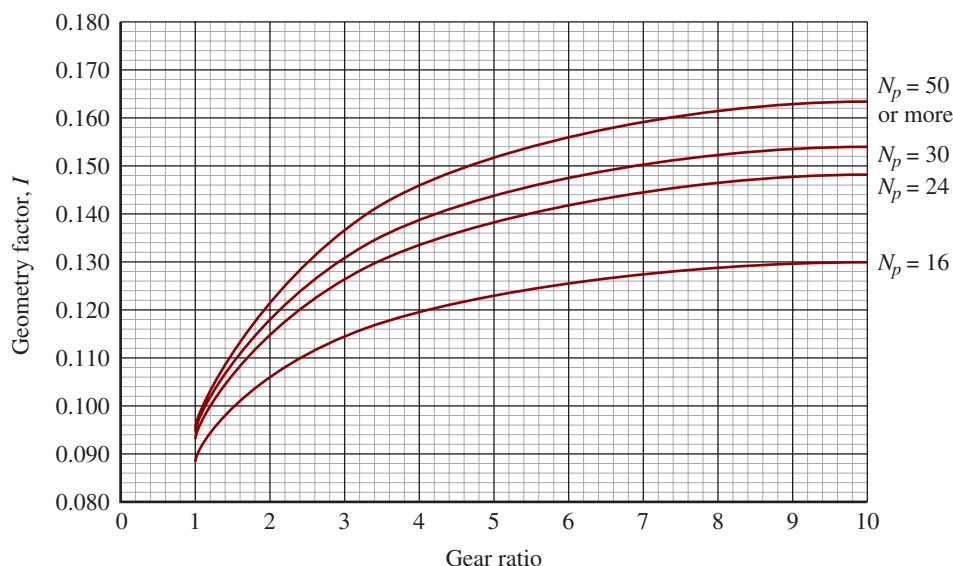

(b) 25° pressure angle, full-depth teeth (standard addendum = $1/P_d$)

FIGURE 9-17 External spur pinion geometry factor, I , for standard center distances. All curves are for the lowest point of single-tooth contact on the pinion (Extracted from AGMA Standard 218.01, *Rating the Pitting Resistance and Bending Strength of Spur and Helical Involute Gear Teeth*, with the permission of the publisher, American Gear Manufacturers Association, 1001 North Fairfax Street, 5th floor, Alexandria, VA 22314)

problem solving in this book. Appendix 19 provides an approach to computing the value for I for spur gears as given in Reference 3.

As with the equation for bending stress in gear teeth, several factors are added to the equation for contact stress as shown below. The resulting quantity is called the *contact stress number*, s_c :

>Contact Stress Number

$$s_c = C_p \sqrt{\frac{W_t K_o K_s K_m K_v}{FD_{Pl}}} \quad (9-23)$$

Example Problem 9-4

Compute the contact stress number for the gear pair described in Example Problem 9-3.

Solution: Data from Example Problem 9-3 are summarized as follows:

$$\begin{array}{ll} N_P = 20 & N_G = 70 \\ K_o = 1.50 & K_s = 1.00 \end{array} \quad \begin{array}{ll} F = 2.00 \text{ in} & W_t = 540 \text{ lb} \\ K_m = 1.21 & K_v = 1.41 \end{array} \quad \begin{array}{ll} D_P = 3.333 \text{ in} & P_d = 6 \end{array}$$

Using the gear ratio:

$$m_G = \frac{N_G}{N_P} = \frac{70}{20} = 3.50$$

The number of teeth of the pinion and the pressure angle 20° are used to read an approximate value of pitting resistance geometry factor, I , from Figure 9-17(a):

$$I = 0.108$$

The design analysis for the bending strength indicated that two steel gears should be used. From Table 9-7, we find that:

$$C_P = 2300$$

From Equation (9-23) the contact stress number is:

$$s_c = C_p \sqrt{\frac{W_t K_o K_s K_m K_v}{FD_{Pl}}} \\ s_c = 2300 \sqrt{\frac{540 \cdot 1.50 \cdot 1.00 \cdot 1.21 \cdot 1.41}{2.00 \cdot 3.333 \cdot 0.108}} = 100\,769 \text{ psi}$$

This value is used for both the pinion and the gear.

9-7 METALLIC GEAR MATERIALS

Gears can be made from a wide variety of materials to achieve properties appropriate to the application. From a mechanical design standpoint, strength and pitting resistance are the most important properties. But, in general, the designer should consider the producibility of the gear, taking into account all of the manufacturing processes involved, from the preparation of the gear blank, through the forming of the gear teeth, to the final assembly of the gear into a machine. Other considerations are weight, appearance, corrosion resistance, noise, and, of course, cost. This section discusses several types of metals used for gears. Plastics are covered in a later section.

The values for the overload factor, K_o ; the size factor, K_s ; the load-distribution factor, K_m ; and the dynamic factor, K_v , can be taken to be the same as the corresponding values for the bending stress analysis in the preceding sections.

Equation 9-23 is used to compute the contact stress for both the pinion and the gear; they are equal. It is not correct to use the diameter of the gear, D_G , in this equation.

Example Problem 9-4 follows to illustrate the use of Equation 9-23. Then Section 9-7 presents more information about the types of metallic materials typically used for gears and their heat treatment. Section 9-8 summarizes the process of selecting gear materials, applying information from Sections 9-4 to 9-7.

Many carbon and alloy steels are used for gears and most are given heat treatments to provide controlled hardness and strength (References 8 and 26). Selection of the alloy depends, in part, on the heat-treatment process used to achieve the final properties. Table 9-8 gives some examples.

TABLE 9-8 Examples of Gear Materials

| Heat treatment | Typical alloys (SAE numbers) |
|---|------------------------------------|
| Through-hardened or Case-hardened by flame or induction hardening | 1045, 4140, 4150, 4340, 4350 |
| Carburizing, case-hardened | 1020, 4118, 4320, 4820, 8620, 9310 |

It is important to recognize that alloys listed for through-hardening, flame, or induction hardening must have good hardenability to achieve the desired hardness levels described in the following section. They must also retain reasonable ductility indicated by the percent elongation in the heat-treated condition. All those listed are medium-carbon steels.

Steels that are to be carburized are typically low carbon steels because the carburization process itself infuses significant amounts of carbon into the case while the steel is at a high temperature. Then the final case hardness is achieved by quenching and tempering, leaving the core of the teeth at a lower strength but with higher ductility.

Steel Gear Materials

Through-Hardened Steels. Gears for machine tool drives and many kinds of medium- to heavy-duty speed reducers and transmissions are typically made from medium-carbon steels. AGMA Standard 2001 (Reference 6) gives data for the allowable bending stress number, s_{at} , and the allowable contact stress number, s_{ac} , for steels in the through-hardened condition. Figures 9–18 and 9–19 are graphs relating the stress numbers to the Brinell hardness number, HB, for the teeth. Notice that only knowledge of the hardness is required because of the direct relationship between hardness and the tensile strength of steels. See Appendix 17 for data

that correlate the Brinell hardness number, with the tensile strength of steel in ksi. The range of hardnesses covered by the AGMA data is from 180 to 400 HB, corresponding to a tensile strength of approximately 87 to 200 ksi. *It is not recommended to use through-hardening above 400 HB because of inconsistent performance of the gears in service.* Typically, case hardening is used when there is a desire to achieve a surface hardness above 400 HB. This is described later in this section.

The hardness measurement for the allowable bending stress number is to be taken at the root of the teeth because that is where the highest bending stress occurs. The allowable contact stress number is related to the surface hardness on the face of the gear teeth where the mating teeth experience high contact stresses.

When selecting a material for gears, the designer must specify one that can be hardened to the desired hardness. Review Chapter 2 for discussions about heat-treatment techniques. Consult Appendices 3 and 4 for representative data. For the higher hardnesses, say, above 250 HB, a medium-carbon-alloy steel with good hardenability is desirable. Examples are, listed in Table 9–8. Ductility is also rather important because of the numerous cycles of stress experienced by gear teeth and the likelihood of occasional overloads, impact, or shock loading. A percent elongation value of 12% or higher is desired.

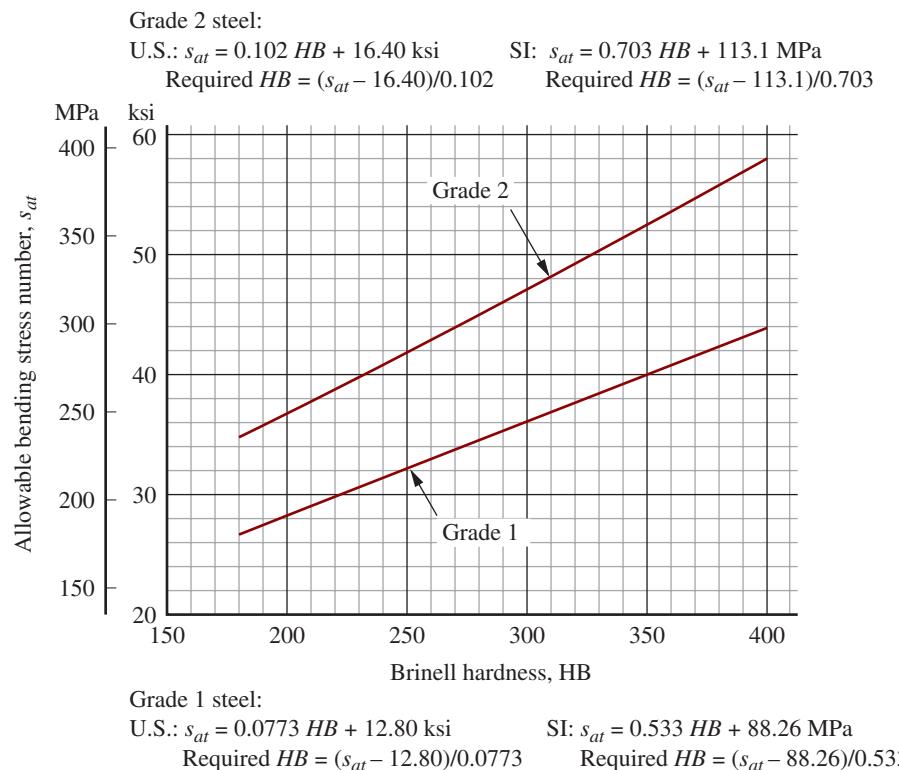


FIGURE 9–18 Allowable bending stress number for through-hardened steel gears, s_{at} (Extracted from AGMA 2001-D04 Standard, *Fundamental Rating Factors and Calculation Methods for Involute Spur and Helical Gear Teeth*, with permission of the publisher, American Gear Manufacturers Association, 1001 North Fairfax Street, 5th floor, Alexandria, VA 22314) [Reference 6]

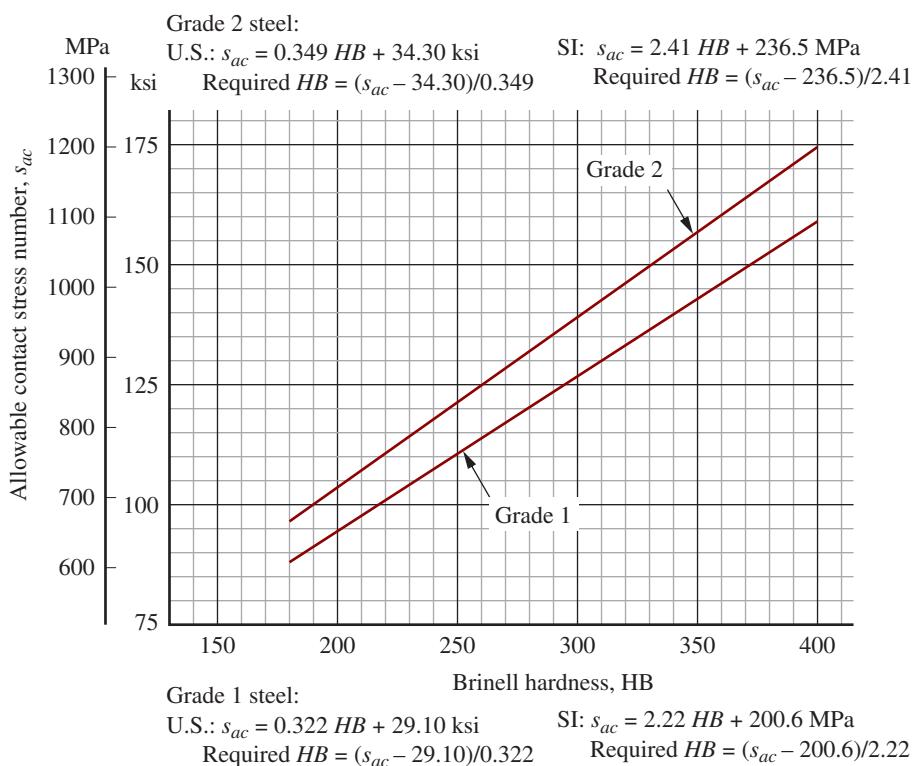


FIGURE 9-19 Allowable contact stress number for through-hardened steel gears, s_{ac} (Extracted from AGMA 2001-D04 Standard, *Fundamental Rating Factors and Calculation Methods for Involute Spur and Helical Gear Teeth*, with permission of the publisher, American Gear Manufacturers Association, 1001 North Fairfax Street, 5th floor, Alexandria, VA 22314) [Reference 6]

The curves in Figures 9-18 and 9-19 include two grades of steel: Grade 1 and Grade 2. **Grade 1 is considered to be the basic standard and will be used for problem solutions in this book.** Grade 2 requires a higher degree of control of the microstructure, alloy composition, greater cleanliness, prior heat treatment, nondestructive testing performed, core hardness values, and other factors. See AGMA Standard 2001 (Reference 6) for details. Because of these extra requirements, cost is likely to be higher.

Case-Hardened Steels. Flame hardening, induction hardening, carburizing, and nitriding are processes used to produce a high hardness in the surface layer of gear teeth. See the related discussion in Section 2-6. These processes provide surface hardness values from 50 to 64 HRC (Rockwell C) and correspondingly high values of s_{at} and s_{ac} , as shown in Table 9-9. Special discussions are given below for each of the types of case-hardening processes.

Case-hardened steel gears can be produced to Grades 1, 2, and 3 with Grade 1 referring to typically available steels as discussed for through-hardened steels. Because of the special care required in producing Grades 2 and 3, Table 9-9 shows data for only Grade 1 steels as recommended for use in this book. Furthermore, because nitriding can be done in several ways and it is not used as frequently as carburizing, flame-, or induction

hardening, data for design values of bending or pitting resistance stresses are not listed here. Consult Reference 6 for the necessary data.

Flame- and Induction-Hardened Gear Teeth. Recall that these processes involve the local heating of the surface of the gear teeth by high-temperature gas flames or electrical induction coils. By controlling the time and energy input, the manufacturer can control the depth of heating and the depth of the resulting case. It is essential that the heating occur around the entire tooth, producing the hard case on the face of the teeth *and in the fillet and root areas*, in order to use the stress values listed in Table 9-9. This may require a special design for the flame shape or the induction heater. Refer to Reference 6.

The specifications for flame- or induction-hardened steel gear teeth call for a resulting hardness of HRC 50 to 54. Because these processes rely on the inherent hardenability of the steels, you must specify a material that can be hardened to these levels. Normally, medium-carbon-alloy steels (approximately 0.40% to 0.60% carbon) are specified. Table 9-8 and Appendices 3 and 4 list some suitable materials.

Carburizing. Carburizing produces surface hardnesses in the range of 55 to 64 HRC. It results in some of the highest strengths in common use for gears. Special

TABLE 9-9 Allowable Stress Numbers for Case-Hardened Grade 1 Steel Materials

| Hardness at surface | Allowable bending stress number, s_{at} | | Allowable contact stress number, s_{ac} | |
|------------------------------|---|-------|---|-------|
| | (ksi) | (Mpa) | (ksi) | (Mpa) |
| Flame- or induction-hardened | | | | |
| 50 HRC | 45 | 310 | 170 | 1172 |
| 54 HRC | 45 | 310 | 175 | 1207 |
| Carburized and case-hardened | | | | |
| 55–64 HRC | 55 | 379 | 180 | 1241 |

Source: Extracted from AGMA Standard 2001-D04, *Fundamental Rating Factors and Calculation Methods for Involute Spur and Helical Gear Teeth*, with the permission of the publisher, American Gear Manufacturers Association, 1001 North Fairfax Street, 5th floor, Alexandria, VA 22314.

carburizing steels are listed in Appendix 5. Figure 9–20 shows the AGMA recommendation for the thickness of the case for carburized gear teeth. The effective case depth is defined as the depth from the surface to the point where the hardness has reached 50 HRC.

Nitriding. Nitriding produces a very hard *but very thin* case. It is specified for applications in which loads are smooth and well known. Nitriding should be avoided when overloading or shock can be experienced, because the case is not sufficiently strong or well supported to resist such loads. Because of the thin case, the Rockwell

15N scale is used to specify hardness. See References 6 and 8 for design data for nitrided gears.

Iron and Bronze Gear Materials

Cast Irons. Two types of iron used for gears are *gray cast iron* and *ductile* (sometimes called *nodular*) iron. Table 9–10 gives the common ASTM grades used, with their corresponding allowable bending stress numbers and contact stress numbers. Remember that gray cast iron is brittle, so care should be exercised when shock loading is possible. Also, the higher-strength forms of the

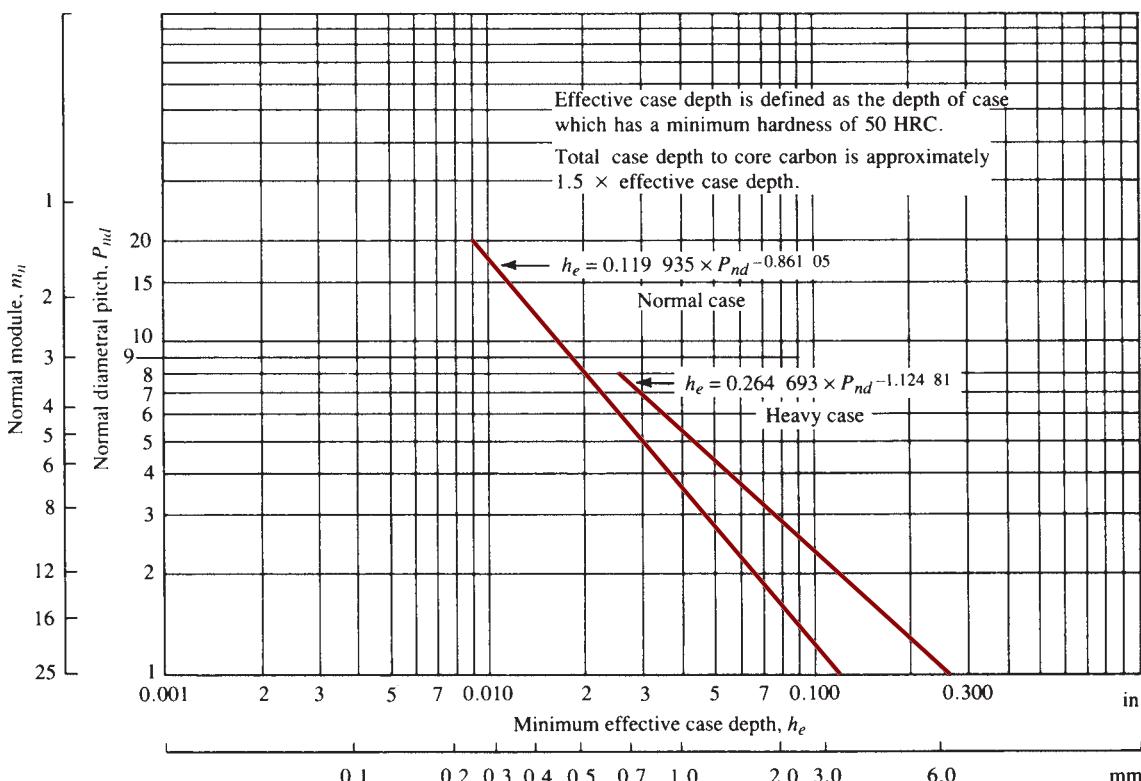


FIGURE 9–20 Effective case depth for carburized gears, h_e (Extracted from AGMA 2001-D04 Standard, *Fundamental Rating Factors and Calculation Methods for Involute Spur and Helical Gear Teeth*, with permission of the publisher, American Gear Manufacturers Association, 1001 North Fairfax Street, 5th floor, Alexandria, VA 22314)

TABLE 9–10 Allowable Stress Numbers for Iron and Bronze Gears

| Material designation | Minimum hardness at surface (HB) | Allowable bending stress number, s_{at} | | Allowable contact stress number, s_{ac} | |
|---|----------------------------------|---|-------|---|-------|
| | | (ksi) | (MPa) | (ksi) | (MPa) |
| Gray cast iron, ASTM A48, as cast | | | | | |
| Class 20 | | 5 | 35 | 50 | 345 |
| Class 30 | 174 | 8.5 | 59 | 65 | 448 |
| Class 40 | 201 | 13 | 90 | 75 | 517 |
| Ductile (nodular) iron, ASTM A536 | | | | | |
| 60-40-18 annealed | 140 | 22 | 152 | 77 | 530 |
| 80-55-06 quenched and tempered | 179 | 22 | 152 | 77 | 530 |
| 100-70-03 quenched and tempered | 229 | 27 | 186 | 92 | 634 |
| 120-90-02 quenched and tempered | 269 | 31 | 214 | 103 | 710 |
| Bronze, sand-cast, $s_{u\ min} = 40$ ksi (275 MPa) | | 5.7 | 39 | 30 | 207 |
| Bronze, heat-treated, $s_{u\ min} = 90$ ksi (620 MPa) | | 23.6 | 163 | 65 | 448 |

Source: Extracted from AGMA Standard 2001-D04, *Fundamental Rating Factors and Calculation Methods for Involute Spur and Helical Gear Teeth*, with the permission of the publisher, American Gear Manufacturers Association, 1001 North Fairfax Street, 5th floor, Alexandria, VA 22314.

other irons have low ductility. Austempered ductile iron (ADI) is being used in some important automotive applications. However, standardized allowable stress numbers have not yet been specified.

Bronzes. Four families of bronzes are typically used for gears: (1) phosphor or tin bronze, (2) manganese bronze, (3) aluminum bronze, and (4) silicon bronze. Yellow brass is also used. Most bronzes are cast, but some are available in wrought form. Corrosion resistance, good wear properties, and low friction coefficients are some reasons for choosing bronzes for gears. Table 9–10 shows allowable stress numbers for one bronze alloy in two common forms.

9–8 SELECTION OF GEAR MATERIALS

We now use the values of bending stress found in Section 9–5 and contact stress from Section 9–6 to specify a suitable material and its condition that will withstand those stresses without tooth breakage caused by bending stress and with good resistance to pitting on the face of the teeth caused by contact stress. We develop here an approach for specifying steel for the gears. A similar method can be used for other materials such as cast iron and bronze. Later in this chapter, we discuss the design of plastic gears. The goal of the process is to ensure that the predicted stresses are less than the allowable strength of the material. Inputs to the decisions are:

1. Estimated bending stress number, s_t , as found in Section 9–5, Equation (9–16).
2. Estimated contact stress number, s_c , as found in Section 9–6, Equation (9–23).

3. Desired service life and reliability for the gears, discussed in this section.
4. Chosen safety factor, SF , discussed in this section.
5. Allowable bending stress number, s_{at} , and allowable contact stress number for the material, s_{ac} , discussed in Section 9–7.

Note about temperature. The methods developed in this section assume that the operating temperature for the gears is less than 250°F (121°C) and above 32°F (0°C) because we rely on published data for the materials obtained within these limits. Higher temperatures can be considered if data are available on how the material strength is affected. One concern is that many steel gears are heat treated to produce desired strength and ductility and higher operating temperatures can reduce the strength due to tempering. Operating below freezing temperature can be done provided that testing is done to verify adequate impact strength using the Charpy or Izod methods discussed in Chapter 2.

General principles for specifying materials. We use the following relationships to guide the process of specifying suitable materials for gears.

$$s_t < s_{at}' \quad \text{and} \quad s_c < s_{ac}' \quad (9-24)$$

The “prime” applied to the allowable strengths indicates that adjustments are made to published data for s_{at} and s_{ac} that are presented in Section 9–7. Conditions for those data are:

- Operating temperatures are above 32°F (0°C) and below 250°F (121°C).
- The materials are exposed to 10^7 loading cycles.

- The expected reliability is 99%, less than one failure in 100.
- The safety factor, SF , is 1.00.

The adjustments to s_{at} and s_{ac} considered here take the form

$$s_{at}' = s_{at} \frac{Y_N}{(SF)(K_R)} \quad (9-25)$$

$$s_{ac}' = s_{ac} \frac{Z_N}{(SF)(K_R)} \quad (9-26)$$

where SF = safety factor

K_R = reliability factor

Y_N = bending strength stress cycle factor

Z_N = pitting resistance stress cycle factor

Safety factor: The value of SF is typically taken to be 1.0 because most of the uncertainties involved in computing the bending and contact stresses are included in the equations for s_{at} and s_{ac} by the factors K_o , K_s , K_v , and K_m . A design decision can be made for using $SF > 1.00$ for extra safety or for anticipated undesirable conditions beyond these factors. AGMA recommends

$$1.00 \leq SF \leq 1.50$$

Reliability factor: Table 9–11 shows typical values for K_R and the choice of which to apply in a given project is a design decision.

Desired life of the gear drive: Designers must evaluate each project to specify what the design life is to be. Table 9–12 shows one set of recommended design life values in hours of operation. The range from 20 000 to 30 000 hours for general industrial machines is a reasonable choice unless known conditions of the types listed exist. The same table for design life is used for rolling contact bearings in Chapter 14. Also needed is the *number of load cycles* that can be computed using this equation:

$$N_c = (60)(L)(n)(q) \quad (9-27)$$

where N_c = expected number of cycles of loading

L = design life in hours

n = rotational speed of the gear in rpm

q = number of load applications per revolution

TABLE 9–11 Reliability Factor, K_R

| Reliability | K_R |
|-------------------------------|-------|
| 0.90, one failure in 10 | 0.85 |
| 0.99, one failure in 100 | 1.00 |
| 0.999, one failure in 1000 | 1.25 |
| 0.9999, one failure in 10 000 | 1.50 |

The normal number of load applications per revolution for any given tooth is typically, of course, one. But consider the case of an idler gear that serves as both a driven and a driving gear in a gear train. It receives two cycles of load per revolution: one as it receives power from and one as it delivers power to its mating gears. Also, in certain types of gear trains, one gear may deliver power to two or more gears mating with it. Gears in a planetary gear train often have this characteristic.

As an example of the application of Equation (9–27), consider that the pinion in Example Problems 9–3 and 9–4 is designed to have a life of 20 000 h. When rotating at 1750 rpm. Then

$$\begin{aligned} N_c &= (60)(L)(n)(q) = (60)(20\,000)(1750)(1) \\ &= 2.1 \times 10^9 \text{ cycles} \end{aligned}$$

Because this is higher than 10^7 , an adjustment in the allowable bending stress number must be made.

Stress Cycle Factors: Figures 9–21 and 9–22 show recommended values of Y_N for bending stress and Z_N for contact stress for steel gears. Features of these graphs include:

- Each is plotted on log-log scales with the *number of load cycles* on the horizontal axis and the *stress cycle factor* on the vertical axis.
- The stress cycle factor is approximately 1.0 for 10^7 load cycles on both graphs.
- The stress cycle factors are less than 1.0 for load cycles higher than 10^7 and the values are independent of the type of steel or its condition. Some designs for critical service applications use values lower than those shown and the AGMA standard provides an added shaded area for use in such conditions.

TABLE 9–12 Recommended Design Life

| Application | Design life (h) |
|--|-----------------|
| Domestic appliances | 1000–2000 |
| Aircraft engines | 1000–4000 |
| Automotive | 1500–5000 |
| Agricultural equipment | 3000–6000 |
| Elevators, industrial fans, multipurpose gearing | 8000–15 000 |
| Electric motors, industrial blowers, general industrial machines | 20 000–30 000 |
| Pumps and compressors | 40 000–60 000 |
| Critical equipment in continuous 24-h operation | 100 000–200 000 |

Source: Eugene A. Avallone and Theodore Baumeister III, eds. *Marks' Standard Handbook for Mechanical Engineers*. 9th ed. New York: McGraw-Hill, 1986.

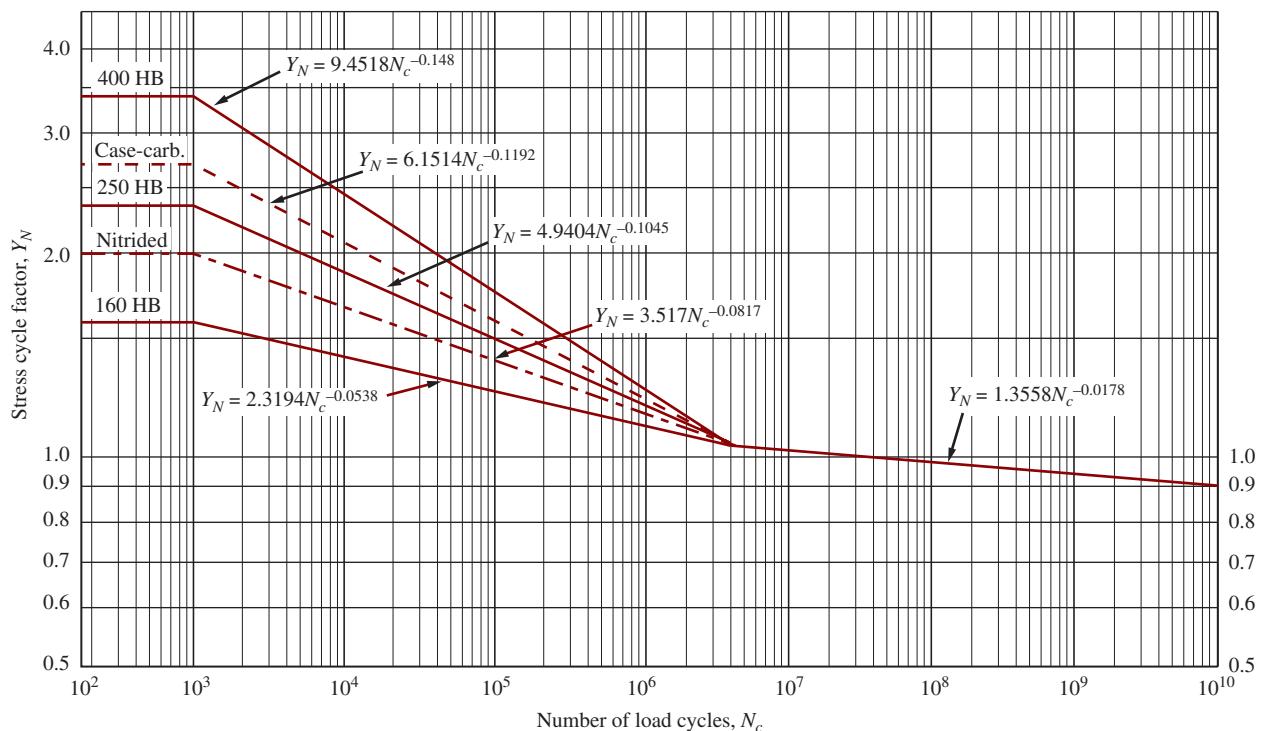


FIGURE 9–21 Bending strength stress cycle factor, Y_N (Adapted from AGMA Standard 2001-D04, *Fundamental Rating Factors and Calculation Methods for Involute Spur and Helical Gear Teeth*, with permission of the publisher, American Gear Manufacturers Association, 1001 North Fairfax Street, 5th floor, Alexandria, VA 22314)

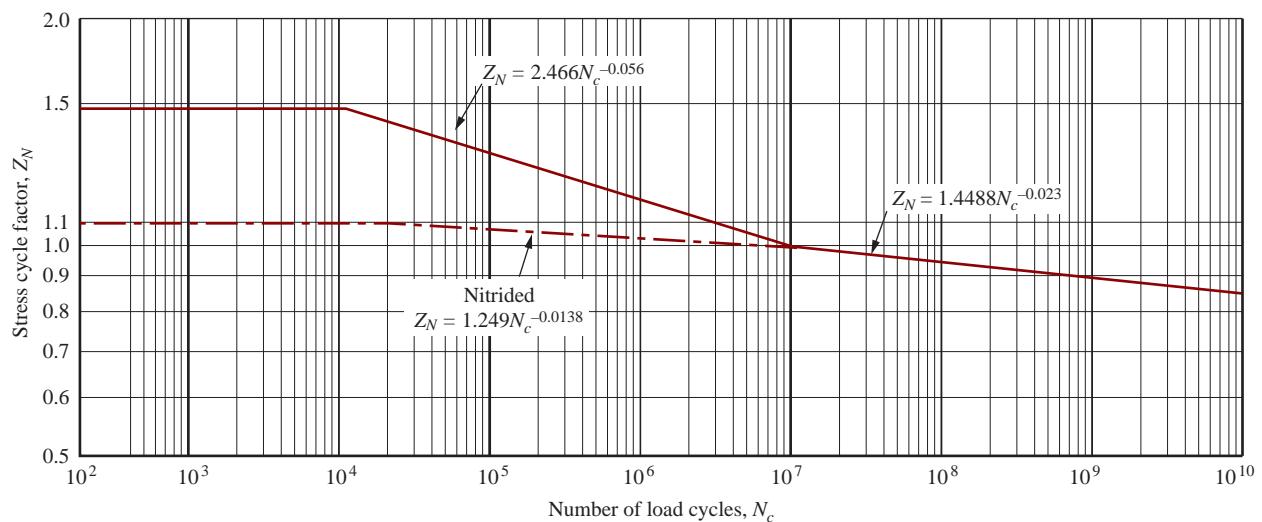


FIGURE 9–22 Pitting Resistance stress cycle factor, Z_N (Adapted from AGMA Standard 2001-D04, *Fundamental Rating Factors and Calculation Methods for Involute Spur and Helical Gear Teeth*, with permission of the publisher, American Gear Manufacturers Association, 1001 North Fairfax Street, 5th floor, Alexandria, VA 22314)

- The stress cycle factors are greater than 1.0 for load cycles lower than 10^7 and the values are dependent on the type of steel and its condition.
- Equations of an exponential form are given in the graphs to facilitate calculation of the values of the stress cycle factors.
- These charts do not apply to cast iron or to nonferrous materials such as bronze. Values of $Y_N = 1.00$

and $Z_N = 1.00$ can be used while ensuring that the actual strengths of materials specified have a modest margin of safety.

We can now describe the general approach to specifying suitable steels or other metallic materials for gears. The goal is to access the data in Section 9–7, including Figures 9–18 and 9–19 and Tables 9–9, and 9–10, that give accepted values of s_{at} and s_{ac} for through-hardened

steels, case-hardened steels using flame or induction hardening, steels that are carburized and case hardened, cast irons, and bronzes. To facilitate this approach, we can combine Equations (9–24) to (9–26) and then solve for s_{at} and s_{ac} .

$$s_t < s_{at}' = s_{at} \frac{Y_N}{(SF)(K_R)} \quad (9-28)$$

$$s_c < s_{ac}' = s_{ac} \frac{Z_N}{(SF)(K_R)} \quad (9-29)$$

Then, solving for s_{at} and s_{ac} gives

$$\text{Required } s_{at} > s_t \frac{(SF)(K_R)}{Y_N} \quad (9-30)$$

$$\text{Required } s_{ac} > s_c \frac{(SF)(K_R)}{Z_N} \quad (9-31)$$

Both Equations (9–30) and (9–31) must be satisfied. It should be noted here that for gear drives with relatively

long design lives, the design will most often be governed by the pitting resistance and that assumption is made in the following example problems and in more general design procedures.

Both Equations (9–30) and (9–31) must be satisfied and are used when selecting a gear material. If the material is known in the problem, Equations (9–28) and (9–29) are used to solve for the safety factor. The resulting Equations (9–32) and (9–33) are listed next.

For bending stress:

$$SF = \frac{s_{at}}{s_t} \cdot \frac{Y_N}{K_R} \quad (9-32)$$

For contact stress:

$$SF = \frac{s_{ac}}{s_c} \cdot \frac{Y_N}{K_R} \quad (9-33)$$

Example Problem

9–5

Consider three different materials and calculate the safety factor for the pinion and gear using the results from Example Problem 9–3 for the computed bending stresses. Design for a reliability of 0.999, fewer than one failure in 1000. The application is a drive for an industrial saw that will be fully utilized on a normal, one-shift, five-day per-week operation. The materials proposed are:

- Ductile iron ASTM A536 type 80-55-06 quenched and tempered.
- Though hardened steel pinion and gear: SAE 4340 OQT 1000.
- SAE 8620 steel pinion and gear case hardened by carburizing to a hardness of Rockwell C 60-64 with a minimum effective case depth of 0.025 in.

Solution: The results required from Example Problem 9–3 are summarized here:

$$\begin{array}{llll} N_P = 20 & N_G = 70 & P_d = 6 & F = 2.00 \text{ in} \\ n_P = 1750 \text{ rpm} & n_G = 500 \text{ rpm} & D_P = 3.333 \text{ in} & D_G = 11.667 \text{ in} \\ s_{tP} = 12\,376 \text{ psi} & s_{tG} = 9871 \text{ psi} & & \end{array}$$

The equation relating the bending stress number with the adjusted allowable bending stress number is:

$$s_t < s'_{at} = s_{at} \frac{Y_N}{SF \cdot K_R}$$

Solving this equation for the safety factor, SF :

$$SF = \frac{s_{at}}{s_t} \cdot \frac{Y_N}{K_R}$$

Design decisions will be made on the reliability and design life. From Table 9–11, we find $K_R = 1.25$ for the desired reliability of 0.999 as specified in the problem. Because the saw will be fully utilized in an industrial environment, we choose a life of $L = 20\,000$ hours, using Table 9–12 as a guide.

Compute the number of load cycles for the pinion and the gear using Equation (9–27). Each tooth sees one load cycle per revolution, $q = 1$.

$$N_{cP} = (60) \cdot L \cdot n_p \cdot q = 60 \cdot 20\,000 \cdot 1750 \cdot 1 = 2.10 \times 10^9 \text{ cycles}$$

$$N_{cG} = (60) \cdot L \cdot n_G \cdot q = 60 \cdot 20\,000 \cdot 500 \cdot 1 = 6.00 \times 10^8 \text{ cycles}$$

From Figure 9–21, the bending strength stress cycle factor for the pinion and gear is:

$$Y_{NP} = 0.93$$

$$Y_{NG} = 0.95$$

Part (a): Let's look first at using ductile iron ASTM type A536 80-55-06. Using Table 9–10, the allowable bending stress number for this material is

$$s_{at} = 22\,000 \text{ psi}$$

Solving for the safety factor for the pinion:

$$SF = \frac{s_{at}}{s_{tP}} \cdot \frac{Y_{NP}}{K_R} = \frac{22\,000 \text{ psi}}{12\,376 \text{ psi}} \cdot \frac{0.93}{1.25} = 1.3$$

Using the same equation for the safety factor of the gear:

$$SF = \frac{s_{at}}{s_{tG}} \cdot \frac{Y_{NG}}{K_R} = \frac{22\,000 \text{ psi}}{9\,871 \text{ psi}} \cdot \frac{0.95}{1.25} = 1.7$$

The minimum safety factor is for the pinion and it is within the range of 1.0 to 1.5, as recommended by AGMA, so this design is considered to be satisfactory for bending stress.

Part (b) considers a through hardened steel material SAE 4340 OQT 1000 for the pinion and gear. Using Appendix 3 the properties of the material are:

$$s_u = 171\,000 \text{ psi}, s_y = 158\,000 \text{ psi}, HB = 363, 16\% \text{ elongation}$$

Using Figure 9–18, along with the material Brinell hardness of HB = 363, the allowable bending stress number for the though-hardened steel gear is:

$$s_{at} = 41\,000 \text{ psi}$$

Solving for the safety factor SF of the pinion and the gear:

$$SF_p = \frac{s_{at}}{s_{tP}} \cdot \frac{Y_{NP}}{K_R} = \frac{41\,000 \text{ psi}}{12\,376 \text{ psi}} \cdot \frac{0.93}{1.25} = 2.5$$

$$SF_G = \frac{s_{at}}{s_{tG}} \cdot \frac{Y_{NG}}{K_R} = \frac{41\,000 \text{ psi}}{9\,871 \text{ psi}} \cdot \frac{0.95}{1.25} = 3.2$$

The safety factor is well over 1.5 for both the pinion and the gear for bending stress with this through-hardened steel.

Part (c) considers a gear material, SAE 8620 case hardened by carburizing to Rockwell C 60-64 with a minimum effective case depth of 0.025 in.

Using Table 9–9, the allowable bending stress number for both the pinion and the gear is:

$$s_{at} = 54\,000 \text{ psi}$$

Solving for the safety factor of the pinion and the gear:

$$SF_p = \frac{s_{at}}{s_{tP}} \cdot \frac{Y_{NP}}{K_R} = \frac{54\,000 \text{ psi}}{12\,376 \text{ psi}} \cdot \frac{0.93}{1.25} = 3.2$$

$$SF_G = \frac{s_{at}}{s_{tG}} \cdot \frac{Y_{NG}}{K_R} = \frac{54\,000 \text{ psi}}{9\,871 \text{ psi}} \cdot \frac{0.95}{1.25} = 4.2$$

The safety factor is well over 1.5 for both the pinion and the gear for bending stress with a carburized, case hardened steel material.

Recall that it was stated earlier that contact stress is most often the most critical stress in the design and operation of gearing. Therefore, we need to evaluate

these proposed materials for the gears for contact stress before judging whether they are satisfactory. We do that in Example Problem 9–6.

- Example Problem 9–6** Consider the same three materials used in Example Problem 9–5 and calculate the safety factor for the pinion and gear. Use the results from Example Problems 9–1, 9–2, and 9–3 for the computed contact stress and use the same reliability and number of load cycles as used in Example Problem 9–4.
- Ductile iron ASTM A536 80-55-06 quenched and tempered
 - Though hardened steel pinion and gear: SAE 4340 OQT 1000
 - SAE 8620 steel, case hardened by carburizing to Rc 60-64 with a minimum effective case depth of 0.025 in.

Solution: The results required from Example Problems 9–1, 9–2, 9–3 are:

$$\begin{array}{llll} N_P = 20 & N_G = 70 & P_d = 6 & F = 2.00 \text{ in} \\ n_P = 1750 \text{ rpm} & n_G = 500 \text{ rpm} & D_P = 3.333 \text{ in} & D_G = 11.667 \text{ in} \\ s_{cP} = s_{cG} = 100\,769 \text{ psi} & K_R = 1.25 & N_{cP} = 2.1 \times 10^9 \text{ cycles} & N_{cG} = 6.0 \times 10^9 \text{ cycles} \end{array}$$

The equation relating the contact stress number with the adjusted allowable contact stress number is:

$$s_c < s'_{ac} = s_{at} \frac{Z_N}{SF \cdot K_R}$$

Use this equation to solve for the safety factor, SF :

$$SF = \frac{s_{ac}}{s_c} \cdot \frac{Z_N}{K_R}$$

From Figure 9–22, we find pitting resistance stress cycle factors:

$$Z_{NP} = 0.88$$

$$Z_{NG} = 0.91$$

Part (a) Let's consider the first proposed material, ductile iron ASTM A536 type 80-55-06. Using Table 9–9, the allowable contact stress number for this material is

$$s_{ac} = 77\,000 \text{ psi}$$

Solving for the safety factor SF of the pinion and gear:

$$SF_p = \frac{s_{ac}}{s_{cP}} \cdot \frac{Z_{NP}}{K_R} = \frac{77\,000 \text{ psi}}{100\,769 \text{ psi}} \cdot \frac{0.88}{1.25} = 0.54$$

$$SF_G = \frac{s_{ac}}{s_{cG}} \cdot \frac{Z_{NG}}{K_R} = \frac{77\,000 \text{ psi}}{100\,769 \text{ psi}} \cdot \frac{0.91}{1.25} = 0.56$$

Both safety factors are below the minimum value of 1.00, as recommended by AGMA and are therefore considered to be unsatisfactory for this application.

Part (b) considers a through hardened steel SAE 4340 OQT 1000. Using Appendix 3, the properties of the material are:

$$s_u = 171\,000 \text{ psi}, s_y = 158\,000 \text{ psi}, HB = 363, 17\% \text{ elongation}$$

Using Figure 9–19, along with a Brinell hardness of $HB = 363$ for though-hardened steel gears material, the allowable contact stress number is:

$$s_{ac} = 146\,000 \text{ psi}$$

The safety factors, SF , of the pinion and the gear are:

$$SF_p = \frac{s_{ac}}{s_{cP}} \cdot \frac{Z_{NP}}{K_R} = \frac{146\,000 \text{ psi}}{100\,769 \text{ psi}} \cdot \frac{0.88}{1.25} = 1.0$$

$$SF_G = \frac{s_{ac}}{s_{cG}} \cdot \frac{Z_{NP}}{K_R} = \frac{146\,000 \text{ psi}}{100\,769 \text{ psi}} \cdot \frac{0.91}{1.25} = 1.1$$

The safety factors for the pinion and gear are both within the range of 1.0 to 1.5, as recommended by AGMA, with the pinion's factor at the lowest limit.

Part (c) considers SAE 8620 steel, case hardened by carburizing to a Rc 60-64, with a minimum effective case depth of 0.025 in. Using Table 9–9, the allowable contact stress number is:

$$s_{ac} = 180\,000 \text{ psi}$$

The safety factors SF for the pinion and the gear are:

$$SF = \frac{s_{ac}}{s_{cP}} \cdot \frac{Z_{NP}}{K_R} = \frac{180\,000 \text{ psi}}{100\,769 \text{ psi}} \cdot \frac{0.88}{1.25} = 1.26$$

$$SF = \frac{s_{ac}}{s_{cG}} \cdot \frac{Z_{NP}}{K_R} = \frac{180\,000 \text{ psi}}{100\,769 \text{ psi}} \cdot \frac{0.91}{1.25} = 1.30$$

The safety factors for both the pinion and gear are well within the range of 1.0 to 1.5, as recommended by AGMA.

This completes the development of analyses for both bending and contact stresses and demonstration of how to apply them individually. Here we summarize the results and draw conclusions from them. Example Problems 9–3, 9–4, 9–5, and 9–6 were spread over many pages because the design principles and procedures were developed and demonstrated as those problems were completed. Let's now show the summary of the major design decisions and results of calculations.

Summary of the Results for Example Problems 9–3, 9–4, 9–5, and 9–6

Given data:

Application: Industrial saw operating at 500 rpm, powered by a 25 hp electric motor operating at 1750 rpm, using a gear reducer between them.

Output speed from the gear reducer: 500 rpm; velocity ratio: 3.50

Production operation: fully utilized; design life = 20 000 hours

Enclosed gear reducer made to commercial standards

High reliability for gear design: $R = 0.999$; less than one failure in 1000

Design decisions:

Diametral pitch: 6

Pressure angle: $\phi = 20^\circ$

Face width: $F = 2.00$ in

Numbers of teeth: pinion = 20; gear = 70

Quality number for gear geometry: $A_v = 10$

Calculated results:

Geometry of gear pair and forces

Pitch diameters: $D_p = 3.333$ in; $D_G = 11.667$ in

Center distance: $C = 7.500$ in

Pitch line speed: $v_t = 1527$ ft/min

Transmitted load: $W_t = 540$ lb

Radial force: $W_r = 196.6$ lb

Normal force: $W_n = 575$ lb

Factors in stress analyses:

Overload factor: $K_o = 1.50$

Size factor: $K_s = 1.0$

Load-distribution factor: $K_m = 1.21$

Rim factor $K_B = 1.0$

Dynamic factor: $K_v = 1.41$

Geometry factors: $J_p = 0.335$; $J_G = 0.420$

Geometry factor: $I = 0.108$

Stresses in gear teeth:

Bending stress: pinion $s_{tP} = 12\ 376$ psi; gear $s_{tG} = 9871$ psi

Contact stress: Pinion and gear $s_c = 100\ 769$ psi

Safety factor for three alternative materials for bending stress:

Ductile iron ASTM A536 80-55-06 quenched and tempered

$$SF_P = 1.30 \quad SF_G = 1.70$$

Through hardened pinion and gear: SAE 4340 OQT 1000

$$SF_P = 2.5 \quad SF_G = 3.2$$

SAE 8620 steel, case hardened by carburizing to Rc 60-64; minimum effective case depth of 0.025 in

$$SF_P = 3.20 \quad SF_G = 4.20$$

Safety factor for three alternative materials for contact stress:

Ductile iron ASTM A536 80-55-06 quenched and tempered

$$SF_P = 0.54 \quad SF_G = 0.56$$

Through hardened pinion and gear: SAE 4340 OQT 1000

$$SF_P = 1.00 \quad SF_G = 1.10$$

SAE 8620 steel, case hardened by carburizing to Rc 60-64; minimum effective case depth of 0.025 in

$$SF_P = 1.26 \quad SF_G = 1.30$$

All three materials satisfy the safety factor requirements of AGMA for bending stress.

For contact stress the ductile iron gear material had a safety factor of 0.54, which does not meet the minimum value of 1.0 recommended by AGMA. The gears made from ductile iron could be redesigned in order to lower the contact stress number. A larger number of teeth and correspondingly larger pitch diameter would lower the tangential force. The face width could also be increased. While these changes would lower the contact stress number, the gears would get larger which would increase the overall gearbox housing and related components. This gives a larger gearbox footprint and will increase the cost of all the components. This may not be a prudent design decision.

The through-hardened and case carburized gear materials have safety factors that fall within the 1.0 to 1.50 range recommended by AGMA for contact stress. The considerations then turn to material cost and availability, along with manufacturing process cost, and size requirements of the gear design. The quality number for this design, $A_v 10$, is relatively low and can be attained with a hobbing process. The gear mesh combination using the through-hardened steel pinion mating with

a through-hardened gear could be manufactured using the hobbing process and would not require a secondary operation such as grinding. This would reduce the manufacturing cost of the gear design.

The two case carburized surface hardened gears are the strongest and most durable gear meshes. The disadvantage of this hardening process is the distortion of the gear teeth after heat treating. This would require a secondary grinding process to remove distortions and finish the teeth within specifications. The secondary process would add cost to the gear manufacturing process. Case carburized gears are typically designed to be smaller in size compared to a through-hardened gear set. This decrease in gear size will reduce the overall footprint size of the gearbox which may offset the extra cost for heat treatment and finish grinding.

Final decisions on which material to use and other details of the gear designs are part of the responsibility of the team creating the complete industrial saw.

9-9 DESIGN OF SPUR GEARS TO SPECIFY SUITABLE MATERIALS FOR THE GEARS

In previous sections, the main objective was the *analysis* of the performance of a gear pair with a specific geometry using three proposed materials and heat treatments. This section approaches the gear design process differently. First the geometric characteristics are specified, and then the required material properties, particularly the hardness of the gear teeth, are computed. Finally, a suitable material is specified that meets those requirements.

In designs involving gear drives, normally the required speeds of rotation of the pinion and the gear and the amount of power that the drive must transmit are known. These factors are determined from the application. Also, the environment and operating conditions to which the drive will be subjected must be understood. It is particularly important to know the type of driving device and the driven machine, in order to judge the proper value for the overload factor.

The designer must decide the type of gears to use; the arrangement of the gears on their shafts; the materials of the gears, including their heat treatment; and the geometry of the gears: numbers of teeth, diametral pitch, pitch diameters, tooth form, face width, and quality numbers.

This section presents a design procedure that accounts for the bending fatigue strength of the gear teeth and the pitting resistance, called *surface durability*. This procedure makes extensive use of the design equations presented in the preceding sections of the chapter and of the tables of material properties in Appendices 3 through 5, 8, and 12.

You should understand that there is no one best solution to a gear design problem; several good designs

are possible. Your judgment and creativity and the specific requirements of the application will greatly affect the final design selected. The purpose here is to provide a means of approaching the problem to create a reasonable design.

Design Objectives

Some overall objectives of a design are listed below. The resulting drive should

- Be compact and small
- Operate smoothly and quietly
- Have long life
- Be low in cost
- Be easy to manufacture
- Be compatible with the other elements in the machine, such as bearings, shafts, the housing, the driver, and the driven machine.

The major objective of the design procedure is to define a safe, long-lasting gear drive. General steps and guidelines are outlined here to produce a reasonable initial design. However, because of the numerous variables involved, several iterations are typically made to work toward an optimum design. Details of the procedure are presented in Example Problem 9-7.

Table 9-13 is a combination of a glossary of terms and a reference for finding equations, tables, or figures required to complete a gear design. The procedure given below uses U.S. Customary units and the diametral pitch, P_d , system. Section 9-10 adjusts this procedure using SI metric units and the metric module, m , system. You should refer back to earlier sections of this chapter and to Chapter 8 for details. Several of the unit-specific formulas developed in Section 9-3 are applied in this section to minimize unit manipulations. *You should understand fully the terms used and the how units were handled when these formulas were developed.*

PROCEDURE FOR DESIGNING A SAFE AND LONG-LASTING GEAR DRIVE ▾

1. From the design requirements, identify the input speed of the pinion, n_p , the desired output speed of the gear, n_G , and the power to be transmitted, P .
2. Choose the type of material for the gears, such as steel, cast iron, or bronze.
3. Considering the type of driver and the driven machine, specify the overload factor, K_o , using Table 9-1. The primary concern is the expected level of shock or impact loading.
4. Specify a trial value for the diametral pitch. When steel gears are used, Figure 9-11 provides initial guidance.

TABLE 9–13 Summary and Glossary of Terms Used in Gear Design

| Term by cluster | Symbol | Description of use | Reference location |
|---|-----------------------|---|--------------------|
| Recommended quality numbers | A_v | Specify value of A_v | Table 9–5 |
| Allowable bending stress number—steel | s_{at} | Specify material | Figure 9–18 |
| Allowable contact stress number—steel | s_{ac} | Specify material | Figure 9–19 |
| Allowable stresses—case-hardened steel | s_{at} and s_{ac} | Specify material | Table 9–9 |
| Allowable stresses—nonferrous | s_{at} and s_{ac} | Specify material | Table 9–10 |
| Geometry factors for bending stress | J_P and J_G | Bending stress | Figure 9–10 |
| Overload factor | K_o | Bending and contact stress | Table 9–1 |
| Size factor | K_s | Bending and contact stress | Table 9–2 |
| Alignment factor: $K_m = 1.0 + C_{pf} + C_{ma}$ | K_m | Bending and contact stress | Equation 9–17 |
| Proportion factor: | C_{pf} | Bending and contact stress | Figure 9–12 |
| Mesh alignment factor: | C_{ma} | Bending and contact stress | Figure 9–13 |
| Rim thickness factor | K_B | Bending and contact stress | Figure 9–14 |
| Dynamic factor | K_v | Bending and contact stress | Figure 9–16 |
| Equations for K_v | K_v | Bending and contact stress | Table 9–6 |
| Elastic coefficient | C_P | Contact stress | Table 9–7 |
| Geometry factor for contact stress | I | Contact stress | Figure 9–17 |
| Reliability factor | K_R | Bending and contact stress | Table 9–11 |
| Recommended life in hours | L | Bending and contact stress | Table 9–12 |
| Bending stress cycle factor | Y_N | Bending stress | Figure 9–21 |
| Contact stress cycle factor | Z_N | Contact stress | Figure 9–22 |
| Design pitch selection aid | | Specify trial P_d or m | Figure 9–11 |
| Primary equations used in gear design: | | | |
| Bending stress number | S_t | $S_t = \frac{W_t P_d}{FJ} K_o K_s K_m K_B K_v$ | Equation 9–16 |
| Required allowable bending stress number | S_{at} | Required $S_{at} > S_t \frac{(SF)(K_R)}{Y_N}$ | Equation 9–28 |
| Contact stress number | S_c | $S_c = C_P \sqrt{\frac{W_t K_o K_s K_m K_v}{FD_p I}}$ | Equation 9–23 |
| Required allowable contact stress number | S_{ac} | Required $S_{ac} > S_c \frac{(SF)(K_R)}{Z_N}$ | Equation 9–31 |

- The graph of design power transmitted versus the pinion rotational speed was derived for selected pitches and pinion diameters. Design power, $P_{des} = K_o P$. Steel that is through hardened to HB 300 is used. Because of the numerous variables involved, the value of P_d read from the figure is only an initial target value. Subsequent iterations may require considering a different value, either higher or lower.
 - Specify the face width within the following recommended range for general machine drive gears, described earlier:
 - Nominal Face Width**
- $8/P_d < F < 16/P_d$
- Nominal value of $F = 12/P_d$
- Specify or compute the following values:
 - Number of teeth in the pinion (N_P) and the gear (N_G) to achieve the desired output speed of the gear.
 - Compute the actual output speed of the gear and ensure that it is satisfactory.
 - Compute key geometric features: pitch diameters D_P , D_G , and center distance, C . Judge that they are acceptable.
 - Compute the pitch line speed, v_b , and the transmitted load, W_t .
 - Determine the geometry factors for bending stress, J_P and J_G , and the geometry factor for contact stress, I .

- Specify the quality number for the teeth of the gears using Table 9–5 as a guide.
 - Determine values for all of the factors in Equation (9–16) for bending stress and Equation (9–23) for contact stress.
7. Compute the bending stress and the contact stress on the pinion and gear teeth. Judge whether the stresses are reasonable (neither too low nor too high) in terms of being able to specify a suitable material. If not, select a new pitch or revise the number of teeth, pitch diameter, or face width. Typically the contact stress on the pinion is the limiting value for gears designed for a long life.
8. Iterate the design process to seek more optimum designs. It is not unusual to make several trials before settling on a particular design. Using computer aids, such as the spreadsheets described in Sections 9–11 and 9–12, can make successive trials quickly.
9. Using the required hardness HB for the pinion computed in Step 7, specify a suitable material and its heat treatment using Appendices 3 and 4. The charts in Appendix 4 are recommended because they give the widest range of tempering temperatures and corresponding hardness values from which to choose. Examine the lower line of data for HB to find a value just larger than the minimum found from Step 7 and specify the tempering temperature that will produce that hardness level. Table 9–8 recommends several steel alloys that are typically used for gears that are through-hardened; SAE 1045 (similar to 1040), 4140, and 4340 are included and charts for these three alloys are shown in Appendix 4.
10. If Step 8 is not successful, either redesign the gears or consider using case-hardened steel with the values for s_{ac} taken from Table 9–9.
11. If the design is using cast iron or bronze, consult Table 9–10 for values for s_{ac} .

Guidelines for Specifying Metallic Materials for Gears ▾

1. Given the bending stress, s_b , the contact stress, s_c , and the rotational speed of both the pinion, n_p , and the gear, n_g from analyses similar to those in Example Problems 9–3 and 9–4. Note that this also required that the material of choice is to be steel, cast iron, or bronze.
2. Decide on the safety factor; typically $SF = 1.00$ unless unusual conditions exist. AGMA recommends values for SF from 1.0 to 1.5.
3. Decide on the desired reliability and use Table 9–11 to determine K_R ; typically use $K_R = 1.00$ for a reliability of 0.99 (one failure in 100).
4. Specify the desired life in hours for the gears using Table 9–12 as a guide,
5. Compute the expected number of load cycles for both the pinion and the gear using Equation (9–27).
6. Use Figure 9–21 to determine Y_N for the pinion and Figure 9–22 to determine Z_N for the gear. The values may be read from the graphs or computed from the equations given in the figures.
7. Use Equation (9–31) to evaluate the required s_{acP} for the pinion because it typically has the most critical value for s_{ac} . Then consult Figure 9–19 to determine if through-hardened Grade 1 steel can be used. Enter the chart from the value of s_{ac} on the vertical axis; project horizontally to the Grade 1 line; then project vertically down to the Brinell hardness axis to read the minimum acceptable HB hardness. Note that the value should be between HB 180 and HB 400. The most desirable portion of this range is about HB 250 to HB 400. If the value is lower, then a more compact gear size can usually be designed. No value greater than HB 400 should be considered for through-hardened steels. Only Grade 1 steels are recommended.
8. If Step 7 produces a reasonable result, proceed to compute s_{acG} for the gear using Equation (9–31) and compute s_{at} for both the pinion and the gear using Equation (9–30). Check that the bending stress numbers are

acceptable by consulting Figure 9–18; they will almost always be acceptable.

9. Using the required hardness HB for the pinion computed in Step 7, specify a suitable material and its heat treatment using Appendices 3 and 4. The charts in Appendix 4 are recommended because they give the widest range of tempering temperatures and corresponding hardness values from which to choose. Examine the lower line of data for HB to find a value just larger than the minimum found from Step 7 and specify the tempering temperature that will produce that hardness level. Table 9–8 recommends several steel alloys that are typically used for gears that are through-hardened; SAE 1045 (similar to 1040), 4140, and 4340 are included and charts for these three alloys are shown in Appendix 4.
10. If Step 8 is not successful, either redesign the gears or consider using case-hardened steel with the values for s_{ac} taken from Table 9–9.
11. If the design is using cast iron or bronze, consult Table 9–10 for values for s_{ac} .

Guidelines for Adjustments in Successive Iterations ▾

The following relationships should help you determine what changes in your design assumptions you should make after the first set of calculations to achieve a more optimum design:

- Decreasing the numerical value of the diametral pitch results in larger teeth and generally lower stresses. Also, the lower value of the pitch usually means a larger face width, which decreases stress and increases surface durability.
- Increasing the diameter of the pinion decreases the transmitted load, generally lowers the stresses, and improves the surface durability.
- Increasing the face width lowers the stress and improves the surface durability, but to a generally lesser extent than either the pitch or the pitch diameter changes discussed previously.
- Gears with more and smaller teeth tend to run more smoothly and quietly than gears with fewer and larger teeth.
- Standard values of diametral pitch should be used for ease of manufacture and lower cost (see Table 8–3).
- Using high-alloy steels with high surface hardness results in the most compact system, but the cost is higher.
- Using very accurate gears (with ground or shaved teeth) results in a higher quality number, lower dynamic loads, and consequently lower stresses and improved surface durability, but the cost is higher.
- The number of teeth in the pinion should generally be as small as possible to make the system compact. But the possibility of interference is greater with fewer teeth. Check Table 8–7 to ensure that no interference will occur. (See Reference 23.)

**Example Problem
9–7**

Design a pair of spur gears to be used as a part of the drive for a chipper to prepare pulpwood for use in a paper mill. Intermittent use is expected. An electric motor transmits 3.0 horsepower to the pinion at 1750 rpm and the gear must rotate between 460 and 465 rpm. A compact design is desired.

**Solution and General
Design Procedure**

Step 1. Considering the transmitted power, P , the pinion speed, n_P , and the application, refer to Figure 9–11 to determine a trial value for the diametral pitch, P_d . The overload factor, K_o , can be determined from Table 9–1, considering both the power source and the driven machine.

For this problem, $P = 3.0$ hp and $n_P = 1750$ rpm, $K_o = 1.75$ (uniform driver, heavy shock driven machine). Then $P_{des} = (1.75)(3.0 \text{ hp}) = 5.25$ hp. Try $P_d = 12$ for the initial design.

Step 2. Specify the number of teeth in the pinion. For small size, use 17 to 20 teeth as a start.

For this problem, let's specify $N_P = 18$.

Step 3. Compute the nominal velocity ratio from $VR = n_P/n_G$.

For this problem, use $n_G = 462.5$ rpm at the middle of the acceptable range.

$$VR = n_P/n_G = 1750/462.5 = 3.78$$

Step 4. Compute the approximate number of teeth in the gear from $N_G = N_P(VR)$.

For this problem, $N_G = N_P(VR) = 18(3.78) = 68.04$. Specify $N_G = 68$.

Step 5. Compute the actual velocity ratio from $VR = N_G/n_P$.

For this problem, $VR = N_G/n_P = 68/18 = 3.778$.

Step 6. Compute the actual output speed from $n_G = n_P(N_G/n_P)$.

For this problem, $n_G = n_P(N_G/n_P) = (1750 \text{ rpm})(18/68) = 463.2$ rpm. OK.

Step 7. Compute the pitch diameters, center distance, pitch line speed, and transmitted load and judge the general acceptability of the results.

For this problem, the pitch diameters are:

$$D_P = N_P/P_d = 18/12 = 1.500 \text{ in}$$

$$D_G = N_G/P_d = 68/12 = 5.667 \text{ in}$$

Center distance:

$$C = (N_P + N_G)/(2P_d) = (18 + 68)/(24) = 3.583 \text{ in}$$

$$\text{Pitch line speed: } \nu_t = \pi D_P n_P / 12 = [\pi(1.500)(1750)]/12 = 687 \text{ ft/min}$$

$$\text{Transmitted load: } W_t = 33\,000(P)/\nu_t = 33\,000(3.0)/687 = 144 \text{ lb}$$

These values seem to be acceptable.

Step 8. Specify the face width of the pinion and the gear.

For this problem: Lower limit = $8/P_d = 8/12 = 0.667$ in.

Upper limit = $16/P_d = 16/12 = 1.333$ in

Nominal value = $12/P_d = 12/12 = 1.00$ in. Use this value.

Step 9. Specify the type of material for the gears and determine C_p from Table 9–7.

For this problem, specify two steel gears. $C_p = 2300$.

Step 10. Specify the quality number, A_v , using Table 9–5 as a guide. Determine the dynamic factor from Figure 9–16.

For this problem, specify $A_v = 11$ for a wood chipper. $K_v = 1.35$.

Step 11. Specify the tooth form, the bending geometry factors for the pinion and the gear from Figure 9–10 and the pitting geometry factor from Figure 9–17.

For this problem, specify 20° full depth teeth. $J_P = 0.325$, $J_G = 0.410$, $I = 0.104$.

Step 12. Determine the load-distribution factor, K_m , from Equation (9–17) and Figures 9–12 and 9–13. The precision class of the gear system design must be specified. Values may be computed from equations in the figures or read from the graphs.

For this problem: $F = 1.00 \text{ in}$, $D_P = 1.500$. $F/D_P = 0.667$. Then $C_{pf} = 0.042$.

Specify open gearing for the wood chipper, mounted to the frame. $C_{ma} = 0.264$.

Compute: $K_m = 1.0 + C_{pf} + C_{ma} + 0.042 + 0.264 = 1.31$

Step 13. Specify the size factor, K_s , from Table 9–2.

For this problem, $K_s = 1.00$ for $P_d = 12$.

Step 14. Specify the rim thickness factor, K_B , from Figure 9–14.

For this problem, specify a solid gear blank. $K_B = 1.00$.

Step 15. Specify a service factor, SF , typically from 1.00 to 1.50, based on uncertainty of data.

For this problem, there is no unusual uncertainty. Let $SF = 1.00$.

Step 16. Specify a reliability factor using Table 9–11 as a guideline.

For this problem, specify a reliability of 0.99. $K_R = 1.00$.

Step 17. Specify a design life. Compute the number of loading cycles for the pinion and the gear. Determine the stress cycle factors for bending (Y_N) and pitting (Z_N) for the pinion and the gear.

For this problem, intermittent use is expected. Specify the design life to be 3000 hours, similar to agricultural machinery. The numbers of loading cycles are:

$$N_{CP} = (60)(3000 \text{ hr})(1750 \text{ rpm})(1) = 3.15 \times 10^8 \text{ cycles}$$

$$N_{CG} = (60)(3000 \text{ hr})(463.2 \text{ rpm})(1) = 8.34 \times 10^7 \text{ cycles}$$

Then, from Figure 9–21, $Y_{NP} = 0.96$, $Y_{NG} = 0.98$. From Figure 9–22, $Z_{NP} = 0.92$, $Z_{NG} = 0.95$.

Step 18. Compute the expected bending stresses in the pinion and the gear using Equation (9–16).

$$s_{tP} = \frac{W_t P_d}{FJ_P} K_o K_s K_m K_B K_v = \frac{(144)(12)}{(1.00)(0.325)} (1.75)(1.0)(1.31)(1.0)(1.35) = 16\,455 \text{ psi}$$

$$s_{tG} = s_{tP}(J_P/J_G) = (16\,455)(0.325/0.410) = 13\,044 \text{ psi}$$

Step 19. Adjust the bending stresses using Equation 9–30.

For this problem, for the pinion:

$$s_{atP} > s_{tP} \frac{K_R(SF)}{Y_{(NP)}} = (16\,455) \frac{(1.00)(1.00)}{0.96} = 17\,141 \text{ psi}$$

For the gear:

$$s_{atG} > s_{tG} \frac{K_R(SF)}{Y_{(NG)}} = (13\,044) \frac{(1.00)(1.00)}{0.98} = 13\,310 \text{ psi}$$

Step 20. Compute the expected contact stress in the pinion and the gear from Equation (9–23). Note that this value will be the same for both the pinion and the gear.

$$s_c = C_P \sqrt{\frac{W_t K_o K_s K_m K_v}{FD_{PI}}} = 2300 \sqrt{\frac{(144)(1.75)(1.0)(1.31)(1.35)}{(1.00)(1.50)(0.104)}} = 122\,933 \text{ psi}$$

Step 21. Adjust the contact stresses for the pinion and the gear using Equation (9–31).

$$s_{acP} > s_{cP} \frac{K_R(SF)}{Z_{NP}} = (122\,933) \frac{(1.00)(1.00)}{(0.92)} = 133\,623 \text{ psi}$$

For the gear:

$$s_{acG} > s_{cG} \frac{K_R(SF)}{Z_{NG}} = (122\,933) \frac{(1.00)(1.00)}{(0.95)} = 129\,403 \text{ psi}$$

Step 22. Specify materials for the pinion and the gear that will have suitable through hardening or case hardening to provide allowable bending and contact stresses greater than those required from Steps 19 and 21. Typically the contact stress in the pinion is the controlling factor. Refer to Figures 9–18 and 9–19 and Tables 9–9 and 9–10 for data on required hardness. Refer to Appendices 3 to 5 for properties of steel to specify a particular alloy and heat treatment.

For this problem, the contact stress for the pinion is the controlling factor, as is often the case. A steel must be specified that is rated to handle approximately $s_{ac} = 133.6$ ksi. First check Figure 9–19 to explore whether or not through-hardened steel is practical. We can use the equation for Grade 1 steel in U.S. units to determine the required Brinell hardness number, HB .

$$\text{Reqd. } HB = (s_{ac} - 29.10)/0.322 = (133.6 \text{ ksi} - 29.10)/0.322 = 324$$

This value is well within the recommended hardness for through-hardened steels. Using Appendix 4, we can specify SAE 4140 OQT 1000 steel having $HB = 341$ and 18% elongation indicating good ductility. We can also check the required hardness for the gear that has a required $s_{ac} = 129.4$ ksi.

$$\text{Reqd. } HB = (s_{ac} - 29.10)/0.322 = (129.4 \text{ ksi} - 29.10)/0.322 = 311$$

This value can be met by SAE 4140 OQT 1100 steel having $HB = 311$ and 20% elongation. However, because both the pinion and the gear experience nearly the same contact stress, it may be prudent to specify the same heat treatment for both to permit them to be produced by the same process.

9–10 GEAR DESIGN FOR THE METRIC MODULE SYSTEM

Here we take the principles, guidelines, and design methodology that were initially developed for the U.S. Customary unit system based on the diametral pitch, P_d , and adapt them to the SI Metric unit system based on the metric module, m . The primary variables involved are listed below with units in both systems.

| <u>Variables</u> | <u>U.S. units</u> | <u>SI units</u> |
|-----------------------------|-------------------|-----------------|
| Length (D , C , pitch) | in | mm |
| Force (W_t , W_r) | lb | N |
| Power, P | hp | watts or kW |
| Pitch line speed, v_t | ft/min | m/s |
| Stresses | psi or ksi | MPa |

Some of the required adjustments to calculations and equations are listed below, to help you to mentally relate the two systems to each other. In general, we recommend that designs be completed in one system or the other with minimal conversions.

- Refer to Table 8–1 gear teeth and gear pair features.
- Charts, tables, and graphs in this chapter contain both sets of units.
- Face width, F , recommended limits:
U.S. units (in): $8/P_d < F < 16/P_d$ Nominal: $12/P_d$
SI units (mm): $8m < F < 16m$ Nominal: $12m$
- Pitch line speed, v_t :

U.S. units (ft/min): $v_t = \pi Dn/12$ ft/min
[D in inches, n in rpm]

SI units (m/s): $v_t = \pi Dn/60\,000$ m/s
[D in mm, n in rpm]

- Transmitted load, W_t :

U.S. units (lb): $W_t = 33\,000(P)/v_t$ [P in hp, v_t in ft/min]
SI units (m/s): $W_t = 1000(P)/v_t$ [P in kW, v_t in m/s]

The following example problem uses SI units. The procedure will be virtually the same as that used to design with U.S. Customary units in Example Problem 9–7.

Example Problem 9–8

A gear pair is to be designed to transmit 15.0 kilowatts (kW) of power to a large meat grinder in a commercial meat processing plant. The pinion is attached to the shaft of an electric motor rotating at 575 rpm. The gear must operate at 270 to 280 rpm. The gear unit will be enclosed and of commercial quality. Commercially hobbed (quality number A11), 20°, full-depth, involute gears are to be used in the metric module system. The maximum center distance is to be 200 mm. Specify the design of the gears.

Solution The nominal velocity ratio is

$$VR = 575/275 = 2.09$$

Specify an overload factor of $K_o = 1.50$ from Table 9–1 for a uniform power source and moderate shock for the meat grinder. Then compute design power,

$$P_{\text{des}} = K_o P = (1.50)(15 \text{ kW}) = 22.5 \text{ kW}$$

From Figure 9–11, $m = 5$ is a reasonable trial module. Then

$$N_P = 18 \quad (\text{design decision})$$

$$D_P = N_P m = (18)(5) = 90 \text{ mm}$$

$$N_G = N_P (VR) = (18)(2.09) = 37.6 \quad (\text{Use 38})$$

$$D_G = N_G m = (38)(5) = 190 \text{ mm}$$

$$\text{Final output speed} = n_G = n_P (N_P/N_G)$$

$$n_G = 575 \text{ rpm} \times (18/38) = 272 \text{ rpm} \quad (\text{OK})$$

$$\text{Center distance} = C = (N_P + N_G)m/2[\text{Table 8-1}]$$

$$C = (18 + 38)(5)/2 = 140 \text{ mm (OK)}$$

In SI units, the pitch line speed in meters per second (m/s) is

$$v_t = \pi D_P n_P / (60,000) = [(\pi)(90)(575)]/(60,000) = 2.71 \text{ m/s}$$

In SI units, the transmitted load, W_t , is in newtons (N). If the power, P , is in kW, and v_t is in m/s,

$$W_t = 1000(P)/v_t = (1000)(15)/(2.71) = 5536 \text{ N}$$

Face width, F : Let's specify the nominal $F = 12m = 12(5) = 60 \text{ mm}$.

Factors in stress analysis:

$$K_o = 1.50 \text{ (found earlier)}$$

$$K_s = 1.00 \text{ (Table 9-2; } m = 5\text{)} \quad K_B = 1.00 \text{ (Use solid gear blanks)}$$

$$K_R = 1.00 \text{ (Table 9-11; 0.99 reliability)} \quad SF = 1.00 \text{ (No unusual conditions)}$$

$$K_v = 1.31 \text{ (Figure 9-16; } A_v = 11\text{)}$$

$$K_m = 1.21 \text{ (Figures 9-12 and 9-13; } F = 60 \text{ mm; } F/D_P = 60/90 = 0.67\text{)}$$

$$J_P = 0.315; J_G = 0.380 \text{ (Figure 9-10; } N_P = 18, N_G = 38\text{)}$$

$$C_P = 191 \text{ (Table 9-7)} \quad I = 0.092 \text{ (Figure 9-17)}$$

Pinion contact stress:

$$(Equation 9-23)$$

$$S_c = C_P \sqrt{\frac{W_t K_o K_s K_B K_m K_v}{F D_P I}} = 191 \sqrt{\frac{(5536)(1.50)(1.0)(1.21)(1.31)}{(60)(90)(0.092)}} = 983 \text{ MPa}$$

Adjustments for number of cycles, from Figures 9-21 and 9-22:

$$Y_{NP} = 0.94 \quad Z_{NP} = 0.91 \quad Y_{NG} = 0.96 \quad Z_{NG} = 0.92$$

$$\text{Required } s_{acP} = s_c(SF)(K_R)/Z_{NP} = 983 \text{ MPa} (1.0)(1.0)/0.91 = 1080 \text{ MPa}$$

Using $s_{acP} = 1080 \text{ MPa}$, Figure 9-19 shows the required hardness = HB 396 for through-hardened Grade 1 steel. This is acceptable but near the upper end of recommended range.

Material specification:

From Figure A4-5 (other possibilities exist),

SAE 4340 OQT 800; HB 415; $s_y = 1324 \text{ MPa}$; $s_u = 1448 \text{ MPa}$; 12% elongation.

Check other stresses:

The contact stress for the gear and the bending stress for the pinion and the gear are expected to require less material hardness and strength.

$$\text{Required } s_{acG} = s_c(SF)(K_R)/Z_{NG} = 983 \text{ MPa}(1.0)(1.0)/0.92 = 1068 \text{ MPa}$$

This is slightly lower than for the pinion (OK)

$$S_{tP} = \frac{W_t K_o K_s K_B K_m K_v}{F m J_P} = \frac{(5536)(1.50)(1)(1)(1.21)(1.31)}{(60)(5)(0.315)} = 139 \text{ MPa}$$

$$\text{Required } s_{atP} = S_{tP}(SF)(K_R)/Y_{NP} = 139 \text{ MPa}(1.0)(1.0)/0.94 = 148 \text{ MPa}$$

Referring to Figure 9-18, it is obvious that bending stress requires far lower hardness for the gear teeth, less than HB 180. The stress in the gear is always less than that in the pinion so it will obviously be safe as well.

Summary of the Design:

$$P = 15.0 \text{ kW from an electric motor to a large meat grinder}$$

$$\text{Pinion speed: } n_P = 575 \text{ rpm} \quad \text{Gear speed: } n_G = 272 \text{ rpm}$$

$$\text{Number of teeth: } N_P = 18; N_G = 38 \quad \text{Center distance: } C = 140.00 \text{ mm}$$

$$\text{Module: } m = 5 \text{ mm}$$

$$\text{Diameters: } D_P = 90 \text{ mm; } D_G = 190 \text{ mm}$$

$$\text{Material: Steel-SAE 4340 OQT 800}$$

Comment: A redesign may be considered with several possible approaches:

1. Increase the face width, F , to lower the stresses and permit the choice of a material with more moderate required hardness and better ductility. The recommended upper limit of face width is $16m = 16(5) = 80 \text{ mm}$.

2. Increase the size of pinion and its number of teeth (same module) to lower stresses.

Possible trial: Module: $m = 5 \text{ mm}$ Number of teeth: $N_P = 22; N_G = 46$

Center distance: $C = 170.00 \text{ mm}$ Diameters: $D_P = 110 \text{ mm}; D_G = 230 \text{ mm}$

3. Consider case-hardened steel for the initial design, rather than through-hardened steel. A smaller design is possible.

9-11 COMPUTER-AIDED SPUR GEAR DESIGN AND ANALYSIS

This section presents one approach to assisting the gear designer with the many calculations and judgments that must be made to produce an acceptable design. The spreadsheet shown in Figure 9-23 facilitates the completion of a prospective design for a pair of gears in a few minutes by an experienced designer. You must have studied all of the material here and in Chapter 8 in order to understand the data needed in the spreadsheet and to use it effectively.

The recommended use of the spreadsheet is to create a series of design iterations that allow you to progress toward an optimum design in a short amount of time. It follows the process outlined in Section 9-9 up to the point of computing the required allowable bending stress number and the allowable contact stress number for both the pinion and the gear. The designer must use those data to specify suitable materials for the gears and their heat treatments.

Given below is a discussion of the essential features of the spreadsheet. In general, it first calls for the input of basic performance data, allowing a proposed geometry to be specified. The final result is the completion of the stress analyses for bending and pitting resistance for both the pinion and the gear. Equations (9-16) and (9-30) are combined for the bending analysis. The analysis of pitting resistance uses Equations (9-23) and (9-31). The designer must provide data for the several factors in those equations taken from appropriate figures and charts or based on design decisions. Virtually all computations are performed by the spreadsheet, allowing the designer to exercise judgment based on the intermediate results.

The format used for the spreadsheet helps the designer follow the process. After defining the problem at the top of the sheet, the first column at the left calls for several pieces of input data. Any value in italics within a gray-shaded area must be entered by the designer. White areas offer the results of calculations and provide guidance. The upper part of the second column also guides the designer in determining values for the several factors needed to complete the stress analyses for bending and pitting resistance. The area at the lower right of the spreadsheet gives the primary output data for stresses on which the design decisions for materials and heat treatments are based.

The data in Figure 9-23 are taken from Example Problem 9-7 which was completed in the traditional manner in Section 9-9.

Discussion of the Use of the Spur Gear Design Spreadsheet

- 1. Describing the application:** In the heading of the sheet, the designer is asked to describe the application for identification purposes and to focus on the basic uses for the gears. Use the nature of the prime mover and the driven machine to specify the overload factor, K_o , using Table 9-1 as a guide.

- 2. Initial input data:** It is assumed that designers begin with a knowledge of the power transmission requirement, the rotational speed of the pinion of the gear pair, and the desired output speed. Using the nature of the application and the overload factor, K_o , compute the *design power* from

$$P_{des} = K_o P$$

Then use Figure 9-11 to determine a trial value of the diametral pitch using the design power and the rotational speed of the pinion. The number of teeth in the pinion is a critical design decision because the size of the system depends on this value. Ensure against interference. An initial trial value of $N_p = 17$ to 20 is often a good choice.

- 3. Number of gear teeth:** The spreadsheet computes the approximate number of gear teeth to produce the desired output speed from $N_G = N_p(n_G/n_p)$. But, of course, the number of teeth in any gear must be an integer, and the actual value of N_G is entered by the designer.
- 4. Computed data:** The seven values reported in the middle of the first column are all determined from the input data, and they allow the designer to evaluate the suitability of the geometry of the proposed design at this point. Changes to the input data can be made at this time if any value is out of the desired range in the judgment of the designer.
- 5. Secondary input data:** When a suitable geometry for the gears is obtained, the designer enters the data called for at the lower part of the first column of the spreadsheet. The locations of data in pertinent tables and figures are listed.
- 6. Factors in design analysis:** The stress analysis requires many factors to account for the unique situation of the design being pursued. Again, guidance is offered, but the designer must enter the values of the required factors. Many of the factors can have a value of 1.00 for normal conditions.
- 7. Alignment factor:** The alignment factor depends on two other factors: the pinion proportion factor and the mesh alignment factor as shown in Figures 9-12 and 9-13. The suggested values in the white areas are computed from the equations given in the figures. Note the listed value of F/D_p . If $F/D_p < 0.50$, use $F/D_p = 0.50$ to find C_{pf} . The designer must decide on the type of gearing to be used (open or closed) and the degree of precision to be designed into the system. The final result is computed from the input data.
- 8. Size, and rim thickness factors:** Consult Table 9-2 along with Figure 9-14. Note that the rim thickness factor can be different for the pinion and the gear. Sometimes the smaller pinion is made from a solid blank while the larger gear can use a rim-and-spoke design.

DESIGN OF SPUR GEARS

APPLICATION: Example Problem 9-7

| APPLICATION: | | Factors in Design Analysis: | | | |
|---|--|---|--|--|--|
| <i>Initial Input Data:</i> | | Alignment Factor, $K_m = 1.0 + C_{pf} + C_{ma}$ | | | |
| Input Power: $P = 3.00 \text{ hp}$ | | Pinion Proportion Factor, $C_{pf} = 0.042$ | | | |
| Input Speed: $n_p = 1750 \text{ rpm}$ | | Enter: $C_{pf} = 0.042$ | | | |
| Diametral Pitch: $P_d = 12$ | | Type of gearing: Open | | | |
| Number of Pinion Teeth: $N_p = 18$ | | Mesh Alignment Factor, $C_{ma} = 0.264$ | | | |
| Desired Output Speed: $n_G = 462.5 \text{ rpm}$ | | Enter: $C_{ma} = 0.264$ | | | |
| Computed number of gear teeth: $N_G = 68.1$ | | Alignment Factor: $K_m = 1.31$ | | | |
| <i>Enter: Chosen No. of Gear Teeth: $N_G = 68$</i> | | Overload Factor: $K_o = 1.75$ | | | |
| <i>Computed data:</i> | | Size Factor: $K_s = 1.00$ | | | |
| Actual Output Speed: $n_G = 463.2 \text{ rpm}$ | | Pinion Rim Thickness Factor: $K_{BP} = 1.00$ | | | |
| Gear Ratio: $m_G = 3.78$ | | Gear Rim Thickness Factor: $K_{BG} = 1.00$ | | | |
| Pitch Diameter—Pinion: $D_p = 1.500 \text{ in}$ | | Dynamic Factor: $K_d = 1.35$ | | | |
| Pitch Diameter—Gear: $D_G = 5.667 \text{ in}$ | | Service Factor: $SF = 1.00$ | | | |
| Center Distance: $C = 3.583 \text{ in}$ | | Reliability Factor: $K_R = 1.00$ | | | |
| Pitch Line Speed: $v_t = 687 \text{ ft/min}$ | | <i>Enter: Design Life:</i> 3000 hours | | | |
| Transmitted Load: $W_t = 144 \text{ lb}$ | | Pinion - Number of load cycles: $N_p = 3.15E + 08$ | | | |
| <i>Secondary Input Data:</i> | | Gear - Number of load cycles: $N_G = 8.34E + 07$ | | | |
| Face Width Guidelines (in): 0.667 in | | Bending Stress Cycle Factor: $Y_{NP} = 0.96$ | | | |
| <i>Enter: Face Width: $F = 1.000 \text{ in}$</i> | | Bending Stress Cycle Factor: $Y_{NG} = 0.98$ | | | |
| Ratio: Face width/pinion diameter: $F/D_p = 0.67$ | | Pitting Stress Cycle Factor: $Z_{NP} = 0.92$ | | | |
| Recommended ratio $F/D_p < 2.00$ | | Pitting Stress Cycle Factor: $Z_{NG} = 0.95$ | | | |
| <i>Enter: Elastic Coefficient: $C_p = 2300$</i> | | <i>Stress Analysis: Bending</i> | | | |
| <i>Enter: Quality Number: $A_v = 11$</i> | | Pinion: Required $s_{at} = 17,102 \text{ psi}$ | | | |
| <i>Enter: Bending Geometry Factors:</i> | | Gear: Required $s_{at} = 13,280 \text{ psi}$ | | | |
| Pinion: $J_p = 0.325$ | | Pinion: Required $s_{ac} = 133,471 \text{ psi}$ | | | |
| Gear: $J_G = 0.410$ | | Gear: Required $s_{ac} = 129,256 \text{ psi}$ | | | |
| <i>Enter: Pitting Geometry Factor: $I = 0.104$</i> | | <i>Specify materials, alloy and heat treatment, for most severe requirement.</i> | | | |
| <i>REF: $m_G = 3.78$</i> | | <i>One possible material specification:</i> | | | |
| Pinion: Requires HB > 324; AISI 4140 OQT 1000, HB = 341, $s_{ac} = 140,000 \text{ psi}$ | | Pinion: Requires HB > 311; AISI 4140 OQT 1000, HB = 341, $s_{ac} = 140,000 \text{ psi}$ | | | |

Factors in Design Analysis:

| | | | | |
|---|---|-------------------------|--|--|
| Alignment Factor, $K_m = 1.0 + C_{pf} + C_{ma}$ | If $F < 1.0$ | $F/D_p = 0.67$ | | |
| Pinion Proportion Factor, $C_{pf} = 0.042$ | 0.042 | $[0.50 < F/D_p < 2.00]$ | | |
| Enter: $C_{pf} = 0.042$ | Figure 9-12 | | | |
| Type of gearing: Open | Commer. | Precision Ex. Prec. | | |
| Mesh Alignment Factor, $C_{ma} = 0.264$ | 0.143 | 0.080 0.048 | | |
| Enter: $C_{ma} = 0.264$ | Figure 9-13 | | | |
| Alignment Factor: $K_m = 1.31$ | [Computed] | | | |
| Overload Factor: $K_o = 1.75$ | Table 9-1 | | | |
| Size Factor: $K_s = 1.00$ | Table 9-2: Use 1.00 if $P_d >= 5$ | | | |
| Pinion Rim Thickness Factor: $K_{BP} = 1.00$ | Figure 9-14: Use 1.00 if solid blank | | | |
| Gear Rim Thickness Factor: $K_{BG} = 1.00$ | Figure 9-14: Use 1.00 if solid blank | | | |
| Dynamic Factor: $K_d = 1.35$ | [Computed: See Table 9-16] | | | |
| Service Factor: $SF = 1.00$ | Use 1.00 if no unusual conditions | | | |
| Reliability Factor: $K_R = 1.00$ | Table 9-11 Use 1.00 for $R = .99$ | | | |
| Enter: Design Life: 3000 hours | See Table 9-12 | | | |
| Pinion - Number of load cycles: $N_p = 3.15E + 08$ | Guidelines: Y_N, Z_N | | | |
| Gear - Number of load cycles: $N_G = 8.34E + 07$ | 10^7 | $>10^7 <10^7$ | | |
| Bending Stress Cycle Factor: $Y_{NP} = 0.96$ | 1.00 | 0.96 Figure 9-21 | | |
| Bending Stress Cycle Factor: $Y_{NG} = 0.98$ | 1.00 | 0.98 Figure 9-21 | | |
| Pitting Stress Cycle Factor: $Z_{NP} = 0.92$ | 1.00 | 0.92 Figure 9-22 | | |
| Pitting Stress Cycle Factor: $Z_{NG} = 0.95$ | 1.00 | 0.95 Figure 9-22 | | |
| Bending Stress Cycle Factor: $Y_{NP} = 0.96$ | 1.00 | 0.96 Figure 9-21 | | |
| Bending Stress Cycle Factor: $Y_{NG} = 0.98$ | 1.00 | 0.98 Figure 9-21 | | |
| Pitting Stress Cycle Factor: $Z_{NP} = 0.92$ | 1.00 | 0.92 Figure 9-22 | | |
| Pitting Stress Cycle Factor: $Z_{NG} = 0.95$ | 1.00 | 0.95 Figure 9-22 | | |
| <i>Stress Analysis: Bending</i> | | | | |
| Pinion: Required $s_{at} = 17,102 \text{ psi}$ | See Figure 9-18 or Table 9-9 or 9-10 | | | |
| Gear: Required $s_{at} = 13,280 \text{ psi}$ | Table 9-9 or 9-10 | | | |
| Pinion: Required $s_{ac} = 133,471 \text{ psi}$ | See Figure 9-19 or Table 9-9 | | | |
| Gear: Required $s_{ac} = 129,256 \text{ psi}$ | Table 9-9 or 9-10 | | | |
| <i>Stress Analysis: Pitting</i> | | | | |
| Pinion: Required $s_{at} = 133,471 \text{ psi}$ | See Figure 9-19 or Table 9-9 | | | |
| Gear: Required $s_{at} = 129,256 \text{ psi}$ | Table 9-9 or 9-10 | | | |
| <i>Specify materials, alloy and heat treatment, for most severe requirement.</i> | | | | |
| <i>One possible material specification:</i> | | | | |
| Pinion: Requires HB > 324; AISI 4140 OQT 1000, HB = 341, $s_{ac} = 140,000 \text{ psi}$ | Pinion: Requires HB > 311; AISI 4140 OQT 1000, HB = 341, $s_{ac} = 140,000 \text{ psi}$ | | | |

FIGURE 9-23 Spreadsheet solution for Example Problem 9-9; alternate spur gear design using data for Example Problem 9-7

- 9. Dynamic factor:** The spreadsheet uses the equations included in Table 9–6 to compute the dynamic factor using the quality number and pitch line speed found from data in the first column.
- 10. Safety factor:** This is a design decision as discussed in Section 9–9. Often a value of 1.00 is used if no unusual conditions are expected that are not already accounted for in other factors. Larger safety factors allow for a higher degree of safety or to account for uncertainties. For extra safety, use SF up to 1.50.
- 11. Reliability factor:** The designer must select a value from Table 9–11 according to the desired level of reliability.
- 12. Stress cycle factors:** Here the designer must specify the design life in hours of operation for the gear pair being designed. Table 9–12 provides suggestions according to the use of the system. The number of cycles of stress is then computed for both the pinion and the gear, assuming the normal case of one cycle of one-direction stress per revolution. If the gears operate in a reversing mode, as idlers, or in planetary gear trains, this calculation must be adjusted to account for the multiple cycles of stress experienced in each revolution. Guidelines recommend factors of 1.00 for 10^7 cycles for which the allowable stress numbers are computed. For a larger number of cycles, equations given in Figures 9–21 and 9–22 are used to compute the recommended factors. Because a variety of data are given for the case of fewer than 10^7 cycles, the designer is referred to the figures to determine the factors. In any case, the user of the spreadsheet must enter the selected values.
- 13. Stress analyses for bending and pitting resistance:** Finally, the required allowable bending stress number and the required allowable contact stress number are computed using Equations (9–30) and (9–31), adjusted for the special values of factors for the pinion and the gear.
- 14. Specification of the materials and their heat treatment:** The final step is left to the designer to use the computed values from the stress analyses and to specify materials that will provide an adequate strength and surface hardness of the gear teeth. Pertinent data are listed in Figures 9–18 and 9–19 and Tables 9–9 and 9–10. The appendices tables for material properties may also be consulted once the required hardesses of the materials are determined.

9–12 USE OF THE SPUR GEAR DESIGN SPREADSHEET

The spreadsheet developed in Section 9–11 is a useful tool that aids the designer in the process of completing a design for a pair of gears to be safe with regard to bending stresses in the teeth of the gears and for pitting resistance. The use of the spreadsheet was demonstrated for the data in Example Problem 9–7 as shown in Figure 9–23.

An important use for the spreadsheet is to propose and analyze several design alternatives and to work toward a goal of optimizing the design with regard to size, cost, or other parameters important to a particular design objective.

Designers for typical machine and vehicle drives would plan to use Grade 1 steels and standard quenching and tempering heat treatments. Where small size is critical or where cost is not a major concern, case hardening by carburizing, induction or flame hardening, or nitriding can be used. Use of more high-capacity Grade 2 or Grade 3 steels may also be specified if data are available. Therefore, it is usually desirable to produce several design alternatives that can be analyzed for cost and manufacturability. Then the final selection can be made with assurance that a reasonably optimum design has been identified.

Successive Iterations. We now continue the design process by making carefully selected changes in design decisions using the *Guidelines for Adjustments in Successive Iterations* from Section 9–9, just before Example Problem 9–7.

The design for the wood chipper drive from Example Problem 9–7 was very satisfactory for the goal of having an efficient design using through-hardened steel. Use of SAE 4140 OQT 1000 steel with a hardness of HB 341 is capable of resisting potential pitting caused by the pinion contact stress of approximately 134 ksi.

Now, how can we improve this design? The answer requires judgment about what constitutes improvement. Generally desirable design objectives for a gear drive, stated at the beginning of Section 9–9, were that the drive should:

| | |
|------------------------|------------------------------|
| Be compact and small | Operate smoothly and quietly |
| Have long life | Be low in cost |
| Be easy to manufacture | |

Be compatible with other elements in the machine, such as bearings, shafts, the housing, the driver, and the driven machine.

In a given project, some of these objectives may be given higher priority than others. Furthermore, some objectives are counter to others; a highly compact and small drive will not likely be the lowest cost or the easiest to manufacture. However, it may be “worth the cost” to produce a smaller drive. More must be known about the application before making such judgments.

Let’s proceed with the premise that the smallest practical gear drive for the wood chipper is desired while cost and ease of manufacture are secondary considerations. Referring to the *Guidelines*, we can conclude that the following changes will facilitate the design of a smaller, yet still safe design:

1. Obviously, each gear must be smaller than the initial design from Example Problem 9–7.

2. Using a higher value of diametral pitch with the same number of teeth will result in smaller gears and a correspondingly smaller center distance.
3. Smaller gears typically result in higher bending and contact stresses in the teeth, requiring higher strength materials.
4. The number of teeth (18) cannot be made much smaller without risking interference.
5. The face width can be used to *fine-tune* the design.
6. More accurate teeth (higher value of A_v) can also be used to *fine-tune* the design.

Design decisions for second trial design: The primary change to achieve a smaller design is to raise the value of diametral pitch. We can try $P_d = 16$ instead of the $P_d = 12$ used in Example Problem 9–7. Now we can show the advantage of using a spreadsheet as a calculation aid. Figure 9–24 shows the final result called Example Problem 9–9,—a much smaller design that is still safe. *Reaching this redesign took only a few minutes.* The changed data are highlighted within bold boxes. Those that are design decisions are in the gray-shaded boxes while those computed by the spreadsheet have white backgrounds. User-controlled changes are:

1. $P_d = 16$.
2. $F = 1.00$ in [At the maximum end of the recommended range; $F_{max} = 16/P_d$].
3. $A_v = 10$ [Modestly more precise than the original value of $A_v = 11$; note that $K_v = 1.24$ is moderately lower than the value of 1.35 in the initial design].
4. $K_m = 1.33$ [Modestly higher than the value of 1.31; caused by the change in $C_{pf} = 0.064$ from 0.042 for the initial trial because the ratio F/D_p changed. K_v was computed by the spreadsheet after the computed adjustment to C_{pf} was displayed and selected by the user].

Comparison of Results:

| | Design 1 Example Problem 9–7 | Design 2 Example Problem 9–9 |
|----------------------------|--|---|
| a. Pinion diameter: D_p | 1.500 in | 1.125 in |
| b. Gear diameter: D_G | 5.667 in | 4.250 in |
| c. Center distance: C | 3.583 in | 2.688 in |
| d. Pitch line speed: v_t | 687 ft/min | 515 ft/min |
| e. Transmitted load: W_t | 144 lb | 192 lb |
| f. Required s_{atP} : | 17 102 psi | 28 496 psi |
| g. Required s_{atG} : | 13 280 psi | 22 127 psi |
| h. Required s_{acP} : | 133 471 psi | 172 288 psi |
| i. Required s_{acPG} : | 129 256 psi | 166 847 psi |
| j. Material: | SAE 4140 OQT 1000 Through hardened | SAE 6150 OQT 1200, Case hardened by induction hardening |

Notes about the changes and their effects:

- (a) Smaller gears do produce higher stresses.
- (b) The size of the gears and the overall drive were reduced significantly as can be seen in Figure 9–25 that shows a scale drawing of the two designs. One measure is the set of minimum inside dimensions of the housing to enclose the two gears, shown as x and y .

$$x_1 = 7.333 \text{ in} \quad x_2 = 5.500 \text{ in (25\% smaller)}$$

$$y_1 = 5.833 \text{ in} \quad y_2 = 4.375 \text{ in (25\% smaller)}$$
 Where $x = C + D_{oP}/2 + D_{oG}/2$ and $y = D_{oG}$
- (c) The contact stress in the pinion (the governing stress value) increased by 29% for design #2 as compared with design #1. This was the result of the finer teeth and the smaller pitch diameter for the gears.
- (d) The value of the contact stress in the pinion of approximately 172 ksi made it impractical to use through-hardened steel. Note that the calculation built into the spreadsheet indicates that a hardness of 445 HB would be required. However, Figure 9–19 indicates that no design should rely on a hardness over 400 HB.
- (e) Therefore, resisting $s_{acP} = 172$ ksi requires some kind of case hardening, either *induction hardening*, *flame hardening*, or *case hardening by carburizing* as indicated in Table 9–9.
- (f) Use of induction hardening was a design decision but induction is a very frequent choice in the gear industry. See Internet site 19 for one provider of commercially available production-oriented induction hardening systems.
- (g) Specification of SAE 6150 steel for the gears was a design decision based on the need for a highly hardenable steel that can be hardened to 54 HRC minimum (as noted in Table 9–9). Referring to Figure A4–6 indicates that this alloy in the as-quenched condition can be in the range of 627 HB, corresponding to approximately 58 HRC (Appendix 17).
- (h) Induction hardening is considered a tertiary process for gears because:
 - (a) Gears are first machined, typically by hobbing.
 - (b) Then the gears are heat-treated to produce desirable properties in the core of the teeth. In this case, by referring to Figure A4–6, we chose to use the OQT 1200 heat treatment that will produce a core hardness of HB 293 and 20% elongation, a highly ductile condition.
 - (c) Then the gears are induction hardened for a moderate depth to achieve the high pitting resistance on the faces of the teeth. Well-designed processes will also produce case hardening in the root area where the highest bending stresses occur.
- (i) Because the heat treatment may cause distortion, final grinding or other finishing processes may be needed to produce the final gear quality number; in the case $A_v = 11$.

| DESIGN OF SPUR GEARS | | | | | | | |
|--|-----|--|--|-----------------------------|-----------|--|--|
| APPLICATION: Example Problem 9-9 -Redesign of Example Problem 9-7 Wood Chipper driven by an electric motor | | | | Factors in Design Analysis: | | | |
| <i>Initial Input Data:</i> | | | | | | | |
| Input Power: $P = 3.00 \text{ hp}$ | | | | | | | |
| Input Speed: $n_p = 1750 \text{ rpm}$ | | Type of gearing: Open Commem. | | Precision | Ex. Prec. | | |
| Diametral Pitch: $P_d = 16$ | | Mesh Alignment Factor, $C_{ma} = 0.064$ | | 0.064 | 0.048 | | |
| Number of Pinion Teeth: $N_p = 18$ | | Enter: $C_{pf} = 0.064$ Figure 9-12 | | | | | |
| Desired Output Speed: $n_G = 462.5 \text{ rpm}$ | | Alignment Factor: $K_m = 1.33$ [Computed] | | | | | |
| Computed number of gear teeth: $N_G = 68.1$ | | Overload Factor: $K_o = 1.75$ Table 9-1 | | | | | |
| Enter: Chosen No. of Gear Teeth: $N_G = 68$ | | Size Factor: $K_s = 1.00$ Table 9-2; Use 1.00 if $P_d >= 5$ | | | | | |
| <i>Computed data:</i> | | Pinion Rim Thickness Factor: $K_{BP} = 1.00$ Fig. 9-14; Use 1.00 if solid blank | | | | | |
| Actual Output Speed: $n_G = 463.2 \text{ rpm}$ | | Gear Rim Thickness Factor: $K_{BG} = 1.00$ Fig. 9-14; Use 1.00 if solid blank | | | | | |
| Gear Ratio: $m_G = 3.78$ | | Dynamic Factor: $K_v = 1.24$ [Computed; See Table 9-16] | | | | | |
| Pitch Diameter - Pinion: $D_p = 1.125 \text{ in}$ | | Service Factor: $SF = 1.00$ Use 1.00 if no unusual conditions | | | | | |
| Pitch Diameter - Gear: $D_G = 4.250 \text{ in}$ | | Reliability Factor: $K_R = 1.00$ Table 9-11 Use 1.00 for $R = .99$ | | | | | |
| Center Distance: $C = 2.688 \text{ in}$ | | Enter: Design Life: 3000 hours See Table 9-12 | | | | | |
| Pitch Line Speed: $v_t = 515 \text{ ft/min}$ | | Pinion - Number of load cycles: $N_P = 3.15E+08$ Guidelines: Y_N, Z_N | | | | | |
| Transmitted Load: $W_t = 192 \text{ lb}$ | | Gear - Number of load cycles: $N_G = 8.34E+07$ 10^7 cycles $>10^7$ $<10^7$ | | | | | |
| <i>Secondary Input Data:</i> | | | | | | | |
| Min | Nom | Max | | | | | |
| Face Width Guidelines (in): 0.500 0.750 1.000 | | Bending Stress Cycle Factor: $Y_{NP} = 0.96$ Fig. 9-21 | | 1.00 | 0.96 | | |
| Enter: Face Width: $F = 1.000 \text{ in}$ | | Bending Stress Cycle Factor: $Y_{NG} = 0.98$ Fig. 9-21 | | 1.00 | 0.98 | | |
| Ratio: Face width/pinion diameter: $F/D_p = 0.89$ | | Pitting Stress Cycle Factor: $Z_{NP} = 0.92$ Fig. 9-22 | | 1.00 | 0.92 | | |
| Recommended ratio $F/D_p < 2.00$ | | Pitting Stress Cycle Factor: $Z_{NG} = 0.95$ Fig. 9-22 | | 1.00 | 0.95 | | |
| Enter: Elastic Coefficient: $C_p = 2300$ Table 9-7 | | <i>Stress Analysis: Bending</i> | | | | | |
| Enter: Quality Number: $A_v = 10$ Table 9-5 | | Pinion: Required $s_{ut} = 28,496 \text{ psi}$ See Fig. 9-18 or Table 9-9 or 9-10 | | | | | |
| Enter: Bending Geometry Factors: | | Gear: Required $s_{ut} = 22,127 \text{ psi}$ See Fig. 9-19 or Table 9-9 or 9-10 | | | | | |
| Pinion: $J_p = 0.325$ Fig. 9-10 | | Specify materials, alloy and heat treatment, for most severe requirement. | | | | | |
| Gear: $J_G = 0.410$ Fig. 9-17 | | <i>Required hardnesses for pinion and gear are too high for through hardening.</i> | | | | | |
| Enter: Pitting Geometry Factor: $I = 0.104$ Fig. 9-17 | | Specifying case hardening by induction to HRC 54 minimum-Both pinion and gear | | | | | |
| REF: $m_G = 3.78$ | | Pinion and Gear: SAE 6150; Core heat treatment OQT 1200; HB 293. | | | | | |

FIGURE 9-24 Spreadsheet solution for Example Problems 9-9; the alternate spur gear design using data for Example Problem 9-7.

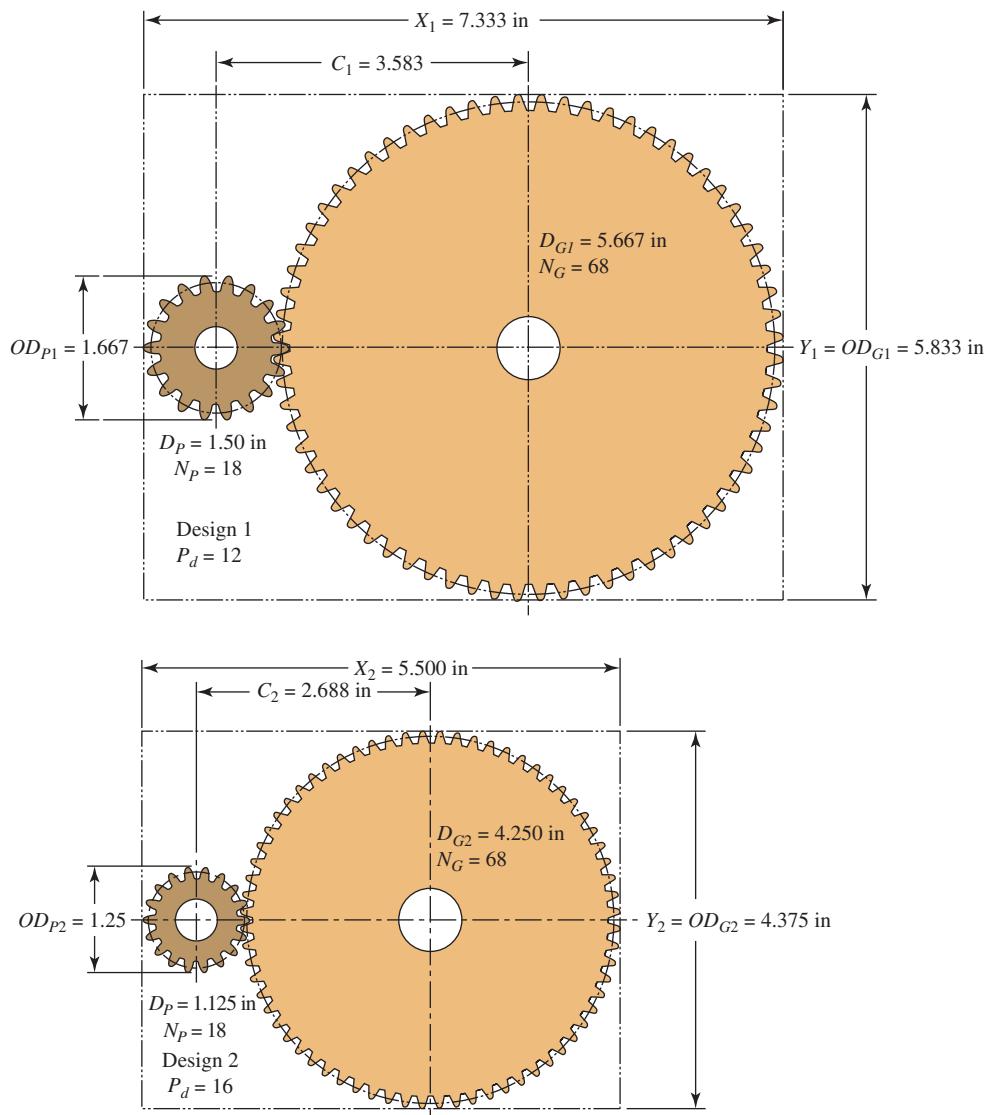


FIGURE 9-25 Comparison of sizes for gear designs for Example Problems 9-7 and 9-9 with minimum inside dimensions for housings

- (j) This long list of processing steps makes the choice of case hardening by induction hardening much more costly than basic through hardening. The designer must make the judgment that the value of the benefit of the smaller system exceeds the added costs.

It is expected that readers of this book use similar decision-making processes when designing gear drives and specifying materials and heat treatments in their designs.

9-13 POWER-TRANSMITTING CAPACITY

It is sometimes desirable to compute the amount of power that a gear pair can safely transmit after it has been completely defined. The *power-transmitting capacity* P_{cap} is the capacity when the tangential load causes the expected stress to equal the allowable stress number

with all of the modifying factors considered. The capacity should be computed for both bending and pitting resistance and for both the pinion and the gear.

When similar materials are used for both the pinion and the gear, it is likely that the pinion will be critical for bending stress. But the most critical condition is usually pitting resistance. The following relationships can be used to compute the power-transmitting capacity. In this analysis, it is assumed that the operating temperature of the gears and their lubricants is 250°F and that gears are produced with the appropriate surface finish.

Bending

We start with Equations (9-16) and (9-30) in which the computed bending stress number is compared with the modified allowable bending stress number for the gear:

$$s_{at} = s_t \frac{(SF)(KR)}{Y_N} = \frac{W_t P_d}{FJ} K_o K_s K_m K_B K_v \times \frac{(SF)(KR)}{Y_N}$$

But solving for W_t gives

$$W_t = \frac{s_{at}Y_NFJ}{(SF)K_RK_oK_sK_mK_BK_vP_d} \quad (9-34)$$

It was shown in Equation (9-8) that

$$W_t = (126\,000)(P)/(npD_p)$$

Then substituting into Equation (9-34) and calling the power P_{cap} gives

$$\frac{(126\,000)(P_{cap})}{npD_p} = \frac{s_{at}Y_NFJ}{(SF)K_RK_oK_sK_mK_BK_vP_d}$$

Solving for P_{cap} , we have

$$P_{cap} = \frac{s_{at}Y_NFJnpD_p}{(126\,000)(P_d)(SF)K_RK_oK_sK_mK_BK_v} \quad (9-35)$$

This equation should be solved for both the pinion and the gear. Most variables will be the same except for s_{at} , Y_N , J , and possibly K_B .

Pitting Resistance

Here we start with Equations (9-23) and (9-31) in which the computed contact stress number is compared with the modified allowable contact stress number for the gear. Equation (9-26) can be expressed in the form

$$s_{ac} = s_c \frac{(SF)(KR)}{Z_N} = C_P \sqrt{\frac{W_t K_o K_s K_m K_v}{D_p F_I}} \times \frac{(SF)(KR)}{Z_N}$$

Squaring both sides of this equation and solving for W_t gives

$$\begin{aligned} \frac{W_t K_o K_s K_m K_v}{D_p F_I} &= \left[\frac{s_{ac} Z_N}{(SF) K_R C_P} \right]^2 \\ W_t &= \frac{D_p F_I}{K_o K_s K_m K_v} \left[\frac{s_{ac} Z_N}{(SF) K_R C_P} \right]^2 \end{aligned} \quad (9-36)$$

Now substituting this into Equation (9-8) and solving for the power P_{cap} gives

$$\begin{aligned} P_{cap} &= \frac{W_t D_p np}{126\,000} = \frac{D_p np D_p F_I}{126\,000 K_o K_s K_m K_v} \left[\frac{s_{ac} Z_N}{(SF) K_R C_P} \right]^2 \\ P_{cap} &= \frac{n_p F_I}{126\,000 K_o K_s K_m K_v} \left[\frac{s_{ac} D_p Z_N}{(SF) K_R C_P} \right]^2 \end{aligned} \quad (9-37)$$

Equations (9-35) and (9-37) should be used to compute the power-transmitting capacity for a pair of gears of known design with particular materials. From the material specification along with its condition (typically a heat treatment or case-hardening process), the limiting values for s_{at} and s_{ac} can be found from Figures 9-18 and 9-19 and from Tables 9-9 and 9-10. Entering those values along with the known data for the proposed gear design permits the calculation of the power-transmitting capacity, P_{cap} . This value can be shared with colleagues and customers to verify the suitability of a design for a particular application.

9-14 PLASTICS GEARING

Plastics are satisfying an important and growing part of the applications for gearing. Some of the numerous advantages of plastics in gearing systems compared with steels and other metals are:

- Lighter weight.
- Lower inertia.
- Possibility of running with little or no external lubrication.
- Quieter operation.
- Low sliding friction, which results in efficient gear meshing.
- Chemical resistance and ability to operate in corrosive environments.
- Ability to operate well under conditions of moderate vibration, shock, and impact.
- Relatively low cost when made in large quantities.
- Ability to combine several features into one part.
- Accommodation of larger tolerances because of resiliency.
- Material properties that can be tailored to meet the needs of the application.
- Less wear among some plastics compared to metals in certain applications.

The advantages must be weighed against disadvantages such as:

- Relatively lower strength of plastics as compared with metals.
- Lower modulus of elasticity.
- Higher coefficients of thermal expansion.
- Difficulty operating at high temperatures.
- Initial high cost for design, development, and mold manufacture.
- Dimensional change with moisture absorption that varies with conditions.
- Wide range of possible material formulations, which makes design more difficult.

Some plastic gears are cut using hobbing or shaping processes similar to those used to cut metallic gears. However, most plastic gears are produced with the injection molding process because of its ability to make large quantities rapidly with low unit cost. Mold design is critical because it must accommodate the shrinking that occurs as the molten plastic solidifies. The typical successful approach accounts for predicted shrinkage by making the die larger than the required finished gear size. However, the allowance is not uniform throughout the gear, and significant amounts of data are required about the material molding properties and the molding process itself to produce plastic gears with high dimensional accuracy. Computer-assisted mold design software that

simulates the flow of molten plastic through the mold cavities and the curing process is often used. The gear mold or the gear cutting tools are designed to produce dimensionally accurate gear teeth with tooth thickness controlled to produce a proper amount of backlash during operation. The electrical discharge machining process (EDM) is typically used to produce accurate gear tooth forms in molds made from high-hardness, wear-resistant steels to ensure that large production runs can be made without replacing tooling.

Plastic Materials for Gears

The great variety of plastics available makes material selection difficult, and it is recommended that gear system designers consult with material suppliers, mold designers, and manufacturing staff during the design process. While simulation can aid in reaching a suitable design, it is recommended that testing be done in realistic conditions before committing the design to production. Some of the more popular types of materials used for gears are:

| | | |
|---------------|------------------|---------------------------------------|
| Nylon | Acetal | ABS (acrylonitrile-butadiene-styrene) |
| Polycarbonate | Polyurethane | Polyester thermoplastic |
| Polyimide | Phenolic | Polyphenylene sulfide |
| Polysulfones | Phenylene oxides | Styrene-acrylonitrile (SAN) |

Designers must seek a balance of material characteristics appropriate to the application, considering, for example:

- Strength in flexure under fatigue conditions.
- High modulus of elasticity for stiffness.
- Impact strength and toughness.
- Wear and abrasion resistance.
- Dimensional stability under expected temperatures.
- Dimensional stability due to moisture absorption from liquids and humidity.
- Frictional performance and need for lubrication, if any.
- Operation in vibration environments.
- Chemical resistance and compatibility with the operating environment.
- Sensitivity to ultraviolet radiation.
- Creep resistance if operated under load for long periods of time.
- Flame retarding ability.
- Cost.
- Ease of processing and molding.
- Assembly and disassembly considerations.
- Compatibility with mating parts.
- Environmental impact during processing, use, recycling, and disposal.

The basic plastic materials listed previously are typically modified with fillers and additives to produce optimum as-molded properties. Some of these are:

Reinforcements for strength, toughness, moldability, long-term stability, thermal conductivity, and dimensional stability: Long glass fibers, chopped glass fibers, milled glass, woven glass fibers, carbon fibers, glass beads, aluminum flake, mineral, cellulose, rubber modifiers, wood flour, cotton, fabric, mica, talc, and calcium carbonate.

Fillers to improve lubricity and overall frictional performance: PTFE (polytetrafluoroethylene), silicone, carbon fibers, graphite powders, and molybdenum disulfide (MoS_2).

Refer to Section 2-17 for additional discussion about plastic materials, their properties, and special considerations for selecting plastics. See Internet sites 1, 8, 18, and 20.

Design Strength for Plastic Gear Materials

Data are provided here for typical plastic materials used for gears. They can be applied to problem solving in this book. However, verification of properties for materials to be actually used in a commercial application, with due regard for the operating conditions, should be acquired from the material supplier. The effects of temperature on strength, modulus, toughness, chemical stability, and dimensional precision are particularly important. Manufacturing processes must be controlled to ensure that final properties are consistent with prescribed values.

Table 9-14 lists some selected data for allowable tooth bending stress, s_{at} , in plastic gears. Much additional data for other materials can be found in References 19 and 21. Note the significant increase in allowable strength provided by the glass reinforcement. The combination of glass fibers and the basic plastic matrix performs like a composite material with the amount of reinforcement typically ranging from 20% to 50%.

TABLE 9-14 Approximate Allowable Tooth Bending Stress, s_{at} , in Plastic Gears

| Material | Approximate allowable bending stress, s_{at} , psi (MPa) | |
|---------------|--|--------------|
| | Unfilled | Glass-filled |
| ABS | 3000 (21) | 6000 (41) |
| Acetal | 5000 (34) | 7000 (48) |
| Nylon | 6000 (41) | 12 000 (83) |
| Polycarbonate | 6000 (41) | 9000 (62) |
| Polyester | 3500 (24) | 8000 (55) |
| Polyurethane | 2500 (17) | |

Source: *Plastics Gearing*. Manchester, CT: ABA/PGT Publishing, 1994.

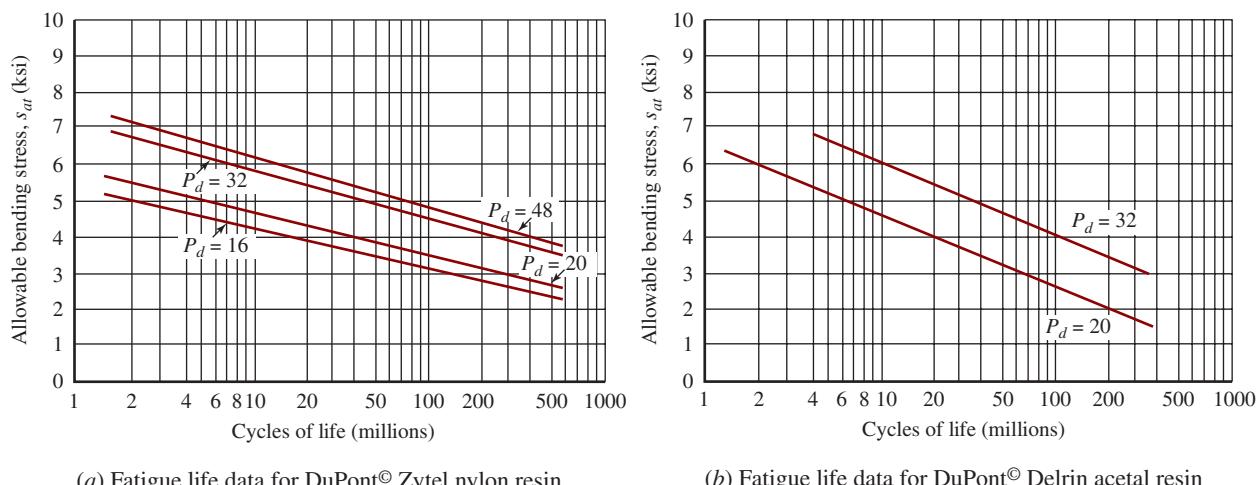


FIGURE 9-26 Fatigue life data for two types of plastic materials used for gears

Material suppliers may be able to provide fatigue data for plastics in charts such as those shown in Figure 9-26, showing allowable bending stress versus number of cycles to failure for DuPont Zytel® nylon resin and Delrin® acetal resin. These data are for molded gears operating at room temperature with diametral pitches shown, pitch line velocity below 4000 ft/min, and continuous lubrication. Reductions should be applied for cut gears, higher temperatures, different pitches, and different lubrication conditions. See Reference 21.

Tooth Geometry

In general, standard tooth geometry for plastic gears conforms to the configurations described in Section 8-4. Standard diametral pitches from Table 8-3 and standard metric modules from Table 8-4 should be used unless there are major advantages to using other values. Suppliers' ability to provide nonstandard pitches should be investigated. Pressure angles of $14\frac{1}{2}^\circ$, 20° , and 25° are used, with 20° usually preferred. Standard formulas for addendum, dedendum, and clearance for full-depth involute teeth are listed in Table 8-1. Gear quality values are set similarly to those for metallic gears as discussed in Section 9-9. The typical AGMA quality number produced by injection molding is in range of A11 to A7.

Designers sometimes use special tooth forms to tailor the strength of plastic gear teeth to the demands of particular applications. The 20° stub tooth system provides a shorter, broader tooth than the standard 20° full-depth tooth system, decreasing tooth-bending stress. The Plastics Gearing Technology unit of the ABA-PGT company has developed another system that is finding favor with some designers. See References 1, 2, 12, and 13.

Many designers of plastic gears prefer to use a longer addendum on the pinion and a shorter addendum on the mating gear to produce more favorable operation because of the greater flexibility of plastics as compared with metals. Tooth thickness is typically thinned on either or both of the pinion and gear to provide acceptable backlash

and to ensure that mating gears do not bind. Binding may result from deflection of the teeth under load or from expansions due to increased temperature or moisture absorption from exposure to water or high humidity. Enlarging the center distance is another method employed to adjust for backlash. Designers must specify these feature sizes on drawings and in specifications. Consult AGMA Standard 1006 (Reference 12) *Tooth Proportions for Plastic Gears* for details. Reference 2 provides useful tables of formulas and data for adjustments to tooth form and center distance. Reference 21 recommends the range of backlash values shown in Figure 9-27.

Shrinkage

During manufacture of plastic gears using injection molding, enlarging the effective diametral pitch and the pitch diameter of the gear teeth cut into the mold accommodates shrinkage. The pressure angle is also

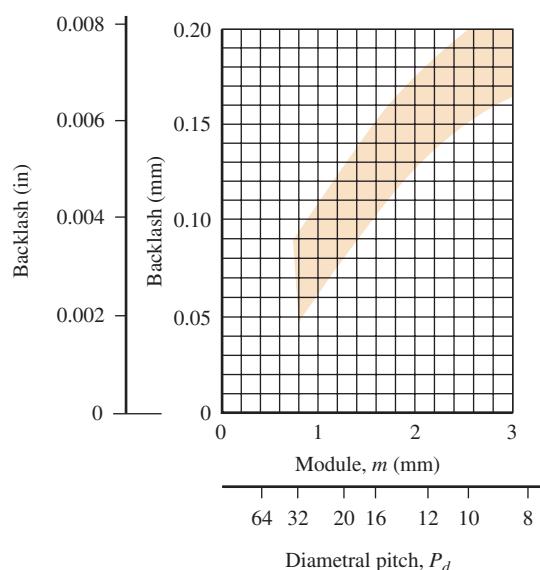


FIGURE 9-27 Recommended backlash for plastic gears

adjusted. The nominal corrections are computed as follows:

$$P_{dc} = \frac{P_d}{(1 + S)} \quad (9-38)$$

$$\cos \phi_1 = \frac{\cos \phi}{(1 + S)} \quad (9-39)$$

$$D_c = N/P_{dc} \quad (9-40)$$

where S = shrinkage of material

P_d = standard diametral pitch for the gear

P_{dc} = modified diametral pitch of the teeth in the mold

ϕ = standard pressure angle for the gear

ϕ_1 = modified pressure angle of the teeth in the mold

N = number of teeth

D_c = modified pitch diameter of teeth in the mold

After molding, the teeth should very nearly conform to standard geometry. Additional adjustments are sometimes made, relieving the tips of the teeth for smoother engagement and increasing the tooth width at the base near the point of highest bending stress.

Stress Analysis

Bending stress analysis for plastic gears relies on the basic Lewis formula introduced in Section 9–5, Equation (9–13). The modifying factors called for by the AGMA standards for steel gears are not specified for plastic gears at this time. We can account for uncertainty or shock loading by inserting a safety factor. The overload factor from Table 9–1 can be used as a guide. Testing of the proposed design in realistic conditions should be completed. The bending stress equation then becomes

$$\sigma_t = \frac{W_i P_d (SF)}{FY} \quad (9-41)$$

Values for the Lewis form factor, Y , shown in Table 9–15, describe the geometry of the involute gear teeth acting as a cantilever beam with the load applied near the pitch point. Thus Equation (9–41) gives the bending stress at the root of the tooth. Most plastic gear designs call for a generous fillet radius between the start of the active involute profile on the flank of the tooth and the root, resulting in little, if any, stress concentration.

Wear Considerations

Wear of tooth surfaces in plastic gear teeth is a function of the contact stress between mating teeth as it is with metal teeth. Equation (9–18) can be used to compute the contact stress. However, published data are lacking for allowable contact stress values.

In reality, lubrication and the *combination of materials in mating gears* play major roles in the wear life of the pair. Communication with material suppliers and testing of proposed designs are recommended.

TABLE 9–15 Lewis Tooth Form Factor, Y , for Load Near the Pitch Point

| Number teeth | Tooth form | | |
|-----------------|-----------------------|-------------------|-------------|
| | 14 1/2° Full depth | 20° Full depth | 20° Stub |
| 14 | – | – | 0.540 |
| 15 | – | – | 0.566 |
| 16 | – | – | 0.578 |
| 17 | – | 0.512 | 0.587 |
| 18 | – | 0.521 | 0.603 |
| 19 | – | 0.534 | 0.616 |
| 20 | – | 0.544 | 0.628 |
| 22 | – | 0.559 | 0.648 |
| 24 | 0.509 | 0.572 | 0.664 |
| 26 | 0.522 | 0.588 | 0.678 |
| 28 | 0.535 | 0.597 | 0.688 |
| 30 | 0.540 | 0.606 | 0.698 |
| 34 | 0.553 | 0.628 | 0.714 |
| 38 | 0.566 | 0.651 | 0.729 |
| 43 | 0.575 | 0.672 | 0.739 |
| 50 | 0.588 | 0.694 | 0.758 |
| 60 | 0.604 | 0.713 | 0.774 |
| 75 | 0.613 | 0.735 | 0.792 |
| 100 | 0.622 | 0.757 | 0.808 |
| 150 | 0.635 | 0.779 | 0.830 |
| 300 | 0.650 | 0.801 | 0.855 |
| Rack | 0.660 | 0.823 | 0.881 |

Presented here are some general guidelines from References 2 and 21.

- Continuously lubricated gearing promotes the longest life.
- With continuous lubrication and light loads, fatigue resistance, not wear, typically determines life.
- Unlubricated gears tend to fail by wear, not fatigue, provided proper design bending stresses are used.
- When continuous lubrication is not practical, initially lubricating the gearing can aid in the run-in process and add life compared with gears that are never lubricated.
- When continuous lubrication is not practical, the combination of a nylon pinion and an acetal gear exhibits low friction and wear.
- Excellent wear performance for relatively high loads and pitch line speeds can be obtained by using a lubricated pair of a hardened steel pinion ($HRC > 50$)

mating with a plastic gear made from nylon, acetal, or polyurethane.

- Wear accelerates when operating temperatures rise. Cooling to promote heat dissipation can increase life.

Gear Shapes and Assembly

References 2 and 21 include many recommendations for the geometric design of gears considering strength, inertia, and molding conditions. Many smaller gears are simply made with uniform thickness equal to the face width of the gear teeth. Larger gears often have a rim to support the teeth, a thinned web for lightening and material savings, and a hub to facilitate mounting on a shaft. Figure 9–28 shows recommended proportions. Symmetrical cross sections are preferred, along with balanced section thicknesses to promote good flow of material and to minimize distortion during molding.

Fastening gears to shafts requires careful design. Keys placed in shaft key seats and keyways in the hub of the gear provide reliable transmission of torque. For light torques, setscrews can be used, but slippage and damage of the shaft surface are possible. The bore of the gear hub can be lightly press-fit onto the shaft with care to ensure that a sufficient torque can be transmitted while not overstressing the plastic hub. Knurling the shaft before pressing the gear on increases the torque capability. Some designers prefer to use metal hubs to facilitate the use of keys. Plastic is then molded onto the hub to form the rim and gear teeth.

Design Procedure

Design of plastic gearing should consider a variety of possibilities, and it is likely to be an iterative process. The following procedure outlines the steps for a given trial using U.S. Customary units for use in this book.

PROCEDURE FOR DESIGNING PLASTIC GEARS

- Determine the required horsepower, P , to be transmitted and the speed of rotation, n_P , of the pinion in rpm.
- Specify the number of teeth, N , and select a trial diametral pitch for the pinion.
- Compute the pinion diameter from $D_P = N_P/P_d$.

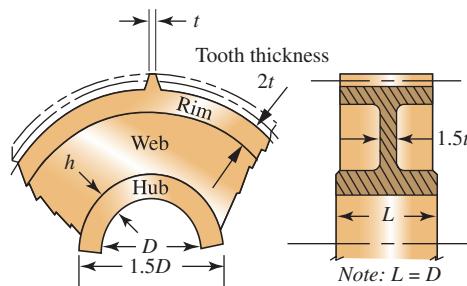


FIGURE 9–28 Suggested plastic gear proportions

- Compute the transmitted load, W_t (in lb), from Equation (9–8), repeated here.
- $$W_t = (126\,000)(P)/(n_P D_p)$$
- Specify the tooth form and determine the Lewis form factor, Y , from Table 9–15.
- Specify a safety factor, SF . Refer to Table 9–1 for guidance.
- Specify the material to be used and determine the allowable stress, s_{at} , from Table 9–15 or Figure 9–31.
- Solve Equation (9–41) for the face width, F , and compute its value from,

$$F = \frac{W_t P_d (SF)}{s_{at} Y} \quad (9-42)$$

- Judge the suitability of the computed face width as it relates to the application. Consider its mounting on a shaft, space available in the diametral and axial directions, and whether the general proportions are acceptable for injection molding. See References 2 and 21. No general recommendations are published for the face width of plastic gears and often they are narrower than similar metallic gears.
- Repeat steps 2 to 9 until a satisfactory design for the pinion is achieved. Specify convenient dimensions for the final value of the face width and other features of the pinion.
- Considering the desired velocity ratio between the pinion and the gear, compute the required number of teeth in the gear and repeat steps 3 to 9 using the same diametral pitch as the pinion. Using the same face width as for the pinion, the stress in the gear teeth will always be lower than in the pinion because the form factor Y will increase and all other factors will be the same. When the same material is to be used for the gear, it will always be safe. Alternatively, you could compute the bending stress directly from Equation (9–41) and specify a different material for the gear that has a suitable allowable bending stress.

Example Problem 9–10

Design a pair of plastic gears for a paper shredder to transmit 0.25 horsepower at a pinion speed of 1160 rpm. The pinion will be mounted on the shaft of an electric motor that has a diameter of 0.625 in with a keyway for a $3/16 \times 3/16$ in key. The gear is to rotate approximately 300 rpm.

Given Data

$P = 0.25 \text{ hp}$, $n_P = 1160 \text{ rpm}$,
Shaft diameter = $D_s = 0.625 \text{ in}$, Keyway for a $3/16 \times 3/16$ in key.
Approximate gear speed = $n_G = 300 \text{ rpm}$

Solution Use the design procedure outlined in this section.

Step 1. Consider the given data.

Step 2. Specify $N_P = 18$ and $P_d = 16$ (Design decisions)

Step 3. $D_P = N_P/P_d = 18/16 = 1.125 \text{ in}$. This seems reasonable for mounting on the 0.625 in motor shaft.

Step 4. Compute the transmitted load,

$$W_t = (126\,000)(P)/(n_P D_P) = (126\,000)(0.25)/[(1160)(1.125)] = 24.1 \text{ lb}$$

Step 5. Specify 20° full-depth teeth. Then $Y = 0.521$ for 18 teeth from Table 9–15.

Step 6. Specify a safety factor, SF . The shredder will likely experience light shock; the preference is to operate the gears without lubrication. Specify $SF = 1.50$ from Table 9–1.

Step 7. Specify unfilled nylon. From Table 9–14, $s_{at} = 6000 \text{ psi}$.

Step 8. Compute the required face width using Equation (9–42).

$$F = \frac{W_t P_d (SF)}{s_{at} Y} = \frac{(24.1)(16)(1.50)}{(6000)(0.521)} = 0.185 \text{ in}$$

Step 9. The dimensions seem reasonable.

Step 10. Appendix 2 lists a preferred size for the face width of 0.200 in.

Comment: In summary, the proposed pinion has the following features:

$$P_d = 16, N_P = 18 \text{ teeth}, D_P = 1.125 \text{ in}, F = 0.200 \text{ in}, \text{Bore} = 0.625 \text{ in},$$

Keyway for a $3/16 \times 3/16$ in key. Unfilled nylon material.

Step 11. Gear design: Specify $F = 0.200 \text{ in}$, $P_d = 16$. Compute the number of teeth in the gear.

$$N_G = N_P(n_P/n_G) = 18(1160/300) = 69.6 \text{ teeth}$$

Specify $N_G = 70$ teeth

$$\text{Pitch diameter of gear} = D_G = N_G/P_d = 70/16 = 4.375 \text{ in}$$

From Table 9–15, $Y_G = 0.728$ by interpolation.

Stress in gear teeth using Equation (9–41):

$$\sigma_t = \frac{W_t P_d (SF)}{FY} = \frac{(24.1)(16)(1.50)}{(0.200)(0.728)} = 3973 \text{ psi}$$

Comment: This stress level is safe for nylon. The gear could also be made from acetal to achieve better wear performance.

9–15 PRACTICAL CONSIDERATIONS FOR GEARS AND INTERFACES WITH OTHER ELEMENTS

It is important to consider the design of the entire gear system when designing the gears because they must work in harmony with the other elements in the system. This section will briefly discuss some of these practical considerations and will show commercially available speed reducers.

Our discussion so far has been concerned primarily with the gear teeth, including the tooth form, pitch, face width, material selection, and heat treatment. Also to be

considered is the type of gear blank. Figures 8–2 and 8–4 show several styles of blanks. Smaller gears and lightly loaded gears are typically made in the plain style. Gears with pitch diameters of approximately 5.0 in through 8.0 in are frequently made with thinned webs between the rim and the hub for lightening, with some having holes bored in the webs for additional lightening. Larger gears, typically with pitch diameters greater than 8.0 in, are made from cast blanks with spokes between the rim and the hub.

In many precision special machines and gear systems produced in large quantities, the gears are machined integral with the shaft carrying the gears. This, of course, eliminates some of the problems associated with

mounting and location of the gears, but it may complicate the machining operations.

In general machine design, gears are usually mounted on separate shafts, with the torque transmitted from the shaft to the gear through a key. This setup provides a positive means of transmitting the torque while permitting easy assembly and disassembly. The axial location of the gear must be provided by another means, such as a shoulder on the shaft, a retaining ring, or a spacer (see Chapters 11 and 12).

Other considerations include the forces exerted on the shaft and the bearings that are due to the action of the gears. These subjects are discussed in Section 9–3. The housing design must provide adequate support for the bearings and protection of the interior components. Normally, it must also provide a means of lubricating the gears.

See References 9, 19, 20, 22, and 25 for additional practical considerations.

Lubrication

The action of spur gear teeth is a combination of rolling and sliding. Because of the relative motion, and because of the high local forces exerted at the gear faces, adequate lubrication is critical to smoothness of operation and gear life. A continuous supply of oil at the pitch line is desirable for most gears unless they are lightly loaded or operate only intermittently.

In splash-type lubrication, one of the gears in a pair dips into an oil supply sump and carries the oil to the pitch line. At higher speeds, the oil may be thrown onto the inside surfaces of the case; then it flows down, in a controlled fashion, onto the pitch line. Simultaneously, the oil can be directed to the bearings that support the shafts. One difficulty with the splash type of lubrication is that the oil is churned; at high gear speeds, excessive heat can be generated, and foaming can occur.

A positive oil circulation system is used for high-speed and high-capacity systems. A separate pump draws the oil from the sump and delivers it at a controlled rate to the meshing teeth.

The primary functions of gear lubricants are to reduce friction at the mesh and to keep operating temperatures at acceptable levels. It is essential that a continuous film of lubricant be maintained between the mating tooth surfaces of highly loaded gears and that there be a sufficient flow rate and total quantity of oil to maintain cool temperatures. Heat is generated by the meshing gear teeth, by the bearings, and by the churning of the oil. This heat must be dissipated from the oil to the case or to some other external heat-exchange device in order to keep the oil itself below 200°F (approximately 93°C). Above this temperature, the lubricating ability of the oil, as indicated by its viscosity, is severely decreased. Also, chemical changes can be produced in the oil, decreasing

its lubricity. Because of the wide variety of lubricants available and the many different conditions under which they must operate, it is recommended that suppliers of lubricants be consulted for proper selection. (See also References 10, 16, 27–29.)

The AGMA, in Reference 10, defines several types of lubricants for use in gear drives.

- **Rust and oxidation inhibited gear oils** (called R&O) are petroleum based with chemical additives.
- **Compounded gear lubricants** (CP) blend 3% to 10% of fatty oils with petroleum oils.
- **Extreme pressure lubricants** (EP) include chemical additives that inhibit scuffing of gear tooth faces.
- **Synthetic gear lubricants** (S) are special chemical formulations applied mostly in severe operating conditions.

R&O lubricants are supplied in 10 ISO viscosity grades where the lower numbers refer to the lower viscosities. Similar numbers are used for the other types with modified grade designations carrying suffixes CP, EP, or S. The recommended lubricant grade depends on the ambient temperature around the drive and the pitch line velocity of the lowest speed pair of gears in a reducer. See Tables 9–16 and 9–17. Wormgear drives call for higher viscosity grades.

TABLE 9–16 Recommended Lubricant Viscosity Grades for Enclosed Gear Drives

| ISO viscosity grade | Midpoint viscosity at 40°C (mm ² /s) | Former AGMA grade equivalent |
|---------------------|---|------------------------------|
| ISO VG 32 | 32 | 0 |
| ISO VG 46 | 46 | 1 |
| ISO VG 68 | 68 | 2 |
| ISO VG 100 | 100 | 3 |
| ISO VG 150 | 150 | 4 |
| ISO VG 220 | 220 | 5 |
| ISO VG 320 | 320 | 6 |
| ISO VG 460 | 460 | 7 |
| ISO VG 680 | 680 | 8 |
| ISO VG 1000 | 1000 | 8A |

Notes:

1. Viscosity unit of mm²/s is commonly referred to as centistokes (cSt).
2. ISO standard prescribes minimum and maximum kinematic viscosity limits for each grade.

Adapted from AGMA 6013 (Reference 9) Standard for Industrial Enclosed Drives, with permission of the publisher, American Gear Manufacturers Association, 1001 North Fairfax Street, 5th Floor, Alexandria, VA

TABLE 9-17 Viscosity Grade Guidelines for Enclosed Gear Drives

| Approximate temperature range | | | | Approximate pitch line velocity of final stage of the drive, ft/min (m/s) | | | | | | |
|-------------------------------|---------------|------------|--------------|---|-----------|-----------|-----------|-----------|-----------------|-----------|
| Ambient | | Oil sump | | <1000 | 1000–2000 | 2000–3000 | 3000–4000 | 4000–5000 | 5000–6000 | 6000–7000 |
| °F | °C | °F | °C | (<5) | (5–10) | (10–15) | (15–20) | (20–25) | (25–30) | (30–35) |
| -40 to -10 | -40 to -23.3 | <60 | <15.6 | 68S | 68S | 46S | 46S | 46S | 32S | 32S |
| -10 to +20 | -23.3 to -6.7 | 60 to 90 | 15.6 to 32.2 | 100S | 100S | 68S | 68S | 46S | 32S | 32S |
| 20 to 40 | -6.7 to 4.5 | 90 to 150 | 32.2 to 65.6 | 150 | 150 | 150 | 68 | 68 | 68 | 46 |
| 40 to 80 | 4.5 to 26.7 | 150 to 190 | 65.6 to 87.8 | 320 | 220 | 220 | 150 | 100 | 100 | 100 |
| 80 to 120 | 26.7 to 48.9 | 190 to 210 | 87.8 to 98.9 | 460 | 460 | 320 | 320 | 220 | 150 | 100 |
| >120 | >48.9 | >210 | >98.9 | | | | | | Not recommended | |

Notes: Viscosity grades are for R&O type, unless Synthetic (S) is specified.

See Table 9-16 for listing of ISO viscosity grades.

Adapted from AGMA 6013 (Reference 9) *Standard for Industrial Enclosed Drives*, with permission of the publisher, American Gear Manufacturers Association, 1001 North Fairfax Street, 5th Floor, Alexandria, VA

Commercially Available Gear-Type Speed Reducers

By studying the design of commercially available gear-type speed reducers, you should get a better feel for design details and the relationships among the component parts: the gears, the shafts, the bearings, the housing, the means of providing lubrication, and the coupling to the driving and driven machines.

Figure 9-29 shows a double-reduction spur gear speed reducer with an electric motor rigidly attached. Such a unit is often called a *gear motor*. Figure 9-30 shows a triple-reduction unit with spur gears in the final two stages and helical gears in the first stage (as discussed in Chapter 10). The cross-sectional drawing

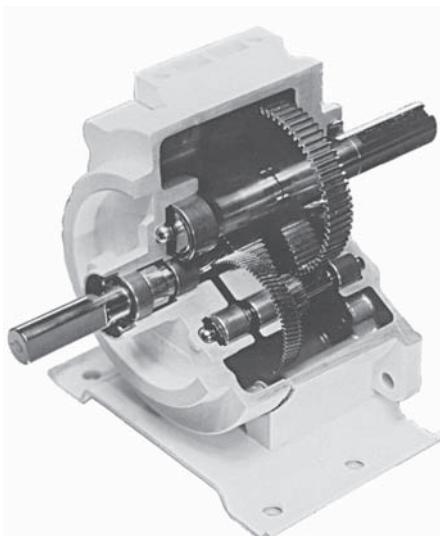


FIGURE 9-30 Triple-reduction gear reducer. Helical gears for stage one; spur gears for stages two and three. The pinion for stage three is on the lower left and not visible. (Bison Gear & Engineering Corporation, St. Charles, IL)


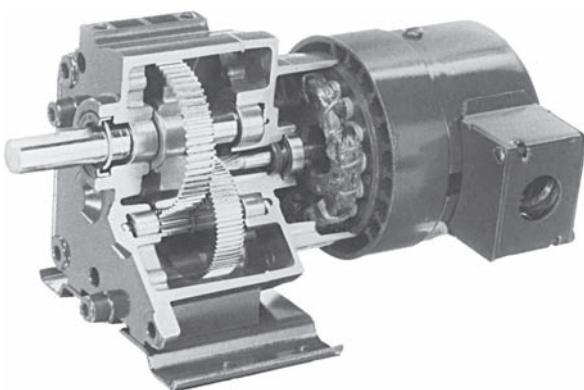


FIGURE 9-29 Double-reduction spur gear reducer (Bison Gear & Engineering Corporation, St. Charles, IL)



shown with Figure 9-31 gives a clear picture of the several components of a reducer.

The planetary reducer in Figure 9-32 has quite a different design to accommodate the placement of the sun, planet, and ring gears. Figure 9-33 shows the eight-speed transmission from a large farm tractor and illustrates the high degree of complexity that may be involved in the design of transmissions.

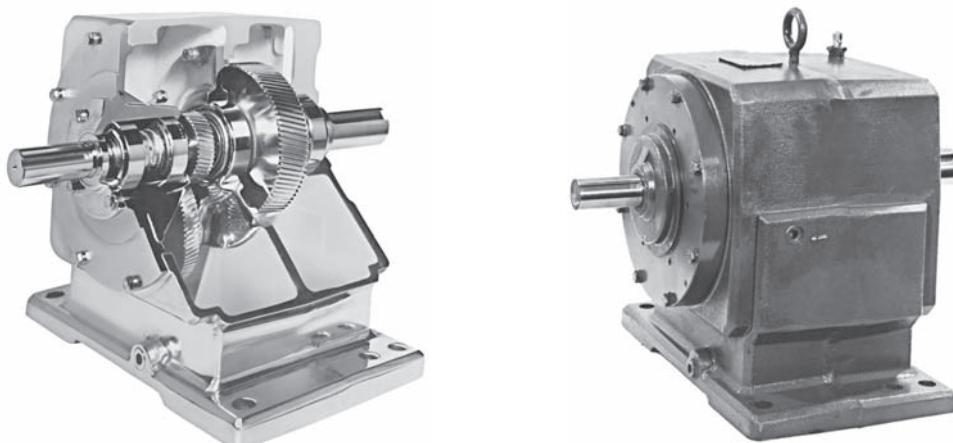


(a) Cutaway of a concentric helical gear reducer

(b) Complete reducer

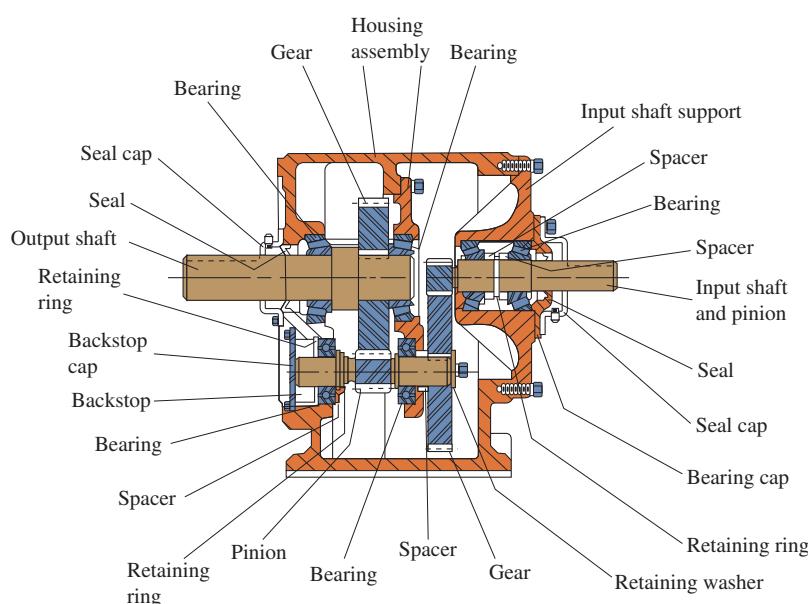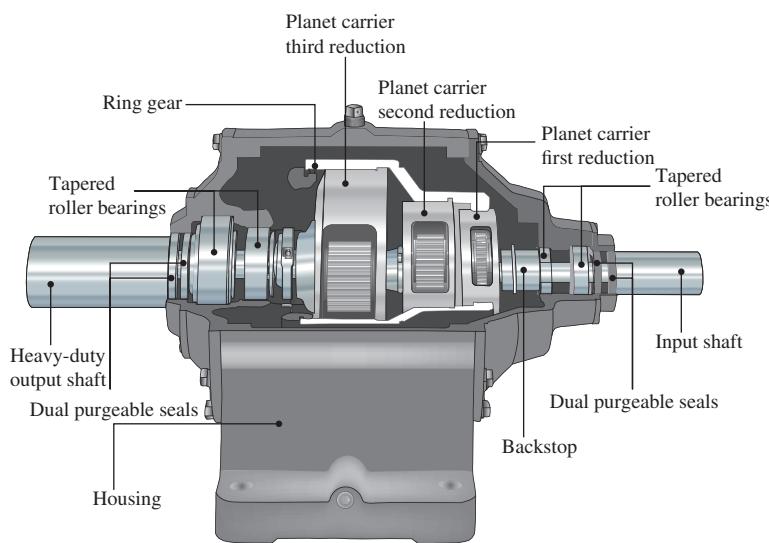**FIGURE 9–31** Concentric helical gear reducer

(a) Cutaway model with key features labeled

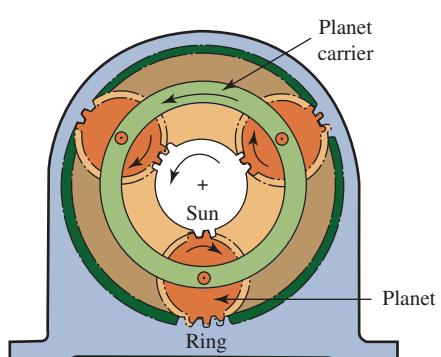

(b) Schematic arrangement of planetary gearing

FIGURE 9–32 Cutaway model of a triple reduction planetary gear reducer

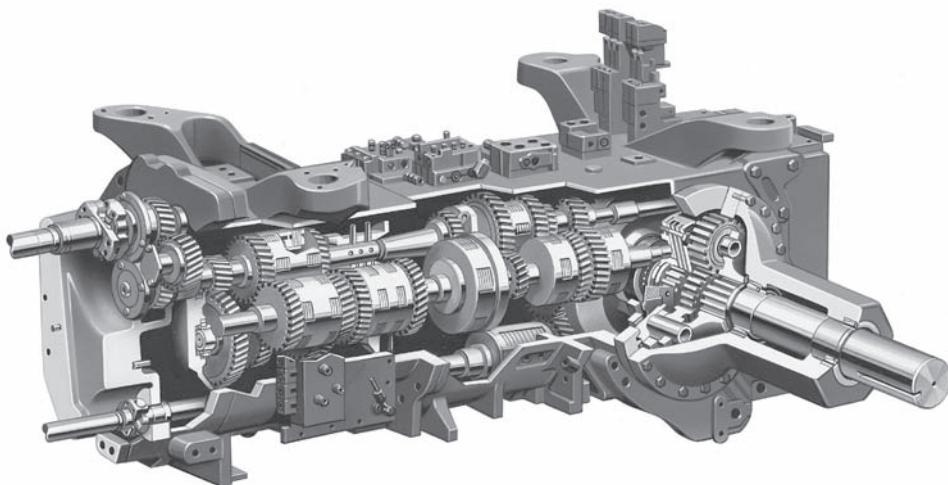


FIGURE 9–33 Eight-speed tractor transmission (Case IH, Racine, WI)

REFERENCES

1. ABA-PGT, Inc. *Plastics Gearing*. Manchester, CT:ABA-PGT Publishing, 1994.
2. Adams, Clifford E. *Plastics Gearing: Selection and Application*. Boca Raton, FL: CRC Press, 1986.
3. American Gear Manufacturers Association. Standard 908-B89 (R2015). *Geometry Factors for Determining the Pitting Resistance and Bending Strength of Spur, Helical, and Herringbone Gear Teeth*. Alexandria, VA: American Gear Manufacturers Association, 2015.
4. American Gear Manufacturers Association. Standard 1012-G05 (R2011). *Gear Nomenclature, Definitions of Terms with Symbols*. Alexandria, VA: American Gear Manufacturers Association, 2011.
5. Radzevich, Stephen P. *Gear Cutting Tools—Fundamentals of Design and Computation*. Boca Raton, FL: CRC Press, 2010.
6. American Gear Manufacturers Association. Standards 2001-D04 (R2016) (based on P_d) and 2101-D04 (R2016) (based on Metric Module, m). *Fundamental Rating Factors and Calculation Methods for Involute Spur and Helical Gear Teeth*. American Gear Manufacturers Association. Alexandria, VA: American Gear Manufacturers Association, 2016.
7. American Gear Manufacturers Association. Standard 2002-B88 (R2012). *Tooth Thickness Specification and Measurement*. Alexandria, VA: American Gear Manufacturers Association, 2012.
8. American Gear Manufacturers Association. Standard 2004-C08 (R2014). *Gear Materials, Heat Treatment and Processing Manual*. Alexandria, VA: American Gear Manufacturers Association, 2014.
9. American Gear Manufacturers Association. Standard 6013-A06 (R2011). *Standard for Industrial Enclosed Gear Drives*. Alexandria, VA: American Gear Manufacturers Association, 2011.
10. American Gear Manufacturers Association. Standard 9005-E02 (R2013). *Industrial Gear Lubrication*. Alexandria, VA: American Gear Manufacturers Association, 2013.
11. American Gear Manufacturers Association. Standard 1010-F14. *Appearance of Gear Teeth-Terminology of Wear and Failure*. Alexandria, VA: American Gear Manufacturers Association, 2014.
12. American Gear Manufacturers Association. Standard 1006-A97 (R2009). *Tooth Proportions for Plastic Gears*. Washington, DC:AGMA, 2009.
13. American Gear Manufacturers Association. Standard 1106-A97 (R2009). *Tooth Proportions for Plastic Gears (Metric)*. Washington, DC:AGMA, 2009.
14. American Gear Manufacturers Association. Standard 2000-A88. *Gear Classification and Inspection Handbook—Tolerances and Measuring Methods for Unassembled Spur and Helical Gears (Including Metric Equivalents)*. Alexandria, VA: American Gear Manufacturers Association, 1988.
15. American Gear Manufacturers Association. Standard 2015/915-1-A02. *Accuracy Classification System—Tangential Measurement Tolerance Tables for Cylindrical Gears*. Alexandria, VA: American Gear Manufacturers Association, 2002.
16. Bhushan, Bharat. *Introduction to Tribology*, 2nd ed. New York: Wiley, 2013.
17. Budynas, Richard G., and Keith J. Nisbett. *Shigley's Mechanical Engineering Design*. 10th ed. New York: McGraw-Hill, 2015.
18. Davis, J. R. (Editor). *Gear Materials, Properties and Manufacture*. Materials Park, OH: ASM International, 2005.
19. Drago, Raymond J. *Fundamentals of Gear Design*. New York: Elsevier Science & Technology Books, 1988.
20. Radzevich, Stephen. *Dudley's Handbook of Practical Gear Design and Manufacture*, 3rd ed. Boca Raton, FL: CRC Press, 2016.
21. Du Pont Polymers. *Design Handbook for DuPont Engineering Polymers, Module I—General Design Principles*. Wilmington, DE: DuPont Polymers, 2000.
22. International Standards Organization. Standard ISO 54:1996. *Cylindrical Gears for General Engineering and for Heavy Engineering—Modules*. Geneva, Switzerland: International Standards Organization, 1996.

23. Lipp, Robert. "Avoiding Tooth Interference in Gears." *Machine Design* 54, no. 1 (January 7, 1982).
24. Jelaska, Damir. *Gears and Gear Drives*. New York: Wiley, 2012.
25. Oberg, Erik, Franklin D. Jones, Holbrook L. Horton, and Henry H. Ryffel. *Machinery's Handbook*. 30th ed. New York: Industrial Press, 2016.
26. Rakshit, A. K. *Heat Treatment of Gears: A Practical Guide for Engineers*. Materials Park, OH: ASM International, 2000.
27. Totten, George. *Handbook of Lubrication and Tribology: Volume I - Application and Maintenance*, 2nd ed. Boca Raton, FL: CRC Press, 2006.
28. Bruce, Robert. *Handbook of Lubrication and Tribology: Volume II - Theory and Design*, 2nd ed. Boca Raton, FL: CRC Press, 2012.
29. Booser, Richard. *Handbook of Lubrication and Tribology: Volume III - Monitoring, Materials, Synthetic Lubricants, and Applications*. Boca Raton, FL: CRC Press, 2015.
11. **Gleason Corporation.** Manufacturer of many types of gear cutting machines for hobbing, milling, shaping, and grinding. The Gleason Cutting Tools Corporation manufactures a wide variety of milling cutters, hobs, shaper cutters, shaving cutters, and grinding wheels for gear production equipment. Producer of analytical gear inspection systems.
12. **International Organization for Standardization.** Organization that establishes standards for numerous types of products and devices including gearing. Recognized in most parts of the world. Most standards are presented in SI metric system units.
13. **Peerless-Winsmith, Inc.** Manufacturer of a wide variety of gear reducers and power transmission products, including wormgearing, planetary gearing, and combined helical/wormgearing. Subsidiary of HBD Industries, Inc.
14. **Power Transmission Engineering.** Clearinghouse on the Internet for buyers, users, and sellers of power transmission-related products and services. Included are gears, gear drives, and gear motors. Site includes several videos of power transmission products.
15. **Penta Gear Metrology.** Producer of innovative machines, products, systems, and services, including gear measurement systems. Provides gear inspection services also.
16. **QTC Metric Gears.** Supplier of stock metric gears.
17. **Star-SU, Inc.** Manufacturer of a wide range of gear-production systems including hobbing, grinding, shaping, and shaving, along with cutting tools for the gear industry.
18. **Stock Drive Products—Sterling Instruments.** Manufacturer and distributor of commercial and precision mechanical components, including gear reducers. Site includes an extensive handbook of design and information on metallic and plastic gears.
19. **Eldec Induction USA, Inc.** Producer of complete induction-hardening systems for production operations with special capabilities in gear manufacturing.
20. **Celanese Engineering Polymers.** Producer of plastic gears made from numerous high-performance polymers for many applications such as automotive, HVAC, industrial power tools, electronics components, medical, and home and garden equipment. Search under *Industrial-Gears*.

INTERNET SITES RELATED TO SPUR GEAR DESIGN

1. **ABA-PGT, Inc.** The ABA division produces molds for making plastic gears using injection molding; the PGT division is dedicated to plastic gearing technology.
2. **American Gear Manufacturers Association (AGMA).** Develops and publishes voluntary, consensus standards for gears and gear drives.
3. **Baldor/Dodge.** Manufacturer of many power transmission components, including complete gear-type speed reducers, bearings, and components such as belt drives, chain drives, clutches, brakes, and couplings.
4. **Bison Gear, Inc.** Manufacturer of fractional horsepower gear reducers and gear motors. Site includes several videos showing Bison Gear products.
5. **Boston Gear, Company.** Manufacturer of gears and complete gear drives. Part of Altra Industrial Motion, Inc. Data provided for spur, helical, miter, bevel, and worm gearing.
6. **Bourn & Koch, Inc.** Manufacturer of hobbing, grinding, shaping, and other types of machines to produce gears, including the Barber-Colman line and Fellows shapers. Also provides remanufacturing services for a wide variety of existing machine tools.
7. **Drivetrain Technology Center.** Research center for gear-type drivetrain technology. Part of the Applied Research Laboratory of Penn State University.
8. **DuPont Polymers.** Information and data on plastics and their properties. A database by type of plastic or application.
9. **Regal Beloit Corporation.** The Browning and Morse Divisions produce spur, helical, bevel, and wormgearing and complete gear drives. Several other gear drive companies are part of Regal Beloit.
10. **Gear Technology Magazine.** Information source for many companies that manufacture or use gears or gearing systems. Includes gear machinery, gear cutting tools, gear materials, gear drives, open gearing, tooling and supplies, software, training and education.

PROBLEMS

Forces on Spur Gear Teeth

1. A pair of spur gears with 20° , full-depth, involute teeth transmits 7.5 hp. The pinion is mounted on the shaft of an electric motor operating at 1750 rpm. The pinion has 20 teeth and a diametral pitch of 12. The gear has 72 teeth. Compute the following:
 - a. The rotational speed of the gear
 - b. The velocity ratio and the gear ratio for the gear pair
 - c. The pitch diameter of the pinion and the gear
 - d. The center distance between the shafts carrying the pinion and the gear
 - e. The pitch line speed for both the pinion and the gear
 - f. The torque on the pinion shaft and on the gear shaft
 - g. The tangential force acting on the teeth of each gear
 - h. The radial force acting on the teeth of each gear
 - i. The normal force acting on the teeth of each gear

2. A pair of spur gears with 20° , full-depth, involute teeth transmits 50 hp. The pinion is mounted on the shaft of an electric motor operating at 1150 rpm. The pinion has 18 teeth and a diametral pitch of 5. The gear has 68 teeth. Compute the following:
- The rotational speed of the gear
 - The velocity ratio and the gear ratio for the gear pair
 - The pitch diameter of the pinion and the gear
 - The center distance between the shafts carrying the pinion and the gear
 - The pitch line speed for both the pinion and the gear
 - The torque on the pinion shaft and on the gear shaft
 - The tangential force acting on the teeth of each gear
 - The radial force acting on the teeth of each gear
 - The normal force acting on the teeth of each gear
3. A pair of spur gears with 20° , full-depth, involute teeth transmits 0.75 hp. The pinion is mounted on the shaft of an electric motor operating at 3450 rpm. The pinion has 24 teeth and a diametral pitch of 24. The gear has 110 teeth. Compute the following:
- The rotational speed of the gear
 - The velocity ratio and the gear ratio for the gear pair
 - The pitch diameter of the pinion and the gear
 - The center distance between the shafts carrying the pinion and the gear
 - The pitch line speed for both the pinion and the gear
 - The torque on the pinion shaft and on the gear shaft
 - The tangential force acting on the teeth of each gear
 - The radial force acting on the teeth of each gear
 - The normal force acting on the teeth of each gear
4. For the data of Problem 1, repeat Parts (g), (h), and (i) if the teeth have 25° full depth instead of 20° .
5. For the data of Problem 2, repeat Parts (g), (h), and (i) if the teeth have 25° full depth instead of 20° .
6. For the data of Problem 3, repeat Parts (g), (h), and (i) if the teeth have 25° full depth instead of 20° .

7. Figure P9–7 shows a drive system in which a 20-hp electric motor drives three separate output shafts. Gear A is mounted on the motor shaft that has a rotational speed of 1750 rpm clockwise. Gear A drives a gear train consisting of gears B, C, and D that deliver power through the shafts on which they are mounted. All gears have a diametral pitch of $P_d = 8$. The following data are given for the gear system:

Power delivered by gears B, C, and D: $P_B = 8$ hp, $P_C = 7$ hp, $P_D = 5$ hp

Numbers of teeth for all gears: $N_A = 24$, $N_B = 48$, $N_C = 96$, $N_D = 24$

Determine the following of the drive system:

- The pitch diameter of each gear.
- The center distance of each gear mesh.
- The rotational speed of each output shaft.
- The torque through each output shaft.
- The tangential force on the teeth of each gear.



FIGURE P9–7 Gear drive with multiple output shafts

Gear Quality

- Specify a suitable quality number for the gears in the drive for a grain harvester.
- Specify a suitable quality number for the gears in the drive for a high-speed printing press.
- Specify a suitable quality number for the gears in the drive for an automotive transmission.
- Specify a suitable quality number for the gears in the drive for a gyroscope used in the guidance system for a spacecraft.
- List five geometric factors measured by analytical gear quality measurement devices.
- Identify the AGMA standard that is the basis for gear quality measurements and describe the range of quality numbers it includes. Compare that list with the two most recent predecessor standards that had been in use.
- Specify a suitable quality number for the gears of Problem 1 if the drive is part of a precision machine tool.
- Specify a suitable quality number for the gears of Problem 2 if the drive is part of a precision machine tool.
- Specify a suitable quality number for the gears of Problem 3 if the drive is part of a precision machine tool.

Gear Materials

- Identify the two major types of stresses that are created in gear teeth as they transmit power. Describe how the stresses are produced and where the maximum values of such stresses are expected to occur.
- Describe the nature of the data contained in AGMA standards that relate to the ability of a given gear tooth to withstand the major types of stresses that it sees in operation.

19. Describe the general nature of steels that are typically used for gears, and list at least five examples of suitable alloys.
20. Describe the range of hardness that can typically be produced by through-hardening techniques and used successfully in steel gears.
21. Describe the general nature of the differences among steels produced as Grade 1, Grade 2, and Grade 3.
22. Suggest at least three applications in which Grade 2 or Grade 3 steel might be appropriate.
23. Describe three methods of producing gear teeth with strengths greater than can be achieved with through-hardening.
24. What AGMA standard should be consulted for data on the allowable stresses for steels used for gears?
25. In the AGMA standard identified in Problem 24, for what other materials besides steels are strength data provided?
26. Determine the allowable bending stress number and the allowable contact stress number for the following materials:
 - a. Through-hardened, Grade 1 steel with a hardness of 200 HB
 - b. Through-hardened, Grade 1 steel with a hardness of 300 HB
 - c. Through-hardened, Grade 1 steel with a hardness of 400 HB
 - d. Through-hardened, Grade 1 steel with a hardness of 450 HB
 - e. Through-hardened, Grade 2 steel with a hardness of 200 HB
 - f. Through-hardened, Grade 2 steel with a hardness of 300 HB
 - g. Through-hardened, Grade 2 steel with a hardness of 400 HB
27. If the design of a steel gear indicates that an allowable bending stress number of 36 000 psi is needed, specify a suitable hardness level for Grade 1 steel. What hardness level would be required for Grade 2 steel?
28. What level of hardness can be expected for gear teeth that are case-hardened by carburizing?
29. Name three typical steels that are used in carburizing.
30. What is the level of hardness that can be expected for gear teeth that are case-hardened by flame or induction hardening?
31. Name three typical steels that are used for flame or induction hardening. What is an important property of such steels?
32. State the minimum hardness level at the surface of gear teeth made from ASTM A536 ductile iron, Grade 80-55-06.
33. Determine the allowable bending stress number and the allowable contact stress number for the following materials:
 - a. Flame-hardened SAE 4140 steel, Grade 1, with a surface hardness of 50 HRC
 - b. Flame-hardened SAE 4140 steel, Grade 1, with a surface hardness of 54 HRC
 - c. Carburized and case-hardened SAE 4620 Grade 1 steel, DOQT 300
 - d. Carburized and case-hardened SAE 4620 Grade 2 steel, DOQT 300
 - e. Carburized and case-hardened SAE 1118 Grade 1 steel, SWQT 350
 - f. Gray cast iron, class 40
 - g. Ductile iron, 100-70-03
 - i. Sand-cast bronze with a minimum tensile strength of 40 ksi (275 MPa)
 - j. Heat-treated bronze with a minimum tensile strength of 90 ksi (620 MPa)
 - k. Glass-filled nylon
 - l. Glass-filled polycarbonate
34. What depth should be specified for the case for a carburized gear tooth having a diametral pitch of 6?
35. What depth should be specified for the case for a carburized gear tooth having a metric module of 6?

Bending Stresses in Gear Teeth

For Problems 36–41, compute the bending stress number, s_b , using Equation (9–16). Assume that the gear blank is solid unless otherwise stated. (*Note that the data in these problems are used in later problems through Problem 59. You are advised to keep solutions to earlier problems accessible so that you can use data and results in later problems. The four problems that are keyed to the same set of data require the analysis of bending stress and contact stress and the corresponding specification of suitable materials based on those stresses. Later design problems, 60–70, use the complete analysis within each problem.*)

36. A pair of gears with 20° , full-depth, involute teeth transmits 10.0 hp while the pinion rotates at 1750 rpm. The diametral pitch is 12, and the quality number is A11. The pinion has 18 teeth, and the gear has 85 teeth. The face width is 1.25 in. The input power is from an electric motor, and the drive is for an industrial conveyor. The drive is a commercial enclosed gear unit.
37. A pair of gears with 20° , full-depth, involute teeth transmits 40 hp while the pinion rotates at 1150 rpm. The diametral pitch is 6, and the quality number is A11. The pinion has 20 teeth, and the gear has 48 teeth. The face width is 2.25 in. The input power is from an electric motor, and the drive is for a cement kiln. The drive is a commercial enclosed gear unit.
38. A pair of gears with 20° , full-depth, involute teeth transmits 0.50 hp while the pinion rotates at 3450 rpm. The diametral pitch is 32, and the quality number is A7. The pinion has 24 teeth, and the gear has 120 teeth. The face width is 0.50 in. The input power is from an electric motor, and the drive is for a small machine tool. The drive is a precision enclosed gear unit.
39. A pair of gears with 25° full-depth, involute teeth transmits 15.0 hp while the pinion rotates at 6500 rpm. The diametral pitch is 10, and the quality number is A5. The pinion has 30 teeth, and the gear has 88 teeth. The face width is 1.50 in. The input power is from a universal electric motor, and the drive is for an actuator on an aircraft. The drive is an extra-precision, enclosed gear unit.
40. A pair of gears with 25° , full-depth, involute teeth transmits 125 hp while the pinion rotates at 2500 rpm. The diametral pitch is 4, and the quality number is A9. The pinion has 32 teeth, and the gear has 76 teeth. The face width is 1.50 in. The input power is from a gasoline engine, and the drive is for a portable industrial water pump. The drive is a commercial enclosed gear unit.

41. A pair of gears with 25° , full-depth, involute teeth transmits 2.50 hp while the pinion rotates at 680 rpm. The diametral pitch is 10, and the quality number is A11. The pinion has 24 teeth, and the gear has 62 teeth. The face width is 1.25 in. The input power is from a vane-type fluid motor, and the drive is for a small lawn and garden tractor. The drive is a commercial enclosed gear unit.

Required Allowable Bending Stress Number

For Problems 42–47, compute the required allowable bending stress number, s_{at} , using Equation (9–30). Assume that no unusual conditions exist unless stated otherwise. That is, use a service factor, SF , of 1.00. Then specify a suitable steel and its heat treatment for both the pinion and the gear based on bending stress.

42. Use the data and results from Problem 36. Design for a reliability of 0.99 and a design life of 20 000 h.
43. Use the data and results from Problem 37. Design for a reliability of 0.99 and a design life of 8000 h.
44. Use the data and results from Problem 38. Design for a reliability of 0.9999 and a design life of 12 000 h. Consider that the machine tool is a critical part of a production system calling for a service factor of 1.25 to avoid unexpected down time.
45. Use the data and results from Problem 39. Design for a reliability of 0.9999 and a design life of 4000 h.
46. Use the data and results from Problem 40. Design for a reliability of 0.99 and a design life of 8000 h.
47. Use the data and results from Problem 41. Design for a reliability of 0.90 and a design life of 2000 h. The uncertainty of the actual use of the tractor calls for a service factor of 1.25. Consider using cast iron or bronze if the conditions permit.

Pitting Resistance

For Problems 48–53, compute the expected contact stress number, s_c , using Equation (9–23). Assume that both gears are to be steel unless stated otherwise.

48. Use the data and results from Problems 36 and 42.
49. Use the data and results from Problems 37 and 43.
50. Use the data and results from Problems 38 and 44.
51. Use the data and results from Problems 39 and 45.
52. Use the data and results from Problems 40 and 46.
53. Use the data and results from Problems 41 and 47.

Required Allowable Contact Stress Number

For Problems 54–59, compute the required allowable contact stress number, s_{acs} , using Equation (9–31). Use a service factor, SF , of 1.00 unless stated otherwise. Then specify suitable material for the pinion and the gear based on pitting resistance. Use steel unless an earlier decision has been made to use another material. Then evaluate whether the earlier decision is still valid. If not, specify a different material according to the

most severe requirement. If no suitable material can be found, consider redesigning the original gears to enable reasonable materials to be used.

54. Use the data and results from Problems 36, 42, and 48.
55. Use the data and results from Problems 37, 43, and 49.
56. Use the data and results from Problems 38, 44, and 50.
57. Use the data and results from Problems 39, 45, and 51.
58. Use the data and results from Problems 40, 46, and 52.
59. Use the data and results from Problems 41, 47, and 53.

Design Problems

Problems 60–70 describe design situations. For each, design a pair of spur gears, specifying (at least) the diametral pitch, the number of teeth in each gear, the pitch diameters of each gear, the center distance, the face width, and the material from which the gears are to be made. Design for recommended life with regard to both strength and pitting resistance. Work toward designs that are compact. Use standard values of diametral pitch, and avoid designs for which interference could occur. See Example Problem 9–7. Assume that the input to the gear pair is from an electric motor unless otherwise stated.

If the data are given in SI units, complete the design in the metric module system with dimensions in millimeters, forces in newtons, and stresses in megapascals. See Example Problem 9–8.

60. A pair of spur gears is to be designed to transmit 5.0 hp while the pinion rotates at 1200 rpm. The gear must rotate between 385 and 390 rpm. The gear drives a reciprocating compressor.
61. A gear pair is to be a part of the drive for a milling machine requiring 20.0 hp with the pinion speed at 550 rpm and the gear speed to be between 180 and 190 rpm.
62. A drive for a punch press requires 50.0 hp with the pinion speed of 900 rpm and the gear speed of 225 to 230 rpm.
63. A single-cylinder gasoline engine has the pinion of a gear pair on its output shaft. The gear is attached to the shaft of a small cement mixer. The mixer requires 2.5 hp while rotating at approximately 75 rpm. The engine is governed to run at approximately 900 rpm.
64. A four-cylinder industrial engine runs at 2200 rpm and delivers 75 hp to the input gear of a drive for a large wood chipper used to prepare pulpwood chips for paper making. The output gear must run between 4500 and 4600 rpm.
65. A small commercial tractor is being designed for chores such as lawn mowing and snow removal. The wheel drive system is to be through a gear pair in which the pinion runs at 600 rpm while the gear, mounted on the hub of the wheel, runs at 170 to 180 rpm. The wheel is 300 mm in diameter. The gasoline engine delivers 3.0 kW of power to the gear pair.
66. A water turbine transmits 75 kW of power to a pair of gears at 4500 rpm. The output of the gear pair must drive an electric power generator at 3600 rpm. The center distance for the gear pair must not exceed 150 mm.

67. A drive system for a large commercial band saw is to be designed to transmit 12.0 hp. The saw will be used to cut steel tubing for automotive exhaust pipes. The pinion rotates at 3450 rpm, while the gear must rotate between 725 and 735 rpm. It has been specified that the gears are to be made from SAE 4340 steel, oil quenched and tempered. Case hardening is *not* to be used.
68. Repeat Problem 67, but consider a case-hardened carburized steel from Appendix 5. Try to achieve the smallest practical design. Compare the result with the design from Problem 67.
69. A gear drive for a special-purpose, dedicated machine tool is being designed to mill a surface on a rough steel casting. The drive must transmit 20 hp with a pinion speed of 650 rpm and an output speed between 110 and 115 rpm. The mill is to be used continuously, two shifts per day, six days per week, for at least five years. Design the drive to be as small as practical to permit its being mounted close to the milling head.
70. A cable drum for a crane is to rotate between 160 and 166 rpm. Design a gear drive for 25 hp in which the input pinion rotates at 925 rpm and the output rotates with the drum. The crane is expected to operate with a 50% duty cycle for 120 hours per week for at least 10 years. The pinion and the gear of the drive must fit within the 24-in inside diameter of the drum, with the gear mounted on the drum shaft.

Power-Transmitting Capacity

71. Determine the power-transmitting capacity for a pair of spur gears having 20° , full-depth teeth, a diametral pitch of 10, a face width of 1.25 in, 25 teeth in the pinion, 60 teeth in the gear, and an AGMA quality class of A9. The pinion is made from SAE 4140 OQT 1000, and the gear is made from SAE 4140 OQT 1100. The pinion will rotate at 1725 rpm on the shaft of an electric motor. The gear will drive a centrifugal pump.
72. Determine the power-transmitting capacity for a pair of spur gears having 20° , full-depth teeth, a diametral pitch of 6, 35 teeth in the pinion, 100 teeth in the gear, a face width of 2.00 in, and an AGMA quality class of A11. A gasoline engine drives the pinion at 1500 rpm. The gear drives a conveyor for crushed rock in a quarry. The pinion is made from SAE 1040 WQT 800. The gear is made from gray cast iron, ASTM A48-83, class 30. Design for 15 000 hr life.
73. It was found that the gear pair described in Problem 72 wore out when driven by a 25-hp engine. Propose a redesign that would be expected to give 15 000 hr life under the conditions described.

Design of Double-Reduction Drives

74. Design a double-reduction gear train that will transmit 10.0 hp from an electric motor running at 1750 rpm to an assembly conveyor whose drive-shaft must rotate be-

tween 146 and 150 rpm. Note that this will require the design of two pairs of gears. Sketch the arrangement of the train, and compute the actual output speed.

75. A commercial food waste grinder in which the final shaft rotates at between 40 and 44 rpm is to be designed. The input is from an electric motor running at 850 rpm and delivering 0.50 hp. Design a double-reduction spur gear train for the grinder.
76. A small, powered hand drill is driven by an electric motor running at 3000 rpm. The drill speed is to be approximately 550 rpm. Design the speed reduction for the drill. The power transmitted is 0.25 hp.
77. The output from the drill described in Problem 76 provides the drive for a small bench-scale band saw used in a home shop. The saw blade is to move with a linear velocity of 375 ft/min. The saw blade rides on 9.0-in-diameter wheels. Design a spur gear reduction to drive the band saw. Consider using plastic gears.
78. Design a rack-and-pinion drive to lift a heavy access panel on a furnace. A fluid power motor rotating 1500 rpm will provide 5.0 hp at the input to the drive. The linear speed of the rack is to be at least 2.0 ft/s. The rack moves 6.0 ft each way during the opening and closing of the furnace doors. More than one stage of reduction may be used, but attempt to design with the fewest number of gears. The drive is expected to operate at least six times per hour for three shifts per day, seven days per week, for at least 15 years.
79. Design the gear drive for the wheels of an industrial lift truck. Its top speed is to be 20 mph. It has been decided that the wheels will have a diameter of 12.0 in. A DC motor supplies 20 hp at a speed of 3000 rpm. The design life is 16 hours per day, six days per week, for 20 years.

Plastics Gearing

80. Design a pair of plastic gears to drive a small band saw. The input is from a 0.50 hp electric motor rotating at 860 rpm, and the pinion will be mounted on its 0.75-inch diameter shaft with a keyway for a 0.1875×0.1875 in key. The gear is to rotate between 265 and 267 rpm.
81. Design a pair of plastic gears to drive a paper feed roll for an office printer. The pinion rotates at 88 rpm and the gear must rotate between 20 and 22 rpm. The power required is 0.06 hp. Work toward the smallest practical size.
82. Design a pair of plastic gears to drive the wheels of a small remote control car. The gear is mounted on the axle of the wheel and must rotate between 120 and 122 rpm. The pinion rotates at 430 rpm. The power required is 0.025 hp. Work toward the smallest practical size using unfilled nylon.
83. Design a pair of plastic gears to drive a commercial food-chopping machine. The input is from a 0.65 hp electric motor rotating at 1560 rpm, and the pinion will be mounted on its 0.875-inch diameter shaft with a keyway for a 0.1875×0.1875 in key. The gear is to rotate between 468 and 470 rpm.

HELICAL GEARS, BEVEL GEARS, AND WORMGEARING

The Big Picture

You Are the Designer

- 10–1 Objectives of This Chapter
- 10–2 Forces on Helical Gear Teeth
- 10–3 Stresses in Helical Gear Teeth
- 10–4 Pitting Resistance for Helical Gear Teeth
- 10–5 Design of Helical Gears
- 10–6 Forces on Straight Bevel Gears
- 10–7 Bearing Forces on Shafts Carrying Bevel Gears
- 10–8 Bending Moments on Shafts Carrying Bevel Gears
- 10–9 Stresses in Straight Bevel Gear Teeth
- 10–10 Forces, Friction, and Efficiency in Wormgear Sets
- 10–11 Stress in Wormgear Teeth
- 10–12 Surface Durability of Wormgear Drives
- 10–13 Emerging Technology and Software for Gear Design

THE BIG PICTURE

Helical Gears, Bevel Gears, and Wormgearing

Discussion Map

- The geometry of helical gears, bevel gears, and wormgearing was described in Chapter 8.
- The principles of stress analysis of gears were discussed in Chapter 9 for spur gears. Much of that information is applicable to the types of gears discussed in this chapter.

In this chapter, you acquire the skills to perform the necessary analyses to design safe gear drives that use helical gears, bevel gears, and wormgearing and that demonstrate long life.

Much was said in Chapter 8 about the geometry of spur gears, helical gears, bevel gears, and wormgearing and the kinematics of a single pair of gears and trains made from two or more pairs of gears. Also, parts of Chapters 8 and 9 discussed the types of metallic materials commonly used for power transmission gears, methods of manufacturing gears, principles of gear quality, and measurements required to ensure that quality. Then you learned how to analyze the bending stress in the fillet at the base of spur gear teeth and the

Discover

Review Chapters 8 and 9 now.

Recall some of the discussion at the beginning of Chapter 8 about uses for gears that you see in your world. Review that information now, and focus your discussion on helical gears, bevel gears, and wormgearing.

contact stress along the face of the teeth near the pitch line. This was combined with determining the required bending strength of the gear material to avoid fatigue failure and the required hardness of the face of the gear to provide adequate resistance to surface pitting. The result led to a method of designing spur gear drives to achieve satisfactory performance and life. Section 9–14 applied gear design principles to plastics gearing.

Similar analyses and design approaches are developed in this chapter for helical gears, bevel gears,

and wormgearing. You will need to refer back to Chapters 5, 8, and 9 as we proceed. More detailed information can be found in the AGMA standards listed in References 1–14.

Figure 10–1 shows a combination of a gear-type speed reducer driven by a close-coupled electric motor; the combination is often called a *garmotor*. Part (b) of the figure shows the internal arrangement of the three-stage speed reducer. At the right end, a helical pinion shaft is driven directly by the motor and it then drives its mating gear for the first stage of reduction. The same shaft with the output helical gear carries the bevel pinion for the second stage of reduction. The helical pinion for the third stage is placed close to the output bevel gear on the same shaft. The large output helical gear then delivers the power at


the greatly reduced speed and at a correspondingly higher torque to the driven machine. The design of the output shaft employs a hollow shaft with taper-lock bushing that facilitates connection to the input shaft of the driven machine.

Figure 10–2 shows a double-reduction, helical gear reducer that receives power from the electric motor mounted above and through the belt drive that produces an initial speed reduction. Take note of the arrangement of the gears, shafts, and bearings in the housing shown to the left. Tapered roller bearings are used on all shafts to carry the combination of radial and axial forces that are inherently produced by helical gears.

Refer back to Figure 8–25 for an example of a wormgear reducer.



(a) Assembly of a gear reducer and a drive motor, called a garmotor

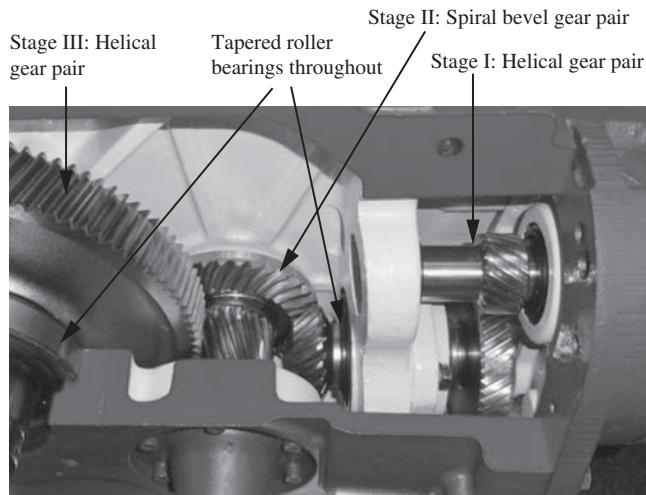

(b) Cutaway showing the internal arrangement of the helical-bevel-helical three-stage reduction

FIGURE 10–1 Gearmotor assembly employing a three-stage gear reducer (Baldor/Dodge, Greenville, SC)

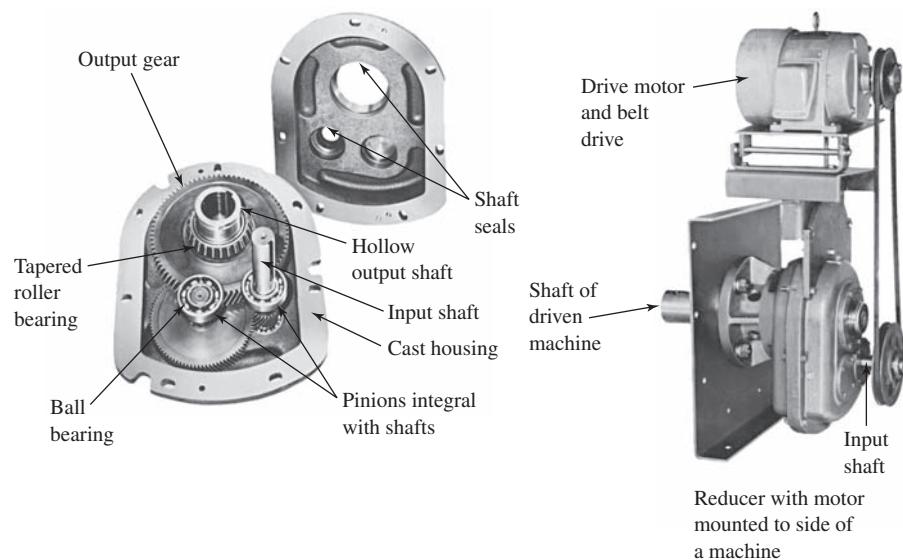


FIGURE 10-2 Helical shaft-mount reducer (Power Transmission Solutions, a business unit of Emerson Industrial Automation)

YOU ARE THE DESIGNER

The gear drives that were designed in Chapter 9 all assumed that spur gears would be used to accomplish the speed reduction or speed increase between the input and the output of the drive. But many other types of gears could have been used. Assume that you are the designer of the drive for the wood chipper described in Example Problem 9-7. How would the design be different if helical gears were used instead of spur gears? What forces would be created and transferred to the shafts carrying the gears and to the bearings carrying the shafts? Would you be able to use smaller

gears? How is the geometry of helical gears different from that of spur gears?

Rather than having the input and output shafts parallel as they were in designs up to this time, how can we design drives that deliver power to an output shaft at right angles to the input shaft? What special analysis techniques are applied to bevel gears and wormgearing?

The information in this chapter will help you answer these and other questions. ■

10-1 OBJECTIVES OF THIS CHAPTER

After completing this chapter, you will be able to:

1. Describe the geometry of helical gears and compute the dimensions of key features.
2. Compute the forces exerted by one helical gear on its mating gear.
3. Compute the stress due to bending in helical gear teeth and specify suitable materials to withstand such stresses.
4. Design helical gears for surface durability.
5. Describe the geometry of bevel gears and compute the dimensions of key features.
6. Analyze the forces exerted by one bevel gear on another and show how those forces are transferred to the shafts carrying the gears.
7. Design and analyze bevel gear teeth for strength and surface durability.

8. Describe the geometry of worms and wormgears.
9. Compute the forces created by a wormgear drive system and analyze their effect on the shafts carrying the worm and the wormgear.
10. Compute the efficiency of wormgear drives.
11. Design and analyze wormgear drives to be safe for bending strength and wear.

References at the end of the chapter are recommended for additional information for design and application of helical gears, bevel gears, and wormgearing.

10-2 FORCES ON HELICAL GEAR TEETH

Figure 10-3 shows a drawing of two helical gears in mesh and designed to be mounted on parallel shafts. This is the basic configuration that we analyze in this chapter. Refer to Figure 10-4 for a representation of the force system that acts between the teeth of two helical


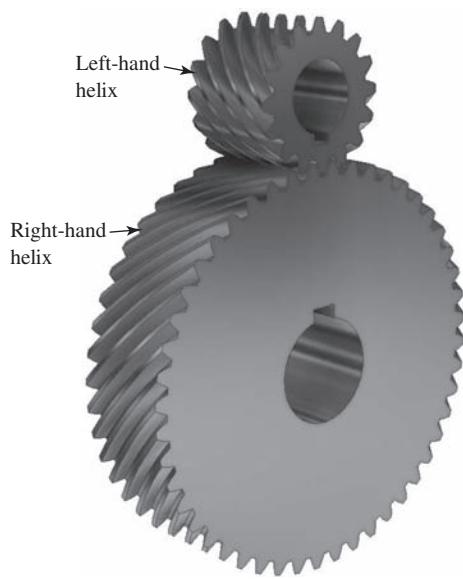


FIGURE 10-3 Helical gears in mesh. These gears have a 45° helix angle


gears in mesh. Also, it is useful to review Section 8-7 in Chapter 8 on *Helical Gear Geometry*.

We now define the array of forces acting on helical gear teeth as shown in Figure 10-4.

- W_N is the *true normal force* that acts perpendicular to the face of the tooth in the plane normal to the surface of the tooth. We seldom need to use the value of W_N because its three orthogonal components, defined next, are used in the analyses performed for helical

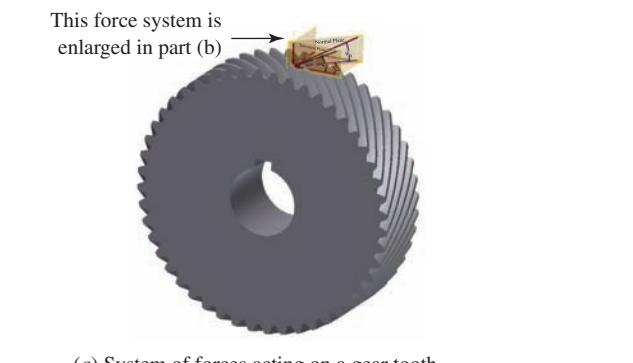

(a) System of forces acting on a gear tooth

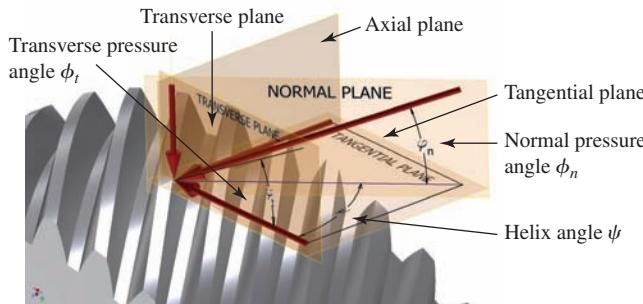

(b) Normal force and its three components

FIGURE 10-4 Helical gear geometry showing forces acting on gear teeth

gears. The values for the orthogonal components depend on the following three angles that help define the geometry of the helical gear teeth:

- Normal pressure angle: ϕ_n
- Transverse pressure angle: ϕ_t
- Helix angle: ψ

For helical gears, the helix angle and one of the other two are specified. The third angle can be computed from

$$\tan \phi_n = \tan \phi_t \cos \psi \quad (10-1)$$

- W_t is the *tangential force* that acts in the transverse plane and tangent to the pitch circle of the helical gear and that causes the torque to be transmitted from the driver to the driven gear. Therefore, this force is often called the *transmitted force*. It is functionally similar to W_t used in the analysis of spur gears in Chapters 8 and 9. We can compute its value from the same equations, as follows:

If the torque being transmitted (T) and the size of the gear (D) are known,

▷ Tangential Force

$$W_t = T/(D/2) \quad (10-2)$$

If the power being transmitted (P) and the rotational speed (n) are known,

$$T = (P/n) \quad (10-3)$$

Power, torque, and forces for the U.S. unit system: Here we bring concepts and equations from Section 9-3 developed for spur gears and apply them for helical gears. *These are unit-specific equations.*

When power, P , is expressed in hp, rotational speed, n , is in rpm, and diameters, D , are in inches:

$$\text{Torque: } T = 63\,000(P)/n \text{ lb} \cdot \text{in} \quad (10-4)$$

$$\text{Pitch line speed: } v_t = \pi D n / 12 \text{ ft/min} \quad (10-5)$$

$$\text{Tangential force: } W_t = (126\,000)(P)/[(n)(D)] \text{ lb} \quad (10-6)$$

$$\text{Or: } W_t = (33\,000)(P)/v_t \text{ lb} \quad (10-7)$$

Power, torque, and forces for the SI metric unit system: Again, bringing concepts and equations from Sections 9-3 and 9-10 developed for spur gears, we apply them for helical gears. *These are unit-specific equations.*

When power, P , is expressed in kW, rotational speed, n , is in rpm, and diameters, D , are in mm:

$$\text{Torque: } T = 9549(P)/n \text{ N} \cdot \text{m} \quad (10-4M)$$

$$\text{Pitch line speed: } v_t = \pi D n / 60\,000 \text{ m/s} \quad (10-5M)$$

$$\text{Tangential force: } W_t = (19\,099)(P)/[(n)(D)] \text{ N} \quad (10-6M)$$

$$\text{Or: } W_t = (1000)(P)/v_t \text{ N} \quad (10-7M)$$

The value of the tangential load is the most fundamental of the three orthogonal components of the true normal force. The calculation of the bending stress number and the contact stress number of the gear teeth depends on W_t .

- W_r is the *radial force* that acts toward the center of the gear perpendicular to the pitch circle and to the tangential force. It tends to push the two gears apart. As can be seen in Figure 10–4(b)

◊ Radial Force

$$W_r = W_t \tan \phi_t \quad (10-8)$$

- where ϕ_t = transverse pressure angle for the helical teeth
- W_x is the *axial force* that acts parallel to the axis of the gear and causes a thrust load that must be resisted by the bearings carrying the shaft. With the tangential force known, the axial force is computed from

◊ Axial Force

$$W_x = W_t \tan \psi \quad (10-9)$$

Example Problem 10-1

A helical gear has a normal diametral pitch, P_{nd} , of 8, a normal pressure angle of 20° , 32 teeth, a face width of 3.00 in, and a helix angle of 15° . Compute the diametral pitch, the transverse pressure angle, and the pitch diameter. If the gear is rotating at 650 rpm while transmitting 7.50 hp, compute the pitch line speed, the tangential force, the axial force, and the radial force.

Solution Diametral Pitch:

$$P_d = P_{nd} \cos \psi = 8 \cos (15^\circ) = 7.727$$

Transverse Pressure Angle: [Equation (10-1)]

$$\phi_t = \tan^{-1}(\tan \phi_n / \cos \psi)$$

$$\phi_t = \tan^{-1}[\tan(20^\circ) / \cos(15^\circ)] = 20.65^\circ$$

Pitch Diameter:

$$D = N/P_d = 32/7.727 = 4.141 \text{ in}$$

Pitch Line Speed, v_t : [Equation (10-5)]

$$v_t = \pi D n / 12 = \pi(4.141)(650) / 12 = 704.7 \text{ ft/min}$$

Tangential Force, W_t : [Equation (10-7)]

$$W_t = 33\,000(P)/v_t = 33\,000(7.5)/704.7 = 351 \text{ lb}$$

Axial Force, W_x : [Equation (10-9)]

$$W_x = W_t \tan \psi = 351 \tan(15^\circ) = 94 \text{ lb}$$

Radial Force, W_r : [Equation (10-8)]

$$W_r = W_t \tan \phi_t = 351 \tan(20.65^\circ) = 132 \text{ lb}$$

The following example problem illustrates similar calculations for the SI metric system.

Example Problem 10-2

A helical gear has a normal module of 3 mm, a normal pressure angle of 25° , a helix angle of 22° , 32 teeth, and a face width of 75 mm. Compute the transverse module, the transverse pressure angle, and the pitch diameter. Then, if the gear is rotating at 650 rpm while transmitting 5.0 kW of power, compute the pitch line speed, the tangential force, the axial force, and the radial force.

Solution Transverse Module:

$$m_n = m \cos \psi$$

$$m = m_n / \cos \psi = 3.00 \text{ mm} / \cos 22^\circ = 3.236 \text{ mm}$$

Transverse Pressure Angle: [Equation (10-1)]

$$\phi_t = \tan^{-1}(\tan \phi_n / \cos \psi) = \tan^{-1}[\tan(25^\circ) / \cos(22^\circ)] = 23.38^\circ$$

Pitch Diameter: $D = mN = (3.236 \text{ mm})(32) = 103.54 \text{ mm}$

Pitch Line Speed: [Equation (10–5M)]

$$v_t = \pi Dn/(60\,000) = \pi(103.54 \text{ mm})(650 \text{ rpm})/(60\,000) = 3.524 \text{ m/s}$$

Tangential Force: [Equation (10–6M)]

$$W_t = (1000)(P)/v_t = (1000)(5.0 \text{ kW})/(3.524 \text{ m/s}) = 1419 \text{ N}$$

Axial Force: [Equation (10–9)]

$$W_x = W_t \tan \psi = (1419 \text{ N}) \tan(22^\circ) = 573.3 \text{ N}$$

Radial Force: [Equation (10–8)]

$$W_r = W_t \tan \phi_t = (1419 \text{ N}) \tan(23.38^\circ) = 613.5 \text{ N}$$

10-3 STRESSES IN HELICAL GEAR TEETH

We will use the same basic equation for computing the bending stress number for helical gear teeth as we did for spur gear teeth in Chapter 9, given in Equation (9–16) and repeated here:

$$s_t = \frac{W_t P_d}{FJ} K_o K_s K_m K_B K_v$$

Figures 10–5 to 10–7 show the values for the geometry factor, J , for helical gear teeth with 15° , 20° , and 22° normal pressure angles, respectively.¹ The K factors are the same as those used for spur gears. See References 9 and 18 and the following locations for values:

K_o = overload factor (Table 9–1)

K_s = size factor (Table 9–2)

K_m = load-distribution factor [Figures 9–12 and 9–13 and Equation (9–17)]

K_B = rim thickness factor (Figure 9–14)

K_v = dynamic factor (Figure 9–16)

For design, a material must be specified that has an allowable bending stress number, s_{at} , greater than the computed bending stress number, s_t . Design values of s_{at} can be found in:

Figure 9–18: Steel, through-hardened, Grades 1 and 2

Table 9–9: Case-hardened steels

Table 9–10: Cast iron and bronze

(See also Reference 11 and 17–21.) The data for steel, iron, and bronze apply to a design life of 10^7 cycles at a reliability of 99% (fewer than one failure in 100). If other values for design life or reliability are desired, the allowable stress can be modified using the procedure described in Section 9–8.

10-4 PITTING RESISTANCE FOR HELICAL GEAR TEETH

Pitting resistance for helical gear teeth is evaluated using the same procedure as that discussed in Chapter 9 for spur gears. Equation (9–23) is repeated here:

$$s_c = C_p \sqrt{\frac{W_t K_o K_s K_m K_v}{FD_p I}} \quad (9-23)$$

All of the factors are the same for helical gears except the geometry factor for pitting resistance, I . The values for C_p are found in Table 9–7. Note that the other K factors have the same values as the K factors discussed and identified in Section 10–3.


Because of the larger variety of geometric features needed to define the form of helical gears, it is not reasonable to reproduce all of the necessary tables of values or the complete formulas for computing I . Values change with the gear ratio, the number of teeth in the pinion, the tooth form, the helix angle, and the specific values for addendum, whole depth, and fillet radius. See References 6 and 13 for extensive discussions about the procedures. To facilitate problem solving in this book, Tables 10–1 and 10–2 give a few values for I .

For design, when the computed contact stress number is known, a material must be specified that has an

¹Figures 10–5 to 10–7:

Graphs for the geometry factor, J , for helical gears have been taken from AGMA Standard 218.01-1982, *Standard for Rating the Pitting Resistance and Bending Strength of Spur and Helical Involute Gear Teeth*, with the permission of the publisher, American Gear Manufacturers Association, 1001 North Fairfax Street, 5th floor, Alexandria, VA 22314. This standard has been superseded by two standards: (1) Standard 908-B89 (R 1999), *Geometry Factors for Determining the Pitting Resistance and Bending Strength of Spur, Helical,*

and Herringbone Gear Teeth, 1999 and (2) Standard 2001-D04, *Fundamental Rating Factors and Calculation Methods for Involute Spur and Helical Gear Teeth*, 2004. The method of calculating the value for J has not been changed. However, the new standards do not contain the graphs. Users are cautioned to ensure that geometry factors for a given design conform to the specific cutter geometry used to manufacture the gears. Standards 908-B89 (R 1999) and 2001-D04 should be consulted for the details of computing the values for J and for rating the performance of the gear teeth.

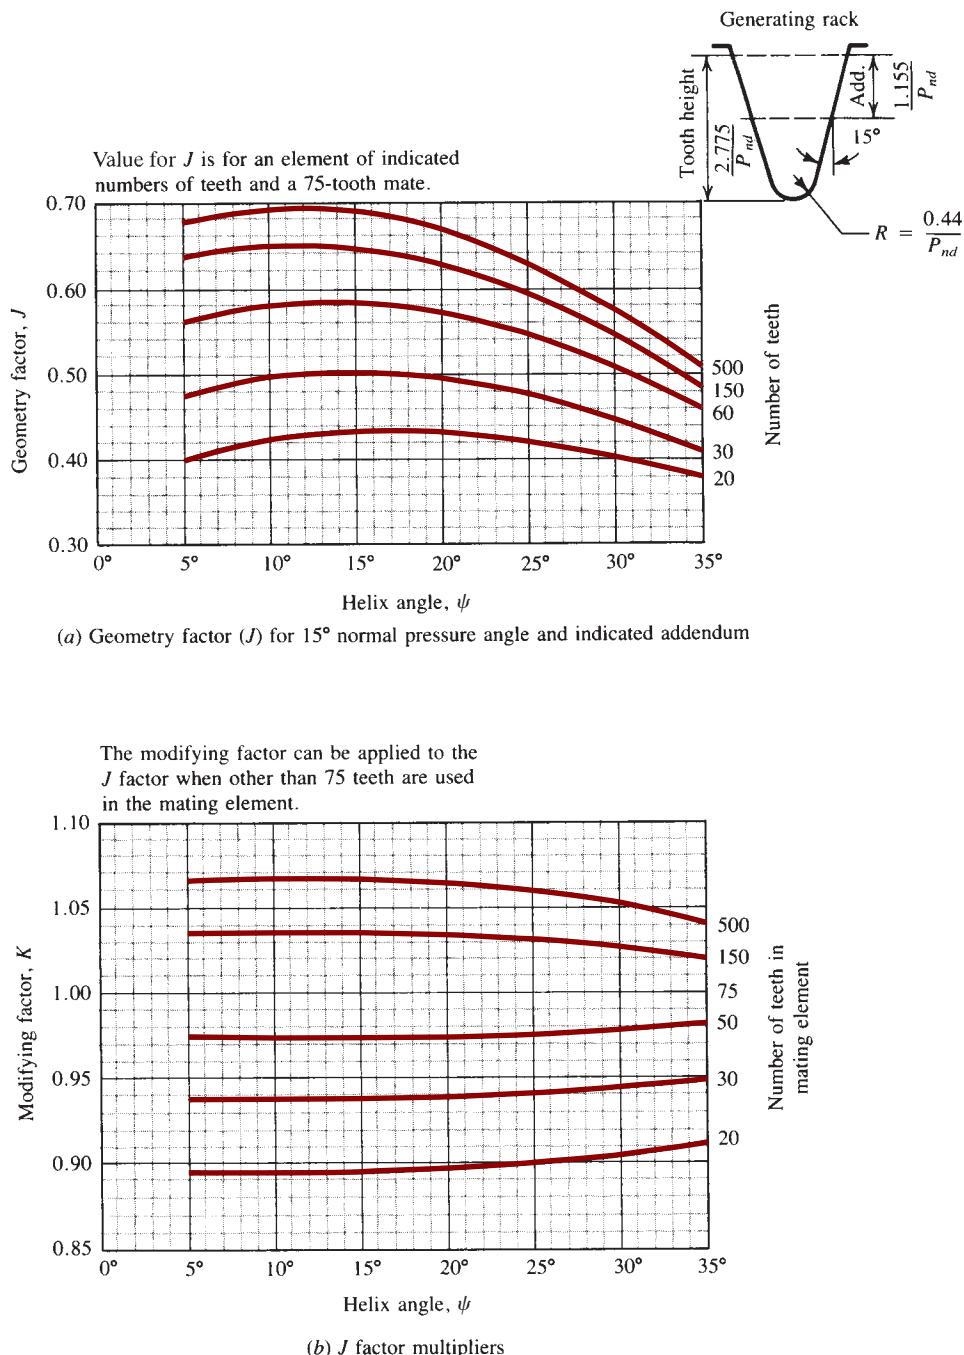FIGURE 10-5 Geometry factor (J) for 15° normal pressure angle

allowable contact stress number, s_{ac} , greater than s_c . Design values for s_{ac} can be found from the following:

Figure 9-19: Steel, through-hardened, Grades 1 and 2

Table 9-9: Steel, case-hardened, Grade 1; flame- or induction-hardened, or carburized

Figure 9-10: Cast iron and bronze

The data from these sources apply to a design life of 10^7 cycles at a reliability of 99% (fewer than one failure

in 100). If other values for design life or reliability are desired, or if a service factor is to be applied, the allowable contact stress number can be modified using the procedure described in Section 9-8.

10-5 DESIGN OF HELICAL GEARS

The example problem that follows illustrates the procedure to design helical gears.

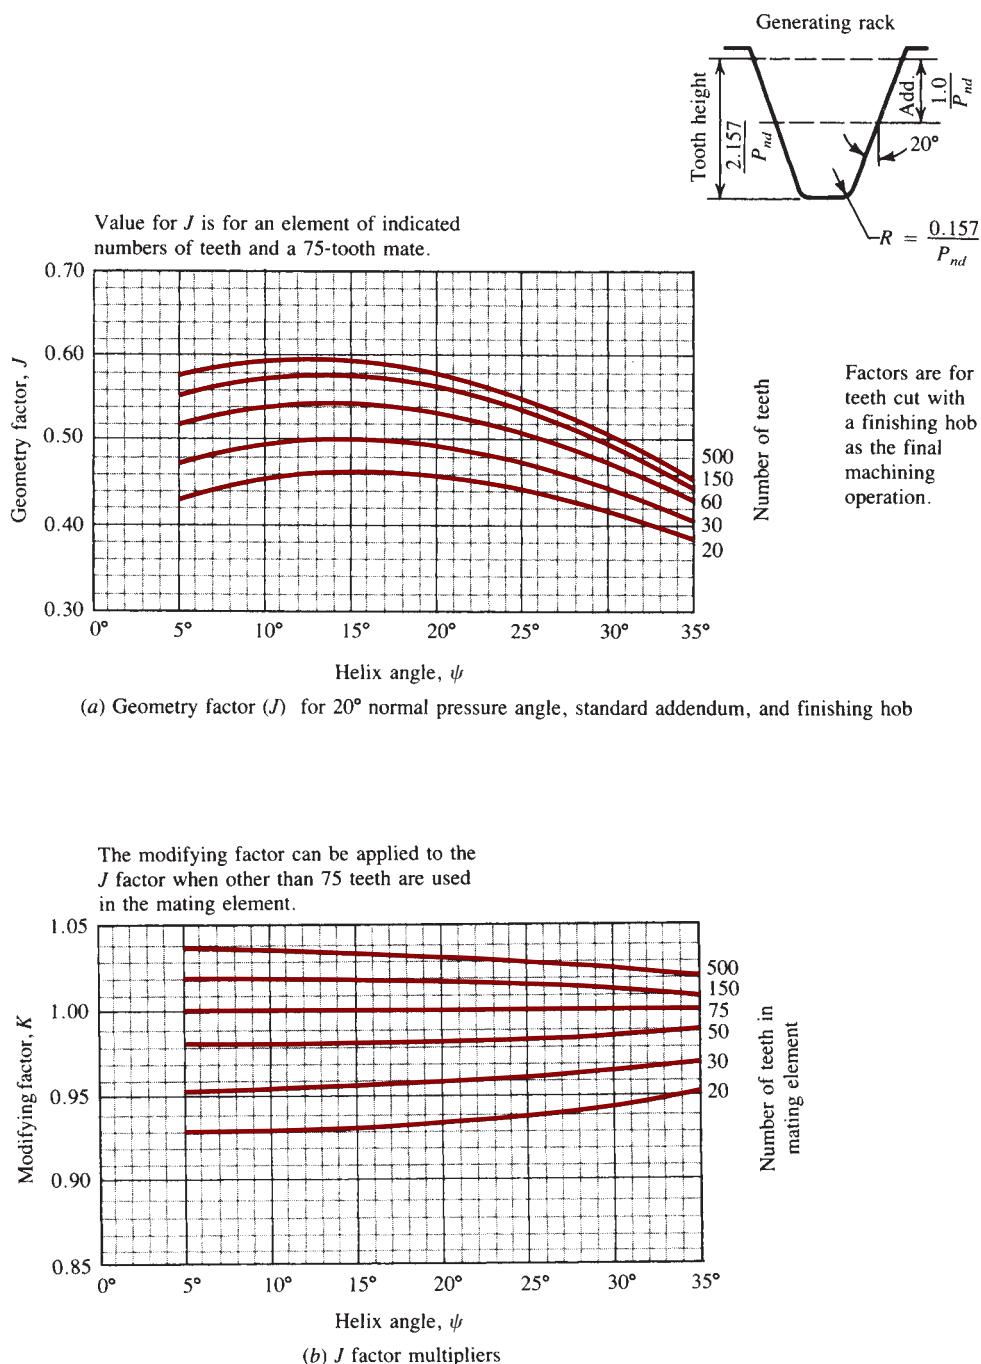


FIGURE 10-6 Geometry factor (J) for 20° normal pressure angle


Example Problem 10-3 A pair of helical gears for a milling machine drive is to transmit 65 hp with a pinion speed of 3450 rpm and a gear speed of 1100 rpm. The power is from an electric motor. Design the gears.

Solution Of course, there are several possible solutions. Here is one. Let's try a normal diametral pitch of 12, 24 teeth in the pinion, a helix angle of 15°, a normal pressure angle of 20°, and a quality number of A9.

Now compute the transverse diametral pitch, the axial pitch, the transverse pressure angle, and the pitch diameter. Then we will choose a face width that will give at least two axial pitches to ensure true helical action.

$$P_d = P_{dn} \cos \psi = 12 \cos(15^\circ) = 11.59$$

$$P_x = \frac{\pi}{P_d \tan \psi} = \frac{\pi}{11.59 \tan(15^\circ)} = 1.012 \text{ in}$$

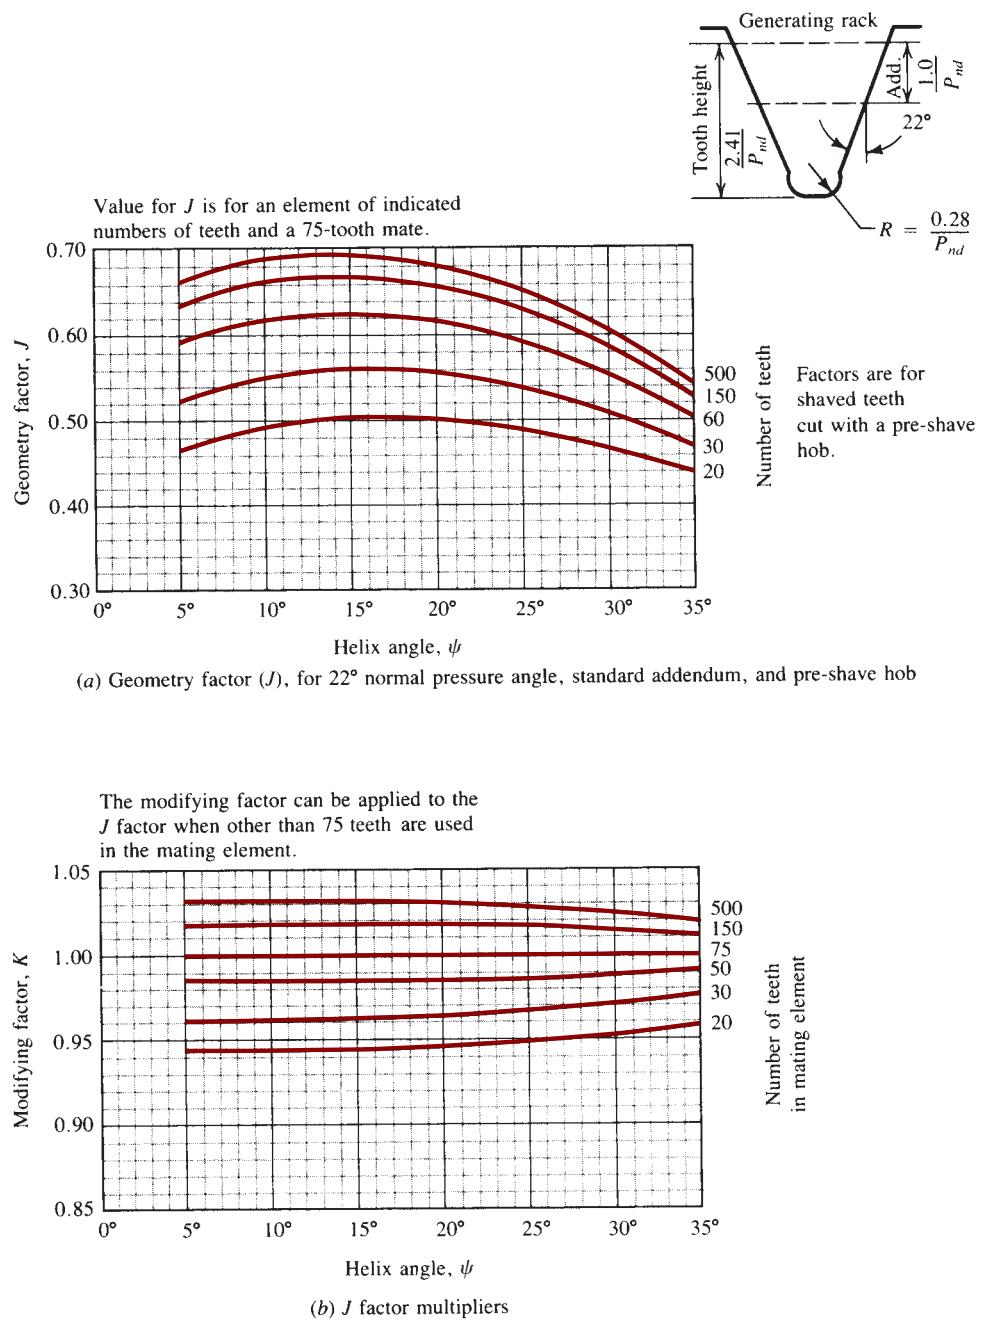FIGURE 10-7 Geometry factor (J) for 22° normal pressure angle

$$\phi_t = \tan^{-1}(\tan \phi_n / \cos \psi) = \tan^{-1}[\tan(20^\circ) / \cos(15^\circ)] = 20.65^\circ$$

$$D_p = N_p / P_d = 24 / 11.59 = 2.071 \text{ in}$$

$$F = 2P_x = 2(1.012) = 2.024 \text{ in} \quad (\text{nominal face width})$$

Let's use 2.25 in, a more convenient value. The pitch line speed and the transmitted load are

$$v_t = \pi D_p n / 12 = \pi(2.071)(3450) / 12 = 1871 \text{ ft/min}$$

$$W_t = 33,000(\text{hp}) / v_t = (33,000)(65) / 1871 = 1146 \text{ lb}$$

Now we can calculate the number of teeth in the gear:

$$VR = N_G / N_P = n_P / n_G = 3450 / 1100 = 3.14$$

$$N_G = N_P (VR) = 24(3.14) = 75 \text{ teeth} \quad (\text{integer value})$$

TABLE 10-1 Geometry Factors for Pitting Resistance, I , for Helical Gears with 20° Normal Pressure Angle and Standard Addendum**A. Helix angle $\psi = 15.0^\circ$**

| Gear teeth | Pinion teeth | | | | |
|------------|--------------|-------|-------|-------|-------|
| | 17 | 21 | 26 | 35 | 55 |
| 17 | 0.124 | | | | |
| 21 | 0.139 | 0.128 | | | |
| 26 | 0.154 | 0.143 | 0.132 | | |
| 35 | 0.175 | 0.165 | 0.154 | 0.137 | |
| 55 | 0.204 | 0.196 | 0.187 | 0.171 | 0.143 |
| 135 | 0.244 | 0.241 | 0.237 | 0.229 | 0.209 |

B. Helix angle $\psi = 25.0^\circ$

| Gear teeth | Pinion teeth | | | | | |
|------------|--------------|-------|-------|-------|-------|-------|
| | 14 | 17 | 21 | 26 | 35 | 55 |
| 14 | 0.123 | | | | | |
| 17 | 0.137 | 0.126 | | | | |
| 21 | 0.152 | 0.142 | 0.130 | | | |
| 26 | 0.167 | 0.157 | 0.146 | 0.134 | | |
| 35 | 0.187 | 0.178 | 0.168 | 0.156 | 0.138 | |
| 55 | 0.213 | 0.207 | 0.199 | 0.189 | 0.173 | 0.144 |
| 135 | 0.248 | 0.247 | 0.244 | 0.239 | 0.230 | 0.210 |

Source: Extracted from AGMA Standard 908-B89 (R 1999), *Geometry Factors for Determining the Pitting Resistance and Bending Strength of Spur, Helical and Herringbone Gear Teeth*, with the permission of the publisher, American Gear Manufacturers Association, 1001 North Fairfax Street, 5th floor, Alexandria, VA 22314.

The values for the factors in Equation (9–6) must now be determined to enable the calculation of the bending stress. The geometry factor for the pinion is found in Figure 10–6 for 24 teeth in the pinion and 75 teeth in the gear: $J_P = 0.48$. The value of J_G will be greater than the value of J_P , resulting in a lower stress in the gear.

The K factors are as follows:

$$K_o = \text{overload factor} = 1.5 \text{ (moderate shock)}$$

$$K_s = \text{size factor} = 1.0$$

$$K_m = \text{load-distribution factor} = 1.26 \text{ for } F/D_P = 1.09 \text{ and commercial-quality, enclosed gearing}$$

$$K_B = \text{rim thickness factor} = 1.0 \text{ (solid gears)}$$

$$K_v = \text{dynamic factor} = 1.35 \text{ for } A_v = 9 \text{ and } v_t = 1871 \text{ ft/min}$$

The bending stress in the pinion can now be computed:

$$s_{tP} = \frac{W_t P_d}{F J_P} K_o K_s K_m K_B K_v$$

$$s_{tP} = \frac{(1146)(11.59)}{(2.25)(0.48)} (1.50)(1.0)(1.26)(1.0)(1.35) = 31\,400 \text{ psi}$$

From Figure 9–18, a Grade 1 steel with a hardness of approximately 250 HB would be required. Let's proceed to the design for pitting resistance.

Use Equation (9–23):

$$s_c = C_p \sqrt{\frac{W_t K_o K_s K_m K_v}{F D_p I}}$$

TABLE 10-2 Geometry Factors for Pitting Resistance, I , for Helical Gears with 25° Normal Pressure Angle and Standard Addendum**A. Helix angle $\psi = 15.0^\circ$**

| Gear teeth | Pinion teeth | | | | | |
|------------|--------------|-------|-------|-------|-------|-------|
| | 14 | 17 | 21 | 26 | 35 | 55 |
| 14 | 0.130 | | | | | |
| 17 | 0.144 | 0.133 | | | | |
| 21 | 0.160 | 0.149 | 0.137 | | | |
| 26 | 0.175 | 0.165 | 0.153 | 0.140 | | |
| 35 | 0.195 | 0.186 | 0.175 | 0.163 | 0.143 | |
| 55 | 0.222 | 0.215 | 0.206 | 0.195 | 0.178 | 0.148 |
| 135 | 0.257 | 0.255 | 0.251 | 0.246 | 0.236 | 0.214 |

B. Helix angle $\psi = 25.0^\circ$

| Gear teeth | Pinion teeth | | | | | |
|------------|--------------|-------|-------|-------|-------|-------|
| | 12 | 14 | 17 | 21 | 26 | 35 |
| 12 | 0.129 | | | | | |
| 14 | 0.141 | 0.132 | | | | |
| 17 | 0.155 | 0.146 | 0.135 | | | |
| 21 | 0.170 | 0.162 | 0.151 | 0.138 | | |
| 26 | 0.185 | 0.177 | 0.166 | 0.154 | 0.141 | |
| 35 | 0.203 | 0.197 | 0.188 | 0.176 | 0.163 | 0.144 |
| 55 | 0.227 | 0.223 | 0.216 | 0.207 | 0.196 | 0.178 |
| 135 | 0.259 | 0.258 | 0.255 | 0.251 | 0.246 | 0.235 |

Source: Extracted from AGMA Standard 908-B89, *Geometry Factors for Determining the Pitting Resistance and Bending Strength of Spur, Helical and Herringbone Gear Teeth*, with the permission of the publisher, American Gear Manufacturers Association, 1001 North Fairfax Street, 5th floor, Alexandria, VA 22314.

For two steel gears, $C_p = 2300$. Rough interpolation from the data in Table 10-1 for $N_P = 24$ and $N_G = 75$ gives $I = 0.202$. It is recommended that the computational procedure described in the AGMA standards be used to compute a more precise value for critical work. The contact stress is then

$$s_c = 2300 \sqrt{\frac{(1146)(1.50)(1.0)(1.26)(1.35)}{(2.25)(2.071)(0.202)}} = 128\,200 \text{ psi}$$

It is obvious that the contact stress governs this design. Let's adjust the solution for a higher reliability and to account for the expected number of cycles of operation. Certain design decisions must be made. For example, consider the following:

Design for a reliability of 0.999 (less than one failure in 1000): $K_R = 1.25$ (Table 9-11). Design life: Let's design for 10 000 h of life as suggested in Table 9-12 for multipurpose gearing. Then, using Equation (9-27), we can compute the number of cycles of loading. For the pinion rotating at 3450 rpm with one cycle of loading per revolution,

$$N_c = (60)(L)(n)(q) = (60)(10\,000)(3450)(1.0) = 2.1 \times 10^9 \text{ cycles}$$

From Figure 9-22, we find that $Z_N = 0.89$.

No unusual conditions seem to exist in this application beyond those already considered in the various K factors. Therefore, we use a service factor, SF , of 1.00.

We can use Equation (9-27) to apply these factors.

$$\frac{K_R(SF)}{Z_N} s_c = s_{ac} = \frac{(1.25)(1.00)}{(0.89)} (128\,200 \text{ psi}) = 180\,000 \text{ psi}$$

Table 9–9 indicates that Grade 1 steel, case hardened by carburizing, would be suitable. From Appendix 5, let's specify AISI 4320 SOQT 450, having a case hardness of HRC 59 and a core hardness of 415 HB. This should be satisfactory for both bending and pitting resistance. Both the pinion and the gear should be of this material.

10-6 FORCES ON STRAIGHT BEVEL GEARS

Review Section 8–8 and Figure 8–17 for the geometry of bevel gears. Also see References 1, 10, and 12.

Because of the conical shape of bevel gears and because of the involute-tooth form, a three-component set of forces acts on bevel gear teeth. Using notation similar to that for helical gears, we will compute the tangential force, W_t ; the radial force, W_r ; and the axial force, W_x . It is assumed that the three forces act concurrently at the midface of the teeth and on the pitch cone (see Figure 10–8). Although the actual point of application of the resultant force is a little displaced from the middle, no serious error results.

The tangential force acts tangential to the pitch cone and is the force that produces the torque on the pinion and the gear. The torque can be computed

from the known power transmitted and the rotational speed:

$$T = 63\,000 P/n$$

Then, using the pinion, for example, the transmitted load is

$$W_{tP} = T/r_m \quad (10-10)$$

where r_m = mean radius of the pinion.

The value of r_m can be computed from

$$r_m = d/2 - (F/2) \sin \gamma \quad (10-11)$$

Remember that the pitch diameter, d , is measured to the pitch line of the tooth at its large end. The angle, γ , is the pitch cone angle for the pinion as shown in Figure 10–8(a). The radial load acts toward the center of the pinion, perpendicular to its axis, causing bending of the pinion shaft. Thus,

$$W_{rP} = W_t \tan \phi \cos \gamma \quad (10-12)$$

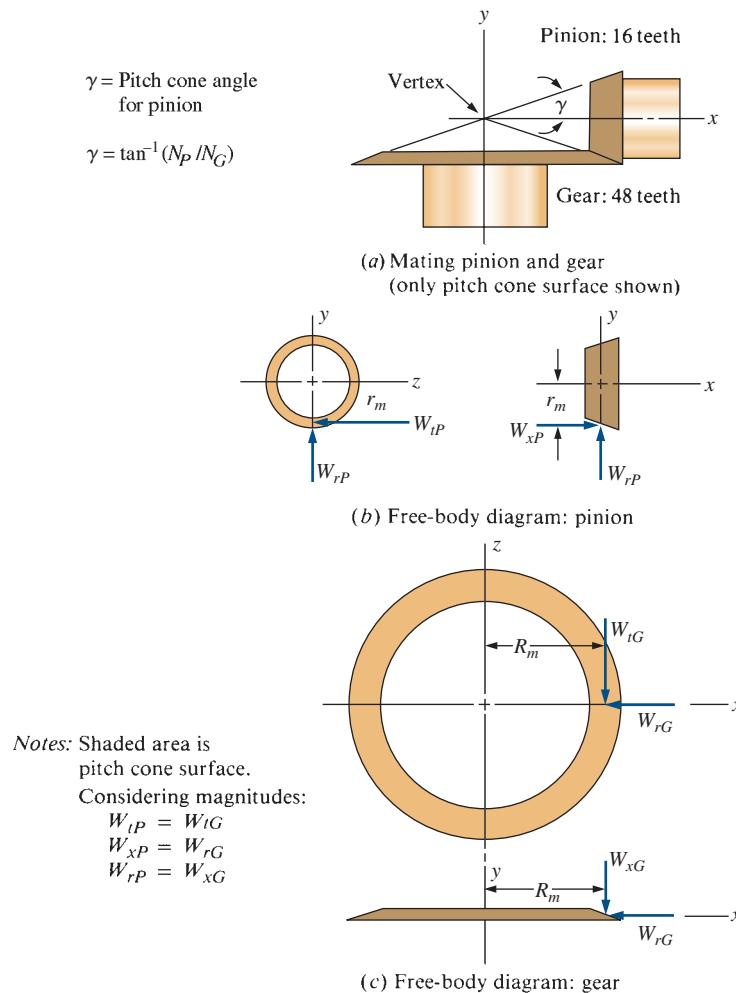


FIGURE 10–8 Forces on bevel gears

The angle, ϕ , is the pressure angle for the teeth.

The axial load acts parallel to the axis of the pinion, tending to push it away from the mating gear. It causes a thrust load on the shaft bearings. It also produces a bending moment on the shaft because it acts at the distance from the axis equal to the mean radius of the gear. Thus,

$$W_{xP} = W_t \tan \phi \sin \gamma \quad (10-13)$$

Example Problem 10-4

For the gear pair described in Example Problem 8-3, calculate the forces on the pinion and the gear if they are transmitting 2.50 hp with a pinion speed of 600 rpm. The geometry factors computed in Example Problem 8-3 apply. The data are summarized here.

Summary of Pertinent Results from Example Problem 8-3 and Given Data

Number of teeth in the pinion: $N_P = 16$

Number of teeth in the gear: $N_G = 48$

Diametral pitch: $P_d = 8$

Pitch diameter of pinion: $d = 2.000$ in

Pressure angle: $\phi = 20^\circ$

Pinion pitch cone angle: $\gamma = 18.43^\circ$

Gear pitch cone angle: $\Gamma = 71.57^\circ$

Face width: $F = 1.00$ in

Rotational speed of pinion: $n_P = 600$ rpm

Power transmitted: $P = 2.50$ hp

Solution Forces on the pinion are described by the following equations:

$$W_t = T/r_m$$

But

$$T_p = 63\,000(P)/n_P = [63\,000(2.50)]/600 = 263 \text{ lb}\cdot\text{in}$$

$$r_m = d/2 - (F/2) \sin \gamma$$

$$r_m = (2.000/2) - (1.00/2) \sin (18.43^\circ) = 0.84 \text{ in}$$

Then

$$W_t = T_p/r_m = 263 \text{ lb}\cdot\text{in}/0.84 \text{ in} = 313 \text{ lb}$$

$$W_r = W_t \tan \phi \cos \gamma = 313 \text{ lb} \tan(20^\circ) \cos(18.43^\circ) = 108 \text{ lb}$$

$$W_x = W_t \tan \phi \sin \gamma = 313 \text{ lb} \tan(20^\circ) \sin(18.43^\circ) = 36 \text{ lb}$$

To determine the forces on the gear, first let's calculate the rotational speed of the gear:

$$n_G = n_P(N_P/N_G) = 600 \text{ rpm}(16/48) = 200 \text{ rpm}$$

Then

$$T_G = 63\,000(2.50)/200 = 788 \text{ lb}\cdot\text{in}$$

$$R_m = D/2 - (F/2) \sin \Gamma$$

$$R_m = 6.000/2 - (1.00/2) \sin(71.57^\circ) = 2.53 \text{ in}$$

$$W_t = T_G/R_m = (788 \text{ lb}\cdot\text{in})/(2.53 \text{ in}) = 313 \text{ lb}$$

$$W_r = W_t \tan \phi \cos \Gamma = 313 \text{ lb} \tan(20^\circ) \cos(71.57^\circ) = 36 \text{ lb}$$

$$W_x = W_t \tan \phi \sin \Gamma = 313 \text{ lb} \tan(20^\circ) \sin(71.57^\circ) = 108 \text{ lb}$$

The values for the forces on the gear can be calculated by the same equations shown here for the pinion, if the geometry for the gear is substituted for that of the pinion. Refer to Figure 10-8 for the relationships between the forces on the pinion and the gear in both magnitude and direction.

Note from Figure 10-8 that the forces on the pinion and the gear form an *action-reaction pair*. That is, the forces on the gear are equal to those on the pinion, but they act in the opposite direction. Also, because of the 90° orientation of the shafts, the radial force on the pinion becomes the axial thrust load on the gear, and the axial thrust load on the pinion becomes the radial load on the gear.

10-7 BEARING FORCES ON SHAFTS CARRYING BEVEL GEARS

Because of the three-dimensional force system that acts on bevel gears, the calculation of the forces on shaft bearings can be cumbersome. An example is worked out here to show the procedure. In order to obtain numerical

data, the arrangement shown in Figure 10–9 is proposed for the bevel gear pair that was the subject of Example Problems 8–3 and 10–4. The locations for the bearings are given with respect to the vertex of the two pitch cones where the shaft axes intersect.

Note that both the pinion and the gear are *straddle mounted*; that is, each gear is positioned between the supporting bearings. This is the most preferred arrangement because it usually provides the greatest rigidity and maintains the alignment of the teeth during power transmission. Care should be exercised to provide rigid mountings and stiff shafts when using bevel gears.

The arrangement of Figure 10-9 is designed so that the bearing on the right resists the axial thrust load on the pinion, and the lower bearing resists the axial thrust load on the gear.

Example Problem 10–5

Compute the reaction forces on the bearings that support the shafts carrying the bevel gear pair shown in Figure 10–9. The values of Example Problems 8–3 and 10–4 apply.

Solution

Referring to the results of Example Problem 10–4 and Figure 10–8, we have listed the forces acting on the gears:

| Force | Pinion | Gear |
|--------------|---------------------------|---------------------------|
| Tangential | $W_{tP} = 313 \text{ lb}$ | $W_{tG} = 313 \text{ lb}$ |
| Radial | $W_{rP} = 108 \text{ lb}$ | $W_{rG} = 36 \text{ lb}$ |
| Axial | $W_{xP} = 36 \text{ lb}$ | $W_{xG} = 108 \text{ lb}$ |

It is critical to be able to visualize the directions in which these forces are acting because of the three-dimensional force system. Notice in Figure 10–8 that a rectangular coordinate system has been set up. Figure 10–10 is an isometric sketch of the free-body diagrams of the pinion and the gear, simplified to represent the concurrent forces acting at the pinion/gear interface and at the bearing locations. Although the two free-body diagrams are separated for clarity, notice that you can bring them together by moving the point called *vertex* on each sketch together. This is the point in the actual gear system where the vertices of the two pitch cones lie at the same point. The two pitch points also coincide.


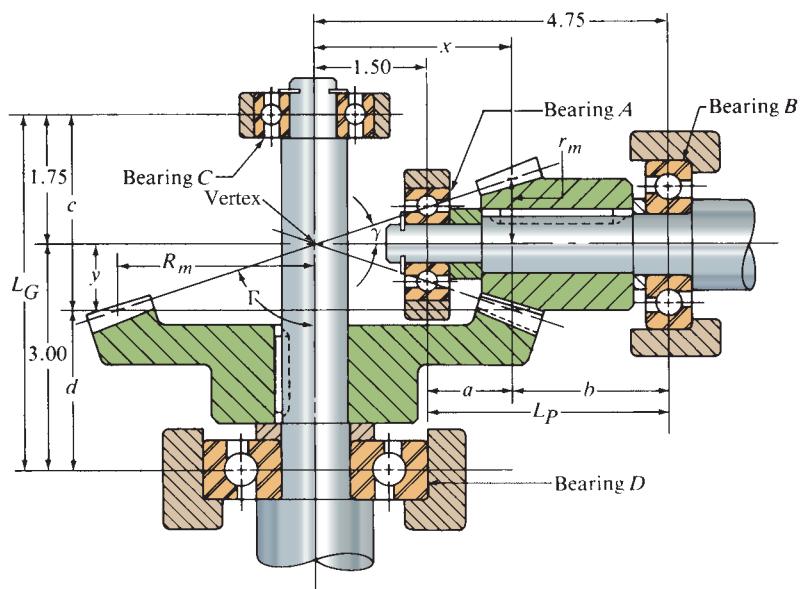


FIGURE 10-9 Layout of bevel gear pair for Example Problem 10-5

FIGURE 10-10 Free-body diagrams for pinion and gear shafts

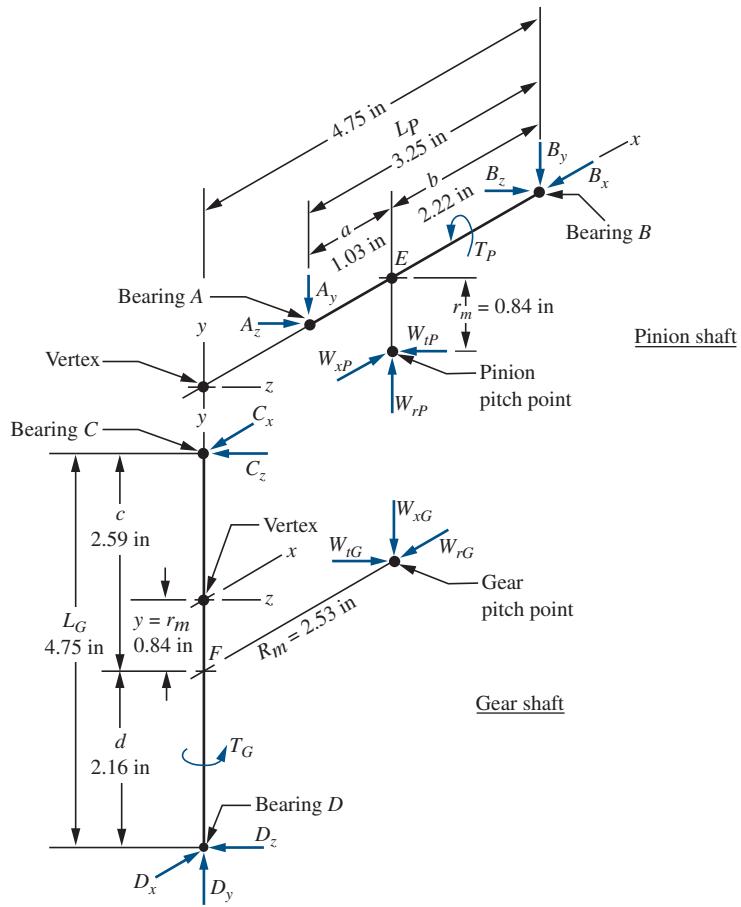

For setting up the equations of static equilibrium needed to solve for the bearing reactions, the distances a , b , c , d , L_P , and L_G are needed, as shown in Figure 10–9. These require the two dimensions labeled x and y . Note from Example Problem 10–4 that

$$x = R_m = 2.53 \text{ in}$$

$$y = r_m = 0.84 \text{ in}$$

Then

$$a = x - 1.50 = 2.53 - 1.50 = 1.03 \text{ in}$$

$$b = 4.75 - x = 4.75 - 2.53 = 2.22 \text{ in}$$

$$c = 1.75 + y = 1.75 + 0.84 = 2.59 \text{ in}$$

$$d = 3.00 - y = 3.00 - 0.84 = 2.16 \text{ in}$$

$$L_P = 4.75 - 1.50 = 3.25 \text{ in}$$

$$L_G = 1.75 + 3.00 = 4.75 \text{ in}$$

These values are shown in Figure 10–10.

To solve for the reactions, we need to consider the horizontal (x - z) and the vertical (x - y) planes separately. It may help you to look also at Figure 10–11, which breaks out the forces on the pinion shaft in these two planes. Then we can analyze each plane using the fundamental equations of equilibrium.


Bearing Reactions, Pinion Shaft: Bearings A and B

Step 1. To find B_z and A_z : In the x - z plane, only W_{tP} acts. Summing moments about A yields

$$0 = W_{tP}(a) - B_z(L_P) = 313(1.03) - B_z(3.25)$$

$$B_z = 99.2 \text{ lb}$$

FIGURE 10-11 Pinion shaft bending moments

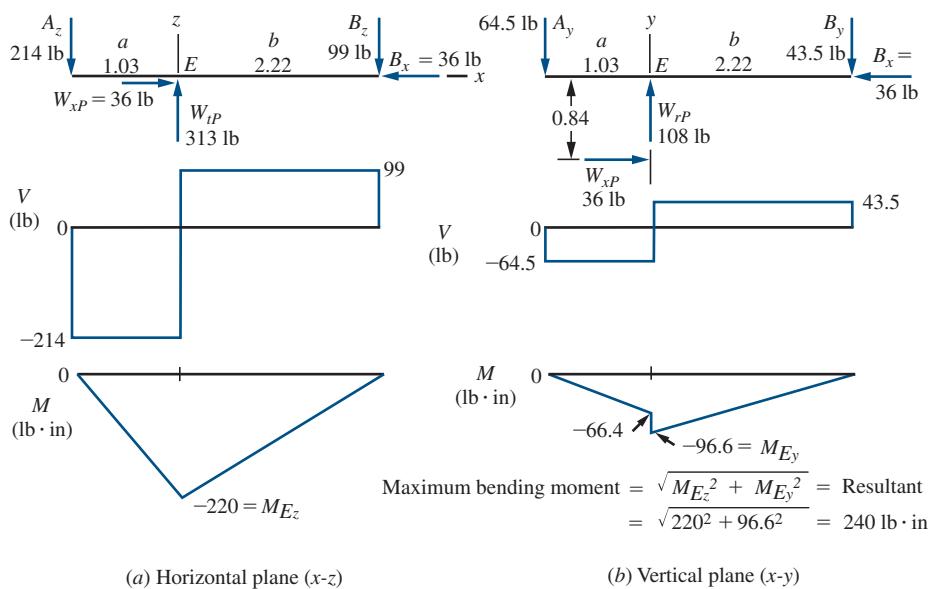(a) Horizontal plane (x - z)(b) Vertical plane (x - y)

Summing moments about B yields

$$0 = W_{tP}(b) - A_z(L_P) = 313(2.22) - A_z(3.25)$$

$$A_z = 214 \text{ lb}$$

Step 2. To find B_y and A_y : In the x - y plane, both W_{rP} and W_{xP} act. Summing moments about A yields

$$0 = w_{rP}(a) + W_{xP}(r_m) - B_y(L_P)$$

$$0 = 108(1.03) + 36(0.84) - B_y(3.25)$$

$$B_y = 43.5 \text{ lb}$$

Summing moments about B yields

$$0 = W_{rP}(b) + W_{xP}(r_m) - A_y(L_P)$$

$$0 = 108(2.22) - 36(0.84) - A_y(3.25)$$

$$A_y = 64.5 \text{ lb}$$

Step 3. To find B_x : Summing forces in the x -direction yields

$$B_x = W_{xP} = 36 \text{ lb}$$

This is the thrust force on bearing B .

Step 4. To find the total radial force on each bearing: Compute the resultant of the y - and z -components.

$$A = \sqrt{A_y^2 + A_z^2} = \sqrt{64.5^2 + 214^2} = 224 \text{ lb}$$

$$B = \sqrt{B_y^2 + B_z^2} = \sqrt{43.5^2 + 99.2^2} = 108 \text{ lb}$$

Bearing Reactions, Gear Shaft: Bearings C and D


Using similar methods, we can find the forces in Figure 10-12.

$$\left. \begin{aligned} C_z &= 142 \text{ lb} \\ C_x &= 41.1 \text{ lb} \end{aligned} \right\} C = 148 \text{ lb} \text{ (radial force on } C)$$

$$\left. \begin{aligned} D_z &= 171 \text{ lb} \\ D_x &= 77.1 \text{ lb} \end{aligned} \right\} D = 188 \text{ lb} \text{ (radial force on } D)$$

$$D_y = W_{xG} = 108 \text{ lb} \text{ (thrust force on } D)$$

FIGURE 10-12 Gear shaft bending moments

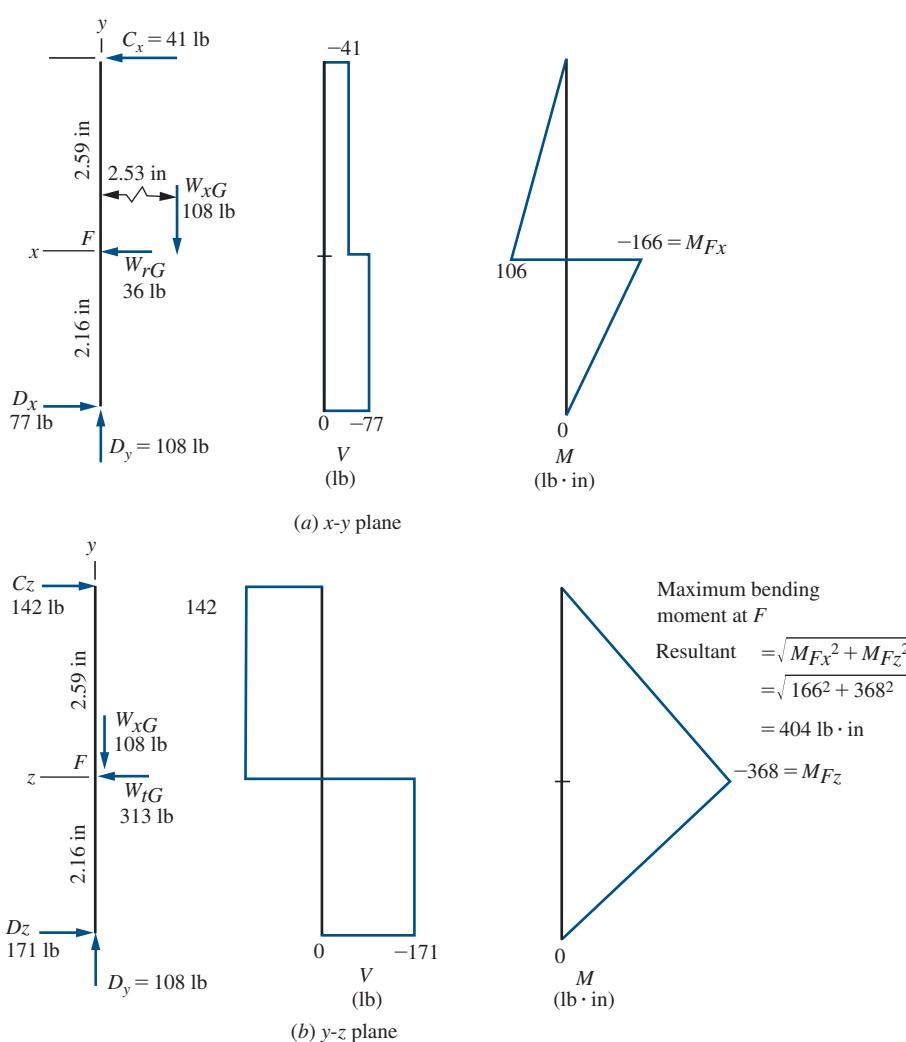

Summary In selection of the bearings for these shafts, the following capacities are required:

- Bearing A: 224-lb radial
- Bearing B: 108-lb radial; 36-lb thrust
- Bearing C: 148-lb radial
- Bearing D: 188-lb radial; 108-lb thrust

10-8 BENDING MOMENTS ON SHAFTS CARRYING BEVEL GEARS

Because there are forces acting in two planes on bevel gears, as discussed in the preceding section, there is also bending in two planes. The analysis of the shearing force and bending moment diagrams for the shafts must take this into account.

Figure 10-11 and Figure 10-12 show the resulting diagrams for the pinion and the gear shafts, respectively, for the gear pair used for Example Problems 8-3, 10-4, and 10-5. Notice that the axial thrust load on each gear provides a concentrated moment to the shaft equal to the axial load times the distance that it is offset from the axis of the shaft. Also notice that the maximum

bending moment for each shaft is the resultant of the moments in the two planes. On the pinion shaft, the maximum moment is 240 lb·in at E, where the lines of action for the radial and tangential forces intersect the shaft. Similarly, on the gear shaft, the maximum moment is 404 lb·in at F. These data are used in the shaft design (as discussed in Chapter 12).

10-9 STRESSES IN STRAIGHT BEVEL GEAR TEETH

This section generally follows AGMA Standard 2003 (Reference 10), *Rating the Pitting Resistance and Bending Strength of Generated Straight Bevel, Zero Bevel and Spiral Bevel Gear Teeth*, considered to be the

primary standard in the United States. However, only straight bevel gears are treated here. The standard presents design analysis in both the U.S. unit system based on diametral pitch, P_d , and the SI Metric unit system based on metric module, m .

This book will maintain similar notations and symbols for gear tooth features, allowable stresses, and modifying factors that were initially presented in Chapter 9 for spur gear design to facilitate the comparison of design approaches. The reader should note that Standard 2003-C10 presents design analysis in SI units using terminology from ISO standards that employ radically different symbol sets. In this book, we maintain similar notations for factors in both systems except for the basic terms, diametral pitch, P_d , and metric module, m .

Furthermore, as introduced in Chapter 9, this book makes the following assumptions:

1. The gears are operating at temperatures between 32°F and 250°F (0°C and 120°C) for which the temperature factor $K_T = 1.0$ and, therefore, it is not written in the equations for stress analysis.
2. Gear teeth are made to normal standards without special modifications. This does, however, assume that crowning of the teeth is included in the manufacturing process, typical of the bevel gear industry.
3. Both the pinion and the gear of the bevel gear set are straddle mounted as shown in Figure 10–9, providing the most rigid arrangement. If either gear is not straddle mounted, the overhung arrangement, being generally less stiff, requires the application of additional modifying factors.
4. The hardness of both the pinion and the gear are nearly equal to enable each to withstand the contact stress without pitting, allowing the use of the hardness factor, $C_H = 1.0$, and not including that factor in the equations. The standard contains significant discussion and data to modify allowable strengths when the pinion is significantly harder than the gear, an approach used by some designers to promote *wearing in* of the gear teeth by the harder pinion. Also included in the standard with the hardness factor are adjustments based on the surface roughness of the teeth that are not included in this book.
5. When case hardening is used, as is frequently done, the case has sufficient depth and the core hardness and strength are sufficiently high to avoid case crushing or subsurface failure of the core due to either bending or contact stresses. The standard includes much discussion of these factors.
6. Residual stresses in gear teeth are not considered in this section. Note that beneficial compressive residual stresses in the root area from peening processes can significantly enhance the life of gears. Conversely, residual tensile stresses can be detrimental.

Following is the discussion of bending stress and contact stress calculations along with the corresponding parameters and modification factors:

Pitch Diameter, D: An important difference in the analysis of bevel gears is the definition of pitch diameter; it is measured at the large (outer) end of the gear rather than at the middle of the teeth as it was for spur and helical gears. This difference is accommodated in the determination of the geometry factors J and I that are shown later.

Pitches: The pitch for bevel gears is defined at the outer pitch diameter and is called the *outer transverse pitch*. Calculation is the same as for spur and helical gears with the exception of the definition of pitch diameter given above.

U.S. Units: Outer transverse diametral pitch = $P_d = N/D$ (units are in^{-1} ; rarely reported)

SI Metric Units: Outer transverse metric module = $m = D/N \text{ mm}$

Tangential Force, W_t : As in Chapter 9, we will use the following unit-specific equations for torque on a gear, pitch line speed, and the resulting tangential force.

U.S. Units: Power, P , in hp; rotational speed, n , in rpm; diameters, D , in inches

$$\text{Pitch line speed} = v_t = \pi Dn/12 \text{ ft/min}$$

$$\text{Torque} = T = 63\,000 P/n \text{ lb} \cdot \text{in}$$

$$\text{Tangential force} = W_t = T/(D/2) = 126\,000 P/(Dn) \text{ lb}$$

$$\text{Or, Tangential force} = W_t = 33\,000 P/v_t \text{ lb}$$

SI Metric Units: Power, P , in kW; rotational speed, n , in rpm; diameters, D , in mm

$$\text{Pitch line speed} = v_t = \pi Dn/(60\,000) \text{ m/s}$$

$$\text{Torque} = T = 9550 P/n \text{ N} \cdot \text{m}$$

$$\text{Tangential force} = W_t = T/(D/2)$$

$$= 19.1 \times 10^6 P/(Dn) \text{ N} = 19\,100 P/(Dn) \text{ kN}$$

$$\text{Or, Tangential force} = W_t = 1000 P/v_t \text{ N} = P/v_t \text{ kN}$$

Bending Stress Number, s_t : The maximum bending stress number occurs in the root area of the teeth as it does in spur and helical gears; the equations are as follows:

$$\text{U.S. Units: } s_t = \frac{W_t P_d K_o K_s K_m K_v}{FJ} \text{ psi} \quad (10-14)$$

$$\text{SI Metric Units: } s_t = \frac{W_t K_o K_s K_m K_v}{FJm} \text{ MPa} \quad (10-14M)$$

Overload Factor, K_o : Use the same values given in Table 9–1.

Size Factor, K_s for Bending Strength: Use Figure 10–13, adapted from AGMA Standard 2003-C10.

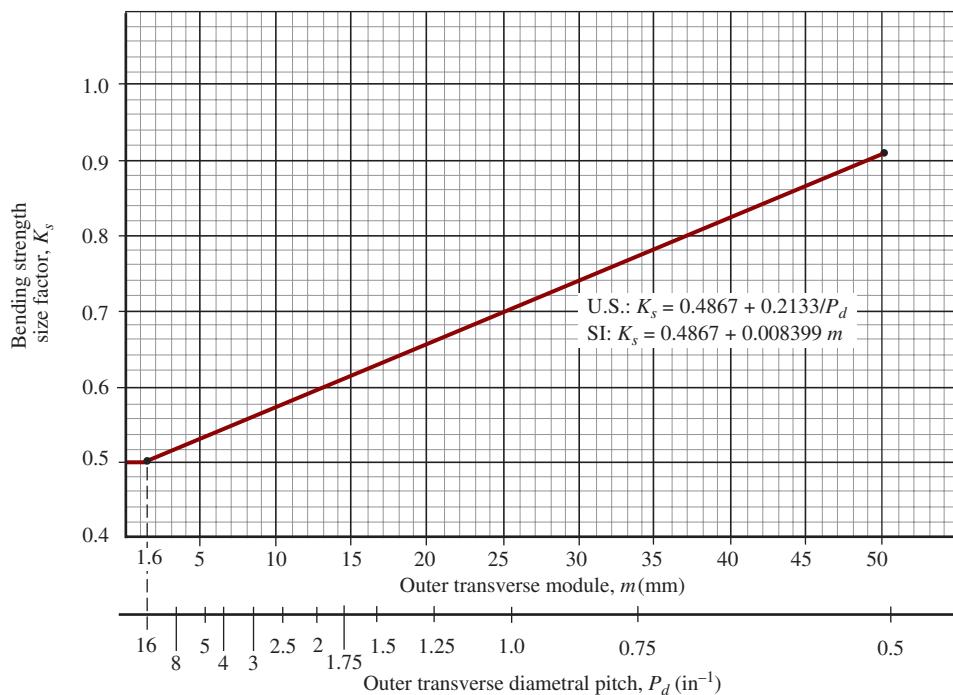


FIGURE 10-13 Size factor for bending stress, K_s , for bevel gears (Adapted from AGMA 2003-C10, *Rating the Pitting Resistance and Bending Strength of Generated Straight Bevel, Zerol Bevel and Spiral Bevel Gear Teeth*, with the permission of the publisher, American Gear Manufacturers Association, 1001 North Fairfax Street, 5th Floor, Alexandria, VA.)

For $P_d \geq 16$ ($m \leq 1.6$ mm) use $K_s = 0.50$. The equation for the sloped portion of Figure 10-13 is

$$K_s = 0.4867 + 0.2133/P_d \quad (10-15)$$

$$K_s = 0.4867 + 0.008399 m \quad (10-15M)$$

Load Distribution Factor, K_m : Typical bevel gear teeth are crowned along the profile and from end to end to ensure smooth engagement under foreseeable conditions of tooth accuracy and deflection under load. During the engagement/disengagement cycle, the contact pattern across the teeth should spread the load over the entire area of the faces. When additional misalignment occurs, this pattern is changed and the effects are more prominent with larger face widths and the manner of mounting. Use Figure 10-14 when discrete analysis of deformations is not practical. The three curves conform to the equations:

$$\text{U.S. Units: } K_m = K_{mb} + 0.0036 F^2 \quad (10-16)$$

$$\text{SI Metric Units: } K_m = K_{mb} + 5.6 \times 10^{-6} F^2 \quad (10-16M)$$

where,

$K_{mb} = 1.00$ for both gears straddle mounted

$K_{mb} = 1.10$ for one gear straddle mounted

$K_{mb} = 1.25$ for neither gear straddle mounted

Problems in this book can assume that both gears are straddle mounted unless otherwise noted. Designers

should take steps to provide a precise and rigid system comprised of the gears, shafts, bearings, and housing.

Dynamic Factor, K_v : Use the same chart shown for spur gears in Figure 9-16, based on the quality system defined in AGMA standards 2015 (Reference 5) and 2001 (Reference 9), in which quality numbers from A11 (least accurate) to A4 (most accurate) are used. Bevel gear standard AGMA 2003 (Reference 10) includes the former chart for K_v based on the Q-system of quality from Q5 (least accurate) to Q11 (most accurate). To a reasonable degree of precision for values of K_v in these two charts are compatible provided that the quality number in the A-system plus the quality number in the Q-system add to 17. For example, Q8 is similar to A9 and Q10 is similar to A7.

Geometry Factor for Bending Strength, J : Use Figure 10-15 for problems in this book. This figure is for straight-tooth bevel gears with a 20° pressure angle and a shaft angle between the shafts of the pinion and the gear of 90° . Standard AGMA 2003 (Reference 10) gives formulas from which the value for other designs can be computed when detailed geometry for the teeth is known.

Example Problem 10-6 illustrates the calculation for bending stress number for straight bevel gear teeth, using the same data from earlier problems. Then we will introduce allowable stresses and material selection to resist bending stresses.

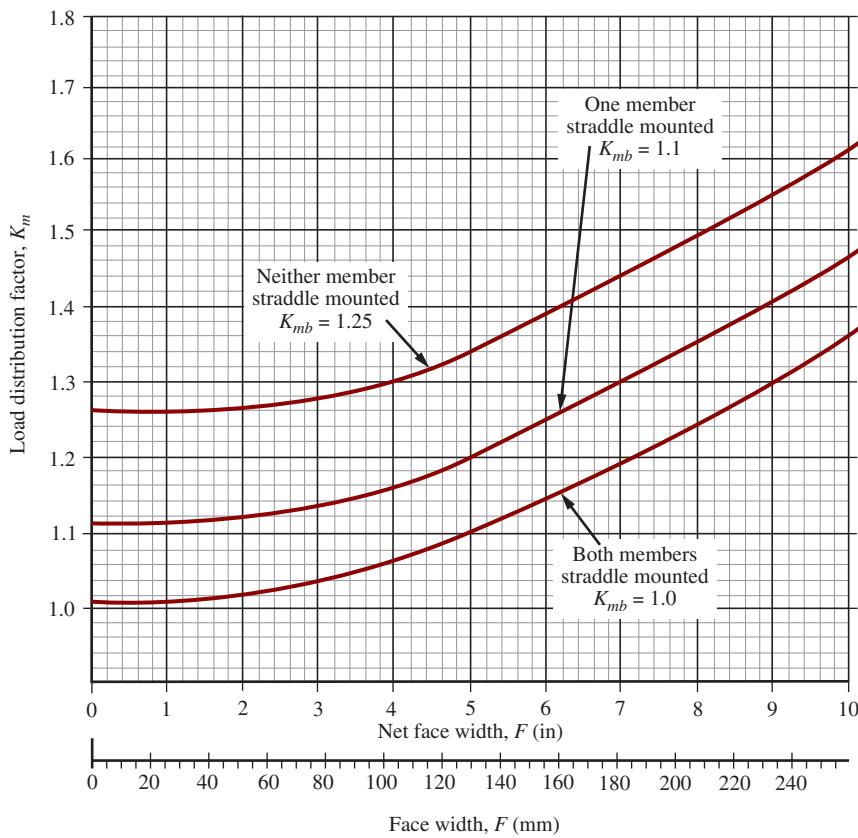


FIGURE 10-14 Load distribution factor, K_m , for crowned bevel gear teeth (Adapted from AGMA 2003-C10, *Rating the Pitting Resistance and Bending Strength of Generated Straight Bevel, Zerol Bevel and Spiral Bevel Gear Teeth*, with the permission of the publisher, American Gear Manufacturers Association, 1001 North Fairfax Street, 5th Floor, Alexandria, VA.)

Example Problem

10-6

Compute the bending stress in the teeth of the bevel pinion shown in Figure 10-9. The data from Example Problem 10-4 apply: $N_P = 16$; $N_G = 48$; $n_P = 600$ rpm; $P = 2.50$ hp; $P_d = 8$; $d = 2.000$ in; and $F = 1.00$ in. Assume that the pinion is driven by an electric motor and that the load provides moderate shock. The quality number, A_v , is to be 11.

Solution

$$W_t = \frac{T}{r} = \frac{63\,000(P)}{n_p} \frac{1}{d/2} = \frac{63\,000(2.50)}{600} \frac{1}{2.000/2} = 263 \text{ lb}$$

$$\nu_t = \pi d n_p / 12 = \pi(2.000)(600) / 12 = 314 \text{ ft/min}$$

$$K_o = 1.50 \text{ (from Table 9-1)}$$

$$K_s = 0.4867 + 0.2133/P_d = 0.4867 + 0.2133/8 = 0.513$$

$$K_m = 1.004 \text{ (both gears straddle mounted, general commercial quality)}$$

$$J_P = 0.230 \text{ (from Figure 10-5)}$$

$$K_v = 1.24 \text{ (Use } A_v = 11 \text{ and } \nu_t = 314 \text{ ft/min)}$$

(Read from Figure 9-16 or computed from equations in Table 9-6)

Then, from Equation (10-14),

$$S_t = \frac{W_t P_d K_o K_s K_m K_v}{F J} = \frac{(263)(8)(1.50)(0.513)(1.004)(1.24)}{(1.00)(0.230)} = 8764 \text{ psi}$$

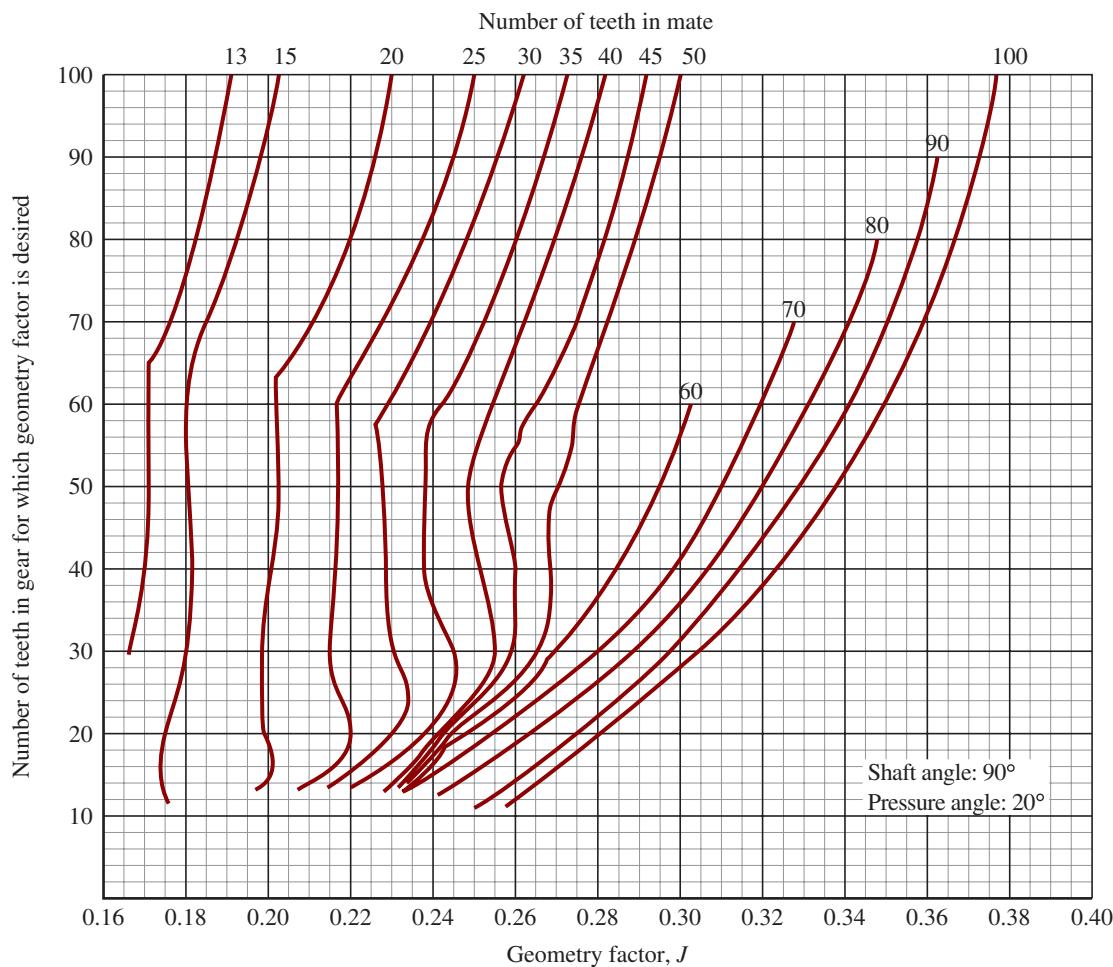


FIGURE 10-15 Geometry factor, J , for straight bevel gears with 20° pressure angle and 90° shaft angle (Adapted from AGMA 2003-C10, *Rating the Pitting Resistance and Bending Strength of Generated Straight Bevel, Zerol Bevel and Spiral Bevel Gear Teeth*, with the permission of the publisher, American Gear Manufacturers Association, 1001 North Fairfax Street, 5th Floor, Alexandria, VA.)

Allowable Bending Strength Number: The process of finding the required allowable bending strength, s_{at} , for bevel gears is similar to that used for spur and helical gears. The fundamental equation is

$$s_{wt} = \frac{s_{at}K_L}{(SF)(K_R)} \quad (10-17)$$

where

s_{wt} = permissible bending stress number considering design life and reliability

K_L = Stress cycle factor for bending

For carburized case-hardened steel bevel gears, use Figure 10-16. Most of the test data for these curves were developed for carburized case-hardened gears so use for through-hardened steel is only approximate. In Chapter 9, a similar factor was called Y_N and that is the term used in ISO standards as well. Note that the curve for life factors above about 3×10^6 is used for most commercial gear drives. The standard

permits a lower value for some critical applications.

K_R = Reliability factor. Use Table 10-3. Note that for bending, the reliability factor for bevel gears is the same as for spur and helical gears in Table 9-11.

SF = Safety factor. Typically taken to be 1.00, but values up to about 1.50 can be used for greater uncertainty or for critical systems.

For design where the goal is to specify a suitable gear material, Equation (10-17) can be combined with the equation for s_t from Equation (10-14) and we can solve for the required value of the allowable bending strength, s_{at} . That is,

$$\text{Let } s_t = s_{wt} = \frac{s_{at}K_L}{(SF)(K_R)}$$

Then, the required value of s_{at} is

$$s_{at} = \frac{s_t(SF)(K_R)}{K_L} \quad (10-18)$$

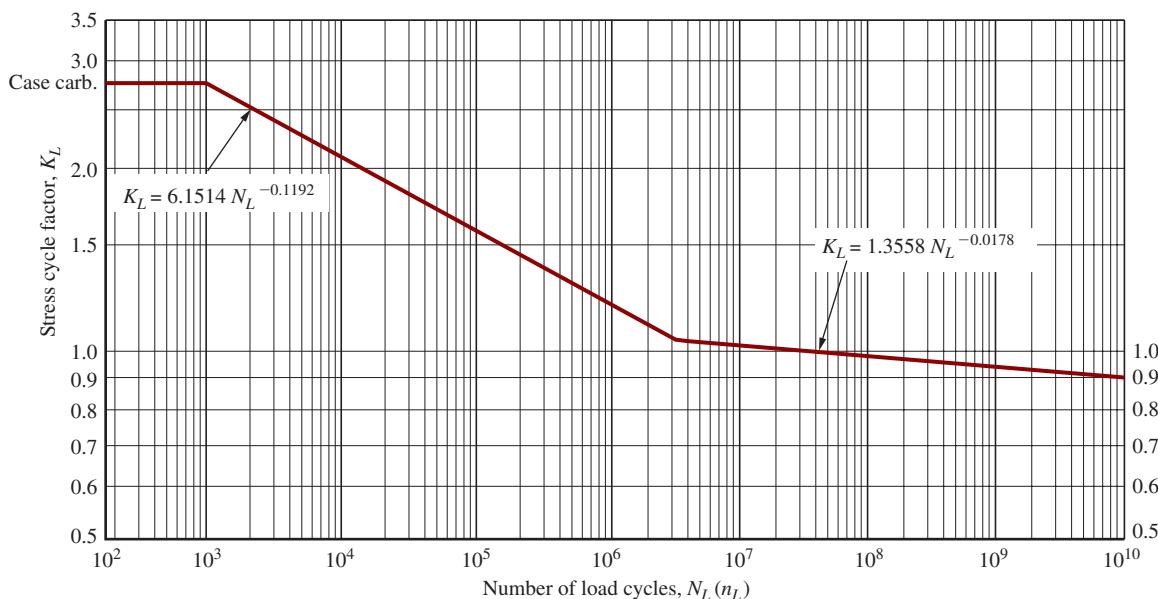


FIGURE 10–16 Stress cycle factor for bending strength, K_L (carburized case-hardened steel bevel gears) (Adapted from AGMA 2003-C10, *Rating the Pitting Resistance and Bending Strength of Generated Straight Bevel, Zerol Bevel and Spiral Bevel Gear Teeth*, with the permission of the publisher, American Gear Manufacturers Association, 1001 North Fairfax Street, 5th Floor, Alexandria, VA.)

TABLE 10–3 Reliability Factors for Allowable Bending and Contact Stresses

| Reliability R | Interpretation | Reliability factors | |
|--------------------|----------------------------------|---------------------|------------------|
| | | Bending K_R | Contact C_R |
| 0.9 | Fewer than one failure in 10 | 0.85 | 0.92 |
| 0.99 | Fewer than one failure in 100 | 1.00 | 1.00 |
| 0.999 | Fewer than one failure in 1000 | 1.25 | 1.12 |
| 0.9999 | Fewer than one failure in 10 000 | 1.50 | 1.22 |

Source: Adapted from AGMA 2003-C10, *Rating the Pitting Resistance and Bending Strength of Generated Straight Bevel, Zerol Bevel and Spiral Bevel Gear Teeth*, with the permission of the publisher, American Gear Manufacturers Association, 1001 North Fairfax Street, 5th Floor, Alexandria, VA.

Use Figure 10–17 to determine the required hardness for through-hardened steel, recognizing that HB 400 is the maximum recommended value. Above that, flame, induction, or carburized case-hardened steel should be used up to the limits shown in Table 10–4.

Next, we develop the similar approach for determining the required allowable contact stress number, s_{ac} . Then we will show another example problem in which we identify the critical value on which material selection is based.

Contact Stress Number, s_c : The maximum contact stress number occurs on the face of the teeth as it does in spur and helical gears; the equation is the same for both U.S. and SI units with due attention to units for W_t , F , D_p , and C_p :

U.S. or SI Units:

$$s_c = C_p \sqrt{\frac{W_t K_o K_m K_v C_s C_{xc}}{FD_p I}} \text{ psi or MPa} \quad (10-19)$$

TABLE 10–4 Allowable Stress Numbers for Bevel Gears

| Case hardened Grade 1 steel materials | | | |
|---------------------------------------|--|--|------|
| Hardness at surface | Allowable bending stress number, s_{at} (ksi) (Mpa) | Allowable contact stress number, s_{ac} (ksi) (Mpa) | |
| Flame or induction hardened | | | |
| 50 HRC—Unhardened roots | 12.5 | 86 | 175 |
| 50 HRC—hardened roots | 22.5 | 155 | 175 |
| Carburized and case hardened | | | |
| 55–64 HRC | 30 | 207 | 200 |
| | | | 1379 |

Source: Adapted from AGMA 2003-C10, *Rating the Pitting Resistance and Bending Strength of Generated Straight Bevel, ZEROL Bevel and Spiral Bevel Gear Teeth*, with the permission of the publisher, American Gear Manufacturers Association, 1001 North Fairfax Street, 5th Floor, Alexandria, VA.

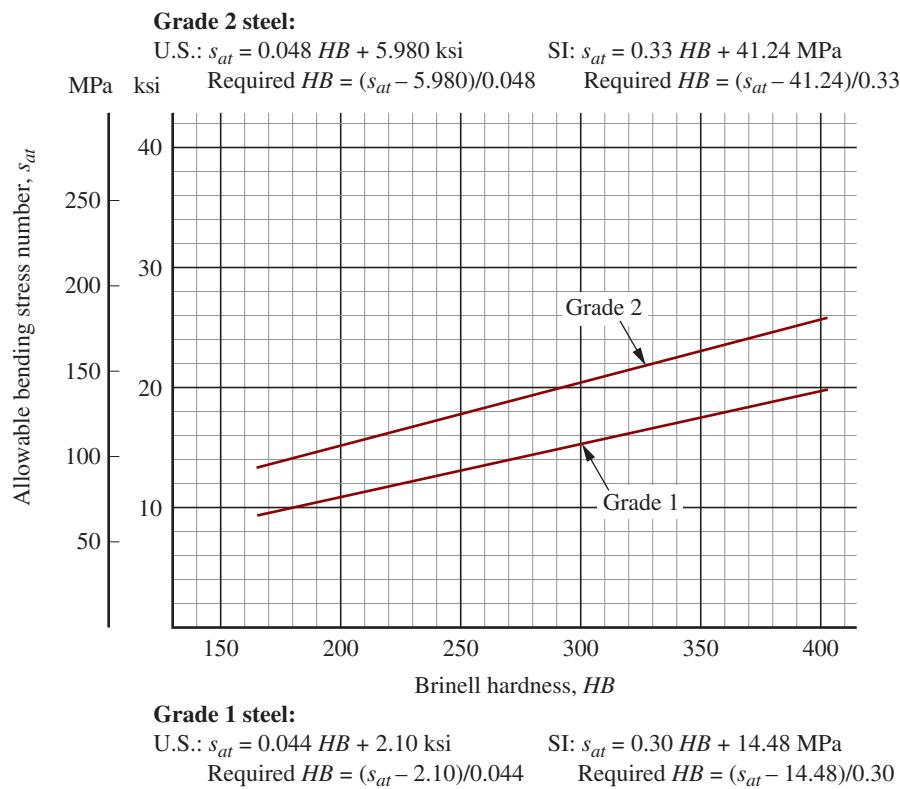


FIGURE 10-17 Allowable bending stress number, s_{at} , for through-hardened steel for bevel gears (Adapted from AGMA 2003-C10, *Rating the Pitting Resistance and Bending Strength of Generated Straight Bevel, Zerol Bevel and Spiral Bevel Gear Teeth*, with the permission of the publisher, American Gear Manufacturers Association, 1001 North Fairfax Street, 5th Floor, Alexandria, VA.)

Note that this equation is used for both the pinion and the gear because the basic contact stress is equal on each. *Do not use the pitch diameter of the gear in this equation.*

All variables in this equation have been discussed in regard to bending stress number except for I , C_p , C_s , and C_{xc} , discussed next.

C_p : The elastic coefficient depends on the modulus of elasticity and Poisson's ratio for the materials of the pinion and the gear. For two steel gears, $C_p = 2300 \text{ psi}^{0.5}$ ($191 \text{ MPa}^{0.5}$). Use the values from Chapter 9 in Table 9-7 for other materials.

C_s : The size factor for contact stress is different from the value of K_s used for bending stress. See Figure 10-18. The factor is based on the face width, F . For $F \leq 0.50 \text{ in}$ (12.5 mm), use $C_s = 0.50$. For $F \geq 3.14 \text{ in}$ (80 mm), use $C_s = 0.83$. Between those limits, use the figure or compute the value from the equations given here:

$$\text{U.S. Units: } C_s = 0.125F + 0.4375 \quad (10-20)$$

$$\text{SI Metric Units: } C_s = 0.00492F + 0.4375 \quad (10-20M)$$

C_{xc} : The crowning factor for pitting accounts for the contact pattern between mating teeth. Typical bevel gear production processes create crowning both along the tooth flank and across the full width of the face. This is the preferred approach. However, some bevel gears are not crowned. AGMA Standard 2003 (Reference 10) recommends the following factors:

$$C_{xc} = 1.5 \text{ for properly crowned teeth}$$

$$C_{xc} = 2.0 \text{ or larger for non-crowned teeth}$$

I : The geometry factor for pitting resistance incorporates the radii of curvature of the pinion and gear teeth and the degree of load sharing between teeth. It is a function of the number of teeth in both the pinion and the gear and, therefore, to the gear ratio. Use Figure 10-19 for values for problem solving in this book. AGMA Standard 2003 (Reference 10) provides a formula for I and a detailed procedure for acquiring the necessary data and performing the calculations.

We now revisit the example design problem used throughout this chapter and compute the contact stress.

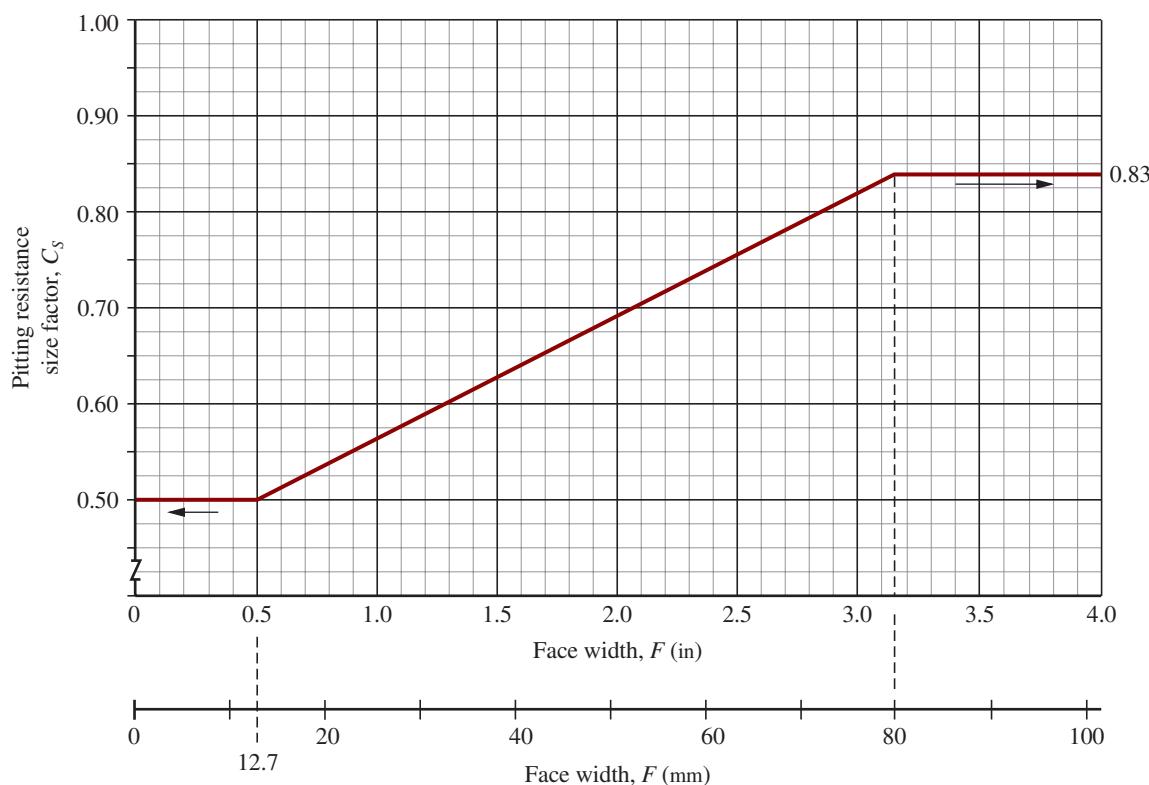


FIGURE 10-18 Pitting resistance size factor, C_s (Adapted from AGMA 2003-C10, *Rating the Pitting Resistance and Bending Strength of Generated Straight Bevel, Zerol Bevel and Spiral Bevel Gear Teeth*, with the permission of the publisher, American Gear Manufacturers Association, 1001 North Fairfax Street, 5th Floor, Alexandria, VA.)

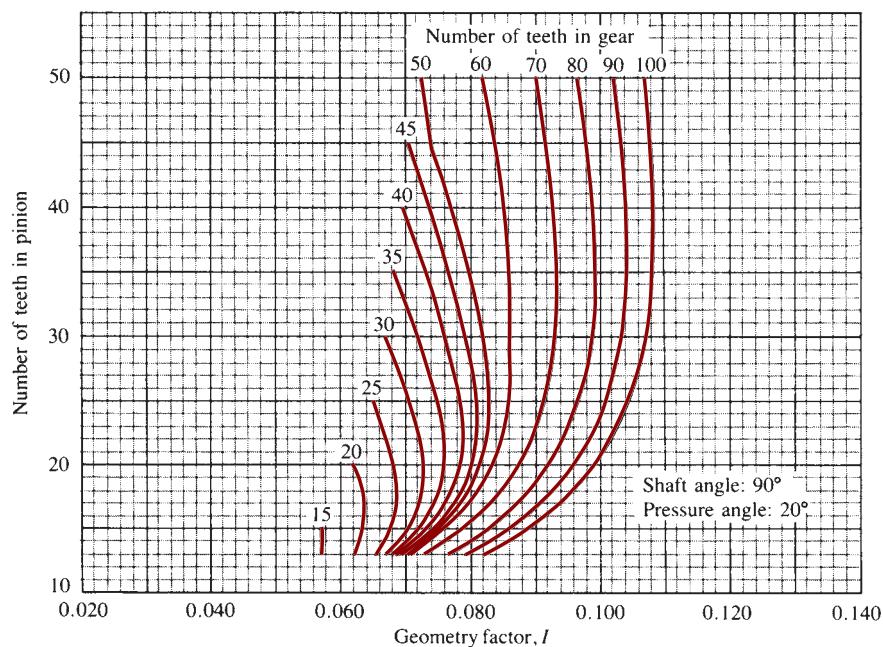


FIGURE 10-19 Geometry factors for straight and ZEROL® bevel gears (Extracted from AGMA 2003 (Reference 10), *Rating the Pitting Resistance and Bending Strength of Generated Straight Bevel, ZEROL® Bevel and Spiral Bevel Gear Teeth*, with the permission of the publisher, American Gear Manufacturers Association, 1001 North Fairfax Street, 5th floor, Alexandria, VA 22314.)

**Example Problem
10-7**

Compute the contact stress for the gear pair in Figure 10–9 for the conditions used in Example Problem 10–5: $N_P = 16$; $N_G = 48$; $n_P = 600$ rpm; $P_d = 8$; $F = 1.00$ in; and $D_P = 2.000$ in. Both gears are to be steel.

Solution We use Equation (10–19) with U.S. units.

$$s_c = C_p \sqrt{\frac{W_t K_o K_m K_v C_s C_{xc}}{FD_p l}} \text{ psi}$$

From Example Problem 10–5: $W_t = 263$ lb; $K_o = 1.50$; $K_m = 1.004$; and $K_v = 1.24$. Other factors are as follows:

Elastic coefficient $C_p = 2300$ psi^{0.5} for two steel gears

Size factor $C_s = 0.56$ (Figure 10–18)

Crowning factor $C_{xc} = 1.5$ (Specify properly crowned teeth)

Geometry factor for pitting resistance $l = 0.077$ (Figure 10–19)

Then

$$s_c = 2300 \sqrt{\frac{(263)(1.50)(1.004)(1.24)(0.56)(1.5)}{(1.00)(2.000)(0.077)}} \text{ psi} = 119\,044 \text{ psi}$$

Allowable Contact Stress Number: The process of finding the required allowable contact stress, s_{ac} , for bevel gears is similar to that used for spur and helical gears. The fundamental equation is

$$s_{wc} = \frac{s_{ac} C_L}{(SF)(C_R)} \quad (10-21)$$

where

s_{wc} = permissible contact stress number considering design life and reliability.

C_L = Stress cycle factor for contact stress. Use Figure 10–20, developed for carburized case-hardened steel bevel gears. Application to through-hardened gears is approximate.

C_R = Reliability factor. Use Table 10–3. Note that the reliability factor for pitting resistance is equal to the square root of that for bending. The AGMA standard adjusts the allowable bending strengths accordingly.

SF = Safety factor. Typically taken to be 1.00, but values up to about 1.50 can be used for greater uncertainty or for critical systems.

For design where the goal is to specify a suitable gear material, Equation (10–21) can be combined with the equation for s_c from Equation (10–19) and we can solve for the required value of the allowable bending strength, s_{ac} . That is,

$$\text{Let } s_c = s_{wc} = \frac{s_{ac} C_L}{(SF)(C_R)}$$

Then, the required value of s_{ac} is

$$s_{ac} = \frac{s_c (SF)(C_R)}{C_L} \quad (10-22)$$

Use Figure 10–21 to determine the required hardness for through-hardened steel, recognizing that HB 400 is the maximum recommended value. Above that, flame, induction, or carburized case-hardened steel should be used up to the limits shown in Table 10–4.

Now we look again at the design analysis example considered before and evaluate both the required value of s_{at} and s_{ac} . Finally, we identify the critical value and specify a suitable material for the two gears.

**Example Problem
10-8**

Specify suitable materials for the bevel pinion and gear for the data of Example Problems 10–5 to 10–7. Design for a life of 15 000 hours.

Solution From Example Problems 10–6 and 10–7, we find the following data:

Rotational speed of pinion = $n_P = 600$ rpm

Bending stress number, $s_t = 8764$ psi

Contact stress number, $s_c = 119\,044$ psi

We apply Equations (10–18) and (10–22).

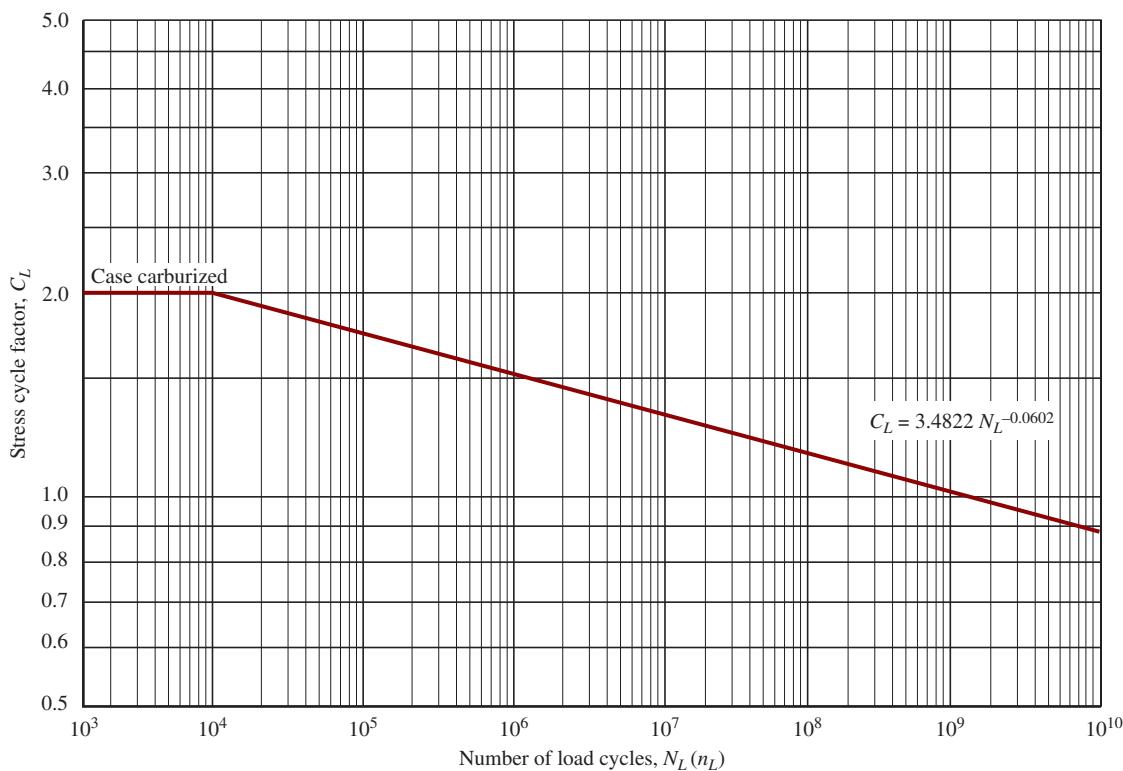


FIGURE 10-20 Stress cycle factor for pitting resistance, C_L (carburized case-hardened steel bevel gears) (Adapted from AGMA 2003-C10, *Rating the Pitting Resistance and Bending Strength of Generated Straight Bevel, Zerol Bevel and Spiral Bevel Gear Teeth*, with permission of the publisher, American Gear Manufacturers Association, 1001 North Fairfax Street, 5th Floor, Alexandria, VA.)

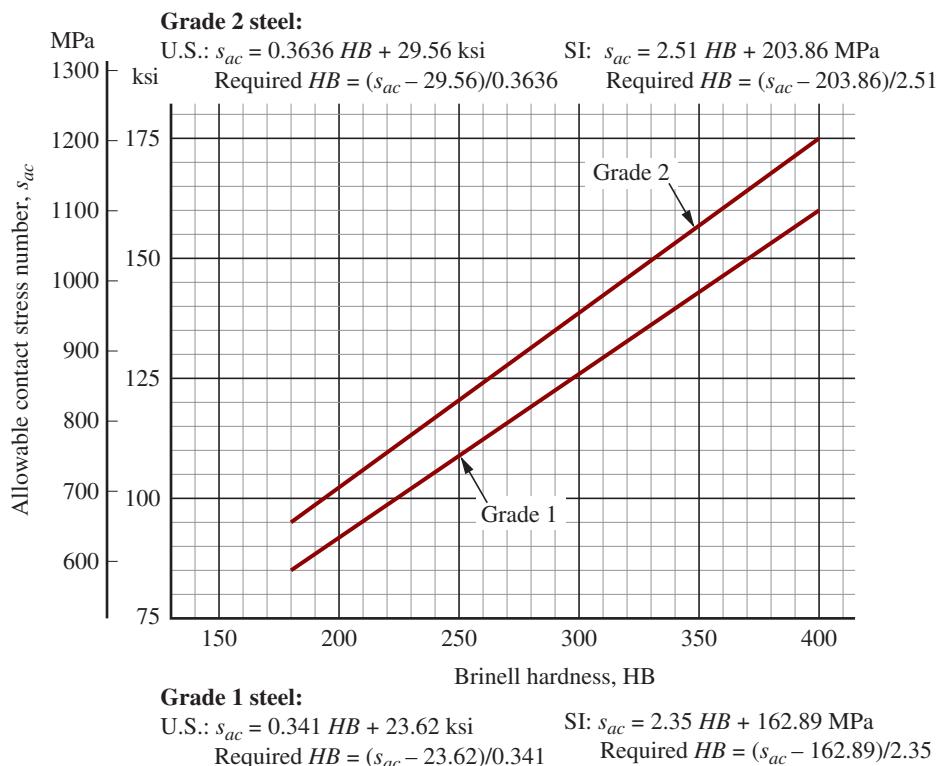


FIGURE 10-21 Allowable contact stress number, S_{ac} , for through-hardened steel for bevel gears (Adapted from AGMA 2003 (Reference 10), *Rating the Pitting Resistance and Bending Strength of Generated Straight Bevel, Zerol Bevel and Spiral Bevel Gear Teeth*, with permission of the publisher, American Gear Manufacturers Association, 1001 North Fairfax Street, 5th Floor, Alexandria, VA.)

$$s_{at} = \frac{s_t(SF)(K_R)}{K_L} \quad (10-18)$$

$$s_{ac} = \frac{s_c(SF)(C_R)}{C_L} \quad (10-22)$$

Two of the factors in each equation are design decisions.

Safety factor **SF**:

No additional uncertainties or special requirements are known. Then $SF = 1.00$.

Reliability factors K_R and C_R : Assume a reliability of 0.99, one failure in 100.

Then, $K_R = 1.00$ and $C_R = 1.00$.

Life factors K_L and C_L : We use Figures 10–16 and 10–20 that require the expected number of load cycles, N_c . The equation shown below was used in Chapter 9 with q indicating the number of stress cycles per revolution of the gear, typically 1.0. For planetary or split power systems, q can be 2.0 or more.

$$N_c = 60(L)(n_P)(q) = (60)(15\,000)(600)(1) = 5.4 \times 10^8 \text{ load cycles}$$

For bending: $K_L = 0.948$ (computed from equation in Figure 10–16)

For pitting resistance: $C_L = 1.038$ (computed from equation in Figure 10–20)

We can then complete the calculations:

$$s_{at} = \frac{s_t(SF)(K_R)}{K_L} = \frac{(8764)(1.0)(1.0)}{0.948} = 9245 \text{ psi} = 9.245 \text{ ksi}$$

$$s_{ac} = \frac{s_c(SF)(C_R)}{C_L} = \frac{(119\,044)(1.0)(1.0)}{1.038} = 114\,686 \text{ psi} = 114.7 \text{ ksi}$$

Required hardness of steels and material specification:

Use Figure 10–17 for bending: Required $HB = 162$; Low; Use almost any steel.

Use Figure 10–21 for contact stress: Required $HB = 267$.

This value is quite suitable for through-hardened steel.

Use Figure A4–1: Specify SAE 1040 WQT 1000; $HB = 269$

22% elongation; $s_y = 88 \text{ ksi}$; $s_u = 114 \text{ ksi}$

Summary and comments: A bevel gear drive has been designed with straight teeth for transmission of power to shafts oriented 90° to each other. Key data were given and used in Chapter 8 and this chapter in Example Problems 8–3, and 10–4 to 10–8. Key data were given and used in this chapter and in Example Problems 10–4 to 10–8. Results are summarized as follows:

1. **Example Problem 8–3:** Values for geometrical features were calculated for the following input data: $P_d = 8$; 20° pressure angle; $N_P = 16$; $N_G = 48$; 90° shaft angle.
 - a. Output data used in subsequent problems include: Gear Ratio = 3.00; $D_P = 2.000 \text{ in}$; $D_G = 6.000 \text{ in}$; Pitch cone angle for the pinion = $\gamma = 18.43^\circ$; Pitch cone angle for the gear = $\Gamma = 71.57^\circ$; Face width = $F = 1.00 \text{ in}$ (design decision); Pinion outside diameter = $D_{oP} = 2.368 \text{ in}$; Pinion outside diameter = $D_{oP} = 2.368 \text{ in}$; Gear outside diameter = $D_{oG} = 6.041 \text{ in}$. Several other detailed gear tooth features were also calculated.
2. **Example Problem 10–4:** Forces and torques on the pinion and gear were calculated for a given power transmitted = $P = 2.50 \text{ hp}$ at a pinion speed of 600 rpm.
 - a. Results included: Torque on the pinion = $T_P = 263 \text{ lb}\cdot\text{in}$; Torque on the gear = $T_G = 788 \text{ lb}\cdot\text{in}$; Tangential transmitted force at the mean radii = $W_t = 313 \text{ lb}$; Radial force = $W_r = 108 \text{ lb}$; Axial force = $W_x = 36 \text{ lb}$; Mean radius of the pinion teeth = $R_{mP} = 0.84 \text{ in}$; Mean radius of the gear teeth = $R_{mG} = 2.53 \text{ in}$;
 - b. The forces at the mean radii, torques, and mean radii for the pinion and the gear were used in the analysis of forces on the shafts and bearings in Example Problem 10–5. Note that tangential forces are recalculated in Example Problem 10–6 to conform to conventions for stress analysis of bevel gear teeth.
3. **Example Problem 10–5:** See Figure 10–10 for a graphical display of the free-body diagrams of both shafts showing all forces and torques acting on the two shafts carrying the pinion and the gear along with bearing reactions. This required analysis of forces, shearing forces, and

bending moments on both shafts in two planes. All four bearings experience radial reaction forces in two planes. Resultants were calculated for each bearing. By a design decision, the thrust forces created by the bevel gears were taken at Bearings *B* and *D*. Results are as follows:

- a. Bearing *A*: Radial load = 224 lb
- b. Bearing *B*: Radial load = 108 lb; Thrust load = 36 lb
- c. Bearing *C*: Radial load = 148 lb
- d. Bearing *D*: Radial load = 188 lb; Thrust load = 108 lb

4. Section 10–8: The equilibrium analysis to determine forces in Example Problem 10–5 was extended to complete the shearing forces and bending moments in two planes for both shafts. See Figure 10–11 for the pinion shaft and Figure 10–12 for the gear shaft. Resultant bending moments were also calculated that would be needed for completing the design for the shafts, as will be discussed in Chapter 12.

5. Example Problem 10–6: The bending stress number for the teeth of the pinion was calculated using data from previous problems and additional given data:

- a. The pinion is driven by an electric motor and the load provides moderate shock. The quality number is $A_y = 11$, achievable by general commercial processing.
- b. Note that the transmitted forces on the pinion and the gear are recalculated based on the torque transmitted and the outer pitch radii for the pinion and the gear. The differences between these forces and those used in the shaft force analysis are accounted for in the geometry factors *J* and *I*. Here we use $W_t = 263$ lb.
- c. Bending stress number on pinion teeth = $s_t = 8764$ psi. The stress on the gear teeth will be lower because of the relative value of the geometry factor.

6. Example Problem 10–7: The contact stress number for the teeth of the pinion was calculated using data from previous problems. A design decision chose to use steel for both the pinion and the gear.

- a. Contact stress number, $s_c = 119\,044$ psi

7. Example Problem 10–8: The minimum required allowable bending stress number and the minimum allowable contact stress numbers were calculated based on results from Example Problems 10–6 and 10–7 along with the following design decisions:

- a. Reliability = $R = 0.99$ (< 1 failure in 100); $K_R = C_R = 1.0$
- b. Safety factor = $SF = 1.0$, assuming no unusual uncertainties beyond other *K*-factors
- c. Design for a life of 15 000 hours. This is reasonable for general industrial applications, fully utilized.
- d. Results: Bending: $s_{at} = 9245$ psi = 9.245 ksi; $s_{ac} = 114\,686$ psi = 114.7 ksi

8. Required hardness of steels and material specification:

Bending: Required $HB = 162$; Low; Use almost any steel.

Contact stress–Pitting resistance: Required $HB = 267$.

This value controls the material specification and is quite suitable for through-hardened steel.

Using Figure A4–1 Specify SAE 1040 WQT 1000; $HB = 269$; 22% elongation;
 $s_y = 88$ ksi; and $s_u = 114$ ksi

9. Comments on the analysis and design: Taken together, the procedures and results summarized here demonstrate a reasonable approach to designing bevel gear pairs with straight teeth. The design is satisfactory as shown. However, alternate designs are practical and other iterations are recommended to explore what improvements can be made. Possible choices for different design decisions are as follows:

- a. A smaller overall drive may be practical by permitting the use of case hardening by flame or induction hardening or carburizing. These would be capable of operating at higher bending and contact stresses produced by smaller gears, but with corresponding higher processing costs.
- b. A more accurate gear quality could be chosen instead of $A_y = 11$ to decrease stresses and improve smoothness of operation and noise, but this also has higher associated costs.
- c. Consider using shot peening or other means of improving the life of the gears.
- d. Spiral bevel gears may permit a more compact design and reference should be made to AGMA Standard 2003 (Reference 10) for analysis methodology and additional data required.

Practical Considerations for Bevel Gearing

Factors similar to those discussed for spur and helical gears should be considered in the design of systems using bevel gears. The accuracy of alignment and the accommodation of thrust loads discussed in the example problems are critical.

Figure 10–22 shows the exterior view of a heavy-duty gear reducer for an industrial right angle drive. The input shaft is to the left and the output shaft is the larger one at the right extending through the side of the housing. Figure 10–23 shows a reducer similar to that in Figure 10–22 but with the upper part of the housing removed so that the entire three-stage reduction can be seen. The first stage is a spiral bevel gear pair and stages two and three are helical gear pairs. The large speed reduction results in a correspondingly large increase in the torque on the output shaft, requiring its diameter to be larger as shown. Observe, also, the careful placement of the bearings that support all shafts in the housing and how the housing allows for lubrication of the gears and assembly of all components.

10–10 FORCES, FRICTION, AND EFFICIENCY IN WORMGEAR SETS

See Chapter 8 for the geometry of wormgear sets. Also see References 2, 14, 16–18, and 21.

The force system acting on the worm/wormgear set is usually considered to be made of three perpendicular components as was done for helical and bevel gears. There are a tangential force, a radial force, and an axial force acting on the worm and the wormgear. We will use the same notation here as in the bevel gear system.

Figure 10–24 shows two orthogonal views (front and side) of a worm/wormgear pair, showing only the pitch diameters of the gears. The figure shows the separate worm and wormgear with the forces acting on each. Note that because of the 90° orientation of the two shafts,

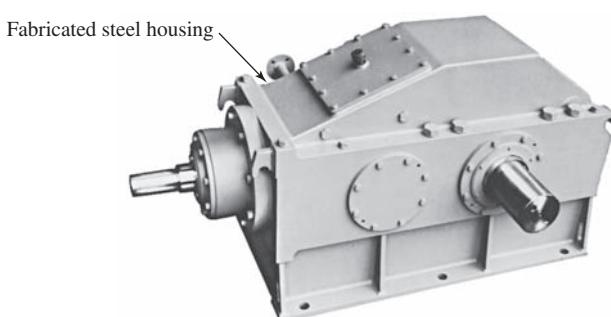


FIGURE 10–22 Heavy-duty right angle gear reducer (Sumitomo Machinery Corporation of America, Teterboro, NJ)

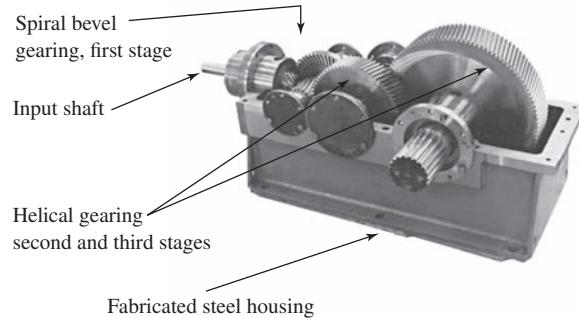


FIGURE 10–23 Three-stage industrial gear reducer employing spiral bevel and helical gears (Sumitomo Machinery Corporation of America, Teterboro, NJ)

◇ Forces on Worms and Wormgears

$$\left. \begin{array}{l} W_{tG} = W_{xW} \\ W_{xG} = W_{tW} \\ W_{rG} = W_{rW} \end{array} \right\} \quad (10-23)$$

Of course, the directions of the paired forces are opposite because of the action/reaction principle.

The tangential force on the wormgear is computed first and is based on the required operating conditions of torque, power, and speed at the output shaft.

Pitch Line Speed, v_t

As stated in Chapter 8, the pitch line velocity is the linear velocity of a point on the pitch line for the worm or the wormgear. For the worm having a pitch diameter D_W in, rotating at n_W rpm,

◇ Pitch Line Velocity for Worm

$$v_{tW} = \frac{\pi D_W n_W}{12} \text{ ft/min} \quad \text{or} \quad v_{tW} = \frac{\pi D_W n_W}{60000} \text{ m/s}$$

For the wormgear having a pitch diameter D_G in, rotating at n_G rpm,

◇ Pitch Line Velocity for Gear

$$v_{tG} = \frac{\pi D_G n_G}{12} \text{ ft/min} \quad \text{or} \quad v_{tG} = \frac{\pi D_G n_G}{60000} \text{ m/s}$$

Note that these two values for pitch line velocity are *not* equal.

Velocity Ratio, VR

It is most convenient to calculate the velocity ratio of a worm and wormgear set from the ratio of the input rotational speed to the output rotational speed:

◇ Velocity Ratio for Worm/Sot

$$VR = \frac{\text{speed of worm}}{\text{speed of gear}} = \frac{n_W}{n_G} = \frac{N_G}{N_W}$$

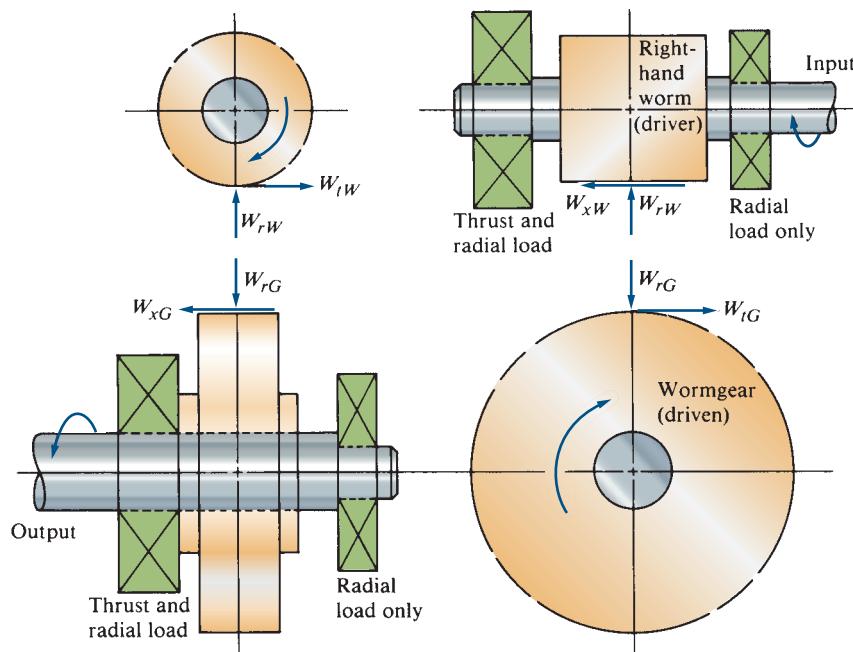


FIGURE 10-24 Forces on a worm and a wormgear

Coefficient of Friction, μ

Friction plays a major part in the operation of a wormgear set because there is inherently sliding contact between the worm threads and the wormgear teeth. The coefficient of friction is dependent on the materials used, the lubricant, and the sliding velocity. Based on the pitch line speed of the gear, the sliding velocity is

Sliding Velocity for Gear

$$v_s = v_{tG}/\sin \lambda \quad (10-24)$$

Based on the pitch line speed of the worm,

Sliding Velocity for Worm

$$v_s = v_{tW}/\cos \lambda \quad (10-25)$$

The term λ is the lead angle for the worm thread as defined in Equation (8-24).

The AGMA (see Reference 14) recommends the following formulas to estimate the coefficient of friction for a hardened steel worm (58 HRC minimum), smoothly ground, or polished, or rolled, or with an equivalent finish, operating on a bronze wormgear. The choice of formula depends on the sliding velocity. Note: v_s must be in ft/min in the formulas; 1.0 ft/min = 0.0051 m/s.

Static Condition: $v_s = 0$

$$\mu = 0.150$$

Low Speed: $v_s < 10$ ft/min (0.051 m/s)

$$\mu = 0.124e^{(-0.074v_s^{0.645})} \quad (10-26)$$

Higher Speed: $v_s > 10$ ft/min

$$\mu = 0.103e^{(-0.110v_s^{0.450})} + 0.012 \quad (10-27)$$

Figure 10-25 is a plot of the coefficient μ versus the sliding velocity v_s .

Output Torque from Wormgear Drive, T_o

In most design problems for wormgear drives, the output torque and the rotating speed of the output shaft will be known from the requirements of the driven machine. Torque and speed are related to the output power by

Output Torque from Wormgear

$$T_o = \frac{63\,000(P_o)}{n_G} \quad (10-28)$$

By referring to the end view of the wormgear in Figure 10-24, you can see that the output torque is

$$T_o = W_{tG} \cdot r_G = W_{tG}(D_G/2)$$

Then the following procedure can be used to compute the forces acting in a worm/wormgear drive system.

Procedure for Calculating the Forces on a Worm/Wormgear Set

Given:

Output torque, T_o , in lb·in

Output speed, n_G , in rpm

Pitch diameter of the wormgear, D_G , in inches

Lead angle, λ

Normal pressure angle, ϕ_n

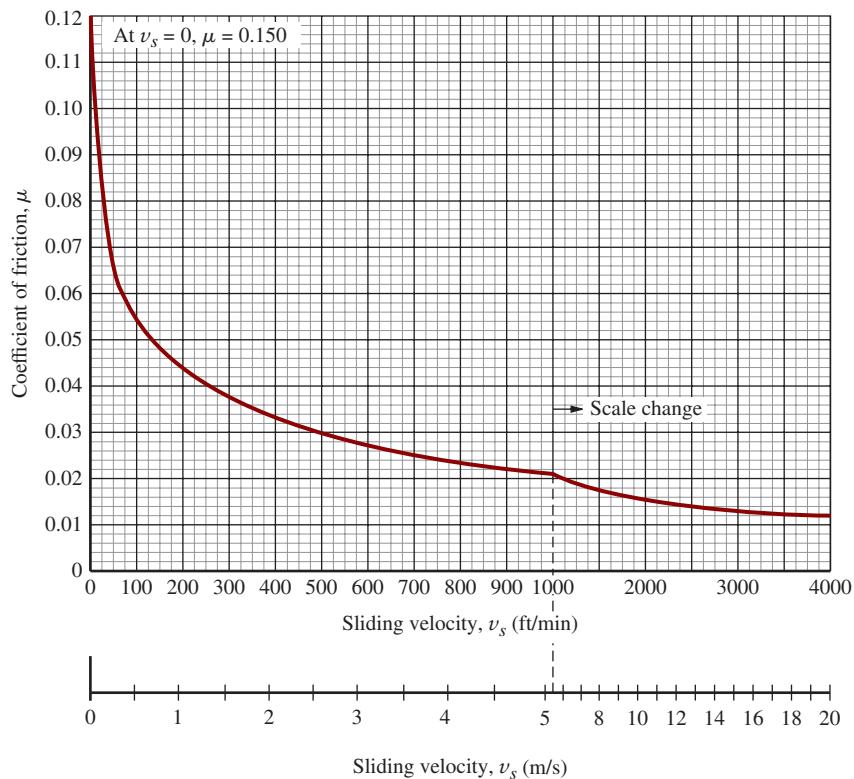


FIGURE 10–25 Coefficient of friction versus sliding velocity for steel worm and bronze wormgear

Compute:

$$W_{tG} = 2 T_o / D_G \quad (10-29)$$

$$W_{xG} = W_{tG} \frac{\cos \phi_n \sin \lambda + \mu \cos \lambda}{[\cos \phi_n \cos \lambda - \mu \sin \lambda]} \quad (10-30)$$

$$W_{rG} = \frac{W_{tG} \sin \phi_n}{\cos \phi_n \cos \lambda - \mu \sin \lambda} \quad (10-31)$$

The forces on the worm can be obtained by observation, using Equation (10–23). Equations (10–30) and (10–31) were derived using the components of both the tangential driving force on the wormgear and the friction force at the location of the meshing worm threads and wormgear teeth. The complete development of the equations is shown in Reference 15.

Friction Force, W_f

The friction force, W_f , acts parallel to the face of the worm threads and the gear teeth and depends on the tangential force on the gear, the coefficient of friction, and the geometry of the teeth:

$$W_f = \frac{\mu W_{tG}}{(\cos \lambda)(\cos \phi_n) - \mu \sin \lambda} \quad (10-32)$$

Power Loss Due to Friction, P_L

Power loss is the product of the friction force and the sliding velocity at the mesh. That is,

$$P_L = \frac{v_s W_f}{33000} \quad (10-33)$$

In this equation, the power loss is in hp, v_s is in ft/min, and W_f is in lb.

Input Power, P_i

The input power is the sum of the output power and the power loss due to friction:

$$P_i = P_o + P_L \quad (10-34)$$

Efficiency, η

Efficiency is defined as the ratio of the output power to the input power:

$$\eta = P_o / P_i \quad (10-35)$$

Efficiency for a wormgear drive with the usual case of the input coming through the worm can also be computed directly from the following equation.

$$\eta = \frac{\cos \phi_n - \mu \tan \lambda}{\cos \phi_n + \mu \tan \lambda} \quad (10-36)$$

Factors Affecting Efficiency

As can be seen in Equation (10–32), the lead angle, the normal pressure angle, and the coefficient of friction all affect the efficiency. The one that has the largest effect, and the one over which the designer has the most control, is the lead angle, λ . The larger the lead angle, the higher the efficiency, up to approximately $\lambda = 45^\circ$. (See Figure 10–26.)

Now, looking back to the definition of the lead angle, note that the number of threads in the worm has a major effect on the lead angle. Therefore, to obtain a high efficiency, use multiple-threaded worms. But

there is a disadvantage to this conclusion. More worm threads require more gear teeth to achieve the same ratio, resulting in a larger system overall. The designer is often forced to compromise.

Example Problem: Forces and Efficiency in Wormgearing

Review now the results of Example Problem 8–4, in which the geometry factors for a particular worm and wormgear set were computed. The following example problem extends the analysis to include the forces acting on the system for a given output torque.

Example Problem 10–9

The wormgear drive described in Example Problem 8–4 is transmitting an output torque of 4168 lb·in. The transverse pressure angle is 20° . The worm is made from hardened and ground steel, and the wormgear is bronze. Compute the forces on the worm and the wormgear, the output power, the input power, and the efficiency.

Solution Recall from Example Problem 8–4 that

$$\begin{aligned}\lambda &= 14.04^\circ & D_G &= 8.667 \text{ in} & n_G &= 101 \text{ rpm} \\ n_W &= 1750 \text{ rpm} & D_W &= 2.000 \text{ in}\end{aligned}$$

The normal pressure angle is required. From Equation (8–26),

$$\phi_n = \tan^{-1}(\tan \phi_t \cos \lambda) = \tan^{-1}(\tan 20^\circ \cos 14.04^\circ) = 19.45^\circ$$

Because they recur in several formulas, let's compute the following:

$$\begin{aligned}\sin \phi_n &= \sin 19.45^\circ = 0.333 \\ \cos \phi_n &= \cos 19.45^\circ = 0.943 \\ \cos \lambda &= \cos 14.04^\circ = 0.970 \\ \sin \lambda &= \sin 14.04^\circ = 0.243 \\ \tan \lambda &= \tan 14.04^\circ = 0.250\end{aligned}$$

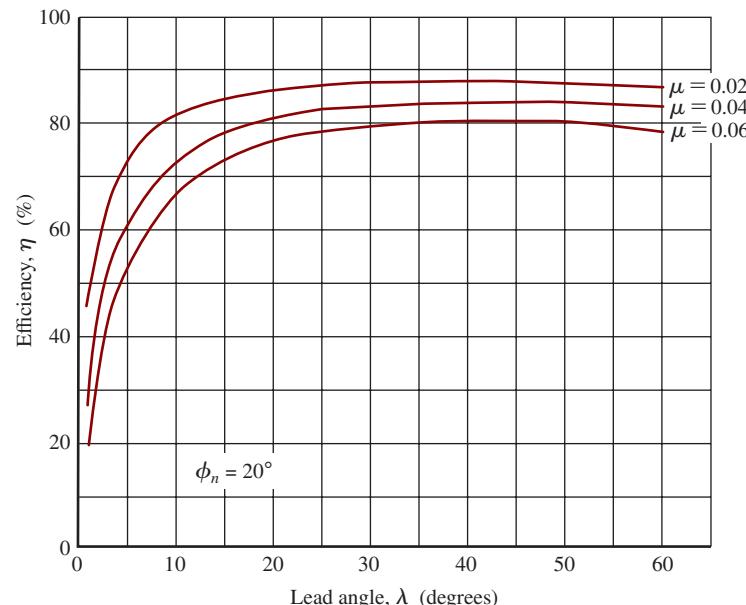


FIGURE 10–26 Efficiency of wormgear drive versus lead angle

We can now compute the tangential force on the wormgear using Equation (10–29)

$$W_{tG} = \frac{2T_o}{D_G} = \frac{(2)(4168 \text{ lb} \cdot \text{in})}{8.667 \text{ in}} = 962 \text{ lb}$$

The calculations of the axial and radial forces require a value for the coefficient of friction that, in turn, depends on the pitch line speed and the sliding velocity.

Pitch Line Speed of the Gear:

$$\nu_{tG} = \pi D_G n_G / 12 = \pi(8.667)(101) / 12 = 229 \text{ ft/min}$$

Sliding Velocity: [Equation (10–24)]

$$\nu_s = \nu_{tG} / \sin \lambda = 229 / \sin 14.04^\circ = 944 \text{ ft/min}$$

Coefficient of Friction: From Figure 10–25, at a sliding velocity of 944 ft/min, we can read $\mu = 0.022$.

Now the axial and radial forces on the wormgear can be computed.

Axial Force on the Wormgear: [Equation (10–30)]

$$W_{xG} = 962 \text{ lb} \left[\frac{(0.943)(0.243) + (0.022)(0.970)}{(0.943)(0.970) - (0.022)(0.243)} \right] = 265 \text{ lb}$$

Radial Force on the Wormgear: [Equation (10–31)]

$$W_{rG} = \left[\frac{(962)(0.333)}{(0.943)(0.970) - (0.022)(0.243)} \right] = 352 \text{ lb}$$

Now the output power, input power, and efficiency can be computed.

Output Power: [Equation (10–28)]

$$P_o = \frac{T_o n_G}{63,000} = \frac{(4168 \text{ lb} \cdot \text{in})(101 \text{ rpm})}{63,000} = 6.68 \text{ hp}$$

The input power depends on the friction force and the consequent power loss due to friction.

Friction Force: [Equation (10–32)]

$$W_f = \frac{\mu W_{tG}}{(\cos \lambda)(\cos \phi_n) - \mu \sin \lambda} = \frac{(0.022)(962 \text{ lb})}{(0.970)(0.943) - (0.022)(0.243)} = 23.3 \text{ lb}$$

Power Loss Due to Friction: [Equation (10–33)]

$$P_L = \frac{\nu_s W_f}{33,000} = \frac{(944 \text{ ft/min})(23.3 \text{ lb})}{33,000} = 0.666 \text{ hp}$$

Input Power: [Equation (10–34)]

$$P_i = P_o + P_L = 6.68 + 0.66 = 7.35 \text{ hp}$$

Efficiency: [Equation (10–35)]

$$\eta = \frac{P_o}{P_i} (100\%) = \frac{6.68 \text{ hp}}{7.35 \text{ hp}} (100\%) = 90.9\%$$

Equation (10–36) could also be used to compute efficiency directly without computing friction power loss.

Self-Locking Wormgear Sets

Self-locking is the condition in which the worm drives the wormgear, but, if torque is applied to the gear shaft, the worm does not turn. It is locked! The locking action is produced by the friction force between the worm threads and the wormgear teeth, and this is highly

dependent on the lead angle. It is recommended that a lead angle no higher than about 5.0° be used in order to ensure that self-locking will occur. This lead angle usually requires the use of a single-threaded worm; the low lead angle results in a low efficiency, possibly as low as 60% or 70%.

10-11 STRESS IN WORMGEAR TEETH

We present here an approximate method of computing the bending stress in the teeth of the wormgear. Because the geometry of the teeth is not uniform across the face width, it is not possible to generate an exact solution. However, the method given here should predict the bending stress with sufficient accuracy to check a design because most worm/wormgear systems are limited by pitting, wear, or thermal considerations rather than strength.

The AGMA, in its Standard 6034-B92 (Reference 14), does not include a method of analyzing wormgears for strength. The method shown here was adapted from Reference 15. Only the wormgear teeth are analyzed because the worm threads are inherently stronger and are typically made from a stronger material.

The stress in the gear teeth can be computed from

$$\sigma = \frac{W_d}{yFp_n} \quad (10-37)$$

where W_d = dynamic load on the gear teeth

y = Lewis form factor (see Table 10-5)

F = face width of the gear

$$p_n = \text{normal circular pitch} = p \cos \lambda = \pi \cos \lambda / P_d \quad (10-38)$$

The dynamic load can be estimated from

$$W_d = W_{tG}/K_v \quad (10-39)$$

and

$$K_v = 1200/(1200 + v_{tG}) \quad (10-40)$$

$$v_{tG} = \pi D_G n_G / 12 = \text{pitch line speed of the gear} \quad (10-41)$$

Only one value is given for the Lewis form factor for a given pressure angle because the actual value is very difficult to calculate precisely and does not vary much with the number of teeth. The actual face width should be used, up to the limit of two-thirds of the pitch diameter of the worm.

The computed value of tooth bending stress from Equation (10-37) can be compared with the fatigue strength of the material of the gear. For manganese

TABLE 10-5 Approximate Lewis Form Factor for Wormgear Teeth

| ϕ_n | y |
|-----------------------|-------|
| $14\frac{1}{2}^\circ$ | 0.100 |
| 20° | 0.125 |
| 25° | 0.150 |
| 30° | 0.175 |

gear bronze, use a fatigue strength of 17 000 psi; for phosphor gear bronze, use 24 000 psi. For cast iron, use approximately 0.35 times the ultimate strength, unless specific data are available for fatigue strength.

10-12 SURFACE DURABILITY OF WORMGEAR DRIVES

AGMA Standard 6034-B92 (Reference 14) gives a method for rating the surface durability of hardened steel worms operating with bronze gears. The ratings are based on the ability of the gears to operate without significant damage from pitting or wear. All equations from the standard are in the U.S. system. For designs in the SI system, values of parameters should be converted to U.S. units for which the equations were written to determine the corresponding factors. The units are as follows:

W_{tR} —Rated tangential load: lb

Diameters and face width: in

v_s —Sliding velocity: ft/min

Equivalent values in SI units are shown only for reference.

The procedure calls for the calculation of a *rated tangential load*, W_{tR} , from

⇒ Rated Tangential Load on Wormgears

$$W_{tR} = C_s D_G^{0.8} F_e C_m C_v \quad (10-42)$$

where C_s = materials factor (from Figure 10-27)

D_G = pitch diameter of the wormgear, in inches

F_e = effective face width, in inches. Use the actual face width of the wormgear up to a maximum of $0.67 D_W$

C_m = ratio correction factor (from Figure 10-28)

C_v = velocity factor (from Figure 10-29)

Conditions on the Use of Equation (10-42)

1. The analysis is valid only for a hardened steel worm (58 HRC minimum) operating with gear bronzes specified in AGMA Standard 6034-B92. The classes of bronzes typically used are tin bronze, phosphor bronze, manganese bronze, and aluminum bronze. The materials factor, C_s , is dependent on the method of casting the bronze, as indicated in Figure 10-27. The values for C_s can be computed from the following formulas.

Sand-Cast Bronzes:

For $D_G > 2.5$ in (64 mm),

$$C_s = 1189.636 - 476.545 \log_{10}(D_G) \quad (10-43)$$

For $D_G < 2.5$ in (64 mm),

$$C_s = 1000$$

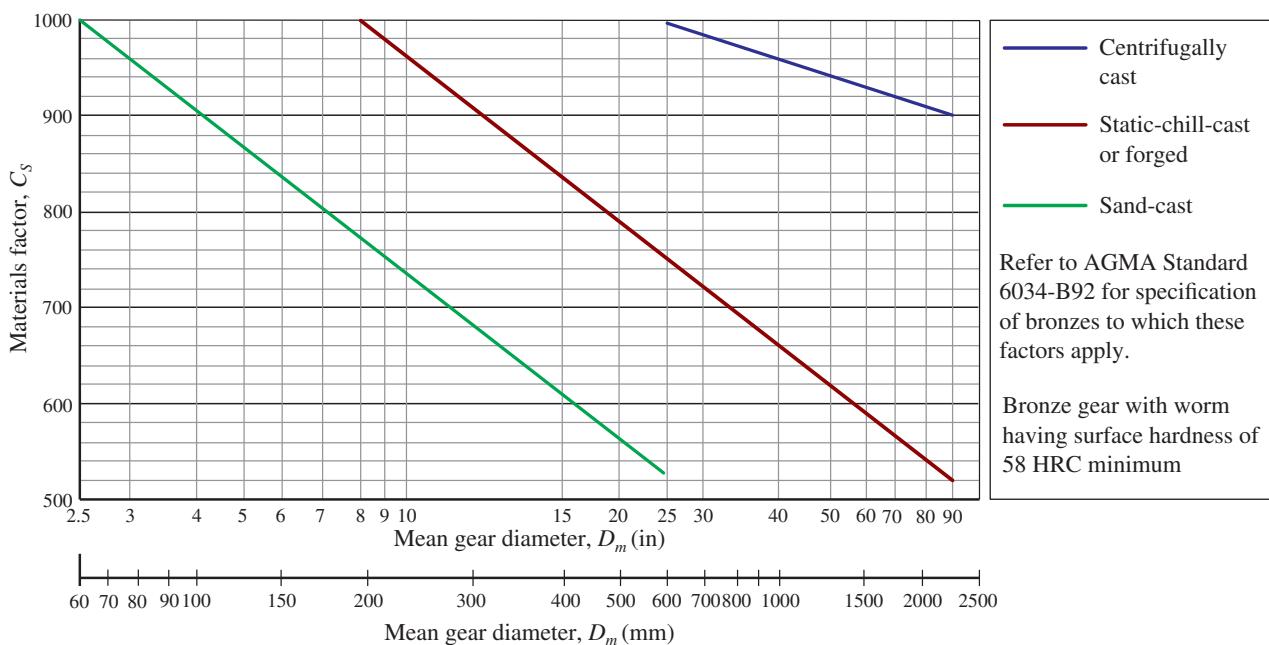


FIGURE 10-27 Materials factor, C_s , for hardened steel worms operating with bronze gears for center distance $C > 3.0$ in (76 mm) (Extracted from AGMA Standard 6034-B92, *Practice for Enclosed Cylindrical Wormgear Speed Reducers and Gearmotors*, with permission of the publisher, American Gear Manufacturers Association, 1001 North Fairfax Street, 5th Floor, Alexandria, VA 22314.)

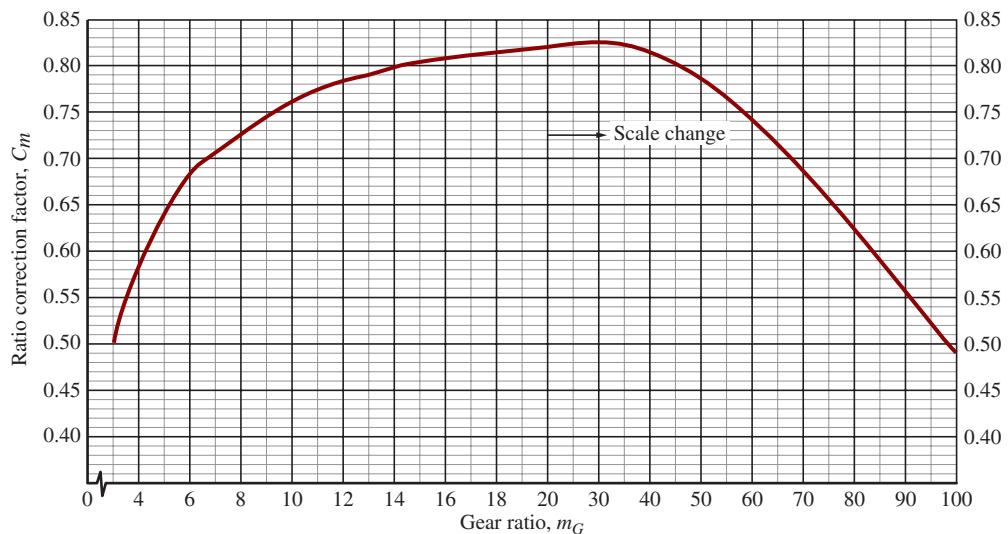


FIGURE 10-28 Ratio correction factor, C_m , versus gear ratio, m_G

Static-Chill-Cast or Forged Bronzes:

For $D_G > 8.0$ in (203 mm),

$$C_s = 1411.651 - 455.825 \log_{10}(D_G) \quad (10-44)$$

For $D_G < 8.0$ in (203 mm)

$$C_s = 1000$$

Centrifugally Cast Bronzes:

For $D_G > 25$ in (635 mm),

$$C_s = 1251.291 - 179.750 \log_{10}(D_G) \quad (10-45)$$

For $D_G < 25$ in (635 mm),

$$C_s = 1000$$

2. The wormgear diameter is the second factor in determining C_s . The *mean diameter* at the midpoint of the working depth of the gear teeth should be used. If standard addendum gears are used, the mean diameter is equal to the pitch diameter.
3. Use the actual face width, F , of the wormgear as F_e if $F < 0.667(D_w)$. For larger face widths, use $F_e = 0.67(D_w)$, because the excess width is not effective.

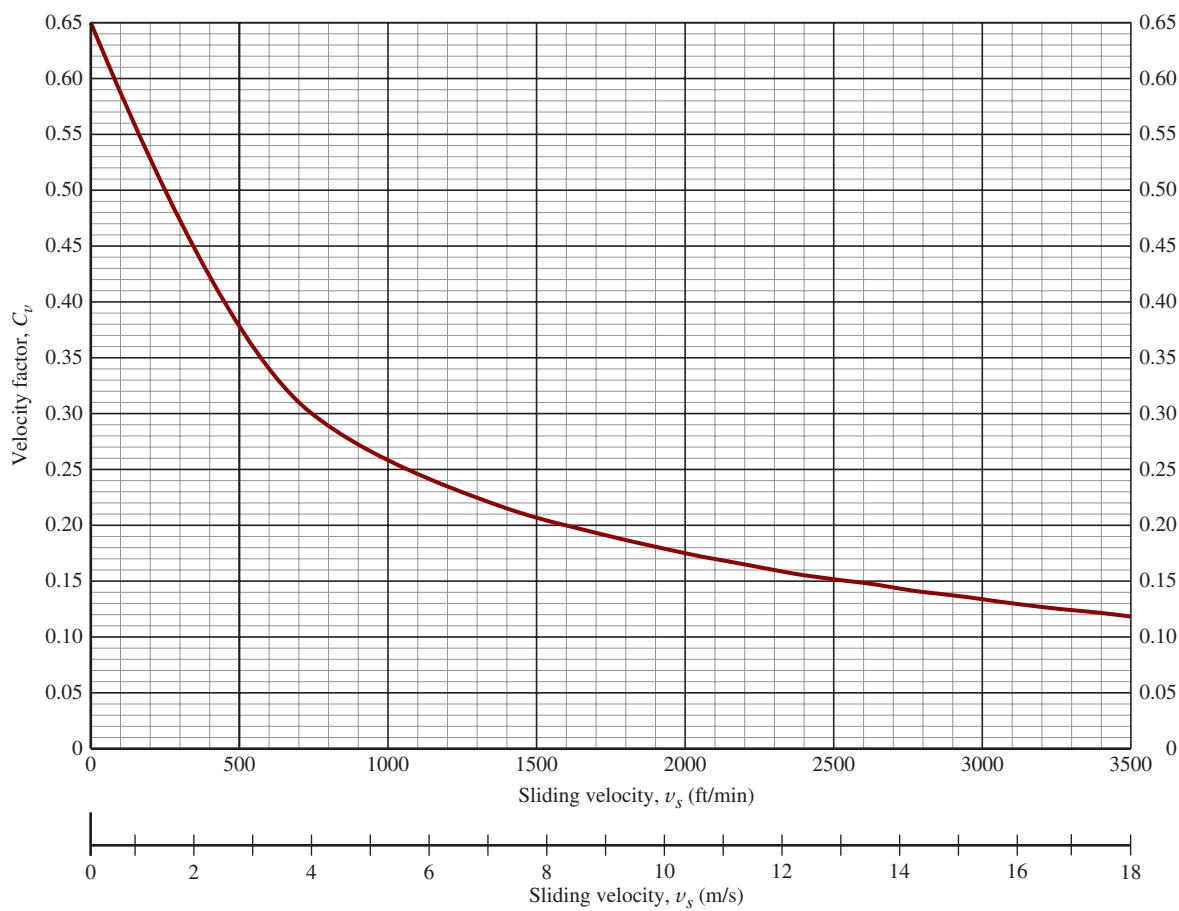


FIGURE 10-29 Velocity factor, C_v , versus sliding velocity

4. The ratio correction factor, C_m , can be computed from the following formulas.

For Gear Ratios, m_G , from 6 to 20

$$C_m = 0.0200(-m_G^2 + 40m_G - 76)^{0.5} + 0.46 \quad (10-46)$$

For Gear Ratios, m_G , from 20 to 76

$$C_m = 0.0107(-m_G^2 + 56m_G + 5145)^{0.5} \quad (10-47)$$

For $m_G > 76$

$$C_m = 1.1483 - 0.00658m_G \quad (10-48)$$

5. The velocity factor depends on the sliding velocity, v_s , computed from Equation (10-24) or (10-25). Values for C_v can be computed from the following formulas.

For v_s , from 0 to 700 ft/min (0–3.56 m/s)

$$C_v = 0.659e^{(-0.0011v_s)} \quad (10-49)$$

For v_s , from 700 to 3000 ft/min (3.56 to 15.24 m/s)

$$C_v = 13.31v_s^{(-0.571)} \quad (10-50)$$

For $v_s > 3000$ ft/min (>15.24 m/s)

$$C_v = 65.52v_s^{(-0.774)} \quad (10-51)$$

6. The proportions of the worm and the wormgear must conform to the following limits defining the maximum and minimum pitch diameters of the worm in relation to the center distance, C , for the gear set. All dimensions are in inches.

$$\text{Maximum } D_W = C^{0.875}/1.6 \quad (10-52)$$

$$\text{Minimum } D_W = C^{0.875}/3.0 \quad (10-53)$$

7. The shaft carrying the worm must be sufficiently rigid to limit the deflection of the worm at the pitch point to the maximum value of $0.005\sqrt{P_x}$, where P_x is the axial pitch of the worm, which is numerically equal to the circular pitch, p , of the wormgear.
8. When you are analyzing a given wormgear set, the value of the rated tangential load, W_{tR} , must be greater than the actual tangential load, W_t , for satisfactory life.
9. Ratings given in this section are valid only for smooth systems such as fans or centrifugal pumps driven by an electric or hydraulic motor operating under 10 hours per day. More severe conditions, such as shock loading, internal combustion engine drives, or longer hours of operation, require the application of a service factor. Reference 14 lists several such factors based on field experience with specific types of equipment. For problems in this book, factors from Table 9-1 can be used.

Example Problem 10–10 Is the wormgear set described in Example Problem 8–4 satisfactory with regard to strength and wear when operating under the conditions of Example Problem 10–9? The wormgear has a face width of 1.25 in.

Solution From previous problems and solutions,

$$W_{tG} = 962 \text{ lb} \quad VR = m_G = 17.33$$

$$v_{tG} = 229 \text{ ft/min} \quad v_s = 944 \text{ ft/min}$$

$$D_G = 8.667 \text{ in} \quad D_W = 2.000 \text{ in}$$

Assume 58 HRC minimum for the steel worm. Assume that the bronze gear is sand cast.

Stress:

$$K_v = 1200/(1200 + v_{tG}) = 1200/(1200 + 229) = 0.84$$

$$W_d = W_{tG}/K_v = 962/0.84 = 1145 \text{ lb}$$

$$F = 1.25 \text{ in}$$

$$y = 0.125 \text{ (from Table 10–5)}$$

$$p_n = p \cos \lambda = (0.5236) \cos 14.04^\circ = 0.508 \text{ in}$$

Then,

$$\sigma = \frac{W_d}{yFp_n} = \frac{1145}{(0.125)(1.25)(0.508)} = 14,430 \text{ psi}$$

The guidelines in Section 10–11 indicate that this stress level would be adequate for either manganese or phosphor gear bronze.

Surface Durability: Use Equation (10–42):

$$W_{tR} = C_s D_G^{0.8} F_e C_m C_v \quad (10-42)$$

C Factors: The values for the *C* factors can be found from Figures 10–27 to 10–29. We find

$$C_s = 740 \text{ for sand-cast bronze} \quad \text{and} \quad D_G = 8.667 \text{ in}$$

$$C_m = 0.814 \quad \text{for } m_G = 17.33$$

$$C_v = 0.265 \quad \text{for } v_s = 944 \text{ ft/min}$$

We can use $F_e = F = 1.25$ in if this value is not greater than 0.67 times the worm diameter. For $D_W = 2.000$ in,

$$0.67D_W = (0.67)(2.00 \text{ in}) = 1.333 \text{ in}$$

Therefore, use $F_e = 1.25$ in. Then the rated tangential load is

$$W_{tR} = (740)(8.667)^{0.8}(1.25)(0.814)(0.265) = 1123 \text{ lb}$$

Because this value is greater than the actual tangential load of 962 lb, the design should be satisfactory, provided that the conditions defined for the application of Equation (10–42) are met.

10–13 EMERGING TECHNOLOGY AND SOFTWARE FOR GEAR DESIGN

Comprehending the fundamentals of gear design presented in Chapters 8–10 in this book should provide a foundation on which further growth in capabilities to perform reasonable design decisions for gear-type power transmissions can be built. The gear design field is continually adding new technologies and improving upon the methods presented here.

Literature in the field often promotes the advantages of gaining additional experience to enable more refined designs and to explore emerging technologies. This section discusses a few emerging technologies and topics beyond the scope of this book. While some technologies mentioned are not truly new and emerging, they are becoming more readily adopted by gear drive design practitioners. Also presented is a brief overview of software available to assist in the gear design process.

Emerging Gearing Technologies

It is strongly recommended that gear design professionals remain aware of the continual upgrading and updating of gear design technology as represented in the extensive suite of standards published by the American Gear Manufacturers Association (AGMA), the International Organization for Standardization (ISO), and other such organizations around the world. With experience, design professionals should also become involved in the standards development process as most of the standards are produced by volunteers representing prominent companies who produce gear drive products and the machinery to make them, or who employ such drives in their products and systems. Industry publications such as *Power Transmission Engineering* and *Gear Technology* provide timely, ongoing commentary and reporting on the state of the art in gear drives and their manufacture. (See Internet sites 10 and 14 in Chapter 9.)

Non-standard Gearing and Gear Tooth Forms. To provide a foundation for further study, this book has focused on standard gear tooth forms of the full-depth involute type with standard fillet geometry, addenda, dedenda, center distances, and other features, using methods that were discovered in the late eighteenth century. Major equipment manufacturers provide general-purpose machines to produce standard designs and suppliers of gears and gear drives benefit from standardization in terms of replacement components and are able to specify products from a variety of vendors.

Experience has shown that modifications to some standard features can be beneficial in special applications and in fields where extensive testing can be performed. Examples are automotive, ship propulsion, industrial machinery, construction equipment, and aerospace propulsion. Crowning of teeth and tip relief to promote smooth engagement, geometry modifications that accommodate deformations of teeth under heavy loads, and modified fillets to optimize bending stresses are a few areas of constant exploration. Materials technologies are also areas where fruitful developments are made for steels, other metallic materials, and the widely diverse array of plastic materials. Others pursue radical changes in gear tooth form to enhance strength, stiffness, noise reduction, or pitting resistance.

Internet site 1 describes proprietary designs called Megagear® and Unimegagear® for which increased power density, efficiency, and durability are obtained. The gear tooth profiles are optimized resulting in greater contact area between gear teeth that reduces compressive stress, increases fatigue life, and makes load distribution more uniform.

Internet site 2 describes Direct Gear Design®, an alternative method of analysis and design of involute gears, which separates gear geometry definition from tool selection to achieve the best possible performance for a particular product and application. The result is gear

geometry with asymmetric teeth and optimized fillets at the root area. Two involutes of two different base circles are defined that simultaneously increase the contact ratio and operating pressure angle beyond conventional gear limits. Specially designed gear cutting tools are used to produce the gears by hobbing or shaping. Plastic gear molding, die casting, gear forging, and powder metal processes can also be used. The application of Direct Gear Design must be justified by a significant improvement in gear performance. See also Reference 23.

Internet site 3 describes the patented MGT Frictionless Drive System® that uses the repulsive forces of magnets to provide a link between a drive shaft and the driven one while allowing both shafts to rotate completely independently of each other. Consequently there is no friction generated between them and the efficiency and life of the equipment are improved. The system can be applied either as gearing or couplings. Safety is improved because if the system is overloaded by a certain amount, the driver slips with respect to the driven member. Coupler faces do not touch and the gap between them is typically a few millimeters.

Internet site 4 and Reference 24 describe the field of non-circular gears and their manufacture. Forms can be elliptical, square, or designed to a wide variety of special functions. Sometimes used as cam substitutes in applications where torque or radial loads must be handled. Applications include speed matching on assembly lines, variable cutoff cycles for cutting products from continuous webs, linear motion with quick return, positive and negative rotation mechanisms, flowmeters, bicycle sprockets, variable-speed windshield wipers, and stop and dwell motion devices.

Peening. We have emphasized that successful gear design must demonstrate that the bending stress and contact stress in gears must be controlled to limits of the fatigue strength and pitting resistance of the material from which the gear is made. It stands to reason, therefore, that enhancing the fatigue strength and pitting resistance of the material can lead to safer, lighter, and longer lasting gears. One method of accomplishing that is called *peening*, a process of bombarding the high-stress surfaces of gears with hard materials, called *shot*, at high velocity in a controlled manner. Each impact of a piece of shot permanently dents the target material producing the final condition of compression. Shot media come in a variety of shapes such as follows:

- Cast spheres (steel, stainless steel, cast iron, aluminum oxide, zinc, titanium, and others)
- Cut wire (steel, aluminum, zinc, copper, and others)
- Beads (ceramic, glass, aluminosilicate, and plastic)
- Crushed glass, coal slag, hard rock, and garnet

The process leaves the surface with a desirable residual compressive stress and a high hardness that extends the load-carrying ability and life of the treated

component. One major objective for using shot peening is to selectively treat areas of a part that have inherently high tensile stress due to operating conditions or those for which tensile stresses at the surface are created by previous processing steps such as grinding, welding, and aggressive machining. Peening counteracts the residual tensile stresses resulting in lower net final stresses under load. Applications are found in numerous types of products from aerospace (landing gear; turbine components), automotive (gears, engine components, and structural elements), engines (crankshafts, camshafts, connecting rods, shafts, leaf springs, and coil springs), construction equipment (high-wear surfaces, actuator arms, and shafts), medical devices (replacement knees), energy production and transmission, and recreation equipment.

Internet sites 5 and 6 describe the types of equipment used for shot peening and the materials and forms of shot available. Two common types are as follows:

- Wheel blasting—Shot is introduced at the center of a rapidly spinning wheel and centrifugally accelerated as it passes to the periphery and is then flung at high velocity toward the target area.
- Air blasting—Pressurized air passes through a nozzle into which the shot is injected and then blown at high velocity toward the target.

Related products commonly called sand blasters are used to clean surfaces of scale and to produce a textured surface finish without necessarily producing the residual compressive stress in the surface. Vibratory finishing employs hard media of many materials and shapes into which parts are discharged to remove scale and deburr machined edges and surfaces, by repetitive rubbing of the media against the parts.

Software for Gear Design

As may be obvious from working through the topics and design methodologies covered in this chapter and Chapter 9, the subject of gear design is computationally demanding. This book includes a few focused calculation aids in the form of spreadsheets that give a hint to the advantages of using such computer-aided engineering approaches. Developers of several commercially available software packages with far greater capabilities for gear design covering a wide range of gear types are listed as Internet sites 7–13. Some of the developers also offer consulting services to aid in planning and implementing complex gear drives.

REFERENCES

1. American Gear Manufacturers Association. Standard 2008-D11. *Assembling Bevel Gears*. Alexandria, VA: American Gear Manufacturers Association, 2011.
2. American Gear Manufacturers Association. Standard 6022-C93 (R2014). *Design Manual for Cylindrical Wormgearing*. Alexandria, VA: American Gear Manufacturers Association, 2014.
3. American Gear Manufacturers Association. Standard AGMA 917-B97. *Design Manual for Parallel Shaft Fine-Pitch Gearing*. Alexandria, VA: American Gear Manufacturers Association, 1997.
4. American Gear Manufacturers Association. Standard 6001-E08 (R2014). *Design and Selection of Components for Enclosed Gear Drives*. Alexandria, VA: American Gear Manufacturers Association, 2014.
5. American Gear Manufacturers Association. Standard 2015/915-1-A02. *Accuracy Classification System—Tangential Measurement Tolerance Tables for Cylindrical Gears*. Alexandria, VA: American Gear Manufacturers Association, 2002.
6. American Gear Manufacturers Association. Standard AGMA 908-B89 (R2015). *Geometry Factors for Determining the Pitting Resistance and Bending Strength of Spur, Helical, and Herringbone Gear Teeth*. Alexandria, VA: American Gear Manufacturers Association, 2015.
7. American Gear Manufacturers Association. Standard AGMA 1012-G05 (R2011). *Gear Nomenclature, Definitions of Terms with Symbols*. Alexandria, VA: American Gear Manufacturers Association, 2011.
8. American Gear Manufacturers Association. Standard AGMA 2000-A88. *Gear Classification and Inspection Handbook—Tolerances and Measuring Methods for Unassembled Spur and Helical Gears (Including Metric Equivalents)*. Alexandria, VA: American Gear Manufacturers Association, 1988. Partial replacement of AGMA 390.03.
9. American Gear Manufacturers Association. Standards 2001-D04 (R2010) (based on P_d) and 2101-D04 (R2010) (based on Metric Module, m). *Fundamental Rating Factors and Calculation Methods for Involute Spur and Helical Gear Teeth*. Alexandria, VA: American Gear Manufacturers Association, 2010.
10. American Gear Manufacturers Association. Standard AGMA 2003-C10 (R2015). *Rating the Pitting Resistance and Bending Strength of Generated Straight Bevel, ZEROL® Bevel, and Spiral Bevel Gear Teeth*. Alexandria, VA: American Gear Manufacturers Association, 2015.
11. American Gear Manufacturers Association. Standard AGMA 2004-C08 (R2014). *Gear Materials, Heat Treatment and Processing Manual*. Alexandria, VA: American Gear Manufacturers Association, 2014.
12. American Gear Manufacturers Association. Standard AGMA 22849-A12. *Design Recommendations for Bevel Gears*. Alexandria, VA: American Gear Manufacturers Association, 2012.
13. American Gear Manufacturers Association. Standard AGMA 6013-A06 (R2011). *Standard for Industrial Enclosed Gear Drives*. Alexandria, VA: American Gear Manufacturers Association, 2011.
14. American Gear Manufacturers Association. Standard AGMA 6034-B92 (R2010). *Practice for Enclosed Cylindrical Wormgear Speed Reducers and Gearmotors*. Alexandria, VA: American Gear Manufacturers Association, 2010.

15. Budynas, R. G., and K. J. Nisbett. *Shigley's Mechanical Engineering Design*. 10th ed. New York: McGraw-Hill, 2015.
16. Crosher, W. P. *Design and Application of the Worm Gear*. New York: American Society of Mechanical Engineers, 2002.
17. Drago, Raymond J. *Fundamentals of Gear Design*. New York: Elsevier Science & Technology Books, 1988.
18. Radzevich, Stephen. *Dudley's Handbook of Practical Gear Design and Manufacture*. 3rd ed. Boca Raton, FL: CRC Press, 2016.
19. International Standards Organization. Standard ISO 54:1996. *Cylindrical Gears for General Engineering and for Heavy Engineering—Modules*. Geneva, Switzerland: International Standards Organization, 1996.
20. Kimotho, J., and Kihiu, J. *Design Optimization of Multistage Gear Trains*. Saarbrücken, Germany: VDM Verlag Dr. Müller GMBH & Co., 2010.
21. Lynwander, Peter. *Gear Drive Systems: Design and Application*. Boca Raton, FL: CRC Press, 1983.
22. Oberg, Erik, Franklin D. Jones, Holbrook L. Horton, and Henry H. Ryffel. *Machinery's Handbook*. 30th ed. New York: Industrial Press, 2015.
23. Kapelevich, Alexander. *Direct Gear Design*. Boca Raton, FL: CRC Press, 2013.
24. Litvin, F. L., A. Fuentes, I. Gonzalez-Perez, and K. Hayasaka. *Noncircular Gears: Design and Generation*. Cambridge, UK: Cambridge University Press, 2014.
7. TEDATA. Developer of the MDESIGN calculation and analysis software for numerous mechanical components including gears.
8. Smart Manufacturing Technology, Ltd. Developer of the MASTA gear design and analysis software and provider of design services for gear-type transmissions.
9. Universal Technical Systems, Inc. Developer of the versatile UTS technical analysis software that includes the Integrated Gear Software (IGS) for gear design.
10. Drive System Technology, Inc. Mechanical power transmission consultants and developer of the PowerGear gear design software. Company founded by Raymond Drago, Chief Engineer of Drive Systems Technology, Inc. (see Reference 17).
11. Gleason Plastic Gears. Engineering consultants for the design and production of plastic gears, utilizing their own custom plastic gear design software. The website's *Engineering and Design* page includes an animated, dynamic, full-color FEA image of gear teeth in contact that displays bending and contact stresses during power transmission.
12. KISSsoft, U.S.A., LLC. Developer of the KISSsoft gear design software for several common gear styles along with related machine components and complete power transmissions.
13. AGMA Software Products. Developer of a set of software tied directly to the AGMA standards. Included are Bevel Gears Rating Suite, Gear Rating Suite (for spur and helical gears), AGMA 2015-1-A01 Calculator (Accuracy Classification System—Tangential Measurements for Cylindrical Gears). From the home page, select *Software Products*.

INTERNET SITES RELATED TO HELICAL GEARS, BEVEL GEARS, AND WORMGEARING

Refer to the list of Internet sites at the end of Chapter 9, Spur Gears. Virtually all sites listed there are also relevant to the design of helical gears, bevel gears, and wormgearing.

1. **Power Engineering and Manufacturing, Ltd.** Manufacturer of custom speed reducers and creator of the Megagear® gear tooth form.
2. **AKGears, LLC.** Creator of the Direct Gear Design® gear tooth form and developer of its application to a variety of products and mechanical systems.
3. **Magnetic Gearing and Turbine Corporation.** Developer and producer of the MGT Frictionless Drive System® that uses the repulsive forces of magnets to provide torque and power transmission without physical contact between the mating parts.
4. **Cunningham Industries, Inc.** Manufacturer of elliptical and other non-circular gears.
5. **The Shot Peener.** A site dedicated to providers of shot peening services or machinery to perform shot peening. The site contains valuable information about the technology and its applications.
6. **Wheelabrator, Inc.** Manufacturer of equipment and media for shot peening including wheelblast and airblast processes along with vibratory finishing equipment.

PROBLEMS

Helical Gearing

1. A helical gear has a transverse diametral pitch of 8, a transverse pressure angle of $14\frac{1}{2}^\circ$, 45 teeth, a face width of 2.00 in, and a helix angle of 30° .
 - (a) If the gear transmits 5.0 hp at a speed of 1250 rpm, compute the tangential force, the axial force, and the radial force.
 - (b) If the gear operates with a pinion having 15 teeth, compute the bending stress in the pinion teeth. The power comes from an electric motor, and the drive is to a reciprocating pump. Specify a quality number for the teeth.
 - (c) Specify a suitable material for the pinion and the gear considering both strength and pitting resistance.
2. A helical gear has a normal diametral pitch of 12, a normal pressure angle of 20° , 48 teeth, a face width of 1.50 in, and a helix angle of 45° .
 - (a) If the gear transmits 2.50 hp at a speed of 1750 rpm, compute the tangential force, the axial force, and the radial force.
 - (b) If the gear operates with a pinion having 16 teeth, compute the bending stress in the pinion teeth. The power comes from an electric motor, and the drive

- is to a centrifugal blower. Specify a quality number for the teeth.
- (c) Specify a suitable material for the pinion and the gear considering both strength and pitting resistance.
 3. A helical gear has a transverse diametral pitch of 6, a transverse pressure angle of $14\frac{1}{2}^\circ$, 36 teeth, a face width of 1.00 in, and a helix angle of 45° .
 - (a) If the gear transmits 15.0 hp at a speed of 2200 rpm, compute the tangential force, the axial force, and the radial force.
 - (b) If the gear operates with a pinion having 12 teeth, compute the bending stress in the pinion teeth. The power comes from a six-cylinder gasoline engine, and the drive is to a concrete mixer. Specify a quality number for the teeth.
 - (c) Specify a suitable material for the pinion and the gear considering both strength and pitting resistance.
 4. A helical gear has a normal diametral pitch of 24, a normal pressure angle of $14\frac{1}{2}^\circ$, 72 teeth, a face width of 0.25 in, and a helix angle of 45° .
 - (a) If the gear transmits 0.50 hp at a speed of 3450 rpm, compute the tangential force, the axial force, and the radial force.
 - (b) If the gear operates with a pinion having 16 teeth, compute the bending stress in the pinion teeth. The power comes from an electric motor, and the drive is to a winch that will experience moderate shock. Specify a quality number for the teeth.
 - (c) Specify a suitable material for the pinion and the gear considering both strength and pitting resistance.
 - For Problem 5–11, complete the design of a pair of helical gears to operate under the stated conditions. Specify the geometry of the gears and the material and its heat treatment. Assume that the drive is from an electric motor unless otherwise specified. Consider both strength and pitting resistance.
 5. A pair of helical gears is to be designed to transmit 5.0 hp while the pinion rotates at 1200 rpm. The gear drives a reciprocating compressor and must rotate between 385 and 390 rpm.
 6. A helical gear pair is to be a part of the drive for a milling machine requiring 20.0 hp with the pinion speed at 550 rpm and the gear speed to be between 180 and 190 rpm.
 7. A helical gear drive for a punch press requires 50.0 hp with the pinion rotating at 900 rpm and the gear speed at 225 to 230 rpm.
 8. A single-cylinder gasoline engine has the pinion of a helical gear pair on its output shaft. The gear is attached to the shaft of a small cement mixer. The mixer requires 2.5 hp while rotating at approximately 75 rpm. The engine is governed to run at approximately 900 rpm.
 9. A four-cylinder industrial engine runs at 2200 rpm and delivers 75 hp to the input gear of a helical gear drive for a large wood chipper used to prepare pulpwood chips for paper making. The output gear must run between 4500 and 4600 rpm.
 10. A small commercial tractor is being designed for chores such as lawn mowing and snow removal. The wheel drive

system is to be through a helical gear pair in which the pinion runs at 450 rpm while the gear, mounted on the hub of the wheel, runs at 75 to 80 rpm. The wheel has an 18-in diameter. The two-cylinder gasoline engine delivers 20.0 hp to the wheels.

11. A water turbine transmits 15.0 hp to a pair of helical gears at 4500 rpm. The output of the gear pair must drive an electric power generator at 3600 rpm. The center distance for the gear pair must not exceed 4.00 in.
12. Determine the power-transmitting capacity of a pair of helical gears having a normal pressure angle of 20° , a helix angle of 15° , a normal diametral pitch of 10, 20 teeth in the pinion, 75 teeth in the gear, and a face width of 2.50 in, if they are made from SAE 4140 OQT 1000 steel. They are of typical commercial quality. The pinion will rotate at 1725 rpm on the shaft of an electric motor. The gear will drive a centrifugal pump.
13. Repeat Problem 12 with the gears made from SAE 4620 DOQT 300 carburized, case-hardened steel. Then compute the axial and radial forces on the gears.

Bevel Gears

14. A straight bevel gear pair has the following data: $N_p = 15$; $N_G = 45$; $P_d = 6$; and 20° pressure angle. If the gear pair is transmitting 3.0 hp, compute the forces on both the pinion and the gear. The pinion speed is 300 rpm. The face width is 1.25 in. Compute the bending stress and the contact stress for the teeth, and specify a suitable material and heat treatment. The gears are driven by a gasoline engine, and the load is a concrete mixer providing moderate shock. Assume that neither gear is straddle mounted.
15. A straight bevel gear pair has the following data: $N_p = 25$; $N_G = 50$; $P_d = 10$; and 20° pressure angle. If the gear pair is transmitting 3.5 hp, compute the forces on both the pinion and the gear. The pinion speed is 1250 rpm. The face width is 0.70 in. Compute the bending stress and the contact stress for the teeth, and specify a suitable material and heat treatment. The gears are driven by a gasoline engine, and the load is a conveyor providing moderate shock. Assume that neither gear is straddle mounted.
16. Design a pair of straight bevel gears to transmit 5.0 hp at a pinion speed of 850 rpm. The gear speed should be approximately 300 rpm. Consider both strength and pitting resistance. The driver is a gasoline engine, and the driven machine is a heavy-duty conveyor.
17. Design a pair of straight bevel gears to transmit 0.75 hp at a pinion speed of 1800 rpm. The gear speed should be approximately 475 rpm. Consider both strength and pitting resistance. The driver is an electric motor, and the driven machine is a reciprocating saw.

Wormgearing

18. A wormgear set has a single-thread worm with a pitch diameter of 1.250 in, a diametral pitch of 10, and a normal pressure angle of 14.5° . If the worm meshes with a wormgear having 40 teeth and a face width of 0.625 in, compute the gear pitch diameter, the center distance, and the velocity ratio. If the wormgear set is transmitting 924 lb · in of torque at its output shaft, which is rotating

at 30 rpm, compute forces on the gear, efficiency, input speed, input power, and stress on the gear teeth. If the worm is hardened steel and the gear is chilled bronze, evaluate the rated load, and determine whether the design is satisfactory for pitting resistance.

- 19.** Three designs are being considered for a wormgear set to produce a velocity ratio of 20 when the worm gear rotates at 90 rpm. All three have a diametral pitch of 12, a worm pitch diameter of 1.000 in, a gear face width of 0.500 in, and a normal pressure angle of 14.5°. One has a single-thread worm and 20 wormgear teeth; the second has a double-thread worm and 40 wormgear teeth; the third has a four-thread worm and 80 worm-gear teeth. For each design, compute the rated output torque, considering both strength and pitting resistance. The worms are hardened steel, and the wormgears are chilled bronze.

- 20.** For each of the three designs proposed in Problem 19, compute the efficiency.

The data for Problems 21–23 are given in Table 10–6. Design a wormgear set to produce the desired velocity ratio when transmitting the given torque at the output shaft for the given output rotational speed.

- 24.** Compare the two designs described in Table 10–7 when each is transmitting 1200 lb·in of torque at its output shaft, which rotates at 20 rpm. Compute the forces on the worm and the wormgear, the efficiency, and the input power required.

TABLE 10–6 Data for Problems 21–23

| Problem | VR | Torque (lb·in) | Output speed (rpm) |
|---------|-----|-------------------|-----------------------|
| 21. | 7.5 | 984 | 80 |
| 22. | 3 | 52.5 | 600 |
| 23. | 40 | 4200 | 45 |

TABLE 10–7 Designs for Problem 24

| Design | P_d | N_t | N_G | D_w | F_G | Pressure angle |
|--------|-------|-------|-------|-------|-------|-------------------|
| A | 6 | 1 | 30 | 2.000 | 1.000 | 14.5° |
| B | 10 | 2 | 60 | 1.250 | 0.625 | 14.5° |

KEYS, COUPLINGS, AND SEALS

The Big Picture

You Are the Designer

- 11–1 Objectives of This Chapter
- 11–2 Keys
- 11–3 Materials for Keys
- 11–4 Stress Analysis to Determine Key Length
- 11–5 Splines
- 11–6 Other Methods of Fastening Elements to Shafts
- 11–7 Couplings
- 11–8 Universal Joints
- 11–9 Retaining Rings and Other Means of Axial Location
- 11–10 Types of Seals
- 11–11 Seal Materials

THE BIG PICTURE

Keys, Couplings, and Seals

Discussion Map

- Keys and couplings connect functional parts of mechanisms and machines, allowing moving parts to transmit power or to locate parts relative to each other.
- Retaining rings hold assemblies together or hold parts on shafts, such as keeping a sprocket in position or holding a wheel on an axle.
- Seals protect critical components by excluding contaminants or by retaining fluids inside the housing of a machine.

This chapter will help you understand the functions and design requirements of such devices. In addition, you will learn to recognize commercially available designs and apply them properly.

Think of how two or more parts of a machine can be connected for the purpose of locating one part with respect to another. Now think about how that connection must be designed if the parts are moving and if power must be transmitted between them.

This chapter presents information on commercially available products that accomplish these functions. The generic categories of keys, couplings, and seals actually encompass numerous different designs.

A *key* is used to connect a drive member such as a belt pulley, chain sprocket, or gear to the shaft that carries it. (See Figure 11–1.) Torque and power are transmitted across the key to or from the shaft. But how does

Discover

Look around you and identify several examples of the use of keys, couplings, retaining rings, and seals in automobiles, trucks, home appliances, shop tools, gardening equipment, or bicycles.

the power get into or out of the shaft? One way might be that the output from the shaft of a motor or engine is connected to the input shaft of a transmission through a *flexible coupling* that reliably transmits power but allows for some misalignment between the shafts during operation because of the flexing of frame members or through progressive misalignment due to wear.

Seals may be difficult to see because they are typically encased in a housing or are covered in some way. Their function is to protect critical elements of a machine from contamination due to dust, dirt, or water or other fluids while allowing rotating or translating machine elements to move to accomplish their desired

functions. Seals exclude undesirable materials from the inside of a mechanism, or they hold critical lubrication or cooling fluids inside the housing of the mechanism.

Look at machines that you interact with each day, and identify parts that fit the descriptions given here. Look in the engine compartment of a car or a truck. How are drive pulleys, linkages, latches, the hinges for the hood, the fan, the windshield wipers, and any other moving part connected to something else—the frame of the car, a rotating shaft, or some other moving part? If you are familiar with the inner workings of the engine and transmission, describe how those parts are connected. Look at the steering and suspension systems, the water pump, the fuel pump, the brake fluid reservoir, and the suspension struts or shock absorbers. Try to see where seals are used. Can you see the universal joints, sometimes called the *constant-velocity* (CV) joints, in the drive train? They should be connecting the output shaft from the transmission to the final parts of the drive train as the power is delivered to the wheels.

Find a small lawn or garden tractor at home or at a local home store. Typically their mechanisms are

accessible, although protected from casual contact for safety reasons. Trace how power is transmitted from the engine, through a transmission, through a drive chain or belt, and all the way to the wheels or to the blade of a mower. How are functional parts connected together?

Look at home appliances, power tools in a home shop, and gardening equipment. Can you see parts that are held in place with *retaining rings*? These are typically thin, flat rings that are pressed onto shafts or inserted into grooves to hold a wheel on a shaft, to hold a gear or a pulley in position along the length of a shaft, or to simply hold some part of the device in place.

How are the keys, couplings, seals, retaining rings, and other connecting devices made? What materials are used? How are they installed? Can they be removed? What kinds of forces must they resist? How does their special geometry accomplish the desired function? How could they fail?

This chapter will help you become familiar with such mechanical components, with some of the manufacturers that offer commercial versions, and with correct application methods.

YOU ARE THE DESIGNER

In the first part of Chapter 8, you were the designer of a gear-type speed reducer whose conceptual design is shown in Figure 1–12. It has four gears, three shafts, and six bearings, all contained within a housing. How are the gears attached to the shafts? One way is to use keys at the interface between the hub of the gears and the shaft. You should be able to design the keys. How is the input shaft connected to the motor or engine that delivers the power? How is the output shaft connected to the driven machine? One way is to use flexible couplings. You should be able to specify commercially available couplings and apply them properly, considering the amount of torque they must transmit and how much misalignment they should permit.

How are the gears located axially along the shafts? Part of this function may be provided by shoulders machined on the shaft. But

that works only on one side. On the other side, one type of locating means is a retaining ring that is installed into a groove in the shaft after the gear is in place. Rings or spacers may be used at the left of gears A and B and at the right of gears C and D. Notice that the input and output shafts extend outside the housing. How can you keep contaminants from the outside from getting inside? How can you keep lubricating oil inside? Shaft seals can accomplish that function. Seals may also be provided on the bearings to retain lubricant inside and in full contact with the rotating balls or rollers of the bearing.

You should be familiar with the kinds of materials used for seals and with their special geometries. These concepts are discussed in this chapter.

11-1 OBJECTIVES OF THIS CHAPTER

After completing this chapter, you will be able to:

1. Describe several kinds of *keys*.
2. Specify a suitable size key for a given size shaft.
3. Specify suitable materials for keys.
4. Complete the design of keys and the corresponding keyways and keyseats, giving their complete geometries.
5. Describe *splines* and determine their torque capacity.
6. Describe several alternate methods of fastening machine elements to shafts.
7. Describe *rigid couplings* and *flexible couplings*.

8. Describe several types of flexible couplings.
9. Describe *universal joints*.
10. Describe *retaining rings* and other means of locating elements on shafts.
11. Specify suitable seals for shafts and other types of machine elements.

11-2 KEYS

A *key* is a machinery component placed at the interface between a shaft and the hub of a power-transmitting element for the purpose of transmitting torque [see Figure 11–1(a)]. The key is demountable to facilitate assembly and disassembly of the shaft system. It is installed in an axial groove machined into the shaft, called a *keyseat*.

A similar groove in the hub of the power-transmitting element is usually called a *keyway*, but it is more properly also a keyseat. The key is typically installed into the shaft keyseat first; then the hub keyseat is aligned with the key, and the hub is slid into position.

Square and Rectangular Parallel Keys

The most common type of key for shafts up to $6\frac{1}{2}$ in in diameter is the square key, as illustrated in Figure 11–1(b). The rectangular key, Figure 11–1(c), is recommended for larger shafts and is used for smaller shafts where the shorter height can be tolerated. Both the square and the rectangular keys are referred to as *parallel keys* because the top and bottom and the sides of the key are parallel. (See Internet sites 1 and 20.)

Table 11–1 gives the preferred dimensions for parallel keys as a function of shaft diameter for both U.S. sizes and SI Metric sizes. The width is approximately one-quarter of the diameter of the shaft. See References 7 and 9 for more detailed dimensions and tolerances.

The keyseats in the shaft and the hub are designed so that exactly one-half of the height of the key is bearing on the side of the shaft keyseat and the other half on the side of the hub keyseat. Figure 11–2 shows the resulting geometry. The distance Y is the radial distance from the theoretical top of the shaft, before the keyseat is machined, to the top edge of the finished keyseat to produce a keyseat depth of exactly $H/2$. To assist in machining and inspecting the shaft or the hub, the dimensions S and T can be computed and shown on the part drawings. The equations are given in Figure 11–2. Tabulated values of Y , S , and T are available in References 7 and 9.

As discussed later in Chapter 12, keyseats in shafts are usually machined with either an end mill or a circular milling cutter, producing the profile or sled runner

keyseat, respectively (refer Figure 12–7). In general practice, the keyseats and keys are left with essentially square ends and edges. But radiused keyseats and chamfered keys can be used to reduce the stress concentrations. Table 11–2 shows suggested values from ANSI Standard B17.1.

As alternates to the use of parallel keys, taper keys, gib head keys, pin keys, and Woodruff keys can be used to provide special features of installation or operation. Figure 11–3 shows the general geometry of these types of keys.

Taper Keys and Gib Head Keys

Taper keys [Figure 11–3(a) and (b)] are designed to be inserted from the end of the shaft after the hub is in position rather than installing the key first and then sliding the hub over the key as with parallel keys. The taper extends over at least the length of the hub, and the height, H , measured at the end of the hub, is the same as for the parallel key. The taper is typically $1/8$ in per foot. Note that this design gives a smaller bearing area on the sides of the key, and the bearing stress must be checked.

The *gib head key* [Figure 11–3(c)] has a tapered geometry inside the hub that is the same as that of the plain taper key. But the extended head provides the means of extracting the key from the same end at which it was installed. This is very desirable if the opposite end is not accessible to drive the key out.

Pin Keys

The *pin key*, shown in Figure 11–3(d), is a cylindrical pin placed in a cylindrical groove in the shaft and hub. Lower stress concentration factors result from this design as compared with parallel or taper keys. A close

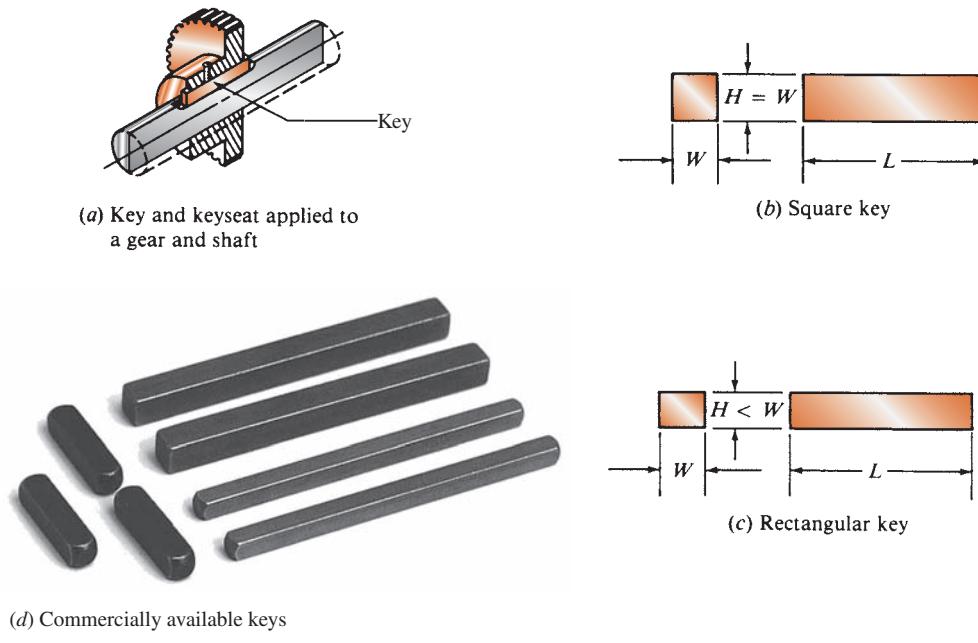


FIGURE 11–1 Parallel keys

TABLE 11–1 Key Size vs. Shaft Diameter

| U.S. inch sizes | | | | SI metric sizes | | | |
|------------------------|-------------------|----------------------|-----------------------|------------------------|-------------------|----------------------|-----------------------|
| Nominal shaft diameter | | Key dimensions | | Nominal shaft diameter | | Key dimensions | |
| Over (in) | to-including (in) | Width, <i>W</i> (in) | Height, <i>H</i> (in) | Over (mm) | to-including (mm) | Width, <i>W</i> (mm) | Height, <i>H</i> (mm) |
| 0.3125 | 0.4375 | 0.09375 | 0.09375 | 6 | 8 | 2 | 2 |
| 0.4375 | 0.5625 | 0.1250 | 0.1250 | 8 | 10 | 3 | 3 |
| 0.5625 | 0.875 | 0.1875 | 0.1875 | 10 | 12 | 4 | 4 |
| 0.875 | 1.250 | 0.2500 | 0.2500 | 12 | 17 | 5 | 5 |
| 1.250 | 1.375 | 0.3125 | 0.3125 | 17 | 22 | 6 | 6 |
| 1.375 | 1.75 | 0.375 | 0.375 | 22 | 30 | 8 | 7 |
| 1.75 | 2.25 | 0.500 | 0.500 | 30 | 38 | 10 | 8 |
| 2.25 | 2.75 | 0.625 | 0.625 | 38 | 44 | 12 | 8 |
| 2.75 | 3.25 | 0.750 | 0.750 | 44 | 50 | 14 | 9 |
| 3.25 | 3.75 | 0.875 | 0.875 | 50 | 58 | 16 | 10 |
| 3.75 | 4.50 | 1.00 | 1.00 | 58 | 65 | 18 | 11 |
| 4.50 | 5.50 | 1.25 | 1.25 | 65 | 75 | 20 | 12 |
| 5.50 | 6.50 | 1.50 | 1.50 | 75 | 85 | 22 | 14 |
| 6.50 | 7.50 | 1.75 | 1.50 | 85 | 95 | 25 | 14 |
| 7.50 | 9.00 | 2.00 | 1.50 | 95 | 110 | 28 | 16 |
| 9.00 | 11.00 | 2.50 | 1.75 | 110 | 130 | 32 | 18 |
| 11.00 | 13.00 | 3.00 | 2.00 | 130 | 150 | 36 | 20 |
| 13.00 | 15.00 | 3.50 | 2.50 | 150 | 170 | 40 | 22 |
| 15.00 | 18.00 | 4.00 | 3.00 | 170 | 200 | 45 | 25 |
| 18.00 | 22.00 | 5.00 | 3.50 | 200 | 230 | 50 | 28 |
| 22.00 | 26.00 | 6.00 | 4.00 | 230 | 260 | 56 | 32 |
| 26.00 | 30.00 | 7.00 | 5.00 | 260 | 290 | 63 | 32 |
| | | | | 290 | 330 | 70 | 36 |
| | | | | 330 | 380 | 80 | 40 |
| | | | | 380 | 440 | 90 | 45 |
| | | | | 440 | 500 | 100 | 50 |

Note: Key sizes above the horizontal line are square; others are rectangular.

fit between the pin and the groove is required to ensure that the pin does not move and that the bearing is uniform along the length of the pin.

Woodruff Keys

Where light loading and relatively easy assembly and disassembly are desired, the *Woodruff key* should be considered. Figure 11–3(e) shows the standard configuration. The circular groove in the shaft holds the key in position while the mating part is slid over the key. The stress analysis for this type of key proceeds in the manner discussed for the parallel key, taking into

consideration the particular geometry of the Woodruff key. ANSI Standard B17.2–1967 lists the dimensions for a large number of standard Woodruff keys and their mating keyseats. (See Reference 8.) Table 11–3 provides a sampling. Note that the *key number* indicates the nominal key dimensions. The last two digits give the nominal diameter, *B*, in eighths of an inch, and the digits preceding the last two give the nominal width, *W*, in thirty-seconds of an inch. For example, key number 1210 has a diameter of 10/8 in ($1\frac{1}{4}$ in), and a width of 12/32 in ($\frac{3}{8}$ in). The actual size of the key is slightly smaller than half of the full circle, as shown in dimensions *C* and *F* in Table 11–3.

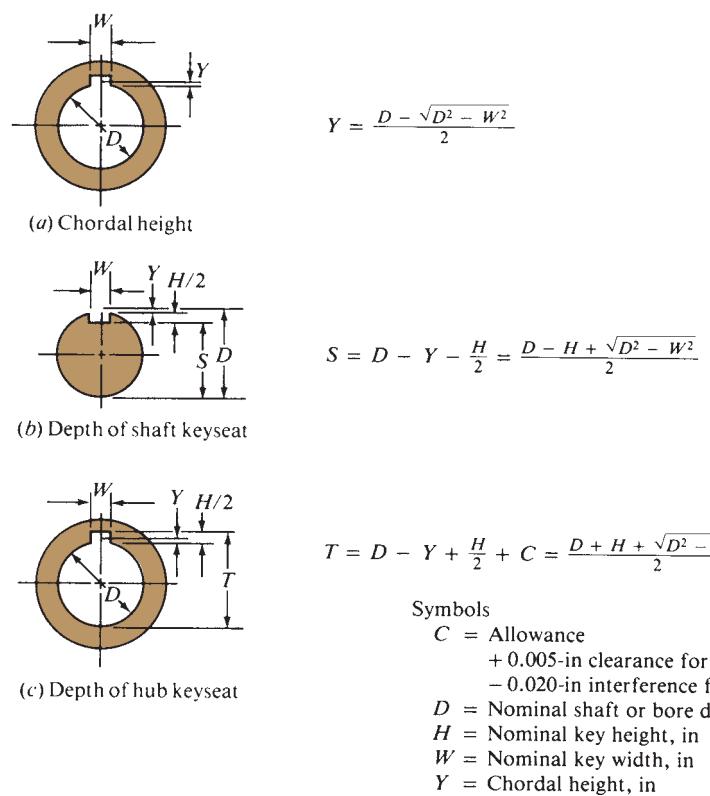


FIGURE 11-2 Dimensions for parallel keyseats

TABLE 11-2 Suggested Fillet Radii and Key Chamfers

| $H/2$, keyseat depth | | | |
|-----------------------|-----------------|---------------|--------------------|
| Over | To (incl.) | Fillet radius | 45° chamfer |
| 1/8 | 1/4 | 1/32 | 3/64 |
| 1/4 | 1/2 | 1/16 | 5/64 |
| 1/2 | 7/8 | 1/8 | 5/32 |
| 7/8 | 1 $\frac{1}{4}$ | 3/16 | 7/32 |
| 1 $\frac{1}{4}$ | 1 $\frac{3}{4}$ | 1/4 | 9/32 |
| 1 $\frac{3}{4}$ | 2 $\frac{1}{2}$ | 3/8 | 13/32 |


Note: All dimensions are given in inches.

Selection and Installation of Keys and Keyseats

The key and the keyseat for a particular application are usually designed after the shaft diameter is specified by the methods of Chapter 12. Then, with the shaft diameter as a guide, the size of the key is selected from Table 11-1. The only remaining variables are the length of the key and its material. One of these can be specified, and the requirements for the other can then be computed.

Typically the length of a key is specified to be a substantial portion of the hub length of the element in which it is installed to provide for good alignment and stable operation. But if the keyseat in the shaft is to be in the vicinity of other geometric changes, such as shoulder fillets and ring grooves, it is important to provide some axial clearance between them so that the effects of the stress concentrations are not compounded.

The key can be cut off square at its ends or provided with a radius at each end when installed in a profile

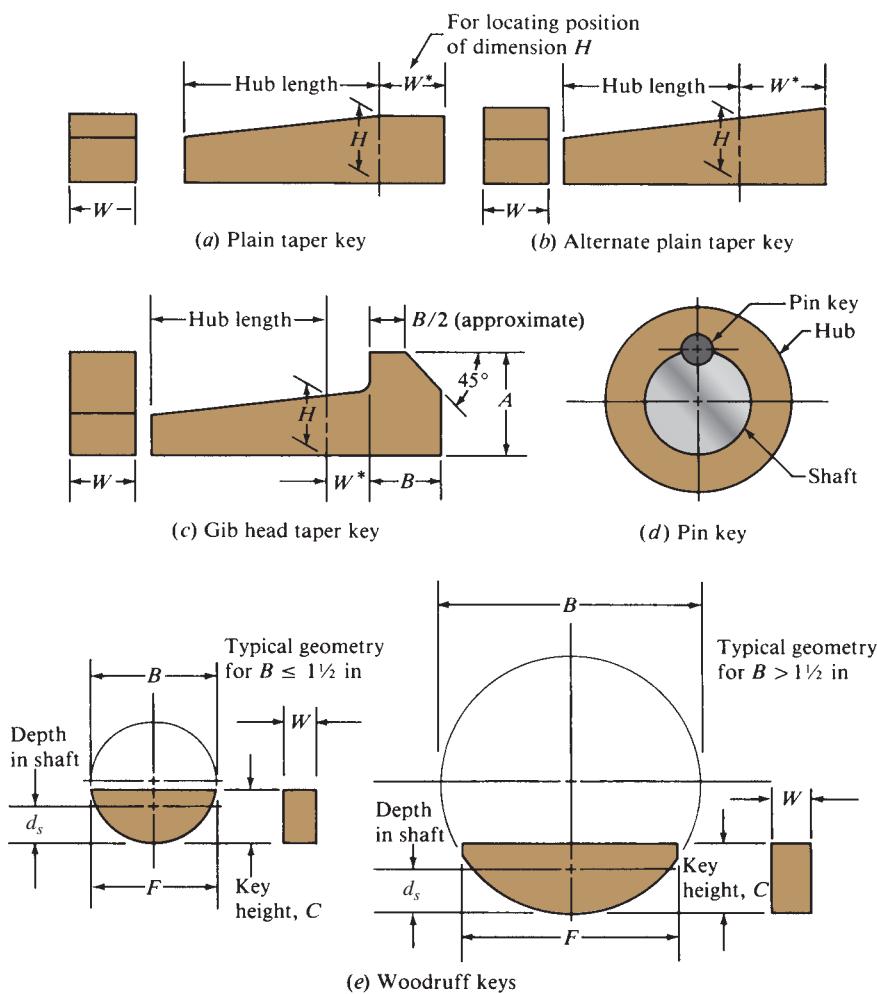

*Note: Plain and gib head taper keys have a 1/8-in taper in 12 in.

FIGURE 11-3 Key types

TABLE 11-3 Woodruff Key Dimensions

| Key number | Nominal key size, $W \times B$ | Actual length, F | Height of key, C | Shaft keyseat depth | Hub keyseat depth |
|------------|--------------------------------|--------------------|--------------------|---------------------|-------------------|
| 202 | 1/16 × 1/4 | 0.248 | 0.104 | 0.0728 | 0.0372 |
| 204 | 1/16 × 1/2 | 0.491 | 0.200 | 0.1668 | 0.0372 |
| 406 | 1/8 × 3/4 | 0.740 | 0.310 | 0.2455 | 0.0685 |
| 608 | 3/16 × 1 | 0.992 | 0.435 | 0.3393 | 0.0997 |
| 810 | 1/4 × 1 1/4 | 1.240 | 0.544 | 0.4170 | 0.1310 |
| 1210 | 3/8 × 1 1/4 | 1.240 | 0.544 | 0.3545 | 0.1935 |
| 1628 | 1/2 × 3 1/2 | 2.880 | 0.935 | 0.6830 | 0.2560 |
| 2428 | 3/4 × 3 1/2 | 2.880 | 0.935 | 0.5580 | 0.3810 |

Note: All dimensions are given in inches.

keyseat to improve location. Square-cut keys are usually used with the sled-runner-type keyseat.

The key is sometimes held in position with a set screw in the hub over the key. However, the reliability of this

approach is questionable because of the possibility of the set screw's backing out with vibration of the assembly. Axial location of the assembly should be provided by more positive means, such as shoulders, retaining rings, or spacers.

11-3 MATERIALS FOR KEYS

Keys are made from plain carbon steel, alloy steels, stainless steels, and some nonferrous metals. Even plastics are used for small devices under low loads. This book will focus primarily on steels for general industrial applications. Table 11-4 lists a variety of steels and one aluminum alloy to illustrate the types of materials available. (See Internet site 20.)

For problem solutions in this book, it is recommended that the low-carbon steel SAE 1018 be considered for most applications. It is a low-cost, readily available material and its strength is generally adequate.

If higher strength is necessary to produce a design with a reasonable length, medium-carbon SAE 1035 or 1045, or alloy steels SAE 4140 or 8630 are recommended. The high-carbon steel SAE 1095 may be used but it may have low ductility.

Where corrosion resistance is necessary, the stainless steels listed in Table 11-4 may be considered. Aluminum 6061 is less frequently used for keys but may be desirable for material compatibility reasons.

11-4 STRESS ANALYSIS TO DETERMINE KEY LENGTH

There are two basic modes of potential failure for keys transmitting power: (1) shear across the shaft/hub interface and (2) compression failure due to the

bearing action between the sides of the key and the shaft or hub material. The analysis for either failure mode requires an understanding of the forces that act on the key. Figure 11-4 shows the idealized case in which the torque on the shaft creates a force on the left side of the key. The key in turn exerts a force on the right side of the hub keyseat. The reaction force of the hub back on the key then produces a set of opposing forces that place the key in direct shear over its cross section, $W \times L$. The magnitude of the shearing force can be found from

$$F = T/(D/2)$$

The shearing stress is then

$$\tau = \frac{F}{A_s} = \frac{T}{(D/2)(WL)} = \frac{2T}{DWL} \quad (11-1)$$

In design, we can set the shearing stress equal to a design stress in shear for the maximum shear stress theory of failure:

$$\tau_d = 0.5s_y/N$$

Then the required length of the key is

◊ **Minimum Required Key Length for Shear**

$$L_{\min} = \frac{2T}{\tau_d DW} \quad (11-2)$$

TABLE 11-4 Examples of Materials Used for Keys

| Material designation | Tensile strength s_u | | Yield strength s_y | |
|-------------------------------|---------------------------|-------|-------------------------|-------|
| | (ksi) | (MPa) | (ksi) | (MPa) |
| Carbon steels (SAE) | | | | |
| 1018 | 64 | 441 | 54 | 372 |
| 1035 | 72 | 496 | 39.5 | 272 |
| 1045 | 91 | 627 | 77 | 531 |
| 1095 | 140 | 965 | 83 | 572 |
| Alloy steels (SAE) | | | | |
| 4140 | 102 | 703 | 90 | 621 |
| 8630 | 100 | 690 | 95 | 655 |
| Stainless steels (SAE) | | | | |
| 303 | 90 | 621 | 35 | 241 |
| 304 | 85 | 586 | 35 | 241 |
| 316 | 85 | 586 | 35 | 241 |
| 416 | 75 | 517 | 40 | 276 |
| Aluminum | | | | |
| 6061 | 18 | 124 | 12 | 83 |

Source: Adapted from Internet site 20.

Note: Strength properties typical, not guaranteed.

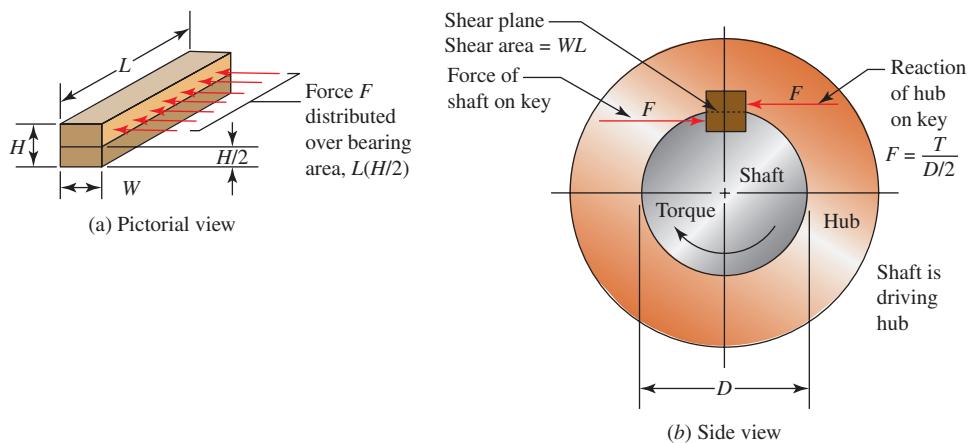


FIGURE 11-4 Forces on a key

The failure in bearing is related to the compressive stress on the side of the key, the side of the shaft keyseat, or the side of the hub keyseat. The area in compression is the same for either of these zones, $L \times (H/2)$. Thus, the failure occurs on the surface with the lowest compressive yield strength. Let's define a *design stress for compression* as

$$\sigma_d = s_y/N$$

Then the compressive stress is

$$\sigma = \frac{F}{A_c} = \frac{T}{(D/2)(L)(H/2)} = \frac{4T}{DLH} \quad (11-3)$$

Letting this stress equal the design compressive stress allows the computation of the required length of the key for this mode of failure:

▫ Minimum Required Key Length for Compression

$$L_{\min} = \frac{4T}{\sigma_d DH} \quad (11-4)$$

For the design of a square key in which the strength of the key material is lower than that of the shaft or the hub, Equations (11-2) and (11-4) produce the same result. Substituting the design stress into either equation would give

▫ Minimum Required Key Length if Key Material Is Weakest

$$L_{\min} = \frac{4TN}{DWs_y} \quad (11-5)$$

But be sure to evaluate the length from Equation (11-4) if either the shaft or the hub has a lower yield strength than the key.

DESIGN PROCEDURE FOR PARALLEL KEYS

1. Complete the design of the shaft into which the key will be installed, and specify the actual diameter at the location of the keyseat.
2. Select the size of the key from Table 11-1.
3. Specify a suitable design factor, N . In typical industrial applications, $N = 3$ is adequate to accommodate accidental overloads and shock.
4. Specify the material for the key, usually SAE 1018 steel. A higher-strength material can be used.
5. Determine the yield strength of the materials for the key, the shaft, and the hub.
6. If a square key is used and the key material has the lowest strength, use Equation (11-5) to compute the minimum required length of the key. This length will be satisfactory for both shear and bearing stress.
7. If a rectangular key is used, or if either the shaft or the hub has a lower strength than the key, use Equation (11-4) to compute the minimum required length of the key based on bearing stress. Also, use Equation (11-2) or (11-5) to compute the minimum required length based on shear of the key. The larger of the two computed lengths governs the design. Check to be sure that the computed length is shorter than the hub length. If not, a higher-strength material must be selected and the design process repeated. Alternatively, two keys or a spline can be used instead of a single key.
8. Specify the actual length of the key to be equal to or longer than the computed minimum length. A convenient standard size should be specified using the preferred basic sizes shown in Appendix A2-1. **The key should extend over all or a substantial part of the length of the hub. But the keyseat should not run into other stress raisers such as shoulders or grooves.**
9. Complete the design of the keyseat in the shaft and the keyway in the hub using the equations in Figure 11-2. ANSI Standard B17.1 should be consulted for standard tolerances on dimensions for the key and the keyseats.
10. See also Chapter 15 for additional details concerning tolerancing and chamfering.

**Example Problem
11-1**

A portion of a shaft where a gear is to be mounted has a diameter of 2.00 in. The gear transmits 2965 lb·in of torque. The shaft is to be made of SAE 1040 cold-drawn steel. The gear is made from SAE 8650 OQT 1000 steel. The width of the hub of the gear mounted at this location is 1.75 in. Design the key.

Solution From Table 11–1, the standard key dimension for a 2.00-in-diameter shaft would be 0.500-in square. See Figure 11–5 for the proposed design.

Material selection is a design decision. Let's choose SAE 1018 steel with $s_y = 54\,000 \text{ psi}$ as listed in Table 11–4.

A check of the yield strengths of the three materials in the key, the shaft, and the hub indicates that the key is the weakest material. Then Equation (11–5) can be used to compute the minimum required length of the key:

$$L = \frac{4TN}{DWS_y} = \frac{4(2965 \text{ lb} \cdot \text{in})(3)}{(2.00 \text{ in})(0.500 \text{ in})(54\,000 \text{ lb/in}^2)} = 0.659 \text{ in}$$

This length is well below the width of the hub of the gear. Notice that the design of the shaft includes retaining rings on both sides of the gear. It is desirable to keep the keyseat well clear of the ring grooves. Therefore, let's specify the length of the key to be 1.50 in.

Summary In summary, the key has the following characteristics:

Material: SAE 1018 steel keystone

Width: 0.500 in

Height: 0.500 in

Length: 1.50 in

Figure 11–5 shows some details of the completed design. A profile keyseat in the shaft is shown.

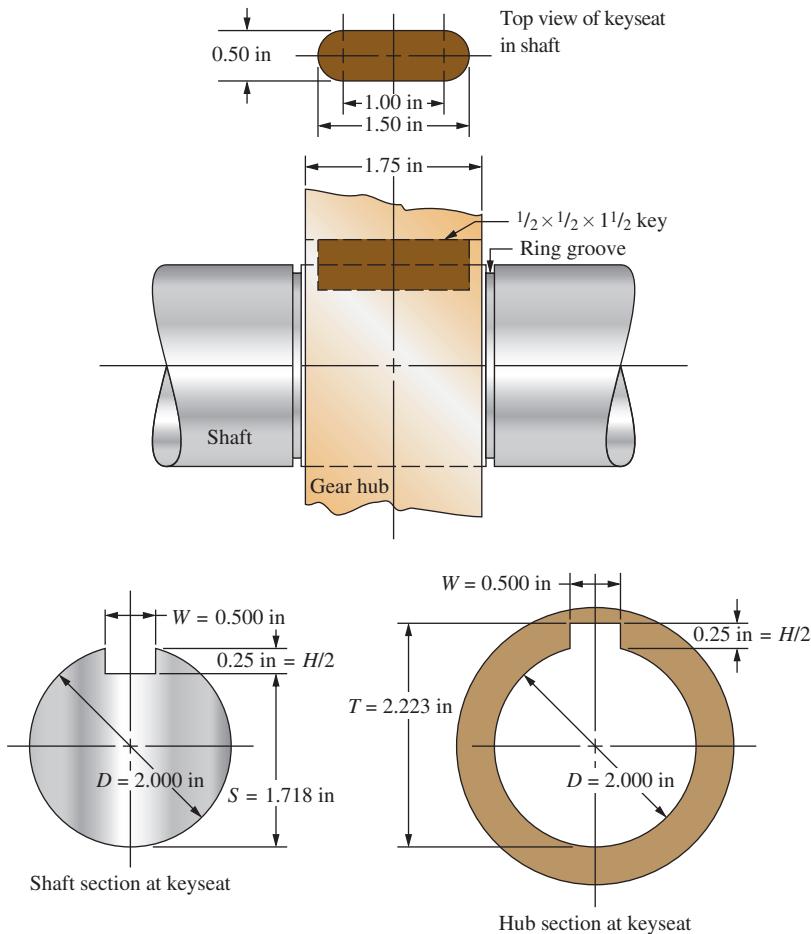


FIGURE 11-5 Details for proposed design of key and keyseats

Shear and Bearing Areas for Woodruff Keys

The geometry of Woodruff keys makes it more difficult to determine the shear area and the bearing area for use in stress analyses. Figure 11–3(e) shows that the bearing area on the side of the key in the keyseat is a segment of a circle. The shear area is the product of the chord of that segment times the thickness of the key. The following equations describe the geometry:

Given

B = nominal diameter of the cylinder of which the key is a part

W = width (thickness) of the key

C = full height of the key

d_s = depth of the keyseat in the shaft

Results

$$\text{Shear area} = A_s = 2W\sqrt{d_s(B - d_s)} \quad (11-6)$$

To define the equations for the bearing areas on the side of the key in the shaft and in the hub, we first define three geometric variables, G , L , and J , as follows:

$$G = (\pi/180)B \cos^{-1}\{2[(B/2) - d_s]/B\}$$

$$L = 2\sqrt{d_s(B - d_s)}$$

$$J = (\pi/180)B \cos^{-1}\{2[(B/2) - C]/B\}$$

Bearing Area in Shaft

$$A_{c\text{ shaft}} = 0.5\{G(B/2) - L[(B/2) - d_s]\} \quad (11-7)$$

$$A_{c\text{ hub}} = 0.5\{J(B/2) - F[(B/2) - C]\} - A_{c\text{ shaft}} \quad (11-8)$$

11-5 SPLINES

A *spline* can be described as a series of axial keys machined into a shaft, with corresponding grooves machined into the bore of the mating part (gear, sheave, sprocket, and so on; see Figure 11–6). The splines perform the same function as a key in transmitting torque from the shaft to the mating element. The advantages of splines over keys are many. Because usually four or more splines are used, as compared with one or two keys, a more uniform transfer of the torque and a lower loading on a given part of the shaft/hub interface result. The splines are integral with the shaft, so no relative motion can occur as between a key and the shaft. Splines are accurately machined to provide a controlled fit between the mating internal and external splines. The surface of the spline is often hardened to resist wear and to facilitate its use in applications in which axial motion of the mating element is desired. Sliding motion between a standard parallel key and the mating element should not be permitted. Because of the multiple splines on the shaft, the mating element can be indexed to various positions.

Splines can be either straight-sided or involute. The involute form is preferred because it provides for self-centering of the mating element and because it can be machined with standard hobs used to cut gear teeth.

Straight-Sided Splines

Straight splines are made according to the specifications of the Society of Automotive Engineers (SAE) and usually contain 4, 6, 10, or 16 splines. Figure 11–6 shows three styles. The six-spline version shows the basic design

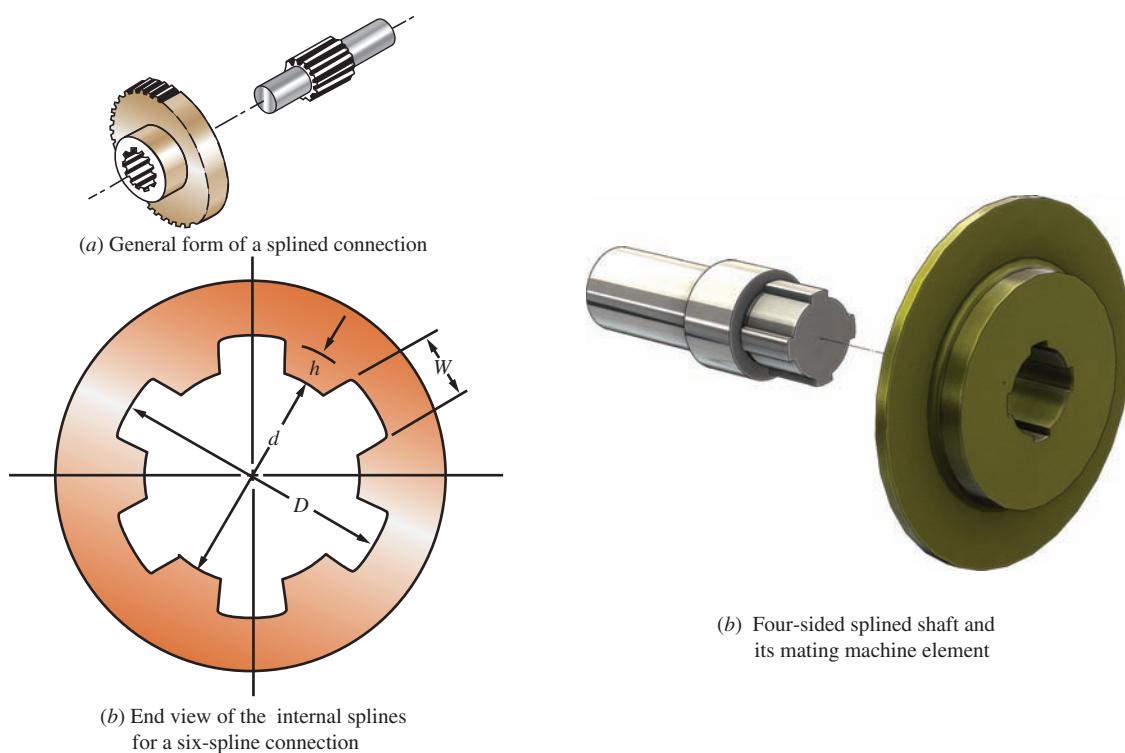


FIGURE 11-6 Straight-sided splines with different numbers of splines

TABLE 11-5 Formulas for SAE Straight Splines

| Number of splines | W, for all fits | A: Permanent fit | | B: To slide without load | | C: To slide under load | |
|-------------------|-----------------|------------------|--------|--------------------------|--------|------------------------|--------|
| | | h | d | h | d | h | d |
| Four | 0.241D | 0.075D | 0.850D | 0.125D | 0.750D | | |
| Six | 0.250D | 0.050D | 0.900D | 0.075D | 0.850D | 0.100D | 0.800D |
| Ten | 0.156D | 0.045D | 0.910D | 0.070D | 0.860D | 0.095D | 0.810D |
| Sixteen | 0.098D | 0.045D | 0.910D | 0.070D | 0.860D | 0.095D | 0.810D |

Note: These formulas give the maximum dimensions for W, h, and d.

parameters of D (major diameter), d (minor diameter), W (spline width), and h (spline depth). The dimensions for d , W , and h are related to the nominal major diameter D by the formulas given in Table 11-5. Note that the values of h and d differ according to the use of the spline. The permanent fit, A, is used when the mating part is not to be moved after installation. The B fit is used if the mating part will be moved along the shaft without a torque load. When the mating part must be moved under load, the C fit is used.

The torque capacity for SAE splines is based on the limit of 1000-psi bearing stress on the sides of the splines, from which the following formula is derived:

◇ Torque Capacity for a Spline

$$T = 1000NRh \quad (11-9)$$

where N = number of splines

R = mean radius of the splines

h = depth of the splines (from Table 11-5)

The torque capacity is per inch of length of the spline. But note that

$$R = \frac{1}{2} \left[\frac{D}{2} + \frac{d}{2} \right] = \frac{D + d}{4}$$

$$h = \frac{1}{2} (D - d)$$

Then

$$T = 1000N \frac{(D + d)}{4} \frac{(D - d)}{2} = 1000N \frac{(D^2 - d^2)}{8} \quad (11-10)$$

This equation can be further refined for each of the types of splines in Table 11-5 by substitution of the appropriate relationships for N and d . For example, for the six-spline version and the B fit, $N = 6$, $d = 0.850D$, and $d^2 = 0.7225D^2$.

Then

$$T = 1000(6) \frac{[D^2 - 0.7225D^2]}{8} = 208D^2$$

Thus, the required diameter to transmit a given torque would be

◇ Required Spline Diameter for a given Torque

$$D = \sqrt{T/208}$$

In these formulas, dimensions are in inches and the torque is in pound-inches. We use this same approach to find the torque capacities and required diameters for the other versions of straight splines (Table 11-6).

The graphs in Figure 11-7 enable you to choose an acceptable diameter for a straight-sided spline to carry a given torque, depending on the desired fit, A, B, or C. The data were taken from Table 11-6.

Involute Splines

Involute splines are typically made with pressure angles of 30° , 37.5° , or 45° . The 30° form is illustrated in Figure 11-8, showing the two types of fit that can be

TABLE 11-6 Torque Capacity for Straight Splines per Inch of Spline Length

| Number of splines | Fit | Torque capacity | Required diameter |
|-------------------|-----|-----------------|-------------------|
| 4 | A | $139D^2$ | $\sqrt{T/139}$ |
| 4 | B | $219D^2$ | $\sqrt{T/219}$ |
| 6 | A | $143D^2$ | $\sqrt{T/143}$ |
| 6 | B | $208D^2$ | $\sqrt{T/208}$ |
| 6 | C | $270D^2$ | $\sqrt{T/270}$ |
| 10 | A | $215D^2$ | $\sqrt{T/215}$ |
| 10 | B | $326D^2$ | $\sqrt{T/326}$ |
| 10 | C | $430D^2$ | $\sqrt{T/430}$ |
| 16 | A | $344D^2$ | $\sqrt{T/344}$ |
| 16 | B | $521D^2$ | $\sqrt{T/521}$ |
| 16 | C | $688D^2$ | $\sqrt{T/688}$ |

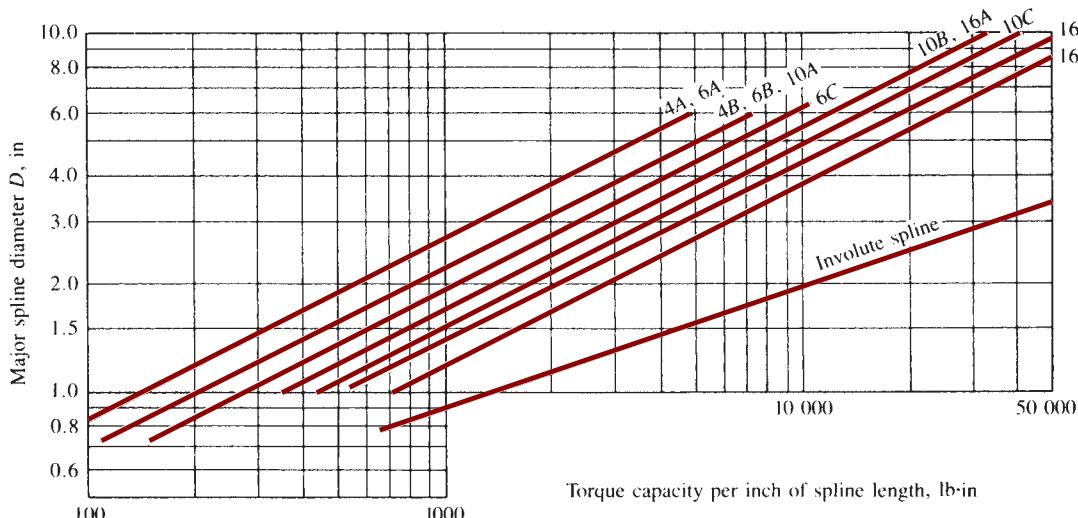


FIGURE 11-7 Torque capacity per inch of spline length, lb · in for straight-sided splines

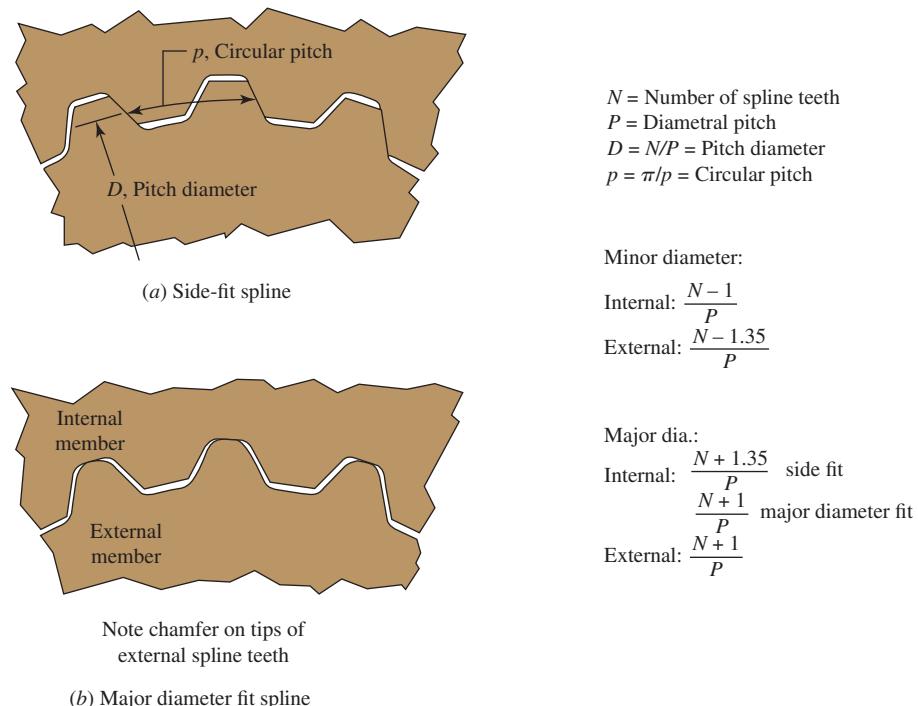


FIGURE 11-8 30° involute spline

specified. The *major diameter fit* produces accurate concentricity between the shaft and the mating element. In the *side fit*, contact occurs only on the sides of the teeth, but the involute form tends to center the shaft in the mating splined hub.

Figure 11-8 also gives some of the basic formulas for key features of involute splines in the U.S. Customary Unit System with dimensions in inches. (See Reference 5.) The terms are similar to those for involute spur gears, which are discussed more completely in Chapter 8. The basic spline size is governed by its *diametral pitch*, P :

$$P = N/D \quad (11-11)$$

where N = number of spline teeth

D = pitch diameter

The diametral pitch, then, is the *number of teeth per inch of pitch diameter*. Only even numbers of teeth from 6 to 60 are typically used. Up to 100 teeth are used on some 45° splines. Note that the pitch diameter lies *within* the tooth and is related to the major and minor diameters by the relationships shown in Figure 11-8.

The *circular pitch*, p , is the distance from one point on a tooth to the corresponding point on the next adjacent tooth, measured along the pitch circle. To find the

nominal value of p , divide the circumference of the pitch circle by the number of spline teeth. That is,

$$p = \pi D/N \quad (11-12)$$

But because $P = N/D$, we can also say

$$p = \pi P \quad (11-13)$$

The *tooth thickness*, t , is the thickness of the tooth measured along the pitch circle. Then the theoretical value is

$$t = p/2 = \pi/2P$$

The nominal value of the width of the tooth space is equal to t .

Standard Diametral Pitches. The following are the 17 standard diametral pitches in common use:

| | | | | | | | | |
|-----|----|----|----|----|----|----|----|-----|
| 2.5 | 3 | 4 | 5 | 6 | 8 | 10 | 12 | 16 |
| 20 | 24 | 32 | 40 | 48 | 64 | 80 | 96 | 128 |

The common designation for an involute spline is given as a fraction, P/P_s , where P_s is called the *stub pitch* and is always equal to $2P$. Thus, if a spline had a diametral pitch of 4, it would be called a 4/8 pitch spline. For convenience, we will use only the diametral pitch.

Length of Splines. Common designs use spline lengths from $0.75D$ to $1.25D$, where D is the pitch diameter of the spline. If these standards are used, the shear strength of the splines will exceed that of the shaft on which they are machined.

Metric Module Splines. The dimensions of splines made to metric standards are related to the *module*, m , where

$$m = D/N \quad (11-14)$$

and both D and m are in millimeters. (See Reference 6.) Note that the symbol Z is used in place of N for the number of teeth in standards describing metric splines. Other features of metric splines can be found from the following formulas:

$$\text{Pitch diameter} = D = mN \quad (11-15)$$

$$\text{Circular pitch} = p = \pi m \quad (11-16)$$

$$\text{Basic tooth thickness} = t = \pi m/2 \quad (11-17)$$

Standard Modules. There are 15 standard modules:

| | | | | | | | |
|------|------|------|------|------|------|------|------|
| 0.25 | 0.50 | 0.75 | 1.00 | 1.25 | 1.50 | 1.75 | 2.00 |
| 2.50 | 3 | 4 | 5 | 6 | 8 | 10 | |

Design Aids

Refer References 9–11 for additional design guidelines. Reference 9 includes extensive tables of data for splines and offers application and design information. Reference 10 gives information on the application, operation, dimensioning, and manufacture of involute splines as applied to automotive applications. Data are included on allowable shear stress, allowable compressive stress, wear life factor, spline overload factor, and fatigue life factor. Reference 11 focuses on metric module splines.

11-6 OTHER METHODS OF FASTENING ELEMENTS TO SHAFTS

The following discussion will acquaint you with some of the ways in which power-transmitting elements can be attached to shafts without keys or splines. In most cases the designs have not been standardized, and analysis of individual cases, considering the forces exerted on the elements and the manner of loading of the fastening means, is necessary. In several of the designs, the analysis of shear and bearing will follow a procedure similar to that shown for keys. If a satisfactory analysis is not possible, testing of the assembly is recommended.

Pinning

With the element in position on the shaft, a hole can be drilled through both the hub and the shaft, and a pin can be inserted in the hole. Figure 11-9 shows three examples of this approach. The straight, solid, cylindrical pin is subjected to shear over two cross sections. If there is a

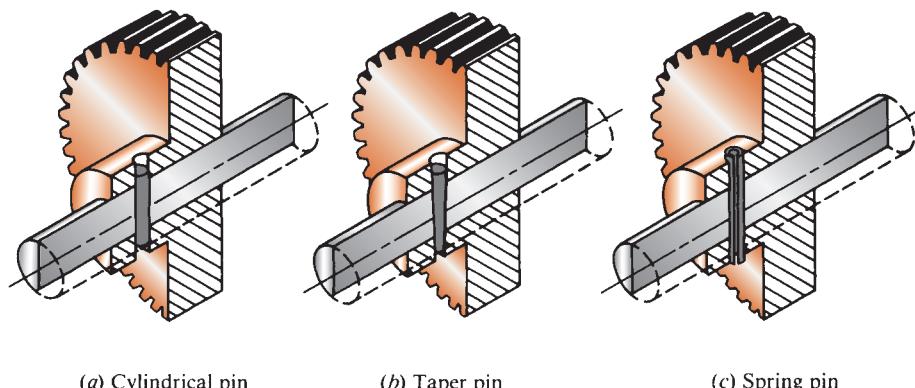


FIGURE 11-9 Pinning

force, F , on each end of the pin at the shaft/hub interface, and if the shaft diameter is D , then

$$T = 2F(D/2) = FD$$

or $F = T/D$. With the symbol d representing the pin diameter, the shear stress in the pin is

$$\tau = \frac{F}{A_s} = \frac{T}{D(\pi d^2/4)} = \frac{4T}{D(\pi d^2)} \quad (11-18)$$

Letting the shear stress equal the design stress in shear as before, solving for d gives the required pin diameter:

❖ Required Diameter for a Pin

$$d = \sqrt{\frac{4T}{D(\pi)(\tau_d)}} \quad (11-19)$$

Sometimes the diameter of the pin is purposely made small to ensure that the pin will break if a moderate overload is encountered, in order to protect critical parts of a mechanism. Such a pin is called a *shear pin*.

One problem with a cylindrical pin is that fitting it adequately to provide precise location of the hub and to prevent the pin from falling out is difficult. The *taper pin* overcomes some of these problems, as does the *split spring pin* shown in Figure 11-9(c). For the split spring pin, the hole is made slightly smaller than the pin diameter so that a light force is required to assemble the pin in the hole. The spring force retains the pin in the hole and holds the assembly in position. But, of course, the presence of any of the pin-type connections produces stress concentrations in the shaft. (See Internet site 1.)

Keyless Hub to Shaft Connections

Using a steel ring compressed tightly around a smooth shaft allows torque to be transmitted between the hub of a power-transmitting element and a shaft without having a key between the two elements. Figure 11-10 shows a commercially available product called a *Locking Assembly™* from Ringfeder® Corporation that employs this principle.

The Locking Assembly™ employs steel rings with opposing mating tapers held together with a series of fasteners. With the Locking Assembly™ placed completely within a counter bore of the hub of virtually any kind of power-transmitting element such as a gear, sprocket, fan wheel, cam, coupling, or turbine rotor, the fasteners can then be tightened. Initially there is a small clearance between the inside diameter of the locking device and the shaft as well as the hub bore. This clearance facilitates easy assembly and positioning of the hub. After the hub is positioned in the desired location on the shaft, the fasteners are tightened to a specified torque in a specific sequence. As the bolts are tightened, they draw the opposing tapered rings together, generating a radial movement of the inner ring toward the shaft and a simultaneous outward movement of the outer ring toward the



(a) A variety of styles



(b) Locking assembly applied to a gear

FIGURE 11-10 Ringfeder® Locking Assemblies
(Used by Ringfeder Power Transmission USA Corp.)

ID of the hub. Once the initial clearances are eliminated, further tightening of the bolts results in a high pressure against the shaft and the hub. When the bolts are properly torqued using a torque wrench, the final contact pressure combined with friction allows for the transmission of a predetermined and predictable amount of torque between the hub and the shaft.

The connection can transmit axial forces in the form of thrust loads as well as torque as with helical gears, for example. Table 11-7 lists examples of torque and axial force capacities for selected sizes of one model of the Ringfeder Locking Assemblies®. All the metric data are for catalog metric sizes with capacities given for torque in kN·m and axial force in kN. Data in the upper nonshaded part for the inch-size models are from catalog data with capacities given for torque in lb·ft and axial force in lb. The shaft sizes listed are fairly close to the metric sizes in the left part of the table to illustrate comparisons. The lower shaded part shows data in U.S. units converted from the metric data for the larger sizes because the maximum standard inch-size model is for a shaft size of 7.875 in.

Unlike a thermal or pressure fit connection, the locking device can be easily removed since it is a *mechanical shrink fit*. The pressures generated within the locking device itself allow the stresses to remain within the elastic limits of the materials. Removal is simply done by carefully loosening the screws, thus allowing the rings to slide apart and return the Locking Assembly™ to its original relaxed condition. The element can then be repositioned or removed at any time. Some locking devices have self-releasing taper angles, which allow them to self-release when the fasteners are loosened. Other locking devices have self-locking tapers that require the gentle pressing

TABLE 11-7 Capacities of Selected Sizes of Ringfeder Locking Assemblies

| Metric sizes | | | Inch sizes | | |
|--------------------|-------------------------------------|--------------------------------------|--------------------|--------------------------------------|--------------------------------------|
| Shaft size (mm) | Transmissible torque (kN · m) | Transmissible axial force (kN) | Shaft size (in) | Transmissible torque (lb · ft) | Transmissible axial force (lb) |
| 25 | 0.460 | 30.0 | 1.000 | 337 | 8088 |
| 50 | 2.07 | 80.0 | 2.000 | 1808 | 21 696 |
| 75 | 5.81 | 160 | 3.000 | 4332 | 34 656 |
| 100 | 11.1 | 220 | 4.000 | 8489 | 50 934 |
| 150 | 28.0 | 380 | 6.000 | 22 762 | 91 048 |
| 200 | 63.5 | 640 | 7.875 | 46 707 | 142 345 |
| 300 | 183 | 1220 | 11.8 | 134 987 | 274 281 |
| 400 | 384 | 1920 | 15.7 | 283 252 | 431 655 |
| 600 | 896 | 2989 | 23.6 | 660 921 | 671 987 |
| 800 | 1550 | 3876 | 31.5 | 1 143 334 | 871 402 |
| 1000 | 2375 | 4749 | 39.4 | 1 751 145 | 1 067 670 |

Converted from metric data

Note: All unshaded data are from catalog listings.


apart of the locking device parts. Different applications dictate which type of device is better suited.

Advantages of the keyless connection are the elimination of keys, keyways, or splines, and the cost of machining them; tight fit of the driving element around the shaft; the ability to transmit reversing or dynamically changing loads; and easy assembly, disassembly, and adjustment of the elements. General engineering information is provided on Internet site 2 for Ringfeder® Corporation for installation dimensions, tolerances, lubrication, and surface finishes required. The rated torque values are for use on solid shafts; hollow shafts require additional analysis.


Special considerations are necessary for the hub design to ensure that stresses remain below the yield strength of the hub material.

Polygon Hub to Shaft Connection


Figure 11-11 shows a shaft to hub connection that employs special mating polygon shapes to transmit torque without keys or splines. See Internet site 18 for available sizes and application information. German standards DIN 32711 and 32712 describe the forms. They can be produced on shaft sizes from 0.188 in

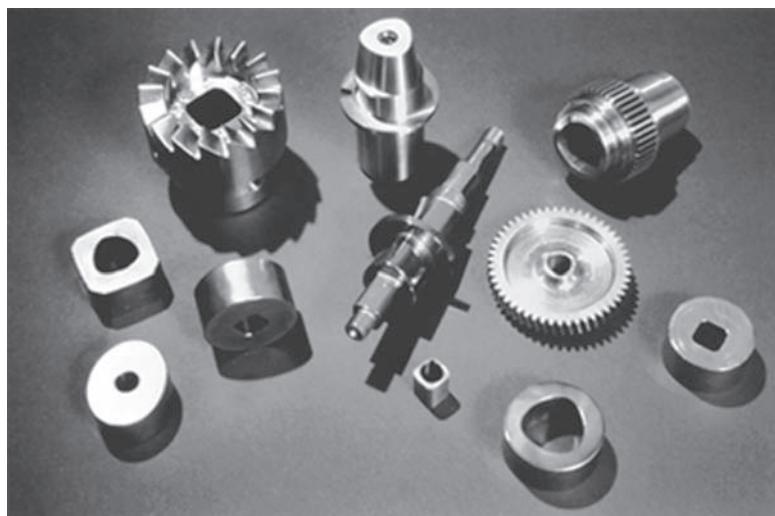

Polygon profile produced in a variety of products

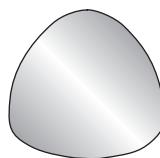

Three-sided P3 external profile

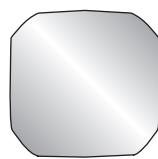

Four-sided PC4 external profile

FIGURE 11-11 Polygon hub to shaft connections (Used by General Polygon Systems, Inc.)

(4.76 mm) to 8.00 in (203 mm). The three-sided configuration is called the P3 profile, and the four-sided design is called the PC4 profile. CNC turning and grinding can be used to produce the external form while broaching typically produces the internal form. Torque is transmitted by distributing the load on each side of the polygon, eliminating the shearing action inherent with keys or splines. Dimensions can be controlled with tight or press fits for precision, backlash-free location or with a sliding fit for ease of assembly.

Split Taper Bushing

A *split taper bushing* (see Figure 11–12) uses a key to transmit torque. Axial location on the shaft is provided by the clamping action of a split bushing having a small taper on its outer surface. When the bushing is pulled into a mating hub with a set of capscrews, the bushing is brought into tight contact with the shaft to hold the assembly in the proper axial position. The small taper locks the assembly together. Removal of the bushing is accomplished by removing the capscrews and using them in push-off holes to force the hub off the taper. The assembly can then be easily disassembled.

Set Screws

A *set screw* is a threaded fastener driven radially through a hub to bear on the outer surface of a shaft (see Figure 11–13). The point of the set screw is flat, oval, cone-shaped, cupped, or any of several proprietary forms. The point bears on the shaft or digs slightly into its surface. Thus, the set screw transmits torque by the friction between the point and the shaft or by the resistance of the material in shear. The capacity for torque transmission is somewhat variable, depending on the hardness of the shaft material and the clamping force created when the screw is installed. Furthermore, the screw may loosen during operation because of vibration. For these reasons, set screws should be used with care. Some manufacturers provide set screws with plastic inserts in the side among the threads. When the set screw is screwed into a tapped hole, the plastic is deformed by the threads and holds the

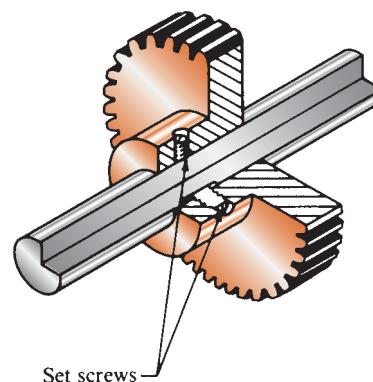


FIGURE 11-13 Set screws

screw securely, resisting vibration. Using a liquid adhesive also helps resist loosening. (See Internet site 21.)

Another problem with using set screws is that the shaft surface is damaged by the point; this damage may make disassembly difficult. Machining a flat on the surface of the shaft may help reduce the problem and also produce a more consistent assembly.

When set screws are properly assembled on typical industrial shafting, their force capability is approximately as follows (see Reference 9):

| Screw Diameter (in) | Holding Force (lb) |
|---------------------|--------------------|
| 1/4 | 100 |
| 3/8 | 250 |
| 1/2 | 500 |
| 3/4 | 1300 |
| 1 | 2500 |

Taper and Screw

The power-transmitting element (gear, sheave, sprocket, or other) that is to be mounted at the end of a shaft can be secured with a screw and a washer in the manner shown in Figure 11–14(a). The taper provides good concentricity and moderate torque transmission capacity. Because of the machining required, the connection is fairly costly. A modified form uses the tapered shaft with

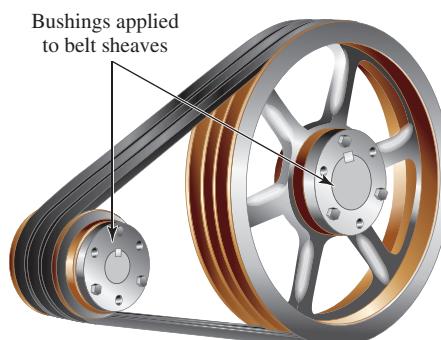
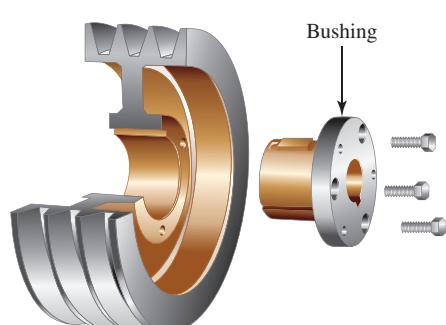


FIGURE 11-12 V-belt sheaves having three grooves with a split taper bushing for shaft mounting

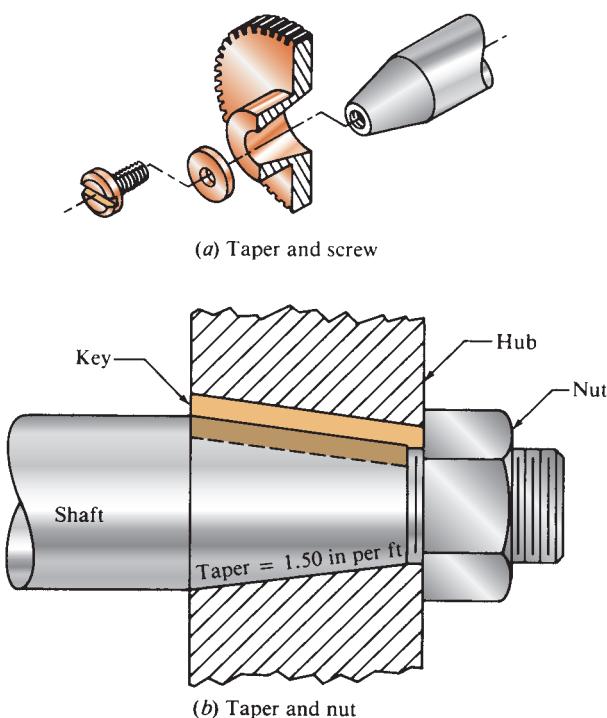


FIGURE 11-14 Tapered shaft for fastening machine elements to shafts

a threaded end for the application of a nut, as shown in Figure 11-14(b). The inclusion of a key lying in a keyseat machined parallel to the taper increases the torque-transmitting capacity greatly and ensures positive alignment.

Press Fit

Making the diameter of the shaft greater than the bore diameter of the mating element results in an interference fit. The resulting pressure between the shaft and the hub permits the transmission of torque at fairly high levels, depending on the degree of interference. This is discussed in more detail in Chapter 13. Sometimes the press fit is combined with a key, with the key providing the positive drive and the press fit ensuring concentricity and holding the part in position axially.

Molding

Plastic and die cast gears can be molded directly to their shafts. Often the gear is applied to a location that is knurled to improve the ability to transmit torque. A modification of this procedure is to take a separate gear blank with a prepared hub, locate it over the proper position on a shaft, and then cast zinc into the space between the shaft and the hub to lock them together.

11-7 COUPLINGS

The term *coupling* refers to a device used to connect two shafts together at their ends for the purpose of transmitting power. There are two general types of couplings: rigid and flexible.

Rigid Couplings

Rigid couplings are designed to draw two shafts together tightly so that no relative motion can occur between them. This design is desirable for certain kinds of equipment in which precise alignment of two shafts is required and can be provided. In such cases, the coupling must be designed to be capable of transmitting the torque in the shafts.

Figure 11-15 shows three styles of rigid couplings. (See Internet site 3.) For the style in part (a), the two flanged parts are installed on the shafts to be coupled and the bolts in the flange are drawn together by a series of bolts. The load path is then from the driving shaft to its flange, through the bolts, into the mating flange, and out to the driven shaft. The torque places the bolts in shear. The total shear force on the bolts depends on the radius of the bolt circle, $D_{bc}/2$, and the torque, T . That is,

$$F = T/(D_{bc}/2) = 2T/D_{bc}$$

Letting n be the number of bolts, the shear stress in each bolt is

$$\tau = \frac{F}{A_s} = \frac{F}{n(\pi d^2/4)} = \frac{2T}{D_{bc}n(\pi d^2/4)} \quad (11-20)$$

Letting the stress equal the design stress in shear and solving for the bolt diameter, we have

♦ Required Bolt Diameter for Rigid Coupling

$$d = \sqrt{\frac{8T}{D_{bc}n\pi\tau_d}} \quad (11-21)$$

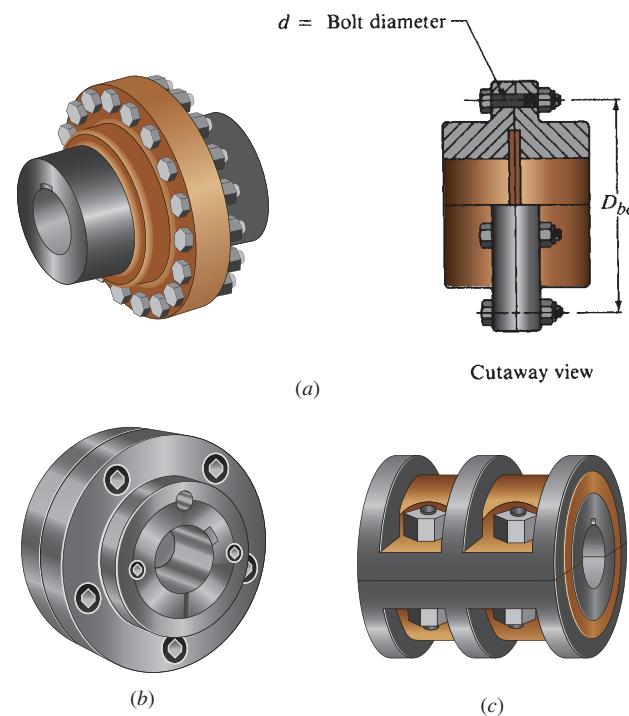


FIGURE 11-15 Rigid coupling

Notice that this analysis is similar to that for pinned connections in Section 11–6. The analysis assumes that the bolts are the weakest part of the coupling.

The style in Figure 11–15(b) is called a *taper-lock rigid coupling*, available in eight sizes capable of transmitting torques from 5050 lb·in to 254 500 lb·in (655 N·m to 33 000 N·m) and accommodating shaft sizes from 0.50 in to 6.00 in (12.7 mm to 152 mm). Figure 11–15(c) is called a *ribbed rigid coupling* available in bore sizes up to 7.00 in (178 mm) and can transmit up to 254 400 lb·in (33 000 N·m) of torque. (See Internet site 3.)

Rigid couplings should be used only when the alignment of the two shafts can be maintained very accurately, not only at the time of installation but also during operation of the machines. If significant angular, radial, or axial misalignment occurs, stresses that are difficult to predict and that may lead to early failure due to fatigue will be induced in the shafts. These difficulties can be overcome by the use of flexible couplings.

Flexible Couplings

Flexible couplings are designed to transmit torque smoothly while permitting some axial, radial, and angular misalignment. The flexibility is such that when misalignment does occur, parts of the coupling move with little or no resistance. Thus, no significant axial or bending stresses are developed in the shaft.

Many types of flexible couplings are available commercially, as shown in Figures 11–16 through 11–25. Each is designed to transmit a given limiting torque. The manufacturer's catalog lists the design data from which you can choose a suitable coupling. Remember that torque equals power divided by rotational speed. So for a given size of coupling, as the speed of rotation increases, the amount of power that the coupling can transmit also increases, although not always in direct proportion. Of course, centrifugal effects determine the upper limit of speed.



FIGURE 11–16 Chain coupling. Torque is transmitted through a double roller chain. Clearances between the chain and the sprocket teeth on the two coupling halves accommodate misalignment.

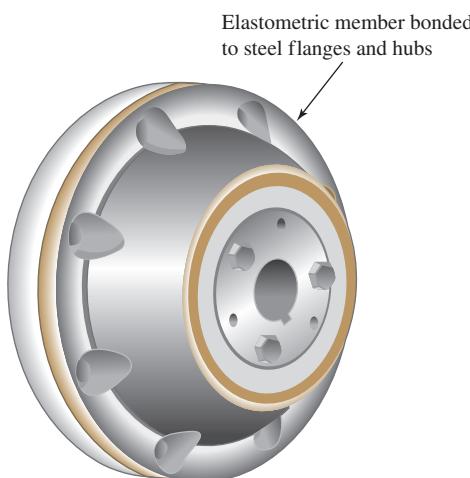


FIGURE 11–17 Elastomeric coupling. The features of this coupling are that it (1) generally minimizes torsional vibration; (2) cushions shock loads; (3) compensates for parallel misalignment up to $1/32$ in; (4) accommodates angular misalignment of $\pm 3^\circ$; and (5) provides adequate end float, $\pm 1/32$ in

The degree of misalignment that can be accommodated by a given coupling should be obtained from the manufacturer's catalog data, with values varying with the size and design of the coupling. Small couplings may be limited to parallel misalignment of 0.005 in, although larger couplings may allow 0.030 in or more. Typical allowable angular misalignment is $\pm 3^\circ$. Axial movement allowed, sometimes called *end float*, is up

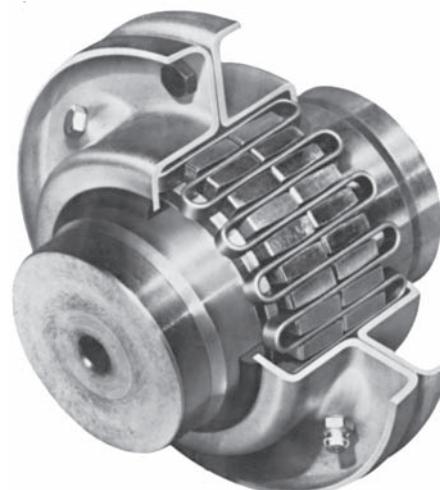


FIGURE 11–18 Flexible grid coupling. Torque is transmitted through a flexible spring steel grid. Flexing of the grid permits misalignment and makes it torsionally resilient to resist shock loads.

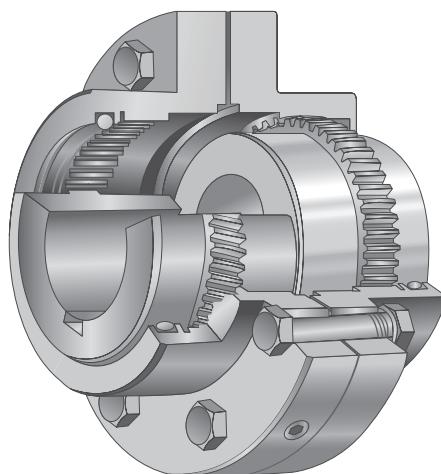


FIGURE 11-19 Gear coupling. Torque is transmitted between crown-hobbed teeth from the coupling half to the sleeve. The crown shape on the gear teeth permits misalignment



FIGURE 11-20 Bellows coupling. The inherent flexibility of the bellows accommodates the misalignment (Stock Drive Products, New Hyde Park, NY)

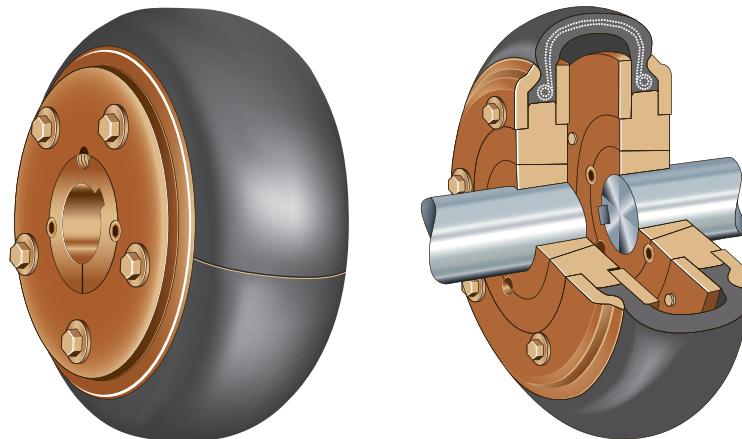


FIGURE 11-21 PARA-FLEX® coupling. Using an elastomeric element permits misalignment and cushions shocks

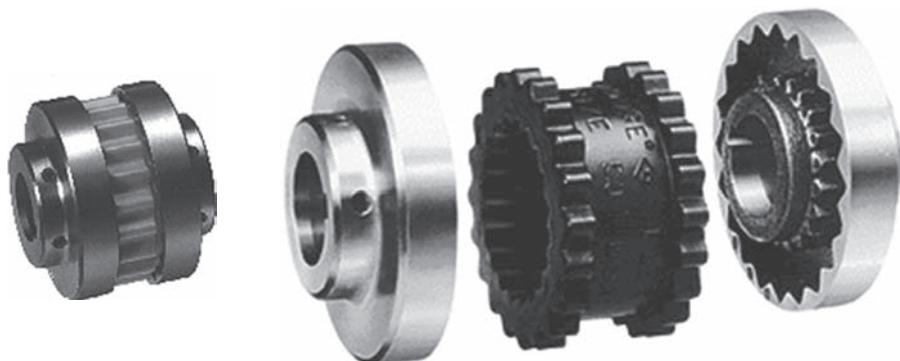


FIGURE 11-22 D-Flex coupling used mainly for connecting pumps and motors (Baldor/Dodge, Greenville, SC)


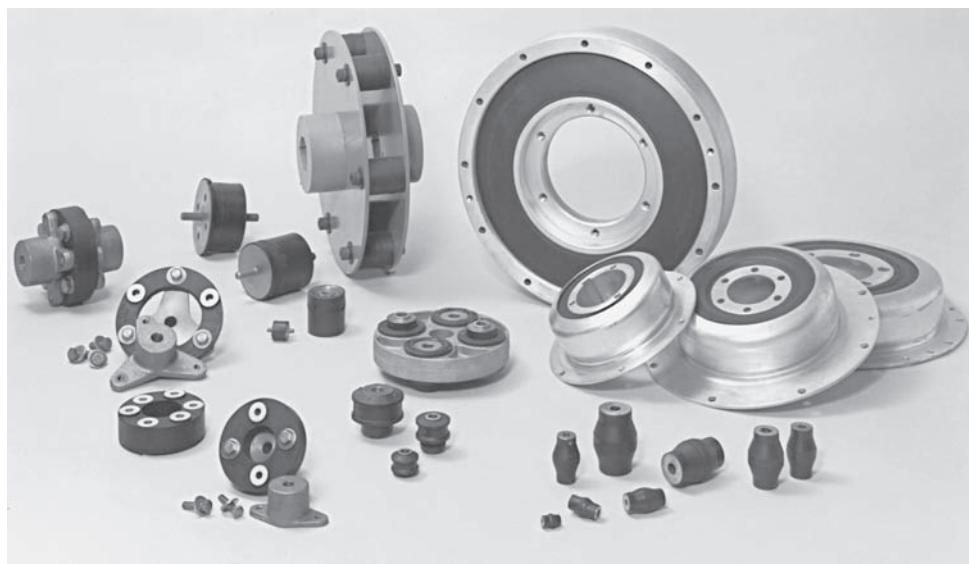


FIGURE 11–23 Dynaflex® coupling. Torque is transmitted through elastomeric material that flexes to permit misalignment and to attenuate shock loads (Courtesy of LORD Corporation)



(a) Assembled coupling

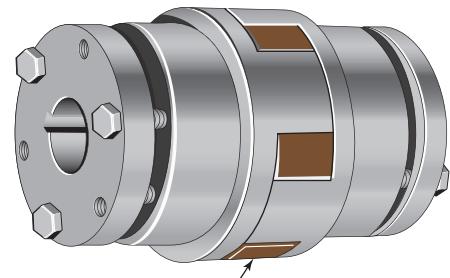

| | | |
|---|---|--|
| Neoprene (normal-duty applications) | Bronze, oil-impregnated (low-speed, high-torque applications) | Polyurethane (extra capacity at medium to high speed) |
|---|---|--|

(b) Types of inserts

FIGURE 11–24 Jaw-type coupling

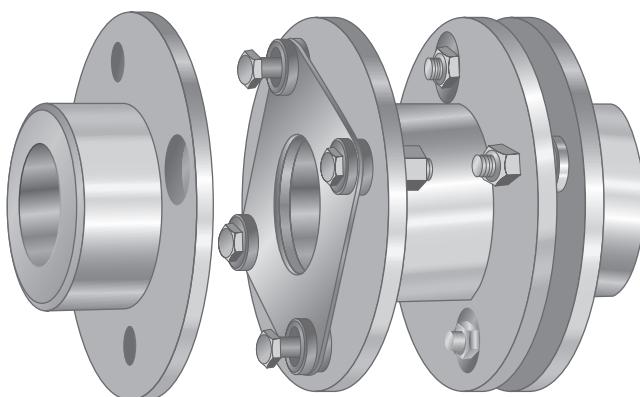


FIGURE 11–25 Flexible disk-type coupling. Torque is transmitted from hubs through laminated flexible elements to the spacer (T. B. Wood's Incorporated, Chambersberg, PA)

to 0.030 in for many types of couplings. (See References 1–4 and Internet sites 3–8, 17, 19, 22, and 24 for the manufacturers.)

The following is an example of the procedure used to select flexible couplings. We are focusing on the flexible disc type as illustrated in Figures 11–26 and 11–27.

Figure 11–26 shows a spacer-type flexible coupling, specifically used in pump drive applications. The spacer allows the coupling to be removed without moving the pump or motor, providing access to change the pump seal.

Figure 11–27 shows a floating shaft-type flexible coupling used for long-span applications. Each side of the flexible coupling needs to be rigidly supported by the connecting shafts.

The data given in Tables 11–8 and 11–9 can be used for problems in this book and they are only examples of the types of data available; different suppliers may show their data in different formats. See the Internet sites listed earlier.

Flexible Disc Coupling Selection Procedure

The procedure uses a pump drive as an example and assumes that the following data are known: (Using U.S. units)

- Power being transmitted by the coupling in horsepower, P
- The normal rotational speed of the coupling in rpm, n

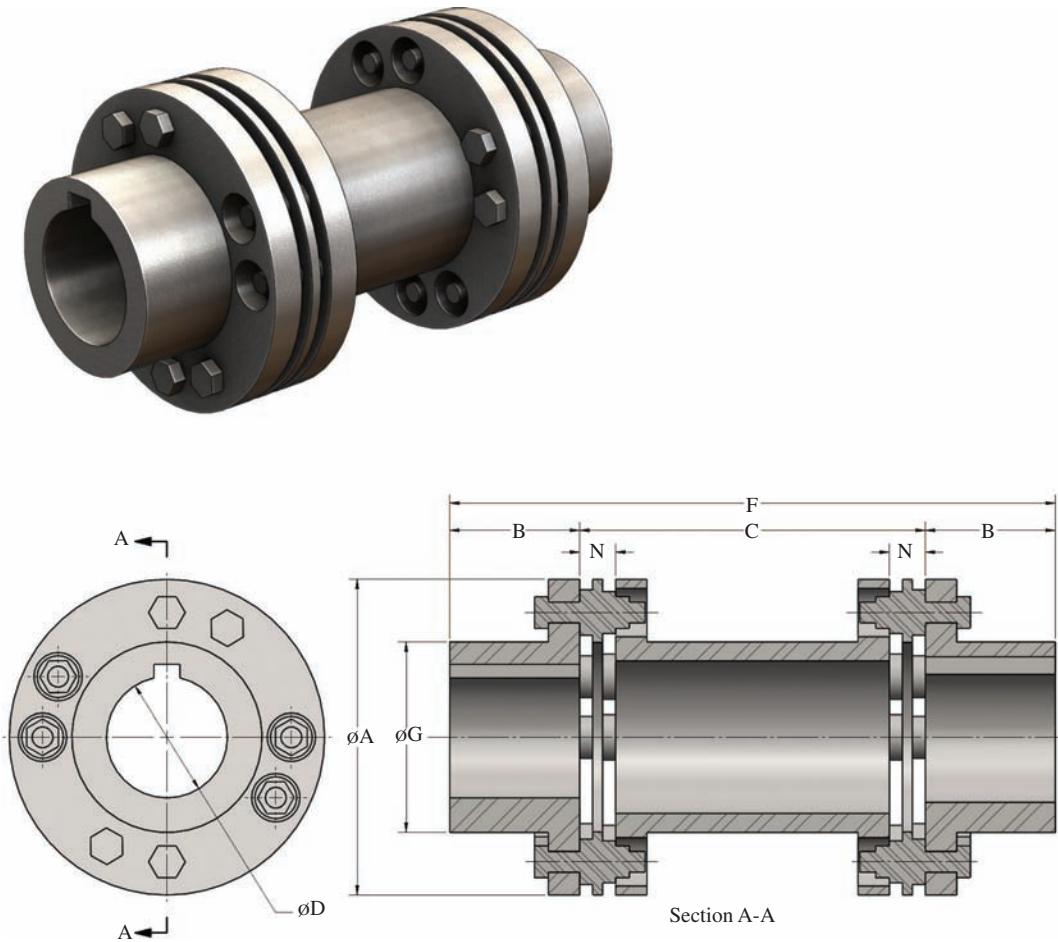


FIGURE 11-26 Flexible disc coupling—Spacer type

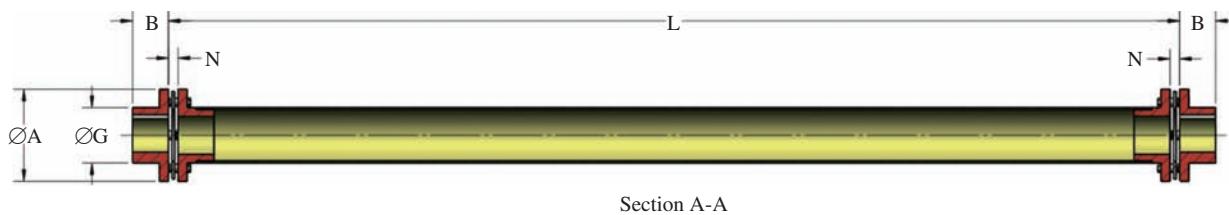


FIGURE 11-27 Flexible disc coupling—Floating shaft type

TABLE 11–8 Service Factor of Motor- and Turbine-Driven Equipment

| Application | Service factor | Application | Service factor |
|-------------------------|----------------|-----------------------------------|----------------|
| Blowers | | | |
| Centrifugal | 1.0 | Centrifugal pump | |
| Lobe | 1.5 | General Duty | 1.0 |
| Vane | 1.5 | Boiler Feed | 1.0 |
| Compressors | | | |
| Centrifugal | 1.0 | Slurry | 1.5 |
| Lobe | 1.5 | Dredge | 2.0 |
| Vane | 1.5 | Reciprocating pump | |
| Screw | 1.5 | Double Acting | 2.0 |
| Fans | | | |
| Centrifugal | 1.5 | Single Acting 1 or 2 cylinders | 2.5 |
| Axial | 1.5 | Single Acting 3 or more cylinders | 2.0 |
| Light-Duty Blower | 1.0 | Pump | |
| Conveyors | | | |
| Uniformly loaded | 1.5 | Rotary | 1.5 |
| Printing presses | | | |
| General Equipment | | Lobe | 1.5 |
| | | Vane | 1.5 |
| | | General Equipment | 1.5 |

TABLE 11–9 Spacer-Type Flexible Coupling Engineering Data

| Coupling size | Max bore | Max. horsepower per 100 rpm | | | | | | | | Max continuous torque (lb · in) | Peak overload torque (lb · in) | |
|---------------|----------|-----------------------------|-------|-------|--------|---------|--------|-------|-------|---------------------------------|--------------------------------|--------|
| | | A | B | C | F | G | N | 1 | 1.5 | 2 | | |
| A | 7/8 | 2 11/16 | 1 1/8 | 3 1/2 | 5 3/4 | 1 7/16 | 21/64 | 0.65 | 0.43 | 0.33 | 6000 | 8200 |
| B | 1 5/16 | 3 7/32 | 1 3/8 | 3 1/2 | 6 1/4 | 1 11/16 | 7/16 | 1.30 | 0.87 | 0.65 | 6000 | 7500 |
| C | 1 3/8 | 3 27/32 | 1 5/8 | 3 1/2 | 6 3/4 | 2 1/16 | 1/2 | 2.20 | 1.50 | 1.10 | 5500 | 6800 |
| D | 1 7/8 | 4 9/16 | 1 7/8 | 3 1/2 | 7 1/4 | 2 3/4 | 1/2 | 3.10 | 2.10 | 1.60 | 5000 | 6300 |
| E | 2 1/4 | 5 11/32 | 2 1/8 | 3 1/2 | 7 3/4 | 3 9/32 | 19/32 | 5.60 | 3.70 | 2.80 | 4600 | 5700 |
| F | 2 5/8 | 6 1/16 | 2 5/8 | 5 | 10 1/4 | 3 25/32 | 31/32 | 10.00 | 6.70 | 5.00 | 4100 | 5500 |
| G | 3 | 7 | 3 | 5 | 11 | 4 7/16 | 1 1/32 | 15.70 | 10.50 | 7.90 | 3700 | 5000 |
| | | | | | | | | | | | | 9900 |
| | | | | | | | | | | | | 19 800 |

- The maximum rotational speed that the coupling will see during any operating condition.
- The desired distance between the pump shaft and the drive motor shaft
- The diameters of the drive motor shaft and the pump shaft
- The nature of the application, as listed in Table 11–8, used to determine a service factor

Selection Procedure

- Determine the power capacity required per 100 rpm:

$$\frac{\text{HP}}{100 \text{ rpm}} = \frac{\text{HP} \cdot 100}{n_{\text{coupling}}}$$

- Determine the service factor, SF , for the given application from Table 11–8.
- Select one or more candidate couplings from Table 11–9 using the computed power rating capacity per 100 rpm at the given service factor.
- Verify that the maximum bore size of the coupling will fit the given shaft diameters. Bore diameters smaller than the maximum can be ordered.
- Check that the maximum speed of the coupling does not exceed the maximum running speed of the equipment.
- Verify that the system running torque and the maximum torque due to start up or shock loading does

not exceed the coupling's peak continuous torque and overload torque. Use the equation

$$\text{Torque} = \text{Power}/\text{rotational speed} = P/n$$

7. Summarize the pertinent data for sizes and allowable misalignment.

Example Problem 11–2

Figure 11–28 shows a 30-hp electric motor driving a centrifugal pump with a flexible coupling connecting the two shafts. The motor shaft diameter is 1.875 in and the pump shaft diameter is 1.75 in. The normal rotational speed of the drive motor is 1760 rpm. The desired spacing between the motor shaft and the pump shaft is 4.0 in minimum. Specify a suitable coupling using the sample data in Table 11–9.

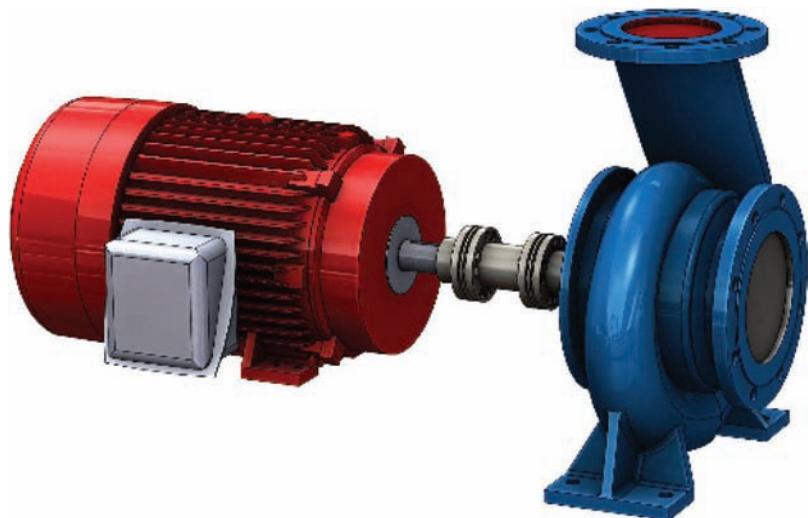


FIGURE 11–28 Electric motor driving a centrifugal pump through a flexible coupling

Solution

1. Determine the power capacity required per 100 rpm:

$$30 \text{ hp} (100)/n = 30 \text{ hp}(100)/1760 \text{ rpm} = 1.70 \text{ hp}/100 \text{ rpm}$$

2. Determine the service factor for the given application from Table 11–8:

For a centrifugal pump drive, $SF = 1.0$.

3. Select one or more candidate couplings from Table 11–9 using the 1.70 hp/100 rpm at 1.0 service factor.

We choose coupling sizes C and D as candidates:

1. Coupling C is rated at 2.2 hp/100 rpm.
2. Coupling D is rated at 3.3 hp/100 rpm.
4. Check the maximum allowable bore sizes for the two candidate couplings:
 1. Coupling C has a maximum bore size of 1 3/8 in (1.375 in)—Too small for either shaft.
 2. Coupling D has a maximum bore size of 1 7/8 in (1.875 in)—Fits both shaft sizes.

We continue the selection process using Coupling D.

5. Check that the maximum speed of the selected Coupling D:

Maximum speed is 5000 rpm > 1760 rpm of the drive motor—Satisfactory

6. Check the running torque for Coupling D:

$$\text{Actual running torque, } T = \frac{P}{n} = \frac{30 \text{ hp}}{1760 \text{ rev/min}} \cdot \frac{\frac{33000 \text{ lb}\cdot\text{in}}{\text{min}}}{1.0 \text{ hp}} \cdot \frac{1 \text{ rev}}{2\pi \text{ rad}} \cdot \frac{12 \text{ in}}{\text{ft}} = 1074 \text{ lb}\cdot\text{in}$$

The listed maximum continuous torque for Coupling D is 1950 lb·in—Satisfactory

The allowable peak overload torque is 3900 lb·in and it is unlikely that this level will be reached.

7. Pertinent data for Coupling D:

- The spacer length is 3.50 in.
- The length between the flanges and the spacer ends is 0.50 in on each end.
- Assuming that the motor and pump shafts are inserted to the end of the two parts of the coupling, the total spacing is

$$\text{Spacing length} = 3.50 \text{ in} + 0.50 \text{ in} + 0.50 \text{ in} = 4.50 \text{ in}$$

This is greater than the specified minimum length of 4.00 in—Satisfactory.

d. Specify the bores of the two ends of Coupling D:

Left (motor) side: Bore = 1.875 in

Right (pump) side: Bore = 1.75 in

e. Total length of assembled Coupling D (see Table 11–9):

$$\text{Length} = C + 2(B) = 3.50 \text{ in} + 2(1.875 \text{ in}) = 7.25 \text{ in} \text{ (Dimension } F \text{ in the table)}$$

f. Diameters:

End pieces and middle tube: 2.75 in

OD of flanges: 4.5625 in

g. A key is required for both end pieces, specified by the motor and pump supplier.

h. The manufacturer's data must be consulted to determine the allowable misalignment. Typical values for this type and size of coupling are as follows:

$$\text{Maximum angular misalignment} = 0.50^\circ$$

$$\text{Allowable axial end float} = \pm 0.057 \text{ in}$$


The procedure for selecting a floating shaft-type flexible coupling is virtually the same as that just demonstrated for the spacer-type coupling in Example Problem 11–2 with only small differences. Refer to Table 11–10

for the floating shaft-type coupling and compare the data with that in Table 11–9 for the spacer-type coupling.

Whereas the spacer-type coupling has a specified length value indicated by the C dimension in Table 11–9,

TABLE 11–10 Floating Shaft-Type Flexible Coupling Engineering Data

| Coupling size | Max Bore | Max. Horsepower per 100 rpm | | | | | | Max. Span L [in] | | | Max. Continuous torque (lb·in) | Peak overload torque (lb·in) | | | | | |
|---------------|----------|-----------------------------|-------|---------|----------------------------|----------|----------|------------------|-----|-----|--------------------------------|------------------------------|--------|--|--|--|--|
| | | Service Factor | | | For various angular speeds | | | | | | | | | | | | |
| | | 1 | 1.5 | 2 | 500 rpm | 1000 rpm | 1500 rpm | | | | | | | | | | |
| A2 | 7/8 | 2 11/16 | 1 1/8 | 1 7/16 | 21/64 | 0.65 | 0.43 | 0.33 | 94 | 94 | 88 | 410 | 820 | | | | |
| B2 | 1 5/32 | 3 7/32 | 1 3/8 | 1 11/16 | 7/16 | 1.30 | 0.87 | 0.65 | 102 | 102 | 93 | 820 | 1640 | | | | |
| C2 | 1 3/8 | 3 27/32 | 1 5/8 | 2 1/16 | 1/2 | 2.20 | 1.50 | 1.10 | 114 | 114 | 105 | 1400 | 2800 | | | | |
| D2 | 1 7/8 | 4 11/32 | 1 7/8 | 2 3/4 | 17/32 | 3.90 | 2.60 | 2.00 | 133 | 133 | 122 | 2460 | 4920 | | | | |
| E2 | 2 1/4 | 5 7/16 | 2 1/8 | 3 9/32 | 9/16 | 6.20 | 4.10 | 3.10 | 161 | 147 | 135 | 3900 | 7800 | | | | |
| F2 | 2 5/8 | 5 13/16 | 2 5/8 | 3 25/32 | 19/32 | 11.20 | 7.50 | 5.60 | 172 | 157 | 144 | 7100 | 14 200 | | | | |
| G2 | 3 1/8 | 6 5/8 | 3 | 4 1/2 | 15/32 | 19.40 | 12.90 | 9.70 | 191 | 173 | 160 | 12 200 | 24 400 | | | | |

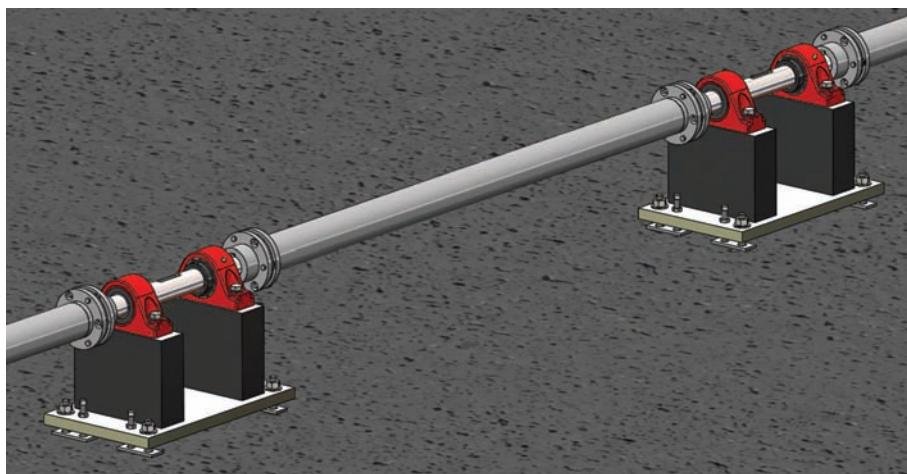

(a) A floating shaft-type coupling mounted between two rigid supports



(b) Side view of the coupling in (a)

FIGURE 11-29 Example of an installation for a floating shaft-type coupling

the floating shaft-type coupling does not and that column has been deleted in Table 11–10. However, Table 11–10 shows new data for “Max Span L” toward the right side of the table. The maximum values listed are dependent on the rotational speeds because of the dynamics of long rotating cylinders. Therefore, an additional Step 8 can be added to the procedure given earlier:

8. Specify the length L for the coupling, ensuring that it is smaller than the Max Span L value.

Figure 11–29 shows the floating shaft-type coupling installed in a typical machinery arrangement.

11–8 UNIVERSAL JOINTS

When an application calls for accommodating misalignment between mating shafts that is greater than 3° typically provided by flexible couplings, a *universal joint* is often employed. Figures 11–30 to 11–33 show some of the styles that are available. See Internet sites 5, 6, 9, 10, and 22 for commercially available universal joints. Angular misalignments of up to 45° are possible at low rotational speeds with single universal joints like that shown in Figure 11–30(a), consisting of two yokes, a center bearing block, and two pins that pass through the block at right angles. Approximately 20° to 30° is more reasonable for speeds above 10 rpm. Single universal joints have the disadvantage that the rotational

speed of the output shaft is nonuniform in relation to the input shaft.

A double universal joint, shown in Figure 11–30(b), allows the connected shafts to be parallel and offset by large amounts. Furthermore, the second joint cancels the nonuniform oscillation of the first joint so the input and output shafts rotate at the same uniform speed.


Figure 11–31 shows a vehicular universal joint connecting an engine or transmission to the drive wheels used in some rear-wheel-drive cars, light and heavy duty trucks, agricultural equipment, and construction vehicles. The spider assembly contains needle-bearing rollers on each arm. The right end shows a ball stud yoke, a flange yoke, and a center coupling yoke that make up a *double Cardan universal joint*. Another style, called a *constant velocity joint*, or simply a *CV joint*, is often used as a key component of front-wheel-drive and all-wheel-drive vehicle drivelines.

Figure 11–32 shows a heavy-duty industrial type double universal joint. Some of this type will have a two-part connecting tube that is splined to allow for sizable changes in axial position as well as accommodating the angular or parallel misalignment.

Figure 11–33 shows a novel design called the Cornay™ universal joint that produces true constant velocity of the output shaft through all drive angles up to 90° . Compared with standard universal joint designs, the Cornay™ joint can operate at higher speeds, carry



(a) Single universal joint components

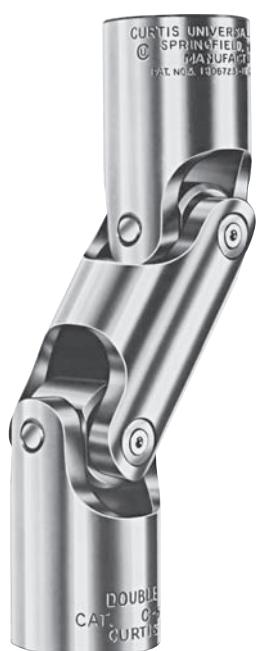

(b) Double universal joint

FIGURE 11-30 Single and double universal joints (Curtis Universal Joint Co., Inc., Springfield, MA)

higher torque levels, and produce less vibration. See Internet site 10.

Manufacturers' literature should be consulted for specifying a suitable size of universal joint for a given application. The primary variables involved are the

torque to be transmitted, the rotational speed, and the angle at which the joint will be operating. A *speed/angle factor* is computed as the product of the rotational speed and the operating angle. From this value, an *operating use factor* is determined that is applied to the basic torque load to compute the required rated torque for the joint. All manufacturers provide such data in their catalogs.

Some drive shafts incorporating universal joints with relatively long, tubular sections between the end joints are often called *torque tubes*. This terminology is used in the following section giving an example of the selection of such a torque tube for an industrial machine.

Procedure to select an industrial universal joint or torque tube

As stated above, the selection of a universal joint or torque tube should be guided by the catalog data of the specific brand and model to be specified for the joint. The lists of Internet sites at the end of this chapter include information about several such manufacturers.

Here we show an example of a typical selection procedure for a torque tube of the type shown in Figure 11-34. We use data from Tables 11-11 to 11-13 that are representative of industry data. The uses of the tables are described within the following procedure.

TABLE 11-11 Service Factor for Industrial Universal Joint Applications

| Application | Service factor |
|---------------------------------|----------------|
| Blower | 1.5 |
| Conveyor | 1.5 |
| Fans | 2.5 |
| Food Industry | 1.5 |
| Centrifugal Pump | 1 |
| Reciprocating Pump | 2 |
| Paper Mills Press Roll Drives | 2.5 |
| Steel Mills: Cold Rolling Mills | 5 |

TABLE 11-12 Industrial Universal Joint

| Series | Peak torque rating (lb · in) | Bearing life factor | Min L (in) | Length compensation ΔL (in) | A (in) | B (in) | C (in) | D (in) | E (in) | F (in) | α (deg) | Maximum operating speed (rpm) | Speed to angle factor |
|--------|------------------------------|---------------------|--------------|-------------------------------------|--------|--------|--------|--------|--------|--------|----------------|-------------------------------|-----------------------|
| A | 800 | 230 | 13.66 | 3.12 | 1.38 | 2.375 | 3.88 | 2.50 | 3/8 | 3.125 | 20 | 5000 | 16 250 |
| B | 1240 | 366 | 14.96 | 3.62 | 1.56 | 2.750 | 4.56 | 3.00 | 7/16 | 3.750 | 20 | 5000 | 16 250 |
| C | 1500 | 443 | 15.81 | 3.47 | 1.69 | 2.750 | 4.56 | 3.50 | 7/16 | 3.750 | 22 | 5000 | 16 250 |
| D | 2000 | 591 | 15.5 | 2.5 | 2.00 | 3.750 | 5.88 | 3.50 | 1/2 | 4.750 | 22 | 5000 | 16 250 |
| E | 2400 | 756 | 15.75 | 2.5 | 2.00 | 3.750 | 5.88 | 3.50 | 1/2 | 4.750 | 22 | 5000 | 16 250 |

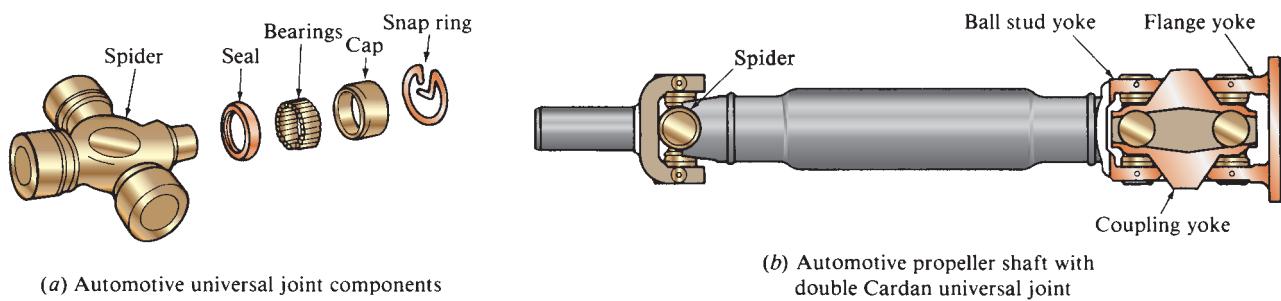


FIGURE 11-31 Automotive universal joints

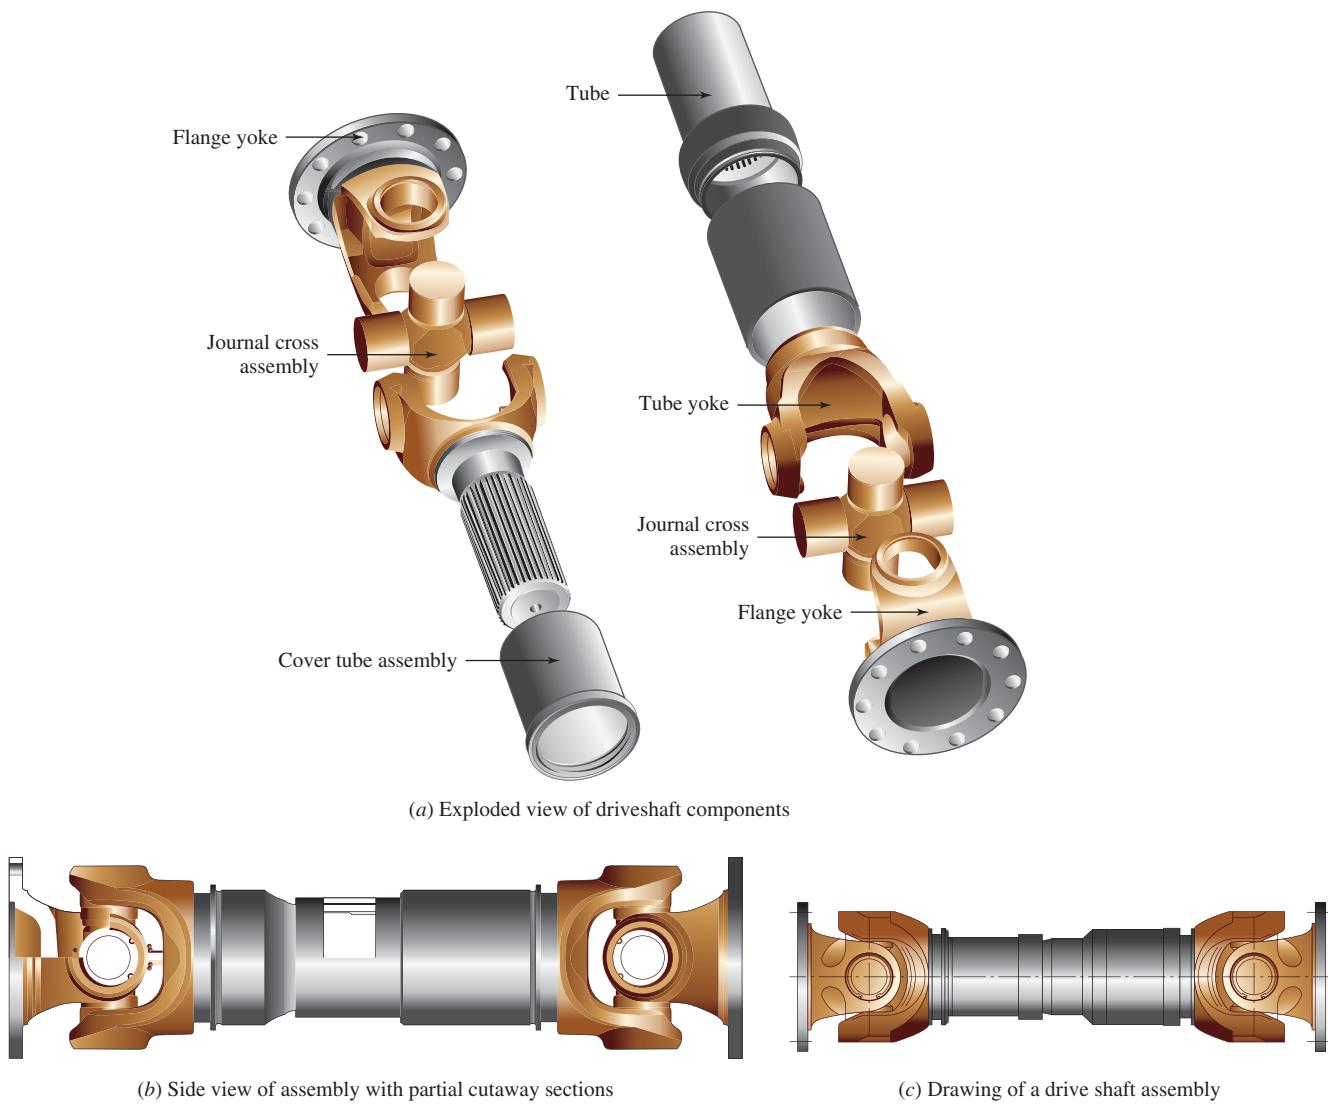


FIGURE 11-32 Industrial drive shaft incorporating a pair of universal joints (GWB - A Dana Brand)



FIGURE 11–33 Cornay™ universal joint
(Drive Technologies, Inc., Longmont, CO)

TABLE 11–13 Adjusted Normal Torque

| Prime mover | Service factor |
|----------------|----------------|
| Electric Motor | 1 |
| Gas Engine | 1.75 |
| Diesel Engine | 2 |

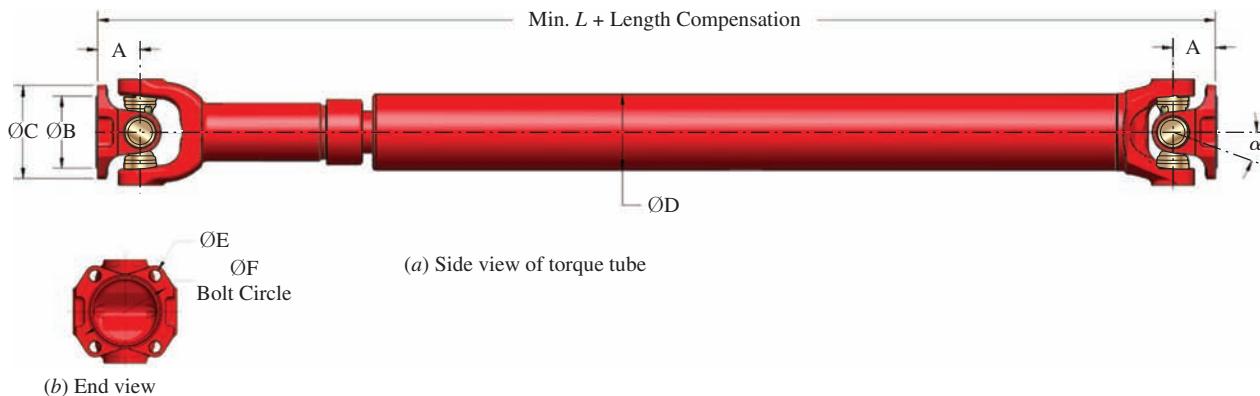


FIGURE 11–34 Type of torque tube used in the selection procedure

Typical data required to select a torque tube include the following:

1. Power to be transmitted by the torque tube.
2. Rotational speed of the torque tube, n .
3. The approximate length available between the two ends of the torque tube.
4. The expected angle of inclination of the torque tube.
5. The required life of the torque tube assembly.

With these data available, the following procedure can be used to specify a suitable torque tube.

1. Calculate the *equivalent torque* in the unit of lb·ft, using the following equations and a service factor from Table 11–11 for the particular application.

$$\text{Calculated Torque} = \frac{\text{Power}}{n}$$

$$\text{Equivalent Torque} = \text{Calculated Torque} \cdot \text{Service Factor}$$

2. Select a universal joint from Table 11–12, ensuring that the Equivalent Torque is less than the *Peak Torque Rating* of the joint.

3. Calculate the expected L_{10} life of the bearings using the following equation and the data for the selected joint.

$$L_{10} = \left(\frac{1.5 \cdot 10^7}{n \cdot \beta} \right) \cdot \left(\frac{\text{Bearing Life Factor}}{\text{Adjusted Normal Torque}} \right)^{10/3}$$

where

n : rotational speed of the universal joint (rpm)

β : Universal joint operating angle (degrees)

Bearing Life Factor: from Table 11–12

Adjusted normal torque in lb·ft from the following equation, using data from Table 11–13

Adjusted Normal Torque =

Equivalent Torque · Prime Mover Service Factor

4. Ensure that the rotational speed of the universal joint does not exceed the *maximum safe operating speed* (MSOS) from Table 11–12.

5. Verify that the universal joint operating speed times the operating angle is less than the *speed to angle factor* from Table 11–12.

$$n \cdot \beta < \text{Speed to angle factor}$$

6. Specify pertinent dimensions and other data for the specified joint from Table 11–12.


Example Problem

11–3

Figure 11–35 shows part of a piece of machinery for the food industry in which an electric motor is driving a right-angle gearbox through a torque tube. The motor supplies 20 hp at a rotational speed of 1000 rpm. The nominal length between the motor and the gearbox is 30 in and the angle of inclination is 8°. Specify a suitable torque tube.



(a) Pictorial view of the drive system

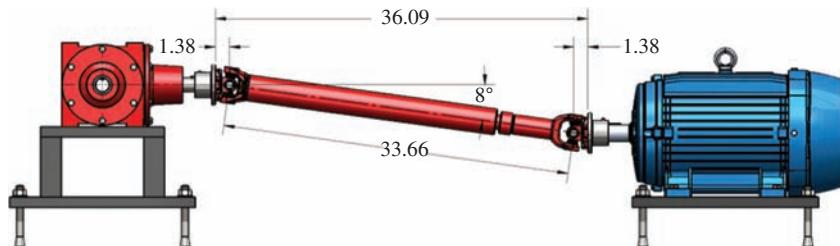

(b) Side view

FIGURE 11-35 Electric motor driving a gearbox through a torque tube**Solution**

Given: Power = 20 hp; Rotational speed = 1000 rpm; Drive shaft joint angle = $\beta = 8^\circ$
Use the **Procedure to select an industrial universal joint or torque tube**.

Results: 1. Calculate the *equivalent torque* in the unit of lb·ft, using the following equations and a service factor from Table 11–11 for the particular application.

From Table 11–11, the application service factor = 1.5

$$\text{Calculated Torque} = \frac{\text{Power}}{n} = \frac{20 \text{ hp}}{1000 \text{ rpm}} \cdot \frac{33000 \text{ lb}\cdot\text{ft/min}}{1 \text{ hp}} \cdot \frac{1 \text{ rev}}{2\pi \text{ rad}} = 105 \text{ ft}\cdot\text{lb}$$

$$\text{Equivalent Torque} = \text{Calculated Torque} \cdot \text{Service Factor} = (105 \text{ lb}\cdot\text{ft})(1.5) = 157.6 \text{ lb}\cdot\text{ft}$$

2. Select a universal joint from Table 11–12. The Series A joint has a peak torque rating of 800 lb·ft. Use this as a preliminary selection.
3. Calculate the expected L_{10} life of the bearings. The bearing life factor for the Series A joint is 230. The prime mover service factor from Table 11–13 for an electric motor is 1.0. Therefore, the Adjusted Normal Torque is the same as the equivalent torque, 157.6 lb·ft.

$$L_{10} = \left(\frac{1.5 \cdot 10^7}{n \cdot \beta} \right) \cdot \left(\frac{\text{Bearing Life Factor}}{\text{Adjusted Normal Torque}} \right)^{10/3}$$

$$L_{10} = \left(\frac{1.5 \cdot 10^7}{1000 \text{ rpm} \cdot 8^\circ} \right) \cdot \left(\frac{230}{157.6 \text{ lb}\cdot\text{ft}} \right)^{10/3} = 25594 \text{ hours}$$

This is deemed to be acceptable for the application.

4. Ensure that the rotational speed of the universal joint does not exceed the *maximum safe operating speed* from Table 11–12. For a Series A joint, MSOS = 5000 rpm which is far greater than the 1000 rpm speed of this joint.
5. Verify that the universal joint operating speed times the operating angle is less than the *speed to angle factor* from Table 11–12.

$$n \cdot \beta < \text{Speed to angle factor}$$

The Speed to angle factor = 16 250 from Table 11–12.

Then $n \cdot \beta = (1000 \text{ rpm}) \cdot (8^\circ) = 8000 < 16 250$, which is satisfactory.

6. Pertinent data: The OD of the torque tube is 2.50 in. Other data are available from manufacturers' catalogs.

Summary: The Series A joint from Table 11–12 has been specified for this application to transmit 20 hp at a rotational speed of 1000 rpm while operating at an angle of 8° .

11-9 OTHER MEANS OF AXIAL LOCATION

The preceding sections of this chapter have focused on means of connecting machine elements to shafts for the purpose of transmitting power. Therefore, they emphasized the ability of the elements to withstand a given torque at a given speed of rotation. It must be recognized that the axial location of the machine elements must also be ensured by the designer.

The choice of the means for axial location depends heavily on whether or not axial thrust is transmitted by the element. Spur gears, V-belt sheaves, and chain sprockets produce no significant thrust loads. Therefore, the need for axial location affects only incidental forces due to vibration, handling, and shipping. Although not severe, these forces should not be taken lightly. Movement of an element in relation to its mating element in an axial direction can cause noise, excessive wear, vibration, or complete disconnection of the drive. Any bicycle rider who has experienced the loss of a chain can appreciate the consequences of misalignment. Recall that for spur gears, the strength of the gear teeth and the wear resistance are both directly proportional to the face width of the gear. Axial misalignment decreases the effective face width.

Some of the methods discussed in Section 11–6 for fastening elements to shafts for the purpose of transmitting power also provide some degree of axial location. Refer to the discussions of pinning, keyless hub to shaft connections, split taper bushings, set screws, the taper and screw, the taper and nut, the press fit, molding, and the several methods of mechanically locking the elements to the shaft.

Among the wide variety of other means available for axial location, we will discuss the following:

- Retaining rings
- Collars
- Shoulders
- Spacers
- Locknuts

Some of these items are shown in Figure 11–36. A machine shaft is supported on two tapered roller bearings with a gear on the left end and the middle portion


is a roller used as part of a paper handling system. The outer races of the bearings are supported by bearing caps and the housing of the machine. Because of the different widths of the inner and outer races, spacers are used to ensure axial positioning. The inner races of the bearings are press-fitted on the shaft, as discussed in Chapter 14. In addition, the outside faces of the inner race are held by locknuts.

The gear on the left end of the shaft is seated against a shoulder on its right side. Then, after the gear is in place, a retaining ring is inserted into a groove on the shaft to ensure that the gear does not move axially out of position or fall off the shaft. An alternative means of maintaining the axial position of the helical gear is to use a *retaining cap* that fastens to the end of the shaft and clamps the gear against the shaft shoulder.


More information on these other means of location follows.

Retaining Rings


Retaining rings are placed on a shaft, in grooves cut into the shaft, or in internal recesses to prevent the axial movement of a machine element or to hold internal components in place. Figure 11–37 shows sketches of common generic forms of retaining rings. The basic external design [Figure 11–37(a)] is most often used for retaining gears and other power transmission elements in axial position on shafts. This is discussed further in Chapter 12 on shaft design. There are numerous styles available from several vendors, including those listed in Internet sites 7, 11, and 22, from which catalog data may be found along with design guidance for preparing a shaft or housing to accept the rings. In general, retaining rings are classified as either *external* or *internal*. Some install in carefully sized grooves, while others hold their position with gripping force between the ring and the mating element. The amount of axial thrust capacity and the shoulder height provided by the different ring styles vary and catalog data should be consulted. Rings are made to either U.S. Customary dimensions or SI metric sizes. See the left end of the shaft in Figure 11–36 for an example of the use of retaining rings.

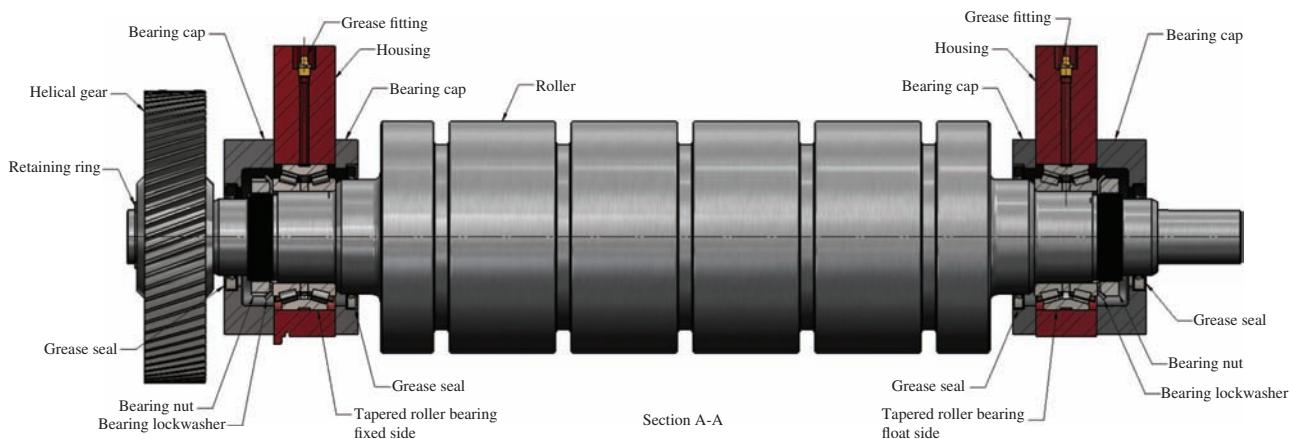


(a) Shaft assembly

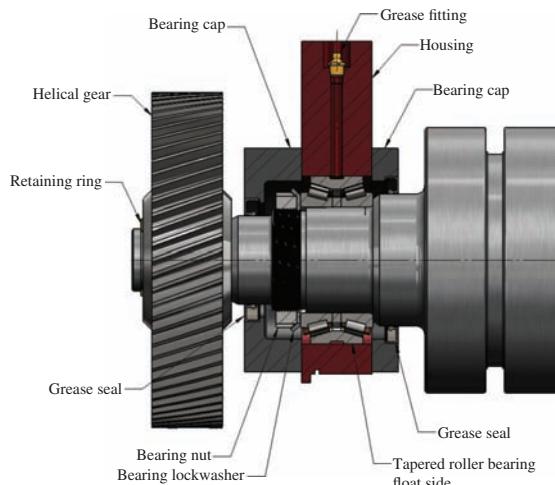


(b) Detail for left end of shaft

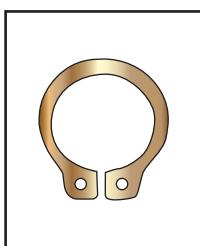FIGURE 11-36 Shaft assembly showing mounting details


(a) Basic external ring for shaft applications

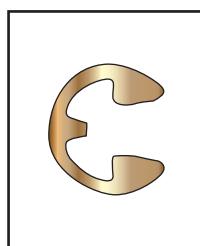


(b) External E-ring style

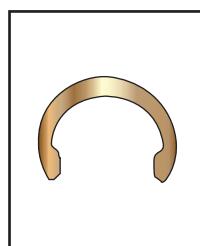


(c) Radially installed external ring

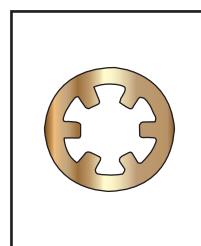


(d) Pressed-on external ring

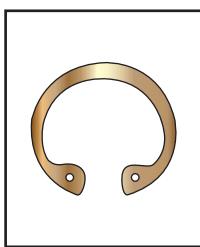

(e) Basic internal ring with inward projections

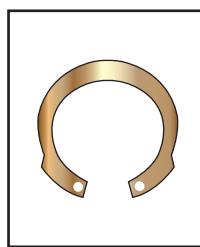

(f) Internal ring with outward projections

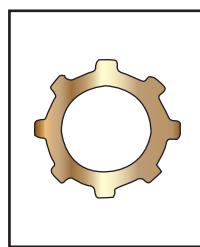

(g) Pressed-in internal ring

FIGURE 11-37 Examples of retaining ring styles

Collars

A *collar* is a ring slid over the shaft and positioned adjacent to a machine element for the purpose of axial location. It is held in position, typically, by set screws. Its advantage is that axial location can be set virtually anywhere along the shaft to allow adjustment of the position at the time of assembly. The disadvantages are chiefly those related to the use of set screws themselves (Section 11–6).

Shoulders

A *shoulder* is the vertical surface produced when a diameter change occurs on a shaft. Such a design is an excellent method for providing for the axial location of a machine element, at least on one side. Several of the shafts illustrated in Chapter 12 incorporate shoulders. The main design considerations are providing (1) a sufficiently large shoulder to locate the element effectively and (2) a fillet at the base of the shoulder that produces an acceptable stress concentration factor and that is compatible with the geometry of the bore of the mating element (see Figures 12–2 and 12–7). Note the use of shoulders in the shaft shown in Figure 11–36 to locate one side of the gear and the two bearings.

Spacers

A *spacer* is similar to a collar in that it is slid over the shaft against the machine element that is to be located. The primary difference is that set screws and the like are not necessary because the spacer is positioned *between* two elements and thus controls only the relative position between them. Typically, one of the elements is positively

located by some other means, such as a shoulder or a retaining ring.

Locknuts

When an element is located at the end of a shaft, a *locknut* can be used to retain it on one side. Figure 11–38 shows a bearing retainer type of locknut. These are available as stock items from bearing suppliers.

The shaft is threaded to match the threads on the locknut which can be seen in part (c) of this figure. Note that the lockwasher with the peripheral teeth has a tang on the ID that is positioned in a groove machined into the shaft. After inserting the lockwasher on the shaft against the element being held, the nut is screwed on so that it seats against the lockwasher, thus securing the bearing in place. Furthermore, four of the external tangs on the lockwasher are bent into the four grooves in the outer periphery of the nut to ensure that the nut is not rotated off the shaft.

Caution against Overconstraint


One practical consideration in the matter of axial location of machine elements is exercising care that elements are not *overconstrained*. Under certain conditions of differential thermal expansion or with an unfavorable tolerance stack, the elements may be forced together so tightly as to cause dangerous axial stresses. At times it may be desirable to locate only one bearing positively on a shaft and to permit the other to float slightly in the axial direction. The floating element may be held lightly with an axial spring force accommodating the thermal expansion without creating dangerous forces.



(a) Pictorial view of bearing locknut and lockwasher



(b) Shaft assembly for use of lockwasher and locknut

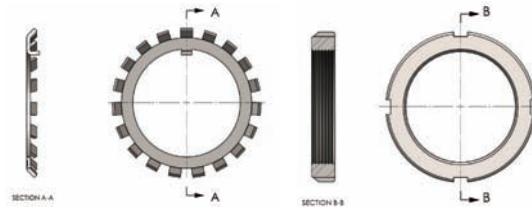

(c) Lockwasher and locknut

FIGURE 11–38 Locknut and lockwasher for retaining a bearing on a shaft.

In Figure 11–36, the left bearing is fixed into its housing, while the right bearing is permitted to slide (float) axially a small amount to accommodate thermal expansion and varying tolerances on shaft dimensions.

11-10 TYPES OF SEALS

Seals are important parts of machine design in situations where the following conditions apply:

1. Contaminants must be excluded from critical areas of a machine.
2. Lubricants must be contained within a space.
3. Pressurized fluids must be contained within a component such as a valve or a hydraulic cylinder.

Some of the parameters affecting the choice of the type of sealing system, the materials used, and the details of its design are as follows:

1. The nature of the fluids to be contained or excluded
2. Pressures on both sides of the seal
3. The nature of any relative motion between the seal and the mating components
4. Temperatures on all parts of the sealing system
5. The degree of sealing required: Is some small amount of leakage permissible?
6. The life expectancy of the system

7. The nature of the solid materials against which the seal must act: corrosion potential, smoothness, hardness, wear resistance
8. Ease of service for replacement of worn sealing elements

The number of designs for sealing systems is virtually limitless, and only a brief overview will be presented here. More comprehensive coverage can be found in References 12–15. Often, designers rely on technical information provided by manufacturers of complete sealing systems or specific sealing elements. Also, in critical or unusual situations, testing of a proposed design is advised. See Internet sites 12–15, 22, and 23.

The choice of a type of sealing system depends on the function that it must perform. Common conditions in which seals must operate are listed here, along with some of the types of seals used.

1. Static conditions such as sealing a closure on a pressurized container: elastomeric O-rings; T-rings; hollow metal O-rings; and sealants such as epoxies, silicones, and butyl caulking (Figure 11–39).
2. Sealing a closed container while allowing relative movement of some part, such as diaphragms, bellows, and boots (Figure 11–40).
3. Sealing around a continuously reciprocating rod or piston, such as in a hydraulic cylinder or a spool valve in a hydraulic system: lip seal; U-cup seal;

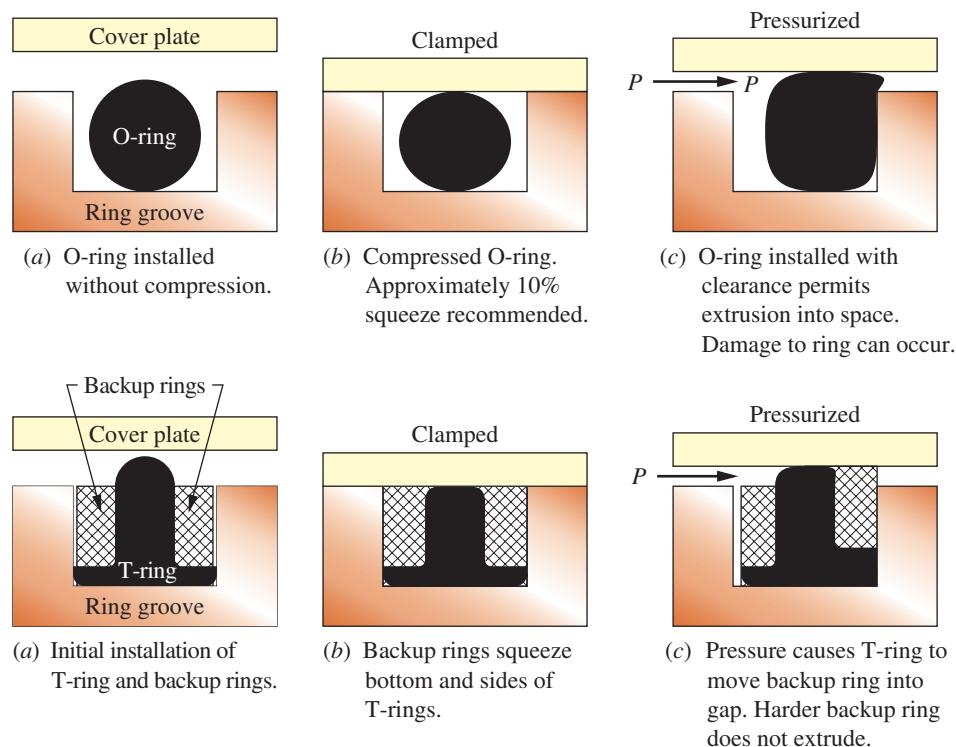


FIGURE 11-39 O-rings and T-rings used as static seals

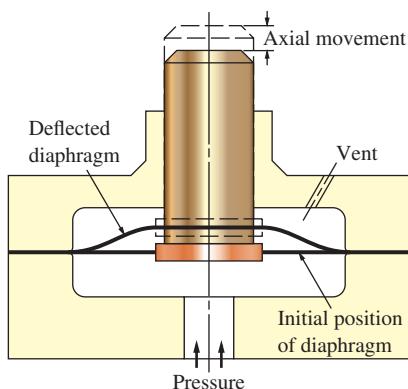


FIGURE 11-40 Application of a diaphragm seal

- V-packing; and split ring seals, sometimes called *piston rings* (Figure 11-41).
- 6. Sealing the active elements of a pump or compressor to retain the pumped fluid: face seals and V-packing.
- 7. Sealing infrequently moved elements such as a valve stem of a fluid-flow control valve: compression packings and V-packings.
- 8. Sealing between hard, rigid surfaces such as between a cylinder head and the block of an engine: resilient gaskets. See Internet site 15.
- 9. Circumferential seals, such as at the tips of turbine blades, and on large, high-speed rotating elements: labyrinth seals, abradable seals, and hydrostatic seals.

11-11 SEAL MATERIALS

Most seal materials are resilient to permit the sealing points to follow minor variations in the geometry of mating surfaces. Flexing of parts of the seal cross section also occurs in some designs, calling for resiliency in the materials. Alternatively, as in the case of hollow metal O-rings, the shape of the seal allows the flexing of hard materials to occur. Face seals require rigid, hard materials that can withstand constant sliding motion and that can be produced with fine accuracy, flatness, and smoothness.

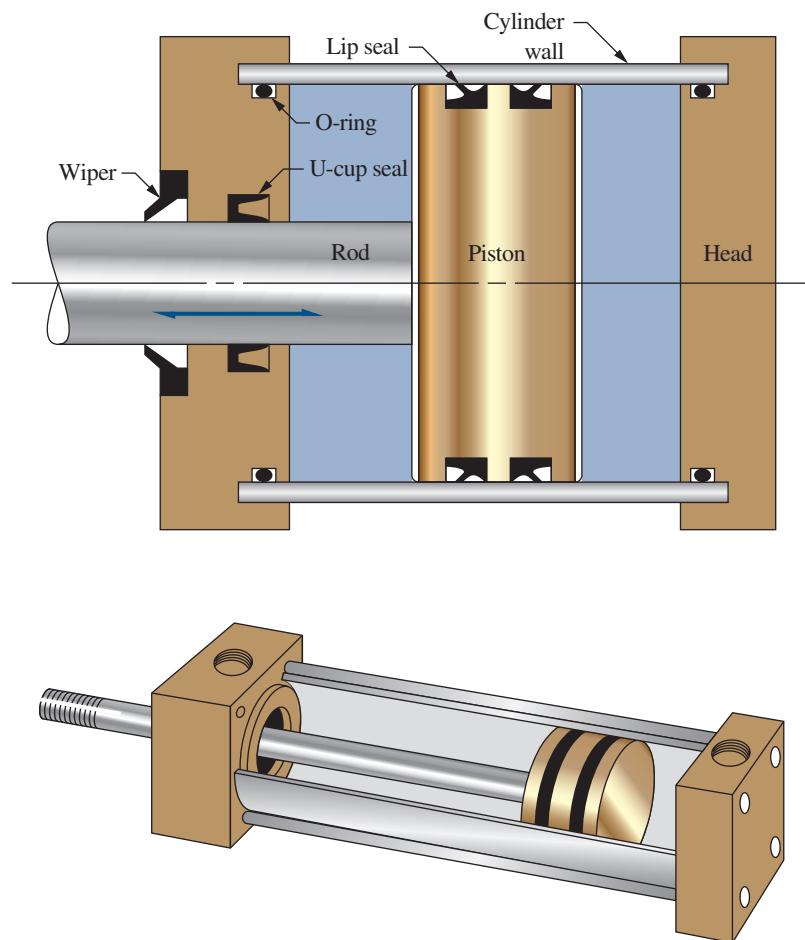


FIGURE 11-41 Lip seals, U-cup seal, wiper, and O-rings applied to a hydraulic actuator

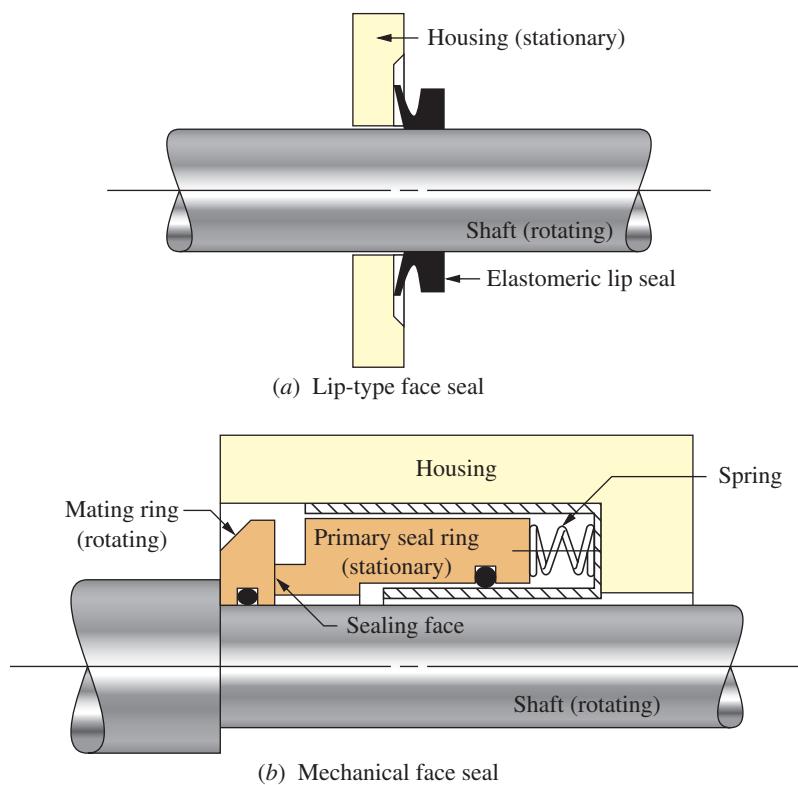


FIGURE 11-42 Face seals

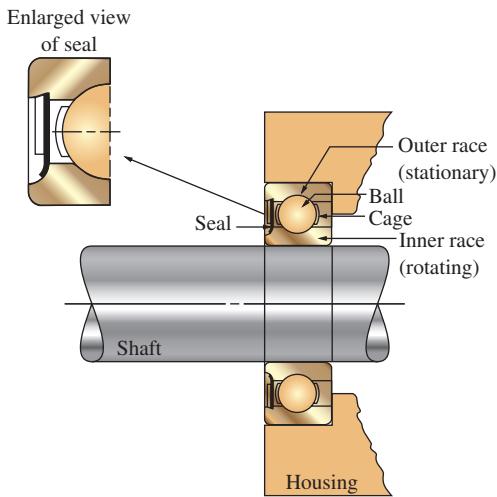


FIGURE 11-43 Seal for ball bearing

Elastomers

Resilient seals such as O-rings, T-rings, and lip seals are often made from synthetic elastomers such as the following:

| | | |
|--------------|---------------------------------------|--------------------|
| Neoprene | Butyl | Nitrile (Buna-N) |
| Fluorocarbon | Silicone | Fluorosilicone |
| Butadiene | Polyester | Ethylene propylene |
| Polysulfide | Polyurethane | Epichlorohydrin |
| Polyacrylate | PNF (Phosphonitrilic fluoroelastomer) | |

Many proprietary formulations within these general classifications are available under trade names from seal producers and plastics manufacturers.

Properties needed in a given installation will limit the selection of candidate materials. The following list gives some of the more prevalent requirements for seals and some of the materials that meet those requirements:

Weather resistance: Silicone, fluorosilicone, fluorocarbon, ethylene propylene, polyurethane, polysulfide, polyester, neoprene, epichlorohydrin, and PNF.

Petroleum fluid resistance: Polyacrylate, polyester, PNF, nitrile, polysulfide, polyurethane, fluorocarbon, and epichlorohydrin.

Acid resistance: Fluorocarbon.

High-temperature operation: Ethylene propylene, fluorocarbon, polyacrylate, silicone, and PNF.

Cold-temperature operation: Silicone, fluorosilicone, ethylene propylene, and PNF.

Tensile strength: Butadiene, polyester, and polyurethane.

Abrasion resistance: Butadiene, polyester, and polyurethane.

Impermeability: Butyl, polyacrylate, polysulfide, and polyurethane.

Rigid Materials

Face seals, and the parts of other types of sealing systems against which elastomers seal, require rigid materials that can withstand the sliding action and that are compatible with the environment around the seal. Some typical rigid materials used in sealing systems are described in the following list:

Metals: Carbon steel, stainless steel, cast iron, nickel alloys, bronze, and tool steels.

Plastics: Nylon, filled polytetrafluoroethylene (PTFE), and polyimide.

Carbon, ceramics, and tungsten-carbide.

Plating: Chromium, cadmium, tin, nickel, and silver.

Flame-sprayed compounds.

Packings

Packings for sealing shafts, rods, valve stems, and similar applications are made from a variety of materials, including leather, cotton, flax, several types of plastics, braided or twisted wire made from copper or aluminum, laminated cloth and elastomeric materials, and flexible graphite.

Gaskets

Common gasket materials are cork, cork and rubber compounds, filled rubber, paper, resilient plastics, and foams. See Internet site 15.

Shafts

When radial lip seals are required around shafts, the shafts are typically steel. They should be hardened to HRC 30 to resist scoring of the surface. Tolerance on the diameter of the shaft on which the seal bears should conform to the following recommendations to ensure that the seal lip can follow the variations:

| Shaft Diameter (in) | Tolerance (in) |
|------------------------|----------------|
| $D \leq 4.000$ | ± 0.003 |
| $4.000 < D \leq 6.000$ | ± 0.004 |
| $D > 6.000$ | ± 0.005 |

The surface of the shaft and any areas over which the seal must pass during installation should be free of burrs to protect against tearing the seal. A surface finish of 10 to 20 μin is recommended, with adequate lubrication to ensure full contact and to reduce friction between the seal and the shaft surface.

REFERENCES

- American Gear Manufacturers Association. AGMA 9009-D02 (R2014). *Nomenclature for Flexible Couplings*. Alexandria, VA: American Gear Manufacturers Association, 2014.
- American Gear Manufacturers Association. ANSI/AGMA 9002-C14. *Bores and Keyways for Flexible Couplings (Inch Series)*. Alexandria, VA: American Gear Manufacturers Association, 2014.
- American Gear Manufacturers Association. AGME 9112-B15. *Bores and Keyways for Flexible Couplings (Metric Series)*. Alexandria, VA: American Gear Manufacturers Association, 2015.
- American Gear Manufacturers Association. ANSI/AGMA 9001-B97 (R2014). *Lubrication of Flexible Couplings*. Alexandria, VA: American Gear Manufacturers Association, 2014.
- American National Standards Institute. ANSI B92.1-1986. *Involute Splines*. New York: American National Standards Institute, 1996.
- American National Standards Institute. ANSI B92.2M-1989 (R1989). *Metric Module Involute Splines*. New York: American National Standards Institute, 1989.
- American Society of Mechanical Engineers. ANSI B17.1-67.(R2013). *Keys and Keyseats*. New York: American Society of Mechanical Engineers, 2013.
- American Society of Mechanical Engineers. ANSI B17.2-67.R98. *Woodruff Keys and Keyseats*. New York: American Society of Mechanical Engineers, 1998.
- Oberg, Erik et al. *Machinery's Handbook*. 30th ed. New York: Industrial Press, 2015.
- Society of Automotive Engineers. Standard AS-84D, (R2014-02-06) *Splines, Involute (Full Fillet)*. Warrendale, PA: Society of Automotive Engineers, 2014.
- International Standards Organization. ISO Standard 4156-1:2005, *Straight cylindrical involute splines—Metric Module*. Geneva, Switzerland: International Standards Organization, 2005.
- Flitney, R. K. *Seals and Sealing Handbook*. 6th ed. New York: Elsevier Science, 2014.
- Summers-Smith, J. D. (Editor). *Mechanical Seal Practice for Improved Performance*. New York: John Wiley & Sons, 2005.
- Bickford, John. *Gaskets and Gasketed Joints*. Boca Raton, FL: CRC Press, 1998.
- Czernik, Daniel. *Gaskets: Design, Selection, and Testing*. New York: McGraw-Hill, 1996.

INTERNET SITES FOR KEYS, COUPLINGS, AND SEALS

- Fastenal Company. Provider of a wide variety of mechanical products including keystock in low-, medium-, and high-carbon steel, 18-8 and 316 stainless steel. Both U.S. and metric sizes. Square, rectangular, and woodruff types.
- Ringfeder Power Transmission GMBH. Manufacturer of Ringfeder and ECOLOC keyless hub to shaft locking devices, along with Tschan and Gerwah couplings.
- Baldor/Dodge. Manufacturer of a wide variety of power transmission components including flexible couplings, gearing, belt drives, clutches and brakes, and bearings.
- Regal Beloit Americas, Inc. Manufacturer of a wide variety of power transmission equipment including flexible couplings and universal joints under the Kop-Flex, Browning, and Morse brands. Other brands include McGill, Rollway, and Sealmaster for gearing, belt drives, chain drives, bearings, conveyor components, drive shafts, and clutches.
- Dana Limited—Spicer Drivetrain Components. Manufacturer of universal joints, and drive shafts for vehicular and industrial applications using the Dana and Spicer brand names.

6. **GWB—A Dana Brand.** Manufacturer of heavy-duty drive shafts for industrial equipment, locomotives, and similar applications.
7. **Stock Drive Products/Sterling Instrument.** Manufacturer and distributor of precision machine components and assemblies, including flexible couplings, gearing, clutches and brakes, and fasteners.
8. **T. B. Wood's Sons Company.** Manufacturer of mechanical, industrial power transmission products including flexible couplings, synchronous belt drives, V-belt drives, gearmotors, and gearing.
9. **Curtis Universal Joint Company.** Manufacturer of universal joints for the industrial and aerospace markets in U.S. and metric sizes.
10. **Cooper Tools/Apex Universal Joints.** Manufacturer of universal joints for the military, aerospace, performance racing, and industrial power transmission markets. Product line includes the Cornay™ universal joints.
11. **Rotor Clip Company, Inc.** Manufacturer of a wide variety of retaining rings and other products in U.S. and metric sizes for industrial, commercial, military, and consumer products.
12. **Federal Mogul Powertrain.** Manufacturer of seals for engines, transmissions, wheels, differentials, and industrial applications. Select Products, then Engine or Sealing.
13. **American Seal & Packing Company.** Manufacturer of O-rings, gaskets, mechanical seals, and related products.
14. **Mechanical Seals.net.** Part of the site for American Seal and Packing Company providing technical information about the design of various types of seals, how they work, how they are maintained, and the materials used.
15. **IGS Industries.** Manufacturer of gaskets, shims, and custom fabricated seals, and industrial sealants.
16. **American High Performance Seals, Inc.** Manufacturer of a wide variety of wipers and seals for rods, pistons, and rotary applications. Site includes numerous graphic representations of seal cross sections and tables of materials and their properties.
17. **Lord Corporation—Vibration & Motion Control Products.** Manufacturer of flexible couplings, vibration mounts, and shock isolation mounts using elastomeric materials bonded to metals. Select Products & Solutions, then Vibration & Motion Control.
18. **General Polygon Systems, Inc.** Providers of mechanical shaft to hub connections using the General Polygon System.
19. **Belden Universal.** Manufacturer of universal joints, drive shaft assemblies, and couplings for industrial, nuclear, aerospace, and other applications.
20. **G. L. Huyett Co.** Supplier of numerous machine components, including square and rectangular keys and keystock, bars, shafts, shim and shimstock in both U.S. and SI sizes and in several grades of material. From the home page, select *Power Transmission*.
21. **LOCTITE® Industrial Adhesives & Sealants/Henkel Corporation.** Manufacturer of numerous types of adhesives and sealants, including LOCTITE® Threadlockers® that inhibit loosening of screws and other threaded products.
22. **Grainger.** Distributor of a huge array of products for machinery components, hardware, motors, power transmission drive products, bearings, flexible couplings, universal joints, fasteners, retaining rings, keys and key stock, raw materials, welding products, adhesives, seals and sealants, threadlocking materials, linear motion devices, and many more.
23. **Federal Mogul Corporation/Powertrain.** Manufacturer of automotive components and products for industrial uses, energy, and transport, including seals crankshafts, camshafts, and oil control rings on pistons.
24. **Rexnord – Thomas Flexible Disc Couplings.** Manufacturer of a broad line of flexible disc couplings for pump drives, fans, compressors, and general industrial machinery.

PROBLEMS

For Problems 1–4 and 7, determine the required key geometry: length, width, and height. Use SAE 1018 steel for the keys if a satisfactory design can be achieved. If not, use a higher-strength material from Table 11–4. Unless otherwise stated, assume that the key material is weakest when compared with the shaft material or the mating elements.

1. Specify a key for a gear to be mounted on a shaft with a 2.00 in diameter. The gear transmits 21 000 lb·in of torque and has a hub length of 4.00 in. See Figure P11–1.
2. Specify a key for a gear carrying 21 000 lb·in of torque if it is mounted on a 3.60-in-diameter shaft. The hub length of the gear is 4.00 in.

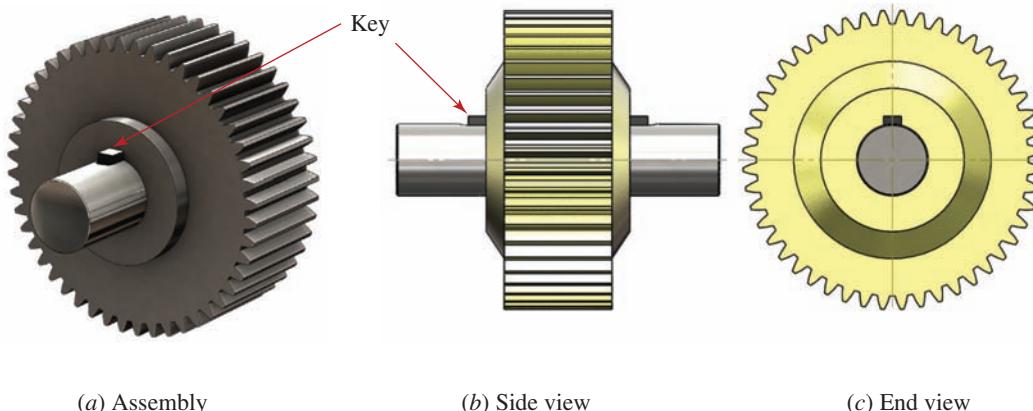


FIGURE P11-1 Gear, shaft, and key for Problem 11-1

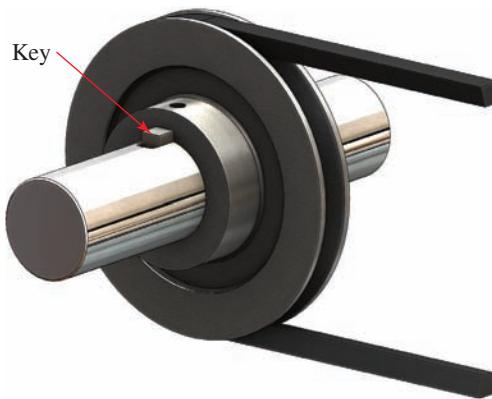


FIGURE P11-3 Belt sheave, shaft, and key for Problem 11–3

3. A V-belt sheave transmits 1112 lb·in of torque to a 1.75-in-diameter shaft. The sheave is made from ASTM class 20 cast iron and has a hub length of 1.75 in. See Figure P11-3.
4. A chain sprocket delivers 110 hp to a shaft at a rotational speed of 1700 rpm. The sprocket has a bore diameter of 2.50 in. The hub length is 3.25 in.
5. Specify a suitable spline having a *B* fit for each of the applications in Problems 1–4.
6. Design a cylindrical pin to transmit the power, as in Problem 4. But design it so that it will fail in shear if the power exceeds 220 hp.
7. Specify a key for both the sprocket and the wormgear from Example Problem 12–3. Note the specifications for the final shaft diameters at the end of the problem.
8. Describe a Woodruff key no. 204.
9. Describe a Woodruff key no. 1628.
10. Make a detailed drawing of a Woodruff key connection between a shaft and the hub of a gear. The shaft has a diameter of 1.500 in. Use a no. 1210 Woodruff key. Dimension the keyseat in the shaft and the hub.
11. Repeat Problem 10, using a no. 406 Woodruff key in a shaft having a 0.500 in diameter.
12. Repeat Problem 10, using a no. 2428 Woodruff key in a shaft having a 3.250 in diameter.
13. Compute the torque that could be transmitted by the key of Problem 10 on the basis of shear and bearing if the key is made from SAE 1018 cold-drawn steel with a design factor of $N = 3$.
14. Repeat Problem 13 for the key of Problem 11.
15. Repeat Problem 13 for the key of Problem 12.
16. Make a drawing of a four-spline connection having a major diameter of 1.500 in and an *A* fit. Show critical dimensions. See Figure P11-16 for the general layout.
17. Make a drawing of a 10-spline connection having a major diameter of 3.500 in and a *B* fit. Show critical dimensions.
18. Make a drawing of a 16-spline connection having a major diameter of 2.500 in and a *C* fit. Show critical dimensions.
19. Determine the torque capacity of the splines in Problems 16–18.
20. Describe the manner in which a set screw transmits torque if it is used in place of a key. Discuss the disadvantages of such an arrangement.
21. Describe a press fit as it would be used to secure a power transmission element to a shaft.

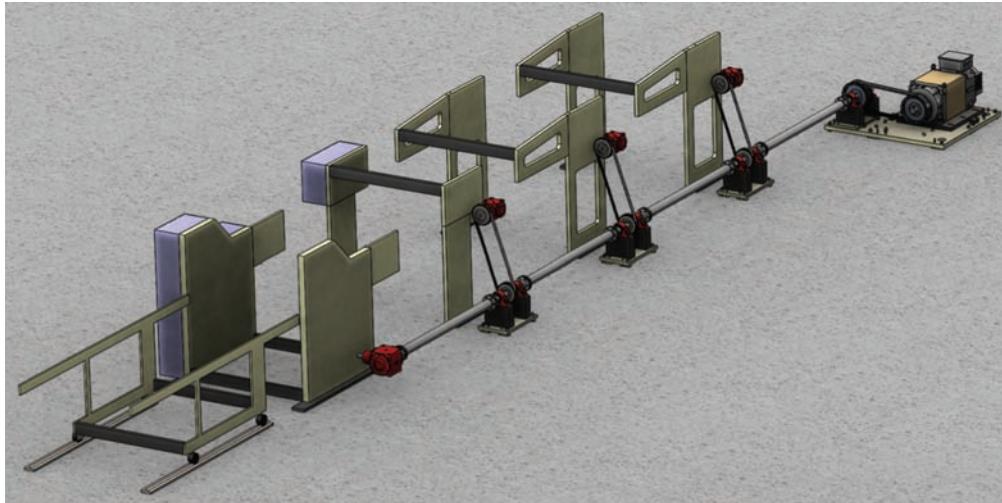


FIGURE P11-16 Pictorial view of splined shaft connection


22. Describe the main differences between rigid and flexible couplings as they affect the stresses in the shafts that they connect.
23. Discuss a major disadvantage of using a single universal joint to connect two shafts with angular misalignment.
24. Describe five ways to locate power transmission elements positively on a shaft axially.
25. Describe three situations in which seals are applied in machine design.
26. List eight parameters that should be considered when selecting a type of seal and specifying a particular design.
27. Name three means of sealing a pressurized container under static conditions.
28. Name three methods of sealing a closed container while allowing relative movement of some part.
29. Name four types of seals used on reciprocating rods or pistons.
30. Name three types of seals applied to rotating shafts.
31. Describe the method of sealing a ball bearing from contaminants.
32. Describe an O-ring seal, and sketch its installation.
33. Describe a T-ring seal, and sketch its installation.
34. Describe some advantages of T-ring seals over O-rings.
35. Describe a diaphragm seal and the type of situation in which it is used.
36. Describe suitable methods of sealing the sides of a piston against the inner walls of the cylinder of a hydraulic actuator.
37. Describe the function of a scraper or wiper on a cylinder rod.
38. Describe the essential elements of a mechanical face seal.
39. Name at least six kinds of elastomers commonly used for seals.
40. Name at least three kinds of elastomers that are recommended for use when exposed to weather.
41. Name at least three kinds of elastomers that are recommended for use when exposed to petroleum-based fluids.
42. Name at least three kinds of elastomers that are recommended for use when exposed to cold-temperature operation.
43. Name at least three kinds of elastomers that are recommended for use when exposed to high-temperature operation.
44. A sealing application involves the following conditions: exposure to high-temperature petroleum fluids and impermeability. Specify a suitable elastomer for the seal.
45. A sealing application involves the following conditions: exposure to high temperature and weather, impermeability, and high strength and abrasion resistance. Specify a suitable elastomer for the seal.
46. Describe suitable shaft design details where elastomeric seals contact the shaft.

47. A driveline is to be designed to drive a series of four pieces of equipment for the printing industry as shown in Figure P11-47(a). An electric motor at the right drives the driveline at a rotational speed of 500 rpm and the power demand for each piece of equipment is shown in Figure P11-47(b). Figure P11-47(c) of the figure shows an enlarged view of the drive motor and the first segment


of the driveline. All four segments are to be identical. Figure P11-47(d) of the figure shows the general design of one driveline segment. The distance between the ends of each drive shaft segment is to be 63.00 in. Select a floating shaft-type coupling to connect each piece of equipment to a 2.00-in-diameter rigid jack shaft assembly. Refer Section 11-7 for design data.



(a) General layout of the machinery for a press line for the printing industry.

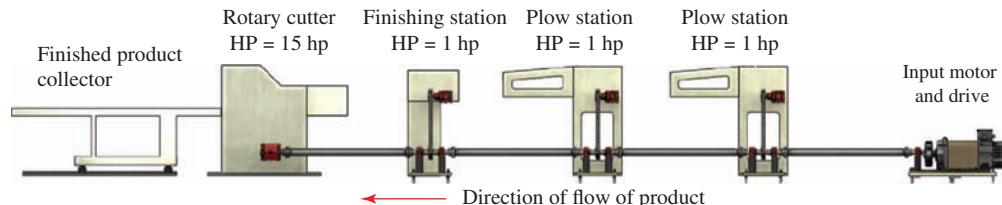

(b) Power demand for the four pieces of equipment

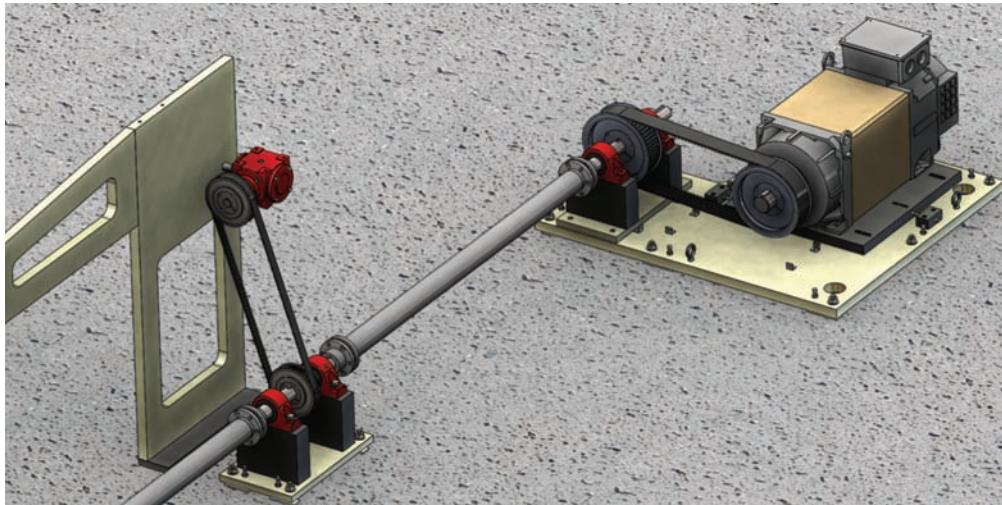

(c) Detail for the drive motor, synchronous belt reducer from the motor to the drive shaft, the floating shaft-type coupling and the belt drive to the first plow station



(d) General design of the coupling for each segment of the driveline

FIGURE P11-47

SHAFT DESIGN

The Big Picture

You Are the Designer

- 12-1 Objectives of This Chapter
- 12-2 Shaft Design Procedure
- 12-3 Forces Exerted on Shafts by Machine Elements
- 12-4 Stress Concentrations in Shafts
- 12-5 Design Stresses for Shafts
- 12-6 Shafts in Bending and Torsion Only
- 12-7 Shaft Design Examples—Bending and Torsion Only
- 12-8 Shaft Design Example—Bending and Torsion with Axial Forces
- 12-9 Spreadsheet Aid for Shaft Design
- 12-10 Shaft Rigidity and Dynamic Considerations
- 12-11 Flexible Shafts

THE BIG PICTURE

Shaft Design

Discussion Map

- A shaft is a rotating machine component that transmits power.
- Designers must create a practical shape for the shaft and specify suitable diameters that ensure that the shaft is safe under expected loads.

Discover

Identify examples of mechanical systems that incorporate power-transmitting shafts. Describe their geometry and the forces and torques that are exerted on them.

What kinds of stresses are produced in the shaft?

How are other elements mounted on the shaft? How does the shaft geometry accommodate them? How is the shaft supported? What kinds of bearings are used?

This chapter provides approaches that you can use to design shafts that are safe for their intended use. But you have the final responsibility for the design.

A *shaft* is the component of a mechanical device that transmits rotational motion and power. It is integral to any mechanical system in which power is transmitted from a prime mover, such as an electric motor or an engine, to other rotating parts of the system. Can you identify some kinds of mechanical systems incorporating rotating elements that transmit power?

Here are some examples: gear-type speed reducers, belt or chain drives, conveyors, pumps, fans, agitators, and many types of automation equipment. What others can you think of? Consider household appliances, lawn maintenance equipment, parts of a car, power tools, and machines around an office or in your workplace. Describe them and discuss how shafts are used. From what source is power delivered into the shaft? What kind of power-transmitting

element, if any, is on the shaft itself? Or is the shaft simply transmitting the rotational motion and torque to some other element? If so, how is the shaft connected to that element?

Visualize the forces, torques, and bending moments that are created in the shaft during operation. In the process of transmitting power at a given rotational speed, the shaft is inherently subjected to a torsional moment, or *torque*. Thus, torsional shear stress is developed in the shaft. Also, a shaft usually carries power-transmitting components, such as gears, belt sheaves, or chain sprockets, which exert forces on the shaft in the transverse direction (perpendicular to its axis). These transverse forces cause bending moments to be developed in the shaft, requiring analysis of the stress due to bending. In fact, most

shafts must be analyzed for combined stress. Often, the forces applied to shafts act in virtually any direction, not just in a single plane.

Describe the specific geometry of shafts from some types of equipment that you can examine. Make a sketch of any variations in geometry that may occur, such as changes in diameter, to produce shoulders, grooves, keyseats, or holes. How are any power-transmitting elements held in position along the length of the shaft? How are the shafts supported? Typically, bearings are used to support the shaft while permitting rotation relative to the housing of the machine. What kinds of bearings are used? Do they have rolling elements such as ball bearings? Or,

are they smooth-surfaced bearings? What materials are used?

It is likely that you will find much diversity in the design of the shafts in different kinds of equipment. You should see that the functions of a shaft have a large influence on its design. Shaft geometry is greatly affected by the mating elements such as bearings, couplings, gears, chain sprockets, or other kinds of power-transmitting elements.

This chapter provides approaches that you can use to design shafts that are safe for their intended use. But the final responsibility for the design is yours because it is impractical to predict in a book all conditions to which a given shaft will be subjected.

YOU ARE THE DESIGNER

Consider the gear-type speed reducer shown in Figure 1–12. Note that there are three shafts that must be designed. The input shaft carries the first gear in the gear train and rotates at the speed of the prime mover, typically an electric motor or an engine. The middle shaft carries two gears and rotates more slowly than the input shaft because of the first stage of speed reduction. The final gear in the train is carried by the third shaft that rotates slower than shaft 2 and which also transmits the power to the driven machine. From what material should each shaft be made? What torque is being transmitted by each shaft, and over what part of the shaft is it

acting? How are the gears to be located on the shafts? How is the power to be transmitted from the gears to the shafts, or vice versa? What forces are exerted on the shaft by the gears, and what bending moments result? What forces must the bearings that support each shaft resist? What are the minimum acceptable diameters for the shafts at all sections to ensure safe operation? What should be the final dimensional specifications for the many features of the shafts, and what should be the tolerances on those dimensions? The material in this chapter will help you make these and other shaft design decisions.

12-1 OBJECTIVES OF THIS CHAPTER

After completing this chapter, you will be able to:

1. Propose reasonable geometries for shafts to carry a variety of types of power-transmitting elements, providing for the secure location of each element and the reliable transmission of power.
2. Compute the forces exerted on shafts by gears, belt sheaves, and chain sprockets.
3. Determine the torque distribution on shafts.
4. Prepare shearing force and bending moment diagrams for shafts in two planes.
5. Account for stress concentration factors commonly encountered in shaft design.
6. Specify appropriate design stresses for shafts.
7. Apply the shaft design procedure shown in this chapter to determine the required diameter of shafts at any section to resist the combination of torsional shear stress and bending stress.
8. Specify reasonable final dimensions for shafts that satisfy strength requirements and installation considerations and that are compatible with the elements mounted on the shafts.

9. Consider the influence of shaft rigidity on its dynamic performance.

12-2 SHAFT DESIGN PROCEDURE

Because of the simultaneous occurrence of torsional shear stresses and normal stresses due to bending, the stress analysis of a shaft virtually always involves the use of a combined stress approach. The recommended approach for shaft design and analysis is the *distortion energy theory of failure*. This theory was introduced in Chapter 5 and will be discussed more fully in Section 12–5. Vertical shear stresses and direct normal stresses due to axial loads may also occur. On very short shafts or on portions of shafts where no bending or torsion occurs, such stresses may be dominant. The discussions in Chapters 3–5 explain the appropriate analysis.

The specific tasks to be performed in the design and analysis of a shaft depend on the shaft's proposed design in addition to the manner of loading and support. With this in mind, the following is a recommended general approach for the design of a shaft.

This process will be demonstrated after the concepts of force and stress analysis are presented.

PROCEDURE FOR DESIGN OF A SHAFT

1. Determine the rotational speed of the shaft.
 2. Determine the power or the torque to be transmitted by the shaft.
 3. Determine the design of the power-transmitting components or other devices that will be mounted on the shaft, and specify the required location of each device.
 4. Specify the location of bearings to support the shaft. Normally two and only two bearings are used to support a shaft. The reactions on bearings supporting radial loads are assumed to act at the midpoint of the bearings. For example, if a single-row ball bearing is used, the load path is assumed to pass directly through the balls. If thrust (axial) loads exist in the shaft, you must specify which bearing is to be designed to react against the thrust load. Then the bearing that does not resist the thrust should be permitted to move slightly in the axial direction to ensure that no unexpected and undesirable thrust load is exerted on that bearing. Bearings should be placed on either side of the power-transmitting elements if possible to provide stable support for the shaft and to produce reasonably well-balanced loading of the bearings. The bearings should be placed close to the power-transmitting elements to minimize bending moments. Also, the overall length of the shaft should be kept small to keep deflections at reasonable levels.
 5. Propose the general form of the geometry for the shaft, considering how each element on the shaft will be held in position axially and how power transmission from each element to the shaft is to take place. For example, consider the shaft in Figure 12–1, which is to carry two gears

as the intermediate shaft in a double-reduction, spur gear-type speed reducer. Gear A accepts power from gear P by way of the input shaft. The power is transmitted from gear A to the shaft through the key at the interface between the gear hub and the shaft. The power is then transmitted down the shaft to point C, where it passes through another key into gear C. Gear C then transmits the power to gear Q and thus to the output shaft. The locations of the gears and bearings are dictated by the overall configuration of the reducer.

It is now decided that the bearings will be placed at points *B* and *D* on the shaft to be designed. But how will the bearings and the gears be located so as to ensure that they stay in position during operation, handling, shipping, and so forth? Of course, there are many ways to do this. One way is proposed in Figure 12–2. Shoulders are to be machined in the shaft to provide surfaces against which to seat the bearings and the gears on one side of each element. The gears are restrained on the other side by retaining rings snapped into grooves in the shaft. The bearings will be held in position by the housing acting on the outer races of the bearings. Keyseats will be machined in the shaft at the location of each gear. This proposed geometry provides for positive location of each element.

6. Determine the magnitude of torque that the shaft sees at all points. It is recommended that a torque diagram be prepared, as will be shown later.
 7. Determine the forces that are exerted on the shaft, both radially and axially.
 8. Resolve the radial forces into components in perpendicular directions, usually vertically and horizontally.
 9. Solve for the reactions on all support bearings in each plane.

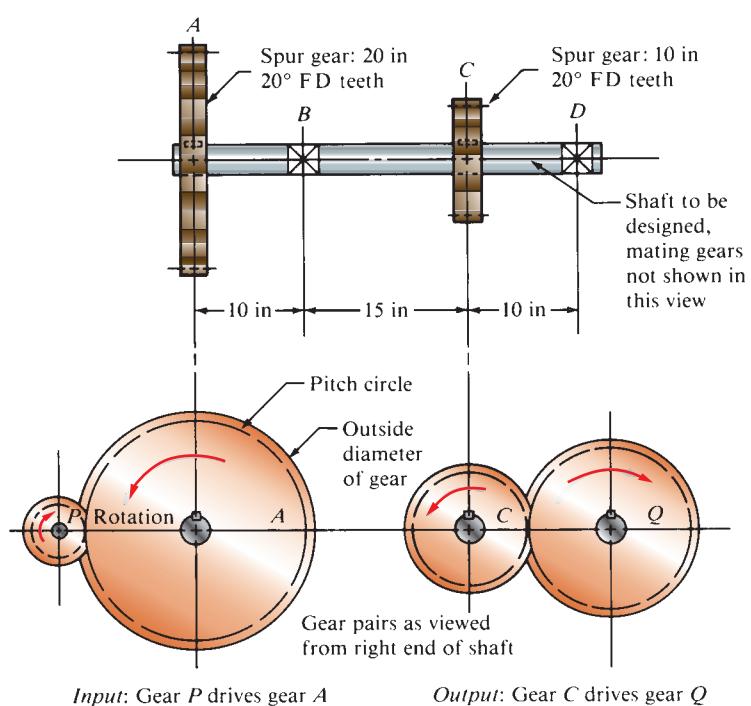


FIGURE 12–1 Intermediate shaft for a double-reduction, spur gear-type speed reducer

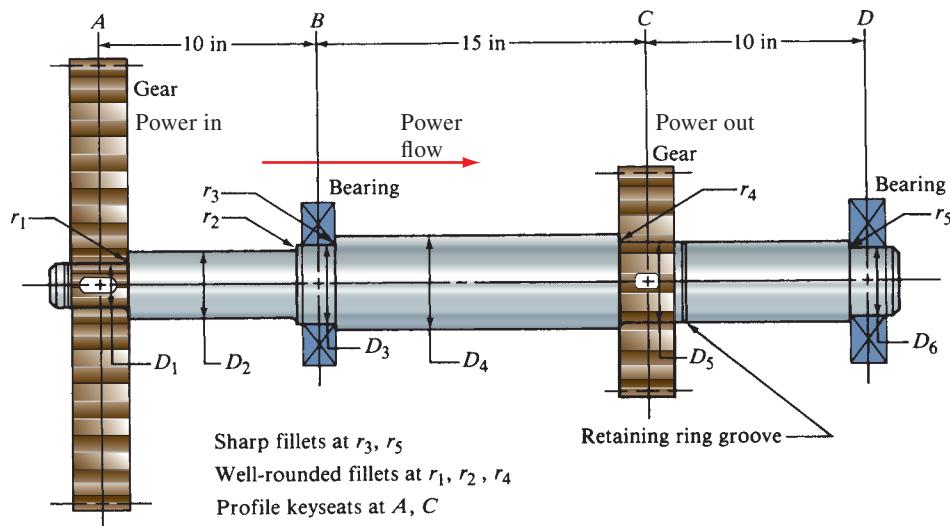


FIGURE 12-2 Proposed geometry for the shaft in Figure 12-1. Sharp fillets at r_3 , r_5 ; well-rounded fillets at r_1 , r_2 , r_4 ; profile keyseats at A, C

- 10. Produce the complete shearing force and bending moment diagrams to determine the distribution of bending moments in the shaft.
- 11. Select the material from which the shaft will be made, and specify its condition: cold-drawn, heat-treated, and so on. As indicated in Table 2-9, suggested steel materials for shafts are plain carbon or alloy steels with medium carbon content, such as SAE 1040, 4140, 4340, 4640, 5150, 6150, and 8650. Good ductility with percent elongation above about 12% is recommended. Determine the ultimate strength, yield strength, and percent elongation of the selected material.
- 12. Determine an appropriate design stress, considering the manner of loading (smooth, shock, repeated and reversed, or other).
- 13. Analyze each critical point of the shaft to determine the minimum acceptable diameter of the shaft at that point in order to ensure safety under the loading at that point. In general, the critical points are several and include those where a change of diameter takes place, where the higher values of torque and bending moment occur, and where stress concentrations occur.
- 14. Specify the final dimensions, surface finishes, tolerances, geometric dimensioning details, fillet radii, shoulder heights, keyseat dimensions, retaining ring groove geometry, and other details for each part of the shaft, ensuring that the minimum diameter dimensions from Step 13 are satisfied. Some considerations are listed here while additional information and guidelines are presented in Chapters 13–15.
 - a. Power-transmission elements such as gears, belt sheaves, and chain sprockets are typically placed on shafts with small clearances to facilitate assembly while retaining reliable operation. Chapter 13 describes fits between elements that should be applied to final tolerancing decisions. For high-precision devices and those operating at high speeds, the elements are often applied with a light interference fit to minimize vibration and to maintain precise alignment of mating members. The chosen fit determines the final limit dimensions for the shaft. See References 2 and 12.
 - b. The inner races of rolling contact bearings are typically mounted on shafts with a light interference fit as specified by the bearing manufacturer. It is essential that bearing manufacturer's specifications are shown on the shaft drawing. Chapters 13–15 give more information and some example data. Table 15–5 shows that for a ball bearing the specified total tolerance for the shaft diameter at a bearing seat is typically in the range of 0.0003 in to 0.0011 in [approximately 7.6 micrometers (μm) to 28.0 μm]. See examples of the bearing seat dimensioning in Figures 15–6 and 15–7, *typically shown as limit dimensions*. For the purposes of this chapter, it is sufficient to state that the specified bearing inner race diameter determines the final shaft dimension.
 - c. Because of the close tolerances at bearing seats, these parts of the shaft are typically ground. Other parts may be produced by turning with fine-finishing passes to achieve the desired fit and satisfactory fatigue performance.
 - d. Keyseats in the shaft should be dimensioned as shown in Figure 11–2(b), giving the S dimension for ease of manufacture. See also Figures 15–6 and 15–7 for examples.
 - e. This chapter presents a method of accounting for stress concentrations due to shoulder fillets that is initially approximate. The designer is expected to specify the final fillet radii that result in safe stresses.
 - f. Retaining ring manufacturers specify the dimensioning and tolerancing required for the grooves into which the rings are seated. Designers must show these details on the shaft drawings. See Figures 15–6 and 15–7 for examples.
 - g. Axial dimensions for shaft features are typically shown relative to some critical datum feature such as a shoulder against which a gear or bearing is mounted.

12-3 FORCES EXERTED ON SHAFTS BY MACHINE ELEMENTS

Gears, belt sheaves and pulleys, chain sprockets, and other elements typically carried by shafts exert forces on the shaft that cause bending moments. The following is a discussion of the methods for computing these forces for some cases. In general, you will have to use the principles of statics and dynamics to determine the forces for any particular element.

Spur Gears

The force exerted on a gear tooth during power transmission acts normal (perpendicular) to the involute-tooth profile, as discussed in Chapter 9 and shown in Figure 12-3. It is convenient for the analysis of shafts to consider the rectangular components of this force acting in the radial and tangential directions. It is most convenient to compute the tangential force, W_t , directly from the known torque being transmitted by the gear. For U.S. Customary units,

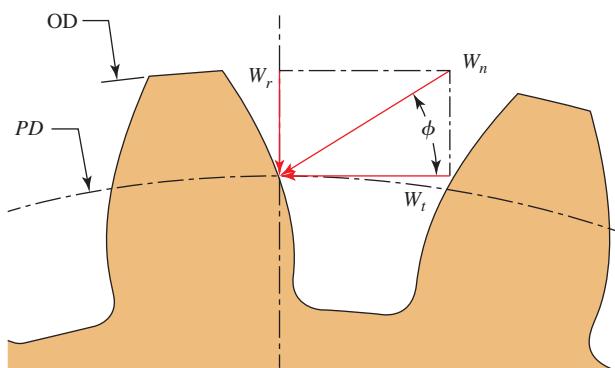


FIGURE 12-3 Forces on gear teeth: Tangential force, W_t ; Radial force, W_r ; Normal force, W_n

↳ Torque

$$T = 63\,000 (P)/n \quad (12-1)$$

↳ Tangential Force

$$W_t = T/(D/2) \quad (12-2)$$

where P = power being transmitted in hp

n = rotational speed in rpm

T = torque on the gear in lb · in

D = pitch diameter of the gear in in

The angle between the total force and the tangential component is equal to the pressure angle, ϕ , of the tooth form. Thus, if the tangential force is known, the radial force can be computed directly from

↳ Radial Forces

$$W_r = W_t \tan \phi \quad (12-3)$$

and there is no need to compute the normal force at all. For gears, the pressure angle is typically $14\frac{1}{2}^\circ$, 20° , or 25° .

Directions for Forces on Mating Spur Gears

Representing the forces on gears in their correct directions is essential to an accurate analysis of forces and stresses in the shafts that carry the gears. The force system shown in Figure 12-4(a) represents the action of the driving gear A on the driven gear B . The tangential force, W_t , pushes perpendicular to the radial line causing the driven gear B to rotate. The radial force, W_r , exerted by the driving gear A , acts along the radial line tending to push the driven gear B away.

An important principle of mechanics states that for each action force, there is an equal and opposite reaction force. Therefore, as shown in Figure 12-4, the driven

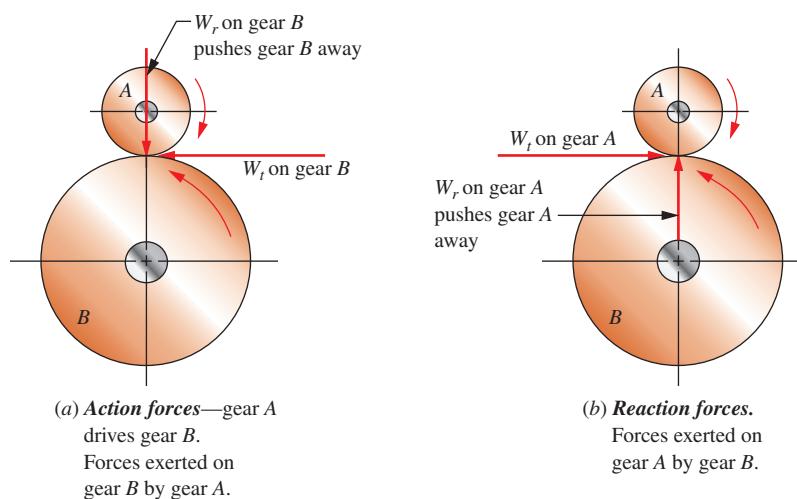


FIGURE 12-4 Directions for forces on mating spur gears

gear pushes back on the driving gear with a tangential force opposing that of the driving gear and a radial force that tends to push the driving gear away. For the orientation of the gears shown in Figure 12–4, note the following directions for forces:

Action: Driver pushes on driven gear

W_t : Acts to the left
 W_r : Acts downward

Reaction: Driven gear pushes back on driver

W_t : Acts to the right
 W_r : Acts upward

In summary, whenever you need to determine the direction of forces acting on a given gear, first determine whether it is a driver or a driven gear. Then visualize the action forces of the driver. If the gear of interest is the driven gear, these are the forces on it. If the gear of interest is the driver gear, the forces on it act in the opposite directions to the action forces.

Helical Gears

In addition to the tangential and radial forces encountered with spur gears, helical gears produce an axial force (as discussed in Chapter 10). First compute the tangential force from Equations (12–1) and (12–1). Then, if the helix angle of the gear is ψ , and if the normal pressure angle is ϕ_n , the radial force can be computed from

♦ Radial Force

$$W_r = W_t \tan \phi_n / \cos \psi \quad (12-4)$$

The axial force is

♦ Axial Force

$$W_x = W_t \tan \psi \quad (12-5)$$

Bevel Gears

Refer to Chapter 10 to review the formulas for the three components of the total force on bevel gear teeth in the tangential, radial, and axial directions. Example Problem 10–5 gives a comprehensive analysis of the forces, torques, and bending moments on shafts carrying bevel gears.

Worms and Wormgears

Chapter 10 also gives the formulas for computing the forces on worms and wormgears in the tangential, radial, and axial directions. See Example Problem 10–9.

Chain Sprockets

Figure 12–5 shows a pair of chain sprockets transmitting power. The upper part of the chain is in tension and produces the torque on either sprocket. The lower part of the chain, referred to as the *slack side*, exerts no force on either sprocket. Therefore, the total bending force on the shaft carrying the sprocket is equal to the tension in the tight side of the chain. If the torque on a certain sprocket is known,

♦ Force in Chain

$$F_c = T/(D/2) \quad (12-6)$$

where D = pitch diameter of that sprocket

Notice that the force, F_c , acts along the direction of the tight side of the belt. Because of the size difference between the two sprockets, that direction is at some angle from the centerline between the shaft centers. A precise analysis would call for the force, F_c , to be resolved into components parallel to the centerline and perpendicular to it. That is,

$$F_{cx} = F_c \cos \theta \quad \text{and} \quad F_{cy} = F_c \sin \theta$$

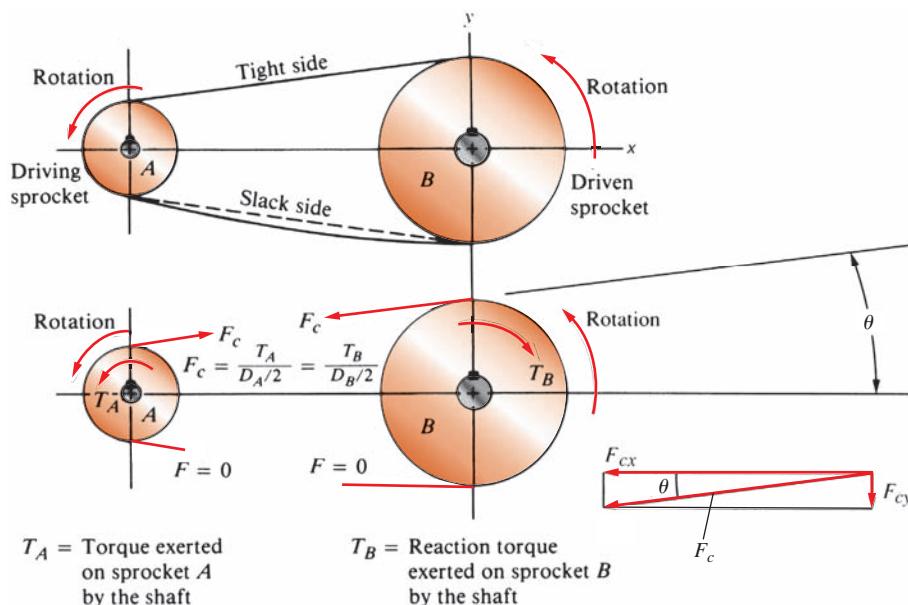


FIGURE 12–5 Forces on chain sprockets

where

the x -direction is parallel to the centerline, the y -direction is perpendicular to it, and the angle θ is the angle of inclination of the tight side of the chain with respect to the x -direction.

These two components of the force would cause bending in both the x -direction and the y -direction. Alternatively, the analysis could be carried out in the direction of the force, F_c , in which single plane bending occurs.

If the angle θ is small, little error will result from the assumption that the entire force, F_c , acts along the x -direction. *Unless stated otherwise, this book will use this assumption.*

V-Belt Sheaves

The general appearance of the V-belt drive system looks similar to the chain drive system. But there is one important difference: Both sides of the V-belt are in tension, as indicated in Figure 12–6. The tight side tension, F_1 , is greater than the “slack side” tension, F_2 , and thus there is a net driving force on the sheaves equal to

Net Driving Force

$$F_N = F_1 - F_2 \quad (12-7)$$

The magnitude of the net driving force can be computed from the torque transmitted:

Net Driving Force

$$F_N = T/(D/2) \quad (12-8)$$

But notice that the bending force on the shaft carrying the sheave is dependent on the sum, $F_1 + F_2 = F_B$. To be more precise, the components of F_1 and F_2 parallel to the line of centers of the two sprockets should be used. But unless the two sprockets are radically different in diameter, little error will result from $F_B = F_1 + F_2$.

To determine the bending force, F_B , a second equation involving the two forces F_1 and F_2 is needed. This is provided by assuming a ratio of the tight side tension to the slack side tension. For V-belt drives, the ratio is normally taken to be

$$F_1/F_2 = 5 \quad (12-9)$$

It is convenient to derive a relationship between F_N and F_B of the form

$$F_B = CF_N \quad (12-10)$$

where C = constant to be determined

$$C = \frac{F_B}{F_N} = \frac{F_1 + F_2}{F_1 - F_2} \quad (12-11)$$

But from Equation (12–9), $F_1 = 5F_2$. Then

$$C = \frac{F_1 + F_2}{F_1 - F_2} = \frac{5F_2 + F_2}{5F_2 - F_2} = \frac{6F_2}{4F_2} = 1.5$$

Equation (12–10) then becomes, for V-belt drives,

Bending Force on Shaft for V-Belt Drive

$$F_B = 1.5 F_N = 1.5T/(D/2) \quad (12-12)$$

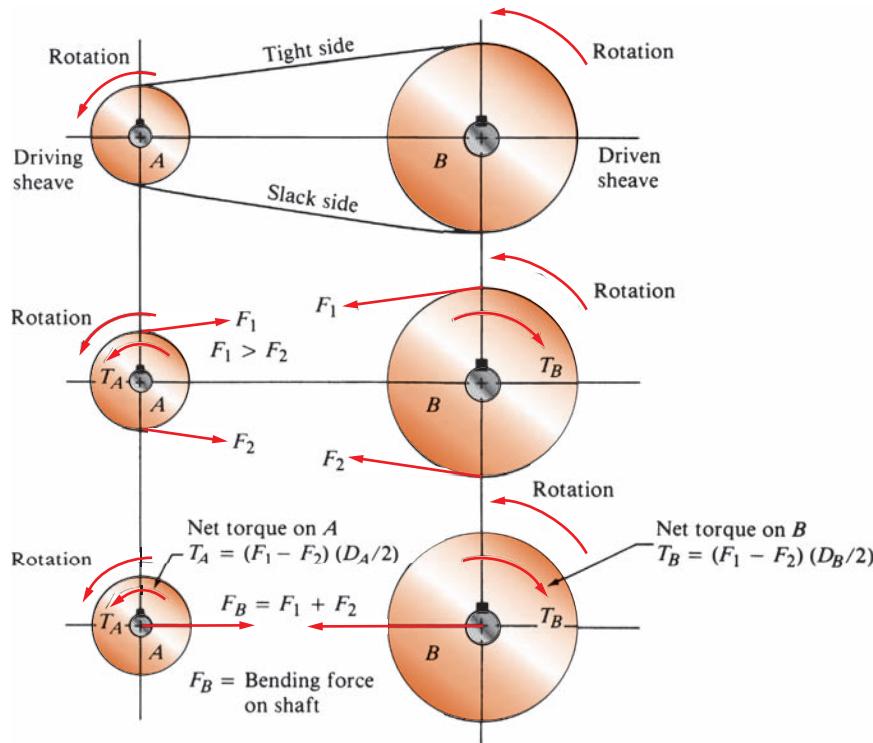


FIGURE 12–6 Forces on belt sheaves or pulleys

It is customary to consider the bending force, F_B , to act as a single force in the direction along the line of centers of the two sheaves as shown in Figure 12–6.

Flat-Belt Pulleys

The analysis of the bending force exerted on shafts by flat-belt pulleys is identical to that for V-belt sheaves except that the ratio of the tight side to the slack side tension is typically taken to be 3 instead of 5. Using the same logic as with V-belt sheaves, we can compute the constant C to be 2.0. Then, for flat-belt drives,

♦ Bending Force on Shaft for Flat-Belt Drive

$$F_B = 2.0 F_N = 2.0T/(D/2) \quad (12-13)$$

Flexible Couplings

More detailed discussion of flexible couplings was presented in Chapter 11, but it is important to observe here how the use of a flexible coupling affects the design of a shaft.

A flexible coupling is used to transmit power between shafts while accommodating minor misalignments in the radial, angular, or axial directions. Thus, the shafts adjacent to the couplings are subjected to torsion, but the misalignments cause no axial or bending loads.

12-4 STRESS CONCENTRATIONS IN SHAFTS

In order to mount and locate the several types of machine elements on shafts properly, a final design typically contains several diameters, keyseats, ring grooves, and other geometric discontinuities that create stress concentrations. The shaft design proposed in Figure 12–2 is an example of this observation.

These stress concentrations must be taken into account during the design analysis. But a problem exists because the true design values of the stress concentration factors, K_t , are unknown at the start of the design process. Most of the values are dependent on the diameters of the shaft and on the fillet and groove geometries, and these are the objectives of the design.

You can overcome this dilemma by establishing a set of preliminary design values for commonly encountered stress concentration factors, which can be used to produce initial estimates for the minimum acceptable shaft diameters. Then, after the refined dimensions are selected, you can analyze the final geometry to determine the real values for stress concentration factors. Comparing the final values with the preliminary values will enable you to judge the acceptability of the design. The final values of K_t can be determined using Appendix 18 or Internet site 3 in Chapter 3.

Preliminary Design Values for K_t

Considered here are the types of geometric discontinuities most often found in power-transmitting shafts: keyseats, shoulder fillets, and retaining ring grooves. In each case, a suggested design value is relatively high in order to produce a conservative result for the first approximation to the design. Again it is emphasized that the final design should be checked for safety. That is, if the final value is less than the original design value, the design is still safe. Conversely, if the final value is higher, the stress analysis for the design must be rechecked.

Keyseats. A *keyseat* is a longitudinal groove cut into a shaft for the mounting of a key, permitting the transfer of torque from the shaft to a power-transmitting element, or vice versa. The detail design of keys was covered in Chapter 11.

Two types of keyseats are most frequently used: profile and sled runner (see Figure 12–7). The profile keyseat is milled into the shaft, using an end mill having a diameter equal to the width of the key. The resulting groove is flat-bottomed and has a sharp, square corner at its end. The sled runner keyseat is produced by a circular milling cutter having a width equal to the width of the key. As the cutter begins or ends the keyseat, it produces a smooth radius. For this reason, the stress concentration factor for the sled runner keyseat is lower than that for the profile keyseat. Normally used design values are

$$K_t = 2.0 \quad (\text{profile})$$

$$K_t = 1.6 \quad (\text{sled runner})$$

Each of these is to be applied to the bending stress calculation for the shaft, using the full diameter of the shaft. The factors take into account both the reduction in cross

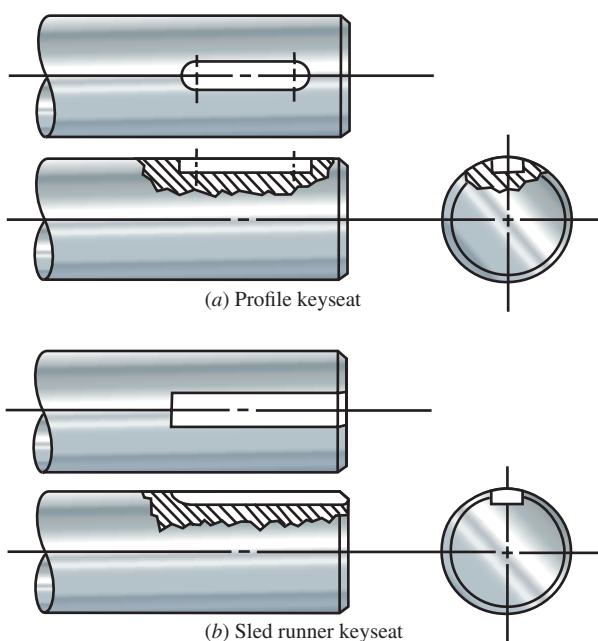


FIGURE 12-7 Keyseats

section and the effect of the discontinuity. Consult the references listed for more detail about stress concentration factors for keyseats. (See Reference 6.) If the torsional shear stress is fluctuating rather than steady, the stress concentration factor is also applied to that.

Shoulder Fillets. When a change in diameter occurs in a shaft to create a shoulder against which to locate a machine element, a stress concentration dependent on the ratio of the two diameters and on the radius in the fillet is produced (see Figure 12–8). It is recommended that the fillet radius be as large as possible to minimize the stress concentration, but at times the design of the gear, bearing, or other element affects the radius that can be used. For the purpose of design, we will classify fillets into two categories: sharp and well-rounded.

The term *sharp* here does not mean truly sharp, without any fillet radius at all. Such a shoulder configuration would have a very high stress concentration factor and should be avoided. Instead, *sharp* describes a shoulder with a relatively small fillet radius. One situation in which this is likely to occur is where a ball or roller bearing is to be located. The inner race of the bearing has a factory-produced radius, but it is small. The fillet radius on the shaft must be smaller yet in order for the bearing to be seated properly against the shoulder.

When an element with a large chamfer on its bore is located against the shoulder, or when nothing at all seats against the shoulder, the fillet radius can be much larger (*well-rounded*), and the corresponding stress concentration factor is smaller. We will use the following values for design for bending:

$$K_t = 2.5 \text{ (sharp fillet)}$$

$$K_t = 1.5 \text{ (well-rounded fillet)}$$

Referring to Appendix 18 or Internet site 3 in Chapter 3, you can see that these values correspond to ratios of r/d of approximately 0.03 for the sharp fillet case and 0.19 for the well-rounded fillet for a D/d ratio of 1.50.

Retaining Ring Grooves. Retaining rings are used for many types of locating tasks in shaft applications. The rings are installed in grooves in the shaft after the element to be retained is in place. The geometry of the groove is dictated by the ring manufacturer. Its usual configuration is a shallow groove with straight side walls and bottom and a small fillet at the base of the groove. The behavior of the shaft in the vicinity of the groove can be approximated by considering two sharp-filletted shoulders positioned close together. Thus, the stress concentration factor for a groove is fairly high.

For preliminary design, we will apply $K_t = 3.0$ to the bending stress at a retaining ring groove to account for the rather sharp fillet radii. The stress concentration factor is not applied to the torsional shear stress if it is steady in one direction.

The computed estimate for the minimum required diameter at a ring groove is at the base of the groove. You should increase this value by approximately 6% to account for the typical groove depth to determine the nominal size for the shaft. Apply a ring groove factor of 1.06 to the computed required diameter.

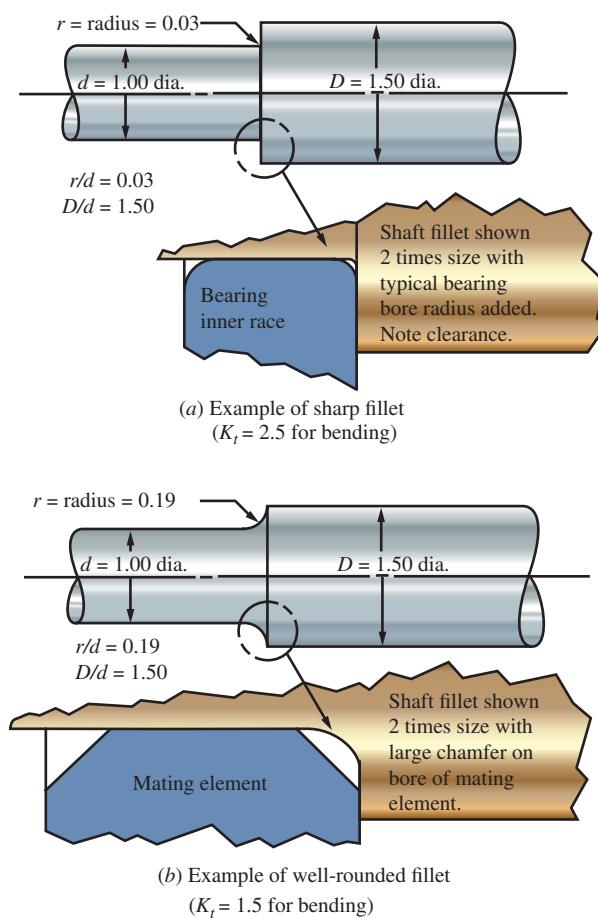


FIGURE 12-8 Fillets on shafts

12-5 DESIGN STRESSES FOR SHAFTS

In a given shaft, several different stress conditions can exist at the same time. For any part of the shaft that transmits power, there will be a torsional shear stress, while bending stress is usually present on the same parts. Only bending stresses may occur on other parts. Some points may not be subjected to either bending or torsion but will experience vertical shearing stress. Axial tensile or compressive stresses may be superimposed on other stresses. Then there may be some points where no significant stresses at all are created.

Thus, the decision of what design stress to use depends on the particular situation at the point of interest. In many shaft design and analysis projects, computations must be done at several points to account completely for the variety of loading and geometry conditions that exist.

Several cases discussed in Chapter 5 for computing design factors, N , are useful for determining design

stresses for shaft design. The bending stresses will be assumed to be completely reversed and repeated because of the rotation of the shaft. Because ductile materials perform better under such loads, it will be assumed that the material for the shaft is ductile. It will also be assumed that the torsional loading is relatively constant and acting in one direction. If other situations exist, consult the appropriate analysis from Chapter 5.

The symbol τ_d will be used for the design stress when a shear stress is the basis for the design. The symbol σ_d will be used when a normal stress is the basis.

Design Shear Stress—Steady Torque

It was stated in Chapter 5 that the best predictor of failure in ductile materials due to a steady shear stress was the distortion energy theory in which the design shear stress is computed from

$$\tau_d = s_y/(N\sqrt{3}) = (0.577s_y)/N \quad (12-14)$$

We will use this value for steady torsional shear stress, vertical shear stress, or direct shear stress in a shaft.

Design Shear Stress—Reversed Vertical Shear


Points on a shaft where no torque is applied and where the bending moments are zero or very low are often subjected to significant vertical shearing forces which then govern the design analysis. This typically occurs where a

bearing supports an end of a shaft and where no torque is transmitted in that part of the shaft.


Figure 12-9(a) shows the distribution of vertical shearing stresses on such a circular cross section. Note that the maximum shearing stress is at the neutral axis of the shaft, that is, at the diameter. The stress decreases in a roughly parabolic manner to zero at the outer surface of the shaft.

The diagram in Figure 12-9(b) can be explained by visualizing an element of the shaft, beginning at the top, with a shearing force acting downward on the cross section. Then follow that element as it rotates one revolution.


1. Look straight at the circular cross section from the end of the shaft [see Figure 12-9(c)].
2. An element at the top of the shaft sees zero shearing stress as indicated in Figure 12-9(a).
3. After rotating 90° counterclockwise, placing it on the left side of the horizontal diameter, that same element sees the maximum shearing stress, directed downward.
4. That same element sees zero shearing stress again when it rotates 90° more, placing it at the bottom of the shaft.
5. Now as the same element rotates 90° more to a place on the right side of the horizontal diameter, note that the element is upside down from its orientation when it was on the left side, while the shearing force still acts downward.

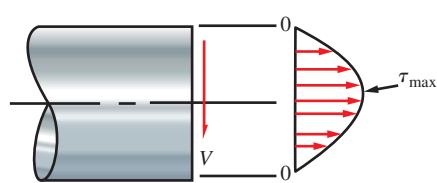

(a) Distribution of shearing stress on a circular cross section of a shaft

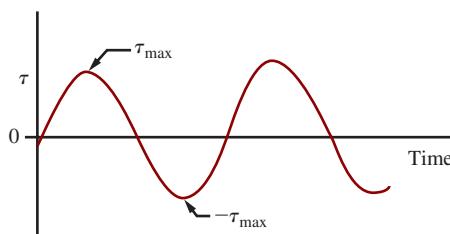

(b) Variation of shearing stress on a given element at the surface of a circular rotating shaft

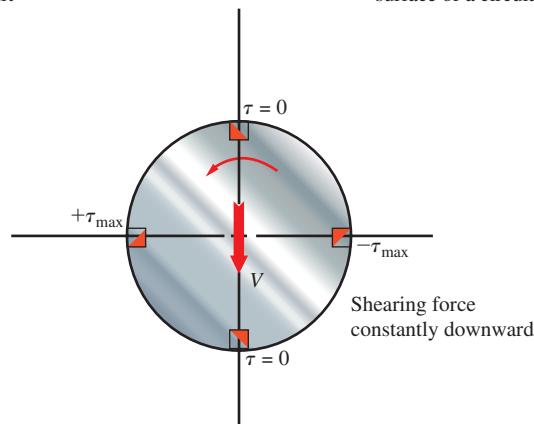

(c) Visualization of orientation of element for one revolution

FIGURE 12-9 Shearing stress in a rotating shaft due to vertical shearing force, V

6. However, in relation to the element, the stress is acting in the *opposite direction* as compared with the direction in Step 3, and the stress on the element has reversed from the value seen in Step 3.
7. Rotating another 90° back to the top of the shaft, the element sees zero shearing stress again.

Therefore, we can conclude that any particle of the shaft on its outside surface sees a reversal of the direction of the shearing stress during each rotation, as shown in Figure 12–9(b).

Recall from strength of materials that the maximum vertical shearing stress for the special case of a solid circular cross section can be computed from

$$\tau_{\max} = 4V/3A$$

where V = vertical shearing force

A = area of the cross section

Where stress concentration factors are to be considered,

$$\tau_{\max} = K_t(4V/3A)$$

Also note, as shown in Figure 12–9, that the rotation of the shaft causes any point at the outer part of the cross section to experience a reversing shearing stress that varies from $+\tau_{\max}$ to zero to $-\tau_{\max}$ to zero in each revolution. The design equations applied to this type of loading are developed next:

$$N = s'_{sn}/\tau_{\max}$$

We recommend using the distortion energy theory. Then the endurance strength in shear is

$$s'_{sn} = 0.577s'_n$$

Thus, the above equation can be written in the form

$$N = 0.577s'_n/\tau_{\max}$$

Expressed as a design stress, this is

$$\tau_d = 0.577s'_n/N$$

Now letting $\tau_{\max} = \tau_d = K_t(4V)/3A$ gives

$$\frac{K_t(4V)}{3A} = \frac{0.577s'_n}{N}$$

Solving for N gives

$$N = \frac{0.577s'_n(3A)}{K_t(4V)} = \frac{0.433s'_n(A)}{K_t(V)} \quad (12-15)$$

Equation (12–15) is useful if the goal is to evaluate the design factor for a given magnitude of loading, a given geometry for the shaft, and given material properties.

Now, solving for the required area to produce a specified design factor, N , gives

$$A = \frac{K_t(V)N}{0.433s'_n} = \frac{2.31K_t(V)N}{s'_n}$$

But our usual objective is the design of the shaft to determine the required diameter. By substituting

$$A = \pi D^2/4$$

we can solve for D :

⇒ Required Shaft Diameter

$$D = \sqrt{2.94 K_t(V)N/s'_n} \quad (12-16)$$

This equation should be used to compute the required diameter for a shaft where a vertical shearing force V is the only significant loading present. In most shafts, the resulting diameter will be much smaller than that required at other parts of the shaft where significant values of torque and bending moment occur. Also, practical considerations may require that the shaft be somewhat larger than the computed minimum to accommodate a reasonable bearing at the place where the shearing force is equal to the radial load on the bearing.

Implementation of Equations (12–15) and (12–16) has the complication that values for the stress concentration factor under conditions of vertical shearing stress are not well known. Published data such as that in Reference 6 in this chapter and Internet site 3 in Chapter 3 report values for stress concentration factors for axial normal stress, bending normal stress, and torsional shear stress. But values for vertical shearing stress are rarely reported. As an approximation, we will use the values for K_t for torsional shear stress when using these equations.

Design Normal Stress—Fatigue Loading

For the repeated and reversed bending in a shaft caused by transverse loads applied to the rotating shaft, the design stress is related to the endurance strength of the shaft material. The actual conditions under which the shaft is *manufactured* and *operated* should be considered when specifying the design stress.

Refer to the discussion in Section 5–6 for the method of computing the estimated actual endurance strength, s'_n , for use in shaft design. The process starts with using the graph in Figure 5–11 to determine the endurance strength as a function of the ultimate tensile strength of the material, adjusted for the surface finish. Equation (5–21) adjusts this value by applying four factors for the type of material, the type of stress, reliability, and the size of the cross section. When rotating steel shafts are being designed, the values for the material factor and the type of stress factor are both equal to 1.0. Use Table 5–3 for the reliability factor. Use Figure 5–12 or the equations in Table 5–4 to determine the size factor.

Stress concentration factors will be accounted for in the design equation to be developed later.

The design stress used here for parts of the shaft subjected to reversed bending stress due to the rotation of the shaft is

$$\sigma_d = s'_n/N \quad (12-17)$$

Note: Other factors not considered here could have adverse effect on the endurance strength of the shaft

material, and therefore on the design stress. Examples are as follows:

- Variation in peak stress levels above the nominal endurance strength for some periods of time, even quite short periods for high overstressing.
- Temperatures above approximately 400°F (204°C).
- Vibration that induces variations in stress not included in the analysis.
- Residual stresses: dangerous when tensile, possibly beneficial when compressive.
- Case hardening of the shaft material, resulting in non-uniform strength distribution near the surface and changing the net endurance strength.
- Interference fits of mating elements that introduce additional local stresses and stress concentrations.
- Corrosion that may roughen the surface and decrease the effective endurance strength.
- Thermal cycling over and above the applied stresses, changing the span of stress cycles.
- Axial tensile or compressive stresses. (A later section addresses this case.)

Testing of actual components under realistic operating conditions is recommended when any of these conditions exist.

Design Factor, N

Refer to Section 5–9 for discussion of factors that affect the choice of design factor. We will typically use $N = 2.5$ to 3.0 in this book, indicating a moderate level of uncertainty about actual material strengths, loading conditions, and long-term environmental factors. Higher values are sometimes justified for critical designs without clear knowledge of actual conditions. Conversely, lower values can be used when extensive, reliable data are available.

12-6 SHAFTS IN BENDING AND TORSION ONLY

Examples of shafts subjected to bending and torsion only are those carrying spur gears, V-belt sheaves, or chain sprockets. The power being transmitted causes the torsion, and the transverse forces on the elements cause bending. In the general case, the transverse forces do not all act in the same plane. In such cases, the bending moment diagrams for two perpendicular planes are prepared first. Then the resultant bending moment at each point of interest is determined. The process will be illustrated in Example Problem 12–1.

A design equation is now developed based on the assumption that the bending stress in the shaft is repeated and reversed as the shaft rotates, but that the torsional shear stress is nearly uniform. The design equation is based on the principle shown graphically in Figure 12–10 in which the vertical axis is the ratio of the

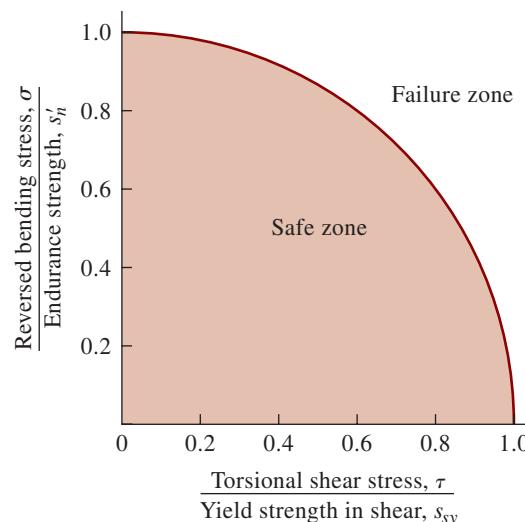


FIGURE 12-10 Basis for shaft design equation for repeated and reversed bending stress and steady torsional shear stress

reversed bending stress to the endurance strength of the material. (See Reference 8.) The horizontal axis is the ratio of the torsional shear stress to the yield strength of the material in shear. The points having the value of 1.0 on these axes indicate impending failure in pure bending or pure torsion, respectively. Experimental data show that failure under combinations of bending and torsion roughly follows the curve connecting these two points, which obeys the following equation:

$$(\sigma/s'_n)^2 + (\tau/s_{ys})^2 = 1 \quad (12-18)$$

We will use $s_{ys} = s_y/\sqrt{3}$ for the distortion energy theory. Also, a design factor can be introduced to each term on the left side of the equation to yield an expression based on *design stresses*:

$$(N\sigma/s'_n)^2 + (N\tau\sqrt{3}/s_y)^2 = 1$$

Now we can introduce a stress concentration factor for bending in the first term only, because this stress is repeated. No factor is needed for the torsional shear stress term because it is assumed to be steady, and stress concentrations have little or no effect on the failure potential. Then

$$(K_t N\sigma/s'_n)^2 + (N\tau\sqrt{3}/s_y)^2 = 1 \quad (12-19)$$

For rotating solid circular shafts, the bending stress due to a bending moment, M , is

$$\sigma = M/S \quad (12-20)$$

where $S = \pi D^3/32$ is the section modulus. The torsional shear stress is

$$\tau = T/Z_p \quad (12-21)$$

where $Z_p = \pi D^3/16$ is the polar section modulus.

Note that $Z_p = 2S$ and that, therefore,

$$\tau = T/(2S)$$

Substituting these relationships into Equation (12–19) gives

$$\left[\frac{K_t NM}{S s'_n} \right]^2 + \left[\frac{NT\sqrt{3}}{2Ss_y} \right]^2 = 1 \quad (12-22)$$

Now the terms N and S can be factored out, and the terms $\sqrt{3}$ and 2 can be brought outside the bracket in the torsion term:

$$\left[\frac{N}{S} \right]^2 \left[\left[\frac{K_t M}{s'_n} \right]^2 + \frac{3}{4} \left[\frac{T}{s_y} \right]^2 \right] = 1$$

We now take the square root of the entire equation:

$$\frac{N}{S} \sqrt{\left[\frac{K_t M}{s'_n} \right]^2 + \frac{3}{4} \left[\frac{T}{s_y} \right]^2} = 1$$

Let $S = \pi D^3/32$ for a solid circular shaft.

$$\frac{32N}{\pi D^3} \sqrt{\left[\frac{K_t M}{s'_n} \right]^2 + \frac{3}{4} \left[\frac{T}{s_y} \right]^2} = 1 \quad (12-23)$$

Now we can solve for the diameter D :

Design Equation for Shaft Design

$$D = \left[\frac{32 N}{\pi} \sqrt{\left[\frac{K_t M}{s'_n} \right]^2 + \frac{3}{4} \left[\frac{T}{s_y} \right]^2} \right]^{1/3} \quad (12-24)$$

Equation (12–24) is used for shaft design in this book. It is compatible with the standard ANSI B106.1M-1985. (See Reference 1.) Note that Equation (12–24) can also be used for pure bending or pure torsion.

12-7 SHAFT DESIGN EXAMPLES—BENDING AND TORSION ONLY

Next we show two design examples for shaft design using the General Design Procedure given in Section 12–2. The general process must be adapted to the specific nature of each problem. Example Problems 12–1 and 12–2 carry some combinations of spur gears, belt sheaves, and chain sprockets that exert forces normal to the shaft to cause bending. The forces may act in any direction around the shaft depending on the placement of mating elements. Notice that none of these types of elements exerts forces parallel to the axis of the shaft tending to cause direct axial tension or compression.

Section 12–8 will modify this procedure for cases in which axial loads do exist, as with shafts carrying helical gears or wormgears.

Recommended Basic Sizes for Shafts

When mounting a commercially available element, of course, follow the manufacturer's recommendation for the basic size of the shaft and the tolerance.

In the U.S. Customary unit system, diameters are usually specified to be common fractions or their decimal equivalents. Appendix 2 lists the preferred basic sizes that you can use for dimensions over which you have control in decimal-inch, fractional-inch, and metric units. (See Reference 2.)

When commercially available unmounted bearings are to be used on a shaft, it is likely that their bores will be in metric dimensions. Typical sizes available and their decimal equivalents are listed in Table 14–3.

Design Example Design the shaft shown in Figures 12–1 and 12–2. It is to be machined from SAE 1144 OQT 1000 steel.

12–1 The shaft is part of the drive for a large blower system supplying air to a furnace. Gear A receives 200 hp from gear P. Gear C delivers the power to gear Q. The shaft rotates at 600 rpm. Use $D_A = 20.00$ in. and $D_C = 10.00$ in. Pressure angle = $\phi = 20^\circ$.

Solution First determine the properties of the steel for the shaft. From Figure A4–2, $s_y = 83\,000$ psi, $s_u = 118\,000$ psi, and the percent elongation is 19%. Thus, the material has good ductility. Using Figure 5–11, we can estimate $s_n = 42\,000$ psi. For reversed bending, let $C_m = C_{st} = 1.0$.

A size factor should be applied to the endurance strength because the shaft will be quite large to be able to carry 200 hp. Although we do not know the actual size at this time, we might select $C_s = 0.75$ from Figure 5–12 as an estimate.

A reliability factor should also be specified. This is a design decision and we can use Table 5–3 for some common factors. For this problem, let's design for a reliability of 0.99 and use $C_R = 0.81$. Now we can compute the estimated actual endurance strength:

$$s'_n = s_n C_s C_R = (42\,000)(0.75)(0.81) = 25\,000 \text{ psi}$$

The design factor is taken to be $N = 2$. The blower is not expected to present any unusual shock or impact.

Now we can compute the torque in the shaft from Equation (12–1):

$$T = (63\,000)(P)/n = (63\,000)(200)/600 = 21\,000 \text{ lb} \cdot \text{in}$$

Note that only that part of the shaft from A to C is subjected to this torque. There is zero torque from the right of gear C over to bearing D. See Figure 12–11(d).

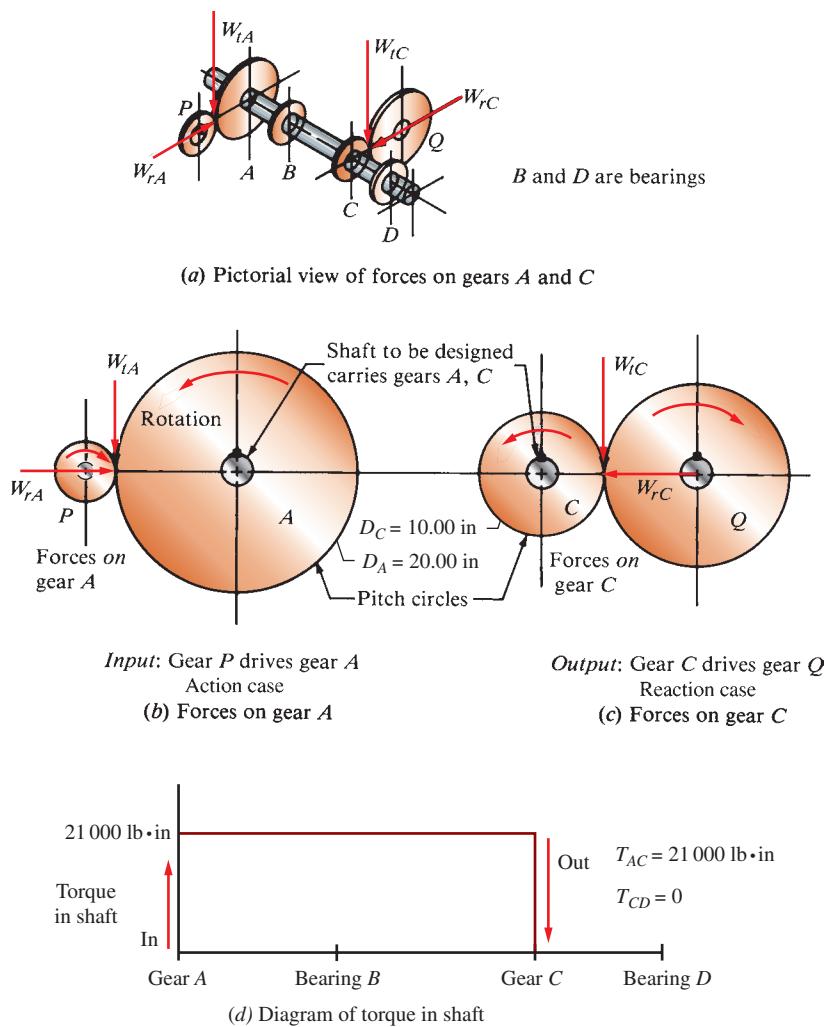


FIGURE 12-11 Forces on gears A and C and the torque in the shaft

Forces on the Gears: Figure 12-11 shows the two pairs of gears with the forces acting on gears A and C as shown. Observe that gear A is driven by gear P, and gear C drives gear Q. It is very important for the directions of these forces to be correct. The values of the forces are found from Equations (12-2) and (12-3).

$$W_{tA} = T_A/(D_A/2) = 21000 \text{ lb} \cdot \text{in}/(20 \text{ in}/2) = 2100 \text{ lb} \downarrow$$

$$W_{rA} = W_{tA} \tan(\phi) = 2100 \text{ lb} [\tan(20^\circ)] = 764 \text{ lb} \rightarrow$$

$$W_{tC} = T_C/(D_C/2) = 21000 \text{ lb} \cdot \text{in}/(10 \text{ in}/2) = 4200 \text{ lb} \downarrow$$

$$W_{rC} = W_{tC} \tan(\phi) = 4200 \text{ lb} [\tan(20^\circ)] = 1529 \text{ lb} \leftarrow$$

Forces on the Shaft: The next step is to show these forces on the shaft in their proper planes of action and in the proper direction. The reactions at the bearings are computed, and the shearing force and bending moment diagrams are prepared. The results are shown in Figure 12-12.

We continue the design by computing the minimum acceptable diameter of the shaft at several points along the shaft. We use the proposed design from Figure 12-2. At each point, we will observe the magnitude of torque and the bending moment that exist at the point, and we will estimate the value of any stress concentration factors. If more than one stress concentration exist in the vicinity of the point of interest, the larger value is used for design. This assumes that the geometric discontinuities themselves do not interact, which is good practice. For example, at point A, the keyseat should end well before the shoulder fillet begins.

1. **Point A:** Gear A produces torsion in the shaft from A and to the right. To the left of A, where there is a retaining ring, there are no forces, moments, or torques.

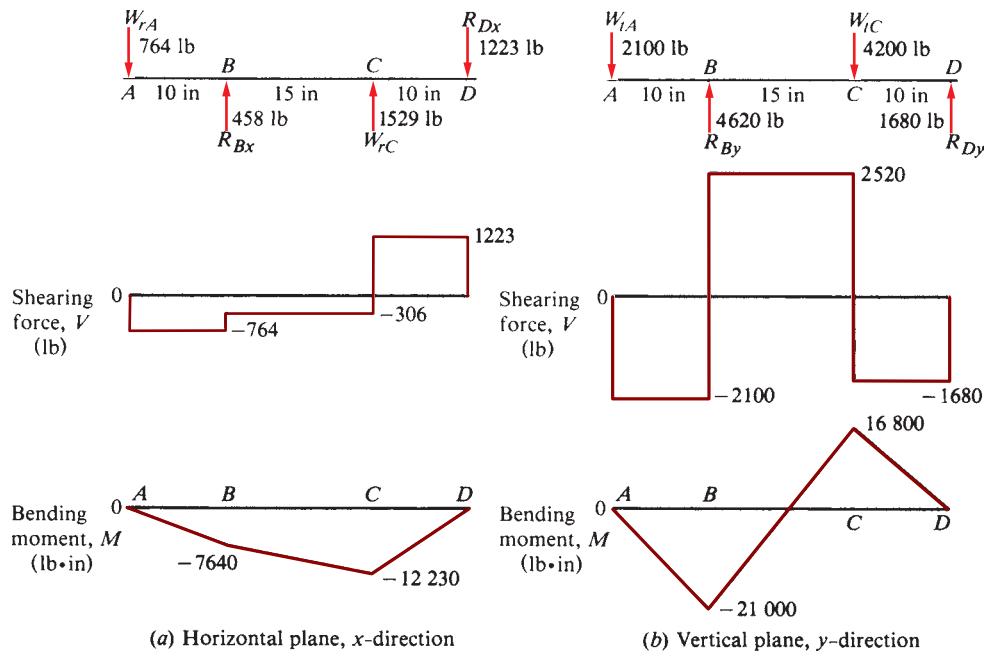


FIGURE 12-12 Load, shear, and moment diagrams for the shaft in Figure 12-10

The moment at A is zero because it is a free end of the shaft. Now we can use Equation (12-24) to compute the required diameter for the shaft at A , using only the torsion term.

$$D_1 = \left[\frac{32N}{\pi} \sqrt{\frac{3}{4} \left(\frac{T}{S_y} \right)^2} \right]^{1/3}$$

$$D_1 = \left[\frac{32(2)}{\pi} \sqrt{\frac{3}{4} \left(\frac{21000}{83000} \right)^2} \right]^{1/3} = 1.65 \text{ in}$$

2. **Point B:** Point B is the location of a bearing with a sharp fillet to the right of B and a well-rounded fillet to the left. It is desirable to make D_2 at least slightly smaller than D_3 at the bearing seat to permit the bearing to be slid easily onto the shaft up to the place where it is pressed to its final position. There is usually a light press fit between the bearing bore and the shaft seat. The torque in the shaft at B is

$$T_B = 21000 \text{ lb} \cdot \text{in}$$

The bending moment at B is the resultant of the moment in the x - and y -planes from Figure 12-12:

$$M_B = \sqrt{M_{Bx}^2 + M_{By}^2} = \sqrt{(7640)^2 + (21000)^2} = 22350 \text{ lb} \cdot \text{in}$$

To the left of B (diameter D_2),

$$K_t = 1.5 \text{ (well-rounded fillet)}$$

Using Equation (12-24) because of the combined stress condition,

$$D_2 = \left[\left(\frac{32N}{\pi} \right) \sqrt{\left(\frac{K_t M}{S_n'} \right)^2 + \frac{3}{4} \left(\frac{T}{S_y} \right)^2} \right]^{1/3}$$

$$D_2 = \left[\frac{32(2)}{\pi} \sqrt{\left[\frac{1.5(22350)}{25500} \right]^2 + \frac{3}{4} \left[\frac{21000}{83000} \right]^2} \right]^{1/3} = 3.30 \text{ in} \quad (12-24a)$$

At B and to the right of B (diameter D_3), everything is the same, except the value of $K_t = 2.5$ for the sharp fillet. Then

$$D_3 = \left[\frac{32(2)}{\pi} \sqrt{\left[\frac{2.5(22350)}{25500} \right]^2 + \frac{3}{4} \left[\frac{21000}{83000} \right]^2} \right]^{1/3} = 3.55 \text{ in}$$

Notice that D_4 will be larger than D_3 in order to provide a shoulder for the bearing. Therefore, it will be safe. Its actual diameter will be specified after we have completed the stress analysis and selected the bearing at B . The bearing manufacturer's catalog will specify the minimum acceptable diameter to the right of the bearing to provide a suitable shoulder against which to seat the bearing.

3. **Point C:** Point C is the location of gear C with a well-rounded fillet to the left, a profile keyseat at the gear, and a retaining ring groove to the right. The use of a well-rounded fillet at this point is actually a design decision that requires that the design of the bore of the gear accommodate a large fillet. Usually this means that a chamfer is produced at the ends of the bore. The bending moment at C is

$$M_C = \sqrt{M_{Cx}^2 + M_{Cy}^2} = \sqrt{(12\,230)^2 + (16\,800)^2} = 20\,780 \text{ lb}\cdot\text{in}$$

To the left of C the torque of 21 000 lb·in exists with the profile keyseat giving $K_t = 2.0$. Then

$$D_5 = \left[\frac{32(2)}{\pi} \sqrt{\left[\frac{2.0(20\,780)}{25\,500} \right]^2 + \frac{3}{4} \left[\frac{21\,000}{83\,000} \right]^2} \right]^{1/3} = 3.22 \text{ in}$$

To the right of C there is no torque, but the ring groove suggests $K_t = 3.0$ for design, and there is reversed bending. We can use Equation (12–24) with $K_t = 3.0$, $M = 20\,780 \text{ lb}\cdot\text{in}$ and $T = 0$.

$$D_5 = \left[\frac{32(2)}{\pi} \sqrt{\left(\frac{3.0(20\,780)}{25\,500} \right)^2} \right]^{1/3} = 3.68 \text{ in}$$

Applying the ring groove factor of 1.06 raises the diameter to 3.90 in.

This value is higher than that computed for the left of C , so it governs the design at point C .

4. **Point D:** Point D is the seat for bearing D , and there is no torque or bending moment here. However, there is a vertical shearing force equal to the reaction at the bearing. Using the resultant of the x - and y -plane reactions, the shearing force is

$$V_D = \sqrt{(1223)^2 + (1680)^2} = 2078 \text{ lb}$$

We can use Equation (12–16) to compute the required diameter for the shaft at this point:

$$D = \sqrt{2.94 K_t V N s'_n} \quad (12-16)$$

Referring to Figure 12–2, we see a sharp fillet near this point on the shaft because of the small fillet radius necessary to permit the firm seating of the face of the bearing race against the shaft shoulder. Then a stress concentration factor of 2.5 should be used:

$$D_6 = \sqrt{\frac{2.94(2.5)(2078)(2)}{25\,500}} = 1.094 \text{ in}$$

This is very small compared to the other computed diameters, and it will usually be so. In reality, the diameter at D will probably be made much larger than this computed value because of the size of a reasonable bearing to carry the radial load of 2078 lb.

Summary The computed minimum required diameters for the various parts of the shaft in Figure 12–2 are as follows:

$$D_1 = 1.65 \text{ in}$$

$$D_2 = 3.30 \text{ in}$$

$$D_3 = 3.55 \text{ in}$$

$$D_5 = 3.90 \text{ in}$$

$$D_6 = 1.094 \text{ in}$$

Also, D_4 must be somewhat greater than 3.90 in in order to provide adequate shoulders for gear C and bearing B .

We now specify convenient decimal-inch dimensions for the six diameters. Choose the bearing seat dimensions from Table 14–3. Choose all other dimensions from Appendix 2. Table 12–1 shows one possible set of recommended diameters.

TABLE 12-1 Recommended Diameters

| Mating part | Diameter number (from Design Example 12-1 and Figure 12-2) | Minimum diameter | Specified diameter (basic size) |
|-------------|---|------------------|------------------------------------|
| Gear | D_1 | 1.65 in | 1.800 in |
| Nothing | D_2 | 3.30 in | 3.400 in |
| Bearing | D_3 | 3.55 in | 3.7402 in (95 mm) |
| Nothing | D_4 | $>D_3$ or D_5 | 4.400 in |
| Gear | D_5 | 3.90 in | 4.000 in |
| Bearing | D_6 | 1.094 in | 1.7717 in (45 mm) |

Diameters D_3 and D_6 are the decimal equivalents of the metric diameters of the inner races of bearings from Table 14-3. The procedures in Chapter 14 would have to be used to determine whether bearings having those diameters are suitable to carry the given radial loads. Also, D_4 would have to be checked to see whether it provides a sufficiently high shoulder against which to seat the bearing mounted at point *B* on the shaft. Then detailed specifications for fillet radii, lengths, keyseats, and retaining ring grooves would have to be defined, along with suitable tolerances. See Chapters 13–15 for guidance. The actual values for stress concentration factors and the size factor should then be determined. Finally, the stress analysis should be repeated to ensure that the resulting design factor is acceptable. Equation (12-23) can be solved for N and evaluated for actual conditions.

Design Example 12-2

The shaft shown in Figure 12-13 receives 110 hp from a water turbine through a chain sprocket at point *C*. The gear pair at *E* delivers 80 hp to an electrical generator. The V-belt sheave at *A* delivers 30 hp to a bucket elevator that carries grain to an elevated hopper. The shaft rotates at 1700 rpm. The sprocket, sheave, and gear are located axially by retaining rings. The sheave and gear are keyed with sled runner keyseats, and there is a profile keyseat at the sprocket. Use SAE 1040 cold-drawn steel for the shaft. Compute the minimum acceptable diameters D_1 through D_7 as defined in Figure 12-13.

Solution First, the material properties for the SAE 1040 cold-drawn steel are found from Appendix 3:

$$s_y = 71\,000 \text{ psi} \quad s_u = 80\,000 \text{ psi}$$

Then from Figure 5-11, $s_n = 30\,000$ psi. Let's design for a reliability of 0.99 and use $C_R = 0.81$. The shaft size should be moderately large, so we can assume $C_s = 0.85$ as a reasonable estimate. Then the modified endurance strength is

$$s'_n = s_n C_s C_R = (30\,000)(0.85)(0.81) = 20\,650 \text{ psi}$$

This application is fairly smooth: a turbine drive and a generator and a conveyor at the output points. A design factor of $N = 2$ should be satisfactory.

Torque Distribution in the Shaft: Recalling that all of the power comes into the shaft at *C*, we can then observe that 30 hp is delivered down the shaft from *C* to the sheave at *A*. Also, 80 hp is delivered down the shaft from *C* to the gear at *E*. From these observations, the torque in the shaft can be computed:

$$T_A = T_{AC} = (63\,000)(30 \text{ hp})/1700 \text{ rpm} = 1112 \text{ lb}\cdot\text{in} \quad \text{from } A \text{ to } C \text{ in shaft}$$

$$T_E = T_{CE} = (63\,000)(80 \text{ hp})/1700 \text{ rpm} = 2965 \text{ lb}\cdot\text{in} \quad \text{from } C \text{ to } E \text{ in shaft}$$

Figure 12-14 shows a plot of the torque distribution *in the shaft* superimposed on the sketch of the shaft. When designing the shaft at *C*, we will use 2965 lb·in *at C and to the right*, but we can use 1112 lb·in *to the left of C*. Notice that no part of the shaft is subjected to the full 110 hp that comes into the sprocket at *C*. The power splits into two parts as it enters the shaft. When analyzing the sprocket itself, we must use the full 110 hp and the corresponding torque:

$$T_C = (63\,000)(110 \text{ hp})/1700 \text{ rpm} = 4076 \text{ lb}\cdot\text{in} \quad (\text{torque on the sprocket})$$

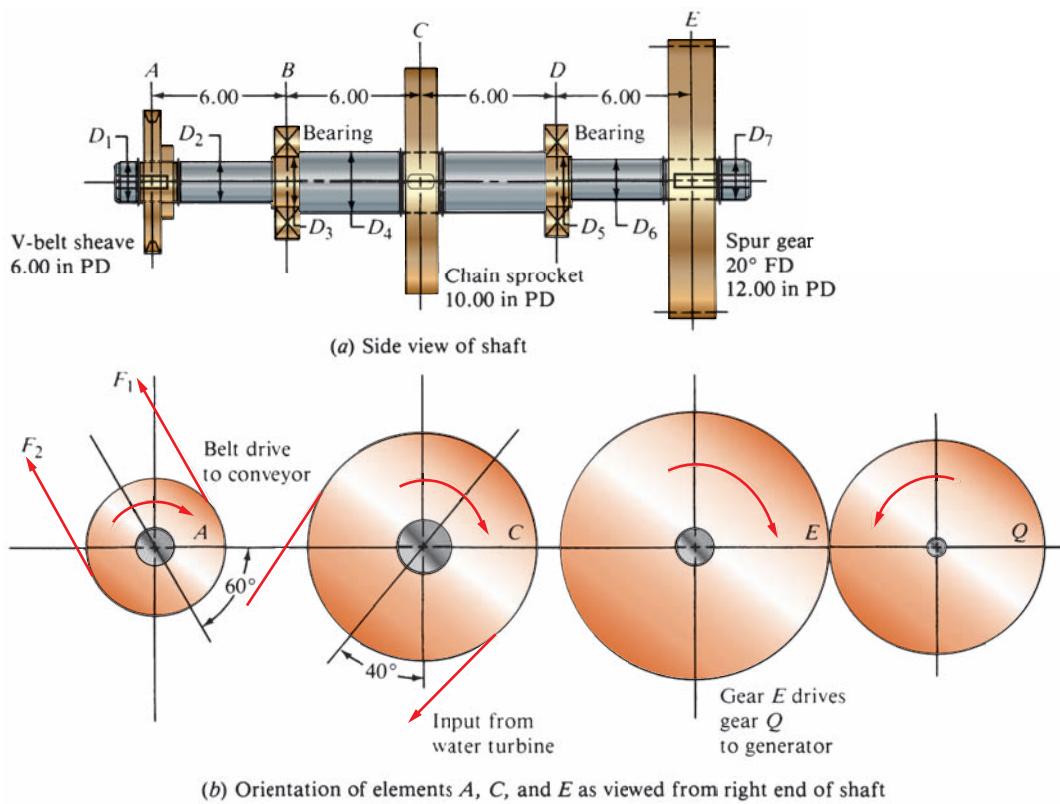


FIGURE 12-13 Shaft design for Example Problem 12-2

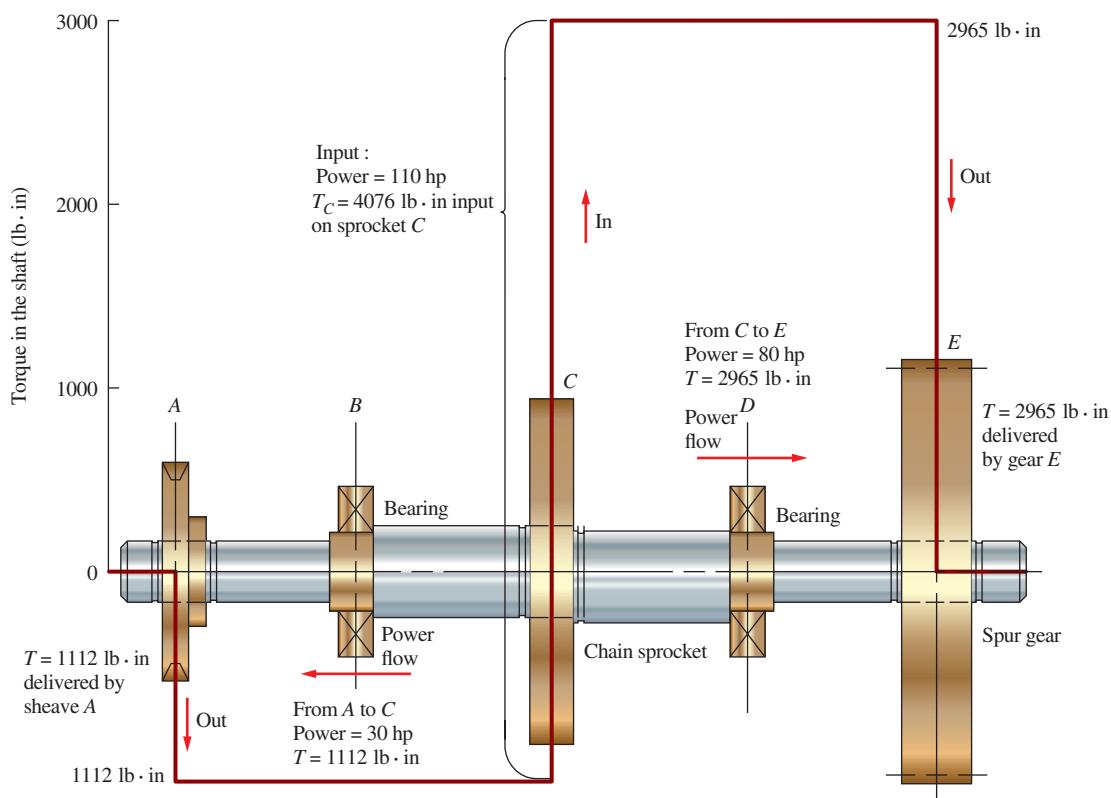


FIGURE 12-14 Torque distribution in the shaft

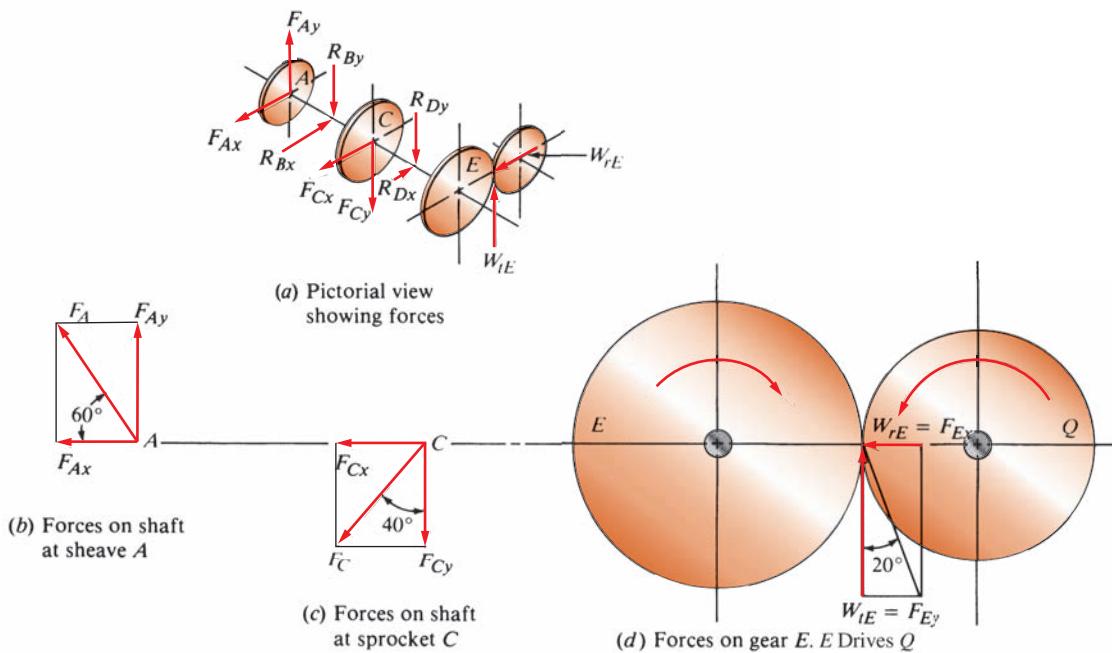


FIGURE 12-15 Forces resolved into x - and y -components

Forces: We will compute the forces at each element separately and show the component forces that act in the vertical and horizontal planes, as in Design Example 12-1. Figure 12-15 shows the directions of the applied forces and their components for each element.

1. **Forces on sheave A:** Use Equations (12-7), (12-8), and (12-12):

$$F_N = F_1 - F_2 = T_A/(D_A/2) = (1112 \text{ lb}\cdot\text{in})/3.0 \text{ in} = 371 \text{ lb} \quad (\text{net driving force})$$

$$F_A = 1.5 F_N = 1.5(371 \text{ lb}) = 556 \text{ lb} \quad (\text{bending force})$$

The bending force acts upward and to the left at an angle of 60° from the horizontal. As shown in Figure 12-15, the components of the bending force are

$$F_{Ax} = F_A \cos(60^\circ) = (556 \text{ lb})\cos(60^\circ) = 278 \text{ lb} \leftarrow \text{(toward the left)}$$

$$F_{Ay} = F_A \sin(60^\circ) = (556 \text{ lb})\sin(60^\circ) = 482 \text{ lb} \uparrow \text{(upward)}$$

2. **Forces on sprocket C:** Use Equation (12-6):

$$F_C = T_C/(D_C/2) = (4076 \text{ lb}\cdot\text{in})/5.0 \text{ in} = 815 \text{ lb}$$

This is the bending load on the shaft. The components are

$$F_{Cx} = F_C \sin(40^\circ) = (815 \text{ lb})\sin(40^\circ) = 524 \text{ lb} \leftarrow \text{(to the left)}$$

$$F_{Cy} = F_C \cos(40^\circ) = (815 \text{ lb})\cos(40^\circ) = 624 \text{ lb} \downarrow \text{(downward)}$$

3. **Forces on gear E:** The transmitted load is found from Equation (12-2), and the radial load from Equation (12-3). The directions are shown in Figure 12-15.

$$F_{Ey} = W_{tE} = T_E/(D_E/2) = (2965 \text{ lb}\cdot\text{in})/6.0 \text{ in} = 494 \text{ lb} \uparrow \text{(upward)}$$

$$F_{Ex} = W_{rE} = W_{tE} \tan(\phi) = (494 \text{ lb})\tan(20^\circ) = 180 \text{ lb} \leftarrow \text{(to the left)}$$

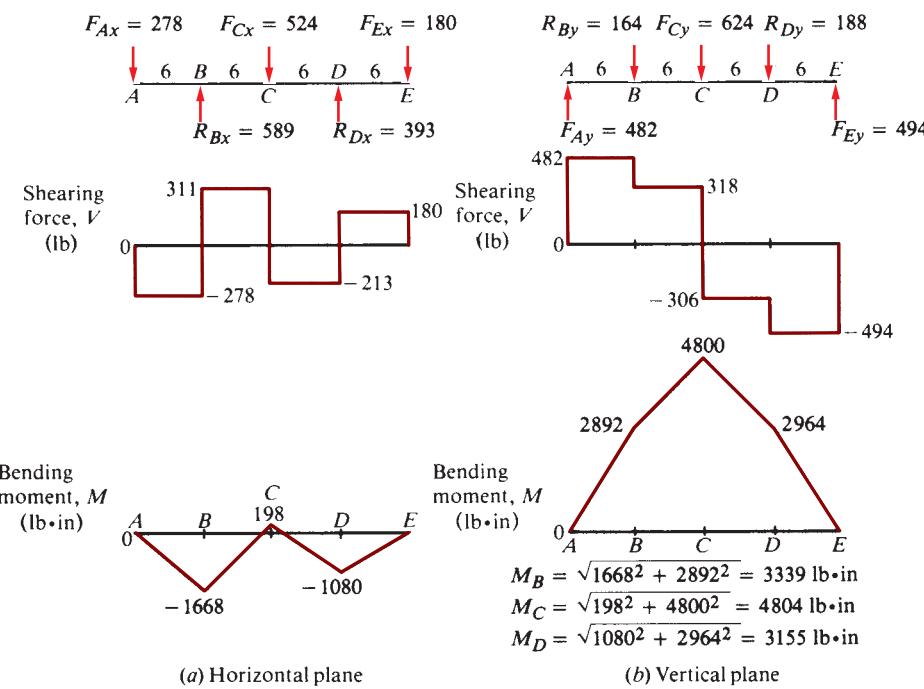


FIGURE 12–16 Load, shear, and moment diagrams

Load, Shear, and Moment Diagrams: Figure 12–16 shows the forces acting on the shaft at each element, the reactions at the bearings, and the shearing force and bending moment diagrams for both the horizontal (x -) and vertical (y -) planes. In the figure, the computations of the resultant bending moment at points B , C , and D are also shown.

Design of the Shaft: We will use Equation (12-24) to determine the minimum acceptable diameter of the shaft at each point of interest. Because the equation requires a fairly large number of individual operations, and because we will be using it at least seven times, it may be desirable to write a computer program just for that operation. Or the use of a spreadsheet would be nearly ideal. See Section 12-9. Note that we can use Equation (12-24) even though there is only torsion or only bending by entering zero for the missing value.

Equation (12-24) is repeated here for reference. In the solution below, the data used for each design point are listed. You may want to verify the calculations for the required minimum diameters. The design factor of $N = 2$ has been used.

$$D = \left[\frac{32N}{\pi} \sqrt{\left(\frac{K_t M}{s'_n} \right)^2 + \frac{3}{4} \left(\frac{T}{s_y} \right)^2} \right]^{1/3}$$

1. **Point A:** Torque = 1112 lb·in; moment = 0. The sheave is located with retaining rings. Because the torque is steady, we will not use a stress concentration factor in this calculation, as discussed in Section 12–4. But then we will find the nominal diameter at the groove to the right of A by increasing the computed result by about 6% to determine the nominal minimum full diameter for the shaft. The result should be conservative for typical groove geometries.

Using Equation (12-24), $D_1 = 0.65$ in. Increasing this by 6% gives $D_1 = 0.69$ in.

2. **To the left of point B:** This is the relief diameter leading up to the bearing seat. A well-rounded fillet radius will be specified for the place where D_2 joins D_3 . Thus,

$$\text{Torque} = 1112 \text{ lb}\cdot\text{in} \quad \text{Moment} = 3339 \text{ lb}\cdot\text{in} \quad K_t = 1.5$$

Then $D_2 = 1.70$ in.

3. ***At point B and to the right:*** This is the bearing seat with a shoulder fillet at the right, requiring a fairly sharp fillet:

$$\text{Torque} = 1112 \text{ lb}\cdot\text{in} \quad \text{Moment} = 3339 \text{ lb}\cdot\text{in} \quad K_t = 2.5$$

Then $D_3 = 2.02$ in.

TABLE 12-2 Specification of Values

| Mating part | Diameter number | Minimum diameter | Specified diameter | |
|-------------|-----------------|------------------|--------------------|---------|
| | | | Fraction | Decimal |
| Sheave | D_1 | 0.69 | $1\frac{3}{4}$ | 1.750 |
| Nothing | D_2 | 1.70 | $1\frac{3}{4}$ | 1.750 |
| Bearing | D_3 | 2.02 | $2\frac{1}{4}$ | 2.250 |
| Sprocket | D_4 | 2.57 | $2\frac{3}{4}$ | 2.750 |
| Bearing | D_5 | 1.98 | 2 | 2.000 |
| Nothing | D_6 | 1.68 | $1\frac{3}{4}$ | 1.750 |
| Gear | D_7 | 0.96 | $1\frac{3}{4}$ | 1.750 |

4. **At point C:** It is planned that the diameter be the same all the way from the right of bearing B to the left of bearing D . The worst condition is at the right of C , where there is a ring groove and the larger torque value is

$$\text{Torque} = 2965 \text{ lb}\cdot\text{in} \quad \text{Moment} = 4804 \text{ lb}\cdot\text{in} \quad K_t = 3.0$$

Then $D_4 = 2.57$ in after applying the ring groove factor of 1.06.

5. **At point D and to the left:** This is a bearing seat similar to that at B :

$$\text{Torque} = 2965 \text{ lb}\cdot\text{in} \quad \text{Moment} = 3155 \text{ lb}\cdot\text{in} \quad K_t = 2.5$$

Then $D_5 = 1.98$ in.

6. **To the right of point D:** This is a relief diameter similar to D_2 :

$$\text{Torque} = 2965 \text{ lb}\cdot\text{in} \quad \text{Moment} = 3155 \text{ lb}\cdot\text{in} \quad K_t = 1.5$$

Then $D_6 = 1.68$ in.

7. **At point E:** The gear is mounted with retaining rings on each side:

$$\text{Torque} = 2965 \text{ lb}\cdot\text{in} \quad \text{Moment} = 0 \quad K_t = 3.0$$

Then $D_7 = 0.96$ in. after applying the ring groove factor of 1.06.

Summary with
Convenient Values
Specified

Using Appendix 2, we specify convenient fractions at all places, including bearing seats (see Table 12-2). It is assumed that inch bearings of the pillow block type will be used.

We decided to make the diameters D_1 , D_2 , D_6 , and D_7 the same to minimize machining and to provide a little extra safety factor at the ring grooves. Again the bearing bore sizes would have to be checked against the load rating of the bearings. The size of D_4 would have to be checked to see that it provides a sufficient shoulder for the bearings at B and D .

The size factor and the stress concentration factors must also be checked.

12-8 SHAFT DESIGN EXAMPLE— BENDING AND TORSION WITH AXIAL FORCES

Example Problem 12-3 shows a shaft carrying a chain sprocket along with a wormgear. One of the components of the forces acting on the wormgear acts parallel to the axis of the shaft, creating a direct axial stress component in the shaft to the left of point D . We describe one

method for handling this situation within the development of the stress analysis for that part of the shaft in the problem solution.

Except for the presence of the axial stress in the shaft, the design procedure is the same as that for Design Examples 12-1 and 12-2. For this reason, much of the detailed manipulation of formulas is omitted to condense the presentation of the analysis.

**Example Problem
12-3**

A wormgear is mounted at the right end of the shaft as shown in Figure 12-17. The gear has the same design as that discussed in Example Problem 10-7 and delivers 6.68 hp to the shaft at a speed of 101 rpm. The magnitudes and directions of the forces on the gear are given in the figure. Notice that there is a system of three orthogonal forces acting on the gear. The power is transmitted by a chain sprocket at *B* to drive a conveyor removing cast iron chips from a machining system. Design the shaft.

Solution The torque on the shaft from the wormgear at point *D* to the chain sprocket at *B* is

$$T_B = T_D = T_{BD} = W_{tG}(D_G/2) = (962 \text{ lb})(4.333 \text{ in}) = 4168 \text{ lb}\cdot\text{in}$$

also, $T_{AB} = 0$. The torque diagram is drawn in Figure 12-17.

The force on the chain sprocket is

$$F_c = T_B/(D_s/2) = (4168 \text{ lb}\cdot\text{in})/[(6.71 \text{ in})/2] = 1242 \text{ lb}$$

This force acts horizontally toward the right as viewed from the end of the shaft.

Bending Moment Diagrams: Figure 12-18 shows the forces acting on the shaft in both the vertical and the horizontal planes and the corresponding shearing force and bending moment diagrams. You should review these diagrams, especially that for the vertical plane, to grasp the effect of the axial force of 265 lb. Notice that because it acts above the shaft, it creates a bending moment at the end of the shaft of

$$M_D = W_{xG} \cdot D_{G/2} = (265 \text{ lb})[(8.667 \text{ in})/2]$$

$$M_D = 1148 \text{ lb}\cdot\text{in}$$

It also affects the reactions at the bearings. The resultant bending moments at *B*, *C*, and *D* are also shown in the figure.

In the design of the entire system, we must decide which bearing will resist the axial force. For this problem, let's specify that the bearing at *C* will transfer the axial thrust force to the housing. This decision places a compressive stress in the shaft from *C* to *D* and requires that means be provided to transmit the axial force from the wormgear to the bearing. The geometry proposed in Figure 12-17 accomplishes this, and it will be adopted for the following stress analysis. The procedures are the

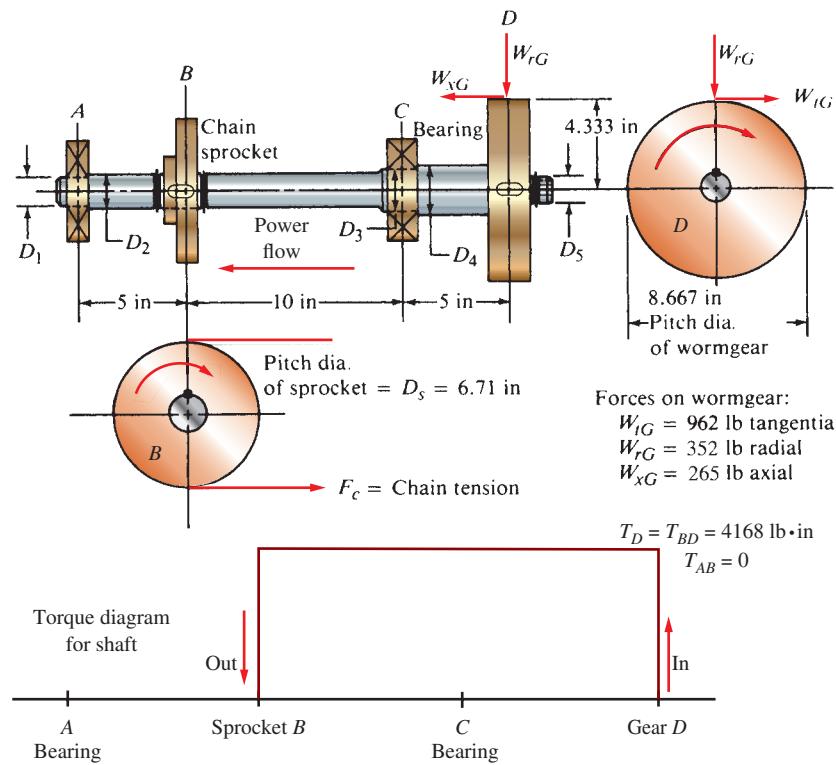


FIGURE 12-17 Shaft design

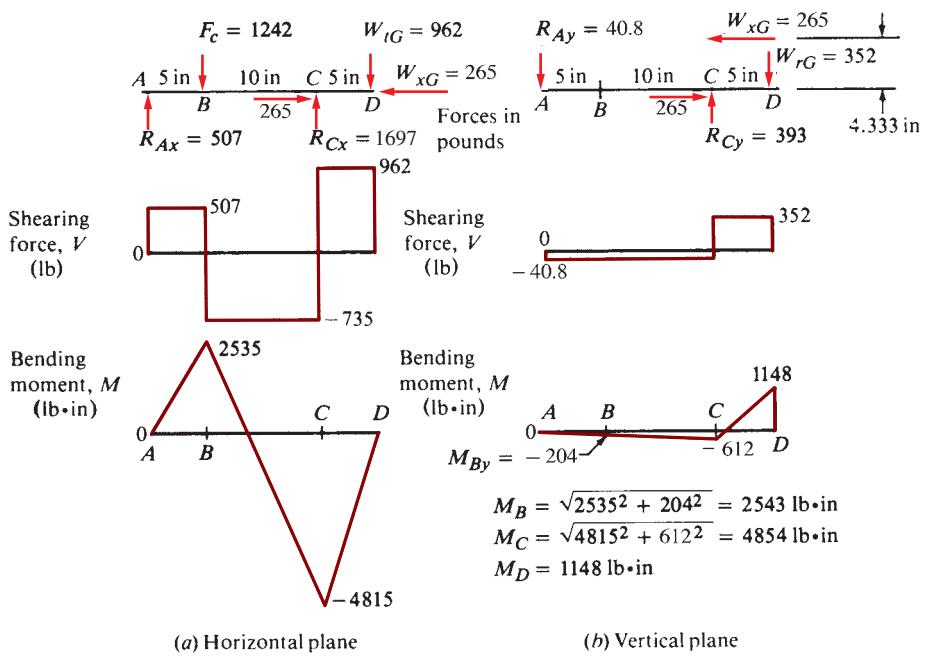


FIGURE 12-18 Load, shear, and moment diagrams for the shaft in Figure 12-16

same as those used in Design Examples 12-1 and 12-2 and only summary results will be shown. The consideration of the axial compressive stress is discussed, along with the computations at point C on the shaft.

Material Selection and Design Strengths: Medium-carbon steel with good ductility and a fairly high strength is desired for this demanding application. We will use SAE 1340 OQT 1000 (Appendix 3), having an ultimate strength of 144 000 psi, a yield strength of 132 000 psi, and a 17% elongation. From Figure 5-11 we estimate $s_n = 50 000$ psi. Let's use an initial size factor of 0.80 and a reliability factor of 0.81 for a reliability of 0.99. Then

$$s'_n = (50 000 \text{ psi})(0.80)(0.81) = 32 400 \text{ psi}$$

Because the use of the conveyor is expected to be rough, we will use a design factor of $N = 3$, higher than average.

Except at point A, where only a vertical shear stress exists, the computation of the minimum required diameter is done using Equation (12-24).

1. **Point A:** The left bearing mounts at point A, carrying the radial reaction force only, which acts as a vertical shearing force in the shaft. There is no torque or bending moment here.

The vertical shearing force is

$$V = \sqrt{R_{Ax}^2 + R_{Ay}^2} = \sqrt{(507 \text{ lb})^2 + (40.8 \text{ lb})^2} = 509 \text{ lb}$$

We can use Equation (12-16) to compute the required diameter for the shaft at this point:

$$D = \sqrt{2.94 K_t V N / s'_n} \quad (12-16)$$

Referring to Figure 12-17, we see a sharp fillet near this point on the shaft. Then a stress concentration factor of 2.5 should be used:

$$D = \sqrt{\frac{2.94(2.5)(507 \text{ lb})(3)}{(32 400 \text{ lb/in}^2)}} = 0.588 \text{ in}$$

As seen before, this is quite small, and the final specified diameter will probably be larger, depending on the bearing selected.

2. **Point B:** The chain sprocket mounts at point B, and it is located axially by retaining rings on both sides. The critical point is at the right of the sprocket at the ring groove, where $T = 4168 \text{ lb}\cdot\text{in}$, $M = 2543 \text{ lb}\cdot\text{in}$, and $K_t = 3.0$ for bending.

The computed minimum diameter required is $D_2 = 1.93$ in at the base of the groove. We should increase this by approximately 6%, as discussed in Section 12–3. Then

$$D_2 = 1.06(1.93 \text{ in}) = 2.05 \text{ in}$$

3. **To the left of point C:** This is the relief diameter for the bearing seat. The diameter here will be specified to be the same as that at B , but different conditions occur: Torque = 4168 lb·in, $M = 4854 \text{ lb}\cdot\text{in}$, and $K_t = 1.5$ for the well-rounded fillet for bending only. The required diameter is 1.91 in. Because this is smaller than that at B , the previous calculation will govern.
 4. **At point C and to the right:** The bearing will seat here, and it is assumed that the fillet will be rather sharp. Thus, $T = 4168 \text{ lb}\cdot\text{in}$, $M = 4854 \text{ lb}\cdot\text{in}$, and $K_t = 2.5$ for bending only. The required diameter is $D_3 = 2.26$ in.
- The axial thrust load acts between points C and D . The inclusion of this load in the computations would greatly complicate the solution for the required diameters. In most cases, the axial normal stress is relatively small compared with the bending stress. Also, the fact that the stress is compressive improves the fatigue performance of the shaft, because fatigue failures normally initiate at points of tensile stress. For these reasons, the axial stress is ignored in these calculations. The computed diameters are also interpreted as nominal minimum diameters, and the final selected diameter is larger than the minimum. This, too, tends to make the shaft safe even when there is an added axial load. When in doubt, or when a relatively high axial tensile stress is encountered, the methods of Chapter 5 should be applied. Long shafts in compression should also be checked for buckling.
5. **Point D:** The wormgear mounts at point D . We will specify that a well-rounded fillet will be placed to the left of D and that there will be a sled runner keyseat. Thus, $T = 4168 \text{ lb}\cdot\text{in}$, $M = 1148 \text{ lb}\cdot\text{in}$, and $K_t = 1.6$ for bending only. The computed required diameter is $D_5 = 1.24$ in. Notice that D_4 must be greater than either D_3 or D_5 because it provides the means to transfer the thrust load from the wormgear to the inner race of the bearing at C .

Summary and Selection of Convenient Diameters

Table 12–3 presents a summary of the required diameters and the specified diameters for all parts of the shaft in this design example. See Figure 12–17 for the locations of the five diameters. For this application we have chosen to use fractional-inch dimensions from Appendix 2 except at the bearing seats, where the use of metric bearing bores from Table 14–3 are selected.

Comment

As a partial check on the validity of the design decision to complete the calculations for shaft diameters while avoiding the axial stress between points C and D due to the axial force from the wormgear, let's now compute the magnitude of the axial compressive stress due to the 265-lb force. The shaft size between points C and D is $D_4 = 3.00$ in. Then,

$$\text{Axial stress} = \sigma_{CD} = -W_{xG}/A_4$$

$$A_4 = \pi D_4^2/4 = \pi(3.00 \text{ in})^2/4 = 7.069 \text{ in}^2$$

$$\sigma_{CD} = -265 \text{ lb}/7.069 \text{ in}^2 = -37.5 \text{ psi Compression}$$

Because of this rather low stress level, it seems reasonable to conclude that avoiding the axial compressive stress in the initial design analysis was warranted.

TABLE 12–3 Summary of Shaft Diameters

| Mating part | Diameter number | Minimum diameter | Specified diameter | |
|--------------------|------------------------|------------------------------|---------------------------|----------------|
| | | | Fraction (metric) | Decimal |
| Bearing A | D_1 | 0.59 in (35 mm) | | 1.3780 in |
| Sprocket B | D_2 | 2.05 in $2\frac{1}{4}$ in | | 2.250 in |
| Bearing C | D_3 | 2.26 in (65 mm) | | 2.5591 in |
| (Shoulder) | D_4 | $>D_3$ 3 in | | 3.000 in |
| Wormgear D | D_5 | 1.24 in $1\frac{1}{2}$ in | | 1.500 in |

12-9 SPREADSHEET AID FOR SHAFT DESIGN

A spreadsheet is useful to organize the data required to compute the minimum required shaft diameter at various points along a shaft and to complete the calculation using Equations (12-16) and (12-24). Note that Equation (12-24) can be used for bending only, torsion only, or the combination of bending and torsion.

Figure 12-19 shows a typical example, using U.S. Customary units, for data from Design Example 12-1. Describe the application in the upper panel for future reference. Then complete the following steps:

- Enter the shaft material specification along with its ultimate and yield strength properties found from tables in the appendices.
- Find the basic endurance strength from Figure 5-11 considering the ultimate tensile strength and the manner of production (ground, machined, etc.).

- Enter values for the size factor and the reliability factor. The spreadsheet then computes the modified endurance strength, s'_n .
- Enter the stress concentration factor for the point of interest.
- Enter the design factor.
- After analysis such as that shown in Design Example 12-1, enter the torque and the components of the bending moment in the x - and y -planes that exist at the point of interest along the shaft. The spreadsheet computes the combined bending moment.
- Enter the components of the vertical shearing force in the x - and y -planes. The spreadsheet computes the combined shearing force.

The minimum acceptable shaft diameters from both Equation (12-16) (vertical shear only) and Equation (12-24) (torsion and/or bending) are computed. You must observe which required diameter is larger.

| DESIGN OF SHAFTS | | | | | | |
|---|---|--|--|--|--|--|
| Application: | <i>Design Example 12-1, Drive for a Blower System Diameter D_3—To right of point B—Bending and torsion</i> | | | | | |
| This design aid computes the minimum acceptable diameter using Equation (12-24) for shafts subjected to steady torsion and/or rotating bending. | | | | | | |
| Equation (12-16) is used when only vertical shear stress is present. | | | | | | |
| Input Data | | (Insert values in italics.) | | | | |
| <i>Shaft material specification:</i> | | SAE 1144 OQT 1000 Steel | | | | |
| <i>Tensile strength:</i> | | $s_u = 118\,000 \text{ psi}$ | | | | |
| <i>Yield strength:</i> | | $s_y = 83\,000 \text{ psi}$ | | | | |
| <i>Basic endurance strength:</i> | | $s_n = 42\,000 \text{ psi}$ | | | | |
| <i>Size factor:</i> | | $C_s = 0.75$ | | | | |
| <i>Reliability factor:</i> | | $C_R = 0.81$ | | | | |
| <i>Modified endurance strength:</i> | | $s'_n = 25\,515 \text{ psi}$ | | | | |
| <i>Stress concentration factor:</i> | | $K_t = 2.5$ Sharp fillet | | | | |
| <i>Design factor:</i> | | $N = 2$ Nominal $N = 2$ | | | | |
| Shaft Loading Data: Bending and Torsion | | | | | | |
| <i>Bending moment components:</i> | | $M_x = 21\,000 \text{ lb} \cdot \text{in}$ | | | | |
| $M_y = 7640 \text{ lb} \cdot \text{in}$ | | | | | | |
| <i>Combined bending moment:</i> | | $M = 22\,347 \text{ lb} \cdot \text{in}$ | | | | |
| <i>Torque:</i> | | $T = 21\,000 \text{ lb} \cdot \text{in}$ | | | | |
| <i>Minimum shaft diameter:</i> | | $D = 3.55 \text{ in}$ | | | | |
| Computed from Eq. (12-24) | | | | | | |
| Shaft Loading Data: Vertical Shearing Force Only | | | | | | |
| <i>Shearing force components:</i> | | $V_x = 764 \text{ lb}$ | | | | |
| $V_y = 2520 \text{ lb}$ | | | | | | |
| <i>Combined shearing force:</i> | | $V = 2633 \text{ lb}$ | | | | |
| <i>Minimum shaft diameter:</i> | | $D = 1.232 \text{ in}$ | | | | |
| Computed from Eq. (12-16) | | | | | | |

FIGURE 12-19 Spreadsheet aid for shaft design

12-10 SHAFT RIGIDITY AND DYNAMIC CONSIDERATIONS

The design processes outlined in this chapter thus far have concentrated on stress analysis and ensuring that the shaft is safe with regard to the bending and torsional shear stresses imposed on the shaft by power-transmitting elements. Rigidity of the shaft is also a major concern for several reasons:

1. Excessive radial deflection of the shaft may cause active elements to become misaligned, resulting in poor performance or accelerated wear. For example, the center distance between shafts carrying precision gears should not vary more than approximately 0.005 in (0.13 mm) from the theoretical dimension. Improper meshing of the gear teeth would occur and actual bending and contact stresses could be significantly higher than those predicted in the design for the gears.
2. Guidelines are reported in Section 20–2 for the recommended limits for bending and torsional deflection of a shaft according to its intended precision.
3. Shaft deflection is also an important contributor to a tendency for shafts to vibrate as they rotate. A flexible shaft will oscillate in both bending and torsional modes, causing movements that are greater than the static deflections due just to gravity and applied loads and torques. A long slender shaft tends to whip and whirl with relatively large deformations from its theoretical straight axis.
4. The shaft itself and the elements mounted on it should be balanced. Any amount of unbalance causes centrifugal forces to be created that rotate with the shaft. Large unbalances and high rotating speeds may create unacceptable force levels and shaking of the rotating system. An example with which you may be familiar is an automobile wheel that is “out of balance.” You can actually feel the vibration through the steering wheel as you drive. Having the tire and wheel balanced reduces the vibration to acceptable levels.
5. The dynamic behavior of the shaft may become dangerously destructive if it is operated near its *critical speed*. At critical speed, the system is in resonance, the deflection of the shaft continues to increase virtually without bound, and it will eventually self-destruct.

Critical speeds of typical machinery shaft designs are several thousand revolutions per minute. However, many variables are involved. Long shafts used for vehicular driveshafts, power screws, or agitators may have much lower critical speeds and they must be checked. It is typical to keep operating speeds to at least 20% below or above the critical speed. When operating above the critical speed, it is necessary to accelerate the shaft rapidly

through the critical speed because it takes time for dangerous oscillations to develop.

Analysis to determine the critical speed is complex, and computer programs are available to assist in the calculations. See Internet site 1. The objective is to determine the natural frequency of the shaft while carrying the static weight of elements such as gears, sprockets, and pulleys. The stiffness of bearings is also a factor. One fundamental expression for natural frequency, ω_n , is,

$$\omega_n = \sqrt{k/m}$$

where k is the stiffness of the shaft and m is its mass. It is desirable to have a high critical speed, well above operating speed, so stiffness should be high and mass low. The primary variables over which a designer has control are the material and its modulus of elasticity, E , its density, ρ , the shaft diameter, D , and the shaft length, L . The following functional relationship can help to understand the influence of each of these variables:

$$\omega_n \propto (D/L^2) \sqrt{E/\rho}$$

where the symbol \propto indicates proportionality among the variables. It is desirable to reduce the deflection of the shaft to produce a high critical speed. Other approaches are given here.

1. Making the shaft more rigid can prevent undesirable dynamic behavior.
2. Larger shaft diameters add rigidity.
3. Shorter shaft lengths reduce deflections and raise critical speeds.
4. Placing active elements on the shaft close to support bearings is recommended.
5. Reducing the weight of elements carried by the shaft reduces static deflection and raises critical speed.
6. Selection of a material for the shaft with a high ratio of E/ρ (modulus of elasticity/density) is desirable. While most metals have similar ratios, that for composite materials is typically high. For example, long driveshafts for vehicles that must operate at high speeds are frequently made from hollow tubular composite materials using carbon fibers. See Internet sites 2 and 3.
7. Bearings should have a high stiffness in terms of radial deflection as a function of load.
8. Mountings for bearings and housings should be designed with high rigidity.
9. References 3–5 and 7 provide additional information and analytical methods for estimating critical speeds. References 9–11 discuss machinery vibration.

Internet site 4 includes a section on critical speeds that can be used for calculating approximate values for several different support conditions and loading patterns. Internet sites 5 and 6 describe two software packages

that contain beam analysis programs that can be used to calculate beam deflections.

12-11 FLEXIBLE SHAFTS

At times it is desirable to transmit rotational motion and power between two points that are not aligned with each other. Flexible shafts can be used in such situations to couple a driver, such as a motor, to a driven device along a curved or dynamically moving path. The flexibility allows the driven point to be offset from the driving point in either parallel or angular fashion. Unidirectional shafts are used for power transmission in applications such as automation systems, industrial machinery, agricultural equipment, aircraft actuators, seat adjusters, medical devices, dentistry, speedometers, woodworking, and jeweler's tools. Bidirectional flexible shafts are used in remote control, valve actuation, and safety devices. They can often provide more design flexibility than other design options such as right-angle gear drives or universal joints. The offset between the driver and driven machine can be as much as 180° provided that the bend radius is above a specified minimum. Torque capacity increases with increasing bend radius. Efficiencies are in the range from 90% to 95%.

The construction consists of a flexible cable-like core connected to fittings on each end. The fittings facilitate connection with the driving and driven machines. The casing protects nearby equipment or people from contact with the rotating core. Designs are available for transmitting power in either direction, clockwise or counterclockwise. Some will operate bidirectionally.

See Internet sites 7–9 for additional information about commercially available flexible shafts. Table 12–4 gives a sampling of sizes and ratings from Internet site 7. Many more sizes are available.

TABLE 12-4 Sampling of Operating Torque Capacity for Flexible Shafts

| Data for shafts of medium stiffness operating at 12-in (305-mm) radius | | | |
|--|-------|-----------------|---------|
| Shaft diameter | | Torque capacity | |
| (in) | (mm) | (lb · in) | (N · m) |
| 0.127 | 3.23 | 1.7 | 0.19 |
| 0.183 | 4.65 | 4.3 | 0.49 |
| 0.245 | 6.22 | 20 | 2.26 |
| 0.304 | 7.72 | 33 | 3.73 |
| 0.495 | 12.57 | 86 | 9.72 |
| 0.740 | 18.80 | 265 | 29.95 |
| 0.990 | 25.15 | 386 | 43.62 |

Data adapted from Internet site 7.

REFERENCES

- American Society of Mechanical Engineers. ANSI Standard B106.1M-1985. *Design of Transmission Shafting*. New York: American Society of Mechanical Engineers, 1985.
- American Society of Mechanical Engineers. ANSI Standard B4.1-67(R2009). *Preferred Limits and Fits for Cylindrical Parts*. New York: American Society of Mechanical Engineers, 2009.
- Sadegh, Ali, Theodore Baumeister, and Eugene Avalonne. *Marks' Standard Handbook for Mechanical Engineers*. 11th ed. New York: McGraw-Hill, 2007.
- Paez, Thomas, and Allan Piersol. (Editors). *Harris' Shock and Vibration Handbook*. 6th ed. New York: McGraw-Hill, 2010.
- Oberg, Erik et al. *Machinery's Handbook*. 30th ed. New York: Industrial Press, 2015.
- Pilkey, Walter D., and Deborah F. Pilkey. *Peterson's Stress Concentration Factors*. 3rd ed. New York: John Wiley & Sons, 2008.
- Budynas, R. G., and K. J. Nisbett. *Shigley's Mechanical Engineering Design*. 10th ed. New York: McGraw-Hill, 2015.
- Soderberg, C. R. "Working Stresses." *Journal of Applied Mechanics* 57 (1935): A-106.
- Wowk, Victor. *Machinery Vibration: Alignment*. New York: McGraw-Hill, 2000.
- Wowk, Victor. *Machinery Vibration: Balancing*. New York: McGraw-Hill, 1998.
- Wowk, Victor. *Machinery Vibration: Measurement and Analysis*. New York: McGraw-Hill, 1991.
- American Society of Mechanical Engineers. ANSI Standard B4.2-1978(R2009). *Preferred Metric Limits and Fits*. New York: American Society of Mechanical Engineers, 2009.

INTERNET SITES FOR SHAFT DESIGN

- Hexagon Software.** Computer software called WL1+ for shaft calculations. Can handle up to 100 cylindrical or conical shaft segments and up to 50 individual forces. Computes shearing force and bending moment diagrams, slope, deflection, bending stresses, and shearing stresses. Critical speeds for flexure and torsional vibration are calculated.
- Spinning Composites.** Manufacturer of composite shafts for vehicular and industrial applications. Includes discussion of critical speeds.
- Advanced Composite Products and Technology, Inc.** Manufacturer of composite products for aerospace, military, commercial and industrial markets, including drive-shafts and high-speed rotors.
- RoyMech.** An Internet site for useful information, tables, and formulas related to mechanical engineering; developed by Roy Beardmore. One section deals with critical speeds of shafts.


5. **Orand Systems, Inc.** Developer and distributor of *Beam 2D Stress Analysis* software. Analyzes beams with numerous loads, cross sections, and support conditions. Computes load, shearing force, bending moment, slope, and deflection outputs in graphical and numerical data formats. Can be used for the bending calculations for shafts.
6. **MDSolids.** Educational software for stress analysis that includes several modules including beams, torsion, trusses, and columns.
7. **S. S. White Technologies, Inc.** Manufacturer of flexible shafts. Site includes rating charts for torque capacity versus the minimum radius of the shaft during operation.
8. **Elliott Manufacturing Co.** Manufacturer of flexible shafts.
9. **Otto Suhner AG.** Manufacturer of flexible shafts, spiral bevel gears, and small, high speed air motors and electric motors. Site includes rating charts for power and torque capacity of flexible shafts.

PROBLEMS

Problems 1 through 30 relate to one of Figures P12–1 through P12–17 showing shafts carrying a variety of combinations of gears, belt sheaves, chain sprockets, and a few other items such as a flywheel and a propeller-type fan. There are multiple ways in which the problems may be assigned, as some deal with only torque levels and radial forces in the shaft due to selected power-transmitting elements while others are comprehensive design problems for the shaft that carries several elements. The

following table may help instructors decide how to assign the problems for student solution and may help students comprehend how the sets of problems lead to the more general shaft design. Any combination of problems may be chosen.

| Torques and Forces Acting Radial to Shaft | Comprehensive |
|---|-----------------------------|
| Figure P12–1: P1—Gear B; P14—Sheave D | P22 |
| Figure P12–2: P2—Gear C; P12—Sprocket D; P13—Pulley A | P23 |
| Figure P12–3: P3—Gear B; P15—Sprocket C; P16—Sheaves D, E | P24 |
| Figure P12–4: P4—Gear A; P19—Sprockets C, D | P25 |
| Figure P12–5: P5—Gear D; P20—Sheave A; P21—Sprocket E | P26 |
| Figure P12–6: P6—Gear E; (No separate analysis of Sheave A) | P27 (Includes Sheave A) |
| Figure P12–7: P7—Gear C; P8—Gear A | P28 (Includes Sheaves D, E) |
| Figure P12–9: P9—Gear C; P10—Gear D; P11—Gear F | P29 (Includes Sheave B) |
| Figure P12–17: P17—Sheave C; P18—Pulley D | P30 (Includes Fan A) |

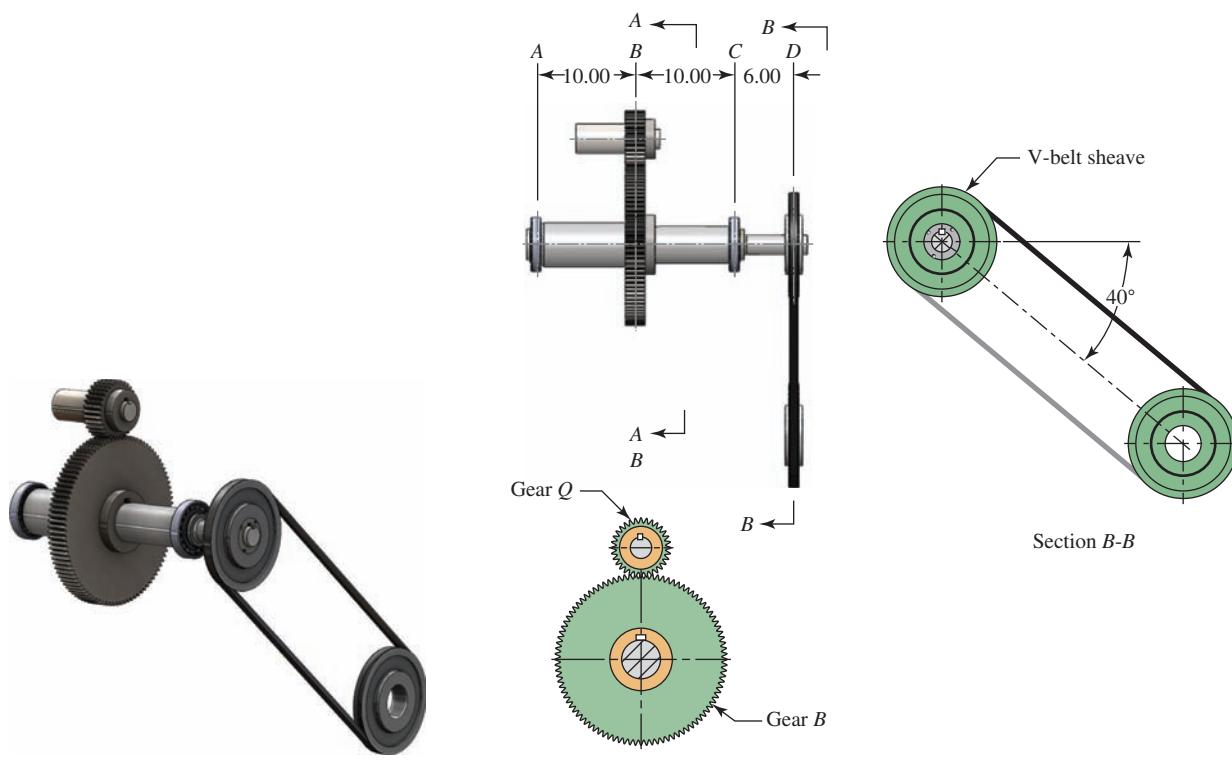

(a) Pictorial view of assembly

(b) Detailed views of assembly and its components

FIGURE P12–1 (Problems 1, 14, and 22) Shaft carrying a gear and a V-belt drive

Torques and Forces Acting Radial to Shaft

- See Figure P12-1. The shaft rotating at 550 rpm carries a spur gear *B* having 96 teeth with a diametral pitch of 6. The teeth are of the 20° , full-depth, involute form. The gear receives 30 hp from a pinion directly above it. Compute the torque delivered to the shaft and the tangential and radial forces exerted on the shaft by the gear.
- See Figure P12-2. The shaft rotating at 200 rpm carries a spur gear *C* having 80 teeth with a diametral pitch of 8. The teeth are of the 20° , full-depth, involute form. The gear delivers 6 hp to a pinion directly below it. Compute the torque delivered by the shaft to gear *C* and the tangential and radial forces exerted on the shaft by the gear.
- See Figure P12-3. The shaft rotating at 480 rpm carries a spur pinion *B* having 24 teeth with a diametral pitch of 8. The teeth are of the 20° , full-depth, involute form. The pinion delivers 5 hp to a gear directly below it. Compute

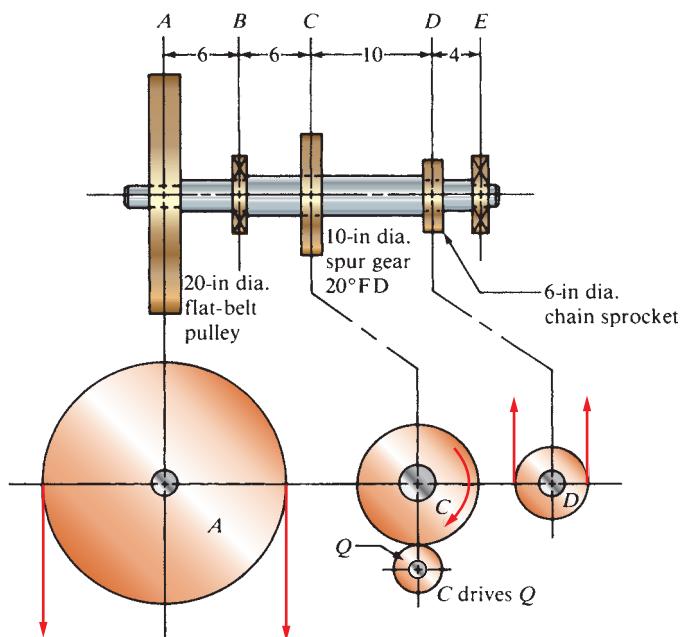


FIGURE P12-2 (Problems 2, 12, 13, and 23)

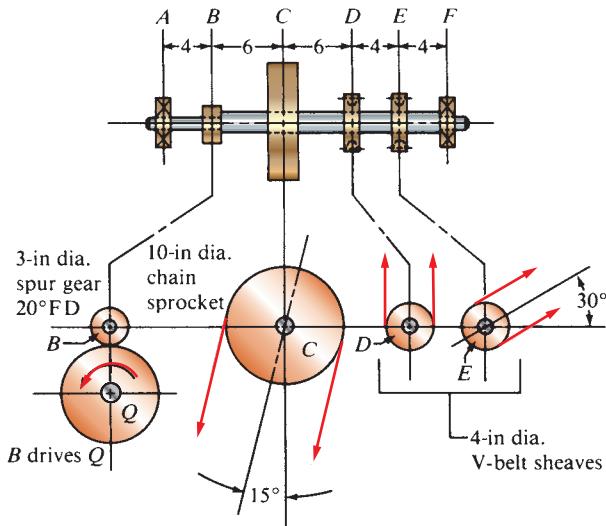


FIGURE P12-3 (Problems 3, 15, 16, and 24)

the torque delivered by the shaft to pinion *B* and the tangential and radial forces exerted on the shaft by the pinion.

- See Figure P12-4. The shaft rotating at 120 rpm carries a spur gear *A* having 80 teeth with a diametral pitch of 5. The teeth are of the 20° , full-depth, involute form. The gear receives 40 hp from a pinion to the right as shown. Compute the torque delivered to the shaft and the tangential and radial forces exerted on the shaft by the gear.
- See Figure P12-5. The shaft rotating at 240 rpm carries a spur gear *D* having 48 teeth with a diametral pitch of 6. The teeth are of the 20° , full-depth, involute form. The gear receives 15 hp from pinion *Q* located as shown. Compute the torque delivered to the shaft and the tangential and radial forces exerted on the shaft by the gear. Resolve the tangential and radial forces into their horizontal and vertical components, and determine the net forces acting on the shaft at *D* in the horizontal and vertical directions.
- See Figure P12-6. The shaft rotating at 310 rpm carries a spur pinion *E* having 36 teeth with a diametral pitch of 6. The teeth are of the 20° , full-depth, involute form. The pinion delivers 20 hp to a gear to the left as shown. Compute the torque delivered by the shaft to pinion *E* and the tangential and radial forces exerted on the shaft by the pinion. Include the weight of the pinion.
- See Figure P12-7. The shaft rotating at 480 rpm carries a spur gear *C* having 50 teeth with a diametral pitch of 5. The teeth are of the 20° , full-depth, involute form. The gear receives 50 hp from a pinion directly below it. Compute the torque delivered to the shaft and the tangential and radial forces exerted on the shaft by the gear.
- See Figure P12-7. The shaft rotating at 480 rpm carries a spur pinion *A* having 30 teeth with a diametral pitch of 6. The teeth are of the 20° , full-depth, involute form. The pinion delivers 30 hp to a gear to the left as shown. Compute the torque delivered by the shaft to pinion *A* and the tangential and radial forces exerted on the shaft by the pinion.
- See Figure P12-9. The shaft rotating at 220 rpm carries a spur pinion *C* having 60 teeth with a diametral pitch of 10. The teeth are of the 20° , full-depth, involute form. The pinion delivers 5 hp to a gear directly above it. Compute the torque delivered by the shaft to pinion *C* and the tangential and radial forces exerted on the shaft by the pinion.
- See Figure P12-9. The shaft rotating at 220 rpm carries a spur gear *D* having 96 teeth with a diametral pitch of 8. The teeth are of the 20° , full-depth, involute form. The gear receives 12.5 hp from a pinion directly below it. Compute the torque delivered to the shaft and the tangential and radial forces exerted on the shaft by the gear.
- See Figure P12-9. The shaft rotating at 220 rpm carries a spur pinion *F* having 60 teeth with a diametral pitch of 10. The teeth are of the 20° , full-depth, involute form. The pinion delivers 5 hp to a gear located as shown. Compute the torque delivered by the shaft to pinion *F* and the tangential and radial forces exerted on the shaft by the pinion. Resolve the forces into their horizontal and vertical components, and determine the net forces acting on the shaft at *F* in the horizontal and vertical directions.
- See Figure P12-2. The shaft rotating at 200 rpm carries a 6-in-diameter chain sprocket *D* that delivers 4 hp to a mating sprocket above. Compute the torque delivered by the shaft to sprocket *D* and the force exerted on the shaft by the sprocket.

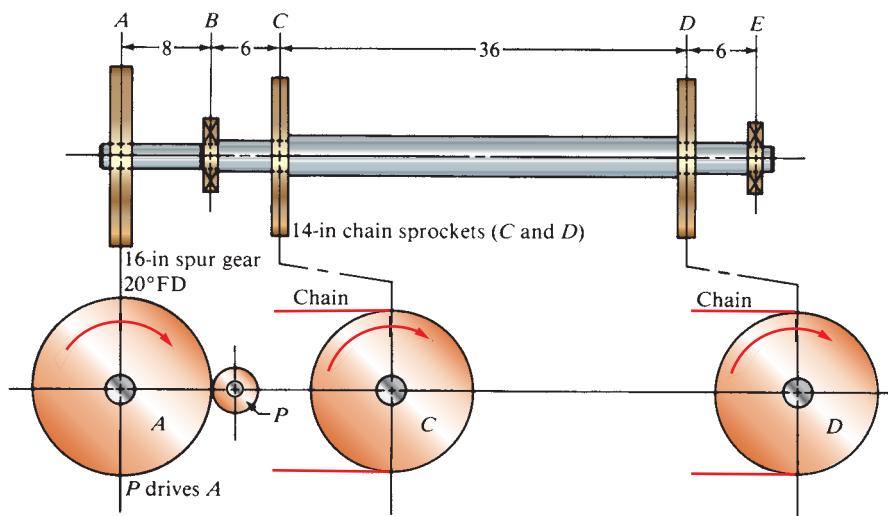


FIGURE P12-4 (Problems 4, 19, and 25)

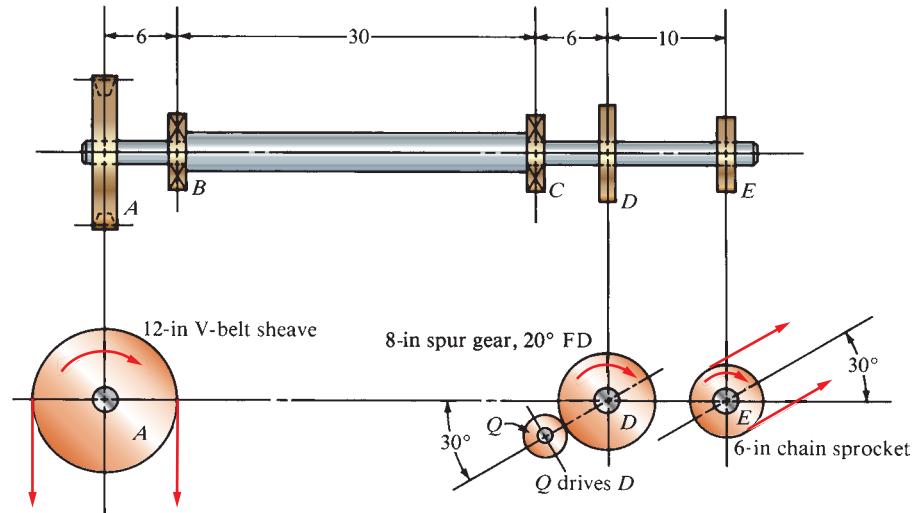


FIGURE P12-5 (Problems 5, 20, 21, and 26)

13. See Figure P12-2. The shaft rotating at 200 rpm carries a 20-in-diameter flat-belt pulley at A that receives 10 hp from below. Compute the torque delivered by the pulley to the shaft and the force exerted on the shaft by the pulley.
14. See Figure P12-1. The shaft rotating at 550 rpm carries a 10-in-diameter V-belt sheave at D that delivers 30 hp to a mating sheave as shown. Compute the torque delivered by the shaft to the sheave and the total force exerted on the shaft by the sheave. Resolve the force into its horizontal and vertical components, and show the net forces acting on the shaft at D in the horizontal and vertical directions.
15. See Figure P12-3. The shaft rotating at 480 rpm carries a 10-in-diameter chain sprocket at C that receives 11 hp from a mating sprocket below and to the left as shown. Compute the torque delivered to the shaft by the sprocket and the total force exerted on the shaft by the sprocket. Resolve the force into its horizontal and vertical components, and show the net forces acting

on the shaft at C in the horizontal and vertical directions.

16. See Figure P12-3. The shaft rotating at 480 rpm carries two 4-in-diameter sheaves at D and E that each deliver 3 hp to mating sheaves as shown. Compute the torque delivered by the shaft to each sheave and the total force exerted on the shaft by each sheave. Resolve the force at E into its horizontal and vertical components, and show the net forces acting on the shaft at E in the horizontal and vertical directions.
17. See Figure P12-17. The shaft rotating at 475 rpm carries a 10-in V-belt sheave at C that receives 15.5 hp from a mating sheave to the left as shown. Compute the torque delivered to the shaft at C by the sheave and the total force exerted on the shaft at C by the sheave.
18. See Figure P12-17. The shaft rotating at 475 rpm carries a 6-in-diameter flat-belt pulley at D that delivers 3.5 hp to a mating pulley above and to the right as shown. Compute the torque delivered to the shaft by the pulley and the total force exerted on the shaft by the pulley. Resolve

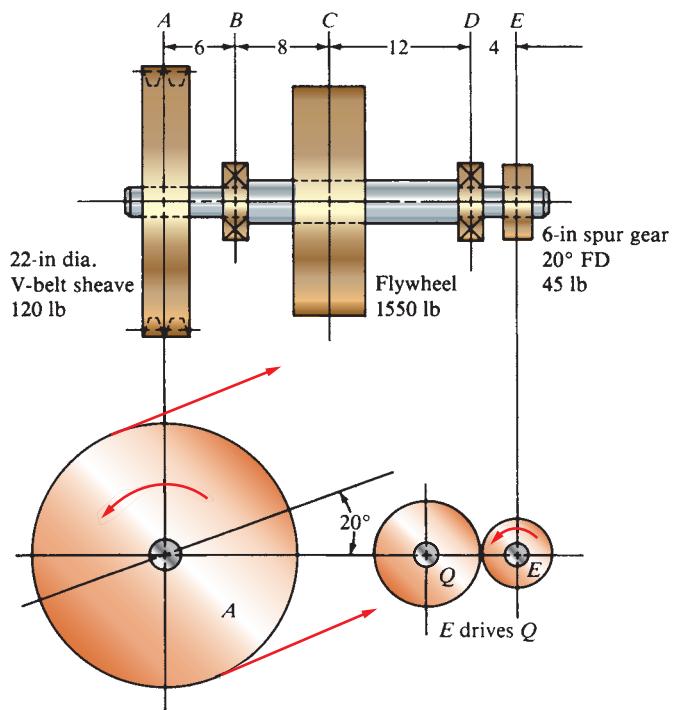


FIGURE P12-6 (Problems 6 and 27)

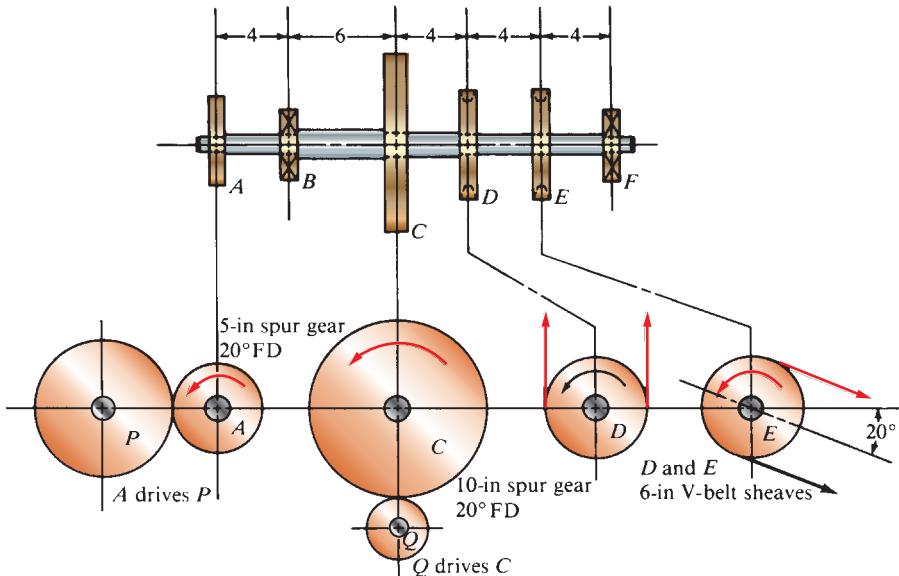


FIGURE P12-7 (Problems 7, 8, and 28)

the force into its horizontal and vertical components, and show the net forces acting on the shaft at *D* in the horizontal and vertical directions.

19. See Figure P12-4. The shaft rotating at 120 rpm carries two identical 14-in-diameter chain sprockets at *C* and *D*. Each sprocket delivers 20 hp to mating sprockets to the left as shown. Compute the torque delivered by the shaft to each sprocket and the total force exerted on the shaft by each sprocket.
20. See Figure P12-5. The shaft rotating at 240 rpm carries a 12-in-diameter V-belt sheave at *A* that delivers 10 hp to a

mating sheave directly below. Compute the torque delivered by the shaft to the sheave and the total force exerted on the shaft at *A* by the sheave.

21. See Figure P12-5. The shaft rotating at 240 rpm carries a 6-in-diameter chain sprocket at *E* that delivers 5.0 hp to a mating sprocket to the right and above as shown. Compute the torque delivered by the shaft to the sprocket and the total force exerted on the shaft by the sprocket. Resolve the force into its horizontal and vertical components, and show the net forces acting on the shaft at *E* in the horizontal and vertical directions.

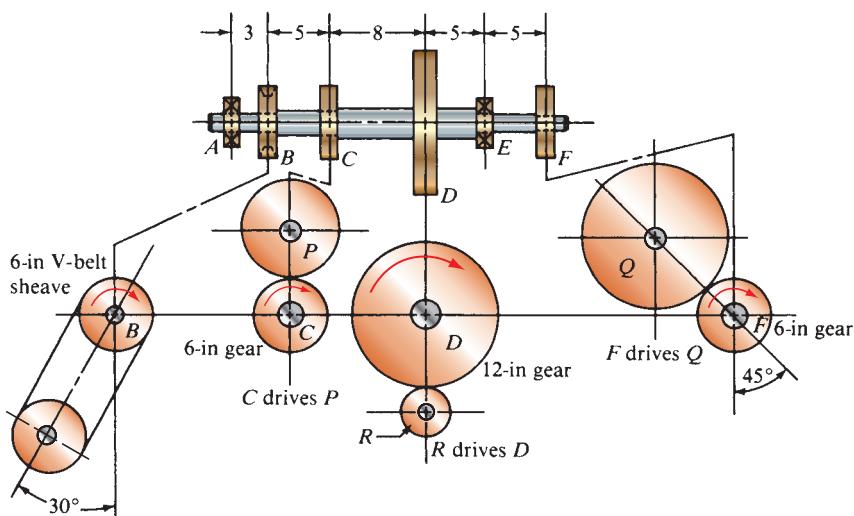


FIGURE P12-9 (Problems 9–11 and 29)

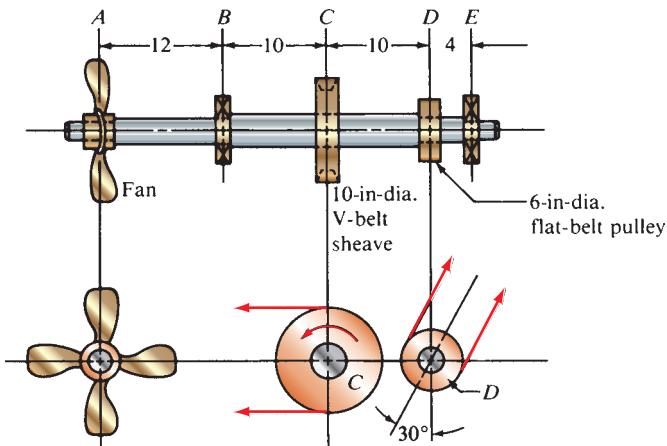


FIGURE P12-17 (Problems 17, 18, and 30)

Comprehensive Shaft Design Problems

For each of the following Problems 22 through 30, it will be necessary to do the following:

- Determine the magnitude of the torque in the shaft at all points.
- Compute the forces acting on the shaft at all power-transmitting elements.
- Compute the reactions at the bearings.
- Draw the complete load, shear, and bending moment diagrams.

Neglect the weight of the elements on the shafts, unless otherwise noted.

The objective of any problem, at the discretion of the instructor, could be any of the following:

- Design the complete shaft, including the specification of the overall geometry and the consideration of stress concentration factors. The analysis would show the minimum acceptable diameter at each point on the shaft to be safe from the standpoint of strength.

- Given a suggested geometry of one part of the shaft, specify the minimum acceptable diameter for the shaft at that point.
- Specify the required geometry at any selected element on the shaft: a gear, sheave, bearing, or other.
- Make a working drawing of the design for the shaft, following the appropriate stress analysis, and specify the final dimensions.
- Suggest how the given shaft can be redesigned by moving or reorienting the elements on the shaft to improve the design to produce lower stresses, smaller shaft size, more convenient assembly, and so on.
- Incorporate the given shaft into a more comprehensive machine, and complete the design of the entire machine. In most problems, the type of machine for which the shaft is being designed is suggested.

22. The shaft in Figure P12-1 is part of a drive for an automated transfer system in a metal stamping plant. Gear Q delivers 30 hp to gear B. Sheave D delivers the power to its mating sheave as shown. The shaft carrying B and D rotates at 550 rpm. Use SAE 1040 cold-drawn steel.

23. The shaft in Figure P12–2 rotates at 200 rpm. Pulley A receives 10 hp from below. Gear C delivers 6 hp to the mating gear below it. Chain sprocket D delivers 4 hp to a shaft above. Use SAE 1117 cold-drawn steel.
24. The shaft in Figure P12–3 is part of a special machine designed to reclaim scrap aluminum cans. The gear at B delivers 5 hp to a chopper that cuts the cans into small pieces. The V-belt sheave at D delivers 3 hp to a blower that draws air through the chopper. V-belt sheave E delivers 3 hp to a conveyor that raises the shredded aluminum to an elevated hopper. The shaft rotates at 480 rpm. All power comes into the shaft through the chain sprocket at C. Use SAE 1137 OQT 1300 steel for the shaft. The elements at B, C, D, and E are held in position with retaining rings and keys in profile keyseats.
25. The shaft in Figure P12–4 is the drive shaft for a large, bulk material conveyor. The gear receives 40 hp and rotates at 120 rpm. Each chain sprocket delivers 20 hp to one side of the conveyor. Use SAE 1020 cold-drawn steel.
26. The shaft in Figure P12–5 is part of a conveyor drive system that feeds crushed rock into a railroad car. The shaft rotates at 240 rpm and is subjected to moderate shock during operation. All power is input to the gear at D. The V-belt sheave at A delivers 10.0 hp vertically downward. Chain sprocket E delivers 5.0 hp. Note the position of the gear Q, which drives gear D.
27. Figure P12–6 illustrates an intermediate shaft of a punch press that rotates at 310 rpm while transmitting 20 hp from the V-belt sheave to the gear. The flywheel is not absorbing or giving up any energy at this time. Consider the weight of all elements in the analysis.
28. The shaft in Figure P12–7 is part of a material-handling system aboard a ship. All power comes into the shaft through gear C, which rotates at 480 rpm. Gear A delivers 30 hp to a hoist. V-belt sheaves D and E each deliver 10 hp to hydraulic pumps. Use SAE 3140 OQT 1000 steel.
29. The shaft in Figure P12–9 is part of an automatic machining system. All power is input through gear D. Gears C and F drive two separate tool feed devices requiring 5.0 hp each. The V-belt sheave at B requires 2.5 hp to drive a coolant pump. The shaft rotates at 220 rpm. All gears are spur gears with 20° , full-depth teeth. Use SAE 1020 cold-drawn steel for the shaft.
30. The shaft in Figure P12–17 is part of a grain-drying system. At A is a propeller-type fan that requires 12 hp when rotating at 475 rpm. The fan weighs 34 lb, and its weight should be included in the analysis. The flat-belt pulley at D delivers 3.5 hp to a screw conveyor handling the grain. All power comes into the shaft through the V-belt sheave at C. Use SAE 1144 cold-drawn steel.

Shafts with both Radial and Axial Loads

Problems P31 through P34 deal with shafts carrying helical gears and wormgears that produce forces directed axially in addition to radial forces.

Torques and Forces Acting Radial and Axial to Shaft

Comprehensive

Figure P12–31: P31—Helical Gear B P32

Figure P12–33: P33—Wormgear C P34 (Includes Sheave A)

Forces and Torque on Shafts—Helical Gears

31. See Figure P12–31. The shaft is rotating at 650 rpm, and it receives 7.5 hp through a flexible coupling. The power is delivered to an adjacent shaft through a single helical gear B having a normal pressure angle of 20° and a helix angle of 15° . The pitch diameter for the gear is 4.141 in. Review the discussion of forces on helical gears in Chapter 10, and use Equations (12–1), (12–2), (12–4), and (12–5) in this chapter to verify the values for the forces given in the figure. Draw the complete free-body diagrams for the shaft in both the vertical plane and the horizontal plane. Then draw the complete shearing force and bending moment diagrams for the shaft in both planes.
32. Figure P12–31 shows a helical gear mounted on a shaft that rotates at 650 rpm while transmitting 7.5 hp. The gear is also analyzed in Example Problem 10–1, and the tangential, radial, and axial forces on it are shown in the figure. The pitch diameter of the gear is 4.141 in. The power is delivered from the shaft through a flexible coupling at its right end. A spacer is used to position the gear relative to bearing C. The thrust load is taken at bearing A.

Forces and Torque on Shafts—Wormgears

33. See Figure P12–33. The shaft is rotating at 1750 rpm, and it receives 7.5 hp through a 5.00-in V-belt drive from a mating belt sheave directly below. The power is delivered by a worm with a pitch diameter of 2.00 in. The forces on the worm were used in Design Example 12–3 and are shown in the figure. Review the description of these forces in Chapter 10. Draw the complete free-body diagrams for the shaft in both the vertical plane and the horizontal plane. Then draw the complete shearing force and bending moment diagrams for the shaft in both planes.
34. The shaft shown in Figure P12–33 is the input shaft of a wormgear drive. The V-belt sheave receives 7.5 hp from directly downward. The worm rotates at 1750 rpm and has a pitch diameter of 2.00 in. This is the driving worm

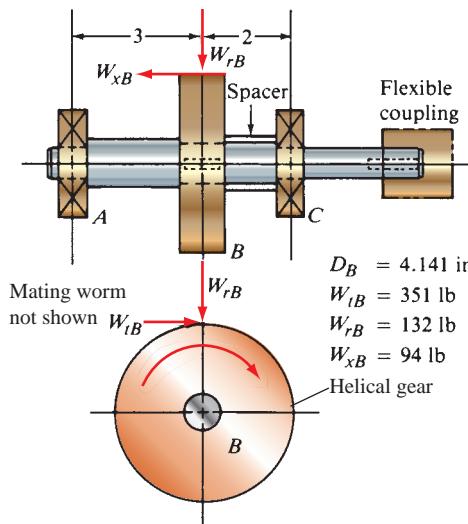


FIGURE P12–31 (Problems 31 and 32)

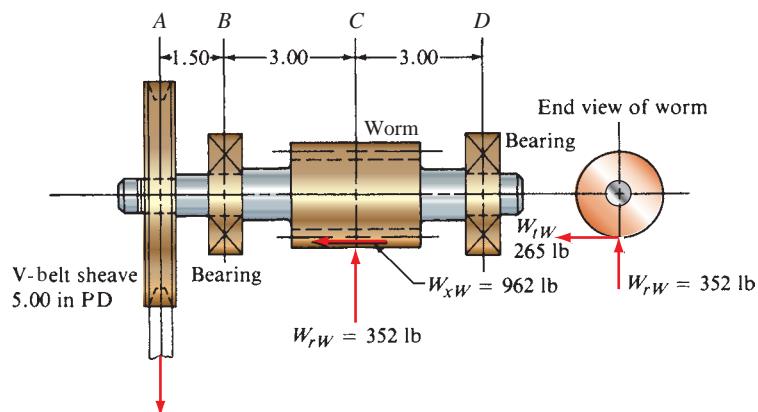


FIGURE P12-33 (Problems 33 and 34)

for the wormgear described in Design Example 12–3. The tangential, radial, and axial forces are shown in the figure. The worm is to be machined integrally with the shaft, and it has a root diameter of 1.614 in. Assume that the geometry of the root area presents a stress concentration factor of 1.5 for bending. Analyze the stress in the area of the worm thread root, and specify a suitable material for the shaft.

Other Comprehensive Design Problems

Problems 35 through 41 contain a variety of loading situations for which the general solution procedure must be adapted. Some of the problems involve more than one shaft, considering shafts for mating gears and multiple reductions.

Figure P12-35: P35—Double-reduction helical drive

Figure P10-8 in Chapter 10: P36—Bevel gear drive

Figure P12-37: P37—Bevel gear drive with two chain sprockets

Figure P12-38: P38—Double-reduction spur gear drive; design three shafts

Figure P12-39: P39—Drive system consisting of an electric motor, a V-belt drive, a double-reduction spur gear-type reducer, and a chain drive

Figure P12-40: P40—Shaft with three spur gears

Figure P12-41: P41—Shaft for windshield wiper mechanism with two levers

35. The double-reduction, helical gear reducer shown in Figure P12-35 transmits 5.0 hp. Shaft 1 is the input, rotating at 1800 rpm and receiving power directly from an electric motor through a flexible coupling. Shaft 2 rotates at 900 rpm. Shaft 3 is the output, rotating at 300 rpm. A chain sprocket is mounted on the output shaft as shown and delivers the power upward. The data for the gears are given in Table 12-5. Each gear has a $14\frac{1}{2}^\circ$ normal pressure angle and a 45° helix angle. The combinations of left- and right-hand helixes are arranged so that the axial forces oppose each other on shaft 2 as shown. Use SAE 4140 OQT 1200 for the shafts.

36. Complete the design of the shafts carrying the bevel gear and pinion shown in Figure 10-8. The forces on the gears, the bearing reactions, and the bending moment diagrams are developed in Example Problems 10-4 and 10-5 and are shown in Figures 10-8 through 10-12. Assume that

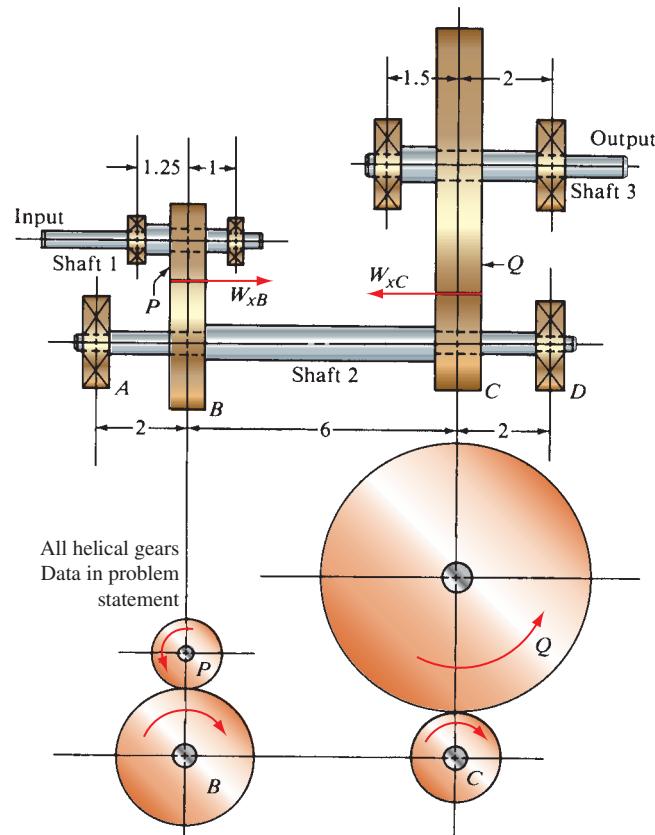


FIGURE P12-35 (Problem 35)

TABLE 12-5

| Gear | Diametral pitch | Pitch diameter | Number of teeth | Face width |
|------|-----------------|----------------|-----------------|------------|
| P | 8 | 1.500 in | 12 | 0.75 in |
| B | 8 | 3.000 in | 24 | 0.75 in |
| C | 6 | 2.000 in | 12 | 1.00 in |
| Q | 6 | 6.000 in | 36 | 1.00 in |

the 2.50 hp enters the pinion shaft from the right through a flexible coupling. The power is delivered by way of the lower extension of the gear shaft through another flexible coupling. Use SAE 1040 OQT 1200 for the shafts.

37. The vertical shaft shown in Figure P12-37 is driven at a speed of 600 rpm with 4.0 hp entering through the bevel gear. Each of the two chain sprockets delivers 2.0 hp to the side to drive mixer blades in a chemical reactor vessel. The bevel gear has a diametral pitch of 5, a pitch diameter of 9.000 in, a face width of 1.31 in, and a pressure angle of 20° . Use SAE 4140 OQT 1000 steel for the shaft. See Chapter 10 for the methods for computing the forces on the bevel gear.
38. Figure P12-38 shows a sketch for a double-reduction spur gear train. Shaft 1 rotates at 1725 rpm, driven directly by an electric motor that transmits 15.0 hp to the reducer.

The gears in the train all have 20° , full-depth teeth and the following numbers of teeth and pitch diameters:

| Gear A | Gear B |
|--------------|--------------|
| 18 teeth | 54 teeth |
| 1.80-in dia. | 5.40-in dia. |
| Gear C | Gear D |
| 24 teeth | 48 teeth |
| 4.00-in dia. | 8.00-in dia. |

Note that the speed reduction for each gear pair is proportional to the ratio of the number of teeth. Therefore, shaft 2 rotates at 575 rpm and shaft 3 rotates at 287.5 rpm.

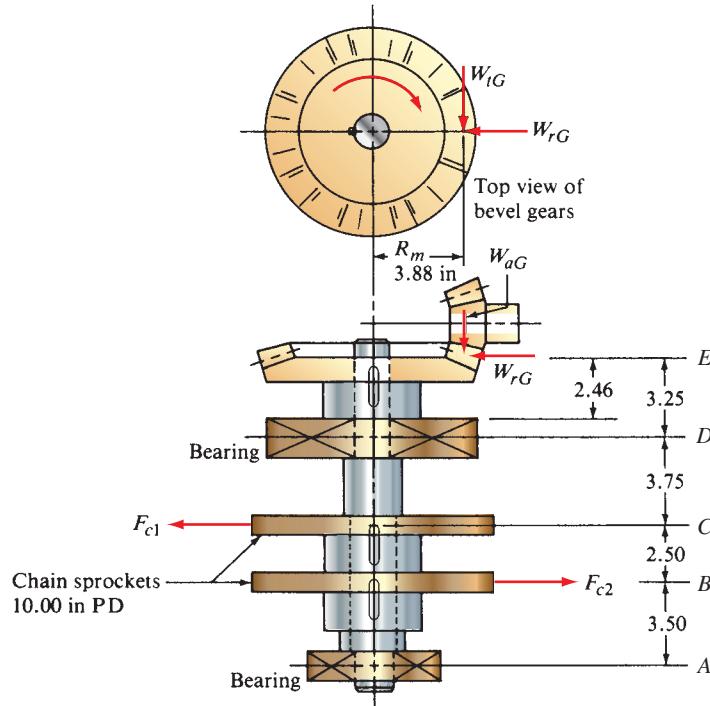


FIGURE P12-37 Bevel gears shown in section for Problem 37. See Chapter 10

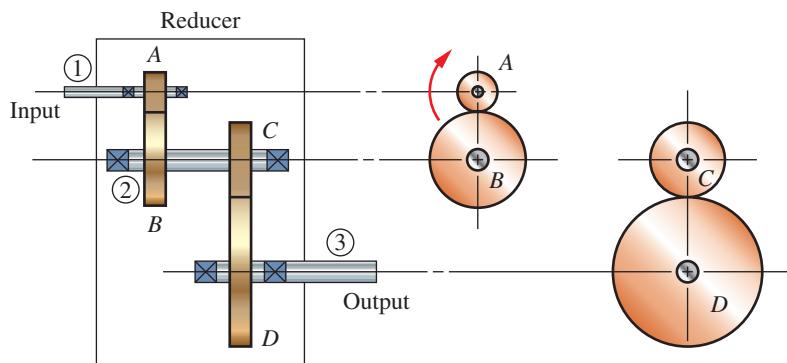


FIGURE P12-38 Gear reducer for Problems 38 and 39

Assume that all shafts carry 15.0 hp. The distance from the middle of each bearing to the middle of the face of the nearest gear is 3.00 in. Shaft 2 has a length of 5.00 in between the two gears, making the total distance between the middle of the two bearings equal to 11.00 in. The extensions of the input and the output shafts carry torque, but no bending loads are exerted on them. Complete the design of all three shafts. Provide for profile keyseats for each gear and sled-runner keyseats at the outboard ends of the input and output shafts. Provide for the location of each gear and bearing on the shaft.

39. Figure P12-39 shows a speed reducer with a V-belt drive delivering power to the input shaft and a chain drive

taking power from the output shaft and delivering it to a conveyor. The drive motor supplies 12.0 hp and rotates 1150 rpm. The speed reductions of the V-belt drive and the chain drive are proportional to the ratio of the diameters of the driving and driven sheaves or sprockets. The arrangement of the gears in the reducer is the same as that described in Figure P12-38 and Problem 38. Determine the forces applied to the motor shaft, to each of the three shafts of the reducer, and to the conveyor driveshaft. Then complete the design of the three shafts of the reducer, assuming that all shafts transmit 12.0 hp.

40. Figure P12-40 shows a drive for a system to crush coal and deliver it by conveyor to a railroad car. Gear A delivers

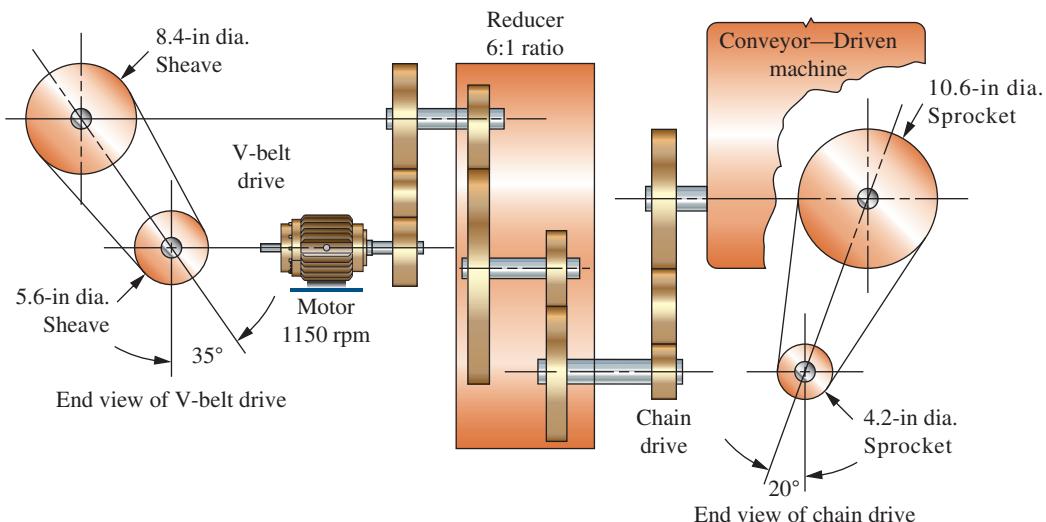


FIGURE P12-39 Drive system for Problem 39

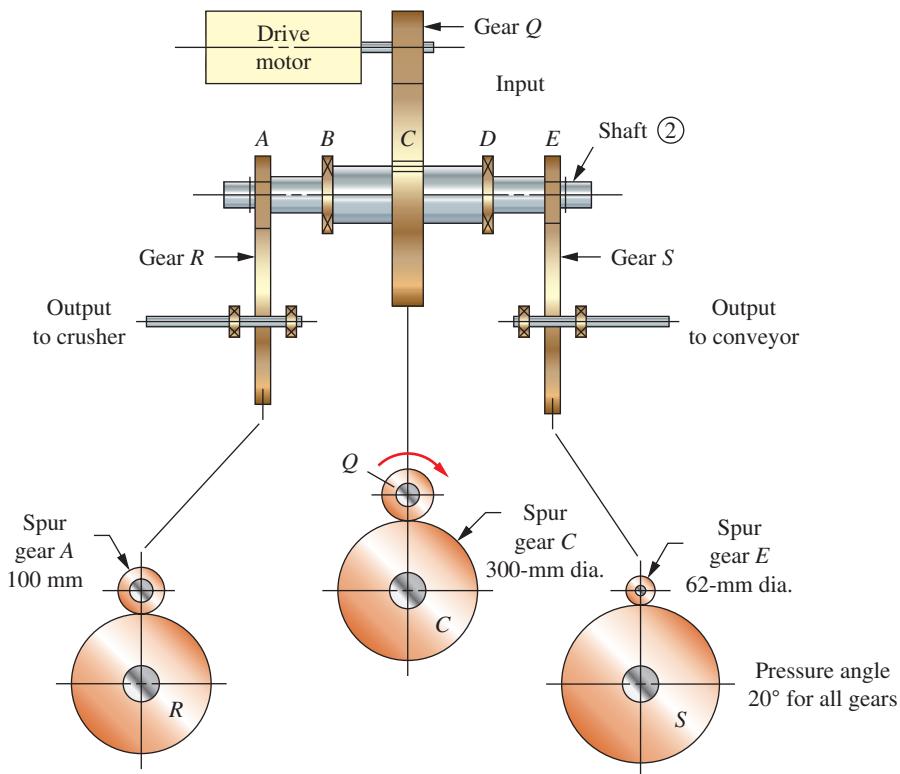


FIGURE P12-40 Drive system for Problem 40

15 kW to the crusher and gear E delivers 7.5 kW to the conveyor. All power enters the shaft through gear C . The shaft carrying gears A , C , and E rotates at 480 rpm. Design that shaft. The distance from the middle of each bearing to the middle of the face of the nearest gear is 100 mm.

41. A shaft is to be designed for a linkage of a windshield wiper mechanism for a truck (see Figure P12–41). A 20-N

force is applied to lever 1 by an adjacent link. The reaction force, F_2 , on lever 2 is transmitted to another link. The distance, d , between elements is 20.0 mm. Bearings A and C are straight, cylindrical, bronze bushings, 10.0 mm long. Design the shaft and levers 1 and 2.

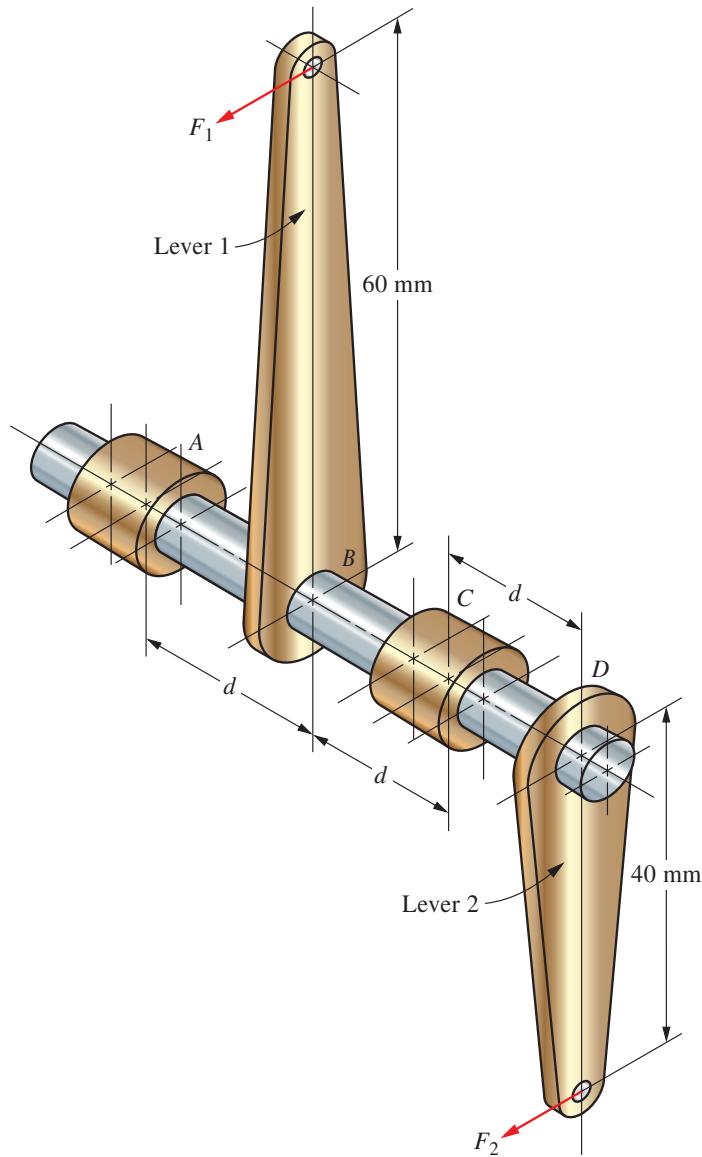


FIGURE P12–41 Shaft and levers for windshield wiper system for Problem 41

TOLERANCES AND FITS

The Big Picture

You Are the Designer

- 13–1 Objectives of This Chapter
- 13–2 Factors Affecting Tolerances and Fits
- 13–3 Tolerances, Production Processes, and Cost
- 13–4 Preferred Basic Sizes
- 13–5 Clearance Fits
- 13–6 Interference Fits
- 13–7 Transition Fits
- 13–8 Stresses for Force Fits
- 13–9 General Tolerancing Methods
- 13–10 Robust Product Design

THE BIG PICTURE

Tolerances and Fits

Discussion Map

- A *tolerance* is the permissible variation on key dimensions of mechanical parts. You, as a designer, must specify the tolerance for each dimension, considering how it will perform and how it will be manufactured.
- Two or more parts may be assembled together either with a *clearance fit*, allowing free relative motion, or with an *interference fit*, where the two parts must be pressed together and therefore will not move during operation of the device.

This chapter will help you acquire the competency to specify suitable fits for mating parts and the dimensional tolerances that will produce the desired fit.

The objective of most of the analysis procedures discussed in this book is to determine the minimum acceptable geometric size at which a component is safe and performs properly under specified conditions. As a designer, you must also then specify the final dimensions for the components, including the tolerances on those dimensions.

The term *tolerance* refers to the permissible deviation of a dimension from the specified basic size. The proper performance of a machine can depend on the tolerances specified for its parts, particularly those that must fit together for location or for suitable relative motion.

The term *fit* usually refers to the *clearances* that are permissible between mating parts in a mechanical device that must assemble easily and that must often move relative to each other during normal operation of the device. Such fits are usually called *running* or *sliding fits*. *Fit* can also refer to the amount of *interference*

Discover

Identify examples of products for which precise dimensional tolerances would be appropriate and some for which looser tolerances are permitted.

Look for examples of mechanical parts that have clearance fits and some that have interference fits.

Describe the reasons why the designer may have made the design in this way.

that exists when the inside part should be larger than the outside part. Interference fits are used to ensure that mating parts do not move relative to each other.

Look for examples of parts for mechanical devices that have clearance fits. Any machine having shafts that rotate in plain surface bearings should have such parts. This type of bearing is called a *journal bearing*, and there must be a small but reliable clearance between the shaft and the bearing to permit smooth rotation of the shaft. But the clearance cannot be too large, or the operation of the machine will appear to be too crude and rough.

Consider also any assembly having hinges that allow one part to rotate relative to the other, such as an access door or panel or the cover of a container. The hinge parts will have a clearance fit. Many types of measuring equipment, such as calipers, dial indicators, and electronic probes, that have moving parts

must be designed carefully to maintain the expected precision of the measurements while allowing reliable motion. On the other end of the spectrum is the rather loose fit that is typical of toys and some other types of recreation equipment. The fit of the wheel of a child's wagon onto its axle is typically quite large to allow free rotation and to permit easy assembly. We will show in this chapter that the wide range of fits that are encountered in practice are designed by specifying a *class of fit* and then determining the allowable range of key dimensions of mating parts.

Look also for examples where two parts are assembled so that they cannot move relative to one another. They are held tightly together because the inside part is larger than the outside part. Perhaps some parts of your car are like that.

This chapter will help you design parts that must have clearance or interference fits. When an interference fit occurs, it is often desirable to predict the level of stress to which the mating parts are subjected. That topic will also be covered in this chapter.

YOU ARE THE DESIGNER

Assume that you are responsible for the design of the gear-type speed reducer discussed in Chapter 1 and sketched in Figure 1–12. The sketch is repeated here as Figure 13–1. The input and output shafts each carry one gear while being supported on two bearings mounted in the housing. The gears are keyed to the shafts to permit the transmission of torque from the shaft to the gear, or vice versa. The material in Chapter 12 will help you to design the shafts themselves. Chapter 14 discusses bearing selection and application. The results of these design decisions include the calculation of the minimum acceptable diameter for the shaft at any section and the specification of suitable bearings to carry the loads applied with a reasonable life. The bearing manufacturer will specify the tolerances on the various dimensions of the bearing. Your job is to specify the final dimensions for the shaft at all points, including the tolerances on those dimensions.

Consider the part of the input shaft where the first gear in the train is mounted. What is a convenient nominal size to specify for the shaft diameter at the location of the gear? Do you want to be able to slide the gear easily over the left end of the shaft and up against the shoulder that locates it? If so, how much clearance should be allowed between the shaft and the bore of the gear to ensure ease of assembly while still providing accurate location of the gear and smooth operation? When the shaft is machined, what range of dimensions will you allow the manufacturing staff to produce? What surface finish should be specified for the shaft, and what manufacturing process is required to produce that finish? What is the relative cost of the manufacturing operation? Similar questions must be answered for the bore of the gear.

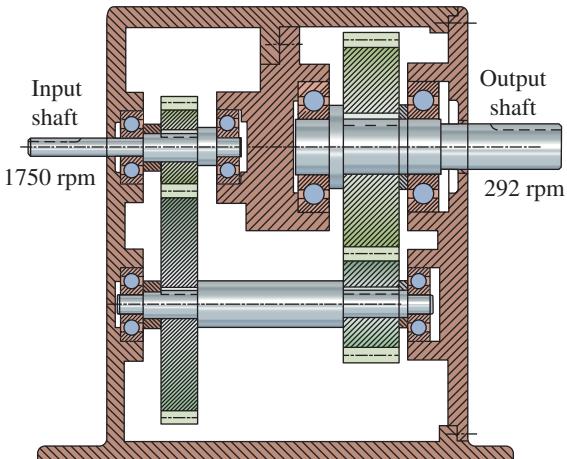


FIGURE 13–1 Conceptual design for a speed reducer

Rolling contact bearings, such as the familiar ball bearing, are designed to be installed on the shaft with an *interference fit*. That is, the inside diameter of the bearing is smaller than the outside diameter of the shaft where the bearing is to be seated. A significant force is required to press the bearing onto the shaft. What dimensions do you specify for the shaft at the bearing seat? How much interference should be specified? How much stress is produced in the shaft because of the interference fit? As the designer, you must answer these questions.

13–1 OBJECTIVES OF THIS CHAPTER

After completing this chapter, you will be able to:

1. Define the terms *tolerance*, *allowance*, *unilateral tolerance*, and *bilateral tolerance*.
2. Describe the relationships among tolerances, production processes, and cost.
3. Specify basic sizes for dimensions according to a set of preferred sizes.
4. Use the ANSI Standard B4.1, *Preferred Limits and Fits for Cylindrical Parts*, and ANSI B4.2 *Preferred Metric Limits and Fits* to specify tolerances, fits, and clearances.
5. Specify transitional, interference, and force fits.
6. Compute the pressure created between parts subjected to interference fits and the resulting stresses in the mating members.
7. Use a spreadsheet to assist in the calculation of stresses for interference fits.
8. Specify appropriate geometric dimensions and tolerancing controls for mating parts.

13–2 FACTORS AFFECTING TOLERANCES AND FITS

Consider the plain surface bearings designed in Chapter 16. A critical part of the design is the specification of the diametral clearance between the journal and the bearing, as illustrated in Figure 16–1. The typical value is just a few

thousandths of an inch. But some variation must be allowed on both the journal outside diameter and the bearing inside diameter for reasons of economy of manufacture. Thus, there will be a variation of the actual clearance in production devices, depending on where the individual mating components fall within their own tolerance bands. Such variations must be accounted for in the analysis of the bearing performance. Too small a clearance could cause seizing. Conversely, too large a clearance would reduce the precision of the machine and adversely affect the lubrication.

The mounting of power-transmission elements onto shafts is another situation in which tolerances and fits must be considered. A chain sprocket for general-purpose mechanical drives is usually produced with a bore that will easily slide into position on the shaft during assembly. But once in place, it will transmit power smoothly and quietly only if it is not excessively loose. A high-speed turbine rotor must be installed on its shaft with an interference fit, eliminating any looseness that would cause vibrations at the high rotational speeds.

When relative motion between two parts is required, a clearance fit is necessary. But here, too, there are differences. Some measuring instruments have parts that must move with no perceptible looseness (sometimes called *play*) between mating parts that would adversely affect the accuracy of measurement. An idler sheave in a belt drive system must rotate on its shaft reliably, without the tendency to seize, but with only a small amount of play. The requirement for the mounting of a wheel of a child's wagon on its axle is much different. A loose clearance fit is satisfactory for the expected use of the wheel, and it permits wide tolerances on the wheel bore and on the axle diameter for economy.

13-3 TOLERANCES, PRODUCTION PROCESSES, AND COST

A *unilateral tolerance* deviates in only one direction from the basic size. A *bilateral tolerance* deviates both above and below the basic size. The *total tolerance* is the difference between the maximum and minimum permissible dimensions.

The term *allowance* refers to an intentional difference between the maximum material limits of mating parts. For example, a positive allowance for a hole/shaft pair would define the minimum *clearance* between the mating parts from the largest shaft mating with the smallest hole. A negative allowance would result in the shaft being larger than the hole (*interference*).

The term *fit* refers to the relative looseness (clearance fit) or tightness (interference fit) of mating parts, especially as it affects the motion of the parts or the force between them after assembly. Specifying the degree of clearance or interference is one of the tasks of the designer.

It is costly to produce components with very small tolerances on dimensions. It is the designer's responsibility to set the tolerances at the highest possible level that results in satisfactory operation of the machine. Certainly judgment and experience must be exercised in

such a process. In quantity production situations, it may be cost-effective to test prototypes with a range of tolerances to observe the limits of acceptable performance.

In general, the production of parts with small tolerances on their dimensions requires multiple processing steps. A shaft may first have to be turned on a lathe and then ground to produce the final dimensions and surface finish. In extreme cases, lapping may be required. Each subsequent step in the manufacture adds cost. Even if different operations are not required, the holding of small tolerances on a single machine, such as a lathe, may require several passes, ending with a fine-finish cut. Cutting tool changes must be more frequent, also, as wear of the tool takes the part out of tolerance.

The production of part features with small tolerances usually involves finer surface finishes as well. Figure 13-2 shows the general relationship between the surface finish and the relative cost of producing a part. The typical total tolerance produced by the processes described is included in the figure. The increase in cost is dramatic for the small tolerances and fine finishes.

Figure 13-3 presents the relationship between the surface finish and the machining operations available to produce it.

The basic reference for tolerances and fits in the United States is the ANSI Standard B4.1-1967, *Preferred Limits and Fits for Cylindrical Parts*. Metric dimensions should conform to ANSI B4.2-1978, *Preferred Metric Limits and Fits*. The most recent version should be consulted. (See References 1 and 2.)

The International Organization for Standardization (ISO) gives metric data for limits and fits in ISO 286-1:1988, which is used in Europe and many other countries.

The term *tolerance grade* refers to a set of tolerances that can be produced with an approximately equal production capability. The actual total tolerance allowed within each grade depends on the nominal size of the dimension. Smaller tolerances can be achieved for smaller dimensions, and vice versa. Standards ISO R286 and ANSI B4.1 include complete data for tolerance grades from 01 through 16, as shown in Table 13-1. Tolerances are smaller for the smaller grade number.

A sampling of tolerance data for machined parts for a few grades and ranges of size is given in Tables 13-2 and 13-2M. Figure 13-2 shows the capability of selected manufacturing processes to produce work within the given tolerance grades. Reference 8 includes numerous tables of data for tolerance grades, limits, and fits.

Some projects may benefit from the ability to compute the amount of tolerance for a given basic dimension to achieve a particular IT grade. The following equation applies to metric dimensions.

▫ Tolerance for IT Grade

$$T = [0.045 \times (D)^{1/3} + 0.001 \times (D)] [10^{0.2(IG-1)}] \quad (13-1)$$

where

T = tolerance in mm

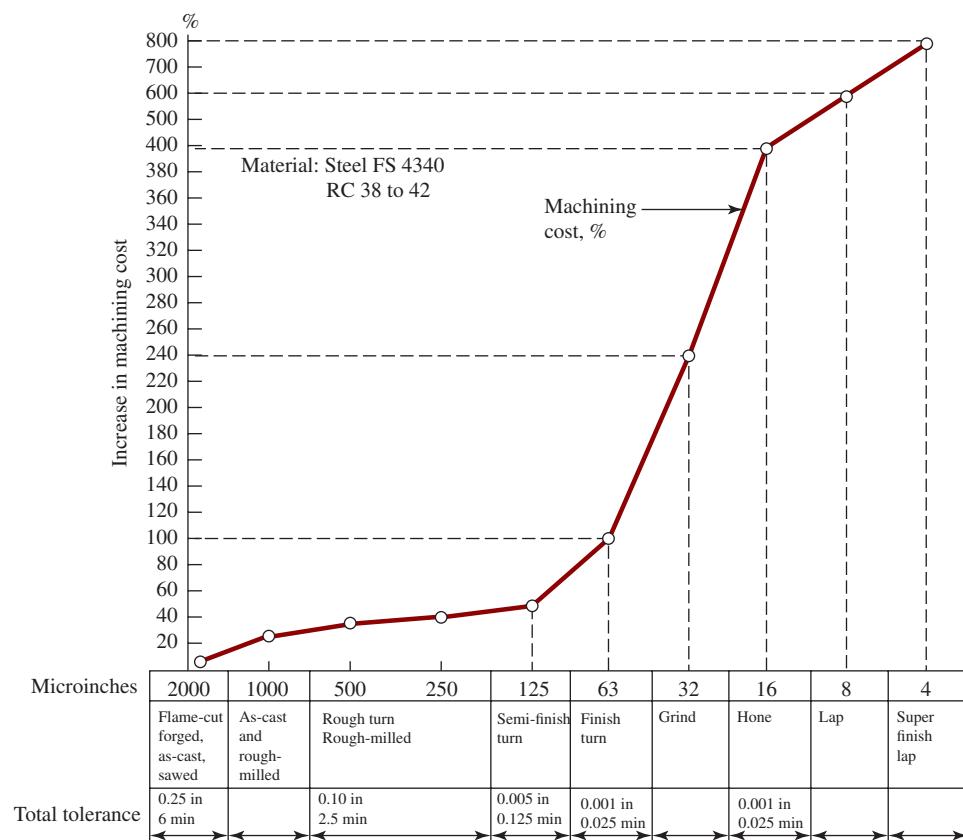


FIGURE 13–2 Machining costs versus surface finish specified

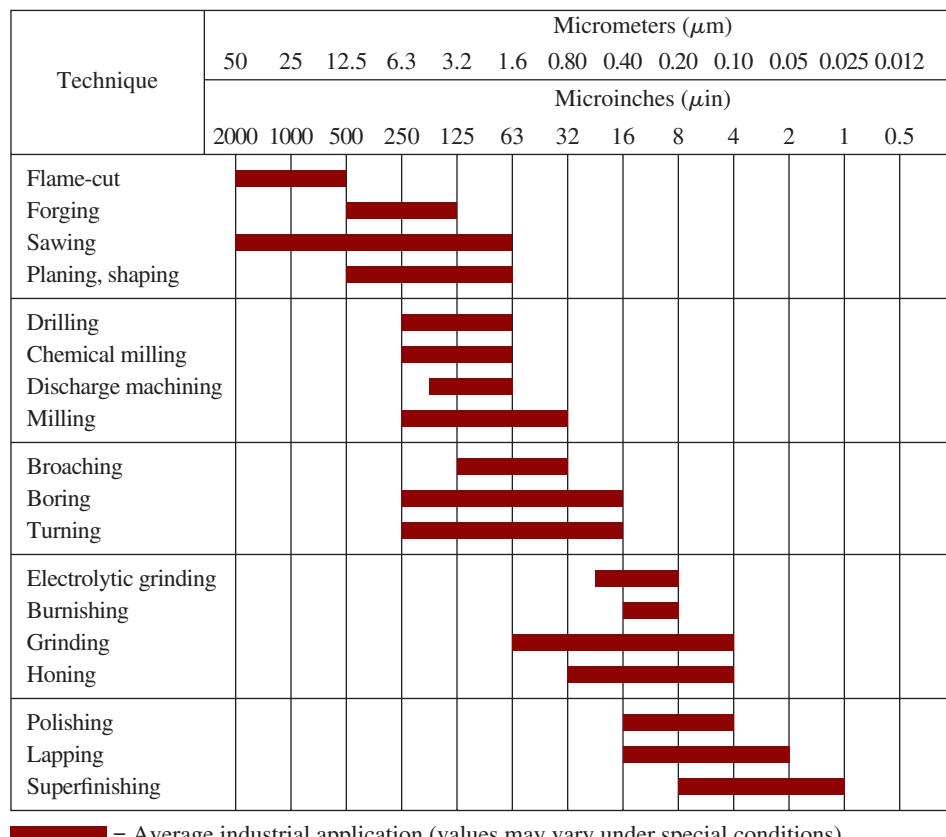
FIGURE 13–3 Finishes produced by various techniques (roughness average, R_a)

TABLE 13-1 Tolerance Grades

| Application | Tolerance grades | | | | | | | | |
|--|------------------|----|----|----|----|----|----|----|---|
| | 01 | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 |
| Measuring tools | | | | | | | | | |
| Fits of machined parts | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | |
| Material, as supplied | 8 | 9 | 10 | 11 | 12 | 13 | 14 | | |
| Rough forms (casting, sawing, forging, etc.) | 12 | 13 | 14 | 15 | 16 | | | | |

TABLE 13-2 Tolerances for Some Tolerance Grades

| Nominal size (in) | Tolerance grade | | | | | | | |
|-------------------|-----------------|------|-----|-----|-----|-----|-----|------|
| | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 |
| 0.24–0.40 | 0.15 | 0.25 | 0.4 | 0.6 | 0.9 | 1.4 | 2.2 | 3.5 |
| 0.40–0.71 | 0.2 | 0.3 | 0.4 | 0.7 | 1.0 | 1.6 | 2.8 | 4.0 |
| 0.71–1.19 | 0.25 | 0.4 | 0.5 | 0.8 | 1.2 | 2.0 | 3.5 | 5.0 |
| 1.19–1.97 | 0.3 | 0.4 | 0.6 | 1.0 | 1.6 | 2.5 | 4.0 | 6.0 |
| 1.97–3.15 | 0.3 | 0.5 | 0.7 | 1.2 | 1.8 | 3.0 | 4.5 | 7.0 |
| 3.15–4.73 | 0.4 | 0.6 | 0.9 | 1.4 | 2.2 | 3.5 | 5.0 | 9.0 |
| 4.73–7.09 | 0.5 | 0.7 | 1.0 | 1.6 | 2.5 | 4.0 | 6.0 | 10.0 |

TABLE 13-2M Metric Tolerances for Some Tolerance Grades

| Range of nominal size (mm) | Tolerance grade | | | | | | | | Mean dimension (Reference) (mm) |
|--------------------------------|-----------------|--------|-------|-------|-------|-------|-------|-------|---------------------------------|
| | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | |
| Tolerances in millimeters (mm) | | | | | | | | | |
| 6–10 | 0.0036 | 0.0057 | 0.009 | 0.014 | 0.023 | 0.036 | 0.057 | 0.091 | 8 |
| 10–18 | 0.0044 | 0.0069 | 0.011 | 0.017 | 0.028 | 0.044 | 0.069 | 0.110 | 14 |
| 18–30 | 0.0053 | 0.0083 | 0.013 | 0.021 | 0.033 | 0.053 | 0.083 | 0.132 | 24 |
| 30–50 | 0.0063 | 0.010 | 0.016 | 0.025 | 0.040 | 0.063 | 0.100 | 0.158 | 40 |
| 50–80 | 0.0075 | 0.012 | 0.019 | 0.030 | 0.047 | 0.075 | 0.118 | 0.187 | 65 |
| 80–120 | 0.0087 | 0.014 | 0.022 | 0.035 | 0.055 | 0.087 | 0.138 | 0.219 | 100 |
| 120–180 | 0.0101 | 0.016 | 0.025 | 0.040 | 0.064 | 0.101 | 0.160 | 0.254 | 150 |

D = mean dimension in mm of the range of nominal sizes in Table 13-2M

ITG = International Tolerance Grade number (an integer from 1 to 14)

13-4 PREFERRED BASIC SIZES

The first step in specifying a dimension for a part is to decide on the basic size—that dimension to which the tolerances are applied. The analysis for strength, deflection, or performance of the part determines the nominal

or minimum size required. Unless special conditions exist, the basic size should be chosen from the lists of preferred basic sizes in Table A2-1 for fractional-inch sizes, decimal-inch sizes, and metric sizes from the SI. If possible, select from the first-choice column. If a size between two first-choice sizes is required, the second-choice column should be used. This will limit the number of sizes typically encountered in the manufacture of products and will lead to cost-effective standardization. The choice of system depends on the policies of the company and the market for the product.

13-5 CLEARANCE FITS

When there must always be a clearance between mating parts, a clearance fit is specified. The designation for standard clearance fits from ANSI/ASME Standard B4.1 for members that must move together is the *running or sliding clearance fit (RC)*. Within this standard, there are nine classes, RC1 through RC9, with RC1 providing the smallest clearance and RC9 the largest. The following descriptions for the individual members of this class should help you to decide which is most appropriate for a given application.

RC1 (close sliding fit): Accurate location of parts that must assemble without perceptible play.

RC2 (sliding fit): Parts that will move and turn easily but are not intended to run freely. Parts may seize with small temperature changes, especially in the larger sizes.

RC3 (precision running fit): Precision parts operating at slow speeds and light loads that must run freely. Changes in temperature may cause difficulties.

RC4 (close running fit): Accurate location with minimum play for use under moderate

loads and speeds. A good choice for accurate machinery.

RC5 (medium running fit): Accurate machine parts for higher speeds and/or loads than for RC4.

RC6 (medium running fit): Similar to RC5 for applications in which larger clearance is desired.

RC7 (free running fit): Reliable relative motion under wide temperature variations in applications where accuracy is not critical.

RC8 (loose running fit): Permits large clearances, allowing the use of parts with commercial, "as-received" tolerances.

RC9 (loose running fit): Similar to RC8, with approximately 50% larger clearances.

The complete standard ANSI/ASME B4.1 lists the tolerances on the mating parts and the resulting limits of clearances for all nine classes and for sizes from 0 to 200 in. (See also References 4, 6, and 8.) Table 13-3 is abstracted from the standard. Let RC2 represent the precision fits (RC1, RC2, and RC3); let RC5 represent

TABLE 13-3 Clearance Fits (RC)

| Nominal size range (in) | Class RC2 | | | Class RC5 | | | Class RC8 | | | Nominal size range (in) | |
|-------------------------|---------------------|-----------------|-------|---------------------|-----------------|-------|---------------------|-----------------|-------|-------------------------|--|
| | Limits of clearance | Standard limits | | Limits of clearance | Standard limits | | Limits of clearance | Standard limits | | | |
| | | Hole | Shaft | | Hole | Shaft | | Hole | Shaft | | |
| Over To | | | | | | | | | | Over To | |
| 0–0.12 | 0.1 | +0.25 | −0.1 | 0.6 | +0.6 | −0.6 | 2.5 | +1.6 | −2.5 | 0–0.12 | |
| | 0.55 | 0 | −0.3 | 1.6 | −0 | −1.0 | 5.1 | 0 | −3.5 | | |
| 0.12–0.24 | 0.15 | +0.3 | −0.15 | 0.8 | +0.7 | −0.8 | 2.8 | +1.8 | −2.8 | 0.12–0.24 | |
| | 0.65 | 0 | −0.35 | 2.0 | −0 | −1.3 | 5.8 | 0 | −4.0 | | |
| 0.24–0.40 | 0.2 | +0.4 | −0.2 | 1.0 | +0.9 | −1.0 | 3.0 | +2.2 | −3.0 | 0.24–0.40 | |
| | 0.85 | 0 | −0.45 | 2.5 | −0 | −1.6 | 6.6 | 0 | −4.4 | | |
| 0.40–0.71 | 0.25 | +0.4 | −0.25 | 1.2 | +1.0 | −1.2 | 3.5 | +2.8 | −3.5 | 0.40–0.71 | |
| | 0.95 | 0 | −0.55 | 2.9 | −0 | −1.9 | 7.9 | 0 | −5.1 | | |
| 0.71–1.19 | 0.3 | +0.5 | −0.3 | 1.6 | +1.2 | −1.6 | 4.5 | +3.5 | −4.5 | 0.71–1.19 | |
| | 1.2 | 0 | −0.7 | 3.6 | −0 | −2.4 | 10.0 | 0 | −6.5 | | |
| 1.19–1.97 | 0.4 | +0.6 | −0.4 | 2.0 | +1.6 | −2.0 | 5.0 | +4.0 | −5.0 | 1.19–1.97 | |
| | 1.4 | 0 | −0.8 | 4.6 | −0 | −3.0 | 11.5 | 0 | −7.5 | | |
| 1.97–3.15 | 0.4 | +0.7 | −0.4 | 2.5 | +1.8 | −2.5 | 6.0 | +4.5 | −6.0 | 1.97–3.15 | |
| | 1.6 | 0 | −0.9 | 5.5 | −0 | −3.7 | 13.5 | 0 | −9.0 | | |
| 3.15–4.73 | 0.5 | +0.9 | −0.5 | 3.0 | +2.2 | −3.0 | 7.0 | +5.0 | −7.0 | 3.15–4.73 | |
| | 2.0 | 0 | −1.1 | 6.6 | −0 | −4.4 | 15.5 | 0 | −10.5 | | |
| 4.73–7.09 | 0.6 | +1.0 | −0.6 | 3.5 | +2.5 | −3.5 | 8.0 | +6.0 | −8.0 | 4.73–7.09 | |
| | 2.3 | 0 | −1.3 | 7.6 | −0 | −5.1 | 18.0 | 0 | −12.0 | | |
| 7.09–9.85 | 0.6 | +1.2 | −0.6 | 4.0 | +2.8 | −4.0 | 10.0 | +7.0 | −10.0 | 7.09–9.85 | |
| | 2.6 | 0 | −1.4 | 8.6 | −0 | −5.8 | 21.5 | 0 | −14.5 | | |
| 9.85–12.41 | 0.7 | +1.2 | −0.7 | 5.0 | +3.0 | −5.0 | 12.0 | +8.0 | −12.0 | 9.85–12.41 | |
| | 2.8 | 0 | −1.6 | 10.0 | −0 | −7.0 | 25.0 | 0 | −17.0 | | |

Source: Reprinted from ANSI/ASME Standard B4.1-1967 by permission of the American Society of Mechanical Engineers. All rights reserved.

Note: Limits are in thousandths of an inch.

the accurate, reliable running fits (RC4 to RC7); and let RC8 represent the loose fits (RC8 and RC9).

The numbers in Table 13–3 are in thousandths of an inch. Thus, a clearance of 2.8 from the table means a difference in size between the inside and outside parts of 0.0028 in. The tolerances on the hole and the shaft are to be applied to the basic size to determine the limits of size for that dimension.

In applying tolerances and the allowance to the dimensions of mating parts, designers use the basic hole system and the basic shaft system. In the *basic hole system*, the design size of the hole is the basic size, and the allowance is applied to the shaft; the basic size is the minimum size of the hole. In the *basic shaft system*, the design

size of the shaft is the basic size, and the allowance is applied to the hole; the basic size is the maximum size of the shaft. The basic hole system is preferred.

Figure 13–4 shows a graphical display of the tolerances and fits for all nine RC classes when applied to a shaft/hole combination in which the basic size is 2.000 in and the basic hole system is used. Note that such a diagram shows the total tolerance on both the shaft and the hole. The tolerance for the hole always starts at the basic size, while the shaft tolerance is offset below the basic size to provide for the minimum clearance (the smallest hole combined with the largest shaft). The maximum clearance combines the largest hole with the smallest shaft. This figure also shows the dramatic

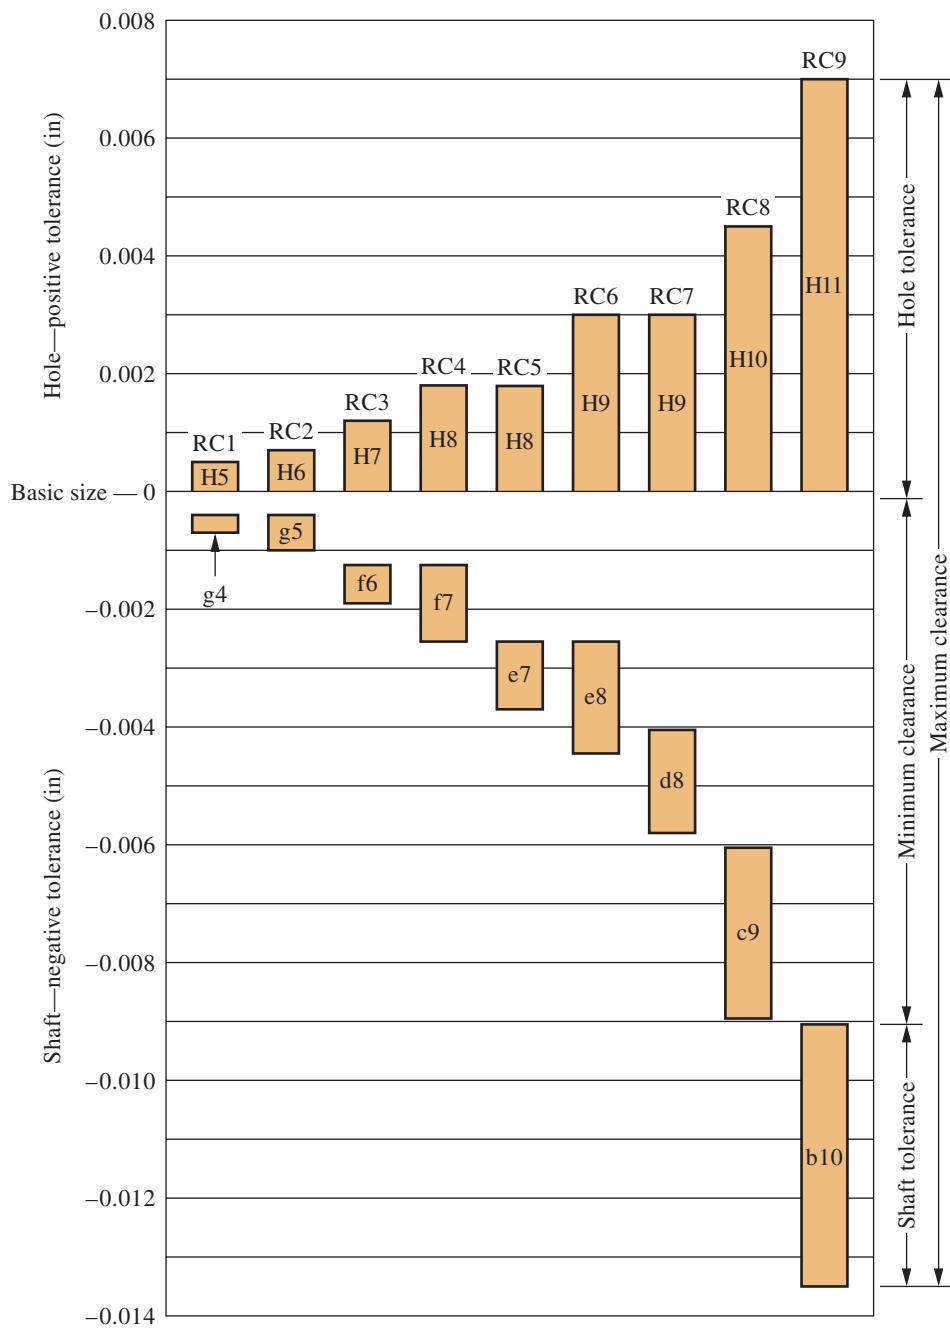


FIGURE 13–4 RC fits for basic hole size of 2.00 in showing tolerances for hole and shaft, minimum clearance, and maximum clearance

range of clearances provided by the nine classes within the RC system.

The codes within the tolerance bars in Figure 13–4 refer to the tolerance grades mentioned earlier. The capital H combined with a tolerance grade number is used for the hole in the basic hole system for which there is no fundamental deviation from the basic size. The lowercase letters in the shaft tolerance bars indicate some fundamental deviation of the shaft size from the basic size. Then the tolerance is added to the fundamental

deviation. The size of the tolerance is indicated by the number.

ISO standard R286 for limits and fits also uses the letter/number codes. For example, a specification for a shaft/hole combination with a basic size of 50 mm that is to provide a free running fit (similar to RC7) could be defined on a drawing as

Hole: $\varnothing 50\text{ H}9$ Shaft: $\varnothing 50\text{ d}8$

No tolerance values need to be given on the drawing.

Example Problem 13–1

A shaft carrying an idler sheave for a belt drive system is to have a nominal size of 2.00 in. The sheave must rotate reliably on the shaft, but with the smoothness characteristic of accurate machinery. Specify the limits of size for the shaft and the sheave bore, and list the limits of clearance that will result. Use the basic hole system.

Solution An RC5 fit should be satisfactory in this application. From Table 13–3, the hole tolerance limits are +1.8 and –0. The sheave hole then should be within the following limits:

Sheave Hole

$$2.0000 + 0.0018 = 2.0018 \text{ in (largest)}$$

$$2.0000 - 0.0000 = 2.0000 \text{ in (smallest)}$$

Notice that the smallest hole is the basic size.

The shaft tolerance limits are –2.5 and –3.7. The resulting size limits are as follows:

Shaft Diameter

$$2.0000 - 0.0025 = 1.9975 \text{ in (largest)}$$

$$2.0000 - 0.0037 = 1.9963 \text{ in (smallest)}$$

Figure 13–5 illustrates these results.

Combining the smallest shaft with the largest hole gives the largest clearance. Conversely, combining the largest shaft with the smallest hole gives the smallest clearance. Therefore, the limits of clearance are

$$2.0018 - 1.9963 = 0.0055 \text{ in (largest)}$$

$$2.0000 - 1.9975 = 0.0025 \text{ in (smallest)}$$

These values check with the limits of clearance in Table 13–3. Notice that the total tolerance for the shaft is 0.0012 in, and for the hole 0.0018 in, both relatively small values.

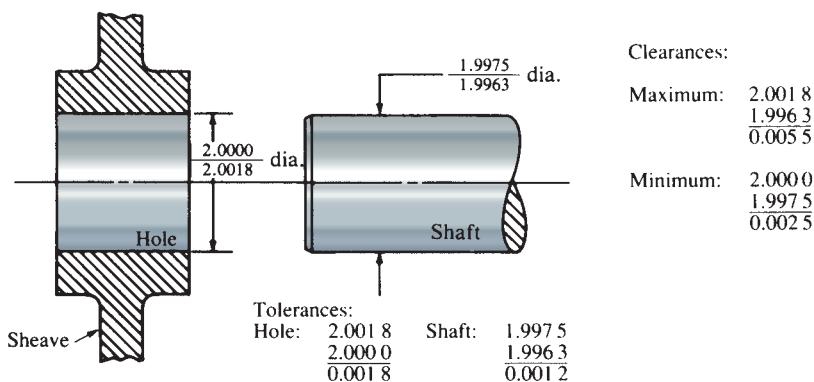


FIGURE 13–5 An RC5 fit using the basic hole system

Locational Clearance Fits

Another clearance fit system is available for parts for which control of the location is desired although the parts will normally not move in relation to each other in operation. Called *locational clearance (LC)* fits, they include 11 classes. The first four, LC1 to LC4, have a zero clearance

(size to size) as the lower limit of the fit, regardless of the size or class. The upper limit of fit increases with both the size of the parts and the class number. Classes LC5 through LC11 provide some positive clearance for all sizes, increasing with the size of the parts and with the class. Numerical values for the tolerances and fits for these classes have been published. (See References 1, 2, 4, 6, and 8.)

13-6 INTERFERENCE FITS

Interference fits are those in which the inside member is larger than the outside member, requiring the application of force during assembly. There is some deformation of the parts after assembly, and a pressure exists at the mating surfaces.

Force fits are designed to provide a controlled pressure between mating parts throughout the range of sizes for a given class. They are used where forces or torques are transmitted through the joint. Instead of being assembled through the application of force, similar fits are obtained by *shrink fitting*, in which one member is

heated to expand it while the other remains cool. The parts are then assembled with little or no force. After cooling, the same dimensional interference exists as for the force fit. *Locational interference fits* are used for location only. There is no movement between parts after assembly, but there is no special requirement for the resulting pressure between mating parts.

Force Fits (FN)

As shown in Table 13-4, five classes of force fits are defined in ANSI/ASME Standard B4.1. (See References 1, 2, 4, 6, and 8.)

TABLE 13-4 Force and Shrink Fits (FN)

| Nominal size range (in) | Class FN1 | | | Class FN2 | | | Class FN3 | | | Class FN4 | | | Class FN5 | | | |
|-------------------------|-----------|------------------------|-----------------|-----------|------------------------|-----------------|-----------|------------------------|-----------------|-----------|------------------------|-----------------|-----------|------------------------|-----------------|-------|
| | Over To | Limits of interference | Standard limits | | Limits of interference | Standard limits | |
| | | | Hole | Shaft | | Hole | Shaft |
| 0-0.12 | 0.05 | +0.25 | +0.5 | 0.2 | +0.4 | +0.85 | | | | 0.3 | +0.4 | +0.95 | 0.3 | +0.6 | +1.3 | |
| | 0.5 | -0 | +0.3 | 0.85 | -0 | +0.6 | | | | 0.95 | -0 | +0.7 | 1.3 | -0 | +0.9 | |
| 0.12-0.24 | 0.1 | +0.3 | +0.6 | 0.2 | +0.5 | +1.0 | | | | 0.4 | +0.5 | +1.2 | 0.5 | +0.7 | +1.7 | |
| | 0.6 | -0 | +0.4 | 1.0 | -0 | +0.7 | | | | 1.2 | -0 | +0.9 | 1.7 | -0 | +1.2 | |
| 0.24-0.40 | 0.1 | +0.4 | +0.75 | 0.4 | +0.6 | +1.4 | | | | 0.6 | +0.6 | +1.6 | 0.5 | +0.9 | +2.0 | |
| | 0.75 | -0 | +0.5 | 1.4 | -0 | +1.0 | | | | 1.6 | -0 | +1.2 | 2.0 | -0 | +1.4 | |
| 0.40-0.56 | 0.1 | +0.4 | +0.8 | 0.5 | +0.7 | +1.6 | | | | 0.7 | +0.7 | +1.8 | 0.6 | +1.0 | +2.3 | |
| | 0.8 | -0 | +0.5 | 1.6 | -0 | +1.2 | | | | 1.8 | -0 | +1.4 | 2.3 | -0 | +1.6 | |
| 0.56-0.71 | 0.2 | +0.4 | +0.9 | 0.5 | +0.7 | +1.6 | | | | 0.7 | +0.7 | +1.8 | 0.8 | +1.0 | +2.5 | |
| | 0.9 | -0 | +0.6 | 1.6 | -0 | +1.2 | | | | 1.8 | -0 | +1.4 | 2.5 | -0 | +1.8 | |
| 0.71-0.95 | 0.2 | +0.5 | +1.1 | 0.6 | +0.8 | +1.9 | | | | 0.8 | +0.8 | +2.1 | 1.0 | +1.2 | +3.0 | |
| | 1.1 | -0 | +0.7 | 1.9 | -0 | +1.4 | | | | 2.1 | -0 | +1.6 | 3.0 | -0 | +2.2 | |
| 0.95-1.19 | 0.3 | +0.5 | +1.2 | 0.6 | +0.8 | +1.9 | 0.8 | +0.8 | +2.1 | 1.0 | +0.8 | +2.3 | 1.3 | +1.2 | +3.3 | |
| | 1.2 | -0 | +0.8 | 1.9 | -0 | +1.4 | 2.1 | -0 | +1.6 | 2.3 | -0 | +1.8 | 3.3 | -0 | +2.5 | |
| 1.19-1.58 | 0.3 | +0.6 | +1.3 | 0.8 | +1.0 | +2.4 | 1.0 | +1.0 | +2.6 | 1.5 | +1.0 | +3.1 | 1.4 | +1.6 | +4.0 | |
| | 1.3 | -0 | +0.9 | 2.4 | -0 | +1.8 | 2.6 | -0 | +2.0 | 3.1 | -0 | +2.5 | 4.0 | -0 | +3.0 | |
| 1.58-1.97 | 0.4 | +0.6 | +1.4 | 0.8 | +1.0 | +2.4 | 1.2 | +1.0 | +2.8 | 1.8 | +1.0 | +3.4 | 2.4 | +1.6 | +5.0 | |
| | 1.4 | -0 | +1.0 | 2.4 | -0 | +1.8 | 2.8 | -0 | +2.2 | 3.4 | -0 | +2.8 | 5.0 | -0 | +4.0 | |
| 1.97-2.56 | 0.6 | +0.7 | +1.8 | 0.8 | +1.2 | +2.7 | 1.3 | +1.2 | +3.2 | 2.3 | +1.2 | +4.2 | 3.2 | +1.8 | +6.2 | |
| | 1.8 | -0 | +1.3 | 2.7 | -0 | +2.0 | 3.2 | -0 | +2.5 | 4.2 | -0 | +3.5 | 6.2 | -0 | +5.0 | |
| 2.56-3.15 | 0.7 | +0.7 | +1.9 | 1.0 | +1.2 | +2.9 | 1.8 | +1.2 | +3.7 | 2.8 | +1.2 | +4.7 | 4.2 | +1.8 | +7.2 | |
| | 1.9 | -0 | +1.4 | 2.9 | -0 | +2.2 | 3.7 | -0 | +3.0 | 4.7 | -0 | +4.0 | 7.2 | -0 | +6.0 | |
| 3.15-3.94 | 0.9 | +0.9 | +2.4 | 1.4 | +1.4 | +3.7 | 2.1 | +1.4 | +4.4 | 3.6 | +1.4 | +5.9 | 4.8 | +2.2 | +8.4 | |
| | 2.4 | -0 | +1.8 | 3.7 | -0 | +2.8 | 4.4 | -0 | +3.5 | 5.9 | -0 | +5.0 | 8.4 | -0 | +7.0 | |
| 3.94-4.73 | 1.1 | +0.9 | +2.6 | 1.6 | +1.4 | +3.9 | 2.6 | +1.4 | +4.9 | 4.6 | +1.4 | +6.9 | 5.8 | +2.2 | +9.4 | |
| | 2.6 | -0 | +2.0 | 3.9 | -0 | +3.0 | 4.9 | -0 | +4.0 | 6.9 | -0 | +6.0 | 9.4 | -0 | +8.0 | |
| 4.73-5.52 | 1.2 | +1.0 | +2.9 | 1.9 | +1.6 | +4.5 | 3.4 | +1.6 | +6.0 | 5.4 | +1.6 | +8.0 | 7.5 | +2.5 | +11.6 | |
| | 2.9 | -0 | +2.2 | 4.5 | -0 | +3.5 | 6.0 | -0 | +5.0 | 8.0 | -0 | +7.0 | 11.6 | -0 | +10.0 | |
| 5.52-6.30 | 1.5 | +1.0 | +3.2 | 2.4 | +1.6 | +5.0 | 3.4 | +1.6 | +6.0 | 5.4 | +1.6 | +8.0 | 9.5 | +2.5 | +13.6 | |
| | 3.2 | -0 | +2.5 | 5.0 | -0 | +4.0 | 6.0 | -0 | +5.0 | 8.0 | -0 | +7.0 | 13.6 | -0 | +12.0 | |

Source: Reprinted from ANSI/ASME B4.1-1967, by permission of the American Society of Mechanical Engineers. All rights reserved.

Note: Limits are in thousandths of an inch.

TABLE 13-5 Coefficient of Thermal Expansion

| Material | in/in · °F | mm/mm · °C |
|------------------|-----------------------|-----------------------|
| Steel: | | |
| SAE 1020 | 6.5×10^{-6} | 11.7×10^{-6} |
| SAE 1050 | 6.1×10^{-6} | 11.0×10^{-6} |
| SAE 4140 | 6.2×10^{-6} | 11.2×10^{-6} |
| Stainless steel: | | |
| SAE 301 | 9.4×10^{-6} | 16.9×10^{-6} |
| SAE 430 | 5.8×10^{-6} | 10.4×10^{-6} |
| Aluminum: | | |
| 2014 | 12.8×10^{-6} | 23.0×10^{-6} |
| 6061 | 13.0×10^{-6} | 23.4×10^{-6} |
| Bronze: | 10.0×10^{-6} | 18.0×10^{-6} |

FN1 (light drive fit): Only light pressure required to assemble mating parts. Used for fragile parts and where no large forces must be transmitted across the joint.

FN2 (medium drive fit): General-purpose class used frequently for steel parts of moderate cross section.

FN3 (heavy drive fit): Used for heavy steel parts.

FN4 (force fit): Used for high-strength assemblies where high resulting pressures are required.

FN5 (force fit): Similar to FN4 for higher pressures.

The use of shrink fit methods is desirable in most cases of interference fits and is virtually required in the heavier classes and larger size parts. The temperature increase required to produce a given expansion for assembly can be computed from the basic definition of the coefficient of thermal expansion:

$$\delta = \alpha L(\Delta t) \quad (13-1)$$

where δ = total deformation desired (in or mm)

α = coefficient of thermal expansion (in/in · °F or mm/mm · °C)

L = nominal length of member being heated (in or mm)

Δt = temperature difference (°F or °C)

For cylindrical parts, L is the diameter and δ is the change in diameter required. Table 13-5 gives the values for α for several materials. (See Reference 8 for more data.)

13-7 TRANSITION FITS

The *location transition (LT)* fit is used where accuracy of location is important, but where a small amount of clearance or a small amount of interference is acceptable.

There are six classes, LT1 to LT6. In any class, there is an overlap in the tolerance limits for both the hole and the shaft so that possible combinations produce a small clearance, a small interference, or even a size-to-size fit. Complete tables of data for these fits are published in References 1, 2, 4, 6, and 8.

13-8 STRESSES FOR FORCE FITS

When force fits are used to secure mechanical parts, the interference creates a pressure acting at the mating surfaces. The pressure causes stresses in each part. Under heavy force fits or even with lighter fits in fragile parts, the stresses developed can be great enough to yield ductile materials. A permanent set results, which normally destroys the usefulness of the assembly. With brittle materials such as cast iron, actual fracture may result.

The stress analysis applicable to force fits is related to the analysis of thick-walled cylinders. The outer member expands under the influence of the pressure at the mating surface, with the tangential tensile stress developed being a maximum at the mating surface. There is a radial stress equal to the pressure itself. Also, the inner member contracts because of the pressure and is subjected to a tangential compressive stress along with the radial compressive stress equal to the pressure. (See Reference 5.)

The usual objective of the analysis is to determine the magnitude of the pressure due to a given interference fit that would be developed at the mating surfaces. Then the stresses due to this pressure in the mating members are computed. The following procedure can be used:

PROCEDURE FOR COMPUTING STRESSES FOR FORCE FITS ▾

- Determine the amount of interference from the design of the parts. For standard force fits, Table 13-4 can be used. The maximum limit of interference would, of course, give the maximum stresses for the parts. Note that the interference values are based on the total interference on the diameter, which is the sum of the expansion of the outer ring plus the contraction of the inner member (see Figure 13-6).

- Compute the pressure at the mating surface from Equation (13-2) if both members are of the same material:


⇒ Pressure Created by Force Fit

$$p = \frac{E\delta}{2b} \left[\frac{(c^2 - b^2)(b^2 - a^2)}{2b^2(c^2 - a^2)} \right] \quad (13-2)$$

Use Equation (13-3) if they are of different materials:

⇒ Pressure Created by Force Fit, Two Different Materials

$$p = \frac{\delta}{2b} \left[\frac{1}{E_o} \left(\frac{c^2 + b^2}{c^2 - b^2} + \nu_o \right) + \frac{1}{E_i} \left(\frac{b^2 + a^2}{b^2 - a^2} - \nu_i \right) \right] \quad (13-3)$$

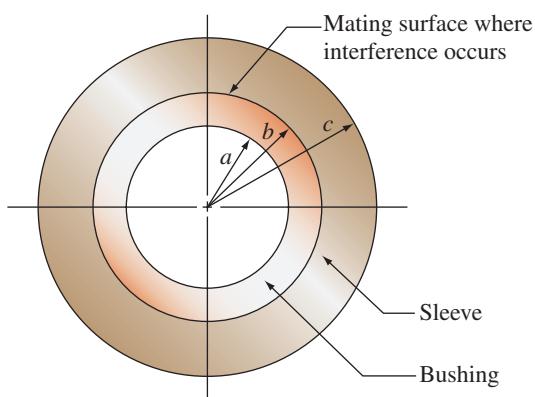**FIGURE 13-6** Terminology for interference fit

where p = pressure at the mating surface

δ = total diametral interference

E = modulus of elasticity of each member if they are the same

E_o = modulus of elasticity of outer member

E_i = modulus of elasticity of inner member

ν_o = Poisson's ratio for outer member

ν_i = Poisson's ratio for member

3. Compute the tensile stress in the outer member from

◇ **Tensile Stress in Outer Member**

$$\sigma_o = p \left(\frac{c^2 + b^2}{c^2 - b^2} \right) \quad (\text{tensile at the inner surface in the tangential direction}) \quad (13-4)$$

4. Compute the compressive stress in the inner member from

◇ **Compressive Stress in Inner Member**

$$\sigma_i = -p \left(\frac{b^2 + a^2}{b^2 - a^2} \right) \quad (\text{compressive at the outer surface in the tangential direction}) \quad (13-5)$$

5. If desired, the increase in the diameter of the outer member due to the tensile stress can be computed from

$$\delta_o = \frac{2bp}{E_o} \left[\frac{c^2 + b^2}{c^2 - b^2} + \nu_o \right] \quad (13-6)$$

6. If desired, the decrease in the diameter of the inner member due to the compressive stress can be computed from

$$\delta_i = \frac{2bp}{E_i} \left[\frac{b^2 + a^2}{b^2 - a^2} - \nu_i \right] \quad (13-7)$$

The stresses computed from Equations (13-4) and (13-5) were derived assuming that the two cylinders are of equal length. If the outer member is shorter than the inner member, the stresses are higher at its ends by as much as a factor of 2.0. Such a factor should be applied as a stress concentration factor.

In the absence of applied shear stresses, the tensile stress in the tangential direction in the outer member is the maximum principal stress and can be compared with the yield strength of the material to determine the resulting design factor.

Example Problem 13-2 shows the application of these relationships. Then a spreadsheet is listed to solve the same equations, with sample output showing the solution to Example Problem 13-2.

Example Problem

13-2

A bronze bushing is to be installed into a steel sleeve as indicated in Figure 13-6. The bushing has an inside diameter of 2.000 in and a nominal outside diameter of 2.500 in. The steel sleeve has a nominal inside diameter of 2.500 in and an outside diameter of 3.500 in.

1. Specify the limits of size for the outside diameter of the bushing and the inside diameter of the sleeve in order to obtain a heavy drive fit, FN3. Determine the limits of interference that would result.
2. For the maximum interference from 1, compute the pressure that would be developed between the bushing and the sleeve, the stress in the bushing and the sleeve, and the deformation of the bushing and the sleeve. Use $E = 30 \times 10^6$ psi for the steel and $E = 17 \times 10^6$ for the bronze. Use $\nu = 0.27$ for both materials.

Solution

For 1, from Table 13-4, for a part size of 2.50 in at the mating surface, the tolerance limits on the hole in the outer member are +1.2 and -0. Applying these limits to the basic size gives the dimension limits for the hole in the steel sleeve:

2.5012 in

2.5000 in

For the bronze insert, the tolerance limits are +3.2 and +2.5. Then the size limits for the outside diameter of the bushing are

2.5032 in

2.5025 in

The limits of interference would be 0.0013 to 0.0032 in.

For 2, the maximum pressure would be produced by the maximum interference, 0.0032 in. Then, using $a = 1.00$ in, $b = 1.25$ in, $c = 1.75$ in, $E_o = 30 \times 10^6$ psi, $E_i = 17 \times 10^6$ psi, and $\nu_o = \nu_i = 0.27$ from Equation (13–3),

$$p = \frac{\delta}{2b \left[\frac{1}{E_o} \left(\frac{c^2 + b^2}{c^2 - b^2} + \nu_o \right) + \frac{1}{E_i} \left(\frac{b^2 + a^2}{b^2 - a^2} - \nu_i \right) \right]}$$

$$p = \frac{0.0032}{(2)(1.25) \left[\frac{1}{30 \times 10^6} \left(\frac{1.75^2 + 1.25^2}{1.75^2 - 1.25^2} + 0.27 \right) + \frac{1}{17 \times 10^6} \left(\frac{1.25^2 + 1.00^2}{1.25^2 - 1.00^2} - 0.27 \right) \right]}$$

$$p = 3518 \text{ psi}$$

The tensile stress in the steel sleeve is

$$\sigma_o = p \left(\frac{c^2 + b^2}{c^2 - b^2} \right) = 3518 \left(\frac{1.75^2 + 1.25^2}{1.75^2 - 1.25^2} \right) = 10846 \text{ psi}$$

The compressive stress in the bronze bushing is

$$\sigma_i = -p \left(\frac{b^2 + a^2}{b^2 - a^2} \right) = -3518 \left(\frac{1.25^2 + 1.00^2}{1.25^2 - 1.00^2} \right) = -16025 \text{ psi}$$

The increase in the diameter of the sleeve is

$$\delta_o = \frac{2bp}{E_o} \left[\frac{c^2 + b^2}{c^2 - b^2} + \nu_o \right]$$

$$\delta_o = \frac{2(1.25)(3518)}{30 \times 10^6} \left[\frac{1.75^2 + 1.25^2}{1.75^2 - 1.25^2} + 0.27 \right] = 0.00098 \text{ in}$$

The decrease in the diameter of the bushing is

$$\delta_i = \frac{2bp}{E_i} \left[\frac{b^2 + a^2}{b^2 - a^2} - \nu_i \right]$$

$$\delta_i = \frac{2(1.25)(3518)}{17 \times 10^6} \left[\frac{1.25^2 + 1.00^2}{1.25^2 - 1.00^2} - 0.27 \right] = 0.00222 \text{ in}$$

Note that the sum of δ_o and δ_i equals 0.0032, the total interference, δ .

The spreadsheet to analyze force fits is shown in Figure 13–7. The data shown are from Example Problem 13–2.

13-9 GENERAL TOLERANCING METHODS

It is the designer's responsibility to establish tolerances on each dimension of each component in a mechanical device. The tolerances must ensure that the component fulfills its function. But it should also be as large as practical to permit economical manufacture. This pair of conflicting principles must be dealt with. See comprehensive texts on technical drawing and interpretation of engineering drawings for general principles (References 4, 6, and 9. Also see Internet site 8).

Special attention should be paid to the features of a component that mate with other components and with which they must operate reliably or with which they must be accurately located. The fit of the inner races of the bearings on the shafts is an example of such features. Other fits provide clearances between parts that must be assembled together easily but that must not have large relative motion during operation.

Where no other component mates with certain features of a given component, the tolerances should be as large as practical so that they can be produced with basic machining, molding, or casting processes without the need for subsequent finishing. It is often recommended that blanket tolerances be given for such dimensions and that the precision with which the basic size is stated on the drawing implies a certain tolerance. For decimal

| STRESSES FOR FORCE FITS Refer to Figure 13–6 for geometry. | | Data from: Example Problem 13–2 |
|---|---|---------------------------------|
| Input Data: | Numerical values in <i>italics</i> must be inserted for each problem. | |
| Inside radius of inner member: $a = 1.0000$ in Outside radius of inner member: $b = 1.2500$ in Outside radius of outer member: $c = 1.7500$ in Total interference: $d = 0.0032$ in Modulus of outer member: $E_o = 3.00E+07$ psi Modulus of inner member: $E_i = 1.70E+07$ psi Poisson's ratio for outer member: $\nu_o = 0.27$ Poisson's ratio for inner member: $\nu_i = 0.27$ | | |
| Computed Results | | |
| Pressure at mating surface: $p = 3518$ psi | | Using Equation (13–3) |
| Tensile stress in outer member: $\sigma_o = 10\,846$ psi | | Using Equation (13–4) |
| Compressive stress in inner member: $\sigma_i = -16\,025$ psi | | Using Equation (13–5) |
| Increase in diameter of outer member: $\delta_o = 0.000\,98$ in | | Using Equation (13–6) |
| Decrease in diameter of inner member: $\delta_i = 0.002\,22$ in | | Using Equation (13–7) |

FIGURE 13–7 Spreadsheet solution for pressure, stresses, and deformations in cylindrical members mating with a force fit

dimensions in U.S. Customary units, a note similar to the following is often given:

DIMENSIONS IN TOLERANCES ARE AS FOLLOWS UNLESS OTHERWISE STATED.

XX.X = ± 0.050

XX.XX = ± 0.010

XX.XXX = ± 0.005

XX.XXXX = ± 0.0005

ANGLES: $\pm 0.50^\circ$

where X represents a specified digit.

For example, if a given dimension has a basic size of 2.5 in, the dimension can be stated on the drawing in any of four ways with different interpretations:

2.5 means 2.5 ± 0.050 or limits of 2.550 to 2.450 in
2.50 means 2.50 ± 0.010 or limits of 2.510 to 2.490 in
2.500 means 2.500 ± 0.005 or limits of 2.505 to 2.495 in
2.5000 means 2.5000 ± 0.0005 or limits of 2.5005 to 2.4995 in

Any other desired tolerance must be specified on the dimension. Of course, you may select different standard tolerances according to the needs of the system being designed.

Similar data for metric drawings would appear as follows:

DIMENSIONS IN mm TOLERANCES ARE AS FOLLOWS UNLESS OTHERWISE STATED.

XX = ± 1.0

XX.X = ± 0.25

XX.XX = ± 0.15

XX.XXX = ± 0.012

ANGLES: $\pm 0.50^\circ$

Some tolerance notes also relate the degree of precision to the nominal size of the feature, with tighter tolerances on smaller dimensions and looser tolerances on larger dimensions. The international tolerance (IT) grades, discussed in Section 13–3, use this approach.

Geometric Dimensioning and Tolerancing (GD&T).


The geometric dimensioning and tolerancing (GD&T) method is used to control location, form, profile, orientation, and runout on a dimensioned feature. Its purpose is to ensure proper assembly and/or operation of parts, and it is especially useful in quantity production of interchangeable parts. The complete definition of the method is given in the ASME Standard Y14.5M-2009 (Reference 3). References 4 and 6–9 show some applications and demonstrate the interpretation of the numerous symbols. Also see Internet sites 1, 2, and 4.

Figure 13–8(a) shows some of the more common geometric symbols. Part (b) illustrates their use in a *feature control frame*, containing the symbol for the feature geometric characteristic being controlled, the tolerance on the dimension or form, and the *datum* to which the given feature is to be related. For example, in Part (c), the smaller diameter is to be concentric with the larger diameter (datum –A–) within a tolerance of 0.010 in.


Surface Finish. The designer should also control the surface finish of all features critical to the performance of the device being designed. This includes the mating surfaces that have already been discussed. But also any surface that experiences relatively high stresses, particularly reversed bending, should have a smooth surface.

| Tolerance | Characteristic | Symbol |
|-------------|----------------------|--------|
| Form | Straightness | — |
| | Flatness | □ |
| | Circularity | ○ |
| | Cylindricity | ◎ |
| Profile | Profile of a line | ⌒ |
| | Profile of a surface | △ |
| Orientation | Angularity | ∠ |
| | Perpendicularity | ⊥ |
| | Parallelism | // |
| Location | Position/symmetry | ⊕ |
| | Concentricity | ◎ |
| Runout | Circular runout | ↗ |
| | Total runout | ↗↖ |


(a) Geometric symbols

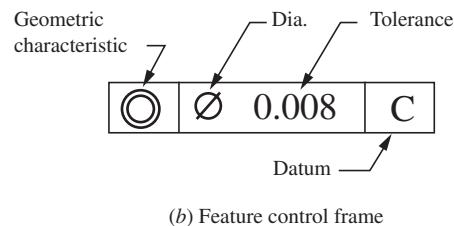


(b) Feature control frame

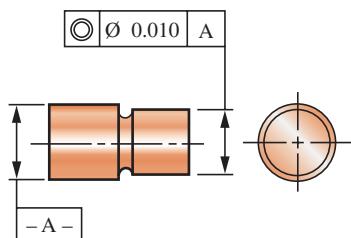


(c) Concentricity

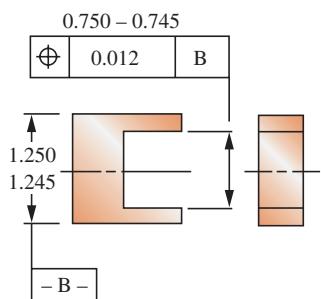


(d) Symmetry

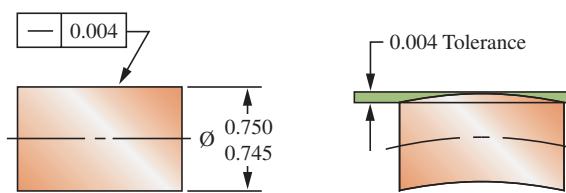


(e) Straightness

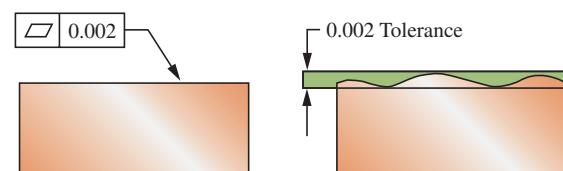


(f) Flatness

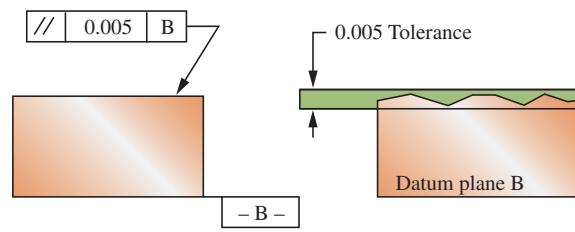

(g) Parallelism: planes

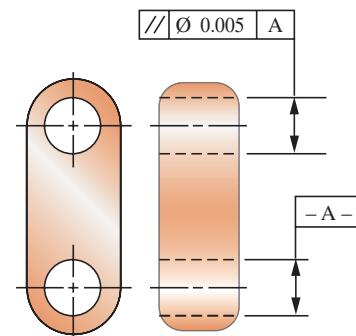

(h) Parallelism: cylinders

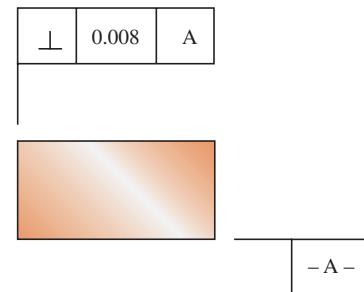

(i) Perpendicularity

FIGURE 13-8 Examples of geometric tolerancing

See Figure 5–11 for a rough indication of the effect of surface finishes between, for example, *machined* and *ground* surfaces on the basic endurance strength of steels. In general, *ground* surfaces have an average roughness, R_a , of 16 μin (0.4 μm). Figure 13–3 shows the expected range of surface finish for many kinds of machining processes. Note that turning is reported to be capable of producing that level of surface finish, but it is at the limit of its capability and will likely require very fine-finish cuts with sharp-edged tooling having a broad radius nose. The more nominal surface finish from turning, milling, broaching, and boring is 63 μin (1.6 μm). This would correspond to the *machined* category in Figure 5–11.

Bearing seats on shafts for accurate machinery are typically ground, particularly in the smaller sizes under 3.0 in (80 mm), with a maximum allowable average roughness of 16 μin (0.4 μm). Above that size and up to 20 in (500 mm), 32 μin (0.8 μm) is allowed. See manufacturers' catalogs.

13–10 ROBUST PRODUCT DESIGN

Careful control of the tolerances on the dimensions of machine parts is the responsibility of both the product designer and the manufacturing staff. The goal is to ensure the functionality of the product while permitting economical manufacture. Often these goals seem incompatible.

Robust product design is a tool that can help. (See Reference 10 and Internet sites 3, 5, and 6.) It is a technique in which a sequence of experiments is undertaken to determine the variables in a product's design that most affect its performance. Then the optimum limits on those variables are defined. The concepts can be used for dimensions, material properties, control settings, and many other factors.

The design of the experiments used to implement a robust product is critical to the success of the design. An initial screening experiment is used to select the most significant variables. Then additional experiments are run to determine the response of the system to combinations of these variables. Computer-generated plots of results establish limits for the significant variables.

Robust product design is based on the *Taguchi method*, an important element in the process of improving manufacturing quality developed by Dr. Genichi Taguchi. He showed how design of experiments can be used to produce products of consistently high quality that are insensitive to the operating environment. (See Reference 10.)

Controlling dimensions and tolerances to minimize variation can be accomplished using statistical analysis tools. The designer models the type and magnitude of the expected size variation for a set of mating components. Simulation software predicts the final assembly

configuration considering the "tolerance stack" of the individual components. The analysis can be done in one, two, or three dimensions. (See Internet site 5.)

The major goal of these methods is the allocation of tolerances on critical dimensions of mating parts that ensure satisfactory operation under all foreseeable conditions of component manufacture, assembly, environment, and use. Maintaining reasonable manufacturing costs is also an important consideration. Many manufacturers practice these methods, particularly in the automotive, aerospace, military, and high-production consumer products markets. Computer-assisted techniques are available to facilitate the process. Most comprehensive, solid modeling, computer-aided design systems include statistically based tolerance analysis as a standard feature. Internet site 7 describes the activities of the Association for the Development of Computer-Aided Tolerancing Systems (ADCATS), a consortium of several industries and Brigham Young University.

Robust design is an important part of the overall *product realization process* that was introduced in Chapter 1, Section 1–2. It is also important to the following concepts:

- *Design for manufacture and assembly* (see Reference 27 in Chapter 1)
- *Design for manufacturability* (see Reference 11)
- *Concurrent engineering* (see Internet site 9 and Reference 11)
- ISO 9001–Part 7.1 *Planning of Product Realization, and Part 7.5.1 Control of Production and Service Provision* (see Internet site 10)

Each of these concepts calls for careful specification of part dimensional characteristics and the rigorous measurement and control of the variations that occur in production systems. A related process of assessing the capability of production equipment to produce a part to required precision is called C_{pk} and it requires in-depth knowledge of tolerancing and accurate measurement of part features. The entire process of product design must be closely linked with manufacturing process planning and design to ensure production of a robust product.

REFERENCES

1. The American Society of Mechanical Engineers. ANSI/ASME. Standard B4.1-1967 (R2009). *Preferred Limits and Fits for Cylindrical Parts*. New York: American Society of Mechanical Engineers, 2009.
2. The American Society of Mechanical Engineers. ANSI/ASME. Standard B4.2-1978 (R2009). *Preferred Metric Limits and Fits*. New York: American Society of Mechanical Engineers, 2009.
3. The American Society of Mechanical Engineers. ASME. Standard Y14.5-2009. *Dimensioning and Tolerancing*. New York: American Society of Mechanical Engineers, 2009.

4. Bertoline, G. R., E. N. Wiebe, N. W. Hartman, and W. A. Ross. *Fundamentals of Graphics Communication*. 6th ed. New York: McGraw-Hill, 2011.
5. Budynas, R. G., and K. J. Nisbett. *Shigley's Mechanical Engineering Design*. 10th ed. New York: McGraw-Hill, 2015.
6. Giesecke, F. E., I. L. Hill, A. E. Mitchell, J. E. Novak, H. C. Spencer, and J. T. Dygdon. *Technical Drawing with Engineering Graphics*. 14th ed. Upper Saddle River, NJ: Pearson/Prentice-Hall, 2012.
7. Madsen, D. A., and D. P. Madsen. *Geometric Dimensioning and Tolerancing*. 9th ed. Tinley Park, IL: Goodheart-Wilcox Co., 2012.
8. Oberg, E. et al. *Machinery's Handbook*. 30th ed. New York: Industrial Press, 2015.
9. Puncochar, D. E. *Interpretation of Geometric Dimensioning and Tolerancing*. 3rd ed. New York: Industrial Press, 2010.
10. Chowdhury, Subir and Genichi Taguchi. *Robust Engineering*. New York: McGraw-Hill, 1999.
11. Anderson, D. M. *Design for Manufacturability & Concurrent Engineering: How to Use Concurrent Engineering to Rapidly Develop Low-Cost, High-Quality Products for Lean Production*. Boca Raton, FL: Productivity Press (Part of CRC Press), 2014.

INTERNET SITES RELATED TO TOLERANCES AND FITS

1. **Engineering Fundamentals.** A comprehensive site offering design information on numerous topics, including geometric dimensioning and tolerancing.
2. **Engineers Edge.** A comprehensive site offering design information on numerous topics, including geometric dimensioning and tolerancing.
3. **iSixSigma.** A free information resource about quality management, including robust design, Taguchi methods, and six sigma quality management.
4. **Engineering Bookstore.** A site offering technical books in many fields, including geometric dimensioning and tolerancing.
5. **Dimensional Control Systems, Inc.** A developer and vendor of software for managing and controlling the dimensions and tolerances of components and assemblies in three dimensions. Variations can be modeled and simulated to ensure that quality objectives for fit, finish, and functionality are met.
6. **DRM Associates.** An extensive site on the subject of new product development (NPD), including robust design, design of experiments, Taguchi methods, geometric dimensioning and tolerancing, variability reduction, and tolerance design and analysis for components and assemblies. Select the navigation button for *NPD Body of Knowledge* for a comprehensive index of topics.
7. **ADCATS.** The Association for the Development of Computer-Aided Tolerancing Systems (ADCATS) at Brigham Young University.

8. **Drafting Zone.** Information on mechanical drafting standards and practices. Genium Group, Inc.
9. **Sage Publishing.** Publisher of Concurrent Engineering Research and Applications that provides information about the field, including collaborative decision making, information modeling, teaming and sharing, and management of concurrent engineering.
10. **The 9000store.com.** Documents and standards related to ISO 9001 quality standards and processes. Part 7.1 deals with Planning for Product Realization and Part 7.5.1 deals with Control of Production and Service Provision.

PROBLEMS

Clearance Fits

1. Specify the class of fit, the limits of size, and the limits of clearance for the bore of a slow-moving but heavily loaded conveyor roller that must rotate freely on a stationary shaft under heavy load. The nominal diameter of the shaft is 3.500 in. Use the basic hole system.
2. A sine plate is a measuring device that pivots at its base, allowing the plate to assume different angles that are set with gage blocks for precision. The pin in the pivot has a nominal diameter of 0.5000 in. Specify the class of fit, the limits of size, and the limits of clearance for the pivot. Use the basic hole system.
3. A child's toy wagon has an axle with a nominal diameter of 5/8 in. For the wheel bore and axle, specify the class of fit, the limits of size, and the limits of clearance. Use the basic shaft system.
4. The planet gear of an epicyclic gear train must rotate reliably on its shaft while maintaining accurate position with respect to the mating gears. For the planet gear bore and its shaft, specify the class of fit, the limits of size, and the limits of clearance. Use the basic hole system. The nominal shaft diameter is 0.800 in.
5. The base of a hydraulic cylinder is mounted to the frame of a machine by means of a clevis joint, which allows the cylinder to oscillate during operation. The clevis must provide reliable motion, but some play is acceptable. For the clevis holes and the pin, which have a nominal diameter of 1.25 in, specify the class of fit, the limits of size, and the limits of clearance. Use the basic hole system.
6. A heavy door on a furnace swings upward to permit access to the interior of the furnace. During various modes of operation, the door and its hinge assembly see temperatures of 50°F to 500°F. The nominal diameter of each hinge pin is 4.00 in. For the hinge and its pin, specify the class of fit, the limits of size, and the limits of clearance. Use the basic shaft system.
7. The stage of an industrial microscope pivots to permit the mounting of a variety of shapes. The stage must move with precision and reliability under widely varying temperatures. For the pin mount for the stage, having a nominal diameter of 0.750 in, specify the class of fit, the limits of size, and the limits of clearance. Use the basic hole system.
8. An advertising sign is suspended from a horizontal rod and is allowed to swing under wind forces. The rod is to be commercial bar stock, nominally 1.50 in in diameter. For the mating hinges on the sign, specify the class of fit,

the limits of size, and the limits of clearance. Use the basic shaft system.

9. For any of Problems 1–8, make a diagram of the tolerances, fits, and clearances for your specifications, using a method similar to that in Figure 13–4.

Force Fits

10. A spacer made of SAE 1020 hot-rolled steel is in the form of a hollow cylinder with a nominal inside diameter of 3.25 in and an outside diameter of 4.000 in. It is to be mounted on a solid steel shaft with a heavy force fit. Specify the dimensions for the shaft and sleeve, and compute the stress in the sleeve after installation. Use the basic hole system.
11. A bronze bushing, with an inside diameter of 3.50 in and a nominal outside diameter of 4.00 in, is pressed into a steel sleeve having an outside diameter of 4.50 in. For an FN3 class of fit, specify the dimensions of the parts, the limits of interference, and the stresses created in the bushing and the sleeve. Use the basic hole system.
12. It is proposed to install a steel rod with a nominal diameter of 3.00 in in a hole of an aluminum cylinder with an

outside diameter of 5.00 in, with an FN5 force fit. Would this be satisfactory?

13. The allowable compressive stress in the wall of an aluminum tube is 8500 psi. Its outside diameter is 2.000 in, and the wall thickness is 0.065 in. What is the maximum amount of interference between this tube and a steel sleeve that can be tolerated? The sleeve has an outside diameter of 3.00 in.
14. To what temperature would the spacer of Problem 10 have to be heated so that it would slide over the shaft with a clearance of 0.002 in? The ambient temperature is 75°F.
15. For the bronze bushing and the steel sleeve of Problem 11, the ambient temperature is 75°F. How much would the bronze bushing shrink if placed in a freezer at -220°F? Then to what temperature would the steel sleeve have to be heated to provide a clearance of 0.004 in for assembly on the cold bushing?
16. For the bronze bushing of Problem 11, what would be the final inside diameter after assembly into the sleeve if it started with an inside diameter of 3.5000 in?

ROLLING CONTACT BEARINGS

The Big Picture

You Are the Designer

- 14–1 Objectives of This Chapter
- 14–2 Types of Rolling Contact Bearings
- 14–3 Thrust Bearings
- 14–4 Mounted Bearings
- 14–5 Bearing Materials
- 14–6 Load/Life Relationship
- 14–7 Bearing Manufacturers' Data
- 14–8 Design Life
- 14–9 Bearing Selection: Radial Loads Only
- 14–10 Bearing Selection: Radial and Thrust Loads Combined
- 14–11 Bearing Selection from Manufacturers' Catalogs
- 14–12 Mounting of Bearings
- 14–13 Tapered Roller Bearings
- 14–14 Practical Considerations in the Application of Bearings
- 14–15 Importance of Oil Film Thickness in Bearings
- 14–16 Life Prediction under Varying Loads
- 14–17 Bearing Designation Series

THE BIG PICTURE

Rolling Contact Bearings

Discussion Map

- *Bearings* are used to support a load while permitting relative motion between two elements of a machine.
- Some bearings use rolling elements, such as spherical balls or cylindrical or tapered rollers. This results in a very low coefficient of friction.

This chapter presents information about such bearings and gives methods for analyzing bearings and for selecting commercially available bearings.

Discover

Look for examples of bearings on machines, cars, trucks, bicycles, and consumer products.

Describe the bearings, including how they are installed and what kinds of forces are exerted on them.

The purpose of a bearing is to support a load while permitting relative motion between two elements of a machine. The term *rolling contact bearings* refers to the wide variety of bearings that use spherical balls cylindrical rollers, or some other type of roller between the stationary and the moving elements. The most common use for bearings is to support a rotating shaft, resisting purely radial loads, or a combination of radial and axial (thrust) loads. Some bearings are

designed to carry only thrust loads. Most bearings are used in applications involving rotation, but some are used in linear motion applications.

The components of a typical rolling contact bearing are the inner race, the outer race, and the rolling elements. Figure 14–1 shows the common single-row, deep-groove ball bearing. Usually the outer race is stationary and is held by the housing of the machine. The inner race is pressed onto the rotating shaft and thus

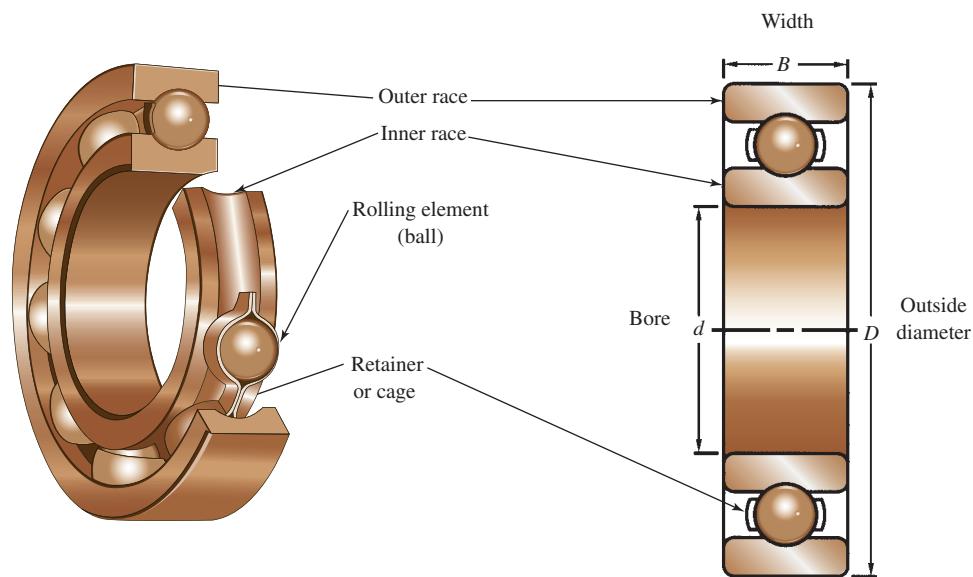


FIGURE 14-1 Single-row, deep-groove ball bearing

rotates with it. Then the balls roll between the outer and inner races. The load path is from the shaft, to the inner race, to the balls, to the outer race, and finally to the housing. The presence of the balls allows a very smooth, low-friction rotation of the shaft. The typical coefficient of friction for a rolling contact bearing is approximately 0.001 to 0.005. These values reflect only the rolling elements themselves and the means of retaining them in the bearing. The presence of seals, excessive lubricant, or unusual loading increases these values.

Look for consumer products, industrial machinery, or transportation equipment (cars, trucks, bicycles, and so on), and identify any uses of rolling contact bearings. Be sure that the machine is turned off, and then try to gain access to the mechanical drive shafts used to transmit power from a motor or an engine to some moving parts of the machine. Are these shafts supported in ball or roller bearings? Or are they supported in plain surface bearings in which the shaft passes through cylindrical members called *bushings* or *bearings*, typically with lubricants present between the rotating shaft and the stationary bearing? Plain surface bearings are discussed in Chapter 16.

For the shafts that are supported in ball or roller bearings, describe the bearing. How is it mounted on the shaft? How is it mounted in the housing of the machine? Can you identify what kinds of forces are acting on the bearing and in what directions they act? Are the forces directed radially toward the centerline of the shaft? Is there any force that acts parallel to the axis of the shaft? Compare the bearings that you find with the photographs that are in this chapter. Which varieties of bearings have you found? Measure or estimate the physical size of the bearings, particularly the diameter of the bore that is in contact with the shaft, the outside diameter, and the width. Can you see the rolling elements—balls or rollers? If so, sketch them and estimate their diameters and/or lengths. Are any of the rolling elements tapered rollers like those shown later in this chapter in Figure 14-7?

When you complete this chapter, you will be able to identify several kinds of rolling contact bearings and specify suitable bearings to carry specified loads. You will also be able to apply such bearings properly, planning for their installation on shafts and in housings.

YOU ARE THE DESIGNER

In Chapter 12, you were the designer of a shaft that was rotating at 600 rpm carrying two gears as a part of a power transmission system. Figures 12-1 and 12-2 showed the basic layout that was proposed. The shaft was designed to be supported on two bearings at points *B* and *D*. Then, in Example Problem 12-1, we completed the force analysis by computing the forces applied to the shaft by the gears and then computing the reactions at the bearings. Figure 12-12 showed the results, summarized here:

$$R_{Bx} = 458 \text{ lb} \quad R_{By} = 4620 \text{ lb}$$

$$R_{Dx} = 1223 \text{ lb} \quad R_{Dy} = 1680 \text{ lb}$$

where *x* refers to the horizontal direction and *y* refers to the vertical direction. All forces on the bearings are in the radial direction. Your task now is to specify suitable rolling contact bearings for the shaft to withstand those forces and transfer them from the shaft to the housing of the speed reducer.

What kind of bearing should be selected? How do the forces just identified affect the choice? What life expectancy is reasonable for the bearings, and how does that affect the selection of the bearings? What size should be specified? How are the bearings to be installed on the shaft, and how does that affect the detailed design of the shaft? What limit dimensions should be defined for the

bearing seats on the shaft? How is the bearing to be located axially on the shaft? How is it to be installed in the housing and located there? How is lubrication to be provided for the bearings? Is there a need for shields and seals to keep contaminants out of the bearings? The information in this chapter will help you make these and other design decisions.

14-1 OBJECTIVES OF THIS CHAPTER

After completing this chapter, you will be able to:

1. Identify the types of rolling contact bearings that are commercially available, and select the appropriate type for a given application, considering the manner of loading and installation conditions.
2. Use the relationship between forces on bearings and the life expectancy for the bearings to determine critical bearing selection factors.
3. Use manufacturers' data for the performance of ball bearings to specify suitable bearings for a given application.
4. Recommend appropriate values for the design life of bearings.
5. Compute the *equivalent load* on a bearing corresponding to combinations of radial and thrust loads applied to it.
6. Specify mounting details for bearings that affect the design of the shaft onto which the bearing is to be seated and the housing into which it is to be installed.
7. Compute the equivalent loads on tapered roller bearings.
8. Describe the special design of thrust bearings.
9. Describe several types of commercially available mounted bearings and their application to machine design.
10. Understand certain practical considerations involved in the application of bearings, including lubrication, sealing, limiting speeds, bearing tolerance classes, and standards related to the manufacture and application of bearings.
11. Consider the effects of varying loads on the life expectancy and specification of bearings.

14-2 TYPES OF ROLLING CONTACT BEARINGS

Here we will discuss seven different types of rolling contact bearings and the applications in which each is typically used. Many variations on the designs shown are available. As each is discussed, refer to Table 14-1 for a comparison of the performance relative to the others.

Radial loads act toward the center of the bearing along a radius. Such loads are typical of those created by power transmission elements on shafts such as spur gears, V-belt drives, and chain drives. *Thrust loads* are those that act parallel to the axis of the shaft. The axial components of the forces on helical gears, worms and wormgears, and bevel gears are thrust loads. Also, bearings supporting shafts with vertical axes are subjected to thrust loads due to the weight of the shaft and the elements on the shaft as well as from axial operating forces. *Misalignment* refers to the angular deviation of the axis of the shaft at the bearing from the true axis of the bearing itself. An excellent rating for misalignment in Table 14-1 indicates that the bearing can accommodate up to 4.0° of angular deviation. A bearing with a fair rating can withstand up to 0.15° , while a poor rating indicates that rigid shafts with less than 0.05° of misalignment are required. Manufacturers' catalogs should be consulted for specific data. Check Internet sites 1–8.

Single-Row, Deep-Groove Ball Bearing

Sometimes called *Conrad bearings*, the single-row, deep-groove ball bearing (Figure 14-1) is what most people think of when the term *ball bearing* is used. The inner race is typically pressed on the shaft at the bearing seat with a slight interference fit to ensure that it rotates with the shaft. The spherical rolling elements, or balls, roll in a deep groove in both the inner and the outer races. The spacing of the balls is maintained by retainers or "cages." Although designed primarily for radial load-carrying

TABLE 14-1 Comparison of Bearing Types

| Bearing type | Radial load capacity | Thrust load capacity | Misalignment capability |
|------------------------------|----------------------|----------------------|-------------------------|
| Single-row, deep-groove ball | Good | Fair | Fair |
| Double-row, deep-groove ball | Excellent | Good | Fair |
| Angular contact | Good | Excellent | Poor |
| Cylindrical roller | Excellent | Poor | Fair |
| Needle | Excellent | Poor | Poor |
| Spherical roller | Excellent | Fair/good | Excellent |
| Tapered roller | Excellent | Excellent | Poor |



FIGURE 14-2 Double-row, deep-groove ball bearing

capacity, the deep groove allows it to carry a fairly sizable thrust load. The thrust load would be applied to one side of the inner race by a shoulder on the shaft. The load would pass across the side of the groove, through the ball, to the opposite side of the outer race, and then to the housing. The radius of the ball is slightly smaller than the radius of the groove to allow free rolling of the balls. The contact between a ball and the race is theoretically at a point, but it is actually a small circular area because of the deformation of the elements. Because the load is carried on a small area, very high local contact stresses occur. To increase the capacity of a single-row bearing, a bearing with a greater number of balls, or larger balls operating in larger diameter races, should be used.

Double-Row, Deep-Groove Ball Bearing

Adding a second row of balls (Figure 14-2) increases the radial load-carrying capacity of the deep-groove type of bearing compared with the standard single-row design because more balls share the load. Thus, a greater load can be carried in the same space, or a given load can be carried in a smaller space. The greater width of double-row bearings often adversely affects the misalignment capability.

Angular Contact Ball Bearing

One side of each race in an angular contact bearing is higher to allow the accommodation of greater thrust loads compared with the standard single-row, deep-groove bearing. The sketch in Figure 14-3 shows the preferred angle of the resultant force (radial and thrust loads combined), with commercially available bearings having angles of 15° to 40°.

Cylindrical Roller Bearing

Replacing the spherical balls with cylindrical rollers (Figure 14-4), with corresponding changes in the design of the races, gives a greater radial load capacity. The pattern of contact between a roller and its race is theoretically a line, and it becomes a rectangular shape as the members deform under load. The resulting contact stress levels are lower than for equivalent-size ball bearings, allowing smaller bearings to carry a given load or a given size bearing to carry a higher load. Thrust load capacity is poor because any thrust load would be applied to the side

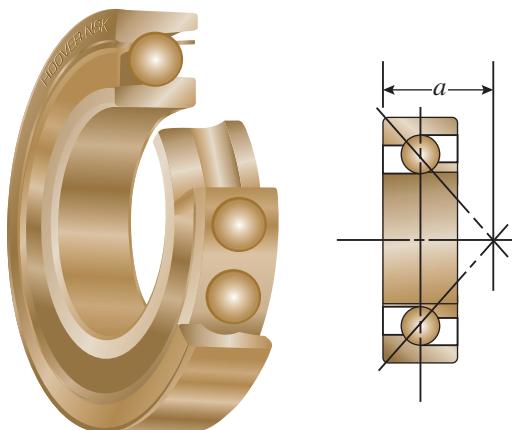


FIGURE 14-3 Angular contact ball bearing



FIGURE 14-4 Cylindrical roller bearing


of the rollers, causing rubbing, not true rolling motion. It is recommended that *no* thrust load be applied. Roller bearings are often fairly wide, giving them only fair ability to accommodate angular misalignment.

Needle Bearing


Needle bearings (Figure 14-5) are actually roller bearings, but they have much smaller diameter rollers, as you can see by comparing Figures 14-4 and 14-5. A smaller radial space is typically required for needle bearings to carry a given load than for any other type of rolling contact bearing. This makes it easier to design them into many types of equipment and components such as pumps, universal joints, precision instruments, and household appliances. The cam follower shown in Figure 14-5(b) is another example in which the antifriction operation of needle bearings can be built in with little radial space required. As with other roller bearings, thrust and misalignment capabilities are poor.



(a) Single- and double-row needle bearings

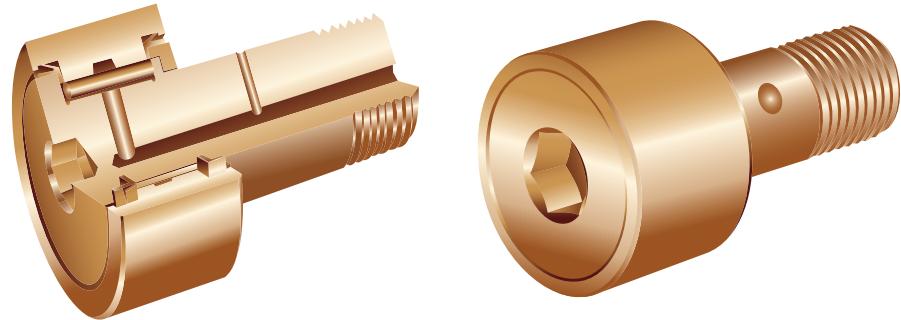**FIGURE 14-5** Needle bearings

(b) Needle bearings adapted to cam followers

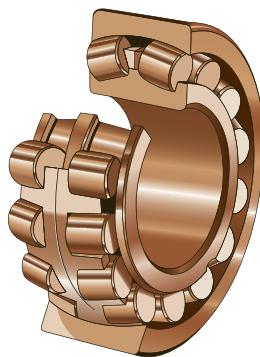**FIGURE 14-6** Spherical roller bearing**FIGURE 14-7** Tapered roller bearing

Spherical Roller Bearing

The spherical roller bearing (Figure 14–6) is one form of *self-aligning bearing*, so called because there is actual relative rotation of the outer race relative to the rollers and the inner race when angular misalignments occur. This gives the excellent rating for misalignment capability while retaining virtually the same ratings on radial load capacity.

Tapered Roller Bearing

Tapered roller bearings (Figure 14–7) are designed to take substantial thrust loads along with high radial loads, resulting in excellent ratings on both. They are often used in wheel bearings for vehicles and mobile equipment and in heavy-duty machinery having inherently high thrust loads. Section 14–13 gives additional information about their application. Figures 8–3, 9–31, 10–1, and 10–2 show tapered roller bearings applied in gear-type speed reducers.

14-3 THRUST BEARINGS

The bearings discussed so far in this chapter have been designed to carry radial loads or a combination of radial and thrust loads. Many machine design projects demand a bearing that resists only thrust loads, and several types of standard thrust bearings are commercially available. The same types of rolling elements are used: spherical balls, cylindrical rollers, and tapered rollers (see Figure 14–8).

Most thrust bearings can take little or no radial load. Then the design and the selection of such bearings are dependent only on the magnitude of the thrust load and the design life. The data for basic dynamic load rating and basic static load rating are reported in manufacturers' catalogs in the same way as they are for radial bearings.

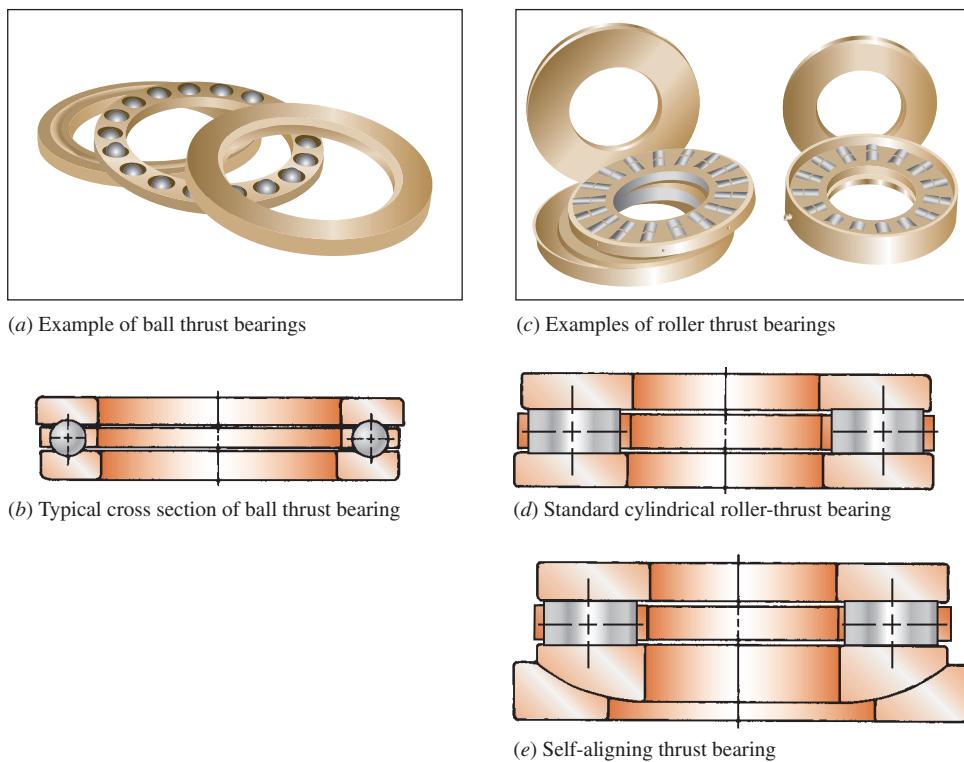


FIGURE 14-8 Thrust bearings

14-4 MOUNTED BEARINGS

In many types of heavy machines and special machines produced in small quantities, mounted bearings rather than unmounted bearings are selected. The mounted bearings, sometimes called housed bearings, provide a means of attaching the bearing unit directly to the frame of the machine with bolts rather than inserting it into a machined recess in a housing as is required in unmounted bearings.

Figure 14-9 shows the most common configuration for a mounted bearing: the *pillow block*. The housing is made from formed steel, cast iron, or cast steel, with

holes or slots provided for attachment during assembly of the machine, at which time alignment of the bearing unit is adjusted. The bearings themselves can be of virtually any of the types discussed in the preceding sections; ball, roller, tapered roller, or spherical roller. Misalignment capability is an important application consideration because of the conditions of use of such bearings. This capability is provided either in the bearing construction itself or in the housing as shown in Figure 14-9.

Because the bearing itself is similar to those already discussed, the selection process is also similar. Most

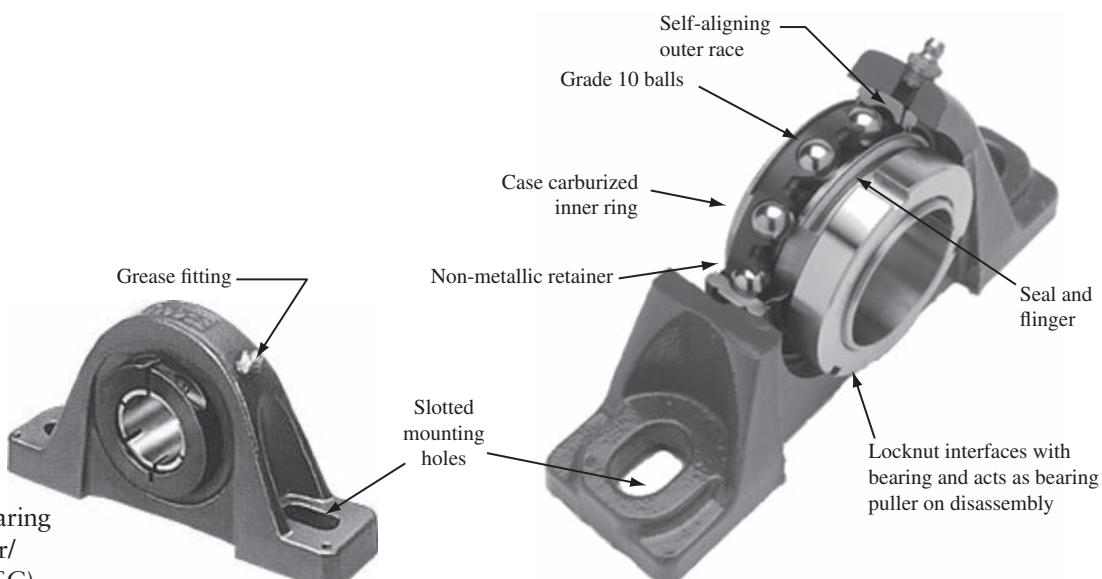


FIGURE 14-9 Ball bearing pillow block (Baldor/Dodge, Greenville, SC)

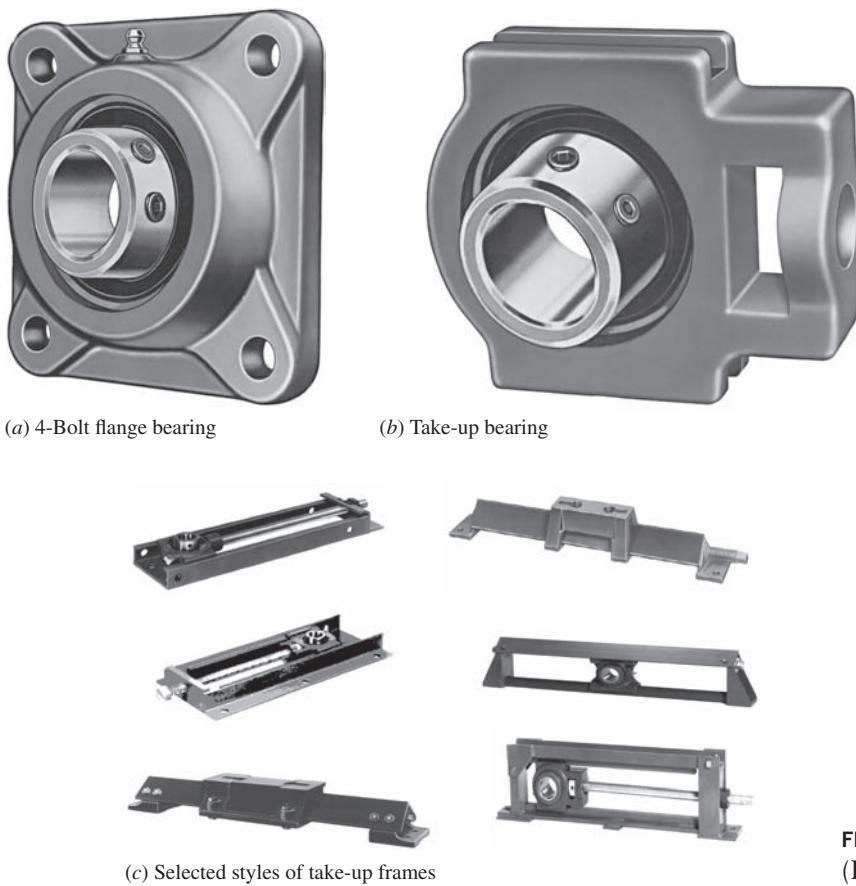


FIGURE 14-10 Forms of mounted bearings
(Baldor/Dodge, Greenville, SC)

catalogs provide extensive data listing the load-carrying capacity at specified rated life values. Internet site 7 includes an example.

Other forms of mounted bearings are shown in Figure 14-10. The *flange units* are designed to be mounted on the vertical side frames of machines, holding horizontal shafts. Again, several bearing types and sizes are available. The term *take-up unit* refers to a bearing mounted in a housing, which in turn is mounted in a frame that allows movement of the bearing with the shaft in place. Used on conveyors, chain drives, belt drives, and similar applications, the take-up unit permits adjustment of the center distance of the drive components at the time of installation and during operation to accommodate wear or stretch of parts of the assembly.

14-5 BEARING MATERIALS

The load applied to a rolling contact bearing passes through the outer race to the rolling elements (balls or rollers) and then to the inner race, resulting in forces exerted on very small areas of contact. Contact stresses of approximately 300 000 psi (2070 MPa) are not uncommon. To withstand such high stresses, the balls, rollers, and races are typically made from very hard, high-strength steel or ceramic. Other metallic materials used include some titanium/nickel alloys and Monel metal (alloys of primarily nickel, copper, and cobalt). Where lighter loads are encountered or when resistance to corrosion by

specific materials is needed, plastic bearings can be used. See Table 14-2 for properties of selected materials.

The most widely used bearing material is SAE 52100 steel having a very high carbon content of 0.95% to 1.10% along with 1.3% to 1.6% chromium, 0.25% to 0.45% manganese, 0.2% to 0.35% silicon, and other alloying elements in low, but controlled, amounts. Impurities are carefully minimized. The steel is through hardened to the range of 58 to 65 HRC to give it the ability to resist high contact stress. Some tool steels, particularly M1 and M50, are also used. Steel alloys such as SAE 3310, 4620, and 8620, case hardened by carburizing to achieve high surface hardness and a tough core, are sometimes used. Careful control of case depth is required to withstand critical subsurface stresses. Some more lightly loaded bearings and those exposed to corrosive environments are made from SAE 440C stainless steel.

Rolling elements, races, and other components can also be made from ceramic materials such as silicon nitride (Si_3N_4), zirconia oxide (ZrO_2), alumina oxide (Al_2O_3), and silicon carbide (SiC). Compared with typical bearing steels, these materials have much lower density, higher hardness, and higher modulus of elasticity values leading to lighter weight, lower wear, and higher stiffness. They typically have better corrosion resistance and can operate at much higher temperatures as well. Their applications include machine tools, railroad equipment, semiconductor manufacturing, aerospace devices, and any equipment operating at high temperatures.

TABLE 14-2 Comparison of Bearing Materials

| Property | Unit | Steels | | Titanium/Nickel | | Cermics | | | Monel | Plastic |
|-------------------------|---------------------|---------------|-----------------|-----------------|--|---------------------------------|--|---------------------|-------------|----------------------|
| | | Bearing Steel | Stainless Steel | Nitinol 60NiTi | Silicon Nitride Si ₃ N ₄ | Zirconia Oxide ZrO ₂ | Alumina Oxide Al ₂ O ₃ | Silicon Carbide SiC | K-500 Metal | Polyamide (Nylon 66) |
| | | 52 100 | 440C | 60NiTi | Si ₃ N ₄ | ZrO ₂ | Al ₂ O ₃ | SiC | | |
| Density | kg/m ³ | 7680 | 7750 | 6700 | 3230 | 6050 | 3920 | 3120 | 8434 | 1360 |
| | lbm/ft ³ | 480 | 484 | 418 | 202 | 378 | 245 | 195 | 527 | 85 |
| Modulus of elasticity | GPa | 207 | 200 | 114 | 300 | 210 | 340 | 440 | 179 | 4.2 |
| | ksi | 30 000 | 29 000 | 16 500 | 43 500 | 30 500 | 49 300 | 63 800 | 25 950 | 610 |
| Hardness | Vickers | 700 | 700 | 650 | 1500 | 1200 | 1650 | 2800 | 263 | — |
| Flexural strength | MPa | 2240 | 1930 | 900 | 450 | 210 | 230 | 380 | 965 | 82 |
| | ksi | 325 | 280 | 131 | 65 | 31 | 33 | 55 | 140 | 11.9 |
| Maximum use temperature | °C | 300 | 350 | 400 | 1050 | 750 | 1500 | 1700 | 315 | 130 |
| | °F | 570 | 660 | 750 | 1920 | 1380 | 2730 | 3100 | 600 | 270 |

Note: Data taken from a variety of sources and are representative only. Actual properties highly dependent on specific composition, processing, thermal treatment, and form.

Ceramics can be used for all bearing elements (balls, rollers, races, cages) or hybrid designs consisting of ceramic rolling elements in steel races with steel or

polymeric cages. Figure 14–11 shows examples of full ceramic bearings in radial ball type and in spherical ball type. Note that silicon nitride is shiny black, zirconia oxide is shiny white, alumina oxide is dull white, and silicon carbide is dull black. Internet site 1 shows ceramic bearings with bores as small as 3.0 mm (0.1181 in) and up to 50 mm (1.9685 in). Inch bore sizes are as small as 0.0937 in (2.38 mm) up to 1.25 in (31.75 mm).

Alloys of titanium and nickel, sometimes called Nitinol, are applied where their anti-corrosive properties are desirable. The lower density compared with steel is also advantageous. One alloy is listed in Table 14–2. Development continues for other titanium alloys.

Monel metal is an alloy of primarily nickel, copper, and cobalt, with smaller amounts of iron, silicon, manganese, carbon, aluminum, titanium, and sulfur. Its resistance to fresh water, sea water, most acids, calcium chloride, and petroleum oils make it attractive to marine applications, chemical plants, oil and gas industries, and water and wastewater treatment facilities. One alloy is listed in Table 14–2. (See Internet site 12.)

Bearings made from plastics are typically used for lightly loaded, moderate precision applications requiring good corrosion resistance and light weight. Several types of plastic formulations can be used such as acetal, polyamide (PA, nylon), and thermoplastic polyester (PBT). Hybrid designs using plastic housing elements with stainless steel rolling balls or rollers are often used. One glass-reinforced polyamide material is listed in Table 14–2. (See Internet sites 13 and 14 for some suppliers.)



(a) Full ceramic—radial ball bearings



(b) Full ceramic—spherical ball bearings

FIGURE 14-11 Ceramic bearings in radial ball and spherical ball forms (Boca Bearings Company, Delray Beach, FL)

14-6 LOAD/LIFE RELATIONSHIP

Despite using steels with very high strength, all bearings have a finite life and will eventually fail due to fatigue because of the high contact stresses. But, obviously, the lighter the load, the longer the life, and vice versa. The

relationship between load, P , and life, L , for rolling contact bearings can be stated as

◇ Relationship between Bearing Load and Life

$$\frac{L_2}{L_1} = \left(\frac{P_1}{P_2} \right)^k \quad (14-1)$$

where $k = 3.00$ for ball bearings

$k = 3.33$ for roller bearings

14-7 BEARING MANUFACTURERS' DATA

The selection of a rolling contact bearing from a manufacturer's catalog involves considerations of load-carrying capacity and the geometry of the bearing. Table 14-3 shows data for three classes of single-row, deep-groove ball bearings that are similar to those in manufacturers' catalogs. *It is essential that published data from specific manufacturers be used in any real application.*

Standard bearings are available in several classes, typically extremely light, extra-light, light, medium, and heavy classes. The designs differ in the size and number of load-carrying elements (balls or rollers) in the bearing. The bearing number usually indicates the class and the size of the bore of the bearing. Most bearings are manufactured with nominal dimensions in metric units, and the last two digits of the bearing number indicate the nominal bore size. The bore-size convention can be seen from the data in Table 14-3. Note that for bore sizes 04 and above, the nominal bore dimension in millimeters is five times the last two digits in the bearing number.

The number preceding the last two digits indicates the class. Typically, the 100 series is for extra-light, 200 for light, 300 for medium, and 400 for heavy-duty. Figure 14-12 shows the relative size of the different classes of bearings. The three digits may be preceded by others to indicate a design code for the type of bearing. In Table 14-3, the leading number 6 indicates *single-row, deep-groove ball bearings*.

Note also in Figure 14-12 that the designation number for each of the bearings shown has the last two digits of 00. Then note that each bearing shown has the same inside diameter, or bore, of 10 mm. The overall sizes and outside diameters of the heavier series are progressively larger allowing them to carry higher loads.

Inch-type bearings are available with bores ranging from 0.125 through 15.000 in.

Considering load-carrying capacity first, the data reported for each bearing design will include a basic dynamic load rating, C , and a basic static load rating, C_o .

The *basic static load rating*, C_o , is the load that the bearing can withstand without permanent deformation of any component. If this load is exceeded, the most probable result would be the indentation of one of the bearing races by the rolling elements. The deformation would be similar to that produced in the Brinell hardness test, and the failure is sometimes referred to as *brinelling*. Operation of the bearing after brinelling would be very noisy, and the impact loads on the indented area would produce rapid wear and progressive failure of the bearing.

To understand the *basic dynamic load rating*, C , it is necessary first to discuss the concept of the rated life of a bearing. Fatigue occurs over a large number of cycles of loading; for a bearing, that would be a large number of revolutions. Also, fatigue is a statistical phenomenon with considerable spread of the actual life of a group of bearings of a given design. The rated life is the standard means of reporting the results of many tests of bearings of a given design. It represents the life that 90% of the bearings would achieve successfully at a rated load. Note that it also represents the life that 10% of the bearings would not achieve. The rated life is thus typically referred to as the L_{10} life at the rated load.

Now the *basic dynamic load rating* C , can be defined as that load to which the bearings can be subjected while achieving a rated life (L_{10}) of 1 million revolutions (rev). Thus, the manufacturer supplies you with one set of data relating load and life. Equation (14-1) can be used to compute the expected life at any other load.

You should be aware that different manufacturers use other bases for the rated life. For example, some use 90 million cycles as the rated life and determine the rated load for that life. Also, some will report *average life*, for which 50% of the bearings will not survive. Thus, average life can be called the L_{50} life, not the L_{10} . Note that the average life is approximately five times as long as the L_{10} life. (See Internet site 2.) Be sure that you understand the basis for the ratings in any given catalog. (See References 2, 5, 6, 7, 10, and 12 for additional analysis of roller bearing performance.)

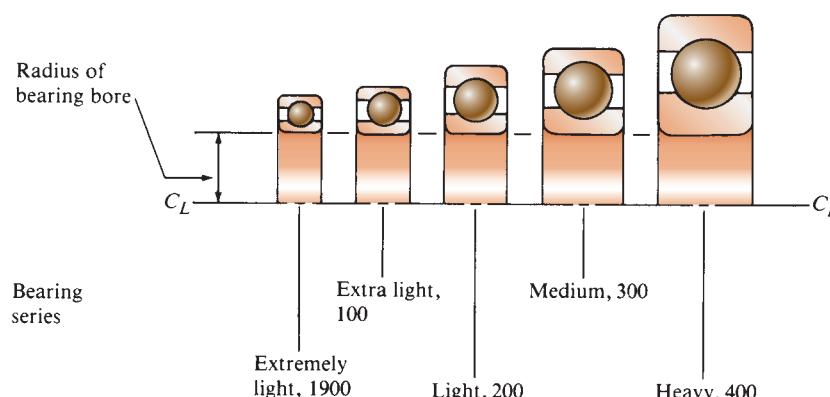


FIGURE 14-12 Relative sizes of bearing series

TABLE 14-3 Dimensions for Single Row, Deep-groove Ball Bearings

| Bearing number | Nominal bearing dimensions | | | | Basic load ratings | | | | Minimum shaft shoulder diameter, S | | | | Maximum housing shoulder diameter, H | | | | Bearing mass | |
|----------------|----------------------------|--------|-------------------|--------|--------------------|--------|---------------|-----------------|--------------------------------------|-----------------|-------------------------------|-------|--|-------|----|-------|--------------|-------|
| | Bore, d | | Outside dia., D | | Width, B | | Static, C_o | | Dynamic, C | | radius r_{max} ¹ | | in | | mm | | | |
| | mm | in | mm | in | mm | in | kN | lb _f | kN | lb _f | mm | in | mm | in | mm | in | | |
| 6000 | 10 | 0.3937 | 26 | 1.0236 | 8 | 0.3150 | 1.96 | 441 | 4.62 | 1039 | 0.3 | 0.012 | 12 | 0.472 | 24 | 0.945 | 0.019 | 0.042 |
| 6200 | 10 | 0.3937 | 30 | 1.1811 | 9 | 0.3543 | 2.36 | 531 | 5.07 | 1140 | 0.6 | 0.024 | 14 | 0.551 | 26 | 1.024 | 0.032 | 0.071 |
| 6300 | 10 | 0.3937 | 35 | 1.3780 | 11 | 0.4331 | 8.06 | 1812 | 3.40 | 764 | 0.6 | 0.024 | 14 | 0.551 | 31 | 1.220 | 0.053 | 0.117 |
| 6001 | 12 | 0.4724 | 28 | 1.1024 | 8 | 0.3150 | 2.36 | 531 | 5.07 | 1140 | 0.3 | 0.012 | 14 | 0.551 | 26 | 1.024 | 0.022 | 0.049 |
| 6201 | 12 | 0.4724 | 32 | 1.2598 | 10 | 0.3937 | 3.10 | 697 | 6.89 | 1549 | 0.6 | 0.024 | 16 | 0.630 | 28 | 1.102 | 0.037 | 0.082 |
| 6301 | 12 | 0.4724 | 37 | 1.4567 | 12 | 0.4724 | 4.15 | 933 | 9.75 | 2192 | 1.0 | 0.039 | 17 | 0.669 | 32 | 1.260 | 0.060 | 0.132 |
| 6002 | 15 | 0.5906 | 32 | 1.2598 | 9 | 0.3543 | 2.85 | 641 | 5.59 | 1257 | 0.3 | 0.012 | 17 | 0.669 | 30 | 1.181 | 0.030 | 0.066 |
| 6202 | 15 | 0.5906 | 35 | 1.3780 | 11 | 0.4331 | 3.75 | 843 | 7.80 | 1754 | 0.6 | 0.024 | 19 | 0.748 | 31 | 1.220 | 0.045 | 0.099 |
| 6302 | 15 | 0.5906 | 42 | 1.6535 | 13 | 0.5118 | 5.40 | 1214 | 11.40 | 2563 | 1.0 | 0.039 | 20 | 0.787 | 37 | 1.457 | 0.082 | 0.181 |
| 6003 | 17 | 0.6693 | 35 | 1.3780 | 10 | 0.3937 | 3.25 | 731 | 6.05 | 1360 | 0.3 | 0.012 | 19 | 0.748 | 33 | 1.299 | 0.039 | 0.086 |
| 6203 | 17 | 0.6693 | 40 | 1.5748 | 12 | 0.4724 | 4.75 | 1068 | 9.56 | 2149 | 0.6 | 0.024 | 21 | 0.827 | 36 | 1.417 | 0.065 | 0.143 |
| 6303 | 17 | 0.6693 | 47 | 1.8504 | 14 | 0.5512 | 6.55 | 1473 | 13.50 | 3035 | 1.0 | 0.039 | 22 | 0.866 | 42 | 1.654 | 0.120 | 0.265 |
| 6004 | 20 | 0.7874 | 42 | 1.6535 | 12 | 0.4724 | 5.00 | 1124 | 9.36 | 2104 | 0.6 | 0.024 | 24 | 0.945 | 38 | 1.496 | 0.069 | 0.152 |
| 6204 | 20 | 0.7874 | 47 | 1.8504 | 14 | 0.5512 | 6.55 | 1473 | 12.70 | 2855 | 1.0 | 0.039 | 25 | 0.984 | 42 | 1.654 | 0.110 | 0.243 |
| 6304 | 20 | 0.7874 | 52 | 2.0472 | 15 | 0.5906 | 7.80 | 1754 | 15.90 | 3575 | 1.0 | 0.039 | 27 | 1.063 | 45 | 1.772 | 0.140 | 0.309 |
| 6005 | 25 | 0.9843 | 47 | 1.8504 | 12 | 0.4724 | 6.55 | 1473 | 11.20 | 2518 | 0.6 | 0.024 | 29 | 1.142 | 43 | 1.693 | 0.080 | 0.176 |
| 6205 | 25 | 0.9843 | 52 | 2.0472 | 15 | 0.5906 | 7.80 | 1754 | 14.00 | 3147 | 1.0 | 0.039 | 30 | 1.181 | 47 | 1.850 | 0.130 | 0.287 |
| 6305 | 25 | 0.9843 | 62 | 2.4409 | 17 | 0.6693 | 11.60 | 2608 | 22.50 | 5058 | 1.0 | 0.039 | 32 | 1.260 | 55 | 2.165 | 0.230 | 0.507 |
| 6006 | 30 | 1.1811 | 55 | 2.1654 | 13 | 0.5118 | 8.30 | 1866 | 13.30 | 2990 | 1.0 | 0.039 | 35 | 1.378 | 50 | 1.969 | 0.160 | 0.353 |
| 6206 | 30 | 1.1811 | 62 | 2.4409 | 16 | 0.6299 | 11.2 | 2518 | 19.5 | 4384 | 1.0 | 0.039 | 35 | 1.378 | 57 | 2.244 | 0.200 | 0.441 |
| 6306 | 30 | 1.1811 | 72 | 2.8346 | 19 | 0.7480 | 16.0 | 3597 | 28.1 | 6317 | 1.0 | 0.039 | 37 | 1.457 | 65 | 2.559 | 0.350 | 0.772 |
| 6007 | 35 | 1.3780 | 62 | 2.4409 | 14 | 0.5512 | 10.2 | 2293 | 15.9 | 3575 | 1.0 | 0.039 | 40 | 1.575 | 57 | 2.244 | 0.160 | 0.353 |
| 6207 | 35 | 1.3780 | 72 | 2.8346 | 17 | 0.6693 | 15.3 | 3440 | 25.5 | 5733 | 1.0 | 0.039 | 42 | 1.654 | 65 | 2.559 | 0.290 | 0.639 |
| 6307 | 35 | 1.3780 | 80 | 3.1496 | 21 | 0.8268 | 19.0 | 4272 | 33.2 | 7464 | 1.5 | 0.059 | 43 | 1.693 | 72 | 2.835 | 0.460 | 1.014 |
| 6008 | 40 | 1.5748 | 68 | 2.6772 | 15 | 0.5906 | 11.6 | 2608 | 16.8 | 3777 | 1.0 | 0.039 | 45 | 1.772 | 63 | 2.480 | 0.190 | 0.419 |
| 6208 | 40 | 1.5748 | 80 | 3.1496 | 18 | 0.7087 | 19.0 | 4272 | 30.7 | 6902 | 1.0 | 0.039 | 47 | 1.850 | 73 | 2.874 | 0.370 | 0.816 |
| 6308 | 40 | 1.5748 | 90 | 3.5433 | 23 | 0.9055 | 24.0 | 5396 | 41.0 | 9218 | 1.5 | 0.059 | 48 | 1.890 | 82 | 3.228 | 0.630 | 1.389 |

TABLE 14-3 Dimensions for Single Row, Deep-groove Ball Bearings (*continued*)

| Bearing number | Nominal bearing dimensions | | | | Basic load ratings | | | | Minimum shaft shoulder diameter, S | | | | Maximum housing shoulder diameter, H | | | | | |
|----------------|----------------------------|-------------------|------------|---------------|--------------------|--------------------------------|--------|--------|--------------------------------------|--------|-----|-------|--|-------|-----------------|-------|-------|-------|
| | Bore, d | Outside dia., D | Width, B | Static, C_0 | Dynamic, C | radius, r_{max} ¹ | fillet | in | mm | in | mm | in | mm | kg | lb _m | | | |
| 6009 | 45 | 1.7717 | 75 | 2.9528 | 16 | 0.6299 | 14.6 | 3282 | 20.8 | 4676 | 1.0 | 0.039 | 50 | 1.969 | 70 | 2.756 | 0.250 | 0.551 |
| 6209 | 45 | 1.7717 | 85 | 3.3465 | 19 | 0.7480 | 21.6 | 4856 | 33.2 | 7464 | 1.0 | 0.039 | 52 | 2.047 | 78 | 3.071 | 0.410 | 0.904 |
| 6309 | 45 | 1.7717 | 100 | 3.9370 | 25 | 0.9843 | 31.5 | 7082 | 52.7 | 11 848 | 1.5 | 0.059 | 53 | 2.087 | 92 | 3.622 | 0.830 | 1.830 |
| 6010 | 50 | 1.9685 | 80 | 3.1496 | 16 | 0.6299 | 16.0 | 3597 | 21.6 | 4856 | 1.0 | 0.039 | 55 | 2.165 | 75 | 2.953 | 0.260 | 0.573 |
| 6210 | 50 | 1.9685 | 90 | 3.5433 | 20 | 0.7874 | 23.2 | 5216 | 35.1 | 7891 | 1.0 | 0.039 | 57 | 2.244 | 83 | 3.268 | 0.460 | 1.014 |
| 6310 | 50 | 1.9685 | 110 | 4.3307 | 27 | 1.0630 | 38.0 | 8543 | 61.8 | 13 894 | 2.0 | 0.079 | 59 | 2.323 | 101 | 3.976 | 1.050 | 2.315 |
| 6011 | 55 | 2.1654 | 90 | 3.5433 | 18 | 0.7087 | 21.2 | 4766 | 28.1 | 6317 | 1.0 | 0.039 | 62 | 2.441 | 83 | 3.268 | 0.390 | 0.860 |
| 6211 | 55 | 2.1654 | 100 | 3.9370 | 21 | 0.8268 | 29.0 | 6520 | 43.6 | 9802 | 1.5 | 0.059 | 63 | 2.480 | 92 | 3.622 | 0.610 | 1.345 |
| 6311 | 55 | 2.1654 | 120 | 4.7244 | 29 | 1.1417 | 45.0 | 10 117 | 71.5 | 16 075 | 2.0 | 0.079 | 64 | 2.520 | 111 | 4.370 | 1.350 | 2.977 |
| 6012 | 60 | 2.3622 | 95 | 3.7402 | 18 | 0.7087 | 23.2 | 5216 | 29.6 | 6655 | 1.0 | 0.039 | 67 | 2.638 | 88 | 3.465 | 0.420 | 0.926 |
| 6212 | 60 | 2.3622 | 110 | 4.3307 | 22 | 0.8661 | 32.5 | 7307 | 47.5 | 10 679 | 1.5 | 0.059 | 68 | 2.677 | 102 | 4.016 | 0.780 | 1.720 |
| 6312 | 60 | 2.3622 | 130 | 5.1181 | 31 | 1.2205 | 52.0 | 11 691 | 81.9 | 18 413 | 2.0 | 0.079 | 71 | 2.795 | 119 | 4.685 | 1.700 | 3.749 |
| 6013 | 65 | 2.5591 | 100 | 3.9370 | 18 | 0.7087 | 25.0 | 5621 | 30.7 | 6902 | 1.0 | 0.039 | 72 | 2.835 | 93 | 3.661 | 0.440 | 0.970 |
| 6213 | 65 | 2.5591 | 120 | 4.7244 | 23 | 0.9055 | 40.5 | 9105 | 55.9 | 12 567 | 1.5 | 0.059 | 73 | 2.874 | 112 | 4.409 | 0.990 | 2.183 |
| 6313 | 65 | 2.5591 | 140 | 5.5118 | 33 | 1.2992 | 60.0 | 13 489 | 92.3 | 20 751 | 2.0 | 0.079 | 76 | 2.992 | 129 | 5.079 | 2.100 | 4.631 |
| 6014 | 70 | 2.7559 | 110 | 4.3307 | 20 | 0.7874 | 31.0 | 6969 | 37.7 | 8476 | 1.0 | 0.039 | 77 | 3.031 | 103 | 4.055 | 0.600 | 1.323 |
| 6214 | 70 | 2.7559 | 125 | 4.9213 | 24 | 0.9449 | 45.0 | 10 117 | 60.5 | 13 602 | 1.5 | 0.059 | 78 | 3.071 | 117 | 4.606 | 1.050 | 2.315 |
| 6314 | 70 | 2.7559 | 150 | 5.9055 | 35 | 1.3780 | 68.0 | 15 288 | 104.0 | 23 381 | 2.0 | 0.079 | 81 | 3.189 | 139 | 5.472 | 2.500 | 5.513 |
| 6015 | 75 | 2.9528 | 115 | 4.5276 | 20 | 0.7874 | 33.5 | 7531 | 39.7 | 8925 | 1.0 | 0.039 | 82 | 3.228 | 108 | 4.252 | 0.640 | 1.411 |
| 6215 | 75 | 2.9528 | 130 | 5.1181 | 25 | 0.9843 | 49.0 | 11 016 | 66.3 | 14 906 | 1.5 | 0.059 | 83 | 3.268 | 122 | 4.803 | 1.200 | 2.646 |
| 6315 | 75 | 2.9528 | 160 | 6.2992 | 37 | 1.4567 | 76.5 | 17 199 | 114.0 | 25 629 | 2.0 | 0.079 | 86 | 3.386 | 149 | 5.866 | 3.000 | 6.615 |
| 6016 | 80 | 3.1496 | 125 | 4.9213 | 22 | 0.8661 | 40.0 | 8993 | 47.5 | 10 679 | 1.0 | 0.039 | 87 | 3.425 | 118 | 4.646 | 0.850 | 1.874 |
| 6216 | 80 | 3.1496 | 140 | 5.5118 | 26 | 1.0236 | 55.0 | 12 365 | 70.2 | 15 782 | 2.0 | 0.079 | 89 | 3.504 | 131 | 5.157 | 1.400 | 3.087 |
| 6316 | 80 | 3.1496 | 170 | 6.6929 | 39 | 1.5354 | 86.5 | 19 447 | 124.0 | 27 878 | 2.0 | 0.079 | 91 | 3.583 | 159 | 6.260 | 3.600 | 7.938 |

(continued)

TABLE 14-3 Dimensions for Single Row, Deep-groove Ball Bearings (continued)

| Bearing number | Nominal bearing dimensions | | | | Basic load ratings | | | | Minimum shaft shoulder diameter, S | | | | Maximum housing shoulder diameter, H | | | | Bearing mass | |
|----------------|----------------------------|--------|-------------------|---------|--------------------|--------|---------------|-----------------|--------------------------------------|-----------------|-------------------------------|-------|--|-------|-----|--------|--------------|--------|
| | Bore, d | | Outside dia., D | | Width, B | | Static, C_o | | Dynamic, C | | radius r_{max} ¹ | | in | | mm | | | |
| | mm | in | mm | in | mm | in | kg | lb _f | kg | lb _f | mm | in | mm | in | mm | in | | |
| 6017 | 85 | 3.3465 | 130 | 5.1181 | 22 | 0.8661 | 43.0 | 9667 | 49.4 | 11 106 | 1.0 | 0.039 | 92 | 3.622 | 123 | 4.843 | 0.890 | 1.962 |
| 6217 | 85 | 3.3465 | 150 | 5.9055 | 28 | 1.1024 | 64.0 | 14.388 | 83.2 | 18 705 | 2.0 | 0.079 | 94 | 3.701 | 141 | 5.551 | 1.800 | 3.969 |
| 6317 | 85 | 3.3465 | 180 | 7.0866 | 41 | 1.6142 | 96.5 | 21.695 | 133.0 | 29 901 | 2.5 | 0.098 | 98 | 3.858 | 167 | 6.575 | 4.250 | 9.371 |
| 6018 | 90 | 3.5433 | 140 | 5.5118 | 24 | 0.9449 | 50.0 | 11.241 | 58.5 | 13 152 | 1.5 | 0.059 | 98 | 3.858 | 132 | 5.197 | 1.150 | 2.536 |
| 6218 | 90 | 3.5433 | 160 | 6.2992 | 30 | 1.1811 | 73.5 | 16.524 | 95.6 | 21 493 | 2.0 | 0.079 | 99 | 3.898 | 151 | 5.945 | 2.150 | 4.741 |
| 6318 | 90 | 3.5433 | 190 | 7.4803 | 43 | 1.6929 | 108.0 | 24.281 | 143.0 | 32 149 | 2.5 | 0.098 | 103 | 4.055 | 177 | 6.969 | 4.900 | 10.805 |
| 6019 | 95 | 3.7402 | 145 | 5.7087 | 24 | 0.9449 | 54.0 | 12.140 | 60.5 | 13 602 | 1.5 | 0.059 | 103 | 4.055 | 137 | 5.394 | 1.200 | 2.646 |
| 6219 | 95 | 3.7402 | 170 | 6.6929 | 32 | 1.2598 | 81.5 | 18.323 | 108.0 | 24 281 | 2.0 | 0.079 | 106 | 4.173 | 159 | 6.260 | 2.600 | 5.733 |
| 6319 | 95 | 3.7402 | 200 | 7.8740 | 45 | 1.7717 | 118.0 | 26.529 | 153.0 | 34 397 | 2.5 | 0.098 | 108 | 4.252 | 187 | 7.362 | 5.650 | 12.458 |
| 6020 | 100 | 3.9370 | 150 | 5.9055 | 24 | 0.9449 | 54.0 | 12.140 | 60.5 | 13 602 | 1.5 | 0.059 | 108 | 4.252 | 142 | 5.591 | 1.250 | 2.756 |
| 6220 | 100 | 3.9370 | 180 | 7.0866 | 34 | 1.3386 | 93.0 | 20.908 | 124.0 | 27 878 | 2.0 | 0.079 | 111 | 4.370 | 169 | 6.654 | 3.150 | 6.946 |
| 6320 | 100 | 3.9370 | 215 | 8.4646 | 47 | 1.8504 | 140.0 | 31.475 | 174.0 | 39 119 | 2.5 | 0.098 | 113 | 4.449 | 202 | 7.953 | 7.000 | 15.435 |
| 6021 | 105 | 4.1339 | 160 | 6.2992 | 26 | 1.0236 | 65.5 | 14.726 | 72.8 | 16 367 | 2.0 | 0.079 | 114 | 4.488 | 151 | 5.945 | 1.600 | 3.528 |
| 6221 | 105 | 4.1339 | 190 | 7.4803 | 36 | 1.4173 | 104.0 | 23.381 | 133.0 | 29 901 | 2.0 | 0.079 | 116 | 4.567 | 179 | 7.047 | 3.700 | 8.159 |
| 6321 | 105 | 4.1339 | 225 | 8.8583 | 49 | 1.9291 | 153.0 | 34.397 | 182.0 | 40 917 | 2.5 | 0.098 | 118 | 4.646 | 212 | 8.346 | 8.250 | 18.191 |
| 6022 | 110 | 4.3307 | 170 | 6.6929 | 28 | 1.1024 | 73.5 | 16.524 | 81.9 | 18 413 | 2.0 | 0.079 | 119 | 4.685 | 161 | 6.339 | 1.950 | 4.300 |
| 6222 | 110 | 4.3307 | 200 | 7.8740 | 38 | 1.4961 | 118.0 | 26.529 | 143.0 | 32 149 | 2.0 | 0.079 | 121 | 4.764 | 189 | 7.441 | 4.350 | 9.592 |
| 6322 | 110 | 4.3307 | 240 | 9.4488 | 50 | 1.9685 | 180.0 | 40.468 | 203.0 | 45 638 | 2.5 | 0.098 | 123 | 4.843 | 227 | 8.937 | 9.550 | 21.058 |
| 6024 | 120 | 4.7244 | 180 | 7.0866 | 28 | 1.1024 | 80.0 | 17.986 | 85.2 | 19 155 | 2.0 | 0.079 | 129 | 5.079 | 171 | 6.732 | 2.050 | 4.520 |
| 6224 | 120 | 4.7244 | 215 | 8.4646 | 40 | 1.5748 | 118.0 | 26.529 | 146.0 | 32 824 | 2.0 | 0.079 | 131 | 5.157 | 204 | 8.031 | 5.150 | 11.356 |
| 6324 | 120 | 4.7244 | 260 | 10.2362 | 55 | 2.1654 | 186.0 | 41.817 | 208.0 | 46 763 | 2.5 | 0.098 | 133 | 5.236 | 247 | 9.724 | 14.500 | 31.973 |
| 6026 | 130 | 5.1181 | 200 | 7.8740 | 33 | 1.2992 | 100.0 | 22.482 | 106.0 | 23 831 | 2.0 | 0.079 | 139 | 5.472 | 191 | 7.520 | 3.150 | 6.946 |
| 6226 | 130 | 5.1181 | 230 | 9.0551 | 40 | 1.5748 | 132.0 | 29.676 | 156.0 | 35 072 | 2.5 | 0.098 | 143 | 5.630 | 217 | 8.543 | 5.800 | 12.789 |
| 6326 | 130 | 5.1181 | 280 | 11.0236 | 58 | 2.2835 | 216.0 | 48.561 | 229.0 | 51 484 | 3.0 | 0.118 | 146 | 5.748 | 264 | 10.394 | 18.000 | 39.690 |

¹Maximum fillet on shaft shoulder that will clear radius on bearing race

Example Problem 14–1 A catalog lists the basic dynamic load rating for a ball bearing to be 7050 lb for a rated life of 1 million rev. What would be the expected L_{10} life of the bearing if it were subjected to a load of 3500 lb?

Solution In Equation (14–1),

$$\begin{aligned} P_1 &= C = 7050 \text{ lb} && \text{(basic dynamic load rating)} \\ P_2 &= P_d = 3500 \text{ lb} && \text{(design load)} \\ L_1 &= 10^6 \text{ rev} && \text{(\(L_{10}\) life at load } C\text{)} \\ k &= 3 && \text{(ball bearing)} \end{aligned}$$

Then letting the life, L_2 , be called the *design life*, L_d , at the design load,

$$L_2 = L_d = L_1 \left(\frac{P_1}{P_2} \right)^k = 10^6 \left(\frac{7050}{3500} \right)^{3.00} = 8.17 \times 10^6 \text{ rev}$$

This must be interpreted as the L_{10} life at a load of 3500 lb.

14-8 DESIGN LIFE

We will use the method developed in Example Problem 14–1 to refine the procedure for computing the required basic dynamic load rating C for a given design load P_d and a given design life L_d . If the reported load data in the manufacturer's literature is for 10^6 revolutions, Equation (14–1) can be written as

Design Life

$$L_d = (C/P_d)^k (10^6) \quad (14-2)$$

The required C for a given design load and life would be

Basic Dynamic Load Rating

$$C = P_d (L_d/10^6)^{1/k} \quad (14-3)$$

Most people do not think in terms of the number of revolutions that a shaft makes. Rather, they consider the speed of rotation of the shaft, usually in rpm, and the design life of the machine, usually in hours of operation. The design life is specified by the designer, considering the application. As a guide, Table 14–4 can be used. Now, for a specified design life in hours, b , and a known speed of rotation in rpm, the number of design revolutions for the bearing would be

$$L_d = (b)(\text{rpm})(60 \text{ min/h})$$

Example Problem 14–2 Compute the required basic dynamic load rating, C , for a ball bearing to carry a radial load of 650 lb from a shaft rotating at 600 rpm that is part of an assembly conveyor in a manufacturing plant.

Solution From Table 14–4, let's select a design life of 30 000 hours. Then L_d is

$$L_d = (30\,000 \text{ h})(600 \text{ rpm})(60 \text{ min/h}) = 1.08 \times 10^9 \text{ rev}$$

From Equation (14–3),

$$C = (650 \text{ lb})(1.08 \times 10^9/10^6)^{1/3} = 6670 \text{ lb}$$

TABLE 14–4 Recommended Design Life for Bearings

| Application | Design life L_{10} , h |
|---|--------------------------|
| Domestic appliances, instruments, medical apparatus | 1000–2000 |
| Aircraft engines | 1000–4000 |
| Automotive | 1500–5000 |
| Agricultural equipment, hoists, construction machines | 3000–6000 |
| Elevators, industrial fans, multipurpose gearing, rotary crushers, cranes | 8000–15 000 |
| Electric motors, industrial blowers, general industrial machines, conveyors | 20 000–30 000 |
| Pumps and compressors, textile machinery, rolling mill drives | 40 000–60 000 |
| Critical equipment in continuous, 24-h operation; power plants, ship drives | 100 000–200 000 |

Source: Eugene A. Avallone and Theodore Baumeister III, eds., *Marks' Standard Handbook for Mechanical Engineers*, 9th ed. New York: McGraw-Hill, 1986.

14-9 BEARING SELECTION: RADIAL LOADS ONLY

The selection of a bearing takes into consideration the load capacity, as discussed, and the geometry of the bearing ensuring that it can be installed conveniently in the machine. We will first consider unmounted bearings carrying radial loads only. Then we will consider unmounted bearings carrying a combination of radial and thrust loads. The term *unmounted* refers to the case in which the designer must provide for the proper support and installation of the bearing onto the shaft and into a housing.

PROCEDURE FOR SELECTING A BEARING— RADIAL LOAD ONLY ▾

1. The bearing is normally selected after the shaft design has progressed to the point where the required minimum diameter of the shaft has been determined, using the techniques presented in Chapter 12. The radial loads are also known, along with the orientation of the bearings with respect to other elements in the machine.

2. Specify the design load on the bearing, usually called *equivalent load*. The method of determining the equivalent load when only a radial load, R , is applied takes into account whether the inner or the outer race rotates.

▷ Equivalent Load, Radial Load Only

$$P = VR \quad (14-4)$$

The factor V is called a *rotation factor* and takes the value of 1.0 if the inner race of the bearing rotates, which is usually the case. Use $V = 1.2$ if the outer race rotates.

3. Determine the minimum acceptable diameter of the shaft that will limit the bore size of the bearing.
4. Select the type of bearing, using Table 14-1 as a guide.
5. Specify the design life of the bearing, using Table 14-4.
6. Compute the required basic dynamic load rating, C , from Equation (14-3).
7. Identify a set of candidate bearings that have the required basic dynamic load rating.
8. Select the bearing having the most convenient geometry, also considering its cost and availability.
9. Determine mounting conditions, such as shaft seat diameter and tolerance, housing bore diameter and tolerance, means of locating the bearing axially, and special needs such as seals or shields.

Example Problem 14-3

Select a single-row, deep-groove ball bearing to carry 650 lb of pure radial load from a shaft that rotates at 600 rpm. The design life is to be 30 000 h. The bearing is to be mounted on a shaft with a minimum acceptable diameter of 1.48 in.

Solution

Note that this is a pure radial load and the inner race is to be pressed onto the shaft and rotate with it. Therefore, the factor $V = 1.0$ in Equation (14-4), and the design load is equal to the radial load. These are the same data used in Example Problem 14-2, where we found the required basic dynamic load rating, C , to be 6670 lb. From Table 14-3, giving design data for three classes of bearings, we find that we could use a bearing 6208 having a bore of 40 mm (1.5748 in).

Summary of Data for the Selected Bearing

Bearing number: 6208, single-row, deep-groove ball bearing

Bore: $d = 40$ mm (1.5748 in)

Outside diameter: $D = 80$ mm (3.1496 in)

Width: $B = 18$ mm (0.7087 in)

Maximum fillet radius: $r = 1.0$ mm (0.039 in)

Basic dynamic load rating: $C = 6902$ lb.

14-10 BEARING SELECTION: RADIAL AND THRUST LOADS COMBINED

When both radial and thrust loads are exerted on a bearing, the equivalent load is the constant radial load that would produce the same rated life for the bearing as the combined loading. The method of computing the equivalent load, P , for such cases is presented in the manufacturer's catalog and takes the form

▷ Equivalent Load with Radial and Thrust Loads

$$P = VXR + YT \quad (14-5)$$

where P = equivalent load

V = rotation factor (as defined in Section 14-9)

R = applied radial load

T = applied thrust load

X = radial factor

Y = thrust factor

TABLE 14-5 Radial and Thrust Factors for Single-row, Deep-groove Ball Bearings

| e | T/C_o | Y | e | T/C_o | Y |
|------|---------|------|------|---------|------|
| 0.19 | 0.014 | 2.30 | 0.34 | 0.170 | 1.31 |
| 0.22 | 0.028 | 1.99 | 0.38 | 0.280 | 1.15 |
| 0.26 | 0.056 | 1.71 | 0.42 | 0.420 | 1.04 |
| 0.28 | 0.084 | 1.55 | 0.44 | 0.560 | 1.00 |
| 0.30 | 0.110 | 1.45 | | | |

Note: $X = 0.56$ for all values of Y .

The values of X and Y vary with the specific design of the bearing and with the magnitude of the thrust load relative to the radial load. For relatively small thrust loads, $X = 1$ and $Y = 0$, so the equivalent load equation reverts to the form of Equation (14-4) for pure radial loads. To indicate the limiting thrust load for which this is the case, manufacturers list a factor called e . If the ratio $T/R > e$, Equation (14-5) must be used to compute P . If $T/R < e$, Equation (14-4) is used. Table 14-5 shows one set of data for a single-row, deep-groove ball bearing, for which the value of $X = 0.56$ for all values of Y . Note that both e and Y depend on the ratio T/C_o , where C_o is the static load rating of a particular bearing. This presents a difficulty in bearing selection because the value of C_o is not known until the bearing has been selected. Therefore, a simple trial-and-error method is applied. If a significant thrust load is applied to a bearing along with a radial load, perform the following steps:

PROCEDURE FOR SELECTING A BEARING—RADIAL AND THRUST LOAD ▾

1. Assume a value of Y from Table 14-5. The value $Y = 1.50$ is reasonable, being at about the middle of the range of possible values.
2. Compute $P = VXR + YT$.
3. Compute the required basic dynamic load rating C from Equation (14-3).
4. Select a candidate bearing having a value of C at least equal to the required value.
5. For the selected bearing, determine C_o .
6. Compute T/C_o .
7. From Table 14-5, determine e .
8. If $T/R > e$, then determine Y from Table 14-5.
9. If the new value of Y is different from that assumed in Step 1, repeat the process.
10. If $T/R < e$, use Equation (14-4) to compute P , and proceed as for a pure radial load.

Example Problem 14-4

Select a single-row, deep-groove ball bearing from Table 14-3 to carry a radial load of 1850 lb and a thrust load of 675 lb. The shaft is to rotate at 1150 rpm, and a design life of 20 000 h is desired. The minimum acceptable diameter for the shaft is 3.10 in.

Solution Use the procedure outlined above.

Step 1. Use $X = 0.56$ and assume $Y = 1.50$.

Step 2. $P = VXR + YT = (1.0)(0.56)(1850 \text{ lb}) + (1.50)(675 \text{ lb}) = 2049 \text{ lb}$.

Step 3. The required basic dynamic load rating C is found from Equation (14-3).

$$L_d = (\text{h})(\text{rpm})(60 \text{ min/h}) = (20 000 \text{ h})(1150 \text{ rev/min})(60 \text{ min/h}) = 1.38 \times 10^9 \text{ rev}$$

$$C = P_d(L_d/10^6)^{1/k} = (2049 \text{ lb})(1.38 \times 10^9/10^6)^{1/3} = 22 812 \text{ lb}$$

Step 4. From Table 14-3, we can use bearing number 6316 having a bore of 80 mm (3.1496 in), just larger than the stated $D_{\min} = 3.10$ in.

Step 5. For bearing number 6316, $C = 27 878 \text{ lb}$ and $C_o = 19 447 \text{ lb}$.

Step 6. $T/C_o = (675 \text{ lb})/(19 447 \text{ lb}) = 0.0347$.

Step 7. From Table 14-5, $e = 0.25$ approximately.

Step 8. $T/R = (675 \text{ lb})/(1850 \text{ lb}) = 0.365$. Because $T/R > e$, we can find $Y = 1.78$ from Table 14–5 by interpolation based on $T/C_o = 0.0347$.

Step 9. Recompute $P = (1.0)(0.56)(1850 \text{ lb}) + (1.78)(675 \text{ lb}) = 2238 \text{ lb}$

$$C = P_d(L_d/10^6)^{1/k} = 2238 \text{ lb}(1.38 \times 10^9/10^6)^{1/3} = 24\,910 \text{ lb}$$

The value of $C = 27\,878 \text{ lb}$ for bearing 6316 is still satisfactory. Therefore, we specify that bearing for this application.

Adjustment of Life Rating for Reliability

Thus far we have used the basic L_{10} life for selecting rolling contact bearings. This is the general industrial practice and the basis for data published by most bearing manufacturers. Recall that L_{10} life indicates a 90% probability that the selected bearing would carry its rated dynamic load for the specified number of design hours. That leaves a 10% probability that any given bearing would have a lower life.

Certain applications call for greater reliability. Examples can be found in the aerospace, military, instrumentation, and medical fields. It is then desirable to be able to adjust the expected life of a bearing for higher reliability. The following equation provides a method.

$$L_{aR} = C_R L_{10} \quad (14-6)$$

where

L_{10} = Life in millions of revolutions for 90% reliability

L_{aR} = Life adjusted for reliability

C_R = Adjustment factor for reliability

Table 14–6 gives values of C_R for reliabilities between 90% and 99%.

It should be noted that one result of designing for higher reliability is that the bearings would be larger and more expensive.

14-11 BEARING SELECTION FROM MANUFACTURERS' CATALOGS

Manual methods of selection of single-row, deep-groove ball bearings in previous sections demonstrate the basic fundamentals and use the example rating tables in Table 14–3. The required basic dynamic load rating C was found from Equation (14–3) after determining the values of the design load P_d and the design life L_d . Adjustment of the life rating for reliability other than the typical L_{10} life (90% reliability) was added in Equation (14–6). All of these data were determined using standard methods of rating bearings developed by industry standards such as that described in Reference 13.

TABLE 14-6 Life Adjustment Factors for Reliability, C_R

| Reliability (%) | C_R | Life designation |
|-----------------|-------|------------------|
| 90 | 1.0 | L_{10} |
| 95 | 0.62 | L_5 |
| 96 | 0.53 | L_4 |
| 97 | 0.44 | L_3 |
| 98 | 0.33 | L_2 |
| 99 | 0.21 | L_1 |

Most bearing manufacturers produce large numbers of styles and sizes of bearings and report performance data in comprehensive catalogs. Furthermore, other factors beyond those listed in this book are included. Bearing standards permit manufacturers to define additional adjustment factors for special bearing properties such as:

- The quality of steel or other materials used in the bearing.
- Special manufacturing processes.
- Unique design features of the bearings.
- Lubrication effectiveness represented by the nature of the oil film between the rolling elements and the races.
- Temperature of operation and the resulting viscosity of the oil.

It is impractical to report all these factors in a textbook and some are likely different for each particular manufacturer. Therefore, it is recommended that online bearing selection software provided by particular manufacturers be used in selecting bearings for problems in this book and for design projects. See Internet sites 2–8 for examples.

14-12 MOUNTING OF BEARINGS

Up to this point, we have considered the load-carrying capacity of the bearings and the bore size in selecting a bearing for a given application. Although these are the most critical parameters, the successful application

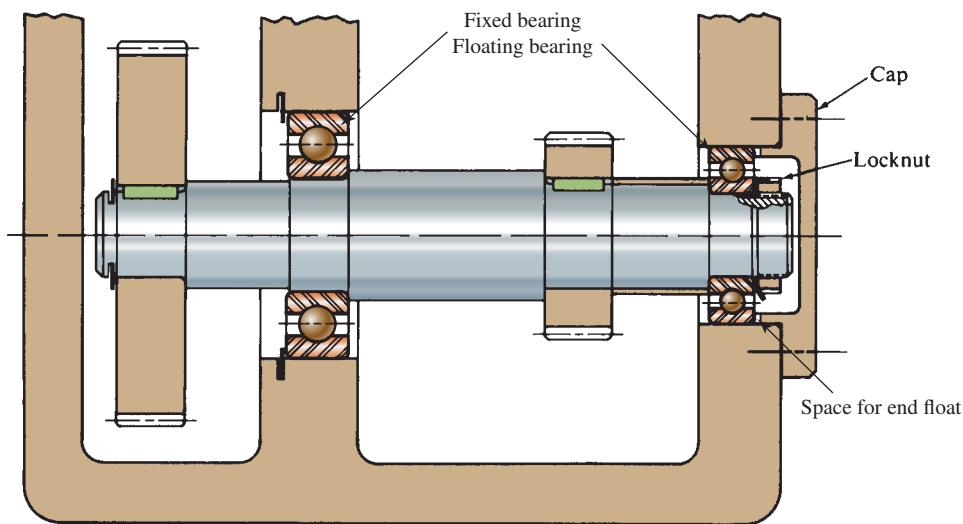


FIGURE 14-13 Bearing mounting illustration

of a bearing must consider its proper mounting. Bearings are precision machine elements. Great care must be exercised in their handling, mounting, installation, and lubrication.

The primary considerations in the mounting of a bearing are as follows:

- The shaft seat diameter and tolerances.
- The housing internal bore and tolerances.
- The shaft shoulder diameter against which the inner race of the bearing will be located.
- The housing shoulder diameter provided for locating the outer race.
- The radius of the fillets at the base of the shaft and housing shoulders.
- The means of retaining the bearing in position.

In a typical installation, the bore of the bearing makes a light interference fit on the shaft, and the outside diameter of the outer race makes a close clearance fit in the housing bore. To ensure proper operation and life, the mounting dimensions must be controlled to a total tolerance of only *a few ten-thousandths of an inch*. Most catalogs specify the limit dimensions for both the shaft seat diameter and the housing bore diameter.

Likewise, the catalog will specify the desirable shoulder diameters for the shaft and the housing that will provide a secure surface against which to locate the bearing while ensuring that the shaft shoulder contacts only the inner race and the housing shoulder contacts only the outer race. Table 14-3 includes these values.

The fillet radius specified in the catalog (see r in Table 14-3) is the maximum permissible radius *on the shaft and in the housing* that will clear the external radius

on the bearing races. Using too large a radius would not permit the bearing to seat tightly against the shoulder. Of course, the actual fillet radius should be made as large as possible up to the maximum to minimize the stress concentration at the shoulder.

Bearings can be retained in the axial direction by many of the means described in Chapter 11. Three popular methods are retaining rings, retaining caps, end caps, and locknuts. Figure 14-13 shows one possible arrangement. Note that for the left bearing, the shaft diameter is slightly smaller to the left of the bearing seat. This allows the bearing to be slid easily over the shaft up to the place where it must be pressed on. The retaining ring for the outer race could be supplied as a part of the outer race instead of as a separate piece.

The right bearing is held on the shaft with a locknut threaded on the end of the shaft. See Figure 14-14 for the design of standard locknuts. The internal tab on the lockwasher engages a groove in the shaft, and one of the external tabs is bent into a groove on the nut after it is seated to keep the nut from backing off. The external cap protects the bearing.

Care must be exercised to ensure that the bearings are not overly constrained. If both bearings are held tightly, any changes in dimensions due to thermal expansion or unfavorable tolerance stackup would cause binding and could lead to dangerous unexpected loads on the bearings. It is desirable to give one bearing complete location while allowing the other bearing to float axially. In Figure 14-3, the left bearing is held against the shaft shoulder on the inner race. The outer race employs a retaining ring to maintain axial location within the housing. However, for the right bearing, the inner race is seated against the shaft shoulder while the outer race may float in the axial

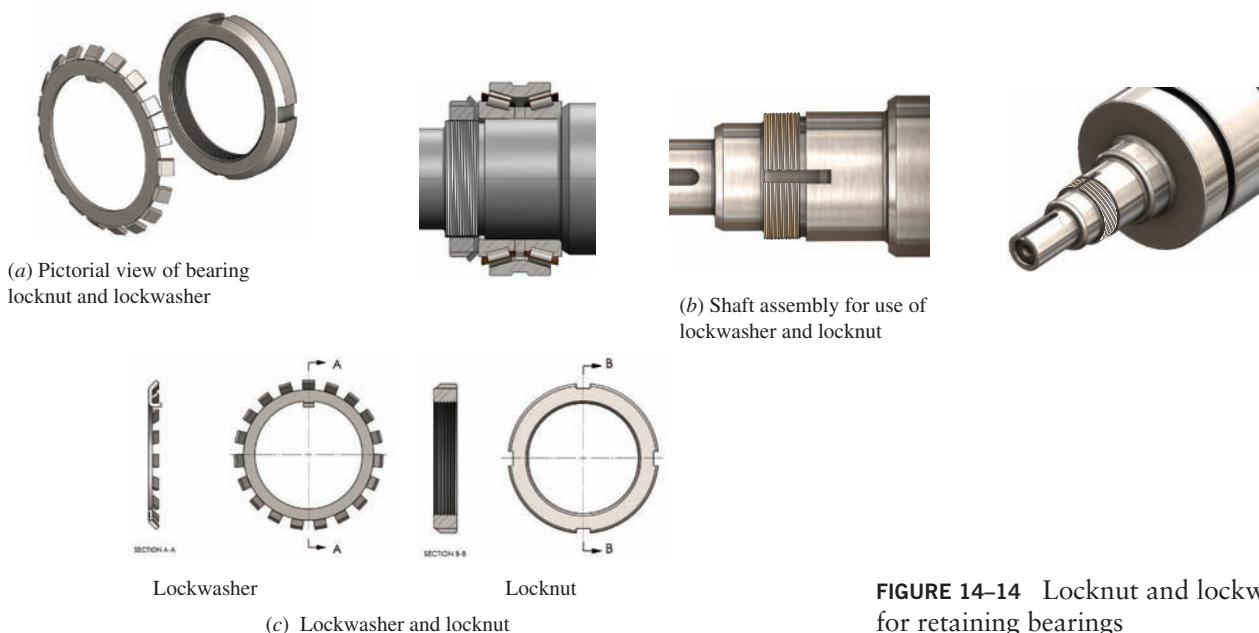


FIGURE 14-14 Locknut and lockwasher for retaining bearings

direction. Recall that the inner race is press-fit on its seat, whereas the outer race has a small clearance, permitting axial movement often called float.

14-13 TAPERED ROLLER BEARINGS

The taper on the rollers of tapered roller bearings, evident in Figure 14-7, results in a load path different from that for the bearings discussed thus far. Figure 14-15 shows two tapered roller bearings supporting a shaft with a combination of a radial load and a thrust load. The design of the shaft is such that the thrust load is resisted by the left bearing. But a peculiar feature of this

type of bearing is that a radial load on one of the bearings creates a thrust on the opposing bearing, also; this feature must be considered in analysis of the bearing.

The location of the radial reaction must also be determined with care. Part (b) of Figure 14-15 shows a dimension a that is found by the intersection of a line perpendicular to the axis of the roller and the centerline of the shaft. The radial reaction at the bearing acts through this point. The distance a is reported in the tables of data for the bearings.

The American Bearings Manufacturers' Association (ABMA) recommends the following approach in computing the equivalent loads on a tapered roller bearing:

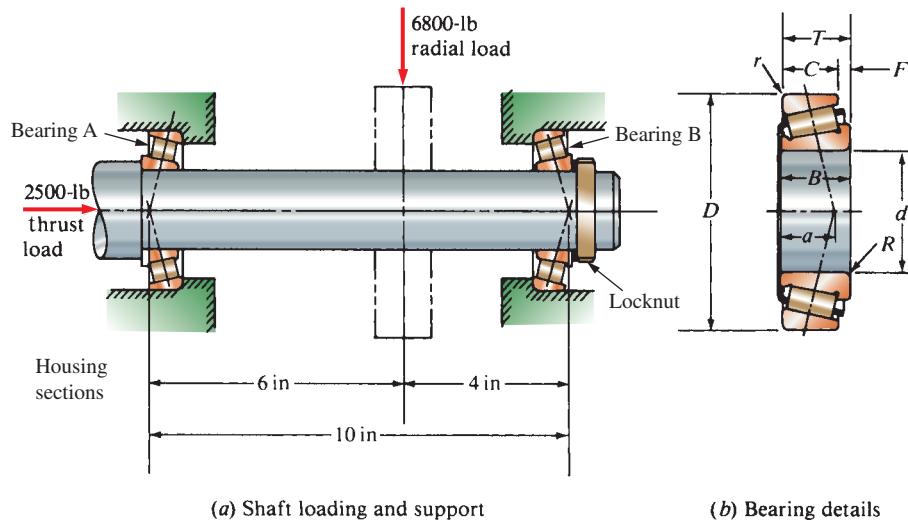


FIGURE 14-15 Example of tapered roller bearing installation

TABLE 14-7 Tapered Roller Bearing Data

| Bore, <i>d</i> | Outside diameter, <i>D</i> | Width, <i>T</i> | <i>a</i> | Thrust factor, <i>Y</i> | Basic dynamic load rating, <i>C</i> |
|----------------|----------------------------|-----------------|----------|-------------------------|-------------------------------------|
| 1.0000 | 2.5000 | 0.8125 | 0.583 | 1.71 | 8370 |
| 1.5000 | 3.0000 | 0.9375 | 0.690 | 1.98 | 12 800 |
| 1.7500 | 4.0000 | 1.2500 | 0.970 | 1.50 | 21 400 |
| 2.0000 | 4.3750 | 1.5000 | 0.975 | 2.02 | 26 200 |
| 2.5000 | 5.0000 | 1.4375 | 1.100 | 1.65 | 29 300 |
| 3.0000 | 6.0000 | 1.6250 | 1.320 | 1.47 | 39 700 |
| 3.5000 | 6.3750 | 1.8750 | 1.430 | 1.76 | 47 700 |

Note: Dimensions are in inches. Load *C* is in pounds for an L_{10} life of 1 million rev.

▷ Equivalent Load for Tapered Roller Bearing

$$P_A = 0.4F_{rA} + 0.5 \frac{Y_A}{Y_B} F_{rB} + Y_A T_A \quad (14-7)$$

$$P_B = F_{rB} \quad (14-8)$$

where

P_A = equivalent radial load on bearing *A*

P_B = equivalent radial load on bearing *B*

F_{rA} = applied radial load on bearing *A*

F_{rB} = applied radial load on bearing *B*

T_A = thrust load on bearing *A*

Y_A = thrust factor for bearing *A* from tables

Y_B = thrust factor for bearing *B* from tables

Table 14-7 shows an abbreviated set of example data to illustrate the method of computing equivalent loads.

For the several hundred designs of standard tapered roller bearings available commercially, the value of the thrust factor varies from as small as 1.07 to as high as 2.26. In design problems, a trial-and-error procedure is usually necessary. Example Problem 14-5 illustrates one approach.

Example Problem 14-5

The shaft shown in Figure 14-15 carries a transverse load of 6800 lb and a thrust load of 2500 lb. The thrust is resisted by bearing *A*. The shaft rotates at 350 rpm and is to be used in a piece of agricultural equipment. Specify suitable tapered roller bearings for the shaft.

Solution The radial loads on the bearings are

$$F_{rA} = (6800 \text{ lb})(4 \text{ in}/10 \text{ in}) = 2720 \text{ lb}$$

$$F_{rB} = (6800 \text{ lb})(6 \text{ in}/10 \text{ in}) = 4080 \text{ lb}$$

$$T_A = 2500 \text{ lb}$$

To use Equation (14-7), we must assume values of Y_A and Y_B . Let's use $Y_A = Y_B = 1.75$. Then

$$P_A = 0.40(2720 \text{ lb}) + 0.5 \frac{1.75}{1.75} (4080 \text{ lb}) + 1.75(2500 \text{ lb}) = 7503 \text{ lb}$$

$$P_B = F_{rB} = 4080 \text{ lb}$$

Using Table 14-4 as a guide, let's select 4000 h as a design life. Then the number of revolutions would be

$$L_d = (4000 \text{ h})(350 \text{ rpm})(60 \text{ min/h}) = 8.4 \times 10^7 \text{ rev}$$

The required basic dynamic load rating can now be calculated from Equation (14-3), using $k = 3.33$. Note that the exponent $1/k$ is $1/3.33$, resulting in a value of 0.30.

$$C_A = P_A (L_d/10^6)^{1/k}$$

$$C_A = (7503 \text{ lb})(8.4 \times 10^7/10^6)^{0.30} = 28 400 \text{ lb}$$

Similarly,

$$C_B = (4080 \text{ lb})(8.4 \times 10^7/10^6)^{0.30} = 15 400 \text{ lb}$$

From Table 14–7, we can choose the following bearings.

Bearing A

$$\begin{aligned} d &= 2.5000 \text{ in} & D &= 5.0000 \text{ in} \\ C &= 29\,300 \text{ lb} & Y_A &= 1.65 \end{aligned}$$

Bearing B

$$\begin{aligned} d &= 1.7500 \text{ in} & D &= 4.0000 \text{ in} \\ C &= 21\,400 \text{ lb} & Y_B &= 1.50 \end{aligned}$$

We can now recompute the equivalent loads:

$$\begin{aligned} P_A &= 0.40(2720 \text{ lb}) + 0.5 \frac{1.65}{1.50}(4080 \text{ lb}) + 1.65(2500 \text{ lb}) = 7457 \text{ lb} \\ P_B &= F_{rB} = 4080 \text{ lb} \end{aligned}$$

From these, the new values of $C_A = 28\,200 \text{ lb}$ and $C_B = 15\,400 \text{ lb}$ are still satisfactory for the selected bearings.

One caution must be observed in using the equations for equivalent loads for tapered roller bearings. If, from Equation (14–7), the equivalent load on bearing A is less than the applied radial load, the following equation should be used.

If $P_A < F_{rA}$, then let $P_A = F_{rA}$ and compute P_B .

$$P_B = 0.4F_{rB} + 0.5 \frac{Y_B}{Y_A} F_{rA} - Y_B T_A \quad (14-9)$$

A similar analysis is used for angular contact ball bearings in which the design of the races results in a load path similar to that for tapered roller bearings. Figure 14–3 shows an angular contact bearing and the angle through the pressure center. This is equivalent to the line perpendicular to the axis of the tapered roller bearing. The radial reaction on the bearing acts through the intersection of this line and the axis of the shaft. Also, a radial load on one bearing induces a thrust load on the opposing bearing, requiring the application of the equivalent load formulas of the type used in Equations (14–7) and (14–9). The angle of the load line in commercially available angular contact bearings ranges from 15° to 40° .

14-14 PRACTICAL CONSIDERATIONS IN THE APPLICATION OF BEARINGS

This section discusses lubrication of bearings, installation, preloading, stiffness, operation under varying loads, sealing, limiting speeds, and standards and bearing tolerance classes related to the manufacture and application of bearings.

Lubrication

The functions of lubrication in a bearing unit are as follows:

- To provide a low-friction film between the rolling elements and the races of the bearing and at points of contact with cages, guiding surfaces, retainers, and so on.

- To protect the bearing components from corrosion.
- To absorb heat from the bearing unit.
- To carry heat away from the bearing unit.
- To help dispel contaminants and moisture from the bearing.

Rolling contact bearings are usually lubricated with either grease or oil. Under normal ambient temperatures (approximately 70°F) and relatively slow speeds (under 500 rpm), grease is satisfactory. Note that grease typically needs to be replenished and grease fittings should be designed into the system. At higher speeds or higher ambient temperatures, oil lubrication applied in a continuous flow is required, possibly with external cooling of the oil.

Oils used in bearing lubrication are usually clean, stable mineral oils. Under lighter loads and lower speeds, light oil is used. Heavier loads and/or higher speeds require heavier oils up to SAE 30. A recommended upper limit for lubricant temperature is 160°F . The choice of the correct oil or grease depends on many factors, so each application should be discussed with the bearing manufacturer. In general, a kinematic viscosity of 13 to 21 centistokes should be maintained at the operating temperature of the lubricant in the bearing. Manufacturer's recommendations should be sought.

In some critical applications such as bearings in jet engines and high-speed devices, lubricating oil is pumped under pressure to an enclosed housing for the bearing where the oil is directed at the rolling elements themselves. A controlled return path is also provided. The temperature of the oil in the sump is monitored and controlled with heat exchangers or refrigeration to maintain oil viscosity within acceptable limits. Such systems provide reliable lubrication and ensure the removal of heat from the bearing.

See Section 14–15 for additional discussion about the importance of oil film thickness in bearings. References 1, 3, 5, 6, and 11 contain an extensive amount of information on this subject.

Greases used in bearings are mixtures of lubricating oils and thickening agents, usually soaps such as lithium or barium. The soaps act as carriers for the oil which is drawn out at the point of need within the bearing. Additives to resist corrosion or oxidation of the oil itself are sometimes added. Classifications of greases specify the operating temperatures to which the greases will be exposed, as defined by the American Bearing Manufacturers' Association (ABMA), and outlined in Table 14–8.

Internet site 1 lists many styles of greases, oils, and solid lubricants for ceramic bearings, metal bearings, hybrids, and other precision equipment. Grease thickeners include barium complex soap, polyurea, PTFE, and lithium. Also listed is an Ultra-Dry Lube DL-5 made from a modified tungsten disulfide (WS_2) in lamellar form that is chemically inert, non-toxic, and corrosion resistant. It can operate over a temperature range of $-188^{\circ}C$ to $+538^{\circ}C$ ($-350^{\circ}F$ to $+1000^{\circ}F$). The nominal coefficient of friction is 0.030. Some full ceramic bearings can operate well without lubrication, an important feature for applications in food processing, semiconductor production, aerospace devices, and high vacuum installations.

Installation

It has already been stated that most bearings should be installed with a light interference fit between the bore of the bearing and the shaft to preclude the possibility of rotation of the inner race of the bearing with respect to the shaft. Such a condition would result in uneven wear of the bearing elements and early failure. To install the bearing then requires rather heavy forces applied axially. Care must be exercised so that the bearing is not damaged during installation. The installation force should be applied directly to the inner race of the bearing.

If the force were applied through the outer race, the load would be transferred through the rolling elements to the inner race. Because of the small contact area, it is likely that such transfer of forces would overstress some element, exceeding the static load capacity. Brinelling would result, along with the noise and rapid wear that accompany this condition. For large bearings it may be necessary to heat the bearing to expand its diameter in order to keep the installation forces within reason. Removal of bearings intended for reuse requires similar precautions. Bearing pullers are available to facilitate this task.

TABLE 14–8 Types of Greases Used for Bearing Lubrication

| Group | Type of grease | Operation temperature range ($^{\circ}F$) |
|-------|----------------------------|---|
| I | General-purpose | -40 to 250 |
| II | High-temperature | 0 to 300 |
| III | Medium-temperature | 32 to 200 |
| IV | Low-temperature | -67 to 225 |
| V | Extremely high-temperature | Up to 450 |

Preloading

Some bearings are made with internal clearances that must be taken up in a particular direction to ensure satisfactory operation. In such cases, preloading must be provided, usually in the axial direction. On horizontal shafts, springs are typically used, with axial adjustment of the spring deflection sometimes provided to adjust the amount of preload. When space is limited, the use of Belleville washers is desirable because they provide high forces with small deflections (see Chapter 18). Shims can be used to adjust the actual deflection and preload obtained. On vertical shafts the weight of the shaft assembly itself may be sufficient to provide the required preload.

Bearing Stiffness

Stiffness is the deflection that a given bearing undergoes when carrying a given load. Usually the radial stiffness is most important because the dynamic behavior of the rotating shaft system is affected. The critical speed and the mode of vibration are both functions of the bearing stiffness. Generally, the softer the bearing (low stiffness) is, the lower the critical speed of the shaft assembly will be. Stiffness is measured in the units used for springs, such as pounds per inch or newtons per millimeter. Of course, the stiffness values are quite high, with values of 500 000 to 1 000 000 lb/in reasonable (87.5 to 175 MN/m). The manufacturer should be consulted when such information is needed, because it is rarely included in standard catalogs.

Operation under Varying Loads

The load/life relationships used thus far assume that the load is reasonably constant in magnitude and direction. If the load varies considerably, an effective mean load must be used for determining the expected life of the bearing. (See References 4, 6, and 12.) Oscillating loads also require special analysis because only a few of the rolling elements share the load. See Section 14–16 for additional information about life prediction under varying loads.

Sealing

When the bearing is to operate in dirty or moist environments, special shields and seals are usually specified. They can be provided on either or both sides of the rolling elements. Shields are typically metal and are fixed to the stationary race, but they remain clear of the rotating race. Seals are made of elastomeric materials and do contact the rotating race. Bearings fitted with both seals and shields and precharged at the factory with grease are sometimes called *permanently lubricated*. Although such bearings are likely to give many years of satisfactory service, extreme conditions can produce a degradation of the lubricating properties of the grease. The presence of seals also increases the friction in a bearing. Sealing can be provided outside the bearing in the housing or at the shaft/housing interface. On high-speed shafts, a *labyrinth seal*, consisting of a non-contacting ring around the shaft

with a few thousandths of an inch radial clearance, is frequently used. Grooves, sometimes in the form of a thread, are machined in the ring; the relative motion of the shaft with respect to the ring creates the sealing action.

Limiting Speeds

Most catalogs list limiting speeds for each bearing. Exceeding these limits may result in excessively high operating temperatures due to friction between the cages supporting the rolling elements. Generally, the limiting speed is lower for larger bearings than for smaller bearings. Also, a given bearing will have a lower limiting speed as loads increase. With special care, either in the fabrication of the bearing cage or in the lubrication of the bearing, bearings can be operated at higher speeds than those listed in the catalog. The manufacturer should be consulted in such applications. The use of ceramic rolling elements with their lower mass can result in higher limiting speeds.

Standards

Several groups are involved in standard setting for the bearing industry. Some of them are as follows:

| | |
|--|--------------------|
| American Bearing Manufacturers Association | (ABMA) |
| | (Internet site 11) |
| Annular Bearing Engineers Committee | (ABEC) |
| American National Standards Institute | (ANSI) |
| International Standards Organization | (ISO) |

Many standards are listed by the ANSI and ABMA organizations including:

Load Ratings and Fatigue Life for Ball Bearings,
ABMA 9

Load Ratings and Fatigue Life for Roller Bearings,
ABMA 11

Tolerances

Several different tolerance classes are recognized in the bearing industry to accommodate the needs of the wide variety of equipment using rolling contact bearings. In general, of course, all bearings are precision machine elements and should be treated as such. As noted before, the general range of tolerances is of the order of a few ten-thousandths of an inch. The standard tolerance classes are defined by ABEC, as identified below.

- ABEC 1: Standard radial ball and roller bearings
- ABEC 3: Semiprecision instrument ball bearings
- ABEC 5: Precision radial ball and roller bearings
- ABEC 5P: Precision instrument ball bearings
- ABEC 7: High-precision radial ball bearings
- ABEC 7P: High-precision instrument ball bearings

Most machine applications would use ABEC 1 tolerances, the data for which are usually provided in the catalogs. Machine tool spindles requiring extra smooth and accurate running would use ABEC 5 or ABEC 7 classes.

14-15 IMPORTANCE OF OIL FILM THICKNESS IN BEARINGS

In bearings operated at heavy loads or high speeds, it is critical to maintain a film of lubricating oil at the surface of the rolling elements. A steady supply of clean lubricant with an adequate viscosity is required. With careful analysis of the geometry of the bearing, the speed of rotation, and the properties of the lubricant, it is possible to estimate the thickness of the oil film between the rolling elements and the races. Although the film thickness may be only a few microinches, it has been shown that oil starvation of the contact area is a chief cause of premature failure of rolling contact bearings. Conversely, if a film thickness significantly greater than the height of surface roughness features can be maintained, the expected life will be several times greater than published data from catalogs. (See References 4, 6, and 12.)

The nature of the lubrication at the interface between rolling elements and the races is called *elastohydrodynamic lubrication* because it depends on the specific elastic deformation of the mating surfaces under the influence of high contact stresses and the creation of a pressurized film of lubricant by the dynamic action of the rolling elements.

The data needed to evaluate film thickness for ball bearings are given in the following lists:

Bearing Geometry Factors

- Ball diameter
- Number of balls
- Radius of curvature of the inner race groove in both the circumferential and the axial directions
- Pitch diameter of the bearing; the average of the bore diameter and the outside diameter
- Surface roughness of the balls and the races
- Contact angle for angular contact bearings

Bearing Material Factors

- Modulus of elasticity of balls and races
- Poisson's ratio

Lubricant Factors

- Dynamic viscosity at the operating temperature *within* the bearing
- Pressure coefficient of viscosity; the change of viscosity with pressure

Operational Factors

- Rotational speed of both the inner and the outer races
- Radial load
- Thrust load

The details of the analysis are given in Reference 6. The results of the analysis include the following:
 The minimum film thickness of the lubricant, h_o
 The composite roughness of the balls and the races, S
 The ratio $\Lambda = h_o/S$

The service life of the bearing is dependent on the value of Λ :

- If $\Lambda < 0.90$, a life less than the manufacturer's rated life is to be expected because of surface damage due to inadequate lubricant film.
- If Λ is in the range of 0.90 to 1.50, rated service life can be expected.
- If Λ is in the range of 1.50 to 3.0, an increase of life of up to three times the rated life is possible.
- If Λ is greater than 3.0, a life of up to six times the rated life is possible.

General Recommendations for Achieving Long Life for Bearings

1. Choose a bearing with an adequate rated life using the procedures outlined in this chapter.
2. Ensure that the bearing has a fine surface finish and is not damaged by rough handling, poor installation practices, corrosion, vibration, or exposure to electrical current flow.
3. Ensure that operating loads are within the design values.
4. Supply the bearing with a copious flow of clean lubricant at an adequate viscosity at the operating temperature within the bearing according to the bearing manufacturer's recommendations. Provide external cooling for the lubricant if necessary. For an existing system, this is the factor over which you have the most control without a significant redesign of the system itself.
5. If redesign is possible, design the system to operate at as low a speed as possible.

14-16 LIFE PREDICTION UNDER VARYING LOADS

The design and analysis procedures used so far in this book assumed that the bearing would operate at a single design load throughout its life. It is possible to

Example Problem 14-6

A single-row, deep-groove ball bearing number 6208 is subjected to the following set of loads for the given times:

| Condition | F_i | Time |
|-----------|--------|--------|
| 1 | 650 lb | 30 min |
| 2 | 750 lb | 10 min |
| 3 | 250 lb | 20 min |

This cycle of 60 min is repeated continuously throughout the life of the bearing. The shaft carried by the bearing rotates at 600 rpm. Estimate the total life of the bearing.

predict the life of the bearing under such conditions fairly accurately using manufacturers' data published in catalogs. If loads vary with time, a modified procedure is required.

One procedure that is recommended by bearing manufacturers is called the *Palmgren-Miner rule*, or sometimes simply *Miner's rule*. References 9 and 10 describe their work, and Reference 8 discusses a modified approach more tailored to bearings.

The basis of Miner's rule is that if a given bearing is subjected to a series of loads of different magnitudes for known lengths of time, each load contributes to the eventual failure of the bearing in proportion to the ratio of the load to the expected life that the bearing would have under that load. Then the cumulative effect of the series of loads must account for all such contributions to failure.

A similar approach, described in Reference 6, introduces the concept of *mean effective load*, F_m :

♦ Mean Effective Load under Varying Loads

$$F_m = \left(\frac{\sum_i (F_i)^p N_i}{N} \right)^{1/p} \quad (14-10)$$

where

F_i = individual load among a series of i loads

N_i = number of revolutions at which F_i operates

N = total number of revolutions in a complete cycle

p = exponent on the load/life relationship;

$p = 3$ for ball bearings, and $p = 10/3$ for rollers

Alternatively, if the bearing is rotating at a constant speed, and because the number of revolutions is proportional to the time of operation, N_i can be the number of minutes of operation at F_i , and N is the sum of the number of minutes in the total cycle. That is,

$$N = N_1 + N_2 + \dots + N_i$$

Then the total expected life, in millions of revolutions of the bearing, would be

$$L = \left(\frac{C}{F_m} \right)^p \quad (14-11)$$

Solution Using Equation (14–10), we have

$$F_m = \left(\frac{\sum (F_i)^p N_i}{N} \right)^{1/p} \quad (14-10a)$$

$$F_m = \left(\frac{30(650)^3 + 10(750)^3 + 20(250)^3}{30 + 10 + 20} \right)^{1/3} = 597 \text{ lb}$$

Now use Equation (14–11):

$$L = \left(\frac{C}{F_m} \right)^p \quad (14-11a)$$

From Table 14–3, for the 6208 bearing, we find that $C = 6902$ lb. Then

$$L = \left(\frac{6902}{597} \right)^3 = 1545 \text{ million rev}$$

At a rotational speed of 600 rpm, the number of hours of life would be

$$L = \frac{1545 \times 10^6 \text{ rev}}{1} \cdot \frac{\text{min}}{600 \text{ rev}} \cdot \frac{\text{h}}{60 \text{ min}} = 42\,917 \text{ h}$$

Note that this is the same bearing used in Example Problem 14–3 which was selected to operate at least 30 000 hr when carrying a steady load of 650 lb.

14-17 BEARING DESIGNATION SERIES

An example of a bearing designation system has been shown in Table 14–3, using the 6000 series for single-row, deep-groove ball bearings. The following list shows the series designations for other types of bearings. Note that different manufacturers may use modifications of these series designations.

| Series | Bearing type | Example for 30 mm bore, light (206) |
|--|---|-------------------------------------|
| 1000 | Double row self-aligning ball bearing | 1206 |
| 2000 | Tapered roller bearing | 2206 |
| 6000 | Single row, deep groove ball bearing | 6206 |
| 7000 | Single row angular contact ball bearing | 7206 |
| 21 000 | Spherical roller bearing | 21 206 |
| 51 000 | Ball thrust bearing | 51 206 |
| 81 000 | Cylindrical roller thrust bearing | 81 206 |
| NU | Single row cylindrical roller | NU206 |
| Needle bearings use a modified system in which the last two digits indicate the bore size in mm. | | |
| NK | Cylindrical needle roller bearing | NK30 |

REFERENCES

1. Association for Iron and Steel Technology-AIST. *Lubrication Engineers Manual*. 4th ed. Warrendale, PA: AIST, 2010.
2. Avallone, Eugene, Theodore Baumeister III, and Ali Sadegh. *Mark's Standard Handbook for Mechanical Engineers*. 11th ed. New York: McGraw-Hill, 2007.
3. Bloch, Heinz P. *Practical Lubrication for Industrial Facilities*. 2nd ed. Lilburn, GA: Fairmont Press, 2010.
4. Brändlein, Johannes, Paul Eschmann, Ludwig Hasbargen, and Karl Weigand. *Ball and Roller Bearings: Design and Application*. 3rd ed. New York: John Wiley & Sons, 2000.
5. Gresham, Robert M., and George E. Totten, editors. *Lubrication and Maintenance of Industrial Machinery: Best Practices and Reliability*. Boca Raton, FL: CRC Press, 2009.
6. Harris, Tedric A., and Michael N. Kotzalas. *Rolling Bearing Analysis*. 5th ed. Boca Raton, FL: CRC Press, 2007.
7. Juvinall, Robert C., and Kurt M. Marshek. *Fundamentals of Machine Component Design*. 5th ed. New York: John Wiley & Sons, 2011.
8. Kauzlarich, James J. "The Palmgren-Miner Rule Derived." *Proceedings of the 15th Leeds/Lyon Symposium of Tribology*. (Leeds, United Kingdom, September 6–9, 1988).
9. Miner, M. A. "Cumulative Damage in Fatigue." *Journal of Applied Mechanics* 67 (1945): A159–A164.
10. Palmgren, Arvid. *Ball and Roller Bearing Engineering*. 3rd ed. Philadelphia, PA: Burbank, 1959.
11. Pirro, D. M., Martin Webster, and Ekkehard Daschner. *Lubrication Fundamentals*. 3rd ed. Boca Raton, FL: CRC Press, 2016.
12. Changsen, Wan. *Analysis of Rolling Contact Bearings*. New York: John Wiley & Sons, 2006.

13. ASME Tribology Division. *Standard ISO 281/2—Life Ratings for Modern Rolling Bearings*. New York: ASME Press, 2003.

INTERNET SITES RELATED TO ROLLING CONTACT BEARINGS

1. **Boca Bearings Company.** Manufacturer of many styles of rolling contact bearings made from steel, ceramic, and ceramic hybrids in both inch and metric sizes. Special capabilities in miniature bearings as small as 0.040 in and 0.60 mm bore. Applications to precision industrial machinery, semiconductor industry, flowmeters, medical devices, robotics, optics, cryogenic pumps, food processing, bicycles, RC cars, and planes. Also markets specialized lubricants for bearings.
2. **SKFUSA, Inc.** Manufacturer of rolling contact bearings under the SKF brand. Online catalog.
3. **FAG Bearings.** Manufacturer of rolling contact bearings under the FAG and INA brands. Online catalog. A subsidiary of the Schaeffler Group.
4. **RBC Bearings.** Manufacturer of many types of rolling contact bearings, cam followers, and specialized integrated assemblies containing bearings for the automotive, agricultural, lawn equipment, semiconductor, material handling, and other similar markets.
5. **NSK Corporation.** Manufacturer of rolling contact bearings under the NSK brand. Online catalog.
6. **Timken Company.** Manufacturer of rolling contact bearings under the Timken brand. Online catalog.
7. **Baldor/Dodge.** Manufacturer of numerous power transmission products, including mounted rolling contact bearings along with many other types of bearings. Online catalog.
8. **Regal Beloit.** Manufacturer of numerous power transmission products, including bearings from their Browning, McGill, Rollway, and Sealmaster units. Online catalog.
9. **Power Transmission Engineering.** A site that lists numerous manufacturers of power transmission components including rolling contact bearings, gears, gear drives, clutches, couplings, motors, and more. Descriptive information about the listed companies is provided along with links to their websites.
10. **Machinery Lubrication.** An online service of *Machinery Lubrication Magazine* providing technical articles and information on lubrication of industrial machinery, including bearings.
11. **American Bearing Manufacturers Association.** A non-profit association of manufacturers of anti-friction bearings. ABMA defines U.S. national standards for bearings.
12. **High Temp Metals, Inc.** Distributor of high temperature, corrosion resistant grades of nickel and cobalt alloys.
13. **Igus, Inc.** Producer of plastic ball bearings using their proprietary polymers xiros® and iglide®.
14. **KMS Bearings, Inc.** Producer of mounted bearings made from combinations of plastic housings and stainless steel balls.

PROBLEMS

1. A radial ball bearing has a basic dynamic load rating of 2350 lb for a rated (L_{10}) life of 1 million rev. What would its L_{10} life be when operating at a load of 1675 lb?
2. Determine the required basic dynamic load rating for a bearing to carry 1250 lb from a shaft rotating at 880 rpm if the design life is to be 20 000 h.
3. A catalog lists the basic dynamic load rating for a ball bearing to be 3150 lb for a rated life of 1 million rev. What would be the L_{10} life of the bearing if it were subjected to a load of (a) 2200 lb and (b) 4500 lb?
4. Compute the required basic dynamic load rating, C, for a ball bearing to carry a radial load of 1450 lb at a shaft speed of 1150 rpm for an industrial fan.
5. Specify suitable bearings for the shaft of Example Problem 12–1. Note the data contained in Figures 12–1, 12–2, 12–11, and 12–12.
6. Specify suitable bearings for the shaft of Example Problem 12–2. Note the data contained in Figures 12–13, 12–14, 12–15, and 12–16.
7. Specify suitable bearings for the shaft of Example Problem 12–3. Note the data contained in Figures 12–17, 12–18.
8. For any of the bearings specified in Problem 2–7, make a scale drawing of the shaft, the bearings, and the part of the housing to support the outer races of the bearings. Be sure to consider fillet radii and axial location of the bearings.
9. A bearing is to carry a radial load of 455 lb and no thrust load. Specify a suitable bearing from Table 14–3 if the shaft rotates at 1150 rpm and the design life is 20 000 hr.

For each of the problems in Table 14–9, repeat Problem 9 with the new data.

TABLE 14–9

| Problem number | Radial load | Thrust load | rpm | Design life, h |
|----------------|-------------|-------------|------|----------------|
| 10. | 857 lb | 0 | 450 | 30 000 |
| 11. | 1265 lb | 645 lb | 210 | 5000 |
| 12. | 235 lb | 88 lb | 1750 | 20 000 |
| 13. | 2875 lb | 1350 lb | 600 | 15 000 |
| 14. | 3.8 kN | 0 | 3450 | 15 000 |
| 15. | 5.6 kN | 2.8 kN | 450 | 2000 |
| 16. | 10.5 kN | 0 | 1150 | 20 000 |
| 17. | 1.2 kN | 0.85 kN | 860 | 20 000 |

18. In Chapter 12, Figures P12–1 through P12–40 showed shaft design exercises related to the problems at the end of the chapter. For each bearing of each shaft, specify a suitable bearing from Table 14–3. If the shaft design has already been completed to the point that the minimum acceptable diameter of the shaft at the bearing seat is known, consider that diameter when specifying the bearing. Note the Chapter 12 problem statements for the speed of the shaft and the loading data.

19. Bearing number 6324 from Table 14–3 is carrying the set of loads in Table P14–19 while rotating at 600 rpm. Compute the expected L_{10} life for the bearing under these conditions if the cycle repeats continuously.

TABLE P14-19

| Condition | Load, F_i | Time, N_i |
|-----------|-------------|-------------|
| 1 | 4500 lb | 25 min |
| 2 | 2500 lb | 15 min |

20. Bearing number 6314 from Table 14–3 is carrying the set of loads in Table P14–20 while rotating at 600 rpm. Compute the expected L_{10} life for the bearing under these conditions if the cycle repeats continuously.

TABLE P14-20

| Condition | Load, F_i | Time, N_i |
|-----------|-------------|-------------|
| 1 | 2500 lb | 25 min |
| 2 | 1500 lb | 15 min |

21. Bearing number 6209 from Table 14–3 is carrying the set of loads in Table P14–21 while rotating at 1700 rpm. Compute the expected L_{10} life for the bearing under these conditions if the cycle repeats continuously.

TABLE P14-21

| Condition | Load, F_i | Time, N_i |
|-----------|-------------|-------------|
| 1 | 600 lb | 480 min |
| 2 | 200 lb | 115 min |
| 3 | 100 lb | 45 min |

22. Bearing number 6209 from Table 14–3 is carrying the set of loads in Table P14–22 while rotating at 1700 rpm. Compute the expected L_{10} life for the bearing under these conditions if the cycle repeats continuously.

TABLE P14-22

| Condition | Load, F_i | Time, N_i |
|-----------|-------------|-------------|
| 1 | 450 lb | 480 min |
| 2 | 180 lb | 115 min |
| 3 | 50 lb | 45 min |

23. Bearing number 6205 from Table 14–3 is carrying the set of loads in Table P14–23 while rotating at 101 rpm for one 8-h shift. Compute the expected L_{10} life for the bearing under these conditions if the cycle repeats continuously. If the machine operates two shifts per day, six days per week, in how many weeks would you expect to have to replace the bearing?

TABLE P14-23

| Condition | Load, F_i | Time, N_i |
|-----------|-------------|-------------|
| 1 | 500 lb | 6.75 h |
| 2 | 800 lb | 0.40 h |
| 3 | 100 lb | 0.85 h |

24. Bearing number 6211 from Table 14–3 is carrying the set of loads in Table P14–24 while rotating at 101 rpm for one 8-h shift. Compute the expected L_{10} life for the bearing under these conditions if the cycle repeats continuously. If the machine operates two shifts per day, six days per week, in how many weeks would you expect to have to replace the bearing?

TABLE P14-24

| Condition | Radial load | Thrust load | Time, N_i |
|-----------|-------------|-------------|-------------|
| 1 | 1750 lb | 350 lb | 6.75 h |
| 2 | 600 lb | 250 lb | 0.40 h |
| 3 | 280 lb | 110 lb | 0.85 h |

25. Compute the basic dynamic load rating, C , for a ball bearing to carry a radial load of 1450 lb at a shaft speed of 1150 rpm for 15 000 hours. Use a reliability of 95%.
26. Compute the basic dynamic load rating, C , for a ball bearing to carry a radial load of 509 lb at a shaft speed of 101 rpm for 20 000 hours. Use a reliability of 99%.
27. Compute the basic dynamic load rating, C , for a ball bearing to carry a radial load of 436 lb at a shaft speed of 1700 rpm for 5000 hours. Use a reliability of 97%.
28. Compute the basic dynamic load rating, C , for a ball bearing to carry a radial load of 1250 lb at a shaft speed of 880 rpm for a design life of 20 000 hours. Use a reliability of 95%.

COMPLETION OF THE DESIGN OF A POWER TRANSMISSION

The Big Picture

- 15–1 Objectives of This Chapter
- 15–2 Description of the Power Transmission to Be Designed
- 15–3 Design Alternatives and Selection of the Design Approach
- 15–4 Design Alternatives for the Gear-Type Reducer
- 15–5 General Layout and Design Details of the Reducer
- 15–6 Final Design Details for the Shafts
- 15–7 Assembly Drawing

THE BIG PICTURE

Completion of the Design of a Power Transmission

Discussion Map

- Now we bring together the concepts and design procedures from chapters 7 to 14 to complete the design of the power transmission.

This chapter presents a summary of the steps that you should take to complete the design of the power transmission. Some procedures are quite detailed. You should be able to apply this experience to any design you are responsible for in the future.

This is where all of the work of Part II of this book comes together. In Chapters 7–14, you learned important concepts and design procedures for many kinds of machine elements that could all be part of a given power transmission. In each case, we emphasized the importance of how the elements need to work together. Now we show the approach to completing the design of a power transmission, which demonstrates an integrated approach and illustrates the title of this book, *Machine Elements in Mechanical Design*. The emphasis is on the whole design.

Discover

Consider how all of the machine elements that you have studied in Chapters 7–14 fit together.

Think also about the entire life cycle of the transmission, from its design to its disposal.

The lesson of this chapter is that you as a designer must constantly keep in mind how the part you are currently working on fits with other parts and how its design can affect the design of other parts. You must also consider how the part is to be manufactured, how it may be serviced and repaired as necessary, and how it will eventually be taken out of service. What will happen to the materials in the product when they have served their useful life as part of your current project?

Although we are using a power transmission in this example, the skills and insights that you will acquire should be transferable to the design of almost any other mechanical device or system.

15-1 OBJECTIVES OF THIS CHAPTER

After completing this chapter, you will be able to:

1. Bring together the individual components of a mechanical, gear-type power transmission into a unified, complete system.
2. Resolve the interface questions where two components fit together.
3. Establish reasonable tolerances and limit dimensions on key dimensions of components, especially where assembly and operation of the components are critical.
4. Verify that the final design is safe and suitable for its intended purpose.
5. Add details to some of the components that were not considered in earlier analyses.

15-2 DESCRIPTION OF THE POWER TRANSMISSION TO BE DESIGNED

The project to be completed in this chapter is the design of a single-reduction speed reducer that uses spur gears. We will use the data from Example Problems 9-3 through 9-6 in which the gears for the drive for an industrial saw were designed. You should review those problems now.

We will also use the elements of the mechanical design process that were first outlined in Section 1-4 and, state the functions and design requirements for the power transmission, establish a set of criteria for evaluating design decisions, and implement the design tasks that were outlined in Section 1-5. References 3, 6, 8, and 10-13 in this chapter provide additional approaches that you may find useful for other design projects.

Basic Statement of the Problem

We will design a power transmission for an industrial saw that will be used to cut tubing for vehicle exhaust pipes to length prior to the forming processes. The saw will receive 25 hp from the shaft of an electric motor rotating at 1750 rpm. The drive shaft for the saw should rotate at approximately 500 rpm.

Functions, Design Requirements, and Selection Criteria for the Power Transmission

Functions. The functions of the power transmission are as follows:

1. To receive power from an electric motor through a rotating shaft
2. To transmit the power through machine elements that reduce the rotational speed to a desired value
3. To deliver the power at the lower speed to an output shaft, which ultimately drives the saw


Design Requirements. Additional information is presented here for the specific case of the industrial saw. You would normally be responsible for acquiring the necessary information and for making design decisions at this point in the design process. You would be involved in the design of the saw and would be able to discuss its desirable features with colleagues in marketing, sales, manufacturing planning, and production management and field service, and, perhaps, with customers. The kinds of information that you should seek are provided in the following list:

1. The reducer must transmit 25 hp.
2. The input is from an electric motor whose shaft rotates at a full-load speed of 1750 rpm. It has been proposed to use a NEMA frame 284T motor having a shaft diameter of 1.875 in and a keyway to accommodate a $1/2 \times 1/2$ in key. See Figure 21-18 and Table 21-3 for more data on the dimensions of the motor. Sections 21-3 to 21-8 describe industrial AC motors.
3. The output of the reducer delivers power to the saw through a shaft that rotates at 500 rpm. The speed reduction ratio will then be 3.50.
4. A mechanical efficiency of greater than 95% is desirable.
5. The minimum torque delivered to the saw should be 2950 lb · in.
6. The saw is a band saw. The cutting operation is generally smooth, but moderate shock may be encountered as the saw blade engages the tubes and if there is any binding of the blade in the cut.
7. The speed reducer will be mounted on a rigid plate that is part of the base of the saw. The means of mounting the reducer should be specified.
8. The design for the shaft for the band-saw drive has not yet been completed. It is likely that its diameter will be the same as that of the output shaft of the reducer.
9. Whereas a small, compact size for the reducer is desirable, space in the machine base should be able to accommodate most reasonable designs.
10. The saw is expected to operate 16 h per day, 5 days per week, with a design life of 5 years. This is approximately 20 000 h of operation.
11. The machine base will be enclosed and will prevent any casual contact with the reducer. However, the functional components of the reducer should be enclosed in their own rigid housing to protect them from contaminants and to provide for the safety of those who work with the equipment.
12. The saw will operate in a factory environment and should be capable of operation in the temperature range of 50°F to 100°F.

13. The saw is expected to be produced in quantities of 5000 units per year.
14. A moderate cost is critical to the marketing success of the saw.

Selection Criteria. The list of criteria should be produced by an interdisciplinary team composed of people having broad experience with the market for and use of such equipment. The details will vary according to the specific design. As an illustration of the process, the following criteria are suggested for the present design:

1. **Safety:** The speed reducer should operate safely and provide a safe environment for people near the machine.
2. **Cost:** Low cost is desirable so that the saw appeals to a large set of customers.
3. **Small size.**
4. **High reliability.**
5. **Low maintenance.**
6. **Smooth operation, low noise, and low vibration.**

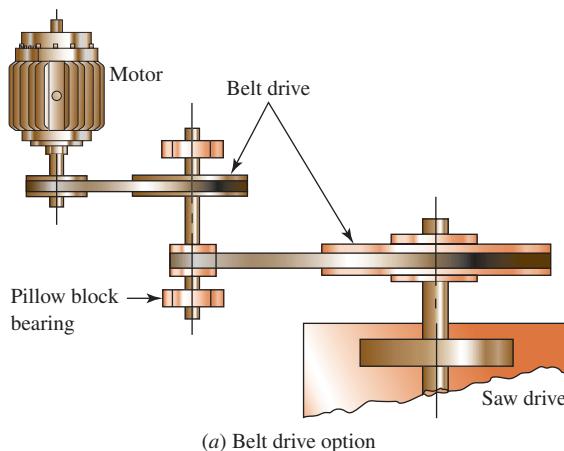

15-3 DESIGN ALTERNATIVES AND SELECTION OF THE DESIGN APPROACH

There are many ways that the speed reduction for the saw can be accomplished. Figure 15–1 shows four possibilities: (a) belt drive, (b) chain drive, (c) gear-type drive connected through flexible couplings, and (d) gear-type drive with a belt drive on the input side and connected to the saw with a flexible coupling.

Reference 9 includes a more extensive set of alternatives and a more detailed analysis. Internet site 2 provides numerous examples of commercially available speed reducers.

Selection of the Basic Design Approach

Table 15–1 shows an example of the rating that could be done to select the type of design to be produced for the speed reducer for the saw. A 10-point scale is used, with 10 being the highest rating. Of course, with more information about the actual application, a different design approach could be selected. Also, it may be desirable to proceed with more than one design to determine

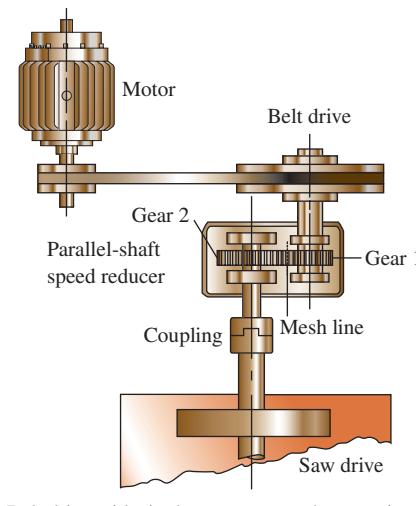
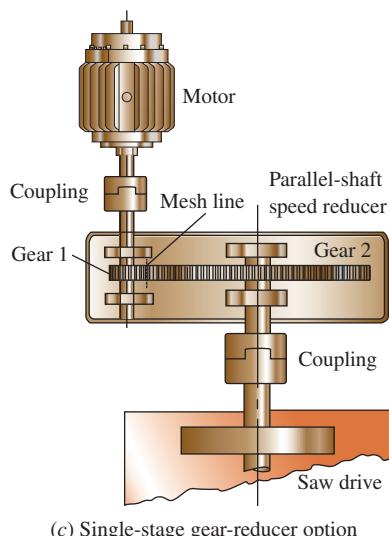
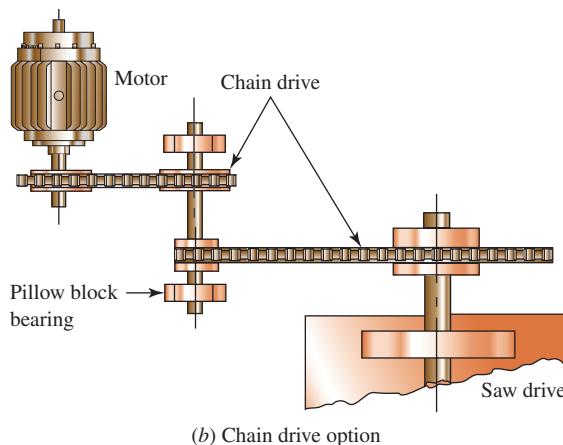


FIGURE 15–1 Options for speed reduction for saw drive design project

TABLE 15-1 Decision Analysis Chart

| Criteria | Alternatives | | | |
|----------------|--------------|--------------|---|--------------------------------------|
| | (a) Belt | (b) Chain | (c) Gear with flexible couplings | (d) Gear with input belt drive |
| 1. Safety | 6 | 6 | 9 | 7 |
| 2. Cost | 9 | 8 | 7 | 6 |
| 3. Size | 5 | 6 | 9 | 6 |
| 4. Reliability | 7 | 6 | 10 | 7 |
| 5. Maintenance | 6 | 5 | 9 | 6 |
| 6. Smoothness | 8 | 6 | 9 | 8 |
| Total: | 41 | 31 | 53 | 40 |

more of the details, thus allowing a more rational decision. A modification of the design decision matrix calls for weighting factors to be assigned to each criterion to reflect its relative importance. See References 5 and 10 and Internet site 1 for extensive discussions of rational decision analysis techniques.

On the basis of this decision analysis, let's proceed with (c), the design of a *gear-type speed reducer using flexible couplings* to connect with the drive motor and the driven shaft of the saw. It is considered to have a higher level of safety for operators and maintenance people because its rotating components are enclosed. The input and output shafts and the couplings can be covered at the time of installation. Reliability is expected to be higher because precision metallic parts are used and the drive is enclosed in a sealed housing. The flexing of belts and the significant number of moving parts in a chain drive are judged to provide lower reliability. Initial cost may be higher than for belt or chain drives. However, it is expected that maintenance will be somewhat less, leading to lower cost overall. The space taken by the design should be small, simplifying the design of other parts of the saw. Design alternative (d) is attractive if there is some interest in providing a variable-speed operation in the future. By using different belt drive ratios, we can achieve different cutting speeds for the saw. A further alternative would be to consider a variable-speed electric drive motor, either to replace the need for a reducer at all or to be used in conjunction with the gear-type reducer.

15-4 DESIGN ALTERNATIVES FOR THE GEAR-TYPE REDUCER

Now that we have selected the gear-type reducer, we need to decide which type to use. Here are some alternatives:

1. **Single-reduction spur gears:** The nominal ratio of 3.50:1 is reasonable for a single pair of gears. Spur gears produce only radial loads which simplify selection of the bearings that support the shafts. Efficiency should be greater than 95% with reasonable precision of the gears, bearings, and seals. Spur gears are relatively inexpensive to produce. Shafts would be parallel and should be fairly easy to align with the motor and the drive shaft for the saw.
2. **Single-reduction helical gears:** These gears are equally practical as spur gears. Shaft alignment is similar. A smaller size should be possible because of the greater capacity of helical gears. However, axial thrust loads would be created which must be accommodated by the bearings and the housing. Cost is likely to be somewhat higher.
3. **Bevel gears:** These gears produce a right-angle drive which may be desirable, but not necessary in the present design. They are also somewhat more difficult to design and assemble to achieve adequate precision.
4. **Worm and wormgear drive:** This drive also produces a right-angle drive. It is typically used to achieve a higher reduction ratio than 3.50:1. Efficiency is usually much lower than the 95% called for in the design requirements. Heat generation could be a problem with 25 hp and the lower efficiency. A larger motor could be required to overcome the loss of power and still provide the required torque at the output shaft.

Design Decision for the Gear Type Reducer

For the present design, we choose the *single-reduction spur gear reducer*. Its simplicity is desirable, and the final cost is likely to be lower than that of the other proposed designs. The smaller size of the helical reducer is not considered to be of high priority.

15-5 GENERAL LAYOUT AND DESIGN DETAILS OF THE REDUCER

Figure 15–2 shows the proposed arrangement of the components for the single-reduction spur gear-type speed reducer. Note that the illustration in Figure 15–2(b) is the side view. The design involves the following tasks:

1. Design a pinion and gear to transmit 25 hp with a pinion speed of 1750 rpm and a gear speed of 500 rpm. The ratio is 3.50:1. Design for both strength and pitting resistance to achieve approximately 20 000 h of life and a reliability of at least 0.999.
2. Design two shafts, one for the pinion and one for the gear. Provide positive axial location for the gears on the shaft. The input shaft must be designed to extend beyond the housing to enable the motor shaft to be

coupled to it. The output shaft must accommodate a coupling that mates with the drive shaft of the saw. Use a design reliability of 0.999.

3. Design six keys: one for each gear; one for the motor; one for the input shaft at the coupling; one for the output shaft at the coupling; and one for the drive shaft for the saw.
4. Specify two flexible couplings: one for the input shaft and one for the output shaft.
5. Specify four commercially available rolling contact bearings, two for each shaft. The L_{10} design life should be 20 000 h.
6. Design a housing to enclose the gears and the bearings and to support them rigidly.
7. Provide a means of lubricating the gears within the housing.

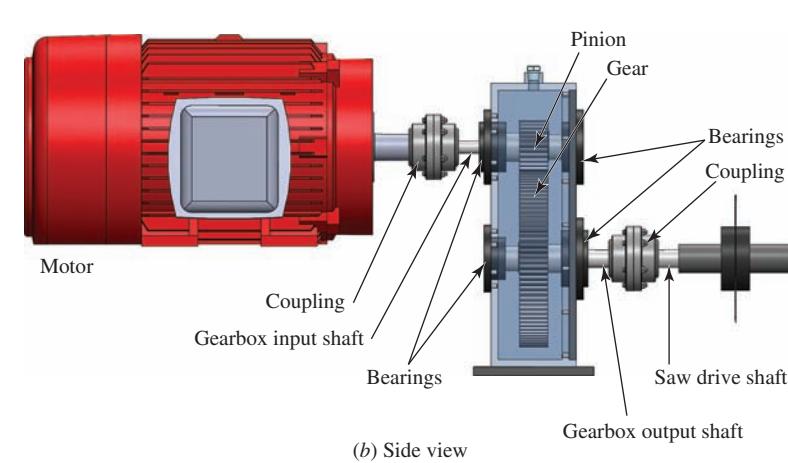
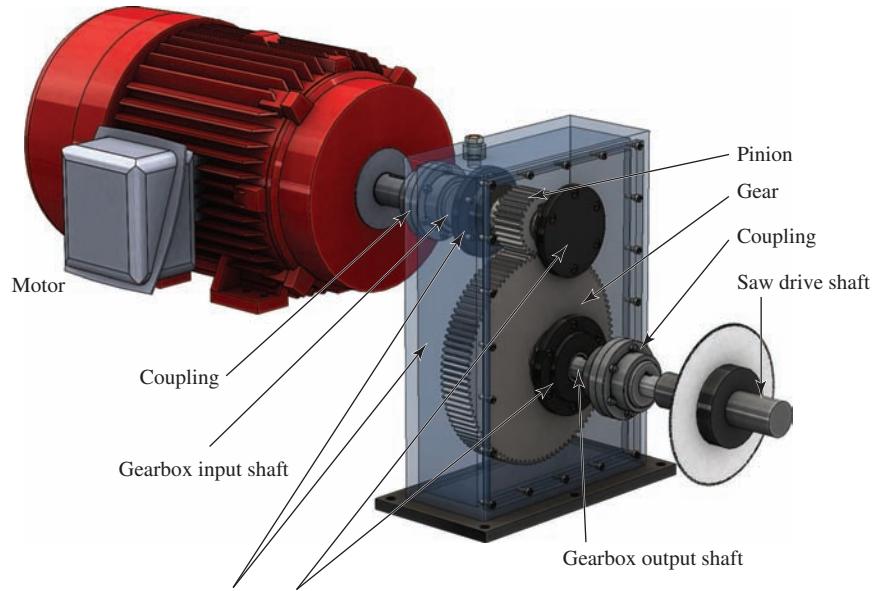


FIGURE 15–2 General layout of saw drive with a single-stage gear reducer

8. Provide seals for the input and output shafts at the place where they pass through the housing. We will not specify the particular seals because of lack of data in this book. However, refer to Chapter 11 for suggestions for the types of seals that may be suitable.

Gear Design

The conditions described above are similar to those in Example Problems 9–3 to 9–6. We propose modest changes to design decisions to achieve a gear pair that would operate more smoothly and quietly with more and smaller teeth. Namely, we select the following:

- Diametral pitch: $P_d = 8$ instead of 6 as was used before
- Number of pinion teeth = 28 and number of gear teeth = 98 instead of 20 and 70 as was used before

The modified design is shown in Figure 15–3 in the form of the output from the gear design spreadsheet developed in Chapter 9. The primary results that affect the completion of the design for the reducer are summarized as follows:

- Diametral pitch: $P_d = 8$; 20°, full-depth, involute teeth
- Number of teeth in the pinion: $N_p = 28$
- Number of teeth in the gear: $N_G = 98$
- Diameter of the pinion: $D_p = 3.500$ in
- Diameter of the gear: $D_G = 12.250$ in
- Center distance: $C = 7.875$ in
- Face width: $F = 2.00$ in
- Quality number: $A_v = 9$
- Tangential force: $W_t = 514$ lb
- Required bending stress number for pinion: $s_{at} = 20\ 915$ psi
- Required contact stress number for pinion: $s_{ac} = 153\ 363$ psi; requires 386 HB steel
- Material specified: SAE 4140 OQT 800; 429 HB; $s_u = 210$ ksi; 16% elongation

Shaft Design

1. **Forces:** Figure 15–4(a) shows the proposed configuration for the input shaft that carries the pinion and connects to the motor shaft through a flexible coupling. Figure 15–4(b) shows the output shaft, similarly configured. The only active forces on the shafts are the tangential force and the radial force from the gear teeth. The flexible couplings at the ends of the shafts allow torque transmission, but no radial or axial forces are transmitted when the alignment of the shafts is within the recommended limits for the coupling. (See Chapter 11.) Without the flexible couplings, it is very likely that significant radial loads would be produced, requiring somewhat larger diameters for the shaft and larger bearings. (See Chapter 12.)

The spreadsheet analysis for the gears gives the tangential force as $W_t = 514$ lb. It acts downward

in the vertical plane on the pinion and upward on the gear. The radial force is

$$W_r = W_t \tan \phi = (514 \text{ lb}) \tan (20^\circ) = 187 \text{ lb}$$

The radial force acts horizontally toward the left on the pinion, tending to separate the pinion from the gear. It acts toward the right on the gear.

2. **Torque values:** The torque on the input shaft is

$$T_1 = (63\ 000)(P)/n_p = (63\ 000)(25)/1750 \\ T_1 = 900 \text{ lb} \cdot \text{in}$$

This value acts from the coupling at the left end of the shaft to the pinion where the power is delivered through the key to the pinion and thus to the mating gear.

The torque on the output shaft is computed next, assuming that no power is lost. The resulting value of torque is conservative for use in the shaft design:

$$T_2 = (63\ 000)(P)/n_G = (63\ 000)(25)/500 \\ T_2 = 3150 \text{ lb} \cdot \text{in}$$

The torque acts in the output shaft from the gear to the coupling at the right end of the shaft. Assuming that the system is 95% efficient, the actual output torque is approximately

$$T_o = T_2(0.95) = 2992 \text{ lb} \cdot \text{in}$$

This value is within the required range, as indicated in the design requirements, item 5.

3. **Shearing force and bending moment diagrams:** Figure 15–4 shows the shearing force and bending moment diagrams for the two shafts. Because the active loading occurs only at the gears, the form of each diagram is the same in the vertical and horizontal directions. The first number given is the value for load, the shearing force, or the bending moment in the vertical plane. The second number in parentheses is the value in the horizontal plane. The maximum bending moment in each shaft occurs where the gears are mounted. The values are

$$M_y = 643 \text{ lb} \cdot \text{in} \quad M_x = 234 \text{ lb} \cdot \text{in}$$

The resultant moment is $M_{\max} = 684 \text{ lb} \cdot \text{in}$.

The bending moment is zero at the bearings and in the extensions for the input and output shafts.

4. **Support reactions—bearing forces:** The reactions at all bearings are the same for this example because of the simplicity of the loading pattern and the symmetry of the design. The horizontal and vertical components are

$$F_y = 257 \text{ lb} \quad F_x = 93.5 \text{ lb}$$

The resultant force is the radial force that must be carried by the bearings: $F_r = 274 \text{ lb}$. This value also produces vertical shearing stress in the shaft at the bearings.

5. **Material selection for shafts:** Each shaft will have a series of different diameters, shoulders with fillets, keyseats, and a ring groove, as shown in

| | |
|---------------------------------------|---|
| APPLICATION: | Industrial saw + electric motor |
| Data for design project in Chapter 15 | |
| Initial Input Data: | |
| Overload Factor: | $K_o = 1.50$ Table 9-1 |
| Input Power: | $P = 25 \text{ hp}$ |
| Design Power: | $P_{des} = 37.5$ |
| Input Speed: | $n_P = 1750 \text{ rpm}$ |
| Diametral Pitch: | $P_d = 8$ |
| Number of Pinion Teeth: | $N_P = 28$ |
| Desired Output Speed: | $n_G = 500 \text{ rpm}$ |
| Computed Number of Gear Teeth: | 98.0 |
| Enter: Chosen No. of Gear Teeth: | $N_G = 98$ |
| Computed Data: | |
| Actual Output Speed: | $n_G = 500.0 \text{ rpm}$ |
| Gear Ratio: | $m_G = 3.50$ |
| Pitch Diameter—Pinion: | $D_P = 3.500 \text{ in}$ |
| Pitch Diameter—Gear: | $D_G = 12.250 \text{ in}$ |
| Center Distance: | $C = 7.875 \text{ in}$ |
| Pitch Line Speed: | $v_t = 1604 \text{ ft/min}$ |
| Transmitted Load: | $W_t = 514 \text{ lb}$ |
| Secondary Input Data: | |
| Face Width Guidelines (in): | Min 1.000 Nom 1.500 Max 2.000 |
| Enter: Face Width: | $F = 2.000 \text{ in}$ |
| Ratio: Face Width/Pinion Diameter: | $F/D_P = 0.57$ |
| Recommended Range of Ratio: | $0.50 < F/D_P < 2.00$ |
| Enter: Elastic Coefficient: | $C_p = 2300$ Table 9-7 |
| Enter: Quality Number: | $A_v = 9$ Table 9-5 |
| Dynamic Factor: | $K_v = 1.33$ Table 9-6 |
| [Factors for computing K_v :] | $B = 0.630$ $C = 70.71$ |
| Reference: | $N_P = 28$ $N_G = 98$ |
| Bending Geometry Factor—Pinion: | $J_P = 0.380$ Figure 9-10 |
| Bending Geometry Factor—Gear: | $J_G = 0.440$ Figure 9-10 |
| Reference: | $m_G = 3.50$ Figure 9-17 |

| Factors in Design Analysis: | |
|--|--|
| Alignment Factor, $K_m = 1.0 + C_{pf} + C_{ma}$ | If $F < 1.0$ If $F > 1.0$ |
| Pinion Proportion Factor, $C_{pf} =$ | 0.032 0.045 [0.50 < $F/D_P < 2.00$] |
| Enter: $C_{pf} =$ | 0.045 Figure 9-12 |
| Type of Gearing: | Open Commer. |
| Mesh Alignment Factor, $C_{ma} =$ | 0.280 0.158 Precision Ex. Prec. |
| Enter: $C_{ma} =$ | 0.158 Figure 9-13 |
| Alignment Factor: $K_m =$ | 1.20 [Computed] |
| Size Factor: $K_s =$ | 1.00 Table 9-2: Use 1.00 if $P_d >= 5$ |
| Pinion Rim Thickness Factor: $K_{BP} =$ | 1.00 Figure 9-14: Use 1.00 if solid blank |
| Gear Rim Thickness Factor: $K_{BG} =$ | 1.00 Figure 9-14: Use 1.00 if solid blank |
| Service Factor: $SF =$ | 1.00 Use 1.00 if no unusual conditions |
| Reliability Factor: $K_R =$ | 1.50 Table 9-11: Use 1.00 for $R = 0.99$ |
| Enter: Design Life: 20 000 hours | See Table 9-12 |
| Pinion—Number of Load Cycles: $N_P =$ | 2.1E + 09 See Table 9-18 or Guidelines: Y_N, Z_N |
| Gear—Number of Load Cycles: $N_G =$ | 6.0E + 08 $> 10^7$ $< 10^7$ |
| Bending Stress Cycle Factor: $Y_{NP} =$ | 0.93 1.00 0.93 Figure 9-21 |
| Bending Stress Cycle Factor: $Y_{NG} =$ | 0.95 1.00 0.95 Figure 9-21 |
| Pitting Stress Cycle Factor: $Z_{NP} =$ | 0.88 1.00 0.88 Figure 9-22 |
| Pitting Stress Cycle Factor: $Z_{NG} =$ | 0.91 1.00 0.91 Figure 9-22 |
| Stress Analysis: Bending | |
| Pinion: Required $s_{at} =$ | 20 912 psi |
| Gear: Required $s_{at} =$ | 17 680 psi |
| Stress Analysis: Pitting | |
| Pinion: Required $s_{ac} =$ | 153 353 psi |
| Gear: Required $s_{ac} =$ | 148 298 psi |
| Required Hardness of Pinion HB: | 386 |
| Required Hardness of Gear HB: | 370 |
| Specify materials, alloy and heat treatment, for most severe requirement. | |
| One possible material specification: | |
| Pinion requires HB 386; SAE 4140 OQT 800; HB 429, 16% Elongation | |
| Gear requires HB 370; SAE 4140 OQT 800; HB 429, 16% Elongation | |
| Comments: | It is reasonable to specify the same material for both the pinion and the gear because the required hardness is similar. |

FIGURE 15-3 Spreadsheets used for final design project for power transmission in Chapter 15. Input data from Example Problems 9-3 to 9-6

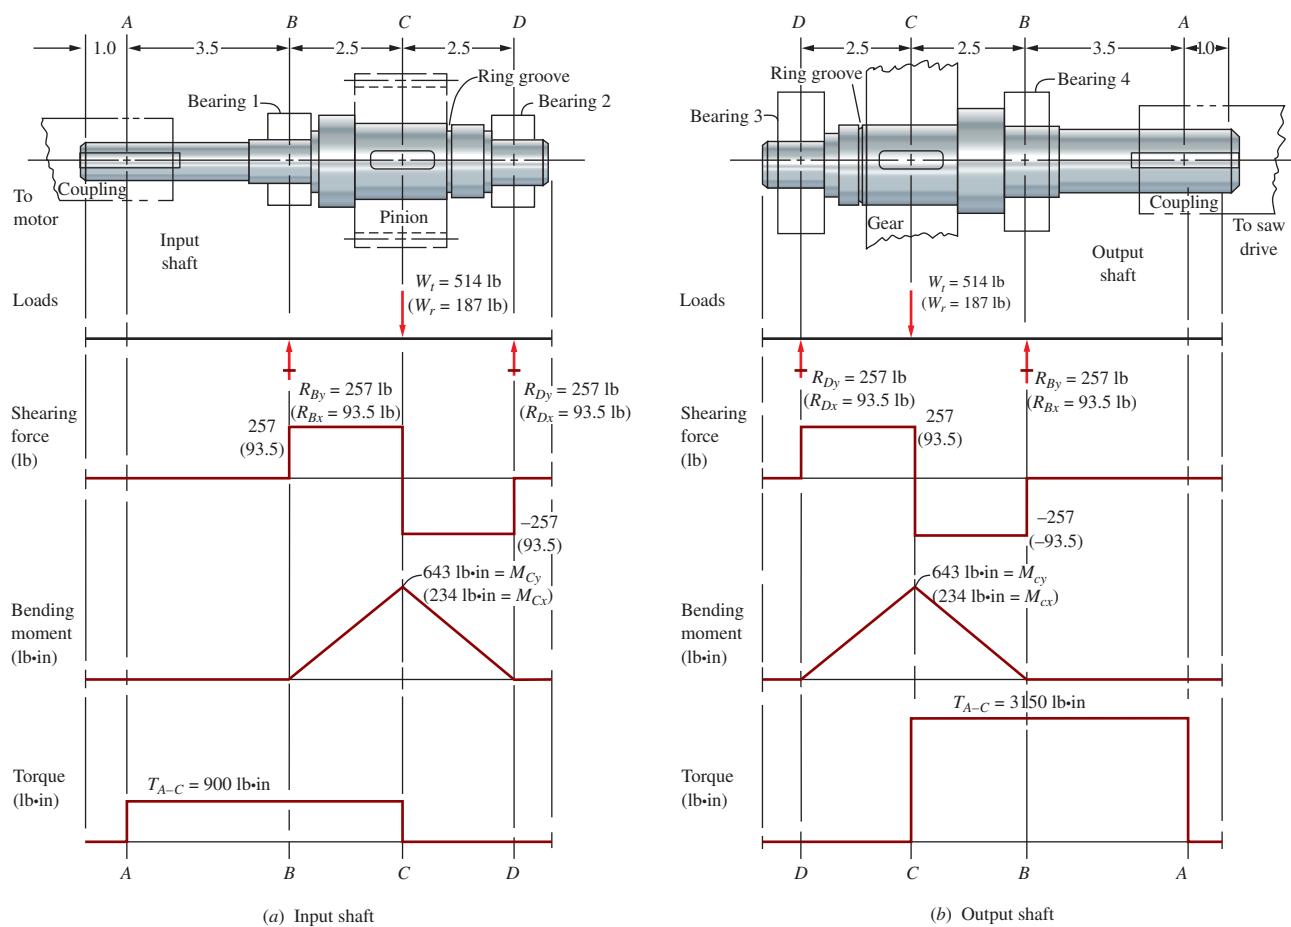


FIGURE 15–4 Diagrams of shaft configurations, shearing force, bending moment, and torque

Figure 15–4. Thus, much machining will be required. The shafts will be subjected to a combination of steady torque and reversed, repeated bending during normal use as the saw cuts steel tubing for vehicular exhaust systems. Occasional moderate shock loading is expected as the saw engages the tubing and when binding occurs in the cut due to dullness of the blade or unusually hard steel in the tubing.

These conditions call for a steel that has moderately high strength, good fatigue resistance, good ductility, and good machinability. Such shafts are typically made from a medium-carbon-alloy steel (0.30% to 0.60% carbon) in either the cold-drawn or the oil-quenched and tempered condition. Good machinability is obtained from a steel having moderately high sulfur content, a characteristic of the 1100 series. Where good hardenability is also desired, higher manganese content is used.

An example of such an alloy is SAE 1144, which has 0.40% to 0.48% carbon, 1.35% to 1.65% manganese, and 0.24% to 0.33% sulfur. It is called a *resulfurized, free-machining* grade of steel. Figure A4–2 shows the range of properties available for this material when it is oil quenched and tempered. We select a tempering temperature of 1000°F, which produces good balance between strength and ductility.

In summary, the material specified is,

$$\begin{aligned} \text{SAE 1144 OQT 1000 steel: } s_u &= 118\,000 \text{ psi} \\ s_y &= 83\,000 \text{ psi} \\ 20\% \text{ elongation} \end{aligned}$$

The endurance strength of the material can be estimated using the method outlined in Chapters 5 and 12: Basic endurance strength: $s_n = 43\,000 \text{ psi}$ (from Figure 5–11 for a machined surface)

Size factor: $C_s = 0.81$ (from Figure 5–12 with an estimate of 2.0 in diameter)

Reliability factor: $C_R = 0.75$ (desired reliability of 0.999)

Modified endurance strength:

$$\begin{aligned} s'_n &= s_n(C_s)(C_R) = (43\,000 \text{ psi})(0.81)(0.75) \\ s'_n &= 26\,100 \text{ psi} \end{aligned}$$

6. **Design factor, N :** The choice of a design factor, N , should consider the many factors discussed in Chapter 5 where a nominal value of $N = 2$ was suggested for general machine design. With the expectation of moderate shock and impact loading, let's specify $N = 4$ for extra safety.

7. **Minimum allowable shaft diameters:** The minimum allowable shaft diameters are now computed

at several sections along the shaft using Equation (12–24) if there is any combination of torsion or bending loads at the section of interest. For those sections subjected only to vertical shearing loads, such as at the bearings labeled *D* in Figure 15–4, Equation (12–16) is used. Table 15–2 summarizes the data used in these equations for each section and reports the computed minimum diameter. The spreadsheet from Section 12–9 was used to complete the analysis.

The last column in Table 15–2 also lists some *preliminary* design decisions for convenient diameters at the given locations. These will be reevaluated and refined as the design is completed. The diameters suggested for the shaft extensions at *A* on both the input and the output shafts have been set to standard values available for the bores of flexible couplings. The actual flexible couplings are discussed later.

Note that the diameters for the bearing seats at sections *B* and *D* have not been given. The reason is that the next task in the design project is to specify commercially available rolling contact bearings to carry the

radial loads with suitable life. The diameters of the shafts must be specified according to the limit dimensions recommended by the bearing manufacturer. Therefore, we will leave Table 15–2 as it is for now and revisit it after completing the bearing selection process.

Another check advisable at this stage of the design process is at section *C* where the pinion is mounted on the shaft to ensure that adequate material is above the keyseat in the pinion hub to the root of the pinion teeth. This issue was discussed in Chapter 9 in relation to the *rim thickness factor*, K_B , and shown in Figures 9–14 and 9–15. The dimension, t_R , is defined as the radial distance from the top of the key to the root of the teeth and it is recommended that $t_R/h_t > 1.2$, where h_t is the whole depth of the teeth. For the proposed shaft design with $D_C = 1.75$ in, a 3/8 in square key is used, as shown in Table 11–1. It can be shown that the radial distance to the top of the key is 1.044 in. We need to calculate the pinion root diameter and then the root radius. Recalling that the dedendum, b , is the distance from the pitch line of

TABLE 15–2 Summary of the Results of Shaft Diameter Calculations for the Preliminary Design Sizing for the Shaft

A. Input shaft

| Section | Diameter (and related component) | Bending moments | | | Shearing forces | | | Diameter (in) | | |
|---|----------------------------------|------------------|-----------------|-----------------|-----------------|------------|-------|-----------------|---------|--------|
| | | Torque (lb · in) | M_x (lb · in) | M_y (lb · in) | V_x (lb) | V_y (lb) | K_t | Feature | Minimum | Design |
| <i>A</i> | D_1 (coupling) | 900 | 0 | 0 | 0 | 0 | 1.60 | S.R. keyseat | 0.73 | 0.875 |
| <i>B</i> (to right) | D_2 (bearing) | 900 | 0 | 0 | 0 | 0 | 2.50 | Sharp fillet | 0.73 | * |
| <i>Note:</i> D_3 must be greater than D_2 or D_4 to provide shoulders for bearing and gear. | | | | | | | | | | |
| <i>C</i> | D_4 (gear) | 900 | 234 | 643 | 94 | 257 | 2.00 | Profile keyseat | 1.29 | 1.750 |
| <i>C</i> (to right) | D_4 (gear) | 0 | 234 | 643 | 94 | 257 | 3.00 | Ring groove | 1.47 | 1.750 |
| <i>D</i> | D_5 (bearing) | 0 | 0 | 0 | 94 | 257 | 2.50 | Sharp fillet | 0.56 | * |

B. Output shaft

| Section | Diameter (and related component) | Bending moments | | | Shearing forces | | | Diameter (in) | | |
|---|----------------------------------|------------------|-----------------|-----------------|-----------------|------------|-------|-----------------|---------|--------|
| | | Torque (lb · in) | M_x (lb · in) | M_y (lb · in) | V_x (lb) | V_y (lb) | K_t | Feature | Minimum | Design |
| <i>A</i> | D_1 (coupling) | 3150 | 0 | 0 | 0 | 0 | 1.60 | S.R. keyseat | 1.10 | 1.250 |
| <i>B</i> (to left) | D_2 (bearing) | 3150 | 0 | 0 | 0 | 0 | 2.50 | Sharp fillet | 1.10 | * |
| <i>Note:</i> D_3 must be greater than D_2 or D_4 to provide shoulders for bearing and gear. | | | | | | | | | | |
| <i>C</i> | D_4 (gear) | 3150 | 234 | 643 | 94 | 257 | 2.00 | Profile keyseat | 1.36 | 1.750 |
| <i>C</i> (to left) | D_4 (gear) | 0 | 234 | 643 | 94 | 257 | 3.00 | Ring groove | 1.47 | 1.750 |
| <i>D</i> | D_5 (bearing) | 0 | 0 | 0 | 94 | 257 | 2.50 | Sharp fillet | 0.56 | * |

Note: Bearing seat diameters denoted by * are to be specified. S.R. = sled runner

the gear to the bottom of the tooth space, we find the radius to the root to be

$$\begin{aligned}\text{Root radius } R_R &= R_R = D/2 - b = D/2 - 1.25/P_d \\ &= 3.500/2 - 1.25/8 = 1.594 \text{ in}\end{aligned}$$

Then,

$$t_R = R_R - 1.044 \text{ in} = 1.594 - 1.044 = 0.550 \text{ in}$$

The whole depth of the gear teeth is as follows:

$$\begin{aligned}h_t &= a + b = 1/P_d + 1.25/P_d \\ &= 2.25/P_d = 2.25/8 = 0.281 \text{ in} \\ t_R/h_t &= 0.550/0.281 = 1.95 > 1.2\end{aligned}$$

Therefore, the space is adequate and it is acceptable to mount the pinion on the shaft. If this check failed, it is recommended that the design be changed—possibly using a smaller shaft diameter or machining the pinion directly into the shaft and eliminating the need for a key.

Bearing Selection

We will use the method outlined in Section 14–9 to select commercially available, single-row, deep-groove ball bearings from the data given in Table 14–3. The design load is equal to the radial load, and the value can be found from the shaft analysis shown in Figure 15–4. The reactions at the supports for each shaft are, in fact, the radial loads to which the bearings are subjected.

Because of the symmetry of the design of this system, and because there are no radial loads on the shaft except those produced by the action of the **gear teeth**, the radial loads on each of the four bearings in this design are the same. Earlier in this chapter, in the shaft design section, we determined that the bearing load is 274 lb.

Recall that design life for the bearings, L_d , is the total number of revolutions expected in service. Therefore, it is dependent on both the rotational speed of the shaft and the design life in hours. We are using a design

life of 20 000 h for all bearings. Shaft 1, the input shaft, rotates at 1750 rpm, resulting in a total number of revolutions of

$$\begin{aligned}L_d &= (20\,000 \text{ h})(1750 \text{ rev/min})(60 \text{ min/h}) = \\ &\quad 2.10 \times 10^9 \text{ rev}\end{aligned}$$

Shaft 2, the output shaft, rotates at 500 rpm. Then its design life is

$$\begin{aligned}L_d &= (20\,000 \text{ h})(500 \text{ rev/min})(60 \text{ min/h}) = \\ &\quad 6.0 \times 10^8 \text{ rev}\end{aligned}$$

Data for the bearings in Table 14–3 are for a life of 1.0 million rev (10^6 rev).

Now we will use Equation (14–3) with $k = 3$ to compute the required basic dynamic load rating C for each ball bearing. For the bearings on shaft 1,

$$C = P_d(L_d/10^6)^{1/k} = (274 \text{ lb})(2.10 \times 10^9/10^6)^{1/3} = 3510 \text{ lb}$$

Similarly, for the bearings on shaft 2,

$$C = P_d(L_d/10^6)^{1/k} = (274 \text{ lb})(6.0 \times 10^8/10^6)^{1/3} = 2310 \text{ lb}$$

Listed in Table 15–3 are candidate bearings for each shaft having basic dynamic load ratings at least as high as those just computed. We also need to refer to Table 15–2 to determine the minimum acceptable diameters for the shafts at each bearing seat to ensure that the inner race diameter for the bearing is compatible.

We have selected the smallest bearing for each location on shaft 1 that had a suitable value for the basic dynamic load rating. For shaft 2, we decided that the diameter of the shaft extension should be 1.25 in and that the bearing bore must be larger. Bearing 6207 provides a suitable bore and an additional safety factor on the load rating.

Note that the dimensions for the bearings are actually listed in mm by the manufacturer as indicated in Table 14–3. The decimal-inch equivalents are somewhat

TABLE 15–3 Candidate Bearings for Shafts 1 and 2

A. For shaft 1: Minimum bore = 0.73 in at section B; 0.56 in at section D; $C_{min} = 3516$ lb

| Bearing no. | C (lb) | d (in) | D (in) | B (in) | r_{max} (in) | Comment |
|-------------|----------|----------|----------|----------|----------------|--------------------------|
| 6206 | 4384 | 1.1811 | 2.4409 | 0.6299 | 0.039 | Large for both B and D |
| 6305 | 5058 | 0.9843 | 2.4409 | 0.6693 | 0.039 | Specify for both B and D |

B. For shaft 2: Minimum bore = 1.10 in at section B; 0.56 in at section D; $C_{min} = 2310$ lb

| Bearing no. | C (lb) | d (in) | D (in) | B (in) | r_{max} (in) | Comment |
|-------------|----------|----------|----------|----------|----------------|----------------------------|
| 6205 | 3147 | 0.9843 | 2.0472 | 0.5906 | 0.039 | Small for B; specify for D |
| 6207 | 5733 | 1.3780 | 2.8346 | 0.6693 | 0.039 | Specify for B |

inconvenient, but they must be used. The dimensions in mm are listed as follows:

| Inch dimension | mm | Inch dimension | mm |
|----------------|----|----------------|-------------------------|
| 0.5906 | 15 | 1.3780 | 35 |
| 0.6299 | 16 | 2.0472 | 52 |
| 0.6693 | 17 | 2.4409 | 62 |
| 0.9843 | 25 | 2.8346 | 72 |
| 1.1811 | 30 | 0.039 | 1.00-mm (fillet radius) |

Bearing Mounting on the Shafts and in the Housing

With the specifications for the bearings, we can finalize the basic dimensions for the shaft diameters. Table 15–4 is an update of the data in Table 15–2 with the bearing bore dimensions given. A few other changes are included as well, which is typical of the iterative

nature of design. For example, the diameter of the input shaft at the coupling (section *A*) was made slightly smaller than the bearing seat diameter. This permits the bearing to be slid onto the shaft easily to the point where it is then pressed into position on its seat at section *B* and against the shoulder. Another check needs to be made at section *D* for both shafts where a 1.750-in diameter steps down to the bearing seat diameter of 0.984 in. There is the possibility that the step is too large and that it may interfere with the outer race of the bearing. That will be checked as we complete the details of mounting the bearings. If interference does occur, it should be a simple matter to provide another small step to make the bearing shoulder an acceptable height.

Mounting of ball and roller bearings on shafts and into housings requires very careful consideration of limit dimensions on all mating parts to ensure proper fits as defined by the bearing manufacturer. The total tolerances on shaft diameters are only a few ten-thousandths of an inch in sizes up to about 6.00 in. Total tolerances on housing bore diameters range from about 0.001 to 0.004 in

TABLE 15–4 Summary of the Results of the Shaft Diameter Calculations for the Revised Design Sizing for the Shaft

A. Input shaft

| Section | Diameter (and related component) | Bending moments | | | Shearing forces | | | Diameter (in) | | |
|--|----------------------------------|------------------|-----------------|-----------------|-----------------|------------|-------|-----------------|---------|--------|
| | | Torque (lb · in) | M_x (lb · in) | M_y (lb · in) | V_x (lb) | V_y (lb) | K_t | Feature | Minimum | Design |
| <i>A</i> | D_1 (coupling) | 900 | 0 | 0 | 0 | 0 | 1.60 | S.R. keyseat | 0.73 | 0.875 |
| <i>B</i> (to right) | D_2 (bearing) | 900 | 0 | 0 | 0 | 0 | 2.50 | Sharp fillet | 0.73 | 0.984 |
| <i>Note: D_3 must be greater than D_2 or D_4 to provide shoulders for bearing and gear.</i> | | | | | | | | | | |
| <i>C</i> | D_4 (gear) | 900 | 234 | 643 | 94 | 257 | 2.00 | Profile keyseat | 1.29 | 1.750 |
| <i>C</i> (to right) | D_4 (gear) | 0 | 234 | 643 | 94 | 257 | 3.00 | Ring groove | 1.47 | 1.750 |
| <i>D</i> | D_5 (bearing) | 0 | 0 | 0 | 94 | 257 | 2.50 | Sharp fillet | 0.56 | 0.984 |

B. Output shaft

| Section | Diameter (and related component) | Bending moments | | | Shearing forces | | | Diameter (in) | | |
|--|----------------------------------|------------------|-----------------|-----------------|-----------------|------------|-------|-----------------|---------|--------|
| | | Torque (lb · in) | M_x (lb · in) | M_y (lb · in) | V_x (lb) | V_y (lb) | K_t | Feature | Minimum | Design |
| <i>A</i> | D_1 (coupling) | 3150 | 0 | 0 | 0 | 0 | 1.60 | S.R. keyseat | 1.10 | 1.250 |
| <i>B</i> (to left) | D_2 (bearing) | 3150 | 0 | 0 | 0 | 0 | 2.50 | Sharp fillet | 1.10 | 1.378 |
| <i>Note: D_3 must be greater than D_2 or D_4 to provide shoulders for bearing and gear.</i> | | | | | | | | | | |
| <i>C</i> | D_4 (gear) | 3150 | 234 | 643 | 94 | 257 | 2.00 | Profile keyseat | 1.36 | 1.750 |
| <i>C</i> (to left) | D_4 (gear) | 0 | 234 | 643 | 94 | 257 | 3.00 | Ring groove | 1.47 | 1.750 |
| <i>D</i> | D_5 (bearing) | 0 | 0 | 0 | 94 | 257 | 2.50 | Sharp fillet | 0.56 | 0.984 |

Note: S.R. = sled runner

for sizes from about 1.00 in to over 16.0 in. Violation of the recommended fits will likely cause unsatisfactory performance and possibly early failure of the bearing.

The bore of a bearing is typically pressed onto the shaft seat with a light interference fit to ensure that the inner race rotates with the shaft. The OD of the bearing is typically a close sliding fit in the housing, with the minimum clearance being zero. This facilitates installation and allows some slight movement of the bearing as thermal deformation occurs during operation. Tighter fits than those recommended by the manufacturer may cause the rolling elements to bind between the inner and outer races, resulting in higher loads and higher friction. Looser fits may permit the outer race to rotate relative to the housing, a very undesirable situation.

Only one of the two bearings on a shaft should be located and held fixed axially in the housing to provide proper alignment of functional components such as the gears in this design. The second bearing should be installed in a way that allows some small axial movement during operation. If the second bearing is held fixed also, it is likely that extra axial loads will be developed for which the bearing has not been designed.

We first discuss the specification of shaft limit dimensions at the bearing seats.

Bearing Seat Diameters. Because most commercially available bearings are produced to metric dimensions, the fits are specified according to the tolerance system of the International Organization for Standardization (ISO). Only a sampling of the data are listed here to illustrate the process of specifying limit dimensions for shafts and housings to accommodate bearings. Manufacturers' catalogs include much more extensive data.

For bearings carrying moderate to heavy loads such as those in this example design, the following tolerance grades are recommended for the bearing seats on shafts and housing bore fits with the outer race:

| Bearing bore diameter range | Tolerance grade |
|-----------------------------|-----------------|
| 10–18 mm | j5 |
| 20–100 mm | k5 |
| 105–140 mm | m5 |
| 150–200 mm | m6 |
| Housing bore (any) | H8 |

Table 15–5 shows representative data for the actual limit dimensions for these grades over the size ranges included for the bearings listed in Table 14–3. Note that the bearing bore and the bearing OD dimensions are those expected from the bearing manufacturers. You must control the shaft diameter and the housing bore to the specified minimum and maximum dimensions. The table also lists the minimum and maximum fits that result. The symbol L indicates that there is a net clearance (loose) fit; T indicates an interference (tight) fit. So bearings must

be pressed onto the shaft seat. Sometimes heating of the bearing and cooling of the shaft are used to produce a clearance to facilitate assembly. When the parts return to normal temperatures, the final fit is produced.

We now show the determination of the limit dimensions for the shaft at each bearing seat.

Shaft 1: Input Shaft. Both bearings 1 and 2 are number 6305.

Nominal bore = 25 mm (0.9843 in)

From Table 15–5: k5 ISO tolerance grade on the shaft seat; limits of 0.9847–0.9844 in

Resulting fit between bearing bore and shaft seat: 0.0001 in - tight to 0.0008 in - tight

OD of the outer race = 62 mm (2.4409 in)

From Table 15–5: H8 ISO tolerance grade on the housing bore; limits of 2.4409–2.4427 in

Resulting fit between outer race and housing bore: 0.0 to 0.0023 in - loose

Shaft 2: Output Shaft. Bearing 3 at D is number 6205.

Nominal bore = 25 mm (0.9843 in)

From Table 15–5: k5 ISO tolerance grade on the shaft seat; limits of 0.9847–0.9844 in

Resulting fit between bearing bore and shaft seat: 0.0001 in - tight to 0.0008 in - tight

OD of the outer race = 52 mm (2.0472 in)

From Table 15–5: H8 ISO tolerance grade on the housing bore; limits of 2.0472–2.0490 in

Resulting fit between outer race and housing bore: 0.0 to 0.0023 in - loose

Shaft 2: Output Shaft.

Bearing 4 at B is number 6207.

Nominal bore = 35 mm (1.3780 in)

From Table 15–5: k5 ISO tolerance grade on the shaft seat; limits of 1.3785–1.3781 in

Resulting fit between bearing bore and shaft seat: 0.0001 in - tight to 0.0010 in - tight

OD of the outer race = 72 mm (2.8346 in)

From Table 15–5: H8 ISO tolerance grade on the housing bore; limits of 2.8346–2.8364 in

Resulting fit between outer race and housing bore: 0.0 to 0.0023 in - loose.

Shaft and Housing Shoulder Diameters. Each of the bearings in this design is to be seated against a shoulder on one side of the bearing. The shaft shoulder must be sufficiently large to provide a solid, flat surface against which to seat the side of the inner race. But the shoulder must not be so high that it contacts the outer race because the inner race rotates at the shaft speed and the outer race is stationary.

TABLE 15–5 Shaft and Housing Fits for Bearings**A. Shaft fits**

| Nominal (mm) | Bearing bore | | ISO tolerance grade | Shaft diameter | | Limits of fit | |
|-----------------|-----------------|-----------------|---------------------------|-----------------|-----------------|-----------------|-----------------|
| | Maximum (in) | Minimum (in) | | Maximum (in) | Minimum (in) | Minimum (in) | Maximum (in) |
| 10 | 0.3937 | 0.3934 | j5 | 0.3939 | 0.3936 | 0.0001L | 0.0005T |
| 12 | 0.4724 | 0.4721 | j5 | 0.4726 | 0.4723 | 0.0001L | 0.0005T |
| 15 | 0.5906 | 0.5903 | j5 | 0.5908 | 0.5905 | 0.0001L | 0.0005T |
| 17 | 0.6693 | 0.6690 | j5 | 0.6695 | 0.6692 | 0.0001L | 0.0005T |
| 20 | 0.7874 | 0.7870 | k5 | 0.7878 | 0.7875 | 0.0001T | 0.0008T |
| 25 | 0.9843 | 0.9839 | k5 | 0.9847 | 0.9844 | 0.0001T | 0.0008T |
| 30 | 1.1811 | 1.1807 | k5 | 1.1815 | 1.1812 | 0.0001T | 0.0008T |
| 35 | 1.3780 | 1.3775 | k5 | 1.3785 | 1.3781 | 0.0001T | 0.0010T |
| 40 | 1.5748 | 1.5743 | k5 | 1.5753 | 1.5749 | 0.0001T | 0.0010T |
| 45 | 1.7717 | 1.7712 | k5 | 1.7722 | 1.7718 | 0.0001T | 0.0010T |
| 50 | 1.9685 | 1.9680 | k5 | 1.9690 | 1.9686 | 0.0001T | 0.0010T |
| 55 | 2.1654 | 2.1648 | k5 | 2.1660 | 2.1655 | 0.0001T | 0.0012T |
| 60 | 2.3622 | 2.3616 | k5 | 2.3628 | 2.3623 | 0.0001T | 0.0012T |
| 65 | 2.5591 | 2.5585 | k5 | 2.5597 | 2.5592 | 0.0001T | 0.0012T |
| 70 | 2.7559 | 2.7553 | k5 | 2.7565 | 2.7560 | 0.0001T | 0.0012T |
| 75 | 2.9528 | 2.9522 | k5 | 2.9534 | 2.9529 | 0.0001T | 0.0012T |
| 80 | 3.1496 | 3.1490 | k5 | 3.1502 | 3.1497 | 0.0001T | 0.0012T |
| 85 | 3.3465 | 3.3457 | k5 | 3.3472 | 3.3466 | 0.0001T | 0.0015T |
| 90 | 3.5433 | 3.5425 | k5 | 3.5440 | 3.5434 | 0.0001T | 0.0015T |
| 95 | 3.7402 | 3.7394 | k5 | 3.7409 | 3.7403 | 0.0001T | 0.0015T |
| 100 | 3.9370 | 3.9362 | k5 | 3.9377 | 3.9371 | 0.0001T | 0.0015T |
| 105 | 4.1339 | 4.1331 | m5 | 4.1350 | 4.1344 | 0.0005T | 0.0019T |
| 110 | 4.3307 | 4.3299 | m5 | 4.3318 | 4.3312 | 0.0005T | 0.0019T |
| 115 | 4.5276 | 4.5268 | m5 | 4.5287 | 4.5281 | 0.0005T | 0.0019T |
| 120 | 4.7244 | 4.7236 | m5 | 4.7255 | 4.7249 | 0.0005T | 0.0019T |
| 125 | 4.9213 | 4.9203 | m5 | 4.9226 | 4.9219 | 0.0006T | 0.0023T |
| 130 | 5.1181 | 5.1171 | m5 | 5.1194 | 5.1187 | 0.0006T | 0.0023T |
| 140 | 5.5118 | 5.5108 | m5 | 5.5131 | 5.5124 | 0.0006T | 0.0023T |
| 150 | 5.9055 | 5.9045 | m6 | 5.9071 | 5.9061 | 0.0006T | 0.0026T |
| 160 | 6.2992 | 6.2982 | m6 | 6.3008 | 6.2998 | 0.0006T | 0.0026T |
| 170 | 6.6929 | 6.6919 | m6 | 6.6945 | 6.6935 | 0.0006T | 0.0026T |
| 180 | 7.0866 | 7.0856 | m6 | 7.0882 | 7.0872 | 0.0006T | 0.0026T |
| 190 | 7.4803 | 7.4791 | m6 | 7.4821 | 7.4810 | 0.0007T | 0.0030T |
| 200 | 7.8740 | 7.8728 | m6 | 7.8758 | 7.8747 | 0.0007T | 0.0030T |

B. Housing fits

| Nominal (mm) | Bearing OD | | ISO tolerance grade | Housing bore | | Limits of fit | |
|--------------|--------------|--------------|---------------------|--------------|--------------|---------------|--------------|
| | Maximum (in) | Minimum (in) | | Maximum (in) | Minimum (in) | Minimum (in) | Maximum (in) |
| 30 | 1.1811 | 1.1807 | H8 | 1.1811 | 1.1824 | 0 | 0.0017L |
| 32 | 1.2598 | 1.2594 | H8 | 1.2598 | 1.2613 | 0 | 0.0019L |
| 35 | 1.3780 | 1.3776 | H8 | 1.3780 | 1.3795 | 0 | 0.0019L |

(continued)

TABLE 15–5 Shaft and Housing Fits for Bearings (*continued*)**B. Housing fits**

| Nominal (mm) | Bearing <i>OD</i> | | ISO tolerance grade | Housing bore | | Limits of fit | |
|--------------|-------------------|--------------|---------------------|--------------|--------------|---------------|--------------|
| | Maximum (in) | Minimum (in) | | Maximum (in) | Minimum (in) | Minimum (in) | Maximum (in) |
| 37 | 1.4567 | 1.4563 | H8 | 1.4567 | 1.4582 | 0 | 0.0019L |
| 40 | 1.5748 | 1.5744 | H8 | 1.5748 | 1.5763 | 0 | 0.0019L |
| 42 | 1.6535 | 1.6531 | H8 | 1.6535 | 1.6550 | 0 | 0.0019L |
| 47 | 1.8504 | 1.8500 | H8 | 1.8504 | 1.8519 | 0 | 0.0019L |
| 52 | 2.0472 | 2.0467 | H8 | 2.0472 | 2.0490 | 0 | 0.0023L |
| 62 | 2.4409 | 2.4404 | H8 | 2.4409 | 2.4427 | 0 | 0.0023L |
| 72 | 2.8346 | 2.8341 | H8 | 2.8346 | 2.8364 | 0 | 0.0023L |
| 80 | 3.1496 | 3.1491 | H8 | 3.1496 | 3.1514 | 0 | 0.0023L |
| 85 | 3.3465 | 3.3459 | H8 | 3.3465 | 3.3486 | 0 | 0.0027L |
| 90 | 3.5433 | 3.5427 | H8 | 3.5433 | 3.5454 | 0 | 0.0027L |
| 100 | 3.9370 | 3.9364 | H8 | 3.9370 | 3.9391 | 0 | 0.0027L |
| 110 | 4.3307 | 4.3301 | H8 | 4.3307 | 4.3328 | 0 | 0.0027L |
| 120 | 4.7244 | 4.7238 | H8 | 4.7244 | 4.7265 | 0 | 0.0027L |
| 125 | 4.9213 | 4.9206 | H8 | 4.9213 | 4.9238 | 0 | 0.0032L |
| 130 | 5.1181 | 5.1174 | H8 | 5.1181 | 5.1206 | 0 | 0.0032L |
| 140 | 5.5118 | 5.5111 | H8 | 5.5118 | 5.5143 | 0 | 0.0032L |
| 150 | 5.9055 | 5.9048 | H8 | 5.9055 | 5.9080 | 0 | 0.0032L |
| 160 | 6.2992 | 6.2982 | H8 | 6.2992 | 6.3017 | 0 | 0.0035L |
| 170 | 6.6929 | 6.6919 | H8 | 6.6929 | 6.6954 | 0 | 0.0035L |
| 180 | 7.0866 | 7.0856 | H8 | 7.0866 | 7.0891 | 0 | 0.0035L |
| 190 | 7.4803 | 7.4791 | H8 | 7.4803 | 7.4831 | 0 | 0.0040L |
| 200 | 7.8740 | 7.8728 | H8 | 7.8740 | 7.8768 | 0 | 0.0040L |
| 215 | 8.4646 | 8.4634 | H8 | 8.4646 | 8.4674 | 0 | 0.0040L |
| 225 | 8.8583 | 8.8571 | H8 | 8.8583 | 8.8611 | 0 | 0.0040L |
| 230 | 9.0551 | 9.0539 | H8 | 9.0551 | 9.0579 | 0 | 0.0040L |
| 240 | 9.4488 | 9.4476 | H8 | 9.4488 | 9.4516 | 0 | 0.0040L |
| 250 | 9.8425 | 9.8413 | H8 | 9.8425 | 9.8453 | 0 | 0.0040L |
| 260 | 10.2362 | 10.2348 | H8 | 10.2362 | 10.2394 | 0 | 0.0046L |
| 270 | 10.6299 | 10.6285 | H8 | 10.6299 | 10.6331 | 0 | 0.0046L |
| 280 | 11.0236 | 11.0222 | H8 | 11.0236 | 11.0268 | 0 | 0.0046L |
| 290 | 11.4173 | 11.4159 | H8 | 11.4173 | 11.4205 | 0 | 0.0046L |
| 300 | 11.8110 | 11.8096 | H8 | 11.8110 | 11.8142 | 0 | 0.0046L |
| 310 | 12.2047 | 12.2033 | H8 | 12.2047 | 12.2079 | 0 | 0.0046L |
| 320 | 12.5984 | 12.5968 | H8 | 12.5984 | 12.6019 | 0 | 0.0051L |
| 340 | 13.3858 | 13.3842 | H8 | 13.3858 | 13.3893 | 0 | 0.0051L |
| 360 | 14.1732 | 14.1716 | H8 | 14.1732 | 14.1767 | 0 | 0.0051L |
| 380 | 14.9606 | 14.9590 | H8 | 14.9606 | 14.9641 | 0 | 0.0051L |
| 400 | 15.7480 | 15.7464 | H8 | 15.7480 | 15.7515 | 0 | 0.0051L |
| 420 | 16.5354 | 16.5336 | H8 | 16.5354 | 16.5392 | 0 | 0.0056L |

Note: L = loose; and T = tight.

Similarly, a shoulder in the housing must provide for the solid location of the outer race but not be such that it contacts the inner race.


Bearing manufacturers' catalogs provide data such as those shown in Table 14–3 to guide you in specifying suitable shoulder heights. As shown in Figure 15–5, the value of S is the minimum shaft shoulder diameter. The nominal maximum diameter is the mean diameter for the bearing at the middle of the balls. The value of H is the maximum housing shoulder diameter, with the nominal minimum diameter being the mean diameter for the bearing.

For example, in the present design, the minimum shoulder diameter at each bearing on shaft 1 should be 1.260 in as indicated for the bearing number 305 in Table 14–3. (Note that the bearing number 6305 specified for the shaft is of the same series as the number 305, indicating that it would have similar dimensions.) The maximum housing shoulder diameter for the number 305 bearing is 2.165 in, where the outer race is to seat against a shoulder.

On shaft 2, the shoulder for bearing 6205 should also be at least 1.181 in, and the shoulder for bearing 6207 should be 1.654 in minimum. The maximum housing shoulder diameter for the 6205 bearing on shaft 2 is 1.850. For the 6207 bearing, the maximum housing shoulder diameter is 2.559 in.

Table 15–6 shows the pertinent data used to decide on the values for the shoulder diameters and, in the last two columns, gives the specified values. Where the specified shoulder diameter is less than the preliminary value shown in Table 15–4, another step in the shaft will be used to provide the proper shoulder for the bearing and for the gear. This can be seen in the drawings of the shafts given at the end of this chapter.

The use of a 1.75-in diameter for the shoulder at D on shaft 1 was specified because that is the diameter of the shaft chosen earlier. It is a bit higher than the mean

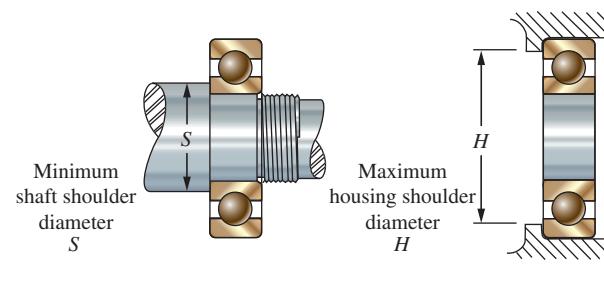

Notes:

S = minimum shaft shoulder diameter

Maximum diameter should not exceed the mean diameter of the bearing at the middle of the balls.

H = maximum housing shoulder diameter

Minimum diameter should not be less than the mean diameter of the bearing at the middle of the balls.

Refer to Table 14–3 in Chapter 14 for the values of S and H .

FIGURE 15–5 Shaft and housing shoulder diameters

diameter of the bearing, but it should still be lower than that of the outer race. More complete data in a manufacturer's catalog indicates the diameter of the inner surface of the outer race to be 2.00 in, so the 1.75 in diameter is acceptable.

Fillet Radii. Each of the bearings specified for the reducer calls for the maximum fillet radius at the shoulder that locates the bearing to be 0.039 in. (See Table 14–3.) Let's specify the limits on the radius to be 0.039 to 0.035. Before committing to the design, we will check the stress concentration factor at each shoulder.

Flexible Couplings. The use of flexible couplings on both the input and the output shafts has been taken into account in the shaft design and analysis. They allow the transmission of torque between two shafts but do not exert significant radial or axial forces on the shaft. In the present design, the use of flexible couplings made the

TABLE 15–6 Shaft and Housing Shoulder Diameters for Bearings in the Present Design

| A. Shaft 1 | | | | | | | | |
|-------------------|--------|--------|---------------|-----------|-----------|--------------------------|----------------------------|--|
| Bearing no. | Bore | OD | Mean diameter | S Minimum | H Maximum | Specified shaft shoulder | Specified housing shoulder | |
| 6305 at B | 0.9843 | 2.4409 | 1.713 | 1.260 | 2.165 | 1.50 | 2.00 | |
| 6305 at D | 0.9843 | 2.4409 | 1.713 | 1.260 | 2.165 | 1.75 | 2.00 | |
| B. Shaft 2 | | | | | | | | |
| Bearing no. | Bore | OD | Mean diameter | S Minimum | H Maximum | Specified shaft shoulder | Specified housing shoulder | |
| 6207 at B | 1.3780 | 2.8346 | 2.106 | 1.654 | 2.559 | 2.00 | 2.25 | |
| 6205 at D | 0.9843 | 2.0472 | 1.516 | 1.181 | 1.850 | 1.50 | 1.75 | |

shaft design simpler and decreased the loads on bearings compared with having a device such as a belt sheave or a chain sprocket on the shaft.

Now we specify suitable couplings for the input and output shafts. Chapter 11 showed many examples for such couplings, and you should review them now. It is impractical to reproduce data for all couplings in this book. As you read this section, it would be good for you to examine the Internet site of one of the manufacturers of couplings and study their recommended selection procedures. (See the Internet sites for Chapter 11.)

We have selected couplings of the type pictured in Figure 11–22, called the *D-Flex Coupling* from the Baldor-Dodge Company. Elastomeric flex members accommodate parallel misalignment of the mating shafts up to 0.062 in, angular misalignment of $\pm 1^\circ$, and axial end float of the shafts of up to ± 0.125 in. It is important for you to design the drive system for the saw to provide this alignment of the input shaft to the drive motor and of the output shaft to the drive shaft of the saw.

The selection of a suitable coupling relies on the power transmission rating of the various sizes available. But the power rating must be correlated to the speed of rotation because the real variable is the torque to which the coupling is subjected. Both the input and the output couplings transmit nominally 25 hp in this design for the drive for the saw. But the input shaft rotates at 1750 rpm, and the output shaft rotates at 500 rpm. Because torque is inversely proportional to the speed of rotation, the torque experienced by the coupling on the output shaft is approximately 3.5 times higher than that on the input shaft. The coupling catalog data also call for the use of a *service factor* based on the kind of machine being driven, and some suggested values are included in the catalog. We judge that a service factor of 1.5 is suitable for the saw which will see mostly smooth power transmission with occasional moderate shock loading.

The service factor is applied to the nominal power being transmitted to compute a value for the *normal rating* for the couplings. Then,

$$\begin{aligned}\text{Normal rating} &= \text{power input} \times \text{service factor} \\ &= 25 \text{ hp}(1.5) = 37.5 \text{ hp}\end{aligned}$$

The catalog tables list coupling size 8 with a suitable normal rating at 1750 rpm for the input shaft and size 11 for the output shaft at 500 rpm.

We specify hubs for the couplings that have machined bores and keyways with a range of bores allowed. Each coupling half can have a different bore according to the shaft size on which it is to be mounted. For the input shaft, we have specified the diameter to be 0.875 in (7/8 in), and this will be the specification for the bore of that half for the coupling. The keyway is $3/16 \times 3/32$ to accept a 3/16-in square key.

The other half of the input shaft coupling mounts on the motor shaft. Recall that the design requirements listed at the beginning of this design process specified

a 25-hp motor with a NEMA Frame 284T. Table 21–3 gives the shaft diameter for this motor to be 1.875 in (1 7/8 in) with a $1/2 \times 1/4$ in keyway to accept a 1/2-in square key. This will be the bore specified for the motor half of the input shaft coupling. The reason for the large difference in the sizes of the shafts for the motor and for our reducer is that the general-purpose motor must be designed to carry a significant side load, and our shaft does not.

The output shaft of the reducer at the coupling has a diameter of 1.250 in, and the input shaft for the saw will have the same size. Therefore, both halves of the output shaft coupling will have that bore with a $1/4 \times 1/8$ in keyway to accept a 1/4-in square key.

Keys and Keyseats. A total of six keys need to be specified: two for each half of the flexible couplings on the input and output shafts, and one for each gear in the reducer. The methods of Chapter 11 are used to verify the suitability of the keys and to specify the required length using Equation (11–5). We will use standard key sizes made from SAE 1018 CD steel having a yield strength of 54 000 psi.

1. **Keys for the coupling on the input shaft:** First let's check the keys inside the couplings because their sizes have already been specified by the coupling manufacturer. The coupling half that mounts on the input shaft is critical because its bore diameter of 0.875 in is smaller, resulting in larger forces on the key when transmitting the torque of 900 lb·in which was computed earlier during the shaft design. The key is 3/16-in square (0.188 in). We use a design factor N of 4 as we did in the shaft design. Then, from Equation (11–5),

$$L = \frac{4TN}{DWS_y} = \frac{4(900 \text{ lb} \cdot \text{in})(4)}{(0.875 \text{ in})(0.188 \text{ in})(54\,000 \text{ psi})} = 1.62 \text{ in}$$

We can specify a key length of 2.50 in for extra safety and to match the length of the hub of the coupling. The 1/2-in key for the motor shaft should be made to match the length of the coupling hub also, and it should be very safe because of the larger key size and the larger shaft size carrying the same torque.

2. **Keys for the output shaft coupling on the output shaft:** For the output shaft and the drive shaft for the saw,

$$T = 3150 \text{ lb} \cdot \text{in}$$

$$D = 1.25 \text{ in}$$

$$W = 0.250 \text{ in} \quad (\text{key width})$$

$$L = \frac{4TN}{DWS_y} = \frac{4(3150 \text{ lb} \cdot \text{in})(4)}{(1.25 \text{ in})(0.250 \text{ in})(54\,000 \text{ psi})} = 2.99 \text{ in}$$

TABLE 15-7 Tolerances and Fits for Keys and Keyseats

| Key size (width in inches) | Tolerance on key (all + 0.000) | Tolerance on keyseat (all - 0.000) | Fit range |
|-------------------------------|-----------------------------------|---------------------------------------|--------------|
| Up to 1/2 | -0.002 | +0.002 | 0.000–0.004 |
| Over 1/2 to 3/4 | -0.002 | +0.003 | 0.000–0.005 |
| Over 3/4 to 1 | -0.003 | +0.003 | 0.000–0.006 |
| Over 1 to 1 1/2 | -0.003 | +0.004 | 0.000–0.007 |
| Over 1 1/2 to 2 1/2 | -0.004 | +0.004 | 0.000–0.008 |

We will make the key length 3.125 in (3 1/8 in), the full length of the hub of the coupling. The conservative design factor of 4 should make this length acceptable.

3. **Key for the pinion on shaft 1:** The bore of the pinion is to be nominally 1.75 in as determined in the shaft design and shown in Table 15-4. The key size for this diameter should be 3/8-in square according to Table 11-1. The torque being transmitted is 900 lb·in. Then Equation (11-5) gives

$$L = \frac{4TN}{DWS_y} = \frac{4(900 \text{ lb} \cdot \text{in})(4)}{(1.75 \text{ in})(0.375 \text{ in})(54,000 \text{ psi})} = 0.406 \text{ in}$$

The face width of the gear is 2.00 in. Let's use a key length of 1.50 in and center the profile keyseat at section C on the shaft so that the keyseat does not significantly interact with the ring groove to the right or with the shoulder fillet to the left.

4. **Key for the gear on shaft 2:** The bore of the gear is to be nominally 1.75 in as determined in the shaft design and shown in Table 15-4. The key size for this diameter should be 3/8-in square according to Table 11-1. The torque being transmitted is 3150 lb·in. Then Equation (11-5) gives

$$L = \frac{4TN}{DWS_y} = \frac{4(3150 \text{ lb} \cdot \text{in})(4)}{(1.75 \text{ in})(0.375 \text{ in})(54,000 \text{ psi})} = 1.42 \text{ in}$$

The face width of the gear is 2.00 in. Let's use a key length of 1.50 in for this key also.

The key designs are summarized in the following list:

Summary of Key Designs

Motor shaft: 1/2-in square key × 2.50 in long
Input shaft of reducer at coupling: 3/16-in square key × 2.50 in long; sled runner keyseat

Input shaft at pinion: 3/8-in square

key × 1.50 in long; profile shaft keyseat

Output shaft at gear: 3/8-in square
key × 1.50 in long; profile shaft keyseat

Output shaft at coupling: 1/4-in square
key × 3.125 in long; sled runner keyseat

Drive shaft for saw at coupling: 1/4-in square
key × 3.125 in long; sled runner keyseat

Standard square bar stock in SAE 1018 steel is available to be used for keys. Typical tolerances are given in Table 15-7. Also given are recommended tolerances on the keyseat width dimension and the resulting fit between the key and the keyseat. A small clearance fit is desirable to permit easy assembly while not allowing the key to rock noticeably when installed.

Tolerances on Other Shaft Dimensions. You should review the discussion in Sections 13-5 and 13-9, on fits and tolerancing, respectively. See also References 1, 4, and 7 in this chapter, along with other comprehensive texts on technical drawing and interpretation of engineering drawings.

The fit of the bore of the gears on the shafts or the fit of the ID of the couplings on the ends of the shafts must be specified. Either a close sliding fit or a close locational fit is recommended for such components. Data are given in Table 13-3 for the RC2, RC5, and RC8 fits. More complete data are available in References 1-3, 5, 6, and 8 in Chapter 13. We will apply the RC5 fit to accurate mating parts that must assemble easily but where little perceptible play between the parts is desired. The RC fits use the *basic hole system*, as illustrated in Chapter 13.

15-6 FINAL DESIGN DETAILS FOR THE SHAFTS

Figures 15-6 and 15-7 show the final design for the input and output shafts, also called the *pinion shaft* and the *gear shaft*. Data from throughout this chapter have been used to specify pertinent dimensions. Where fillets are specified, a final check on the stress condition has

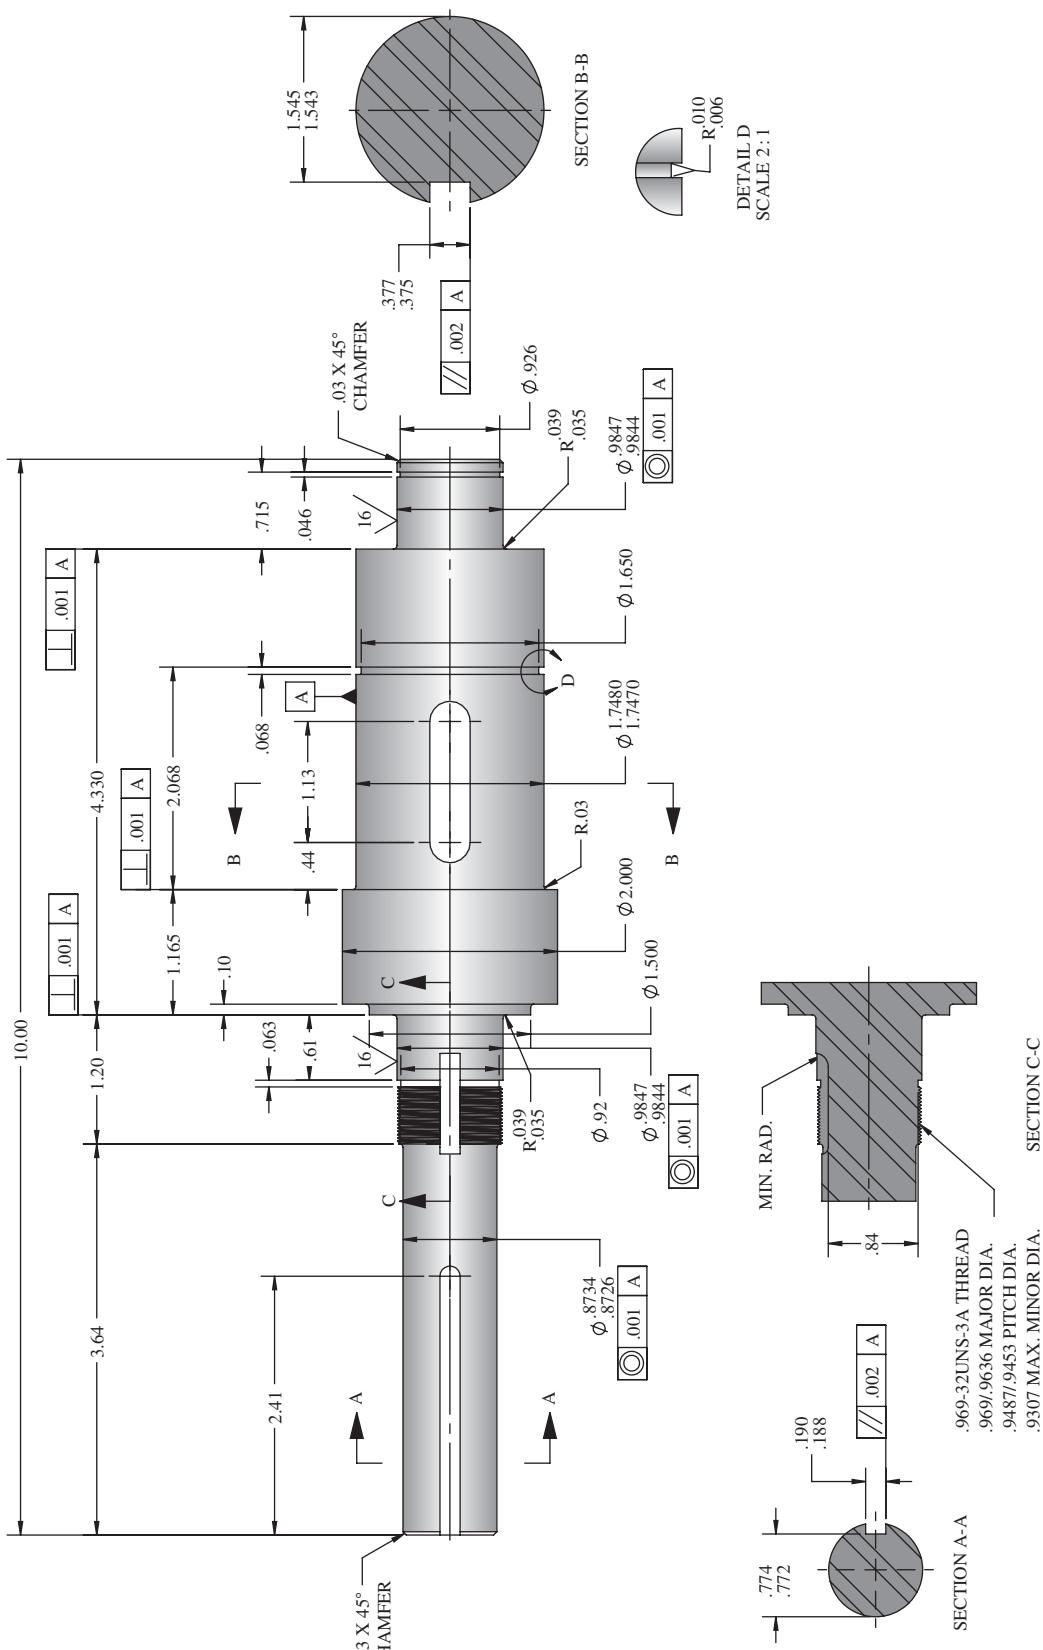


FIGURE 15-6 Final design of the pinion shaft

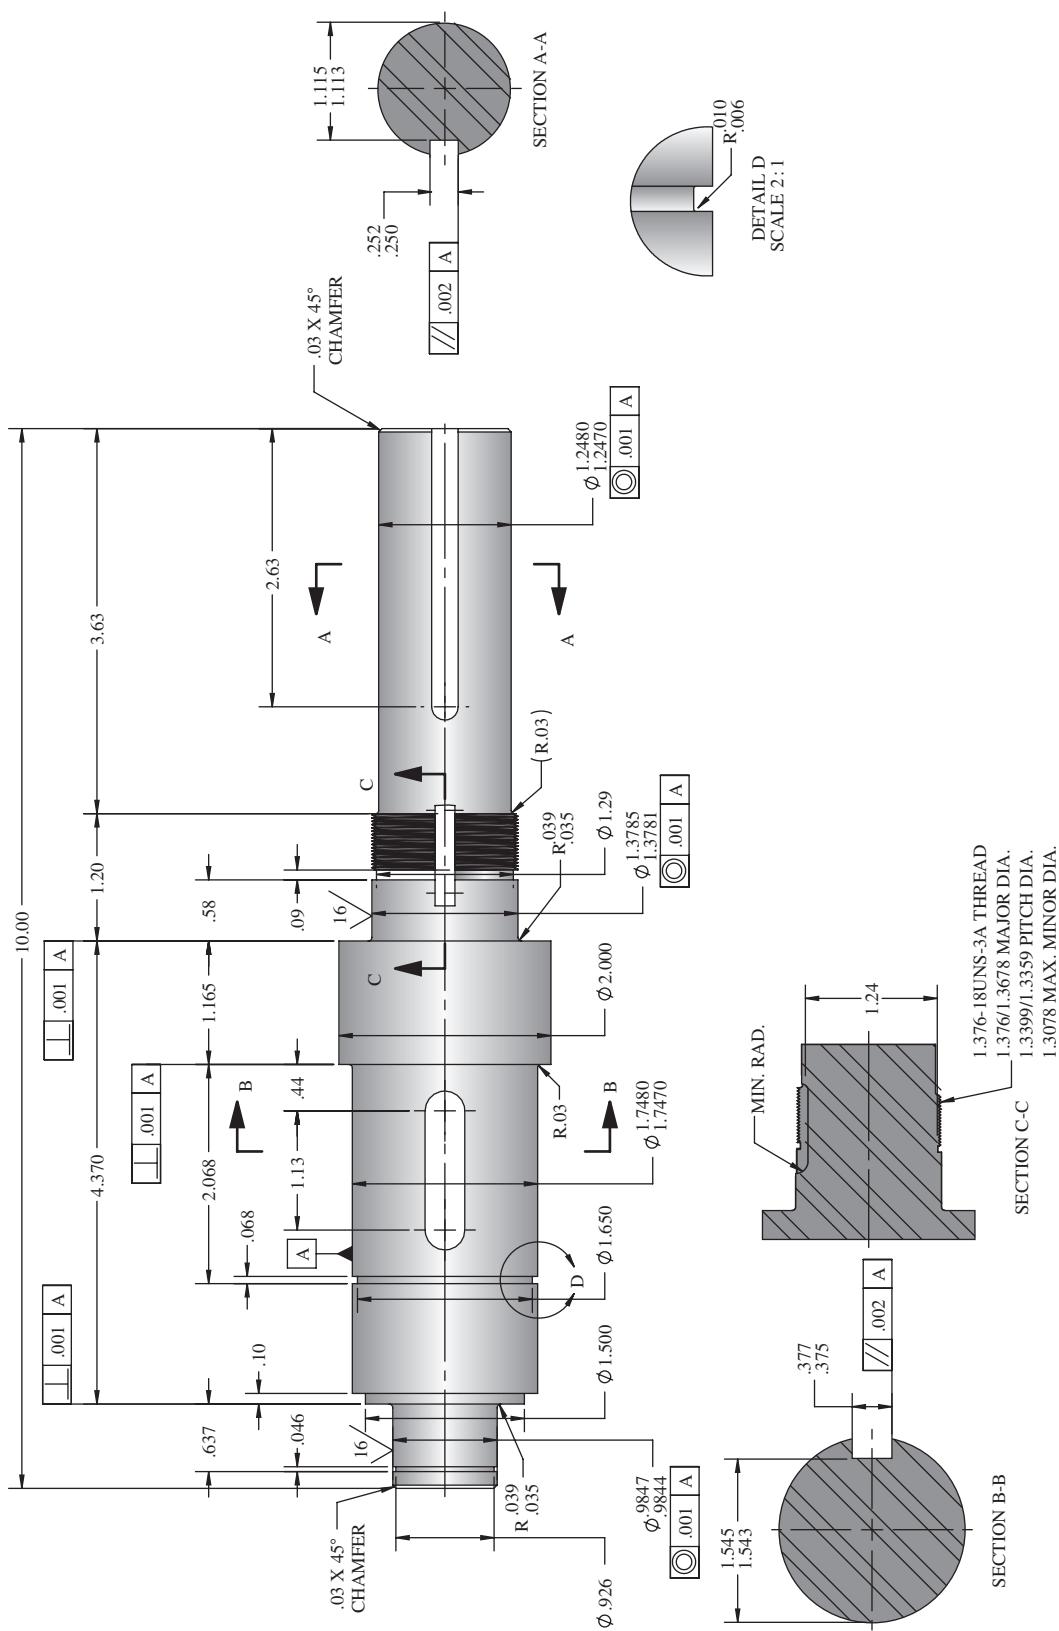


FIGURE 15-7 Final design of the gear shaft

TABLE 15-8 Calculations and Specifications for Fits of Elements on the Shafts of the Transmission

| Location | Nominal diameter | Bore limit dimensions for external element | OD limit dimensions for shaft | Fit |
|--------------------|------------------|--|-------------------------------|------------------|
| Shaft 1: | | | | |
| Input at coupling | 0.8750 | 0.8762/0.8750 | 0.8734/0.8726 | +0.0026/ +0.0036 |
| Pinion | 1.7500 | 1.7516/1.7500 | 1.7480/1.7470 | +0.0020/ +0.0046 |
| Shaft 2: | | | | |
| Gear | 1.7500 | 1.7516/1.7500 | 1.7480/1.7470 | +0.0020/ +0.0046 |
| Output at coupling | 1.2500 | 1.2516/1.2500 | 1.2480/1.2470 | +0.0020/ +0.0046 |

Note: RC5 fit is used for all locations; dimensions are in inches.

been made to ensure that the estimated stress concentration factors used in the earlier design analysis are satisfactory and that the final stress levels are safe.

Keyseat details have been shown in section views on the shaft drawings. See Chapter 11 for computing the vertical dimension from the bottom of the shaft to the bottom of the keyseat.

The retaining ring grooves are drawn to the dimensions specified for a basic external ring for a 1.75-in-diameter shaft as pictured in Figure 11-37(a). See Internet sites 11 and 22 in Chapter 11 for providers of retaining rings and application details.

Four shaft diameters are sized to the RC5 fit in Figures 15-6 and 15-7. On shaft 1 they are at the extension where the coupling mounts and at the pinion. On shaft 2 they are at the gear and at the coupling location on the output extension. Table 15-8 summarizes the data for the fits. You should verify these using the procedure shown in Chapter 13. Note that the limit dimensions for both the shaft diameter and the bore of the mating element are given and that the total tolerance on each dimension is small, less than 0.002 in for any dimension. Note also the small variation of the clearance on mating parts as indicated in the last column called "Fit."

For the shafts in this project, we have specified geometric tolerances for concentricity of critical diameters for each shaft. The datum or reference diameter is specified at each gear. Then the diameters at the two bearing seats and at the end of the shaft where the coupling mounts are controlled with concentricity feature control blocks. Shoulders for locating bearings and gears are controlled for perpendicularity to the axis of the shaft as represented by the gear diameter. The keyseat is controlled for parallelism to the axis of the shaft.

15-7 ASSEMBLY DRAWING

Figure 15-8 is an assembly drawing for the reducer with all features drawn to scale. The housing has been shown as a rectangular box shape for simplicity. The assembly of all components into the housing is facilitated by

having the right side removable, and special care to control alignment of the cover is critical because it carries the right bearing for each shaft. Using locating dowel pins in the cover and the main housing is one way of ensuring proper location.

Shown are the right side view with the cover removed and a section through the two gears, along the vertical centerline. In the section view the cover is in place. Part numbers are shown and the parts list is included at the right side of the drawing.

The order of assembly could include the following:

1. Install the pinion and the gear onto their shafts, seating them against their shoulders and insert retaining rings to maintain axial location.
2. Press all four bearings onto the shafts, seating them against their shoulders.
3. Attach bearing locknuts for the left bearing on the pinion shaft and the right bearing on the gear shaft.
4. Attach the bearing caps to the left wall of the housing and to the cover for the right side, including the seals for the left pinion shaft and the right gear shaft.
5. Insert the two shaft assemblies into the retaining caps on the left side of the housing, sliding the outer races of the bearings into the caps.
6. Install the cover for the right side, ensuring proper location.
7. Attach the two bearing caps onto the cover carefully sliding them over the outer races of the bearings and securing them to the cover.

Note that the left bearing on the pinion shaft and the right bearing on the gear shaft are fixed. The other two bearings are free to float inside the bearing cap to accommodate thermal expansion and tolerance stack-up. Those bearings are held in axial position on their shaft seats with retaining rings.

Seals have been shown in the bearing retainers where the shafts penetrate the side walls of the housing. See Sections 11-10 and 11-11 and Internet sites 4, 12-16, 22, and 28 in Chapter 11 for more information on seals.

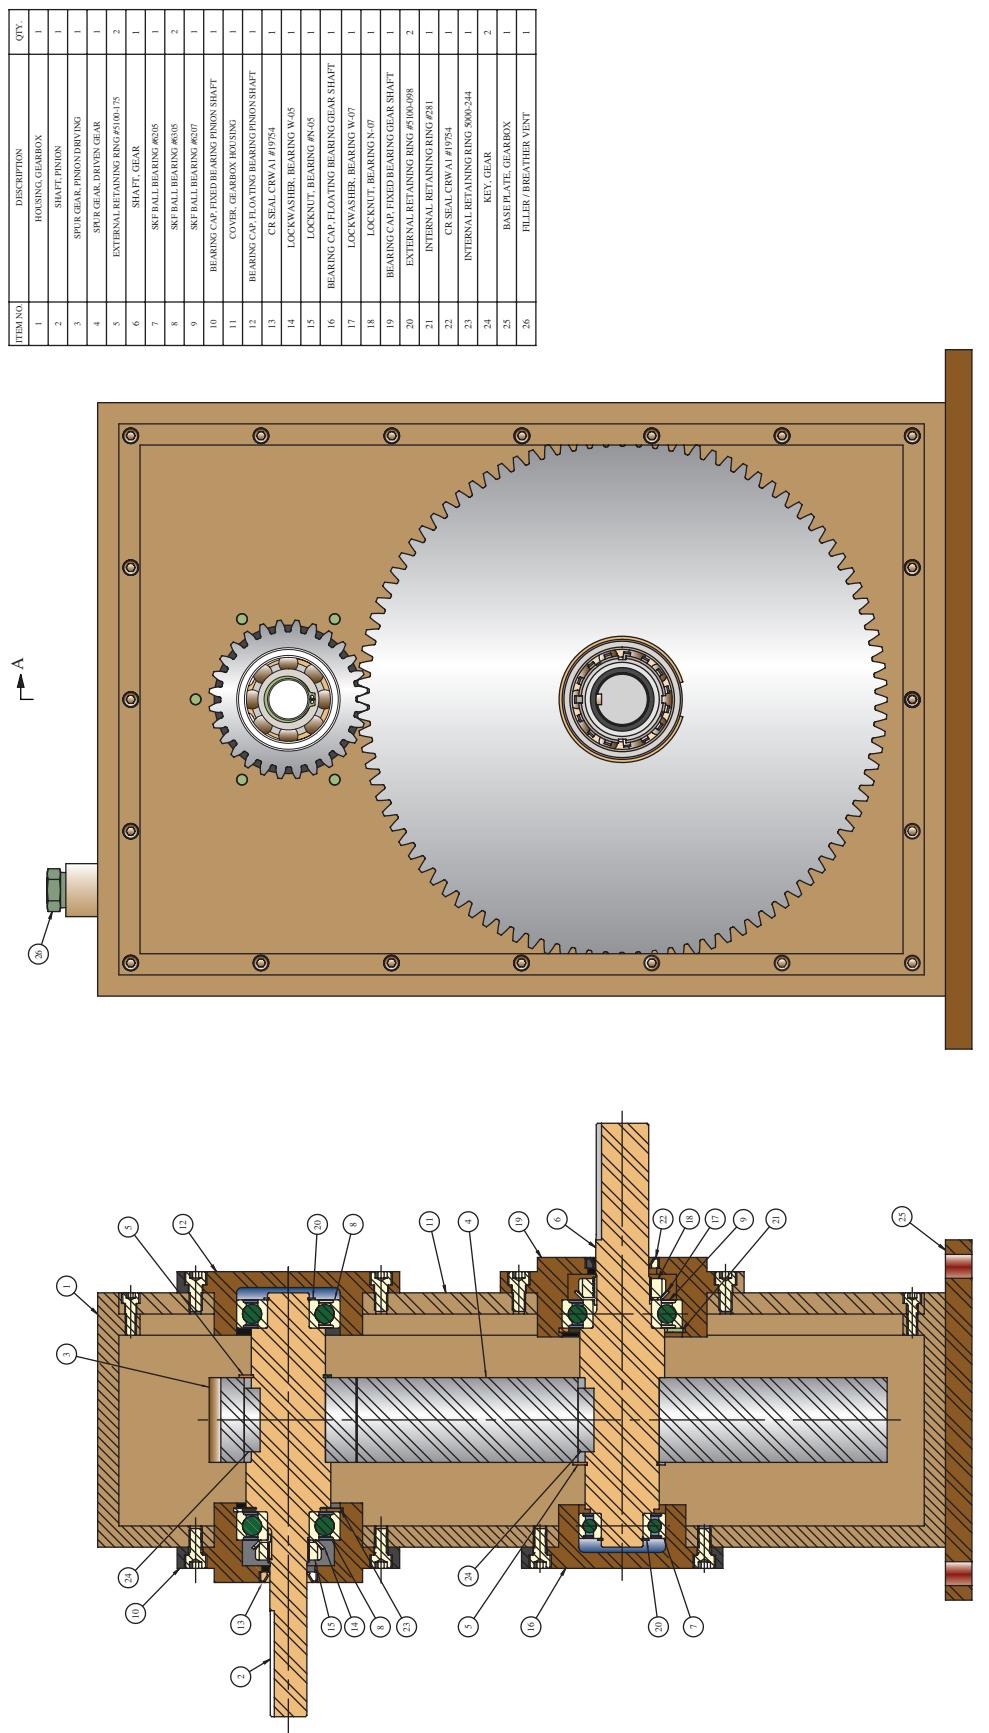


FIGURE 15-8 Assembly drawing for the reducer

Figure 15–9 shows additional details of parts of the gearbox. Comments on each part are as follows:

- (a) Pictorial view of the assembly of the motor and the gearbox. Note that the part on the lower right is

a schematic representation of the wall of the saw where its drive shaft connects to the gearbox.

- (b) Similar view as in (a) with the walls of the gearbox made transparent.

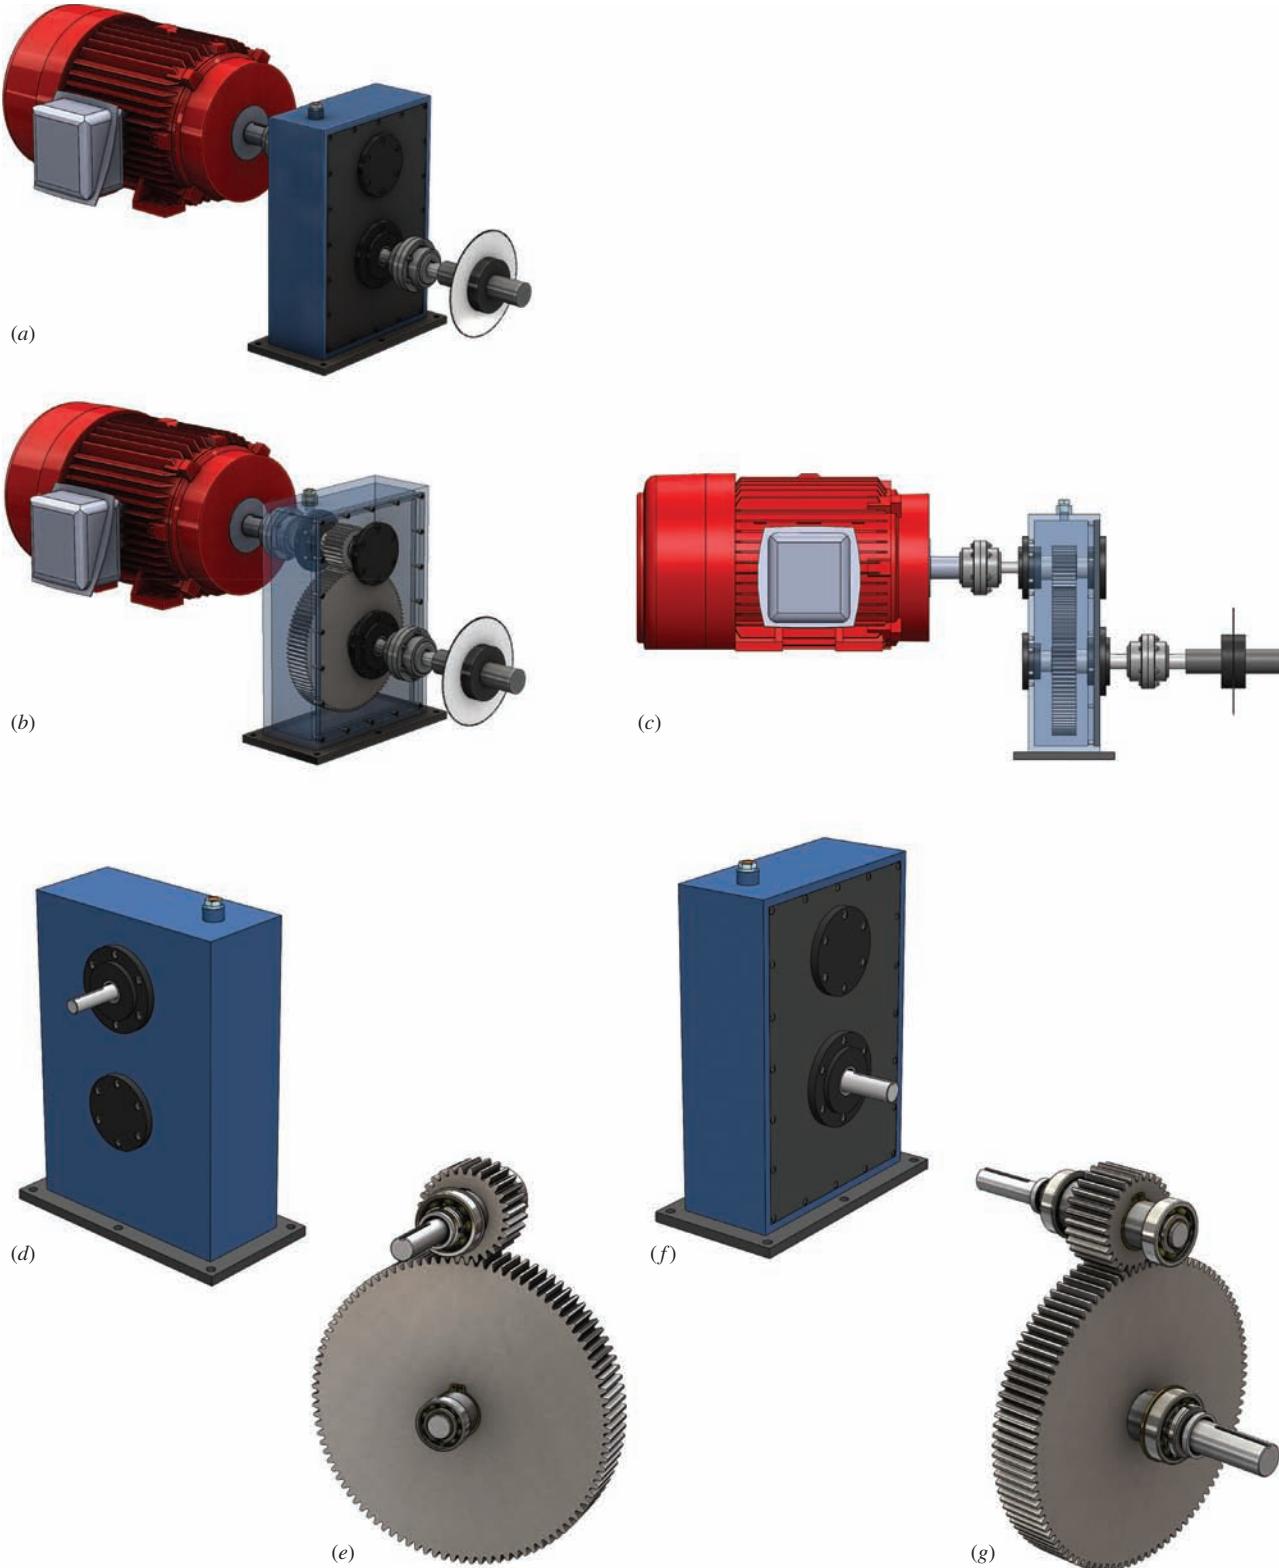


FIGURE 15–9

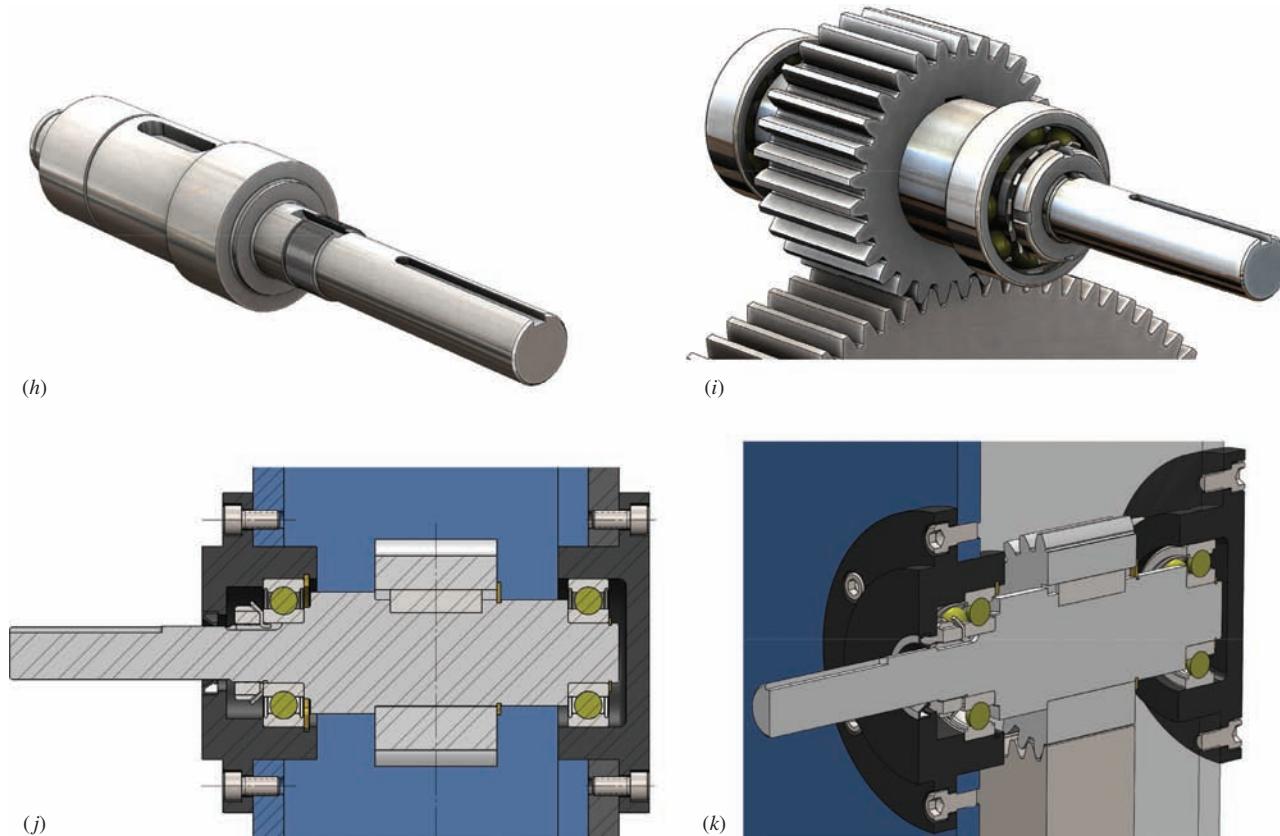


FIGURE 15–9 (*continued*)

- (c) Side view of the assembly with the walls of the gearbox made transparent.
- (d) Exterior view of the gear box showing the input shaft projecting from the housing along with the bearing cap for the gear shaft.
- (e) Arrangement of the pinion, gear, their shafts, and bearings from the same viewpoint as in (d).
- (f) Exterior of the gear box showing the output shaft projecting from the housing along with the bearing support for the pinion shaft.
- (g) Arrangement of the pinion, gear, their shafts, and bearings from the same viewpoint as in (f).
- (h) Pinion shaft showing keyseats, shoulders, and the threaded portion for the locknut.
- (i) Pinion and its shaft subassembly positioned in mesh with the gear.
- (j) Enlarged view of the portion of the gearbox involving the input/pinion shaft, its bearings, and bearing supports attached to the housing wall.
- (k) Similar view as in (j) shown in a pictorial view.

Critique of the Design

Figures 15–6 to 15–8 present drawings that meet the basic design requirements established at the beginning of this chapter. It is likely that refinements could be made if more details were available about the saw for which the reducer is being designed.

It appears that the length of the shafts could be made somewhat shorter. The distances between the center of the gears and the bearings was arbitrarily set at 2.50 in at the start of the design process when dimensions for any components were unknown. Now that the nominal size of the gears, bearings, and couplings are known, further iterations on the design could result in a smaller package.

You should look at other commercially available gear-type speed reducers for other features that might be built into this design. Note particularly Figures 9–29 to 9–33 in Chapter 9 and Figures 10–1, 10–2, 10–22, and 10–23 in Chapter 10.

REFERENCES

1. American Society of Mechanical Engineers. ASME Standard Y14.5. *Dimensioning and Tolerancing*. New York: American Society of Mechanical Engineers, 2009.
2. Bertoline, G., E. Wiebe, N. Hartman, and W. Ross. *Fundamentals of Graphic Communication*. 6th ed. New York: McGraw-Hill, 2011.
3. Cross, Nigel. *Engineering Design Methods: Strategies for Product Design*. 4th ed. New York: John Wiley & Sons, 2008.
4. Earle, James H. *Engineering Design Graphics*. 12th ed. Upper Saddle River, NJ: Pearson Prentice Hall, 2007.

5. Kepner, Charles H., and Benjamin B. Tregoe. *The New Rational Manager: An Updated Edition for a New World*. Princeton, NJ: Princeton Research Press, 2013.
6. Buede, Dennis, and William Miller. *The Engineering Design of Systems: Models and Methods*. 3rd ed. New York: Wiley, 2016.
7. Oberg, Erik et al. *Machinery's Handbook*. 30th ed. New York: Industrial Press, 2015.
8. Pahl, G., W. Beitz, J. Feldhusen, and K. Grote. *Engineering Design: A Systematic Approach*. 3rd ed. London: Springer, 2007.
9. Peerless-Winsmith, Inc. *The Speed Reducer Book: A Practical Guide to Enclosed Gear Drives*. Springville, NY: Peerless-Winsmith, 1980.
10. Pugh, Stuart. *Total Design: Integrated Methods for Successful Product Engineering*. Reading, MA: Addison-Wesley, 1991.
11. Pugh, Stuart, and Don Clausing. *Creating Innovative Products Using Total Design: The Living Legacy of Stuart Pugh*. Reading, MA: Addison-Wesley, 1996.
12. Ullman, David G. *The Mechanical Design Process*. 5th ed. New York: McGraw-Hill, 2015.
13. Ulrich, K., and S. Eppinger. *Product Design and Development*. 6th ed. New York: McGraw-Hill/Irwin, 2015.

INTERNET SITES RELATED TO TRANSMISSION DESIGN

1. **Kepner-Tregoe, Inc.** A management consulting and training firm specializing in strategic and operational decision making. The firm's work evolves from the popular book listed as Reference 5. The Kepner-Tregoe approach is applicable to problem solving and decision making in product development and manufacturing operations. An online self-study learning mode called *eLearning Problem Solving and Decision Making* is now offered.
2. **Peerless-Winsmith, Inc.** Manufacturer of a broad line of speed reducers. This company produced the book listed in Reference 9.

DESIGN DETAILS AND OTHER MACHINE ELEMENTS

OBJECTIVES AND CONTENT OF PART III

Chapters 16–23 present methods of analysis and design of several important machine elements that were not particularly pertinent to the design of a power transmission as presented in Part II of this book. These chapters can be covered in any order or can be used as reference material for general design projects.

Chapter 16: Plain Surface Bearings discusses plain surface bearings, sometimes called *journal bearings*. These bearings employ smooth-surfaced elements to support loads from shafts or other devices in which relative motion occurs. You will learn how to specify materials for the parts of the bearing, the geometry of the bearing, and the lubricant. Full-film hydrodynamic lubrication and boundary lubrication are discussed.

Chapter 17: Linear Motion Elements discusses devices that convert rotary motion to linear motion, or vice versa. They are often used in machine tools, automation equipment, and parts of construction machinery. You will learn about their geometry and how to analyze their performance.

Chapter 18: Springs discusses how to design and analyze helical compression springs, helical extension springs, and torsional springs.

Chapter 19: Fasteners describes machine screws, bolts, nuts, and set screws. You will learn about the kinds of materials used for fasteners and how to design them for safe, reliable performance. Also discussed briefly are rivets, quick-operating fasteners, welding, brazing, soldering, and adhesive bonding.

Chapter 20: Machine Frames, Bolted Connections, and Welded Joints presents the important skill of designing a frame for rigidity as well as strength. You will gain experience with analyzing the forces and stresses in bolted and welded connections that hold load-carrying members together. You will also learn how to analyze eccentric loads on connections.

Chapter 21: Electric Motors and Controls discusses the many types of AC and DC motors that are commercially available. Because a great many mechanical design projects involve the use of an electric motor as the prime mover, you will learn how to match their performance characteristics to the needs of the machine being designed and to specify motor controls.

Chapter 22: Motion Control: Clutches and Brakes discusses the many types of clutches and brakes that can be applied. Clutches provide the path to connect power from a prime mover to a driven machine. Brakes bring the moving equipment to a stop or slow it down. You will learn how to analyze their performance and to either design them or specify commercially available units.

Chapter 23: Design Projects presents several projects that you can complete yourself.

PLAIN SURFACE BEARINGS

The Big Picture

You Are the Designer

- 16–1 Objectives of This Chapter
- 16–2 The Bearing Design Task
- 16–3 Bearing Parameter, $\mu n/p$
- 16–4 Bearing Materials
- 16–5 Design of Boundary-Lubricated Bearings
- 16–6 Full-Film Hydrodynamic Bearings
- 16–7 Design of Full-Film Hydrodynamically Lubricated Bearings
- 16–8 Practical Considerations for Plain Surface Bearings
- 16–9 Hydrostatic Bearings
- 16–10 The Kugel Fountain—A Special Example of a Hydrostatic Bearing
- 16–11 Tribology: Friction, Lubrication, and Wear

THE BIG PICTURE

Plain Surface Bearings

Discussion Map

- The purpose of a bearing is to support a load while permitting relative motion between two elements of a machine. This chapter discusses *plain surface* bearings where the two parts that move relative to each other do not have rolling elements between them.
- Both rotating and linear sliding bearing cases depend on lubrication, a part of the field of *tribology*.

Discover

Look around your home and in your car for products that have plain surface bearings. Find some that experience rotational motion and some that have linear sliding contact. Consider simple items such as hinges, door locks, latches, or the wheels of a lawn mower. Most of these experience boundary lubrication.

Now see if you can find information about the crankshaft bearings in the engine of your car. Such bearings usually employ full-film hydrodynamic lubrication. What can you discover about them?

How do you think a large telescope or an astronomical radio antenna is supported to permit it to be moved easily and positioned precisely? One method is called hydrostatic bearings. What can you discover about such bearings?

This chapter will help you explore all of these kinds of bearings and complete the basic design analyses required to ensure satisfactory operation.

The purpose of a bearing is to support a load while permitting relative motion between two elements of a machine. This chapter discusses *plain surface* bearings where the two parts that move relative to each other do not have rolling elements between them. Note that rolling contact bearings were discussed in Chapter 14.

Plain surface bearings for rotating parts are, of course, cylindrical with a typical arrangement as shown in Figure 16–1. The inner member, called the *journal*, is usually that part of a shaft where any

radial reaction forces are transferred to the base of the machine. The stationary member that mates with the journal is called simply the *bearing*. Other names used for plain surface bearings are *journal bearings* and *sleeve bearings*.

Where have you seen such plain surface bearings in operation? As you did in Chapter 14 on rolling contact bearings, look for consumer products, industrial machinery, or transportation equipment (cars, trucks, bicycles, and so on)—any device with rotating

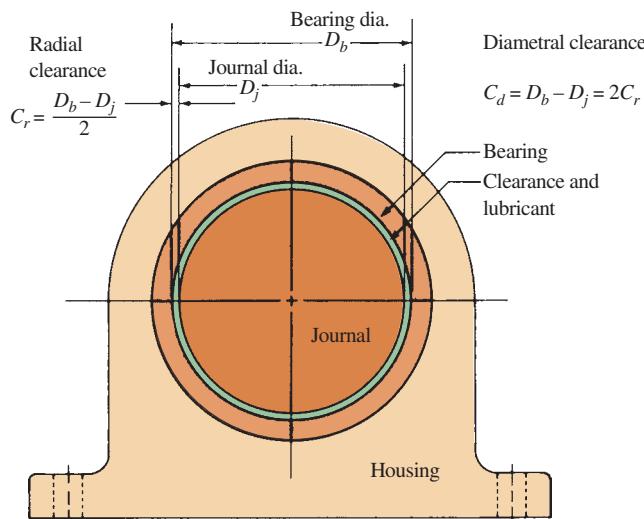


FIGURE 16–1 Bearing geometry

shafts). If the bearings are not visible from the outside (and that is often the case), you may need to partially disassemble the product to see inside.

But there are some obvious examples that should be accessible to you. The wheels of a household lawn mower, wheelbarrow, or simple cart are typically mounted directly on axles to form the plain surface bearing. Hand tools such as grass and hedge clippers, pruning shears, pliers, and adjustable or ratchet wrenches use plain surface bearings at points where one part must rotate relative to another.

Look at almost any hinge for a door. It incorporates a solid pin riding inside a cylindrical outer member. That is an example of a plain surface bearing. Garage doors often have rollers that ride in channels, but the shafts that carry the rollers are operating in plain cylindrical bearings, often with very large clearances. The cable system that connects to the counterbalance springs runs over pulleys having plain surface bearings rotating on stationary shafts. If the door has an electric door opener, several of its components probably use plain surface bearings. Get a ladder and climb up to inspect them. *But be careful of the moving parts!*

Besides the rotational motion of the kinds of applications described previously, some plain surface bearings have linear sliding motion. Look inside a printer for a computer of the ink-jet or dot-matrix-pin type. Identify the part that delivers the actual image to the paper as it traverses across the page. It typically slides on a polished rod with great precision. Many linkages contain parts that slide. Look at locking mechanisms, latches, staplers, switches, car seat adjusters, gear shifters for cars, parts of window-lift devices in cars, and coin-operated machines. Can you identify parts that have linear sliding motion?

If you visit a factory, you will likely see numerous examples of both rotational and linear sliding action.

Transfer devices, reciprocating machinery, machine tool slides, and packaging equipment employ many plain surface bearings.

Most of the examples just mentioned have intermittent and relatively slow motion between the mating parts, whether the motion is rotational or linear. In such applications, there is often a lubricant between the moving parts. Or the materials are carefully chosen to produce low friction and reliable, smooth motion. This kind of bearing experiences *boundary lubrication* as discussed in this chapter.

You may be familiar with the bearings on the crankshaft of an internal combustion engine. They are often called *journal bearings* because they have the classic configuration shown in Figure 16–1. But consider their general operation. After the engine has been started, the crank rotates at several thousand revolutions per minute, typically from about 1500 to 6000 rpm. This is one of the most important applications of plain surface bearings using *full-film hydrodynamic lubrication*. In such bearings, there is a continuous film of lubricant, usually oil, that actually lifts the rotating shaft journal off the stationary bearing. Thus, there is no metal-to-metal contact between the members. Much of this chapter is devoted to this kind of bearing and the analysis of the conditions required to maintain the supporting oil film. Engine bearings are some of the most highly engineered mechanical devices.

Can you identify other examples of bearings that use full-film hydrodynamic lubrication?

Another example of a class of plain surface bearings is called *hydrostatic*. Pumps create high pressure in a fluid such as oil that is delivered by carefully shaped pads where the pressure lifts the part to be moved. Then it can be moved easily, either slowly or rapidly. Think about a huge telescope or

radio antenna that must be positioned accurately and moved with ease. Such applications are rare but important, justifying the large engineering and technical effort of designing, installing, and maintaining them.

This chapter will help you understand boundary lubrication, full-film hydrodynamic lubrication, and hydrostatic lubrication. Also discussed are more general aspects of friction, lubrication, wear, and the lubricants that are used to minimize friction.

YOU ARE THE DESIGNER

Your company is designing a conveyor system to transport products in a shipping and receiving system of a major manufacturer. The design has progressed to the point where it has been decided to use a flexible belt conveyor driven by flat pulleys at either end. The shafts that carry the pulleys must be supported in bearings in the side frames of the conveyor. Your task is to design the bearings.

First you must decide what type of bearing to use: plain surface or journal bearings as discussed in this chapter, or rolling contact

bearings, which have been discussed in Chapter 14. For the plain surface bearings, you must determine whether full-film hydrodynamic lubrication can be achieved with its advantages of low friction and long life. Or will the shaft operate in the bearing with boundary lubrication? What materials will the bearing and the journal be made from? What dimensions will be specified for all components? What lubricant should be used? These and other questions are discussed in this chapter.

16-1 OBJECTIVES OF THIS CHAPTER

After completing this chapter, you will be able to:

1. Describe the three modes of operation of a *plain surface bearing* (boundary, mixed-film, and full-film hydrodynamic lubrication), and discuss the conditions under which each will normally occur.
2. Discuss the significance of the *bearing parameter*, $\mu n/p$.
3. List the decisions that a bearing designer must make to completely define a plain surface bearing system.
4. List the materials often used for journals and bearings, and describe their important properties.
5. Define the *pV factor* and use it in the design of boundary-lubricated bearings.
6. Describe the operation of full-film hydrodynamically lubricated bearings.
7. Complete the design of full-film bearings, defining the size of the journal and bearing, the diametral clearance, the bearing length, the minimum film thickness, the surface finish, the lubricant, and the resulting frictional performance of the bearing system.
8. Describe a *hydrostatic bearing system* and complete the basic design of such bearings.
9. Define *tribology* and discuss the essential characteristics of friction, lubrication, and wear as applied to machinery.
10. Describe the general nature of oils and greases and their effects on lubrication and wear.

16-2 THE BEARING DESIGN TASK

The term *plain surface bearing* refers to the kind of bearing in which two surfaces move relative to each other without the benefit of rolling contact. Thus, there is

sliding contact. The actual shape of the surfaces can be anything that permits the relative motion. The most common shapes are flat surfaces and concentric cylinders. Figure 16-1 shows the basic geometry of a cylindrical plain surface bearing.

A given bearing system can operate with any of the three types of lubrication:

Boundary lubrication: There is actual contact between the solid surfaces of the moving and the stationary parts of the bearing system, although a film of lubricant is present.

Mixed-film lubrication: There is a transition zone between boundary and full-film lubrication.

Full-film lubrication: The moving and stationary parts of the bearing system are separated by a complete film of lubricant that supports the load. The term *hydrodynamic lubrication* is often used to describe this type.

All of these types of lubrication can be encountered in a bearing without external pressurization of the bearing. If lubricant under pressure is supplied to the bearing, it is called a *hydrostatic bearing*, which is discussed separately. Running dry surfaces together is not recommended unless there is inherently good lubricity between the mating materials. Some plastics are used dry, as discussed in Sections 16-4 and 16-5.

Bearing design involves so many design decisions that it is not possible to develop a procedure that produces the single best design. Thus, several feasible designs could be proposed, and the designer must make judgments based on knowledge of the application and on the principles of bearing operation to define the final design. The following lists identify the information needed to design a bearing system and the types of design decisions that must be made. (See References 8, 13-17, and 19-21.) In this discussion, it is assumed that the bearing

will be cylindrical, like that used to support a rotating shaft. Modified lists could be made for linear sliding surfaces or some other geometry.

Bearing Requirements

Magnitude, direction, and degree of variation of the radial load

Magnitude and direction of the thrust load, if any

Rotational speed of the journal (shaft)

Frequency of starts and stops, and duration of idle periods

Magnitude of the load when the system is stopped and when it is started

Life expectancy of the bearing system

Environment in which the bearing will operate

Design Decisions

Materials for the journal and the bearing

Diameters, including tolerances, of the journal and the bearing

Nominal value and range of journal clearance in the bearing

Surface finish for the journal and the bearing

Length of the bearing

Method of manufacturing the bearing system

Type of lubricant to be used and the means of supplying it

Operating temperature of the bearing system and of the lubricant

Method of maintaining the lubricant cleanliness and temperature

Analyses Required

Type of lubrication: boundary, mixed-film, and full-film

Coefficient of friction

Frictional power loss

Minimum film thickness

Thermal expansion

Heat dissipation required and the means of accomplishing it

Shaft stiffness and slope of the shaft in the bearing

is desirable to understand the conditions under which one or the other type of lubrication occurs.

The creation of full-film lubrication, the most desirable type, is encouraged by light loads, high relative speed between the moving and stationary parts, and presence of a high-viscosity lubricant in the bearing in copious supply. For a rotating journal bearing, the combined effect of these three factors, as it relates to the friction in the bearing, can be evaluated by computing the *bearing parameter*, $\mu n/p$. The viscosity of the lubricant is indicated by μ , the rotational speed by n , and the bearing load by the pressure, p . To compute the pressure, divide the applied radial load on the bearing by the *projected area* of the bearing, that is, the product of the length times the diameter.

The bearing parameter $\mu n/p$ is dimensionless when each term is expressed in consistent units. Some unit systems that can be used are listed as follows:

| Unit system | Viscosity, μ | Rotational speed, n | Pressure, p |
|-----------------------|---------------------------------|-----------------------|------------------------|
| SI metric | N·s/m ² or Pa·s | rev/s | N/m ² or Pa |
| English | lb·s/in ² or reyn | rev/s | lb/in ² |
| Old metric (obsolete) | dyne·s/cm ² or poise | rev/s | dynes/cm ² |

The effect of the bearing parameter is shown in Figure 16–2, sometimes called the *Stribeck curve*, which is a plot of the coefficient of friction, f , for the bearing versus the value of $\mu n/p$. At low values of $\mu n/p$, boundary lubrication occurs, and the coefficient of friction is high. For example, with a steel shaft sliding slowly in a lubricated bronze bearing (boundary lubrication), the value of f would be approximately 0.08 to 0.14. At high values of $\mu n/p$, the full hydrodynamic film is created, and the value of f is normally in the range of 0.001 to 0.005. Note that this compares favorably with precision rolling contact bearings. Between boundary and full-film lubrication, the *mixed-film* type, which is some combination of the other two, occurs.

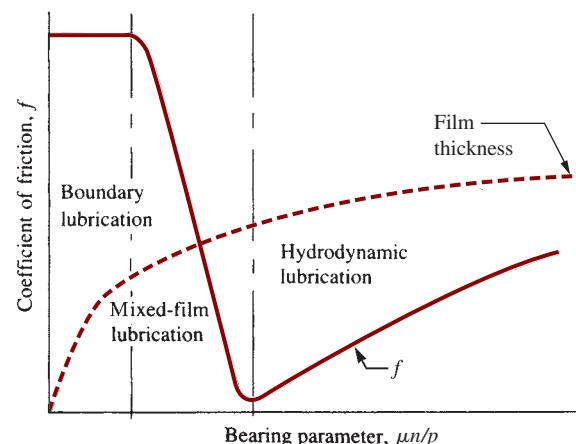


FIGURE 16–2 Bearing performance and types of lubrication related to the bearing parameter, $\mu n/p$ —the Stribeck curve

16-3 BEARING PARAMETER, $\mu n/p$

The performance of a bearing differs radically, depending on which type of lubrication occurs. There is a marked decrease in the coefficient of friction when the operation changes from boundary to full-film lubrication. Wear also decreases with full-film lubrication. Thus, it

The dashed curve shows the general nature of the variation in film thickness in the bearing.

It is recommended that designers avoid the mixed-film zone because it is virtually impossible to predict the performance of the bearing system. Also notice that the curve is very steep in this zone. Thus, a small change in any of the three factors, μ , n , or p , produces a large change in f , resulting in erratic performance of the machine.

The value of $\mu n/p$ at which full-film lubrication is produced is difficult to predict. Besides the individual factors of speed, pressure (load), and viscosity (a function of the type of lubricant and its temperature), the variables affecting the production of the film include the quantity of lubricant supplied, the adhesion of the lubricant to the surfaces, the materials of the journal and the bearing, the structural rigidity of the journal and the bearing, and the surface roughness of the journal and the bearing. After completing the design process presented later in this chapter, you are advised to test the design.

In general, boundary lubrication should be expected for slow-speed operation with a surface speed less than about 10 ft/min (0.05 m/s). Reciprocating or oscillating motion or a combination of a light lubricant and high pressure would also produce boundary lubrication.

The design of bearings to produce full-film lubrication is described in Section 16–6. In general, it requires a surface speed of greater than 25 ft/min (0.13 m/s) continuously in one direction with an adequate supply of oil at a proper viscosity.

16–4 BEARING MATERIALS

In rotational applications, the journal on the shaft is frequently steel. The stationary bearing may be made of any of a wide variety of materials, including the following:

- Bronze
- Babbitt
- Aluminum
- Zinc
- Porous metals
- Plastics (nylon, TFE, PTFE, phenolic, acetal, polycarbonate, and filled polyimide)

The properties desirable for materials used for plain bearings are unique, and compromises must frequently be made. The following list discusses these properties.

- 1. Strength:** The function of the bearing is to carry the applied load and deliver it to the supporting structure. At times, the loads are varied, requiring fatigue strength as well as static strength.
- 2. Embeddability:** The property of embeddability relates to the ability of the material to hold contaminants in the bearing without causing damage to the rotating journal. Thus, a relatively soft material is desirable.
- 3. Corrosion resistance:** The total environment of the bearing must be considered, including journal

material, lubricant, temperature, air-borne particulates, and corrosive gases or vapors.

- 4. Cost:** Always an important factor, cost includes not only the material cost but also processing and installation costs.

A brief discussion of the performance of some of the bearing materials follows.

Cast Bronze

The name *bronze* refers to several alloys of copper with tin, lead, zinc, or aluminum, either singly or in combination. The leaded bronzes contain 25% to 35% lead, which gives them good embeddability and resistance to seizing under conditions of boundary lubrication. However, their strength is relatively low. The cast bearing bronze, SAE CA932, has 83% copper, 7% tin, 7% lead, and 3% zinc. It possesses a good combination of properties for such uses as pumps, machinery, and appliances. Tin and aluminum bronzes have higher strength and hardness and can carry greater loads, particularly in impact situations. But they rate lower on embeddability. See Internet sites 1, 6, 7, 9, and 10.

Babbitt

Babbitts may be lead based or tin based, having nominally 80% of the parent metal. Various alloy compositions of copper and antimony (as well as lead and tin) can tailor the properties to suit a particular application. Because of their softness, babbitts have outstanding embeddability and resistance to seizure, important properties in applications in which boundary lubrication occurs. They have rather low strength, however, and are often applied as liners in steel or cast iron housings. See Internet site 9.

Aluminum

With the highest strength of the commonly used bearing materials, aluminum is used in severe applications in engines, pumps, and aircraft. The high hardness of aluminum bearings results in poor embeddability, requiring clean lubricants.

Zinc

Bearings made from zinc alloys offer good protection to running without a continuous supply of lubricant, although they perform best if lubricated. Standard bearing greases are often used. When operating on steel journals, a thin film of the softer zinc material is transferred to the steel to protect it from wear and damage. It performs well in most atmospheric conditions except for continuously wet environments and exposure to seawater. See Internet site 8.

Porous Metals

Products of the powder metal industry, porous metals are sintered from powders of bronze, iron, and aluminum;

some are mixed with lead or copper. The sintering leaves a large number of voids in the bearing material into which lubricating oil is forced. Then, during operation, the oil migrates out of the pores, supplying the bearing. Such bearings are particularly good for slow-speed, reciprocating, or oscillating motions. See Internet sites 6, 7, and 16.

Plastics

Generally referred to as *self-lubricating materials*, plastics used in bearing applications have inherently low friction characteristics. They can be operated dry, but most improve in performance with a lubricant present. Embeddability is usually good, as is resistance to seizure. But many have low strength, limiting their load-carrying capacity. Backing with metal sleeves is frequently done to improve load-carrying capacity. Major advantages are corrosion resistance and, when operated dry, freedom from contamination. These properties are particularly important in the processing of foodstuffs and chemical products. See Internet sites 2–7, 16, and 17.

Because of the complex chemical names for plastic materials and the virtually infinite combinations of base materials, reinforcements, and fillers used, it is difficult to characterize bearing plastics. Most are composites of several components. The group known as *fluoropolymers* are popular because of the very low coefficient of friction (0.05 to 0.15) and good wear resistance. Phenolics, polycarbonates, acetals, nylons, and many other plastics are also used for bearings. Among the chemical names and abbreviations found in this field are the following:

PTFE: Polytetrafluoroethylene

PA: Polyamide

PPS: Polyphenylene sulfide

PVDF: Polyvinylidene fluoride

PEEK: Polyetheretherketone

PEI: Polyetherimide

PES: Polyethersulfone

PFA: Perfluoroalkoxy-modified tetrafluoroethylene

Reinforcements and fillers used with plastic bearing materials include glass fibers, milled glass, carbon fibers,

bronze powders, PTFE, PPS, and some solid lubricants, such as graphite and molybdenum disulfide.

16-5 DESIGN OF BOUNDARY-LUBRICATED BEARINGS

A boundary-lubricated bearing is typically a smooth hollow cylinder through which a shaft passes that rotates slowly, oscillates, or slides linearly. Figure 16–3 shows two styles of commercially available bearings. Part (a) shows a flange-mounted self-lubricating bearing that can operate in corrosive atmospheres or under water or other light liquids. It can be exposed to temperatures as low as -200°F up to $+1000^{\circ}\text{F}$ (-129°C to 538°C). Part (b) shows a bearing lined with Babbitt [for up to 130°F (54°C)] or bronze [for up to 300°F (149°C)] that is lubricated periodically with grease.

The factors to be considered when selecting materials for bearings and specifying the design details include the following:

Coefficient of friction: Both static and dynamic conditions should be considered.

Load capacity, p : Radial load divided by the projected area of the bearing (lb/in^2 or Pa).

Speed of operation, V : The relative speed between the moving and stationary components, usually in ft/min or m/s .

Temperature at operating conditions.

Wear limitations.

Producibility: Machining, molding, fastening, assembly, and service.

Besides specifying the material for the bearing, the designer must determine the combination of the inside diameter, D , and the length, L , for the bearing.

pV Factor

In addition to the individual consideration of load capacity, p , and speed of operation, V , the product pV is an important performance parameter for bearing design when boundary lubrication occurs. The pV value is a



(a) Self-lubricated flange-mounted bearing



(b) Grease-lubricated journal bearing

FIGURE 16-3 Two styles of boundary-lubricated bearings (Baldor/Dodge, Greenville, SC)

TABLE 16–1 Typical Performance Parameters for Bearing Materials in Boundary Lubrication at Room Temperature

| Material | <i>pV</i> | | |
|---------------------------------|-----------|---------|---|
| | psi-fpm | MPa-m/s | |
| Vespel® SP-21 polyimide | 300 000 | 10.500 | Trademark of DuPont Co. |
| DP11™, oiled | 286 000 | 10.02 | GGB Bearing Technology |
| Manganese bronze (C86200) | 150 000 | 5.250 | Also called SAE 430A |
| Aluminum bronze (C95400) | 125 000 | 4.375 | Also called SAE 68A |
| DX®10, dry or oiled | 80 000 | 2.800 | GGB Bearing Technology |
| Leaded tin bronze (C93800) | 75 000 | 2.625 | Also called SAE 660 |
| DU® | 51 400 | 1.800 | GGB Bearing Technology |
| BU dry lubricant bearing | 51 000 | 1.785 | See note 1 |
| Porous bronze/oil impregnated | 50 000 | 1.750 | |
| Babbitt: high tin content (89%) | 30 000 | 1.050 | |
| DP11™, dry | 28 600 | 1.000 | GGB Bearing Technology |
| Babbitt: low tin content (10%) | 18 000 | 0.630 | |
| Graphite/Metallized | 15 000 | 0.525 | Graphite Metallizing Corp. |
| Rulon® PTFE: 641 | 10 000 | 0.350 | Food and drug applications (see note 2) |
| Rulon® PTFE: J | 7500 | 0.263 | Filled PTFE |
| Polyurethane: UHMW | 4000 | 0.140 | Ultra-high molecular weight |
| Nylon® 101 | 3000 | 0.105 | Trademark of DuPont Co. |

See Internet sites 2–7, 16, and 17.

Notes:

¹ BU Bearings consist of bonded layers of a steel backing and a porous bronze matrix overlaid with PTFE/lead bearing material. A film from the bearing material is transferred to the journal during operation.

² Rulon® is a registered trademark of Saint-Gobain Performance Plastics Company. Bearings are made from Rulon® PTFE (polytetrafluoroethylene) material in a variety of formulations and physical constructions.

measure of the ability of the bearing material to accommodate the frictional energy generated in the bearing. At the limiting *pV* value, the bearing will not achieve a stable temperature limit, and rapid failure will occur. A practical design value for *pV* is one-half of the limiting *pV* value, given in Table 16–1.

Units for *pV*. The nominal units for *pV* are simply the product of the units for pressure and the units for velocity. In the U.S. Customary System, this is, considering only units,

$$p = F/LD = \text{lb/in}^2 = \text{psi}$$

$$V = \pi Dn/12 = \text{ft/min} = \text{fpm}$$

for continuous rotation in rpm

$$pV = (\text{lb/in}^2)(\text{ft/min}) = \text{psi-fpm}$$

Another way of looking at these units is to rearrange them into the form

$$pV = (\text{ft} \cdot \text{lb/min})/\text{in}^2$$

The numerator represents one unit for power or energy transfer per unit time. The denominator represents area. Therefore, *pV* can be thought of as the rate of energy input to the bearing per unit of projected area of the bearing if the coefficient of friction is 1.0. Of course, the actual coefficient of friction is normally much less than one. Then you can think of *pV* as a comparative measure of the bearing's ability to absorb energy without overheating.

In SI units, force, *F*, is in newtons (N) and bearing dimensions are in mm. The pressure is then given as follows:

⇒ **Bearing Pressure**

$$p = F/LD = \text{N/mm}^2 = \text{MPa} \quad (16-1)$$

The linear velocity of the surface of the journal is typically computed from

$$v = \pi Dn/(60 000) \text{ m/s}$$

with *D* in mm and *n* in rpm. Then the units for *pV* are

$$pV = (\text{MPa})(\text{m/s})$$

A useful conversion to the U.S. Customary System is

$$1.0 \text{ psi-fpm} = 3.50 \times 10^{-5} \text{ MPa} \cdot \text{m/s}$$

Again, the units for *pV* can be reformatted to reflect the rate of energy transfer per unit area:

$$pV = \text{MPa} \cdot \text{m/s} = \frac{10^6 \text{ N}}{\text{m}^2} \cdot \frac{\text{m}}{\text{s}} = \frac{10^6 \text{ W}}{\text{m}^2}$$

where 1 W = 1 N · m/s

Operating Temperature

Most plastics are limited to approximately 200°F (93°C). However, PTFE can operate at 500°F (260°C). Babbitt is limited to 300°F (150°C), while tin-bronze and aluminum can operate at 500°F (260°C). A major advantage

of carbon-graphite bearings is their ability to operate at up to 750°F (400°C).

Design Procedure for Continuously Rotating Shafts in Bearings

The following is one method of completing the preliminary design of boundary-lubricated plain surface bearings.

PROCEDURE FOR DESIGNING BOUNDARY-LUBRICATED PLAIN SURFACE BEARINGS ▾

Given information: Radial load on the bearing, F (lb or N); speed of rotation, n (rpm); nominal minimum shaft diameter, D_{\min} (in or mm) (based on stress or deflection analysis).

Objectives of the design process: To specify the nominal diameter and the length of the bearing and a material that will have a safe value of pV .

1. Specify a trial diameter, D , for the journal and the bearing.
2. Specify a ratio of bearing length to diameter, L/D , typically in the range of 0.5 to 2.0. For nonlubricated (dry-rubbing) or oil-impregnated porous bearings, $L/D = 1$ is recommended. (See Reference 6.) For carbon-graphite bearings, $L/D = 1.5$ is recommended.
3. Compute $L = D(L/D)$, the nominal length of the bearing.

4. Specify a convenient value for L .
5. Compute the bearing pressure (lb/in^2 or Pa):

$$p = F/LD$$
6. Compute the linear speed of the journal surface:
 U.S. Customary units: $V = \pi Dn/12 \text{ ft/min}$ or fpm
 SI metric units: $V = \pi Dn(60000) \text{ m/s}$
 Also note: $1.0 \text{ ft/min} = 0.00508 \text{ m/s}$
 $1.0 \text{ m/s} = 197 \text{ ft/min}$
7. Compute pV (psi-fpm or MPa · m/s).
8. Multiply $2(pV)$ to obtain a design value for pV .
9. Specify a material from Table 16–1 with a rated value of pV equal to or greater than the design value.
10. Complete the design of the bearing system considering diametral clearance, lubricant selection, lubricant supply, surface finish specification, thermal control, and mounting considerations. Often the supplier of the bearing material provides recommendations for many of these design decisions.
11. Nominal diametral clearance: Many factors affect the final specification for clearance, such as need for precision, thermal expansion of all parts of the bearing system, load variations, shaft deflection expected, means of providing lubricant, and manufacturing capability. One long-used rule of thumb is to provide 0.001 in of clearance per inch of journal diameter. Figure 16–4

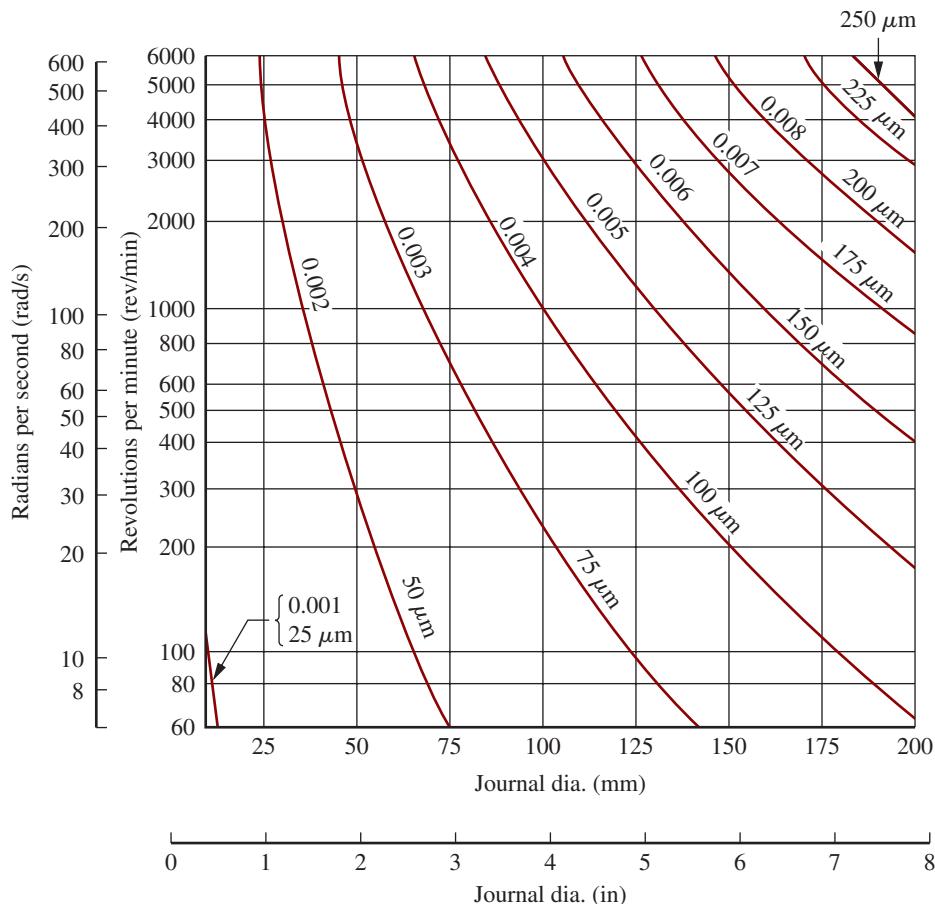


FIGURE 16–4 Minimum recommended diametral clearance for bearings considering journal diameter and rotational speed

shows recommended minimum values for clearance based on the journal diameter and the rotational speed under steady loads. These values apply to the smallest clearance under any combination of tolerances on the dimensions of the bearing system to avoid problems

of bearing heating and eventual seizure. The operating clearance will then be higher than these values because of manufacturing tolerances. Performance over the entire range of clearances should be evaluated, preferably by testing.

Example Problem 16–1

A bearing is to be designed to carry a radial load of 150 lb from a shaft having a minimum acceptable diameter of 1.50 in and rotating at 500 rpm. Design the bearing to operate under boundary-lubrication conditions.

Solution We will use the design procedure previously outlined.

Step 1. Trial diameter: Try $D = D_{\min} = 1.50$ in.

Steps 2–4. Try $L/D = 1.0$. Then $L = D = 1.50$ in.

Step 5. Bearing pressure:

$$p = F/LD = (150 \text{ lb})/(1.50 \text{ in})(1.50 \text{ in}) = 66.7 \text{ psi}$$

Step 6. Journal speed:

$$V = \pi Dn/12 = \pi(1.50)(500)/12 = 196 \text{ ft/min}$$

Step 7. pV factor:

$$pV = (66.7 \text{ psi})(196 \text{ fpm}) = 13\,100 \text{ psi-fpm}$$

Step 8. Design value of $pV = 2(13\,100) = 26\,200 \text{ psi-fpm}$.

Step 9. From Table 16–1, we could use a bearing made from high tin babbitt having a rated value of pV of 30 000 psi-fpm.

Steps 10–11. Nominal diametral clearance: From Figure 16–4, we can recommend a minimum $C_d = 0.002$ in based on $D = 1.50$ in and $n = 500$ rpm. Other design details are dependent on the system into which the bearing will be placed.

Example Problem 16–2

Design a boundary-lubricated plain surface bearing to carry a radial load of 2.50 kN from a shaft rotating at 1150 rpm. The nominal minimum diameter of the journal is 65 mm.

Solution We will use the design procedure previously outlined.

Step 1. Trial diameter: Try $D = 75$ mm.

Steps 2–4. Try $L/D = 1.0$. Then $L = D = 75$ mm.

Step 5. Bearing pressure:

$$p = F/LD = (2500 \text{ N})/(75 \text{ mm})(75 \text{ mm}) = 0.444 \text{ N/mm}^2 = 0.444 \text{ MPa}$$

Step 6. Journal speed:

$$V = \pi Dn/(60\,000) = \pi(75)(1150)/(60\,000) = 4.52 \text{ m/s}$$

Step 7. pV factor:

$$pV = (0.444 \text{ MPa})(4.52 \text{ m/s}) = 2.008 \text{ MPa} \cdot \text{m/s}$$

Step 8. Design value for $pV = 2(2.008) = 4.016 \text{ MPa} \cdot \text{m/s}$.

Step 9. From Table 16–1, we can specify aluminum bronze (C95400) having a pV rating of 4.375 MPa · m/s.

Steps 10–11. From Figure 16–4, we can recommend a minimum $C_d = 100 \mu\text{m}$ (0.100 mm or 0.004 in) based on $D = 75 \text{ mm}$ and 1150 rpm.

Alternate design: The pV factor for the initial design, while satisfactory, is somewhat high and may require careful lubrication. Consider the following alternate design having a larger bearing diameter.

Step 1. Try $D = 150 \text{ mm}$.

Step 2. Let $L/D = 1.25$.

Step 3. Then

$$L = D(L/D) = (150 \text{ mm})(1.25) = 187.5 \text{ mm}$$

Step 4. Let's use the more convenient value of 175 mm for L .

Step 5. Bearing pressure:

$$p = F/LD = (2500 \text{ N})/(175 \text{ mm})(150 \text{ mm}) = 0.095 \text{ N/mm}^2 = 0.095 \text{ MPa}$$

Step 6. Journal speed:

$$V = \pi Dn/(60 000) = \pi(150)(1150)/(60 000) = 9.03 \text{ m/s}$$

Step 7. pV factor:

$$pV = (0.095 \text{ MPa})(9.03 \text{ m/s}) = 0.860 \text{ MPa} \cdot \text{m/s}$$

Step 8. Design value of $pV = 2(0.860) = 1.720 \text{ MPa} \cdot \text{m/s}$.

Step 9. From Table 16–1, we can specify an oil-impregnated porous bronze bearing having a pV rating of 1.750 MPa · m/s or a BU dry-lubricated bearing having a pV rating of 1.785 MPa · m/s.

Steps 10–11. From Figure 16–4, we can recommend a minimum $C_d = 150 \mu\text{m}$ (0.150 mm or 0.006 in) based on $D = 150 \text{ mm}$ and 1150 rpm. Other design details are dependent on the system into which the bearing will be placed.

Design Procedure for Boundary-Lubricated Bearings under Oscillating Loading

Many bearings of the boundary-lubricated type oscillate on stationary shafts rather than having continuously rotating shafts within the stationary bearings. Examples are bearings on steering shafts, suspension elements for vehicles, brake and accelerator pedals, seat position adjusters, shift mechanisms, door hinges, fitness exercising machines, hospital beds, hydraulic cylinder actuators, and hatch covers.

The design procedure is modified under these conditions. We can describe the oscillation by the following data:

φ = Angle of the oscillation in one direction, degrees

n_o = Number of complete oscillation cycles in both directions per minute, cycles/min

D = Nominal inside diameter of the bearing, in or mm

L = Length of the bearing, in or mm

F = Applied radial load, lb or N

Now we can define an equivalent number of revolutions/min for the bearing motion:

$$n_{eq} = n_o/(2\varphi)/360 \text{ equivalent revolutions/min} \quad (16-2)$$

We can then substitute this value in previously developed equations for the relative velocity between the bearing and the shaft as follows.

U.S. Customary units; D in inches:

$$V = \pi D n_{eq}/12 \text{ ft/min} \quad (16-3)$$

$$\text{SI units; } D \text{ in mm: } V = \pi D n_{eq}/(60 000) \text{ m/s} \quad (16-4)$$

The pV value is then calculated in the same manner as for rotating shafts in bearings.

**Example Problem
16–3**

A design for an industrial oven door has a 15-mm-diameter horizontal bar over the oven opening on which the door hangs. Two smooth cylindrical door hinges are lined with the graphite metalized bearing material listed in Table 16–1. The door weighs 20.40 kN and rotates 110° from vertical to 20° above horizontal as the door is opened to insert or withdraw parts to be heated. It then returns to the original position. The door is opened and closed five times per minute. Determine the required length of the hinges to produce a pV value no more than 25% of the limiting value.

Solution From the given data:

$$\varphi = 110^\circ$$

$$n_0 = 5.0 \text{ cycles/min}$$

$$D = 15 \text{ mm}$$

$$L = \text{Length of the bearing, in or mm}$$

$$F = (20.40 \text{ kN})/2 = 10.2 \text{ kN} = 10\,200 \text{ N on each hinge}$$

$$pV_{\text{limit}} = 0.525 \text{ MPa} \cdot \text{m/s}$$

The allowable pV value is

$$(pV_{\text{all}}) = pV_{\text{limit}} \times 0.25 = 0.525 \text{ MPa} \cdot \text{m/s} \times 0.25 = 0.1313 \text{ MPa} \cdot \text{m/s}$$

We can now compute the equivalent number of revolutions per minute from

$$n_{\text{eq}} = n_0(2\varphi)/360 = (5.0 \text{ cycles/min})(2)(110^\circ)/360^\circ = 3.06$$

Now the equivalent sliding velocity is

$$V_e = \pi D n_{\text{eq}}/(60\,000) \text{ m/s} = V = \pi(15)(3.06)/(60\,000) \text{ m/s} = 0.00240 \text{ m/s}$$

We can now solve for the limiting bearing pressure:

$$p_{\text{all}} = (pV_{\text{all}})/V_e = (0.1313 \text{ MPa} \cdot \text{m/s})/(0.00240 \text{ m/s}) = 54.69 \text{ MPa} = 54.69 \text{ N/mm}^2$$

Let $p = F/LD$, we can then solve for the required length as follows:

$$L = F/pD = (10\,200 \text{ N})/(54.69 \text{ N/mm}^2)(15 \text{ mm}) = 12.43 \text{ mm}$$

A preferred value of $L = 16 \text{ mm}$ would be reasonable.

Wear Considerations for Plain Boundary-Lubricated Bearings

Wear is an important consideration in boundary-lubricated bearings because of the inherent sliding action between the shaft and the bearing. Each manufacturer provides wear data unique to its materials. See Section 16–10 for additional discussion of wear.

16–6 FULL-FILM HYDRODYNAMIC BEARINGS

In the *full-film hydrodynamic bearing*, the load on the bearing is supported on a continuous film of lubricant, usually oil, so that no contact between the bearing and the rotating journal occurs. A pressure must be developed in the oil in order to carry the load. With proper design, the motion of the journal inside the bearing creates the necessary pressure.

Figure 16–5 shows the progressive action in a plain surface bearing from start-up to the steady-state hydrodynamic operation. Observe that boundary lubrication and mixed-film lubrication precede the establishment of

full-film hydrodynamic lubrication. At start-up, the radial load applied through the journal to the bearing forces the journal off center in the direction of the load, taking up all clearance [Figure 16–5(a)]. At the initial slow rotational speeds, the friction between the journal and the bearing causes the journal to climb up the bearing wall, somewhat as shown in Figure 16–5(b). Because of the viscous shear stresses developed in the oil, the moving journal draws oil into the converging, wedge-shaped area above the region of contact. The resulting pumping action produces a pressure in the oil film; when the pressure is sufficiently high, the journal is lifted from the bearing. The frictional forces are greatly reduced under this operating condition, and the journal moves eventually to the steady-state position, as shown in Figure 16–5(c). Note that the journal is offset from the direction of the load; that there is a certain eccentricity, e , between the geometric center of the bearing and the center of the journal; and that there is a point of minimum film thickness, b_o , at the nose of the wedge-shaped pressurized zone.

Figure 16–6 illustrates the general form of the pressure distribution within a full-film hydrodynamically lubricated bearing. The clearance between the bearing and the journal

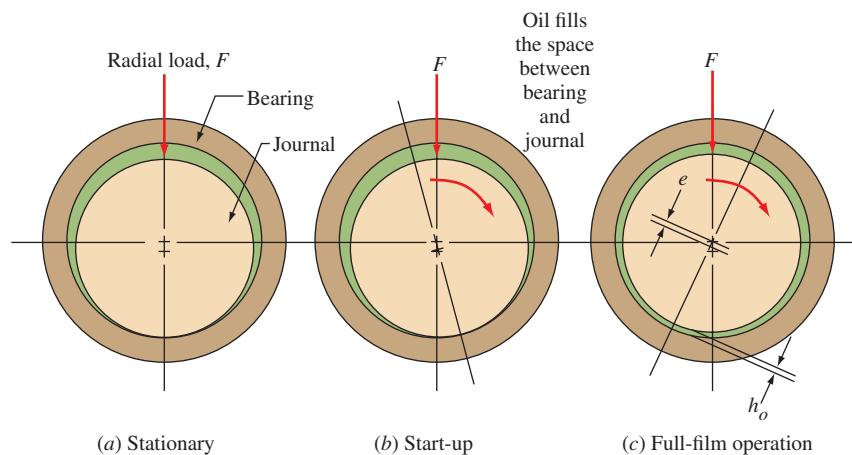


FIGURE 16-5 Position of the journal relative to the bearing as a function of mode of operation.

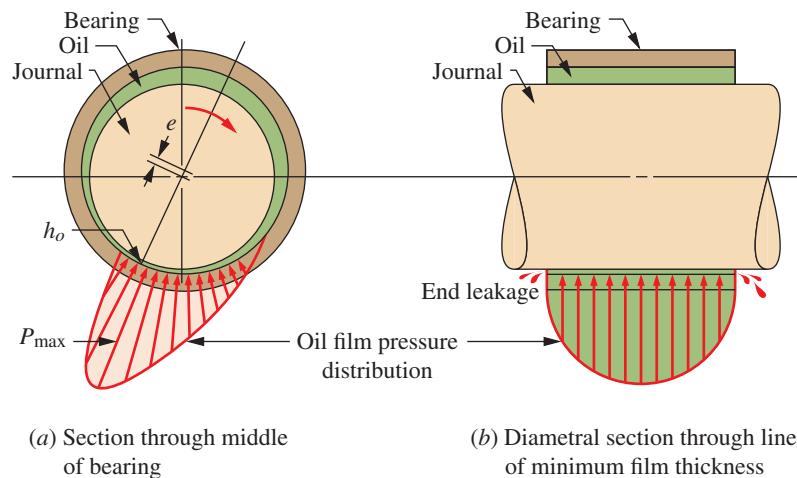


FIGURE 16-6 Pressure distribution in the oil film for hydrodynamic lubrication

is highly exaggerated. Part (a) of the figure shows the rise of pressure as the rotating shaft draws oil into the converging wedge, approaching the point of minimum film thickness. The maximum pressure occurs there and then falls rapidly to nearly zero as the space between the journal and the bearing diverges again. The integrated effect of the pressure distribution is a force sufficient to support the shaft on a film of oil without metal-to-metal contact.

Figure 16–6(b) shows the pressure distribution axially along the shaft through the line of minimum film thickness or maximum pressure. The highest pressure value occurs in the middle of the bearing length, and it falls rapidly as the ends are approached because the pressure outside the bearing is ambient pressure, typically atmospheric pressure. There is continual leakage flow from both ends of the bearing. This illustrates the importance of providing a means of continually supplying oil to the bearing to maintain the full-film operation. Without a steady, adequate supply of oil, the system would not be able to create the pressurized film to carry the shaft, and boundary lubrication would result. The significantly higher frictional forces thus created would

cause rapid heating of the bearing/journal interface, and seizure would likely occur very rapidly.

16-7 DESIGN OF FULL-FILM HYDRODYNAMICALLY LUBRICATED BEARINGS

The following discussion presents several guidelines for bearing design for typical industrial applications. The design procedure is based primarily on information in References 1–11.

Surface Roughness

A ground journal with a surface roughness average of 16 to 32 microinches (μ in), or 0.40 to 0.80 μ m, is recommended for bearings of good quality. The bearing should be equally smooth or made from one of the softer materials so that “wearing in” can smooth the high spots, creating a good fit between the journal and the bearing. In high-precision equipment, polishing or lapping can be used to produce a surface finish of the order of 8 to 16 μ in (0.20 to 0.40 μ m).

Minimum Film Thickness

The limiting acceptable value of the minimum film thickness depends on the surface roughness of the journal and the bearing because the film must be thick enough to eliminate any solid contact during expected operating conditions. The suggested design value also depends on the size of the journal. For ground journals, the following relationship can be used to estimate the design value:

$$h_o = 0.00025D \quad (16-5)$$

where D = diameter of the bearing.

Diametral Clearance

The clearance between the journal and the bearing depends on the nominal diameter of the bearing, the precision of the machine for which the bearing is being designed, the speed of rotation, and the surface roughness of the journal. The coefficient of thermal expansion for both the journal and the bearing must also be considered to ensure a satisfactory clearance under all expected operating conditions. An overall guideline of making the clearance in the range of 0.001 to 0.002 times the bearing diameter can be used. Figure 16–4 shows a graph of the recommended minimum diametral clearance as a function


of the bearing diameter and the rotational speed. Some variation above the values from the curve is permissible.

Ratio of Bearing Length to Diameter


Because the journal is a part of the shaft itself, its minimum diameter is usually limited by stress and deflection considerations of the type discussed in Chapter 12. Then the length of the bearing is specified to provide for a suitable level of bearing pressure. General-purpose industrial machinery bearings typically operate at approximately 200 to 500 psi (1.4 to 3.4 MPa) bearing pressure, based on the projected area of the bearing [p = load/(LD)]. The pressure may range from as low as 50 psi (0.34 MPa) for light-duty equipment to 2000 psi (13.4 MPa) for heavy machinery under varying loads, such as in internal combustion engines. The leakage of oil from the bearing is also affected by the bearing length. The typical range of length to diameter ratio (L/D) for full-film hydrodynamic bearings is from 0.35 to 1.5. But many successful bearings operate outside this range.

Lubricant Temperature

The viscosity of the oil is a critical parameter in the performance of a bearing. Figure 16–7 shows the great

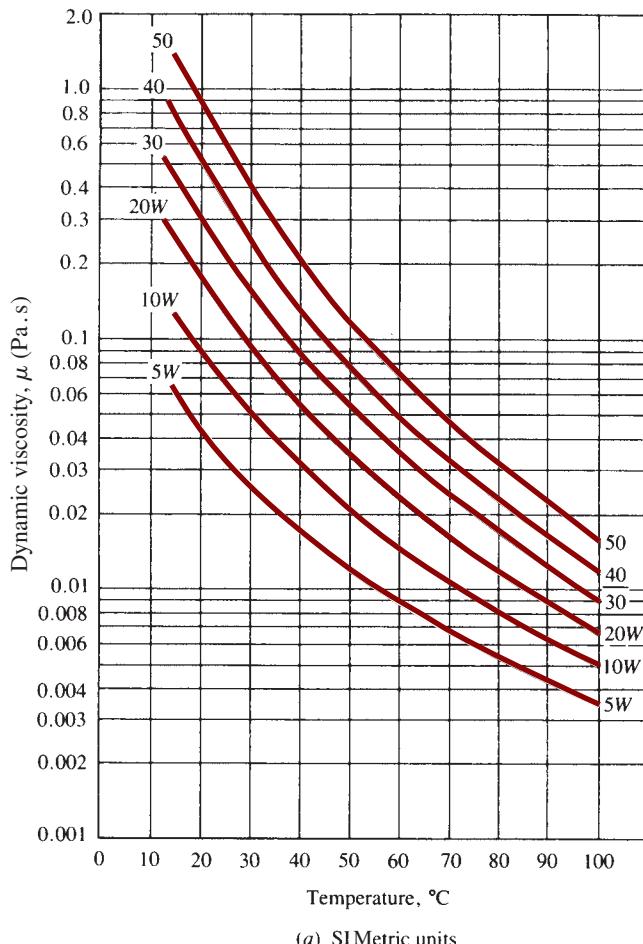

(a) SI Metric units

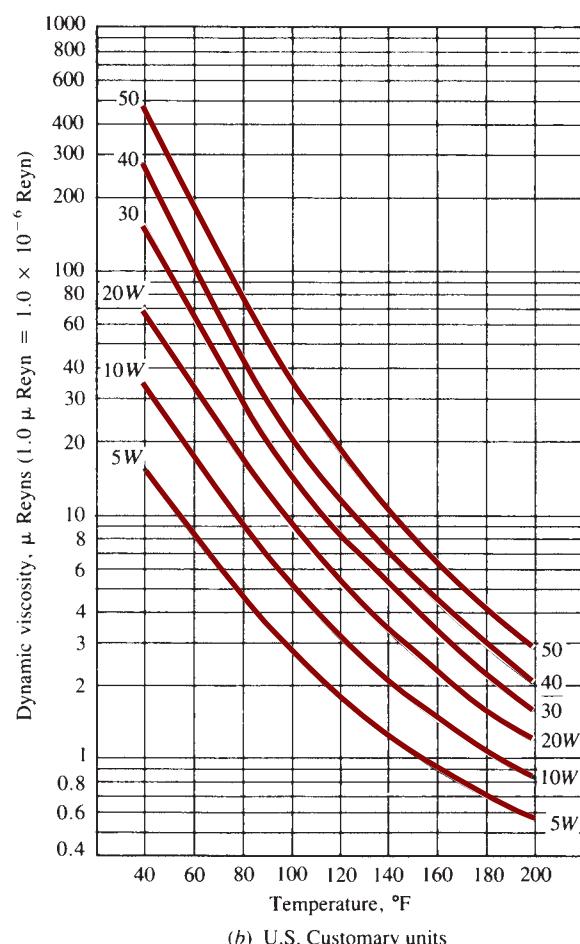

(b) U.S. Customary units

FIGURE 16–7 Viscosity versus temperature for SAE oils

variation of viscosity with temperature, which indicates that temperature control is advisable. Note that the vertical viscosity axis has a logarithmic scale. Also, most petroleum lubricating oils should be limited to approximately 160°F (70°C) in order to retard oxidation. The temperature of interest is, of course, that inside the bearing. Frictional energy or thermal energy from the equipment itself can increase the oil temperature above that in the supply reservoir. In design examples we will select the lubricant that will ensure a satisfactory viscosity at 160°F, unless otherwise noted. If the actual operating temperature is lower, the resulting film thickness will be greater than the design value—a conservative result. It is incumbent on the designer to ensure that the limiting temperature is not exceeded, using forced cooling if necessary.

Lubricant Viscosity

The specification of the lubricant for the bearing is one of the final decisions to be made in the design procedure that follows. In the calculations, it is the dynamic viscosity, μ , which is used. In the U.S. Customary Unit (lb-in-s) System, the dynamic viscosity is expressed in $\text{lb} \cdot \text{s/in}^2$, which is given the name *reyn* in honor of Osborne Reynolds, who performed much significant work in fluid flow. In SI units, the standard unit is $\text{N} \cdot \text{s/m}^2$ or $\text{Pa} \cdot \text{s}$. Some prefer the unit of poise or centipoise, derived from the dyne-cm-s metric system. Some useful conversions are

$$1.0 \text{ reyn} = 6895 \text{ Pa} \cdot \text{s}$$

$$1.0 \text{ Pa} \cdot \text{s} = 1000 \text{ centipoise}$$

Other viscosity conversions may also be useful. (See Reference 18.) Figure 16–7 shows graphs of dynamic viscosity versus temperature for both SI and U.S. Customary

units. Note in Figure 16–7(b) that common values in U.S. Customary units are very small. Values from the scale must be multiplied by 10^{-6} .

Sommerfeld Number

The combined effect of many of the variables involved in the operation of a bearing under hydrodynamic lubrication can be characterized by the dimensionless number, S , called the *Sommerfeld number*. Some refer to this as the *bearing characteristic number*, which is defined as follows:

◆ Bearing Characteristic Number

$$S = \frac{\mu n_s (R/C_r)^2}{p} \quad (16-6)$$

Note that S is similar to the bearing parameter, $\mu n/p$, discussed in Section 16–3, in that it involves the combined effect of viscosity, rotational speed, and bearing pressure. In order for S to be dimensionless, the following units should be used for the factors:

| | U.S. Customary Units | SI Units |
|----------|---|--|
| μ | $\text{lb} \cdot \text{s/in}^2$ (reyns) | $\text{Pa} \cdot \text{s} (\text{N} \cdot \text{s/m}^2)$ |
| n_s | rev/s | rev/s |
| p | lb/in^2 (psi) | $\text{Pa} (\text{N/m}^2)$ |
| R, C_r | in | m or mm |

Any consistent units can be used. Figure 16–8, adapted from Reference 4, shows the relationship between the Sommerfeld number and the film thickness

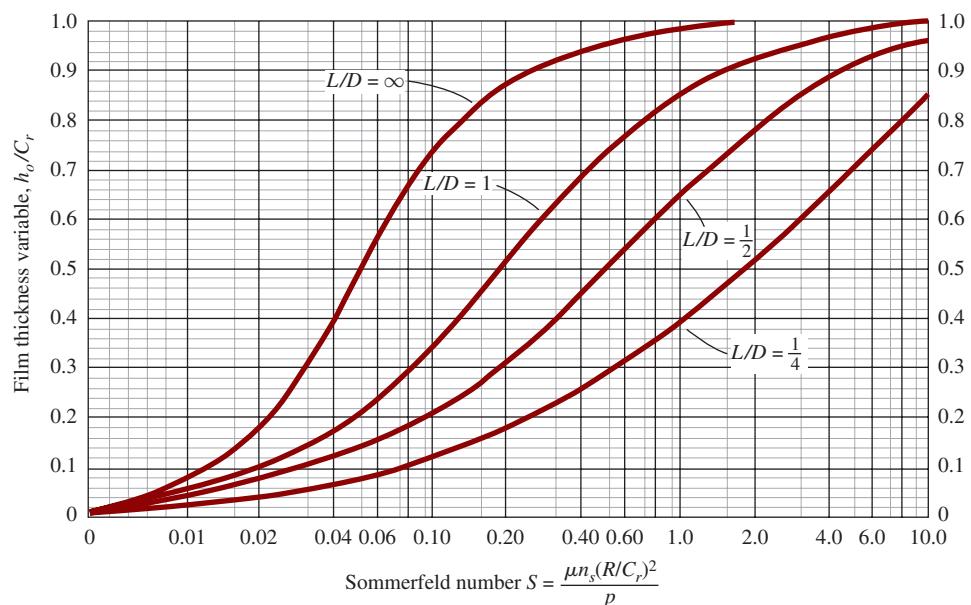


FIGURE 16–8 Film thickness variable, h_o/C_r , versus Sommerfeld number, S

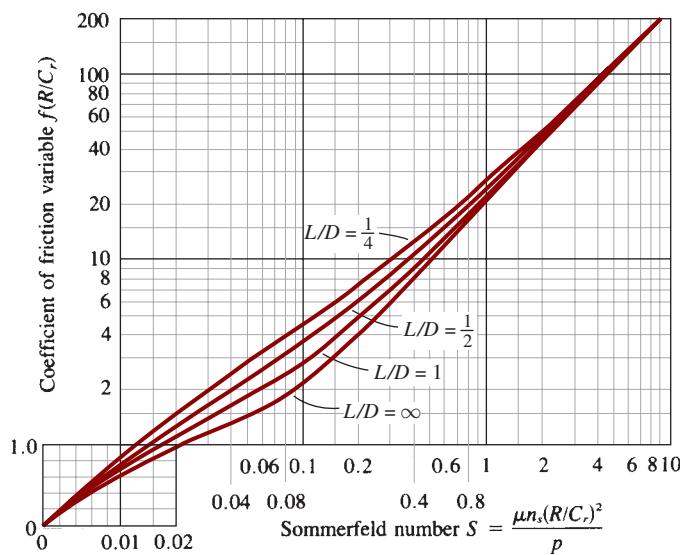


FIGURE 16-9 Coefficient of friction variable, $f(R/C_r)$, versus Sommerfeld number, S

ratio, h_0/C_r . Figure 16-9 shows the relationship between S and the coefficient of friction variable, $f(R/C_r)$. These values are used in the design procedure that follows. Because many design decisions are required, several acceptable solutions are possible.

Design Procedure

PROCEDURE FOR DESIGNING FULL-FILM HYDRODYNAMICALLY LUBRICATED BEARINGS ▾

Because the bearing design is usually done after the stress analysis of the shaft is completed, the following items are typically known:

- 1. Radial load on the bearing, F , usually in lb or N
- 2. Rotational speed, n , usually in rpm
- 3. Nominal shaft diameter at the journal, sometimes specified as a minimum acceptable diameter based on strength and stiffness

The results of the design procedure produce values for the actual journal diameter, the bearing length, the diametral clearance, the minimum film thickness of the lubricant during operation, the surface finish for the journal, the lubricant and its maximum operating temperature, the coefficient of friction, the friction torque, and the power dissipated because of friction.

1. Specify a trial value for the journal diameter, D , and the radius, $R = D/2$.
2. Specify a nominal operating bearing pressure, usually 200 to 500 psi (1.4 to 3.4 MPa), where $p = F/LD$. Solve for L :

$$L = F/pD$$

Then compute L/D . It might be desirable to redefine L/D to be a convenient value from 0.25 to 1.5 in order to use the design charts available. Finally, specify the actual design value of L/D and L , and compute the actual $p = F/LD$.

3. Referring to Figure 16-4, specify the diametral clearance, C_d , based on the values for D and n . Then compute $C_r = C_d/2$ and the ratio R/C_r .
4. Specify the desired surface finish for the journal and bearing, also based on the application. A typical value is 16 to 32 μin average (0.40 to 0.80 μm).
5. Compute the nominal minimum film thickness from Equation (16-5),

$$h_0 = 0.00025D$$

6. Compute h_0/C_r , the film thickness ratio.
7. From Figure 16-8, determine the value of the Sommerfeld number for the selected film thickness ratio and the L/D ratio. Exercise care in interpolating in this chart because of the logarithmic axis and the nonlinear spread between curves. For $L/D > 1$, only approximate data can be obtained. For $L/D = 1.5$, interpolate approximately one-fourth of the way between the curves for $L/D = 1$ and $L/D = \infty$. For $L/D = 2$, go about halfway.
8. Compute the rotational speed n_s in revolutions per second:

$$n_s = n/60$$

where n is in rpm.

9. Because each factor of the Sommerfeld number is known except the lubricant viscosity, μ , solve for the required minimum viscosity that will produce the desired minimum film thickness:

⇒ Required Minimum Lubricant Viscosity

$$\mu = \frac{Sp}{n_s(R/C_r)^2} \quad (16-7)$$

10. Specify a maximum acceptable lubricant temperature, usually 160°F or 70°C. Select a lubricant from Figure 16–7 that will have at least the required viscosity at the operating temperature. If the selected lubricant has a viscosity greater than that computed in Step 9, recompute S for the new value of viscosity. The resulting value for the minimum film thickness will now be somewhat greater than the design value, a generally desirable result. You can consult Figure 16–8 again to determine the new value of the minimum film thickness, if desired.
11. From Figure 16–9, obtain the coefficient of friction variable, $f(R/C_r)$.
12. Compute $f = f(R/C_r)/(R/C_r) = \text{coefficient of friction}$.
13. Compute the friction torque. The product of the coefficient of friction and the load F gives the frictional force

at the surface of the journal. That value multiplied by the radius gives the torque:

❖ **Friction Torque**

$$T_f = F_f R = f F R \quad (16-8)$$

14. Compute the power dissipated in the bearing from the relationship between power, torque, and speed that we have used many times:

❖ **Frictional Power Loss**

$$P_f = T_f n / 63,000 \text{ hp} \quad (16-9)$$

This frictional power loss represents the rate of energy input to the lubricant within the bearing that can cause the temperature to rise. It is a part of the energy that must be removed from the bearing to maintain satisfactory lubricant viscosity.

Example Problem 16–4 illustrates the procedure.

Example Problem 16–4 Design a plain surface journal bearing to carry a steady radial load of 1500 lb while the shaft rotates at 850 rpm. The shaft stress analysis determines that the minimum acceptable diameter at the journal is 2.10 in. The shaft is part of a machine requiring good precision.

Solution

Step 1. Let's select $D = 2.50$ in. Then $R = 1.25$ in.

Step 2. For $p = 200$ psi, L must be

$$L = F/pD = 1500/(200)(2.50) = 3.00 \text{ in}$$

For this value of L , $L/D = 3.00/2.50 = 1.20$. In order to use one of the standard design charts, let's change L to 2.50 in so that $L/D = 1.0$. This is not essential, but it eliminates interpolation. The actual pressure is then

$$p = F/LD = 1500/(2.50)(2.50) = 240 \text{ psi}$$

This is an acceptable pressure.

Step 3. From Figure 16–4, $C_d = 0.003$ in is suitable for the diametral clearance, based on $D = 2.50$ in and $n = 850$ rpm, and $C_r = C_d/2 = 0.0015$ in. Also,

$$R/C_r = 1.25/0.0015 = 833$$

This value is used in later calculations.

Step 4. For the precision desired in this machine, use a surface finish of 16 to 32 μin , requiring a ground journal.

Step 5. Minimum film thickness (design value):

$$h_o = 0.00025D = 0.00025(2.50) = 0.0006 \text{ in (approx.)}$$

Step 6. Film thickness variable:

$$h_o/C_r = 0.0006/0.0015 = 0.40$$

Step 7. From Figure 16–8, for $h_o/C_r = 0.40$ and $L/D = 1$, we can read $S = 0.13$.

Step 8. Rotational speed in revolutions per second:

$$n_s = n/60 = 850/60 = 14.2 \text{ rev/s}$$

Step 9. Solve for the viscosity from the Sommerfeld number, S :

$$\mu = \frac{Sp}{n_s(R/C_r)^2} = \frac{(0.13)(240)}{(14.2)(833)^2} = 3.17 \times 10^{-6} \text{ reyn}$$

Step 10. From the viscosity chart, Figure 16–7, SAE 30 oil is required to ensure a sufficient viscosity at 160°F. The actual expected viscosity of SAE 30 at 160°F is approximately 3.3×10^{-6} reyn.

Step 11. For the actual viscosity, the Sommerfeld number would be

$$S = \frac{\mu n_s(R/C_r)^2}{p} = \frac{(3.3 \times 10^{-6})(14.2)(833)^2}{240} = 0.135$$

Step 12. Coefficient of friction variable (from Figure 16–9): $f(R/C_r) = 3.5$ for $S = 0.135$ and $L/D = 1$. Now, because $R/C_r = 833$,

$$f = 3.5/833 = 0.0042$$

Step 13. Friction torque:

$$T_f = fFR = (0.0042)(1500)(1.25) = 7.88 \text{ lb}\cdot\text{in}$$

Step 14. Frictional power:

$$P_f = T_f n / 63,000 = (7.88)(850)/63,000 = 0.106 \text{ hp}$$

Comment

A qualitative evaluation of the result would require more knowledge about the application. But note that a coefficient of friction of 0.0042 is quite low. It is likely that a machine requiring such a large shaft and with such high bearing forces also requires a large power to drive it. Then the 0.106-hp friction power would appear small.

Thermal considerations are also important to determine how much energy must be dissipated from the bearing. Converting the frictional power loss to thermal power gives

$$P_f = 0.106 \text{ hp} \frac{745.7 \text{ W}}{\text{hp}} = 79.0 \text{ W}$$

Expressing this in U.S. Customary units gives

$$P_f = 79.0 \text{ W} \frac{1 \text{ Btu/h}}{0.293 \text{ W}} = 270 \text{ Btu/h}$$

16-8 PRACTICAL CONSIDERATIONS FOR PLAIN SURFACE BEARINGS

The design of the bearing system must consider the method of delivery of the lubricant to the bearing, the distribution of the lubricant within the bearing, the quantity of lubricant required, the amount of heat generated in the bearing and its effect on the temperature of the lubricant, the dissipation of heat from the bearing, the maintenance of the lubricant in a clean condition, and the performance of the bearing over the complete range of operating conditions that the bearing is likely to experience.

Many of these factors are simply design details that must be worked out along with the other aspects of the machine design. But some guidelines and general recommendations will be presented here.

The lubricant can be delivered to the bearing by a pump, perhaps driven from the same source that drives the entire machine. In some gear drives, one of the gears is designed to dip into an oil sump and carry oil up to the gear mesh and to the bearings. An external oil cup can be used to supply oil by gravity if the lubricant quantity required is small.

Methods of estimating the quantity of oil required, considering the leakage of oil from the ends of the bearing, are available. (See References 1, 4, 7, 10, 11, 13, and 15.)

The delivery of oil to the bearing should always be in an area opposite the location of the hydrodynamic pressure that supports the load. Otherwise, the oil delivery hole would destroy the pressurization of the film.

Grooving is frequently used to distribute the oil along the length of the bearing. Oil would be delivered through a radial hole in the bearing at the midlength point. The groove would extend axially in both directions from the hole, but it would terminate somewhat

before the end of the bearing in order to keep the oil from leaking to the side. The rotation of the journal then carries the oil around to the area where the hydrodynamic film is generated. Figure 16–10 shows several styles of grooving in use.

Cooling of the bearing itself or of the oil in the sump that supplies the oil must always be considered. Natural convection may be sufficient to transfer heat away and maintain an acceptable bearing temperature. If not, forced convection can be used. In severe cases of heat generation, especially where the bearing system operates in a hot area such as a furnace, liquid coolant can be pumped through a jacket around the bearing. Some commercially available bearings provide this feature. Placing a heat exchanger in the oil sump or pumping the oil through an external heat exchanger can also be done.

Figure 16–11 shows one commercially available style of a plain bearing with coolant pipes to allow use of water, air, or oil as the internal coolant.

The lubricant can be cleaned by passing it through filters as it is pumped to the bearing. Magnetic plugs within the sump can be effective in attracting and holding metallic particles that can score the bearing if allowed to enter the clearance space between the journal and the bearing. Of course, frequent changing of the oil is also desirable.

The design procedure used in the preceding section was completed for one set of conditions: a given temperature, diametral clearance, load, and rotational speed. If any of these factors varies during the operation of the machine, the performance of the bearing must be evaluated under the new conditions. The testing of a prototype under a variety of conditions is also desirable. References 1–8,



FIGURE 16-10 Examples of styles of grooving for plain bearings

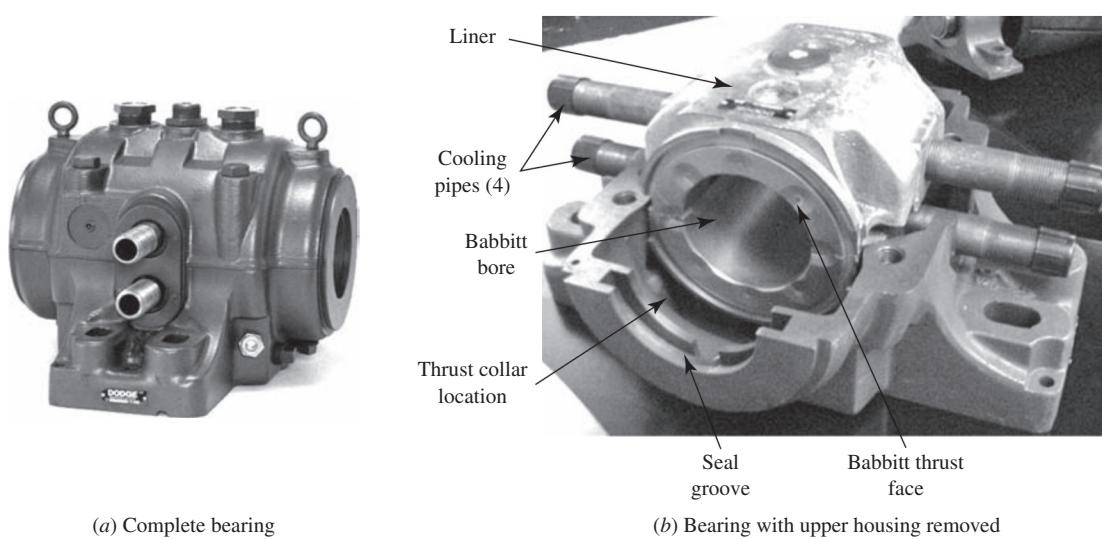


FIGURE 16-11 Sleevolio hydrodynamically lubricated bearing with cooling pipes (Baldor/Dodge, Greenville, SC)

13–16, 19, and 20 discuss other practical considerations for the design of plain surface bearings.

16-9 HYDROSTATIC BEARINGS

Recall that hydrodynamic lubrication results from the creation of a pressurized film of oil sufficient to carry the load on the bearing, with the film being generated by the motion of the journal itself within the bearing. It was noted that a steady relative motion between the journal and the bearing is required to generate and maintain the film.

In some types of equipment, the conditions are such that a hydrodynamic film cannot be developed. Reciprocating or oscillating devices or very-slow-moving machines are examples. If the load on the bearing is very high, it may not be possible to generate a sufficiently high pressure in the film to support the load. Even in cases in which hydrodynamic lubrication can be developed during normal operation of the machine, there is still mixed-film or boundary lubrication during the start-up and shut-down cycles. This may be unacceptable.

Consider the design of the mount for a telescope or an antenna system in which rotation of the base is required to be at very slow speed and to have smooth motion. Also, low friction is desired in order to keep the drive system small and to provide fast response and accurate positioning. The mount is essentially a thrust bearing supporting the weight of the system.

In this type of application, *hydrostatic lubrication* is desirable. Lubricant is supplied to the bearing under high pressure, several hundred psi or higher, and the pressure acting on the area of the bearing literally lifts the load off the bearing, even with the equipment stationary.

Figure 16–12 shows the main elements of a hydrostatic bearing system. A positive displacement pump

draws oil from a reservoir and delivers it under pressure to a supply manifold from which several bearing pads can be supplied. At each bearing pad, the oil passes through a control element that permits the balancing of the system. The control element may be a flow-control valve, a length of small-diameter tubing, or an orifice, any of which offers a resistance to the flow of oil and permits the several bearing pads to operate at a sufficiently high pressure to lift the load on each pad. When the system is in operation, the oil enters a recess within the bearing pad. For example, Figure 16–12(b) shows a circular pad with a circular recess in its center supplied with oil through a central hole. The load initially rests on the land area, sealing the recess. As the pressure in the recess, p_r , reaches the level where the product of the pressure times the recess area equals the applied load, the load is lifted from the pad. Immediately there is a flow of oil across the land area under the lifted load, and the pressure decreases to atmospheric pressure at the outside of the pad. The flow of oil must be maintained at a level that matches the outflow from the pad. When equilibrium occurs, the integrated product of the local pressure times the area lifts the load a certain distance, b , usually in the range of 0.001 to 0.010 in (0.025 to 0.25 mm). The film thickness, b , must be large enough to ensure no solid contact over the range of operating conditions, but it should be kept as small as possible to minimize the flow of oil through each bearing and the pump power required to drive the system.

Hydrostatic Bearing Performance

Three factors characterizing the performance of a hydrostatic bearing are its load-carrying capacity, the flow of oil required, and the pumping power required, as indicated by the dimensionless coefficients a_f , q_f , and H_f . The magnitudes of the coefficients depend on the design of the pad:

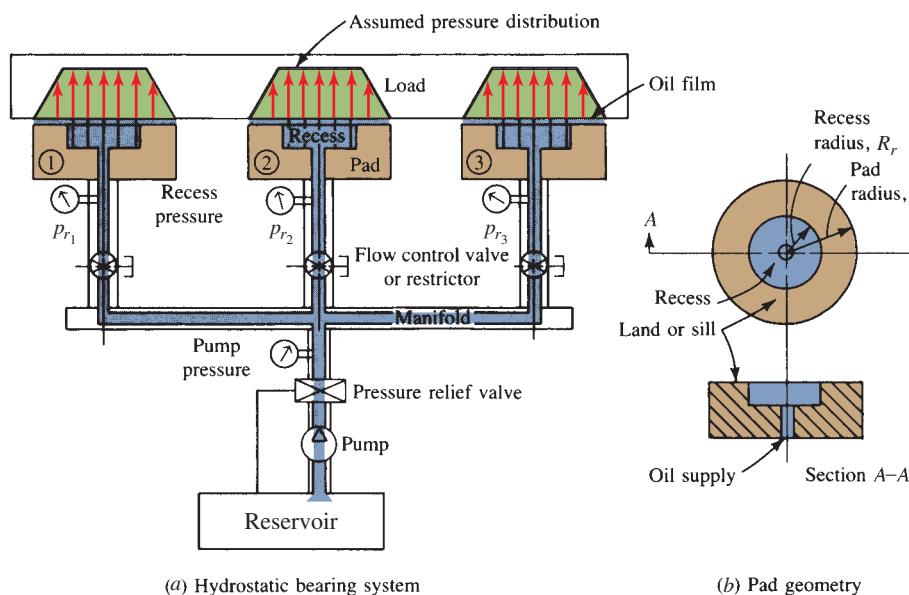


FIGURE 16-12 Main elements of a hydrostatic bearing system

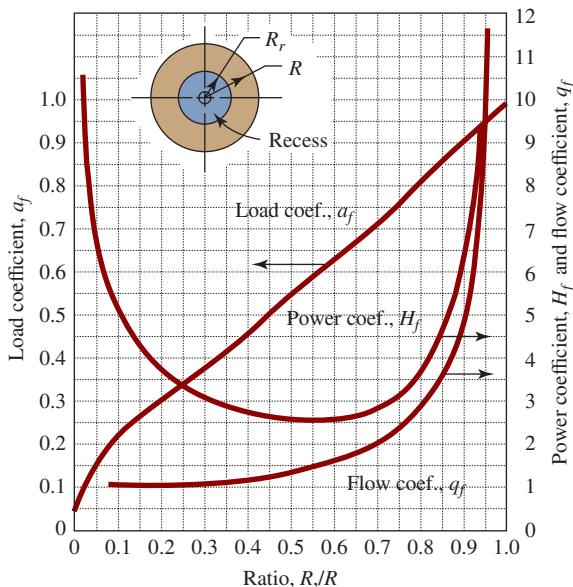


FIGURE 16-13 Dimensionless performance coefficients for circular pad hydrostatic bearing

▷ Load-Carrying Capacity

$$F = a_f A_p p_r \quad (16-10)$$

▷ Oil Flow Required

$$Q = q_f \frac{F}{A_p} \frac{b^3}{\mu} \quad (16-11)$$

▷ Pumping Power Required

$$P = p_r Q = H_f \left(\frac{F}{A_p} \right)^2 \frac{b^3}{\mu} \quad (16-12)$$

where F = load on the bearing, lb or N

Q = volume flow rate of oil, in³/s or m³/s

P = pumping power, lb · in/s or N · m/s (watts)

a_f = pad load coefficient, dimensionless

q_f = pad flow coefficient, dimensionless

H_f = pad power coefficient, dimensionless
(Note: $H_f = q_f/a_f$)

A_p = pad area, in² or m²

p_r = oil pressure in the recess of the pad, psi or Pa

b = film thickness, in or m

μ = dynamic viscosity of the oil, lb · s/in² (reyn) or Pa · s

Figure 16-13 shows the typical variation of the dimensionless coefficients as a function of the pad geometry for a circular pad with a circular recess. As the size of the recess, R_r/R , increases, the load-carrying capacity increases, as indicated by a_f . But at the same time, the flow through the bearing increases, as indicated by q_f . The increase is gradual up to a value of R_r/R of approximately 0.7, and then rapid for higher ratios. This higher flow rate requires much higher pumping power, as indicated by the rapidly increasing power coefficient. At very low ratios of R_r/R , the load coefficient decreases rapidly. The pressure in the recess would have to increase to compensate in order to lift the load. The higher pressure requires more pumping power. Therefore, the power coefficient is high either at very small ratios of R_r/R or at high ratios. The minimum power is required for ratios between 0.4 and 0.6.

These general characteristics of hydrostatic bearing pad performance are typical for many different geometries of pads. Extensive data for the performance of different pad shapes are published. (See Reference 12.)

Example Problem 16-5 illustrates the basic design procedure for hydrostatic bearings.

Example Problem

16-5

A large antenna mount weighing 12 000 lb is to be supported on three hydrostatic bearings such that each bearing pad carries 4000 lb. A positive displacement pump will be used to deliver oil at a pressure up to 500 psi. Design the hydrostatic bearings.

Solution

We will choose the circular pad design for which the performance coefficients are available in Figure 16-13. The results of the design will specify the dimensions of the pads, the required oil

pressure in the recess of each pad, the type of oil required and its temperature, the thickness of the film of oil when the bearings are supporting the load, the flow rate of oil required, and the pumping power required.

Step 1. From Figure 16–13, the minimum power required for a circular pad bearing would occur with the ratio R_p/R of approximately 0.50. For that ratio, the value of the load coefficient is $a_f = 0.55$. The pressure at the bearing recess will be somewhat below the maximum available of 500 psi because of the pressure drop in the restrictor placed between the supply manifold and the pad. Let's design for a recess pressure of approximately 400 psi. Then, from Equation (16–10),

$$A_p = \frac{F}{a_f p_r} = \frac{4000 \text{ lb}}{0.55(400 \text{ lb/in}^2)} = 18.2 \text{ in}^2$$

But $A_p = \pi D^2/4$. Then the required pad diameter is

$$D = \sqrt{4A_p/\pi} = \sqrt{4(18.2)/\pi} = 4.81 \text{ in}$$

For convenience, let's specify $D = 5.00$ in. Then the actual pad area will be

$$A_p = \pi D^2/4 = (\pi)(5.00 \text{ in})^2/4 = 19.6 \text{ in}^2$$

The required recess pressure is then

$$p_r = \frac{F}{a_f A_p} = \frac{4000 \text{ lb}}{0.55(19.6 \text{ in}^2)} = 370 \text{ lb/in}^2$$

Also,

$$R = D/2 = 5.00 \text{ in}/2 = 2.50 \text{ in}$$

$$R_r = 0.50R = 0.50(2.50 \text{ in}) = 1.25 \text{ in}$$

Step 2. Specify the design value of the film thickness, h . It is recommended that h be between 0.001 and 0.010 in. Let's use $h = 0.005$ in.

Step 3. Specify the lubricant and the operating temperature. Let's select SAE 30 oil and assume that the maximum oil temperature in the oil film will be 120°F. A method of estimating the actual film temperature during operation can be found by consulting Reference 12. From the viscosity/temperature curves, Figure 16–7, the viscosity is approximately 8.3×10^{-6} reyn ($\text{lb} \cdot \text{s/in}^2$).

Step 4. Compute the oil flow through the bearing from Equation (16–11). The value of $q_f = 1.4$ can be found from Figure 16–13:

$$Q = q_f \frac{F h^3}{A_p \mu} = (1.4) \frac{4000 \text{ lb}}{19.6 \text{ in}^2} \frac{(0.005 \text{ in})^3}{8.3 \times 10^{-6} \text{ lb} \cdot \text{s/in}^2}$$

$$Q = 4.30 \text{ in}^3/\text{s}$$

Step 5. Compute the pumping power required from Equation (16–12). The value of $H_f = 2.6$ can be found from Figure 16–13:

$$P = p_r Q = H_f \left(\frac{F}{A_p} \right)^2 \frac{h^3}{\mu} = 2.6 \left(\frac{4000}{19.6} \right)^2 \frac{(0.005)^3}{8.3 \times 10^{-6}} = 1631 \text{ lb} \cdot \text{in/s}$$

For convenience, we can convert this to horsepower:

$$P = \frac{1631 \text{ lb} \cdot \text{in}}{\text{s}} \frac{1.0 \text{ ft}}{12 \text{ in}} \frac{1.0 \text{ hp}}{550 \text{ lb} \cdot \text{ft/s}} = 0.247 \text{ hp}$$

16-10 THE KUGEL FOUNTAIN—A SPECIAL EXAMPLE OF A HYDROSTATIC BEARING

Have you ever tried to push the Earth to make it rotate faster or tried to stop it when it was rotating? Of course, that is physically impossible for us humans. However, many simulations of this feat are on exhibit around the United States and in other parts of the world where different examples of the so-called *Kugel Fountain* are installed. Most are located at science museums or other public places.

Typically, the Kugel Fountain is a very large and heavy granite sphere placed on a shallow base with the upper part of the base made to match the spherical shape of the sphere. Water at a moderate pressure is pumped into the base and it is able to lift the heavy sphere slightly to allow a small amount of water to flow out between the sphere and the base. The sphere and the base must be accurately machined and mated because when the sphere is lifted, the clearance between it and the base is very small, not unlike the examples of hydrostatic bearings described in Section 16-9.

With the water flowing out between the sphere and the base, it is possible for visitors to push on the sphere and make it rotate in any direction. Many public examples of the Kugel Fountain have the image of Earth's land masses etched into the surface to give the visitors the feeling that they are moving the Earth!

Use an Internet search on the topic, *Kugel Fountain*, and you can find many photographs and videos from many locations. Perhaps the largest example is at the Science Museum of Virginia, located in the Virginia state capitol, Richmond. The granite sphere is over 8 ft in diameter (about 2.5 m) and it has a mass of over 59 000 lb_m (almost 27 000 kg). Yet an adult can, with quite an effort to overcome inertia, set the sphere in

motion. When the pushing force is stopped, the sphere will continue to rotate for a very long time because there is no physical contact between the sphere and its base and the moving water provides lubrication in the form of a thin pressurized film.

Figure 16-14 shows an image of a Kugel Fountain along with a schematic drawing of its features. In part (b) of the figure, the following descriptions apply:

- A. Pressurized water flows from a pump to the interface between the ball and the base. The pressure is moderate but sufficient to raise the ball above the base and to allow the water to flow outward. Water pressure decreases as it flows out to edge of the base.
- B. The water exits at atmospheric pressure and falls into an area around the base.
- C. The water returns through tubing back to the inlet of the pump.
- D. The pump increases the pressure in the fluid and delivers it to the underside of the ball to complete the circuit.


16-11 TRIBOLOGY: FRICTION, LUBRICATION, AND WEAR

The study of friction, lubrication, and wear, called *tribology*, involves many disciplines, such as solid mechanics, fluid mechanics, material science, and chemistry. It is appropriate to engage several specialists on design teams where critical bearing or general lubrication designs are completed. For study beyond the scope of this book, see References 1-3, 6-8, 13-16, 19, and 20.

This section presents some general principles of lubrication that can apply to a variety of design situations where relative motion occurs between mating machine elements. The goal is to help you recognize the many parameters that must be considered in designing machinery and in



(a) A typical Kugel Ball Fountain

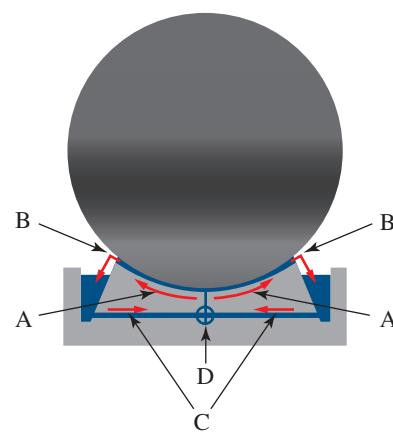

(b) Cross section of a Kugel Ball

FIGURE 16-14 Example of a Kugel Ball and the fluid flow within it

analyzing failures or unsatisfactory operation of existing machines. Much of the discussion relates to minimizing or controlling *friction*, defined generally as the resistance to parallel motion of mating surfaces. *Lubrication* is used to minimize friction by introducing a film of material that inherently reduces the force required to move one component relative to its mating component. Some materials have inherently low friction coefficients and can operate satisfactorily without external lubrication. When the relative motion results in physical contact between the surfaces of the mating components, some of the surface material can be removed, resulting in *wear*.

Friction

Not all friction is undesirable. Consider the need for drive wheels to use friction to develop propulsive force against floors, rails, or roads. Clutches and brakes employ friction to engage machinery, accelerate it, decelerate it, bring it to a stop, or hold it in position. See Chapter 22. Clamps and collets use friction to hold work pieces during manufacturing operations. In such applications, large, consistent frictional forces are desirable.

Most other applications where sliding contact occurs between mating components call for minimizing friction in order to minimize the forces, torques, and power required to drive the system. We are most concerned with these applications in this section.

The primary phenomena involved in creating friction are adhesion, elastic effects such as rolling resistance, viscoelastic effects, and hydrodynamic resistance. *Adhesion* is the bonding between dissimilar materials. The strength of adhesion depends on the structure and chemistry of the mating materials. Surface characteristics also contribute, such as the height of roughness peaks and valleys, called *asperities*. Sometimes asperities on mating parts are deformed or fractured during relative motion, while for other conditions, the motion is resisted as the asperities ride up and down on one another. *Rolling resistance* is caused by the elastic deformation of the moving body or the surface on which it moves. The geometry of the members in rolling contact, the magnitude of applied forces, and the elasticity of the contacting materials all play a part in determining the amount of resistance. *Viscoelastic effects* relate to the forces caused by deformation of flexible materials, such as elastomers, during contact. *Hydrodynamic resistance*, also called the *viscous effect*, is caused by the relative motion among the molecules of fluid lubricants between the moving mating components. This is the primary form of resistance in full-film hydrodynamically lubricated bearings. All or many of these forms of friction exist simultaneously in most practical machines.

Lubricants

Some of the important functions of lubricants are to reduce friction, remove heat from bearings and other machine elements where friction occurs, and to suspend

contaminants. Several properties contribute to satisfactory lubricant performance:

1. Good lubricity or oiliness to promote low friction
2. Adequate viscosity for the application
3. Low volatility under operating conditions
4. Satisfactory flow characteristics at the temperatures encountered in use
5. Appropriate thermal conductivity and specific heat to perform the heat transfer function
6. Good chemical and thermal stability and the ability to maintain desirable characteristics for a reasonable period of use
7. Compatibility with other materials in the system such as bearings, seals, and machine parts, particularly with regard to corrosion protection and degradation
8. Environmental friendliness

Here we discuss the basic nature of oils, greases, and solid lubricants.

Oils. Vendors of lubricating oils offer a huge variety of grades. One general classification is between refined natural petroleum oil and synthetic lubricants. Typically, natural oils are lower cost and can provide satisfactory service for general-purpose lubrication. Additives are frequently compounded with the natural oil to enhance viscosity, improve viscosity index (decrease the variation of viscosity with temperature), reduce corrosion potential, retard oxidation or other forms of chemical breakdown, or increase the ability to withstand localized high pressure. Synthetic lubricants are specially designed chemical formulations that can be tailored to specific applications. While performance is better than natural oils, cost is typically higher.

Oil lubricants are offered in categories such as engine oils, gear oils, compressor oils, turbine oils, general-purpose lubricating oils, chain lubricants, bearing oils, food machinery lubricants, automatic transmission fluids, hydraulic oils, and metalworking fluids. Internet sites 11–13 provide good examples of the types of lubricants available. Properties of lubricants that can affect selection are viscosity grade, viscosity index, and corrosion protection.

Viscosity grades are typically reported using the ISO (International Organization for Standardization) rating system. The grade number is the kinematic viscosity of the oil in centistokes (mm^2/s) measured at 40°C (104°F). Common ISO grades for lubricants are 32, 46, 68, 100, 150, 220, 320, 460, 680, and 1000. Gear oils are typically grades 150 to 680, depending on environmental temperature and degree of loading. Often the viscosity will also be reported at 100°C (212°F) as an indication of the variation of viscosity with temperature. This is not a part of the ISO classification and is influenced primarily by the property of viscosity index, discussed later in this section.

The American Gear Manufacturers Association (AGMA) formerly defined lubricant numbers from 0 through 15, with numbers 3 to 8 being the most common for general power-transmission uses. The basic viscosities for the former AGMA grades 0 to 8 correlate with ISO viscosity grades as follows.

| AGMA | ISO | AGMA | ISO | AGMA | ISO |
|------|-----|------|-----|------|-----|
| 0 | 32 | 3 | 100 | 6 | 320 |
| 1 | 46 | 4 | 150 | 7 | 460 |
| 2 | 68 | 5 | 220 | 8 | 680 |

Suffixes are added to the AGMA grade designations: EP for extreme pressure, CP for compounded oils, and S for synthetic oils. See References 10, 16, and 26–28 in Chapter 9. See also Section 9–15.

SAE viscosity grades are also used to report oil viscosity. Similar to the grades used in automotive engines, SAE oils are also good for general lubrication and for gear-type power transmissions. Common grades are SAE 20, 30, 40, 50, 60, 85, 90, 140, and 250. These grades must conform to limits of kinematic viscosity in centistokes measured at 100°C (212°F). The W-grades of SAE oils, such as SAE 20W, must have viscosities less than specified limits at low temperatures ranging from –5°C to –55°C (–3°F to –67°F). See Reference 18. This ensures that the lubricant can flow to critical surfaces in cold environments, particularly during equipment startup. Gear oils are typically SAE grades 80 to 250.

For details of SAE viscosity grades, see

- SAE J300 *Engine Oil Viscosity Classifications*
- SAE J306 *Automotive Gear Lubricant Viscosity Classifications*

Always use the latest version.

Viscosity index (VI) is a measure of how greatly the viscosity of a fluid changes with temperature. VI is determined by measuring the viscosity of the sample fluid at 40°C (104°F) and 100°C (212°F) and comparing these values with those of certain reference fluids that were assigned VI values of 0 and 100.

A fluid with a high VI exhibits a small change in viscosity with temperature.

A fluid with a low VI exhibits a large change in viscosity with temperature.

For most lubricants, a high VI is desirable because it would provide more reliable protection and exhibit a more uniform performance as the temperature varies. Commercially available lubricants report VI values from approximately 90 to 250. Gear lubricants typically have a VI of approximately 150. Additives, typically organic polymers, are used to improve viscosity and adjust viscosity index.

Corrosion protection can be tailored for specific applications by blending various additives with the base oil. Rust inhibitors for ferrous materials or copper and bronze corrosion protection are common. Oxidation inhibitors are used to prolong the life of oils. Extreme pressure additives help prevent scuffing in heavily loaded applications. Foam control additives prevent foaming where gears or other machine elements churn in an oil bath.

References 3, 6–8, 13–15, 19, and 20 describe recent developments in the field of lubricant technology and tribology. Reference 9 describes recent work in the analysis of wear of polymers and composites, exploring the effect of applied load and surface defects on fatigue, wear behavior, and the effects of surface cracks under different static and cyclic loading. Reference 21 emphasizes the influences of the rapidly growing field of micro- and nanoscale phenomena in tribology. Major lubricant suppliers (Internet sites 11–13, 15, and others) are developing new additives and synthetic formulations to serve the alternative energy fields of wind and solar power, with special attention to the wide range of environmental conditions in which they must operate. Some are applied at temperatures as low as –55°C (–67°F) and as high as 50°C (122°F) with related changes in humidity and exposure to corrosive elements.

Greases. Grease is a two-phase lubricant composed of a thickener dispersed in a base fluid, typically an oil. When applied to the interface between moving components, the grease tends to remain in place and adhere to the surfaces. The oil provides lubrication in a manner similar to that already discussed. As long as there is a sufficient amount of grease at the interface, continuous lubrication is provided. Some mechanisms are said to be lubricated for life. However, the designer must take great care to ensure that grease is not displaced from the critical areas that need it or to design the system for periodic reapplication of the grease. Some components such as bearings are provided with grease fittings for replenishing the supply and for discharging contaminated or oxidized grease.

Several kinds of thickeners are used in combination with natural or synthetic oils. See Internet sites 14 and 15 for examples. Thickeners are soaps formed by the reaction of animal or vegetable fats with alkaline substances such as lithium, calcium, an aluminum complex, clay, polyurea, and others. Lithium 12-hydroxy stearate is the most often used form. Soaps have a smooth buttery consistency and hold the oil in suspension until it is drawn out in the zone to be lubricated. Additives provide extreme pressure (EP) capability, rust protection, oxidation stability, and improved pumpability of the grease.

NLGI, formerly called the National Lubricating Grease Institute (Internet site 14), defines nine ranges of consistency, labeled 000 through 6, from semifluid to soft, medium hard, hard, and rigid block. Grade #2 is good for general industrial applications.

Solid Lubricants. Some applications cannot employ oils or greases because of contamination of other parts of the system, exposure to foods, excessively high or low temperatures, operation in a vacuum, or other environmental considerations. In such cases, the designer may specify solid materials that have inherently good lubricating properties or add solid lubricants on critical surfaces. Sections 16–4 and 16–5 have already discussed various formulations of PTFE (polytetrafluoroethylene) as examples of materials with good lubricity.

A solid lubricant is a thin solid film that reduces friction and wear. Some are applied in powder form by brushing, spraying, or dipping, and they then adhere to mating surfaces. Binders are often blended with the base material to facilitate application and to promote adhesion. Curing in air or by baking is required. See Reference 17.

Molybdenum disulfide (MoS_2) and graphite are two often-used types of solid lubricants. Others are lead iodide (PbI_2), silver sulfate (AgSO_4), tungsten disulfide, and stearic acid. An example of their effectiveness is the reduction of the coefficient of sliding friction for steel-on-steel from approximately 0.50 for dry clean surfaces to the range from 0.03 to 0.06.

Many solid lubricant developments are designed to enhance the efficiency and improve wear resistance of the many bearing surfaces in automotive and truck engines. Internet site 18 describes IROX™ bearings that have an overlay of polyamide-imide (PAI) polymer resin binder containing a number of additives dispersed throughout the matrix. These additives provide enhanced wear resistance, strength, thermal conductivity, and embeddability.

Wear

Wear is the gradual removal of surface material from sliding surfaces. It is a complex process with numerous variables. Only testing under real conditions of service can predict actual wear in a given system. See References 9, 15, 16, 19, and 20. Several types of wear occur:

- Pitting, galling, scuffing, or scoring that typically result from high contact stresses and fatigue of surface material during rolling or sliding contact.
- Abrasive wear, mechanical scraping, cutting, or scratching such as by hard contaminants in the interface between mating parts.
- Fretting, the cyclic sliding of very small amplitude that displaces surface material. The subsequent accumulation of the debris tends to accelerate the process. Continued operation produces a surface appearance similar to corrosion and can generate small cracks from which ultimate fatigue failure can occur. It often occurs when tight-fitting parts are subjected to oscillating loads or vibration.

- Impingement wear caused by the eroding of material due to hard moving materials hitting the surface, perhaps carried by air or fluids. High-velocity fluids, such as the discharge from high-pressure washers, can themselves cause such wear.

While it is not possible to prescribe specific approaches to reduce wear, the following are the things a designer may try. Again, testing is the only way to ensure satisfactory operation.

1. Keep contact force low between sliding surfaces.
2. Maintain low temperature at the mating surfaces.
3. Use hard contacting surfaces.
4. Produce smooth mating surfaces.
5. Maintain continuous lubrication to reduce friction.
6. Keep the relative velocity between mating surfaces low.
7. Specify materials that have inherently good wear properties.

Many material suppliers will report wear properties of their materials when operating against a similar or dissimilar material. These data are acquired by testing under carefully controlled laboratory conditions. Typically one member of a pair of materials is moved at a known velocity such as by rotation. The mating material is held stationary and under a known load. Careful measurements are made of the original weight and dimensions of the specimens of mating materials. After a sizable time of operation, the specimens are again weighed and measured to determine how much material has been removed. The results are reported as wear, computed from an equation such as,

$$K = W/FVT \quad (16-13)$$

where K = wear factor for the materials

W = wear measured as loss of weight or volume

F = applied load

V = linear relative velocity between the sliding members

T = time of operation

Comparing the K factors for a variety of materials being considered can aid the designer in material selection.

REFERENCES

1. Avraham, Harnoy. *Bearing Design in Machinery: Engineering Tribology and Lubrication*. Boca Raton, FL: CRC Press, 2003.
2. Bayer, Raymond G. *Mechanical Wear Fundamentals and Testing*. Boca Raton, FL: CRC Press, 2004.
3. Bloch, Heinz P. *Practical Lubrication for Industrial Facilities*. 2nd ed. Lilburn, GA: Fairmont Press, 2010.

4. Boyd, John, and Albert A. Raimondi. "A Solution for the Finite Journal Bearing and Its Application to Analysis and Design." Parts I, II, and III. *Transactions of the American Society of Lubrication Engineers*. 1, No. 1 (1958): 159–209.
 5. Boyd, John, and Albert A. Raimondi. "Applying Bearing Theory to the Analysis and Design of Journal Bearings." Parts I and II. *Journal of Applied Mechanics* 73 (1951): 298–316.
 6. Totten, George E. *Handbook of Lubrication and Tribology, Volume I: Application and Maintenance*. 2nd ed. Boca Raton, FL: CRC Press, 2006.
 7. Bruce, Robert W., editor. *Handbook of Lubrication and Tribology, Volume II: Theory and Design*. 2nd ed. Boca Raton, FL: CRC Press, 2012.
 8. Booser, E. Richard. *Handbook of Lubrication and Tribology, Volume III: Monitoring, Materials, Synthetic Lubricants, and Applications*. Boca Raton, FL: CRC Press, 2015.
 9. Abdelbary, Ahmed. *Wear of Polymers and Composites*. New York: Woodhouse Publishing, an imprint of Elsevier, 2015.
 10. Copper Development Association. *Cast Copper Alloy Sleeve Bearings—Selection Guide*. New York: Copper Development Association, 1997.
 11. Copper Development Association. *Cast Bronze Bearing Design Manual*. New York: Copper Development Association, 1979.
 12. Rowe, W. Brian. *Hydrostatic, Aerostatic and Hybrid Bearing Design*. New York: Butterworth-Heinemann, 2012.
 13. Pirro, Don, Martin Webster, and Ekkehard Daschner. *Lubrication Fundamentals*. 3rd ed. Boca Raton, FL: CRC Press, 2016.
 14. Srivastava, S. P. *Developments in Lubricant Technology*. New York: Wiley, 2014.
 15. Mang, Theo, and Wilfried Dresel. *Lubricants and Lubrications*. 3rd ed. New York: Wiley-VCH, 2016.
 16. Budinski, Kenneth. *Friction, Wear, and Erosion Atlas*. Boca Raton, FL: CRC Press, 2013.
 17. Miyoshi, Kazuhisa. *Solid Lubrication Fundamentals and Applications*. Boca Raton, FL: CRC Press, 2002.
 18. Mott, Robert L. *Applied Fluid Mechanics*. 7th ed. Upper Saddle River, NJ: Prentice Hall, 2015.
 19. Bhushan, Bharat. *Introduction to Tribology*. 2nd ed. New York: Wiley, 2013.
 20. Stachowiak, Gwidon. *Engineering Tribology*. 4th ed. New York: Butterworth-Heinemann, 2013.
 21. Yip-Wah Chung. *Micro- and Nanoscale Phenomena in Tribology*. Boca Raton, FL: CRC Press, 2012.
- bearings and porous bronze bushings. Site includes some technical information on the design of plain bronze bearings. Also publishes the useful References 10 and 11.
2. **Thomson Nyliner™.** Manufacturer of plain plastic bearings under the brand names Nyliner® and Nyliner Plus®.
 3. **Saint-Gobain Performance Plastics.** Manufacturer of plain plastic bearings under the brand names Norglide® and Solglide®.
 4. **GGB Bearing Technology.** Manufacturer of a variety of plain bearings made from a composite of PTFE plastic, porous bronze, and steel or fiberglass under the brand names DU®, DX®, Gar-Fil®, Gar-Max®, and others.
 5. **Graphite Metallizing Corporation.** Manufacturer of plain bearings under the Graphalloy® brand name. Graphalloy® is a graphite-metal alloy formed from molten metal and graphite to make a uniform, solid, self-lubricating bushing material, available in over 100 grades.
 6. **Beemer Precision, Inc.** Manufacturer of plain bearings made from cast bronze and porous sintered bronze impregnated with oil under the Oilite® and Excelite brands.
 7. **Bunting Bearings LLC.** Manufacturer of plain bearings made from cast bronze, porous sintered bronze impregnated with oil, and plastic bearings made from Nylon, PTFE, and Vespel®. Also makes the BU bearing consisting of a steel backing strip, a porous bronze matrix impregnated and overlaid with a PTFE/lead lining for low friction coefficient.
 8. **Zincaloy, Inc.** Manufacturer of continuous cast ZA-12 zinc-aluminum alloy (Zincaloy™) used for bearings in mining, construction, forestry, and off-road vehicle industries. Team Tube Ltd. is an authorized distributor of Zincaloy bearing stock.
 9. **Baldor/Dodge.** Manufacturer of mounted plain self-lubricating sleeve bearings under the Solidlube® brand used in general industrial, material handling, and bulk materials industries. Also available are Bronzoil® bearings with oil-impregnated porous bronze, babbitted and bronze bushed bearings.
 10. **Waukesha Bearings Corporation.** Manufacturer of fluid film hydrodynamic sleeve bearings, tilting pad thrust and journal bearings, magnetic bearings and housings for the bearings. These bearings are used for turbines, compressors, generators, gearboxes, and other types of rotating equipment.
 11. **Exxon-Mobil, Inc.** Producer of a wide variety of lubricants for general industry, automotive, turbine, compressor, and engine applications. Data sheets provided under the *Industrial and speciality lubricants* page.
 12. **Castrol Industrial.** Manufacturer of lubricants for vehicles and industrial applications such as bearings, gears, chains, and general lubrication applications. Search for *Industrial Lubricants* from the home page.
 13. **Shell Oil Company.** Producer of a wide variety of lubricants for general industry, automotive, turbine, compressor, and engine applications. Search for *Industrial Lubricants* from the home page.
 14. **NLGI, Inc. (Formerly National Lubricating Grease Institute).** An association of companies and research organizations that develop, manufacture, distribute, and use greases. Establishes standards and provides publications and technical articles on grease.

INTERNET SITES RELATED TO PLAIN BEARINGS AND LUBRICATION

1. **Copper Development Association (CDA).** Industry association of companies and organizations involved in the production and use of copper, including cast bronze

15. **Lubrizol Corporation.** Manufacturer of a large variety of additives for the lubrication industry including engine oils and industrial lubricants as well as for gasoline and diesel fuel.
16. **RBC Bearings.** Manufacturer of a wide array of bearings including spherical plain bearings, rod end bearings, and self-lubricated bearings. Products are used wherever pivoting, high-load-bearing applications are found in applications such as in construction equipment, agricultural machinery, hydraulic cylinder connections, vehicle suspensions, and articulated joints.
17. **Plastics International.** Supplier of a large number of types and grades of plastics. Selecting the *Material Properties* tab reveals a list of over 100 plastics with mechanical properties. Values of pV factor are given in the selectable PDF file for materials commonly used for bearings, such as Delrin, PEEK, and Rulon.
18. **Federal Mogul Corporation.** Manufacturer of numerous components and systems for automotive applications including engine bearings. Select *Powertrain* then *Bearings, Bushings and Washers* or *Self-lubricating Bearings*.

PROBLEMS

For Problems 1–8 and the data listed in Table 16–2, design a plain surface bearing, using the boundary-lubricated approach of Section 16–5. Use an L/D ratio for the bearing in the range of 0.50 to 1.50. Compute the pV factor, and specify a material from Table 16–1.

TABLE 16–2

| Problem number | Radial load (lb) | Shaft diameter (in) | Shaft speed (rpm) |
|----------------|------------------|---------------------|-------------------|
| 1. | 225 | 3.00 | 1750 |
| 2. | 100 | 1.50 | 1150 |
| 3. | 200 | 1.25 | 850 |
| 4. | 75 | 0.50 | 600 |
| 5. | 850 | 4.50 | 625 |
| 6. | 500 | 3.75 | 450 |
| 7. | 800 | 3.00 | 350 |
| 8. | 60 | 0.75 | 750 |

For Problems 9–18 and the data listed in Table 16–3, design a hydrodynamically lubricated bearing, using the method outlined in Section 16–7. Specify the journal nominal diameter, the bearing length, the diametral clearance, the minimum film

thickness of the lubricant during operation, the surface finish of the journal and bearing, the lubricant, and its maximum operating temperature. For your design, compute the coefficient of friction, the friction torque, and the power dissipated as the result of friction.

For Problems 19–28 and the data listed in Table 16–4, design a hydrostatic bearing of circular shape. Specify the pad diameter, the recess diameter, the recess pressure, the film thickness, the lubricant and its temperature, the oil flow rate, and the pumping power. The load specified is for a single bearing. You may choose to use multiple bearings. (The supply pressure is the maximum available at the pump.)

TABLE 16–3

| Problem number | Radial load | Min. shaft diameter | Shaft speed (rpm) | Application |
|----------------|-------------|---------------------|-------------------|-----------------------|
| 9. | 1250 lb | 2.60 in | 1750 | Electric motor |
| 10. | 2250 lb | 3.50 in | 850 | Conveyor |
| 11. | 1875 lb | 2.25 in | 1150 | Air compressor |
| 12. | 1250 lb | 1.75 in | 600 | Precision spindle |
| 13. | 500 lb | 1.15 in | 2500 | Precision spindle |
| 14. | 850 lb | 1.45 in | 1200 | Idler sheave |
| 15. | 4200 lb | 4.30 in | 450 | Shaft for chain drive |
| 16. | 18.7 kN | 100 mm | 500 | Conveyor |
| 17. | 2.25 kN | 25 mm | 2200 | Machine tool |
| 18. | 5.75 kN | 65 mm | 1750 | Printer |

TABLE 16–4

| Problem number | Load | Supply pressure |
|----------------|---------|-----------------|
| 19. | 1250 lb | 300 psi |
| 20. | 5000 lb | 300 psi |
| 21. | 3500 lb | 500 psi |
| 22. | 750 lb | 500 psi |
| 23. | 250 lb | 150 psi |
| 24. | 500 lb | 150 psi |
| 25. | 22.5 kN | 2.0 MPa |
| 26. | 1.20 kN | 750 kPa |
| 27. | 8.25 kN | 1.5 MPa |
| 28. | 12.5 kN | 1.5 MPa |

LINEAR MOTION ELEMENTS

The Big Picture

You Are the Designer

17-1 Objectives of This Chapter

17-2 Power Screws

17-3 Ball Screws

17-4 Application Considerations for Power Screws and Ball Screws

THE BIG PICTURE

Linear Motion Elements

Discussion Map

- Many kinds of mechanical devices produce linear motion for machines such as automation equipment, packaging systems, and machine tools.
- *Power screws, jacks, and ball screws* are designed to convert rotary motion to linear motion and to exert the necessary force to move a machine element along a desired path. They use the principle of a screw thread and its mating nut.

Discover

Visit a machine shop and see if you can identify power screws, ball screws, or other linear motion devices. Look in particular at the lathes and the milling machines. Manual machines likely use power screws. Those using computer numerical control should have ball screws. Describe the shape of the threads. How are the screws powered? How are they fastened to other machine parts?

Can you find other equipment that uses linear motion devices? Look in laboratories where materials are tested or where large forces must be generated.

This chapter will help you learn to analyze power screws and ball screw drives and to specify suitable sizes for a given application.

A common requirement in mechanical design is to move components in a straight line. Elevators move vertically up or down. Machine tools move cutting tools or parts to be machined in straight lines, either horizontally or vertically, to shape metal into desired forms. A precision measuring device moves a probe in straight lines to determine electronically the dimensions of a part. Assembly machines require many straight-line motions to insert components and to fasten them together. A packaging machine moves products into cartons, closes flaps, and seals the cartons.


Some examples of components and systems that facilitate linear motion are as follows:

Power screws
Linear actuators
Linear solenoids
Ball screws
Linear slides
Positioning stages

Jacks
Ball bushings
X-Y-Z tables
Fluid power cylinders
Rack-and-pinion sets
Gantry tables

Figure 17-1(a) shows a cutaway view of a jack that employs a power screw to produce linear motion. Power is delivered to the input shaft by an electric motor. The worm, machined integral with the input shaft, drives the wormgear, resulting in a reduction in the speed of rotation. The inside of the wormgear has machined threads that engage the external threads of the power screw, driving it vertically. Figure 17-1(b) shows the complete screw jack with its integral housing that constitutes the linear motion system. Limit switches, position sensors, and programmable logic controllers can be used to control the motion cycle. See Internet site 6. Other types of linear actuators can be seen on Internet sites 1–14.

Rack-and-pinion sets are discussed in Chapter 8. Fluid power actuators employ oil hydraulic or pneumatic fluid pressure to extend or retract a piston rod within a cylinder as discussed in textbooks on fluid power. Positioning stages, X-Y-Z tables, and gantry tables typically are driven by precision stepper motors or servomechanisms that allow precision location of

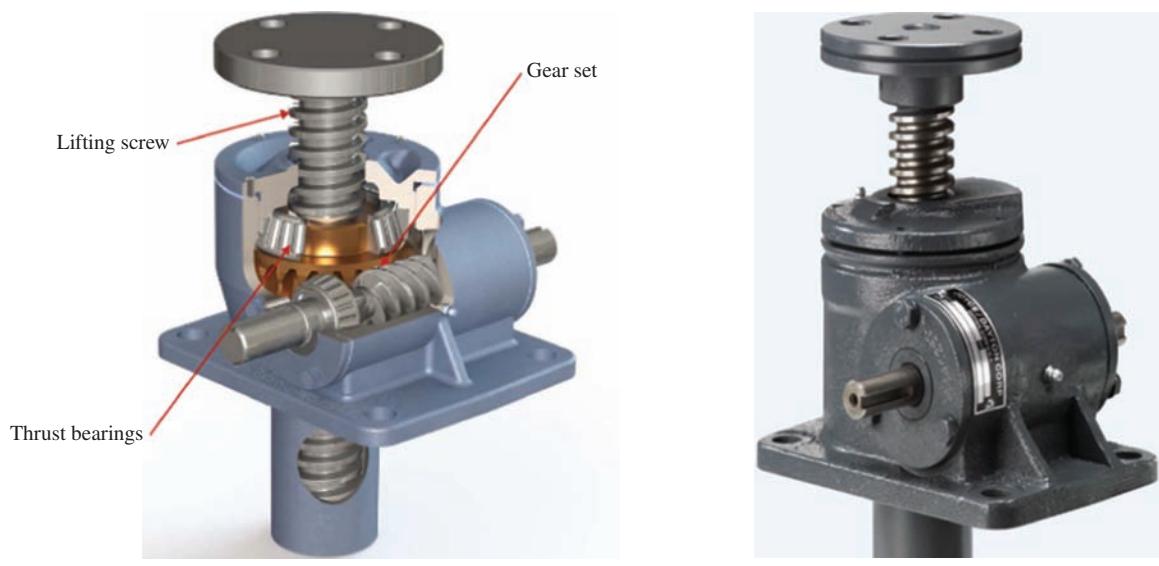

(a) Cutaway view showing worm, wormgear, power screw and bearing (b) External view of wormgear type linear actuator

FIGURE 17-1 Example of wormgear type linear actuator (Joyce/Dayton Corp.); (see Internet site 6)

components anywhere within their control volume. Linear solenoids are devices that cause a rodlike core to be extended or retracted as power is supplied to an electrical coil, producing rapid movement over small distances. Applications are seen in office equipment, automation devices, and packaging systems. See Internet site 11.

Linear slides and ball bushings are designed to guide mechanical components along a precise linear track. Low-friction materials or rolling contact elements are used to produce smooth motion with low power required. See Internet sites 1, 3, 5–9, and 15.

Power screws and ball screws are designed to convert rotary motion to linear motion and to exert the necessary force to move a machine element along a desired path. Power screws operate on the classic principle of the screw thread and its mating nut. If the screw is supported in bearings and rotated while the nut is restrained from rotating, the nut will translate along the screw. If the nut is made an integral part of a machine, for example, the tool holder for a lathe, the screw will drive the tool holder along the bed of the machine to take a cut. Conversely, if the nut is supported while it is rotating, the screw can be made to translate. The screw jack uses this approach.

A ball screw is similar in function to a power screw, but the configuration is different. The nut contains many small, spherical balls that make rolling contact with the threads of the screw, giving low friction and high efficiencies when compared with power screws. Modern machine tools, automation equipment, vehicle steering systems, and actuators

on aircraft use ball screws for high precision, fast response, and smooth operation.

Visit a machine shop where there are metal-cutting machine tools. Look for examples of power screws that convert rotary motion to linear motion. They are likely to be on manual lathes moving the tool holder. Or look at the table drive for a milling machine. Inspect the form of the threads of the power screw. Are they of a form similar to that of a screw thread with sloped sides? Or are the sides of the threads straight? Compare the screw threads with those shown in Figure 17-2 for square, Acme, and buttress forms.

While in the shop, do you see any type of material-testing equipment or a device called an *arbor press* that exerts large axial forces? Such machines often employ square-thread power screws to produce the axial force and motion from rotational input, through either a hand crank or an electric motor drive. If they are not in the machine shop, look for them in the metallurgy lab or another room where materials testing is done.

Now look further in the machine shop. Are there machines that use digital readouts to indicate position of the table or the tool? Are there computer numerical control machine tools? Any of these types of machines should have ball screws rather than the traditional power screws because ball screws require significantly less power and torque to drive them against a given load. They can also be moved faster and positioned more accurately than power screws. You may or may not be able to see the recirculating balls in the nut of the

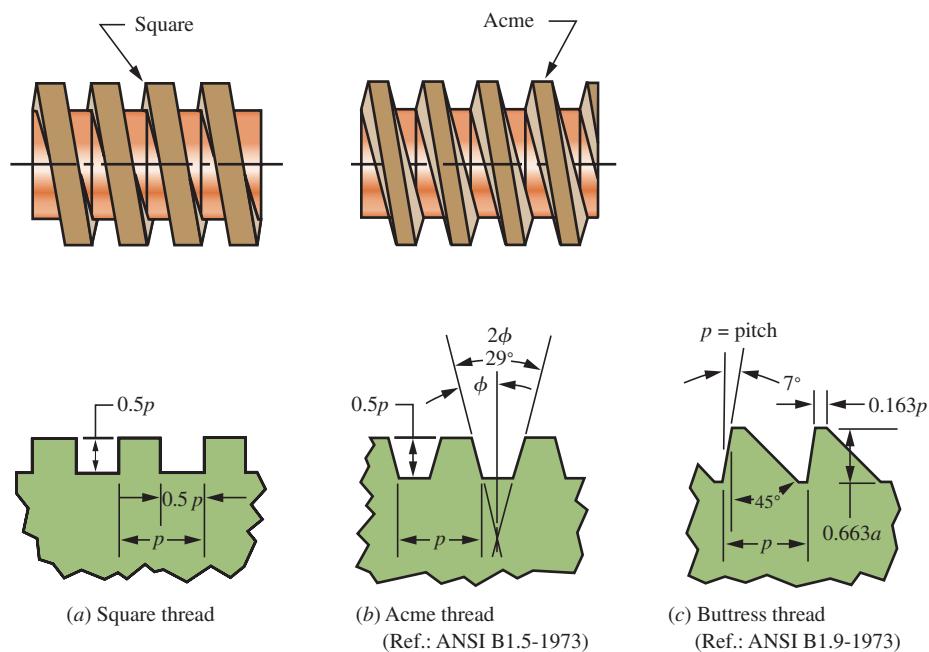


FIGURE 17-2 Three forms of power screw threads

power screw, as illustrated in Figure 17-3. But you should be able to see the different-shaped threads looking like grooves with circular bottoms in which the spherical balls roll.

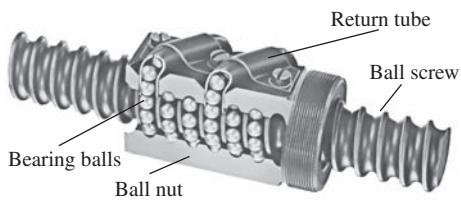


FIGURE 17-3 Ball bearing screw

Have you seen such power screws or ball screws anywhere outside a machine shop? Some garage door openers employ a screw drive, but others use chain drives. Perhaps your home has a screw jack or a scissors jack for raising the car to change a tire. Both use power screws. Have you ever sat in a seat on an airplane where you can see the mechanisms that actuate the flaps on the rear edge of the wings? Try it sometime, and observe the actuators during takeoff or landing. It is likely that you will see a ball screw in action.

This chapter will help you learn the methods of analyzing the performance of power screws and ball screws and to specify the proper size for a given application.

YOU ARE THE DESIGNER

You are a member of a plant engineering team for a large steel processing plant. One of the furnaces in the plant in which steel is heated prior to final heat treatment is installed beneath the floor, and the large ingots are lowered vertically into it. While the ingots are soaking in the furnace, a large, heavy hatch is placed over the opening to minimize the escape of heat and provide more uniform temperature. The hatch weighs 25 000 lb.

You are asked to design a system that will permit the hatch to be raised at least 15 in above the floor within 12.0 s and to lower it again within 12.0 s.

What design concept would you propose? Of course, there are many feasible concepts, but suppose that you proposed a system like that sketched in Figure 17-4. An overhead support structure

is suggested on which a worm/wormgear drive system would be mounted. One shaft would be driven directly by the gear drive while a second shaft would be driven simultaneously by a chain drive. The shafts are power screws, supported in bearings at the top and bottom. A yoke is connected to the hatch and is mounted on the screws with the nuts that mate with the screw integral with the yoke. Therefore, as the screw rotates, the nuts carry the yoke and the hatch vertically upward or downward.

As the designer of the hatch lift system, you must make several decisions. What size screw is required to ensure that it can safely raise the 25 000-lb hatch? Notice that the screws are placed in tension as they are supported on the collars on the upper support system. What diameter, thread type, and thread

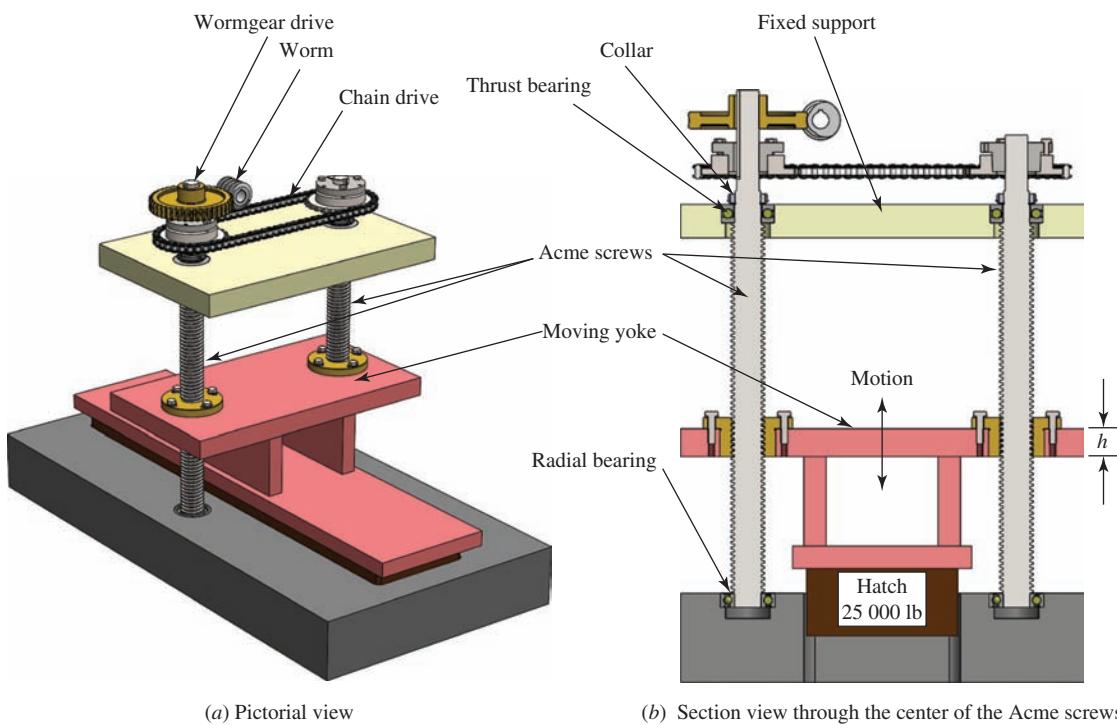


FIGURE 17-4 An Acme screw-driven system for raising a hatch

size should be used? The sketch suggests the Acme thread form. What other styles are available? At what speed must the screws be rotated to raise the hatch in 12.0 s or less? How much power is required to drive the screws? What safety concerns exist while the system is handling this heavy load?

What advantage would there be to using a ball screw rather than a power screw?

The material in this chapter will help you make these decisions, along with providing methods of computing stresses, torques, and efficiencies. ■

17-1 OBJECTIVES OF THIS CHAPTER

After completing this chapter, you will be able to:

1. Describe the operation of a power screw and the general form of *square threads*, *Acme threads*, and *buttress threads* as they are applied to power screws.
2. Compute the torque that must be applied to a power screw to raise or lower a load.
3. Compute the efficiency of power screws.
4. Compute the power required to drive a power screw.
5. Describe the design of a ball screw and its mating nut.
6. Specify suitable ball screws for a given set of requirements of load, speed, and life.
7. Compute the torque required to drive a ball screw, and compute its efficiency.

move a given load along the screw. However, the Acme thread is not greatly less efficient, and it is easier to machine. The buttress thread is desirable when force is to be transmitted in only one direction.

Table 17-1 gives the preferred combinations of basic major diameter, D , and number of threads per inch, n , for Acme screw threads in U.S. units. The pitch, p , is the distance from a point on one thread to the corresponding point on the adjacent thread, and $p = 1/n$. More data for power screws can be found in References 1 and 4.

Other pertinent dimensions listed in Table 17-1 include the minimum minor diameter and the minimum pitch diameter of a screw with an external thread. When you are performing stress analyses on the screw, the safest approach is to compute the area corresponding to the minor diameter for tensile or compressive stresses. However, a more accurate stress computation results from using the *tensile stress area* (listed in Table 17-1), found from

17-2 POWER SCREWS

Figure 17-2 shows three types of power screw threads: the square thread, the Acme thread, and the buttress thread. Of these, the square and buttress threads are the most efficient. That is, they require the least torque to

❖ Tensile Stress Area for Screw Threads

$$A_t = \frac{\pi}{4} \left[\frac{D_r + D_p}{2} \right]^2 \quad (17-1)$$

This is the area corresponding to the average of the minor (or root) diameter, D_r , and the pitch diameter, D_p .

TABLE 17-1 Preferred Acme Screw Threads

| Nominal major diameter, D (in) | Threads per in., n | Pitch, $p = 1/n$ (in) | Minimum minor diameter, D_r (in) | Minimum pitch diameter, D_p (in) | Tensile stress area, A_t (in^2) | Shear stress area, A_s (in^2) ^a |
|----------------------------------|----------------------|-----------------------|------------------------------------|------------------------------------|--|---|
| 1/4 | 16 | 0.0625 | 0.1618 | 0.2043 | 0.026 32 | 0.3355 |
| 5/16 | 14 | 0.0714 | 0.2140 | 0.2614 | 0.044 38 | 0.4344 |
| 3/8 | 12 | 0.0833 | 0.2632 | 0.3161 | 0.065 89 | 0.5276 |
| 7/16 | 12 | 0.0833 | 0.3253 | 0.3783 | 0.097 20 | 0.6396 |
| 1/2 | 10 | 0.1000 | 0.3594 | 0.4306 | 0.1225 | 0.7278 |
| 5/8 | 8 | 0.1250 | 0.4570 | 0.5408 | 0.1955 | 0.9180 |
| 3/4 | 6 | 0.1667 | 0.5371 | 0.6424 | 0.2732 | 1.084 |
| 7/8 | 6 | 0.1667 | 0.6615 | 0.7663 | 0.4003 | 1.313 |
| 1 | 5 | 0.2000 | 0.7509 | 0.8726 | 0.5175 | 1.493 |
| 1 1/8 | 5 | 0.2000 | 0.8753 | 0.9967 | 0.6881 | 1.722 |
| 1 1/4 | 5 | 0.2000 | 0.9998 | 1.1210 | 0.8831 | 1.952 |
| 1 3/8 | 4 | 0.2500 | 1.0719 | 1.2188 | 1.030 | 2.110 |
| 1 1/2 | 4 | 0.2500 | 1.1965 | 1.3429 | 1.266 | 2.341 |
| 1 3/4 | 4 | 0.2500 | 1.4456 | 1.5916 | 1.811 | 2.803 |
| 2 | 4 | 0.2500 | 1.6948 | 1.8402 | 2.454 | 3.262 |
| 2 1/4 | 3 | 0.3333 | 1.8572 | 2.0450 | 2.982 | 3.610 |
| 2 1/2 | 3 | 0.3333 | 2.1065 | 2.2939 | 3.802 | 4.075 |
| 2 3/4 | 3 | 0.3333 | 2.3558 | 2.5427 | 4.711 | 4.538 |
| 3 | 2 | 0.5000 | 2.4326 | 2.7044 | 5.181 | 4.757 |
| 3 1/2 | 2 | 0.5000 | 2.9314 | 3.2026 | 7.388 | 5.700 |
| 4 | 2 | 0.5000 | 3.4302 | 3.7008 | 9.985 | 6.640 |
| 4 1/2 | 2 | 0.5000 | 3.9291 | 4.1991 | 12.972 | 7.577 |
| 5 | 2 | 0.5000 | 4.4281 | 4.6973 | 16.351 | 8.511 |

^aPer inch of length of engagement.

The data reflect the minimums for commercially available screws.

Another failure mode for a power screw is the shearing of the threads in the axial direction, cutting them away from the main shaft near the pitch diameter. The shear stress is computed from the direct stress formula,

$$\tau = F/A_s$$

The shear stress area, A_s , listed in Table 17-1 is also found in published data and represents the area in shear approximately at the pitch line of the threads for a 1.0-in length of engagement. Other lengths would require that the area be modified by the ratio of the actual length to 1.0 in.

Metric Power Screws

Metric power screws use a trapezoidal thread system that is similar to the Acme thread, but with slightly different thread form and made to metric dimensions. One notable difference between the Acme and ISO trapezoidal metric thread is that the angle $\phi = 15^\circ$ instead of

$14\frac{1}{2}^\circ$ shown for the Acme design in Figure 17-2(b). Table 17-1M shows a selected list of sizes from the larger list of ISO trapezoidal screws. Each of these is a single-thread design. Many more diameters and pitches are available, along with many other styles with two or more threads that produce longer leads that are multiples of the pitch.

Torque Required to Move a Load

When using a power screw to exert a force, as with a jack raising a load, you need to know how much torque must be applied to the nut of the screw to move the load. The parameters involved are the force to be moved, F ; the size of the screw, as indicated by its pitch diameter, D_p ; the lead of the screw, L ; and the coefficient of friction, f . Note that the *lead* is defined as the axial distance that the screw would move in one complete revolution. For the usual case of a single-threaded screw, the lead is equal to the pitch and can be read from Table 17-1 or computed from $L = p = 1/n$ for U.S. Acme Designs.

TABLE 17-1M Examples of Power Screws with Metric Trapezoidal Screw Thread

ISO thread system—External threads


| Major diameter, <i>D</i> (mm) | Pitch, <i>p</i> (mm) | Pitch diameter, <i>D_p</i> (mm) | Minor diameter, <i>D_r</i> (mm) | Tensile stress area (mm ²) |
|----------------------------------|----------------------|--|--|---|
| 8 | 1.5 | 7.25 | 6.2 | 35.52 |
| 10 | 2 | 9.0 | 7.5 | 53.46 |
| 12 | 3 | 10.5 | 8.5 | 70.88 |
| 14 | 3 | 12.5 | 10.5 | 103.9 |
| 16 | 3 | 14.5 | 12.5 | 143.1 |
| 20 | 4 | 18.0 | 15.5 | 220.4 |
| 22 | 5 | 19.5 | 16.5 | 254.5 |
| 24 | 5 | 21.5 | 18.5 | 314.2 |
| 28 | 5 | 25.5 | 22.5 | 452.4 |
| 30 | 6 | 27.0 | 23.0 | 490.9 |
| 32 | 6 | 29.0 | 33.0 | 754.8 |
| 36 | 6 | 33.0 | 29.0 | 754.8 |
| 40 | 7 | 36.5 | 32.0 | 921.3 |
| 46 | 8 | 42.0 | 37.0 | 1225 |
| 50 | 8 | 46.0 | 41.0 | 1486 |
| 55 | 9 | 50.5 | 45.0 | 1791 |
| 60 | 9 | 55.5 | 50.0 | 2185 |
| 70 | 10 | 65.0 | 59.0 | 3019 |
| 80 | 10 | 75.0 | 69.0 | 4072 |
| 90 | 12 | 84.0 | 77.0 | 5090 |
| 100 | 12 | 94.0 | 87.0 | 6433 |
| 120 | 14 | 113.0 | 104.0 | 9246 |
| 125 | 14 | 122.0 | 109.0 | 10 477 |

In the development of Equation (17-2) for the torque required to turn the screw, Figure 17-5(a), which depicts a load being pushed up an inclined plane against a friction force, is used. This is a reasonable representation for a square thread if you think of the thread as being unwrapped from the screw and laid flat. The torque for

an Acme thread is slightly different from this due to the thread angle. The revised equation for the Acme thread will be shown later.

The torque computed from Equation (17-2) is called T_u , implying that the force is applied to move a load up the plane, that is, to raise the load. This observation is

- P = Force required to move the load
- F_f = Friction force
- N = Normal force
- λ = Lead angle
- D_p = Pitch diameter

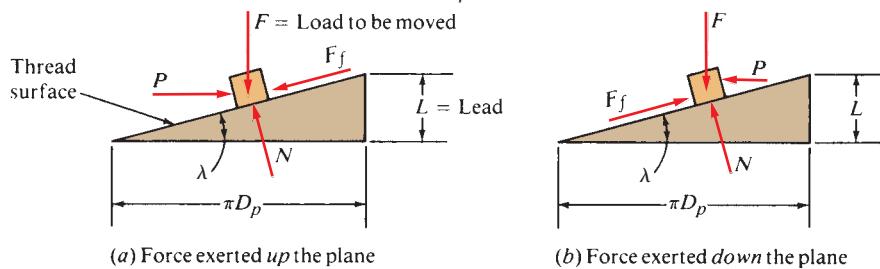**FIGURE 17-5** Screw thread force analysis

completely appropriate if the load is raised vertically, as with a jack. If, however, the load is horizontal or at some angle, Equation (17–2) is still valid if the load is to be advanced along the screw “up the thread.” Equation (17–4) shows the required torque, T_d , to lower a load or move a load “down the thread.”

The torque to move a load up the thread is

⇒ **Torque Required to Move a Load Up a Power Screw with a Square Thread**

$$T_u = \frac{FD_p}{2} \left[\frac{L + \pi f D_p}{\pi D_p - f L} \right] \quad (17-2)$$

This equation accounts for the force required to overcome friction between the screw and the nut in addition to the force required just to move the load. If the screw or the nut bears against a stationary surface while rotating, there will be an additional friction torque developed at that surface. For this reason, many jacks and similar devices incorporate antifriction bearings at such points.

The coefficient of friction for use in Equation (17–2) depends on the materials used and the manner of lubricating the screw. For well-lubricated steel screws acting in steel nuts, $f = 0.15$ should be conservative.

An important factor in the analysis for torque is the angle of inclination of the plane. In a screw thread, the angle of inclination is referred to as the *lead angle*, λ . It is the angle between the tangent to the helix of the thread and the plane transverse to the axis of the screw. It can be seen from Figure 17–5 that

$$\tan \lambda = L/(\pi D_p) \quad (17-3)$$

where πD_p = circumference of the pitch line of the screw.

Then if the rotation of the screw tends to raise the load (move it up the incline), the friction force opposes the motion and acts down the plane.

Conversely, if the rotation of the screw tends to lower the load, the friction force will act up the plane, as shown in Figure 17–5(b). The torque analysis changes, producing Equation (17–4):

⇒ **Torque Required to Lower a Load Down a Power Screw with a Square Thread**

$$T_d = \frac{FD_p}{2} \left[\frac{\pi f D_p - L}{\pi D_p + f L} \right] \quad (17-4)$$

If the screw thread is steep (i.e., if it has a high lead angle), the friction force may not be able to overcome the tendency for the load to “slide” down the plane, and the load will fall due to gravity. In most cases for power screws with single threads, however, the lead angle is rather small, and the friction force is large enough to oppose the load and keep it from sliding down the plane. Such a screw is called *self-locking*, a desirable characteristic for jacks and similar devices.

Quantitatively, the condition that must be met for self-locking is

$$f > \tan \lambda \quad (17-5)$$

The coefficient of friction must be greater than the tangent of the lead angle. For $f = 0.15$, the corresponding value of the lead angle is 8.5° . For $f = 0.1$, for very smooth, well-lubricated surfaces, the lead angle for self-locking is 5.7° . The lead angles for the screw designs listed in Table 17–1 range from 1.94° to 5.57° . Thus, it is expected that all would be self-locking. However, operation under vibration should be avoided, as this may still cause movement of the screw.

Efficiency of a Power Screw

Efficiency for the transmission of a force by a power screw can be expressed as the ratio of the torque required to move the load without friction to that with friction. Equation (17–2) gives the torque required with friction, T_u . Letting $f = 0$, the torque required without friction, T' , is

$$T' = \frac{FD_p}{2} \frac{L}{\pi D_p} = \frac{FL}{2\pi} \quad (17-6)$$

Then the efficiency, e , is

⇒ **Efficiency of a Power Screw**

$$e = \frac{T'}{T_u} = \frac{FL}{2\pi T_u} \quad (17-7)$$

Alternate Forms of the Torque Equations

Equations (17–2) and (17–4) can be expressed in terms of the lead angle, rather than the lead and the pitch diameter, by noting the relationship in Equation (17–3). With this substitution, the torque required to move the load would be

⇒ **Torque to Raise a Load with a Square Thread**

$$T_u = \frac{FD_p}{2} \left[\frac{(\tan \lambda + f)}{(1 - f \tan \lambda)} \right] \quad (17-8)$$

and the torque required to lower the load is

⇒ **Torque to Lower a Load with a Square Thread**

$$T_d = \frac{FD_p}{2} \left[\frac{(f - \tan \lambda)}{(1 + f \tan \lambda)} \right] \quad (17-9)$$

Adjustment for Acme Threads and Trapezoidal Metric Threads

The difference between Acme threads and square threads is the presence of the thread angle, ϕ . Note from Figure 17–1 that $2\phi = 29^\circ$, and therefore $\phi = 14.5^\circ$. For the trapezoidal metric thread, $\phi = 15^\circ$. This changes the direction of action of the forces on the thread from

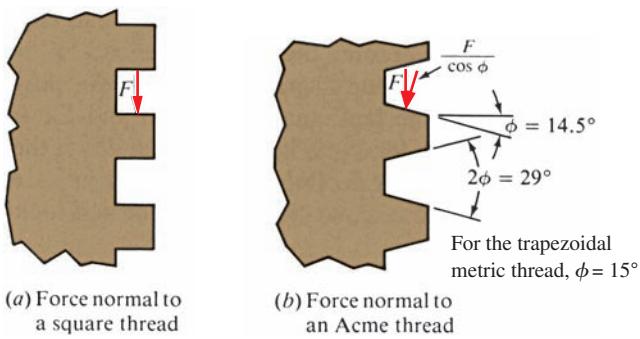


FIGURE 17-6 Force on an Acme thread

that depicted in Figure 17-5. Figure 17-6 shows that F would have to be replaced by $F/\cos \phi$. Carrying this through, the analysis for torque would give the following modified forms of Equations (17-8) and (17-9). The torque to move the load up the thread is

Example Problem 17-1

Two Acme-threaded power screws are to be used to raise a heavy access hatch, as sketched in Figure 17-4. The total weight of the hatch is 25 000 lb, divided equally between the two screws. Select a satisfactory screw from Table 17-1 on the basis of tensile strength, limiting the tensile stress to 10 000 psi. Then determine the required thickness of the yoke that acts as the nut on the screw to limit the shear stress in the threads to 5000 psi. For the screw thus designed, compute the lead angle, the torque required to raise the load, the efficiency of the screw, and the torque required to lower the load. Use a coefficient of friction of 0.15.

Solution The load to be lifted places each screw in direct tension. Therefore, the required tensile stress area is

$$A_t = \frac{F}{\sigma_d} = \frac{12500 \text{ lb}}{10000 \text{ lb/in}^2} = 1.25 \text{ in}^2$$

From Table 17-1, a $1\frac{1}{2}$ -in-diameter Acme thread screw with four threads per inch would provide a tensile stress area of 1.266 in^2 .

For this screw, each inch of length of a nut would provide 2.341 in^2 of shear stress area in the threads. The required shear area is then

$$A_s = \frac{F}{\tau_d} = \frac{12500 \text{ lb}}{5000 \text{ lb/in}^2} = 2.50 \text{ in}^2$$

Then the required length of the yoke would be

$$h = 2.5 \text{ in}^2 \left[\frac{1.0 \text{ in}}{2.341 \text{ in}^2} \right] = 1.07 \text{ in}$$

For convenience, let's specify $h = 1.25 \text{ in}$.

The lead angle is (remember that $L = p = 1/n = 1/4 = 0.250 \text{ in}$)

$$\lambda = \tan^{-1} \frac{L}{\pi D_p} = \tan^{-1} \frac{0.250}{\pi(1.3429)} = 3.39^\circ$$

The torque required to raise the load can be computed from Equation (17-10):

$$T_u = \frac{FD_p}{2} \left[\frac{(\cos \phi \tan \lambda + f)}{(\cos \phi - f \tan \lambda)} \right] \quad (17-10)$$

Using $\cos \phi = \cos(14.5^\circ) = 0.968$, and $\tan \lambda = \tan(3.39^\circ) = 0.0592$, we have

$$T_u = \frac{(12500 \text{ lb})(1.3429 \text{ in})}{2} \frac{[(0.968)(0.0592) + 0.15]}{[0.968 - (0.15)(0.0592)]} = 1809 \text{ lb}\cdot\text{in}$$

◇ Torque to Raise a Load with an Acme Thread

$$T_u = \frac{FD_p}{2} \left[\frac{(\cos \phi \tan \lambda + f)}{(\cos \phi - f \tan \lambda)} \right] \quad (17-10)$$

and the torque to move the load down the thread is

◇ Torque to Lower a Load with an Acme Thread

$$T_d = \frac{FD_p}{2} \left[\frac{(f - \cos \phi \tan \lambda)}{(\cos \phi + f \tan \lambda)} \right] \quad (17-11)$$

Power Required to Drive a Power Screw

If the torque required to rotate the screw is applied at a constant rotational speed, n , then the power in horsepower to drive the screw is

$$P = \frac{Tn}{63000}$$

The efficiency can be computed from Equation (17–7):

$$e = \frac{FL}{2\pi T_u} = \frac{(12500 \text{ lb})(0.250 \text{ in})}{2(\pi)(1809 \text{ lb} \cdot \text{in})} = 0.275 \text{ or } 27.5\%$$

The torque required to lower the load can be computed from Equation (17–11):

$$T_d = \frac{FD_p}{2} \left[\frac{(f - \cos \phi \tan \lambda)}{(\cos \phi + f \tan \lambda)} \right] \quad (17-11)$$

$$T_d = \frac{(12500 \text{ lb})(1.3429 \text{ in})}{2} \frac{[0.15 - (0.968)(0.0592)]}{[0.968 + (0.15)(0.0592)]} = 796 \text{ lb} \cdot \text{in}$$

Example Problem 17–2

It is desired to raise the hatch in Figure 17–4 a total of 15.0 in in no more than 12.0 s. Compute the required rotational speed for the screws and the power required.

Solution The screw selected in the solution for Example Problem 17–1 was a $1\frac{1}{2}$ -in Acme threaded screw with four threads per inch. Thus, the load would be moved $1/4$ in with each revolution. The linear speed required is

$$V = \frac{15.0 \text{ in}}{12.0 \text{ s}} = 1.25 \text{ in/s}$$

The required rotational speed would be

$$n = \frac{1.25 \text{ in}}{\text{s}} \cdot \frac{1 \text{ rev}}{0.25 \text{ in}} \cdot \frac{60 \text{ s}}{\text{min}} = 300 \text{ rpm}$$

Then the power required to drive each screw would be

$$P = \frac{Tn}{63000} = \frac{(1809 \text{ lb} \cdot \text{in})(300 \text{ rpm})}{63000} = 8.61 \text{ hp}$$

Multiple Start Thread Forms for Power Screws

The relatively low efficiency of standard single-thread Acme screws (approximately 30% or less) can be a strong disadvantage. Higher efficiencies can be achieved using high lead, multiple thread designs. The higher lead angle produces efficiencies in the 30% to 70% range. It should be understood that some mechanical advantage is lost so that higher torques are required to move a particular load as compared with single-thread screws. (See Internet sites 1, 6, 7, 10, 12, and 13.)

17-3 BALL SCREWS

The basic action of using screws to produce linear motion from rotation was described in Section 17–2 on power screws. A special adaptation of this action that minimizes the friction between the screw threads and the mating nut is the *ball screw*.

Figure 17–3 shows a cutaway view of a commercially available ball screw. It replaces the sliding friction of the conventional power screw with the rolling friction of bearing balls. The bearing balls circulate in hardened steel races formed by concave helical grooves in the screw and the nut. All reactive loads between the screw and the nut are carried by the bearing balls that provide the only physical contact between these members. As the screw and the nut rotate relative to each other, the bearing balls are diverted from one end and are carried by the ball-guide return tubes to the opposite end of the ball nut. This recirculation permits unrestricted travel of the nut in relation to the screw. (See Internet sites 1–10 and 14.)

Applications of ball screws occur in automotive steering systems, machine tool tables, linear actuators, jacking and positioning mechanisms, aircraft controls such as flap actuating devices, packaging equipment, and instruments. Figure 17–7 shows a linear actuator employing a ball screw driven by an electric motor

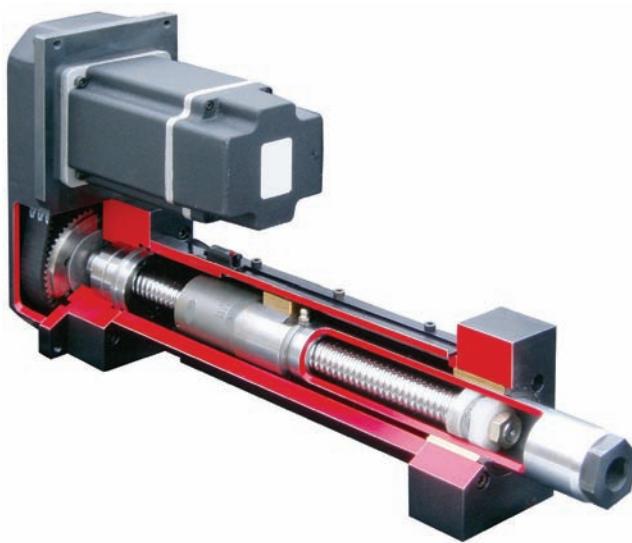


FIGURE 17-7 Application of a ball screw in a high-speed linear actuator (Joyce/Dayton Corp. and EDRIVE Actuators, Inc.); (see Internet sites 6 and 15)

through a synchronous belt drive. Rapid linear motion results with actuation forces up to 25 000 lb available. See Internet site 6.

The application parameters to be considered in selecting a ball screw include the following:

Axial load to be exerted by the screw during rotation

Rotational speed of the screw

Maximum static load on the screw

Direction of the load

Manner of supporting the ends of the screw

Length of the screw

Expected life

Environmental conditions

Load–Life Relationship

When transmitting a load, a ball screw experiences stresses similar to those on a ball bearing, as discussed in Chapter 14. The load is transferred from the screw to the balls, from the balls to the nut, and from the nut to the driven device. The contact stress between the balls and the races in which they roll eventually causes fatigue failure, indicated by pitting of the balls or the races.

Thus, the rating of ball screws gives the load capacity of the screw for a given life that 90% of the screws of a given design will survive. This is similar to the L_{10} life of ball bearings. Some manufacturers of ball screws use the term B_{10} life. Because ball screws are typically used as linear actuators, the most pertinent life parameter is the distance traveled by the nut relative to the screw.

Manufacturers usually report the rated load that a given screw can exert for 1 million in (25.4 km) of cumulative travel. The relationship between load, P , and life, L , is also similar to that for a ball bearing:

▷ Relationship between Bearing Load and Life

$$\frac{L_2}{L_1} = \left(\frac{P_1}{P_2} \right)^3 \quad (17-12)$$

Thus, if the load on a ball screw is doubled, the life is reduced to one-eighth of the original life. If the load is cut

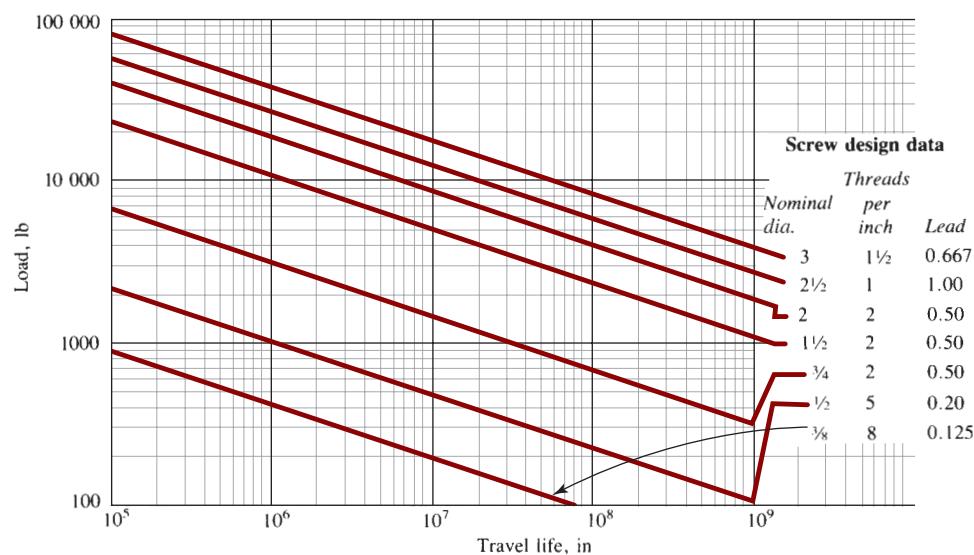


FIGURE 17-8 Ball screw performance

in half, the life is increased by eight times. Figure 17–8 shows the nominal load/life performance of ball screws of a small variety of sizes. Many more sizes and styles are available.

As an example of the use of Figure 17–8, consider the screw with a nominal diameter of 1/2 in and five threads per inch; the second line from the bottom of the chart. At 1.0 million in of rated travel life, the rated load is 1000 lb. If the actual applied load is 400 lb, the rated travel life would be approximately 2.0×10^7 in.

When a variety of load levels are experienced by a ball screw, methods for computing an equivalent load are available. Refer to the manufacturer's literature for the load/life data for the specific ball screw used. See Internet site 6 for an example.

Torque and Efficiency

The efficiency of a ball bearing screw is typically taken to be 90%. This far exceeds the efficiency for power screws without rolling contact that are typically in the range of 20% to 30%. Thus, far less torque is required to exert a given load with a given size of screw. Power is correspondingly reduced. The computation of the torque

to turn a ball screw is adapted from Equation (17–7), relating efficiency to torque:

Efficiency of a Ball Screw

$$e = \frac{FL}{2\pi T_u} \quad (17-7)$$

Then, using $e = 0.90$,

Torque to Drive a Ball Screw

$$T_u = \frac{FL}{2\pi e} = 0.177FL \quad (17-13)$$

Because of the low friction, ball screws are virtually never self-locking. In fact, designers also use this property to advantage by purposely using the applied load on the nut to rotate the screw. This is called *backdriving*; backdriving torque can be computed from

Backdriving Torque for a Ball Screw

$$T_b = \frac{FLe}{2\pi} = 0.143FL \quad (17-14)$$

Example Problem 17–3

Select suitable ball screws for the application described in Example Problems 17–1 and 17–2 and illustrated in Figure 17–4. The hatch must be lifted 15.0 in to open it eight times per day, and then it must be closed. The design life is 10 years. The lifting or lowering is to be completed in no more than 12.0 s.

For the screw selected, compute the torque to turn the screw, the power required, and the actual expected life.

Solution The data required to select a screw from Figure 17–8 are the load and the travel of the nut on the screw over the desired life. The load is 12 500 lb on each screw:

$$\text{Travel} = \frac{15.0 \text{ in}}{\text{stroke}} \cdot \frac{2 \text{ strokes}}{\text{cycle}} \cdot \frac{8 \text{ cycles}}{\text{day}} \cdot \frac{365 \text{ days}}{\text{year}} \cdot \frac{10 \text{ years}}{\text{year}} = 8.76 \times 10^5 \text{ in}$$

From Figure 17–8, the 2-in screw with two threads per inch and a lead of 0.50 in is satisfactory.

The torque required to turn the screw is

$$T_u = 0.177FL = 0.177(12\,500 \text{ lb})(0.50 \text{ in}) = 1106 \text{ lb}\cdot\text{in}$$

The rotational speed required is

$$n = \frac{1 \text{ rev}}{0.50 \text{ in}} \cdot \frac{15.0 \text{ in}}{12.0 \text{ s}} \cdot \frac{60 \text{ s}}{\text{min}} = 150 \text{ rpm}$$

The power required for each screw is

$$P = \frac{Tn}{63\,000} = \frac{(1106 \text{ lb}\cdot\text{in})(150 \text{ rpm})}{63\,000} = 2.63 \text{ hp}$$

Compare this with the 8.61 hp required for the Acme screw in Example Problem 17–2.

The actual travel life expected for this screw at a load of 12 500 lb would be approximately 3.2×10^6 in, using Figure 17–8. This is 3.65 times longer than required.

17-4 APPLICATION CONSIDERATIONS FOR POWER SCREWS AND BALL SCREWS

This section discusses additional application considerations that apply to both power screws and ball screws. Details may change according to the specific geometry and manufacturing processes. Supplier data should be consulted.

Critical Speed

The proper application of ball screws must take into account their vibration tendencies, particularly when operating at relatively high speeds. Long slender screws may exhibit the phenomenon of *critical speed*, n_c , at which the screw would tend to vibrate or whirl about its axis, possibly reaching dangerous amplitudes. Therefore, it is recommended that the operating speed of the screw be below 0.80 times the critical speed. An estimate for the critical speed, offered by Roton Products, Inc. (Internet site 10), is

$$n_c = \frac{4.76 \times 10^6 d K_s}{(SF)L^2} \quad (17-15)$$

where,

d = minor diameter of the screw (in)

K_s = end fixity factor

L = length between supports (in)

SF = safety factor

The end fixity factor, K_s , depends on the manner of supporting the ends of the screw with the following possibilities:

1. Simply supported at each end by one bearing: $K_s = 1.00$
2. Fixed at each end by two bearings that prevent rotation at the support: $K_s = 2.24$
3. Fixed at one end and simply supported at the other: $K_s = 1.55$
4. Fixed at one end and free at the other: $K_s = 0.32$

The value of the safety factor is a design decision, often taken to be in the range from 1.25 to 3.0. Note that the screw length is squared in the denominator, indicating that a relatively long screw would have a low critical speed. The best designs would employ a short length, rigid fixed supports, and large diameter. See References 2 and 3 for additional information on critical speeds.

Column Buckling

Ball screws that carry axial compressive loads must be checked for column buckling. The parameters, similar to those discussed in Chapter 6, are the material from which the screw is made, the end fixity, the diameter, and the length. Long screws should be analyzed using

the Euler formula Equation (6-4) or (6-6), while the J. B. Johnson formula Equation (6-9) is used for shorter screws. End fixity depends on the rigidity of supports similar to that described above for critical speed. However, the factors are different for column loading.

1. Simply supported at each end by one bearing: $K_s = 1.00$
2. Fixed at each end by two bearings that prevent rotation at the support: $K_s = 4.00$
3. Fixed at one end and simply supported at the other: $K_s = 2.00$
4. Fixed at one end and free at the other: $K_s = 0.25$

Suppliers of commercially available ball screws include data for allowable compressive load in their catalogs. (See Internet sites 1–10 and 14.)

Material for Screws

Ball screws are typically made from carbon or alloy steels using thread-rolling technology. After the threads are formed, induction heating improves the hardness and strength of the surfaces on which the circulating balls roll for wear resistance and long life. Many ball screw nuts are made from alloy steel that is case hardened by carburizing.

Power screws are typically produced from carbon or alloy steels such as SAE 1018, 1045, 1060, 4130, 4140, 4340, 4620, 6150, and 8620. For corrosive environments or where high temperatures are experienced, stainless steels are used, such as SAE 304, 305, 316, 384, 430, 431, or 440. Some are made from aluminum alloys 1100, 2014, or 3003.

Power screw nuts are made from steels for moderate loads and when operating at relatively low speeds. Grease lubrication is recommended. Higher speeds and loads call for lubricated bronze nuts that have superior wear performance. Applications requiring lighter loads can use plastic nuts that have inherently good lubricity without external lubrication. Examples of such applications are food processing equipment, medical devices, and clean manufacturing operations.

REFERENCES

1. Sadegh, Ali, Theodore Baumeister, and Eugene Avallone. *Mark's Standard Handbook for Mechanical Engineers*. 11th ed. New York: McGraw-Hill, 2007.
2. Budynas, R. G., and K. J. Nisbett. *Shigley's Mechanical Engineering Design*. 10th ed. New York: McGraw-Hill, 2015.
3. Juvinall, R. C., and K. M. Marshek. *Fundamentals of Machine Component Design*. 5th ed. New York: John Wiley & Sons, 2011.
4. Oberg, E. et al. *Machinery's Handbook*. 30th ed. New York: Industrial Press, 2015.

INTERNET SITES FOR LINEAR MOTION ELEMENTS

1. **PowerTransmission.com.** Online listing of numerous manufacturers and suppliers of linear motion devices, including ball screws, lead (power) screws, linear actuators, screw jacks, and linear slides.
2. **Ball-screws.net.** Site lists numerous manufacturers of ball screws, some with online catalogs.
3. **Thomson Industries, Inc.** Manufacturer of ball screws, ball bushings, linear motion guides, clutches, brakes, actuators, and other motion control elements. Site contains selection software for U.S. and metric dimensions. Thomson is part of the Danaher Motion Group of Danaher Corporation.
4. **Danaher Motion Group.** Part of Danaher Corporation. Manufacturers of Thomson motion control devices, motors, drives, controls, air bearing rotary stages, and high-precision X-Y-Z stages.
5. **THK Linear Motion Systems.** Manufacturer of ball screws, ball splines, linear motion guides, linear bushings, linear actuators, and other motion control products.
6. **Joyce/Dayton Corp.** Manufacturer of a wide variety of jacks for commercial and industrial applications. Included are machine screw and ball screw types with integral gear drives and complete motorized actuator systems. High-speed linear actuators produced by EDRIVE Actuators, Inc. are also available through Joyce/Dayton's Internet site.
7. **SKF Linear Motion.** Manufacturer of high-efficiency metric screws, linear guiding systems, actuators, and controls.
8. **Bishop-Wisecarver Group.** Manufacturer and supplier of linear motion systems and components from miniature to large sizes. Ball screws, positioning stages, linear bearings and bushings, ball slides, rotary motion guides, rotary actuators, and others.
9. **Isel USA.** Manufacturer of a wide variety of linear motion products including slides, X-Y and X-Y-Z tables, rotary tables, ball screws, and controls.
10. **Roton Products, Inc.** Manufacturer of a large variety of power screws, ball screws, and worms in U.S. and metric dimensions.
11. **Ledex.** Manufacturer of small linear and rotary solenoid actuators and related products under the Ledex brand. A unit of Johnson Electric.
12. **Nook Industries.** Manufacturer of power screws and screw jacks in U.S. and metric dimensions and thread forms.
13. **Power Jacks Group.** Manufacturer of metric and U.S. screw jacks and actuators.
14. **Automation Direct.** Provider of a wide variety of automation products, including liner slides, stepper motors, proximity sensors, encoders, and pneumatic components.
15. **EDRIVE Actuators, Inc.** Producer of a wide range of heavy duty ball screw linear actuators for factory automation and machine tool industries.

PROBLEMS

1. Name four types of threads used for power screws.
2. Make a scale drawing of an Acme thread having a major diameter of $1\frac{1}{2}$ in and four threads per inch. Draw a section 2.0 in long.
3. Repeat Problem 2 for a buttress thread.
4. Repeat Problem 2 for a square thread.
5. If an Acme-thread power screw is loaded in tension with a force of 30 000 lb, what size screw from Table 17-1 should be used to maintain a tensile stress below 10 000 psi?
6. For the screw chosen in Problem 5, what would be the required axial length of the nut on the screw that transfers the load to the frame of the machine if the shear stress in the threads must be less than 6000 psi?
7. Compute the torque required to raise the load of 30 000 lb with the Acme screw selected in Problem 5. Use a coefficient of friction of 0.15.
8. Compute the torque required to lower the load with the screw from Problem 5.
9. If a square-thread screw having a major diameter of $\frac{3}{4}$ in and six threads per inch is used to lift a load of 4000 lb, compute the torque required to rotate the screw. Use a coefficient of friction of 0.15.
10. For the screw of Problem 9, compute the torque required to rotate the screw when lowering the load.
11. Compute the lead angle for the screw of Problem 9. Is it self-locking?
12. Compute the efficiency of the screw of Problem 9.
13. If the load of 4000 lb is lifted by the screw described in Problem 9 at the rate of 0.5 in/s, compute the required rotational speed of the screw and the power required to drive it.
14. A ball screw for a machine table drive is to be selected. The axial force to be transmitted by the screw is 600 lb. The table moves 24 in per cycle, and it is expected to cycle 10 times per hour for a design life of 10 years. Select an appropriate screw.
15. For the screw selected in Problem 14, compute the torque required to drive the screw.
16. For the screw selected in Problem 14, the normal travel speed of the table is 10.0 in/min. Compute the power required to drive the screw.
17. If the cycle time for the machine in Problem 14 were decreased to obtain 20 cycles/h instead of 10, what would be the expected life in years of the screw originally selected?
18. Specify a suitable size for a metric trapezoidal power screw that is subjected to a tensile load of 125 kN while keeping the tensile stress below 75 MPa.
19. Compute the torque required to raise the load vertically for the screw selected in Problem 18. Use a coefficient of friction of 0.15.
20. Compute the torque required to lower the load with the screw specified in Problem 18.
21. For the screw specified in Problem 18, compute the power required to raise the load a total of 4250 mm in 7.5 s.
22. Compute the lead angle for the screw specified in Problem 18. Will it be self-locking?

23. Compute the efficiency for the screw specified in Problem 18 when raising the load.
24. Specify a suitable size for a metric trapezoidal power screw that is subjected to a tensile load of 8500 N while keeping the tensile stress below 110 MPa.
25. Compute the torque required to raise the load vertically for the screw selected in Problem 24. Use a coefficient of friction of 0.15.
26. Compute the torque required to lower the load with the screw specified in Problem 24.
27. For the screw specified in Problem 24, compute the power required to raise the load a total of 240 mm in 3.5 s.
28. Compute the lead angle for the screw specified in Problem 24. Will it be self-locking?
29. Compute the efficiency for the screw specified in Problem 24 when raising the load.
30. Compute the critical speed for the ball screw specified in Problem 14. The total length of the screw between single bearings at each end is 28.0 in.

SPRINGS

The Big Picture

You Are the Designer

- 18–1 Objectives of This Chapter
- 18–2 Kinds of Springs
- 18–3 Helical Compression Springs
- 18–4 Stresses and Deflection for Helical Compression Springs
- 18–5 Analysis of Spring Characteristics
- 18–6 Design of Helical Compression Springs
- 18–7 Extension Springs
- 18–8 Helical Torsion Springs
- 18–9 Improving Spring Performance by Shot Peening and Laser Peening
- 18–10 Spring Manufacturing

THE BIG PICTURE

Springs

Discussion Map

- A *spring* is a flexible element used to exert a force or a torque and, at the same time, to store energy.
- There are numerous types of springs: compression, extension, torsion, and many more.

Discover

Look around you and see if you can find one or more springs. Describe them, giving their basic geometry, the type of force or torque produced, the way in which they are used, and other features.

Share your observations about springs with your colleagues, and learn from their observations.

Write a brief report about at least two different kinds of springs. Include sketches that show their basic size, geometry, and appearance. Describe their functions, including how they work and how they affect the operation of the device of which they are a part.

This chapter will help you develop skill in designing and analyzing springs of the helical compression, helical extension, and torsion types. Information on special treatments for spring wire and spring manufacture is also provided.

A *spring* is a flexible element used to exert a force or a torque and, at the same time, to store energy. The force can be a linear push or pull, or it can be radial, acting similarly to a rubber band around a roll of drawings. The torque can be used to cause a rotation, for example, to close a door on a cabinet or to provide a counterbalance force for a machine element pivoting on a hinge.

Springs inherently store energy when they are deflected and return the energy when the force that causes the deflection is removed. Consider the child's toy called a *Jack-in-the-Box*. When you push Jack into the box, you are exerting a force on a spring and delivering energy to it. Then when you close the lid of the box, the spring is captured and is held in

the compressed state. What happens when you trip the latch on the lid? Jack leaps out of the box! More precisely, the spring force causes Jack to push the lid open, and then the stored energy in the spring is released, causing the spring to expand to its initial, free length when no load was applied. Some devices contain *power springs* or *motor springs* that are wound up, and then they deliver the energy at a measured pace to produce a long-term action. Examples are mechanical animated toys, toy race cars, some watches, timers, and clocks.

Look around you and see if you can find one or more springs. Or think about where you might have recently encountered a device that used springs.

Consider various appliances, an automobile, a truck, a bicycle, an office machine, a door latch, a toy, a machine in a production operation, or some other device that has moving parts.

Describe the springs. Did they exert a push or a pull? Or did they exert a torque, tending to cause rotation? What were the springs made from? How big were they? Was the force or torque very large, or was it light enough for you to actuate the spring easily? How were the springs mounted in the device of which they were a part? Was there a load on the spring at all times? Or did the spring relax completely at one point in its total possible operating cycle? Was the spring designed to be actuated often so that it experienced a very large number of cycles of load (and stress) during its expected life? What was the environment in which the spring operated? Hot or cold? Wet or dry? Exposed to corrosives? How did the environment affect the kind of material used for the spring or the kind of coating on it?

Share your observations with others in your group and with your instructor. Listen to the observations of others, and compare them with your examples of springs. Take at least two springs that are quite different from each other, and prepare a brief report about them, including sketches that show the basic size, geometry, and appearance. Describe their functions, including how they work and how they affect the operation of the device of which they are a part. Refer to the preceding paragraph for some factors that you might describe. Also include a listing with a brief description of each different kind of spring that you or your colleagues found.

This chapter will present basic information about a variety of spring types. Design procedures will be developed for helical compression springs, helical tension springs, and torsion springs. We will consider loads and stresses, deflection characteristics, material selection, life expectancy, attachment, and installation.

YOU ARE THE DESIGNER

One design for an automotive engine valve train is shown in Figure 18–1. As the cam rotates, it causes the push rod to move upward. The rocker arm then rotates and pushes the valve stem downward, opening the valve. Concurrently, the spring that surrounds the valve stem is compressed, and energy is stored. As the cam continues to rotate, it allows the movement of the train to return to its original position. The valve is aided in its upward motion and seating action by the spring exerting a force that closes the valve at the end of the cycle.

You are the designer of the spring for the valve train. What type of spring do you specify? What should its dimensions be,

including the length, outside diameter, inside diameter, and diameter of the wire for the coils? How many coils should be used? What should the ends of the spring look like? How much force is exerted on the valve, and how does this force change as the valve train goes through a complete cycle? What material should be used? What stress levels are developed in the spring wire, and how can the spring be designed to be safe under the load, life, and environmental conditions in which it must operate? You must specify or calculate all of these factors to ensure a successful spring design. ■

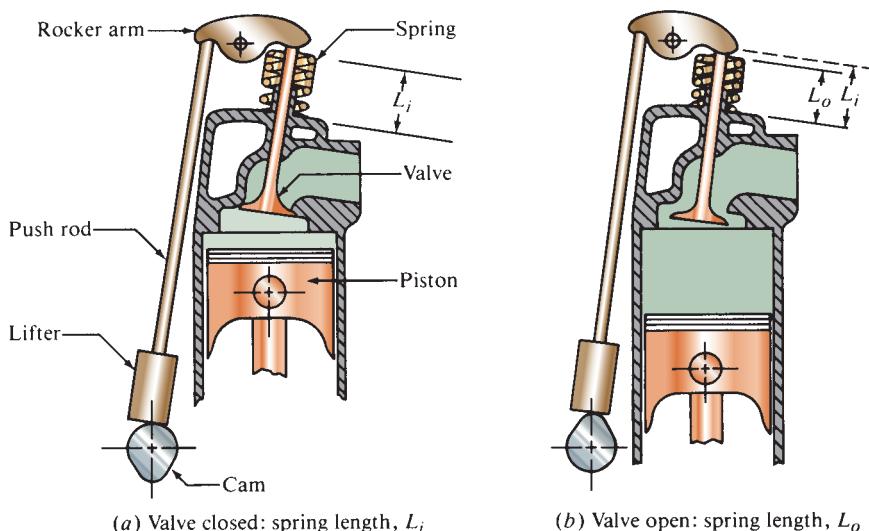


FIGURE 18–1 Engine valve train showing the application of a helical compression spring

18-1 OBJECTIVES OF THIS CHAPTER

After completing this chapter, you will be able to:

1. Identify and describe several types of springs, including the helical compression spring, helical extension spring, torsion spring, Belleville spring, flat spring, drawbar spring, garter spring, constant-force spring, and power spring.
2. Design and analyze helical compression springs to conform to design requirements such as force/deflection characteristics, life, physical size, and environmental conditions.
3. Compute the dimensions of various geometric features of helical compression springs.
4. Specify suitable materials for springs based on strength, life, and deflection parameters.
5. Design and analyze helical extension springs.
6. Design and analyze torsion springs.
7. Use computer programs to assist in the design and analysis of springs.

18-2 KINDS OF SPRINGS

Springs can be classified according to the direction and the nature of the force exerted by the spring when it is deflected. Table 18-1 lists several kinds of springs classified as *push*, *pull*, *radial*, and *torsion*. Figure 18-2 shows several typical designs.

Helical compression springs are typically made from round wire, wrapped into a straight, cylindrical form with a constant pitch between adjacent coils. Square or rectangular wire may also be used. Four practical end configurations are shown in Figure 18-3. Without an applied load, the spring's length is called the *free length*. When a compression force is applied, the coils are pressed more closely together until they all touch, at which time the length is the minimum possible called the *solid length*.

TABLE 18-1 Types of Springs

| Uses | Types of springs |
|--------|---|
| Push | Helical compression spring |
| | Belleville spring |
| | Torsion spring: force acting at the end of the torque arm |
| | Flat spring, such as a cantilever or leaf spring |
| Pull | Helical extension spring |
| | Torsion spring: force acting at the end of the torque arm |
| | Flat spring, such as a cantilever or leaf spring |
| | Drawbar spring (special case of the compression spring) |
| Radial | Constant-force spring |
| | Garter spring, elastomeric band, and spring clamp |
| Torque | Torsion spring and power spring |

A linearly increasing amount of force is required to compress the spring as its deflection is increased. Straight, cylindrical helical compression springs are among the most widely used types. Also shown in Figure 18-2 are the conical, barrel, hourglass, and variable-pitch types.

Helical extension springs appear to be similar to compression springs, having a series of coils wrapped into a cylindrical form. However, in extension springs, the coils either touch or are closely spaced under the no-load condition. Then as the external tensile load is applied, the coils separate. Figure 18-4 shows several end configurations for extension springs.

The *drawbar spring* [Figure 18-2(c)] incorporates a standard helical compression spring with two looped wire devices inserted through the inside of the spring. With such a design, a tensile force can be exerted by pulling on the loops while still placing the spring in compression. It also provides a definite stop as the compression spring is compressed to its solid height.

A *torsion spring*, as the name implies, is used to exert a torque as the spring is deflected by rotation about its axis. The common spring-action clothespin uses a torsion spring to provide the gripping action. Torsion springs are also used to rotate a door to its open or closed position or to counterbalance the lid of a container. Some timers and other controls use torsion springs to actuate switch contacts or to produce similar actions. Push or pull forces can be exerted by torsion springs if one end of the spring is attached to the member to be actuated.

Leaf springs are made from one or more flat strips of brass, bronze, steel, or other materials loaded as cantilevers or simple beams. They can provide a push or a pull force as they are deflected from their free condition. Large forces can be exerted within a small space by leaf springs. By tailoring the geometry of the leaves and by nesting leaves of different dimensions, the designer can achieve special force-deflection characteristics. The design of leaf springs uses the principles of stress and deflection analysis of beams as presented in courses in strength of materials and as reviewed in Chapter 3.

A *Belleville spring* has the shape of a shallow, conical disk with a central hole. It is sometimes called a *Belleville washer* because its appearance is similar to that of a flat washer. A very high spring rate or spring force can be developed in a small axial space with such springs. By varying the height of the cone relative to the thickness of the disk, the designer can obtain a variety of load-deflection characteristics. Also, nesting several springs face-to-face or back-to-back provides numerous spring rates.

Garter springs are coiled wires formed into a continuous ring shape so that they exert a radial force around the periphery of the object to which they are applied. Either inward or outward forces can be obtained with different designs. The action of a garter spring with an inward force is similar to that of a rubber band, and the spring action is similar to that of an extension spring.

Constant-force springs take the form of a coiled strip. The force required to pull the strip off the coil is

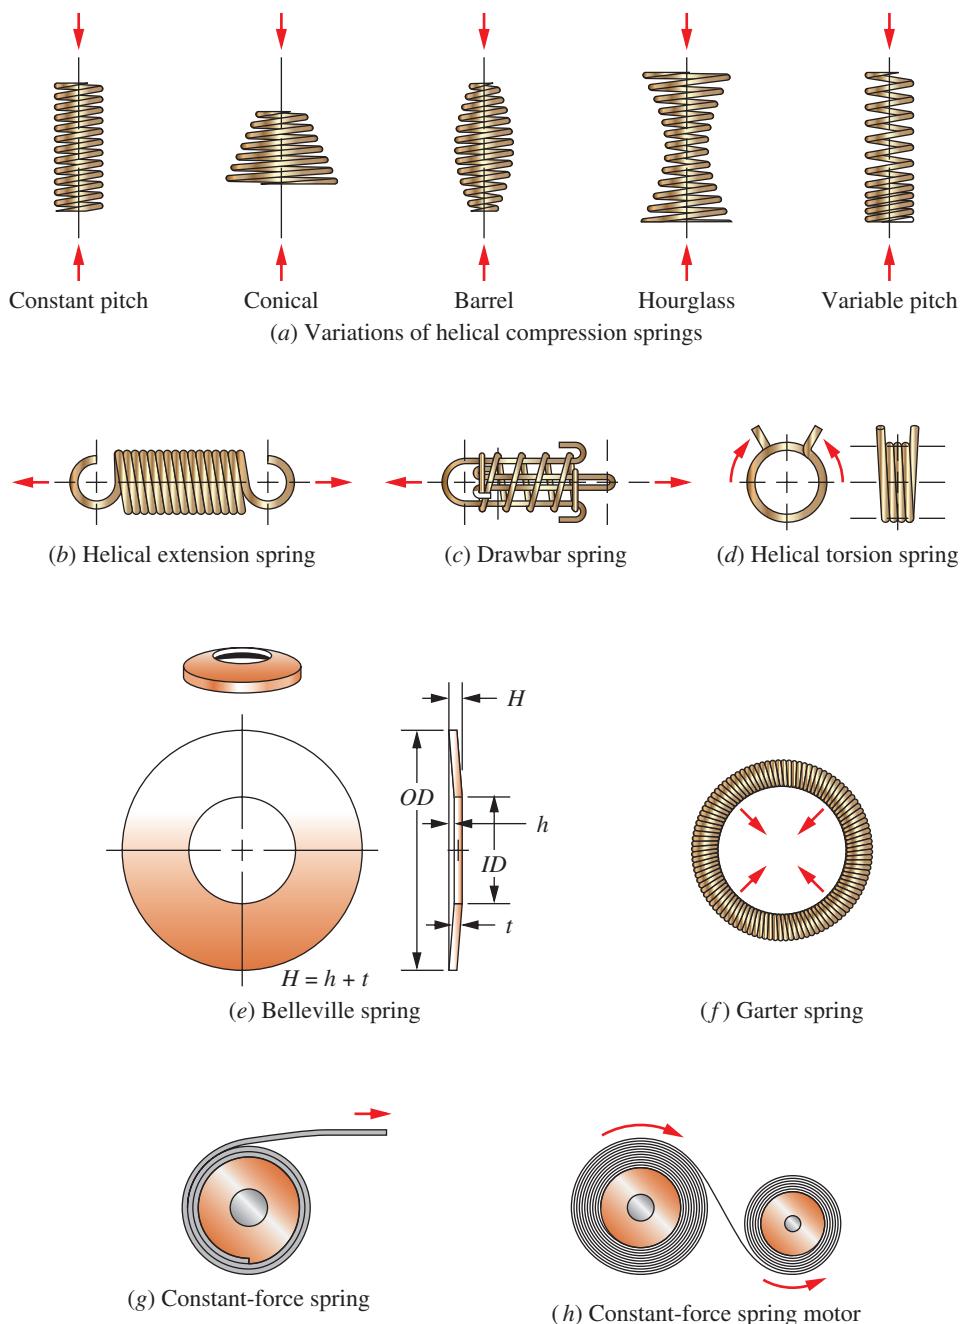


FIGURE 18-2 Several types of springs

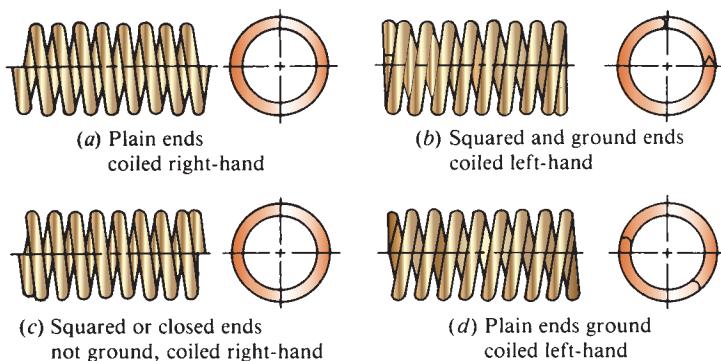


FIGURE 18-3 Appearance of helical compression springs showing end treatments

| Type | End configurations | | | | | | |
|---------------------------|--------------------|--|--|--|--|--|--|
| Twist loop or hook | | | | | | | |
| Cross center loop or hook | | | | | | | |
| Side loop or hook | | | | | | | |
| Extended hook | | | | | | | |
| Special ends | | | | | | | |

FIGURE 18-4 End configurations for extension springs

virtually constant over a long length of pull. The magnitude of the force is dependent on the width, thickness, and radius of curvature of the coil and on the elastic modulus of the spring material. Basically, the force is related to the deformation of the strip from its originally curved shape to the straight form.

Power springs, sometimes called *motor* or *clock springs*, are made from flat spring steel stock, wound into a spiral shape. A torque is exerted by the spring as it tends to unwrap the spiral. Figure 18-2 shows a spring motor made from a constant-force spring.

A *torsion bar*, as its name implies, is a bar loaded in torsion. When a round bar is used, the analyses for torsional stress and deflection are similar to the analysis presented for circular shafts in Chapters 3 and 12. Other cross-sectional shapes can be used, and special care must be exercised at the points of attachment.

Information about commercially available springs can be found in Internet sites 3–5 and 13. The methods of analyzing and designing springs used in this book have been developed by applying principles from References 1–10.

18-3 HELICAL COMPRESSION SPRINGS

In the most common form of helical compression spring, round wire is wrapped into a cylindrical form with a constant pitch between adjacent coils. This basic form is completed by a variety of end treatments, as shown in Figure 18-3.

For medium- to large-size springs used in machinery, the squared and ground-end treatment provides a flat surface on which to seat the spring. The end coil is collapsed against the adjacent coil (squared), and the surface is ground until at least 270° of the last coil is in contact with the bearing surface. Springs made from smaller

wire (less than approximately 0.020 in, or 0.50 mm) are usually squared only, without grinding. In unusual cases the ends may be ground without squaring, or they may be left with plain ends, simply cut to length after coiling.

You are probably familiar with many uses of helical compression springs. The retractable ballpoint pen depends on the helical compression spring, usually installed around the ink supply barrel. Suspension systems for cars, trucks, and motorcycles frequently incorporate these springs. Other automotive applications include the valve springs in engines, hood linkage counterbalancing, and the clutch pressure-plate springs. In manufacturing, springs are used in dies to actuate stripper plates; in hydraulic control valves; as pneumatic cylinder return springs; and in the mounting of heavy equipment for shock isolation. Many small devices such as electrical switches and ball check valves incorporate helical compression springs. Desk chairs have stout springs to return the chair seat to its upright position. And don't forget the venerable pogo stick!

The following paragraphs define the many variables used to describe and analyze the performance of helical compression springs.

Diameters

Figure 18-5 shows the notation used in referring to the characteristic diameters of helical compression springs. The outside diameter (*OD*), the inside diameter (*ID*), and the wire diameter (D_w) are obvious and can be measured with standard measuring instruments. In calculating the stress and deflection of a spring, we use the mean diameter, D_m . Notice that

⇒ Spring Diameters

$$\begin{aligned} OD &= D_m + D_w \\ ID &= D_m - D_w \end{aligned}$$

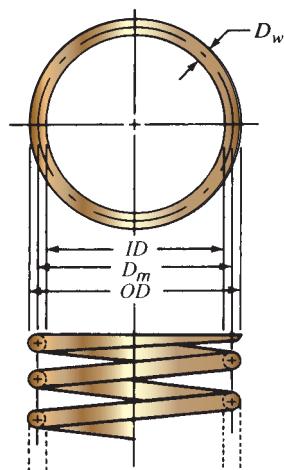


FIGURE 18-5 Notation for diameters

Standard Wire Diameters. The specification of the required wire diameter is one of the most important outcomes of the design of springs. Several types of materials are typically used for spring wire, and the wire is produced in sets of standard diameters covering a broad range. Table 18-2 lists the most common standard wire gages. Notice that except for music wire, the wire size gets smaller as the gage number gets larger. Also see the notes to the table. See Internet sites 8-11 and 14 for suppliers of spring wire.

Lengths

It is important to understand the relationship between the length of the spring and the force exerted by it (see Figure 18-6). The *free length*, L_f , is the length that the spring assumes when it is exerting no force, as if it were simply sitting on a table. The *solid length*, L_s , is found

TABLE 18-2 Wire Gages and Diameters for Springs

| Gage no. | U.S. steel wire gage ¹ (in) | Music wire gage ² (in) | Brown & Sharpe Gage ³ (in) | Preferred metric diameters ⁴ (mm) |
|----------|--|-----------------------------------|---------------------------------------|--|
| 7/0 | 0.4900 | | | 13.0 |
| 6/0 | 0.4615 | 0.004 | 0.5800 | 12.0 |
| 5/0 | 0.4305 | 0.005 | 0.5165 | 11.0 |
| 4/0 | 0.3938 | 0.006 | 0.4600 | 10.0 |
| 3/0 | 0.3625 | 0.007 | 0.4096 | 9.0 |
| 2/0 | 0.3310 | 0.008 | 0.3648 | 8.5 |
| 0 | 0.3065 | 0.009 | 0.3249 | 8.0 |
| 1 | 0.2830 | 0.010 | 0.2893 | 7.0 |
| 2 | 0.2625 | 0.011 | 0.2576 | 6.5 |
| 3 | 0.2437 | 0.012 | 0.2294 | 6.0 |
| 4 | 0.2253 | 0.013 | 0.2043 | 5.5 |
| 5 | 0.2070 | 0.014 | 0.1819 | 5.0 |
| 6 | 0.1920 | 0.016 | 0.1620 | 4.8 |
| 7 | 0.1770 | 0.018 | 0.1443 | 4.5 |
| 8 | 0.1620 | 0.020 | 0.1285 | 4.0 |
| 9 | 0.1483 | 0.022 | 0.1144 | 3.8 |
| 10 | 0.1350 | 0.024 | 0.1019 | 3.5 |
| 11 | 0.1205 | 0.026 | 0.0907 | 3.0 |
| 12 | 0.1055 | 0.029 | 0.0808 | 2.8 |
| 13 | 0.0915 | 0.031 | 0.0720 | 2.5 |
| 14 | 0.0800 | 0.033 | 0.0641 | 2.0 |
| 15 | 0.0720 | 0.035 | 0.0571 | 1.8 |
| 16 | 0.0625 | 0.037 | 0.0508 | 1.6 |
| 17 | 0.0540 | 0.039 | 0.0453 | 1.4 |
| 18 | 0.0475 | 0.041 | 0.0403 | 1.2 |
| 19 | 0.0410 | 0.043 | 0.0359 | 1.0 |

TABLE 18-2 Wire Gages and Diameters for Springs (*continued*)

| Gage no. | U.S. steel wire gage ¹ (in) | Music wire gage ² (in) | Brown & Sharpe Gage ³ (in) | Preferred metric diameters ⁴ (mm) |
|----------|--|-----------------------------------|---------------------------------------|--|
| 20 | 0.0348 | 0.045 | 0.0320 | 0.90 |
| 21 | 0.0317 | 0.047 | 0.0285 | 0.80 |
| 22 | 0.0286 | 0.049 | 0.0253 | 0.70 |
| 23 | 0.0258 | 0.051 | 0.0226 | 0.65 |
| 24 | 0.0230 | 0.055 | 0.0201 | 0.60 or 0.55 |
| 25 | 0.0204 | 0.059 | 0.0179 | 0.50 or 0.55 |
| 26 | 0.0181 | 0.063 | 0.0159 | 0.45 |
| 27 | 0.0173 | 0.067 | 0.0142 | 0.45 |
| 28 | 0.0162 | 0.071 | 0.0126 | 0.40 |
| 29 | 0.0150 | 0.075 | 0.0113 | 0.40 |
| 30 | 0.0140 | 0.080 | 0.0100 | 0.35 |
| 31 | 0.0132 | 0.085 | 0.00893 | 0.35 |
| 32 | 0.0128 | 0.090 | 0.00795 | 0.30 or 0.35 |
| 33 | 0.0118 | 0.095 | 0.00708 | 0.30 |
| 34 | 0.0104 | 0.100 | 0.00630 | 0.28 |
| 35 | 0.0095 | 0.106 | 0.00501 | 0.25 |
| 36 | 0.0090 | 0.112 | 0.00500 | 0.22 |
| 37 | 0.0085 | 0.118 | 0.00445 | 0.22 |
| 38 | 0.0080 | 0.124 | 0.00396 | 0.20 |
| 39 | 0.0075 | 0.130 | 0.00353 | 0.20 |
| 40 | 0.0070 | 0.138 | 0.00314 | 0.18 |

Sources: References 1, 4, and 5.

¹ Use the U.S. Steel Wire Gage for steel wire, except music wire. This gage has also been called the *Washburn and Moen Gage (W&M)*, the *American Steel Wire Co. Gage*, and the *Roebling Wire Gage*.

² Use the Music Wire Gage only for music wire (ASTM A228).

³ Use the Brown & Sharpe Gage for nonferrous wires such as brass and phosphor bronze.

⁴ The preferred metric sizes are from Reference 1 and are listed as the nearest preferred metric size to the U.S. Steel Wire Gage. The gage numbers do not apply.

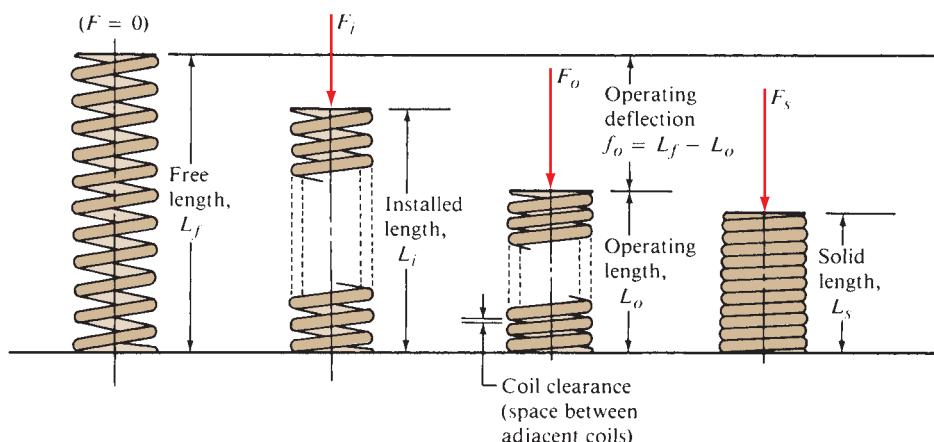


FIGURE 18-6 Notation for lengths and forces

when the spring is collapsed to the point where all coils are touching. This is obviously the shortest possible length that the spring can have. The spring is usually not compressed to the solid length during operation.

The shortest length for the spring during normal operation is the *operating length*, L_o . At times, a spring will be designed to operate between two limits of deflection. Consider the valve spring for an engine, for example, as shown in Figure 18–1. When the valve is open, the spring assumes its shortest length, which is L_o . Then when the valve is closed, the spring gets longer but still exerts a force to keep the valve securely on its seat. The length at this condition is called the *installed length*, L_i . So the valve spring length changes from L_o to L_i during normal operation as the valve itself reciprocates.

Forces

We will use the symbol F to indicate forces exerted by a spring, with various subscripts to specify which level of force is being considered. The subscripts correspond to those used for the lengths. Thus,

F_s = force at solid length, L_s : the maximum force that the spring ever sees

F_o = force at operating length, L_o : the maximum force the spring sees in *normal operation*

F_i = force at installed length, L_i : the force varies between F_o and F_i for a reciprocating spring

F_f = force at free length, L_f : this force is zero

Spring Rate

The relationship between the force exerted by a spring and its deflection is called its *spring rate*, k . Any change in force divided by the corresponding change in deflection can be used to compute the spring rate:

Spring Rate

$$k = \Delta F / \Delta L \quad (18-1)$$

For example,

$$k = \frac{F_o - F_i}{L_i - L_o} \quad (18-1a)$$

or

$$k = \frac{F_o}{L_f - L_o} \quad (18-1b)$$

or

$$k = \frac{F_i}{L_f - L_i} \quad (18-1c)$$

In addition, if the spring rate is known, the force at any deflection can be computed. For example, if a spring had a rate of 42.0 lb/in, the force exerted at a deflection from free length of 2.25 in would be

$$F = k(L_f - L) = (42.0 \text{ lb/in})(2.25 \text{ in}) = 94.5 \text{ lb}$$

Spring Index

The ratio of the mean diameter of the spring to the wire diameter is called the *spring index*, C :

Spring Index

$$C = D_m / D_w$$

It is recommended that C be greater than 5.0, with typical machinery springs having C values ranging from 5 to 12. For C less than 5, the forming of the spring will be very difficult, and the severe deformation required may create cracks in the wire. The stresses and the deflections in springs are dependent on C , and a larger C will help to eliminate the tendency for a spring to buckle.

Number of Coils

The total number of coils in a spring will be called N . But in the calculation of stress and deflections for a spring, some of the coils are inactive and are neglected. For example, in a spring with squared and ground ends or simply squared ends, each end coil is inactive, and the number of *active coils*, N_a , is $N - 2$. For plain ends, all coils are active: $N_a = N$. For plain coils with ground ends, $N_a = N - 1$.

Pitch

Pitch, p , refers to the axial distance from a point on one coil to the corresponding point on the next adjacent coil. The relationships among the pitch, free length, wire diameter, and number of active coils are as follows:

Squared and ground ends: $L_f = pN_a + 2D_w$

Squared ends only: $L_f = pN_a + 3D_w$

Plain and ground ends: $L_f = p(N_a + 1)$

Plain ends: $L_f = pN_a + D_w$

Pitch Angle

Figure 18–7 shows the pitch angle, λ ; note that the larger the pitch angle is, the steeper the coils appear to be. Most practical spring designs produce a pitch angle less than about 12°. If the angle is greater than 12°, undesirable compressive stresses develop in the wire, and the formulas presented later are inaccurate. The pitch angle can be computed by the formula

$$\lambda = \tan^{-1} \left[\frac{p}{\pi D_m} \right] \quad (18-2)$$

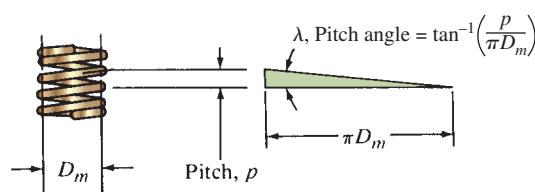


FIGURE 18–7 Pitch angle

You can see the logic of this formula by taking one coil of a spring and unwrapping it onto a flat surface, as illustrated in Figure 18–7. The horizontal line is the mean circumference of the spring, and the vertical line is the pitch, p .

Installation Considerations

Frequently, a spring is installed in a cylindrical hole or around a rod. When it is, adequate clearances must be provided. When a compression spring is compressed, its diameter gets larger. Thus, the inside diameter of a hole enclosing the spring must be greater than the outside diameter of the spring to eliminate rubbing. An initial diametral clearance of one-tenth of the wire diameter is recommended for springs having a diameter of 0.50 in (12 mm) or greater. If a more precise estimate of the actual outside diameter of the spring is required, the following formula can be used for the OD at the solid length condition:

$$OD_s = \sqrt{D_m^2 + \frac{p^2 - D_w^2}{\pi^2}} + D_w \quad (18-3)$$

Even though the spring ID gets larger, it is also recommended that the clearance at the ID be approximately $0.1D_w$.

Springs with squared ends or squared and ground ends are frequently mounted on a button-type seat or in a socket with a depth equal to the height of just a few coils for the purpose of locating the spring.

Coil Clearance. The term *coil clearance* refers to the space between adjacent coils when the spring is compressed to its operating length, L_o . The actual coil clearance, cc , can be estimated from

Coil Clearance

$$cc = (L_o - L_s)/N_a$$

One guideline is that the coil clearance should be greater than $D_w/10$, especially in springs loaded cyclically.

Another recommendation relates to the overall deflection of the spring:

$$(L_o - L_s) > 0.15(L_f - L_s)$$

Materials Used for Springs

Virtually any elastic material can be used for a spring. However, most mechanical applications use metallic wire—high-carbon steel (most common), alloy steel, stainless steel, brass, bronze, beryllium copper, or nickel-base alloys. Most spring materials are made according to specifications of the ASTM. Table 18–3 lists some common types. (See Internet sites 8–11 and 14.)

Types of Loading and Allowable Stresses

The allowable stress to be used for a spring depends on the type of loading, the material, and the size of the wire. Loading is usually classified into three types:

- **Light service:** Static loads or up to 10 000 cycles of loading with a low rate of loading (nonimpact)
- **Average service:** Typical machine design situations; moderate rate of loading and up to 1 million cycles
- **Severe service:** Rapid cycling for above 1 million cycles; possibility of shock or impact loading; engine valve springs are a good example

The strength of a given material is greater for the smaller sizes. Figures 18–8 through 18–13 show the design stresses for six different materials. Note that some curves can be used for more than one material by the application of a factor. As a conservative approach to design, we will use the average service curve for most design examples, unless true high cycling conditions exist. We will use the light service curve as the upper limit on stress when the spring is compressed to its solid height. If the stress exceeds the light service value by a small amount, the spring will undergo permanent set because of yielding.

TABLE 18–3 Spring Materials

| Material type | ASTM no. | Relative cost | Temperature limits, °F |
|---|----------|---------------|------------------------|
| A. High-carbon steels | | | |
| Hard-drawn | A227 | 1.0 | 0–250 |
| General-purpose steel with 0.60%–0.70% carbon; low cost | | | |
| Music wire | A228 | 2.6 | 0–250 |
| High-quality steel with 0.80%–0.95% carbon; very high strength; excellent surface finish; hard-drawn; good fatigue performance; used mostly in smaller sizes up to 0.125 in | | | |
| Oil-tempered | A229 | 1.3 | 0–350 |
| General-purpose steel with 0.60%–0.70% carbon; used mostly in larger sizes above 0.125 in; not good for shock or impact | | | |

(continued)

TABLE 18-3 Spring Materials (*continued*)

| Material type | ASTM no. | Relative cost | Temperature limits, °F |
|--|-----------|---------------|------------------------|
| B. Alloy steels | | | |
| Chromium-vanadium | A231 | 3.1 | 0–425 |
| Good strength, fatigue resistance, impact strength, high-temperature performance; valve-spring quality | | | |
| Chromium-silicon | A401 | 4.0 | 0–475 |
| Very high strength and good fatigue and shock resistance | | | |
| C. Stainless steels | | | |
| Type 302 | A313(302) | 7.6 | <0–550 |
| Very good corrosion resistance and high-temperature performance; nearly nonmagnetic; cold-drawn; types 304 and 316 also fall under this ASTM class and have improved workability but lower strength | | | |
| Type 17-7 PH | A313(631) | 11.0 | 0–600 |
| Good high-temperature performance | | | |
| D. Copper alloys: All have good corrosion resistance and electrical conductivity | | | |
| Spring brass | B134 | High | 0–150 |
| Phosphor bronze | B159 | 8.0 | <0–212 |
| Beryllium copper | B197 | 27.0 | 0–300 |
| E. Nickel-base alloys: All are corrosion-resistant, have good high- and low-temperature properties, and are nonmagnetic or nearly nonmagnetic (trade names of the International Nickel Company) | | | |
| Monel™ | | | –100–425 |
| K-Monel™ | | | –100–450 |
| Inconel™ | | | Up to 700 |
| Inconel-X™ | 44.0 | | Up to 850 |

Sources: References 1, 4, and 5.

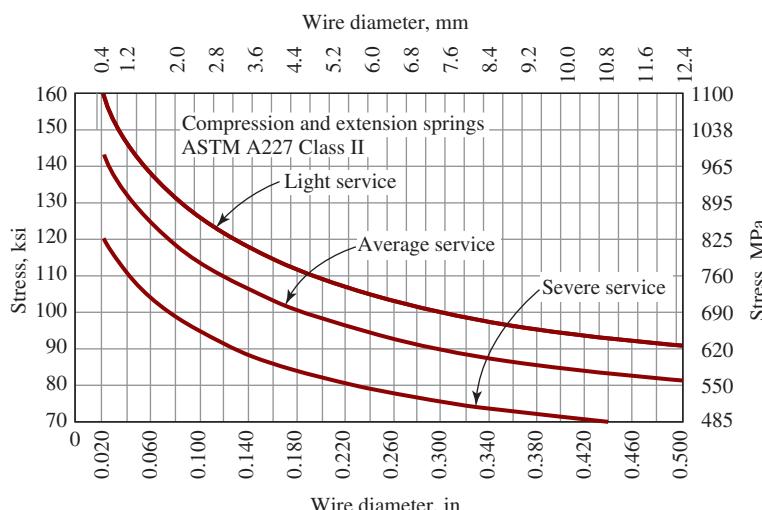


FIGURE 18-8 Design shear stresses for ASTM A227 steel wire, hard-drawn

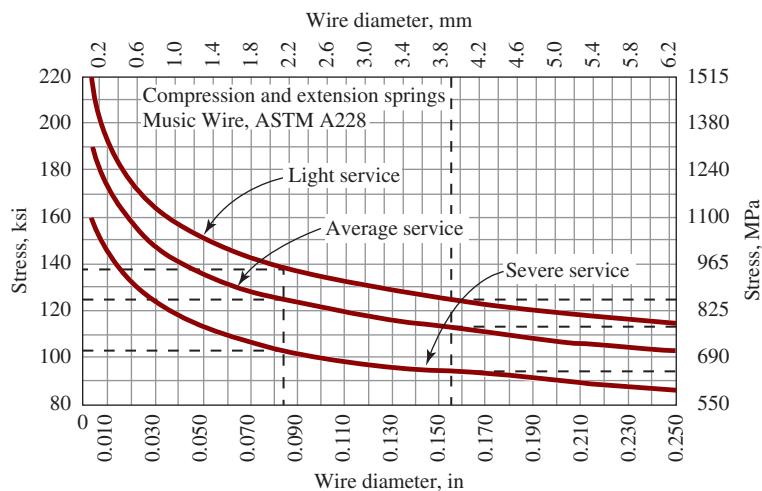


FIGURE 18-9 Design shear stresses for ASTM A228 steel wire (music wire)

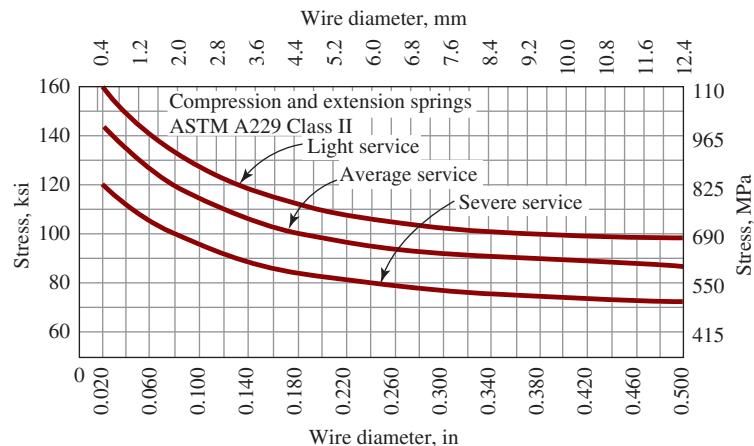


FIGURE 18-10 Design shear stresses for ASTM A229 steel wire, oil-tempered

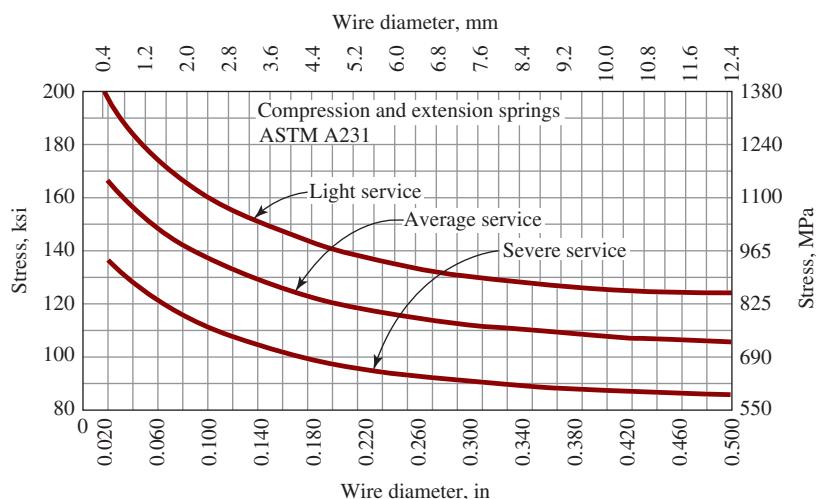


FIGURE 18-11 Design shear stresses for ASTM A231 steel wire, chromium-vanadium alloy, valve-spring quality

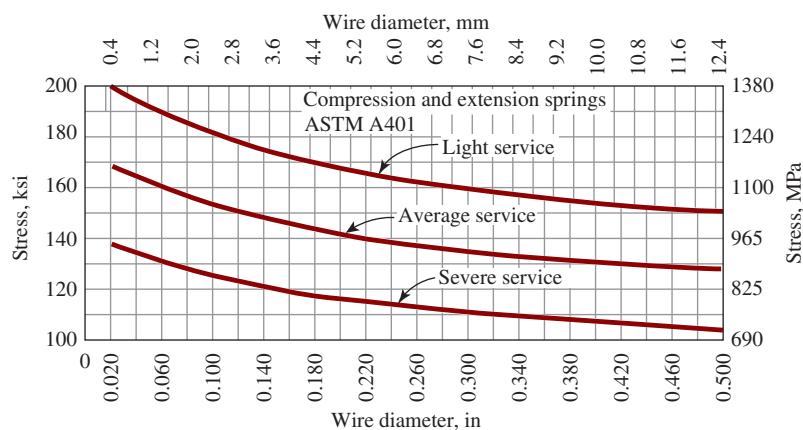


FIGURE 18-12 Design shear stresses for ASTM A401 steel wire, chromium-silicon alloy, oil-tempered

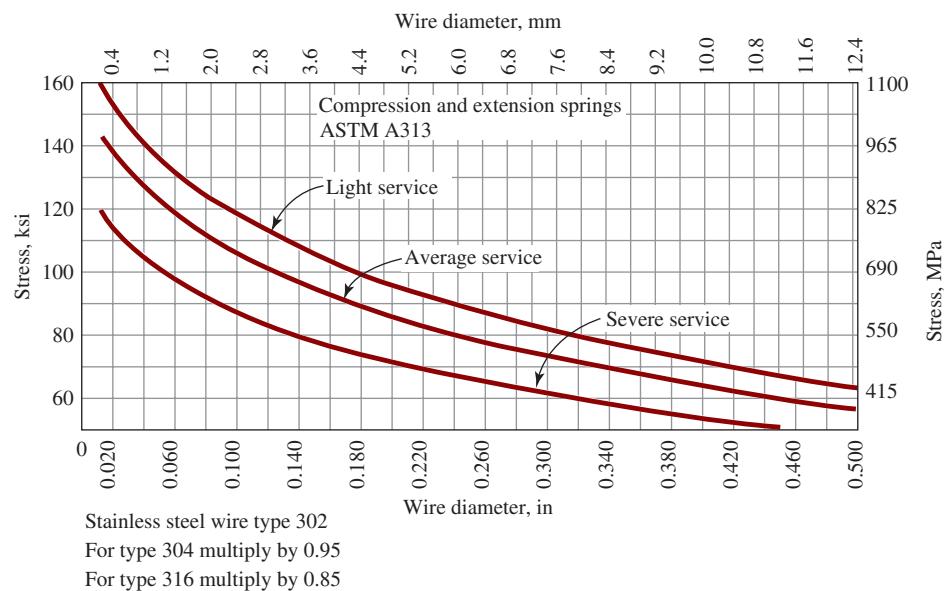


FIGURE 18-13 Design shear stresses for ASTM A313 corrosion-resistant stainless steel wire

18-4 STRESSES AND DEFLECTION FOR HELICAL COMPRESSION SPRINGS

As a compression spring is compressed under an axial load, the wire is twisted. Therefore, the stress developed in the wire is *torsional shear stress*, and it can be derived from the classical equation $\tau = Tc/J$.

When the equation is applied specifically to a helical compression spring, some modifying factors are needed to account for the curvature of the spring wire and for the direct shear stress created as the coils resist the vertical load. Also, it is convenient to express the shear stress in terms of the design variables encountered in springs. The resulting equation for stress is attributed to Wahl.

(See Reference 10.) The maximum shear stress, which occurs at the inner surface of the wire, is

□ Shear Stress in a Spring

$$\tau = \frac{8KFD_m}{\pi D_w^3} = \frac{8KFC}{\pi D_w^2} \quad (18-4)$$

These are two forms of the same equation as the definition of $C = D_m/D_w$ demonstrates. The shear stress for any applied force, F , can be computed. Normally we will be concerned about the stress when the spring is compressed to solid length under the influence of F_s and when the spring is operating at its normal maximum load, F_o . Notice that the stress is inversely proportional to the cube of the wire diameter. This illustrates the great

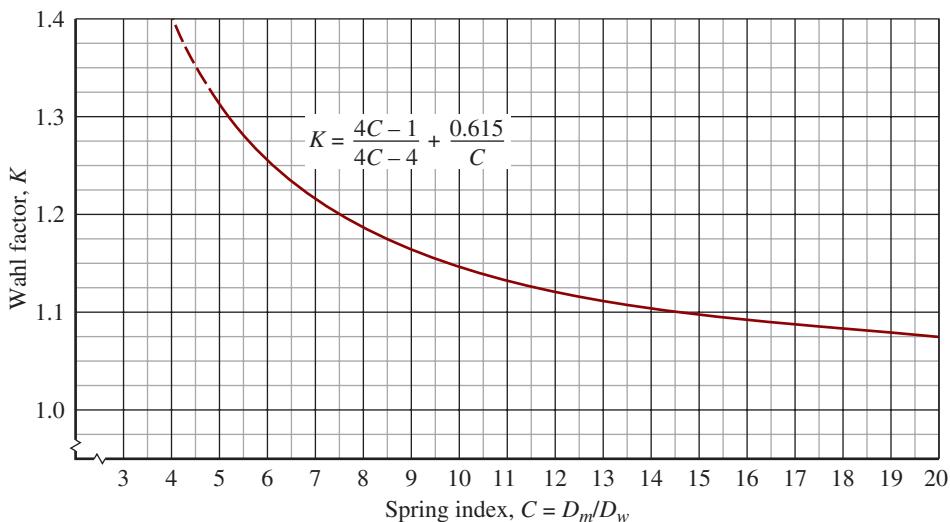


FIGURE 18-14 Wahl factor versus spring index for round wire

effect that variation in the wire size has on the performance of the spring.

The Wahl factor, K , in Equation (18-4) is the term that accounts for the curvature of the wire and the direct shear stress. Analytically, K is related to C :

▷ Wahl Factor

$$K = \frac{4C - 1}{4C - 4} + \frac{0.615}{C} \quad (18-5)$$

Figure 18-14 shows a plot of K versus C for round wire. Recall that $C = 5$ is the recommended minimum value of C . The value of K rises rapidly for $C < 5$.

Deflection

Because the primary manner of loading on the wire of a helical compression spring is torsion, the deflection is computed from the angle of twist formula:

$$\theta = TL/GJ$$

where θ = angle of twist in radians

T = applied torque

L = length of the wire

G = modulus of elasticity of the material in shear

J = polar moment of inertia of the wire

Again, for convenience, we will use a different form of the equation in order to calculate the linear deflection, f , of the spring from the typical design variables of the spring. The resulting equation is

▷ Deflection of a Spring

$$f = \frac{8FD_m^3N_a}{GD_w^4} = \frac{8FC^3N_a}{GD_w} \quad (18-6)$$

Recall that N_a is the number of *active coils*, as discussed in Section 18-3. Table 18-4 lists the values for G for

typical spring materials. Note again, in Equation (18-6), that the wire diameter has a strong effect on the performance of the spring.

Buckling

The tendency for a spring to buckle increases as the spring becomes tall and slender, much as for a column. Figure 18-15 shows plots of the critical ratio of deflection to the free length versus the ratio of free length to the mean diameter for the spring. Three different end conditions are described in the figure. As an example of the use of this figure, consider a spring having squared and ground ends, a free length of 6.0 in, and a mean diameter of 0.75 in. We want to know what deflection would cause the spring to buckle. First compute

$$\frac{L_f}{D_m} = \frac{6.0}{0.75} = 8.0$$

Then, from Figure 18-15, the critical deflection ratio is 0.20. From this we can compute the critical deflection:

$$\frac{f_o}{L_f} = 0.20 \text{ or } f_o = 0.20(L_f) = 0.20(6.0 \text{ in}) = 1.20 \text{ in}$$

That is, if the spring is deflected more than 1.20 in, the spring should buckle.

Additional development and discussion of formulas for stresses and deflection of helical compression springs can be found in References 4 and 6. Reference 3 provides valuable information on the analysis of spring failures.

18-5 ANALYSIS OF SPRING CHARACTERISTICS

This section demonstrates the use of the concepts developed in previous sections to analyze the geometry and the performance characteristics of a given spring. Assume that you have found a spring but there are no

TABLE 18-4 Spring Wire Modulus of Elasticity in Shear (G) and Tension (E)

| Material and ASTM no. | Shear modulus, G | | Tension modulus, E | |
|--------------------------|---------------------|-------|----------------------|-------|
| | (psi) | (GPa) | (psi) | (GPa) |
| Hard-drawn steel: A227 | 11.5×10^6 | 79.3 | 28.6×10^6 | 197 |
| Music wire: A228 | 11.85×10^6 | 81.7 | 29.0×10^6 | 200 |
| Oil-tempered: A229 | 11.2×10^6 | 77.2 | 28.5×10^6 | 196 |
| Chromium-vanadium: A231 | 11.2×10^6 | 77.2 | 28.5×10^6 | 196 |
| Chromium-silicon: A401 | 11.2×10^6 | 77.2 | 29.5×10^6 | 203 |
| Stainless steels: A313 | | | | |
| Types 302, 304, 316 | 10.0×10^6 | 69.0 | 28.0×10^6 | 193 |
| Type 17-7 PH | 10.5×10^6 | 72.4 | 29.5×10^6 | 203 |
| Spring brass: B134 | 5.0×10^6 | 34.5 | 15.0×10^6 | 103 |
| Phosphor bronze: B159 | 6.0×10^6 | 41.4 | 15.0×10^6 | 103 |
| Beryllium copper: B197 | 7.0×10^6 | 48.3 | 17.0×10^6 | 117 |
| Monel and K-Monel | 9.5×10^6 | 65.5 | 26.0×10^6 | 179 |
| Inconel and Inconel-X | 10.5×10^6 | 72.4 | 31.0×10^6 | 214 |

Note: Data are average values. Slight variations with wire size and treatment may occur.

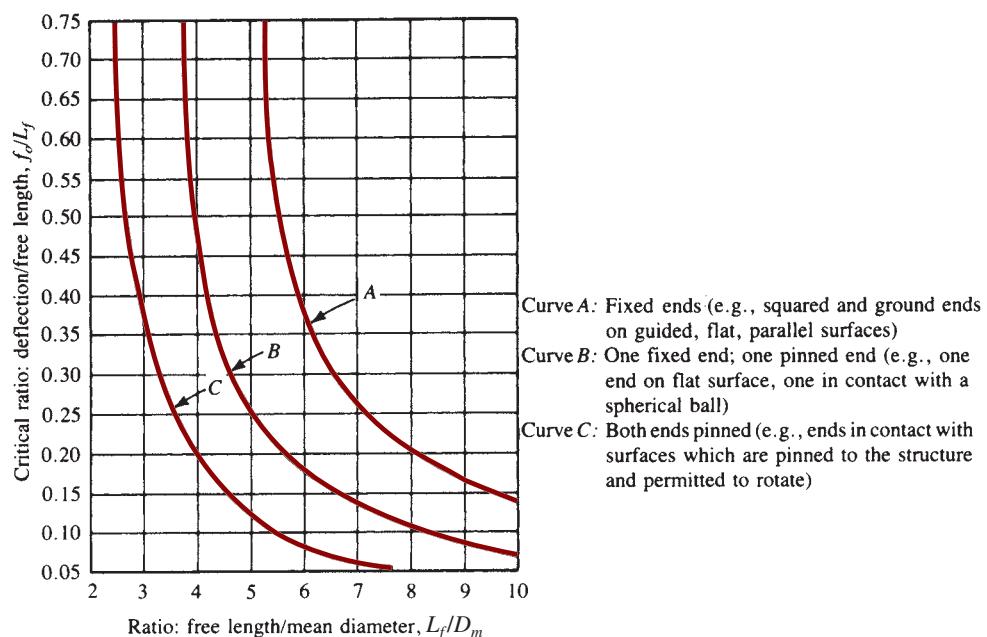


FIGURE 18-15 Spring buckling criteria. If the actual ratio of f_o/L_f is greater than the critical ratio, the spring will buckle at operating deflection.

performance data available for it. By making a few measurements and computations, you should be able to determine those characteristics. One piece of information you *would* have to know is the material from which the

spring is made so that you could evaluate the acceptability of calculated stress levels.

The method of analysis is presented in Example Problem 18-1.

**Example Problem
18–1**

A spring is known to be made from music wire, ASTM A228 steel, but no other data are known. You are able to measure the following features using simple measurement tools:

- Free length = $L_f = 1.75$ in
- Outside diameter = $OD = 0.561$ in
- Wire diameter = $D_w = 0.055$ in
- The ends are squared and ground.
- The total number of coils is 10.0.

This spring will be used in an application where the normal operating load is to be 14.0 lb. Approximately 300 000 cycles of loading are expected.

For this spring, compute and/or do the following:

1. The music wire gage number, mean diameter, inside diameter, spring index, and Wahl factor
2. The expected stress at the operating load of 14.0 lb
3. The deflection of the spring under the 14.0-lb load
4. The operating length, solid length, and spring rate
5. The force on the spring when it is at its solid length and the corresponding stress at solid length
6. The design stress for the material; then compare it with the actual operating stress
7. The maximum permissible stress; then compare it with the stress at solid length
8. Check the spring for buckling and coil clearance
9. Specify a suitable diameter for a hole in which to install the spring

Solution The solution is presented in the same order as the requested items just listed. The formulas used are found in the preceding sections of this chapter.

Step 1. The wire is 24-gage music wire (Table 18–2). Thus,

$$D_m = OD - D_w = 0.561 - 0.055 = 0.506 \text{ in}$$

$$ID = D_m - D_w = 0.506 - 0.055 = 0.451 \text{ in}$$

$$\text{Spring index} = C = D_m/D_w = 0.506/0.055 = 9.20$$

$$\text{Wahl factor} = K = (4C - 1)/(4C - 4) + 0.615/C$$

$$K = [4(9.20) - 1]/[4(9.20) - 4] + 0.615/9.20 = 1.158$$

$$K = 1.158$$

Step 2. Stress in spring at $F = F_o = 14.0$ lb [Equation (18–4)]:

$$\tau_o = \frac{8KF_oC}{\pi D_w^2} = \frac{8(1.158)(14.0)(9.20)}{\pi(0.055)^2} = 125\,560 \text{ psi}$$

Step 3. Deflection at operating force [Equation (18–6)]:

$$f_o = \frac{8F_oC^3N_a}{GD_w} = \frac{8(14.0)(9.20)^3(8.0)}{(11.85 \times 10^6)(0.055)} = 1.071 \text{ in}$$

Note that the number of active coils for a spring with squared and ground ends is $N_a = N - 2 = 10.0 - 2 = 8.0$. Also, the spring wire modulus, G , was found in Table 18–4. The value of f_o is the deflection from free length to the operating length.

Step 4. Operating length: We compute operating length as

$$L_o = L_f - f_o = 1.75 - 1.071 = 0.679 \text{ in}$$

$$\text{Solid length} = L_s = D_w(N) = 0.055(10.0) = 0.550 \text{ in}$$

Spring Index: We use Equation (18–1).

$$k = \frac{\Delta F}{\Delta L} = \frac{F_o}{L_f - L_o} = \frac{F_o}{f_o} = \frac{14.0 \text{ lb}}{1.071 \text{ in}} = 13.07 \text{ lb/in}$$

Step 5. We can find the force at solid length by multiplying the spring rate times the deflection from the free length to the solid length. Then

$$F_s = k(L_f - L_s) = (13.07 \text{ lb/in})(1.75 \text{ in} - 0.550 \text{ in}) = 15.69 \text{ lb}$$

The stress at solid length, τ_s , could be found from Equation (18–4), using $F = F_s$. However, an easier method is to recognize that the stress is directly proportional to the force on the spring and that all of the other data in the formula are the same as those used to compute the stress under the operating force, F_o . We can then use the simple proportion

$$\tau_s = \tau_0(F_s/F_o) = (125\,560 \text{ psi})(15.69/14.0) = 140\,700 \text{ psi}$$

Step 6. Design stress, τ_d : From Figure 18–9, in the graph of design stress versus spring wire diameter for ASTM A228 steel, we can use the *average service* curve based on the expected number of cycles of loading. We read $\tau_d = 135\,000$ psi for the 0.055-in wire. Because the actual operating stress, τ_o , is less than this value, it is satisfactory.

Step 7. Maximum allowable stress, τ_{\max} : It is recommended that the *light service* curve be used to determine this value. For $D_w = 0.055$, $\tau_{\max} = 150\,000$ psi. The actual expected maximum stress that occurs at solid length ($\tau_s = 140\,700$ psi) is less than this value, and therefore the design is satisfactory with regard to stresses.

Step 8. Buckling: To evaluate buckling, we must compute

$$L_f/D_m = (1.75 \text{ in})/(0.506 \text{ in}) = 3.46$$

Referring to Figure 18–15 and using curve *A* for squared and ground ends, we see that the critical deflection ratio is very high and that buckling should not occur. In fact, for any value of $L_f/D_m < 5.2$, we can conclude that buckling will not occur.

Coil clearance, cc : We evaluate cc as follows:

$$cc = (L_o - L_s)/N_a = (0.679 - 0.550)/(8.0) = 0.016 \text{ in}$$

Comparing this to the recommended minimum clearance of

$$D_w/10 = (0.055 \text{ in})/10 = 0.0055 \text{ in}$$

we can judge this clearance to be acceptable.

Step 9. Hole diameter: It is recommended that the hole into which the spring is to be installed should be greater in diameter than the *OD* of the spring by the amount of $D_w/10$. Then

$$D_{\text{hole}} > OD + D_w/10 = 0.561 \text{ in} + (0.055 \text{ in})/10 = 0.567 \text{ in}$$

A diameter of 5/8 in (0.625 in) would be a satisfactory standard size.

This completes the example problem.

18-6 DESIGN OF HELICAL COMPRESSION SPRINGS

The objective of the design of helical compression springs is to specify the geometry for the spring to operate under specified limits of load and deflection, possibly

with space limitations, also. We will specify the material and the type of service by considering the environment and the application.

A typical problem statement follows. Then two solution procedures are shown, and each is implemented with the aid of a spreadsheet.

Example Problem 18-2

A helical compression spring is to exert a force of 8.0 lb when compressed to a length of 1.75 in. At a length of 1.25 in, the force must be 12.0 lb. The spring will be installed in a machine that cycles slowly, and approximately 200 000 cycles total are expected. The temperature will not exceed 200°F. The spring will be installed in a hole having a diameter of 0.75 in.

For this application, specify a suitable material, wire diameter, mean diameter, *OD*, *ID*, free length, solid length, number of coils, and type of end condition. Check the stress at the maximum operating load and at the solid length condition.

The first of two solution procedures will be shown. The numbered steps can be used as a guide for future problems and as a kind of algorithm for the spreadsheet approach that follows the manual solution.

Solution Method 1

The procedure works directly toward the overall geometry of the spring by specifying the mean diameter to meet the space limitations. The process requires that the designer have tables of data available for wire diameters (such as Table 18–2) and graphs of design stresses for the material from which the spring will be made (such as Figures 18–8 through 18–13). We must make an initial estimate for the design stress for the material by consulting the charts of design stress versus wire diameter to make a reasonable choice. In general, more than one trial must be made, but the results of early trials will help you decide the values to use for later trials.

Step 1. Specify a material and its shear modulus of elasticity, G .

For this problem, several standard spring materials can be used. Let's select ASTM A231 chromium-vanadium steel wire, having a value of $G = 11\,200\,000$ psi (see Table 18–4).

Step 2. From the problem statement, identify the operating force, F_o ; the operating length at which that force must be exerted, L_o ; the force at some other length, called the *installed force*, F_i ; and the installed length, L_i .

Remember, F_o is the maximum force that the spring experiences under normal operating conditions. Many times, the second force level is not specified. In that case, let $F_i = 0$, and specify a design value for the free length, L_f , in place of L_i .

For this problem, $F_o = 12.0$ lb; $L_o = 1.25$ in; $F_i = 8.0$ lb; and $L_i = 1.75$ in.

Step 3. Compute the spring rate, k , using Equation (18–1a):

$$k = \frac{F_o - F_i}{L_i - L_o} = \frac{12.0 - 8.0}{1.75 - 1.25} = 8.00 \text{ lb/in}$$

Step 4. Compute the free length, L_f :

$$L_f = L_i + F_i/k = 1.75 \text{ in} + [(8.00 \text{ lb})/(8.00 \text{ lb/in})] = 2.75 \text{ in}$$

The second term in the preceding equation is the amount of deflection from free length to the installed length in order to develop the installed force, F_i . Of course, this step becomes unnecessary if the free length is specified in the original data.

Step 5. Specify an initial estimate for the mean diameter, D_m .

Keep in mind that the mean diameter will be smaller than the *OD* and larger than the *ID*. Judgment is necessary to get started. For this problem, let's specify $D_m = 0.60$ in. This should permit the installation into the 0.75-in-diameter hole and it will be checked later in the problem solution.

Step 6. Specify an initial design stress.

The charts for the design stresses for the selected material can be consulted, considering also the service. In this problem, we should use average service. Then for the ASTM A231 steel, as shown in Figure 18–11, a nominal design stress would be 130 000 psi. This is strictly an estimate based on the strength of the material. The process includes a check on stress later.

Step 7. Compute the trial wire diameter by solving Equation (18–4) for D_w . Notice that everything else in the equation is known except the Wahl factor, K , because it depends on the wire diameter itself. But K varies only little over the normal range of spring indexes, C . From Figure 18–14, note that $K = 1.2$ is a nominal value. This, too, will be checked later. With the assumed value of K , some simplification can be done:

$$D_w = \left[\frac{8KF_oD_m}{\pi\tau_d} \right]^{1/3} = \left[\frac{(8)(1.2)(F_o)(D_m)}{(\pi)(\tau_d)} \right]^{1/3}$$

Combining constants gives

$$D_w = \left[\frac{8KF_oD_m}{\pi\tau_d} \right]^{1/3} = \left[\frac{(3.06)(F_o)(D_m)}{(\tau_d)} \right]^{1/3} \quad (18-7)$$

For this problem,

$$D_w = \left[\frac{(3.06)(F_o)(D_m)}{\tau_d} \right]^{1/3} = \left[\frac{(3.06)(12)(0.6)}{130\,000} \right]^{0.333}$$

$$D_w = 0.0553 \text{ in}$$

Step 8. Select a standard wire diameter from the tables, and then determine the design stress and the maximum allowable stress for the material at that diameter. The design stress will normally be for average service, unless high cycling rates or shock indicate that severe service is warranted. The light service curve should be used with care because it is very near to the yield strength. In fact, we will use the light service curve as an estimate of the maximum allowable stress.

Trial Wire Diameter

For this problem, the next larger standard wire size is 0.0625 in, no. 16 on the U.S. Steel Wire Gage chart. For this size, the curves in Figure 18–11 for ASTM A231 steel wire show the design stress to be approximately 145 000 psi for average service, and the maximum allowable stress to be 170 000 psi from the light service curve.

Step 9. Compute the actual values of C and K , the spring index and the Wahl factor:

$$C = \frac{D_m}{D_w} = \frac{0.60}{0.0625} = 9.60$$

$$K = \frac{4C - 1}{4C - 4} + \frac{0.615}{C} = \frac{4(9.60) - 1}{4(9.60) - 4} + \frac{0.615}{9.60} = 1.15$$

Step 10. Compute the actual expected stress due to the operating force, F_o , from Equation (18–4):

$$\tau_o = \frac{8KF_oD_m}{\pi D_w^3} = \frac{(8)(1.15)(12.0)(0.60)}{(\pi)(0.0625)^3} = 86\,450 \text{ psi}$$

Comparing this with the design stress of 145 000 psi, we see that it is safe.

Step 11. Compute the number of active coils required to give the proper deflection characteristics for the spring. Using Equation (18–6) and solving for N_a , we have

$$f = \frac{8FC^3N_a}{GD_w}$$

▷ **Number of Active Coils**

$$N_a = \frac{fGD_w}{8FC^3} = \frac{GD_w}{8kC^3} \quad (\text{Note: } F/f = k, \text{ the spring rate}) \quad (18-8)$$

Then, for this problem,

$$N_a = \frac{GD_w}{8kC^3} = \frac{(11\,200\,000)(0.0625)}{(8)(8.0)(9.60)^3} = 12.36 \text{ coils}$$

Notice that $k = 8.0$ lb/in is the spring rate. Do not confuse this with K , the Wahl factor.

Step 12. Compute the solid length, L_s ; the force on the spring at solid length, F_s ; and the stress in the spring at solid length, τ_s . This computation will give the maximum stress that the spring will receive.

The solid length occurs when all of the coils are touching, but recall that there are two inactive coils for springs with squared and ground ends. Thus,

$$L_s = D_w(N_a + 2) = 0.0625(14.36) = 0.898 \text{ in}$$

The force at solid length is the product of the spring rate times the deflection to solid length ($L_f - L_s$):

$$F_s = k(L_f - L_s) = (8.0 \text{ lb/in})(2.75 - 0.898) \text{ in} = 14.8 \text{ lb}$$

Because the stress in the spring is directly proportional to the force, a simple method of computing the solid length stress is

$$\tau_s = (\tau_o)(F_s/F_o) = (86\,450 \text{ psi})(14.8/12.0) = 106\,750 \text{ psi}$$

When this value is compared with the maximum allowable stress of 170 000 psi, we see that it is safe, and the spring will not yield when compressed to solid length.

Step 13. Complete the computations of geometric features, and compare them with space and operational limitations:

$$OD = D_m + D_w = 0.60 + 0.0625 = 0.663 \text{ in}$$

$$ID = D_m - D_w = 0.60 - 0.0625 = 0.538 \text{ in}$$

These dimensions are satisfactory for installation in a hole having a diameter of 0.75 in.

Step 14. The tendency to buckle is checked, along with the coil clearance.

Buckling check: $L_f/D_m = 2.75/0.60 = 4.58$

Because this ratio is less than 5.2, buckling will not occur.

Coil clearance: $cc = (L_o - L_s)/N_a = (1.25 - 0.898)/12.36 = 0.029 \text{ in}$

Check: $D_w/10 = 0.0625/10 = 0.00625 \text{ in} < 0.029 \text{ in}$

Coil clearance is acceptable.

$D_{hole} > OD + D_w/10 = 0.663 + 0.00625 = 0.669 \text{ in}$

The specified $D_{hole} = 0.750 \text{ in}$ is acceptable.

This procedure completes the design of one satisfactory spring for this application. It may be desirable to make other trials to attempt to find a more nearly optimum spring.

Spreadsheet for Spring Design Method 1

The 14 steps required to complete one trial design using Method 1 which was demonstrated in Example Problem 18–2 are fairly involved, tedious, and time consuming. Furthermore, it is highly likely that several iterations are required to produce an optimum solution that meets application considerations of the physical size of the spring, acceptable levels of stress under all loads, cost, and other factors. You might want to investigate the use of different materials for the same basic design goals for the forces, lengths, and spring rate.

For these and many other reasons, it is recommended that computer-assisted design approaches be developed to perform most of the calculations and to guide you through the solution procedure. This could be done with a computer program, a spreadsheet, mathematical analysis software, or a programmable calculator. Once written, the program or spreadsheet can be used for any similar design problem in the future by yourself or others.

Figure 18–16 shows one approach using a spreadsheet with the data from Example Problem 18–2 used for illustration. This approach is attractive because the entire solution is presented on one page, and the user is guided through the solution procedure. Let's summarize the use of this spreadsheet. As you read this, you should compare the spreadsheet entries with the details of the solution of Example Problem 18–2. The various formulas used there are programmed into the appropriate cells of the spreadsheet.

1. The process begins, as with virtually any spring design procedure, with the specification of the relationship between force and length for two separate conditions, typically called the *operating force-length* and the *installed force-length*. From these data, the spring rate is effectively specified as well. Sometimes the free length is known, which then equals the installed length, and the installed force equals zero. Also, the designer would know roughly the space into which the spring is to be installed.
2. The heading for the spreadsheet gives a brief overview of the design approach built into Method 1. The designer specifies a target mean diameter for the spring to fit a particular application. The spring material is specified, and the graph of the strength of that material is used as a guide for estimating

the design stress. This requires the user to make a rough estimate also of the wire diameter, but a specific size is not yet chosen. The service (light, average, or severe) must also be specified at this time.

3. The spreadsheet then computes the resulting spring rate, the free length, and a trial wire diameter to produce an acceptable stress. Equation (18–7) is used to compute the wire size.
4. The designer then enters a standard wire size, typically greater than the computed value. Table 18–2 is a listing of standard wire sizes. At this time, also, the designer must look again at the design stress graph for the chosen material and must determine a revised value for the design stress corresponding with the new wire diameter. The maximum allowable stress is also entered, found from the light service curve for the material at the specified wire size.
5. With the data entered, the spreadsheet completes the entire set of remaining calculations. The spring must be manufactured with exactly the specified diameters and number of active coils. The end condition for the spring, from the possibilities shown in Figure 18–3, should also be specified.
6. The designer's task is to evaluate the suitability of the results for basic geometry, stresses, potential for buckling, coil clearance, and installation of the spring into a hole. The **Comments** section to the right includes several prompts. But this is the designer's responsibility: to make judgments and design decisions.

Notice the advantage of using a spreadsheet: The designer does the thinking, and the spreadsheet does the computing. For subsequent design iterations, only the values that change need to be entered. For example, if the designer wants to try a different wire diameter for the same spring material, only the three data values in the section called **Secondary Input Data** need to be changed, and a new result is produced immediately. Many design iterations can be completed in a short time with this approach.

You might see ways to enhance the utility of the spreadsheet, and you are encouraged to do that.

Spreadsheet for Spring Design Method 2

An alternative spring design method is shown in Figure 18–17. This method allows the designer more

| <p style="text-align: center;">Design of helical compression spring—Method 1 Specify mean diameter and design stresses. Compute wire diameter and number of coils.</p> | | |
|--|--|--|
| <p>1. Enter data for forces and lengths. 2. Specify material; shear modulus, G; and an estimate for design stress. 3. Enter trial mean diameter for spring, considering space available. 4. Check computed values for spring rate, free length, and new trial wire diameter. 5. Enter your choice for wire diameter of a standard size. 6. Enter design stress and maximum allowable stress from Figures 18–8 through 18–13 for new D_w.</p> | | |
| Numerical values in italics in shaded areas must be inserted for each problem. | Problem ID: | Example Problem 18–2 |
| Initial Input Data: | | Comments |
| Maximum operating force = Operating length = Installed force = Installed length = Trial mean diameter = Type of spring wire: Shear modulus of elasticity of spring wire = Initial estimate of design stress = | $F_o =$ 12.0 lb $L_o =$ 1.25 in $F_i =$ 8.0 lb $L_i =$ 1.75 in $D_m =$ 0.60 in <i>ASTM A231 steel</i> $G =$ 1.12E + 07 psi $\tau_{di} =$ 130 000 psi | <p>Note: $F_i = 0$, if $L_i =$ free length.</p> <p>See Figures 18–8 to 18–13.</p> <p>From Table 18–4</p> <p>From design stress graph</p> |
| Computed Values: | | |
| Computed spring rate = Computed free length = Computed trial wire diameter = | $k =$ 8.00 lb/in $L_f =$ 2.75 in $D_{wt} =$ 0.055 in | |
| Secondary Input Data: | | |
| Standard wire diameter = Design stress = Maximum allowable stress = | $D_w =$ 0.0625 in $\tau_d =$ 145 000 psi $\tau_{max} =$ 170 000 psi | <p>From Table 18–2</p> <p>From design stress graph</p> <p>Use light service curve.</p> |
| Computed Values: | | |
| Outside diameter = Inside diameter = Number of active coils = Spring index = Wahl factor = Stress at operating force = Solid length = Force at solid length = Stress at solid length = | $D_o =$ 0.663 in $D_i =$ 0.538 in $N_a =$ 12.36 $C =$ 9.60 $K =$ 1.15 $\tau_o =$ 86 459 psi $L_s =$ 0.898 in $F_s =$ 14.82 lb $\tau_s =$ 106 768 psi | <p>Should not be < 5.0</p> <p>Cannot be $> 145 000$</p> <p>Cannot be > 1.25</p> <p>Cannot be $> 170 000$</p> |
| Check Buckling, Coil Clearance, and Hole Size: | | |
| Buckling: Ratio = Coil clearance = If installed in hole, minimum hole diameter = | $L_f/D_m =$ 4.58 $cc =$ 0.029 in $D_{hole} >$ 0.669 in | <p>Check Figure 18–15 if > 5.2.</p> <p>Should be $> 0.00 625$</p> <p>For side clearance</p> |

FIGURE 18–16 Spreadsheet for spring design Method 1 of Example Problem 18–2

freedom in manipulating the parameters. The data used are basically the same as those of Example Problem 18–2 except that there is no requirement for installing the

spring in a certain size hole. We refer to this modified problem statement as Example Problem 18–3.

Example Problem 18–3

The process is similar to that of Method 1, so only the major differences are discussed below. Follow along with the spreadsheet in Figure 18–17 as we describe Method 2, Trials 1 and 2.

Solution Method 2, Trial 1

1. The general procedure is outlined at the top of the spreadsheet. The designer selects a material, estimates the wire diameter as an initial trial, and inputs a corresponding estimate of the design stress.
2. The spreadsheet then computes a new trial wire diameter using a formula derived from the fundamental equation for shear stress in a helical compression spring, Equation (18–4). The development is described here.

$$\tau = \frac{8KFC}{\pi D_w^2} \quad (18-4)$$

Let $F = F_o$ and $\tau = \tau_d$ (the design stress). Solving for the wire diameter gives

$$D_w = \sqrt{\frac{8KF_oC}{\pi\tau_d}} \quad (18-9)$$

The values of K and C are not yet known, but a good estimate for the wire diameter can be computed if the spring index is assumed to be approximately 7.0, a reasonable value. The corresponding value for the Wahl factor is $K = 1.2$, from Equation (18–5). Combining these assumed values with the other constants in the preceding equation gives

$$D_w = \sqrt{21.4(F_o)/(\tau_d)} \quad (18-10)$$

This formula is programmed into the spreadsheet in the cell to the right of the one labeled D_{wt} , the computed trial wire diameter.

3. The designer then enters a standard wire size and determines revised values for the design stress and the maximum allowable stress from the graphs of material properties, Figures 18–8 through 18–13.
4. The spreadsheet then computes the maximum permissible number of active coils for the spring. The logic here is that *the solid length must be less than the operating length*. The solid length is the product of the wire diameter and the total number of coils. For squared and ground ends, this is

$$L_s = D_w(N_a + 2)$$

Note that different relationships are used for the total number of coils for springs with other end conditions. See the discussion “Number of Coils” in Section 18–3. Now letting $L_s = L_o$ as a limit and solving for the number of coils gives

$$(N_a)_{\max} = (L_o - 2D_w)/D_w \quad (18-11)$$

This is the formula programmed into the spreadsheet cell to the right of the one labeled N_{\max} .

5. The designer now has the freedom to choose any number of active coils less than the computed maximum value. Note the effects of that decision. Choosing a small number of coils will provide more clearance between adjacent coils and will use less wire per spring. However, the stresses produced for a given load will be higher, so there is a practical limit. One approach is to try progressively fewer coils until the stress approaches the design stress. Whereas any number of coils can be produced, even fractional numbers, we suggest trying integer values for the convenience of the manufacturer.
6. After the selected number of coils has been entered, the spreadsheet can complete the remaining calculations. One additional new formula is used in this spreadsheet to compute the value of the spring index, C . It is developed from the second form of Equation (18–6) relating the deflection

| <p style="text-align: center;">Design of helical compression spring—Method 2</p> <p style="text-align: center;">Specify wire diameter, design stresses, and number of coils. Compute mean diameter.</p> | | |
|--|-----------------|--------------------------------|
| <ol style="list-style-type: none"> Enter data for forces and lengths. Specify material; shear modulus, G; and an estimate for design stress. Enter trial wire diameter. Check computed values for spring rate, free length, and new trial wire diameter. Enter your choice for wire diameter of a standard size. Enter design stress and maximum allowable stress from Figures 18–8 through 18–13 for new D_w. Check computed maximum number of coils. Enter selected actual number of coils. | | |
| Numerical values in italics in shaded areas must be inserted for each problem. | Problem ID: | Example Problem 18–3, Trial 1: |
| Initial Input Data: | | Comments |
| Maximum operating force = | $F_o =$ | 12.0 lb |
| Operating length = | $L_o =$ | 1.25 in |
| Installed force = | $F_i =$ | 8.0 lb |
| Installed length = | $L_i =$ | 1.75 in |
| Type of spring wire: | ASTM A231 steel | |
| Shear modulus of elasticity of spring wire = | $G =$ | 1.12E + 07 psi |
| Initial estimate of design stress = | $\tau_{di} =$ | 144 000 psi |
| Initial trial wire diameter = | $D_w =$ | 0.06 in |
| Computed Values: | | |
| Computed spring rate = | $k =$ | 8.00 lb/in |
| Computed free length = | $L_f =$ | 2.75 in |
| Computed trial wire diameter = | $D_{wt} =$ | 0.042 in |
| Secondary Input Data: | | |
| Standard wire diameter = | $D_w =$ | 0.0475 in |
| Design stress = | $\tau_d =$ | 149 000 psi |
| Maximum allowable stress = | $\tau_{max} =$ | 174 000 psi |
| Computed: Maximum number of coils = | $N_{max} =$ | 24.32 |
| Input: Number of active coils = | $N_a =$ | 22 |
| Computed Values: | | |
| Spring index = | $C =$ | 7.23 |
| Wahl factor = | $K =$ | 1.21 |
| Mean diameter = | $D_m =$ | 0.343 in |
| Outside diameter = | $D_o =$ | 0.391 in |
| Inside diameter = | $D_i =$ | 0.296 in |
| Solid length = | $L_s =$ | 1.140 in |
| Stress at operating force = | $\tau_o =$ | 118 030 psi |
| Force at solid length = | $F_s =$ | 12.88 lb |
| Strength at solid length = | $\tau_s =$ | 126 685 psi |
| Check Buckling, Coil Clearance, and Hole Size: | | |
| Buckling: Ratio = | $L_f/D_m =$ | 8.01 |
| Coil clearance = | $cc =$ | 0.0050 in |
| If installed in hole, minimum hole diameter = | $D_{hole} >$ | 0.396 in |

FIGURE 18–17 Spreadsheet for spring design Method 2 of Example Problem 18–3, Trial 1

for the spring, f , to a corresponding applied force, F , the value of C , and other parameters that are already known. First we solve for C^3 :

Deflection of a Spring

$$f = \frac{8FD_m^3N_a}{GD_w^4} = \frac{8FC^3N_a}{GD_w}$$

$$C^3 = \frac{fGD_w}{8FN_a}$$

Now notice that we have the force F in the denominator and the corresponding deflection f in the numerator. But the spring rate k is defined as the ratio of F/f . Then we can substitute k into the denominator and solve for C :

$$C = \left[\frac{GD_w}{8kN_a} \right]^{1/3} \quad (18-12)$$

This formula is programmed into the spreadsheet cell to the right of the one labeled $C =$.

7. Recall that C is defined as the ratio, D_m/D_w . We can now solve for the mean diameter:

$$D_m = CD_w$$

This is used to compute the mean diameter in the cell to the right of $D_m =$.

8. The remaining calculations use equations already developed and used earlier. Again, the designer is responsible for evaluating the suitability of the results and for performing any additional iterations to search for an optimum result.

Solution Method 2, Trial 2

Now notice that the solution obtained in Trial 1 and shown in Figure 18–17 is far from optimum. Its free length of 2.75 in is quite long compared with the mean diameter of 0.343 in. The buckling ratio of $L_f/D_m = 8.01$ indicates that the spring is long and slender. Checking Figure 18–15, we can see that buckling is predicted.

One way to work toward a more suitable geometry is to increase the wire diameter and reduce the number of coils. The net result will be a larger mean diameter, improving the buckling ratio.

Figure 18–18 shows the result of several iterations, finally using $D_w = 0.0625$ in (larger than the former value of 0.0475 in) and 16 active coils (down from 22 in the first trial). The buckling ratio is down to 4.99, indicating that buckling is unlikely. The stress at operating force is comfortably lower than the design stress. The other geometrical features also appear to be satisfactory.

This example should demonstrate the value of using spreadsheets or other computer-based computational aids. You should also have a better feel for the kinds of design decisions that can work toward a more optimum design. (See Internet sites 1, 2, and 15 for commercially available spring design software.)

18-7 EXTENSION SPRINGS

Extension springs are designed to exert a pulling force and to store energy. They are made from closely coiled helical coils similar in appearance to helical compression springs. Most extension springs are made with adjacent coils touching in such a manner that an initial force must be applied to separate the coils. Once the coils are separated, the force is linearly proportional to the deflection, as it is for helical compression springs. Figure 18–19 shows a typical extension spring, and Figure 18–20 shows the characteristic type of load-deflection curve. By convention, the initial force is found by projecting the straight line portion of the curve back to zero deflection.

The stresses and deflections for an extension spring can be computed by using the formulas used for compression springs. Equation (18–4) is used for the torsional shear stress, Equation (18–5) for the Wahl factor to account for the curvature of the wire and the direct shear stress, and Equation (18–6) for the deflection characteristics. All coils in an extension spring are active. In addition, since the end loops or hooks deflect, their deflection may affect the actual spring rate.

The initial tension in an extension spring is typically 10% to 25% of the maximum design force. Figure 18–21 shows one manufacturer's recommendation of the preferred torsional stress due to initial tension as a function of the spring index.

End Configurations for Extension Springs

A wide variety of end configurations may be obtained for attaching the spring to mating machine elements, some of which are shown in Figure 18–4. The cost of the spring can be greatly affected by its end type, and

| <p style="text-align: center;">Design of helical compression spring—Method 2</p> <p style="text-align: center;">Specify wire diameter, design stresses, and number of coils. Compute mean diameter.</p> | | |
|--|-----------------|---|
| <ol style="list-style-type: none"> Enter data for forces and lengths. Specify material; shear modulus, G; and an estimate for design stress. Enter trial wire diameter. Check computed values for spring rate, free length, and new trial wire diameter. Enter your choice for wire diameter of a standard size. Enter design stress and maximum allowable stress from Figures 18–8 through 18–13 for new D_w. Check computed maximum number of coils. Enter selected actual number of coils. | | |
| Numerical values in italics in shaded areas must be inserted for each problem. | Problem ID: | <i>Example Problem 18–3, Trial 2: $D_w = 0.0625$</i> |
| Initial Input Data: | | Comments |
| Maximum operating force = $F_o =$ | 12.0 lb | |
| Operating length = $L_o =$ | 1.25 in | |
| Installed force = $F_i =$ | 8.0 lb | |
| Installed length = $L_i =$ | 1.75 in | |
| Type of spring wire: | ASTM A231 steel | |
| Shear modulus of elasticity of spring wire = $G =$ | 1.12E + 07 psi | |
| Initial estimate of design stress = $\tau_{di} =$ | 144 000 psi | |
| Initial trial wire diameter = $D_w =$ | 0.06 in | |
| Computed Values: | | |
| Computed spring rate = $k =$ | 8.00 lb/in | |
| Computed free length = $L_f =$ | 2.75 in | |
| Computed trial wire diameter = $D_{wt} =$ | 0.042 in | |
| Secondary Input Data: | | |
| Standard wire diameter = $D_w =$ | 0.0625 in | From Table 18–2 |
| Design stress = $\tau_d =$ | 142 600 psi | From design stress graph |
| Maximum allowable stress = $\tau_{max} =$ | 167 400 psi | Use light service curve. |
| Computed: Maximum number of active coils = $(N_a)_{max} =$ | 18.00 | |
| Input: Number of active coils = $N_a =$ | 16 | Suggest using an integer. |
| Computed Values: | | |
| Spring index = $C =$ | 8.81 | Should not be < 5.0 |
| Wahl factor = $K =$ | 1.17 | |
| Mean diameter = $D_m =$ | 0.551 in | |
| Outside diameter = $D_o =$ | 0.613 in | |
| Inside diameter = $D_i =$ | 0.488 in | |
| Solid length = $L_s =$ | 1.125 in | Cannot be > 1.25 |
| Stress at operating force = $\tau_o =$ | 80 341 psi | Cannot be > 142 600 |
| Force at solid length = $F_s =$ | 13.00 lb | |
| Stress at solid length = $\tau_s =$ | 87 036 psi | Cannot be > 167 400 |
| Check Buckling, Coil Clearance, and Hole Size: | | |
| Buckling: Ratio = $L_f/D_m =$ | 4.99 | Check Figure 18–15 if > 5.2. |
| Coil clearance = $cc =$ | 0.0078 in | Should be > 0.00625 |
| If installed in hole, minimum hole diameter = $D_{hole} >$ | 0.619 in | For side clearance |

FIGURE 18–18 Spreadsheet for spring design Method 2 of Example Problem 18–3, Trial 2

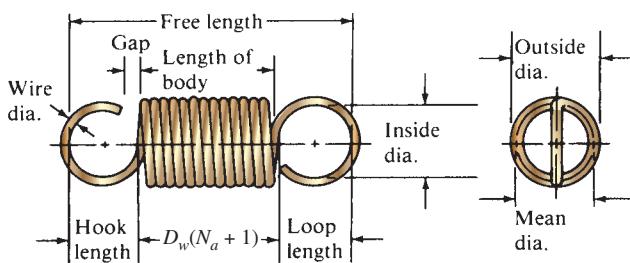


FIGURE 18-19 Extension spring

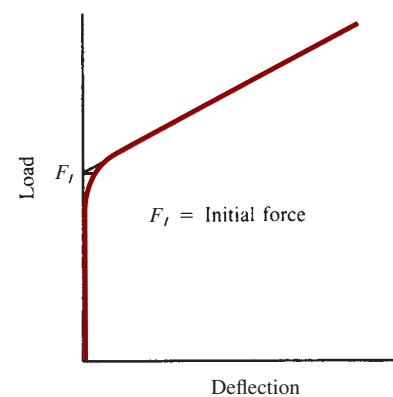


FIGURE 18-20 Load-deflection curve for an extension spring

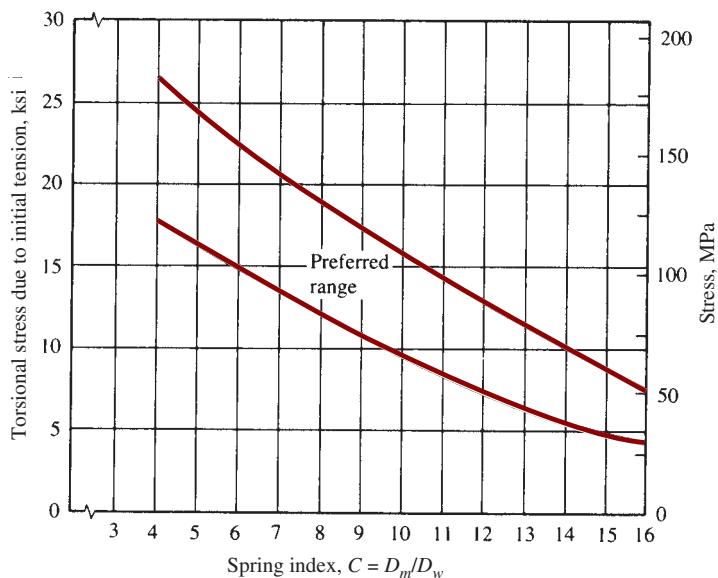


FIGURE 18-21 Recommended torsional shear stress in an extension spring due to initial tension (Data from Associated Spring, Barnes Group, Inc.)

it is recommended that the manufacturer be consulted before the ends are specified.

Frequently, the weakest part of an extension spring is its end, especially in fatigue loading cases. The loop end shown in Figure 18-22, for example, has a high

bending stress at point *A* and a torsional shear stress at point *B*. Approximations for the stresses at these points can be computed as follows:

Bending Stress at *A*

$$\sigma_A = \frac{16D_mF_oK_1}{\pi D_w^3} + \frac{4F_o}{\pi D_w^2} \quad (18-13)$$

$$K_1 = \frac{4C_1^2 - C_1 - 1}{4C_1(C_1 - 1)} \quad (18-14)$$

$$C_1 = 2R_1/D_w$$

Torsional Stress at *B*

$$\tau_B = \frac{8D_mF_oK_2}{\pi D_w^3} \quad (18-15)$$

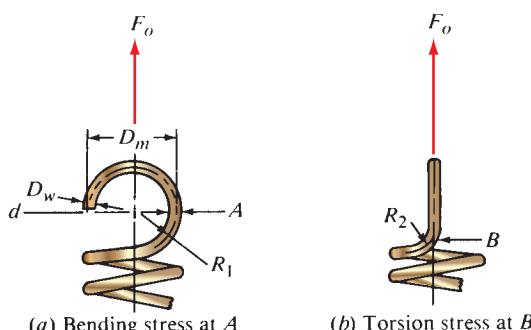


FIGURE 18-22 Stresses in ends of extension spring

$$K_2 = \frac{4C_2 - 1}{4C_2 - 4} \quad (18-16)$$

$$C_2 = 2R_2/D_w$$

The ratios C_1 and C_2 relate to the curvature of the wire and should be large, typically greater than 4, to avoid high stresses.

Example Problem

18-4

A helical extension spring is to be installed in a latch for a large, commercial laundry machine. When the latch is closed, the spring must exert a force of 16.25 lb at a length between attachment points of 3.50 in. As the latch is opened, the spring is pulled to a length of 4.25 in with a maximum force of 26.75 lb. An outside diameter of 5/8 in (0.625 in) is desired. The latch will be cycled only about 10 times per day, and thus the design stress will be based on average service. Use ASTM A227 steel wire. Design the spring.

Solution

As before, the suggested design procedure will be given as numbered steps, followed by the calculations for this set of data.

Step 1. Assume a trial mean diameter and a trial design stress for the spring.

Let the mean diameter be 0.500 in. For ASTM A227 wire under average service, a design stress of 110 000 psi is reasonable (from Figure 18-8).

Step 2. Compute a trial wire diameter from Equation (18-4) for the maximum operating force, the assumed mean diameter and design stress, and an assumed value for K of about 1.20.

$$D_w = \left[\frac{8KF_oD_m}{\pi\tau_d} \right]^{1/3} = \left[\frac{(8)(1.20)(26.75)(0.50)}{(\pi)(110\,000)} \right]^{1/3} = 0.072 \text{ in}$$

A standard wire size in the U.S. Steel Wire Gage system is available in this size. Use 15-gage wire.

Step 3. Determine the actual design stress for the selected wire size.

From Figure 18-8, at a wire size of 0.072 in, the design stress is 120 000 psi.

Step 4. Compute the actual values for outside diameter, mean diameter, inside diameter, spring index, and the Wahl factor, K . These factors are the same as those defined for helical compression springs.

Let the outside diameter be as specified, 0.625 in. Then

$$D_m = OD - D_w = 0.625 - 0.072 = 0.553 \text{ in}$$

$$ID = OD - 2D_w = 0.625 - 2(0.072) = 0.481 \text{ in}$$

$$C = D_m/D_w = 0.553/0.072 = 7.68$$

$$K = \frac{4C - 1}{4C - 4} + \frac{0.615}{C} = \frac{4(7.68) - 1}{4(7.68) - 4} + \frac{0.615}{7.68} = 1.19$$

Step 5. Compute the actual expected stress in the spring wire under the operating load from Equation (18-4):

$$\tau_o = \frac{8KF_oD_m}{\pi D_w^3} = \frac{8(1.19)(26.75)(0.553)}{\pi(0.072)^3} = 120\,000 \text{ psi} \quad (\text{okay})$$

Step 6. Compute the required number of coils to produce the desired deflection characteristics. Solve Equation (18-6) for the number of coils, and substitute k = force/deflection = F/f :

$$k = \frac{26.75 - 16.25}{4.25 - 3.50} = 14.0 \text{ lb/in}$$

Allowable Stresses for Extension Springs

The torsional shear stress in the coils of the spring and in the end loops can be compared to the curves in Figures 18-8 through 18-13. Some designers reduce these allowable stresses by about 10%. The bending stress in the end loops, such as that from Equation (18-13), should be compared to the allowable bending stresses for torsion springs, as presented in the next section.

$$N_a = \frac{GD_w}{8C^3k} = \frac{(11.5 \times 10^6)(0.072)}{8(7.68)^3(14.0)} = 16.3 \text{ coils}$$

Step 7. Compute the body length for the spring, and propose a trial design for the ends.

$$\text{Body length} = D_w(N_a + 1) = (0.072)(16.3 + 1) = 1.25 \text{ in}$$

Let's propose to use a full loop at each end of the spring, adding a length equal to the *ID* of the spring at each end. Then the total free length is

$$L_f = \text{body length} + 2(\text{ID}) = 1.25 + 2(0.481) = 2.21 \text{ in}$$

Step 8. Compute the deflection from free length to operating length:

$$f_o = L_o - L_f = 4.25 - 2.21 = 2.04 \text{ in}$$

Step 9. Compute the initial force in the spring at which the coils just begin to separate. This is done by subtracting the amount of force due to the deflection, f_o :

$$F_I = F_o - kf_o = 26.75 - (14.0)(2.04) = -1.81 \text{ lb}$$

The negative force resulting from a free length that is too small for the specified conditions is clearly impossible.

Let's try $L_f = 2.50$ in, which will require a redesign of the end loops. Then

$$f_o = 4.25 - 2.50 = 1.75 \text{ in}$$

$$F_I = 26.75 - (14.0)(1.75) = 2.25 \text{ lb (reasonable)}$$

Step 10. Compute the stress in the spring under the initial tension, and compare it with the recommended levels in Figure 18–21.

Because the stress is proportional to the load,

$$\tau_I = \tau_o(F_I/F_o) = (120\,000)(2.25/26.75) = 10\,100 \text{ psi}$$

For $C = 7.68$, this stress is slightly below the preferred range from Figure 18–21. Some small adjustments could be made to bring the torsional shear stress due to initial tension within the desired range, producing a more optimal design. Making and testing a prototype may also be done.

The final configuration of the end loops must also be completed and analyzed for stress.

18-8 HELICAL TORSION SPRINGS

Many machine elements require a spring that exerts a rotational moment, or torque, instead of a push or a pull force. The helical torsion spring is designed to satisfy this requirement. The spring has the same general appearance as either the helical compression or the extension spring, with round wire wrapped into a cylindrical shape. Usually the coils are close together but with a small clearance, allowing no initial tension in the spring as there is for extension springs. Figure 18–23 shows a few examples of torsion springs with a variety of end treatments.

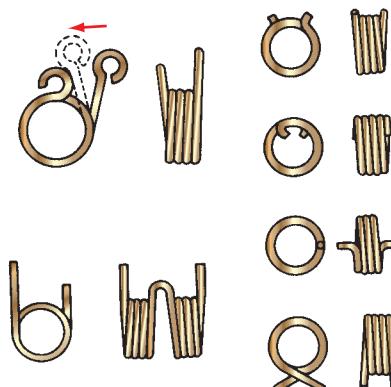


FIGURE 18-23 Torsion springs showing a variety of end types

The familiar clip-type clothespin uses a torsion spring to provide the gripping force. Many cabinet doors are designed to close automatically under the influence of a torsion spring. Some timers and switches use torsion springs to actuate mechanisms or close contacts. Torsion springs often provide counterbalancing of machine elements that are mounted to a hinged plate.

The following are some of the special features and design guides for torsion springs:

1. The moment applied to a torsion spring should always act in a direction that causes the coils to wind more tightly, rather than to open the spring up. This takes advantage of favorable residual stresses in the wire after forming.
2. In the free (no-load) condition, the definition of mean diameter, outside diameter, inside diameter, wire diameter, and spring index are the same as those used for compression springs.
3. As the load on a torsion spring increases, its mean diameter, D_m , decreases, and its length, L , increases, according to the following relations:

$$D_m = D_{mI}N_a/(N_a + \theta) \quad (18-17)$$

where D_{mI} = initial mean diameter at the free condition

N_a = number of active coils in the spring (to be defined later)
 θ = angular deflection of the spring from the free condition, expressed in revolutions or a fraction of a revolution

$$L = D_w(N_a + 1 + \theta) \quad (18-18)$$

This equation assumes that all coils are touching. If any clearance is provided, as is often desirable to reduce friction, a length of N_a times the clearance must be added.

4. Torsion springs must be supported at three or more points. They are usually installed around a rod to provide location and to transfer reaction forces to the structure. The rod diameter should be approximately 90% of the ID of the spring at the maximum load.

Stress Calculations

The stress in the coils of a helical torsion spring is *bending stress* created because the applied moment tends to bend each coil into a smaller diameter. Thus, the stress is computed from a form of the flexure formula, $\sigma = Mc/I$, modified to account for the curved wire. Also, because most torsion springs are made from round wire, the section modulus I/c is $S = \pi D_w^3/32$. Then

$$\sigma = \frac{McK_b}{I} = \frac{MK_b}{S} = \frac{MK_b}{\pi D_w^3/32} = \frac{32MK_b}{\pi D_w^3} \quad (18-19)$$

K_b is the curvature correction factor and is reported by Wahl (see Reference 10) to be

$$K_b = \frac{4C^2 - C - 1}{4C(C - 1)} \quad (18-20)$$

where C is the spring index

Deflection, Spring Rate, and Number of Coils

The basic equation governing deflection is

$$\theta' = ML_w/EI$$

where θ' = angular deformation of the spring in radians (rad)

M = applied moment, or torque

L_w = length of wire in the spring

E = tensile modulus of elasticity

I = moment of inertia of the spring wire

We can substitute equations for L_w and I and convert θ' (radians) to θ (revolutions) to produce a more convenient form for application to torsion springs:

$$\theta = \frac{ML_w}{EI} = \frac{M(\pi D_m N_a)}{E(\pi D_w^4/64)} \frac{1 \text{ rev}}{2\pi \text{ rad}} = \frac{10.2 M D_m N_a}{E D_w^4} \quad (18-21)$$

To compute the spring rate, k_θ (moment per revolution), solve for M/θ :

$$k_\theta = \frac{M}{\theta} = \frac{ED_w^4}{10.2 D_m N_a} \quad (18-22)$$

Friction between coils and between the ID of the spring and the guide rod may decrease the rate slightly from this value.

The number of coils, N_a , is composed of a combination of the number of coils in the body of the spring, called N_b , and the contribution of the ends as they are subjected to bending, also. Calling N_e the contribution of the ends having lengths L_1 and L_2 , we have

$$N_e = (L_1 + L_2)/(3\pi D_m) \quad (18-23)$$

Then compute $N_a = N_b + N_e$.

Design Stresses

Because the stress in a torsion spring is bending and not torsional shear, the design stresses are different from those used for compression and extension springs. Figures 18–24 through 18–29 include six graphs of the design stress versus wire diameter for the same alloys used earlier for compression springs.

Design Procedure for Torsion Springs

A general procedure for designing torsion springs is presented and illustrated with Example Problem 18–5.

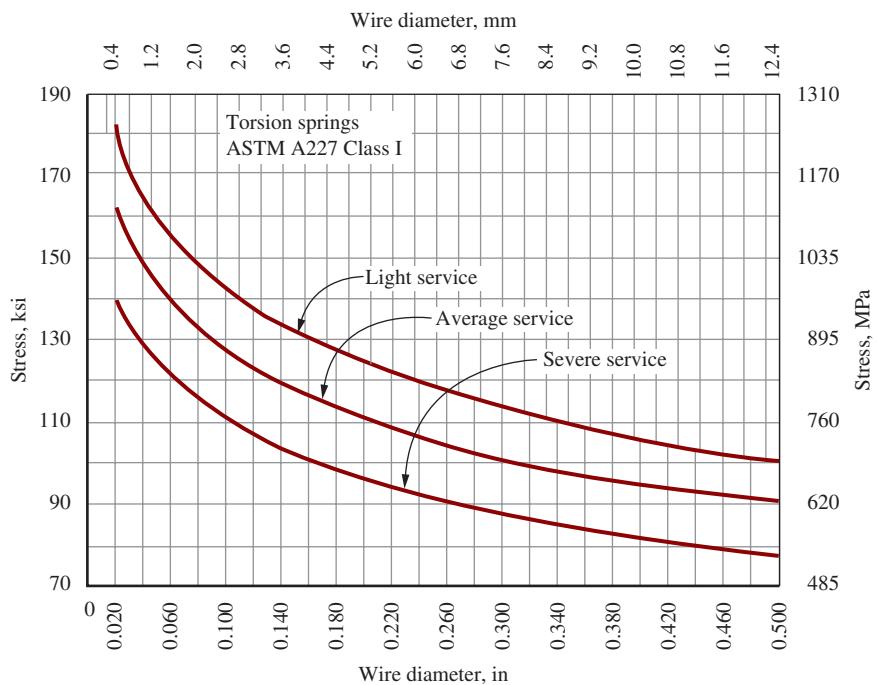


FIGURE 18-24 Design bending stresses for torsion springs ASTM A227 steel wire, hard-drawn

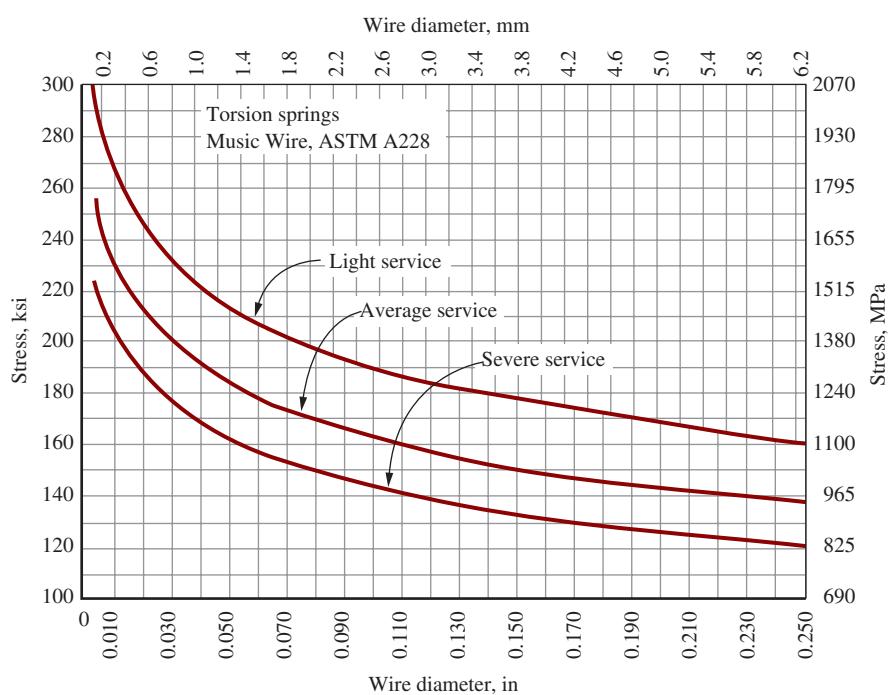


FIGURE 18-25 Design bending stresses for torsion springs ASTM A228 music wire

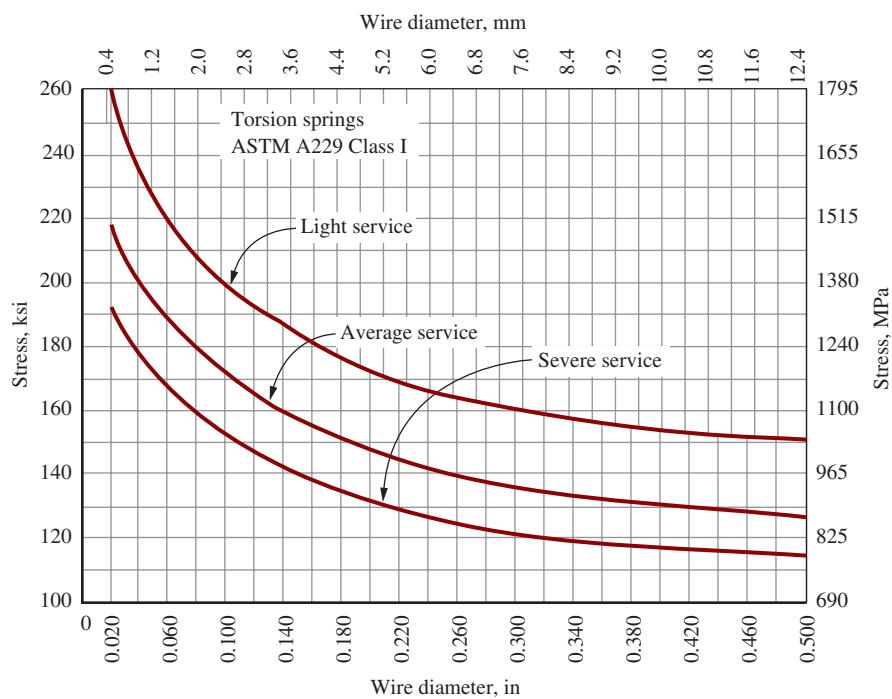


FIGURE 18–26 Design bending stresses for torsion springs ASTM A229 steel wire, oil-tempered, MB grade

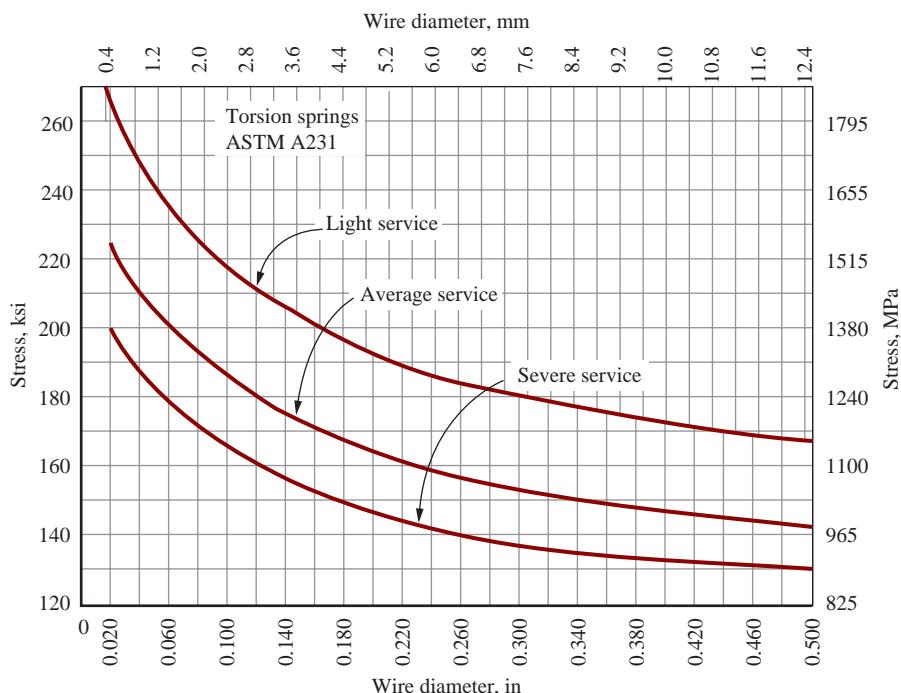


FIGURE 18–27 Design bending stresses for torsion springs ASTM A231 steel wire, chromium-vanadium alloy, valve-spring quality

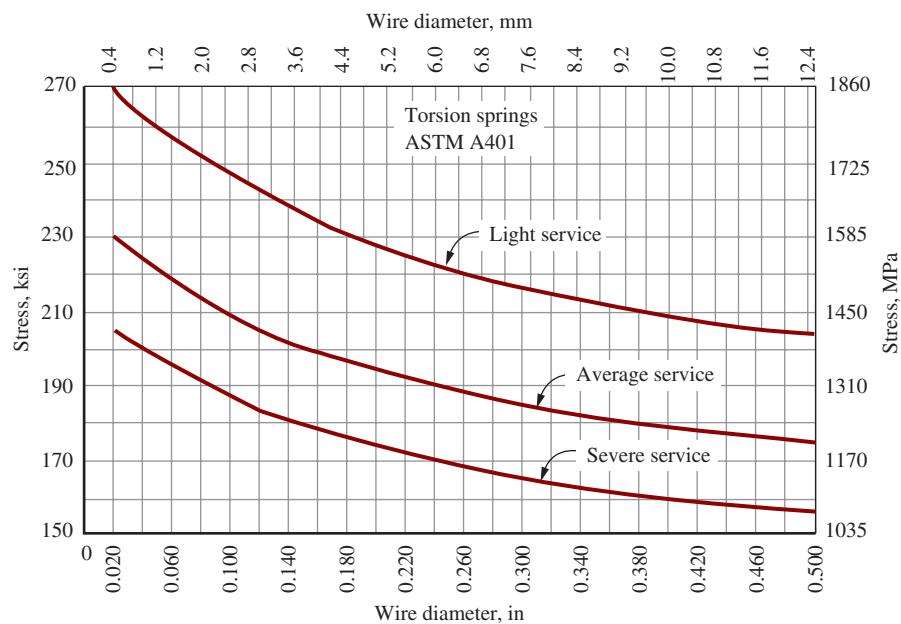


FIGURE 18–28 Design bending stresses for torsion springs ASTM A401 steel wire, chromium-silicon alloy, oil-tempered

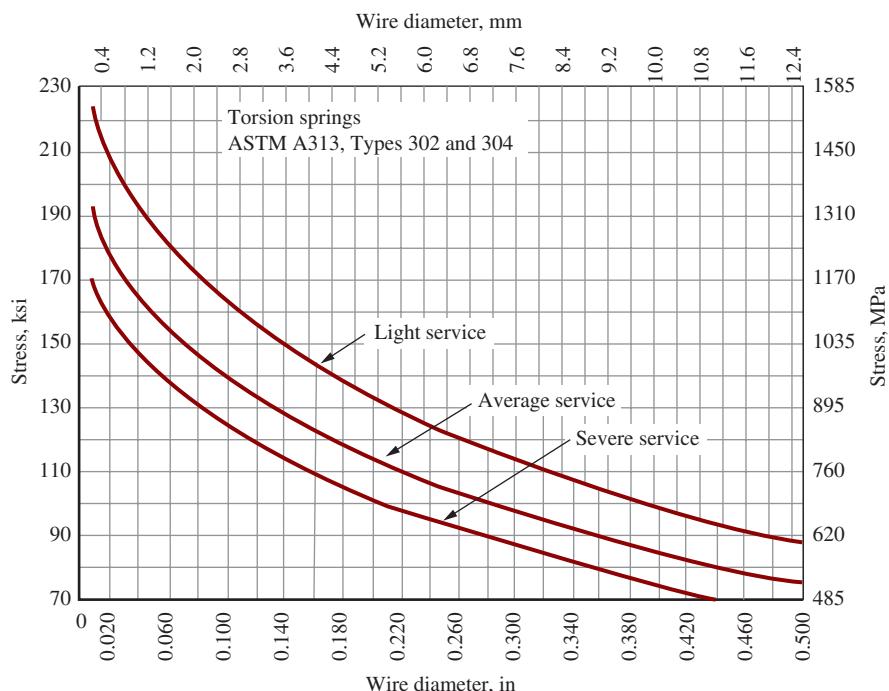


FIGURE 18–29 Design bending stresses for torsion springs ASTM A313 stainless steel wire, types 302 and 304, corrosion-resistant

**Example Problem
18-5**

A timer incorporates a mechanism to close a switch after the timer rotates one complete revolution. The switch contacts are actuated by a torsion spring that is to be designed. A cam on the timer shaft slowly moves a lever attached to one end of the spring to a point where the maximum torque on the spring is 3.00 lb·in. At the end of the revolution, the cam permits the lever to rotate 60° suddenly with the motion produced by the energy stored in the spring. At this new position, the torque on the spring is 1.60 lb·in. Because of space limitations, the *OD* of the spring should not be greater than 0.50 in, and the length should not be greater than 0.75 in. Use music wire, ASTM A228 steel wire. The number of cycles of the spring will be moderate, so use design stresses for average service.

Solution

Step 1. Assume a trial value for the mean diameter and an estimate for the design stress.

Let's use a mean diameter of 0.400 in and estimate the design stress for A228 music wire, average service, to be 180 000 psi (Figure 18-25).

Step 2. Solve Equation (18-19) for the wire diameter, compute a trial size, and select a standard wire size. Let $K_b = 1.15$ be an estimate. Also use the largest applied torque:

$$D_w = \left[\frac{32MK_b}{\pi\sigma_d} \right]^{1/3} = \left[\frac{32(3.0)(1.15)}{\pi(180\,000)} \right]^{1/3} = 0.058 \text{ in}$$

From Table 18-2, we can choose 25-gage music wire with a diameter of 0.059 in. For this size wire, the actual design stress for average service is 178 000 psi.

Step 3. Compute the *OD*, *ID*, spring index, and the new K_b :

$$OD = D_m + D_w = 0.400 + 0.059 = 0.459 \text{ in} \quad (\text{okay})$$

$$ID = D_m - D_w = 0.400 - 0.059 = 0.341 \text{ in}$$

$$C = D_m/D_w = 0.400/0.059 = 6.78$$

$$K_b = \frac{4C^2 - C - 1}{4C(C - 1)} = \frac{4(6.78)^2 - 6.78 - 1}{4(6.78)(6.78 - 1)} = 1.123$$

Step 4. Compute the actual expected stress from Equation (18-19):

$$\sigma = \frac{32MK_b}{\pi D_w^3} = \frac{32(3.0)(1.123)}{(\pi)(0.059)^3} = 167\,000 \text{ psi} \quad (\text{okay})$$

Step 5. Compute the spring rate from the given data.

The torque exerted by the spring decreases from 3.00 to 1.60 lb·in as the spring rotates 60°. Convert 60° to a fraction of a revolution (rev):

$$\theta = \frac{60}{360} = 0.167 \text{ rev}$$

$$k_\theta = \frac{M}{\theta} = \frac{3.00 - 1.60}{0.167} = 8.40 \text{ lb}\cdot\text{in}/\text{rev}$$

Step 6. Compute the required number of coils by solving for N_a from Equation (18-22):

$$N_a = \frac{ED_w^4}{10.2D_m k_\theta} = \frac{(29 \times 10^6)(0.059)^4}{(10.2)(0.400)(8.40)} = 10.3 \text{ coils}$$

Step 7. Compute the equivalent number of coils due to the ends of the spring from Equation (18-23).

This requires some design decisions. Let's use straight ends, 2.0 in long on one side and 1.0 in long on the other. These ends will be attached to the structure of the timer during operation. Then

$$N_e = (L_1 + L_2)/(3\pi D_m) = (2.0 + 1.0)/[3\pi(0.400)] = 0.80 \text{ coil}$$

Step 8. Compute the required number of coils in the body of the spring:

$$N_b = N_a - N_e = 10.3 - 0.8 = 9.5 \text{ coils}$$

Step 9. Complete the geometric design of the spring, including the size of the rod on which it will be mounted.

We first need the total angular deflection for the spring from the free condition to the maximum load. In this case, we know that the spring rotates 60° during operation. To this we must add the rotation from the free condition to the initial torque, $1.60 \text{ lb}\cdot\text{in}$. Thus,

$$\theta_I = M_I/k_\theta = 1.60 \text{ lb}\cdot\text{in}/(8.4 \text{ lb}\cdot\text{in/rev}) = 0.19 \text{ rev}$$

Then the total rotation is

$$\theta_t = \theta_I + \theta = 0.19 + 0.167 = 0.357 \text{ rev}$$

From Equation (18–17), the mean diameter at the maximum operating torque is

$$D_m = D_w N_a / (N_a + \theta_t) = [(0.400)(10.3)] / [(10.3 + 0.357)] = 0.387 \text{ in}$$

The minimum inside diameter is

$$ID_{\min} = D_m - D_w = 0.387 - 0.059 = 0.328 \text{ in}$$

The rod diameter on which the spring is mounted should be approximately 0.90 times this value. Then

$$D_r = 0.9(0.328) = 0.295 \text{ in} \quad (\text{say}, 0.30 \text{ in})$$

The length of the spring, assuming that all coils are originally touching, is computed from Equation (18–18):

$$L_{\max} = D_w(N_a + 1 + \theta_t) = (0.059)(10.3 + 1 + 0.356) = 0.688 \text{ in} \quad (\text{okay})$$

This value for length is the maximum space required in the direction along the axis of the coil when the spring is fully actuated. The specifications allow an axial length of 0.75 in, so this design is acceptable.

18-9 IMPROVING SPRING PERFORMANCE BY SHOT PEENING AND LASER PEENING

The data presented in this chapter for spring wire materials are for commercially available spring wire with good surface finish. Care should be exercised to avoid nicks and scratches on the spring wire that may present sites for initiating fatigue cracks. When forming ends of extension springs or when creating other special geometry, bend radii should be as large as practical to avoid regions of high residual stress after the bending process.

Critical applications may call for the use of *shot peening* or *laser peening* to enhance the fatigue performance of springs and other machine elements. Examples are valve springs for engines, rapid cycling springs in automation equipment, clutch springs, aerospace applications, medical equipment, gears, pump impellers, and military systems. Shot peening is a process in which small hard pellets, called shot, are directed with high velocity at the surface to be treated. The shot causes small local plastic deformation to occur near the surface. The material below the deformed area is subsequently placed in compression as it tries to return the surface to its original shape. High residual compressive stresses are produced at the surface, a favorable situation. Fatigue cracks typically initiate at points of high tensile stress. Therefore, the residual compressive stress tends to preclude such cracks from starting, and the fatigue strength of the material is significantly increased.

Laser peening provides a similar improvement in the fatigue behavior of steels used for springs. A high-energy laser is fired at the surface of the metal spring wire which sends shock waves through the wire. Deep levels of compressive stress remain after laser peening treatment, enhancing the fatigue resistance of the spring, while also reducing corrosion failures.

(See Internet site 12 for more information about both shot peening and laser peening.)

18-10 SPRING MANUFACTURING

Spring forming machines are fascinating examples of high-speed, flexible, programmable, multiaxis, multifunction devices. Internet sites 6 and 7 show images of several types that include wire feeding systems, coiling wheels, and multiple forming heads. The systems use CNC (computer numerical control) to permit rapid setup and adjustment to produce automatically the varied geometries for the body and ends of springs such as those shown in Figures 18–2 and 18–4. Furthermore, other complex shapes can be made for wire forms used for special clips, clamps, and brackets. Several YouTube videos can be found that show spring-making machines in operation.

Accessories to the spring forming machines are as follows:

- Systems to handle the large coils of raw wire, uncoiling it smoothly as needed.
- Straighteners that remove the curved shape of the coiled wire prior to forming the spring.

- Grinders to form the squared and ground ends of compression springs.
- Heat treating ovens that perform stress relieving on springs immediately after forming so they will maintain the specified geometry.
- Shot peening and laser peening equipment as described in Section 18–9.

General information on the spring-making industry can be found at Internet sites 1, 2, and 14. Manufacturers of spring-making equipment are listed at Internet sites 6 and 7.

REFERENCES

1. Associated Spring, Barnes Group, Inc. *Mechanical Springs: Their Engineering and Design*. Bristol, CT: Associated Spring, 2013.
2. Budynas, R. G., and K. J. Nisbett. *Shigley's Mechanical Engineering Design*. 10th ed. New York: McGraw-Hill, 2015.
3. Carlson, H. *Spring Designer's Handbook*. Boca Raton, FL: CRC Press, 1978.
4. Carlson, Harold. *Springs-Troubleshooting and Failure Analysis*. New York: Marcel Dekker, 1980.
5. Oberg, E. et al. *Machinery's Handbook*. 30th ed. New York: Industrial Press, 2015.
6. SAE International. *SAE Manual on Design and Application of Helical and Spiral Springs*. Warrendale, PA: SAE International, 1997.
7. SAE International. *Helical Compression and Extension Springs Terminology*. Warrendale, PA: SAE International, 2006.
8. Spring Manufacturers Institute. *Handbook of Spring Design*. Oak Brook, IL: Spring Manufacturers Institute, 2002.
9. Spring Manufacturers Institute. *Encyclopedia of Spring Design*. Oak Brook, IL: Spring Manufacturers Institute. A set of four volumes are listed below:
 - Fundamentals of Spring Design
 - Compression, Extension, Torsion, and Garter Springs
 - Other Types of Springs
 - Testing and Tolerancing
10. Wahl, A. M. *Mechanical Springs*. 2nd ed. New York: McGraw-Hill, 1963. (Reprinted by Spring Manufacturers Institute in 1991 with permission of McGraw-Hill Book Co.)
11. Institute of Spring Technology. Provides a wide range of research, development, problem solving, failure analysis, training, Spring Calculation software, materials and mechanical testing for the spring industry.
12. Associated Spring–Barnes Group, Inc. A large manufacturer of precision springs for industries such as transportation, telecommunications, electronics, home appliances, and farm equipment. Products include compression springs, extension springs, Belleville washers, retaining rings, and many others.
13. Associated Spring Raymond. Producer of a wide variety of springs and related components. Online catalog of stock compression, extension, and torsion springs, spring washers, gas springs, constant-force springs, retaining springs, and urethane composite springs.
14. Century Spring Corporation. Producer of a wide variety of springs. Online catalog of stock compression, extension, torsion, and die springs, urethane springs, and drawbar springs.
15. Unidex Machinery Company. Manufacturer of CNC spring forming machinery, coiling machines, and related equipment.
16. Oriimec Corporation of America. Manufacturer of multiaxis CNC spring forming machinery, CNC coiling machines, and tension spring machines.
17. American Spring Wire Corporation. Manufacturer of valve grade and commercial quality spring wire in carbon and alloy steels.
18. Mapes Piano String Company. Manufacturer of spring wire, piano wire, and specialty wire for guitar strings. Spring wires include music wire (plain and coated), high tensile missile wire, and stainless steel.
19. Little Falls Alloys, Inc. Manufacturer of nonferrous wire such as beryllium copper, brass, phosphor bronze, nickel, and cupro nickel. Product listings include mechanical and physical properties data.
20. Alloy Wire International. Manufacturer of round and shaped wire in superalloys such as Inconel®, Incoloy®, Monel® (tradenames of Special Metals Group of Companies), hastelloy (trade name of Haynes International), stainless steel, and titanium.
21. Curtiss-Wright Surface Technologies. Provider of shot peening, laser peening, and engineered coating services to aerospace, automotive, chemical, marine, agriculture, mining, and medical industries. Their processes improve the fatigue performance of springs, gears, and many other products. The website includes discussions of the technical aspects of their processes. From the home page, click on *Surface Technologies Division*.
22. Lee Spring Company. Manufacturer of springs and provider of a large selection of stock springs including compression, extension, torsion, plastic compression, Belleville washers, die springs, and custom springs.
23. Wire Links. An online directory for the wire and cable industry. Provides information on suppliers to the wire, cable, and spring-making industry. From the home page, search for *spring wire* under the “Keyword” feature.

INTERNET SITES RELATED TO SPRING DESIGN

1. Spring Manufacturers Institute. Industrial association serving spring manufacturers and providers of technical publications, spring design software, education, and a variety of services. The software called *Advanced Spring Design Software (ASD)* facilitates the design

15. **Spring Pro.** Professional spring design software for the design of compression, extension, torsion, conical, simple beam, and cantilever springs. Integrated use of U.S. and metric units. Generates CAD drawings of the designs.

PROBLEMS

Compression Springs

1. A spring has an overall length of 2.75 in when it is not loaded and a length of 1.85 in when carrying a load of 12.0 lb. Compute its spring rate.
2. A spring is loaded initially with a load of 4.65 lb and has a length of 1.25 in. The spring rate is given to be 18.8 lb/in. What is the free length of the spring?
3. A spring has a spring rate of 76.7 lb/in. At a load of 32.2 lb, it has a length of 0.830 in. Its solid length is 0.626 in. Compute the force required to compress the spring to solid height. Also compute the free length of the spring.
4. A spring has an overall length of 63.5 mm when it is not loaded and a length of 37.1 mm when carrying a load of 99.2 N. Compute its spring rate.
5. A spring is loaded initially with a load of 54.05 N, and it has a length of 39.47 mm. The spring rate is given to be 1.47 N/mm. What is the free length of the spring?
6. A spring has a spring rate of 8.95 N/mm. At a load of 134 N, it has a length of 29.4 mm. Its solid length is 21.4 mm. Compute the force required to compress the spring to solid height. Also compute the free length of the spring.
7. A helical compression spring with squared and ground ends has an outside diameter of 1.100 in, a wire diameter of 0.085 in, and a solid height of 0.563 in. Compute the *ID*, the mean diameter, the spring index, and the approximate number of coils.
8. The following data are known for a spring:
 Total number of coils = 19
 Squared and ground ends
 Outside diameter = 0.560 in
 Wire diameter = 0.059 in (25-gage music wire)
 Free length = 4.22 in
 For this spring, compute the spring index, the pitch, the pitch angle, and the solid length.
9. For the spring of Problem 8, compute the force required to reduce its length to 3.00 in. At that force, compute the stress in the spring. Would that stress be satisfactory for average service?
10. Would the spring of Problems 8 and 9 tend to buckle when compressed to a length of 3.00 in?
11. For the spring of Problem 8, compute the estimate for the outside diameter when it is compressed to solid length.
12. The spring of Problem 8 must be compressed to solid length to install it. What force is required to do this? Compute the stress at solid height. Is that stress satisfactory?
13. A support bar for a machine component is suspended to soften applied loads. During operation, the load on each spring varies from 180 to 220 lb. The position of the rod is to move no more than 0.500 in as the load varies. Design a compression spring for this application. Several million cycles of load application are expected. Use ASTM A229 steel wire.
14. Design a helical compression spring to exert a force of 22.0 lb when compressed to a length of 1.75 in. When its length is 3.00 in, it must exert a force of 5.0 lb. The spring will be cycled rapidly, with severe service required. Use ASTM A401 steel wire.
15. Design a helical compression spring for a pressure relief valve. When the valve is closed, the spring length is 2.0 in, and the spring force is to be 1.50 lb. As the pressure on the valve increases, a force of 14.0 lb causes the valve to open and compress the spring to a length of 1.25 in. Use corrosion-resistant ASTM A313, type 302 steel wire, and design for average service.
16. Design a helical compression spring to be used to return a pneumatic cylinder to its original position after being actuated. At a length of 10.50 in, the spring must exert a force of 60 lb. At a length of 4.00 in, it must exert a force of 250 lb. Severe service is expected. Use ASTM A231 steel wire.
17. Design a helical compression spring using music wire that will exert a force of 14.0 lb when its length is 0.68 in. The free length is to be 1.75 in. Use average service.
18. Design a helical compression spring using stainless steel wire, ASTM A313, type 316, for average service, which will exert a force of 8.00 lb after deflecting 1.75 in from a free length of 2.75 in.
19. Repeat Problem 18 with the additional requirement that the spring must operate around a rod having a diameter of 0.625 in.
20. Repeat Problem 17 with the additional requirement that the spring is to be installed in a hole having a diameter of 0.750 in.
21. Design a helical compression spring using ASTM A231 steel wire for severe service. The spring will exert a force of 45.0 lb at a length of 3.05 in and a force of 22.0 lb at a length of 3.50 in.
22. Design a helical compression spring using round steel wire, ASTM A227. The spring will actuate a clutch and must withstand several million cycles of operation. When the clutch discs are in contact, the spring will have a length of 2.50 in and must exert a force of 20 lb. When the clutch is disengaged, the spring will be 2.10 in long and must exert a force of 35 lb. The spring will be installed around a round shaft having a diameter of 1.50 in.
23. Design a helical compression spring using round steel wire, ASTM A227. The spring will actuate a clutch and must withstand several million cycles of operation. When the clutch discs are in contact, the spring will have a length of 60 mm and must exert a force of 90 N. When the clutch is disengaged, the spring will be 50 mm long and must exert a force of 155 N. The spring will be installed around a round shaft having a diameter of 38 mm.
24. Evaluate the performance of a helical compression spring made from 17-gage ASTM A229 steel wire that has an outside diameter of 0.531 in. It has a free length of 1.25 in, squared and ground ends, and a total of 7.0 coils. Compute the spring rate and the deflection and stress when carrying 10.0 lb. At this stress level, for what service (light, medium, or severe) would the spring be suitable?

Extension Springs

For Problems 25–31, be sure that the stress in the spring under initial tension is within the range suggested in Figure 18–21.

25. Design a helical extension spring using music wire to exert a force of 7.75 lb when the length between attachment points is 2.75 in, and a force of 5.25 lb at a length of 2.25 in. The outside diameter must be less than 0.300 in. Use severe service.
26. Design a helical extension spring for average service using music wire to exert a force of 15.0 lb when the length between attachment points is 5.00 in, and a force of 5.20 lb at a length of 3.75 in. The outside diameter must be less than 0.75 in.
27. Design a helical extension spring for severe service using music wire to exert a maximum force of 10.0 lb at a length of 3.00 in. The spring rate should be 6.80 lb/in. The outside diameter must be less than 0.75 in.
28. Design a helical extension spring for severe service using music wire to exert a maximum force of 10.0 lb at a length of 6.00 in. The spring rate should be 2.60 lb/in. The outside diameter must be less than 0.75 in.
29. Design a helical extension spring for average service using music wire to exert a maximum force of 10.0 lb at a length of 9.61 in. The spring rate should be 1.50 lb/in. The outside diameter must be less than 0.75 in.
30. Design a helical extension spring for average service using stainless steel wire, ASTM A313, type 302, to exert a maximum force of 162 lb at a length of 10.80 in. The spring rate should be 38.0 lb/in. The outside diameter should be approximately 1.75 in.

31. An extension spring has an end similar to that shown in Figure 18–22. The pertinent data are as follows: U.S. Wire Gage no. 19; mean diameter = 0.28 in; $R_1 = 0.25$ in; $R_2 = 0.094$ in. Compute the expected stresses at points A and B in the figure for a force of 5.0 lb. Would those stresses be satisfactory for ASTM A227 steel wire for average service?

Torsion Springs

32. Design a helical torsion spring for average service using stainless steel wire, ASTM A313, type 302, to exert a torque of 1.00 lb · in after a deflection of 180° from the free condition. The outside diameter of the coil should be no more than 0.500 in. Specify the diameter of a rod on which to mount the spring.
33. Design a helical torsion spring for severe service using stainless steel wire, ASTM A313, type 302, to exert a torque of 12.0 lb · in after a deflection of 270° from the free condition. The outside diameter of the coil should be no more than 1.250 in. Specify the diameter of a rod on which to mount the spring.
34. Design a helical torsion spring for severe service using music wire to exert a maximum torque of 2.50 lb · in after a deflection of 360° from the free condition. The outside diameter of the coil should be no more than 0.750 in. Specify the diameter of a rod on which to mount the spring.
35. A helical torsion spring has a wire diameter of 0.038 in; an outside diameter of 0.368 in; 9.5 coils in the body; one end 0.50 in long; the other end 1.125 in long; and a material of ASTM A401 steel. What torque would cause the spring to rotate 180°? What would the stress be then? Would it be safe?

FASTENERS

The Big Picture

You Are the Designer

- 19–1 Objectives of This Chapter
- 19–2 Bolt Materials and Strength
- 19–3 Thread Designations and Stress Area
- 19–4 Clamping Load and Tightening of Bolted Joints
- 19–5 Externally Applied Force on a Bolted Joint
- 19–6 Thread Stripping Strength
- 19–7 Other Types of Fasteners and Accessories
- 19–8 Other Means of Fastening and Joining

THE BIG PICTURE

Fasteners

Discussion Map

- *Fasteners* connect or join two or more components. Common types are *bolts* and *screws* such as those illustrated in Figure 19–1 through 19–4.

In this chapter, you will learn to analyze the performance of fasteners and to select suitable types and sizes.

A *fastener* is any device used to connect or join two or more components. Literally hundreds of fastener types and variations are available. The most common are threaded fasteners referred to by many names, among them bolts, screws, nuts, studs, lag screws, and set screws.

A *bolt* is a threaded fastener designed to pass through holes in the mating members and to be secured by tightening a nut from the end opposite the head of the bolt. See Figure 19–1(a), called a *hex head bolt*. Several other types of bolts are shown in Figure 19–2.

Discover

Look for examples of bolts and screws. List how many types you have found. For what functions were they being used? What kinds of forces are the fasteners subjected to? What materials are used for the fasteners?

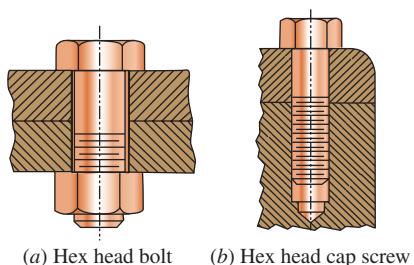


FIGURE 19–1 Comparison of a bolt with a screw

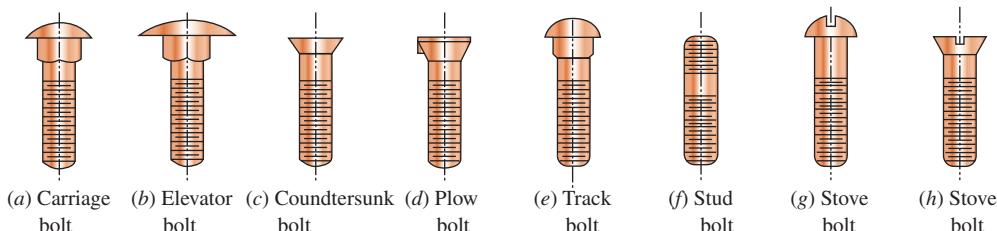


FIGURE 19–2 Bolt styles. See also the hex head bolt in Figure 19–1

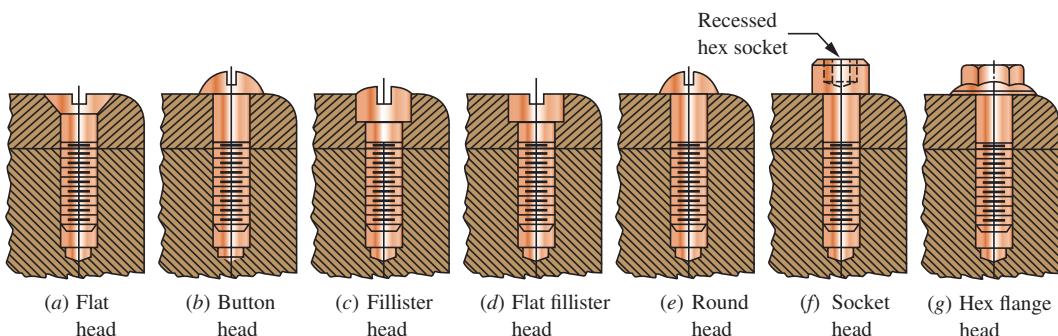


FIGURE 19-3 Cap screws or machine screws. See also the hex head cap screw in Figure 19-1

A *screw* is a threaded fastener designed to be inserted through a hole in one member to be joined and into a threaded hole in the mating member. See Figure 19-1(b). The threaded hole may have been pre-formed, for example, by tapping, or it may be formed by the screw itself as it is forced into the material. *Machine screws*, also called *cap screws*, are precision fasteners with straight-threaded bodies that are turned into tapped holes (see Figure 19-3). A popular type of machine screw is the socket head cap screw. The usual configuration, shown in Figure 19-3(f), has a cylindrical head with a recessed hex socket. Also readily available are flat head styles for countersinking to produce a flush surface, button head styles for a low-profile appearance, and shoulder screws providing a precision bearing surface for location or pivoting. See Internet sites 9 and 11. *Sheet-metal screws*, *lag screws*, *self-tapping screws*, and *wood screws* usually form their own threads. Figure 19-4 shows a few styles.

Search for examples where the kinds of fasteners illustrated in Figure 19-1 through 19-4 are used. How many can you find? Make a list using the names for the fasteners in the figures. Describe the application.

What function is the fastener performing? What kinds of forces are exerted on each fastener during service? How large is the fastener? Measure as many dimensions as you can. What material is each fastener made from?

Look in your car, particularly under the hood in the engine compartment. If you can, also look under the chassis to see where fasteners are used to hold different components onto the frame or some other structural member.

Look also at bicycles, lawn and garden equipment, grocery carts, display units in a store, hand tools, kitchen appliances, toys, exercise equipment, and furniture. If you have access to a factory, you should be able to identify hundreds or thousands of examples. Try to get some insight about where certain types of fasteners are used and for what purposes.

In this chapter, you will learn about many of the types of fasteners that you will encounter, including how to analyze their performance.

References 1–7 and Internet sites 1, 2, 14, 15, and 18 provide extensive coverage of the science and technology of fasteners and are recommended as sources to supplement the treatment in this book.

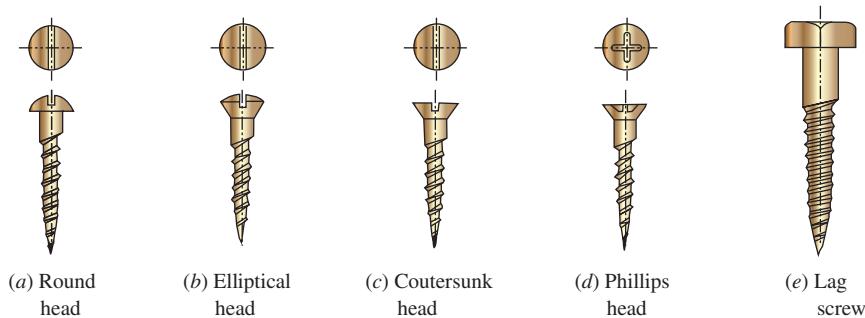


FIGURE 19-4 Sheet-metal and lag screws

YOU ARE THE DESIGNER

Review Figure 15-8 which shows the assembly of the gear-type power transmission that was designed in that chapter. Fasteners are called for in several places on the housing for the transmission, but they were not specified in that chapter. The four *bearing caps* are to

be fastened to the housing and the cover by threaded fasteners. The cover itself is to be attached to the housing by fasteners. Finally, the mounting base has provisions for using fasteners to hold the entire transmission to a support structure.

You are the designer. What kinds of fasteners would you consider for these applications? What material should be used to make them? What strength should the material have? If threaded fasteners are used, what size should the threads be, and how long must they be? What head style would you specify? How much torque should be applied to the fastener to ensure that there is sufficient clamping force between the joined members? How does the design of the gasket between the cover and the housing affect

the choice of the fasteners and the specification of the tightening torque for them? What alternatives are there to the use of threaded fasteners to hold the components together and to still allow disassembly?

This chapter presents information that you can use to make such design decisions. The references at the end of this chapter give other valuable sources of information from the large body of knowledge about fasteners. ■

19-1 OBJECTIVES OF THIS CHAPTER

After completing this chapter, you will be able to:

1. Describe a bolt in comparison with a machine screw.
2. Name and describe nine styles of heads for bolts.
3. Name and describe six styles of heads for machine screws.
4. Describe sheet-metal screws and lag screws.
5. Describe six styles of set screws and their application.
6. Describe nine types of locking devices that restrain a nut from becoming loose on a bolt.
7. Use tables of data for various grades of steel materials used for bolts as published by the SAE International (SAE) and the ASTM International (ASTM), and for standard metric grades.
8. List at least 10 materials other than steel that are used for fasteners.
9. Use tables of data for standard screw threads in the American Standard and metric systems for dimensions and stress analysis.
10. Define *proof load*, *clamping load*, and *tightening torque* as applied to bolts and screws, and compute design values.
11. Compute the effect of adding an externally applied force on a bolted joint, including the final force on the bolts and the clamped members.
12. List and describe 16 different coating and finishing techniques that are used for metal fasteners.
13. Describe rivets, quick-operating fasteners, welding, brazing, and adhesives, and contrast them with bolts and screws for fastening applications.

19-2 BOLT MATERIALS AND STRENGTH

In machine design, most fasteners are made from steel because of its high strength, high stiffness, good ductility, and good machinability and formability. But varying compositions and conditions of steel are used. The strength of steels used for bolts and screws is used to determine its *grade*, according to one of several standards. Three strength ratings are frequently available: the familiar tensile strength and yield strength plus the proof strength. The *proof strength*, similar to the elastic limit, is defined as the stress at which the bolt or the

screw would undergo permanent deformation. It usually ranges between 0.90 and 0.95 times the yield strength.

Three major standards-setting organizations relevant to fasteners in the United States and internationally are listed in References 1, 2, 11, and 17–28. See Internet sites 1, 2, 14, 15, and 18. Note that some of the listed standards are for metric fasteners whereas most others focus on the U.S. inch-pound system and a few address both units. The fastener-producing industry is represented by the Industrial Fasteners Institute that publishes a comprehensive document listed in Reference 10. There is much cross-referencing among these organizations. It is essential that designers are familiar with the entire content of the latest versions of applicable standards that present far more information than is mentioned in this book.

You should become familiar with a variety of vendors of commercially available screws, bolts, and other types of fasteners. As a sample, check out Internet sites 3–13.

Table 19-1 lists selected basic data for four SAE grades of fasteners from Reference 18 with the tensile strength generally increasing with higher grade numbers. Take note that strengths are related to specified ranges of sizes of fasteners. Some grades are made with special marking on the heads to assist users in the field to ensure that the proper grade is being used.

Table 19-2 lists data extracted from six different ASTM standards, each focused on a particular grade of steel or a type of fastener. The full designations for these grades are listed in References 20–24 and 27. Reference 25 is the specification for nuts most applicable to the listed bolt grades. Numerous grades are described. Reference 10 contains tables showing the commercially available grades of nuts for each style of bolt.

TABLE 19-1 SAE Grades of Steels for Fasteners

| Grade number | Bolt size (in) | Tensile strength (ksi) | Yield strength (ksi) | Proof strength (ksi) | Head marking |
|--------------|----------------|------------------------|----------------------|----------------------|--------------|
| 1 | 1/4–1½ | 60 | 36 | 33 | None |
| 2 | 1/4–3/4 | 74 | 57 | 55 | None |
| | >3/4–1½ | 60 | 36 | 33 | |
| 5 | 1/4–1 | 120 | 92 | 85 | ∅ |
| | >1–1½ | 105 | 81 | 74 | |
| 8 | 1/4–1½ | 150 | 130 | 120 | ⊗ |

TABLE 19–2 ASTM Grades for Bolt Steels

| ASTM grade | Bolt size (in) | Tensile strength (ksi) | Yield strength (ksi) | Proof strength (ksi) | Head marking |
|------------|----------------|------------------------|----------------------|----------------------|--------------------------|
| A307 | 1/4–4 | 60 | (Not reported) | | None |
| A325 | 1/2–1 | 120 | 92 | 85 | |
| | >1–1½ | 105 | 81 | 74 | |
| A354-BC | 1/4–2½ | 125 | 109 | 105 | |
| A354-BD | 1/4–2½ | 150 | 130 | 120 | |
| A449 | 1/4–1 | 120 | 92 | 85 | |
| | >1–1½ | 105 | 81 | 74 | |
| | >1½–3 | 95 | 58 | 55 | |
| A490 | 1/2–1 | 150 | 130 | 120 | |
| A574 | 0.060–1/2 | 180 | | 140 | (Socket head cap screws) |
| | 5/8–4 | 170 | | 135 | |

| SAE grade | ASTM grade | Metric grade |
|--------------|---------------------|--------------|
| J429 Grade 1 | A307 Grade A | Grade 4.6 |
| J429 Grade 2 | — | Grade 5.8 |
| J429 Grade 5 | A449, A325 | Grade 8.8 |
| J429 Grade 8 | A354 Grade BD, A490 | Grade 10.9 |
| | A574 | Grade 12.9 |

combinations of SAE, ASTM, and metric grades of bolt steels. The individual standards should be consulted for specific strength data.

Listed below are some of the more commonly used bolt steels according to Reference 10.

| U.S. units | SI units |
|-------------------------------|---|
| SAE J429, grades 5 and higher | SAE J1199 and ISO, grades 8.8, 10.9, and 12.9 |
| ASTM A325, A384, A449, A490 | ASTM A325M, A490M, A574M |

The company listed in Internet site 9 provides high-strength heat-treated alloy steel socket head cap screws having the following strengths:

| Size range | Tensile strength | | Yield strength | |
|------------|------------------|-------|----------------|-------|
| | (ksi) | (MPa) | (ksi) | (MPa) |
| 0–5/8 | 190 | 1310 | 170 | 1172 |
| 3/4–3 | 180 | 1241 | 155 | 1069 |

Roughly equivalent performance is obtained from metric socket head cap screws made to the metric strength grade 12.9. The same geometry is available in corrosion-resistant stainless steel, typically 19–8, at somewhat lower strength levels. See Internet site 11.

Aluminum is used for its corrosion resistance, light weight, and fair strength level. Its good thermal and electrical conductivity may also be desirable. The most widely used alloys are 2024-T4, 6061-T6, and 7075-T73. Properties of these materials are listed in Appendix 9.

Brass, *copper*, and *bronze* are also used for their corrosion resistance. Ease of machining and an attractive appearance are also advantages. Certain alloys are particularly good for resistance to corrosion in marine applications. See Appendix 12.

Nickel and its alloys, such as *Monel* and *Inconel* (from the International Nickel Company), provide good performance at elevated temperatures while also having good corrosion resistance, toughness at low temperatures, and an attractive appearance. See Appendix 11–1.

Stainless steels are used primarily for their corrosion resistance. Alloys used for fasteners include 19–8, 410, 416, 430, and 431. In addition, stainless steels in the 300 series are nonmagnetic. See Appendix 6 for properties.

TABLE 19–3 Metric Grades of Steels for Bolts

| Grade | Bolt size | Tensile strength (MPa) | Yield strength (MPa) | Proof strength (MPa) |
|-------|-----------|------------------------|----------------------|----------------------|
| 4.6 | M5–M36 | 400 | 240 | 225 |
| 4.8 | M1.6–M16 | 420 | 340 ^a | 310 |
| 5.8 | M5–M24 | 520 | 415 ^a | 380 |
| 8.8 | M17–M36 | 830 | 660 | 600 |
| 9.8 | M1.6–M16 | 900 | 720 ^a | 650 |
| 10.9 | M6–M36 | 1040 | 940 | 830 |
| 12.9 | M1.6–M36 | 1220 | 1100 | 970 |

^aYield strengths are approximate and are not included in the standard.

Examples of metric grades of steels used for bolts are shown in Table 19–3, with data extracted from a variety of sources including References 1, 2, 19, and 28. Note the significantly different system for denoting the grades.

Metric bolts and screws use a numerical code system ranging from 4.6 to 12.9, with higher numbers indicating higher strengths. The numbers before the decimal point are approximately 0.01 times the tensile strength of the material in MPa. The last digit with the decimal point is the approximate ratio of the yield strength of the material to the tensile strength.

Approximate Equivalencies among SAE, ASTM, and Metric Grades of Bolt Steels. The following list shows approximate equivalents that may be useful when comparing designs for which specifications include

A high strength-to-weight ratio is the chief advantage of *titanium* alloys used for fasteners in aerospace applications. Appendix 11–2 gives a list of properties of several alloys.

Plastics are used widely because of their light weight, corrosion resistance, insulating ability, and ease of manufacture. Nylon 6/6 is the most frequently used material, but others include ABS, acetal, TFE fluorocarbons, polycarbonate, polyethylene, polypropylene, and polyvinylchloride. Appendix 13 lists several plastics and their properties. In addition to being used in screws and bolts, plastics are used extensively where the fastener is designed specially for the particular application. See also Reference 13.

Coatings and finishes are provided for metallic fasteners to improve appearance or corrosion resistance. Some

also lower the coefficient of friction for more consistent results relating tightening torque to clamping force. Steel fasteners can be finished with black oxide, bluing, bright nickel, phosphate, and hot-dip zinc. Plating can be used to deposit cadmium, copper, chromium, nickel, silver, tin, and zinc. Various paints, lacquers, and chromate finishes are also used. Aluminum is usually anodized. Check environmental hazards for coatings and finishes.

19-3 THREAD DESIGNATIONS AND STRESS AREA

Table 19–4 shows pertinent dimensions for threads in the American Standard styles, and Table 19–5 gives SI metric styles. For consideration of strength and size, the

TABLE 19–4 American Standard Screw Threads

A. American Standard thread dimensions, numbered sizes

| Basic major diameter, <i>D</i> (in) | Coarse threads: UNC | | Fine threads: UNF | |
|-------------------------------------|---------------------------------|--|---------------------------------|--|
| | Size—Threads per inch, <i>n</i> | Tensile stress area (in ²) | Size—Threads per inch, <i>n</i> | Tensile stress area (in ²) |
| 0.0600 | — | — | 0–80 | 0.001 80 |
| 0.0730 | 1–64 | 0.002 63 | 1–72 | 0.002 78 |
| 0.0860 | 2–56 | 0.003 70 | 2–64 | 0.003 94 |
| 0.0990 | 3–48 | 0.004 87 | 3–56 | 0.005 23 |
| 0.1120 | 4–40 | 0.006 04 | 4–48 | 0.006 61 |
| 0.1250 | 5–40 | 0.007 96 | 5–44 | 0.008 30 |
| 0.1380 | 6–32 | 0.009 09 | 6–40 | 0.010 15 |
| 0.1640 | 8–32 | 0.0140 | 8–36 | 0.014 74 |
| 0.1900 | 10–24 | 0.0175 | 10–32 | 0.0200 |
| 0.2160 | 12–24 | 0.0242 | 12–28 | 0.0258 |

B. American Standard thread dimensions, fractional sizes

| Basic major diameter, <i>D</i> (in) | Coarse threads: UNC | | Fine threads: UNF | |
|-------------------------------------|---------------------------------|--|---------------------------------|--|
| | Size—Threads per inch, <i>n</i> | Tensile stress area (in ²) | Size—Threads per inch, <i>n</i> | Tensile stress area (in ²) |
| 0.2500 | 1/4–20 | 0.0318 | 1/4–28 | 0.0364 |
| 0.3125 | 5/16–18 | 0.0524 | 5/16–24 | 0.0580 |
| 0.3750 | 3/8–16 | 0.0775 | 3/8–24 | 0.0878 |
| 0.4375 | 7/16–14 | 0.1063 | 7/16–20 | 0.1187 |
| 0.5000 | 1/2–13 | 0.1419 | 1/2–20 | 0.1599 |
| 0.5625 | 9/16–12 | 0.182 | 9/16–18 | 0.203 |
| 0.6250 | 5/8–11 | 0.226 | 5/8–18 | 0.256 |
| 0.7500 | 3/4–10 | 0.334 | 3/4–16 | 0.373 |
| 0.8750 | 7/8–9 | 0.462 | 7/8–14 | 0.509 |
| 1.000 | 1–8 | 0.606 | 1–12 | 0.663 |
| 1.125 | 1 1/8–7 | 0.763 | 1 1/8–12 | 0.856 |
| 1.250 | 1 1/4–7 | 0.969 | 1 1/4–12 | 1.073 |
| 1.375 | 1 3/8–6 | 1.155 | 1 3/8–12 | 1.315 |
| 1.500 | 1 1/2–6 | 1.405 | 1 1/2–12 | 1.581 |
| 1.750 | 1 3/4–5 | 1.90 | | |
| 2.000 | 2–4 1/2 | 2.50 | | |

TABLE 19-5 Metric Sizes of Screw Threads

| Basic major diameter, D (mm) | Coarse threads | | Fine threads | |
|--------------------------------|--------------------------|------|--|-----------------------------|
| | Basic thread designation | | Tensile stress area (mm ²) | $MD \times$ Pitch (mm) (mm) |
| | $MD \times$ Pitch (mm) | (mm) | | |
| 1 | M1 × 0.25 | | 0.460 | — |
| 1.6 | M1.6 × 0.35 | | 1.27 | M16 × 0.20 |
| 2 | M2 × 0.4 | | 2.07 | M2 × 0.25 |
| 2.5 | M2.5 × 0.45 | | 3.39 | M25 × 0.35 |
| 3 | M3 × 0.5 | | 5.03 | M3 × 0.35 |
| 4 | M4 × 0.7 | | 8.78 | M4 × 0.5 |
| 5 | M5 × 0.8 | | 14.2 | M5 × 0.5 |
| 6 | M6 × 1 | | 20.1 | M6 × 0.75 |
| 8 | M8 × 1.25 | | 36.6 | M8 × 1 |
| 10 | M10 × 1.5 | | 58.0 | M10 × 1.25 |
| 12 | M12 × 1.75 | | 84.3 | M12 × 1.25 |
| 16 | M16 × 2 | | 157 | M16 × 1.5 |
| 20 | M20 × 2.5 | | 245 | M20 × 1.5 |
| 24 | M24 × 3 | | 353 | M24 × 2 |
| 30 | M30 × 3.5 | | 561 | M30 × 2 |
| 36 | M36 × 4 | | 817 | M36 × 3 |
| 42 | M42 × 4.25 | | 1121 | |
| 48 | M48 × 5 | | 1473 | |

designer must know the basic major diameter, the pitch of the threads, and the area available to resist tensile loads. Note that the pitch is equal to $1/n$, where n is the number of threads per inch in the American Standard system. In the SI, the pitch in millimeters is designated directly. The tensile stress area listed in Tables 19-4 and 19-5 takes into account the actual area cut by a transverse plane. Because of the helical path of the thread on the screw, such a plane will cut near the root on one side of the screw but will cut near the major diameter on the other. The equation for the tensile stress area for American Standard threads is

▫ Tensile Stress Area for UNC or UNF Threads

$$A_t = (0.7854)[D - (0.9743)p]^2 \quad (19-1)$$

where D = major diameter

p = pitch of the thread

For metric threads, the tensile stress area is

▫ Tensile Stress Area for Metric Threads

$$A_t = (0.7854)[D - (0.9382)p]^2 \quad (19-2)$$

For most standard screw thread sizes, at least two pitches are available: the *coarse* series and the *fine thread* series. Both are included in Tables 19-4 and 19-5.

The smaller American Standard threads use a number designation from 0 to 12. The corresponding major

diameter is listed in Table 19-4(A). The larger sizes use fractional-inch designations. The decimal equivalent for the major diameter is shown in Table 19-4(B). Metric threads list the major diameter and the pitch in millimeters, as shown in Table 19-5. Samples of the standard designations for a thread are given next.

American Standard: Basic size followed by number of threads per inch and the thread series designation.

| | |
|------------|------------|
| 10-24 UNC | 10-32 UNF |
| 1/2-13 UNC | 1/2-20 UNF |
| 1½-6 UNC | 1½-12 UNF |

Metric: M (for “metric”), followed by the basic major diameter and then the pitch in millimeters.

$$M3 \times 0.5 \quad M3 \times 0.35 \quad M10 \times 1.5$$

19-4 CLAMPING LOAD AND TIGHTENING OF BOLTED JOINTS

Clamping Load

When a bolt or a screw is used to clamp two parts, the force exerted between the parts is the *clamping load*. The designer is responsible for specifying the clamping load and for ensuring that the fastener is capable of withstanding the load.

The maximum clamping load is often taken to be 0.75 times the proof load, where the proof load is the product of the proof stress times the tensile stress area of the bolt or screw.

Tightening Torque

The clamping load is created in the bolt or the screw by exerting a tightening torque on the nut or on the head of the screw. An approximate relationship between the torque and the axial tensile force in the bolt or screw (the clamping force) is

▫ Tightening Torque

$$T = KDP \quad (19-3)$$

where T = torque, lb · in

D = nominal outside diameter of threads, in

P = clamping load, lb

K = constant dependent on the lubrication present

For average commercial conditions, use $K = 0.15$ if any lubrication at all is present. Even cutting fluids or other residual deposits on the threads will produce conditions consistent with $K = 0.15$. If the threads are well cleaned and dried, $K = 0.20$ is better. Of course, these values are approximate, and variations among seemingly identical assemblies should be expected. Testing and statistical analysis of the results are recommended.

Example Problem

19–1

A set of three bolts is to be used to provide a clamping force of 12 000 lb between two components of a machine. The load is shared equally among the three bolts. Specify suitable bolts, including the grade of the material, if each is to be stressed to 75% of its proof strength. Then compute the required tightening torque.

Solution The load on each screw is to be 4000 lb. Let's specify a bolt made from SAE Grade 5 steel, having a proof strength of 85 000 psi. Then the allowable stress is

$$\sigma_a = 0.75(85\,000 \text{ psi}) = 63\,750 \text{ psi}$$

The required tensile stress area for the bolt is then

$$A_t = \frac{\text{load}}{\sigma_a} = \frac{4000 \text{ lb}}{63\,750 \text{ lb/in}^2} = 0.0627 \text{ in}^2$$

From Table 19–4(B), we find that the 3/8–16 UNC thread has the required tensile stress area. The required tightening torque will be

$$T = KDP = 0.15(0.375 \text{ in})(4000 \text{ lb}) = 225 \text{ lb} \cdot \text{in}$$

Equation (19–3) is adequate for general mechanical design. A more complete analysis of the torque to create a given clamping force requires more information about the joint design. There are three contributors to the torque. One, which we will refer to as T_1 , is the torque required to develop the tensile load in the bolt, P_t , using the inclined plane nature of the thread.

$$T_1 = \frac{P_t l}{2\pi} = \frac{P_t}{2\pi n} \quad (19-4)$$

where l is the lead of the bolt thread and $l = p = 1/n$.

The second component of the torque, T_2 , is that required to overcome friction between the mating threads, computed from,

$$T_2 = \frac{d_p \mu_1 P_t}{2 \cos \alpha} \quad (19-5)$$

where

d_p = pitch diameter of the thread

μ_1 = coefficient of friction between the thread surfaces

α = 1/2 of the thread angle, typically 30°

The third component of the torque, T_3 , is the friction between the underside of the head of the bolt or nut and

the clamped surface. This friction force is assumed to act at the middle of the friction surface and is computed from

$$T_3 = \frac{(d + b) \mu_2 P_t}{4} \quad (19-6)$$

where

d = major diameter of the bolt

b = outside diameter of the friction surface on the underside of the bolt

μ_2 = coefficient of friction between the bolt head and the clamped surface

The total torque is then,

$$T_{\text{tot}} = T_1 + T_2 + T_3 \quad (19-7)$$

See References 4–8 and 12–16 for additional discussion on torque for bolts. It is important to note that many variables are involved in the contributors to the relationship between the applied torque and the tensile preload given to the bolt. Accurate prediction of the coefficients of friction is difficult. The accuracy with which the specified torque is applied is affected by the precision of the measurement device used, such as a torque wrench, pneumatic nut runner, or hydraulic nut driver, as well as the operator's skill. Reference 4 has an extensive discussion of the large variety of torque wrenches available.

References 4–7, 12, 15, and 16 provide extended methods of calculating tightening torque, performance under fatigue loading, analyzing gasketed joints, joint stiffness, and joint behavior under tensile and shear loading conditions.

Methods similar to those shown in Chapter 5 of this book are used for fatigue analysis using the Goodman approach. The design of the bolted joint should be done using approaches that tend to minimize fatigue problems. Examples are minimizing overall and fluctuating stress levels, increasing the root radius of the thread, using rolled threads instead of cut threads, providing generous fillets between the head and the shank of the bolt, ensuring that the underside of the bolt head is accurately perpendicular to the axis of the threads, providing gradual run-out where threads begin or end on the bolt shaft, reducing bending action, and protecting the bolted joint from corrosion.

Other Methods of Bolt Tightening

Measuring the torque applied to the bolt, screw, or nut during installation is convenient. However, because of the many variables involved, the actual clamping force created may vary significantly. Fastening of critical connections often uses other methods of bolt tightening that more directly relate to the clamping force. Situations where these methods may be used are structural steel connections, flanges for high-pressure systems, nuclear power plant components, cylinder head and connecting rod bolts for engines, aerospace structures, turbine engine components, propulsion systems, and military equipment.

Turn of the Nut Method. The bolt is first tightened to a snug fit to bring all of the parts of the joint into intimate contact. Then the nut is given an additional turn with a wrench of between one-third and one full turn, depending on the size of the bolt. One full turn would produce a stretch in the bolt equal to the lead of the thread, where $l = p = 1/n$. The elastic behavior of the bolt determines the amount of the resulting clamping force. References 4, 8, and 17 give more details.

Tension Control Bolting Products. Special bolts are available that include a carefully sized neck on one end connected to a splined section. The spline is held fixed as the nut is turned. When a predetermined torque is applied to the nut, the neck section breaks and the tightening stops. Consistent connection performance results.

Another form of tension control bolt employs a tool that exerts direct axial tension on the bolt, swages a collar into annular grooves or the threads of the fastener, and then breaks a small-diameter part of the bolt at a predetermined force. The result is a predictable amount of clamping force in the joint. See Internet site 13.

Wavy Flanged Bolt. The underside of the head of this bolt is formed in a wavy pattern during manufacture. When torque is applied to the joint, the wavy surface is deformed to become flat against the clamped surface

when the proper amount of tension has been created in the body of the bolt. See Internet site 9.

Direct Tension Indicator (DTI) Washers. The DTI washer has several raised areas on its upper surface. A regular washer is then placed over the DTI washer and a nut tightens the assembly until the raised areas are flattened to a specified degree, creating a predictable tension in the bolt. See Internet site 10.

Ultrasonic Tension Measurement and Control. Recent developments have resulted in the availability of equipment that imparts ultrasonic acoustic waves to bolts as they are tightened with the timing of the reflected waves being correlated to the amount of stretch and tension in the bolt. See Reference 4.

Tighten to Yield Method. Most fasteners are provided with guaranteed yield strength; therefore, it takes a predictable amount of tensile force to cause the bolt to yield. Some automatic systems use this principle by sensing the relationship between applied torque and the rotation of the nut and stopping the process when the bolt begins to yield. During the elastic part of the stress-strain curve for the bolt, a linear change in torque versus rotation occurs. At yield, a dramatic increase in rotation with little or no increase in torque signifies yielding. A variation on this method, called the *logarithmic rate method (LRM)*, determines the peak of the curve of the logarithm of the rate of torque versus turn data and then applies a preset amount of additional turn to the nut. See Internet site 16.

Internet site 12 describes a testing system that aids in analyzing the effectiveness of bolt-tightened joints. A pressure sensitive thin film is placed at the interface between the surfaces to be clamped, somewhat like a gasket. Then the bolted connection is made with bolts tightened to specified values. Subsequent removal of the bolts reveals quantitative and qualitative data about the distribution of clamping pressure on the critical surfaces. The company also offers consulting services on joint design and production methods.

19-5 EXTERNALLY APPLIED FORCE ON A BOLTED JOINT

The analysis shown in Example Problem 19-1 considers the stress in the bolt only under static conditions and only for the clamping load. It was recommended that the tension on the bolt be very high, approximately 75% of the proof load for the bolt. Such a load will use the available strength of the bolt efficiently and will prevent the separation of the connected members.

When a load is applied to a bolted joint over and above the clamping load, special consideration must be given to the behavior of the joint. Initially, the force on the bolt (in tension) is equal to the force on the clamped members (in compression). Then some of the additional

load will act to stretch the bolt beyond its length assumed after the clamping load was applied. Another portion will result in a *decrease* in the compressive force in the clamped member. Thus, only part of the applied force is carried by the bolt. The amount is dependent on the relative stiffness of the bolt and the clamped members.

If a stiff bolt is clamping a flexible member, such as a resilient gasket, most of the added force will be taken by the bolt because it takes little force to change the compression in the gasket. In this case, the bolt design must take into account not only the initial clamping force but also the added force.

Conversely, if the bolt is relatively flexible compared with the clamped members, virtually all of the externally applied load will initially go to decreasing the clamping force until the members actually separate, a condition usually interpreted as failure of the joint. Then the bolt will carry the full amount of the external load.

In practical joint design, a situation between the extremes previously described would normally occur. In

typical “hard” joints (without a soft gasket), the stiffness of the clamped members is approximately three times that of the bolt. The externally applied load is then shared by the bolt and the clamped members according to their relative stiffnesses as follows:

$$F_b = P + \frac{k_b}{k_b + k_c} F_e \quad (19-8)$$

$$F_c = P - \frac{k_c}{k_b + k_c} F_e \quad (19-9)$$

where F_e = externally applied load

P = initial clamping load [as used in Equation (19-3)]

F_b = final force in bolt

F_c = final force on clamped members

k_b = stiffness of bolt

k_c = stiffness of clamped members

Example Problem 19-2 Assume that the joint described in Example Problem 19-1 was subjected to an additional external load of 3000 lb after the initial clamping load of 4000 lb was applied. Also assume that the stiffness of the clamped members is three times that of the bolt. Compute the force in the bolt, the force in the clamped members, and the final stress in the bolt after the external load is applied.

Solution We will first use Equations (19-8) and (19-9) with $P = 4000$ lb, $F_e = 3000$ lb, and $k_c = 3k_b$:

$$F_b = P + \frac{k_b}{k_b + k_c} F_e = P + \frac{k_b}{k_b + 3k_b} F_e = P + \frac{k_b}{4k_b} F_e$$

$$F_b = P + F_e/4 = 4000 + 3000/4 = 4750 \text{ lb}$$

$$F_c = P - \frac{k_c}{k_b + k_c} F_e = P - \frac{3k_b}{k_b + 3k_b} F_e = P - \frac{3k_b}{4k_b} F_e$$

$$F_c = P - 3F_e/4 = 4000 - 3(3000)/4 = 1750 \text{ lb}$$

Because F_c is still greater than zero, the joint is still tight. Now the stress in the bolt can be found. For the 3/8-16 bolt, the tensile stress area is 0.0775 in². Thus,

$$\sigma = \frac{P}{A_t} = \frac{4750 \text{ lb}}{0.0775 \text{ in}^2} = 61300 \text{ psi}$$

The proof strength of the Grade 5 material is 85 000 psi, and this stress is approximately 72% of the proof strength. Therefore, the selected bolt is still safe. But consider what would happen with a relatively “soft” joint, discussed in Example Problem 19-3.

Example Problem 19-3 Solve Example Problem 19-2 again, but assume that the joint has a flexible elastomeric gasket separating the clamping members and that the stiffness of the bolt is then 10 times that of the joint.

Solution The procedure will be the same as that used previously, but now $k_b = 10k_c$. Thus,

$$F_b = P + \frac{k_b}{k_b + k_c} F_e = P + \frac{10k_c}{10k_c + k_c} F_e = P + \frac{10k_c}{11k_c} F_e$$

$$F_b = P + 10F_e/11 = 4000 + 10(3000)/11 = 6727 \text{ lb}$$

$$F_c = P - \frac{k_c}{k_b + k_c} F_e = P - \frac{k_c}{10k_c + k_c} F_e = P - \frac{k_c}{11k_c} F_e$$

$$F_c = P - F_e/11 = 4000 - 3000/11 = 3727 \text{ lb}$$

The stress in the bolt would be

$$\sigma = \frac{6727 \text{ lb}}{0.0775 \text{ in}^2} = 86,800 \text{ psi}$$

This exceeds the proof strength of the Grade 5 material and is dangerously close to the yield strength.

19–6 THREAD STRIPPING STRENGTH

In addition to sizing a bolt on the basis of axial tensile stress, the threads must be checked to ensure that they will not be stripped off by shearing. The variables involved in the shear strength of the threads are the materials of the bolt, the nut, or the internal threads of a tapped hole, the length of engagement, L_e , and the size of the threads. The details of analysis depend on the relative strength of the materials.

Internal Thread Material Stronger than Bolt Material.

For this case, the strength of the threads of the bolt will control the design. Here, we present an equation for the required length of engagement, L_e , of the bolt threads that will have at least the same strength in shear as the bolt itself does in tension.

$$L_e = \frac{2A_{tB}}{\pi (ID_{Nmax})[0.5 + 0.57735 n(PD_{Bmin} - ID_{Nmax})]} \quad (19-10)$$

where A_{tB} = tensile stress area of bolt

ID_{Nmax} = maximum inside (root) diameter of nut threads

n = number of threads per inch

PD_{Bmin} = minimum pitch diameter of bolt threads

The subscripts B and N refer to the bolt and nut, respectively. The subscripts min and max refer to the minimum and maximum values, respectively, considering the tolerances on thread dimensions. Reference 14 gives data for tolerances as a function of the class of thread specified.

For a given length of engagement, the resulting shear area for the bolt threads is

$$A_{sB} = \pi L_e ID_{Nmax}[0.5 + 0.57735 n(PD_{Bmin} - ID_{Nmax})] \quad (19-11)$$

Nut Material Weaker than Bolt Material. This is particularly applicable when the bolt is inserted into a tapped hole in cast iron, aluminum, or some other material with relatively low strength. The required length of engagement to develop at least the full strength of the bolt is

$$L_e = \frac{s_{utB} (2 A_{tB})}{s_{utN} \pi OD_{Bmin} [0.5 + 0.57735 n (OD_{Bmin} - PD_{Nmax})]} \quad (19-12)$$

where

s_{utB} = ultimate tensile strength of the bolt material

s_{utN} = ultimate tensile strength of the nut material

OD_{Bmin} = minimum outside diameter of the bolt threads

PD_{Nmax} = maximum pitch diameter of the nut threads

The shear area of the root of the threads of the nut is

$$A_{sN} = \pi L_e OD_{Bmin}[0.5 + 0.57735 n (OD_{Bmin} - PD_{Nmax})] \quad (19-13)$$

Equal Strength for Nut and Bolt Material. For this case failure is predicted as shear of either part at the nominal pitch diameter, PD_{nom} . The required length of engagement to develop at least the full strength of the bolt is

$$L_e = \frac{4 A_{tB}}{\pi PD_{nom}} \quad (19-14)$$

The shear stress area for the nut or bolt threads is

$$A_s = \pi PD_{nom} L_e / 2 \quad (19-15)$$

19–7 OTHER TYPES OF FASTENERS AND ACCESSORIES

Most bolts and screws have enlarged heads that bear down on the part to be clamped and thus exert the clamping force. *Set screws* are headless, are inserted into tapped holes, and are designed to bear directly on the mating part, locking it into place. Figure 19–5 shows several styles of points and drive means for set screws. Caution must be used with set screws, as with any threaded fastener, so that vibration does not loosen the screw.

A *washer* may be used under either or both the bolt head and the nut to distribute the clamping load over a wide area and to provide a bearing surface for the relative rotation of the nut. The basic type of washer is the plain flat washer, a flat disc with a hole in it through which the bolt or screw passes. Other styles, called *lock-washers*, have axial deformations or projections that produce axial forces on the fastener when compressed. These forces keep the threads of the mating parts in intimate contact and decrease the probability that the fastener will loosen in service.

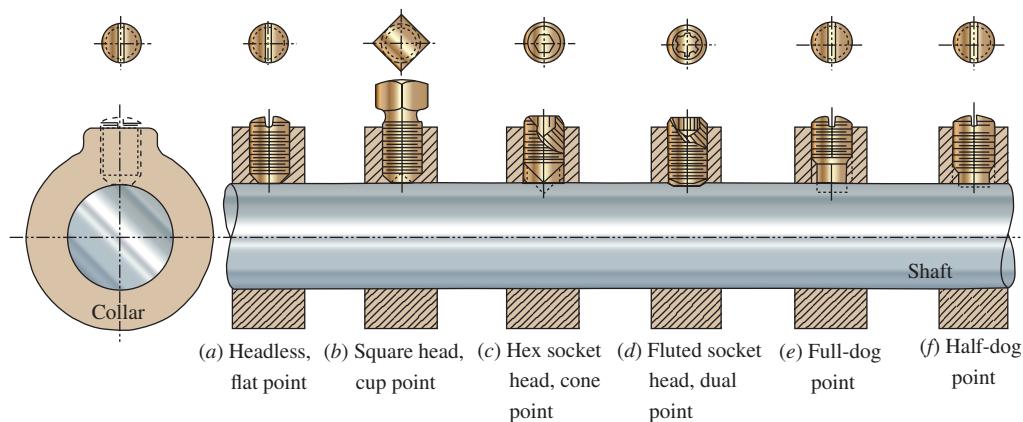


FIGURE 19–5 Set screws with different head and point styles applied to hold a collar on a shaft

Figure 19–6 shows several means of using washers and other types of locking devices. Part (a) is a jam nut tightened against the regular nut. Part (b) is the standard lockwasher. Part (c) is a locking tab that keeps the nut from turning. Part (d) is a cotter inserted through a hole drilled through the bolt. Part (e) uses a cotter, but it also passes through slots in the nut. Part (f) is one of several types of thread-deformation techniques used. Part (g) is an *elastic stop nut* that uses a plastic insert to keep the threads of the nut in tight contact with the bolt. This may be used on machine screws as well. In part (h), the elastic stop nut is riveted to a thin plate, allowing a mating part to be bolted from the opposite side. The thin metal device in (i) bears against the top of the nut and grips the threads, preventing axial motion of the nut.

A *stud* is like a stationary bolt attached permanently to a part of one member to be joined. The mating member is then placed over the stud, and a nut is tightened to clamp the parts together.

Additional variations occur when these types of fasteners are combined with different head styles. Several of

these are shown in the figures already discussed. Others are listed next:

| | | | |
|------------|---------------|-------------|------------------|
| Square | Hex | Heavy hex | Hex jam |
| Hex castle | Hex flat | Hex slotted | 12-point |
| High crown | Low crown | Round | T-head |
| Pan | Truss | Hex washer | Flat countersunk |
| Plow | Cross recess | Fillister | Oval countersunk |
| Hex socket | Spline socket | Button | Binding |

Additional combinations are created by consideration of the American National Standards or British Standard (metric); material grades; finishes; thread sizes; lengths; class (tolerance grade); manner of forming heads (machining, forging, and cold heading); and the manner of forming threads (machining, die cutting, tapping, rolling, and plastic molding).

Thus, you can see that comprehensive treatment of threaded fasteners encompasses extensive data. See the References and Internet sites listed at the end of this chapter.

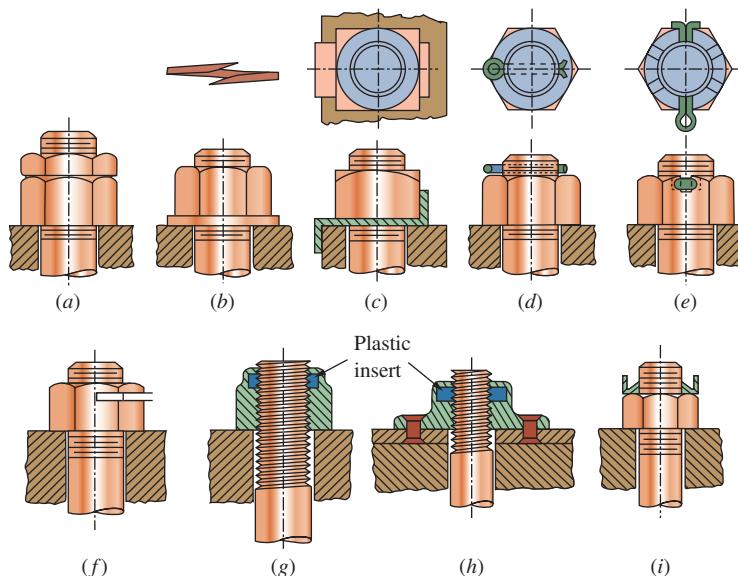


FIGURE 19–6 Locking devices

19-8 OTHER MEANS OF FASTENING AND JOINING

Thus far, this chapter has focused on screws and bolts because of their wide applications. Other types of fastening means will now be discussed.

Rivets are nonthreaded fasteners, usually made of steel or aluminum. They are originally made with one head, and the opposite end is formed after the rivet is inserted through holes in the parts to be joined. Steel rivets are formed hot, whereas aluminum can be formed at room temperatures. Of course, riveted joints are not designed to be assembled more than once. (See Internet sites 3 and 4.)

A large variety of *quick-operating fasteners* is available. Many are of the quarter-turn type, requiring just a 90° rotation to connect or disconnect the fastener. Access panels, hatches, covers, and brackets for removable equipment are attached with such fasteners. Similarly, many varieties of *latches* are available to provide quick action with, perhaps, added holding power. (See Internet sites 3 and 4.)

Welding involves the metallurgical bonding of metals, usually by the application of heat with an electric arc, a gas flame, or electrical resistance heating under heavy pressure. Welding is discussed in Chapter 20.

Brazing and **soldering** use heat to melt a bonding agent that flows into the space between parts to be joined, adhering to both parts and then solidifying as it cools. *Brazing* uses relatively high temperatures, above 840°F (450°C), using alloys of copper, silver, aluminum, silicon, or zinc. Of course, the metals to be joined must have a significantly higher melting temperature. Metals successfully brazed include plain carbon and alloy steels, stainless steels, nickel alloys, copper, aluminum, and magnesium.

Soldering is similar to brazing, except that it is performed at lower temperatures, less than 840°F (450°C). Several soldering alloys of lead-tin, tin-zinc, tin-silver, lead-silver, zinc-cadmium, zinc-aluminum, and others are used. Braze joints are generally stronger than soldered joints due to the inherently higher strength of the brazing alloys. Most soldered joints are fabricated with interlocking lap joints to provide mechanical strength, and then the solder is used to hold the assembly together and possibly to provide sealing. Joints in piping and tubing are frequently soldered.

Adhesives are seeing wide use. Versatility and ease of application are strong advantages of adhesives used in an array of products from toys and household appliances to automotive and aerospace structures. (See Internet sites 3 and 17.) Some types include the following:

Acrylics: Used for many metals and plastics.

Cyanoacrylates: Very fast curing; flow easily between well-mated surfaces.

Epoxy: Good structural strength; joint is usually rigid. Some require two-part formulations.

A large variety of formulations and properties are available.

Anaerobics: Used for securing nuts and bolts and other joints with small clearances; cures in the absence of oxygen.

Silicones: Flexible adhesive with good high-temperature performance (400°F, 200°C).

Polyester hot melt: Good structural adhesive; easy to apply with special equipment.

Polyurethane: Good bonding; provides a flexible joint.

REFERENCES

1. ISO 8992:2005 *Fasteners - General requirements for bolts, screws, studs, and nuts*. Geneva, Switzerland: International Organization for Standardization, 2005.
2. ASTM International. *Publication STP 587, Metric Mechanical Fasteners*. West Conshohocken, PA: ASTM International, originally published 1975, updated 2011.
3. Barrett, R. T., and National Aeronautics and Space Administration (NASA). *Fastener Design Manual: NASA Reference Publication 1228*. Seattle, WA: Create Space/Amazon.com, 2012.
4. Bickford, J. H. *Introduction to the Design and Behavior of Bolted Joints: Non-Gasketed Joints*. 4th ed. Boca Raton, FL: CRC Press, 2008. [See also Payne, Item 16.]
5. Bickford, J. H., and Sayed Nassar (eds). *Handbook of Bolts and Bolted Joints*. New York: Marcel Dekker, 1998.
6. Blake, Alexander. *Design of Mechanical Joints*. Boca Raton, FL: CRC Press, 1985. [Note: This is a reference book recommended by International Fasteners Institute.]
7. Blake, Alexander. *What Every Engineer Should Know About Threaded Fasteners—Materials and Design*. Boca Raton, FL: CRC Press, 1986. [Note: This is a reference book recommended by International Fasteners Institute.]
8. Fastener Technology International. *Torque Tensioning: A Ten Part Compilation*. Stow, OH: Fastener Technology International/Initial Publications, Inc., 1990. [Note: This is a reference book recommended by International Fasteners Institute.]
9. Hoelscher, R. P. et al. *Graphics for Engineers*. New York: John Wiley & Sons, 1968.
10. Industrial Fasteners Institute. *IFI Inch Fastener Standards Book*. 9th ed. Independence, OH: Industrial Fasteners Institute, 2014.
11. International Organization for Standardization. *ISO Metric Screw Thread and Fastener Handbook*. 5th ed. Independence, OH: Industrial Fasteners Institute, 2001; Updated 2010.
12. Kulak, G. L., J. W. Fisher, and J. H. A. Struik. *Guide to Design Criteria for Bolted and Riveted Joints*. 2nd ed. Chicago, IL: American Institute of Steel Construction, 2001.
13. Lincoln, Brayton, K. J. Gomes, and J. F. Branden. *Mechanical Fastening of Plastics: An Engineering Handbook*. Boca Raton, FL: CRC Press, 1984. [Note: This is a reference book recommended by International Fasteners Institute.]

14. Oberg, E., F. D. Jones, H. L. Horton, and H. H. Ryffel. *Machinery's Handbook*. 30th ed. New York: Industrial Press, 2015.
15. Parmley, R. O. *Standard Handbook of Fastening and Joining*. 3rd ed. New York: McGraw-Hill, 1997.
16. Payne, James R. *Introduction to the Design and Behavior of Bolted Joints: Gasketed Bolted Joints*. 4th ed. New York: Taylor & Francis, 2016.
17. Research Council on Structural Connections. *Specification for Structural Joints Using High-Strength Bolts*. Chicago, IL: Research Council on Structural Connections, 2014.
18. SAE International. *SAE Standard J429, Mechanical and Material Requirements for Externally Threaded Fasteners*. Warrendale, PA: SAE International, 2014.
19. SAE International. *SAE Standard J1199, Mechanical and Material Requirements for Metric Externally Threaded Fasteners*. Warrendale, PA: SAE International, 2013.
20. ASTM International. *ASTM Standard A307-14, Standard Specifications for Carbon Steel Bolts and Studs, 60,000 psi Tensile Strength*. West Conshohocken, PA: ASTM International, 2014, DOI 10.1520/A0307-14.
21. ASTM International. *ASTM Standard A325-14, Standard Specifications Structural Bolts, Steel, 120/105 Minimum Tensile Strength*. West Conshohocken, PA: ASTM International, 2014, DOI 10.1520/A0325-14.
22. ASTM International. *ASTM Standard A354-11, Standard Specifications for Quenched and Tempered Alloy Steel Bolts, Studs and Other Externally Threaded Fasteners*. West Conshohocken, PA: ASTM International, 2011, DOI 10.1520/A0354-11.
23. ASTM International. *ASTM Standard A449-14, Standard Specifications for Hex Cap Screws, Bolts and Studs, Steel, Heat Treated, 120/105/90 Minimum Tensile Strength, General Use*. West Conshohocken, PA: ASTM International, 2014, DOI 10.1520/A0449-14.
24. ASTM International. *ASTM Standard A490-14a, Standard Specifications for Structural Bolts, Alloy Steel, Heat Treated, 150 ksi Minimum Tensile Strength*. West Conshohocken, PA: ASTM International, 2014, DOI 10.1520/A0490-14.
25. ASTM International. *ASTM Standard A563, 2015 Standard Specifications for Carbon and Alloy Steel Nuts*. West Conshohocken, PA: ASTM International, 2015, DOI 10.1520/A0563-15.
26. ASTM International. *ASTM Standard A563M-07(R2013), Standard Specifications for Carbon and Alloy Steel Nuts (Metric)*. West Conshohocken, PA: ASTM International, 2013, DOI 10.1520/A0563M-13.
27. ASTM International. *ASTM Standard A574-13, Standard Specifications for Alloy Steel Socket Head Cap Screws*. West Conshohocken, PA: ASTM International, 2013, DOI 10.1520/A0574-13.
28. ASTM International. *ASTM Standard 325M-14, Standard Specifications for Structural Bolts, Steel, Heat Treated 830 MPa Minimum Tensile Strength (Metric)*. West Conshohocken, PA: ASTM International, 2014, DOI 10.1520/A0574M-14. [Metric companion to Specification A325, Reference 21.]

INTERNET SITES RELATED TO FASTENERS

1. **Industrial Fasteners Institute (IFI)**. An association of manufacturers and suppliers of bolts, nuts, screws, rivets, and special formed parts and the materials and equipment to make them. IFI develops standards, organizes research, and conducts education programs related to the fasteners industry.
2. **Research Council on Structural Connections (RCSC)**. An organization that stimulates and supports research on structural connections, prepares and publishes standards, and conducts educational programs. See Reference 12.
3. **Accurate Fasteners, Inc.** A supplier of bolts, cap screws, nuts, rivets, and numerous other types of fasteners for general industry uses. Also provides adhesives for structural and nonstructural applications, thread locking adhesives, and tapes.
4. **The Fastener Group**. A supplier of bolts, cap screws, nuts, rivets, and numerous other types of fasteners for military and general industrial uses.
5. **Haydon Bolts, Inc.** Manufacturer of bolts, nuts, and numerous other types of fasteners for the construction industry.
6. **Nucor Fastener Division**. Manufacturer of hex head cap screws in ASME, ASTM, and metric grades, hex nuts, and structural bolts, nuts and washers.
7. **Nylok Fastener Corporation**. Manufacturer of Nylok® self-locking fasteners for automotive, aerospace, consumer products, agricultural, industrial, furniture, and many other applications.
8. **Phillips Screw Company**. Developer of the Phillips® screwdriver. Manufacturer of related fasteners for the aerospace, automotive, and industrial markets.
9. **Unbrako Group**. Manufacturer of high-strength socket head cap screws and related products for industrial, aerospace, automotive, and other applications under the Unbrako and Durlok brands. Part of Deepak Fasteners, Ltd. Engineering guide available on the website.
10. **St. Louis Screw & Bolt Company**. Manufacturer of bolts, nuts, and washers to ASTM standards for the construction industry.
11. **Acument® Global Technologies**. Provider of fasteners and related products to the automotive, electronics, and other manufacturing industries under the Camrail®, Camcar® and Ring Screw brands. Products include cap screws, thread forming self-tapping screws, the Torx Plus® drive system, and other related products.
12. **Sensor Products, Inc.** Provider of tactile thin film surface pressure and force sensors useful in designing and verifying the effectiveness of bolted joints, gaskets, seals, and related applications. Also offers consulting services to clients.
13. **Alcoa Fastening Systems/Huck Fasteners**. Manufacturer of Huck LockBolts and structural blind fasteners for the truck, trailer, agricultural, HVAC, aerospace, industrial equipment, and other markets, often replacing welding or traditional nut/bolt fastening methods.
14. **ASTM International**. A standards-setting organization with numerous standards for engineering materials, fasteners, and associated products.

15. **SAE International.** SAE International is a global body of scientists, engineers, and practitioners that advances self-propelled vehicle and system knowledge in a neutral forum for the benefit of society. The mission involves standards-setting activities mostly related to aerospace, automotive, and commercial vehicles.
16. **Hytorc Company.** Manufacturer of hydraulic and pneumatic automatic torque tensioners, mechanical tensioners, and *Stretch-to-Load* technology.
17. **Loctite Adhesives.** Provider of adhesives for industry, construction, commercial, and household use, including epoxies, cyanoacrylates, contact cements, construction adhesives, and the Loctite threadlocker. Part of Henkel Corporation that offers several dozen additional adhesive brands serving a wide range of uses. Part of Henkel Corporation.
18. **International Organization for Standardization (ISO).** An independent, non-governmental international organization that brings together experts to develop voluntary, consensus-based International Standards that support innovation and provide solutions to global challenges. Based in Geneva, Switzerland.

PROBLEMS

1. Describe the difference between a screw and a bolt.
2. Define the term *proof strength*.
3. Define the term *clamping load*.
4. Specify suitable machine screws to be installed in a pattern of four, equally spaced around a flange, if the clamping force between the flange and the mating structure is to be 6000 lb. Then recommend a suitable tightening torque for each screw.
5. What would be the tensile force in a machine screw having an 8–32 thread if it is made from SAE Grade 5 steel and is stressed to its proof strength?
6. What would be the tensile proof force in newtons (N) in a machine screw having a major diameter of 4 mm with standard fine threads if it is made from steel having a metric strength grade of 8.6?
7. What would be the nearest standard metric screw thread size to the American Standard 7/8–14 thread? By how much do their major diameters differ?
8. A machine screw is found with no information given as to its size. The following data are found by using a standard micrometer caliper: The major diameter is 0.196 in; the axial length for 20 full threads is 0.630 in. Identify the thread.
9. A threaded fastener is made from nylon 6/6 with an M10 × 1.5 thread. Compute the maximum tensile force that can be permitted in the fastener if it is to be stressed to 75% of the tensile strength of the nylon 66 dry. See Appendix 13.
10. Compare the tensile force that can be carried by a 1/4–20 screw if it is to be stressed to 50% of its tensile strength and if it is made from each of the following materials:
 - (a) Steel, SAE Grade 2
 - (b) Steel, SAE Grade 5
 - (c) Steel, SAE Grade 8
 - (d) Steel, ASTM Grade A307
 - (e) Steel, ASTM Grade A574
 - (f) Steel, metric Grade 8.8
 - (g) Aluminum 2024-T4
 - (h) SAE 430 annealed
 - (i) Ti–6Al–4V annealed
 - (j) Nylon 66 dry
 - (k) Polycarbonate
 - (l) High-impact ABS
11. Describe the differences among welding, brazing, and soldering.
12. What types of metals are typically brazed?
13. What are some common brazing alloys?
14. What materials make up commonly used solders?
15. Name five common adhesives, and give the typical properties of each.
16. The label of a common household adhesive describes it as a *cianoacrylate*. What would you expect its properties to be?
17. Find three commercially available adhesives from your home, a laboratory, a machine shop, or your workplace. Try to identify the generic nature of the adhesive, and compare it with the list presented in this chapter.

MACHINE FRAMES, BOLTED CONNECTIONS, AND WELDED JOINTS

The Big Picture

You Are the Designer

20–1 Objectives of This Chapter

20–2 Machine Frames and Structures

20–3 Eccentrically Loaded Bolted Joints

20–4 Welded Joints

THE BIG PICTURE

Machine Frames, Bolted Connections, and Welded Joints

Discussion Map

- As you develop the design of machine elements (as you have throughout this book), you must also design the housing, frame, or structure that supports them and protects them from the elements.
- You need knowledge of both fabrication methods and design approaches that provide safe, rigid frames and structures that can be reliably manufactured.

Discover

Select a variety of products, machines, vehicles, and even toys. Observe how they are built. What is the basic shape of the structure that holds everything together? Why was that shape chosen by the designer? What functions are performed by the frame?

What kinds of forces, bending moments, and torsional moments (torques) are produced when the product is operating? How are they managed and controlled? What is the load path that delivers them to the ultimate structure?

This chapter will help you identify some efficient approaches to the design of structures and frames and to analyze the performance of fasteners and welded joints loaded in many different ways.

Thus far in this book, you have studied individual machine elements while simultaneously considering how those elements must work together in a more comprehensive machine. As the design progresses, there comes a time when *you must put it all together*. But then you are faced with the questions, “What do I put it in? How do I hold all of the functional components safely, allowing assembly and service while providing a secure, rigid structure?”

It is impractical to generate a completely general approach to the design of a structure or a frame for a machine, a vehicle, a consumer product, or even a

toy. Each is different with regard to its functions; the number, size, and type of components in the product; the intended use; and the expected demand for an aesthetic design. For example, toys often exhibit clever design approaches because the manufacturer wants to provide a safe, functional toy while minimizing the material used and the amount of personnel time required to produce the toy.

In this chapter you will explore some basic concepts for creating a satisfactory frame design, considering the shape of structural components, material properties, the use of fasteners such as bolts, and

the fabrication of welded assemblies. You will learn some of the techniques for analyzing and designing bolted assemblies to consider loads on the bolts in several directions. The design of welded joints to be safe and rigid is discussed.

Chapter 19 covered the part of the story dealing with bolts loaded in pure tension, as in a clamping function. This chapter extends that chapter to consider eccentrically loaded joints: those that must resist a combination of direct shear and a bending moment on a bolt pattern.

The ability of a welded joint to carry a variety of loads is discussed with the objective of designing the weld. Here both uniformly loaded and eccentrically loaded joints are treated.

To appreciate the value of such study, select a variety of products, machines, and vehicles, and observe how they are built. What is the basic shape of the structure that holds everything together? Where are forces, bending moments, and torsional moments (torques) generated? What kinds of stress do they create? Consider the *load path* by following a force from the place where it is generated through all of the means by which that force or its effects are passed to

a series of members and to the point where it is supported by a basic frame of the machine or where it is delivered out of the system of interest. Considering the load paths for all forces that exist in a mechanical device should give you an understanding of the desirable characteristics of the structure and should help you know how to produce a design that optimizes the management of the forces exerted on it.

Take apart a variety of mechanical devices to observe their structure. How did shape contribute to the rigidity and safety of the device? Is it rather stiff? Or is it more flexible? Are there ribs or thickened sections to provide special strength or rigidity for certain parts?

This chapter will help you identify some efficient approaches to the design of structures and frames and to analyze the performance of fasteners and welded joints loaded in many ways.

The subject of machine frames and structures is quite complex. It is discussed from the standpoint of general principles and guidelines, rather than specific design techniques. Critical frames are typically designed with computerized finite-element analysis. Also, experimental stress analysis techniques are often used to verify designs.

YOU ARE THE DESIGNER

In Chapter 16, you were the designer of bearings for conveyor systems for a large product distribution center. Now, how do you design the frame and the structure of the conveyor system? What general form is desirable? What materials and shape should be used for the structural elements? Are the elements loaded in tension, compression, bending, shear, torsion, or some combination of these types of stress? How do the manner of loading and the nature of the stress in the structure affect these decisions? Should the frame be fabricated from standard structural shapes and bolted together? Or should it be made from steel plate and welded? How about using aluminum? Or should it be cast from cast iron or cast steel? Can it be molded from plastic? Can composites be used? How would the weight of the structure be affected? How much rigidity is desirable for this kind of structure? What shapes of load-carrying elements

contribute to a stiff, rigid structure, as well as one that is safe in resisting applied stresses?

If the structure involves bolting or welding, how are the joints to be designed? What forces, both magnitude and direction, must be carried by the fasteners or the welds?

The material in this chapter will help you make some of these design decisions. Much of the information is general in nature rather than giving you specific design procedures. You must exercise judgment and creativity not only in the design of the conveyor frame but also in the analysis of its components. Because the frame design could evolve into a form too complex for analysis using traditional techniques of stress analysis, you may have to employ finite-element modeling to determine whether the design is adequate or, perhaps, overdesigned. Perhaps one or more prototypes should be built for testing. ■

20-1 OBJECTIVES OF THIS CHAPTER

After completing this chapter, you will be able to:

1. Apply the principles of stress and deflection analysis to propose a reasonable and efficient shape for a structure or frame and for the components involved.
2. Specify materials that are well suited to the demands of a given design, given certain conditions of load, environment, fabrication requirements, safety, and esthetics.

3. Analyze eccentrically loaded bolted joints.
4. Design welded joints to carry many types of loading patterns.

20-2 MACHINE FRAMES AND STRUCTURES

The design of machine frames and structures is largely art in that the components of the machine must be accommodated. The designer is often restricted in where supports can be placed in order not to interfere with the

operation of the machine or in order to provide access for assembly or service.

But, of course, technical requirements must be met as well for the structure itself. Some of the more important design parameters include the following:

| | |
|----------------------|---------------------|
| Strength | Stiffness |
| Appearance | Cost to manufacture |
| Corrosion resistance | Weight |
| Size | Noise reduction |
| Vibration limitation | Life |

Because of the virtually infinite possibilities for design details for frames and structures, this section will concentrate on general guidelines. The implementation of the guidelines would depend on the specific application. Factors to consider in starting a design project for a frame are now summarized:

- Forces exerted by the components of the machine through mounting points such as bearings, pivots, brackets, and feet of other machine elements
- Manner of support of the frame itself
- Precision of the system: allowable deflection of components
- Environment in which the unit will operate
- Quantity of production and facilities available
- Availability of analytical tools such as computerized stress analysis, past experience with similar products, and experimental stress analysis
- Relationship to other machines, walls, and so on

Again, many of these factors require judgment by the designer. The parameters over which the designer has the most control are material selection, the geometry of load-carrying parts of the frame, and manufacturing processes. A review of some possibilities follows.

Materials

As with machine elements discussed throughout this book, the material properties of strength and stiffness are of prime importance. Chapter 2 presented an extensive amount of information about materials, and the Appendices contain much useful information. In general, steel ranks high in strength compared with competing materials for frames. But it is often better to consider more than just yield strength, ultimate tensile strength, or endurance strength alone. The complete design can be executed in several candidate materials to evaluate the overall performance. Considering the *ratio of strength to density*, sometimes referred to as the *strength-to-weight ratio* or *specific strength*, may lead to a different material selection. Indeed, this is one reason for the use of aluminum, titanium, and composite materials in aircraft, aerospace vehicles, and transportation equipment.

Rigidity of a structure or a frame is frequently the determining factor in the design, rather than strength.

In these cases, the stiffness of the material, indicated by its modulus of elasticity, is the most important factor. Again, the *ratio of stiffness to density*, called *specific stiffness*, may need to be evaluated. See Table 2-17 and Figures 2-23, 2-24, 2-31, and 2-32 for data.

Recommended Deflection Limits

Actually, only intimate knowledge of the application of a machine member or a frame can give a value for an acceptable deflection. But some guidelines are available to give you a place to start. (See Reference 7.)

Deflection due to Bending

General machine part: 0.0005 to 0.003 in/in of beam length

Moderate precision: 0.000 01 to 0.0005 in/in

High precision: 0.000 001 to 0.000 01 in/in

Deflection (Rotation) due to Torsion

General machine part: 0.001° to 0.01°/in of length

Moderate precision: 0.000 02° to 0.0004°/in

High precision: 0.000 001° to 0.000 02°/in

Suggestions for Design to Resist Bending

Scrutiny of a table of deflection formulas for beams in bending such as those in Appendix 14 would yield the following form for the deflection:

$$\Delta = \frac{PL^3}{KEI} \quad (20-1)$$

where P = load

L = length between supports

E = modulus of elasticity of the material in the beam

I = moment of inertia of the cross section of the beam

K = a factor depending on the manner of loading and support

Some obvious conclusions from Equation (20-1) are that the load and the length should be kept small, and the values of E and I should be large. Note the cubic function of the length. This means, for example, that reducing the length by a factor of 2.0 would reduce the deflection by a factor of 8.0, obviously a desirable effect.

Figure 20-1 shows the comparison of four types of beam systems to carry a load, P , at a distance, a , from a rigid support. A cantilever beam is taken as the “basic case”, with a load of 1200 lb, 30 in from its fixed support. Using standard beam formulas, we computed the value of the bending moment and the deflection in terms of P and a , and these values were arbitrarily normalized to be 1.0 for the cantilever. Then the values for the three other cases were computed and ratios determined relative to the basic case. The data show that a fixed-end beam gives both the lowest bending moment and the lowest deflection, while the cantilever gives the highest values for both.

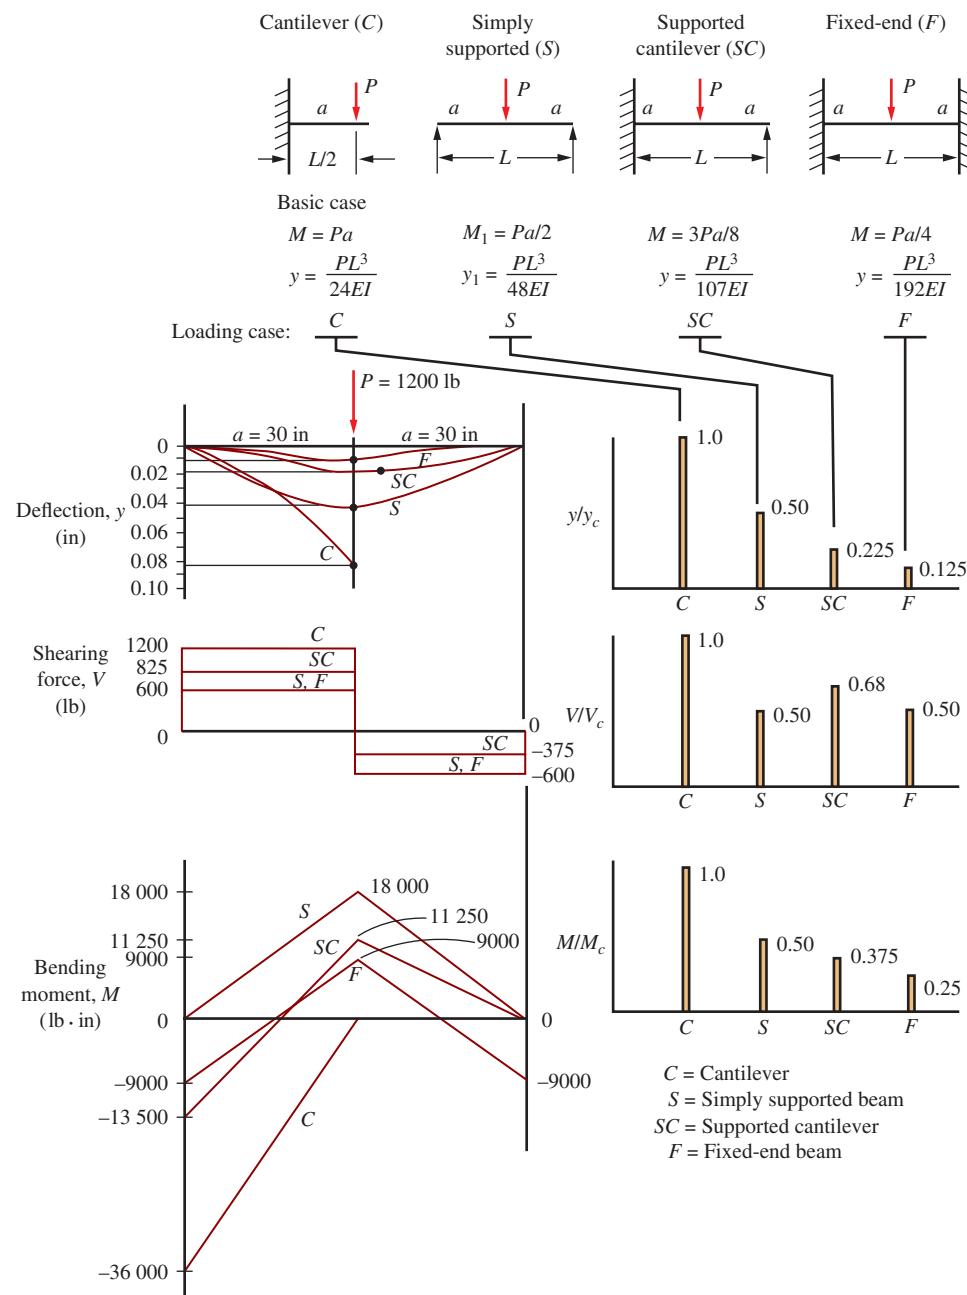


FIGURE 20-1 Comparison of methods of supporting a load on a beam (Reference 17)

In summary, the following suggestions are made for designing to resist bending:

1. Keep the length of the beam as short as possible, and place loads close to the supports.
2. Maximize the moment of inertia of the cross section in the direction of bending. In general, you can do so by placing as much of the material as far away from the neutral axis of bending as possible, as in a wide-flange beam or a hollow rectangular section.
3. Use a material with a high modulus of elasticity.
4. Use fixed ends for the beam where possible.
5. Consider lateral deflection in addition to deflection in the primary load direction. Such loads could be encountered during fabrication, handling, shipping, careless use, or casual bumping.
6. Be sure to evaluate the final design with regard to both strength and rigidity. Some approaches to improving rigidity (increasing I) can actually increase the stress in the beam because the section modulus is decreased.
7. Provide rigid corner bracing in open frames.
8. Cover an open frame section with a sheet material to resist distortion. This process is sometimes called *panel stiffening*.

9. Consider a truss-type construction to obtain structural stiffness with lightweight members.
10. When designing an open space frame, use diagonal bracing to break sections into triangular parts, an inherently rigid shape.
11. Consider stiffeners for large panels to reduce vibration and noise. See Figure 2–29.
12. Add bracing and gussets to areas where loads are applied or at supports to help transfer the forces into adjoining members.
13. Beware of load-carrying members with thin, extended flanges that may be placed in compression. Local buckling, sometimes called *crippling* or *wrinkling*, could occur.
14. Place connections at points of low stress if possible.

See also References 1, 4, 6, 7, and 10 for additional design and analysis techniques.

Suggestions for Design of Members to Resist Torsion

Torsion can be created in a machine frame member in a variety of ways: A support surface may be uneven; a machine or a motor may transmit a reaction torque to the frame; or a load acting to the side of the axis of the beam (or any place away from the flexural center of the beam) would produce twisting.

In general, the torsional deflection of a member is computed from

$$\theta = \frac{TL}{GR} \quad (20-2)$$

where T = applied torque or twisting moment

L = length over which torque acts

G = shear modulus of elasticity of the material

R = torsional rigidity constant

The designer must choose the shape of the torsion member carefully to obtain a rigid structure. The following suggestions are made:

1. Use closed sections wherever possible. Examples are solid bars with large cross section, hollow pipe and tubing, closed or hollow rectangular or square tubing, and special closed shapes that approximate a tube.
2. Conversely, avoid open sections made from thin materials. Figure 20–2 shows a dramatic illustration.
3. For wide frames, brackets, tables, bases, and so on, use diagonal braces placed at 45° to the sides of the frame (see Figure 20–3).
4. Use rigid connections, such as by welding members together.

Most of the suggestions made in this section can be implemented regardless of the specific type of frame

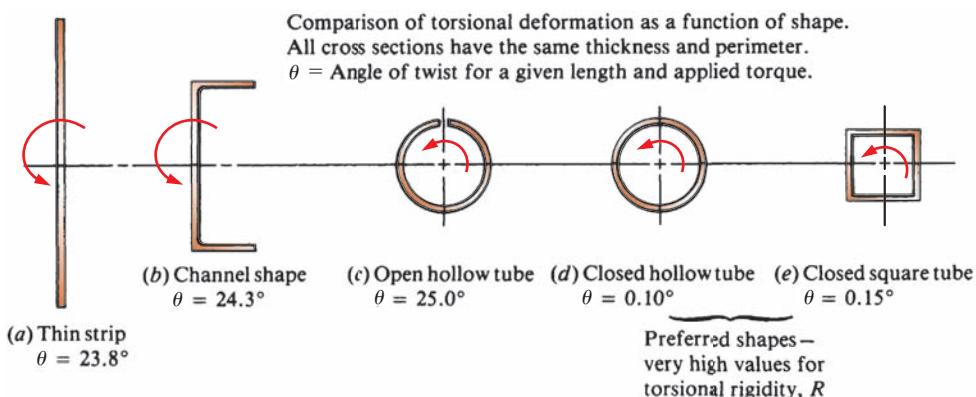


FIGURE 20–2 Comparison of torsional deformation as a function of shape

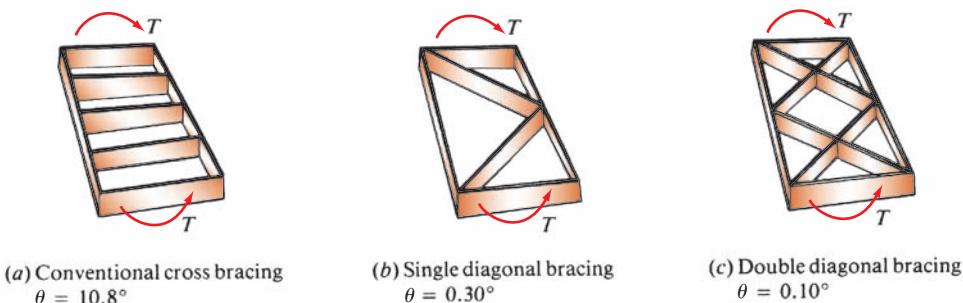


FIGURE 20–3 Comparison of torsional angle of twist, θ , for boxlike frames. Each has the same basic dimensions and applied torque

designed: castings made from cast iron, cast steel, aluminum, zinc, or magnesium; weldments made from steel or aluminum plate; formed housings from sheet metal or plate; or plastic moldings. The references in this chapter provide valuable additional guidance as you complete the design of frames, structures, and housings. See References 1, 4, 6, 7, 10–12, and 18. See also Internet sites 1–12.

20-3 ECCENTRICALLY LOADED BOLTED JOINTS

Figure 20–4 shows an example of an eccentrically loaded bolted joint. The motor on the extended bracket places the bolts in shear because its weight acts directly downward. But there also exists a moment equal to $P \times a$ that must be resisted. The moment tends to rotate the bracket and thus to shear the bolts.

The basic approach to the analysis and design of eccentrically loaded joints is to determine the forces that act on each bolt caused by all the applied loads. Then, by a process of superposition, the loads are combined vectorially to determine which bolt carries the greatest load. That bolt is then sized. The method will be illustrated in Example Problem 20–1.

The American Institute of Steel Construction (AISC) lists allowable stresses for bolts made from ASTM grade steels, as shown in Table 20–1. These data are for bolts used in standard-sized holes, 1/16 in larger than the bolt. Also, a *friction-type connection*, in which the clamping force is sufficiently large that the friction between the mating parts helps carry some of the shear load, is assumed. (See References 1–3, 14, 19, 20, and 22.)

In the design of bolted joints, you should ensure that there are no threads in the plane where shear

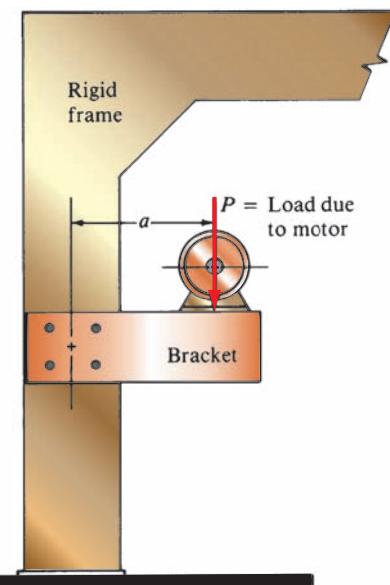


FIGURE 20–4 Eccentrically loaded bolted joint

TABLE 20-1 Allowable Stresses for Bolts

| ASTM grade | Allowable shear stress | Allowable tensile stress |
|---------------|------------------------|--------------------------|
| A307 | 10 ksi (69 MPa) | 20 ksi (138 MPa) |
| A325 and A449 | 17.5 ksi (121 MPa) | 44 ksi (303 MPa) |
| A490 | 22 ksi (152 MPa) | 54 ksi (372 MPa) |

occurs. The body of the bolt will then have a diameter equal to the major diameter of the thread. You can use the tables in Chapter 19 to select the standard size for a bolt.

Example Problem 20-1

For the bracket in Figure 20–4, assume that the total force P is 3500 lb and the distance a is 12 in. Design the bolted joint, including the location and number of bolts, the material, and the diameter.

Solution

The solution shown is an outline of a procedure that can be used to analyze similar joints. The data of this problem illustrate the procedure.

Step 1. Propose the number of bolts and the pattern. This is a design decision, based on your judgment and the geometry of the connected parts. In this problem, let's try a pattern of four bolts placed as shown in Figure 20–5.

Step 2. Determine the direct shear force on the bolt pattern and on each individual bolt, assuming that all bolts share the shear load equally:

$$\text{Shear load} = P = 3500 \text{ lb}$$

$$\text{Load per bolt} = F_s = P/4 = 3500 \text{ lb}/4 = 875 \text{ lb/bolt}$$

The shear force acts directly downward on each bolt.

Step 3. Compute the **moment** to be resisted by the bolt pattern: the product of the overhanging load and the distance to the **centroid** of the bolt pattern. In this problem, $M = P \times a = (3500 \text{ lb})(12 \text{ in}) = 42000 \text{ lb} \cdot \text{in}$.

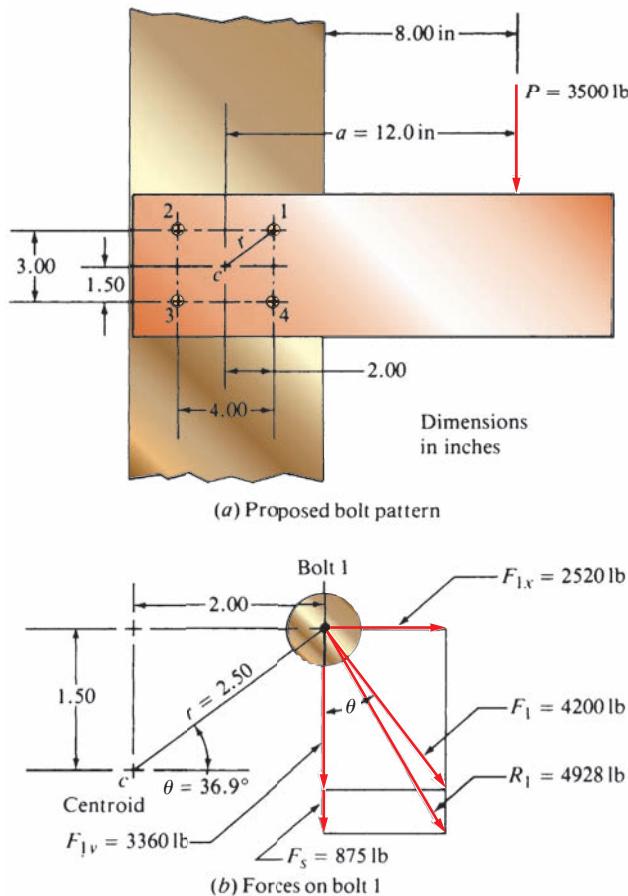


FIGURE 20-5 Geometry of bolted joint and forces on bolt 1

Step 4. Compute the radial distance from the centroid of the bolt pattern to the center of each bolt. In this problem, each bolt has a radial distance of

$$r = \sqrt{(1.50 \text{ in})^2 + (2.00 \text{ in})^2} = 2.50 \text{ in}$$

Step 5. Compute the sum of the squares of all radial distances to all bolts. In this problem, all four bolts have the same r . Then

$$\sum r^2 = 4(2.50 \text{ in})^2 = 25.0 \text{ in}^2$$

Step 6. Compute the force on each bolt required to resist the bending moment from the relation

$$F_i = \frac{Mr_i}{\sum r^2} \quad (20-3)$$

where r_i = radial distance from the centroid of the bolt pattern to the i th bolt

F_i = force on the i th bolt due to the moment. The force acts perpendicular to the radius.

In this problem, all such forces are equal. For example, for bolt 1,

$$F_1 = \frac{Mr_1}{\sum r^2} = \frac{(42000 \text{ lb} \cdot \text{in})(2.50 \text{ in})}{25.0 \text{ in}^2} = 4200 \text{ lb}$$

Step 7. Determine the resultant of all forces acting on each bolt. A vector summation can be performed either analytically or graphically, or each force can be resolved into horizontal and vertical components. The components can be summed and then the resultant can be computed.

Let's use the latter approach for this problem. The shear force acts directly downward, in the y -direction. The x - and y -components of F_1 are

$$F_{1x} = F_1 \sin \theta = (4200 \text{ lb}) \sin(36.9^\circ) = 2520 \text{ lb}$$

$$F_{1y} = F_1 \cos \theta = (4200) \cos(36.9^\circ) = 3360 \text{ lb}$$

The total force in the y -direction is then

$$F_{1y} + F_s = 3360 + 875 = 4235 \text{ lb}$$

Then the resultant force on bolt 1 is

$$R_1 = \sqrt{(2520)^2 + (4235)^2} = 4928 \text{ lb}$$

Step 8. Specify the bolt material; compute the required area for the bolt; and select an appropriate size. For this problem, let's specify ASTM A325 steel for the bolts having an allowable shear stress of 17 500 psi from Table 20–1. Then the required area for the bolt is

$$A_s = \frac{R_1}{\tau_a} = \frac{4928 \text{ lb}}{17500 \text{ lb/in}^2} = 0.282 \text{ in}^2$$

The required diameter would be

$$D = \sqrt{\frac{4A_s}{\pi}} = \sqrt{\frac{4(0.282 \text{ in}^2)}{\pi}} = 0.599 \text{ in}$$

Let's specify a 5/8-in bolt having a diameter of 0.625 in.

20-4 WELDED JOINTS

The design of welded joints requires consideration of the manner of loading on the joint, the types of materials in the weld and in the members to be joined, and the geometry of the joint itself. The load may be either uniformly distributed over the weld such that all parts of the weld

are stressed to the same level or eccentrically applied. Both are discussed in this section.

The materials of the weld and the parent members determine the allowable stresses. Table 20–2 lists several examples for steel and aluminum. The allowables listed are for shear on fillet welds. For steel, welded by the

TABLE 20–2 Allowable Shear Stresses on Fillet Welds for Steel and Aluminum

A. Steel

| Electrode type | Typical metals joined (ASTM grade) | Allowable shear stress |
|----------------|------------------------------------|------------------------|
| E60 | A36, A500 | 18 ksi (124 MPa) |
| E70 | A242, A441 | 21 ksi (145 MPa) |
| E80 | A572, Grade 65 | 24 ksi (165 MPa) |
| E90 | | 27 ksi (186 MPa) |
| E100 | | 30 ksi (207 MPa) |
| E110 | | 33 ksi (228 MPa) |

B. Aluminum

| Metal joined | Filler Alloy | | | | | | | |
|--------------|------------------------|-----|------|-----|------|-----|------|-----|
| | 1100 | | 4043 | | 5356 | | 5556 | |
| | Allowable shear stress | | | | | | | |
| ksi | MPa | ksi | MPa | ksi | MPa | ksi | MPa | ksi |
| 1100 | 3.2 | 22 | 4.8 | 33 | | | | |
| 3003 | 3.2 | 22 | 5.0 | 34 | | | | |
| 6061 | | | 5.0 | 34 | 7.0 | 48 | 8.5 | 59 |
| 6063 | | | 5.0 | 34 | 6.5 | 45 | 6.5 | 45 |

electric arc method, the type of electrode is an indication of the tensile strength of the filler metal. For example, the E70 electrode has a minimum tensile strength of 70 ksi (483 MPa). Additional data are available in publications of the American Welding Society (AWS), the American Institute for Steel Construction (AISC), and the Aluminum Association (AA). See Reference 1 and Internet sites 3, 6–8, and 10.

Types of Joints

Joint type refers to the relationship between mating parts, as illustrated in Figure 20–6. The butt weld allows a joint to be the same nominal thickness as the mating parts and is usually loaded in tension. If the joint is properly made with the appropriate weld metal, the joint will be stronger than the parent metal. Thus, no special analysis of the joint is required if the joined members themselves are shown to be safe. Caution is

advised, however, when the materials to be joined are adversely affected by the heat of the welding process. Heat-treated steels and many aluminum alloys are examples. The other types of joints in Figure 20–6 are assumed to place the weld in shear.

Types of Welds

Figure 20–7 shows several types of welds named for the geometry of the edges of the parts to be joined. Note the special edge preparation required, especially for thick plates, to permit the welding rod to enter the joint and build a continuous weld bead.

Size of Weld

The five types of groove-type welds in Figure 20–7 are made as complete penetration welds. Then, as indicated

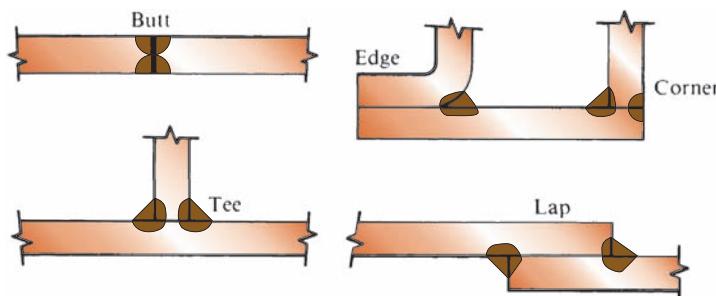


FIGURE 20–6 Types of weld joints

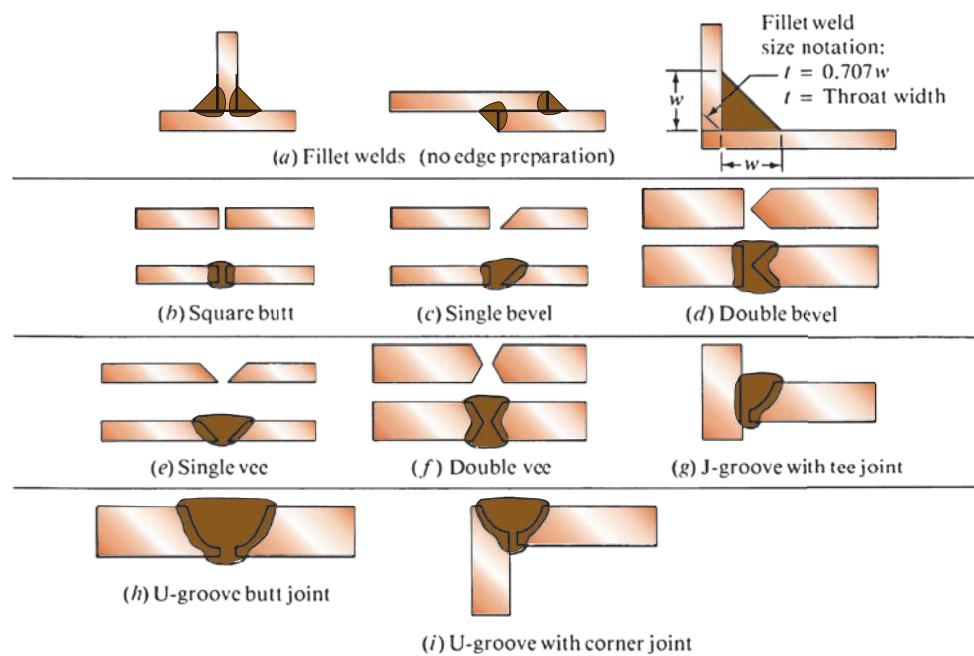


FIGURE 20–7 Some types of welds showing edge preparation

before for butt welds, the weld is stronger than the parent metals, and no further analysis is required.

Fillet welds are typically made as equal-leg right triangles, with the size of the weld indicated by the length of the leg. A fillet weld loaded in shear would tend to fail along the shortest dimension of the weld that is the line from the root of the weld to the theoretical face of the weld and normal to the face. The length of this line is found from simple trigonometry to be $0.707w$, where w is the leg dimension. See Part (a) of Figure 20–7.

The objectives of the design of a fillet-welded joint are to specify the length of the legs of the fillet; the pattern of the weld; and the length of the weld. Presented here is the method that treats the weld as a line having no thickness. The method involves determining the *maximum force per inch* of weld leg length. Comparing the actual force with an allowable force allows the calculation of the required leg length.

Table 20–3 gives data for the allowable shear stress and the allowable force per inch for some combinations of base metal and welding electrode. In general, the allowables for building-type structures are for steady loads. The values for bridge-type loading accounts for the cyclic effects. For true fatigue-type repeated loading, refer to the literature. (See References 1, 6–10, 13, 15, 16, 21, and 23.)

Method of Treating a Weld as a Line

Four different types of loading are considered here: (1) direct tension or compression, (2) direct vertical shear, (3) bending, and (4) twisting. The method allows the designer to perform calculations in a manner very similar to that used to design the load-carrying members themselves. In general, the weld is analyzed separately for each type of loading to determine the force per inch of weld size due to each load. The loads are then combined vectorially to determine the maximum force. This maximum force is compared with the allowables from Table 20–3 to determine the size of the weld required. See References 6 and 7.

TABLE 20–3 Allowable Shear Stresses and Forces on Welds

| Base metal ASTM grade | Electrode | Allowable shear stress | Allowable force per inch of leg |
|---------------------------|-----------|---------------------------|---------------------------------------|
| Building-type structures: | | | |
| A36, A441 | E60 | 13 600 psi | 9600 lb/in |
| A36, A441 | E70 | 15 800 psi | 11 200 lb/in |
| Bridge-type structures: | | | |
| A36 | E60 | 12 400 psi | 8800 lb/in |
| A441, A242 | E70 | 14 700 psi | 10 400 lb/in |

The relationships used are summarized as follows:

| Type of loading | Formula (and equation number) for force per inch of weld |
|-------------------------------|--|
| Direct tension or compression | $f = P/A_w$ (20–4) |
| Direct vertical shear | $f = V/A_w$ (20–5) |
| Bending | $f = M/S_w$ (20–6) |
| Twisting | $f = T_c/J_w$ (20–7) |

In these formulas, the geometry of the weld is used to evaluate the terms A_w , S_w , and J_w , using the relationships shown in Figure 20–8. Note the similarity between these formulas and those used to perform the stress analysis. Note, also, the similarity between the geometry factors for welds and the properties of areas used for the stress analysis. Because the weld is treated as a line having no thickness, the units for the geometry factors are different from those of the area properties, as indicated in Figure 20–8.

The use of this method of weld analysis will be demonstrated with example problems. In general, the method requires the steps in the *General Procedure for Designing Welded Joints*.

GENERAL PROCEDURE FOR DESIGNING WELDED JOINTS ▾

- Propose the geometry of the joint and the design of the members to be joined.
- Identify the types of stresses to which the joint is subjected (bending, twisting, vertical shear, direct tension, or compression).
- Analyze the joint to determine the magnitude and the direction of the force on the weld due to each type of load.
- Combine the forces vectorially at the point or points of the weld where the forces appear to be maximum.
- Divide the maximum force on the weld by the allowable force from Table 20–3 to determine the required leg size for the weld. Note that when thick plates are welded, there are minimum acceptable sizes for the welds as listed in Table 20–4.

TABLE 20–4 Minimum Weld Sizes for Thick Plates

| Plate thickness (in) | Minimum leg size for fillet weld (in) |
|---------------------------------------|---------------------------------------|
| $\leq 1/2$ | 3/16 |
| $> 1/2\text{--}3/4$ | 1/4 |
| $> 3/4\text{--}1\frac{1}{2}$ | 5/16 |
| $> 1\frac{1}{2}\text{--}2\frac{1}{4}$ | 3/8 |
| $> 2\frac{1}{4}\text{--}6$ | 1/2 |
| > 6 | 5/8 |

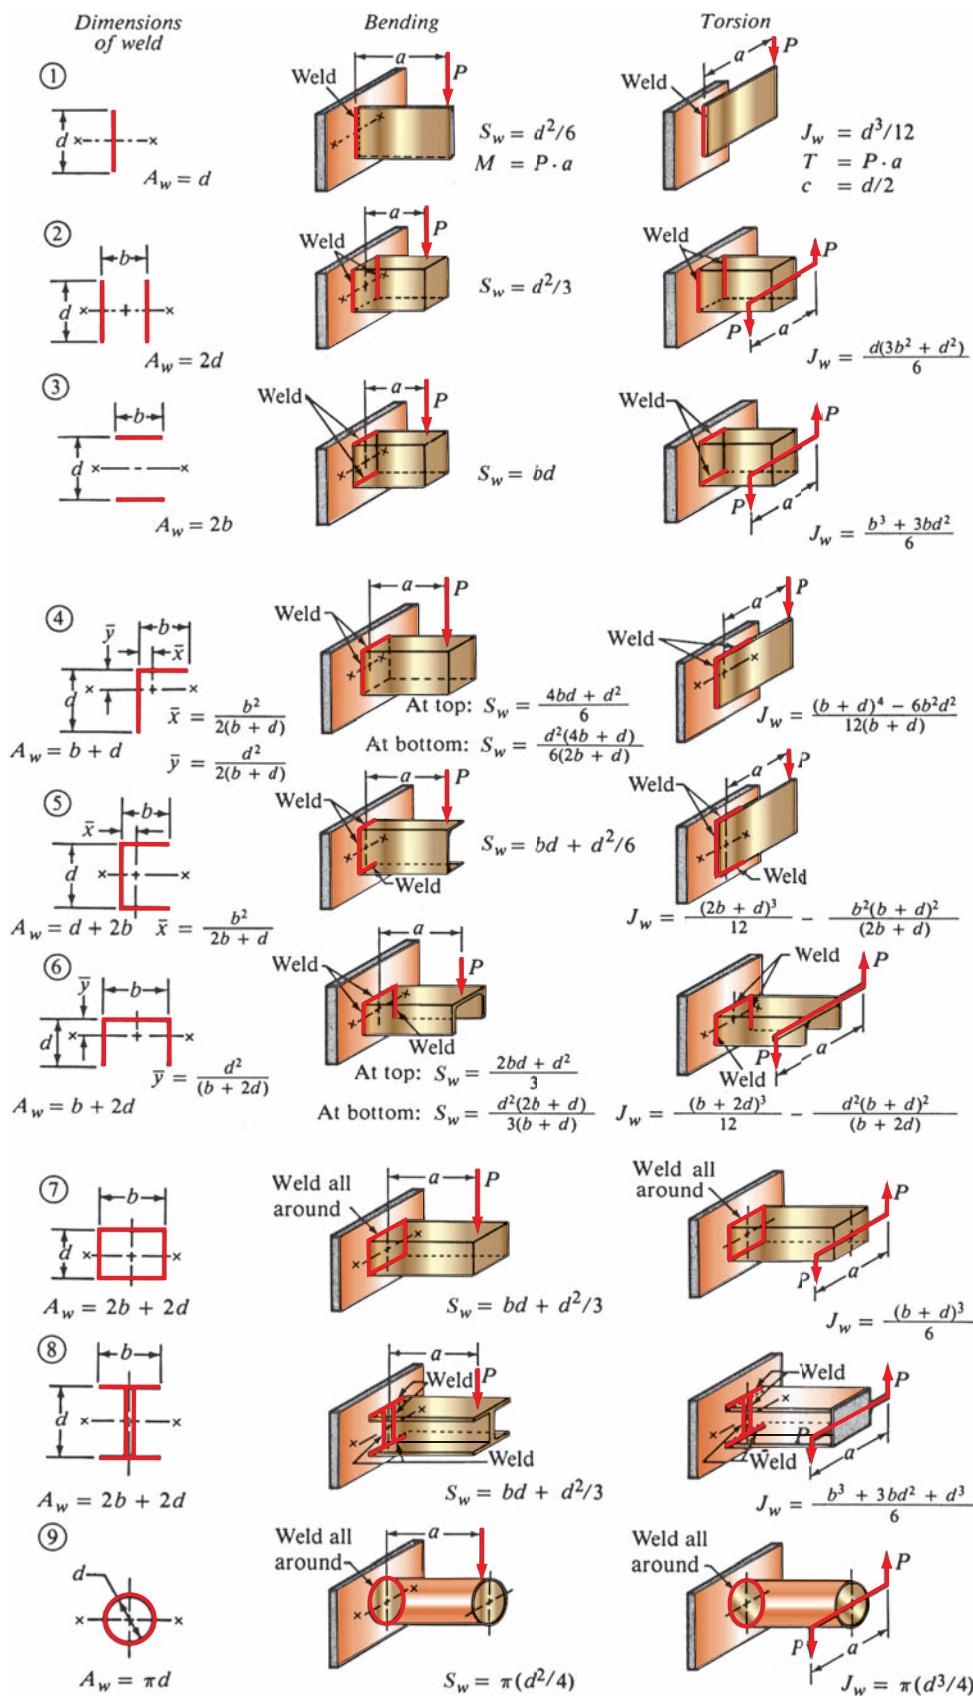


FIGURE 20-8 Geometry factors for weld analysis

**Example Problem
20-2**

Design a bracket similar to that in Figure 20–4, but use welding to attach the bracket to the column. The bracket is 6.00 in high and is made from ASTM A36 steel having a thickness of 1/2 in. The column is also made from A36 steel and is 8.00 in wide.

Solution

Step 1. The proposed geometry is a design decision and may have to be subjected to some iteration to achieve an optimum design. For a first trial, let's use the C-shaped weld pattern shown in Figure 20–9.

Step 2. The weld will be subjected to direct vertical shear and torsion caused by the 3500-lb load on the bracket.

Step 3. To compute the forces on the weld, we must know the geometry factors A_w and J_w . Also, the location of the centroid of the weld pattern must be computed [see Figure 20–9(b)]. Use Case 5 in Figure 20–8.

$$A_w = 2b + d = 2(4) + 6 = 14 \text{ in}$$

$$J_w = \frac{(2b + d)^3}{12} - \frac{b^2(b + d)^2}{(2b + d)} = \frac{(14)^3}{12} - \frac{16(10)^2}{14} = 114.4 \text{ in}^3$$

$$\bar{x} = \frac{b^2}{2b + d} = \frac{16}{14} = 1.14 \text{ in}$$

Force due to Vertical Shear

$$V = P = 3500 \text{ lb}$$


$$f_s = P/A_w = (3500 \text{ lb})/14 \text{ in} = 250 \text{ lb/in}$$

This force acts vertically downward on all parts of the weld.

Forces due to the Twisting Moment


$$T = P[8.00 + (b - \bar{x})] = 3500[8.00 + (4.00 - 1.14)]$$

$$T = 3500(10.86) = 38\,010 \text{ lb}\cdot\text{in}$$

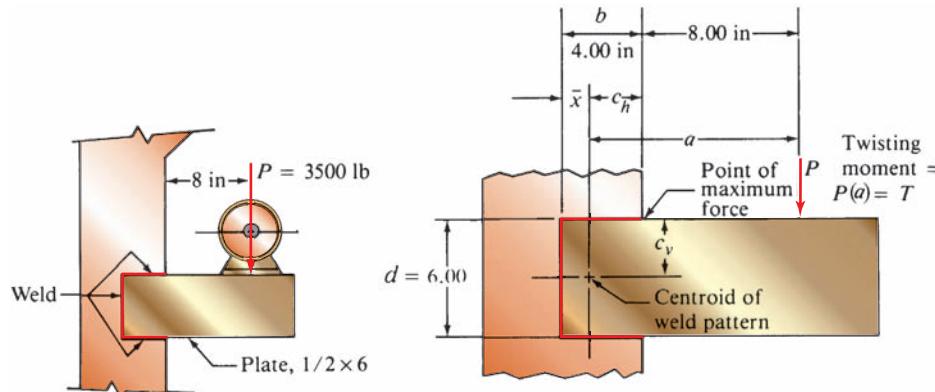

(a) Basic design of bracket

(b) Dimensions of bracket

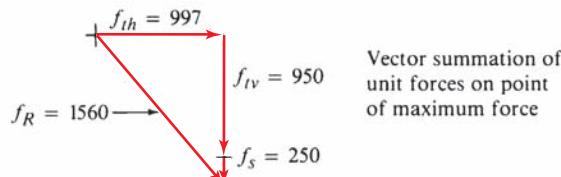

(c) Analysis of forces

FIGURE 20-9 C-shaped weld bracket

The twisting moment causes a force to be exerted on the weld that is perpendicular to a radial line from the centroid of the weld pattern to the point of interest. In this case, the end of the weld to the upper right experiences the greatest force. It is most convenient to break the force down into horizontal and vertical components and then subsequently recombine all such components to compute the resultant force:

$$f_{th} = \frac{Tc_v}{J_w} = \frac{(38\ 010)(3.00)}{114.4} = 997 \text{ lb/in}$$

$$f_{tv} = \frac{Tc_h}{J_w} = \frac{(38\ 010)(2.86)}{114.4} = 950 \text{ lb/in}$$

Step 4. The vectorial combination of the forces on the weld is shown in Figure 20–9(c). Thus, the maximum force is 1560 lb/in.

Step 5. Selecting an E60 electrode for the welding, we find that the allowable force per inch of weld leg size is 9600 lb/in (Table 20–3). Then the required weld leg size is

$$w = \frac{1560 \text{ lb/in}}{9600 \text{ lb/in per in of leg}} = 0.163 \text{ in}$$

Table 20–4 shows that the minimum size weld for a 1/2-in plate is 3/16 in (0.188 in). That size should be specified.

Example Problem 20–3 A steel strap, 1/4 in thick, is to be welded to a rigid frame to carry a dead load of 12 500 lb, as shown in Figure 20–10. Design the strap and its weld.

Solution The basic objectives of the design are to specify a suitable material for the strap, the welding electrode, the size of the weld, and the dimensions W and h , as shown in Figure 20–10. Note that the welds are only on the vertical sides of the strap.

Let's specify that the strap is to be made from ASTM A441 structural steel and that it is to be welded with an E70 electrode, using the minimum size weld, 3/16 in. Appendix 7 gives the yield strength of the A441 steel as 42 000 psi. Using a design factor of 2, we can compute an allowable stress of

$$\sigma_a = 42\ 000/2 = 21\ 000 \text{ psi}$$

Then the required area of the strap is

$$A = \frac{P}{\sigma_a} = \frac{12\ 500 \text{ lb}}{21\ 000 \text{ lb/in}^2} = 0.595 \text{ in}^2$$

But the area is $W \times t$, where $t = 0.25$ in. Then the required width W is

$$W = A/t = 0.595 \text{ in}^2/0.25 \text{ in} = 2.38 \text{ in}$$

Let's specify that $W = 2.50$ in

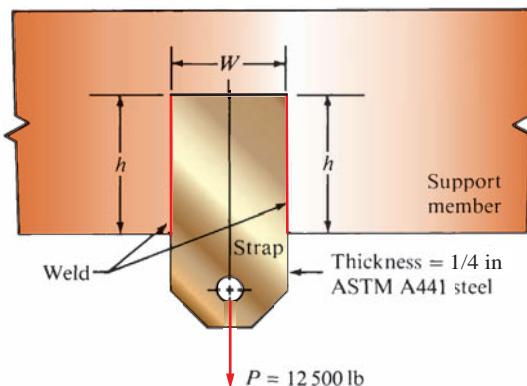


FIGURE 20–10 Steel strap

To compute the required length of the weld h , we need the allowable force on the 3/16-in weld. Table 20–3 indicates the allowable force on the A441 steel welded with an E70 electrode to be 11 200 lb/in per inch of leg size. Then

$$f_a = \frac{11\,200 \text{ lb/in}}{1.0\text{-in leg}} \times 0.188\text{-in leg} = 2100 \text{ lb/in}$$

The actual force on the weld is

$$f_a = P/A_w = P/2h$$

Then solving for h gives

$$h = \frac{P}{2(f_a)} = \frac{12\,500 \text{ lb}}{2(2100 \text{ lb/in})} = 2.98 \text{ in}$$

Let's specify $h = 3.00 \text{ in}$.

Example Problem 20–4

Evaluate the design shown in Figure 20–11 with regard to stress in the welds. All parts of the assembly are made of ASTM A36 structural steel and are welded with an E60 electrode. The 2500-lb load is a dead load.

Solution

The critical point would be the weld at the top of the tube where it is joined to the vertical surface. At this point, there is a three-dimensional force system acting on the weld, as shown in Figure 20–12. The offset location of the load causes a twisting on the weld that produces a force f_t on the weld toward the

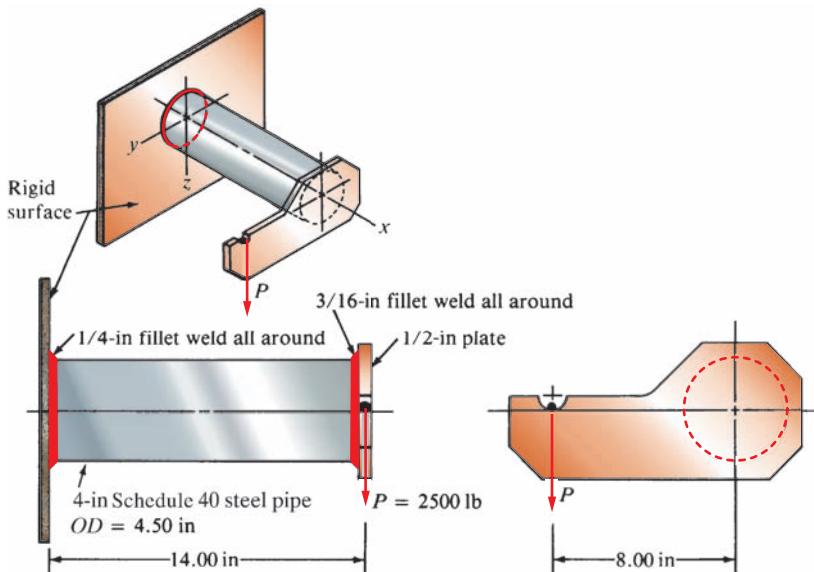


FIGURE 20–11 Bracket assembly

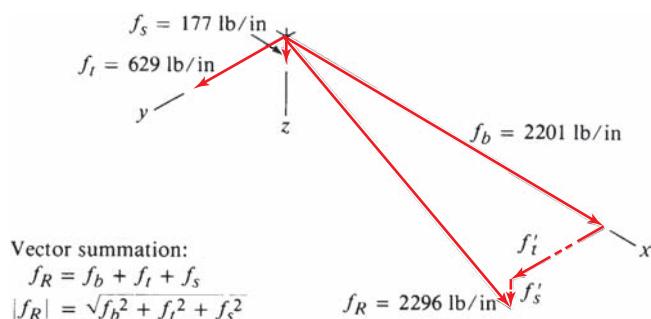


FIGURE 20–12 Force vectors

left in the y -direction. The bending produces a force f_b acting outward along the x -axis. The vertical shear force f_s acts downward along the z -axis.

From statics, the resultant of the three force components would be

$$f_R = \sqrt{f_t^2 + f_b^2 + f_s^2}$$

Now each component force on the weld will be computed.

Twisting Force, f_t

$$f_t = \frac{Tc}{J_w}$$

$$T = (2500 \text{ lb})(8.00 \text{ in}) = 20000 \text{ lb} \cdot \text{in}$$

$$c = OD/2 = 4.500 \text{ in}/2 = 2.25 \text{ in}$$

$$J_w = (\pi)(OD)^3/4 = (\pi)(4.500 \text{ in})^3/4 = 71.57 \text{ in}^3$$

Then

$$f_t = \frac{Tc}{J_w} = \frac{(20000 \text{ lb} \cdot \text{in})(2.25 \text{ in})}{71.57 \text{ in}^3} = 629 \text{ lb/in}$$

Bending Force, f_b

$$f_b = \frac{M}{S_w}$$

$$M = (2500 \text{ lb})(14.00 \text{ in}) = 35000 \text{ lb} \cdot \text{in}$$

$$S_w = (\pi)(OD)^2/4 = (\pi)(4.500 \text{ in})^2/4 = 15.90 \text{ in}^2$$

Then

$$f_b = \frac{M}{S_w} = \frac{35000 \text{ lb} \cdot \text{in}}{15.90 \text{ in}^2} = 2201 \text{ lb/in}$$

Vertical Shear Force, f_s

$$f_s = \frac{P}{A_w}$$

$$A_w = (\pi)(OD) = (\pi)(4.500 \text{ in}) = 14.14 \text{ in}$$

$$f_s = \frac{P}{A_w} = \frac{2500 \text{ lb}}{14.14 \text{ in}} = 177 \text{ lb/in}$$

Now the resultant can be computed: (Note: All terms have the unit of lb/in.)

$$f_R = \sqrt{f_t^2 + f_b^2 + f_s^2}$$

$$f_R = \sqrt{629^2 + 2201^2 + 177^2} = 2296 \text{ lb/in}$$

Comparing this with the allowable force on a 1.0-in weld gives minimum size for the weld leg to be

$$w = \frac{2296 \text{ lb/in}}{9600 \text{ lb/in per inch of leg size}} = 0.239 \text{ in}$$

The 1/4-in fillet specified in Figure 20–11 is satisfactory.

REFERENCES

- American Institute of Steel Construction. *Steel Construction Manual*. 14th ed. Chicago, IL: American Institute of Steel Construction, 2011.
- Bickford, J. H. *Introduction to the Design and Behavior of Bolted Joints: Non-Gasketed Joints*. 4th ed. Boca Raton, FL: CRC Press, 2008.
- Bickford, J. H., and Sayed Nassar, editors. *Handbook of Bolts and Bolted Joints*. New York: Marcel Dekker, 1978.
- Blair, M., T. L. Stevens, and B. Linskey, editors. *Steel Castings Handbook*. 6th ed. Materials Park, OH: ASM International, 1996.
- Blake, Alexander. *Design of Mechanical Joints*. Boca Raton, FL: CRC Press, 1985.
- Blodgett, O. W. *Design of Welded Structures*. Cleveland, OH: James F. Lincoln Arc Welding Foundation, 1976.
- Blodgett, O. W. *Design of Weldments*. Cleveland, OH: James F. Lincoln Arc Welding Foundation, 1998.

8. Cary, H. B., and S. Helzer. *Modern Welding Technology*. 6th ed. Upper Saddle River, NJ: Pearson/Prentice Hall, 2004.
9. Geary, D., and R. Miller. *Welding*. 2nd ed. New York: McGraw-Hill, 2011.
10. Hicks, J. *Welded Design: Theory and Practice*. Cambridge, UK and Philadelphia, PA: Woodhead Publishing, 2001.
11. Humpston, G., and Jacobson, D. M. *Principles of Soldering*. Materials Park, OH: ASM International, 2004.
12. Jacobson, D. M., and G. Humpston. *Principles of Brazing*. Materials Park, OH: ASM International, 2005.
13. Jeffus, L. *Welding and Metal Fabrication*. Florence, KY: Delmar Cengage Learning, 2011.
14. Kulak, G. L., J. W. Fisher, and J. H. A. Struik. *Guide to Design Criteria for Bolted and Riveted Joints*. Chicago, IL: American Institute for Steel Construction (AISC), 2001.
15. Lohwasser, D., and A. W. Chen. *Friction Stir Welding: From Basics to Application*. Cambridge, UK and Philadelphia, PA: Woodhead Publishing, 2010.
16. Mathers, Gene. *The Welding of Aluminum and Its Alloys*. Boca Raton, FL: CRC Press, 2002.
17. Mott, R. L. and J. A. Untener. *Applied Strength of Materials*. 6th ed. Boca Raton, FL: CRC Press, 2017.
18. Hobbacher, A. F. *Recommendations for Fatigue Design of Welded Joints and Components*. 2nd ed. New York: Springer Publishing Company, 2016.
19. Oberg, E., F. D. Jones, H. L. Horton, and H. H. Ryffel. *Machinery's Handbook*. 30th ed. New York: Industrial Press, 2015.
20. Parmley, R. O. *Standard Handbook of Fastening and Joining*. 3rd ed. New York: McGraw-Hill, 1997.
21. Althouse, A. D., Carl H. Turnquist, William Bowditch, Kevin Bowditch, and Mark Bowditch. *Modern Welding*, 11th ed. Tinley Park, IL: Goodheart-Wilcox Publisher, 2013.
22. Research Council on Structural Connections. *Specification for Structural Joints Using High-Strength Bolts*. Chicago, IL: Research Council on Structural Connections, 2014.
23. Weman, K. *Welding Processes Handbook*. 2nd ed. Cambridge, UK and Philadelphia, PA: Woodhead Publishing, 2012.

INTERNET SITES FOR MACHINE FRAMES, BOLTED CONNECTIONS, AND WELDED JOINTS

Also refer to the Internet sites from Chapter 19 on Fasteners that includes many related to bolted connections.

1. **Steel Founders' Society of America.** An association of companies providing foundry services. Site includes useful casting information, a glossary of foundry terms, and a framework for designing.

2. **American Foundry Society.** A professional society that promotes research and technology for the foundry industry. Site includes a *Castingpedia* section offering numerous design tutorials, information on casting alloys, and videos of casting operations. From the home page, select *Magazines & Multimedia*. See also Internet site 9.
3. **American Welding Society.** A professional society that develops standards for the welding industry, including AWS D1.1 Structural Welding Code-Steel (2015), AWS D1.2 Structural Welding Code-Aluminum (2008), and many others. Site offers ways to access standards and its American Welding Online learning system. Also provides links to SENSE (School Excelling through National Skill Standards Education) and guidelines for welder training.
4. **James F. Lincoln Foundation.** An organization that promotes education and training in welding technology. The site includes technical papers and general information about welding processes, joint design, and guides to welded steel construction. The site includes sections called *Learn It*, *Teach It*, and *Build It* that offer books and digital media.
5. **Miller Electric Company.** A manufacturer of a wide variety of welding equipment and accessories for the professional welding community and occasional welders. Site includes a Resources section containing welding guidelines, and welding videos.
6. **Lincoln Electric Company.** A manufacturer of a wide variety of welding equipment and accessories for the welding industry. The site includes an Education section that provides education support materials and technical articles about welding technology.
7. **Hobart Brothers Company.** A manufacturer of numerous types of filler metal products, electrodes, and steel wire for the welding industry. Site offers a Support tab containing downloadable posters and charts on welding.
8. **Hobart Institute of Welding Technology.** An educational organization that provides instruction in the performance of welding techniques. The site includes a bookstore offering numerous books and DVDs for welding training.
9. **Metal Casting Design.** An online resource for metal casting buyers and design engineers, sponsored by the American Foundry Society. The site includes a metal casting process selector, casting tutorials, and training for buyers and designers. The casting tutorials follow a casting project from design through manufacturing issues and terminology involved in the selection, design, purchase, production, and use of metal castings. See also Internet site 2.
10. **Aluminum Association.** The Association promotes the use of aluminum and represents U.S.- and foreign-based primary producers of aluminum, aluminum recyclers, and producers of fabricated products, as well as industry suppliers. Publishes *Aluminum Standards and Data* in both U.S. and metric units, *Aluminum Design Manual*, and various books on welding aluminum.
11. **North American Die Casting Association.** NADCA promotes industry awareness and the use of and recognition of die castings.

12. Flow-3D Cast. Software modeling a wide range of casting processes to guide users with accurate predictions of filling and solidification processes.

PROBLEMS

For Problems 1–6, design a bolted joint to join the two members shown in the appropriate figure. Specify the number of bolts, the pattern, the bolt grade, and the bolt size.

1. Figure P20–1

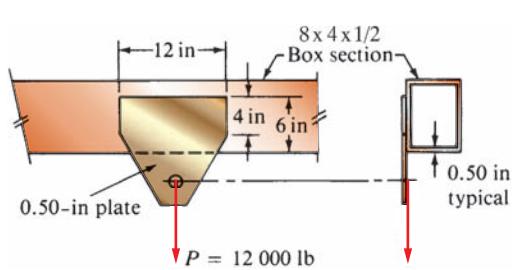


FIGURE P20–1 (Problems 1, 7, and 13)

2. Figure P20–2

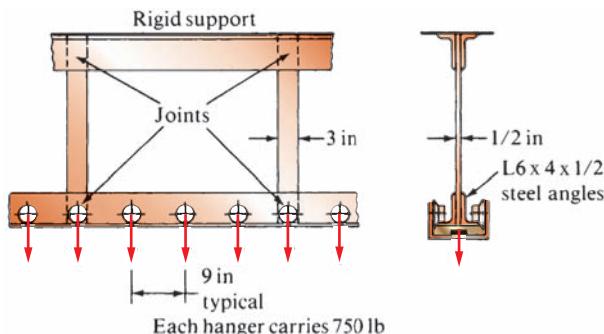


FIGURE P20–2

3. Figure P20–3

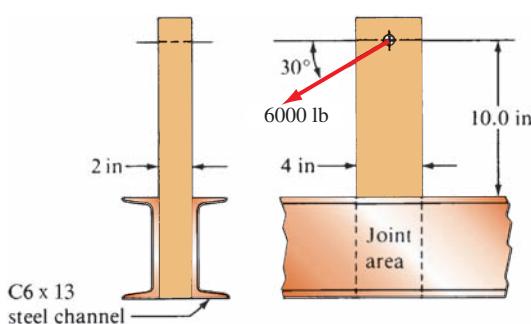


FIGURE P20–3

4. Figure P20–4

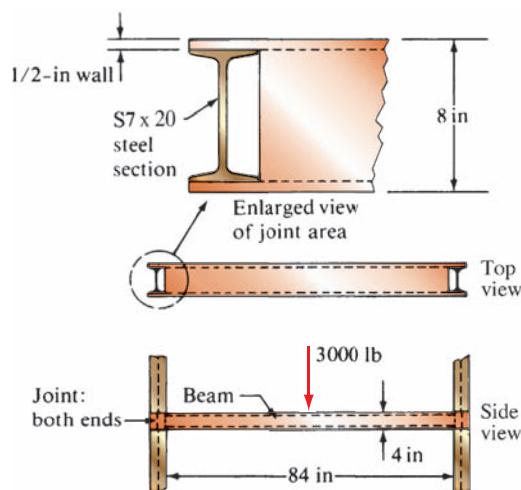


FIGURE P20–4 (Problems 4 and 8)

5. Figure P20–5


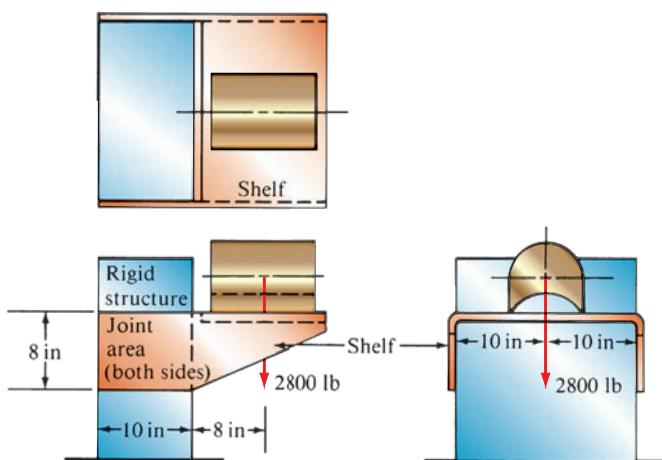


FIGURE P20–5 (Problems 5 and 9)

6. Figure P20–6

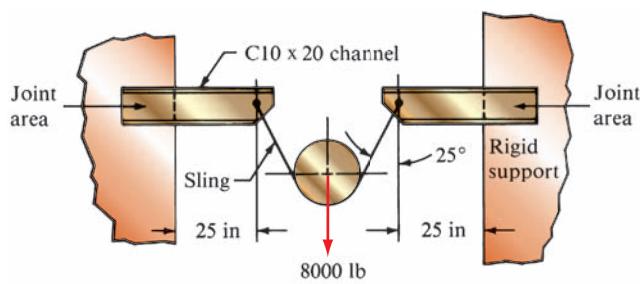

Load shared equally by four brackets (only two shown)

FIGURE P20–6 (Problems 6 and 10)

For Problems 7–12, design a welded joint to join the two members shown in the appropriate figure. Specify the weld pattern, the type of electrode to be used, and the size of weld. In Problems 7–9, the members are ASTM A36 steel. In Problems 10–12, the members are ASTM A441 steel. Use the method of treating the joint as a line, and use the allowable forces per inch of leg for building-type structures from Table 20–3.

7. Figure P20–1
8. Figure P20–4
9. Figure P20–5
10. Figure P20–6
11. Figure P20–11

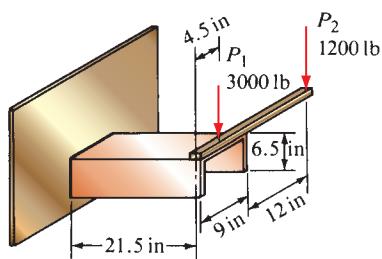


FIGURE P20–11 (Problems 11 and 12)

12. Figure P20–11 (but $P_2 = 0$)

For Problems 13–16, design a welded joint to join the two aluminum members shown in the appropriate figure. Specify the weld pattern, the type of filler alloy, and the size of weld. The types of materials joined are listed in the problems.

13. Figure P20–1: 6061: alloy (but $P = 4000$ lb)
14. Figure P20–14: 6061 alloy

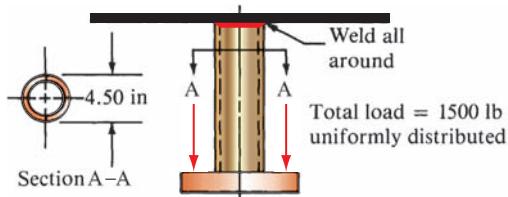


FIGURE P20–14

15. Figure P20–15: 6063 alloy

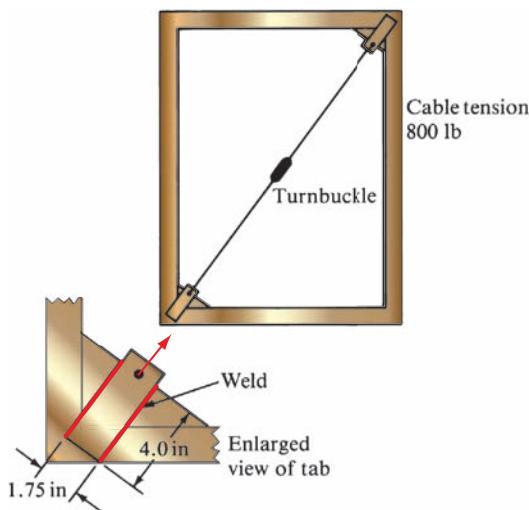


FIGURE P20–15

16. Figure P20–16: 3003 alloy

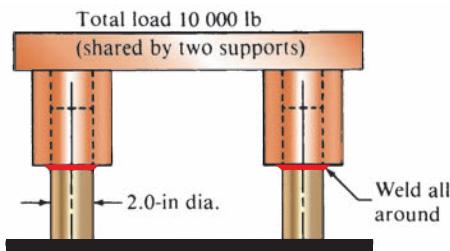


FIGURE P20–16

17. Compare the weight of a tensile rod carrying a dead load of 4800 lb if it is made from (a) SAE 1020 HR steel; (b) SAE 5160 OQT 1300 steel; (c) aluminum 2014-T6; (d) aluminum 7075-T6; (e) titanium 6Al-4V, annealed; and (f) titanium 3Al-13V-11Cr, aged. Use $N = 2$ based on strength.

ELECTRIC MOTORS AND CONTROLS

The Big Picture

You Are the Designer

- 21–1 Objectives of This Chapter
- 21–2 Motor Selection Factors
- 21–3 AC Power and General Information about AC Motors
- 21–4 Principles of Operation of AC Induction Motors
- 21–5 AC Motor Performance
- 21–6 Three-Phase, Squirrel-Cage Induction Motors
- 21–7 Single-Phase Motors
- 21–8 AC Motor Frame Types and Enclosures
- 21–9 Controls for AC Motors
- 21–10 DC Power
- 21–11 DC Motors
- 21–12 DC Motor Control
- 21–13 Other Types of Motors

THE BIG PICTURE

Electric Motors and Controls

Discussion Map

- Electric motors provide the power for a huge array of products in homes, factories, schools, commercial facilities, transportation equipment, and many portable devices.
- The two major classifications of motors are *alternating current (AC)* and *direct current (DC)*. Some can operate on either type of power.
- Motors must be connected into complete electrical systems that provide control for the motor for start/stop, speed control, overload protection, and other critical functions.

Discover

Look for a variety of machines and products that are powered by electric motors. Choose both large and small devices; some portable and some that plug into standard electrical outlets. Look around your home, at work, and in a factory.

Try to find the nameplate for each motor, and copy down as much information as you can. How are the nameplate data related to the performance characteristics of the motor? Is it an AC motor or a DC motor? How fast does it run? What is its electrical rating in terms of voltage and current?

Some motors that will operate well in the United States will run differently or will not run at all in other countries. Why? What are the electric voltage and frequency standards in various parts of the world?

This chapter will help you identify many kinds of motors, understand the general performance characteristics of each, and apply them properly.

The electric motor is widely used for providing the prime power to industrial machinery, consumer products, and business equipment. This chapter will describe the various types of motors and will discuss their performance characteristics. The objective is to provide you with the background needed to specify motors and to communicate with vendors to acquire the proper motor for a given application.

Types of motors discussed in this chapter are direct current (DC), alternating current (AC, both single-phase and three-phase), universal motors, stepper motors, and variable-speed AC motors. Motor controls, batteries, and other means of providing DC power are also discussed.

While the appearance of different types of motors and the design of component parts vary significantly,

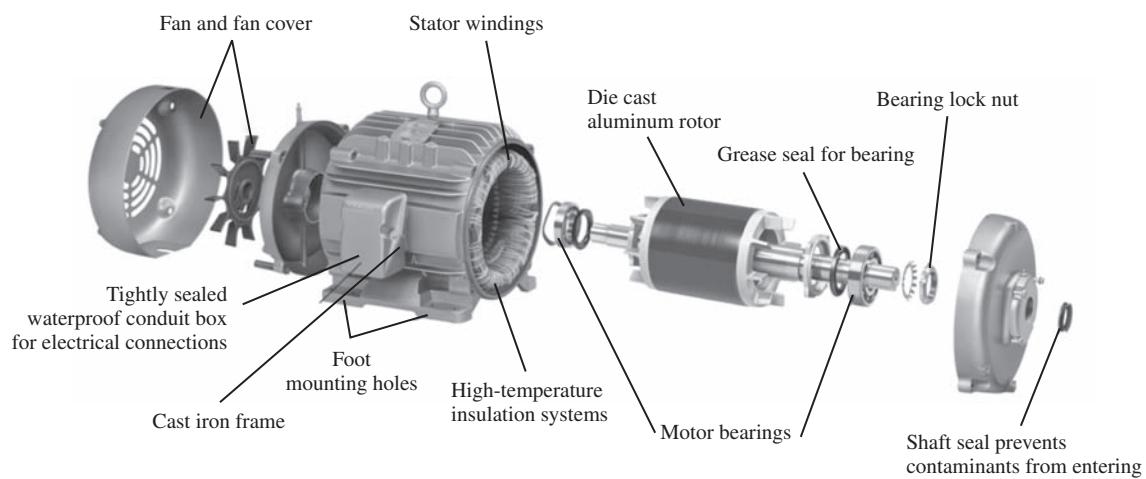


FIGURE 21-1 Exploded view of components for an AC electric induction motor (Baldor Electric Company, Greenville, SC)

it should be helpful at this time to study Figure 21-1 that shows a typical industrial-sized AC electric motor. The exploded view shows the primary components and how they are positioned relative to each other. The delivery of output power from the motor is through the *shaft* that typically runs from the rear bearing through the front of the *frame* extending out to enable connection to the driven machine or to mount a power-transmission element such as a gear, belt sheave, or chain sprocket. The shaft is supported by two precision *bearings*, typically rolling contact type, that accurately locate the axis concentric with that of the *housing*. The *rotor* of the motor is fixed to the shaft between the two bearings. The rotor reacts electromagnetically with the *windings in the stator* that is fitted inside the stationary housing. This particular motor style is called a *totally enclosed, fan cooled AC electric induction motor, TEFC* for short. Note the *fan* on the left side that rotates with the motor shaft and draws air over the housing and out the rear cover to remove heat generated by the induction process.

Now you should look for a variety of machines that are powered by electric motors: some large and some small; some portable, some that plug into standard electrical outlets, or others that are hardwired directly to an electrical circuit. Look around your home, in your car, at work, in gas stations, in shops or movie theaters, or in a factory if possible.

Try to find the nameplate for each motor and copy down as much information as you can. What does each piece of information mean? Are some electrical wiring diagrams included? How are the nameplate data related to the performance characteristics of the motor? Is it an AC motor or a DC motor? How fast does it run? What is its electrical rating in terms of voltage and current? For the motors in portable

devices, what kind of power supply is used? What kinds of batteries are required? How many? How are they connected? In series? In parallel? How do those factors relate to the voltage rating of the motor? What is the relationship between the kind of work done by the motor and the time between charging sessions?

Compare some of the larger motors with the photographs in Section 21-8 of this chapter. Can you identify the frame type? What company manufactured the motor?

See if you can find more information about the motors or their manufacturers from the Internet. Look up some of the company names in this chapter to learn more about the lines of motors that they offer. Do a broader search to find as many different types as you can.

What is the rated power for each motor? What units are used for the power rating? Convert all of the power ratings to watts. (See Appendix 17.) Then convert them all to horsepower to gain an appreciation for the physical size of various motors and to visualize the comparison between the SI unit of watts and the U.S. Customary unit of horsepower.

Separate the motors you find into those that are AC and those that are DC. Do you see any significant differences between the two classes of motors? Within each class, what variations do you see? Do any of the nameplates describe the type of motor, such as *synchronous, universal, split-phase, NEMA design C*, or other designations?

What kinds of controls are connected to the motors? Switches? Starters? Speed controls? Protection devices?

This chapter will help you identify many kinds of motors, understand the general performance characteristics of each, and apply them properly.

YOU ARE THE DESIGNER

Consider a conveyor system that you are to design. One possibility for driving the conveyor system is to use an electric motor. What type should be used? At what speed will it operate? What type of electric power is available to supply the motor? What power is required? What

type of housing and mounting style should be specified? What are the dimensions of the motor? How is the motor connected to the drive pulley of the conveyor system? The information in this chapter will help you to answer these and other questions. ■

21-1 OBJECTIVES OF THIS CHAPTER

After completing this chapter, you will be able to:

1. Describe the factors that must be specified to select a suitable motor.
2. Describe the principles of operation of AC motors.
3. Identify the typical classifications of AC electric motors according to rated power.
4. Identify the common voltages and frequencies of AC power and the speed of operation of AC motors operating on those systems.
5. Describe single-phase and three-phase AC power.
6. Describe the typical frame designs, sizes, and enclosure styles of AC motors.
7. Describe the general form of a motor performance curve.
8. Describe the comparative performance of *shaded-pole*, *permanent-split capacitor*, *split-phase*, and *capacitor-start*, single-phase AC motors.
9. Describe three-phase, squirrel-cage AC motors.
10. Describe the comparative performance of NEMA *design B*, NEMA *design C*, NEMA *design D*, and *wound-rotor* three-phase AC motors.
11. Describe *synchronous motors*.
12. Describe *universal motors*.
13. Describe three means of producing DC power and the common voltages produced.
14. Describe the advantages and disadvantages of DC motors compared with AC motors.
15. Describe four basic designs of DC motors—*shunt-wound*, *series-wound*, *compound-wound*, and *permanent magnet*—and describe their performance curves.
16. Describe torque motors, servomotors, stepper motors, brushless DC motors, and printed circuit motors.
17. Describe motor control systems for system protection, speed control, starting, stopping, and overload protection.
18. Describe speed control of AC motors.
19. Describe the control of DC motors.

21-2 MOTOR SELECTION FACTORS

As a minimum, the following items must be specified for motors:

- Motor type: DC, AC, single-phase, three-phase, and so on
- Power rating and speed
- Operating voltage and frequency
- Type of enclosure
- Frame size
- Mounting details

In addition, there may be many special requirements that must be communicated to the vendor. The primary factors to be considered in selecting a motor include the following:

- Operating torque, operating speed, and power rating. Note that these are related by the equation

$$\text{Power} = \text{torque} \times \text{speed}$$

- Starting torque.
- Load variations expected and corresponding speed variations that can be tolerated.
- Current limitations during the running and starting phases of operation.
- Duty cycle: how frequently the motor is to be started and stopped.
- Environmental factors: temperature, presence of corrosive or explosive atmospheres, exposure to weather or to liquids, availability of cooling air, and so on.
- Voltage variations expected: Most motors will tolerate up to $\pm 10\%$ variation from the rated voltage. Beyond this, special designs are required.
- Shaft loading, particularly side loads and thrust loads that can affect the life of shaft bearings.

Motor Size

A rough classification of motors by size is used to group motors of similar design. Horsepower (hp) is currently used most frequently, with the metric unit of watts or kilowatts also used at times. The conversion is

$$1.0 \text{ hp} = 0.746 \text{ kW} = 746 \text{ W}$$

The classifications are as follows:

- **Subfractional horsepower:** 1 to 40 millihorsepower (mhp), where 1 mhp = 0.001 hp. Thus, this range includes 0.001 to 0.040 hp (0.75–30 W, approximately).
- **Fractional horsepower:** 1/20 to 1.0 hp (37 to 746 W, approximately).
- **Integral horsepower:** 1.0 hp (0.75 kW) and larger.

References 1–9 provide additional information about the selection and application of electric motors. See also Internet sites 1–4, 14, and 15.

21-3 AC POWER AND GENERAL INFORMATION ABOUT AC MOTORS

Alternating current (AC) power is produced by the electric utility and delivered to the industrial, commercial, or residential consumer in a variety of forms. In the United States, AC power has a frequency of 60 hertz (Hz) or 60 cycles/s. In many other countries, 50 Hz is used. Some aircraft use 400-Hz power from an onboard generator.

AC power is also classified as single phase or three phase. Most residential units and light commercial installations have only single-phase power, carried by two conductors plus ground. The waveform of the power would appear like that in Figure 21–2, a single continuous sine wave at the system frequency whose amplitude is the rated voltage of the power. Three-phase power is carried on a three-wire system and is composed of three distinct waves of the same amplitude and frequency, with each phase offset from the next by 120°, as illustrated in Figure 21–3. Industrial and large commercial installations use three-phase power for the larger electrical loads because smaller motors are possible and there are economies of operation.

AC Voltages

Some of the more popular voltage ratings available in AC power are listed in Table 21–1. Given are the nominal system voltage and the typical motor voltage rating for that system in both single-phase and three-phase. In most cases, the highest voltage available should be used because the current flow for a given power is smaller. This allows smaller conductors to be used.

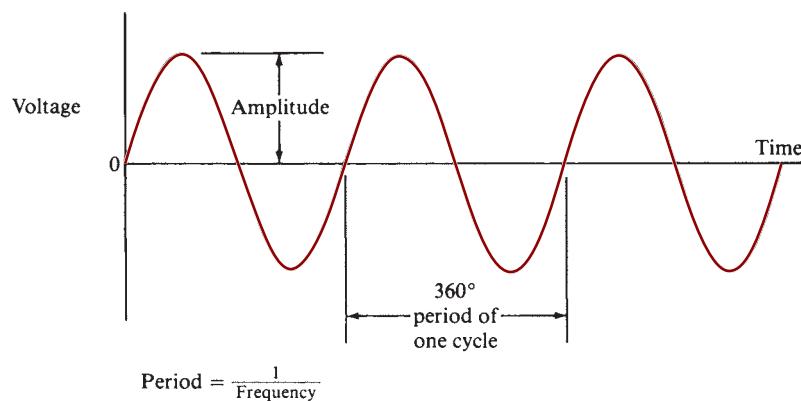


FIGURE 21-2 Single-phase AC power

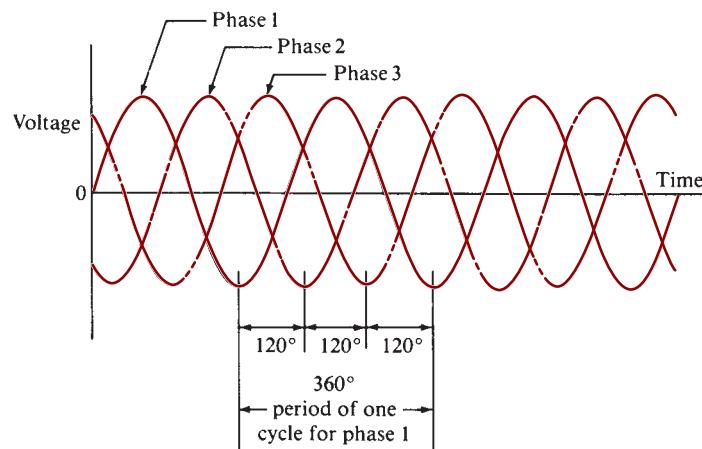


FIGURE 21-3 Three-phase AC power

TABLE 21-1 AC Motor Voltages

| System voltage | Motor voltage ratings | |
|----------------|-----------------------|-------------|
| | Single-phase | Three-phase |
| 120 | 115 | 115 |
| 120/208 | 115 | 200 |
| 240 | 230 | 230 |
| 480 | | 460 |
| 600 | | 575 |

TABLE 21-2 AC Motor Speeds for 60-Hz Power

| Number of poles | Synchronous speed (rpm) | Full-load ^a speed (rpm) |
|-----------------|-------------------------|------------------------------------|
| 2 | 3600 | 3450 |
| 4 | 1800 | 1725 |
| 6 | 1200 | 1140 |
| 8 | 900 | 850 |
| 10 | 720 | 690 |
| 12 | 600 | 575 |

^a Approximately 95% of synchronous speed (normal slip).

Speeds of AC Motors

An AC motor at zero load would tend to operate at or near its *synchronous speed*, n_s , which is related to the frequency, f , of the AC power and to the number of electrical poles, p , wound into the motor, according to the equation

Synchronous Speed

$$n_s = \frac{120f}{p} \text{ rev/min} \quad (21-1)$$

Motors have an even number of poles, usually from 2 to 12, resulting in the synchronous speeds listed in Table 21-2 for 60-Hz power. But the induction motor, the most widely used type, operates at a speed progressively slower than its synchronous speed as the load (torque) demand increases. When the motor is delivering its rated torque, it will be operating near its rated or full-load speed, also listed in Table 21-2. Note that the full-load speed is not precise and that those listed are for motors with normal slip of approximately 5%. Some motors described later are “high-slip” motors having lower full-load speeds. Some four-pole motors are rated at 1750 rpm at full load, indicating only about 3% slip. It is advisable to consult manufacturers’ literature for the full-load speed of any motor under consideration. *Synchronous motors* operate precisely at the synchronous speed with no slip.

21-4 PRINCIPLES OF OPERATION OF AC INDUCTION MOTORS

Later in this chapter, we will discuss the particular details of several different types of AC motors, but the most common of these is the *induction motor*. Refer again to Figure 21-1 that shows the components in an exploded view. Also look ahead to Figures 21-13 to 21-17 for photos of complete motors. The two active parts of an induction motor are the *stator*, or stationary element, and the *rotor*, or rotating element. Figure 21-4 shows a longitudinal cross section of an induction motor showing the stator, in the form of a hollow cylinder, fixed in the housing. The rotor is positioned inside the stator with a precise, small clearance or *gap*, and is carried on the shaft. The shaft, in turn, is supported by bearings in the housing.

The stator is constructed of many thin, flat discs of steel, called *laminations*, stacked together and insulated from one another. Figure 21-5 shows the shape of the laminations, including a series of slots around the inside. These slots are aligned as the stator laminations are stacked, thus forming channels along the length of the stator core. Several layers of copper wire are passed through the channels and are looped around to form a set of continuous coils,

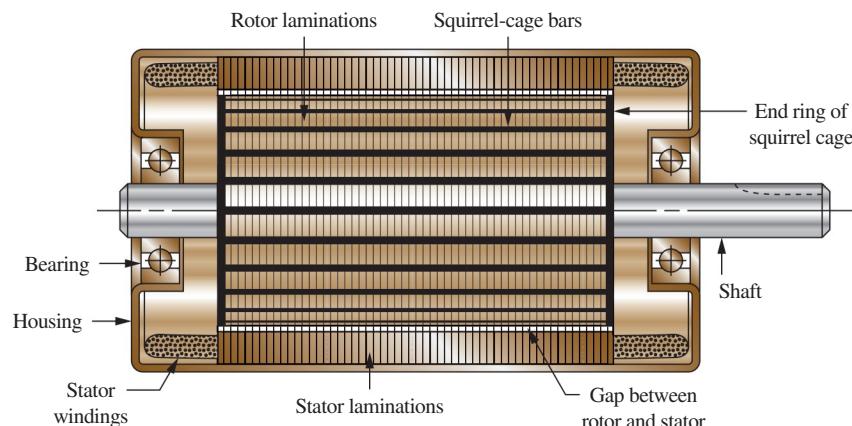


FIGURE 21-4 Longitudinal section through an induction motor

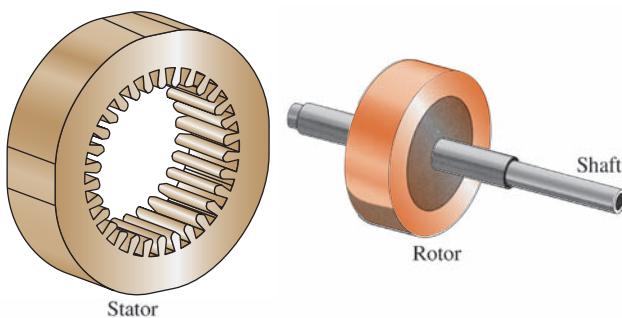


FIGURE 21-5 Induction motor laminations

called *windings*. The pattern of the coils in the stator determines the number of poles for the motor, usually 2, 4, 6, 8, 10, or 12. Table 21-2 shows that the rotational speed of the motor depends on the number of poles.

The rotor also has a lamination stack with channels along the length. The channels are typically filled with solid bars made from a good electrical conductor such as copper or aluminum, with the ends of all bars connected to continuous rings at each end. In some smaller rotors, the complete set of bars and end rings are cast from aluminum as a unit. As shown in Figure 21-6, if this casting were viewed without the laminations, it would appear similar to a squirrel cage. Thus, induction motors are often called squirrel-cage motors. The combination of the squirrel cage and the laminations is fixed onto the motor shaft with good precision to assure concentric alignment with the stator and good dynamic balance while rotating. When the rotor is installed in the supporting bearings and is inserted inside the stator, there is a small gap of approximately 0.020 in (0.50 mm) between the outer surface of the rotor and the inner surface of the stator.

Three-Phase Motors

The principles of operation of AC motors are first discussed for three-phase induction motors. Single-phase motor designs are discussed later. The three-phase electrical power, shown schematically in Figure 21-3, is connected

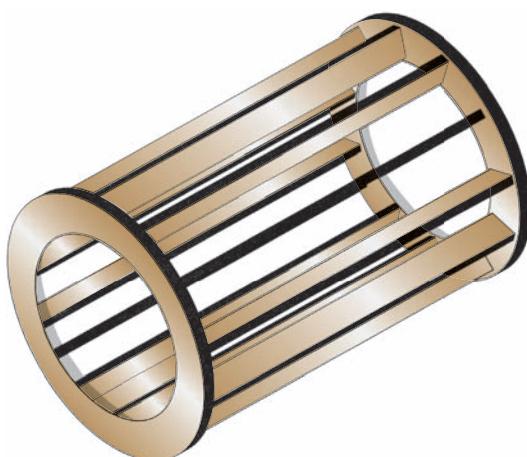


FIGURE 21-6 Squirrel-cage rotor without laminations

to the stator windings. As the current flows in the windings, electromagnetic fields are created that are exposed to the conductors in the rotor. Because the three phases of power are displaced from each other in time, the effect created is a set of fields rotating around the stator. A conductor placed in a moving magnetic field has a current induced in it, and a force is exerted perpendicular to the conductor. The force acts near the periphery of the rotor, thus creating a torque to rotate the rotor and drive the load.

It is the production of the induced current in the rotor that leads to calling such motors as *induction motors*. Note also that there are no direct electrical connections to the rotor, thus greatly simplifying the design and construction of the motor and contributing to its high reliability.

21-5 AC MOTOR PERFORMANCE

The performance of electric motors is usually displayed on a graph of speed versus torque, as shown in Figure 21-7. The *vertical axis* is the rotational speed of the motor as a percentage of synchronous speed. The *horizontal axis* is the torque developed by the motor as a percentage of the full-load or rated torque. When exerting its full-load torque, the motor operates at its full-load speed and delivers the rated torque and power. Table 21-2 lists the synchronous speeds and typical full-load speeds.

The torque at the bottom of the curve where the speed is zero is called the *starting torque* or *locked-rotor torque*. It is the torque available to initially get the load moving and begin its acceleration. This is one of the most important selection parameters for motors, as will be discussed in the descriptions of the individual types of motors.

The “knee” of the curve, called the *breakdown torque*, is the maximum torque developed by the motor during acceleration. The slope of the speed/torque curve in the vicinity of the full-load operating point is an indication of *speed regulation*. A flat curve (a low slope) indicates good speed regulation with little variation in speed as load varies. Conversely, a steep curve (a high slope) indicates poor speed regulation, and the motor will exhibit wide swings

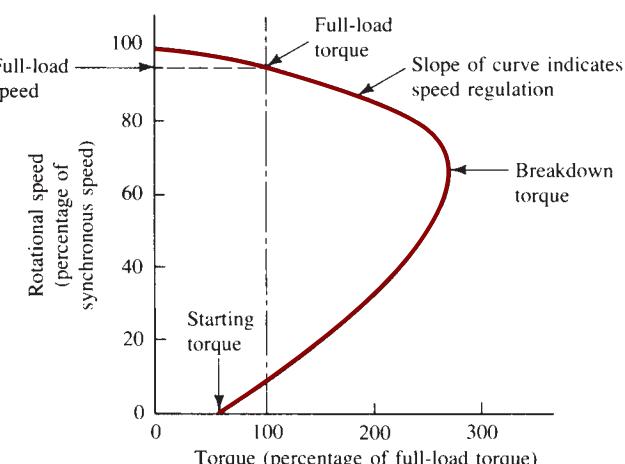


FIGURE 21-7 General form of motor performance curve

in speed as load varies. Such motors produce a “soft” acceleration of a load which may be an advantage in some applications. But where fairly constant speed is desired, a motor with good speed regulation should be selected.

21-6 THREE-PHASE, SQUIRREL-CAGE INDUCTION MOTORS

Three of the most commonly used three-phase AC motors are simply designated as designs B, C, and D by the National Electrical Manufacturers Association (NEMA). They differ primarily in the value of starting torque and in the speed regulation near full load. Figure 21-8 shows examples of the performance curves for these three designs for comparison. Each of these designs employs the solid squirrel-cage type of rotor, and thus there is no electrical connection to the rotor.

The four-pole design with a synchronous speed of 1800 rpm is the most common and is available in virtually all power ratings from 1/4 hp to 500 hp. Certain sizes are available in 2-pole (3600 rpm), 6-pole (1200 rpm), 8-pole (900 rpm), 10-pole (720 rpm), and 12-pole (600 rpm) designs.

NEMA Design B

The performance of the three-phase design B motor is similar to that of the single-phase split-phase motor described later. It has a moderate starting torque (about 150% of full-load torque) and good speed regulation. The breakdown torque is high, usually 200% of full-load torque or more. Starting current is fairly high, at approximately six times the full-load current. The starting circuit must be selected to be able to handle this current for the short time required to bring the motor up to speed.

Typical uses for the design B motor are centrifugal pumps, fans, blowers, and machine tools such as grinders and lathes.

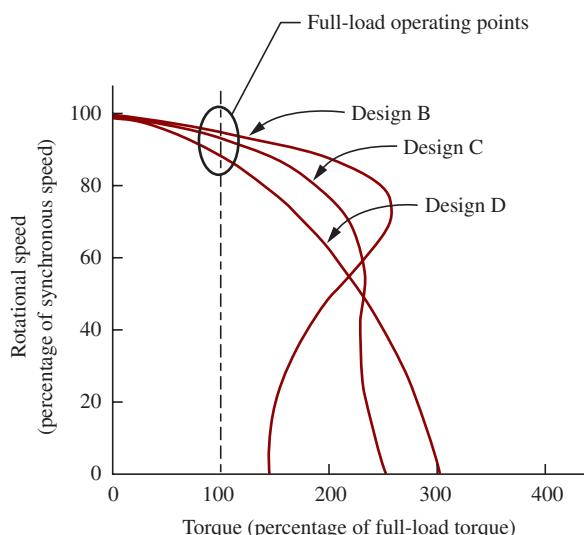


FIGURE 21-8 Examples of typical performance curves for three-phase motors: designs B, C, and D

NEMA Design C

High starting torque is the main advantage of the design C motor. Loads requiring 200% to 300% of full-load torque to start can be driven. Starting current is typically lower than for the design B motor for the same starting torque. Speed regulation is good and is about the same as for the design B motor. Reciprocating compressors, refrigeration systems, heavily loaded conveyors, and ball-and-rod mills are typical uses.

NEMA Design D

The design D motor has a high starting torque, about 300% of full-load torque. But it also has poor speed regulation, which results in large speed changes with varying loads. Sometimes called a *high-slip motor*, it operates at 5% to 13% slip at full load, whereas the designs B and C operate at 3% to 5% slip. Thus, the full-load speed will be lower for the design D motor.

The poor speed regulation is considered an advantage in some applications and is the main reason for selecting the design D motor for such uses as punch presses, shears, sheet-metal press brakes, cranes, elevators, and oil well pumps. Allowing the motor to slow down significantly when loads increase gives the system a “soft” response, reducing shock and jerk felt by the drive system and the driven machine. Consider an elevator: When a heavily loaded elevator cab is started, the acceleration should be smooth and soft, and the cruising speed should be approached without excessive jerk. This comment also applies to a crane. If a large jerk occurs when the crane hook is heavily loaded, the peak acceleration will be high. The resulting high inertia force may break the cable resulting in a dangerous safety problem.

Wound-Rotor Motors

As the name implies, the rotor of the *wound-rotor motor* has electrical windings that are connected through slip rings to the external power circuit. The selective insertion of resistance in the rotor circuit allows the performance of the motor to be tailored to the needs of the system and to be changed with relative ease to accommodate system changes or to actually vary the speed of the motor.

Figure 21-9 shows the results obtained by changing the resistance in the rotor circuit. Note that the four curves are all for the same motor, with curve 0 giving the performance with zero external resistance. This is similar to design B. Curves 1, 2, and 3 show the performance with progressively higher levels of resistance in the rotor circuit. Thus, the starting torque and the speed regulation (softness) can be tuned to the load. Speed adjustment under a given load up to approximately 50% of full-load speed can be obtained.

The wound-rotor design is used in such applications as printing presses, crushing equipment, conveyors, and hoists.

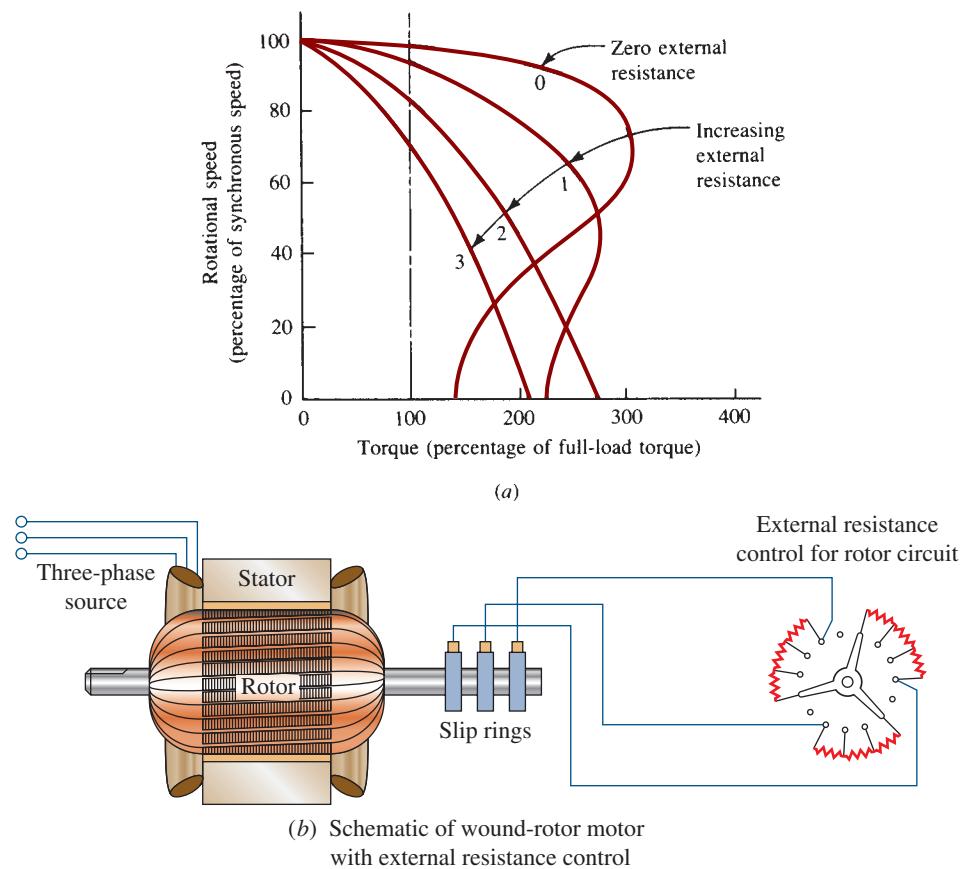


FIGURE 21-9 (a) Examples of typical performance curves for a three-phase, wound-rotor motor with varying external resistance in the rotor circuit (b) Schematic of wound-rotor motor with external resistance control

Electronically Commutated Motors

Systems that apply variable-speed drives, discussed in Section 21-9, can benefit from using electronically commutated (EC) motors. These motors have brushless permanent magnets and are often integrated with a tuned variable frequency motor drive. Such motors, when compared with typical induction motors, exhibit higher efficiency (up to 91%) at design speed, and less decrease in efficiency when lower speeds are used. Applications include fluid pumping systems and conveyors requiring up to about 10 hp (7.5 kW).

Synchronous Motors

Entirely different from the squirrel-cage induction motor or the wound-rotor motor, the *synchronous motor* operates precisely at the synchronous speed with no slip. Such motors are available in sizes from subfractional, used for timers and instruments, to several hundred horsepower to drive large air compressors, pumps, or blowers.

The synchronous motor must be started and accelerated by a means separate from the synchronous motor components themselves because they provide very little torque at zero speed. Typically, there will be a separate squirrel-cage type of winding within the normal rotor which initially accelerates the motor shaft. When the speed

of the rotor is within a few percent of the synchronous speed, the field poles of the motor are excited, and the rotor is pulled into synchronism. At that point the squirrel cage becomes ineffective, and the motor continues to run at speed regardless of load variations, up to a limit called the *pull-out torque*. A load above the pull-out torque will pull the motor out of synchronism and cause it to stop.

Universal Motors

Universal motors operate on either AC or direct current (DC) power. Their construction is similar to that of a series-wound DC motor, which is described later. The rotor has electrical coils that are connected to the external circuit through a commutator on the shaft, a kind of slip ring assembly made of several copper segments on which stationary carbon brushes ride. Contact is maintained with light spring pressure.

Universal motors usually run at high speeds, 3500 to 20 000 rpm. This results in a high power-to-weight and high power-to-size ratio for this type of motor, making it desirable for small appliances and handheld tools such as drills, saws, and food mixers. Vacuum cleaners and sewing machines also frequently use universal motors. Figure 21-10 shows a typical set of speed/torque curves for a high-speed version of the universal motor, showing

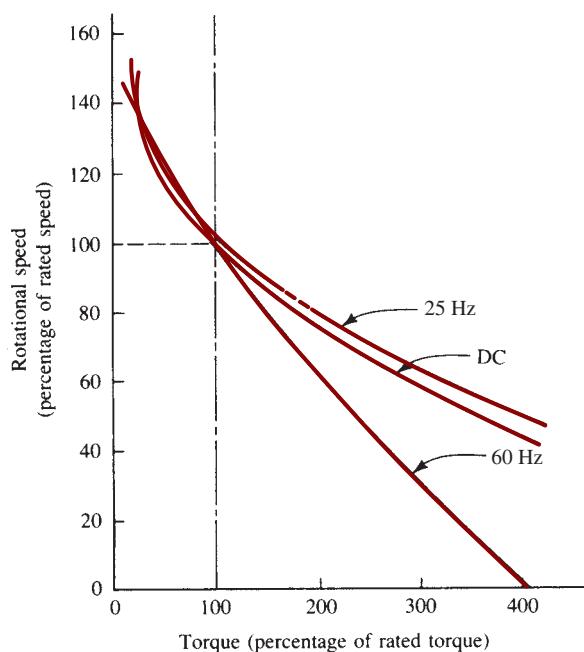


FIGURE 21-10 Examples of typical performance curves for universal motors

the performance for 60-Hz and 25-Hz AC power and DC power. Note that performance near the rated load is similar, regardless of the nature of the input power. Note also that these motors have poor speed regulation, that is, the speed varies greatly with load.

21-7 SINGLE-PHASE MOTORS

The four most common types of single-phase motors are the *split-phase*, *capacitor-start*, *permanent-split capacitor*, and *shaded-pole*. Each is unique in its physical construction and in the manner in which the electrical components are connected to provide for starting and running of the motor. The emphasis here is not on how to design the motors, but rather on the performance, so that a suitable motor can be selected.

Figure 21-11 shows the performance characteristics of these four types of motors so that they can be compared. The special features of the performance curves for the four types of motors are discussed in later sections.

In general, the construction of single-phase motors is similar to that for three-phase motors, consisting of a fixed stator, a solid rotor, and a shaft carried on bearings. The induction principle discussed earlier applies also to single-phase motors. Differences occur because single-phase power does not inherently rotate around the stator to create a moving field. Each type uses a different scheme for initially starting the motor. See Figure 21-12.

Single-phase motors are usually in the subfractional or fractional horsepower range from 1/50 hp (15 W) to 1.0 hp (750 W), although some are available up to 10 hp (7.5 kW).

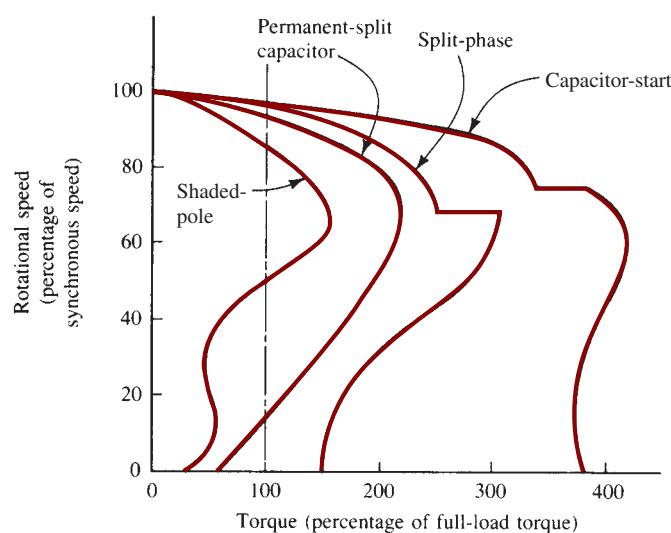


FIGURE 21-11 Performance curves of four types of single-phase electric motors

Split-Phase Motors

The stator of the split-phase motor [Figure 21-12(a) and (b)] has two windings: the *main winding*, which is continuously connected to the power line, and the *starting winding*, which is connected only during the starting of the motor. The starting winding creates a slight phase shift that creates the initial torque to start and accelerate the rotor. After the rotor reaches approximately 75% of its synchronous speed, the starting winding is cut out by a centrifugal switch, and the rotor continues to run on the main winding.

The performance curve for the split-phase motor is shown in Figure 21-11. It has moderate starting torque, approximately 150% of full-load torque. It has good efficiency and is designed for continuous operation. Speed regulation is good. One of the disadvantages is that it requires a centrifugal switch to cut out the starting winding. The step in the speed/torque curve indicates this cutout.

These characteristics make the split-phase motor one of the most popular types, used in business machines, machine tools, centrifugal pumps, AC electric lawn mowers, and similar applications.

Capacitor-Start Motors

Like the split-phase motor, the capacitor-start motor [Figure 21-12(c)] also has two windings: a *main or running winding* and a *starting winding*. But in it, a capacitor is connected in series with the starting winding, giving a much higher starting torque than with the split-phase motor. A starting torque of 250% of full load or higher is common. Again a centrifugal switch is used to cut out the starting winding and the capacitor. The running characteristics of the motor are then very similar to those of the split-phase motor: good speed regulation and good efficiency for continuous operation.

Disadvantages include the switch and the relatively bulky capacitor. Frequently the capacitor is mounted

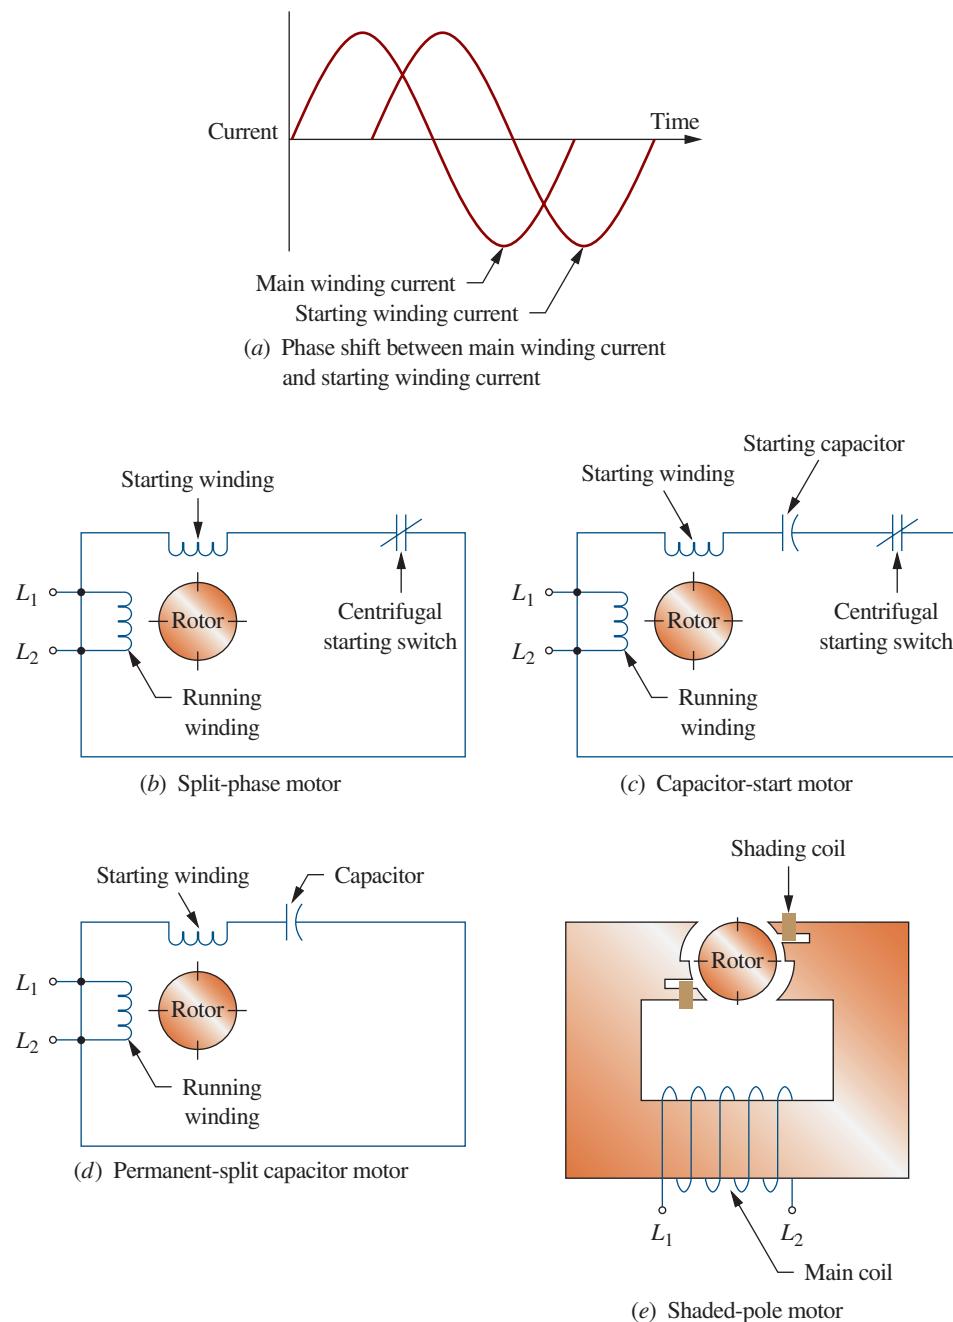


FIGURE 21-12 Schematic diagrams of single-phase motors

conspicuously right on top of the motor. It may also be integrated into a package containing the starting switch, a relay, or other control elements.

Uses for the capacitor-start motor include the many types of machines that need the high starting torque. Examples include heavily loaded conveyors, refrigeration compressors, and pumps and agitators for heavy fluids.

Permanent-Split Capacitor Motors

A capacitor is connected in series with the starting winding at all times. The starting torque of the permanent-split capacitor motor [Figure 21-12(d)] is typically quite low, approximately 40% or less of full-load torque.

Thus, only low-inertia loads such as fans and blowers are usually used. An advantage is that you can tailor the running performance and the speed regulation to match the load by selecting the appropriate capacitor value. Also, no centrifugal switch is required.

Shaded-Pole Motors

The shaded-pole motor [Figure 21-12(e)] has only one winding, the *main* or *running winding*. The starting reaction is created by the presence of a copper band around one side of each pole. The low-resistance band “shades” the pole to produce a rotating magnetic field to start the motor.

The shaded-pole motor is simple and inexpensive, but it has a low efficiency and a very low starting torque. Speed regulation is poor, and it must be fan-cooled during normal operation. Thus, its primary use is in shaft-mounted fans and blowers where the air is drawn over the motor. Some small pumps, toys, and intermittently used household items also employ shaded-pole motors because of their low cost.

21-8 AC MOTOR FRAME TYPES AND ENCLOSURES

Frame Types

The design of the equipment in which the motor is to be mounted determines the type of frame required. Some types are described below.

Foot-mounted. The most widely used type for industrial machinery, the foot-mounted frame has integral feet with a standard hole pattern for bolting the motor to the machine (see Figure 21-13).

Cushion Base. A foot mounting is provided with resilient isolation of the motor from the frame of the machine to reduce vibration and noise. This frame type is often used for fans and appliances where the motor is enclosed in the shell or housing of the product.

C-Face Mounting. A machined face is provided on the shaft end of the motor, which has a standard pattern of tapped holes. Driven equipment is then bolted directly to the motor. The design of the face is standardized by the National Electrical Manufacturers Association (NEMA). See Figure 21-14.



FIGURE 21-14 C-face motor. See Figure 8-25 for an example of a reducer designed to mate with a C-face motor (Baldor/Reliance Electric, Greenville, SC)

D-Flange Mounting. A machined flange is provided on the shaft end of the motor with a standard pattern of through clearance holes for bolts for attaching the motor to the driven equipment. The flange design is controlled by NEMA.

Vertical Mounting. Vertical mounting is a special design because of the effects of the vertical orientation on the bearings of the motor. Attachment to the driven equipment is usually through C-face or D-flange bolt holes as previously described.

Unmounted. Some equipment manufacturers purchase only the bare rotor and stator from the motor manufacturer and then build them into their machine. Compressors for refrigeration equipment are usually built in this manner.

Special-Purpose Mountings. Many special designs are made for fans, pumps, oil burners, and so on.



(a) Open, protected, dripproof



(b) Totally enclosed, nonventilated
lint-proof



(c) Totally enclosed, fan-cooled



(d) Explosion proof, dust ignition
proof

FIGURE 21-13 Foot-mounted motors with various enclosure types (Baldor/Reliance Electric, Greenville, SC)

Enclosures

The housings around the motor that support the active parts and protect them vary with the degree of protection required. Some enclosure types are described next.

Open. Typically a light-gage sheet-metal housing is provided around the stator with end plates to support the shaft bearings. The housing contains several holes or slots that permit cooling air to enter the motor. Such a motor must be protected by the housing of the machine itself.

Protected. Sometimes called *open dripproof*, ventilating openings are provided only on the lower part of the housing so that liquids dripping on the motor from above cannot enter the motor. This is probably the most widely used type [see Figure 21–13(a)].

Totally Enclosed Nonventilated (TENV). No openings at all are provided in the housing, and no special provisions are made for cooling the motor except for fins cast into the frame to promote convective cooling. The design protects the motor from harmful atmospheres [see Figure 21–13(b)].

Totally Enclosed Fan-cooled (TEFC). The TEFC design is similar to the TENV design, except a fan is mounted to one end of the shaft to draw air over the finned housing [see Figure 21–13(c)].

TEFC-XP. The TEFC-XP (explosion-proof) design is similar to the TEFC housing, except special protection is provided for electrical connections to prohibit fire or explosion in hazardous environments [see Figure 21–13(d)].

IEEE 841-2001 Severe Duty Motors. See Figure 21–15. This special type of housing is designed for demanding environments such as in steel mills, petrochemical plants, and pulp and paper mills where

corrosive environments, high temperatures, and high humidity often occur. Extra fin area, some stainless steel components, and corrosion-resistant paints and seals are employed.

Washdown Duty Motors. See Figure 21–16. When motors are used in food processing areas, clean rooms, medical facilities, and similar locations, this special type of housing is designed to be washed down with sanitary cleaning fluid and to withstand direct hosing.

Brake Motors. See Figure 21–17. Note the extension to the left side of the motor that houses a braking system that can be tied into a control system to stop the motor shaft quickly in case of safety issues or to accommodate process cycling. See Chapter 22 for more discussion of brake designs.

Frame Sizes

The critical dimensions of motor frames are controlled by NEMA frame sizes. Included are the overall height and width; the height from the base to the shaft centerline; the shaft diameter, length, and keyway size; and mounting hole pattern dimensions. A few selected motor frame sizes for 1725-rpm, three-phase, induction, foot-mounted dripproof motors are listed in Table 21–3. For the descriptions of the dimensions, refer to Figure 21–18.



FIGURE 21–16 Washdown duty motor (Baldor Electric, Greenville, SC)



FIGURE 21–15 IEEE 841-2001 severe duty motor (Baldor Electric, Greenville, SC)



FIGURE 21–17 Brake motor (Baldor Electric, Greenville, SC)

TABLE 21–3 Motor Frame Sizes

| hp | Frame size | Dimensions (in) | | | | | | | | |
|-----|------------|-----------------|-------|------|------|------|-------|-------|------|-------------|
| | | A | C | D | E | F | O | U | V | Keyway |
| 1/4 | 48 | 5.63 | 9.44 | 3.00 | 2.13 | 1.38 | 5.88 | 0.500 | 1.50 | 0.05 flat |
| 1/2 | 56 | 6.50 | 10.07 | 3.50 | 2.44 | 1.50 | 6.75 | 0.625 | 1.88 | 3/16 × 3/32 |
| 1 | 143T | 7.00 | 10.69 | 3.50 | 2.75 | 2.00 | 7.00 | 0.875 | 2.00 | 3/16 × 3/32 |
| 2 | 145T | 7.00 | 11.69 | 3.50 | 2.75 | 2.50 | 7.00 | 0.875 | 2.00 | 3/16 × 3/32 |
| 5 | 184T | 9.00 | 13.69 | 4.50 | 3.75 | 2.50 | 9.00 | 1.125 | 2.50 | 1/4 × 1/8 |
| 10 | 215T | 10.50 | 17.25 | 5.25 | 4.25 | 3.50 | 10.56 | 1.375 | 3.13 | 5/16 × 5/32 |
| 15 | 254T | 12.50 | 22.25 | 6.25 | 5.00 | 4.13 | 12.50 | 1.625 | 3.75 | 3/8 × 3/16 |
| 20 | 256T | 12.50 | 22.25 | 6.25 | 5.00 | 5.00 | 12.50 | 1.625 | 3.75 | 3/8 × 3/16 |
| 25 | 284T | 14.00 | 23.38 | 7.00 | 5.50 | 4.75 | 14.00 | 1.875 | 4.38 | 1/2 × 1/4 |
| 30 | 286T | 14.00 | 24.88 | 7.00 | 5.50 | 5.50 | 14.00 | 1.875 | 4.38 | 1/2 × 1/4 |
| 40 | 324T | 16.00 | 26.00 | 8.00 | 6.25 | 5.25 | 16.00 | 2.125 | 5.00 | 1/2 × 1/4 |
| 50 | 326T | 16.00 | 27.50 | 8.00 | 6.25 | 6.00 | 16.00 | 2.125 | 5.00 | 1/2 × 1/4 |

Note: All motors are four-pole, three-phase, 60-Hz, AC induction motors. Refer to Figure 21–18 for description of dimensions.

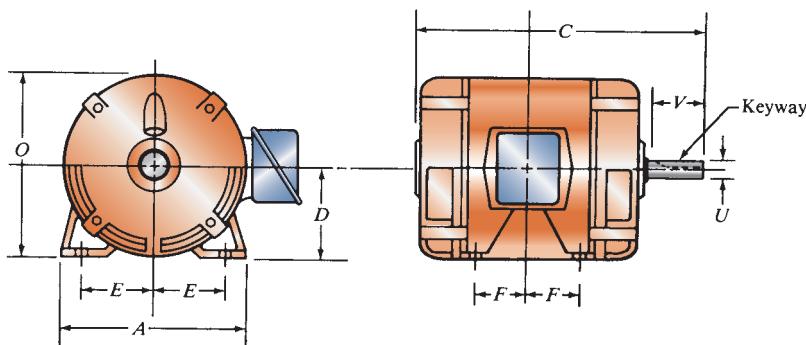


FIGURE 21–18 Key for NEMA standard motor frame dimensions listed in Table 21–3

21–9 CONTROLS FOR AC MOTORS

Motor controls must perform several functions, as outlined in Figure 21–19. The complexity of the control depends on the size and the type of motor involved. Small fractional or subfractional motors may sometimes be started with a simple switch that connects the motor directly to the full line voltage. Larger motors, and some smaller motors on critical equipment, require greater protection. See Internet sites 1–9 and References 2–9.

The functions of motor controls are as follows:

1. To start and stop the motor
2. To protect the motor from overloads that would cause the motor to draw dangerously high current levels
3. To protect the motor from overheating
4. To protect personnel from contact with hazardous parts of the electrical system
5. To protect the controls from the environment
6. To prohibit the controls from causing a fire or an explosion

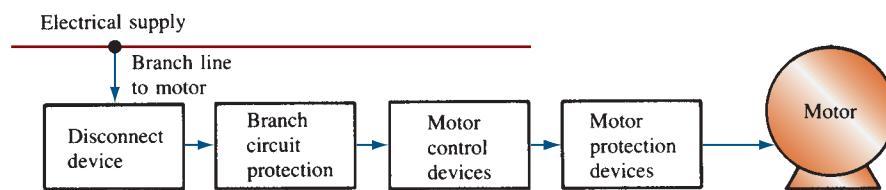


FIGURE 21–19 Motor control block diagram

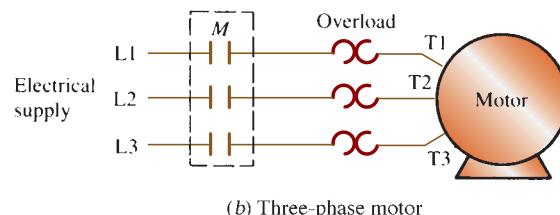
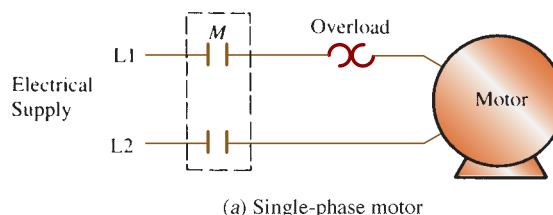


FIGURE 21–20 Manual starters (M = normally open contactors; all actuate together)

7. To provide controlled torque, acceleration, speed, or deceleration of the motor
8. To provide for the sequential starting of a series of motors or other devices
9. To provide for the coordinated operation of different parts of a system, possibly including several motors
10. To protect the conductors of the branch circuit in which the motor is connected

The proper selection of a motor control system requires knowledge of at least the following factors:

1. The type of electrical service: voltage and frequency; single- or three-phase; current limitations
2. The type and size of motor: power and speed ratings; full-load current rating; locked-rotor current rating
3. Operation desired: duty cycle (continuous, start/stop, or intermittent); single or multiple discrete speeds, or variable-speed operation; one-direction or reversing
4. Environment: temperature; water (rain, snow, sleet, sprayed, or splashed water); dust and dirt; corrosive gases or liquids; explosive vapors or dusts; oils or lubricants
5. Space limitations
6. Accessibility of controls
7. Noise or appearance factors

Starters

There are several classifications of motor starters: manual or magnetic; one-direction or reversing; two-wire or

three-wire control; full-voltage or reduced-voltage starting; single-speed or multiple-speed; normal stopping, braking, or plug stopping. All of these typically include some form of overload protection, which will be discussed later.

Manual and Magnetic, Full-Voltage, One-Direction Starting

Figure 21–20 shows the schematic connection diagram for manual starters for single-phase and three-phase motors. The symbol M indicates a normally open contactor (switch) that is actuated manually, for example, by throwing a lever. The contactors are rated according to the motor power that they can safely handle. The power rating indirectly relates to the current drawn by the motor, and the contactor design must (1) safely make contact during the start-up of the motor, considering the high starting current; (2) carry the expected range of operating current without overheating; and (3) break contact without excessive arcing that could burn the contacts. The ratings are established by NEMA. Tables 21–4 and 21–5 show the ratings for selected NEMA starter sizes.

Note in Figure 21–20 that overload protection is required in all three lines for three-phase motors but in only one line of the single-phase motor.

Figure 21–21 shows the schematic connection diagrams for magnetic starters using two-wire and three-wire controls. The “start” button in the three-wire control is a momentary contact type. As it is actuated manually, the coil in parallel with the switch is energized, and it magnetically closes the line contactors marked M . The



TABLE 21–4 Ratings of AC Full-Voltage Starters for Single-Phase Power

| NEMA size number | Current rating (amperes) | Power rating at given voltages | | | | | |
|------------------|--------------------------|--------------------------------|------|-------|-------|---------------|-------|
| | | 110 V | | 220 V | | 440 and 550 V | |
| | | (hp) | (kW) | (hp) | (kW) | (hp) | (kW) |
| 00 | | 1/2 | 0.37 | 3/4 | 0.56 | | |
| 0 | 15 | 1 | 0.75 | 1½ | 1.12 | 1½ | 1.12 |
| 1 | 25 | 1½ | 1.12 | 3 | 2.24 | 5 | 3.73 |
| 2 ^a | 50 | 3 | 2.24 | 7½ | 5.60 | 10 | 7.46 |
| 3 ^a | 100 | 7½ | 5.60 | 15 | 11.19 | 25 | 18.65 |

^a Applies to magnetically operated starters only.

TABLE 21–5 Ratings of AC Full-Voltage Starters for Three-Phase Power

| NEMA size number | Current rating (amperes) | Power rating at given voltages | | | | | |
|------------------|--------------------------|--------------------------------|-------|-------|-------|---------------|-------|
| | | 110 V | | 220 V | | 440 and 550 V | |
| (hp) | (kW) | (hp) | (kW) | (hp) | (kW) | (hp) | (kW) |
| 00 | | 3/4 | 0.56 | 1 | 0.75 | 1 | 0.75 |
| 0 | 15 | 1½ | 1.12 | 2 | 1.49 | 2 | 1.49 |
| 1 | 25 | 3 | 2.24 | 5 | 3.73 | 7½ | 5.60 |
| 2 | 50 | 7½ | 5.60 | 15 | 11.19 | 25 | 18.65 |
| 3 | 100 | 15 | 11.19 | 30 | 22.38 | 50 | 37.30 |

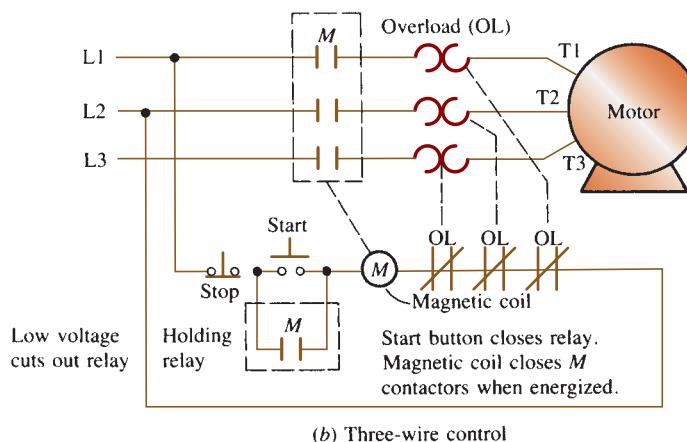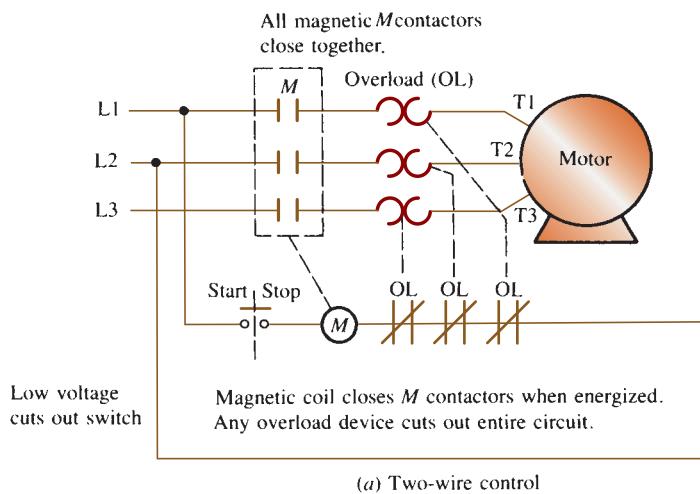**FIGURE 21–21** Magnetic starters for three-phase motors

contacts remain closed until the stop button is pushed or until the line voltage drops to a set low value. (Remember that a low line voltage causes the motor to draw excessive current.) Either case causes the magnetic contactors to open, stopping the motor. The start button must be manually pushed again to restart the motor.

The two-wire control has a manually operated start button that stays engaged after the motor starts. As a safety feature, the switch will open when a low-voltage condition occurs. But when the voltage rises again to an

acceptable level, the contacts close, restarting the motor. You must ensure that this is a safe operating mode.

Reversing Starters

Figure 21–22 shows the connection for a reversing starter for a three-phase motor. You can reverse the direction of rotation of a three-phase motor by interchanging any two of the three power lines. The *F* contactors are used for the forward direction. The *R* contactors would

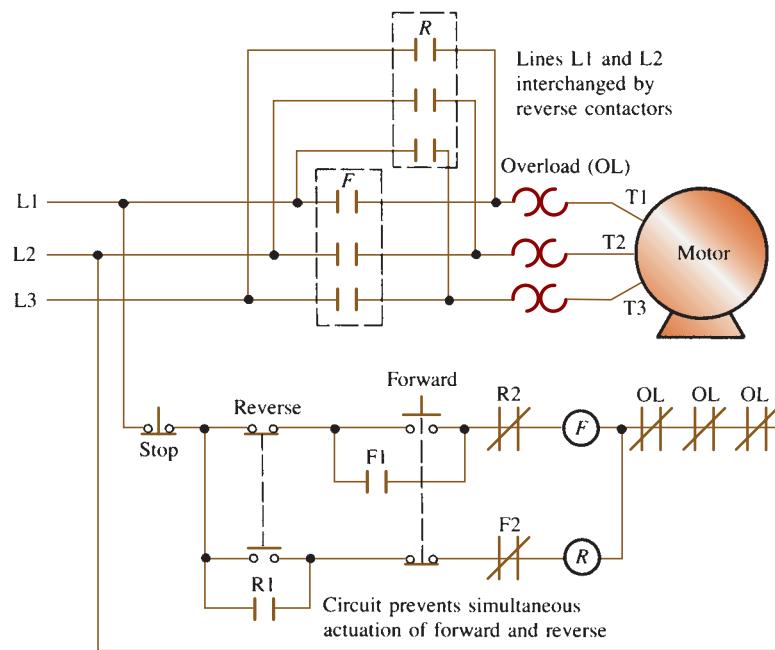


FIGURE 21-22 Reversing control for a three-phase motor

interchange L1 and L3 to reverse the direction. The *Forward* and *Reverse* pushbuttons actuate only one of the sets of contactors.

Reduced-Voltage Starting

The motors discussed in the previous sections and the circuits shown in Figures 21-20 through 21-22 employ full-voltage starting. That is, when the system is actuated, the full line voltage is applied to the motor terminals. This will give the maximum starting effort, but in some cases it is not desirable. To limit jerk, to control the acceleration of a load, and to limit the starting current, reduced-voltage

starting is sometimes used. This gentle start is used on some conveyors, hoists, pumps, and similar loads.

Figure 21-23 shows one method of providing a reduced voltage to the motor when starting. The first action is the closing of the contactors marked A. Thus, the power to the motor passes through a set of resistors that reduces the voltage at each motor terminal. A typical reduction would be to approximately 65% of normal line voltage. The peak line current would be reduced to 65% of normal locked-rotor current, and the starting torque would be 42% of normal locked-rotor torque. (See Reference 4.) After the motor is accelerated, the main contactors M are closed, and full voltage is applied

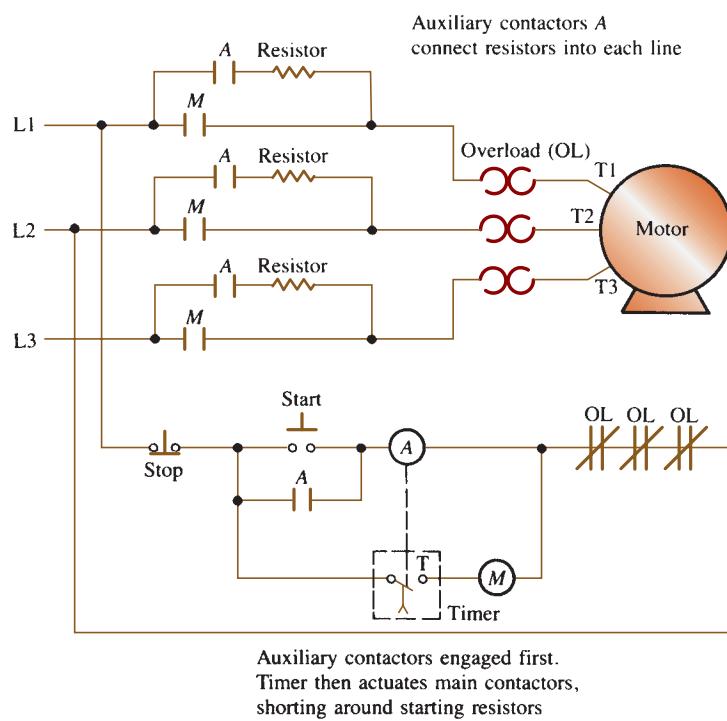


FIGURE 21-23 Reduced-voltage starting by primary resistor method

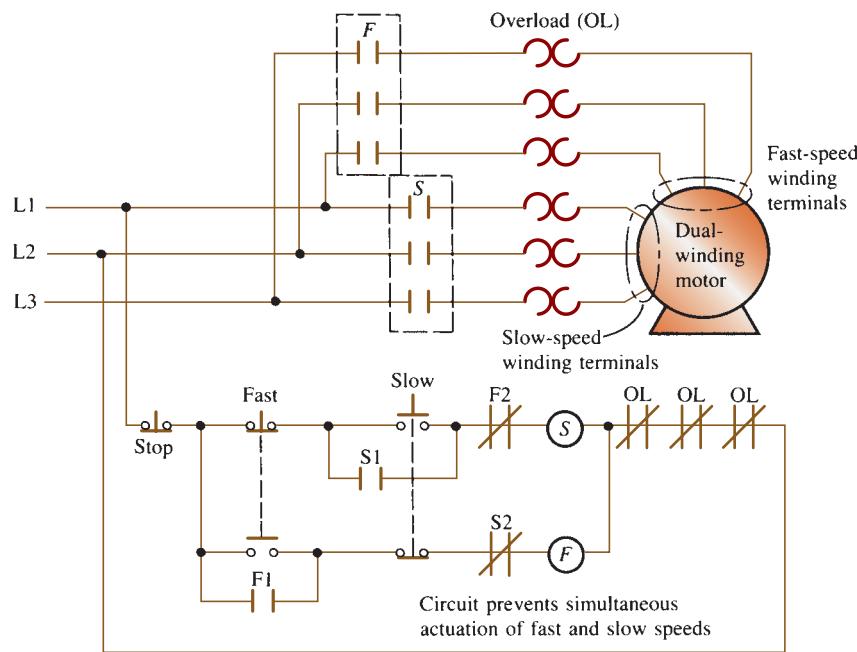


FIGURE 21-24 Speed control for a dual-winding, three-phase motor

to the motor. A timer is typically used to control the sequencing of the *A* and *M* contactors.

Dual-Speed Motor Starting

A dual-speed motor with two separate windings to produce different speeds can be started with the circuit shown in Figure 21-24. The operator selectively closes either the *F* (fast) or *S* (slow) contacts to obtain the desired speed. The other features of starting circuits discussed earlier can also be applied to this circuit.

Stopping the Motor

Where no special conditions exist when the system is shut down, the motor can be permitted to coast to a stop after the power is interrupted. The time required to stop will depend on the inertia and the friction in the system. If controlled, rapid stopping is required, external brakes can be used. *Brake motors*, which have a brake integral with the motor, are available. Typically, the design is of the “fail-safe” nature, in which the brake is disengaged by an electromagnetic coil when the motor is energized. When the motor is de-energized, either on purpose or because of power failure, the brake is actuated by mechanical spring force. See Figure 21-17.

On circuits with reversing starters, *plug stopping* can be used. When it is desired to stop the motor running in the forward direction, the control can be switched immediately to reverse. There would then be a decelerating torque applied to the rotor, stopping it quickly. Care must be exercised to cut out the reversing circuit when the motor is at rest to prevent it from continuing in the reverse direction.

Overload Protection

The chief cause of failure in electric motors is overheating of the wound coils due to excessive current. The current

is dependent on the load on the motor. A short circuit, of course, would cause a virtually instantaneously high current of a damaging level.

The protection against a short circuit can be provided by *fuses*, but careful application of fuses to motors is essential. A fuse contains an element that literally melts when a particular level of current flows through it. Thus, the circuit is opened. Reactivating the circuit would require replacing the fuse. Time-delay fuses, or “slow-blowing” fuses, are needed for motor circuits to prevent the fuses from blowing when the motor starts, drawing the relatively high starting current that is normal and not damaging. After the motor starts, the fuse will blow at a set value of overcurrent.

Fuses are inadequate for larger or more critical motors because they provide protection at only one level of overcurrent. Each motor design has a characteristic *overheating curve*, as shown in Figure 21-25. This indicates that the motor could withstand different levels of

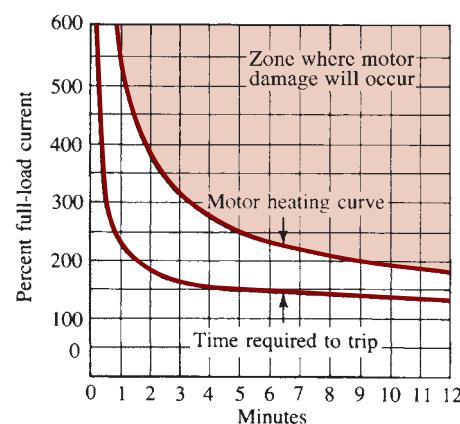


FIGURE 21-25 Motor heating curve and response curve of a typical overload protector

overcurrent for different periods of time. For example, for the motor heating curve of Figure 21–25, a current twice as high as the full-load current (200%) could exist for up to 9 min before a damaging temperature was produced in the windings. But a 400% overload would cause damage in less than 2 min. An ideal overload protection device would parallel the overheating curve of the given motor, always cutting out the motor at a safe current level, as shown in Figure 21–25. Devices are available commercially to provide this protection. Some use special melting alloys, bimetallic strips similar to a thermostat, or magnetic coils that are sensitive to the current flowing in them. Most large motor starters include overload protection integral with the starter. See Internet site 5.

Another type of overload protection uses a temperature-sensitive device inserted in the windings of the motor when it is made. Then it opens the motor circuit when the windings reach a dangerous temperature, regardless of the reason.

Solid-State Overload Relay

Difficulties with thermal element or bimetallic overload devices can be overcome by using a solid-state overload relay. Thermal devices that use a melting element require the replacement of that element after tripping, resulting in extra cost for maintenance supplies and personnel. Both thermal element and bimetallic overload devices are affected by varying ambient temperatures that can change the actual current flow protection level. Temperature compensation devices are available, but they require careful setting and knowledge of expected conditions. Solid-state overload relays overcome these difficulties because only sensed current flow level is used to produce the tripping action. They are inherently insensitive to ambient temperature swings. Furthermore, they can sense the current flow in each of the three windings of three-phase motors and provide protection if any one of the phases experiences a failure or a given increase in current. This provides protection not only for the motor but also for associated equipment that may be damaged if the motor fails suddenly. See Internet site 5 for additional information.

Enclosures for Motor Controls

As stated before, one of the functions of a motor control system is to protect personnel from contact with dangerous parts of the electrical system. Also, protection of the system from the environment must be provided. These functions are accomplished by the enclosure.

NEMA has established standards for enclosures for the variety of environments encountered by motor controls. The most frequent types are described in Table 21–6.

AC Variable-Speed Drives

Standard AC motors operate at a fixed speed for a given load if powered by AC power at a fixed frequency, for example, 60 Hz. Variable-speed operation can be

TABLE 21–6 Motor Control Enclosures


| NEMA design number | Description |
|--------------------|---|
| 1 | General-purpose: indoor use; not dusttight |
| 3 | Dusttight, raintight: outdoor-weather-resistant |
| 3R | Dusttight, rainproof, sleet-resistant |
| 4 | Watertight: can withstand a direct spray of water from a hose; used on ships and in food processing plants where washdown is required |
| 4X | Watertight, corrosion-resistant |
| 7 | Hazardous locations, class I: can operate in areas where flammable gases or vapors are present |
| 9 | Hazardous locations, class II: combustible dust areas |
| 12 | Industrial use: resistant to dust, lint, oil, and coolants |
| 13 | Oiltight, dusttight |

obtained with a control system that produces a variable frequency power. Two such control types are in common use: the *six-step method* and the *pulse-width modulation (PWM) method*. Either system takes the 60-Hz line voltage and first rectifies it to a DC voltage. The six-step method then uses an inverter to produce a series of square waves that provides a voltage to the motor winding which varies both voltage and frequency in six steps per cycle. In the PWM system, the DC voltage is input to an inverter that produces a series of pulses of variable width. The rate of polarity reversals determines the frequency applied to the motor. See Figures 21–26 and 21–27 and Internet sites 5–9.


Reasons for Applying Variable-Speed Drives

It is often desirable to vary the speed of mechanical systems to obtain operating characteristics that are more nearly optimum for the application. For example:


1. Conveyor speed can be varied to match the demand of production.
2. The delivery of bulk materials to a process can be varied continuously.
3. Automatic control can provide synchronization of two or more system components.
4. Dynamic control of system operation can be used during start-up and stopping sequences, for torque control, or for in-process acceleration and deceleration control, often necessary when processing continuous webs such as paper or plastic film.
5. Spindle speeds of machine tools can be varied to produce optimum cutting for given materials, depth of cut, feeds, or cutting tools.
6. The speeds of fans, compressors, and liquid pumps can be varied in response to needs for cooling or for product delivery.

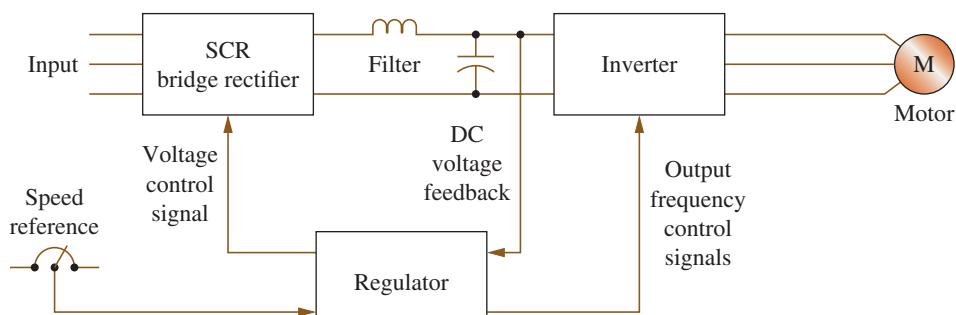


(a) Schematic diagram of a variable voltage inverter

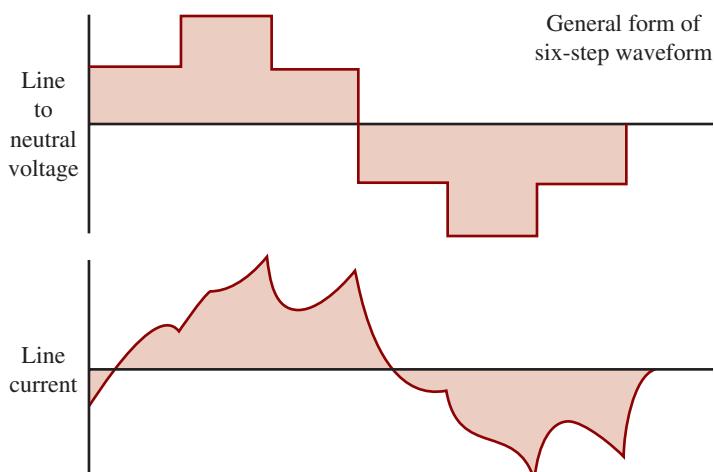

(b) Output waveforms

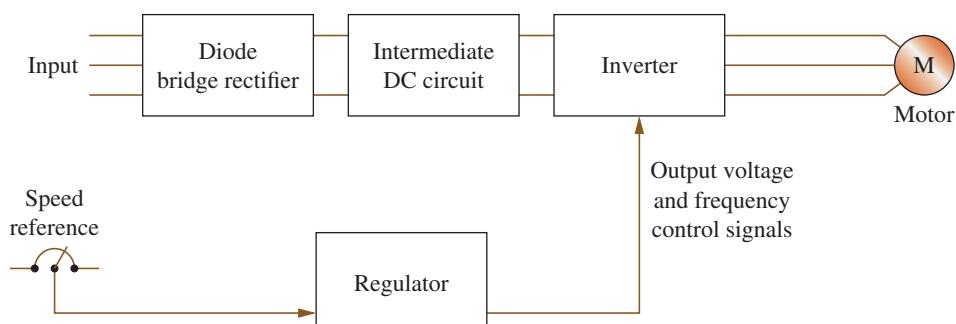FIGURE 21-26 Six-step method of variable-speed AC motor control (See Internet sites 5–9.)

(a) Schematic diagram of pulse-width modulation (PWM) controller

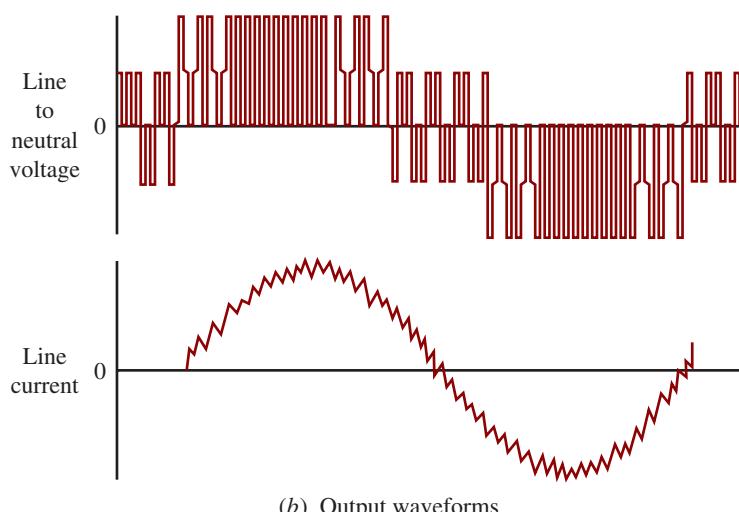

(b) Output waveforms

FIGURE 21-27 Pulse-width modulation method of variable-speed AC motor control (See Internet sites 5–9.)

All of these situations allow for more flexible and better process control. Cost savings are also obtained, particularly for item 6. The difference in the power required to operate a pump at two speeds is proportional to the cube of the ratio of the speeds. For example, if the speed of the motor is reduced to one-half of its original speed, the power required to operate the pump is reduced to 1/8 of the original power. Matching the pump speed to the required delivery of the fluid can accumulate significant savings. Similar savings result for fans and compressors.

21-10 DC POWER

DC motors have several inherent advantages over AC motors, as discussed in the next section. A disadvantage of DC motors is that a source of DC power must be available. Most residential, commercial, and industrial locations have only AC power provided by the local utility. Four approaches are used to provide DC power: batteries, hydrogen fuel cells, generators, and rectifiers. See Internet sites 5–9 for additional information on the types of power and control, and Internet sites 10–13 for extended information about batteries.

- 1. Batteries:** Typically available battery voltages and their uses are as follows:
 - a. Alkaline and rechargeable nickel metal hydride: 1.5, 3.6, 4.8, 9.0 V
 - Flashlights, portable phones, sensors, small kitchen appliances, small power tools
 - b. Nickel cadmium: 9.6, 12.0, 14.4, 18.0, 24.0 V, power tools
 - c. Sealed lead acid (SLA), flooded valve regulated lead acid (VRLA), absorbed glass mats (AGM): 2.0, 4.0, 6.0, 8.0, 12.0, 24.0, 36.0 V
 - Automotive, marine, wheelchairs, small scooters, forklift trucks, automatic guided vehicles, golf carts, lawn mowers, garden tractors, floor scrubbers, utility switches, network power units, uninterruptable power supplies (UPS), small solar power storage units, telecommunications equipment
 - d. Lithium ion: 12.0, 18.0, 24.0, 28.0, 36.0, 48.0 V
 - Commercial-grade power tools, large capacity standby power, hybrid vehicles, plug-in electric vehicles
- 2. Hydrogen fuel cells:** In a single hydrogen fuel cell, hydrogen passing through a plate-type anode, an electrolyte, and a cathode converts chemical energy to electrical energy between two electrodes on either side of the cell at approximately 1.0 V per cell. Only water and heat are discharged from the cells. Multiple cells are stacked together to produce sufficient voltage and power capacity for a given application. Potential uses include small handheld devices and laptop computers, telecommunication

TABLE 21-7 DC Motor Voltage Ratings

| Input AC voltage | DC motor rating | NEMA code |
|-----------------------|-------------------------|-----------|
| 115 V AC, one-phase | 90 V DC | K |
| 230 V AC, one-phase | 180 V DC | K |
| 230 V AC, three-phase | 240 V DC | C or D |
| 460 V AC, three-phase | 500 V DC or 550 V DC | C or D |
| 460 V AC, three-phase | 240 V DC | E |

equipment, auxiliary power for residential, commercial, or industrial applications, portable power for remote installations, and all types of transportation. Power capacities range from about 50 W to several hundred kilowatts and higher. Systems rated in the megawatt range are being considered. Still considered an emerging technology, rapid advancements are being made.

- 3. Generators:** Powered by AC electric motors, internal combustion engines, turbine engines, wind devices, water turbines, and so on; DC generators produce pure DC. The usual voltages are 115 and 230 V. Some industries maintain such generators to provide DC power throughout the plant.
- 4. Rectifiers:** *Rectification* is the process of converting AC power with its sinusoidal variation of voltage with time to DC power, which ideally is nonvarying. A readily available device is the *silicon-controlled rectifier* (SCR). One difficulty with rectification of AC power to produce DC power is that there is always some amount of “ripple,” a small variation of voltage as a function of time. Excessive ripple can cause overheating of the DC motor. Most commercially available SCR devices produce DC power with an acceptably low ripple. Table 21-7 lists the commonly used DC voltage ratings for motors powered by rectified AC power as defined by NEMA.

21-11 DC MOTORS

The advantages of DC motors are summarized here:

- The speed is adjustable by use of a simple rheostat to adjust the voltage applied to the motor.
- The direction of rotation is reversible by switching the polarity of the voltage applied to the motor.
- Automatic control of speed is simple to provide for matching of the speeds of two or more motors or to program a variation of speed as a function of time.
- Acceleration and deceleration can be controlled to provide the desired response time or to decrease jerk.
- Torque can be controlled by varying the current applied to the motor. This is desirable in tension control applications, such as the winding of film on a spool.

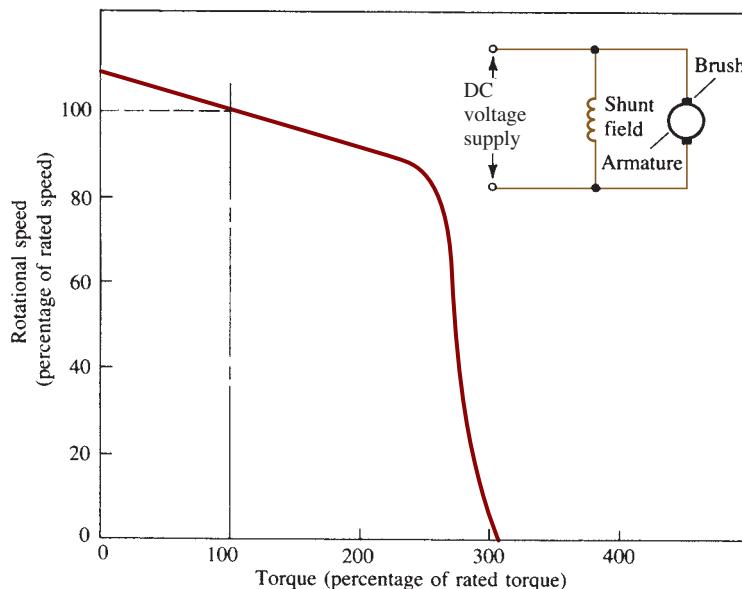


FIGURE 21-28 Example of a performance curve for a shunt-wound DC motor

- Dynamic braking can be obtained by reversing the polarity of the power while the motor is rotating. The reversed effective torque slows the motor without the need for mechanical braking.
- DC motors typically have quick response, accelerating quickly when voltage is changed, because they have a small rotor diameter, giving them a high ratio of torque to inertia.

DC motors have electric windings in the rotor, and each coil has two connections to the commutator on the shaft. The commutator is a series of copper segments through which the electric power is transferred to the rotor. The current path from the stationary part of the motor to the commutator is through a pair of brushes, usually made of carbon, which are held against the commutator by light coil or leaf springs. Maintenance of the brushes is one of the disadvantages of DC motors.

DC Motor Types

Four commonly used DC motor types are the *shunt-wound*, *series-wound*, *compound-wound*, and *permanent magnet* motors. They are described in terms of their speed /torque curves in a manner similar to that used for AC motors. One difference here is that the speed axis is expressed in percentage of *full-load rated speed*, rather than a percentage of synchronous speed, as that term does not apply to DC motors.

Shunt-Wound DC Motor. The electromagnetic field is connected in parallel with the rotating armature, as sketched in Figure 21–28. The speed/torque curve shows relatively good speed regulation up to approximately two times full-load torque, with a rapid drop in speed after that point. The speed at no load is only slightly higher than the full-load speed. Contrast this with the

series-wound motor described next. Shunt-wound motors are used mainly for small fans and blowers.

Series-Wound DC Motor. The electromagnetic field is connected in series with the rotating armature, as shown in Figure 21–29. The speed/torque curve is steep, giving the motor a soft performance that is desirable in cranes, hoists, and traction drives for vehicles. The starting torque is very high, as much as 800% of full-load rated torque. A major difficulty, however, with series-wound motors is that the no-load speed is theoretically unlimited. The motor could reach a dangerous speed if the load were to be accidentally disconnected. Safety devices, such as overspeed detectors that shut off the power, should be used.

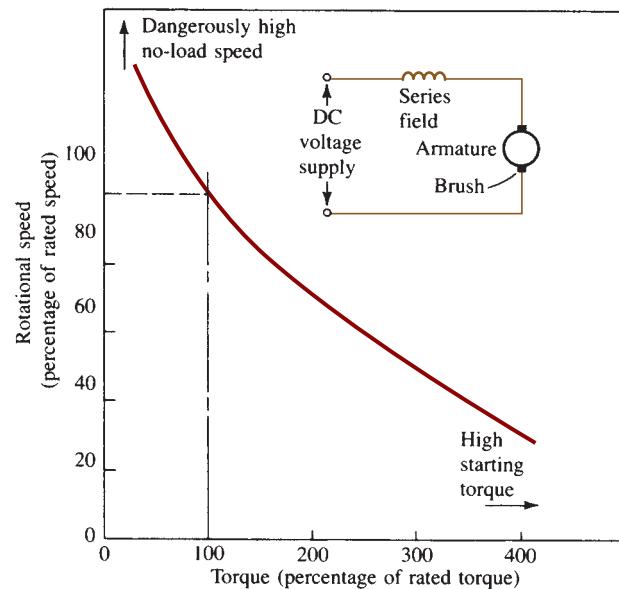


FIGURE 21-29 Example of a performance curve for a series-wound DC motor

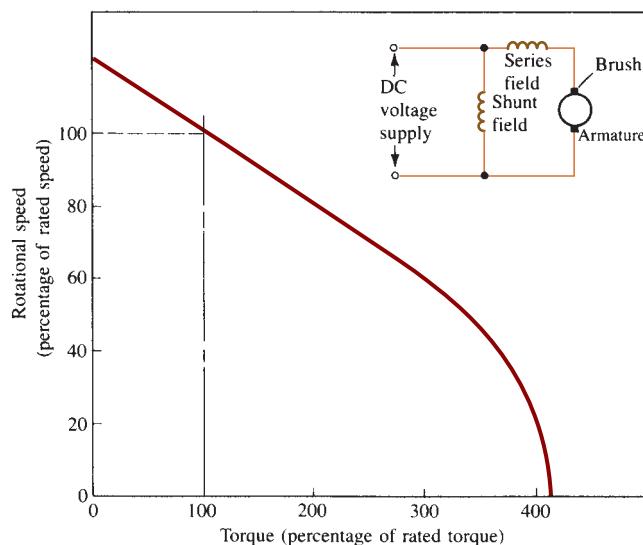


FIGURE 21-30 Example of a performance curve for a compound-wound DC motor

Compound-Wound DC Motor. The compound-wound DC motor employs both a series field and a shunt field, as sketched in Figure 21-30. It has a performance somewhat between that of the series-wound and the shunt-wound motors. It has fairly high starting torque and a soft speed characteristic, but it has an inherently controlled no-load speed. This makes it good for cranes, which may suddenly lose their loads. The motor would run slowly when heavily loaded for safety and control, and fast when lightly loaded to improve productivity.

Permanent Magnet DC Motor. Instead of using electromagnets, the permanent magnet DC motor uses permanent magnets to provide the field for the armature. The direct current passes through the armature, as shown in Figure 21-31. The field is nearly constant at all times and results in a linear speed/torque curve. Current draw also varies linearly with torque. Applications include fans and blowers to cool electronics packages in aircraft, small actuators for control in aircraft, automotive power assists for windows and seats, and fans in automobiles for heating and air conditioning. These motors frequently have built-in gear-type speed reducers to produce a low-speed, high-torque output.

21-12 DC MOTOR CONTROL

Starting of DC motors presents essentially the same problems as discussed for AC motors in terms of limiting the starting current and the provision of switching devices and holding relays of sufficient capacity to handle the operating loads. The situation is made somewhat more severe, however, by the presence of the commutators in the rotor circuit which are more sensitive to overcurrent.

Speed control is provided by variation of the resistance in the lines containing the armature or the field of the motor. The details depend on whether the motor is a

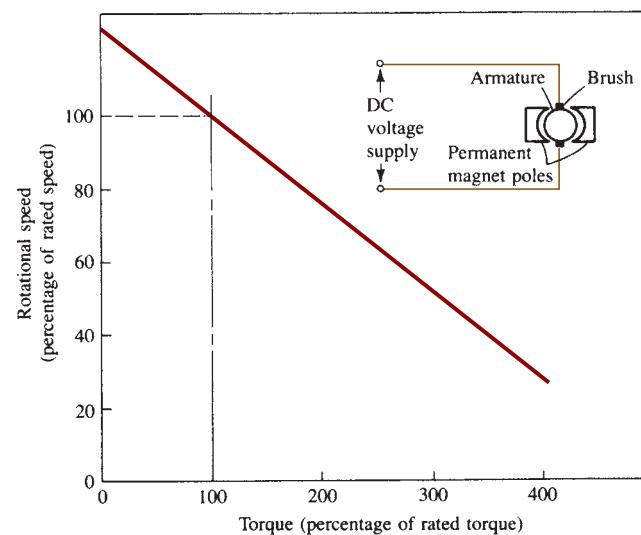


FIGURE 21-31 Example of a performance curve for a permanent magnet DC motor

series, shunt, or compound type. The variable-resistance device, sometimes called a *rheostat*, can provide either stepwise variation in resistance or continuously varying resistance. Figure 21-32 shows the schematic diagrams for several types of DC motor speed controls. See Internet sites 1 and 5–9 and References 2–9.

21-13 OTHER TYPES OF MOTORS

Torque Motors


As the name implies, *torque motors* are selected for their ability to exert a certain torque rather than for a rated power. Frequently this type of motor is operated at a stalled condition to maintain a set tension on a load. The continuous operation at slow speed or at zero speed causes heat generation to be a potential problem. In severe cases, external cooling fans may be required.

By special design, several of the AC and DC motor types discussed elsewhere in this chapter can be used as torque motors.


Servomotors

Either AC or DC *servomotors* are available to provide automatic control of position or speed of a mechanism in response to a control signal. Such motors are used in aircraft actuators, instruments, computer printers, and machine tools. Most have rapid response characteristics because of the low inertia of the rotating components and the relatively high torque exerted by the motor. See Internet sites 1, 7–9, and 15.


Figure 21-33 shows a schematic diagram of a servomotor controller system. Three control loops are shown: (1) the position loop, (2) the velocity loop, and (3) the current loop. Speed control is effected by sensing the motor speed with a tachometer and feeding the signal

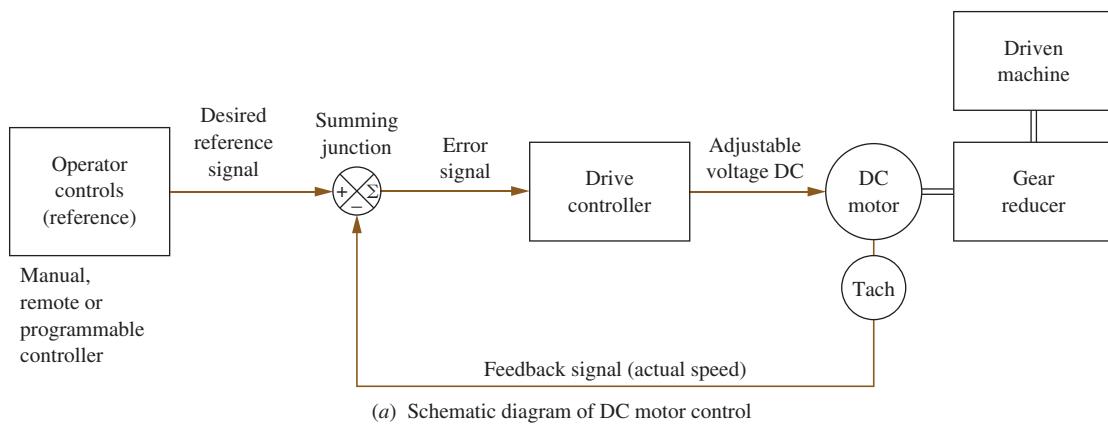


(a) Schematic diagram of DC motor control

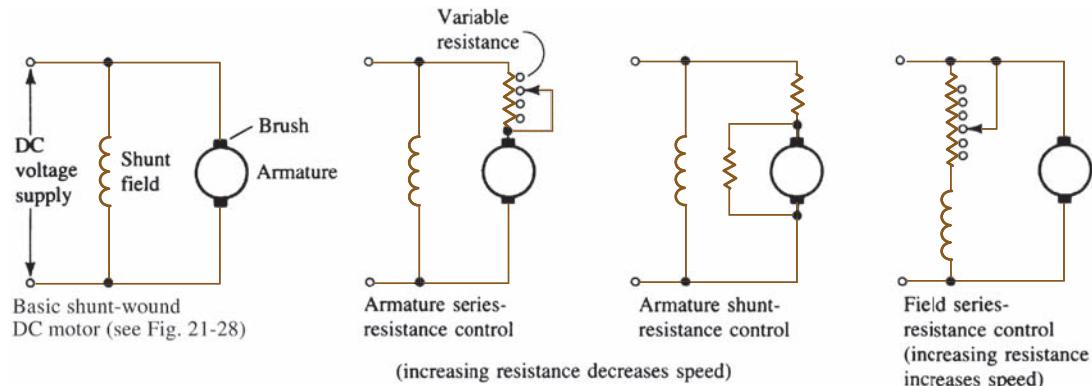

(b) Shunt-wound DC motor control

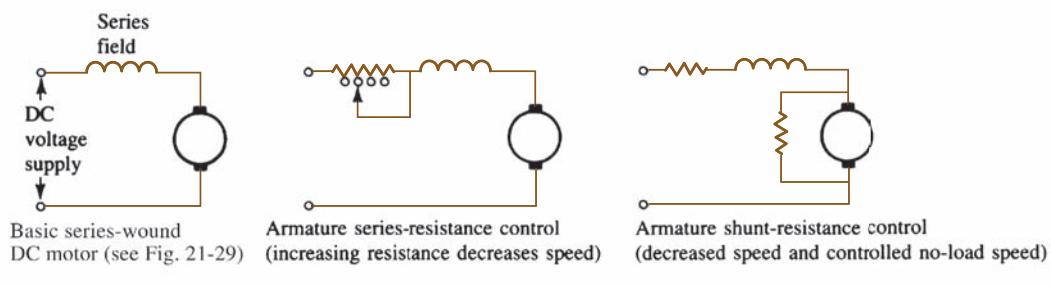

(c) Series-wound DC motor control

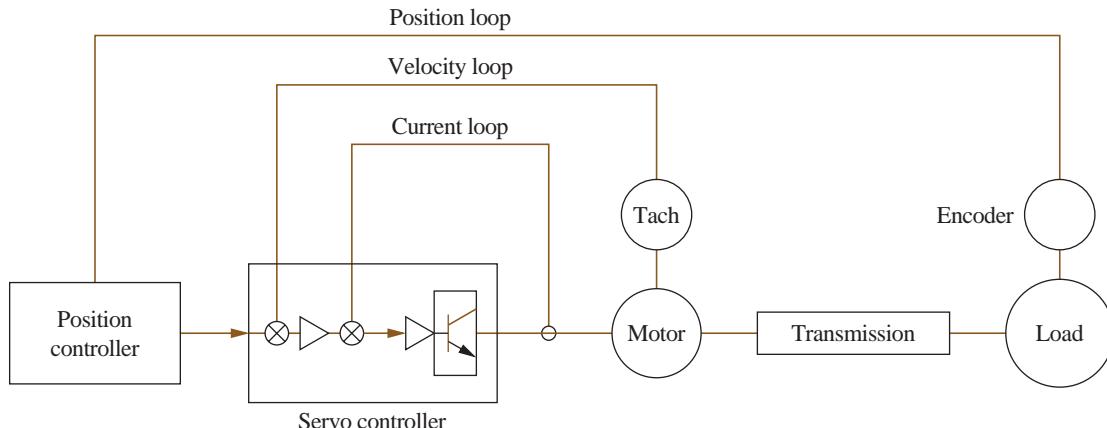FIGURE 21–32 Examples of control circuits for a variety of styles of DC Motors**FIGURE 21–33** Example of a control system for a typical servomotor. See Internet sites 7, 9, and 15

back through the velocity loop to the controller. Position is sensed by an optical encoder or a similar device on the driven load, with the signal fed back through the position loop to the controller. The controller sums the inputs, compares them with the desired value set by the control program, and generates a signal to control the motor. Thus, the system is a closed-loop servo control. Typical uses for this type of control would be for numerical control machine tools, special-purpose assembly machines, and aircraft control surface actuators.

Stepper Motors

A stream of electronic pulses is delivered to a *stepper motor*, which then responds with a fixed rotation (step) for each pulse. Thus, a very precise angular position can be obtained by counting and controlling the number of pulses delivered to the motor. Several step angles are available in commercially provided motors, such as 1.8° , 3.6° , 7.5° , 15° , 30° , 45° , and 90° . When the pulses are stopped, the motor stops automatically and is held in position. Because many of these motors are connected through a gear-type speed reducer to the load, very precise positioning is possible to a small fraction of a step. Also, the reducer provides a torque increase. See Internet sites 3 and 14.

Brushless Motors

The typical DC motor requires brushes to make contact with the rotating commutator on the shaft of the motor. This is a major failure mode of such motors. In the *brushless DC motor*, the switching of the rotor coils is accomplished by solid-state electronic devices, resulting in very long life. The emission of electromagnetic interference is likewise reduced compared with brush-type DC motors.

Printed Circuit Motors

The rotor of the *printed circuit motor* is a flat disc that operates between two permanent magnets. The resulting design has a relatively large diameter and small axial length; sometimes it is called a *pancake motor*. The rotor has a very low inertia, so high acceleration rates are possible.

Linear Motors

Linear motors are electrically similar to rotary motors, except the components, stator and rotor, are laid flat instead of being formed into a cylindrical shape. Types include brush-type DC motors, brushless DC motors, stepping motors, and the single-phase type of motor. Capacity is measured in terms of the force that the motor can exert, ranging typically from a few pounds to 2500 lb. Speeds range from 40 to 100 in/s (1.02 to 2.54 m/s). See Internet site 9.

REFERENCES

1. Avallone, Eugene P., Theodore Baumeister III., and Ali Sadegh. *Marks' Handbook for Mechanical Engineers*. 11th ed. New York: McGraw-Hill, 2011.
2. Hubert, Charles I. *Electric Machines: Theory, Operating Applications, and Controls*. 2nd ed. Upper Saddle River, NJ: Pearson-Prentice Hall, 2002.
3. Skvarenina, Timothy L., and William E. DeWitt. *Electrical Power and Controls*. 2nd ed. Upper Saddle River, NJ: Pearson-Prentice Hall, 2005.
4. Wildi, Theodore. *Electrical Machines, Drives, and Power Systems*. 6th ed. Upper Saddle River, NJ: Pearson-Prentice Hall, 2006.
5. Hughes, Austin, and Bill Drury. *Electric Motors and Drives: Fundamentals, Types and Applications*. 4th ed. Amsterdam, Holland: Newnes-Elsevier Science & Technology Books, 2013.
6. Gurocak, Hakan. *Industrial Motion Control: Motor Selection, Drives, Controller Tuning, Applications*. New York: Wiley, 2015.
7. Herman, Stephen. *Industrial Motor Control*. 7th ed. Florence, KY: Delmar Cengage Learning, 2013.
8. Miller, Rex, and Miller, Mark. *Industrial Electricity and Motor Controls*. 2nd ed. New York: McGraw-Hill, 2013.
9. Umans, Stephen. *Fitzgerald & Kingsley's Electric Machinery*. 7th ed. New York: McGraw-Hill, 2013.

INTERNET SITES FOR ELECTRIC MOTORS AND CONTROLS

1. **Baldor-Reliance.** Manufacturer of AC and DC motors, gear motors, servomotors, linear motors, generators, and linear motion products and the associated controls. The site provides a Resource & Support section giving motor performance, applications guidelines, motor construction information, software, and an online catalog.
2. **Regal Beloit EPC, Inc.** Manufacturer of electric motors for driving pumps, conveyors, food processing machinery, machine tools, office equipment, and other commercial and industrial applications. Sizes range from 1/12 to 1250 hp. Brands include Century, Elco, Fasco, and seven others.
3. **OMEGA Engineering, Inc.** Manufacturer of stepper motors and associated controls that can be used for rotary position control, indexing, and linear motion control with a lead screw drive system.
4. **U.S. Electric Motors Company.** Manufacturer of a wide variety of AC and DC electric motors from $\frac{1}{4}$ to 4000 hp for general and specific applications. An online catalog is included. Part of Nidec Motor Corporation.
5. **Schneider Electric.** Manufacturer of AC motor drives, electrical control devices and systems for industry, energy and infrastructure, buildings, residential, and data centers/networks fields. The industry market includes process automation, machine control and monitoring, power supply and distribution, energy monitoring and control, and many others. Some motor control-related products such as starters and contactors are offered under the brand Square D by Schneider Electric.
6. **Eaton/Electrical-USA.** Manufacturer of a wide range of electrical control and power distribution products for industrial, commercial, and residential applications. Select "Products and Solutions" for motor control centers, circuit breakers, power conditioning equipment, switchgear, brakes, and many other products.

7. **Rockwell Automation.** Manufacturer of a wide variety of controls for automation, including motor contactors, AC motor drives, motor control centers, servomotors, programmable logic controllers, sensors, relays, circuit protection devices, network communication, and control systems. Strategic brands include Allen-Bradley®, Rockwell Software®, and Rockwell Automation®.
8. **General Electric Automation & Controls.** Manufacturer of an extensive line of industrial automation systems, motion controls, and process solutions, serving automotive manufacturing, mining & metals, oil & gas, pharmaceuticals, life sciences, power & energy, water & wastewater industries. Includes Alstom-branded products.
9. **Parker Motion Control Systems.** Manufacturer of a wide range of automation devices and systems for industrial applications. Includes the Compumotor line of servomotors and controllers and the Parker Trilogy Systems line of linear electric motors and linear positioners for industrial automation. Part of Parker Hannifin Corporation.
10. **East Penn Manufacturing Co.—DEKA Batteries.** Manufacturer of a wide variety of sizes of lead-acid batteries for power tools, garden equipment, network electric power systems, industrial mobile equipment, golf carts, wheelchairs, railroad diesel engine starting systems, and many others.
11. **Exide Technologies.** Manufacturer of a full line of batteries for automotive, truck, lawn and garden, commercial, marine, industrial forklifts, automated guided vehicles, telecommunications, computer backup and security systems, emergency lighting, and various military equipment.
12. **U.S. Battery.** Manufacturer of 2 V, 6 V, 8 V, and 12 V batteries for golf cars, industrial sweepers and scrubbers, automotive, marine, and multipurpose applications.
13. **Battery Council International.** An organization of manufacturers and users of batteries and battery-powered equipment for training, recommended test procedures, charging, and safety.
14. **Oriental Motor U.S. Corporation.** Manufacturer of rotary and stepper motors with either AC or DC input power and linear actuators for a variety of industrial automation and commercial product applications.
15. **Beckhoff Drive Technology.** Manufacturer of brushless synchronous servomotors for a variety of industrial automation and commercial product applications.
16. Define *duty cycle*.
17. How much variation in voltage will most AC motors tolerate?
18. State the relationship among torque, power, and speed.
19. What does the abbreviation AC stand for?
20. Describe and sketch the form of single-phase AC power.
21. Describe and sketch the form of three-phase AC power.
22. What is the standard frequency of AC power in the United States?
23. What is the standard frequency of AC power in Europe?
24. What type of electrical power is available in a typical American residence?
25. How many conductors are required to carry single-phase power? How many for three-phase power?
26. Assume that you are selecting an electric motor for a machine to be used in an industrial plant. The following types of AC power are available: 120-V, single-phase; 240-V, single-phase; 240-V, three-phase; 480-V, three-phase. In general, for which type of power would you specify your motor?
27. Define *synchronous speed* for an AC motor.
28. Define *full-load speed* for an AC motor.
29. What is the synchronous speed of a four-pole AC motor when running in the United States? In France?
30. A motor nameplate lists the full-load speed to be 3450 rpm. How many poles does the motor have? What would its approximate speed be at zero load?
31. If a four-pole motor operates on 400-Hz AC power, what will its synchronous speed be?
32. If an AC motor is listed as a normal-slip, four-pole/six-pole motor, what will its approximate full-load speeds be?
33. What type of control would you use to make an AC motor run at variable speeds?
34. Describe a C-face motor.
35. Describe a D-flange motor.
36. What does the abbreviation NEMA stand for?
37. Describe a protected motor.
38. Describe a TEFC motor.
39. Describe a TENV motor.
40. What type of motor enclosure would you specify to be used in a plant that manufactures baking flour?
41. What type of motor would you specify for a meat grinder if the motor is to be exposed?
42. Figure P21-29 shows a machine that is to be driven by a 5-hp, protected, foot-mounted AC motor having a 184T frame. The motor is to be aligned with the shaft of the driven machine. Make a complete dimensioned drawing, showing standard side and top views of the machine and the motor. Design a suitable mounting base for the motor showing the motor mounting holes.
43. Define *locked-rotor torque*. What is another term used for this parameter?

PROBLEMS

1. List six items that must be specified for electric motors.
2. List eight factors to be considered in the selection of an electric motor.

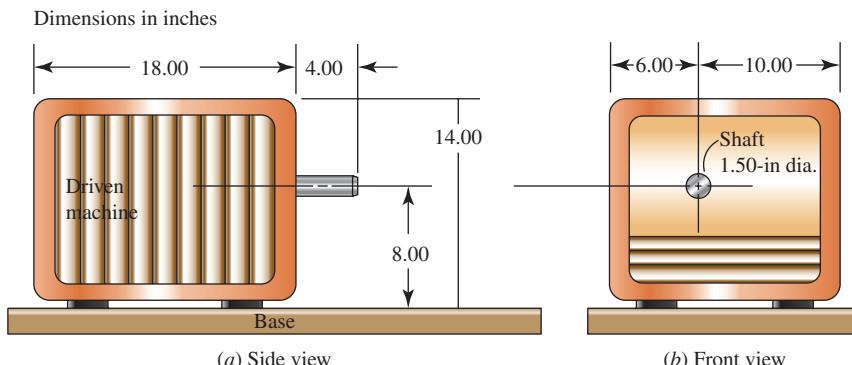


FIGURE P21-29

31. What is meant if one motor has a poorer speed regulation than another?
32. Define *breakdown torque*.
33. Name the four most common types of single-phase AC motors.
34. Refer to the AC motor performance curve in Figure P21-34.
 - a. What type of motor is the curve likely to represent?
 - b. If the motor is a six-pole type, rated at 0.75 hp, how much torque can it exert at the rated load?
 - c. How much torque can the motor develop to start a load?
 - d. What is the breakdown torque for the motor?
35. Repeat Parts (b), (c), and (d) of Problem 34 if the motor is a two-pole type, rated at 1.50 kW.
36. A cooling fan for a computer is to operate at 1725 rpm, direct-driven by an electric motor. The speed/torque curve for the fan is shown in Figure P21-36. Specify a suitable motor, giving the type of motor, horsepower, and number of poles.
37. Figure P21-37 shows the speed/torque curve for a household refrigeration compressor, designed to operate at 3450 rpm. Specify a suitable motor, giving the type, power rating in watts, and number of poles.
38. How is the speed adjusted for a wound-rotor motor?
39. What is the full-load speed of a 10-pole synchronous motor?
40. What is meant by the term *pull-out torque*, as applied to a synchronous motor?
41. Discuss the reasons that universal motors are frequently used for handheld tools and small appliances.
42. Why is the adjective *universal* used to describe a universal motor?
43. Name four ways to produce DC power.
44. List 12 common DC voltages.
45. What is an SCR control? For what is it used?
46. If a DC motor drive advertises that it produces *low ripple*, what does the term mean?
47. If you want to use a DC motor in your home, and your home has only standard 115-V AC, single-phase power, what will you need? What type of motor should you get?
48. List seven advantages of DC motors with respect to AC motors.
49. Discuss two disadvantages of DC motors.
50. Name four types of DC motors.
51. What happens to a series-wound DC motor if the load on the motor falls to nearly zero?
52. Assume that a permanent magnet DC motor can exert a torque of 15.0 N·m when operating at 3000 rpm. What torque could it exert at 2200 rpm?
53. List 10 functions of a motor control.
54. What size motor starter is required for a 10-hp, three-phase motor, operating on 220 V?
55. A single-phase, 110-V AC motor has a nameplate rating of 1.00 kW. What size motor starter is required?
56. What does the term *plug stopping* mean, and how is it accomplished?
57. Why is a fuse an inadequate protection device for an industrial motor?
58. What type of motor control enclosure would you specify for use in a car wash?
59. What could you do to the control circuit for a standard series DC motor to give it a controlled no-load speed?

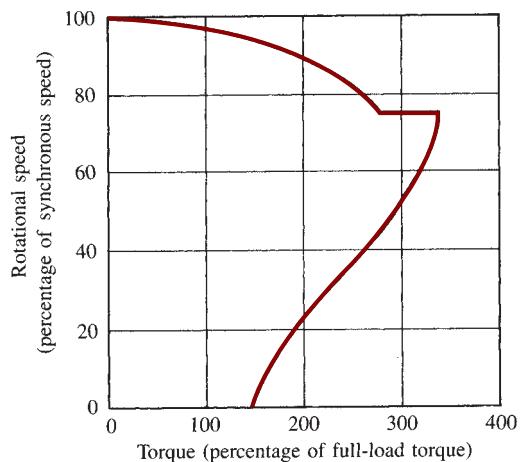


FIGURE P21-34 (Problems 34 and 35)

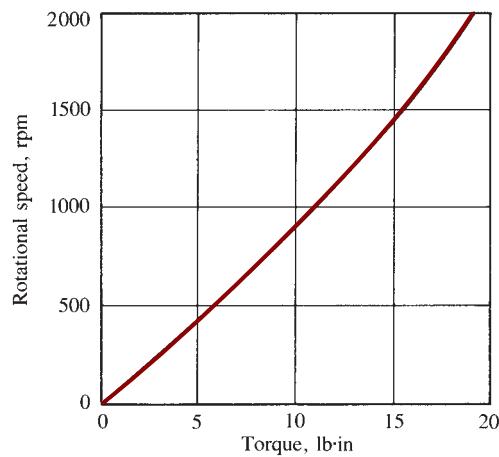


FIGURE P21-36

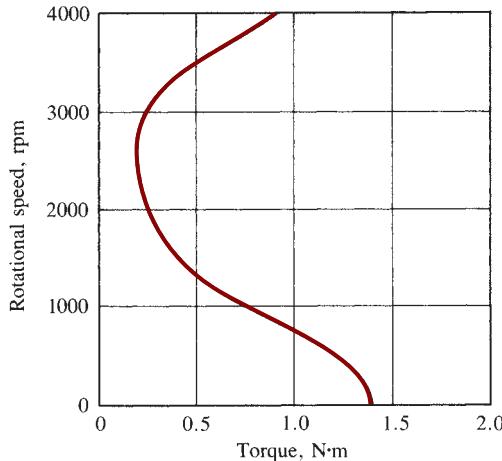


FIGURE P21-37

60. What happens if you connect a resistance in series with the armature of a shunt-wound DC motor?
61. What happens if you connect a resistance in series with the shunt field of a shunt-wound DC motor?

MOTION CONTROL: CLUTCHES AND BRAKES

The Big Picture

You Are the Designer

- 22–1 Objectives of This Chapter
- 22–2 Descriptions of Clutches and Brakes
- 22–3 Types of Friction Clutches and Brakes
- 22–4 Performance Parameters
- 22–5 Time Required to Accelerate or Decelerate a Load
- 22–6 Inertia of a System Referred to the Clutch Shaft Speed
- 22–7 Effective Inertia for Bodies Moving Linearly
- 22–8 Energy Absorption: Heat-Dissipation Requirements
- 22–9 Response Time
- 22–10 Friction Materials and Coefficient of Friction
- 22–11 Plate-Type Clutch or Brake
- 22–12 Caliper Disc Brakes
- 22–13 Cone Clutch or Brake
- 22–14 Drum Brakes
- 22–15 Band Brakes
- 22–16 Other Types of Clutches and Brakes

THE BIG PICTURE

Motion Control: Clutches and Brakes

Discussion Map

- A *brake* is a device used to bring a moving system to rest, to slow its speed, or to control its speed to a certain value under varying conditions.
- A *clutch* is a device used to connect or disconnect a driven component from the prime mover of the system.
- Brakes and clutches either add energy to a moving system or take energy from it. Analyzing the necessary energy changes is an important part of designing effective motion control components.

This chapter helps you explore all of these issues, and many convenient design and analysis equations are developed. Many kinds of commercially available clutches and brakes are pictured and described.

Machine systems require control whenever the speed or the direction of the motion of one or more components is to be changed. When a device is started initially, it must be accelerated from rest to the operating speed. As an operation is completed, the system must frequently be brought to rest. In continuously operating systems, changing speeds to adjust to different operating conditions is often

Discover

Where do you use brakes?

Consider the brakes for a car or a bicycle. Describe the components and the actuation cycle in as much detail as you can. Discuss your findings with your colleagues.

What kinds of equipment other than vehicles use clutches or brakes? Describe some scenarios.

Describe the physics of the operation of a clutch and a brake, considering energy and inertia effects.

necessary. Safety sometimes dictates motion control, as with a load being lowered by a hoist or an elevator.

In this chapter, we will be concerned mostly with control of rotary motion in systems driven by electric motors, engines, turbines, and the like. Ultimately, linear motion may be involved through linkages, conveyors, or other mechanisms.

The machine elements most frequently used for motion control are the clutch and the brake, defined as follows:

- A *clutch* is a device used to connect or disconnect a driven component from the prime mover of the system. For example, in a machine that must cycle frequently, the driving motor is left running continuously, and a clutch is interposed between the motor and the driven machine. Then the clutch is cycled on and off to connect and disconnect the load. This permits the motor to operate at an efficient speed, and it also permits the system to cycle more rapidly because there is no need to accelerate the relatively heavy motor rotor with each cycle.
- A *brake* is a device used to bring a moving system to rest, to slow its speed, or to control its speed to a certain value under varying conditions.

Where do you use brakes? An obvious answer is in a car or a bicycle where safe operation requires fast, smooth stopping when emergency conditions occur or simply when you need to stop at a stop sign or in your driveway. And you do not always need to bring the car or bicycle to a full stop. Slowing down to conform to prevailing traffic flow or to round a curve requires braking to decrease the speed from a higher to a lower speed.

What really happens when you apply the brakes of a bicycle? Can you describe the essential elements of the braking system? With hand brakes, your actuation of the brake lever pulls on a flexible cable that, in turn, pulls on a linkage at the brake assembly mounted above the rim of a wheel. The linkage causes the friction pad to press against the rim. When you pull harder on the lever, a higher force is developed between the pad and the rim. This is called the *normal force*. Recall from physics and statics that a frictional force is created between surfaces moving relative to each other when a normal force presses them together. The frictional force acts in a direction opposite to the relative motion, and thus it tends to slow the motion. With a sufficiently large frictional force applied for a sufficient time, the wheel stops. Notice also that the frictional force acts at a fairly large radius from the center of the wheel. Thus, the force causes a frictional *torque* to be developed, and what is really happening is the deceleration of the angular velocity of the wheel. But since this is directly proportional to the linear speed of the bicycle, you experience the stopping action as a linear deceleration.

But that is not all! Have you ever felt the brake pad after a hard stop? The fact that it gets warm is an indication that the brake absorbs energy during the stopping action. Where does the energy come from? Can you compute the amount of energy that must be

absorbed? What are the parameters involved in this calculation? Compare the amount of energy that must be absorbed in stopping a bicycle that you are riding with that involved in stopping a large airliner landing at 120 mph with a full load of people and baggage in addition to the huge weight of the airplane itself. Imagine what those brakes look like in comparison with the bicycle brake!

What other kinds of equipment besides transportation vehicles require brakes? Consider elevators, escalators, hoists, and winches, which must stop and hold a load after lifting it. Machine tools, conveyors, and other manufacturing equipment must often be brought to a safe, quick stop.

But that equipment must also be *accelerated* to start a new cycle of operation. How can that be achieved? One way is to start and stop the motor or the engine that drives the equipment. However, that is inconvenient and time-consuming, and it may lead to early failure of the system.

How does the automotive drive system allow you to stop and then continue driving without shutting off the engine? Have you ever driven a standard shift car? A “stick shift?” A *clutch* is used to engage and disengage the drive train from the engine. In cars with automatic transmissions clutches are also built into the transmission.

What other kinds of equipment use clutches? Describe some examples from your personal experience, or create a scenario in which it would be desirable to employ a clutch.

Now, consider what the task of a clutch is. Some parts of a machine are rotating continuously, while others are temporarily stationary. Then you engage the clutch. What happens? Consider the physics of the situation. The stationary parts must be accelerated from zero speed to the desired speed according to the design of the drive system. Inertia must be overcome—sometimes rotational inertia; sometimes linear inertia; and sometimes both kinds in the same machine. How long do you want it to take to accelerate the load to its operating speed? You must realize that a shorter time requires a higher value of accelerating torque to be developed by the clutch, and it increases the technical demands on the system in terms of strength of its components, smoothness, and wear life of the frictional materials that actually accomplish the engagement.

This chapter helps you explore all of these issues, and many convenient design and analysis equations are developed. Several different styles of brakes and clutches are discussed, and photographs or detailed drawings of several commercially available designs are shown. It might be desirable to keep this book handy for future projects so that you can look for the details of different clutch and brake designs.

YOU ARE THE DESIGNER

Your company manufactures conveyor systems for warehouses and truck terminals. The conveyors deliver cartons of materials to any of several stations where trucks are to be loaded. To save energy and to decrease the wear on operating parts of the conveyor system, it is decided to operate only the parts of the system that have a demand to deliver a carton. The system is to be operated automatically through a series of sensors, switches, programmable controllers, and an overall supervisory computer control. Your assignment is to recommend the type and the size of clutch and brake units to start and stop the various conveyors.

Some of the design decisions you will have to make are as follows:

1. How much time should be allowed to get the conveyors up to speed after the initial command to start has been given?
2. How fast should the conveyors come to a stop?
3. How many cycles per hour are expected?
4. How much room is available to install the clutch and brake units?
5. What means are available to actuate the clutch and brake units: electric power, compressed air, hydraulic pressure, or some other means?

6. What general type of clutch and brake should be used?
7. What size and model of commercially available unit should be specified?

Along with these decisions, you will need information about the conveyor system itself, such as the following:

1. How much load will be on the conveyors when they are started and stopped?
2. What is the design of the conveyor system itself, and what are the weights, shapes, and dimensions of its components?
3. How is the conveyor driven: electric motor, hydraulic motor, or another means?
4. Are the products moved all on one level, or are there elevation changes in the system?

The information in this chapter will help you design such a system. ■

22-1 OBJECTIVES OF THIS CHAPTER

After completing this chapter, you will be able to:

1. Define the terms *clutch* and *brake*.
2. Differentiate between a clutch and a *clutch coupling*.
3. Describe a fail-safe brake.
4. Describe a clutch-brake module.
5. Specify the required capacity of a clutch or a brake to drive a given system reliably.
6. Compute the time required to accelerate a system or to bring it to a stop with the application of a given torque.
7. Define the inertia of a system in terms of its Wk^2 value.
8. Compute the energy-dissipation requirements of a clutch or a brake.
9. Determine the response time for a clutch-brake system.
10. Describe at least five types of clutches and brakes.
11. Name six actuation means used for clutches and brakes.
12. Perform the design and analysis of plate-type, caliper disc, cone, drum and shoe, and band brakes and clutches.
13. Name nine other types of clutches and brakes.

22-2 DESCRIPTIONS OF CLUTCHES AND BRAKES

Several arrangements of clutches and brakes are shown in Figure 22-1. By convention, the term *clutch* is reserved for the application in which the connection is made to a shaft parallel to the motor shaft, as illustrated in Figure 22-1(a). If the connection is to a shaft in-line with the motor, the term *clutch coupling* is used, as shown in Figure 22-1(b).

Also by convention, a brake [Figure 22-1(c)] is actuated by some overt action: the application of a fluid pressure, the switching on of an electric current, or the moving of a lever by hand. A brake that is spring-applied automatically in the absence of an overt action is called a *fail-safe brake* [Figure 22-1(d)]: When the power goes off, the brake goes on.

When the functions of both a clutch and a brake are required in a system, they are frequently arranged in the same unit, the *clutch-brake module*. When the clutch is activated, the brake is deactivated, and vice versa [see Figure 22-1(e)].

A *slip clutch* is a clutch that, by design, transmits only a limited torque; thus, it will slip at any higher torque. It is used to provide a controlled acceleration to a load that is smooth and that requires a smaller motor power. It is also used as a safety device, protecting expensive or sensitive components in the event that a system is jammed.

Most of the discussion in this chapter will concern clutches and brakes that transmit motion through friction at the interface between two rotating parts moving at different speeds. Other types are discussed briefly in the last section.

References 1–7 and Internet sites 1–9 provide additional information on the design, selection, and application of motion control systems, clutches, and brakes.

22-3 TYPES OF FRICTION CLUTCHES AND BRAKES

Clutches and brakes that use friction surfaces as the means of transmitting the torque to start or stop a mechanism can be classified according to the general geometry of the friction surfaces and by the means used to actuate them. In some cases, the same basic geometry can be used as either a clutch or a brake by selectively attaching the friction elements to the driver, the driven machine, or the stationary frame of the machine.

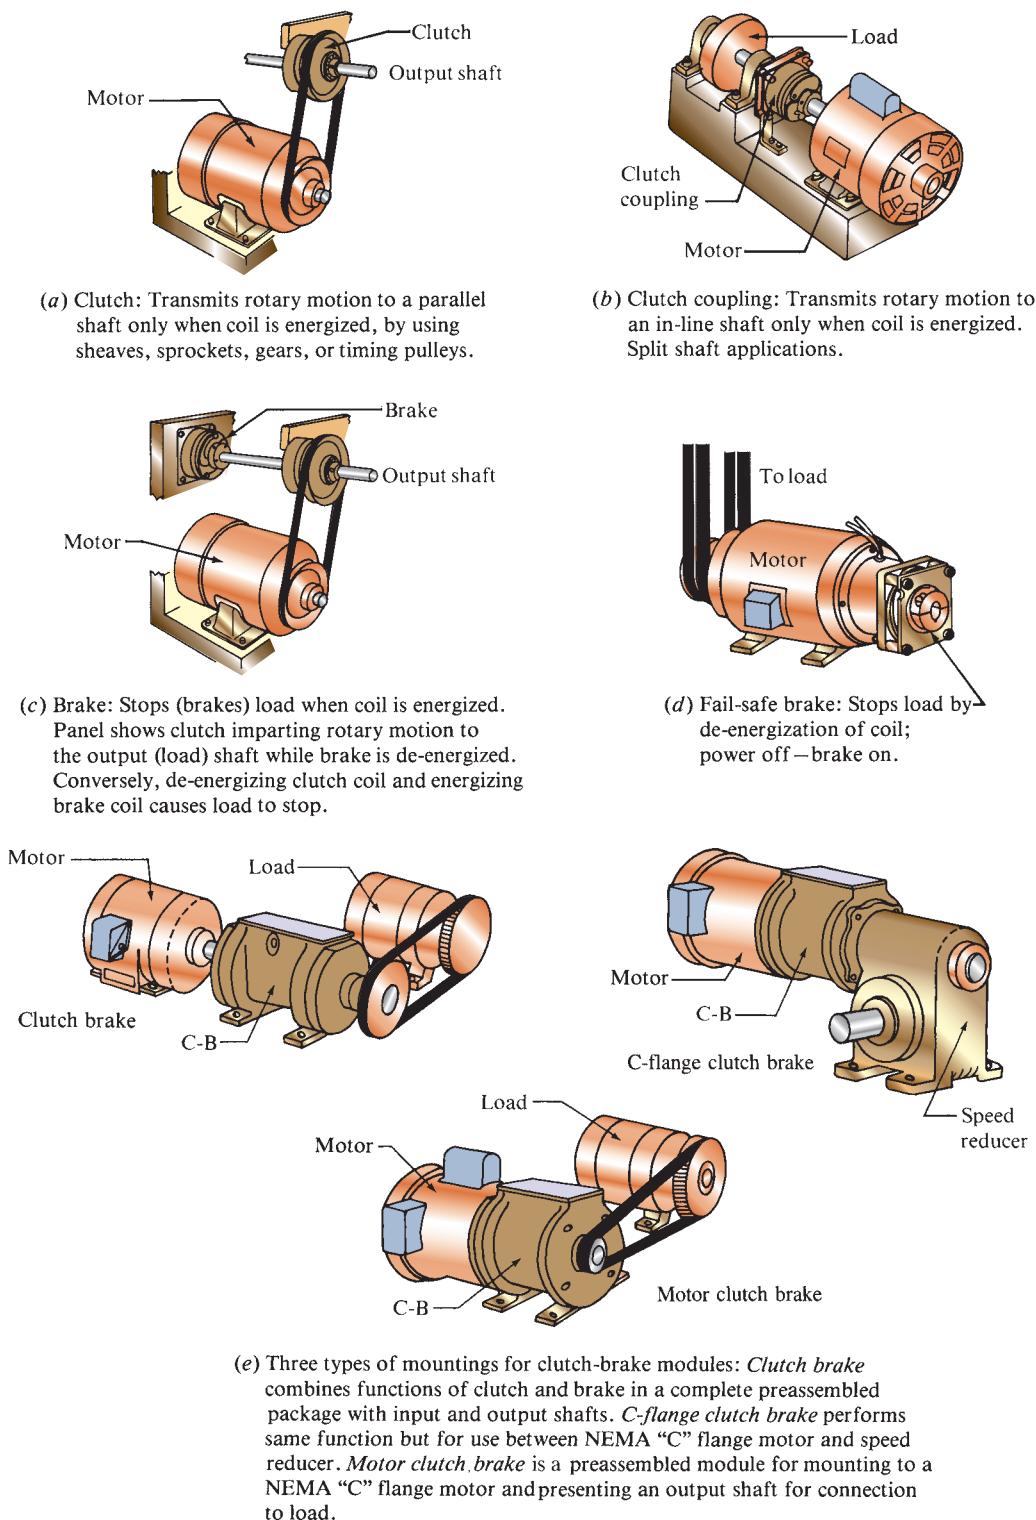


FIGURE 22-1 Typical applications of clutches and brakes

The following types of clutches and brakes are sketched in Figure 22-2:

- (a) **Plate clutch or brake:** Each friction surface is in the shape of an annulus on a flat plate. One or more friction plates move axially to contact a mating smooth plate, usually made of steel, to which the friction torque is transmitted.

- (b) **Caliper disc brake:** A disc-shaped rotor is attached to the machine to be controlled. Friction pads covering only a small portion of the disc are contained in a fixed assembly called a *caliper* and are forced against the disc by air pressure or hydraulic pressure.
- (c) **Cone clutch or brake:** A cone clutch or brake is similar to a plate clutch or brake except that the mating

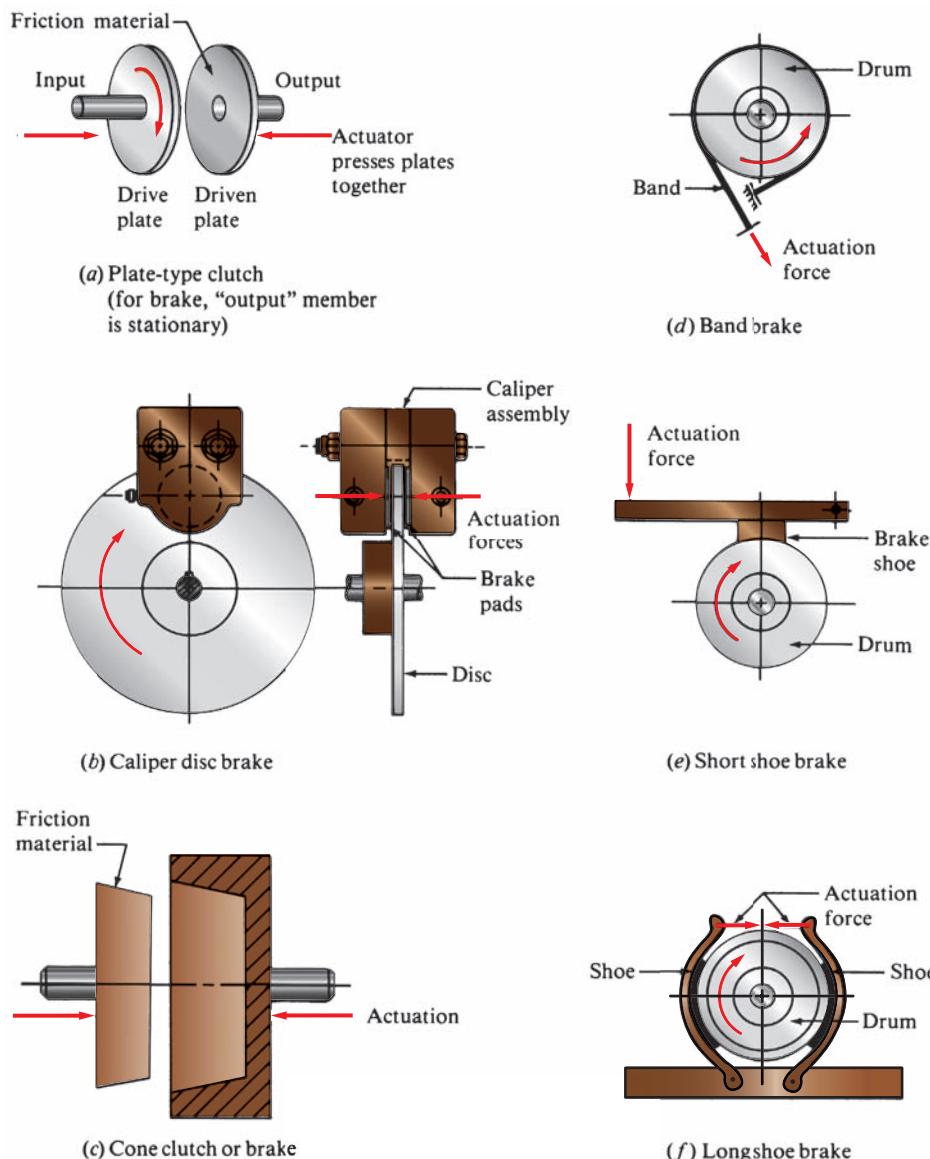


FIGURE 22-2 Types of friction clutches and brakes

surfaces are on a portion of a cone instead of on a flat plate.

- (d) **Band brake:** Used only as a brake, the friction material is on a flexible band that nearly surrounds a cylindrical drum attached to the machine to be controlled. When braking is desired, the band is tightened on the drum, exerting a tangential force to stop the load.
- (e) and (f) **Block or shoe brake:** Curved, rigid pads faced with the friction material are forced against the surface of a drum, from either the outside or the inside, exerting a tangential force to stop the load. Some brake shoes are short and some are long as described later in this chapter.

Actuation

The following are the means used to actuate clutches or brakes. Each may be applied to several of the types described. Figures 22-3 through 22-9 show a variety of commercially available designs.

Manual. The operator provides the force, usually through a lever arrangement to achieve force multiplication. Figure 22-3 shows a power take-off for agricultural or construction equipment where a manually operated clutch engages and disengages the driven shaft from the engine. The driven shaft drives accessory equipment such as a fertilizer spreader, concrete mixer, or wood chipper.

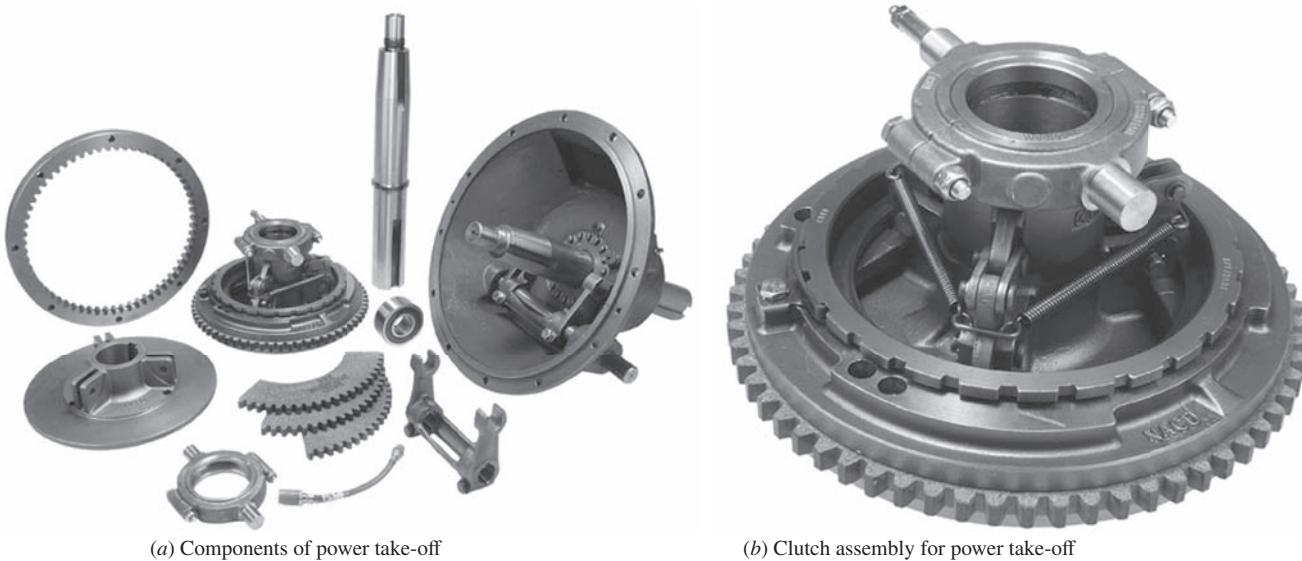


FIGURE 22-3 Power take-off with manual clutch (North American Clutch & Driveline, Inc., Machesney Park, IL)

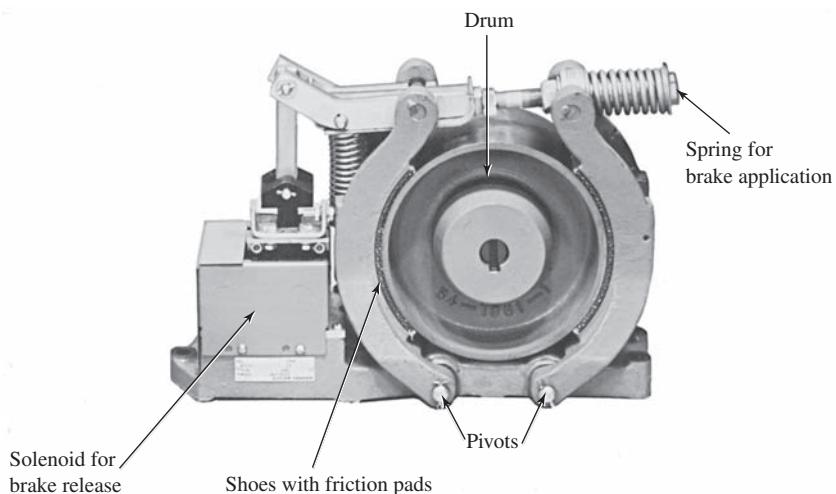


FIGURE 22-4 Spring-applied, electrically released, long shoe brake
(Reprinted with permission and courtesy of Eaton Corporation.)

Spring-applied. Sometimes called a *fail-safe* design when applied to a brake, the brake is applied automatically by springs unless there is some opposing force present. Thus, if power fails, or if air pressure or hydraulic pressure is lost, or if the operator is unable to perform the function, the springs apply the brake and stop the load. The concept may also be used to engage or to disengage a clutch.

Centrifugal. A centrifugal clutch is sometimes employed to permit the driving system to accelerate without a connected load. Then, at a preselected speed, centrifugal force moves the clutch elements into contact

to connect the load. As the system slows, the load will be automatically disconnected.

Pneumatic. Compressed air is introduced into a cylinder or some other chamber. The force produced by the pressure on a piston or a diaphragm brings the friction surfaces into contact with the members connected to the load.

Hydraulic. Hydraulic brakes are similar to the pneumatic type, except that they use oil hydraulic fluids instead of air. The hydraulic actuator is usually applied where high actuation forces are required.

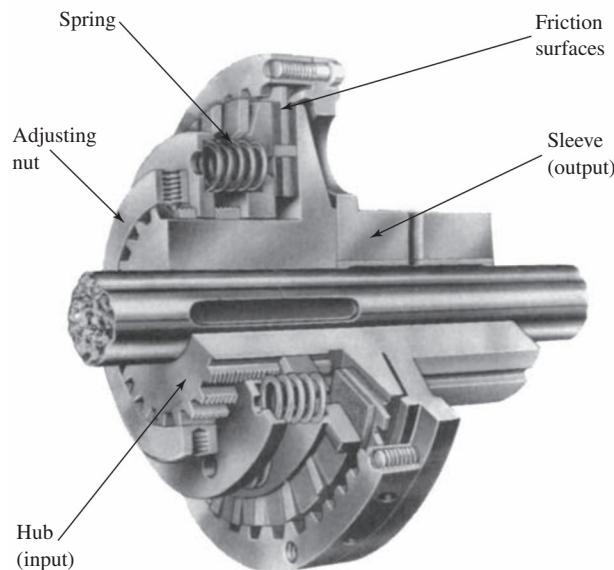


FIGURE 22-5 Slip clutch. Springs apply normal pressure on the friction plates. The spring force is adjustable to vary the torque level at which clutch will slip

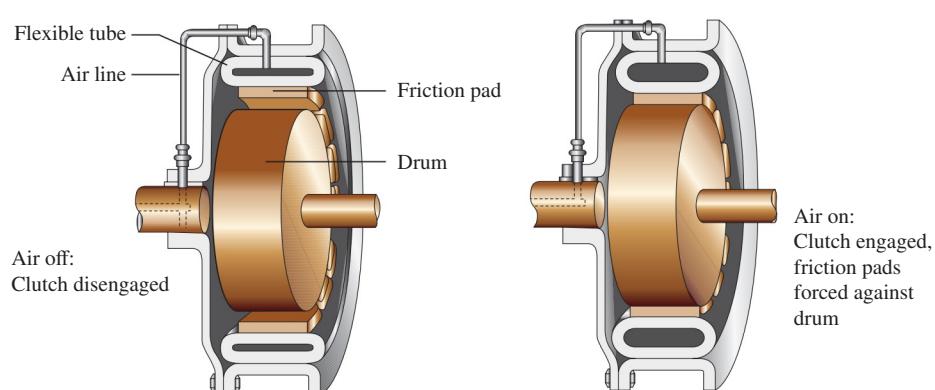
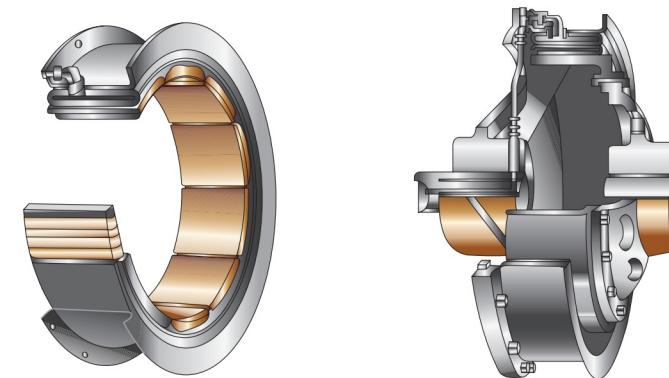


FIGURE 22-6 Air-actuated clutch or brake (Eaton Corp., Airflex Division, Cleveland, OH)

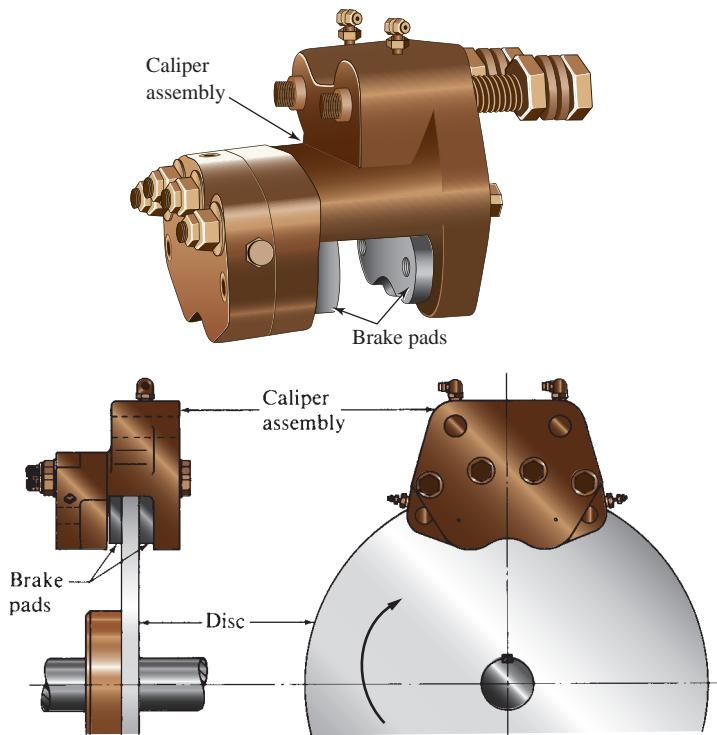


FIGURE 22-7 Hydraulically actuated disc brake assembly

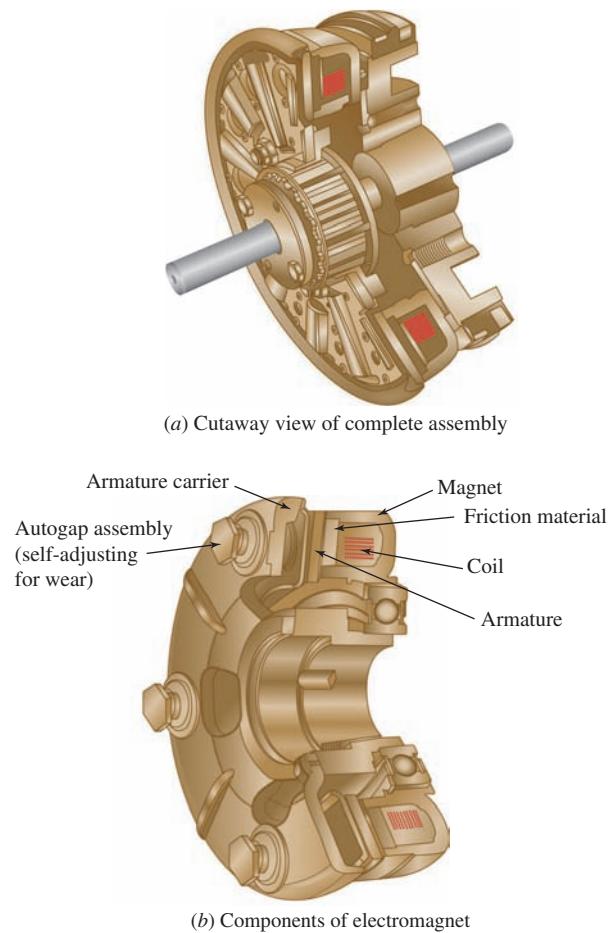


FIGURE 22-8 Electrically actuated plate-type clutch or brake

Electromagnetic. An electric current is applied to a coil, creating an electromagnetic flux. The magnetic force then attracts an armature attached to the machine that is to be controlled. The armature is usually of the plate type.

22-4 PERFORMANCE PARAMETERS

The principles of physics tell us that whenever the speed or the direction of the motion of a body is changed, there must be a force exerted on the body. If the body is in rotation, a torque must be applied to the system to speed it up or to slow it down. When a change in speed occurs, a corresponding change in the kinetic energy of the system occurs. Thus, motion control inherently involves the control of energy, either adding energy to accelerate a system or absorbing energy to decelerate it.

The parameters involved in the rating of clutches and brakes are as follows:

1. Torque required to accelerate or decelerate the system
2. Time required to accomplish the speed change
3. The cycling rate: number of on/off cycles per unit time
4. The inertia of the rotating or translating parts
5. The environment of the system: temperature, cooling effects, and so on

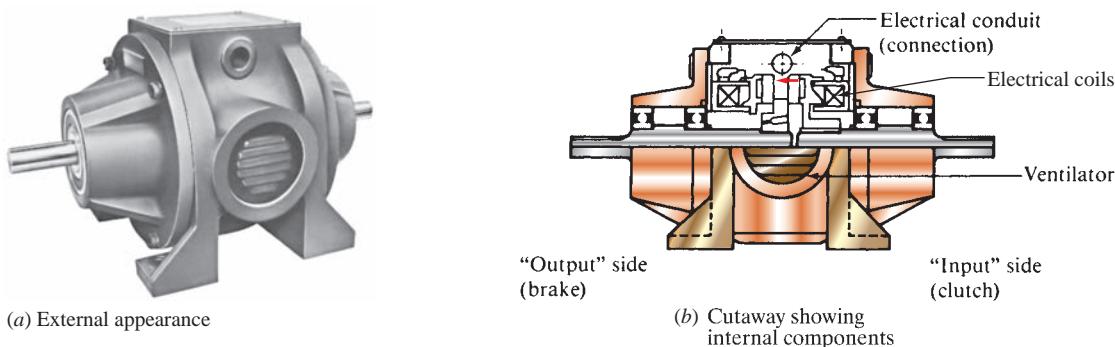


FIGURE 22-9 Electrically operated clutch-brake module

6. Energy-dissipation capability of the clutch or the brake
7. Physical size and configuration
8. Actuation means
9. Life and reliability of the system
10. Cost and availability

Two basic methods are used to determine the torque capacity required of a clutch or a brake. One relates the capacity to the power of the motor driving the system. Recall that, in general, power = torque \times rotational speed ($P = Tn$). The required torque capacity is then usually expressed in the form

◇ Required Torque Capacity of Clutch or Brake

$$T = \frac{CPK}{n} \quad (22-1)$$

where C = conversion factor for units

K = service factor based on the application

More will be said about these later.

Note that the torque required is inversely proportional to the rotational speed. For this reason, it is advisable to locate the clutch or the brake on the highest-speed shaft in the system so that the required torque is a minimum. The size, cost, and response time are all typically lower when the torque is lower. One disadvantage is that the shaft to be accelerated or decelerated must undergo a larger change in speed, and the amount of slipping may be greater. This effect may generate more frictional heat, leading to thermal problems. However, it is offset by the increased cooling effect because of the faster motion of the clutch or brake parts.

The value for the K factor in the torque equation is largely a design decision. Some of the typical guidelines follow:

1. For brakes under average conditions, use $K = 1.0$.
2. For clutches in light duty where the output shaft does not assume its normal load until after it is up to speed, use $K = 1.5$.

3. For clutches in heavy duty where large attached loads must be accelerated, use $K = 3.0$.
4. For clutches in systems having varying loads, use a K factor at least equal to the factor by which the motor breakdown torque exceeds the full-load torque. This was discussed in Chapter 21, but for a typical industrial motor (design B), use $K = 2.75$. For a high starting torque motor (design C or capacitor-start motor), $K = 4.0$ may be required. This ensures that the clutch will be able to transmit at least as much torque as the motor develops and that it will not slip after getting up to speed.
5. For clutches in systems driven by gasoline engines, diesel engines, or other prime movers, consider the peak torque capability of the driver; $K = 5.0$ may be required.

The following list relates the value for C to typically used units for torque, power, and rotational speed. For example, if power is in hp and speed is in rpm, then to obtain torque in lb \cdot ft, use $T = 5252(P/n)$.

| Torque | Power | Speed | C |
|---------------|-------|-------|--------|
| lb \cdot ft | hp | rpm | 5252 |
| lb \cdot in | hp | rpm | 63 025 |
| N \cdot m | W | rad/s | 1 |
| N \cdot m | W | rpm | 9.549 |
| N \cdot m | kW | rpm | 9549 |

Although the torque computation method of Equation (22-1) will produce generally satisfactory performance in typical applications, it does not provide a means of estimating the actual time required to accelerate the load with a clutch or to decelerate the load with a brake. The method described next should be used for systems with large inertia such as conveyors or presses having flywheels.

22-5 TIME REQUIRED TO ACCELERATE OR DECELERATE A LOAD

This section uses the acceleration of a load in its examples, wherein a torque must be applied to the load to bring it to a desired rotational speed in a given amount of time. The same principles can be applied in braking situations in which the braking torque either slows or stops a rotating body.

The basic principle involved is taken from dynamics:

$$T = I\alpha$$

where I = mass moment of inertia of the components being accelerated

α (alpha) = angular acceleration—that is, the rate of change of angular velocity

The usual objective of such an analysis is to determine the torque required to produce a change in rotational speed, Δn , of a system in a given amount of time, t . But $\Delta n/t = \alpha$. Also, it is more convenient to express the mass moment of inertia in terms of the *radius of gyration*, k . By definition,

$$k = \sqrt{I/m} \quad \text{or} \quad k^2 = I/m$$

where m = mass

$$m = W/g$$

Radius of gyration:

$$k^2 = \frac{1}{2} (R_1^2 + R_2^2)$$

Volume:

$$V = \pi(R_1^2 - R_2^2)L$$

Weight:

$$W = \delta_W V$$

δ_W = Weight density (weight/volume)

Inertia (Wk^2):

$$Wk^2 = \delta_W V k^2 = \delta_W \pi(R_1^2 - R_2^2)L(R_1^2 + R_2^2)/2$$

$$Wk^2 = \frac{\pi \delta_W L}{2} (R_1^4 - R_2^4)$$

Typical units: L , R_1 , R_2 in inches

$$\delta_W \text{ in lb/in}^3$$

$$Wk^2 \text{ in lb}\cdot\text{ft}^2$$

$$Wk^2 = \frac{\pi}{2} \times \delta_W \frac{\text{lb}}{\text{in}^3} \times L(\text{in}) \times (R_1^4 - R_2^4) \text{ in}^4 \times \frac{1 \text{ ft}^2}{144 \text{ in}^2}$$

$$Wk^2 = \frac{\delta_W L (R_1^4 - R_2^4)}{91.67} \text{ lb}\cdot\text{ft}^2$$

Special case for steel: $\delta_W = 0.283 \text{ lb/in}^3$

$$Wk^2 = \frac{L (R_1^4 - R_2^4)}{323.9} \text{ lb}\cdot\text{ft}^2$$

Then

$$I = mk^2 = Wk^2/g$$

The equation for torque then becomes

◇ Torque Required to Accelerate an Inertia Load

$$T = I\alpha = \frac{Wk^2}{g} \frac{(\Delta n)}{t} \quad (22-2)$$

The term Wk^2 is frequently called simply the *inertia* of the load, although that designation is not strictly correct. A large proportion of the components in a machine system to be accelerated are in the form of cylinders. Figure 22-10 gives the relationships for the radius of gyration and Wk^2 for hollow cylinders. Solid cylinders are simply a special case with an inside radius of zero. We can analyze more complex objects by considering them to be made from a set of simpler cylinders. Example Problem 22-1 illustrates the process.

Now the torque required to accelerate the pulley can be computed. Equation (22-2) can be put into a more convenient form by noting that T is usually expressed in $\text{lb}\cdot\text{ft}$, Wk^2 in $\text{lb}\cdot\text{ft}^2$, n in rpm, and t in s. Using $g = 32.2 \text{ ft/s}^2$ and converting units gives

$$T = \frac{Wk^2(\Delta n)}{308t} \text{ lb}\cdot\text{ft} \quad (22-3)$$

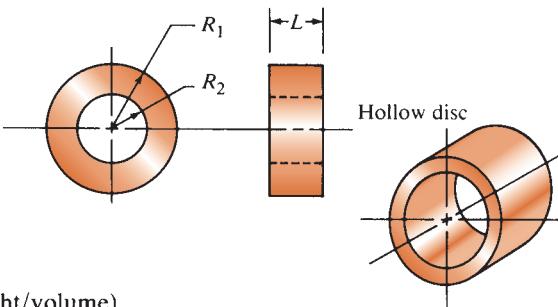


FIGURE 22-10 Inertia properties of a hollow cylinder

**Example Problem
22–1**

Compute the value of Wk^2 for the steel flat-belt pulley for which the cross section is shown in Figure 22–11.

Solution

The pulley can be considered to be made up of three components, each of which is a hollow cylinder. The Wk^2 for the total pulley is the sum of that for each component. Use the equation for a steel cylinder from Figure 22–10.

Part 1. Using the formula from Figure 22–10 for a steel cylinder, we have

$$Wk^2 = \frac{(R_1^4 - R_2^4)(L)}{323.9} \text{ lb} \cdot \text{ft}^2 = \frac{[(10.0)^4 - (9.0)^4](6.0)}{323.9}$$

$$Wk^2 = 63.70 \text{ lb} \cdot \text{ft}^2$$

Part 2.

$$Wk^2 = \frac{[(9.0)^4 - (3.0)^4](0.75)}{323.9} = 15.00 \text{ lb} \cdot \text{ft}^2$$

Part 3.

$$Wk^2 = \frac{[(3.0)^4 - (1.5)^4](4.0)}{323.9} = 0.94 \text{ lb} \cdot \text{ft}^2$$

$$\text{Total } Wk^2 = 63.70 + 15.00 + 0.94 = 79.64 \text{ lb} \cdot \text{ft}^2$$

**Example Problem
22–2**

Compute the torque that a clutch must transmit to accelerate the pulley of Figure 22–11 from rest to 550 rpm in 2.50 s. From Example Problem 22–1, $Wk^2 = 79.64 \text{ lb} \cdot \text{ft}^2$.

Solution

Use Equation (22–3):

$$T = \frac{Wk^2(\Delta n)}{308t} \text{ lb} \cdot \text{ft} = \frac{(79.64)(550)}{308(2.5)} = 56.9 \text{ lb} \cdot \text{ft}$$

In summary, if a clutch that is capable of exerting at least 56.9 $\text{lb} \cdot \text{ft}$ of torque engages a shaft carrying the pulley shown in Figure 22–11, the pulley can be accelerated from rest to 550 rpm in 2.50 s or less.

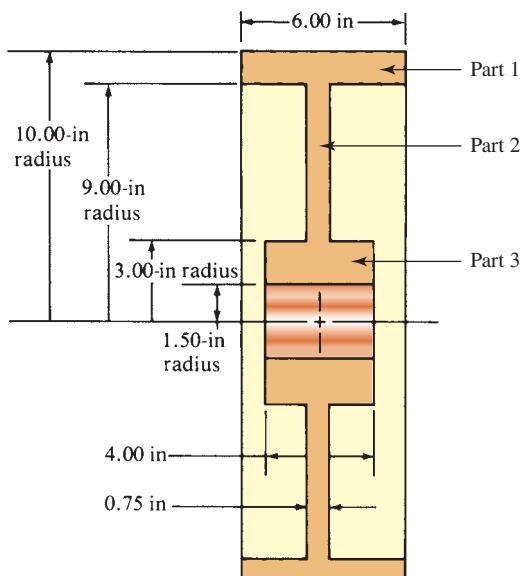


FIGURE 22–11 Steel flat-belt pulley

22-6 INERTIA OF A SYSTEM REFERRED TO THE CLUTCH SHAFT SPEED

In many practical machine systems, there are several elements on several shafts, operating at differing speeds. It is required that the effective inertia of the entire system *as it affects the clutch* be determined. The effective inertia of a connected load operating at a rotational speed different from that of the clutch is

proportional to the square of the ratio of the speeds. That is,

◊ Effective Inertia

$$Wk_e^2 = Wk^2 \left(\frac{n}{n_c} \right)^2 \quad (22-4)$$

where n = rotational speed of the load of interest

n_c = rotational speed of the clutch

Example Problem

22-3

Compute the total inertia of the system in Figure 22-12 as seen by the clutch. Then compute the time required to accelerate the system from rest to a motor speed of 550 rpm if the clutch exerts a torque of 240 lb·ft. The Wk^2 for the armature of the clutch, which must also be accelerated, is 0.22 lb·ft², including the 1.25-in shaft.

Solution

The clutch and gear *A* will be rotating at 550 rpm, but because of the gear reduction, gear *B*, its shaft, and the pulley rotate at

$$n_2 = 550 \text{ rpm} (24/66) = 200 \text{ rpm}$$

Now compute the inertia for each element referred to the clutch speed. Assume that the gears are cylinders having outside diameters equal to the pitch diameter of the gear and inside diameters equal to the shaft diameter. The equation in Figure 22-10 for a steel cylinder will be used to compute Wk^2 .

Gear A

$$Wk^2 = [(2.00)^4 - (0.625)^4](2.50)/323.9 = 0.122 \text{ lb}\cdot\text{ft}^2$$

Gear B

$$Wk^2 = [(5.50)^4 - (1.50)^4](2.50)/323.9 = 7.02 \text{ lb}\cdot\text{ft}^2$$

But, because of the speed difference, the effective inertia is

$$Wk_e^2 = 7.02(200/550)^2 = 0.93 \text{ lb}\cdot\text{ft}^2$$

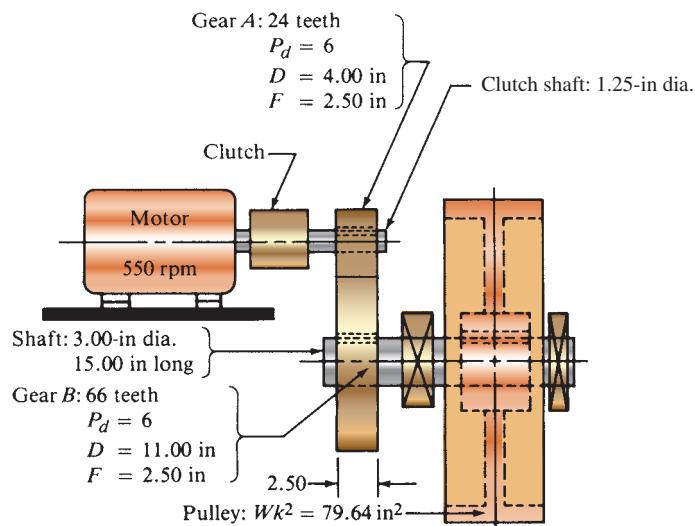


FIGURE 22-12 Given system for Example Problem 22-3.

Pulley

From Example Problem 22–1, $Wk^2 = 79.64 \text{ lb}\cdot\text{ft}^2$. The effective inertia is

$$Wk_e^2 = 79.64(200/550)^2 = 10.53 \text{ lb}\cdot\text{ft}^2$$

Shaft

$$Wk^2 = (1.50)^4(15.0)/323.9 = 0.234 \text{ lb}\cdot\text{ft}^2$$

The effective inertia is

$$Wk_e^2 = 0.234(200/550)^2 = 0.03 \text{ lb}\cdot\text{ft}^2$$

The total effective inertia as seen by the clutch is

$$Wk_e^2 = 0.22 + 0.12 + 0.93 + 10.53 + 0.03 = 11.83 \text{ lb}\cdot\text{ft}^2$$

Solving Equation (22–3) for the time gives

$$t = \frac{Wk_e^2(\Delta n)}{308T} = \frac{(11.83)(550)}{308(240)} = 0.088 \text{ s}$$

22-7 EFFECTIVE INERTIA FOR BODIES MOVING LINEARLY

To this point, we have dealt only with components that rotate. Many systems include linear devices such as conveyors, hoist cables and their loads, or reciprocating racks driven by gears that also have inertia and must be accelerated. It would be convenient to represent these devices with an effective inertia measured by Wk^2 as we have for rotating bodies. We can accomplish this by relating the equations for kinetic energy for linear and rotary motion. The actual kinetic energy of a translating body moving with a linear velocity, v , is

$$KE = \frac{1}{2}mv^2 = \frac{1}{2}\frac{W}{g}v^2 = \frac{Wv^2}{2g}$$

We will use ft/min for the units of velocity.

For a body rotating with an angular velocity in the units of rad/min, the kinetic energy is

$$KE = \frac{1}{2}I\omega^2 = \frac{1}{2}\frac{Wk^2}{g}\omega^2 = \frac{Wk^2\omega^2}{2g}$$

Letting Wk^2 be the effective inertia, and equating these two formulas, gives

$$Wk_e^2 = W\left(\frac{v}{\omega}\right)^2$$

We will use ft/min for the units of velocity.

Using n rpm rather than ω rad/min, we must substitute $\omega = 2\pi n$. Then

⇒ Effective Inertia for a Load Moving Linearly

$$Wk_e^2 = W\left(\frac{v}{2\pi n}\right)^2 \quad (22-5)$$

Example Problem 22-4

The conveyor in Figure 22–13 moves at 80 ft/min. The combined weight of the belt and the parts on it is 140 lb. Compute the equivalent Wk^2 inertia for the conveyor referred to the shaft driving the belt.

Solution The rotational speed of the shaft is

$$\omega = \frac{v}{R} = \frac{80 \text{ ft}}{\text{min}} \frac{1}{5.0 \text{ in}} \frac{12 \text{ in}}{\text{ft}} = 192 \text{ rad/min}$$

Then the equivalent Wk^2 is

$$Wk_e^2 = W\left(\frac{v}{\omega}\right)^2 = (140 \text{ lb})\left(\frac{80 \text{ ft/min}}{192 \text{ rad/min}}\right)^2 = 24.3 \text{ lb}\cdot\text{ft}^2$$

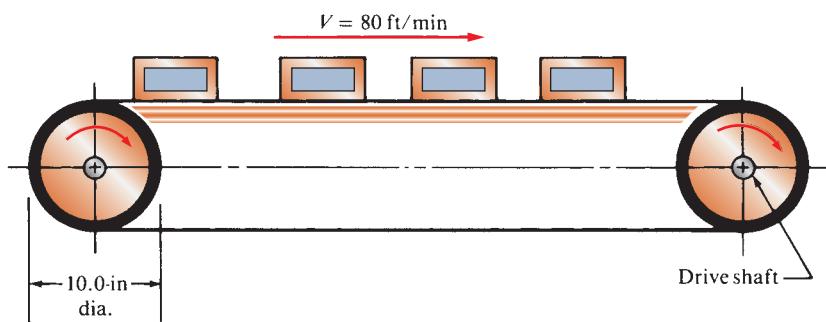


FIGURE 22-13 Conveyor moving at 80 ft/min

22-8 ENERGY ABSORPTION: HEAT-DISSIPATION REQUIREMENTS

When you are using a brake to stop a rotating object or using a clutch to accelerate it, the clutch or brake must transmit energy through the friction surfaces as they slip in relation to each other. Heat is generated at these surfaces, tending to increase the temperature of the unit. Of course, heat is then dissipated from the unit, and for a given set of operating conditions an equilibrium temperature is achieved. That temperature must be sufficiently low to ensure a long life of the friction elements and other operating parts of the unit, such as electric coils, springs, and bearings.

The energy to be absorbed or dissipated by the unit per cycle is equal to the change in kinetic energy of the components being accelerated or stopped. That is,

◇ Energy Absorption by a Brake

$$E = \Delta KE = \frac{1}{2} I \omega^2 = \frac{1}{2} m k^2 \omega^2 = \frac{W k^2 \omega^2}{2g}$$

For typical units in the U.S. Customary System ($\omega = n$ rpm; $W k^2$ in $\text{lb} \cdot \text{ft}^2$; and $g = 32.2 \text{ ft/s}^2$), we get

$$E = \frac{W k^2 (\text{lb} \cdot \text{ft}^2)}{2(32.2 \text{ ft/s}^2)} \frac{n^2 \text{ rev}^2}{\text{min}^2} \frac{(2\pi)^2 \text{ rad}}{\text{rev}^2} \frac{1 \text{ min}^2}{60^2 \text{ s}^2}$$

◇ Energy Absorption in U.S. Customary Units

$$E = 1.7 \times 10^{-4} W k^2 n^2 \text{ lb} \cdot \text{ft} \quad (22-6)$$

In SI units, mass is in kilograms (kg), radius of gyration is in meters (m), and angular velocity is in radians per second (rad/s). Then

$$E = \frac{1}{2} I \omega^2 = \frac{1}{2} m k^2 \omega^2 (\text{kg} \cdot \text{m}^2/\text{s}^2)$$

But the newton unit is equal to the $\text{kg} \cdot \text{m/s}^2$. Then

◇ Energy Absorption in SI Units

$$E = \frac{1}{2} m k^2 \omega^2 \text{ N} \cdot \text{m} \quad (22-7)$$

No further conversion factors are required.

If there are repetitive cycles of operation, the energy from Equation (22-6) or (22-7) must be multiplied by the cycling rate, usually in cycles/min in U.S. Customary units and cycles/s for SI units. The result would be the energy generation per unit time, which must be compared with the heat-dissipation capacity of the clutch or brake being considered for the application.

When the clutch-brake cycles on and off, part of its operation is at the full operating speed of the system, and part is at rest. The combined heat-dissipation capacity is the average of the capacity at each speed, weighted by the proportion of the cycle at each speed (see Example Problem 22-5).

22-9 RESPONSE TIME

The term *response time* refers to the time required for the unit (clutch or brake) to accomplish its function after action is initiated by the application of an electric current, air pressure, spring force, or manual force. Figure 22-14 shows a complete cycle using a clutch-brake module. The straight-line curve is idealized while the curved line gives the general form of system motion.

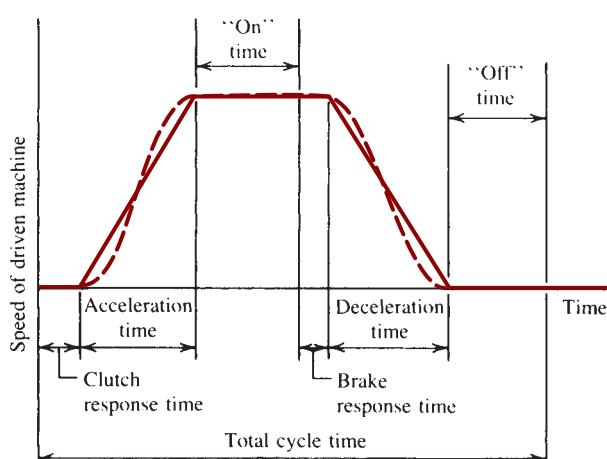


FIGURE 22-14 Typical cycle of engagement and disengagement for a clutch

TABLE 22–1 Clutch-Brake Sample Performance Data

| Unit size | Torque capacity (lb · ft) | Inertia, Wk^2 (lb · ft 2) | Heat dissipation (ft · lb/min) | | Response time (s) | |
|-----------|------------------------------|------------------------------------|-----------------------------------|----------|-------------------|-------|
| | | | At rest | 1800 rpm | Clutch | Brake |
| A | 0.42 | 0.00017 | 750 | 800 | 0.022 | 0.019 |
| B | 1.25 | 0.0014 | 800 | 1200 | 0.032 | 0.024 |
| C | 6.25 | 0.021 | 1050 | 2250 | 0.042 | 0.040 |
| D | 20.0 | 0.108 | 2000 | 6000 | 0.090 | 0.089 |
| E | 50.0 | 0.420 | 3000 | 13 000 | 0.110 | 0.105 |
| F | 150.0 | 1.17 | 9000 | 62 000 | 0.250 | 0.243 |
| G | 240.0 | 2.29 | 18 000 | 52 000 | 0.235 | 0.235 |
| H | 465.0 | 5.54 | 20 000 | 90 000 | 0.350 | 0.350 |
| I | 700.0 | 13.82 | 26 000 | 190 000 | 0.512 | 0.512 |

Note: Torque ratings are static. The torque capacity decreases as the speed difference between the parts being engaged increases. Interpolation may be used on heat-dissipation data.

The actual response time will vary, even for a given unit, with variations in the load, environment, or other operating conditions.

Commercially available clutches and brakes for typical machine applications have response times from a few milliseconds (1/1000 s) for a small device, such

as a paper transport, to approximately 1.0 s for larger machines, such as an assembly conveyor. Manufacturers' literature should be consulted. To give you a feel for the capabilities of commercially available clutches and brakes, Table 22–1 gives sample data for electrically powered units.

Example Problem 22–5

For the system in Figure 22–12, and using the data from Example Problem 22–3, estimate the total cycle time if the system is controlled by unit G from Table 22–1 and the system must stay on (at steady speed) for 1.50 s and off (at rest) for 0.75 s. Also estimate the response time of the clutch-brake and the acceleration and deceleration times. If the system cycles continuously, compute the heat-dissipation rate, and compare it with the capacity of the unit.

Solution

Figure 22–15 shows the estimated total cycle time for the system to be 2.896 s. From Table 22–1, we find that the clutch-brake exerts 240 lb · ft of torque and has a response time of 0.235 s for both the clutch and the brake.

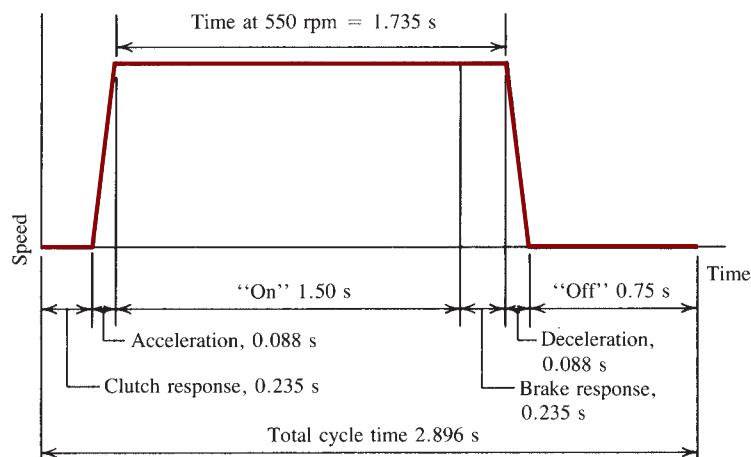


FIGURE 22–15 Estimated total cycle time

Acceleration and Deceleration Time [Equation (22–3)]

$$t = \frac{Wk_e^2(\Delta n)}{308T} = \frac{(11.83)(550)}{308(240)} = 0.088 \text{ s}$$

Cycling Rate and Heat Dissipation [Equation (22–6)]

For a total cycle time of 2.896 s, the number of cycles per minute would be

$$C = \frac{1.0 \text{ cycle}}{2.896 \text{ s}} \frac{60 \text{ s}}{\text{min}} = 20.7 \text{ cycles/min}$$

The energy generated with each engagement of either the clutch or the brake is

$$E = 1.7 \times 10^{-4} Wk^2n^2 = 1.7 \times 10^{-4}(11.83)(550)^2 = 608 \text{ lb}\cdot\text{ft}$$

The energy generation per minute is

$$E_t = 2 EC = (2)(608 \text{ lb}\cdot\text{ft}/\text{cycle})(20.7 \text{ cycles/min}) = 25200 \text{ lb}\cdot\text{ft}/\text{min}$$

This is greater than the heat-dissipation capacity of unit G at rest (18 000 lb·ft/min). Then let's compute a weighted average capacity for this cycle. First, referring to Figure 22–15, approximately 1.735 s is "at speed," or 550 rpm. The balance of the cycle, 1.161 s, is at rest. From Table 22–1, and interpolating between zero speed and 1800 rpm, the heat-dissipation rate at 550 rpm is approximately 28 400 lb·ft/min. Then the weighted average capacity for unit G is

$$E_{avg} = \frac{t_0}{t_t} E_0 + \frac{t_{550}}{t_t} E_{550}$$

where t_t = total cycle time

t_0 = time at rest (0 rpm)

t_{550} = time at 550 rpm

E_0 = heat-dissipation capacity at rest

E_{550} = heat-dissipation capacity at 550 rpm

Then

$$E_{avg} = \frac{1.161}{2.896}(18000) + \frac{1.735}{2.896}(28400) = 24230 \text{ lb}\cdot\text{ft}/\text{min}$$

This is a little lower than required, and the design would be marginal. Fewer cycles per minute should be specified.

22-10 FRICTION MATERIALS AND COEFFICIENT OF FRICTION

Many of the types of clutches and brakes discussed in this chapter employ mating surfaces driven through friction materials. The function of these materials is to develop a substantial friction force when a normal force is created by the brake actuation means. The friction force produces a force or a torque that retards existing motion if applied as a brake or that accelerates a member at rest or moving at a slower speed if applied as a clutch.

The desirable properties of friction materials are as follows:

- They should have a relatively high coefficient of friction when operating against the mating materials in the system. The highest coefficient of friction is not always the best choice, because smooth engagement is often aided by a more moderate frictional force or torque.

- The coefficient of friction should be relatively constant over the range of operating pressures and temperatures so that reliable, predictable performance can be expected.
- The materials should have good resistance to wear.
- The materials must be chemically compatible with mating components.
- Environmental hazards must be minimized.

Several materials are used for friction elements in clutches and brakes, and many are proprietary to a particular manufacturer. Common in the past were various asbestos-based compounds having coefficients of friction in the range of 0.35 to 0.50. Asbestos has been shown to be a health hazard and has been replaced by molded compounds of polymers and rubber. Where flexibility is required, as in band brakes, the base material is woven into a fabric, sometimes strengthened with metal wire,

TABLE 22-2 Coefficients of Friction

| Friction material | Dynamic friction coefficient | | Pressure range | |
|-------------------|------------------------------|-----------|----------------|-----------|
| | Dry | In oil | (psi) | (kPa) |
| Molded compounds | 0.25–0.45 | 0.06–0.10 | 150–300 | 1035–2070 |
| Woven materials | 0.25–0.45 | 0.08–0.10 | 50–100 | 345–690 |
| Sintered metal | 0.15–0.45 | 0.05–0.08 | 150–300 | 1035–2070 |
| Cork | 0.30–0.50 | 0.15–0.25 | 8–15 | 55–100 |
| Wood | 0.20–0.45 | 0.12–0.16 | 50–90 | 345–620 |
| Cast iron | 0.15–0.25 | 0.03–0.06 | 100–250 | 690–1725 |
| Paper-based | | 0.10–0.15 | | |
| Graphite/resin | | 0.10–0.14 | | |

saturated with a resin, and cured. Cork and wood are also used sometimes. Paper-based materials are used in some oil-filled clutches. In severe environments, cast iron, sintered iron or other metals, or graphite materials are employed. Table 22-2 gives approximate ranges of coefficients of friction and the pressure that the materials can withstand.

For automotive applications, standards are set by SAE International. In SAE J866 (Reference 7), a set of codes is defined to classify friction materials according to the coefficient of friction, regardless of the material used. Table 22-3 lists these codes.

In problems in this book that require a coefficient of friction, we will use a value of 0.25 unless otherwise stated. Based on the values reported here, this is a relatively low value that should yield conservative designs.

Materials for Discs and Drums

A variety of metals are applied in the manufacture of brake and clutch discs and drums. The material must have sufficient strength, ductility, and stiffness to withstand the applied forces while maintaining a precise

geometry. It must also be able to absorb heat from the friction surface and dissipate it to the environment.

Some of the popular choices are gray cast iron, ductile iron, carbon steel, and copper alloys. Many discs and drums are cast for cost reasons and to obtain near net shape of the parts that require little machining after casting. Cast iron has low cost and high thermal conductivity as compared with ductile iron. However, ductile iron is better able to withstand shock or impact loading. Copper alloys have far higher thermal conductivity than the other materials, but they have poorer wear performance.

22-11 PLATE-TYPE CLUTCH OR BRAKE

Figure 22-2(a) shows a simple sketch of a plate-type clutch, and Figure 22-8 shows a cutaway view of a commercially available, electrically actuated clutch or brake. In Figure 22-8, an electromagnet exerts an axial force that draws the friction surfaces together. When two bodies are brought into contact with a normal force between them, a friction force that tends to resist relative motion is created. This is the principle on which the plate-type clutch or brake is based.

Friction Torque

As the friction plate rotates in relation to the mating plate with an axial force pressing them together, the friction force acts in a tangential direction, producing the brake or clutch torque. At any point, the local pressure times the differential area at the point is the *normal force*, N . The normal force times the coefficient of friction is the *friction force*. The friction force times the radius of the point is the *torque* produced at this point. The *total torque* is the sum of all of the torques over the entire area of the plate. We can find the sum by integrating over the area.

There is usually some variation of pressure over the surface of the friction plate, and some assumption about

TABLE 22-3 Coefficient of Friction Classification Codes of the Society of Automotive Engineers

| Code letter | Coefficient of friction |
|-------------|-----------------------------|
| C | Not over 0.15 |
| D | Over 0.15 but not over 0.25 |
| E | Over 0.25 but not over 0.35 |
| F | Over 0.35 but not over 0.45 |
| G | Over 0.45 but not over 0.55 |
| H | Over 0.55 |
| Z | Unclassified |

the nature of the variation must be made before the total torque can be computed. A conservative assumption that yields a useful result is that the friction surface will wear uniformly over the entire area as the brake or clutch operates. This assumption implies that the product of the local pressure, p , times the linear relative speed, v , between the plates is constant. Wear has been found to be approximately proportional to the product of p times v .

Taking all these factors into account and completing the analysis produces the following result for friction torque:

$$T_f = fN(R_o + R_i)/2$$

But the last part of this relation is the mean radius, R_m , of the annular plate. Then

Friction Torque on Annular Plate

$$T_f = fNR_m \quad (22-8)$$

As stated before, this is a conservative result, meaning that the actual torque produced would be slightly larger than predicted.

Wear Rating

Note that the torque is proportional to the mean radius, but that no area relationship is involved in Equation (22-8). Thus, the completion of the design for final dimensions requires some other parameter. The missing factor in Equation (22-8) is the expected wear rate of the friction material. It should be obvious that even with the same mean radius, a brake with a larger area would wear less than one with a smaller area.

Example Problem

22-6

Compute the dimensions of an annular plate-type brake to produce a braking torque of 300 lb·in. Springs will provide a normal force of 320 lb between the friction surfaces. The coefficient of friction is 0.25. The brake will be used in average industrial service, stopping a load from 750 rpm.

Solution

Step 1. Compute the required mean radius. From Equation (22-8),

$$R_m = \frac{T_f}{fN} = \frac{300 \text{ lb} \cdot \text{in}}{(0.25)(320 \text{ lb})} = 3.75 \text{ in}$$

Step 2. Specify a desired ratio of R_o/R_i , and solve for the dimensions. A reasonable value for the ratio is approximately 1.50. The range can be from 1.2 to about 2.5, at the designer's choice. Using 1.50, $R_o = 1.50R_i$, and

$$R_m = (R_o + R_i)/2 = (1.5R_i + R_i)/2 = 1.25R_i$$

Then

$$R_i = R_m/1.25 = (3.75 \text{ in})/1.25 = 3.00 \text{ in}$$

$$R_o = 1.50R_i = 1.50(3.00 \text{ in}) = 4.50 \text{ in}$$

Step 3. Compute the area of the friction surface:

$$A = \pi(R_o^2 - R_i^2) = \pi[(4.50 \text{ in})^2 - (3.00 \text{ in})^2] = 35.3 \text{ in}^2$$

Manufacturers of friction materials can assist in the final determination of the relationship between wear and the area of the friction surface. However, the following guidelines allow the estimation of the physical size of brakes and will be used for problem solutions in this book.

The wear rating, WR , will be based on the frictional power, P_f , absorbed by the brake per unit area, A , where

Frictional Power

$$P_f = T_f\omega \quad (22-9)$$

and ω is the angular velocity of the disc. In SI units, with torque in N·m and ω in rad/s, the frictional power is in N·m/s or watts. In the U.S. Customary System, with torque in lb·in and angular velocity expressed as n rpm, the frictional power is in hp, computed from

$$P_f = \frac{T_f n}{63\,000} \text{ hp} \quad (22-10)$$

For industrial applications, we will use

Wear Rating

$$WR = P_f/A \quad (22-11)$$

where $WR = 0.04 \text{ hp/in}^2$ for frequent applications, a conservative rating

$$WR = 0.10 \text{ hp/in}^2 \text{ for average service}$$

$$WR = 0.40 \text{ hp/in}^2 \text{ for infrequently used brakes allowed to cool somewhat between applications}$$

Step 4. Compute the frictional power absorbed:

$$P_f = \frac{T_f n}{63\,000} = \frac{(300 \text{ lb} \cdot \text{in})(750 \text{ rpm})}{63\,000} = 3.57 \text{ hp}$$

Step 5. Compute the wear rating:

$$WR = \frac{P_f}{A} = \frac{3.57 \text{ hp}}{35.3 \text{ in}^2} = 0.101 \text{ hp/in}^2$$

Step 6. Judge the suitability of WR . If WR is too high, return to Step 2 and increase the ratio. If WR is too low, decrease the ratio. In this example, WR is acceptable for average service.

A more compact unit can be designed if more than one friction plate is used. We multiply the friction torque for one plate by the number of plates to determine the total friction torque. One disadvantage of this approach is that the heat dissipation is relatively poorer than for the single plate.

Improving Wear Performance of Brakes

Actual wear in a given application depends on a combination of many variables. Friction materials are relatively softer and weaker than the metallic materials used for discs and drums. Wear is often characterized as adhesion. As the surface of the friction material rubs over the high spots of the metal, plastic deformation occurs at the surface and particles are sheared off, breaking the bond between particles or dislodging filler materials from the polymer bonding agents. This process accelerates when surface temperatures rise as the brake absorbs the energy required to stop the rotating system. The thermal behavior of the system is critical to good life. If temperatures rise above 400°F (200°C), wear rate increases significantly and the coefficient of friction decreases, leading to poorer braking performance called *fade*.

It is difficult to predict the life of a given brake system analytically, and testing under real operating conditions is recommended for new designs. The following lists the general principles for improving wear performance:

- Specify friction materials that have relatively low adhesion when in contact with the disc or drum material.
- Specify friction materials that have high bonding strength between constituent particles.
- Provide high hardness on the surface of the disc or drum by heat treatment.
- Keep the pressure between the friction material and the material of the disc or drum as low as practical.
- Maintain the surface temperature at the interface between the friction material and the material of the disc or drum as low as practical by promoting heat transfer away from the system by conduction, convection, and radiation. Forced airflow or cooling with water is often applied in critical situations.
- Provide a smooth surface finish on the discs and drums.

- Provide lubricants such as oil or graphite at the friction interface.
- Exclude abrasive contaminants from the friction interface.
- Minimize slipping between the clutch or brake elements by promoting lockup of the engaging elements.

22-12 CALIPER DISC BRAKES

The disc brake pads are brought into contact with the rotating disc by fluid pressure acting on a piston in the caliper. The pads are either round or in a short crescent shape to cover more of the disc surface [see Figures 22-2(b) and 22-7]. However, one advantage of the disc brake is that the disc is exposed to the atmosphere, promoting the dissipation of heat. Because the disc rotates with the machine to be controlled, heat dissipation is further enhanced. The cooling effect improves the fade resistance of this type of brake relative to the shoe-type brake.

Designs for the friction torque and for the wear rating are similar to those explained for plate-type brakes.

22-13 CONE CLUTCH OR BRAKE

The angle of inclination of the conical surface of the cone clutch or brake is typically 12°. A lower angle could be used with care, but there is a tendency for the friction surfaces to engage suddenly with a jerk. As the angle increases, the amount of axial force required to produce a given friction torque increases. Thus, 12° is a reasonable compromise.

Referring to Figure 22-16, we see that as an axial force F_a is applied by a spring, manually or by fluid pressure, a normal force N is created between the mating friction surfaces, all around the periphery of the cone. The desired friction force F_f is produced in the tangential direction, where $F_f = f N$. It is assumed that the friction force acts at the mean radius of the cone so that the friction torque is

$$T_f = F_f R_m = f N R_m \quad (22-8)$$

In addition to the tangentially directed friction force, a friction force develops along the surface of the cone and

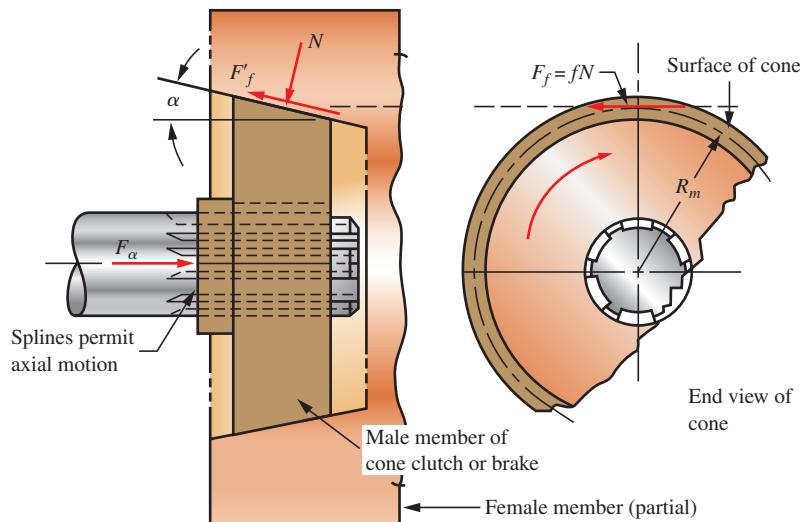


FIGURE 22-16 Cone clutch or brake

opposes the tendency for the member having the internal cone surface to move axially away from the external cone. We will call this force F'_f and compute it also from

$$F'_f = fN$$

For the equilibrium condition of the external cone, the sum of the horizontal forces must be zero. Then

$$F_a = N \sin \alpha + F'_f \cos \alpha = N \sin \alpha + fN \cos \alpha$$

$$F_a = N(\sin \alpha + f \cos \alpha)$$

or

$$N = \frac{F_a}{\sin \alpha + f \cos \alpha} \quad (22-12)$$

Substituting this into Equation (22-8) gives

◇ **Frictional Torque on a Cone Clutch or Brake**

$$T_f = \frac{fR_m F_a}{\sin \alpha + f \cos \alpha} \quad (22-13)$$

**Example Problem
22-7**

Compute the axial force required for a cone brake if it is to exert a braking torque of 50 lb·ft. The mean radius of the cone is 5.0 in. Use $f = 0.25$. Try cone angles of 10° , 12° , and 15° .

Solution We can solve Equation (22-13) for the axial force F_a :

$$F_a = \frac{T_f(\sin \alpha + f \cos \alpha)}{fR_m} = \frac{(50 \text{ lb}\cdot\text{ft})(\sin \alpha + 0.25 \cos \alpha)}{(0.25)(5.0/12) \text{ ft}}$$

$$F_a = 480(\sin \alpha + 0.25 \cos \alpha) \text{ lb}$$

Then the values of F_a as a function of the cone angle are as follows:

$$\text{For } \alpha = 10^\circ, F_a = 202 \text{ lb}$$

$$\text{For } \alpha = 12^\circ, F_a = 217 \text{ lb}$$

$$\text{For } \alpha = 15^\circ, F_a = 240 \text{ lb}$$

22-14 DRUM BRAKES

Short Shoe Drum Brakes

Figure 22-17 shows a sketch of a drum brake in which the actuating force W acts on the lever that pivots on pin A . This creates a normal force between the shoe and the

rotating drum. The resulting friction force is assumed to act tangential to the drum if the shoe is short. The friction force times the radius of the drum is the friction torque that slows the drum.

The objectives of the analysis are to determine the relationship between the applied load and the friction

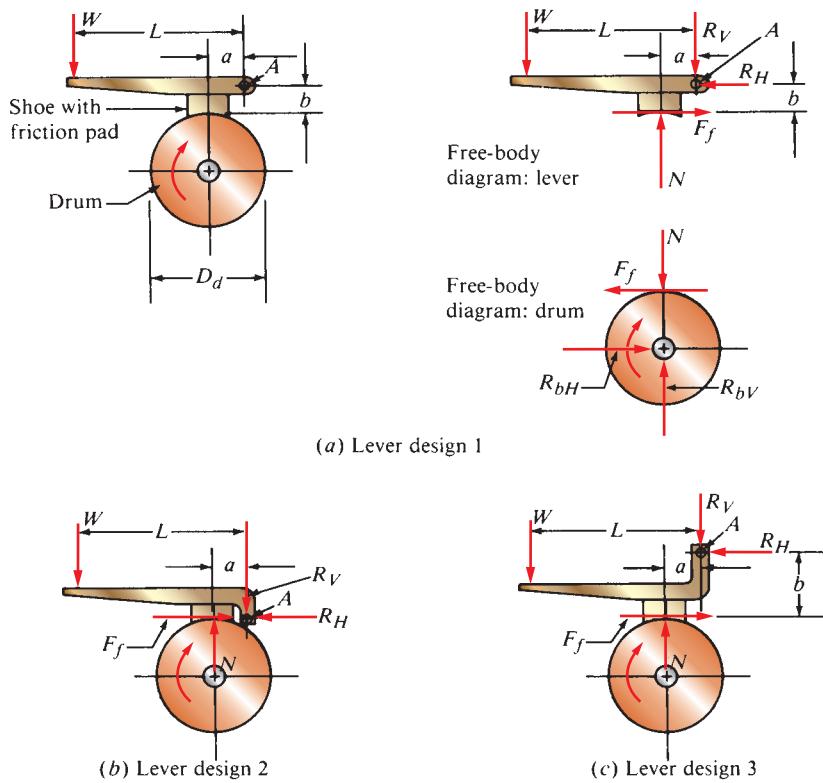


FIGURE 22-17 Short shoe drum brake

force and to be able to evaluate the effect of design decisions such as the size of the drum, the lever dimensions, and the placement of the pivot A . The free-body diagrams in Figure 22-17(a) support this analysis. For the lever, we can sum moments about the pivot A :

$$\Sigma M_A = 0 = WL - Na + F_f b \quad (22-14)$$

But note that $F_f = fN$ or $N = F_f/f$; where f = coefficient of friction. Then

$$0 = WL - F_f a/f + F_f b = WL - F_f(a/f - b)$$

Solving for W gives

$$W = \frac{F_f(a/f - b)}{L} \quad (22-15)$$

Solving for F_f gives

Friction Force on Drum Brake

$$F_f = \frac{WL}{(a/f - b)} \quad (22-16)$$

We can use these equations for the friction torque by noting

Friction Torque

$$T_f = F_f D_d / 2 \quad (22-17)$$

where D_d = diameter of the drum

Note the alternate positions of the pivot in Parts (b) and (c) of Figure 22-17. In (b), the dimension $b = 0$.


Example Problem 22-8 Compute the actuation force required for the short shoe drum brake of Figure 22-17(a) to produce a friction torque of 50 lb·ft. Use a drum diameter of 10.0 in, $a = 3.0$ in, and $L = 15.0$ in. Consider values of f of 0.25, 0.50, and 0.75, and different points of location of pivot A such that b ranges from 0 to 6.0 in.

Solution The required friction force can be found from Equation (22-17):

$$F_f = 2 T_f / D_d = (2)(50 \text{ lb}\cdot\text{ft}) / (10/12 \text{ ft}) = 120 \text{ lb}$$

In Equation (22-15), we can substitute for a , L , and F_f :

$$W = \frac{F_f(a/f - b)}{L} = \frac{120 \text{ lb}[(3.0 \text{ in})/f - b]}{15.0 \text{ in}} = 8(3/f - b) \text{ lb}$$

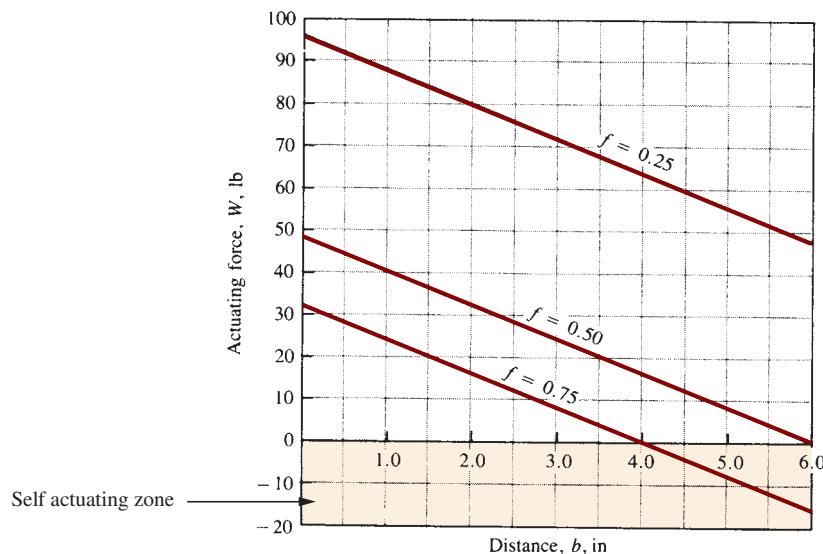FIGURE 22-18 Results: actuating load force versus distance b

We can substitute the varying values of f and b into this last equation to compute the data for the curves of Figure 22–18, showing the actuating force versus the distance b for different values of f . Note that for some combinations, the value of W is *negative*. This means that the brake is *self-actuating* and that an upward force on the lever would be required to release the brake.

Long Shoe Drum Brakes

The assumption used for short shoe brakes, that the resultant friction force acted at the middle of the shoe, cannot be used in the case of shoes covering more than about 45° of the drum. In such cases, the pressure between the friction lining and the drum is very nonuniform, as is the moment of the friction force and of the normal force with respect to the pivot of the shoe.

The following equations govern the performance of a long shoe brake, using the terminology from Figure 22–19. (See Reference 4.)

1. Friction torque on drum:

$$T_f = r^2 f w p_{\max} (\cos \theta_1 - \cos \theta_2) \quad (22-18)$$

2. Actuation force:

$$W = (M_N + M_f)/L \quad (22-19)$$

where M_N = moment of normal force with respect to the hinge pin

$$M_N = 0.25 p_{\max} w r C [2(\theta_2 - \theta_1) - \sin 2\theta_2 + \sin 2\theta_1] \quad (22-20)$$

M_f = moment of friction force with respect to the hinge pin

$$M_f = f p_{\max} w r [\cos \theta_1 - \cos \theta_2] + 0.25 C (\cos 2\theta_2 - \cos 2\theta_1) \quad (22-21)$$

The sign of M_f is negative (−) if the drum surface is moving away from the pivot and positive (+) if it is moving toward the pivot.

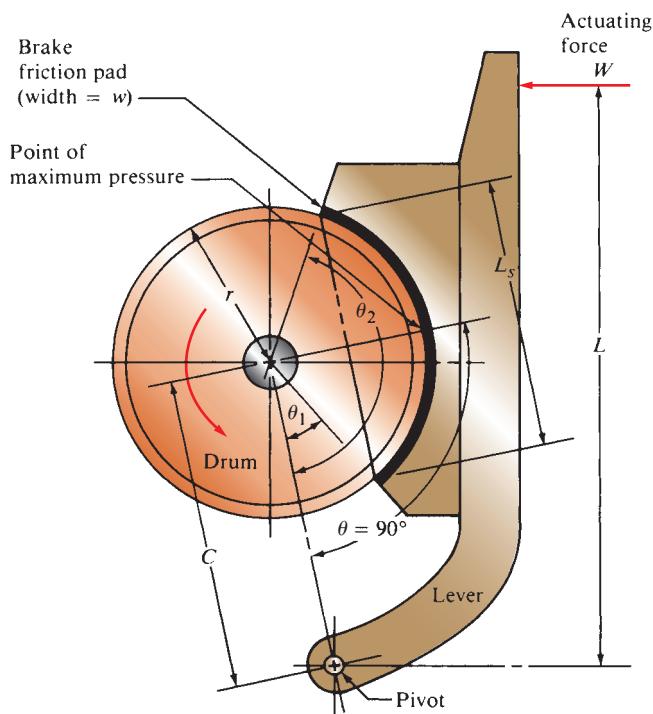


FIGURE 22-19 Terminology for long shoe drum brake

3. Friction power:

$$P_f = T_f n / 63,000 \text{ hp} \quad (22-22)$$

where n = rotational speed in rpm

4. Brake shoe area (Note: Projected area is used):

$$A = L_s w = 2wr \sin[(\theta_2 - \theta_1)/2] \quad (22-23)$$

5. Wear rating:

$$WR = P_f / A \quad (22-24)$$

The use of these relationships in the design and analysis of a long shoe brake is shown in Example Problem 22-9.

**Example Problem
22-9**

Design a long shoe drum brake to produce a friction torque of 750 lb·in to stop a drum from 120 rpm.

Solution

Step 1. Select a brake friction material, and specify the desired maximum pressure and the design value for the coefficient of friction. Table 22-2 lists some general properties for friction materials. Actual test values or specific manufacturer's data should be used where possible. The design value for p_{max} should be far less than the permissible pressure listed in Table 22-2 in order to improve wear life.

For this problem, let's choose a woven fabric material and design for approximately 75 psi maximum pressure. Note, as shown in Figure 22-19, that the maximum pressure occurs at the section 90° from the pivot. If the shoe does not extend at least 90°, the equations used here are not valid. (See Reference 4.) Also, let's use $f = 0.25$ for the design.

Step 2. Propose trial values for the geometry of the brake drum and the brake pad. Several design decisions must be made here. The general arrangement shown in Figure 22-19 can be used as a guide. But your specific application and creativity may lead you to modify the arrangement.

Trial values are $r = 4.0$ in; $C = 8.0$ in; $L = 15$ in; $\theta_1 = 30^\circ$; and $\theta_2 = 150^\circ$.

Step 3. Solve for the required width of the shoe from Equation (22-18):

$$w = \frac{T_f}{r^2 f p_{max} (\cos \theta_1 - \cos \theta_2)}$$

For this problem,

$$w = \frac{750 \text{ lb} \cdot \text{in}}{(4.0 \text{ in})^2 (0.25) (75 \text{ lb/in}^2) (\cos 30^\circ - \cos 150^\circ)} = 1.443 \text{ in}$$

For convenience, let $w = 1.50$ in. Because the maximum pressure is inversely proportional to the width, the actual maximum pressure will be

$$p_{max} = 75 \text{ psi} (1.44/1.50) = 72.17 \text{ psi}$$

Step 4. Compute M_N from Equation (22-20). The value of $\theta_2 - \theta_1$ must be in radians, with π radians = 180°. Then

$$\theta_2 - \theta_1 = 120^\circ (\pi \text{ rad}/180^\circ) = 2.0944 \text{ rad}$$

The moment of the normal force on the shoe is

$$\begin{aligned} M_N &= 0.25(72.17 \text{ lb/in}^2)(1.50 \text{ in})(4.0 \text{ in})(8.0 \text{ in}) \\ &\quad [2(2.09) - \sin(300^\circ) + \sin(60^\circ)] \\ M_N &= 5128 \text{ lb} \cdot \text{in} \end{aligned}$$

Step 5. Compute the moment of the friction force on the shoe, M_f , from Equation (22-21):

$$\begin{aligned} M_f &= 0.25(72.17 \text{ lb/in}^2)(1.50 \text{ in})(4.0 \text{ in}) \\ &\quad [(4.0 \text{ in})(\cos 30^\circ - \cos 150^\circ) \\ &\quad + 0.25(8.0 \text{ in})(\cos 300^\circ - \cos 60^\circ)] \\ M_f &= 749.8 \text{ lb} \cdot \text{in} \end{aligned}$$

Step 6. Compute the required actuation force, W , from Equation (22–19):

$$W = (M_N - M_f)/L = (5128 - 749.8)/(15) = 291.8 \text{ lb}$$

Note the minus sign for M_f because the drum surface is moving away from the pivot.

Step 7. Compute the frictional power from Equation (22–22):

$$P_f = T_f n/(63\,000) = (749.8)(120)/(63\,000) = 1.428 \text{ hp}$$

Step 8. Compute the projected area of the brake shoe from Equation (22–23).

$$A = L_s w = 2wr \sin[(\theta_2 - \theta_1)/2]$$

$$A = 2(1.50 \text{ in})(4.0 \text{ in}) \sin(120^\circ/2) = 10.392 \text{ in}^2$$

Step 9. Compute the wear ratio, WR :

$$WR = P_f/A = 1.428 \text{ hp}/10.392 \text{ in}^2 = 0.137 \text{ hp/in}^2$$

Step 10. Evaluate the suitability of the results. In this problem, we would need more information about the application to evaluate the results. However, the wear rating seems reasonable for average service (see Section 22–11), and the geometry seems acceptable.

22-15 BAND BRAKES

Figure 22–20 shows the typical configuration of a *band brake*. The flexible band, usually made of steel, is faced with a friction material that can conform to the curvature of the drum. The application of a force to the lever puts tension in the band and forces the friction material against the drum. The normal force, thus created, causes the friction force tangential to the drum surface to be created, retarding the drum.

The tension in the band decreases from the value P_1 at the pivot side of the band to P_2 at the lever side. The net torque on the drum is then

$$T_f = (P_1 - P_2)r \quad (22-25)$$

where r = radius of the drum

The relationship between P_1 and P_2 can be shown (see Reference 4) to be the logarithmic function

$$P_2 = P_1/e^{\theta} \quad (22-26)$$

where θ = total angle of coverage of the band in radians

The point of maximum pressure on the friction material occurs at the end nearest the highest tension, P_1 , where

$$P_1 = p_{\max}rw \quad (22-27)$$

and w is the width of the band.

For the two types of band brakes shown in Figure 22–20, the free-body diagrams of the levers can be used to show

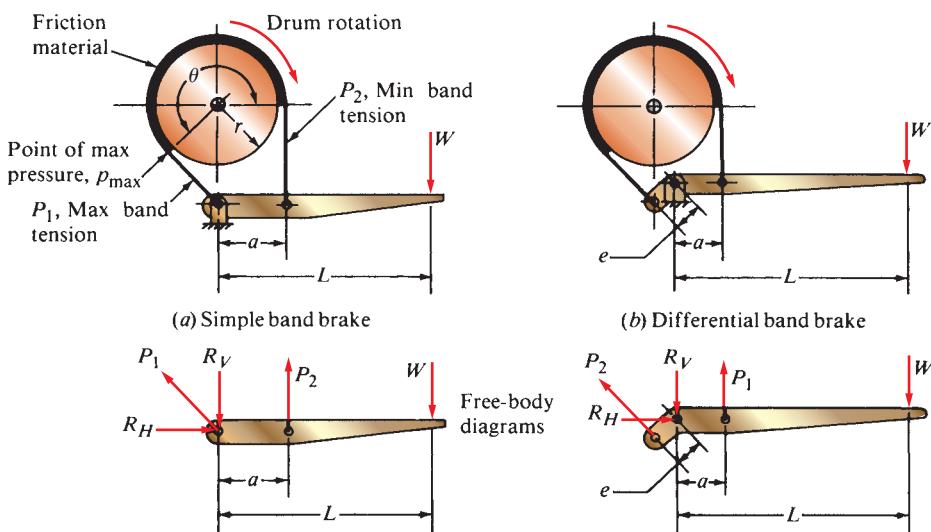


FIGURE 22-20 Band brake design

the following relationships for the actuating force, W , as a function of the tensions in the band. For the simple band brake of Figure 22–20(a),

$$W = P_2 a / L \quad (22-28)$$

The style shown in Figure 22–20(b) is called a *differential band brake*, where the actuation force is

$$W = (P_2 a - P_1 e) / L \quad (22-29)$$

The design procedure is presented in Example Problem 22–10.

Example Problem 22–10

Design a band brake to exert a braking torque of at least 720 lb · in while slowing the drum from 120 rpm.

Solution

Step 1. Select a material and specify a design value for the maximum pressure. A woven friction material is desirable to facilitate the conformance to the cylindrical drum shape. Let's use $p_{\max} = 25$ psi and a design value of $f = 0.25$. See Section 22–10.

Step 2. Specify a trial geometry: r , θ , w . For this problem, let's try $r = 6.0$ in, $\theta = 225^\circ$, and $w = 2.0$ in. Note that $225^\circ = 3.93$ rad.

Step 3. Compute the maximum band tension, P_1 , from Equation (22–27):

$$P_1 = p_{\max}rw = (25 \text{ lb/in}^2)(6.0 \text{ in})(2.0 \text{ in}) = 300 \text{ lb}$$

Step 4. Compute tension P_2 from Equation (22–26):

$$P_2 = \frac{P_1}{e^{\theta}} = \frac{300 \text{ lb}}{e^{(0.25)(3.93)}} = 112.3 \text{ lb}$$

Step 5. Compute the friction torque, T_f .

$$T_f = (P_1 - P_2)r = (300 - 112.3)(6.0) = 1126 \text{ lb · in}$$

Note: Repeat Steps 2–5 until you achieve a satisfactory geometry and friction torque. Let's try a smaller design, say, $r = 5.0$ in:

$$P_1 = (25)(5.0)(2.0) = 250 \text{ lb}$$

$$P_2 = \frac{250 \text{ lb}}{e^{(0.25)(3.93)}} = 93.59 \text{ lb}$$

$$T_f = (250 - 93.59)(5.0) = 782.0 \text{ lb · in} \quad (\text{okay})$$

Step 6. Specify the geometry of the lever, and compute the required actuation force. Let's use $a = 5.0$ in and $L = 15.0$ in. Then

$$W = P_2(a/L) = 93.59 \text{ lb}(5.0/15.0) = 31.20 \text{ lb}$$

Step 7. Compute the average wear rating from $WR = P_f/A$:

$$A = 2\pi rw(\theta/360) = 2(\pi)(5.0 \text{ in})(2.0 \text{ in})(225/360) = 39.27 \text{ in}^2$$

$$P_f = T_f n / (63,000) = (782.0)(120)/(63,000) = 1.490 \text{ hp}$$

$$WR = P_f/A = (1.490 \text{ hp})/(39.27 \text{ in}^2) = 0.0379 \text{ hp/in}^2$$

This should be conservative for average service.

22–16 OTHER TYPES OF CLUTCHES AND BRAKES

The chapter thus far has concentrated on clutches and brakes using friction materials to transmit the torque between rotating members, but many other types are available. Brief descriptions are given below, but specific design information is not given. Most are unique to the manufacturer, and the application data are available through catalogs.

Jaw Clutch

The teeth of the mating sets of jaws are brought into engagement by sliding one or both members axially. The teeth may be straight-sided or triangular, or they may incorporate some smooth curve to facilitate engagement. Once the teeth are engaged, there is a positive transmission of torque. The jaw clutch is normally engaged while the system is stopped or is running very slowly.

Ratchet

Although not strictly a clutch, the familiar ratchet and pawl permits alternate engagement and disengagement of moving members, and thus it can be used in similar applications. Typically, the ratchet moves only a small fraction of a revolution per cycle.

Sprag, Roller, and Cam Clutches

There are differences in the specific geometry of sprag, roller, and cam clutches, but they all perform similar functions. When the input shaft is rotating in the driving direction, the internal elements (sprags, rollers, or cams) are wedged between the driving and driven members and thus transmit torque. But when the input member rotates in the opposite direction, the internal elements move out of engagement, and no torque is transmitted. Thus, they can be used for applications similar to ratchets, but with much smoother operation and with a virtually infinite amount of incremental motion. Another application is *backstopping*, in which the clutch runs free when the machine is being driven in the intended direction. But if the drive is disengaged and the load starts to reverse direction, the clutch locks up and prevents motion. This type of clutch is also used for *overrunning*: a positive drive as long as the load rotates no faster than the driver. If the load tends to run faster (overrun) than the driver, the clutch elements disengage. This protects the equipment that might be damaged due to overspeeding. (See Internet site 6.)

Fiber Clutch

A fiber clutch operates in a manner similar to the overrunning clutches described previously. But instead of driving through solid elements, the torque is transmitted through stiff fibers that have a preferred orientation. When rotated in a direction opposite the preferred direction, the fibers “lie down,” and no torque is transmitted.

Wrap-Spring Clutch

Again used in cases similar to the overrunning clutches, the *wrap-spring clutch* is made from a rectangular wire and normally has an inside diameter slightly larger than that of the shaft on which it is installed. Thus, no torque is transmitted. But when one end of the spring is restrained, the spring “wraps down” tightly on the surface of the shaft, and torque is transmitted positively through the spring. (See Internet site 4.)

Single-Revolution Clutches

It is frequently desired to have a machine cycle one complete revolution and then come to a stop. The *single-revolution clutch* provides this feature. After it is tripped,

it drives the output shaft until reaching a positive stop at the end of one revolution. Some types can be engaged for more than one revolution, but they will return to a fixed position, for example, at the top of the stroke of a press. (See Internet site 6.)

Fluid Clutches

The *fluid clutch* is made up of two separate parts with no mechanical connection between them. A fluid fills a cavity between the parts, and as one member rotates, it tends to shear the fluid, causing torque to be transmitted to the mating element. The resulting drive is smooth and soft because load peaks will simply cause one member to move relative to the other. In this situation, it is similar to the slip clutch described earlier.

Eddy Current Drive

When a conducting disc moves through a magnetic field, *eddy currents* are induced in the disc, causing a force to be exerted on the disc in a direction opposite to the direction of rotation. The force can be used to brake the disc or to transmit torque to a mating part, such as a clutch. An advantage of this type of unit is that there is no mechanical connection between the elements. The torque can be controlled by varying the current to the electromagnets.

Overload Clutches

The drive is positive, provided that the torque is below some set value. At higher torques, some element is disengaged automatically. One type uses a series of spherical balls positioned in detents and held under a spring force. When the tripping torque level is reached, the balls are forced out of the detents and disengage the drive. (See Internet site 6.)

Tensioners

The production of continuous products such as wire, webs of paper, or plastic film require that the drive system be carefully controlled to maintain a light tension without breaking the product. Similar control must be exerted when winding coils of paper, foil, or sheet metal as they are produced, or when unwinding them to feed a process such as printing or press forming. Drives for cranes and hoists must provide controlled braking while loads are lowered. In such cases, brakes are required to exert some braking action while allowing smooth motion. Many of the brake designs reviewed in this chapter can accomplish this function by moderating the force applied between the friction elements. An example is the air-actuated brake shown in Figure 22–6. The braking torque depends on the air pressure applied that can be controlled by an operator or automatically. (See also Internet site 5.)

REFERENCES

1. Avallone, Eugene A., and Ali Sadegh, Theodore Baumeister III, editors. *Marks' Standard Handbook for Mechanical Engineers*. 11th ed. New York: McGraw-Hill, 2007.
2. Juvinall, Robert C., and Kurt M. Marshek. *Fundamentals of Machine Component Design*. 5th ed. New York: John Wiley & Sons, 2012.
3. Orthwein, William C. *Clutches and Brakes: Design and Selection*. 2nd ed. Boca Raton, FL: CRC Press, 2004.
4. Budynas, R. G., and K. J. Nisbett. *Shigley's Mechanical Engineering Design*. 10th ed. New York: McGraw-Hill, 2015.
5. SAE International. *Standard J286 Clutch Friction Test Machine Guidelines*. Warrendale, PA: Society of Automotive Engineers, 2012.
6. SAE International. *Standard J661 Brake Lining Quality Control Test Procedure*. Warrendale, PA: Society of Automotive Engineers, 2012.
7. SAE International. *Standard J866 Friction Coefficient Identification System for Brake Linings*. Warrendale, PA: Society of Automotive Engineers, 2012.
6. Hilliard Corporation. Manufacturer of a wide variety of clutches and brakes for industry and commercial equipment applications. Included are centrifugal clutches, single-revolution clutches, overrunning clutches, ball detent overload release clutches, slip clutch torque limiters, intermittent drives, and caliper disc brakes. From the home page, select *Motion Control*.
7. Tol-O-Matic, Inc. Manufacturer of pneumatically and hydraulically operated caliper disc brakes, disc cone clutches, and other automation and motion control products. From the home page select *Products*, then *Power Transmission*.
8. Electroid Company. Manufacturer of a wide variety of clutches, brakes, and tensioners for industrial, commercial, and aerospace applications. From the home page select *Brakes & Clutches*.
9. Regal Beloit Americas, Inc. Manufacturer of various styles of clutches and torque overload devices under the Morse and Browning brands. Select *Products*, then *Drive Components*, then *Mechanical CAM Clutches* or *Torque Overload Devices*. Site also includes a variety of technical literature under the *Resources* tab.

INTERNET SITES FOR CLUTCHES AND BRAKES

1. **GKN Land Systems**. Manufacturer of clutches, disc brakes, driveshafts, and other powertrain components for the automotive, truck, and off-road equipment markets. Brand names include GKN, Rockford® Clutch, Mechanics® Driveshafts, Stromag, Walterscheid clutches, Rotowell brakes, and others.
2. **Baldor/Dodge**. Manufacturer of Dodge brakes and clutches for industrial machinery, conveying equipment, and textile industry. Select *Products*, then *Couplings, Clutches, & Brakes*. Also offers a wide array of gear drives, belt drives, bearings, and numerous other power transmission products.
3. **BorgWarner, Inc.** Manufacturer of automotive transmission clutch sets and other components. Select *Products*, then *Transmission Systems*.
4. **Warner Electric, Inc.** Manufacturer of clutch and brake systems for industrial, turf and garden, wind turbine, and vehicular applications. Includes a wide variety of disk type, wrap spring, and magnetic particle clutches and brakes for start, stop, hold, and tension control. Catalog information can be downloaded from the Literature section. A member of Altra Industrial Motion Group.
5. **Eaton/Airflex**. Manufacturer of industrial clutches and brakes using the expanding tube principle actuated by pneumatic or hydraulic pressure. Applications include engines, paper making machinery, power presses, brakes, shears, marine drives, well drilling, and tensioning, winding, and unwinding equipment. Online product data and descriptions, product application information, and technical information. From the home page, select *Products & Solutions*, then *Industrial Clutches and Brakes*.

PROBLEMS

1. Specify the required torque rating for a clutch to be attached to a motor shaft running at 1750 rpm. The motor is rated at 5.0 hp and is of the design B type.
2. Specify the required torque rating for a clutch to be attached to a diesel engine shaft running at 2500 rpm. The engine is rated at 75.0 hp.
3. Specify the required torque rating for a clutch to be attached to an electric motor shaft running at 1150 rpm. The motor is rated at 0.50 hp and drives a light fan.
4. An alternative design for the system described in Problem 1 is being considered. Instead of putting the clutch on the motor shaft, it is desired to place it on the output shaft of a speed reducer that rotates at 180 rpm. The power transmission is still approximately 5.0 hp. Specify the required torque rating for the clutch.
5. Specify the required brake torque rating for each of the conditions in Problems 1–4 for average industrial conditions.
6. Specify the required torque rating for a clutch in N·m if it is attached to a design B electric motor shaft rated at 20.0 kW and rotating at 3450 rpm.
7. A clutch-brake module is to be connected between a design C electric motor and a speed reducer. The motor is rated at 50.0 kW at 900 rpm. Specify the required torque ratings for the clutch and the brake portions of the module for average industrial service. The drive is to a large conveyor.
8. Compute the torque required to accelerate a solid steel disc from rest to 550 rpm in 2.0 s. The disc has a diameter of 24.0 in and is 2.5 in thick.
9. The assembly shown in Figure P22–9 is to be stopped by a brake from 775 rpm to zero in 0.50 s or less. Compute the required brake torque.
10. Compute the required clutch torque to accelerate the system shown in Figure P22–10 from rest to a motor speed of 1750 rpm in 1.50 s. Neglect the inertia of the clutch.

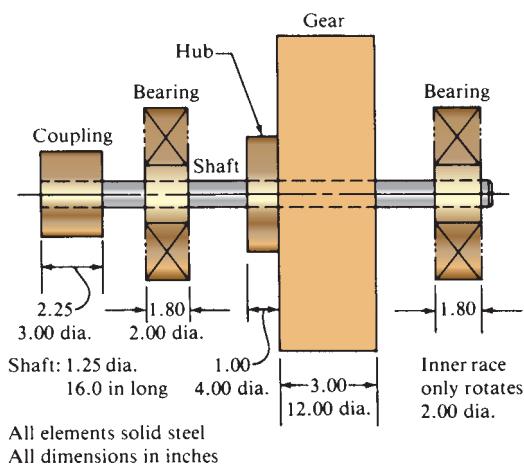


FIGURE P22-9 (Problems 9, 14, and 16)

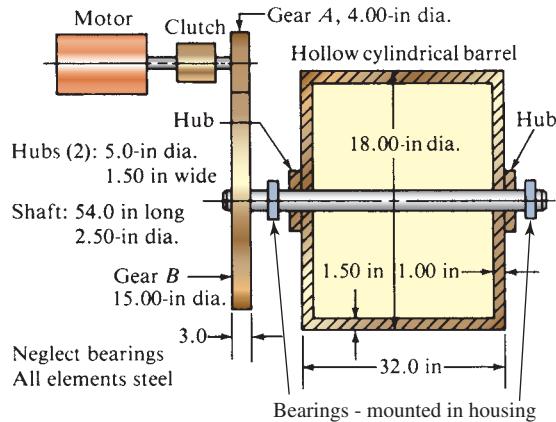


FIGURE P22-10

11. A winch, sketched in Figure P22-11, is lowering a load at the speed of 50 ft/min. Compute the required torque rating for the brake on the winch shaft to stop the system in 0.25 s.

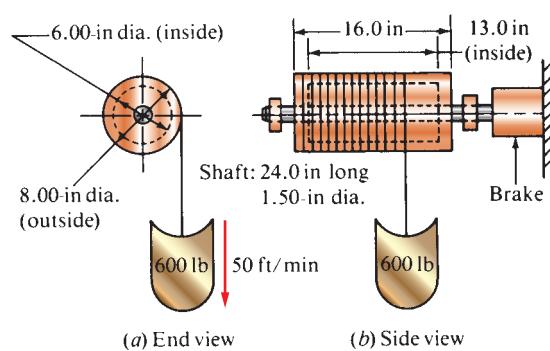


FIGURE P22-11

12. Figure P22-12 shows a tumbling barrel being driven through a wormgear reduction unit. Evaluate the torque rating required for a clutch to accelerate the barrel to 38.0 rpm from rest in 2.0 s (a) if the clutch is placed on the motor shaft and (b) if it is placed at the output of the reducer. Neglect the inertia of the gear shafts, the bearing races, and the clutch. Consider the worm and wormgear to be solid cylinders.
13. Compute the dimensions of an annular plate-type brake to produce a braking torque of 75 lb · in. Air pressure will develop a normal force of 150 lb between the friction surfaces. Use a coefficient of friction of 0.25. The brake will be used in average industrial service, stopping a load from 1150 rpm.
14. Design a plate-type brake for the application described in Problem 9. Specify the design coefficient of friction, the dimensions of the plate, and the axial force required.
15. Compute the axial force required for a cone clutch if it is to exert a driving torque of 15 lb · ft. The cone surface has a mean diameter of 6.0 in and an angle of 12°. Use $f = 0.25$.
16. Design a cone brake for the application described in Problem 9. Specify the design coefficient of friction, the mean diameter of the cone surface, and the axial force required.

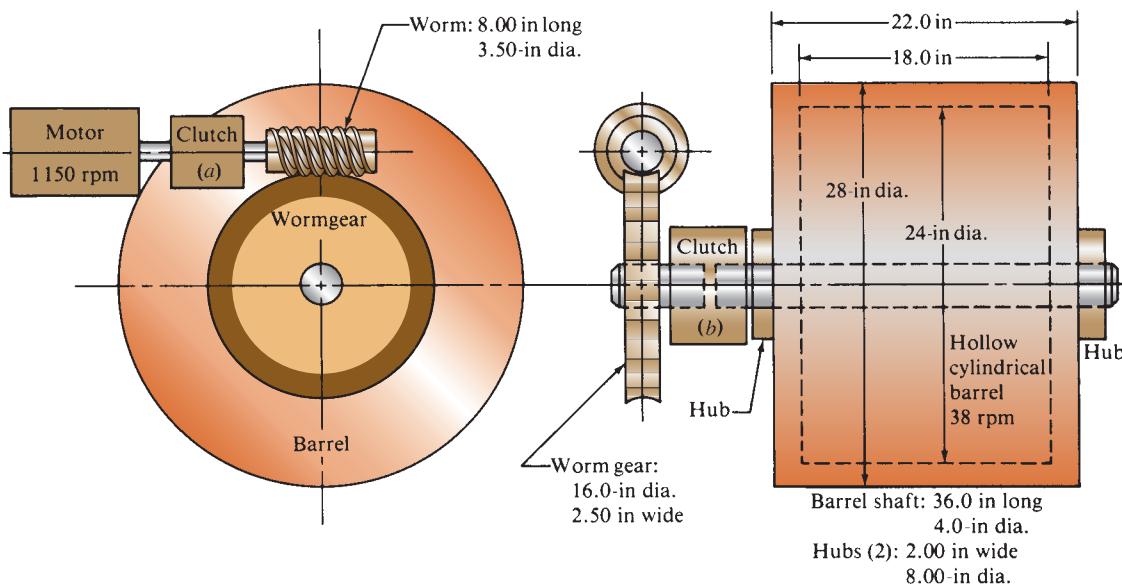


FIGURE P22-12

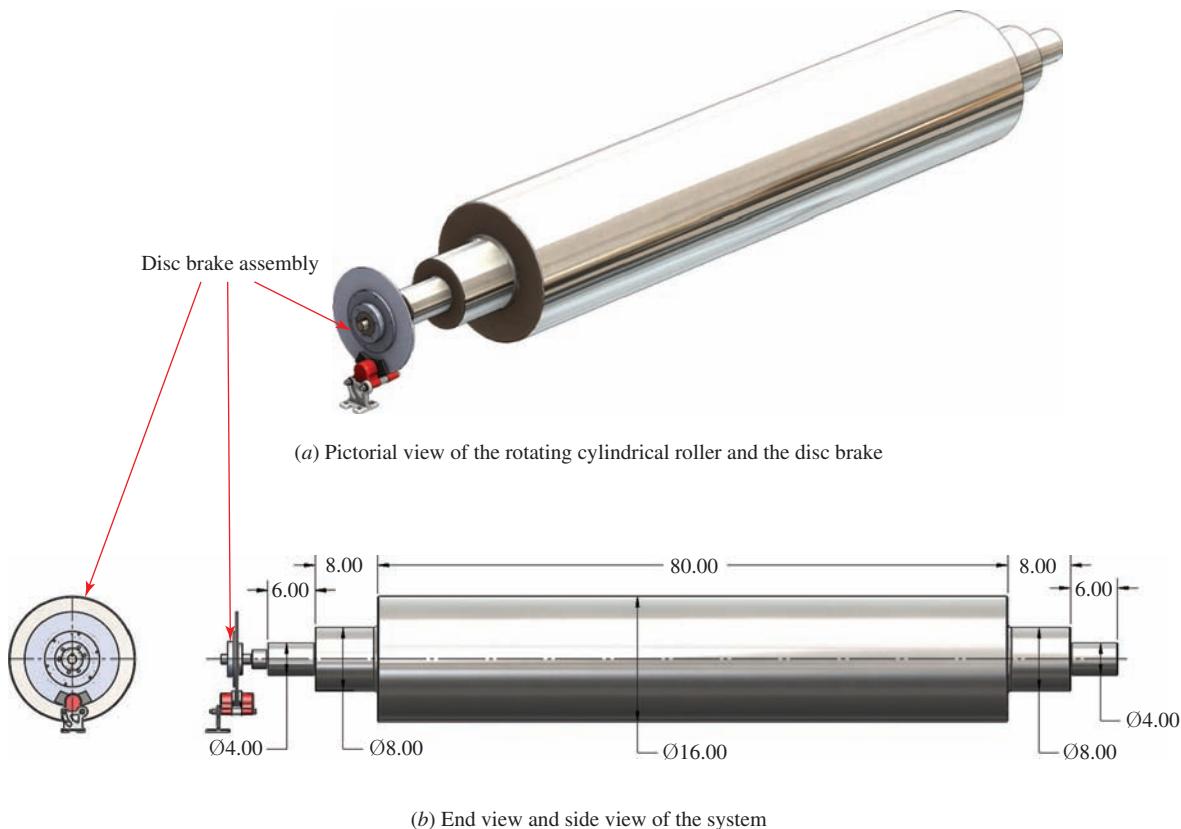


FIGURE P22-22

17. Compute the actuation force required for the short shoe drum brake of Figure 22-17(a) to produce a friction torque of 150 lb·ft. Use a drum diameter of 12.0 in, $a = 4.0$ in, and $L = 24.0$ in. Use $f = 0.25$ and $b = 5.0$ in.
18. For all other data from Problem 17 being the same, determine the required dimension b for the brake to be self-actuating.
19. Design a short shoe drum brake to produce a torque of 100 lb·ft. Specify the drum diameter, the configuration of the actuation lever, and the actuation force.
20. Design a long shoe drum brake to produce a friction torque of 100 lb·ft to stop a load from 480 rpm. Specify the friction material, the drum size, the shoe configuration, pivot locations, and actuation force.
21. Design a band brake to exert a braking torque of 75 lb·ft while slowing a drum from 350 rpm to rest. Specify a

material, the drum diameter, the band width, the angle of coverage of the friction material, the actuation lever configuration, and the actuation force.

22. The solid steel cylinder shown in Figure P22-22 is used as a guide roller for a paper processing system. In normal operation, it rotates at an angular velocity of 800 rpm. A disc caliper brake is mounted on the left end of the roller to stop it when the system is shut down. When the brake is applied, the roller must stop in a time of 5.0 seconds or less. The magnitude of the torque applied to the roller is required to select the proper size for the disc caliper brake. Solve for the following:
 - (a) Mass moment of inertia, I , of the cylinder
 - (b) The required deceleration rate for the cylinder
 - (c) The braking torque required to stop the cylinder in 5.0 seconds or less.

DESIGN PROJECTS

23–1 Objectives of This Chapter

23–2 Design Projects

23–1 OBJECTIVES OF THIS CHAPTER

One of the primary focuses of this book has been to emphasize the integration of machine elements into complete mechanical designs. The interfaces between machine elements have been discussed for many examples. The forces exerted on one element by another have been computed. Commercially available components and complete devices have been shown in figures throughout the book.

Although these discussions and examples are helpful, one of the better ways to learn mechanical design is to *do* mechanical design. You should complete these steps:

- Define the detailed functions and design requirements for the design.
- Conceptualize several approaches to a design.
- Decide which approach to complete.
- Complete the design of each element in detail.
- Make assembly and detail drawings to communicate your design to others who may use it or be responsible for its fabrication.
- Specify completely the purchased components that are part of the design.

Following are several projects that call for you to do these operations. You or your instructor may modify or amplify the projects to suit individual needs or the available time or information. As in most design projects, many solutions are possible. Different solutions from several members of a class could be compared and critiqued to enhance learning. It may be helpful at this time to review Sections 1–4 and 1–5 about the functions and design requirements for design and a philosophy of design. Also, the problems at the end of Chapter 1 asked that you write a set of functions and design requirements for several of the same devices. If you have already done so, they can be used as a part of these exercises.

23–2 DESIGN PROJECTS

Automobile Hood Latch

Design a hood latch for an automobile. The latch must be able to hold the hood securely closed during operation of the vehicle. But it should be easy to open for servicing the contents of the engine compartment. Theft-proofing is an important design goal. Attachment of the latch to the frame of the car and to the hood should be defined. Mass production should be a requirement.

Hydraulic Lift

Design a hydraulic lift to be used for car repair. Obtain pertinent dimensions from representative cars for initial height, extended height, design of the pads that contact the car, and so on. The lift will raise the entire car.

Car Jack

Design a floor jack for a car to lift either the entire front end or the entire rear end. The jack may be powered by hand, using mechanical or hydraulic actuation. Or it may be powered by pneumatic pressure or electrical power.

Portable Crane

Design a portable crane to be used in homes, small industries, warehouses, and garages. It should have a capacity of at least 1000 lb (4.45 kN). Typical uses would be to remove an engine from a car, lift machine components, or load trucks.

Can Crusher

Design a machine to crush soft-drink or beer cans. The crusher would be used in homes or restaurants as an aid to recycling efforts. It could be operated either by hand or electrically. It should crush the cans to approximately 20% of their original volume.

Transfer Device

Design an automatic transfer device for a production line. The parts to be handled are steel castings with the following characteristics:

Weight: 42.0 lb (187 N)

Size: Cylindrical; 6.75-in diameter and 10.0 in high. Exterior surface is free of projections or holes and has a reasonably smooth, as-cast finish.

Transfer rate: Continuous flow, 2.00 s between parts.

Parts enter at a 24.0-in elevation on a roller conveyor. They must be elevated to 48.0 inches in a space of 60.0 in horizontally. They leave on a separate conveyor.

Drum Dumper

Design a drum dumper. The machine is to raise a 55-gal drum of bulk material from floor level to a height of 60.0 in and dump the contents of the drum into a hopper.

Paper Feeder

Design a paper feed device for a copier. The paper must be fed at a rate of 120 sheets per min.

Gravel Conveyor

Design a conveyor to elevate gravel into a truck. The top edge of the truck bed is 8.0 ft (2.44 m) off the ground. The bed is 6.5 ft wide, 12.0 ft long, and 4.0 ft deep (1.98 m × 3.66 m × 1.22 m). It is desired to fill the truck in 5.0 min or less.

Construction Lift

Design a construction lift. The lift will raise building materials from ground level to any height up to 40.0 ft (12.2 m). The lift will be at the top of a rigid scaffold that is not a part of the design project. It will raise a load of up to 500 lb (2.22 kN) at the rate of 1.0 ft/s (0.30 m/s). The load will be on a pallet, 3.0 ft by 4.0 ft (0.91 m × 1.22 m). At the top of the lift, means must be provided to bring the load onto a platform that supports the lift.

Packaging Machine

Design a packaging machine. Toothpaste tubes are to be taken from a continuous belt and inserted into cartons. Any standard tube size may be chosen. The device may include the means to close the cartons after the tube is in place.

Carton Packer

Design a machine to insert 24 cartons of toothpaste into a shipping case.

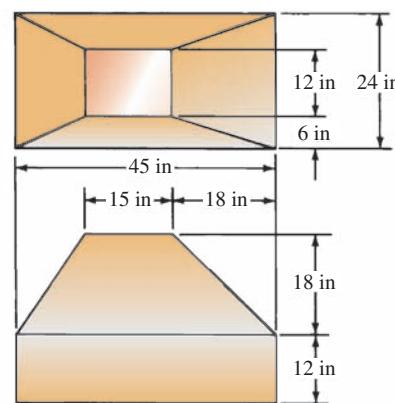


FIGURE 23–1 Frame to be handled by a weld positioner

Robot Gripper

Design a gripper for a robot to grasp a spare-tire assembly from a rack and insert it into the trunk of an automobile on an assembly line. Obtain dimensions from a particular car.

Weld Positioner

Design a weld positioner. A heavy frame is made of welded steel plate in the shape shown in Figure 23–1. The welding unit will be robot-guided, but it is essential that the weld line be horizontal as the weld proceeds. Design the device to hold the frame securely and move it to present the part to the robot. The plate has a thickness of 3/8 in (9.53 mm).

Garage Door Opener

Design a garage door opener.

Spur Gear Speed Reducer, Single-Reduction

Design a complete single-reduction, spur gear-type speed reducer. Specify the two gears, two shafts, four bearings, and a housing. Use any of the data from Chapter 9, Problems 60–70.

Spur Gear Speed Reducer, Double-Reduction

Design a complete double-reduction, spur gear-type speed reducer. Specify the four gears, three shafts, six bearings, and a housing. Use any of the data from Chapter 9, Problems 74–76.

Helical Gear Speed Reducer, Single-Reduction

Design a complete single-reduction, helical gear-type speed reducer. Use any of the data from Chapter 10, Problems 5–11.

Bevel Gear Speed Reducer, Single-Reduction

Design a complete single-reduction, bevel gear-type speed reducer. Use any of the data from Chapter 10, Problems 14–17.

Wormgear Speed Reducer, Single-Reduction

Design a complete single-reduction, wormgear-type speed reducer. Use any of the data from Chapter 10, Problems 18–24.

Lift Device Using Acme Screws

Design a device similar to that sketched in Figure 17–4. An electric motor drives the worm at a speed of 1750 rpm. The two Acme screws rotate and lift the yoke, which in turn lifts the hatch. See Example Problem 17–1 for additional details. Complete the entire unit, including the wormgear set, the chain drive, the Acme screws, the bearings, and their mountings. The hatch is 48 in wide and 155 in long and its weight is 25 000 lb. The screws should be nominally 30 in (762 mm) long. The total motion of the yoke will be 24 in, to be completed in 15.0 s or less.

Lift Device Using Ball Screws

Repeat the design of the lift device, using ball screws instead of Acme screws.

Brake for a Drive Shaft

Design a brake. A rotating load (as sketched in Figure P22–9) is to be stopped from 775 rpm in 0.50 s or less. Use any type of brake described in Chapter 22, and complete the design details, including the actuating means: springs, air pressure, manual lever, and so on. Show the brake attached to the shaft of Figure P22–9.

Brake for a Winch

Design a complete brake for the application shown in Figure P22–11 and described in Problem 11 in Chapter 22.

Indexing Drive

Design an indexing drive for an automatic assembly system. The items to be moved are mounted on a square steel fixture plate, 6.0 in (152 mm) on a side and 0.50 in (12.7 mm) thick. The total weight of each assembly is 10.0 lb (44.5 N). The center of each fixture (intersection of its diagonals) is to move 12.0 in (305 mm) with each index. The index is to be completed in 1.0 s or less, and the fixture must be held stationary at each station for a minimum of 2.0 s. Four assembly stations are required. The arrangement may be linear, rotary, or any other, provided that the fixtures move in a horizontal plane.

Child's Ferris Wheel

Design a child's Ferris wheel. It should be capable of holding one to four children weighing up to 80 lb (356 N) each. The rotational speed should be 1 rev in 6.0 s. It should be driven by an electric motor.

Merry-Go-Round

Design an amusement ride for small children, age 6 or younger, that they can sit in safely while enjoying an interesting motion pattern. At least two children at a time can ride the machine. The ride will be marketed to shopping centers and department stores to amuse customers' children.

Backyard Amusement Ride

Design a backyard amusement ride in which small coaster wagons are pulled along a circular path. The ride should be powered by an electric motor. Each wagon is 1.0 m long (39.4 in) and 0.50 m wide (19.7 in). The four wheels are 150 mm (6.0 in) in diameter. The wagon is to be attached to the drive rod at the point where the handle would normally be. The radial distance to the attachment point is to be 2.0 m (6.6 ft). The wagons are to make 1 rev in 8.0 s. Provide a means of starting and stopping the drive.

Transfer Device

Design a device to move automotive camshafts between processing stations. Each movement is to be 9.0 in (229 mm). The camshaft is to be supported on two unfinished bearing surfaces having a diameter of 3.80 in (96.5 mm) and an axial length of 0.75 in (19.0 mm). The spread between the bearing surfaces is 15.75 in (400.0 mm). Each camshaft weighs 16.3 lb (72.5 N). One motion cycle is to be completed each 2.50 s. Design the complete mechanism, including the drive from an electric motor.

Chain Conveyor

Design a powered, straight chain conveyor to move eight pallets along an assembly line. The pallets are 18 in long and 12 in wide. The maximum weight of each pallet and the product it carries is 125 lb. At the end of the conveyor, an external downward force of 500 lb is applied to the product which must be carried through the pallet to the conveyor structure. You may design the configuration of the sides and bottom of the pallet.

"You Are the Designer" Projects

At the beginning of each chapter in this book, a section called You Are the Designer appeared in which you were asked to imagine that you were the designer of some device or system. Choose any of those projects.


LIST OF APPENDICES

- APPENDIX 1** Properties of Areas
- APPENDIX 2** Preferred Basic Sizes and Screw Threads
- APPENDIX 3** Design Properties of Carbon and Alloy Steels
- APPENDIX 4** Properties of Heat-Treated Steels
- APPENDIX 5** Properties of Carburized Steels
- APPENDIX 6** Properties of Stainless Steels
- APPENDIX 7** Properties of Structural Steels
- APPENDIX 8** Design Properties of Cast Iron—U.S. Units Basis
- APPENDIX 8A** Design Properties of Cast Iron—SI Units Basis
- APPENDIX 9** Typical Properties of Aluminum
- APPENDIX 10–1** Properties of Die-Cast Zinc Alloys
- APPENDIX 10–2** Properties of Die-Cast Magnesium Alloys
- APPENDIX 11–1** Properties of Nickel-Based Alloys
- APPENDIX 11–2** Properties of Titanium Alloys
- APPENDIX 12** Properties of Bronzes, Brasses, and Other Copper Alloys
- APPENDIX 13** Typical Properties of Selected Plastics
- APPENDIX 14** Beam-Deflection Formulas
- APPENDIX 15** Commercially Available Shapes Used for Load-Carrying Members
- APPENDIX 16** Conversion Factors
- APPENDIX 17** Hardness Conversion Table
- APPENDIX 18** Stress Concentration Factors
- APPENDIX 19** Geometry Factor, I , for Pitting for Spur Gears

APPENDIX 1 Properties of Areas

 A = area r = radius of gyration = $\sqrt{I/A}$ I = moment of inertia J = polar moment of inertia S = section modulus Z_p = polar section modulus

(a) Circle

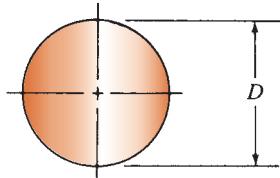

$$A = \pi D^2/4$$

$$r = D/4$$


$$I = \pi D^4/64$$

$$J = \pi D^4/32$$

$$S = \pi D^3/32$$

$$Z_p = \pi D^3/16$$

(b) Hollow circle (tube)

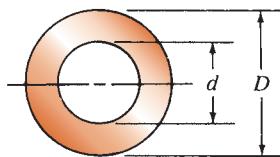


$$A = \pi(D^2 - d^2)/4 \quad r = \frac{\sqrt{(D^2 + d^2)}}{4}$$

$$I = \pi(D^4 - d^4)/64 \quad J = \pi(D^4 - d^4)/32$$

$$S = \pi(D^4 - d^4)/32D \quad Z_p = \pi(D^4 - d^4)/16D$$

(c) Square

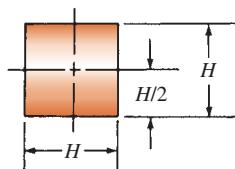


$$A = H^2$$

$$r = H/\sqrt{12}$$

$$I = H^4/12$$

$$S = H^3/6$$

(d) Rectangle

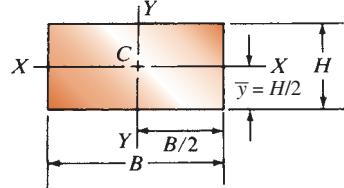

$$A = BH \quad r_x = H/\sqrt{12}$$


$$I_x = BH^3/12 \quad r_y = B/\sqrt{12}$$

$$I_y = HB^3/12$$

$$S_x = BH^2/6$$

$$S_y = HB^2/6$$

(e) Hollow rectangle

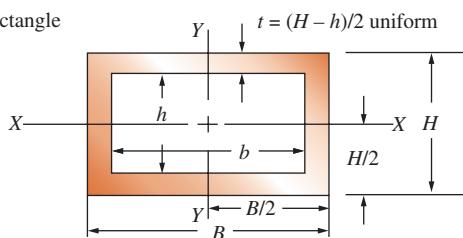


$$A = BH - bh$$

$$I_x = \frac{BH^3 - bh^3}{12} \quad S_x = \frac{BH^3 - bh^3}{6H} \quad r_x = 0.289 \sqrt{\frac{BH^3 - bh^3}{BH - bh}}$$

$$I_y = \frac{HB^3 - hb^3}{12} \quad S_y = \frac{HB^3 - hb^3}{6B} \quad r_y = 0.289 \sqrt{\frac{HB^3 - hb^3}{HB - hb}}$$

(f) Triangle

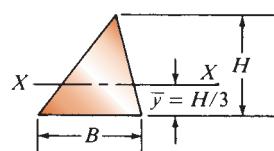


$$A = BH/2 \quad r = H/\sqrt{18}$$

$$I = BH^3/36$$

$$S = BH^2/24$$

(g) Semicircle

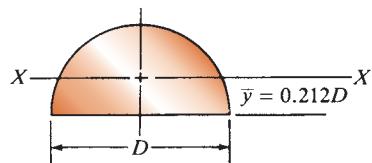


$$A = \pi D^2 / 8$$

$$I = 0.007D^4$$

$$S = 0.024D^3$$

$$r = 0.132D$$

(h) Regular hexagon

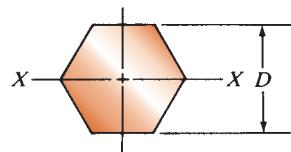


$$A = 0.866D^2$$

$$I = 0.06D^4$$

$$S = 0.12D^3$$

$$r = 0.264D$$

(i) Trapezoid

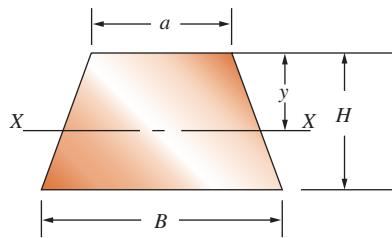

$$A = H(a + B)/2$$


$$y = \frac{H(a + 2B)}{3(a + B)}$$

$$I_x = \frac{H^3(a^2 + 4aB + B^2)}{36(a + B)}$$

$$r = \frac{H^2(a^2 + 4aB + B^2)}{18(a + B)^2}$$

y = Maximum distance from x -axis to outer surface of section

(j) Ellipse

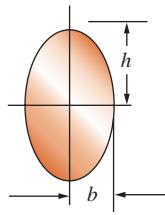

$$A = \pi b h$$

$$I = \frac{\pi h^3 b}{4}$$

$$S = \frac{\pi h^2 b}{4}$$

$$r = h/2$$

APPENDIX 2 Preferred Basic Sizes and Screw Threads

TABLE A2-1 Preferred Basic Sizes

| Fractional (in) | | | Decimal (in) | | | SI metric (mm) | |
|-----------------|-----------|------------------|--------------|-------|------|----------------|-----------------------|
| 1/64 | 0.015 625 | 5 | 5.000 | 0.010 | 2.00 | 8.50 | 1.0 40 |
| 1/32 | 0.031 25 | 5 $\frac{1}{4}$ | 5.250 | 0.012 | 2.20 | 9.00 | 1.1 45 |
| 1/16 | 0.0625 | 5 $\frac{1}{2}$ | 5.500 | 0.016 | 2.40 | 9.50 | 1.2 50 |
| 3/32 | 0.093 75 | 5 $\frac{3}{4}$ | 5.750 | 0.020 | 2.60 | 10.00 | 1.4 55 |
| 1/8 | 0.1250 | 6 | 6.000 | 0.025 | 2.80 | 10.50 | 1.6 60 |
| 5/32 | 0.156 25 | 6 $\frac{1}{2}$ | 6.500 | 0.032 | 3.00 | 11.00 | 1.8 70 |
| 3/16 | 0.1875 | 7 | 7.000 | 0.040 | 3.20 | 11.50 | 2.0 80 |
| 1/4 | 0.2500 | 7 $\frac{1}{2}$ | 7.500 | 0.05 | 3.40 | 12.00 | 2.2 90 |
| 5/16 | 0.3125 | 8 | 8.000 | 0.06 | 3.60 | 12.50 | 2.5 100 |
| 3/8 | 0.3750 | 8 $\frac{1}{2}$ | 8.500 | 0.08 | 3.80 | 13.00 | 2.8 110 |
| 7/16 | 0.4375 | 9 | 9.000 | 0.10 | 4.00 | 13.50 | 3.0 120 |
| 1/2 | 0.5000 | 9 $\frac{1}{2}$ | 9.500 | 0.12 | 4.20 | 14.00 | 3.5 140 |
| 9/16 | 0.5625 | 10 | 10.000 | 0.16 | 4.40 | 14.50 | 4.0 160 |
| 5/8 | 0.6250 | 10 $\frac{1}{2}$ | 10.500 | 0.20 | 4.60 | 15.00 | 4.5 180 |
| 11/16 | 0.6875 | 11 | 11.000 | 0.24 | 4.80 | 15.50 | 5.0 200 |
| 3/4 | 0.7500 | 11 $\frac{1}{2}$ | 11.500 | 0.30 | 5.00 | 16.00 | 5.5 220 |
| 7/8 | 0.8750 | 12 | 12.000 | 0.40 | 5.20 | 16.50 | 6 250 |
| 1 | 1.000 | 12 $\frac{1}{2}$ | 12.500 | 0.50 | 5.40 | 17.00 | 7 280 |
| 1 $\frac{1}{4}$ | 1.250 | 13 | 13.000 | 0.60 | 5.60 | 17.50 | 8 300 |
| 1 $\frac{1}{2}$ | 1.500 | 13 $\frac{1}{2}$ | 13.500 | 0.80 | 5.80 | 18.00 | 9 350 |
| 1 $\frac{3}{4}$ | 1.750 | 14 | 14.000 | 1.00 | 6.00 | 18.50 | 10 400 |
| 2 | 2.000 | 14 $\frac{1}{2}$ | 14.500 | 1.20 | 6.50 | 19.00 | 11 450 |
| 2 $\frac{1}{4}$ | 2.250 | 15 | 15.000 | 1.40 | 7.00 | 19.50 | 12 500 |
| 2 $\frac{1}{2}$ | 2.500 | 15 $\frac{1}{2}$ | 15.500 | 1.60 | 7.50 | 20.00 | 14 550 |
| 2 $\frac{3}{4}$ | 2.750 | 16 | 16.000 | 1.80 | 8.00 | | 16 600 |
| 3 | 3.000 | 16 $\frac{1}{2}$ | 16.500 | | | | 18 700 |
| 3 $\frac{1}{4}$ | 3.250 | 17 | 17.000 | | | | 20 800 |
| 3 $\frac{1}{2}$ | 3.500 | 17 $\frac{1}{2}$ | 17.500 | | | | 22 900 |
| 3 $\frac{3}{4}$ | 3.750 | 18 | 18.000 | | | | 25 1000 |
| 4 | 4.000 | 18 $\frac{1}{2}$ | 18.500 | | | | 28 |
| 4 $\frac{1}{4}$ | 4.250 | 19 | 19.000 | | | | 30 |
| 4 $\frac{1}{2}$ | 4.500 | 19 $\frac{1}{2}$ | 19.500 | | | | 35 |
| 4 $\frac{3}{4}$ | 4.750 | 20 | 20.000 | | | | |

TABLE A2-2 American Standard Screw Threads**A. American Standard thread dimensions, numbered sizes**

| Basic major diameter, D (in) | Coarse threads: UNC | | Fine threads: UNF | |
|--------------------------------|----------------------------|---------------------------------------|----------------------------|---------------------------------------|
| | Size-Threads per inch, n | Tensile stress area (in^2) | Size-Threads per inch, n | Tensile stress area (in^2) |
| 0.0600 | — | — | 0–80 | 0.001 80 |
| 0.0730 | 1–64 | 0.002 63 | 1–72 | 0.002 78 |
| 0.0860 | 2–56 | 0.003 70 | 2–64 | 0.003 94 |
| 0.0990 | 3–48 | 0.004 87 | 3–56 | 0.005 23 |
| 0.1120 | 4–40 | 0.006 04 | 4–48 | 0.006 61 |
| 0.1250 | 5–40 | 0.007 96 | 5–44 | 0.008 30 |
| 0.1380 | 6–32 | 0.009 09 | 6–40 | 0.010 15 |
| 0.1640 | 8–32 | 0.0140 | 8–36 | 0.014 74 |
| 0.1900 | 10–24 | 0.0175 | 10–32 | 0.0200 |
| 0.2160 | 12–24 | 0.0242 | 12–28 | 0.0258 |

B. American Standard thread dimensions, fractional sizes

| Basic major diameter, D (in) | Coarse threads: UNC | | Fine threads: UNF | |
|--------------------------------|----------------------------|---------------------------------------|----------------------------|---------------------------------------|
| | Size-Threads per inch, n | Tensile stress area (in^2) | Size-Threads per inch, n | Tensile stress area (in^2) |
| 0.2500 | 1/4–20 | 0.0318 | 1/4–28 | 0.0364 |
| 0.3125 | 5/16–18 | 0.0524 | 5/16–24 | 0.0580 |
| 0.3750 | 3/8–16 | 0.0775 | 3/8–24 | 0.0878 |
| 0.4375 | 7/16–14 | 0.1063 | 7/16–20 | 0.1187 |
| 0.5000 | 1/2–13 | 0.1419 | 1/2–20 | 0.1599 |
| 0.5625 | 9/16–12 | 0.182 | 9/16–18 | 0.203 |
| 0.6250 | 5/8–11 | 0.226 | 5/8–18 | 0.256 |
| 0.7500 | 3/4–10 | 0.334 | 3/4–16 | 0.373 |
| 0.8750 | 7/8–9 | 0.462 | 7/8–14 | 0.509 |
| 1.000 | 1 $\frac{1}{8}$ –8 | 0.606 | 1 $\frac{1}{8}$ –12 | 0.663 |
| 1.125 | 1 $\frac{1}{8}$ –7 | 0.763 | 1 $\frac{1}{8}$ –12 | 0.856 |
| 1.250 | 1 $\frac{1}{4}$ –7 | 0.969 | 1 $\frac{1}{4}$ –12 | 1.073 |
| 1.375 | 1 $\frac{3}{8}$ –6 | 1.155 | 1 $\frac{3}{8}$ –12 | 1.315 |
| 1.500 | 1 $\frac{1}{2}$ –6 | 1.405 | 1 $\frac{1}{2}$ –12 | 1.581 |
| 1.750 | 1 $\frac{3}{4}$ –5 | 1.90 | | |
| 2.000 | 2–4 $\frac{1}{2}$ | 2.50 | | |

TABLE A2-3 Metric Sizes of Screw Threads

| Basic major diameter, D (mm) | Coarse threads | | | Fine threads | | |
|--------------------------------|--------------------------|------|--|--------------------------|------|--|
| | Basic thread designation | | Tensile stress area (mm ²) | Basic thread designation | | Tensile stress area (mm ²) |
| | MD × Pitch (mm) | (mm) | | MD × Pitch (mm) | (mm) | |
| 1 | M1 × 0.25 | | 0.460 | — | — | — |
| 1.6 | M1.6 × 0.35 | | 1.27 | M1.6 × 0.20 | | 1.57 |
| 2 | M2 × 0.4 | | 2.07 | M2 × 0.25 | | 2.45 |
| 2.5 | M2.5 × 0.45 | | 3.39 | M2.5 × 0.35 | | 3.70 |
| 3 | M3 × 0.5 | | 5.03 | M3 × 0.35 | | 5.61 |
| 4 | M4 × 0.7 | | 8.78 | M4 × 0.5 | | 9.79 |
| 5 | M5 × 0.8 | | 14.2 | M5 × 0.5 | | 16.1 |
| 6 | M6 × 1 | | 20.1 | M6 × 0.75 | | 22.0 |
| 8 | M8 × 1.25 | | 36.6 | M8 × 1 | | 39.2 |
| 10 | M10 × 1.5 | | 58.0 | M10 × 1.25 | | 61.2 |
| 12 | M12 × 1.75 | | 84.3 | M12 × 1.25 | | 92.1 |
| 16 | M16 × 2 | | 157 | M16 × 1.5 | | 167 |
| 20 | M20 × 2.5 | | 245 | M20 × 1.5 | | 272 |
| 24 | M24 × 3 | | 353 | M24 × 2 | | 384 |
| 30 | M30 × 3.5 | | 561 | M30 × 2 | | 621 |
| 36 | M36 × 4 | | 817 | M36 × 3 | | 865 |
| 42 | M42 × 4.5 | | 1121 | | | |
| 48 | M48 × 5 | | 1473 | | | |

APPENDIX 3 Design Properties of Carbon and Alloy Steels

| Material designation (SAE number) | Condition | Tensile strength | | Yield strength | | Ductility (percent elongation in 2 in) | Brinell hardness (HB) |
|--------------------------------------|------------|------------------|-------|----------------|-------|---|-----------------------|
| | | (ksi) | (MPa) | (ksi) | (MPa) | | |
| 1020 | Hot-rolled | 55 | 379 | 30 | 207 | 25 | 111 |
| 1020 | Cold-drawn | 61 | 420 | 51 | 352 | 15 | 122 |
| 1020 | Annealed | 60 | 414 | 43 | 296 | 38 | 121 |
| 1040 ¹ | Hot-rolled | 72 | 496 | 42 | 290 | 18 | 144 |
| 1040 | Cold-drawn | 80 | 552 | 71 | 490 | 12 | 160 |
| 1040 | OQT 1300 | 88 | 607 | 61 | 421 | 33 | 183 |
| 1040 | OQT 400 | 113 | 779 | 87 | 600 | 19 | 262 |
| 1050 | Hot-rolled | 90 | 620 | 49 | 338 | 15 | 180 |
| 1050 | Cold-drawn | 100 | 690 | 84 | 579 | 10 | 200 |
| 1050 | OQT 1300 | 96 | 662 | 61 | 421 | 30 | 192 |
| 1050 | OQT 400 | 143 | 986 | 110 | 758 | 10 | 321 |
| 1117 | Hot-rolled | 65 | 448 | 40 | 276 | 33 | 124 |
| 1117 | Cold-drawn | 80 | 552 | 65 | 448 | 20 | 138 |
| 1117 | WQT 350 | 89 | 614 | 50 | 345 | 22 | 178 |
| 1137 | Hot-rolled | 88 | 607 | 48 | 331 | 15 | 176 |
| 1137 | Cold-drawn | 98 | 676 | 82 | 565 | 10 | 196 |
| 1137 | OQT 1300 | 87 | 600 | 60 | 414 | 28 | 174 |
| 1137 | OQT 400 | 157 | 1083 | 136 | 938 | 5 | 352 |
| 1144 ¹ | Hot-rolled | 94 | 648 | 51 | 352 | 15 | 188 |
| 1144 | Cold-drawn | 100 | 690 | 90 | 621 | 10 | 200 |
| 1144 | OQT 1300 | 96 | 662 | 68 | 469 | 25 | 200 |
| 1144 | OQT 400 | 127 | 876 | 91 | 627 | 16 | 277 |
| 1213 | Hot-rolled | 55 | 379 | 33 | 228 | 25 | 110 |
| 1213 | Cold-drawn | 75 | 517 | 58 | 340 | 10 | 150 |
| 12L13 | Hot-rolled | 57 | 393 | 34 | 234 | 22 | 114 |
| 12L13 | Cold-drawn | 70 | 483 | 60 | 414 | 10 | 140 |
| 1340 ¹ | Annealed | 102 | 703 | 63 | 434 | 26 | 207 |
| 1340 | OQT 1300 | 100 | 690 | 75 | 517 | 25 | 235 |
| 1340 | OQT 1000 | 144 | 993 | 132 | 910 | 17 | 363 |
| 1340 | OQT 700 | 221 | 1520 | 197 | 1360 | 10 | 444 |
| 1340 | OQT 400 | 285 | 1960 | 234 | 1610 | 8 | 578 |
| 3140 | Annealed | 95 | 655 | 67 | 462 | 25 | 187 |
| 3140 | OQT 1300 | 115 | 792 | 94 | 648 | 23 | 233 |
| 3140 | OQT 1000 | 152 | 1050 | 133 | 920 | 17 | 311 |
| 3140 | OQT 700 | 220 | 1520 | 200 | 1380 | 13 | 461 |
| 3140 | OQT 400 | 280 | 1930 | 248 | 1710 | 11 | 555 |
| 4130 | Annealed | 81 | 558 | 52 | 359 | 28 | 156 |
| 4130 | WQT 1300 | 98 | 676 | 89 | 614 | 28 | 202 |
| 4130 | WQT 1000 | 143 | 986 | 132 | 910 | 16 | 302 |
| 4130 | WQT 700 | 208 | 1430 | 180 | 1240 | 13 | 415 |
| 4130 | WQT 400 | 234 | 1610 | 197 | 1360 | 12 | 461 |
| 4140 ¹ | Annealed | 95 | 655 | 54 | 372 | 26 | 197 |
| 4140 | OQT 1300 | 117 | 807 | 100 | 690 | 23 | 235 |
| 4140 | OQT 1000 | 168 | 1160 | 152 | 1050 | 17 | 341 |
| 4140 | OQT 700 | 231 | 1590 | 212 | 1460 | 13 | 461 |
| 4140 | OQT 400 | 290 | 2000 | 251 | 1730 | 11 | 578 |
| 4150 | Annealed | 106 | 731 | 55 | 379 | 20 | 197 |
| 4150 | OQT 1300 | 127 | 880 | 116 | 800 | 20 | 262 |
| 4150 | OQT 1000 | 197 | 1360 | 181 | 1250 | 11 | 401 |
| 4150 | OQT 700 | 247 | 1700 | 229 | 1580 | 10 | 495 |
| 4150 | OQT 400 | 300 | 2070 | 248 | 1710 | 10 | 578 |

(Continued)

APPENDIX 3 (Continued)

| Material designation (SAE number) | Condition | Tensile strength | | Yield strength | | Ductility (percent elongation in 2 in) | Brinell hardness (HB) |
|--------------------------------------|-----------|------------------|-------|----------------|-------|---|-----------------------|
| | | (ksi) | (MPa) | (ksi) | (MPa) | | |
| 4340 ¹ | Annealed | 108 | 745 | 68 | 469 | 22 | 217 |
| 4340 | OQT 1300 | 140 | 965 | 120 | 827 | 23 | 280 |
| 4340 | OQT 1000 | 171 | 1180 | 158 | 1090 | 16 | 363 |
| 4340 | OQT 700 | 230 | 1590 | 206 | 1420 | 12 | 461 |
| 4340 | OQT 400 | 283 | 1950 | 228 | 1570 | 11 | 555 |
| 5140 | Annealed | 83 | 572 | 42 | 290 | 29 | 167 |
| 5140 | OQT 1300 | 104 | 717 | 83 | 572 | 27 | 207 |
| 5140 | OQT 1000 | 145 | 1000 | 130 | 896 | 18 | 302 |
| 5140 | OQT 700 | 220 | 1520 | 200 | 1380 | 11 | 429 |
| 5140 | OQT 400 | 276 | 1900 | 226 | 1560 | 7 | 534 |
| 5150 | Annealed | 98 | 676 | 52 | 359 | 22 | 197 |
| 5150 | OQT 1300 | 116 | 800 | 102 | 700 | 22 | 241 |
| 5150 | OQT 1000 | 160 | 1100 | 149 | 1030 | 15 | 321 |
| 5150 | OQT 700 | 240 | 1650 | 220 | 1520 | 10 | 461 |
| 5150 | OQT 400 | 312 | 2150 | 250 | 1720 | 8 | 601 |
| 5160 | Annealed | 105 | 724 | 40 | 276 | 17 | 197 |
| 5160 | OQT 1300 | 115 | 793 | 100 | 690 | 23 | 229 |
| 5160 | OQT 1000 | 170 | 1170 | 151 | 1040 | 14 | 341 |
| 5160 | OQT 700 | 263 | 1810 | 237 | 1630 | 9 | 514 |
| 5160 | OQT 400 | 322 | 2220 | 260 | 1790 | 4 | 627 |
| 6150 ¹ | Annealed | 96 | 662 | 59 | 407 | 23 | 197 |
| 6150 | OQT 1300 | 118 | 814 | 107 | 738 | 21 | 241 |
| 6150 | OQT 1000 | 183 | 1260 | 173 | 1190 | 12 | 375 |
| 6150 | OQT 700 | 247 | 1700 | 223 | 1540 | 10 | 495 |
| 6150 | OQT 400 | 315 | 2170 | 270 | 1860 | 7 | 601 |
| 8650 | Annealed | 104 | 717 | 56 | 386 | 22 | 212 |
| 8650 | OQT 1300 | 122 | 841 | 113 | 779 | 21 | 255 |
| 8650 | OQT 1000 | 176 | 1210 | 155 | 1070 | 14 | 363 |
| 8650 | OQT 700 | 240 | 1650 | 222 | 1530 | 12 | 495 |
| 8650 | OQT 400 | 282 | 1940 | 250 | 1720 | 11 | 555 |
| 8740 | Annealed | 100 | 690 | 60 | 414 | 22 | 201 |
| 8740 | OQT 1300 | 119 | 820 | 100 | 690 | 25 | 241 |
| 8740 | OQT 1000 | 175 | 1210 | 167 | 1150 | 15 | 363 |
| 8740 | OQT 700 | 228 | 1570 | 212 | 1460 | 12 | 461 |
| 8740 | OQT 400 | 290 | 2000 | 240 | 1650 | 10 | 578 |
| 9255 | Annealed | 113 | 780 | 71 | 490 | 22 | 229 |
| 9255 | Q&T 1300 | 130 | 896 | 102 | 703 | 21 | 262 |
| 9255 | Q&T 1000 | 181 | 1250 | 160 | 1100 | 14 | 352 |
| 9255 | Q&T 700 | 260 | 1790 | 240 | 1650 | 5 | 534 |
| 9255 | Q&T 400 | 310 | 2140 | 287 | 1980 | 2 | 601 |

Notes: Properties common to all carbon and alloy steels:

Poisson's ratio: 0.27.

Shear modulus: 11.5×10^6 psi; 80 GPa.

Coefficient of thermal expansion: $6.5 \times 10^{-6}^{\circ}\text{F}^{-1}$.

Density: 0.283 lb/in³; 7680 kg/m³.

Modulus of elasticity: 30×10^6 psi; 207 GPa.

¹See Appendix 4 for graphs of properties versus heat treatment.

APPENDIX 4 Properties of Heat-Treated Steels

Treatment: Normalized at 1650°F; reheated to 1550°F; quenched in water.
1-in Round Treated; 0.505-in Round Tested. As-quenched HB 534.

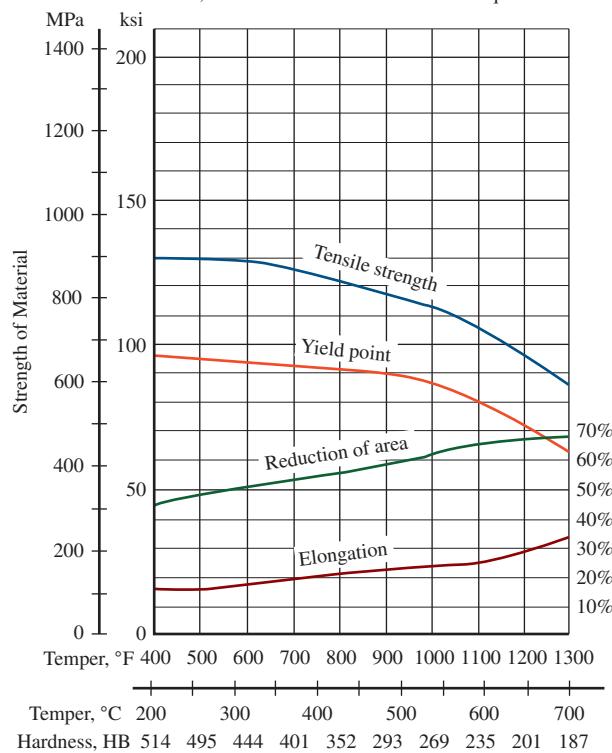


FIGURE A4-1 Properties of heat-treated SAE 1040, water-quenched and tempered

Treatment: Normalized at 1650°F; reheated to 1550°F; quenched in oil.
1-in Round Treated; 0.505-in Round Tested. As-quenched HB 285.

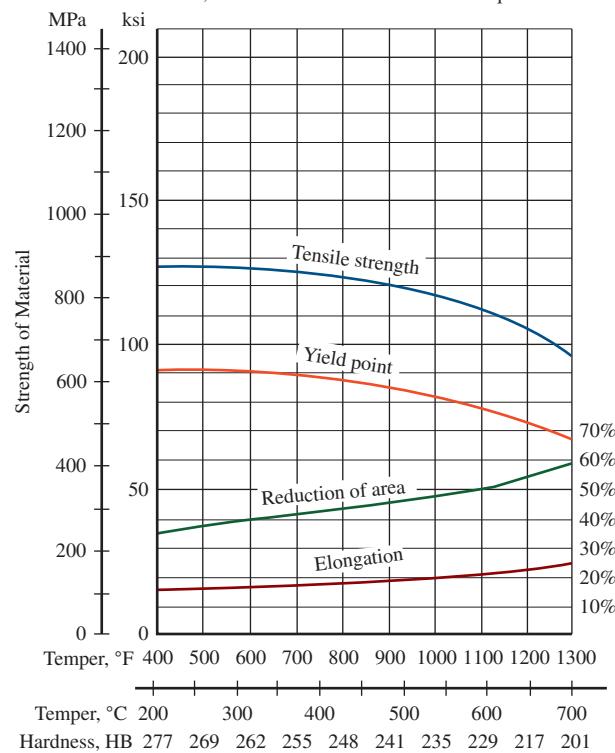


FIGURE A4-2 Properties of heat-treated SAE 1144, oil-quenched and tempered

Treatment: Normalized at 1600°F; reheated to 1525°F; quenched in agitated oil.
0.565-in Round Treated; 0.505-in Round Tested. As-quenched HB 601.

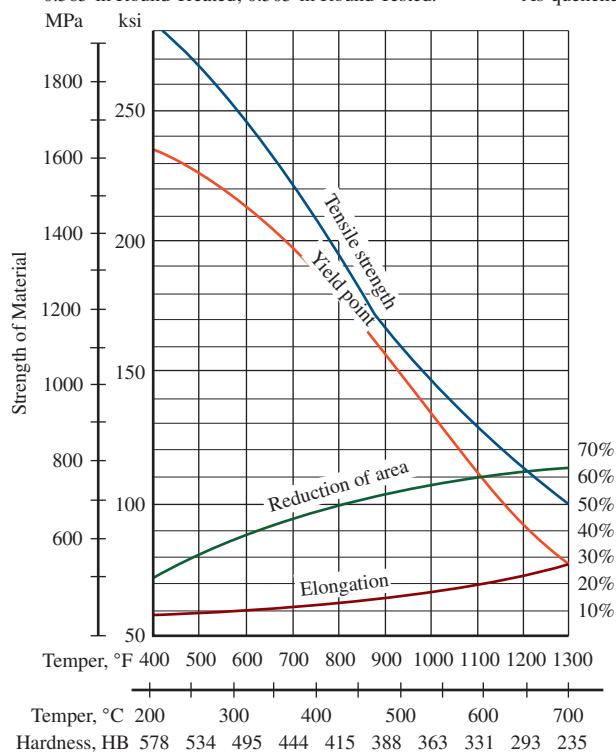


FIGURE A4-3 Properties of heat-treated SAE 1340, oil-quenched and tempered

Treatment: Normalized at 1600°F; reheated to 1550°F; quenched in agitated oil.
0.530-in Round Treated; 0.505-in Round Tested. As-quenched HB 601.

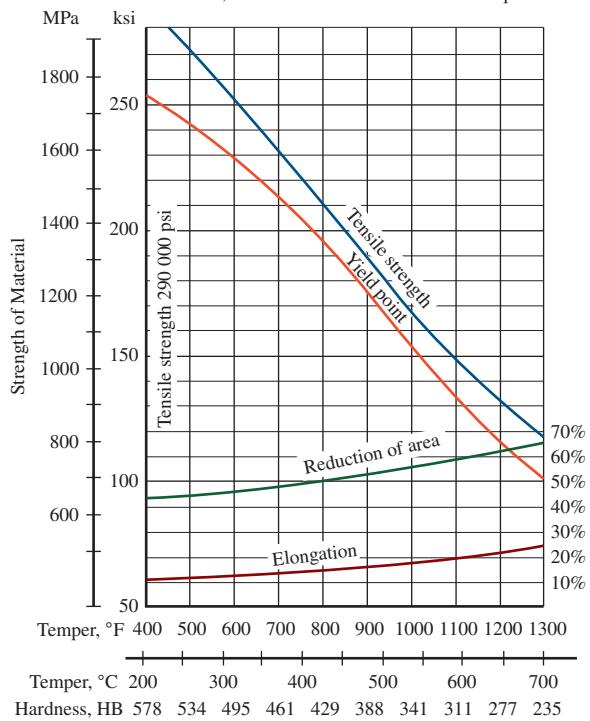


FIGURE A4-4 Properties of heat-treated SAE 4140, oil-quenched and tempered

Treatment: Normalized at 1600°F; reheated to 1475°F; quenched in agitated oil.
0.530-in Round Treated; 0.505-in Round Tested. As-quenched HB 601.

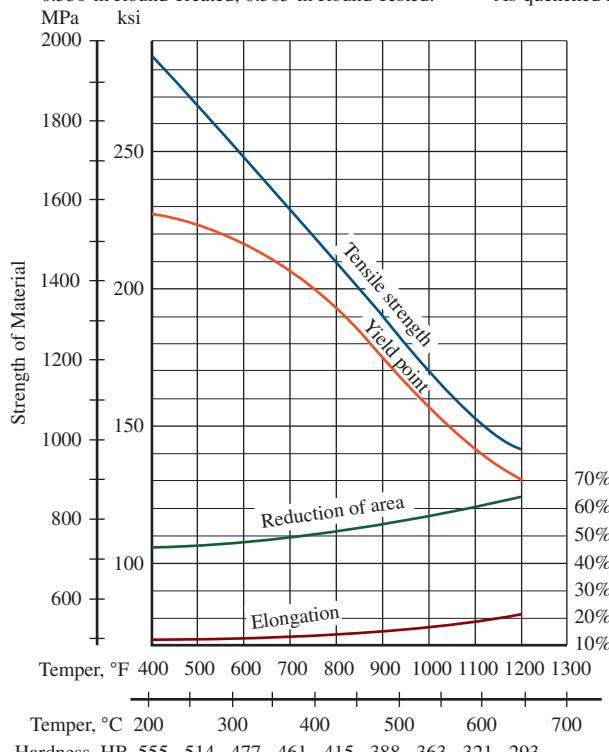


FIGURE A4-5 Properties of heat-treated SAE 4340, oil-quenched and tempered

Treatment: Normalized at 1600°F; reheated to 1550°F; quenched in agitated oil.
0.565-in Round Treated; 0.505-in Round Tested. As-quenched HB 627.

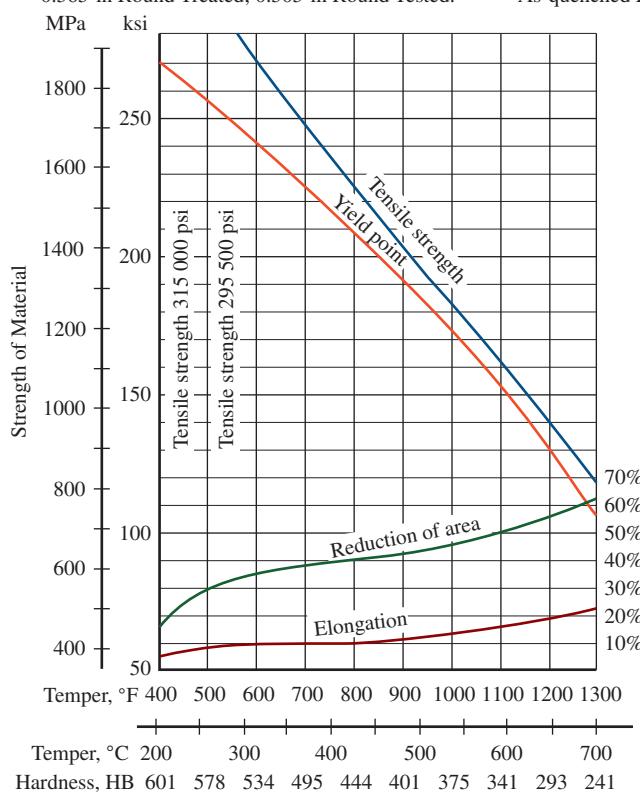


FIGURE A4-6 Properties of heat-treated SAE 6150, oil-quenched and tempered

APPENDIX 5 Properties of Carburized Steels

| Material designation (SAE number) | Condition | Core properties | | | | | Brinell hardness (HB) | Case hardness (HRC) |
|--------------------------------------|-----------|---------------------------|---------------------------|-------------------------|-------------------------|---|--------------------------|------------------------|
| | | Tensile strength (ksi) | Tensile strength (MPa) | Yield strength (ksi) | Yield strength (MPa) | Ductility (percent elongation in 2 in) | | |
| 1015 | SWQT 350 | 106 | 731 | 60 | 414 | 15 | 217 | 62 |
| 1020 | SWQT 350 | 129 | 889 | 72 | 496 | 11 | 255 | 62 |
| 1022 | SWQT 350 | 135 | 931 | 75 | 517 | 14 | 262 | 62 |
| 1117 | SWQT 350 | 125 | 862 | 66 | 455 | 10 | 235 | 65 |
| 1118 | SWQT 350 | 144 | 993 | 90 | 621 | 13 | 285 | 61 |
| 4118 | SOQT 300 | 143 | 986 | 93 | 641 | 17 | 293 | 62 |
| 4118 | DOQT 300 | 126 | 869 | 63 | 434 | 21 | 241 | 62 |
| 4118 | SOQT 450 | 138 | 952 | 89 | 614 | 17 | 277 | 56 |
| 4118 | DOQT 450 | 120 | 827 | 63 | 434 | 22 | 229 | 56 |
| 4320 | SOQT 300 | 218 | 1500 | 178 | 1230 | 13 | 429 | 62 |
| 4320 | DOQT 300 | 151 | 1040 | 97 | 669 | 19 | 302 | 62 |
| 4320 | SOQT 450 | 211 | 1450 | 173 | 1190 | 12 | 415 | 59 |
| 4320 | DOQT 450 | 145 | 1000 | 94 | 648 | 21 | 293 | 59 |
| 4620 | SOQT 300 | 119 | 820 | 83 | 572 | 19 | 277 | 62 |
| 4620 | DOQT 300 | 122 | 841 | 77 | 531 | 22 | 248 | 62 |
| 4620 | SOQT 450 | 115 | 793 | 80 | 552 | 20 | 248 | 59 |
| 4620 | DOQT 450 | 115 | 793 | 77 | 531 | 22 | 235 | 59 |
| 4820 | SOQT 300 | 207 | 1430 | 167 | 1150 | 13 | 415 | 61 |
| 4820 | DOQT 300 | 204 | 1405 | 165 | 1140 | 13 | 415 | 60 |
| 4820 | SOQT 450 | 205 | 1410 | 184 | 1270 | 13 | 415 | 57 |
| 4820 | DOQT 450 | 196 | 1350 | 171 | 1180 | 13 | 401 | 56 |
| 8620 | SOQT 300 | 188 | 1300 | 149 | 1030 | 11 | 388 | 64 |
| 8620 | DOQT 300 | 133 | 917 | 83 | 572 | 20 | 269 | 64 |
| 8620 | SOQT 450 | 167 | 1150 | 120 | 827 | 14 | 341 | 61 |
| 8620 | DOQT 450 | 130 | 896 | 77 | 531 | 22 | 262 | 61 |
| E9310 | SOQT 300 | 173 | 1190 | 135 | 931 | 15 | 363 | 62 |
| E9310 | DOQT 300 | 174 | 1200 | 139 | 958 | 15 | 363 | 60 |
| E9310 | SOQT 450 | 168 | 1160 | 137 | 945 | 15 | 341 | 59 |
| E9310 | DOQT 450 | 169 | 1170 | 138 | 952 | 15 | 352 | 58 |

Notes: Properties given are for a single set of tests on 1/2-in round bars.

SWQT: single water-quenched and tempered.

SOQT: single oil-quenched and tempered.

DOQT: double oil-quenched and tempered.

300 and 450 are the tempering temperatures in °F. Steel was carburized for 8 h. Case depth ranged from 0.045 to 0.075 in.

APPENDIX 6 Properties of Stainless Steels

| Material designation | | Condition | Tensile strength | | Yield strength | | Ductility (percent elongation in 2 in) |
|---------------------------------------|--------|-----------|------------------|-------|----------------|-------|---|
| SAE number | UNS | | (ksi) | (MPa) | (ksi) | (MPa) | |
| Austenitic steels | | | | | | | |
| 201 | S20100 | Annealed | 115 | 793 | 55 | 379 | 55 |
| | | 1/4 hard | 125 | 862 | 75 | 517 | 20 |
| | | 1/2 hard | 150 | 1030 | 110 | 758 | 10 |
| | | 3/4 hard | 175 | 1210 | 135 | 931 | 5 |
| | | Full hard | 185 | 1280 | 140 | 966 | 4 |
| 301 | S30100 | Annealed | 110 | 758 | 40 | 276 | 60 |
| | | 1/4 hard | 125 | 862 | 75 | 517 | 25 |
| | | 1/2 hard | 150 | 1030 | 110 | 758 | 15 |
| | | 3/4 hard | 175 | 1210 | 135 | 931 | 12 |
| | | Full hard | 185 | 1280 | 140 | 966 | 8 |
| 304 | S30400 | Annealed | 85 | 586 | 35 | 241 | 60 |
| 310 | S31000 | Annealed | 95 | 655 | 45 | 310 | 45 |
| 316 | S31600 | Annealed | 80 | 552 | 30 | 207 | 60 |
| Ferritic steels | | | | | | | |
| 405 | S40500 | Annealed | 70 | 483 | 40 | 276 | 30 |
| 430 | S43000 | Annealed | 75 | 517 | 40 | 276 | 30 |
| | | Full hard | 90 | 621 | 80 | 552 | 15 |
| 446 | S44600 | Annealed | 80 | 552 | 50 | 345 | 25 |
| Martensitic steels | | | | | | | |
| 410 | S41000 | Annealed | 75 | 517 | 40 | 276 | 30 |
| 416 | S41600 | Q&T 600 | 180 | 1240 | 140 | 966 | 15 |
| | | Q&T 1000 | 145 | 1000 | 115 | 793 | 20 |
| | | Q&T 1400 | 90 | 621 | 60 | 414 | 30 |
| | | Q&T 600 | 195 | 1344 | 150 | 1034 | 15 |
| 431 | S43100 | Q&T 600 | 280 | 1930 | 270 | 1860 | 3 |
| 440A | S44002 | Annealed | 70 | 483 | 30 | 207 | 28 |
| | | OQT 1000 | 175 | 1210 | 135 | 931 | 15 |
| Precipitation-hardening steels | | | | | | | |
| 17-4PH | S17400 | H 900 | 210 | 1450 | 185 | 1280 | 14 |
| | | H 1150 | 145 | 1000 | 125 | 862 | 19 |
| 17-7PH | S17700 | RH 950 | 200 | 1380 | 175 | 1210 | 10 |
| | | TH 1050 | 175 | 1210 | 155 | 1070 | 12 |
| PH 13-8 Mo | S13800 | H 950 | 220 | 1517 | 205 | 1413 | 10 |
| | | H 1050 | 175 | 1207 | 165 | 1138 | 12 |
| | | H 1150 | 135 | 931 | 90 | 621 | 14 |

APPENDIX 7 Properties of Structural Steels

| Material ASTM no. and products | Ultimate strength, s_u^1 | | Yield strength, s_y^1 | | Percent elongation in 2 in |
|--|----------------------------|-----|-------------------------|-----|----------------------------|
| | ksi | MPa | ksi | MPa | |
| A36—Carbon steel: shapes, plates, and bars | 58 | 400 | 36 | 248 | 21 |
| A 53—grade B-pipe | 60 | 414 | 35 | 240 | 23 |
| A242—HSLA corrosion resistant: shapes, plates, and bars | | | | | |
| $\leq \frac{3}{4}$ in thick | 70 | 483 | 50 | 345 | 21 |
| $\frac{3}{4}$ to $1\frac{1}{2}$ in thick | 67 | 462 | 46 | 317 | 21 |
| $1\frac{1}{2}$ to 4 in thick | 63 | 434 | 42 | 290 | 21 |
| A500—Cold-formed structural tubing | | | | | |
| Round, grade B | 58 | 400 | 42 | 290 | 23 |
| Round, grade C | 62 | 427 | 46 | 317 | 21 |
| Shaped, grade B | 58 | 400 | 46 | 317 | 23 |
| Shaped, grade C | 65 | 427 | 50 | 345 | 21 |
| A501—Hot-formed structural tubing, round or shaped | 58 | 400 | 36 | 248 | 23 |
| A514—Quenched and tempered alloy steel: plate | | | | | |
| $\leq 2\frac{1}{2}$ in thick | 110 | 758 | 100 | 690 | 18 |
| $2\frac{1}{2}$ to 6 in thick | 100 | 690 | 90 | 620 | 16 |
| A572—HSLA columbium-vanadium steel: shapes, plates, and bars | | | | | |
| Grade 42 | 60 | 414 | 42 | 290 | 24 |
| Grade 50 | 65 | 448 | 50 | 345 | 21 |
| Grade 60 | 75 | 517 | 60 | 414 | 18 |
| Grade 65 | 80 | 552 | 65 | 448 | 17 |
| A913—HSLA, grade 65: shapes | 80 | 552 | 65 | 448 | 17 |
| A992—HSLA: W-Shapes only | 65 | 448 | 50 | 345 | 21 |

Notes: ¹Minimum values; may range higher.

HSLA—High strength low-alloy.

The American Institute of Steel Construction specifies $E = 29 \times 10^6$ psi (200 GPa) for structural steel.

APPENDIX 8 Design Properties of Cast Iron—U.S. Units Basis³

| U.S. units Material type and grade | Ultimate strength | | | | Yield strength | | ¹ Modulus of elasticity, E | | Percent elongation | | |
|---|-----------------------|-------------------------------------|------------------------|-------------------------------------|------------------------|-------------------------------------|--|---------------------|-----------------------|-----|------|
| | s _u ksi | s _{uc} ² MPa | s _{us} ksi | s _{us} ² MPa | s _{yt} ksi | s _{yt} ² MPa | 10 ⁶ psi 10 ⁶ GPa | 10 ⁶ GPa | % | | |
| Gray iron—ASTM A48 | | | | | | | | | | | |
| No. 20A | 20 | 138 | 80 | 552 | 32 | 221 | — | — | 12.2 | 84 | <1.0 |
| No. 30A | 30 | 207 | 113 | 779 | 47 | 324 | — | — | 16.9 | 117 | <1.0 |
| No. 40A | 40 | 276 | 140 | 965 | 57 | 393 | — | — | 19.4 | 134 | <1.0 |
| No. 50A | 50 | 345 | 158 | 1089 | 66 | 455 | — | — | 20.8 | 143 | <1.0 |
| No. 60A | 60 | 414 | 170 | 1172 | 72 | 496 | — | — | 21.5 | 148 | <1.0 |
| Ductile iron—ASTM A536 | | | | | | | | | | | |
| 60-40-18 | 60 | 414 | — | — | 57 | 393 | 40 | 276 | 24 | 165 | 18 |
| 65-45-12 | 65 | 448 | — | — | — | — | 45 | 310 | 24 | 165 | 12 |
| 80-55-08 | 80 | 552 | — | — | — | — | 55 | 379 | 24 | 165 | 6 |
| 100-70-03 | 100 | 690 | — | — | — | — | 70 | 483 | 24 | 165 | 3 |
| 120-90-02 | 120 | 827 | 180 | 1241 | — | — | 90 | 621 | 23 | 159 | 2 |
| Austempered ductile iron (ADI)—ASTM A897 | | | | | | | | | | | |
| 110/70/11 | 110 | 758 | — | — | — | — | 70 | 483 | 22 | 152 | 11 |
| 130/90/09 | 130 | 896 | — | — | — | — | 90 | 621 | 22 | 152 | 9 |
| 150/110/07 | 150 | 1034 | — | — | — | — | 110 | 758 | 22 | 152 | 7 |
| 175/125/04 | 175 | 1207 | — | — | — | — | 125 | 862 | 22 | 152 | 4 |
| 200/155/02 | 200 | 1379 | — | — | — | — | 155 | 1069 | 22 | 152 | 2 |
| 230/185/01 | 230 | 1586 | — | — | — | — | 185 | 1276 | 22 | 152 | 1 |
| Ferritic malleable iron—ASTM A47 | | | | | | | | | | | |
| 32510 | 50 | 345 | — | — | — | — | 32.5 | 224 | 25 | 172 | 10 |
| Pearlitic malleable iron—ASTM A220 | | | | | | | | | | | |
| 40010 | 60 | 414 | 240 | 1655 | 43 | 296 | 40 | 276 | 26 | 179 | 10 |
| 45008 | 65 | 448 | 240 | 1655 | 49 | 338 | 45 | 310 | 26 | 179 | 8 |
| 45006 | 65 | 448 | 240 | 1655 | 49 | 338 | 45 | 310 | 26 | 179 | 6 |
| 50005 | 70 | 483 | 240 | 1655 | 55 | 379 | 50 | 345 | 26 | 179 | 5 |
| 60004 | 80 | 552 | 240 | 1655 | 65 | 448 | 60 | 414 | 26 | 179 | 4 |
| 70003 | 85 | 586 | 240 | 1655 | 68 | 469 | 70 | 483 | 26 | 179 | 3 |
| 80002 | 95 | 655 | 240 | 1655 | 75 | 517 | 80 | 552 | 26 | 179 | 2 |
| 90001 | 105 | 724 | 240 | 1655 | 78 | 538 | 90 | 621 | 26 | 179 | 1 |

Notes: ¹Approximate values; not part of the standards; If critical, negotiate with supplier.

²Metric data computed using: (6.895 × U.S. data); Not part of the standards.

³The density of cast irons ranges from 0.25 lb_m/in³ to 0.27 lb_m/in³ (6920 kg/m³ to 7480 kg/m³).

APPENDIX 8A Design Properties of Cast Iron—SI Units Basis³

| SI units | Ultimate strength | | | | | | Yield strength | | ¹ Modulus of elasticity, E | | Percent elongation |
|--|----------------------|------|------------------------------------|-----|------------------------------------|-----|-----------------------|------|---------------------------------------|-----|--------------------|
| | <i>s_u</i> | | ¹ <i>s_{uc}</i> | | ¹ <i>s_{us}</i> | | <i>s_{yt}</i> | | ^{10⁶} psi GPa | | |
| Material type and grade | ² ksi | MPa | ² ksi | MPa | ² ksi | MPa | ² ksi | MPa | ^{10⁶} psi | GPa | |
| Gray iron—ASTM A48M | | | | | | | | | | | |
| No. 150A | 22 | 150 | — | — | — | — | — | — | 12.2 | 84 | <1.0 |
| No. 200A | 29 | 200 | — | — | — | — | — | — | 16.9 | 117 | <1.0 |
| No. 275A | 40 | 275 | — | — | — | — | — | — | 19.4 | 134 | <1.0 |
| No. 350A | 51 | 350 | — | — | — | — | — | — | 20.8 | 143 | <1.0 |
| No. 400A | 58 | 400 | — | — | — | — | — | — | 21.5 | 148 | <1.0 |
| Ductile iron—ASTM A536 Note: No metric grades included in the standard. | | | | | | | | | | | |
| Austempered ductile iron (ADI)—ASTM A897M | | | | | | | | | | | |
| 750/500/11 | 109 | 750 | — | — | — | — | 73 | 500 | 22 | 152 | 11 |
| 900/650/09 | 131 | 900 | — | — | — | — | 94 | 650 | 22 | 152 | 9 |
| 1050/750/07 | 152 | 1050 | — | — | — | — | 109 | 750 | 22 | 152 | 7 |
| 1200/850/04 | 174 | 1200 | — | — | — | — | 123 | 850 | 22 | 152 | 4 |
| 1400/1100/02 | 203 | 1400 | — | — | — | — | 160 | 1100 | 22 | 152 | 2 |
| 1600/1300/01 | 232 | 1600 | — | — | — | — | 189 | 1300 | 22 | 152 | 1 |
| Ferritic malleable iron—ASTM A47M | | | | | | | | | | | |
| 22010 | 49 | 340 | — | — | — | — | 32 | 220 | 25 | 172 | 10 |
| Pearlitic malleable iron—ASTM A220M | | | | | | | | | | | |
| 280M10 | 58 | 400 | — | — | — | — | 41 | 280 | 26 | 179 | 10 |
| 310M8 | 65 | 450 | — | — | — | — | 45 | 310 | 26 | 179 | 8 |
| 310M6 | 65 | 450 | — | — | — | — | 45 | 310 | 26 | 179 | 6 |
| 340M5 | 70 | 480 | — | — | — | — | 49 | 340 | 26 | 179 | 5 |
| 410M4 | 80 | 550 | — | — | — | — | 59 | 410 | 26 | 179 | 4 |
| 480M3 | 86 | 590 | — | — | — | — | 70 | 480 | 26 | 179 | 3 |
| 550M2 | 94 | 650 | — | — | — | — | 80 | 550 | 26 | 179 | 2 |
| 620M1 | 104 | 720 | — | — | — | — | 90 | 620 | 26 | 179 | 1 |

Notes: Five additional intermediate grades are included in standard A48M for gray iron.

¹Approximate values; not part of the standards; If critical, negotiate with supplier.

²U.S. data computed using: (SI data/6.895); Not part of the standards.

³The density of cast irons ranges from 6920 kg/m³ to 7480 kg/m³ (0.25 lb_m/in³ to 0.27 lb_m/in³).

APPENDIX 9 Typical Properties of Aluminum

| Alloy and temper | Tensile strength | | Yield strength | | Ductility (percent elongation in 2 in) | Shearing strength | | Endurance strength | |
|--|---------------------|-------|-------------------|-------|---|----------------------|-------|-----------------------|-------|
| | (ksi) | (MPa) | (ksi) | (MPa) | | (ksi) | (MPa) | (ksi) | (MPa) |
| 1060-O | 10 | 69 | 4 | 28 | 43 | 7 | 48 | 3 | 21 |
| 1060-H14 | 14 | 97 | 13 | 90 | 12 | 9 | 62 | 5 | 34 |
| 1060-H18 | 19 | 131 | 18 | 124 | 6 | 11 | 121 | 6.5 | 41 |
| 1350-O | 12 | 83 | 4 | 28 | 28 | 8 | 55 | | |
| 1350-H14 | 16 | 110 | 14 | 97 | | 10 | 69 | | |
| 1350-H19 | 27 | 186 | 24 | 165 | | 15 | 103 | 7 | 48 |
| 2014-O | 27 | 186 | 14 | 97 | 18 | 18 | 124 | 13 | 90 |
| 2014-T4 | 62 | 427 | 42 | 290 | 20 | 38 | 262 | 20 | 138 |
| 2014-T6 | 70 | 483 | 60 | 414 | 13 | 42 | 290 | 18 | 124 |
| 2024-O | 27 | 186 | 11 | 76 | 22 | 18 | 124 | 13 | 90 |
| 2024-T4 | 68 | 469 | 47 | 324 | 19 | 41 | 283 | 20 | 138 |
| 2024-T361 | 72 | 496 | 57 | 393 | 13 | 42 | 290 | 18 | 124 |
| 2219-O | 25 | 172 | 11 | 76 | 18 | | | | |
| 2219-T62 | 60 | 414 | 42 | 290 | 10 | | | 15 | 103 |
| 2219-T87 | 69 | 476 | 57 | 393 | 10 | | | 15 | 103 |
| 3003-O | 16 | 110 | 6 | 41 | 40 | 11 | 121 | 7 | 48 |
| 3003-H14 | 22 | 152 | 21 | 145 | 16 | 14 | 97 | 9 | 62 |
| 3003-H18 | 29 | 200 | 27 | 186 | 10 | 16 | 110 | 10 | 69 |
| 5052-O | 28 | 193 | 13 | 90 | 30 | 18 | 124 | 16 | 110 |
| 5052-H34 | 38 | 262 | 31 | 214 | 14 | 21 | 145 | 18 | 124 |
| 5052-H38 | 42 | 290 | 37 | 255 | 8 | 24 | 165 | 20 | 138 |
| 6061-O | 18 | 124 | 8 | 55 | 30 | 12 | 83 | 9 | 62 |
| 6061-T4 | 35 | 241 | 21 | 145 | 25 | 24 | 165 | 14 | 97 |
| 6061-T6 | 45 | 310 | 40 | 276 | 17 | 30 | 207 | 14 | 97 |
| 6063-O | 13 | 90 | 7 | 48 | | 10 | 69 | 8 | 55 |
| 6063-T4 | 25 | 172 | 13 | 90 | 22 | | | | |
| 6063-T6 | 35 | 241 | 31 | 214 | 12 | 22 | 152 | 10 | 69 |
| 7178-O | 33 | 228 | 15 | 103 | 16 | | | | |
| 7178-T6 | 88 | 607 | 78 | 538 | 11 | | | | |
| 7075-O | 33 | 228 | 15 | 103 | 16 | 22 | 152 | | |
| 7075-T6 | 83 | 572 | 73 | 503 | 11 | 48 | 331 | 23 | 159 |
| Casting alloys (permanent mold casting) | | | | | | | | | |
| 204.0-14 | 48 | 331 | 29 | 200 | 8 | — | — | | |
| 206.0-T6 | 65 | 445 | 59 | 405 | 6 | — | — | | |
| 356.0-T6 | 41 | 283 | 30 | 207 | 10 | — | — | | |

Note: Common properties:

Density: 0.095 to 0.102 lb/in³ (2635 to 2829 kg/m³).

Endurance strength at 5×10^8 cycles.

| Modulus of elasticity | Alloys |
|-----------------------------------|------------------------|
| 10.0×10^6 psi (69.0 GPa) | 1100, 3003, 6061, 6063 |
| 10.2×10^6 psi (70.3 GPa) | 5154 |
| 10.4×10^6 psi (71.7 GPa) | 7075 |
| 10.6×10^6 psi (73.1 GPa) | 2014 |

APPENDIX 1O-1 Properties of Die-Cast Zinc Alloys

| Material designation | Tensile strength | | Yield strength | | Compression strength | | Percent elongation | | Density | | Modulus of elasticity | | Impact strength | |
|----------------------|------------------|-------|----------------|-------|----------------------|-------|--------------------|-----------------------|----------------------|-----------------------|-----------------------|---------|-----------------|--|
| | (ksi) | (MPa) | (ksi) | (MPa) | (ksi) | (MPa) | (%) | (lb/in ³) | (kg/m ³) | (10 ⁶ psi) | (GPa) | (ft·lb) | (J or N·m) | |
| ZAMAK #3 | 41 | 283 | 32 | 221 | 60 | 414 | 10 | 0.240 | 6600 | 12.4 | 85.5 | 43.0 | 58 | |
| ZAMAK #5 | 48 | 331 | 33 | 228 | 87 | 600 | 7 | 0.240 | 6600 | 12.4 | 85.5 | 48.0 | 65 | |
| ZA-8 | 54 | 374 | 42 | 290 | 37 | 252 | 8 | 0.227 | 6300 | 12.4 | 85.5 | 31.0 | 42 | |
| ZA-12 | 59 | 404 | 46 | 320 | 39 | 269 | 5.5 | 0.216 | 6000 | 12.0 | 82.7 | 21.0 | 29 | |
| ZA-27 | 61 | 421 | 55 | 379 | 52 | 385 | 2 | 0.181 | 5000 | 11.3 | 77.9 | 9.0 | 5 | |

Note: Strength values are typical average values; may range higher or lower.

APPENDIX 1O-2 Properties of Die-Cast Magnesium Alloys

| Material designation | Tensile strength | | ¹ Yield strength | | Compression strength | | Percent elongation | | Density | | Modulus of elasticity | | Impact strength | |
|----------------------|------------------|-------|-----------------------------|-------|----------------------|-------|--------------------|-----------------------|----------------------|-----------------------|-----------------------|---------|-----------------|--|
| | (ksi) | (MPa) | (ksi) | (MPa) | (ksi) | (MPa) | (%) | (lb/in ³) | (kg/m ³) | (10 ⁶ psi) | (GPa) | (ft·lb) | (J or N·m) | |
| AZ-91 MgAl9Zn1(A) | 33.4 | 230 | 22.5 | 155 | 21.5 | 148 | 3 | 0.0654 | 1810 | 6.5 | 45 | 4.4 | 6 | |
| AM-60 MgAl6Mn | 31.9 | 220 | 19.6 | 135 | — | — | 9 | 0.0650 | 1800 | 6.5 | 45 | 12.5 | 17 | |
| AM-50 MgAl5Mn | 29.7 | 205 | 17.4 | 120 | 16.4 | 113 | 10 | 0.0639 | 1770 | 6.5 | 45 | 13.3 | 18 | |
| AM-20 MgAl2Mn | 26.8 | 185 | 13.1 | 90 | 10.7 | 74 | 13 | 0.0632 | 1750 | 6.5 | 45 | 13.3 | 18 | |

Note: Strength values are typical average values; may range higher or lower.

¹Also called 0.2% proof stress.

APPENDIX 11-1 Properties of Nickel-Based Alloys

| Material designation | Tensile strength | | Yield strength | | Percent elongation | | Density | | Modulus of elasticity | |
|------------------------|------------------|-------|----------------|-------|--------------------|-------------------------------------|----------------------|-----------------------|-----------------------|--|
| | (ksi) | (MPa) | (ksi) | (MPa) | (%) | (lb _m /in ³) | (kg/m ³) | (10 ⁶ psi) | (GPa) | |
| N06600 Annealed | 93 | 640 | 37 | 255 | 45 | 0.304 | 8420 | 30 | 207 | |
| N06110 40% cold worked | 175 | 1205 | 150 | 1034 | 18 | 0.302 | 8330 | 30 | 207 | |
| N04400 Annealed | 80 | 550 | 30 | 207 | 50 | 0.318 | 8800 | 26 | 181 | |
| N04400 cold drawn | 100 | 690 | 75 | 517 | 30 | 0.318 | 8800 | 26 | 181 | |

APPENDIX 11-2 Properties of Titanium Alloys

| Material designation | Tensile strength | | Yield strength | | Percent elongation | | Density | | Modulus of elasticity | |
|---|------------------|-------|----------------|-------|--------------------|-------------------------------------|----------------------|-----------------------|-----------------------|--|
| | (ksi) | (MPa) | (ksi) | (MPa) | (%) | (lb _m /in ³) | (kg/m ³) | (10 ⁶ psi) | (GPa) | |
| Commercially Pure alpha titanium | | | | | | | | | | |
| Ti-35A Wrought | 35 | 241 | 25 | 172 | 24 | 0.163 | 4515 | 15.0 | 103 | |
| Ti-50A Wrought | 50 | 345 | 40 | 276 | 20 | 0.163 | 4515 | 15.0 | 103 | |
| Ti-65 Wrought | 65 | 448 | 55 | 379 | 18 | 0.163 | 4515 | 15.0 | 103 | |
| Alpha alloy | | | | | | | | | | |
| Ti-0.2Pd Wrought | 50 | 345 | 40 | 276 | 20 | 0.163 | 4515 | 14.9 | 103 | |
| Beta alloy | | | | | | | | | | |
| Ti-3Al-13V-11Cr Air cooled from 1400°F | 135 | 931 | 130 | 896 | 16 | 0.176 | 4875 | 14.7 | 101 | |
| Ti-3Al-13V-11Cr Air cooled from 1400°F and aged | 185 | 1280 | 175 | 1210 | 6 | 0.176 | 4875 | 16.0 | 110 | |
| Alpha-beta alloy | | | | | | | | | | |
| Ti-6Al-4V Annealed | 130 | 896 | 120 | 827 | 10 | 0.160 | 4432 | 16.5 | 114 | |
| Ti-6Al-4V Quenched and aged at 1000°F | 160 | 1100 | 150 | 1030 | 7 | 0.160 | 4432 | 16.5 | 114 | |

APPENDIX 12 Properties of Bronzes, Brasses, and Other Copper Alloys

| Material | UNS number designation | Tensile strength | | Yield strength | | Modulus of elasticity | | Density | |
|--|------------------------|------------------|-------|----------------|-------|-----------------------|-----------------------|---------|--------------------|
| | | (ksi) | (MPa) | (ksi) | (MPa) | (% elongation) | (10 ⁶ psi) | (GPa) | lb/in ³ |
| Bronzes—Wrought bars, rods | | | | | | | | | |
| Leaded phosphor bronze | C54400-H04 | 68 | 469 | 57 | 393 | 20 | 15.0 | 103 | 0.320 |
| Silicon bronze | C65500-H06 | 108 | 745 | 60 | 414 | 13 | 15.0 | 103 | 0.308 |
| Manganese bronze | C67500-H02 | 84 | 579 | 60 | 414 | 19 | 15.0 | 103 | 0.302 |
| Bronzes—Sand cast | | | | | | | | | |
| Manganese bronze | C86200-M01 | 95 | 655 | 48 | 331 | 20 | 15.0 | 103 | 0.288 |
| Bearing bronze | C93200-M01 | 35 | 241 | 18 | 124 | 20 | 14.5 | 100 | 0.322 |
| Aluminum bronze | C95400-M01 | 85 | 586 | 35 | 241 | 18 | 15.5 | 107 | 0.269 |
| Copper-nickel-iron alloy | C96200-M01 | 45 | 310 | 25 | 172 | 20 | 18.0 | 124 | 0.323 |
| Copper-nickel-zinc alloy (also called nickel silver) | C97300-M01 | 35 | 241 | 17 | 117 | 20 | 16.0 | 110 | 0.321 |
| Brasses—Wrought bars, rods | | | | | | | | | |
| Extra high-leaded brass | C35600-H02 | 55 | 379 | 25 | 172 | 10 | 97 | 14.0 | 0.307 |
| Free-cutting brass | C36000-H04 | 65 | 448 | 30 | 207 | 6 | 103 | 15.0 | 0.307 |
| Free-cutting Muntz metal | C37000-H04 | 80 | 552 | 60 | 414 | 6 | 103 | 15.0 | 0.304 |
| Naval brass | C46400-H02 | 75 | 517 | 53 | 365 | 20 | 103 | 15.0 | 0.304 |

Notes:

- Strength and ductility values listed are typical at the approximate middle of available ranges and not guaranteed.
- Properties vary widely for different section sizes, strain hardening, and thermal treatment conditions.
- Strain hardening conditions: 1/8 hard (H00), 1/4 hard (H01), 1/2 hard (H02), 3/4 hard (H03), full hard (H04), extra hard (H06), spring (H08), and higher.
- More details and data for numerous additional alloys can be found at www.copper.org/resources/properties.

APPENDIX 13 Typical Properties of Selected Plastics

| Material | Type | Tensile strength | | Tensile modulus | | Flexural strength | | Flexural modulus | | Impact strength IZOD (ft·lb/in of notch) |
|---|---|---------------------|------------------|-----------------|--------------|----------------------|------------------|---------------------|--------------------------|--|
| | | (ksi) | (MPa) | (ksi) | (MPa) | (ksi) | (MPa) | (ksi) | (MPa) | |
| ¹ Nylon 66 30% Glass | Dry 50% R.H. | 21.0 15.0 | 146 102 | 1200 800 | 8700 5500 | 32.0 | 221 | 1100 | 7900 | |
| ² ABS | Medium-impact High-impact | 6.0 5.0 | 41 34 | 360 250 | 2480 1720 | 11.5 8.0 | 79 55 | 310 260 | 2140 1790 | 4.0 7.0 |
| Polycarbonate | General-purpose | 9.0 | 62 | 340 | 2340 | 11.0 | 76 | 300 | 2070 | 12.0 |
| Acrylic | Standard High-impact | 10.5 5.4 | 72 37 | 430 220 | 2960 1520 | 16.0 7.0 | 11.0 48 | 460 230 | 3170 1590 | 0.4 1.2 |
| ³ PVC | Rigid | 6.0 | 41 | 350 | 2410 | | | 300 | 2070 | 0.4–20.0 (varies widely) |
| Polyimide | 25% graphite powder filler Glass-fiber filler | 5.7 27.0 50.0 | 39 186 345 | | | 12.8 50.0 70.0 | 88 345 483 | 900 3250 4000 | 6210 22 400 27 580 | 0.25 17.0 13.0 |
| Acetal | Copolymer | 8.0 | 55 | 410 | 2830 | 13.0 | 90 | 375 | 2590 | 1.3 |
| Polyurethane | Elastomer | 5.0 | 34 | 100 | 690 | 0.6 | 4 | | | No break |
| Phenolic | General | 6.5 | 45 | 1100 | 7580 | 9.0 | 62 | 1100 | 7580 | 0.3 |
| ⁴ Polyester with glass-fiber mat reinforcement (approx. 30% glass by weight) | Lay-up, contact mold Cold-press molded Compression molded | | | | | 16.0 22.0 10.0 | 110 152 69 | 800 1300 1300 | 5520 8960 8960 | |

Notes: ¹Also known as Polyamide 66 or PA 66.

²Acrylonitrile-butadiene-styrene.

³Polyvinyl chloride.

⁴Polyethylene terephthalate (PET) thermoplastic polyester resin.


APPENDIX 14 Beam-Deflection Formulas

TABLE A14-1 Beam-Deflection Formulas for Simply Supported Beams

$$y_B = y_{\max} = \frac{-PL^3}{48EI} \text{ at center}$$

Between *A* and *B*:

$$y = \frac{-Px}{48EI} (3L^2 - 4x^2)$$

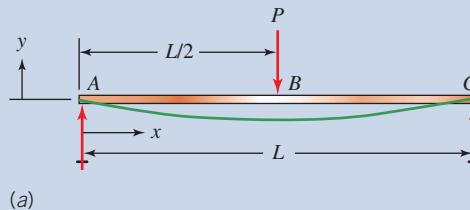

$$y_{\max} = \frac{-Pab(L+b)\sqrt{3a(L+b)}}{27EIa}$$

at $x_1 = \sqrt{a(L+b)/3}$


$$y_B = \frac{-Pa^2b^2}{3EIa} \text{ at load}$$

Between *A* and *B* (the longer segment):

$$y = \frac{-Pbx}{6EI} (L^2 - b^2 - x^2)$$

Between *B* and *C* (the shorter segment):

$$y = \frac{-Pav}{6EI} (L^2 - v^2 - a^2)$$

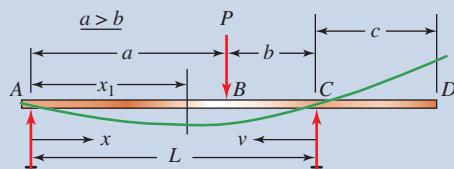At end of overhang at *D*:


$$y_D = \frac{Pabc}{6EI} (L+a)$$

$$y_E = y_{\max} = \frac{-Pa}{24EI} (3L^2 - 4a^2) \text{ at center}$$

$$y_B = y_C = \frac{-Pa^2}{6EI} (3L - 4a) \text{ at loads}$$

Between *A* and *B*:

$$y = \frac{-Px}{6EI} (3aL - 3a^2 - x^2)$$

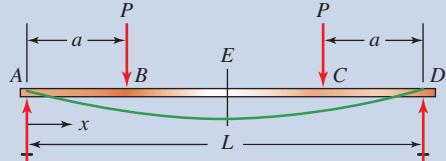Between *B* and *C*:

$$y = \frac{-Pa}{6EI} (3Lx - 3x^2 - a^2)$$


$$y_B = y_{\max} = \frac{-5wL^4}{384EI} = \frac{-5WL^3}{384EI} \text{ at center}$$

Between *A* and *B*:

$$y = \frac{-wx}{24EI} (L^3 - 2Lx^2 + x^3)$$

At *D* at end:

$$y_D = \frac{wL^3a}{24EI}$$

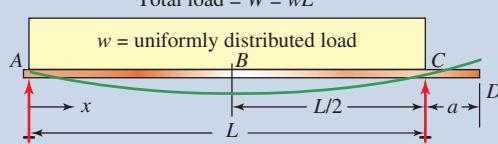

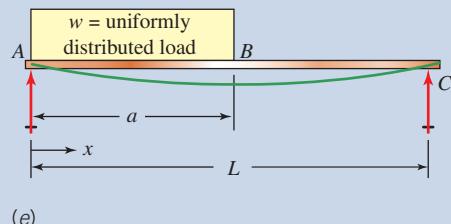
(Continued)

TABLE A14-1 (Continued)Between *A* and *B*:

$$y = \frac{-wx}{24EI/L} [a^2(2L - a)^2 - 2ax^2(2L - a) + Lx^3]$$

Between *B* and *C*:


$$y = \frac{-wa^2(L - x)}{24EI/L} (4Lx - 2x^2 - a^2)$$

 M_B = concentrated moment at *B*Between *A* and *B*:

$$y = \frac{-M_B}{6EI} \left[\left(6a - \frac{3a^2}{L} - 2L \right)x - \frac{x^3}{L} \right]$$

Between *B* and *C*:


$$y = \frac{M_B}{6EI} \left[3a^2 + 3x^2 - \frac{x^3}{L} - \left(2L + \frac{3a^2}{L} \right)x \right]$$

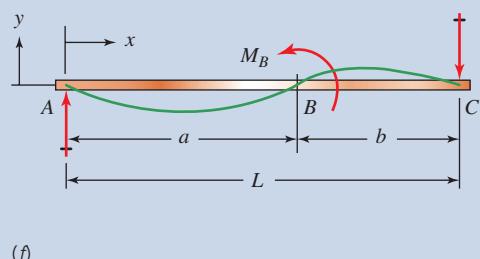At *C* at end of overhang:

$$y_C = \frac{-Pa^2}{3EI} (L + a)$$

At *D*, maximum upward deflection:


$$y_D = 0.06415 \frac{Pal^2}{EI}$$

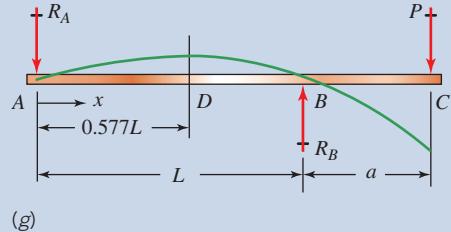At *C* at center:

$$y = \frac{-W(L - 2a)^3}{384EI} \left[\frac{5}{L}(L - 2a) - \frac{24}{L} \left(\frac{a^2}{L - 2a} \right) \right]$$

At *A* and *E* at ends:


$$y = \frac{-W(L - 2a)^3 a}{24EI/L} \left[-1 + 6 \left(\frac{a}{L - 2a} \right)^2 + 3 \left(\frac{a}{L - 2a} \right)^3 \right]$$

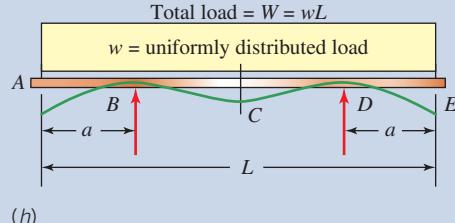At *C* at center:

$$y = \frac{PL^2 a}{8EI}$$

At *A* and *E* at ends at loads:

$$y = \frac{-Pa^2}{3EI} \left(a + \frac{3}{2}L \right)$$

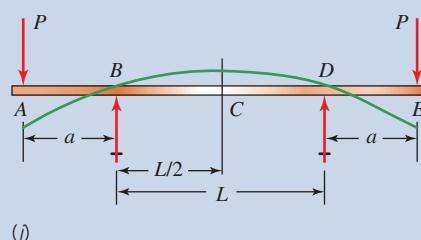At *B*:

$$y = 0.03208 \frac{wa^2 L^2}{EI}$$

At *D* at end:

$$y = \frac{-wa^3}{24EI} (4L + 3a)$$

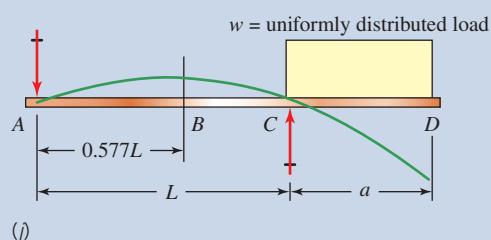



TABLE A14-2 Beam-Deflection Formulas for Cantilevers

At B at end:

$$y_B = y_{\max} = \frac{-PL^3}{3EI}$$

Between A and B :

$$y = \frac{-Px^2}{6EI} (3L - x)$$

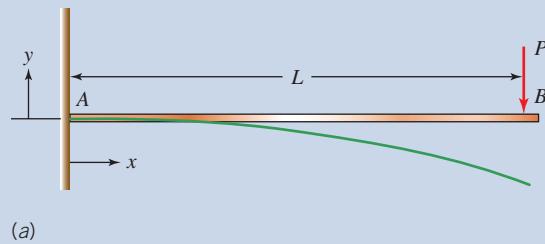

At B at load:


$$y_B = \frac{-Pa^3}{3EI}$$

At C at end:

$$y_C = y_{\max} = \frac{-Pa^2}{6EI} (3L - a)$$

Between A and B :

$$y = \frac{-Px^2}{6EI} (3a - x)$$

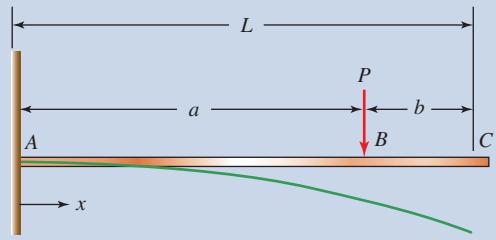

Between B and C :

$$y = \frac{-Pa^2}{6EI} (3x - a)$$


$$W = \text{total load} = wL$$

At B at end:

$$y_B = y_{\max} = \frac{-WL^3}{8EI}$$

Between A and B :

$$y = \frac{-Wx^2}{24EI} [2L^2 + (2L - x)^2]$$

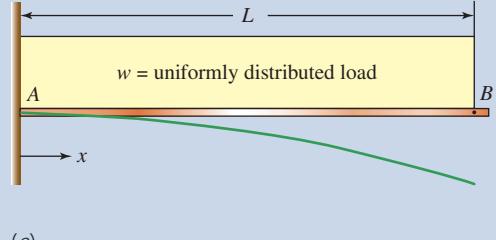


$$M_B = \text{concentrated moment at end}$$

At B at end:

$$y_B = y_{\max} = \frac{-M_B L^2}{2EI}$$

Between A and B :

$$y = \frac{-M_B x^2}{2EI}$$

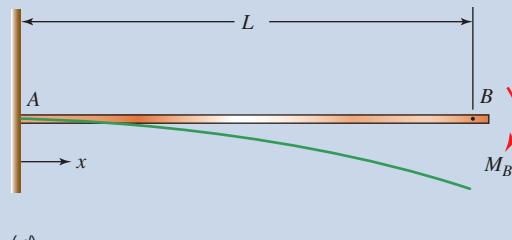

Source: *Engineering Data for Aluminum Structures* (Washington, DC: The Aluminum Association, 1986), pp. 63–77.

TABLE A14-3 Beam Diagrams and Beam-Deflection Formulas for Statically Indeterminate Beams*Deflections*At B at load:

$$y_B = \frac{-7}{768} \frac{PL^3}{EI}$$

 y_{\max} is at $v = 0.447L$ at D :


$$y_D = y_{\max} = \frac{-PL^3}{107EI}$$

Between A and B :

$$y = \frac{-Px^2}{96EI} (9L - 11x)$$

Between B and C :

$$y = \frac{-Pv}{96EI} (3L^2 - 5v^2)$$

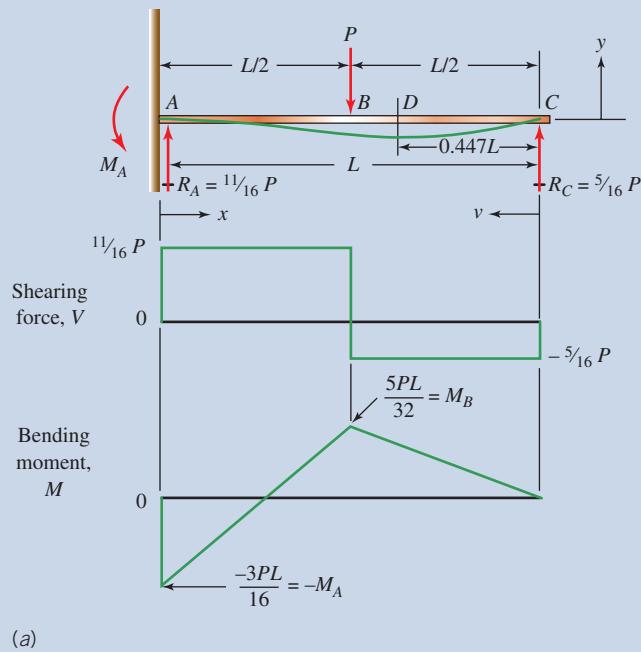*Reactions*

$$R_A = \frac{Pb}{2L^3} (3L^2 - b^2)$$

$$R_C = \frac{Pa^2}{2L^3} (b + 2L)$$

Moments

$$M_A = \frac{-Pab}{2L^2} (b + L)$$

$$M_B = \frac{Pa^2b}{2L^3} (b + 2L)$$

*Deflections*At B at load:

$$y_B = \frac{-Pa^3b^2}{12EI L^3} (3L + b)$$

Between A and B :

$$y = \frac{-Px^2b}{12EI L^3} (3C_1 - C_2x)$$

$$C_1 = aL(L + b); C_2 = (L + a)(L + b) + aL$$

Between B and C :

$$y = \frac{-P\alpha^2 v}{12EI L^3} [3L^2 b - v^2 (3L - a)]$$

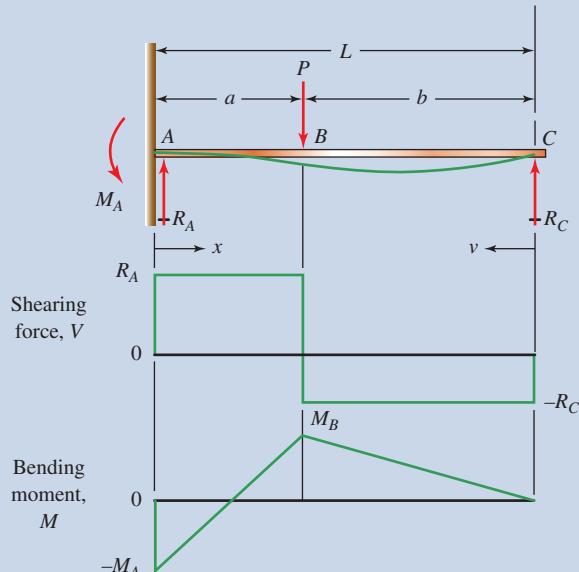


TABLE A14-3 (Continued)

Reactions

$$R_A = \frac{5}{8}W$$

$$R_B = \frac{3}{8}W$$

Moments

$$M_A = -0.125WL$$

$$M_E = 0.0703WL$$

Deflections

At C at $x = 0.579L$:


$$y_C = y_{\max} = \frac{-WL^3}{185EI}$$

At D at center:

$$y_D = \frac{-WL^3}{192EI}$$

Between A and B:

$$y = \frac{-Wx^2(L-x)}{48EIL}(3L-2x)$$

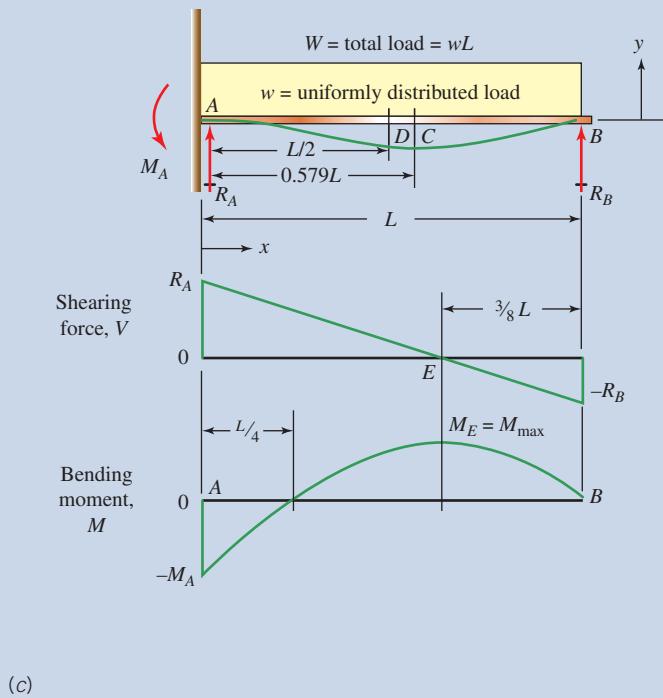

(c)

Reactions

$$R_A = \frac{-3Pa}{2L}$$

$$R_B = P\left(1 + \frac{3a}{2L}\right)$$

Moments


$$M_A = \frac{Pa}{2}$$

$$M_B = -Pa$$

Deflection

At C at end:

$$y_C = \frac{-PL^3}{EI} \left(\frac{a^2}{4L^2} + \frac{a^3}{3L^3} \right)$$

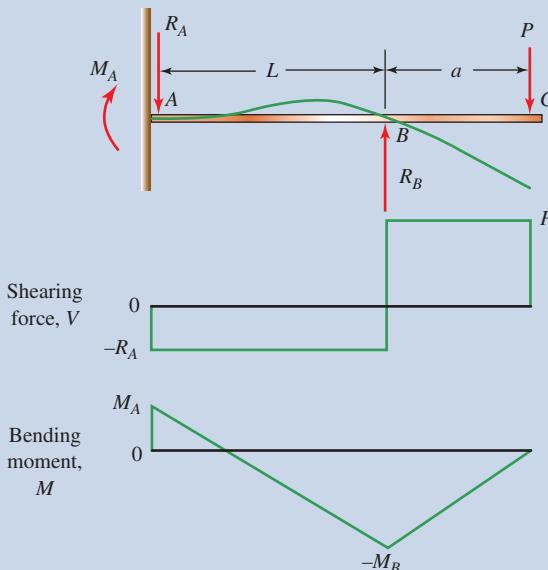

(d)

(Continued)

TABLE A14-3 (Continued)

Moments

$$M_B = PL/8; M_A = M_C = -PL/8$$


Deflections

At B at center:

$$y_B = y_{\max} = \frac{-PL^3}{192EI}$$

Between A and B :

$$y = \frac{-Px^2}{48EI}(3L - 4x)$$

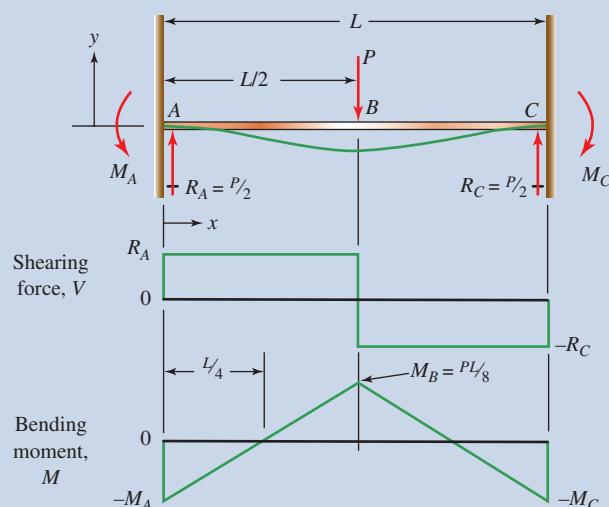

(e)

Reactions

$$R_A = \frac{Pb^2}{L^3}(3a + b)$$

$$R_C = \frac{Pa^2}{L^3}(3b + a)$$

Moments

$$M_A = \frac{-Pab^2}{L^2}$$

$$M_B = \frac{2Pa^2b^2}{L^3}$$

$$M_C = \frac{-Pa^2b}{L^2}$$

Deflections

At B at load:

$$y_B = \frac{-Pa^3b^3}{3EI L^3}$$

At D at $x_1 = \frac{2aL}{3a + b}$


$$y_D = y_{\max} = \frac{-2Pa^3b^2}{3EI(3a + b)^2}$$

Between A and B (longer segment):

$$y = \frac{-Px^2b^2}{6EI L^3}[2a(L - x) + L(a - x)]$$

Between B and C (shorter segment):

$$y = \frac{-Pv^2a^2}{6EI L^3}[2b(L - v) + L(b - v)]$$

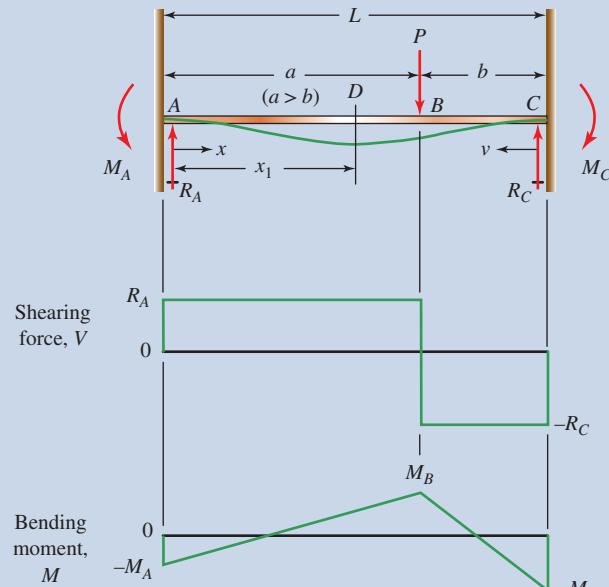

(f)

TABLE A14-3 (Continued)**Moments**

$$M_A = M_C = \frac{-WL}{12}$$



$$M_B = \frac{WL}{24}$$

DeflectionsAt B at center:

$$y_B = y_{\max} = \frac{-WL^3}{384EI}$$

Between A and C :

$$y = \frac{-wx^2}{24EI}(L - x)^2$$

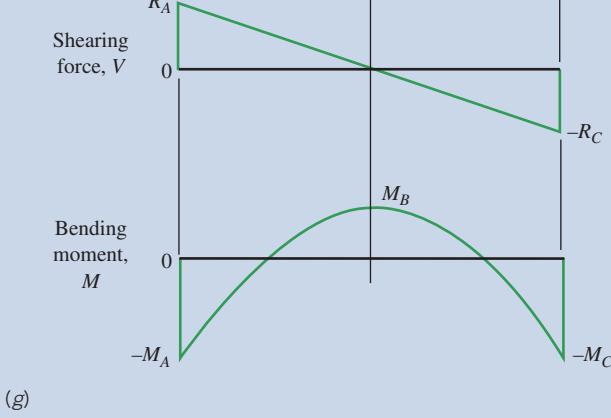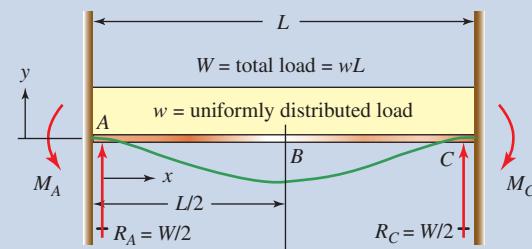**Reactions**

$$R_A = R_C = \frac{3wL}{8}$$

$$R_B = 1.25wL$$

Shearing forces

$$V_A = V_C = R_A = R_C = \frac{3wL}{8}$$

$$V_B = \frac{5wL}{8}$$

Moments

$$M_D = M_E = 0.0703wL^2$$



$$M_B = -0.125wL^2$$

DeflectionsAt $x_1 = 0.4215L$ from A or C :

$$y_{\max} = \frac{-WL^4}{185EI}$$

Between A and B :

$$y = \frac{-w}{48EI}(L^3x - 3Lx^3 + 2x^4)$$

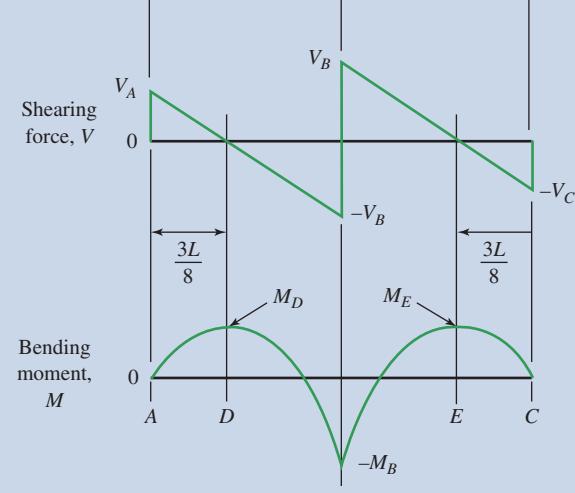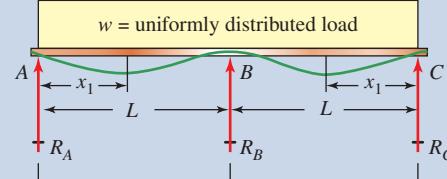

(Continued)

TABLE A14-3 (Continued)

Reactions

$$R_A = R_D = 0.4wL$$


$$R_B = R_C = 1.10wL$$

Moments

$$M_E = M_F = 0.08wL^2$$

$$M_B = M_C = -0.10wL^2 = M_{\max}$$

$$M_G = 0.025wL^2$$

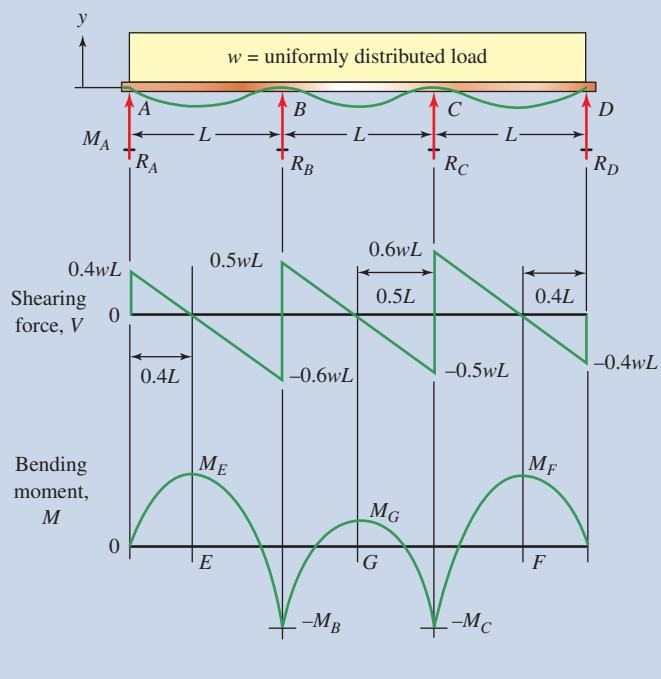

Reactions

$$R_A = R_E = 0.393wL$$

$$R_B = R_D = 1.143wL$$

$$R_C = 0.928wL$$

Shearing forces

$$V_A = +0.393wL$$

$$-V_B = -0.607wL$$

$$+V_B = +0.536wL$$

$$-V_C = -0.464wL$$

$$+V_C = +0.464wL$$

$$-V_D = -0.536wL$$

$$+V_D = +0.607wL$$

$$-V_E = -0.393wL$$


Moments

$$M_B = M_D = -0.1071wL^2 = M_{\max}$$

$$M_F = M_I = 0.0772wL^2$$

$$M_C = -0.0714wL^2$$

$$M_G = M_H = 0.0364wL^2$$

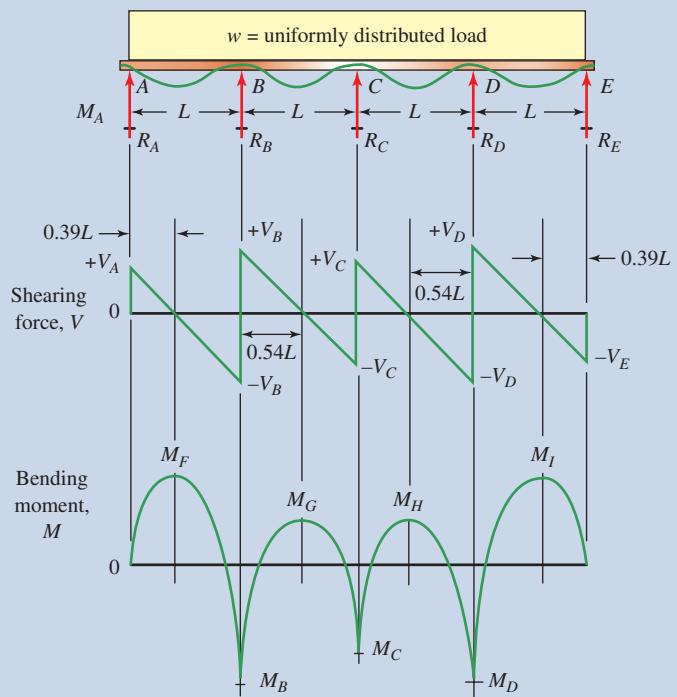

Source: *Engineering Data for Aluminum Structures* (Washington, DC: The Aluminum Association, 1986), pp. 63–77.

APPENDIX 15 Commercially Available Shapes Used for Load-Carrying Members

| Table No. | Units | Description |
|-----------|-------|---|
| 15-1 | U.S. | Angles: Steel and aluminum, equal and unequal legs, L-shapes, larger sizes: 2 in to 8 in |
| 15-2 | U.S. | Angles: Steel and aluminum, equal and unequal legs, smaller sizes: 0.50 in to 2.5 in |
| 15-3 | SI | Angles: Steel and aluminum, equal and unequal legs, 10 mm to 100 mm |
| 15-4 | U.S. | Channels: Steel and aluminum, American Standard, C-shapes, larger sizes: 3 in to 15 in depth |
| 15-5 | U.S. | Channels: Aluminum, smaller sizes: 0.5 in to 2.0 in depth |
| 15-6 | U.S. | Channels: Aluminum, Aluminum Association Standard shapes, larger sizes: 2 in to 12 in depth |
| 15-7 | SI | Channels: Aluminum, European standard shapes: 10 mm to 160 mm depth |
| 15-8 | SI | Channels: Steel, European standard shapes: 30 mm to 400 mm depth |
| 15-9 | U.S. | I-beam shapes: Steel wide-flange shapes, W-shapes: 4 in to 24 in depth |
| 15-10 | U.S. | I-beam shapes: Steel, American Standard, S-shapes: 3 in to 24 in depth |
| 15-11 | U.S. | I-beam shapes: Aluminum Association standard shapes: 3 in to 12 in depth |
| 15-12 | U.S. | I-beam shapes: Aluminum, small extruded shapes: 0.70 in to 2.11 in depth |
| 15-13 | SI | I-beam shapes: Steel, European standard shapes: 80 mm to 600 mm depth |
| 15-14 | U.S. | Hollow tubing: Steel, square and rectangular, standard structural HSS shapes: 2 in to 8 in depth |
| 15-15 | U.S. | Hollow tubing: Steel and aluminum, square and rectangular, smaller sizes: 0.375 in to 3.00 in depth |
| 15-16 | SI | Hollow tubing: Steel and aluminum, square and rectangular: 20 mm to 300 mm depth |
| 15-17 | U.S. | Pipe: Steel, American National Standard Schedule 40 and AISC standard: 1/8 in to 18 in sizes |
| 15-18 | U.S. | Mechanical tubing: Steel and aluminum: 0.50 in to 5.0 in outside diameters |
| 15-19 | SI | Mechanical tubing: Steel and aluminum: 10 mm to 150 mm outside diameters |

Notes: Each table lists sample sizes of shapes commonly used for beam, column, or tension members.

Included are standard size designations, detailed dimensions, and section properties.

Section properties include cross-sectional area, moment of inertia, and section modulus.

For some sections, torsional moment of inertia, section modulus, and radius of gyration are also listed.

Numerous additional shapes are typically commercially available.


Internet sites for companies supplying each kind of shape are listed to aid in finding other sizes.

However, not all sites include the section properties data. See Appendix 1 for formulas for section properties.

Actual data listed obtained from a variety of sources.

Angles: Equal and unequal legs

Tables 15-1 to 15-3

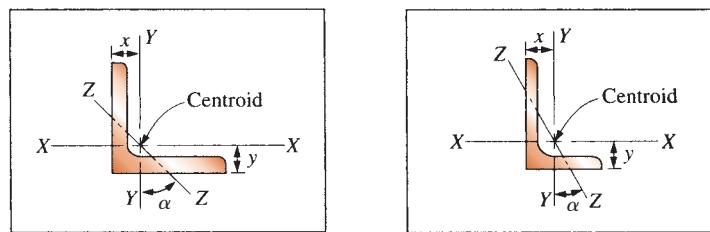

U.S. Units

TABLE 15-1 Angles: Steel and Aluminum, Equal and Unequal Legs, L-Shapes, Larger Sizes: 2 in to 8 in

| Designation | Area <i>A</i> (in ²) | Weight per foot (lb/ft) | *Section properties | | | | | | | |
|-------------|-------------------------------------|----------------------------|---|---|---------------|---|---|---------------|---------------|----------------|
| | | | Axis X-X | | | Axis Y-Y | | | Axis Z-Z | |
| | | | <i>I_x</i> (in ⁴) | <i>S_x</i> (in ³) | <i>y</i> (in) | <i>I_y</i> (in ⁴) | <i>S_y</i> (in ³) | <i>x</i> (in) | <i>r</i> (in) | <i>α</i> (deg) |
| L8×8×1 | 15.0 | 51.0 | 89.0 | 15.8 | 2.37 | 89.0 | 15.8 | 2.37 | 1.56 | 45.0 |
| L8×8×1/2 | 7.75 | 26.4 | 48.6 | 8.36 | 2.19 | 48.6 | 8.36 | 2.19 | 1.59 | 45.0 |
| L8×4×1 | 11.0 | 37.4 | 69.6 | 14.1 | 3.05 | 11.6 | 3.94 | 1.05 | 0.846 | 13.9 |
| L8×4×1/2 | 5.75 | 19.6 | 38.5 | 7.49 | 2.86 | 6.74 | 2.15 | 0.859 | 0.865 | 14.9 |
| L6×6×3/4 | 8.44 | 28.7 | 28.2 | 6.66 | 1.78 | 28.2 | 6.66 | 1.78 | 1.17 | 45.0 |
| L6×6×3/8 | 4.36 | 14.9 | 15.4 | 3.53 | 1.64 | 15.4 | 3.53 | 1.64 | 1.19 | 45.0 |
| L6×4×3/4 | 6.94 | 23.6 | 24.5 | 6.25 | 2.08 | 8.68 | 2.97 | 1.08 | 0.860 | 23.2 |
| L6×4×3/8 | 3.61 | 12.3 | 13.5 | 3.32 | 1.94 | 4.90 | 1.60 | 0.941 | 0.877 | 24.0 |
| L4×4×1/2 | 3.75 | 12.8 | 5.56 | 1.97 | 1.18 | 5.56 | 1.97 | 1.18 | 0.782 | 45.0 |
| L4×4×1/4 | 1.94 | 6.6 | 3.04 | 1.05 | 1.09 | 3.04 | 1.05 | 1.09 | 0.795 | 45.0 |
| L4×3×1/2 | 3.25 | 11.1 | 5.05 | 1.89 | 1.33 | 2.42 | 1.12 | 0.827 | 0.639 | 28.5 |
| L4×3×1/4 | 1.69 | 5.8 | 2.77 | 1.00 | 1.24 | 1.36 | 0.599 | 0.896 | 0.651 | 29.2 |
| L3×3×1/2 | 2.75 | 9.4 | 2.22 | 1.07 | 0.932 | 2.22 | 1.07 | 0.932 | 0.584 | 45.0 |
| L3×3×1/4 | 1.44 | 4.9 | 1.24 | 0.577 | 0.842 | 1.24 | 0.577 | 0.842 | 0.592 | 45.0 |
| L2×2×3/8 | 1.36 | 4.7 | 0.479 | 0.351 | 0.636 | 0.479 | 0.351 | 0.636 | 0.389 | 45.0 |
| L2×2×1/4 | 0.938 | 3.19 | 0.348 | 0.247 | 0.592 | 0.348 | 0.247 | 0.592 | 0.391 | 45.0 |
| L2×2×1/8 | 0.484 | 1.65 | 0.190 | 0.131 | 0.546 | 0.190 | 0.131 | 0.546 | 0.398 | 45.0 |

Note: **I* = moment of inertia; *S* = section modulus; *r* = radius of gyration.


Example designation: L4×3×1/2.

4 = length of longer leg (in); 3 = length of shorter leg (in); 1/2 = thickness of legs (in).

Z-Z is axis of minimum moment of inertia (*I*) and radius of gyration (*r*).

Sources for data for additional sizes: Central Steel & Wire Co., multiple locations.

Earl M. Jorgensen Co., multiple locations.

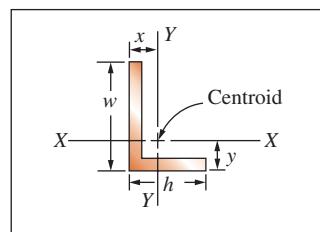

U.S. Units

TABLE 15-2 Angles: Steel and Aluminum, Equal and Unequal Legs, Smaller Sizes: 0.50 in to 2.5 in

| Ref. | Short side <i>h</i> (in) | Long side <i>w</i> (in) | Thickness <i>t</i> (in) | Area <i>A</i> (in ²) | **Weight/ft | | Axis <i>X-X</i> | | | Axis <i>Y-Y</i> | | |
|------|--------------------------------|-------------------------------|-------------------------------|--|------------------|---------------------|--|--|------------------|--|--|------------------|
| | | | | | Steel (lb/ft) | Aluminum (lb/ft) | <i>I_x</i> (in ⁴) | <i>S_x</i> (in ³) | <i>y</i> (in) | <i>I_y</i> (in ⁴) | <i>S_y</i> (in ³) | <i>x</i> (in) |
| | | | | | | | | | | | | |
| a | 1/2 | 1/2 | 1/8 | 0.109 | 0.372 | 0.131 | 0.00230 | 0.00698 | 0.170 | 0.00230 | 0.00698 | 0.170 |
| b | 5/8 | 5/8 | 1/8 | 0.141 | 0.478 | 0.169 | 0.00479 | 0.0113 | 0.201 | 0.00479 | 0.0113 | 0.201 |
| c | 7/8 | 7/8 | 1/8 | 0.203 | 0.691 | 0.244 | 0.01420 | 0.0233 | 0.264 | 0.0142 | 0.0233 | 0.264 |
| d | 5/8 | 1 | 1/8 | 0.188 | 0.637 | 0.225 | 0.00553 | 0.0121 | 0.167 | 0.0185 | 0.0286 | 0.354 |
| e | 3/4 | 1 | 1/8 | 0.203 | 0.691 | 0.244 | 0.00947 | 0.0174 | 0.207 | 0.0197 | 0.0295 | 0.332 |
| f | 1 | 1 | 1/8 | 0.234 | 0.797 | 0.281 | 0.0217 | 0.0309 | 0.296 | 0.0217 | 0.0309 | 0.296 |
| g | 1 | 1 | 1/4 | 0.438 | 1.487 | 0.525 | 0.0369 | 0.0558 | 0.339 | 0.0369 | 0.0558 | 0.339 |
| h | 1 1/4 | 1 1/4 | 1/8 | 0.297 | 1.009 | 0.356 | 0.0439 | 0.0493 | 0.359 | 0.0439 | 0.0493 | 0.359 |
| i | 1 1/4 | 1 1/4 | 1/4 | 0.563 | 1.912 | 0.675 | 0.0767 | 0.0905 | 0.403 | 0.0767 | 0.0905 | 0.403 |
| j | 7/8 | 13/8 | 1/8 | 0.266 | 0.903 | 0.319 | 0.0162 | 0.0247 | 0.217 | 0.0509 | 0.0560 | 0.467 |
| k | 1 1/4 | 1 1/2 | 3/16 | 0.480 | 1.633 | 0.577 | 0.0651 | 0.0726 | 0.353 | 0.1035 | 0.1013 | 0.478 |
| l | 1 1/2 | 1 1/2 | 1/8 | 0.359 | 1.222 | 0.431 | 0.0778 | 0.0721 | 0.421 | 0.0778 | 0.0721 | 0.421 |
| m | 1 1/2 | 1 1/2 | 1/4 | 0.688 | 2.337 | 0.825 | 0.1385 | 0.1340 | 0.466 | 0.139 | 0.1340 | 0.466 |
| n | 1 1/4 | 1 3/4 | 1/8 | 0.359 | 1.222 | 0.431 | 0.0486 | 0.0515 | 0.307 | 0.113 | 0.0943 | 0.557 |
| o | 1 3/4 | 1 3/4 | 1/8 | 0.422 | 1.434 | 0.506 | 0.1256 | 0.0992 | 0.484 | 0.126 | 0.0992 | 0.484 |
| p | 1 3/4 | 1 3/4 | 1/4 | 0.813 | 2.762 | 0.975 | 0.2272 | 0.1860 | 0.529 | 0.227 | 0.186 | 0.529 |
| q | 1 1/4 | 2 | 3/16 | 0.574 | 1.952 | 0.689 | 0.0707 | 0.0752 | 0.311 | 0.232 | 0.177 | 0.686 |
| r | 1 1/2 | 2 | 1/8 | 0.422 | 1.434 | 0.506 | 0.0847 | 0.0748 | 0.368 | 0.173 | 0.125 | 0.618 |
| s | 1 1/2 | 2 | 1/4 | 0.813 | 2.762 | 0.975 | 0.1515 | 0.139 | 0.413 | 0.316 | 0.236 | 0.663 |
| t | 1 1/2 | 2 1/2 | 3/16 | 0.715 | 2.430 | 0.858 | 0.1275 | 0.111 | 0.352 | 0.461 | 0.279 | 0.852 |

Notes: **I* = moment of inertia; *S* = section modulus; See sketch for *X-X* and *Y-Y* axes and their locations *x* and *y*.

Values are for perfectly square corners. Some vendors apply radii to Inside and/or outside corners.

Numerous additional sizes available. Consult vendors.

** Using density of steel = 0.283 lb_m/in³; density of aluminum = 0.100 lb_m/in³. (May range from 0.095 lb_m in³ to 0.102 lb_m in³.)

Some sizes are also available in stainless steel. Check with vendor.


Sources for data for additional sizes: Reliance Steel & Aluminum Co./Earl M. Jorgensen Co., multiple locations.

Central Steel & Wire Co., multiple locations.

OnlineMetals.com, Seattle, WA.

Paramount Extrusions, Co., Paramount, CA.

Metals Depot, Winchester, KY.

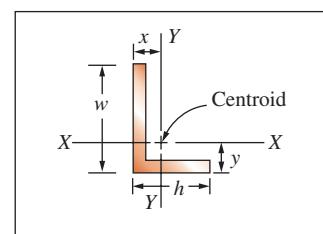

SI Units

TABLE 15-3 Angles: Steel and Aluminum, Equal and Unequal Legs, 10 mm to 100 mm

| Ref. | Short side h (mm) | Long side w (mm) | Thickness t (mm) | Area A (mm ²) | **Weight/m | | Axis X-X | | | Axis Y-Y | | |
|------|---------------------------|--------------------------|--------------------------|-----------------------------------|----------------|-------------------|-----------------------------|-----------------------------|-------------|-----------------------------|-----------------------------|-------------|
| | | | | | Steel (N/m) | Aluminum (N/m) | I_x (mm ⁴) | S_x (mm ³) | y (mm) | I_y (mm ⁴) | S_y (mm ³) | x (mm) |
| a | 10 | 15 | 3 | 66.0 | 4.973 | 1.79 | 477 | 69.1 | 3.09 | 1375 | 146 | 5.59 |
| b | 10 | 20 | 3 | 81.0 | 6.103 | 2.20 | 520 | 72.1 | 2.80 | 3140 | 257 | 7.80 |
| c | 15 | 20 | 3 | 96.0 | 7.233 | 2.61 | 1743 | 163 | 4.31 | 3653 | 277 | 6.81 |
| d | 15 | 25 | 3 | 111 | 8.363 | 3.01 | 1856 | 168 | 3.93 | 6876 | 428 | 8.93 |
| e | 15 | 30 | 3 | 126 | 9.493 | 3.42 | 1946 | 171 | 3.64 | 1.146E+04 | 608 | 11.1 |
| f | 20 | 20 | 3 | 111 | 8.363 | 3.01 | 4030 | 290 | 6.09 | 4030 | 290 | 6.09 |
| g | 20 | 30 | 3 | 141 | 10.623 | 3.83 | 4551 | 306 | 5.12 | 1.272E+04 | 640 | 10.1 |
| h | 20 | 40 | 3 | 171 | 12.883 | 4.64 | 4897 | 316 | 4.48 | 2.829E+04 | 1109 | 14.5 |
| i | 25 | 25 | 3 | 141 | 10.623 | 3.83 | 8204 | 465 | 7.35 | 8.204E+03 | 465 | 7.35 |
| j | 30 | 30 | 5 | 275 | 20.719 | 7.47 | 2.216E+04 | 1072 | 9.32 | 2.216E+04 | 1072 | 9.32 |
| k | 30 | 50 | 4 | 304 | 22.904 | 8.25 | 2.152E+04 | 941 | 7.13 | 7.800E+04 | 2373 | 17.1 |
| l | 40 | 40 | 5 | 375 | 28.253 | 10.18 | 5.561E+04 | 1974 | 11.8 | 5.561E+04 | 1974 | 11.8 |
| m | 40 | 60 | 5 | 475 | 35.787 | 12.90 | 6.270E+04 | 2081 | 9.87 | 1.740E+05 | 4334 | 19.9 |
| n | 40 | 80 | 6 | 684 | 51.533 | 18.57 | 7.836E+04 | 2525 | 8.96 | 4.526E+05 | 8868 | 29.0 |
| o | 50 | 50 | 5 | 475 | 35.787 | 12.90 | 1.125E+05 | 3155 | 14.3 | 1.125E+05 | 3155 | 14.3 |
| p | 50 | 75 | 5 | 600 | 45.205 | 16.29 | 1.266E+05 | 3322 | 11.9 | 3.485E+05 | 6884 | 24.4 |
| q | 50 | 100 | 6 | 864 | 65.095 | 23.46 | 1.590E+05 | 4039 | 10.6 | 9.058E+05 | 14073 | 35.6 |
| r | 60 | 60 | 6 | 684 | 51.533 | 18.57 | 2.333E+05 | 5452 | 17.2 | 2.333E+05 | 5452 | 17.2 |
| s | 75 | 75 | 6 | 864 | 65.095 | 23.46 | 4.688E+05 | 8677 | 21.0 | 4.688E+05 | 8677 | 21.0 |
| t | 100 | 100 | 10 | 1900 | 143.148 | 51.59 | 1.800E+06 | 25240 | 28.7 | 1.800E+06 | 25240 | 28.7 |

Notes: * I = moment of inertia; S = section modulus; See sketch for $X-X$ and $Y-Y$ axes and their locations x and y .


Values are for perfectly square corners. Some vendors apply radii to inside and/or outside corners.

**Using density of steel = 7680 kg/m³; density of aluminum = 2768 kg/m³. (May range from 2635 kg/m³ to 2829 kg/m³.)

Source for data for additional sizes: Parker Steel Company—Metric Sized Metals, Toledo, Ohio.

Channels

Tables 15–4 to 15–8

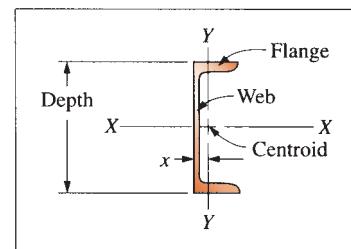

U.S. Units

TABLE 15–4 Channels: Steel and Aluminum, American Standard C-Shapes, Larger Sizes: 3 in to 15 in Depth

| Designation | Area <i>A</i> (in ²) | Depth (in) | Web thickness (in) | *Section properties | | | | | | |
|-------------|--|------------|--------------------------|---------------------|------------------------------|---|---|---|---|---------------|
| | | | | Flange | | Axis <i>X</i> - <i>X</i> | | Axis <i>Y</i> - <i>Y</i> | | |
| | | | | Width (in) | Average thickness (in) | <i>I_x</i> (in ⁴) | <i>S_x</i> (in ³) | <i>I_y</i> (in ⁴) | <i>S_y</i> (in ³) | <i>x</i> (in) |
| C15×50 | 14.7 | 15.00 | 0.716 | 3.716 | 0.650 | 404 | 53.8 | 11.0 | 3.78 | 0.798 |
| C15×40 | 11.8 | 15.00 | 0.520 | 3.520 | 0.650 | 349 | 46.5 | 9.23 | 3.37 | 0.777 |
| C12×30 | 8.82 | 12.00 | 0.510 | 3.170 | 0.501 | 162 | 27.0 | 5.14 | 2.06 | 0.674 |
| C12×25 | 7.35 | 12.00 | 0.387 | 3.047 | 0.501 | 144 | 24.1 | 4.47 | 1.88 | 0.674 |
| C10×30 | 8.82 | 10.00 | 0.673 | 3.033 | 0.436 | 103 | 20.7 | 3.94 | 1.65 | 0.649 |
| C10×20 | 5.88 | 10.00 | 0.379 | 2.739 | 0.436 | 78.9 | 15.8 | 2.81 | 1.32 | 0.606 |
| C9×20 | 5.88 | 9.00 | 0.448 | 2.648 | 0.413 | 60.9 | 13.5 | 2.42 | 1.17 | 0.583 |
| C9×15 | 4.41 | 9.00 | 0.285 | 2.485 | 0.413 | 51.0 | 11.3 | 1.93 | 1.01 | 0.586 |
| C8×18.75 | 5.51 | 8.00 | 0.487 | 2.527 | 0.390 | 44.0 | 11.0 | 1.98 | 1.01 | 0.565 |
| C8×11.5 | 3.38 | 8.00 | 0.220 | 2.260 | 0.390 | 32.6 | 8.14 | 1.32 | 0.781 | 0.571 |
| C6×13 | 3.83 | 6.00 | 0.437 | 2.157 | 0.343 | 17.4 | 5.80 | 1.05 | 0.642 | 0.514 |
| C6×8.2 | 2.40 | 6.00 | 0.200 | 1.920 | 0.343 | 13.1 | 4.38 | 0.693 | 0.492 | 0.511 |
| C5×9 | 2.64 | 5.00 | 0.325 | 1.885 | 0.320 | 8.90 | 3.56 | 0.632 | 0.450 | 0.478 |
| C5×6.7 | 1.97 | 5.00 | 0.190 | 1.750 | 0.320 | 7.49 | 3.00 | 0.479 | 0.378 | 0.484 |
| C4×7.25 | 2.13 | 4.00 | 0.321 | 1.721 | 0.296 | 4.59 | 2.29 | 0.433 | 0.343 | 0.459 |
| C4×5.4 | 1.59 | 4.00 | 0.184 | 1.584 | 0.296 | 3.85 | 1.93 | 0.319 | 0.283 | 0.457 |
| C3×6 | 1.76 | 3.00 | 0.356 | 1.596 | 0.273 | 2.07 | 1.38 | 0.305 | 0.268 | 0.455 |
| C3×4.1 | 1.21 | 3.00 | 0.170 | 1.410 | 0.273 | 1.66 | 1.10 | 0.197 | 0.202 | 0.436 |

Note: Example designation: C15×50.

15 = depth (in); 50 = weight per unit length (lb/ft).


**I* = moment of inertia; *S* = section modulus.

Sources for data for additional sizes: Central Steel & Wire Co., multiple locations.

Reliance Steel & Aluminum Co./Earl M. Jorgensen Co., multiple locations.

Metals Depot, Winchester, KY.

OnlineMetals.com, Seattle, WA.

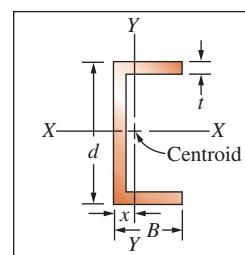

U.S. Units

TABLE 15-5 Channels: Aluminum, Smaller Sizes: 0.5 in to 2.0 in Depth

| Ref. | Depth <i>d</i> (in) | Flange width <i>B</i> (in) | Thickness <i>t</i> (in) | **Weight/ft (lb/ft) | Area <i>A</i> (in ²) | *Section properties | | | | |
|------|---------------------------|-------------------------------------|-------------------------------|------------------------|--|---|---|---|---|---------------|
| | | | | | | Axis <i>X-X</i> | | Axis <i>Y-Y</i> | | |
| | | | | | | <i>I_x</i> (in ⁴) | <i>S_x</i> (in ³) | <i>I_y</i> (in ⁴) | <i>S_y</i> (in ³) | <i>x</i> (in) |
| a | 0.500 | 0.375 | 0.125 | 0.150 | 0.1250 | 0.00358 | 0.0143 | 0.001506 | 0.00688 | 0.156 |
| b | 0.500 | 0.500 | 0.094 | 0.148 | 0.123 | 0.00418 | 0.0167 | 0.00290 | 0.00970 | 0.202 |
| c | 0.500 | 0.750 | 0.125 | 0.263 | 0.219 | 0.0070 | 0.0280 | 0.01145 | 0.0273 | 0.330 |
| d | 0.625 | 0.625 | 0.125 | 0.244 | 0.203 | 0.0105 | 0.0337 | 0.00740 | 0.01999 | 0.255 |
| e | 0.750 | 0.375 | 0.125 | 0.188 | 0.156 | 0.0106 | 0.0282 | 0.001766 | 0.0074 | 0.138 |
| f | 0.750 | 0.750 | 0.125 | 0.300 | 0.250 | 0.0199 | 0.0530 | 0.01345 | 0.02968 | 0.297 |
| g | 1.000 | 0.500 | 0.125 | 0.263 | 0.219 | 0.0285 | 0.057 | 0.00461 | 0.0140 | 0.170 |
| h | 1.000 | 1.000 | 0.125 | 0.413 | 0.344 | 0.0526 | 0.105 | 0.03401 | 0.0549 | 0.381 |
| i | 1.250 | 0.500 | 0.125 | 0.300 | 0.250 | 0.0501 | 0.080 | 0.00496 | 0.0144 | 0.156 |
| j | 1.250 | 1.250 | 0.125 | 0.525 | 0.438 | 0.1097 | 0.176 | 0.06910 | 0.0879 | 0.464 |
| k | 1.500 | 0.500 | 0.125 | 0.338 | 0.281 | 0.080 | 0.106 | 0.00525 | 0.0148 | 0.146 |
| l | 1.750 | 0.500 | 0.125 | 0.375 | 0.313 | 0.118 | 0.135 | 0.00549 | 0.0151 | 0.138 |
| m | 1.750 | 0.750 | 0.125 | 0.450 | 0.375 | 0.159 | 0.182 | 0.01819 | 0.0342 | 0.219 |
| n | 1.750 | 1.000 | 0.125 | 0.525 | 0.438 | 0.201 | 0.229 | 0.04159 | 0.0605 | 0.313 |
| o | 2.000 | 0.500 | 0.125 | 0.413 | 0.344 | 0.166 | 0.166 | 0.00569 | 0.01539 | 0.131 |

Notes: **I* = moment of inertia; *S* = section modulus; See sketch for *X-X* and *Y-Y* axes and the location *x* for the axis *Y-Y*.

Section properties computed assuming square corners and constant thickness of web and flanges.

** Using density for aluminum of 0.100 lb_m/in³. May range from 0.095 lb_m/in³ to 0.102 lb_m/in³ for different alloys.


Sources for data for additional sizes: Reliance Steel & Aluminum Co./Earl M. Jorgensen Co., multiple locations.

Central Steel & Wire Co., multiple locations.

OnlineMetals.com, Seattle, WA.

Paramount Extrusions, Co., Paramount, CA.

Metals Depot, Winchester, KY.

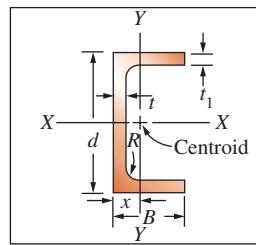

U.S. Units

TABLE 15–6 Channels: Aluminum, Aluminum Association Standard Shapes, Larger Sizes: 2 in to 12 in Depth

| Size | | | | | | | ¹ Section properties | | | | | | |
|---------------------------|---------------------------|--|--------------------------------|---|--------------------------------------|--------------------------------------|---------------------------------|-------|-------|----------|-------|-------|-------|
| Depth <i>d</i> (in) | Width <i>B</i> (in) | Area <i>A</i> (in ²) | Weight ² (lb/ft) | Flange thickness <i>t</i> (in) | Web thickness <i>t</i> (in) | Fillet radius <i>R</i> (in) | Axis X-X | | | Axis Y-Y | | | |
| 2.00 | 1.00 | 0.491 | 0.577 | 0.13 | 0.13 | 0.10 | 0.288 | 0.288 | 0.766 | 0.045 | 0.064 | 0.303 | 0.298 |
| 2.00 | 1.25 | 0.911 | 1.071 | 0.26 | 0.17 | 0.15 | 0.546 | 0.546 | 0.774 | 0.139 | 0.178 | 0.391 | 0.471 |
| 3.00 | 1.50 | 0.965 | 1.135 | 0.20 | 0.13 | 0.25 | 1.41 | 0.94 | 1.21 | 0.22 | 0.22 | 0.47 | 0.49 |
| 3.00 | 1.75 | 1.358 | 1.597 | 0.26 | 0.17 | 0.25 | 1.97 | 1.31 | 1.20 | 0.42 | 0.37 | 0.55 | 0.62 |
| 4.00 | 2.00 | 1.478 | 1.738 | 0.23 | 0.15 | 0.25 | 3.91 | 1.95 | 1.63 | 0.60 | 0.45 | 0.64 | 0.65 |
| 4.00 | 2.25 | 1.982 | 2.331 | 0.29 | 0.19 | 0.25 | 5.21 | 2.60 | 1.62 | 1.02 | 0.69 | 0.72 | 0.78 |
| 5.00 | 2.25 | 1.881 | 2.212 | 0.26 | 0.15 | 0.30 | 7.88 | 3.15 | 2.05 | 0.98 | 0.64 | 0.72 | 0.73 |
| 5.00 | 2.75 | 2.627 | 3.089 | 0.32 | 0.19 | 0.30 | 11.14 | 4.45 | 2.06 | 2.05 | 1.14 | 0.88 | 0.95 |
| 6.00 | 2.50 | 2.410 | 2.834 | 0.29 | 0.17 | 0.30 | 14.35 | 4.78 | 2.44 | 1.53 | 0.90 | 0.80 | 0.79 |
| 6.00 | 3.25 | 3.427 | 4.030 | 0.35 | 0.21 | 0.30 | 21.04 | 7.01 | 2.48 | 3.76 | 1.76 | 1.05 | 1.12 |
| 7.00 | 2.75 | 2.725 | 3.205 | 0.29 | 0.17 | 0.30 | 22.09 | 6.31 | 2.85 | 2.10 | 1.10 | 0.88 | 0.84 |
| 7.00 | 3.50 | 4.009 | 4.715 | 0.38 | 0.21 | 0.30 | 33.79 | 9.65 | 2.90 | 5.13 | 2.23 | 1.13 | 1.20 |
| 8.00 | 3.00 | 3.526 | 4.147 | 0.35 | 0.19 | 0.30 | 37.40 | 9.35 | 3.26 | 3.25 | 1.57 | 0.96 | 0.93 |
| 8.00 | 3.75 | 4.923 | 5.789 | 0.41 | 0.25 | 0.35 | 52.69 | 13.17 | 3.27 | 7.13 | 2.82 | 1.20 | 1.22 |
| 9.00 | 3.25 | 4.237 | 4.983 | 0.35 | 0.23 | 0.35 | 54.41 | 12.09 | 3.58 | 4.40 | 1.89 | 1.02 | 0.93 |
| 9.00 | 4.00 | 5.927 | 6.970 | 0.44 | 0.29 | 0.35 | 78.31 | 17.40 | 3.63 | 9.61 | 3.49 | 1.27 | 1.25 |
| 10.00 | 3.50 | 5.218 | 6.136 | 0.41 | 0.25 | 0.35 | 83.22 | 16.64 | 3.99 | 6.33 | 2.56 | 1.10 | 1.02 |
| 10.00 | 4.25 | 7.109 | 8.360 | 0.50 | 0.31 | 0.40 | 116.15 | 23.23 | 4.04 | 13.02 | 4.47 | 1.35 | 1.34 |
| 12.00 | 4.00 | 7.036 | 8.274 | 0.47 | 0.29 | 0.40 | 159.76 | 26.63 | 4.77 | 11.03 | 3.86 | 1.25 | 1.14 |
| 12.00 | 5.00 | 10.053 | 11.822 | 0.62 | 0.35 | 0.45 | 239.69 | 39.95 | 4.88 | 25.74 | 7.60 | 1.60 | 1.61 |


Notes: ¹*I* = moment of inertia; *S* = section modulus; *r* = radius of gyration.

²Weights per foot are based on nominal dimensions and a density of 0.098 lb/in³, which is the density of alloy 6061. (May Range from 0.095 lb_m/in³ to 0.102 lb_m/in³.)

Sources for data for additional sizes: Aluminum Association, *Aluminum Standards and Data*, 11th ed., Washington, DC, © 1993, p. 187.

Metals Depot, Winchester, KY.

OnlineMetals.com, Seattle, WA.

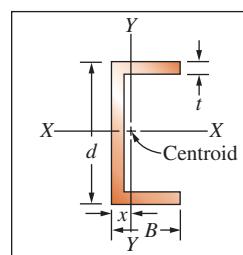

SI Units

TABLE 15-7 Channels: Aluminum, European Standard Shapes: 10 mm to 160 mm Depth

| Ref. | Depth <i>d</i> (mm) | Flange width <i>B</i> (mm) | Thickness <i>t</i> (mm) | ² Weight/m (N/m) | Area <i>A</i> (mm ²) | Section properties | | | | |
|------|---------------------------|-------------------------------------|-------------------------------|--------------------------------|--|---|---|---|---|---------------|
| | | | | | | Axis <i>X-X</i> | | Axis <i>Y-Y</i> | | |
| | | | | | | <i>I_x</i> (mm ⁴) | <i>S_x</i> (mm ³) | <i>I_y</i> (mm ⁴) | <i>S_y</i> (mm ³) | <i>x</i> (mm) |
| a | 10 | 10 | 2 | 1.10 | 40.5 | 590.4 | 118.1 | 392 | 64.32 | 3.90 |
| b | 12 | 12 | 2 | 1.74 | 64.0 | 1301 | 216.9 | 881 | 121.6 | 4.75 |
| c | 15 | 15 | 2 | 2.23 | 82.0 | 2777 | 370.2 | 1812 | 196.1 | 5.76 |
| d | 20 | 20 | 3 | 4.40 | 162 | 9446 | 944.6 | 6279 | 514.5 | 7.80 |
| e | 25 | 20 | 2 | 3.31 | 122 | 1.215E+04 | 972.0 | 4911 | 375.0 | 6.90 |
| f | 25 | 25 | 3 | 5.62 | 207 | 1.998E+04 | 1598 | 1.285E+04 | 827.7 | 9.47 |
| g | 35 | 35 | 3 | 8.06 | 297 | 6.001E+04 | 3429 | 3.725E+04 | 1679 | 12.81 |
| h | 40 | 30 | 4 | 9.99 | 368 | 8.900E+04 | 4450 | 3.228E+04 | 1653 | 10.48 |
| i | 50 | 30 | 4 | 11.08 | 408 | 1.520E+05 | 6079 | 3.493E+04 | 1716 | 9.65 |
| j | 50 | 40 | 4 | 13.25 | 488 | 1.944E+05 | 7776 | 7.858E+04 | 3000 | 13.80 |
| k | 60 | 40 | 4 | 14.34 | 528 | 2.982E+05 | 9939 | 8.379E+04 | 3093 | 12.91 |
| l | 80 | 40 | 4 | 16.51 | 608 | 5.869E+05 | 1.467E+04 | 9.216E+04 | 3231 | 11.47 |
| m | 100 | 50 | 5 | 25.79 | 950 | 1.433E+06 | 2.866E+04 | 2.250E+05 | 6310 | 14.34 |
| n | 125 | 80 | 8 | 58.43 | 2152 | 5.251E+06 | 8.401E+04 | 1.360E+06 | 24905 | 25.41 |
| o | 160 | 80 | 10 | 81.46 | 3000 | 1.130E+07 | 1.413E+05 | 1.780E+06 | 31592 | 23.67 |


Notes: ¹*I* = moment of inertia; *S* = section modulus; See sketch for *X-X* and *Y-Y* axes and the location *x* for the axis *Y-Y*.

Section properties computed assuming square corners and constant thickness of web and flanges.

Some producers use filleted corners and tapered flanges. Adjustments to computed values may be needed for precision.

²Using density of aluminum = 2768 kg/m³. (May range from 2635 kg/m³ to 2829 kg/m³.)

Sources for data for additional sizes: Parker Steel Company—Metric Sized Metals, Toledo, Ohio.

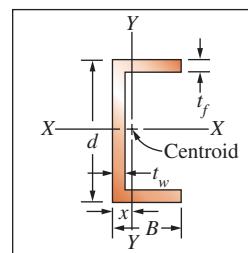

SI Units

TABLE 15-8 Channels: Steel, European Standard Shapes: 30 mm to 400 mm Depth

| Ref. | Depth <i>d</i> (mm) | Flange | | | | ² Weight/m (N/m) | Area <i>A</i> (mm ²) | Axis <i>X-X</i> | | Axis <i>Y-Y</i> | | | | |
|------|---------------------------|---------------------------|---|--|-------|--------------------------------|--|--|--|--|--|------------------|--|--|
| | | Width <i>B</i> (mm) | Thickness <i>t_f</i> (mm) | Web thickness <i>t_w</i> (mm) | | | | <i>I_x</i> (mm ⁴) | <i>S_x</i> (mm ³) | <i>I_y</i> (mm ⁴) | <i>S_y</i> (mm ³) | <i>x</i> (mm) | | |
| | | | | | | | | | | | | | | |
| a | 30 | 15 | 4.5 | 4.0 | 16.5 | 219.0 | 2.399E+04 | 1.599 | 4.210E+03 | 438 | 5.39 | | | |
| b | 30 | 33 | 7.0 | 5.0 | 40.8 | 542.0 | 5.558E+04 | 3706 | 5.546E+04 | 2987 | 14.43 | | | |
| c | 40 | 20 | 5.5 | 5.0 | 27.5 | 365.0 | 7.292E+04 | 3646 | 1.255E+04 | 967 | 7.02 | | | |
| d | 40 | 35 | 7.0 | 5.0 | 46.7 | 620.0 | 1.192E+05 | 5958 | 7.341E+04 | 3556 | 14.35 | | | |
| e | 50 | 25 | 6.0 | 5.0 | 36.9 | 490.0 | 1.538E+05 | 6150 | 2.765E+04 | 1688 | 8.62 | | | |
| f | 50 | 38 | 7.0 | 5.0 | 53.6 | 712.0 | 2.198E+05 | 8793 | 1.010E+05 | 4359 | 14.83 | | | |
| g | 60 | 30 | 6.0 | 6.0 | 48.8 | 648.0 | 3.188E+05 | 1.063E+04 | 5.090E+04 | 2503 | 9.67 | | | |
| h | 80 | 45 | 8.0 | 6.0 | 83.2 | 1104.0 | 8.981E+05 | 2.245E+04 | 2.179E+05 | 7441 | 15.72 | | | |
| i | 100 | 50 | 8.5 | 6.0 | 101.6 | 1348.0 | 1.668E+06 | 3.336E+04 | 3.306E+05 | 9.978E+03 | 16.87 | | | |
| j | 140 | 60 | 10.0 | 7.0 | 153.7 | 2040.0 | 4.885E+06 | 6.979E+04 | 7.104E+05 | 1.736E+04 | 19.09 | | | |
| k | 200 | 75 | 11.5 | 8.5 | 243.3 | 3229.5 | 1.604E+07 | 1.604E+05 | 1.706E+06 | 3.220E+04 | 22.01 | | | |
| l | 260 | 90 | 14.0 | 10.0 | 364.7 | 4840.0 | 3.966E+07 | 3.051E+05 | 3.653E+06 | 5.692E+04 | 25.83 | | | |
| m | 300 | 100 | 16.0 | 10.0 | 443.0 | 5880.0 | 6.036E+07 | 4.024E+05 | 5.642E+06 | 8.002E+04 | 29.49 | | | |
| n | 350 | 100 | 16.0 | 14.0 | 576.5 | 7652.0 | 1.180E+08 | 6.744E+05 | 6.182E+06 | 8.240E+04 | 24.98 | | | |
| o | 400 | 110 | 18.0 | 14.0 | 682.3 | 9056.0 | 1.748E+08 | 8.742E+05 | 9.210E+06 | 1.123E+05 | 27.99 | | | |

Notes: ¹*I* = moment of inertia; *S* = section modulus; See sketch for *X-X* and *Y-Y* axes and the location *x* for the axis *Y-Y*.

Section properties computed assuming square corners and constant thickness of web and flanges.


Some producers use filleted corners and tapered flanges. Adjustments to computed values may be needed for precision.

² Using density of steel = 7680 kg/m³.

Source for data for additional sizes: Parker Steel Company—Metric Sized Metals, Toledo, Ohio.

I-Beam Shapes

Tables 15–9 to 15–13

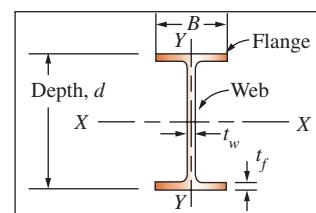

U.S. Units

TABLE 15–9 I-Beam Shapes: Steel Wide Flange Shapes, W-Shapes: 4 in to 24 in Depth

| Designation | Area A (in ²) | Depth d (in) | Web thickness t_w (in) | Flange | | *Section properties | |
|-------------|-----------------------------------|----------------------|-----------------------------------|--------------------|--------------------------|---|---|
| | | | | Width, B (in) | Thickness, t_f (in) | Axis X-X I_x (in ⁴) | Axis Y-Y I_y (in ⁴) |
| W24×76 | 22.4 | 23.92 | 0.440 | 8.990 | 0.680 | 2100 | 176 |
| W24×68 | 20.1 | 23.73 | 0.415 | 8.965 | 0.585 | 1830 | 154 |
| W21×73 | 21.5 | 21.24 | 0.455 | 8.295 | 0.740 | 1600 | 151 |
| W21×57 | 16.7 | 21.06 | 0.405 | 6.555 | 0.650 | 1170 | 111 |
| W18×55 | 16.2 | 18.11 | 0.390 | 7.530 | 0.630 | 890 | 98.3 |
| W18×40 | 11.8 | 17.90 | 0.315 | 6.015 | 0.525 | 612 | 68.4 |
| W14×43 | 12.6 | 13.66 | 0.305 | 7.995 | 0.530 | 428 | 62.7 |
| W14×26 | 7.69 | 13.91 | 0.255 | 5.025 | 0.420 | 245 | 35.3 |
| W12×30 | 8.79 | 12.34 | 0.260 | 6.520 | 0.440 | 238 | 38.6 |
| W12×16 | 4.71 | 11.99 | 0.220 | 3.990 | 0.265 | 103 | 17.1 |
| W10×15 | 4.41 | 9.99 | 0.230 | 4.000 | 0.270 | 69.8 | 13.8 |
| W10×12 | 3.54 | 9.87 | 0.190 | 3.960 | 0.210 | 53.8 | 10.9 |
| W8×15 | 4.44 | 8.11 | 0.245 | 4.015 | 0.315 | 48.0 | 11.8 |
| W8×10 | 2.96 | 7.89 | 0.170 | 3.940 | 0.205 | 30.8 | 7.81 |
| W6×15 | 4.43 | 5.99 | 0.230 | 5.990 | 0.260 | 29.1 | 9.72 |
| W6×12 | 3.55 | 6.03 | 0.230 | 4.000 | 0.280 | 22.1 | 7.31 |
| W5×19 | 5.54 | 5.15 | 0.270 | 5.030 | 0.430 | 26.2 | 10.2 |
| W5×16 | 4.68 | 5.01 | 0.240 | 5.000 | 0.360 | 21.3 | 8.51 |
| W4×13 | 3.83 | 4.16 | 0.280 | 4.060 | 0.345 | 11.3 | 5.46 |


Note: Example designation: W14×43.

14 = nominal depth (in); 43 = weight per unit length (lb/ft).

* I = moment of inertia; S = section modulus.

Sources for data for additional sizes: Central Steel & Wire Co., multiple locations.

Reliance Steel & Aluminum Co./Earl M. Jorgensen Co., multiple locations.

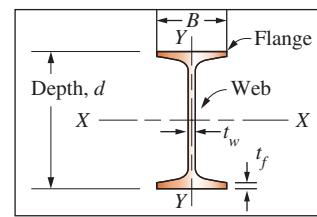

U.S. Units

TABLE 15-10 I-Beam Shapes: Steel, American Standard Shapes, S-Shapes: 3 in to 24 in Depth

| Designation | Area <i>A</i> (in ²) | Depth <i>d</i> (in) | Web thickness <i>t_w</i> (in) | Flange | | Axis X-X | | Axis Y-Y | |
|-------------|--|---------------------------|--|---------------------------|--|--|--|--|--|
| | | | | Width <i>B</i> (in) | Average thickness <i>t_f</i> (in) | <i>I_x</i> (in ⁴) | <i>S_x</i> (in ³) | <i>I_y</i> (in ⁴) | <i>S_y</i> (in ³) |
| | | | | | | | | | |
| S24×90 | 26.5 | 24.00 | 0.625 | 7.125 | 0.870 | 2250 | 187 | 44.9 | 12.6 |
| S20×96 | 28.2 | 20.30 | 0.800 | 7.200 | 0.920 | 1670 | 165 | 50.2 | 13.9 |
| S20×75 | 22.0 | 20.00 | 0.635 | 6.385 | 0.795 | 1280 | 128 | 29.8 | 9.32 |
| S20×66 | 19.4 | 20.00 | 0.505 | 6.255 | 0.795 | 1190 | 119 | 27.7 | 8.85 |
| S18×70 | 20.6 | 18.00 | 0.711 | 6.251 | 0.691 | 926 | 103 | 24.1 | 7.72 |
| S15×50 | 14.7 | 15.00 | 0.550 | 5.640 | 0.622 | 486 | 64.8 | 15.7 | 5.57 |
| S12×50 | 14.7 | 12.00 | 0.687 | 5.477 | 0.659 | 305 | 50.8 | 15.7 | 5.74 |
| S12×35 | 10.3 | 12.00 | 0.428 | 5.078 | 0.544 | 229 | 38.2 | 9.87 | 3.89 |
| S10×35 | 10.3 | 10.00 | 0.594 | 4.944 | 0.491 | 147 | 29.4 | 8.36 | 3.38 |
| S10×25.4 | 7.46 | 10.00 | 0.311 | 4.661 | 0.491 | 124 | 24.7 | 6.79 | 2.91 |
| S8×23 | 6.77 | 8.00 | 0.441 | 4.171 | 0.426 | 64.9 | 16.2 | 4.31 | 2.07 |
| S8×18.4 | 5.41 | 8.00 | 0.271 | 4.001 | 0.426 | 57.6 | 14.4 | 3.73 | 1.86 |
| S7×20 | 5.88 | 7.00 | 0.450 | 3.860 | 0.392 | 42.4 | 12.1 | 3.17 | 1.64 |
| S6×12.5 | 3.67 | 6.00 | 0.232 | 3.332 | 0.359 | 22.1 | 7.37 | 1.82 | 1.09 |
| S5×10 | 2.94 | 5.00 | 0.214 | 3.004 | 0.326 | 12.3 | 4.92 | 1.22 | 0.809 |
| S4×7.7 | 2.26 | 4.00 | 0.193 | 2.663 | 0.293 | 6.08 | 3.04 | 0.764 | 0.574 |
| S3×5.7 | 1.67 | 3.00 | 0.170 | 2.330 | 0.260 | 2.52 | 1.68 | 0.455 | 0.390 |


Note: Example designation: S10×35.

10 = nominal depth (in); 35 = weight per unit length (lb/ft).

**I* = moment of inertia; *S* = section modulus.

Sources for data for additional sizes: Central Steel & Wire Co., multiple locations.

Reliance Steel & Aluminum Co./Earl M. Jorgensen Co., multiple locations.

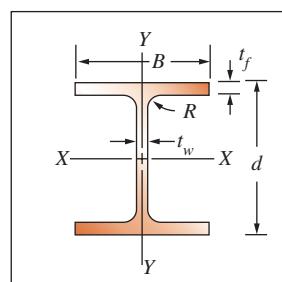

U.S. Units

TABLE 15-11 I-Beam shapes: Aluminum, Aluminum Association Standard Shapes, Larger Sizes: 3 in to 12 in Depth

| Size | | | | | | | ¹ Section properties | | | | | |
|--------------------------|---------------------------|--|---|--|--------------------------------------|------|---|---|---------------------------|---|---|---------------------------|
| Dept <i>d</i> (in) | Width <i>B</i> (in) | Area <i>A</i> (in ²) | Flange thickness <i>t_f</i> (in) | Web thickness <i>t_w</i> (in) | Fillet radius <i>R</i> (in) | | Axis <i>X-X</i> | | | Axis <i>Y-Y</i> | | |
| | | | | | | | <i>I_x</i> (in ⁴) | <i>S_x</i> (in ³) | <i>r_x</i> (in) | <i>I_y</i> (in ⁴) | <i>S_y</i> (in ³) | <i>r_y</i> (in) |
| 3.00 | 2.50 | 1.392 | 1.637 | 0.20 | 0.13 | 0.25 | 2.24 | 1.49 | 1.27 | 0.52 | 0.42 | 0.61 |
| 3.00 | 2.50 | 1.726 | 2.030 | 0.26 | 0.15 | 0.25 | 2.71 | 1.81 | 1.25 | 0.68 | 0.54 | 0.63 |
| 4.00 | 3.00 | 1.965 | 2.311 | 0.23 | 0.15 | 0.25 | 5.62 | 2.81 | 1.69 | 1.04 | 0.69 | 0.73 |
| 4.00 | 3.00 | 2.375 | 2.793 | 0.29 | 0.17 | 0.25 | 6.71 | 3.36 | 1.68 | 1.31 | 0.87 | 0.74 |
| 5.00 | 3.50 | 3.146 | 3.700 | 0.32 | 0.19 | 0.30 | 13.94 | 5.58 | 2.11 | 2.29 | 1.31 | 0.85 |
| 6.00 | 4.00 | 3.427 | 4.030 | 0.29 | 0.19 | 0.30 | 21.99 | 7.33 | 2.53 | 3.10 | 1.55 | 0.95 |
| 6.00 | 4.00 | 3.990 | 4.692 | 0.35 | 0.21 | 0.30 | 25.50 | 8.50 | 2.53 | 3.74 | 1.87 | 0.97 |
| 7.00 | 4.50 | 4.932 | 5.800 | 0.38 | 0.23 | 0.30 | 42.89 | 12.25 | 2.95 | 5.78 | 2.57 | 1.08 |
| 8.00 | 5.00 | 5.256 | 6.181 | 0.35 | 0.23 | 0.30 | 59.69 | 14.92 | 3.37 | 7.30 | 2.92 | 1.18 |
| 8.00 | 5.00 | 5.972 | 7.023 | 0.41 | 0.25 | 0.30 | 67.78 | 16.94 | 3.37 | 8.55 | 3.42 | 1.20 |
| 9.00 | 5.50 | 7.110 | 8.361 | 0.44 | 0.27 | 0.30 | 102.02 | 22.67 | 3.79 | 12.22 | 4.44 | 1.31 |
| 10.00 | 6.00 | 7.352 | 8.646 | 0.41 | 0.25 | 0.40 | 132.09 | 26.42 | 4.24 | 14.78 | 4.93 | 1.42 |
| 10.00 | 6.00 | 8.747 | 10.286 | 0.50 | 0.29 | 0.40 | 155.79 | 31.16 | 4.22 | 18.03 | 6.01 | 1.44 |
| 12.00 | 7.00 | 9.925 | 11.672 | 0.47 | 0.29 | 0.40 | 255.57 | 42.60 | 5.07 | 26.90 | 7.69 | 1.65 |
| 12.00 | 7.00 | 12.153 | 14.292 | 0.62 | 0.31 | 0.40 | 317.33 | 52.89 | 5.11 | 35.48 | 10.14 | 1.71 |

Notes: ¹ Weights per foot are based on nominal dimensions and a density of 0.098 lb/in³, which is the density of alloy 6061.

² Areas listed are based on nominal dimensions.


I = moment of inertia; *S* = section modulus; *r* = radius of gyration.

Sources for data for additional sizes: Aluminum Association, *Aluminum Standards and Data*, 11th ed., Washington, DC, © 1993, p. 187.

Central Steel & Wire Co., multiple locations.

Reliance Steel & Aluminum Co./Earl M. Jorgensen Co., multiple locations.

OnlineMetals.com, Seattle, WA.

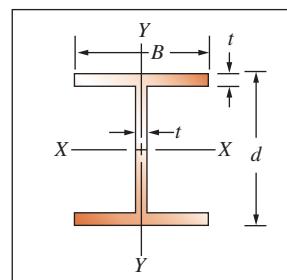

U.S. Units

TABLE 15-12 I-Beam Shapes: Aluminum, Small Extruded Shapes: 0.70 in to 2.11 in Depth

| Ref. | Depth <i>d</i> (in) | Flange width <i>B</i> (in) | Thickness <i>t</i> (in) | Weight/ft ² (lb/ft) | Area <i>A</i> (in ²) | ¹ Section properties | | | | | |
|------|---------------------------|-------------------------------------|-------------------------------|-----------------------------------|--|---|---|---------------------------|---|---|---------------------------|
| | | | | | | Axis X-X | | | Axis Y-Y | | |
| | | | | | | <i>I_x</i> (in ⁴) | <i>S_x</i> (in ³) | <i>r_x</i> (in) | <i>I_y</i> (in ⁴) | <i>S_y</i> (in ³) | <i>r_y</i> (in) |
| a | 0.700 | 1.060 | 0.050 | 0.160 | 0.136 | 0.0121 | 0.0346 | 0.299 | 0.00993 | 0.0187 | 0.270 |
| b | 1.040 | 1.074 | 0.050 | 0.185 | 0.154 | 0.0298 | 0.0573 | 0.439 | 0.0103 | 0.0192 | 0.259 |
| c | 1.950 | 1.000 | 0.050 | 0.230 | 0.193 | 0.117 | 0.120 | 0.778 | 0.00835 | 0.0167 | 0.208 |
| d | 1.120 | 1.724 | 0.050 | 0.268 | 0.223 | 0.0538 | 0.0961 | 0.491 | 0.0427 | 0.0495 | 0.437 |
| e | 1.034 | 1.500 | 0.062 | 0.290 | 0.242 | 0.0479 | 0.0926 | 0.444 | 0.0349 | 0.0465 | 0.379 |
| f | 2.110 | 1.500 | 0.055 | 0.329 | 0.275 | 0.211 | 0.200 | 0.876 | 0.0310 | 0.0413 | 0.336 |
| g | 0.876 | 1.500 | 0.188 | 0.790 | 0.658 | 0.0704 | 0.161 | 0.327 | 0.106 | 0.141 | 0.401 |
| h | 1.000 | 2.375 | 0.250 | 1.575 | 1.313 | 0.176 | 0.352 | 0.366 | 0.559 | 0.471 | 0.653 |


Notes: These shapes are designed for special applications and not made to common dimensions. Calculations assume square corners.

¹*I* = moment of inertia; *S* = section modulus; *r* = radius of gyration, used for column analysis; See sketch for X-X and Y-Y axes.

²Using density of aluminum = 0.100 lb_m/in³. (May range from 0.095 lb_m/in³ to 0.102 lb_m/in³.)

Sources for data for additional sizes: Paramount Extrusions, Co., Paramount, CA.

Metals Depot, Winchester, KY.

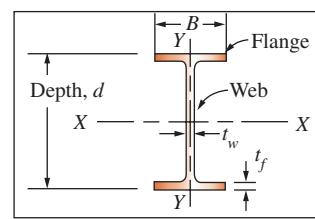

SI Units

TABLE 15-13 I-Beam Shapes: Steel, European Standard (²IPE) Shapes: 80 mm to 600 mm Depth

| Ref. | Depth <i>d</i> (mm) | Flange width <i>B</i> (mm) | Thickness | | | Area <i>A</i> (mm ²) | Axis <i>X-X</i> | | | Axis <i>Y-Y</i> | | |
|------|---------------------------|-------------------------------------|--|-------------------------------------|--------------------------------|--|--|--|------------------------------|--|--|------------------------------|
| | | | Flange <i>t_f</i> (mm) | Web <i>t_w</i> (mm) | ³ Weight/m (N/m) | | <i>I_x</i> (mm ⁴) | <i>S_x</i> (mm ³) | <i>r_x</i> (mm) | <i>I_y</i> (mm ⁴) | <i>S_y</i> (mm ³) | <i>r_y</i> (mm) |
| | | | | | | | | | | | | |
| a | 80 | 46 | 5.2 | 3.8 | 57.6 | 764 | 8.014E+05 | 2.003E+04 | 32.4 | 8.487E+04 | 3.690E+03 | 10.54 |
| b | 100 | 55 | 5.7 | 4.1 | 77.8 | 1032 | 1.710E+06 | 3.420E+04 | 40.7 | 1.591E+05 | 5.786E+03 | 12.4 |
| c | 120 | 64 | 6.3 | 4.4 | 99.5 | 1321 | 3.177E+06 | 5.296E+04 | 49.0 | 2.766E+05 | 8.644E+03 | 14.5 |
| d | 140 | 73 | 6.9 | 4.7 | 123.8 | 1643 | 5.412E+06 | 7.732E+04 | 57.4 | 4.491E+05 | 1.230E+04 | 16.5 |
| e | 160 | 82 | 7.4 | 5.0 | 151.4 | 2009 | 8.693E+06 | 1.087E+05 | 65.8 | 6.829E+05 | 1.666E+04 | 18.4 |
| f | 180 | 91 | 8.0 | 5.3 | 180.4 | 2395 | 1.317E+07 | 1.463E+05 | 74.2 | 1.008E+06 | 2.216E+04 | 20.5 |
| g | 200 | 100 | 8.5 | 5.6 | 214.6 | 2848 | 1.943E+07 | 1.943E+05 | 82.6 | 1.423E+06 | 2.846E+04 | 22.4 |
| h | 220 | 110 | 9.2 | 5.9 | 251.4 | 3337 | 2.772E+07 | 2.520E+05 | 91.1 | 2.048E+06 | 3.724E+04 | 24.8 |
| i | 240 | 120 | 9.8 | 6.2 | 294.7 | 3912 | 3.891E+07 | 3.243E+05 | 99.7 | 2.835E+06 | 4.725E+04 | 26.9 |
| j | 270 | 135 | 10.2 | 6.6 | 346.2 | 4595 | 5.790E+07 | 4.289E+05 | 112.3 | 4.197E+06 | 6.218E+04 | 30.2 |
| k | 300 | 150 | 10.7 | 7.1 | 405.4 | 5381 | 8.356E+07 | 5.571E+05 | 124.6 | 6.036E+06 | 8.048E+04 | 33.5 |
| l | 330 | 160 | 11.5 | 7.5 | 471.7 | 6261 | 1.177E+08 | 7.131E+05 | 137.1 | 7.878E+06 | 9.848E+04 | 35.5 |
| m | 360 | 170 | 12.7 | 8.0 | 547.9 | 7273 | 1.627E+08 | 9.036E+05 | 149.5 | 1.043E+07 | 1.227E+05 | 37.9 |
| n | 400 | 180 | 13.5 | 8.8 | 642.0 | 8521 | 2.321E+08 | 1.161E+06 | 165.1 | 1.317E+07 | 1.464E+05 | 39.3 |
| o | 450 | 190 | 14.6 | 9.4 | 744.5 | 9882 | 3.374E+08 | 1.500E+06 | 184.8 | 1.675E+07 | 1.763E+05 | 41.2 |
| p | 500 | 200 | 16.0 | 10.2 | 870.4 | 11552 | 4.820E+08 | 1.928E+06 | 204.3 | 2.141E+07 | 2.141E+05 | 43.1 |
| q | 550 | 210 | 17.2 | 11.1 | 1013 | 13442 | 6.712E+08 | 2.441E+06 | 223.5 | 2.667E+07 | 2.540E+05 | 44.5 |
| r | 600 | 220 | 19.0 | 12.0 | 1175 | 15598 | 9.208E+08 | 3.069E+06 | 243.0 | 3.386E+07 | 3.078E+05 | 46.6 |

Notes: ¹*I* = moment of inertia; *S* = section modulus; *r* = radius of gyration, used for column analysis; See sketch for *X-X* and *Y-Y* axes.

²IPE sections have medium-width flanges. Narrow and wide-flange sections also available.

³Using density of steel = 7680 kg/m³.

Source for data for additional sizes: Parker Steel Company—Metric Sized Metals, Toledo, Ohio.

Tubing: Square and rectangular
Tables 15-14 to 15-16

U.S. Units

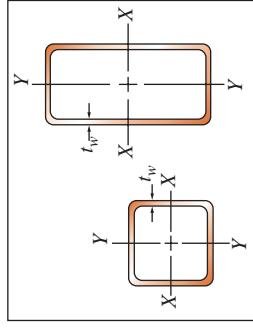


TABLE 15-14 Hollow Tubing: Steel, Square and Rectangular, Standard Structural HSS Shapes: 2 in to 8 in Depth

| Ref. | Shape (in) | (in) | (in) | Design wall thickness | | | | Area A (in ²) | | | | Axis X-X | | | | Axis Y-Y | | | | Section properties | | Torsional constants | | | |
|------|-------------------------|-------|------|-----------------------|-----------------------|--------------|----------------------------|-----------------------------------|-----------------------------------|-----------------------------------|-----------------------------------|---------------------|----------------------|----------------------|-------|----------|-------|-------|------|--------------------|------|---------------------|--|--|--|
| | | | | ¹ | | ² | Weight per foot (lb/ft) | S _x (in ³) | I _x (in ⁴) | S _y (in ³) | I _y (in ⁴) | r _y (in) | J (in ⁴) | C (in ³) | | | | | | | | | | | |
| | | | | Shape | Design wall thickness | | | | | | | | | | | | | | | | | | | | |
| a | HSS 8×8×8 $\frac{1}{2}$ | 0.465 | 48.7 | 13.5 | 125 | 31.2 | 3.04 | 125 | 31.2 | 3.04 | 125 | 31.2 | 3.04 | 125 | 3.04 | 204 | 204 | 52.4 | | | | | | | |
| b | HSS 8×8×8 $\frac{1}{4}$ | 0.233 | 25.8 | 7.10 | 70.7 | 17.7 | 3.15 | 70.7 | 17.7 | 3.15 | 70.7 | 17.7 | 3.15 | 70.7 | 3.15 | 111 | 111 | 28.1 | | | | | | | |
| c | HSS 8×4×8 $\frac{1}{2}$ | 0.465 | 35.1 | 9.74 | 71.8 | 17.9 | 2.71 | 23.6 | 11.8 | 1.56 | 23.6 | 11.8 | 1.56 | 23.6 | 61.1 | 61.1 | 24.4 | | | | | | | | |
| d | HSS 8×4×8 $\frac{1}{4}$ | 0.233 | 19.0 | 5.24 | 42.5 | 10.6 | 2.85 | 14.4 | 7.21 | 1.66 | 14.4 | 7.21 | 1.66 | 14.4 | 35.3 | 35.3 | 13.6 | | | | | | | | |
| e | HSS 8×2×8 $\frac{1}{4}$ | 0.233 | 15.6 | 4.30 | 28.5 | 7.12 | 2.57 | 2.94 | 2.94 | 0.827 | 2.94 | 2.94 | 0.827 | 2.94 | 9.36 | 9.36 | 6.35 | | | | | | | | |
| f | HSS 6×6×6 $\frac{1}{2}$ | 0.465 | 35.1 | 9.74 | 48.3 | 16.1 | 2.23 | 48.3 | 16.1 | 2.23 | 48.3 | 16.1 | 2.23 | 48.3 | 16.1 | 2.23 | 81.1 | 81.1 | 28.1 | | | | | | |
| g | HSS 6×6×6 $\frac{1}{4}$ | 0.233 | 19.0 | 5.24 | 28.6 | 9.54 | 2.34 | 28.6 | 9.54 | 2.34 | 28.6 | 9.54 | 2.34 | 28.6 | 9.54 | 2.34 | 45.6 | 45.6 | 15.4 | | | | | | |
| h | HSS 6×4×6 $\frac{1}{4}$ | 0.233 | 15.6 | 4.30 | 20.9 | 6.96 | 2.20 | 20.9 | 6.96 | 2.20 | 20.9 | 6.96 | 2.20 | 20.9 | 11.1 | 5.56 | 1.61 | 23.6 | 23.6 | 10.1 | | | | | |
| i | HSS 6×2×6 $\frac{1}{4}$ | 0.233 | 12.2 | 3.37 | 13.1 | 4.37 | 1.97 | 13.1 | 4.37 | 1.97 | 13.1 | 4.37 | 1.97 | 13.1 | 2.21 | 2.21 | 0.810 | 6.55 | 6.55 | 4.70 | | | | | |
| j | HSS 4×4×4 $\frac{1}{2}$ | 0.465 | 21.5 | 6.02 | 11.9 | 5.97 | 1.41 | 11.9 | 5.97 | 1.41 | 11.9 | 5.97 | 1.41 | 11.9 | 5.97 | 1.41 | 21.0 | 21.0 | 11.2 | | | | | | |
| k | HSS 4×4×4 $\frac{1}{4}$ | 0.233 | 12.2 | 3.37 | 7.80 | 3.90 | 1.52 | 7.80 | 3.90 | 1.52 | 7.80 | 3.90 | 1.52 | 7.80 | 3.90 | 1.52 | 12.8 | 12.8 | 6.56 | | | | | | |
| l | HSS 4×2×4 $\frac{1}{4}$ | 0.233 | 8.78 | 2.44 | 4.49 | 2.25 | 1.36 | 4.49 | 2.25 | 1.36 | 4.49 | 2.25 | 1.36 | 4.49 | 1.48 | 1.48 | 0.779 | 3.82 | 3.82 | 3.05 | | | | | |
| m | HSS 3×3×3 $\frac{1}{4}$ | 0.233 | 8.78 | 2.44 | 3.02 | 2.01 | 1.11 | 3.02 | 2.01 | 1.11 | 3.02 | 2.01 | 1.11 | 3.02 | 2.01 | 1.11 | 5.08 | 5.08 | 3.52 | | | | | | |
| n | HSS 3×2×3 $\frac{1}{4}$ | 0.233 | 7.08 | 1.97 | 2.13 | 1.42 | 1.04 | 2.13 | 1.42 | 1.04 | 2.13 | 1.42 | 1.04 | 2.13 | 1.11 | 1.11 | 0.751 | 0.751 | 2.52 | | | | | | |
| o | HSS 2×2×3 $\frac{1}{4}$ | 0.233 | 5.38 | 1.51 | 0.747 | 0.747 | 0.704 | 0.747 | 0.747 | 0.704 | 0.747 | 0.747 | 0.704 | 0.747 | 0.747 | 0.747 | 0.704 | 0.704 | 1.31 | 1.31 | 1.41 | | | | |

Notes: Example size: 6×4×14; 6 = vertical depth (in); 4 = width (in); 1/4 = wall thickness (in).

¹I = moment of inertia; S = section modulus; r = radius of gyration.

²Using Density of steel = 0.283 lb/in³.

Sources for data for additional sizes: Metals Depot, Winchester KY.

Bull Moose Tube Co.

Steel Tube Institute of North America, Glenview, IL.

U.S. Units

TABLE 15-15 Hollow Tubing: Steel and Aluminum, Square and Rectangular, Smaller Sizes: 0.375 in to 3.00 in Depth

| Ref. | Outside dimensions | | | Inside dimensions | | | Area | 2Weight/ft | | | Axis X-X | | | 1Section properties | | |
|------|--------------------|-----------|----------------|-------------------|-----------|-------|--------------------|---------------|------------------|-----------------------------------|-----------------------------------|---------------------|-----------------------------------|-----------------------------------|---------------------|--|
| | Short side | Long side | Wall thickness | Short side | Long side | d | | Steel (lb/ft) | Aluminum (lb/ft) | I _x (in ⁴) | S _x (in ³) | r _x (in) | I _y (in ⁴) | S _y (in ³) | r _y (in) | |
| | a (in) | b (in) | t (in) | c (in) | | (in) | (in ²) | | | | | | | | | |
| a | 0.375 | 0.375 | 0.049 | 0.277 | 0.277 | 0.064 | 0.217 | 0.077 | 0.00116 | 0.13458 | 0.00116 | 0.135 | | | | |
| b | 0.500 | 0.500 | 0.065 | 0.370 | 0.370 | 0.113 | 0.384 | 0.136 | 0.00365 | 0.0146 | 0.180 | 0.00365 | 0.0146 | 0.180 | | |
| c | 0.500 | 1.000 | 0.065 | 0.370 | 0.870 | 0.178 | 0.605 | 0.214 | 0.0214 | 0.0427 | 0.346 | 0.00674 | 0.0270 | 0.195 | | |
| d | 0.500 | 1.500 | 0.065 | 0.370 | 1.370 | 0.243 | 0.826 | 0.292 | 0.0613 | 0.0818 | 0.502 | 0.0098 | 0.0394 | 0.201 | | |
| e | 0.500 | 1.500 | 0.120 | 0.260 | 1.260 | 0.422 | 1.434 | 0.507 | 0.0973 | 0.130 | 0.480 | 0.0138 | 0.0551 | 0.181 | | |
| f | 0.625 | 0.625 | 0.065 | 0.495 | 0.495 | 0.146 | 0.494 | 0.175 | 0.00771 | 0.0247 | 0.230 | 0.00771 | 0.0247 | 0.230 | | |
| g | 0.750 | 0.750 | 0.065 | 0.620 | 0.620 | 0.178 | 0.605 | 0.214 | 0.0141 | 0.0375 | 0.281 | 0.0141 | 0.0375 | 0.281 | | |
| h | 0.750 | 1.500 | 0.065 | 0.620 | 1.370 | 0.276 | 0.936 | 0.331 | 0.0781 | 0.104 | 0.532 | 0.0255 | 0.0681 | 0.304 | | |
| i | 0.875 | 0.875 | 0.049 | 0.777 | 0.777 | 0.162 | 0.550 | 0.194 | 0.0185 | 0.042 | 0.338 | 0.0185 | 0.0422 | 0.338 | | |
| j | 1.000 | 1.000 | 0.065 | 0.870 | 0.870 | 0.243 | 0.826 | 0.292 | 0.0356 | 0.071 | 0.383 | 0.0356 | 0.0712 | 0.383 | | |
| k | 1.000 | 1.000 | 0.120 | 0.760 | 0.760 | 0.422 | 1.434 | 0.507 | 0.0555 | 0.111 | 0.363 | 0.0555 | 0.111 | 0.363 | | |
| l | 1.000 | 1.500 | 0.065 | 0.870 | 1.370 | 0.308 | 1.046 | 0.370 | 0.0948 | 0.126 | 0.555 | 0.0498 | 0.100 | 0.402 | | |
| m | 1.000 | 1.500 | 0.120 | 0.760 | 1.260 | 0.542 | 1.842 | 0.651 | 0.155 | 0.206 | 0.534 | 0.0789 | 0.158 | 0.381 | | |
| n | 1.000 | 2.000 | 0.065 | 0.870 | 1.870 | 0.373 | 1.267 | 0.448 | 0.193 | 0.193 | 0.718 | 0.0640 | 0.128 | 0.414 | | |
| o | 1.000 | 3.000 | 0.065 | 0.870 | 2.870 | 0.503 | 1.709 | 0.604 | 0.536 | 0.357 | 1.032 | 0.0925 | 0.185 | 0.429 | | |
| p | 1.250 | 1.250 | 0.065 | 1.120 | 1.120 | 0.308 | 1.046 | 0.370 | 0.0723 | 0.116 | 0.485 | 0.0723 | 0.116 | 0.485 | | |
| q | 1.375 | 1.375 | 0.058 | 1.259 | 1.259 | 0.306 | 1.038 | 0.367 | 0.0885 | 0.129 | 0.538 | 0.0885 | 0.129 | 0.538 | | |
| r | 1.500 | 1.500 | 0.065 | 1.370 | 1.370 | 0.373 | 1.267 | 0.448 | 0.128 | 0.171 | 0.586 | 0.128 | 0.171 | 0.586 | | |
| s | 1.500 | 1.500 | 0.120 | 1.260 | 1.260 | 0.662 | 2.250 | 0.795 | 0.212 | 0.282 | 0.566 | 0.212 | 0.282 | 0.566 | | |
| t | 1.500 | 2.000 | 0.065 | 1.370 | 1.870 | 0.438 | 1.488 | 0.526 | 0.253 | 0.253 | 0.761 | 0.162 | 0.216 | 0.608 | | |
| u | 1.500 | 2.000 | 0.120 | 1.260 | 1.760 | 0.782 | 2.657 | 0.939 | 0.428 | 0.428 | 0.739 | 0.269 | 0.359 | 0.586 | | |
| v | 1.500 | 3.000 | 0.120 | 1.260 | 2.760 | 1.022 | 3.472 | 1.227 | 1.167 | 0.778 | 1.069 | 0.384 | 0.512 | 0.613 | | |


Notes: ¹ I = moment of inertia; S = section modulus; r = radius of gyration, used in column analysis; See sketch for X-X and Y-Y axes.
Values are for perfectly square corners. Some vendors apply radii to inside and/or outside corners.


Wall thickness gages: 0.049 in = 18 gage; 0.058 in = 17 gage; 0.065 in = 16 gage; 0.120 in = 11 gage.

Other gages and sizes are available from many manufacturers and vendors. See Appendix A15-14 for larger structural tubing.

² Using density of steel = 0.283 lb_m/in³; density of aluminum = 0.100 lb_m/in³. (May range from 0.095 lb_m/in³ to 0.102 lb_m/in³.)

Sources for data for additional sizes: Reliance Steel & Aluminum Co./Earl M. Jorgensen Co., multiple locations, OnlineMetals.com, Seattle, WA, Bull Moose Tube Co., Metals Depot, Winchester, KY.

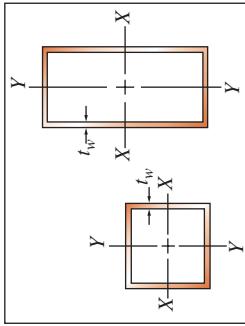

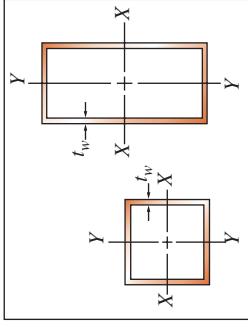

SI Units

TABLE 15-16 Hollow Tubing: Steel and Aluminum, Square and Rectangular: 20 mm to 300 mm Depth

| Ref. | a (mm) | b (mm) | t (mm) | Outside dimensions | | | Inside dimensions | | | Area (mm ²) | 2-Weight/ft | | 1-Section properties | | |
|------|-----------|-----------|-----------|--------------------|-----------|-----------|-------------------|------------|------------|----------------------------|----------------|-------------------|----------------------|-----------------------------------|-----------------------------------|
| | | | | Short side | | Long side | Wall thickness | | Short side | | Steel (N/m) | | Aluminum (N/m) | S _x (mm ³) | I _x (mm) |
| | | | | Short side | Long side | c (mm) | d (mm) | Short side | Long side | | Weight/ft | Aluminum (N/m) | Steel (N/m) | I _y (mm ⁴) | S _y (mm ³) |
| a | 10 | 20 | 2 | 2 | 6 | 16 | 104 | 7.84 | 2.82 | 4.619E+03 | 462 | 6.66 | 1.379E+03 | 276 | 3.64 |
| b | 20 | 20 | 2 | 2 | 16 | 16 | 144 | 10.8 | 3.91 | 7.872E+03 | 787 | 7.39 | 7.872E+03 | 787 | 7.39 |
| c | 20 | 30 | 3 | 3 | 14 | 24 | 264 | 19.9 | 7.17 | 2.887E+04 | 1925 | 10.5 | 1.451E+04 | 1451 | 7.41 |
| d | 30 | 30 | 3 | 3 | 24 | 24 | 324 | 24.4 | 8.80 | 3.985E+04 | 2657 | 11.1 | 3.985E+04 | 2657 | 11.1 |
| e | 20 | 40 | 3 | 3 | 14 | 34 | 324 | 24.4 | 8.80 | 6.081E+04 | 3041 | 13.7 | 1.889E+04 | 1889 | 7.64 |
| f | 40 | 40 | 3 | 3 | 34 | 34 | 444 | 33.5 | 12.1 | 1.020E+05 | 5099 | 15.2 | 1.020E+05 | 5099 | 15.2 |
| g | 30 | 50 | 3 | 3 | 24 | 44 | 444 | 33.5 | 12.1 | 1.421E+05 | 5685 | 17.9 | 6.181E+04 | 4121 | 11.8 |
| h | 50 | 50 | 3 | 3 | 44 | 44 | 564 | 42.5 | 15.3 | 2.085E+05 | 8340 | 19.2 | 2.085E+05 | 8340 | 19.2 |
| i | 40 | 80 | 4 | 32 | 72 | 896 | 67.5 | 24.3 | 7.113E+05 | 1.778E+04 | 28.2 | 2.301E+05 | 1.150E+04 | 16.0 | |
| j | 80 | 80 | 3 | 74 | 74 | 924 | 69.6 | 25.1 | 9.145E+05 | 2.286E+04 | 31.5 | 9.145E+05 | 2.286E+04 | 31.5 | |
| k | 50 | 100 | 4 | 42 | 92 | 1136 | 85.6 | 30.8 | 1.441E+06 | 2.883E+04 | 35.6 | 4.737E+05 | 1.895E+04 | 20.4 | |
| l | 100 | 100 | 4 | 92 | 92 | 1536 | 116 | 41.7 | 2.363E+06 | 4.727E+04 | 39.2 | 2.363E+06 | 4.727E+04 | 39.2 | |
| m | 50 | 150 | 4 | 42 | 142 | 1536 | 116 | 41.7 | 4.041E+06 | 5.388E+04 | 51.3 | 6.858E+05 | 2.743E+04 | 21.1 | |
| n | 150 | 150 | 5 | 140 | 140 | 2900 | 218 | 78.7 | 1.017E+07 | 1.357E+05 | 59.2 | 1.017E+07 | 1.357E+05 | 59.2 | |
| o | 200 | 200 | 4 | 192 | 192 | 3136 | 236 | 85.1 | 2.009E+07 | 2.009E+05 | 80.0 | 2.009E+07 | 2.009E+05 | 80.0 | |
| p | 100 | 200 | 4 | 92 | 192 | 2336 | 176 | 63.4 | 1.240E+07 | 1.240E+05 | 72.9 | 4.208E+06 | 8.415E+04 | 42.4 | |
| q | 50 | 200 | 4 | 42 | 192 | 1936 | 146 | 52.6 | 8.561E+06 | 8.561E+04 | 66.5 | 8.979E+05 | 3.592E+04 | 21.5 | |
| r | 250 | 250 | 8 | 234 | 234 | 7744 | 583 | 210.3 | 7.567E+07 | 6.054E+05 | 98.9 | 7.567E+07 | 6.054E+05 | 98.9 | |
| s | 300 | 300 | 8 | 284 | 284 | 9344 | 704 | 253.7 | 1.329E+08 | 8.859E+05 | 119.3 | 1.329E+08 | 8.859E+05 | 119.3 | |
| t | 300 | 300 | 12.5 | 275 | 275 | 14375 | 1083 | 390.3 | 1.984E+08 | 1.323E+06 | 117.5 | 1.984E+08 | 1.323E+06 | 117.5 | |

Notes: 1/ = moment of inertia; S = section modulus; r = radius of gyration, used in column analysis; See sketch for X-X and Y-Y axes.
Values are for perfectly square corners. Some vendors apply radii to inside and/or outside corners.

Numerous additional sizes and wall thicknesses are available from many manufacturers and vendors.

Using density of steel = 7680 kg/m³; density of aluminum = 2768 kg/m³. (May range from 2635 kg/m³ to 2829 kg/m³.)

Sources for additional sizes: Parker Steel Company—Metric Sized Metals, Toledo, Ohio.
Bull Moose Tube Co.

U.S. Units

TABLE 15-17 Pipe: American National Standard Schedule 40 and AISC Standard: 1/8 in to 18 in Sizes


| Ref. | ¹ Nominal size (in) | Outside diameter (in) | Inside diameter (in) | Wall thickness t_w (in) | Area A (in^2) | Weight/ft Steel (lb/ft) | Section properties | | | Torsional constants J (in^4) | Z_p (in^3) |
|-------------------------|--------------------------------|-----------------------|----------------------|---------------------------|----------------------------|---|-----------------------|-----------------------|----------|--|-------------------------|
| | | | | | | | I (in^4) | S (in^3) | r (in) | | |
| Schedule 40 pipe | | | | | | | | | | | |
| a | 1/8 in | 0.405 | 0.269 | 0.068 | 0.072 | 0.245 | 1.06E-03 | 5.25E-03 | 0.122 | 2.13E-03 | 1.05E-02 |
| b | 1/4 in | 0.540 | 0.364 | 0.088 | 0.125 | 0.425 | 3.31E-03 | 1.23E-02 | 0.163 | 6.62E-03 | 2.45E-02 |
| c | 3/8 in | 0.675 | 0.493 | 0.091 | 0.167 | 0.568 | 7.29E-03 | 2.16E-02 | 0.209 | 1.46E-02 | 4.32E-02 |
| d | PIPE 1/2 STD | 0.840 | 0.622 | 0.109 | 0.250 | 0.851 | 1.71E-02 | 4.07E-02 | 0.261 | 3.42E-02 | 8.14E-02 |
| e | PIPE 3/4 STD | 1.050 | 0.824 | 0.113 | 0.333 | 1.131 | 3.70E-02 | 7.05E-02 | 0.334 | 7.41E-02 | 0.1411 |
| f | PIPE 1 STD | 1.315 | 1.049 | 0.133 | 0.494 | 1.679 | 8.73E-02 | 0.1328 | 0.421 | 0.1747 | 0.2657 |
| g | PIPE 1-1/4 STD | 1.660 | 1.380 | 0.140 | 0.669 | 2.273 | 0.1947 | 0.2346 | 0.540 | 0.3894 | 0.4692 |
| h | PIPE 1-1/2 STD | 1.900 | 1.610 | 0.145 | 0.799 | 2.718 | 0.3099 | 0.3262 | 0.623 | 0.6198 | 0.6524 |
| i | PIPE 2 STD | 2.375 | 2.067 | 0.154 | 1.075 | 3.653 | 0.6657 | 0.5606 | 0.787 | 1.331 | 1.121 |
| j | PIPE 2-1/2 STD | 2.876 | 2.469 | 0.203 | 1.704 | 5.793 | 1.530 | 1.064 | 0.947 | 3.059 | 2.128 |
| k | PIPE 3 STD | 3.500 | 3.068 | 0.216 | 2.228 | 7.576 | 3.017 | 1.724 | 1.164 | 6.034 | 3.448 |
| l | PIPE 3-1/2 STD | 4.000 | 3.548 | 0.226 | 2.680 | 9.109 | 4.788 | 2.394 | 1.337 | 9.575 | 4.788 |
| m | PIPE 4 STD | 4.500 | 4.026 | 0.237 | 3.714 | 10.790 | 7.233 | 3.214 | 1.510 | 14.47 | 6.429 |
| n | PIPE 5 STD | 5.563 | 5.047 | 0.258 | 4.300 | 14.618 | 15.16 | 5.451 | 1.878 | 30.32 | 10.90 |
| o | PIPE 6 STD | 6.625 | 6.065 | 0.280 | 5.581 | 18.974 | 28.14 | 8.496 | 2.245 | 56.28 | 16.99 |
| p | PIPE 8 STD | 8.625 | 7.981 | 0.322 | 8.399 | 28.554 | 72.49 | 16.81 | 2.938 | 145.0 | 33.62 |
| q | PIPE 10 STD | 10.750 | 10.020 | 0.365 | 11.908 | 40.483 | 160.7 | 29.90 | 3.674 | 321.5 | 59.81 |
| r | 12 in | 12.750 | 11.938 | 0.406 | 15.745 | 53.525 | 300.2 | 47.09 | 4.367 | 600.4 | 94.18 |
| s | 16 in | 16.000 | 15.000 | 0.500 | 24.347 | 82.771 | 731.9 | 91.49 | 5.483 | 1464 | 183.0 |
| t | 18 in | 18.000 | 16.876 | 0.562 | 30.788 | 104.667 | 1171 | 130.2 | 6.168 | 2343 | 260.3 |


Notes: ¹All values shown are for standard schedule 40 steep pipe.

Rows d-q conform to AISC standards for dimensions of standard weight pipe. Rows a-c and r-t do not.

Many other sizes of round hollow structural sections (HSS) are available. See AISC Manual.

Sources for data for additional sizes: American Piping Products, Chesterfield, MO.
Davidson Group, Specialty Pipe & Tube, Brooklyn, NY.

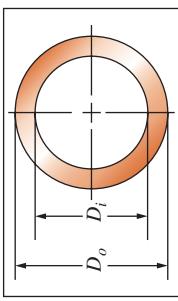

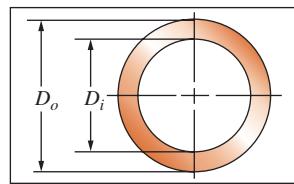

U.S. Units

TABLE 15-18 Mechanical Tubing: Steel and Aluminum: 0.5 in to 5.0 in Outside Diameter

| Ref. | Nominal size | | Outside diameter D_o (in) | Inside diameter D_i (in) | Wall thickness t_w (in) | Area A (in ²) | Weight/ft | | Bending properties | | Torsion properties | | |
|------|--------------|------------|-----------------------------------|----------------------------------|---------------------------------|--------------------------------|------------------|---------------------|---------------------------|---------------------------|--------------------|---------------------------|-----------------------------|
| | OD (in) | Wall gauge | | | | | Steel (lb/ft) | Aluminum (lb/ft) | I (in ⁴) | S (in ³) | r (in) | J (in ⁴) | Z_p (in ³) |
| a | 1/2 | 17 | 0.500 | 0.384 | 0.058 | 0.081 | 0.274 | 0.097 | 0.00200 | 0.00800 | 0.158 | 0.00400 | 0.0160 |
| b | 1/2 | 14 | 0.500 | 0.334 | 0.083 | 0.109 | 0.370 | 0.130 | 0.00246 | 0.00983 | 0.150 | 0.00491 | 0.0197 |
| c | 1 | 16 | 1.000 | 0.870 | 0.065 | 0.191 | 0.649 | 0.229 | 0.0210 | 0.0419 | 0.331 | 0.0419 | 0.0839 |
| d | 1 | 10 | 1.000 | 0.732 | 0.134 | 0.365 | 1.239 | 0.437 | 0.0350 | 0.0700 | 0.310 | 0.0700 | 0.140 |
| e | 1 1/2 | 16 | 1.500 | 1.370 | 0.065 | 0.293 | 0.996 | 0.352 | 0.0756 | 0.101 | 0.508 | 0.151 | 0.202 |
| f | 1 1/2 | 10 | 1.500 | 1.232 | 0.134 | 0.575 | 1.955 | 0.690 | 0.135 | 0.181 | 0.485 | 0.271 | 0.361 |
| g | 2 | 16 | 2.000 | 1.870 | 0.065 | 0.395 | 1.343 | 0.474 | 0.185 | 0.185 | 0.685 | 0.370 | 0.370 |
| h | 2 | 10 | 2.000 | 1.732 | 0.134 | 0.786 | 2.671 | 0.943 | 0.344 | 0.344 | 0.661 | 0.687 | 0.687 |
| i | 2 1/2 | 10 | 2.500 | 2.232 | 0.134 | 0.996 | 3.386 | 1.195 | 0.699 | 0.559 | 0.838 | 1.398 | 1.119 |
| j | 2 1/2 | 5 | 2.500 | 2.060 | 0.220 | 1.576 | 5.357 | 1.891 | 1.034 | 0.827 | 0.810 | 2.067 | 1.654 |
| k | 3 | 10 | 3.000 | 2.732 | 0.134 | 1.207 | 4.102 | 1.448 | 1.241 | 0.828 | 1.014 | 2.483 | 1.655 |
| l | 3 | 5 | 3.000 | 2.560 | 0.220 | 1.921 | 6.532 | 2.306 | 1.868 | 1.245 | 0.986 | 3.736 | 2.490 |
| m | 3 1/2 | 10 | 3.500 | 3.232 | 0.134 | 1.417 | 4.817 | 1.700 | 2.010 | 1.149 | 1.191 | 4.020 | 2.297 |
| n | 3 1/2 | 5 | 3.500 | 3.060 | 0.220 | 2.267 | 7.707 | 2.720 | 3.062 | 1.750 | 1.162 | 6.125 | 3.500 |
| o | 4 | 5 | 4.000 | 3.560 | 0.220 | 2.613 | 8.882 | 3.135 | 4.682 | 2.341 | 1.339 | 9.364 | 4.682 |
| p | 4 | 3/8 in | 4.000 | 3.250 | 0.375 | 4.271 | 14.518 | 5.125 | 7.090 | 3.545 | 1.288 | 14.180 | 7.090 |
| q | 4 1/2 | 5 | 4.500 | 4.060 | 0.220 | 2.958 | 10.056 | 3.550 | 6.791 | 3.018 | 1.515 | 13.583 | 6.037 |
| r | 4 1/2 | 3/8 in | 4.500 | 3.750 | 0.375 | 4.860 | 16.521 | 5.832 | 10.422 | 4.632 | 1.464 | 20.843 | 9.264 |
| s | 5 | 5 | 5.000 | 4.560 | 0.220 | 3.304 | 11.231 | 3.964 | 9.456 | 3.782 | 1.692 | 18.911 | 7.564 |
| t | 5 | 3/8 in | 5.000 | 4.250 | 0.375 | 5.449 | 18.523 | 6.538 | 14.665 | 5.866 | 1.641 | 29.329 | 11.732 |

Notes: ¹ I = moment of inertia; S = section modulus; r = radius of gyration, used in column analysis; J = polar moment of inertia; Z_p = polar section modulus.

²Using density of steel = 0.283 lb_m/in³; density of aluminum = 0.100 lb_m/in³. (May range from 0.095 lb_m/in³ to 0.102 lb_m in³.)

Sources for data for additional sizes: Reliance Steel & Aluminum Co./Earl M. Jorgensen Co.

Central Steel & Wire Co.

Webco Industries, Inc.


Bull Moose Tube Co.

Paramount Extrusions, Co., Paramount, CA.

Metals Depot, Winchester, KY.

Wheatland Tube Company, Sharon, PA (smaller sizes).

Davidson Group, Specialty Pipe & Tube, Brooklyn, NY (larger sizes and heavier wall).

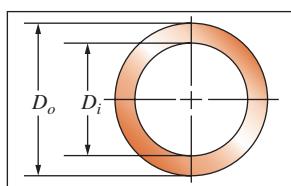

SI Units

TABLE 15-19 Mechanical Tubing: Steel and Aluminum: 10 mm to 150 mm Outside Diameters

| Ref. | Outside diameter D_o (mm) | Inside diameter D_i (mm) | Wall thickness t (mm) | Area A (mm^2) | Weight/m | | Section properties | | | Torsion properties | | | |
|------|--------------------------------|-------------------------------|----------------------------|-------------------------------|---------------------------|------------------------------|--------------------|-------------------|-----------------------|-----------------------|-----------|-----------------------|-------------------------|
| | | | | | 2 | | Steel (N/m) | Aluminum (N/m) | Bending properties | | r (mm) | J (mm^4) | Z_p (mm^3) |
| | | | | | Weight Steel (kg/m) | Weight Aluminum (kg/m) | | | I (mm^4) | S (mm^3) | | | |
| a | 10 | 8 | 1.0 | 28.27 | 2.130 | 0.768 | 289.8 | 57.96 | 3.20 | 579.6 | 115.9 | | |
| b | 10 | 6 | 2.0 | 50.27 | 3.787 | 1.365 | 427.3 | 85.45 | 2.92 | 854.5 | 170.9 | | |
| c | 20 | 17 | 1.5 | 87.18 | 6.568 | 2.367 | 3754 | 375.4 | 6.56 | 7508.3 | 750.8 | | |
| d | 20 | 15 | 2.5 | 137.4 | 10.36 | 3.732 | 5369 | 536.9 | 6.25 | 1.074E+04 | 1074 | | |
| e | 30 | 26 | 2.0 | 175.9 | 13.25 | 4.777 | 1.733E+04 | 1155 | 9.92 | 3.466E+04 | 2311 | | |
| f | 30 | 22 | 4.0 | 326.7 | 24.62 | 8.872 | 2.826E+04 | 1884 | 9.30 | 5.652E+04 | 3768 | | |
| g | 45 | 40 | 2.5 | 333.8 | 25.15 | 9.064 | 7.563E+04 | 3361 | 15.05 | 1.513E+05 | 6722 | | |
| h | 45 | 37 | 4.0 | 515.2 | 38.82 | 13.990 | 1.093E+05 | 4857 | 14.56 | 2.186E+05 | 9715 | | |
| i | 60 | 52 | 4.0 | 703.7 | 53.02 | 19.109 | 2.773E+05 | 9242 | 19.85 | 5.545E+05 | 1.848E+04 | | |
| j | 60 | 48 | 6.0 | 1017.9 | 76.69 | 27.639 | 3.756E+05 | 1.252E+04 | 19.21 | 7.512E+05 | 2.504E+04 | | |
| k | 75 | 70 | 2.5 | 569.4 | 42.90 | 15.462 | 3.746E+05 | 9.988E+03 | 25.65 | 7.491E+05 | 1.998E+04 | | |
| l | 75 | 65 | 5.0 | 1100 | 82.84 | 29.857 | 6.769E+05 | 1.805E+04 | 24.81 | 1.354E+06 | 3.610E+04 | | |
| m | 90 | 84 | 3.0 | 820 | 61.78 | 22.265 | 7.767E+05 | 1.726E+04 | 30.78 | 1.553E+06 | 3.452E+04 | | |
| n | 90 | 80 | 5.0 | 1335 | 100.6 | 36.255 | 1.210E+06 | 2.689E+04 | 30.10 | 2.420E+06 | 5.378E+04 | | |
| o | 110 | 104 | 3.0 | 1008 | 76.0 | 27.383 | 1.444E+06 | 2.626E+04 | 37.85 | 2.889E+06 | 5.252E+04 | | |
| p | 110 | 100 | 5.0 | 1649 | 124.3 | 44.786 | 2.278E+06 | 4.142E+04 | 37.17 | 4.556E+06 | 8.284E+04 | | |
| q | 130 | 124 | 3.0 | 1197 | 90.2 | 32.502 | 2.415E+06 | 3.715E+04 | 44.91 | 4.829E+06 | 7.429E+04 | | |
| r | 130 | 120 | 5.0 | 1963 | 147.9 | 53.317 | 3.841E+06 | 5.909E+04 | 44.23 | 7.682E+06 | 1.182E+05 | | |
| s | 150 | 144 | 3.0 | 1385 | 104.4 | 37.620 | 3.744E+06 | 4.992E+04 | 51.98 | 7.488E+06 | 9.983E+04 | | |
| t | 150 | 140 | 5.0 | 2278 | 171.6 | 61.847 | 5.993E+06 | 7.991E+04 | 51.30 | 1.199E+07 | 1.598E+05 | | |

Notes: ¹ I = moment of inertia; S = section modulus; r = radius of gyration, used in column analysis; J = polar moment of inertia; Z_p = polar section modulus.

²Using density of steel = 7680 kg/m³; density of aluminum = 2768 kg/m³. (May range from 2635 kg/m³ to 2829 kg/m³.)

Source for data for additional sizes: Parker Steel Company—Metric Sized Metals, Toledo, Ohio.

APPENDIX 16 Conversion Factors

| | | | | | |
|--|--|--|--|--|---|
| Mass Standard SI unit: Kilogram (kg). Equivalent unit: N · s ² /m. | | | | | |
| $\frac{14.59 \text{ kg}}{\text{slug}}$ | $\frac{32.174 \text{ lb}_m}{\text{slug}}$ | $\frac{2.205 \text{ lb}_m}{\text{kg}}$ | $\frac{453.6 \text{ grams}}{\text{lb}_m}$ | $\frac{2000 \text{ lb}_m}{\text{ton}_m}$ | $\frac{1000 \text{ kg}}{\text{metric ton}_m}$ |
| Force Standard SI unit: Newton (N). Equivalent unit: kg · m/s ² . | | | | | |
| $\frac{4.448 \text{ N}}{\text{lb}_f}$ | $\frac{10^5 \text{ dynes}}{\text{N}}$ | $\frac{4.448 \times 10^5 \text{ dynes}}{\text{lb}_f}$ | $\frac{224.8 \text{ lb}_f}{\text{kN}}$ | $\frac{1000 \text{ lb}}{\text{K}}$ | |
| Length | | | | | |
| $\frac{3.281 \text{ ft}}{\text{m}}$ | $\frac{39.37 \text{ in}}{\text{m}}$ | $\frac{12 \text{ in}}{\text{ft}}$ | $\frac{25.4 \text{ mm}}{\text{in}}$ | $\frac{1.609 \text{ km}}{\text{mi}}$ | $\frac{5280 \text{ ft}}{\text{mi}}$ |
| Area | | | | | |
| $\frac{144 \text{ in}^2}{\text{ft}^2}$ | $\frac{10.76 \text{ ft}^2}{\text{m}^2}$ | $\frac{645.2 \text{ mm}^2}{\text{in}^2}$ | $\frac{10^6 \text{ mm}^2}{\text{m}^2}$ | $\frac{43\,560 \text{ ft}^2}{\text{acre}}$ | $\frac{10^4 \text{ m}^2}{\text{hectare}}$ |
| Volume | | | | | |
| $\frac{1728 \text{ in}^3}{\text{ft}^3}$ | $\frac{231 \text{ in}^3}{\text{gal}}$ | $\frac{7.48 \text{ gal}}{\text{ft}^3}$ | $\frac{264 \text{ gal}}{\text{m}^3}$ | $\frac{3.785 \text{ L}}{\text{gal}}$ | $\frac{35.3 \text{ ft}^3}{\text{m}^3}$ |
| Pressure, Stress, or Loading Standard SI unit: Pascal (Pa). Equivalent units: N/m ² or kg/m · s ² . | | | | | |
| $\frac{144 \text{ lb}/\text{ft}^2}{\text{lb}/\text{in}^2}$ | $\frac{47.88 \text{ Pa}}{\text{lb}/\text{ft}^2}$ | $\frac{6895 \text{ Pa}}{\text{lb}/\text{in}^2}$ | $\frac{1 \text{ Pa}}{\text{N}/\text{m}^2}$ | $\frac{6.895 \text{ MPa}}{\text{ksi}}$ | |
| Energy Standard SI unit: Joule (J). Equivalent units: N · m or kg · m ² /s ² . | | | | | |
| $\frac{1.356 \text{ J}}{\text{lb} \cdot \text{ft}}$ | $\frac{1.0 \text{ J}}{\text{N} \cdot \text{m}}$ | $\frac{8.85 \text{ lb} \cdot \text{in}}{\text{J}}$ | $\frac{1.055 \text{ kJ}}{\text{Btu}}$ | $\frac{3.600 \text{ kJ}}{\text{W} \cdot \text{h}}$ | $\frac{778 \text{ ft} \cdot \text{lb}}{\text{Btu}}$ |
| Power Standard SI unit: Watt (W). Equivalent unit: J/s or N · m/s. | | | | | |
| $\frac{745.7 \text{ W}}{\text{hp}}$ | $\frac{1.0 \text{ W}}{\text{N} \cdot \text{m/s}}$ | $\frac{550 \text{ lb} \cdot \text{ft/s}}{\text{hp}}$ | $\frac{1.356 \text{ W}}{\text{lb} \cdot \text{ft/s}}$ | $\frac{3.412 \text{ Btu/h}}{\text{W}}$ | $\frac{1.341 \text{ hp}}{\text{kW}}$ |
| Density (Mass/Unit Volume) | | | | | |
| $\frac{515.4 \text{ kg}/\text{m}^3}{\text{slug}/\text{ft}^3}$ | $\frac{1000 \text{ kg}/\text{m}^3}{\text{gram}/\text{cm}^3}$ | $\frac{32.17 \text{ lb}_m/\text{ft}^3}{\text{slug}/\text{ft}^3}$ | $\frac{16.018 \text{ kg}/\text{m}^3}{\text{lb}_m/\text{ft}^3}$ | | |
| Specific Weight (Weight/Unit Volume) | | | | | |
| $\frac{157.1 \text{ N}/\text{m}^3}{\text{lb}_f/\text{ft}^3}$ | $\frac{1728 \text{ lb}/\text{ft}^3}{\text{lb}/\text{in}^3}$ | | | | |
| Bending Moment or Torque | | | | | |
| $\frac{8.851 \text{ lb} \cdot \text{in}}{\text{N} \cdot \text{m}}$ | $\frac{1.356 \text{ N} \cdot \text{m}}{\text{lb} \cdot \text{ft}}$ | | | | |
| Section Modulus | | | | | |
| $\frac{1.639 \times 10^4 \text{ mm}^3}{\text{in}^3}$ | $\frac{10^9 \text{ mm}^3}{\text{m}^3}$ | | | | |
| Moment of Inertia or Second Moment of an Area | | | | | |
| $\frac{4.162 \times 10^5 \text{ mm}^4}{\text{in}^4}$ | $\frac{10^{12} \text{ mm}^4}{\text{m}^4}$ | | | | |

General approach to applying conversion factors: Arrange the conversion factor from this table such that, when multiplied by the given quantity, the original units cancel out, leaving the desired units. See examples below.

Example 1. Convert a stress of 36 ksi to MPa.

$$\sigma = 36 \text{ ksi} \times \frac{6.895 \text{ MPa}}{\text{ksi}} = 248 \text{ MPa.}$$

Example 2. Convert a stress of 1272 MPa to ksi.

$$\sigma = 1272 \text{ MPa} \times \frac{1.0 \text{ ksi}}{6.895 \text{ MPa}} = 184 \text{ ksi.}$$

APPENDIX 17 Hardness Conversion Table

| Brinell | Rockwell | | Vickers | Steel: tensile strength, (1000 psi approx.) | Brinell | Rockwell | | Vickers | Steel: tensile strength, (1000 psi approx.) |
|---------|------------------|------|---------|---|---------|------------------|--------|---------|---|
| | No. ¹ | B | C | | | No. ¹ | B | C | |
| (745) | | 65.3 | | | 262 | (103.0) | 26.6 | 277 | 127 |
| (712) | | 63.3 | | | 255 | (102.0) | 25.4 | 268 | 123 |
| (682) | | 61.7 | | | 248 | (101.0) | 24.2 | 261 | 120 |
| (653) | | 60.0 | | | 241 | 100.0 | 22.8 | 252 | 116 |
| (627) | | 58.7 | | | 235 | 99.0 | 21.7 | 246 | 114 |
| 601 | | 57.3 | 639 | | 229 | 98.2 | 20.5 | 241 | 111 |
| 578 | | 56.0 | 614 | | 223 | 97.3 | (18.8) | 235 | 108 |
| 555 | | 54.7 | 590 | 298 | 217 | 96.4 | (17.5) | 228 | 105 |
| 534 | | 53.5 | 569 | 288 | 212 | 95.5 | (16.0) | 222 | 102 |
| 514 | | 52.1 | 546 | 274 | 207 | 94.6 | (15.2) | 217 | 100 |
| 495 | | 51.6 | 527 | 269 | 201 | 93.8 | (13.8) | 211 | 98 |
| 477 | | 50.3 | 508 | 258 | 197 | 92.8 | (12.7) | 207 | 95 |
| 461 | | 48.8 | 490 | 244 | 192 | 91.9 | (11.5) | 202 | 93 |
| 444 | | 47.2 | 472 | 231 | 187 | 90.7 | (10.0) | 196 | 90 |
| 429 | | 45.7 | 455 | 219 | 183 | 90.0 | (9.0) | 184 | 89 |
| 415 | | 44.5 | 440 | 212 | 179 | 89.0 | (8.0) | 188 | 87 |
| 401 | | 43.1 | 424 | 202 | 174 | 87.8 | (6.4) | 183 | 85 |
| 388 | | 41.8 | 410 | 193 | 170 | 86.8 | (5.4) | 179 | 83 |
| 375 | | 40.4 | 396 | 184 | 167 | 86.0 | (4.4) | 175 | 81 |
| 363 | | 39.1 | 383 | 177 | 163 | 85.0 | (3.3) | 171 | 79 |
| 352 | (110.0) | 37.9 | 371 | 171 | 156 | 82.9 | (0.9) | 164 | 76 |
| 341 | (109.0) | 36.6 | 360 | 164 | 149 | 80.8 | | | 73 |
| 331 | (108.5) | 35.5 | 349 | 159 | 143 | 78.7 | | | 71 |
| 321 | (108.0) | 34.3 | 338 | 154 | 137 | 76.4 | | | 67 |
| 311 | (107.5) | 33.1 | 327 | 149 | 131 | 74.0 | | | 65 |
| 302 | (107.0) | 32.1 | 319 | 146 | 126 | 72.0 | | | 63 |
| 293 | (106.0) | 30.9 | 309 | 141 | 121 | 69.8 | | | 60 |
| 285 | (105.5) | 29.9 | 301 | 138 | 116 | 67.6 | | | 58 |
| 277 | (104.5) | 28.8 | 292 | 134 | 111 | 65.7 | | | 56 |
| 269 | (104.0) | 27.6 | 284 | 130 | | | | | |

Notes: This is a condensation of Table 2, Report J417b, SAE 1971 Handbook. Values in () are beyond normal range and are presented for information only.

¹Values above 500 are for tungsten carbide ball; below 500 are for standard ball.

²Vickers: Diamond pyramid Hardness Number; 50 kg load.

APPENDIX 18 Stress Concentration Factors

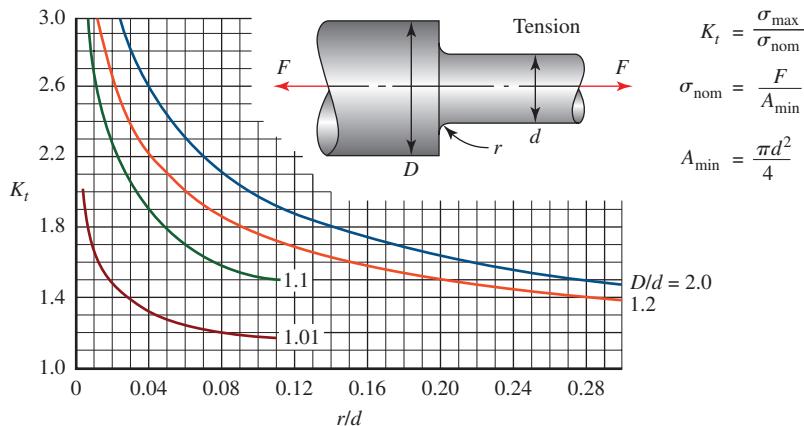


FIGURE A18-1 Stepped round bar in tension

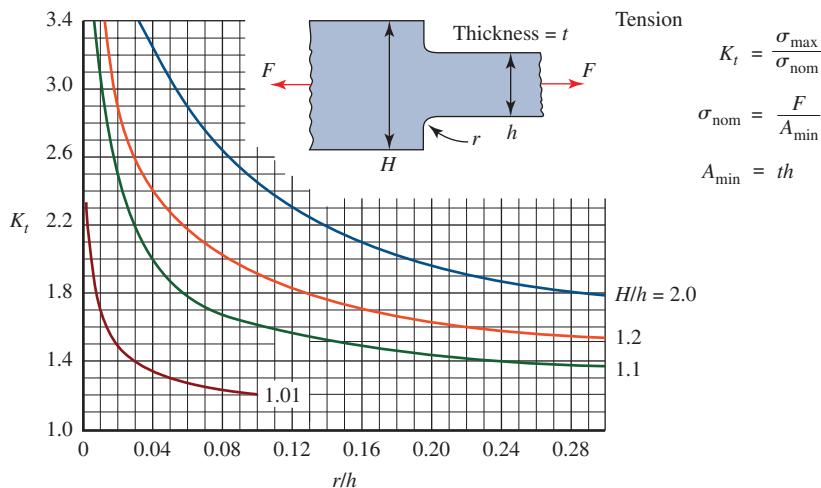


FIGURE A18-2 Stepped flat plate in tension

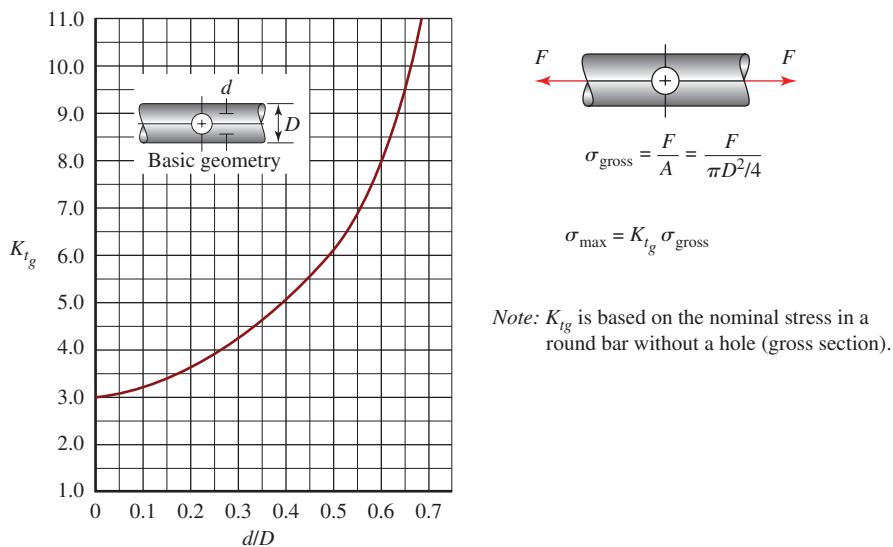


FIGURE A18-3 Round bar with a transverse hole in tension

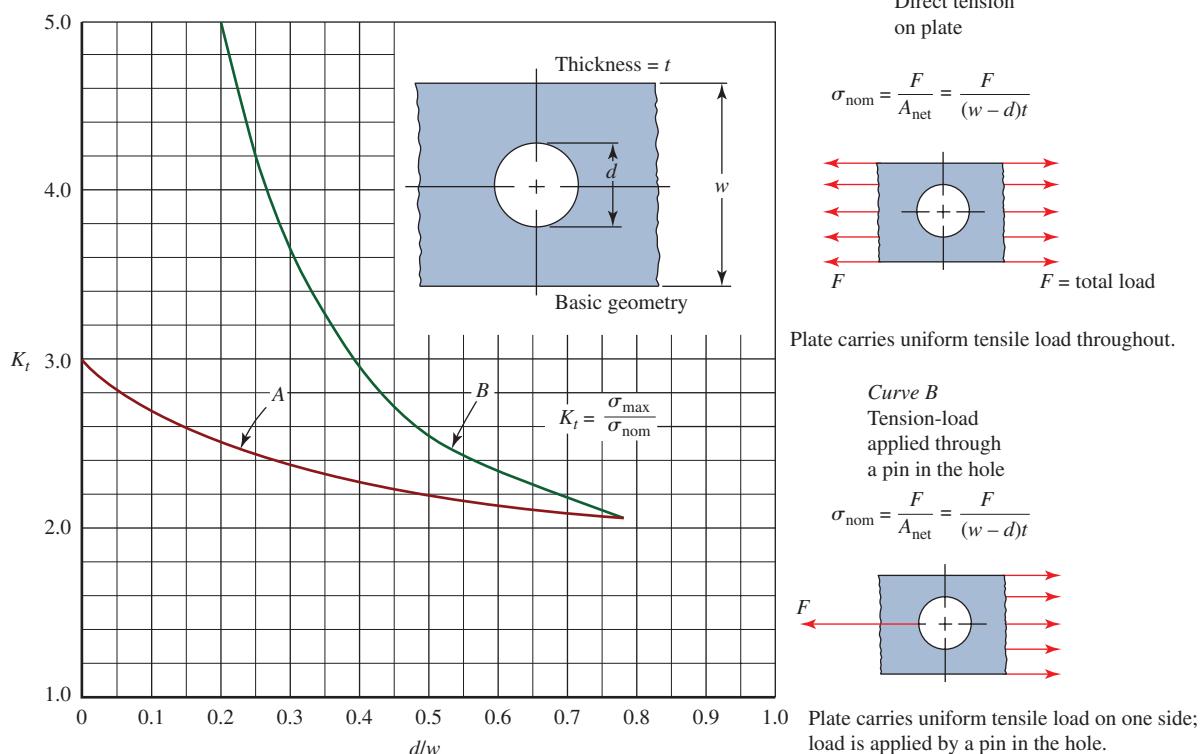


FIGURE A18-4 Flat plate with a central hole in tension

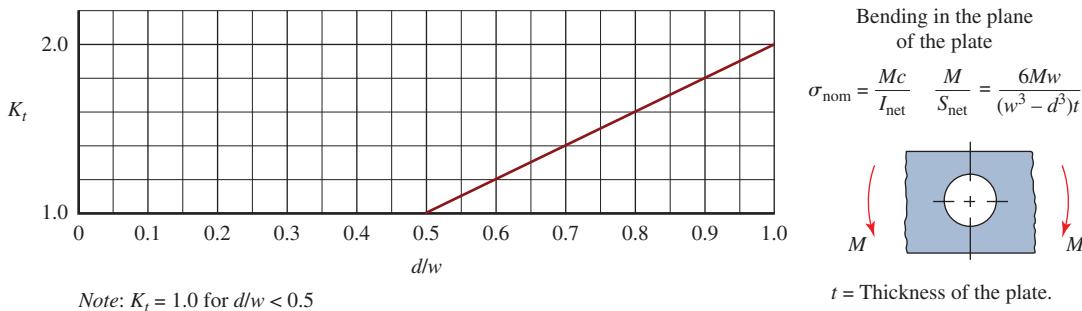


FIGURE A18-5 Flat plate with a central hole in bending

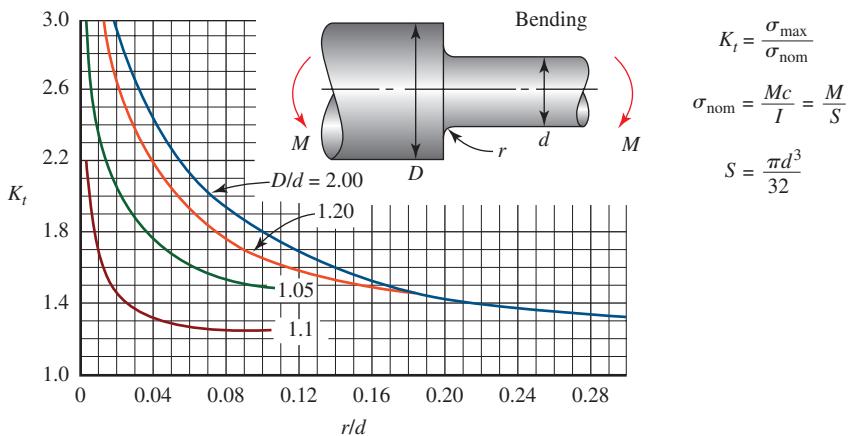


FIGURE A18-6 Stepped round bar in bending

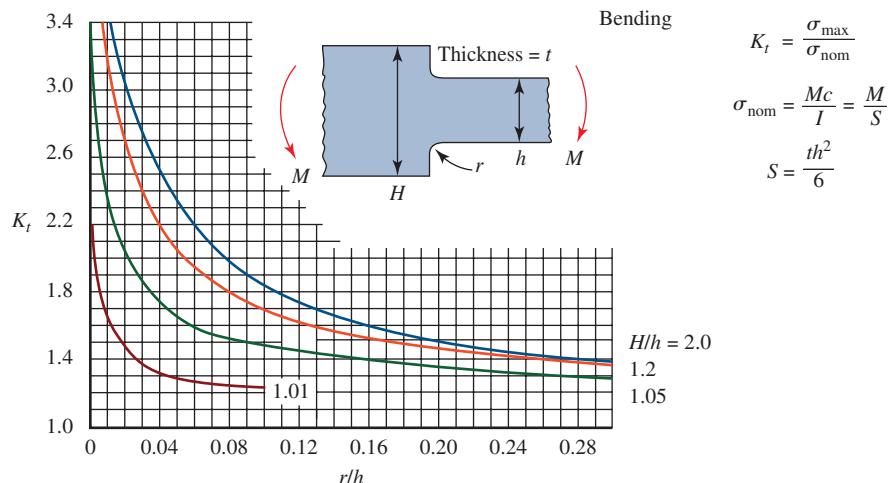


FIGURE A18–7 Stepped flat plate in bending

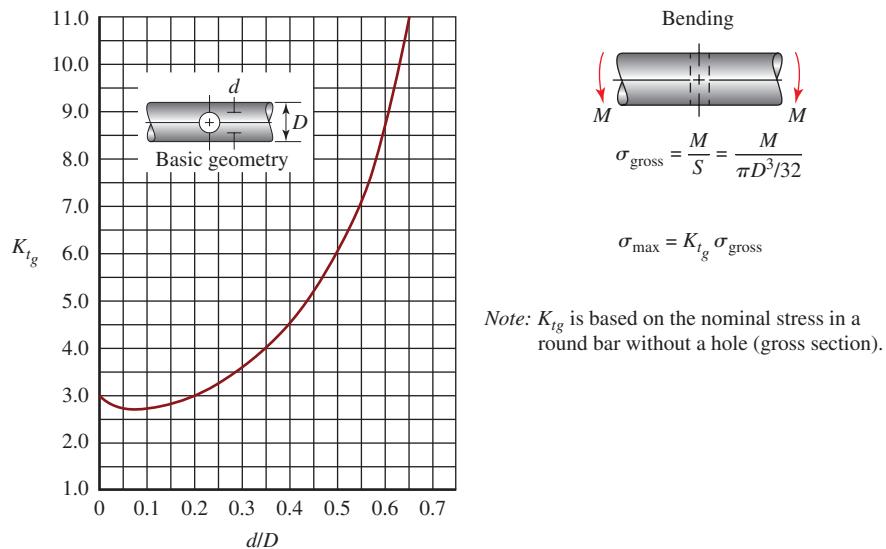


FIGURE A18–8 Round bar with a transverse hole in bending

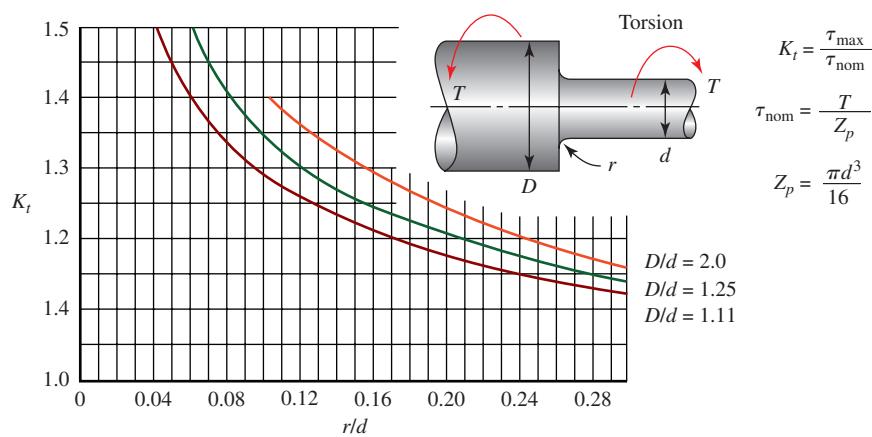


FIGURE A18–9 Stepped round bar in torsion

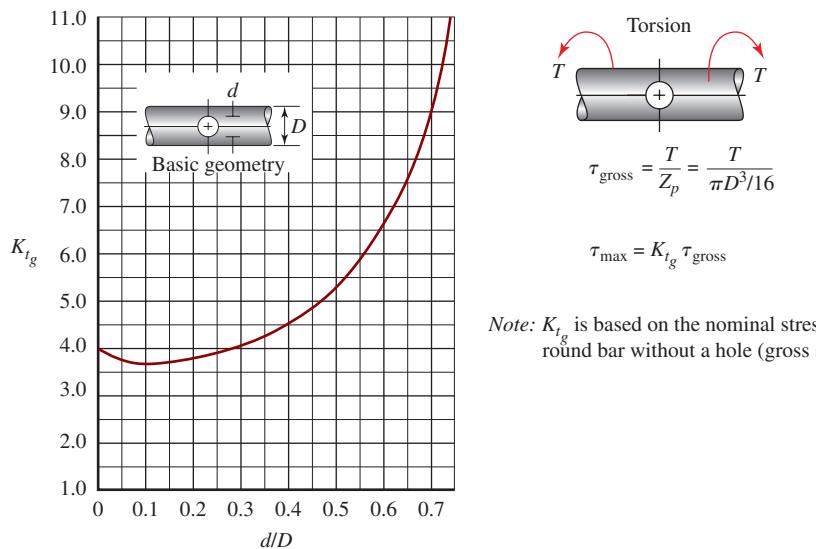


FIGURE A18-10 Round bar with a transverse hole in torsion

APPENDIX 19 Geometry Factor, I , for Pitting for Spur Gears

Section 9–6 introduced the geometry factor, I , for pitting resistance for spur gears as a factor that relates the gear tooth geometry to the radius of curvature of the teeth. The value of I is to be determined at the *lowest point of single tooth contact* (LPSTC). The AGMA defines I as

$$I = C_c C_x$$

where

C_c is the curvature factor at the pitch line

C_x is the factor to adjust for the specific height of the LPSTC

The variables involved are to be the pressure angle, ϕ , the number of teeth in the pinion, N_p , and the gear ratio $m_G = N_G/N_p$. Note that m_G is always greater than or equal to 1.0, regardless of which gear is driving. The value of C_c is easily calculated directly from

$$C_c = \frac{\cos \phi \sin \phi}{2} \frac{m_G}{m_G + 1}$$

The computation of the value of C_x requires the evaluation of several other terms.

$$C_x = \frac{R_1 R_2}{R_p R_G}$$

where each term is developed in the following equations in terms of ϕ , N_p , and m_G along with P_d . It will be shown that the diametral pitch appears in the denominator of each term, and it can then be canceled. We also express each term in the form C/P_d for convenience.

R_p = Radius of curvature for pinion at the pitch point

$$R_p = \frac{D_p \sin \phi}{2} = \frac{N_p \sin \phi}{2 P_d} = \frac{C_1}{P_d}$$

R_G = Radius of curvature for gear at the pitch point

$$R_G = \frac{D_G \sin \phi}{2} = \frac{D_p m_G \sin \phi}{2} = \frac{N_p m_G \sin \phi}{2 P_d} = \frac{C_2}{P_d} = \frac{m_G C_1}{P_d}$$

R_1 = Radius of curvature of the pinion at the LPSTC = $R_p - Z_c$

R_2 = Radius of curvature of the gear at the LPSTC = $R_G + Z_c$

$$Z_c = p_b - Z_a$$

$$p_b = \text{Base pitch} = \frac{\pi \cos \phi}{P_d} = \frac{C_3}{P_d}$$

$$Z_a = 0.5 \left[\sqrt{D_{op}^2 - D_{bp}^2} - \sqrt{D_p^2 - D_{bp}^2} \right]$$

We now express all of the diameters in this equation in terms of ϕ , N_p , m_G , and P_d .

$$D_{op} = \text{Outside diameter of the pinion} = (N_p + 2)/P_d$$

$$D_p = \text{Pinion diameter} = N_p/P_d$$

$$D_{bp} = \text{Base diameter for the pinion} = D_p \cos \phi = (N_p \cos \phi)/P_d$$

Note that each term has the diametral pitch P_d in the denominator. It can then be factored outside the square root sign. The resulting equation for Z_a is

$$Z_a = \frac{0.5}{P_d} \left[\sqrt{(N_p + 2)^2 - (N_p \cos \phi)^2} - \sqrt{N_p^2 - (N_p \cos \phi)^2} \right] = \frac{C_4}{P_d}$$

Now we can define Z_c .

$$Z_c = p_b - Z_a = \frac{C_3}{P_d} - \frac{C_4}{P_d} = \frac{C_3 - C_4}{P_d}$$

We can now complete the equations for R_1 and R_2 .

$$R_1 = R_p - Z_c = \frac{C_1}{P_d} - \frac{C_3 - C_4}{P_d} = \frac{C_1 - C_3 + C_4}{P_d}$$

$$R_2 = R_G + Z_c = \frac{C_2}{P_d} + \frac{C_3 - C_4}{P_d} = \frac{C_2 + C_3 - C_4}{P_d}$$

Finally, all of these terms can be substituted into the equation for C_x .

$$C_x = \frac{R_1 R_2}{R_p R_G} = \frac{[(C_1 - C_3 + C_4)/P_d][(C_2 + C_3 - C_4)/P_d]}{(C_1/P_d)(C_2/P_d)}$$

Now you can see that the diametral pitch P_d cancels out, resulting in the final form,

$$C_x = \frac{R_1 R_2}{R_p R_G} = \frac{(C_1 - C_3 + C_4)(C_2 + C_3 - C_4)}{(C_1)(C_2)}$$

The algorithm for computing I can now be stated. First compute each of the C terms.

$$C_1 = (N_p \sin \phi)/2$$

$$C_2 = (N_p m_G \sin \phi)/2 = (C_1)(m_G)$$

$$C_3 = \pi \cos \phi$$

$$C_4 = 0.5 \left[\sqrt{(N_p + 2)^2 - (N_p \cos \phi)^2} - \sqrt{N_p^2 - (N_p \cos \phi)^2} \right]$$

$$C_x = \frac{R_1 R_2}{R_p R_G} = \frac{(C_1 - C_3 + C_4)(C_2 + C_3 - C_4)}{(C_1)(C_2)}$$

$$C_c = \frac{\cos \phi \sin \phi}{2} \frac{m_G}{m_G + 1}$$

Finally, $I = C_c C_x$

**Example Problem
A19-1**

Compute the value for the geometry factor, I , for pitting for the following data: Two spur gears in mesh with a pressure angle of 20° , $N_P = 30$, $N_G = 150$.

Solution First compute: $m_G = N_G/N_P = 150/30 = 5.0$

$$\text{Then } C_1 = (N_P \sin \phi)/2 = (30)(\sin 20^\circ)/2 = 5.1303$$

$$C_2 = (N_P m_G \sin \phi)/2 = (C_1)(m_G) = 25.652$$

$$C_3 = \pi \cos \phi = \pi \cos 20^\circ = 2.9521$$

$$C_4 = 0.5 [\sqrt{(N_P + 2)^2 - (N_P \cos \phi)^2} - \sqrt{N_P^2 - (N_P \cos \phi)^2}]$$

$$C_4 = 0.5 [\sqrt{(30 + 2)^2 - (30 \cos 20^\circ)^2} - \sqrt{30^2 - (30 \cos 20^\circ)^2}] = 2.4407$$

$$C_x = \frac{R_1 R_2}{R_P R_G} = \frac{(C_1 - C_3 + C_4)(C_2 + C_3 - C_4)}{(C_1)(C_2)}$$

$$C_x = \frac{(5.1303 - 2.9521 + 2.4407)(25.652 + 2.9521 - 2.4407)}{(5.1303)(25.652)} = 0.91826$$

$$C_c = \frac{\cos \phi \sin \phi}{2} \frac{m_G}{m_G + 1} = \frac{\cos 20^\circ \sin 20^\circ (5)}{2(5 + 1)} = 0.13391$$

$$\text{Finally, } I = C_c C_x = (0.13391)(0.91826) = 0.12297 \approx 0.123$$

This process lends itself well to programming in a spreadsheet, MATLAB, BASIC, or any other convenient computational aid.

ANSWERS TO SELECTED PROBLEMS

Given here are the answers to problems for which there are unique solutions. Many of the problems in this book are true design problems, and individual design decisions are required to arrive at the solutions. Others are of the review question form for which the answers are in the text of the associated chapter. It should also be noted that some of the problems require the selection of design factors and the use of data from charts and graphs. Because of the judgment and interpolation required, some of the answers may be slightly different from your solutions.

Chapter 1 The Nature of Mechanical Design

15. $D = 44.5 \text{ mm}$
16. $L = 14.0 \text{ m}$
17. $T = 1418 \text{ N} \cdot \text{m}$
18. $A = 2658 \text{ mm}^2$
19. $S = 2.43 \times 10^5 \text{ mm}^3$
20. $I = 3.66 \times 10^7 \text{ mm}^4$
21. From Table A15-3:
Angle $50 \times 100 \times 6$ or $75 \times 75 \times 6$
Both have $A = 864 \text{ mm}^2$
22. $P = 5.59 \text{ kW}$
23. $s_u = 876 \text{ MPa}$
24. Weight = 48.9 N
25. $T = 20.3 \text{ N} \cdot \text{m}$
 $\theta = 0.611 \text{ rad}$
Scale = $5.14 \text{ lb} \cdot \text{in}/\text{deg}$
Scale = $33.3 \text{ N} \cdot \text{m}/\text{rad}$
26. Energy = $1.03 \times 10^{11} \text{ lb} \cdot \text{ft}/\text{yr}$
Energy = $3.88 \times 10^7 \text{ W} \cdot \text{h}/\text{yr}$
27. $\mu = 540 \text{ lb} \cdot \text{s}/\text{ft}^2$; $\mu = 25.9 \times 10^3 \text{ N} \cdot \text{s}/\text{m}^2$
28. $4.60 \times 10^9 \text{ rev}$

Chapter 2 Materials in Mechanical Design

9. No. The percent elongation must be greater than 5.0 percent to be ductile.
11. $G = 42.9 \text{ GPa}$
12. Hardness = 52.8 HRC
13. Tensile strength = 235 ksi (Approximately)

Questions 14–17 ask what is wrong with the given statements.

14. Annealed steels typically have hardness values in the range from 120 HB to 200 HB. A hardness of 750 HB is extremely hard and characteristic of as-quenched high alloy steels.
15. The HRB scale is normally limited to HRB 100.
16. The HRC hardness is normally no lower than HRC 20.
17. The given relationship between hardness and tensile strength is only valid for steels.
18. Charpy and Izod
19. Iron and carbon. Manganese and other elements are often present.
20. Iron, carbon, manganese, nickel, chromium, molybdenum.
21. Approximately 0.40 percent.
22. Low carbon: Less than 0.30 percent
Medium carbon: 0.30 to 0.50 percent
High carbon: 0.50 to 0.95 percent
23. Nominally 1.0 percent.
24. SAE 12L13 steel has lead added to improve machinability.
25. SAE 1045, 4140, 4640, 5150, 6150, 8650.
26. SAE 1045, 4140, 4340, 4640, 5150, 6150, 8650.
27. Wear resistance, strength, ductility. SAE 1080.
28. SAE 5160 OQT 1000 is a chromium steel, having nominally 0.80 percent chromium and 0.60 percent carbon, a high carbon alloy steel. It has fairly high strength and good ductility. It was through-hardened, quenched in oil, and tempered at 1000°F.

- 29.** Yes, with careful specification of the quenching medium. A hardness of HRC 40 is equivalent to HB 375. Appendix 3 indicates that oil quenching would not produce an adequate hardness. However, Figure A4–1 shows that a hardness of HB 400 could be obtained by quenching in water and tempering in 700°F while still having 20% elongation for good ductility.
- 33.** SAE 200 and 300 series
- 34.** Chromium
- 35.** ASTM A992 structural steel
- 37.** Possible answers: Gray iron, malleable iron, ductile iron, austempered ductile iron, carbidic austempered ductile iron, white iron
- 41.** Stamping dies, punches, gages
- 43.** Strain hardened
- 46.** Alloy 6061
- 48.** Bronze is an alloy of copper with several alloying elements.
- 50.** Gears and bearings
- 55.** Thermoset Plastics: Polyesters, epoxies, polyimides, phenolics
Thermoplastics: Polyethylenes, polyamides, polycarbonates, polyvinyl chlorides
- 56.** Glass, carbon, graphite, boron, aramid, silicon carbide
- 60.** Auto and truck bodies; large housings

Supplementary Problems

- Poisson's ratio:
 (a) Carbon steel–0.29;
 (c) Lead–0.43;
 (e) Concrete–0.10 to 0.25
- Erosive, abrasive, adhesive, fretting, surface fatigue
- SAE 304 and SAE 316
- (a) DIN 42CrMo4 or W-1.7225;
 (b) BS 708A42;
 (c) EN 42CrMo4;
 (d) GB ML42CrMo4;
 (e) JIS SCM 440H
- (a) DIN AlZnMgCu1.5 or W-3.4365;
 (b) BS L.95, L.96;
 (c) EN AlZn6MgCu
- Water, brine, mineral oil, water-soluble polyalkylene glycol (PAG)
- ASTM A27/A27M; A915/A915M; A128/A128M; A148/A148M
- Carbidic austempered ductile iron, used for: railroad rolling stock, earthmoving equipment, agricultural machinery, crushers
- Carbon steel F-0008-HT, $s_u = 85$ ksi (590 MPa);
 Low-alloy steel FL-4405-HT, $s_u = 160$ ksi (1100 MPa);
 Diffusion-alloyed steel FD-0205-HT, $s_u = 130$ ksi (900 MPa);
 Sinter-hardened steel FLC-4608-HT, $s_u = 100$ ksi (690 MPa)
- Aluminum 2014, 2024, 6061
- (a) Bearing bronze C93200l;
 (c) Muntz metal C37000;
 (e) Copper-nickel-zinc alloy C96200
- Metals, polymers, ceramics, glasses, elastomers, hybrids
- Metals, ceramics, composites, polymers, wood, rubbers/elastomers, foams

Chapter 3 Stress and Deformation Analysis

- $\sigma = 31.8$ MPa; $\delta = 0.12$ mm
- $\sigma = 44.6$ MPa
- $\sigma = 66.7$ MPa
- $\sigma = 5375$ psi
- $\sigma = 17\,200$ psi
- For all materials, $\sigma = 34.7$ MPa
Deflection:
 (a) $\delta = 0.277$ mm
 (b) $\delta = 0.277$ mm
 (c) $\delta = 0.347$ mm
 (d) $\delta = 0.830$ mm
 (e) $\delta = 0.503$ mm
 (f) $\delta = 27.7$ mm
 (g) $\delta = 7.56$ mm.
Note: The stress is close to the ultimate strength for (f) and (g).
- Force = 2556 lb; $\sigma = 2506$ psi
- $\sigma = 595$ psi
- Force = 1061 lb
- $D = 0.274$ in
- $\sigma_{AD} = \sigma_{DE} = 6198$ psi
 $\sigma_{EF} = 7748$ psi
 $\sigma_{BD} = 0$ psi
 $\sigma_{BE} = 5165$ psi
 $\sigma_{AB} = \sigma_{CE} = -4132$ psi
 $\sigma_{BC} = -3099$ psi
 $\sigma_{CF} = -5165$ psi
- $\sigma = 144$ MPa
- At pins A and C: $\tau_A = \tau_C = 7958$ psi
At pin B: $\tau_B = 10\,190$ psi

- 19.** $\tau = 98.8 \text{ MPa}$
- 21.** $\tau = 547 \text{ MPa}$
- 22.** $\tau = 32.6 \text{ MPa}$
- 23.** $\theta = 0.79^\circ$
- 25.** $\tau = 32\,270 \text{ psi}$
- 28.** $\tau = 70.8 \text{ MPa}; \theta = 1.94^\circ$
- 30.** $T = 9624 \text{ lb} \cdot \text{in}; \theta = 1.83^\circ$
- 31.** Required section modulus = 2.40 in³. Standard nominal sizes given for each shape:
 (a) Each side = 2.50 in
 (c) Width = 5.00 in; height = 1.75 in
 (e) S4×7.7
 (g) 4-in schedule 40 pipe
- 32.** Weights:
 (a) 212 lb
 (c) 297 lb
 (e) 77.0 lb
 (g) 107.9 lb
- 33.** Maximum deflection Deflection at loads
 (a) 0.701 in 0.572 in
 (c) 1.021 in 0.836 in
 (e) 0.375 in 0.307 in
 (g) 0.315 in 0.258 in
- 34.** $M_A = 330 \text{ N} \cdot \text{m}; M_B = 294 \text{ N} \cdot \text{m}; M_C = -40 \text{ N} \cdot \text{m}$
- 36.** (a) $y_A = 0.238 \text{ in}; y_B = 0.688 \text{ in}$
 (b) $y_A = 0.047 \text{ in}; y_B = 0.042 \text{ in}$
- 38.** $\sigma = 3480 \text{ psi}; \tau = 172 \text{ psi}$
- For Problems 39 through 49, complete solutions require drawings. Listed below are the maximum bending moments only:
- 39.** 480 lb·in
- 41.** 120 lb·in
- 43.** 93750 N·mm
- 45.** 2940 lb·in
- 47.** 11811 lb·in
- 49.** 8640 lb·in
- 51.** $\sigma = 62.07 \text{ MPa}$
- 53.** (a) $\sigma = 20.94 \text{ MPa}$ tension on top of lever
 (b) At section B, $h = 35.1 \text{ mm}$; at C, $h = 18 \text{ mm}$
- 55.** $\sigma = 84.6 \text{ MPa}$ tension
- 57.** Sides = 0.50 in
- 59.** Maximum $\sigma = -1.42 \text{ MPa}$ compression on the top surface between A and C
- 61.** $\sigma = 89.7 \text{ MPa}$
- 63.** Left: $\sigma = 39206 \text{ psi}$
 Middle: $\sigma = 29512 \text{ psi}$
 Right: $\sigma = 31551 \text{ psi}$
- 65.** $\sigma = 98.6 \text{ MPa}$
- 67.** $\sigma = 32\,564 \text{ psi}$
- 69.** Tension in member A–B: $\sigma = 50.0 \text{ MPa}$
 Shear in pin: $\tau = 199 \text{ MPa}$
 Bending in A–C at B: $\sigma = 14\,063 \text{ MPa}$ (Very high; redesign)
- 71.** $\sigma = 186 \text{ MPa}$
- 73.** $\sigma_{\max} = 121.7 \text{ MPa}$ at first step, 40 mm from either support.
- 75.** $\sigma = 108.8 \text{ MPa}$
- 77.** With pivot at top hole: $\sigma_{\max} = 10\,400 \text{ psi}$ at fulcrum
 With pivot at bottom hole: $\sigma_{\max} = 5600 \text{ psi}$ at fulcrum
- 81.** $F = 126 \text{ N}$
- 83.** $N = 0.651$ —Inside surface;
 $N = 0.913$ —Outside surface
 Both indicate failure by yielding.
- 85.** $N = 3.12$ —Inside surface; $N = 3.65$ —Outside surface

Chapter 4 Combined Stresses and Mohr's Circle

| | Maximum Principal Stress | Minimum Principal Stress | Maximum Shear Stress |
|-----|--------------------------|--------------------------|----------------------|
| 1. | 24.14 ksi | -4.14 ksi | 14.14 ksi |
| 3. | 50.0 ksi | -50.0 ksi | 50.0 ksi |
| 5. | 42.5 ksi | -122.5 ksi | 82.5 ksi |
| 7. | 71.0 ksi | -51.0 ksi | 61.0 ksi |
| 9. | 44.3 MPa | -144.3 MPa | 94.3 MPa |
| 11. | 61.3 MPa | -91.3 MPa | 76.3 MPa |
| 13. | 86.8 MPa | -156.8 MPa | 121.8 MPa |
| 15. | 250.0 MPa | -80.0 MPa | 165.0 MPa |
| 17. | 453 MPa | -353 MPa | 403 MPa |
| 19. | 42.2 MPa | -52.2 MPa | 47.2 MPa |
| 21. | 40.0 ksi | 0 ksi | 20.0 ksi |
| 23. | 42.8 ksi | -29.8 ksi | 36.3 ksi |
| 25. | 23.9 ksi | -1.9 ksi | 12.9 ksi |
| 27. | 328 MPa | 0 MPa | 164 MPa |
| 29. | 0 kPa | -868 kPa | 434 kPa |
| 31. | 26.24 ksi | -5.70 ksi | 15.97 ksi |
| 33. | 7730 psi | -4.0 psi | 3867 psi |
| 35. | 398 psi | -6366 psi | 3382 psi |

Chapter 5 Design for Different Types of Loading

Stress Ratio

1. $\sigma_{\max} = 44.6 \text{ MPa}$

$\sigma_{\min} = 6.37 \text{ MPa}$

$\sigma_m = 25.5 \text{ MPa}$

$\sigma_a = 19.1 \text{ MPa}$

$R = 0.143$

3. $\sigma_{\max} = 5375 \text{ psi}$

$\sigma_{\min} = -750 \text{ psi}$

$\sigma_m = 2313 \text{ psi}$

$\sigma_a = 3063 \text{ psi}$

$R = -0.140$

5. $\sigma_{\max} = 110.3 \text{ MPa}$

$\sigma_{\min} = 50.9 \text{ MPa}$

$\sigma_m = 80.6 \text{ MPa}$

$\sigma_a = 29.7 \text{ MPa}$

$R = 0.462$

7. $\sigma_{\max} = 9868 \text{ psi}$

$\sigma_{\min} = 1645 \text{ psi}$

$\sigma_m = 5757 \text{ psi}$

$\sigma_a = 4112 \text{ psi}$

$R = 0.167$

9. $\sigma_{\max} = 475 \text{ MPa}$

$\sigma_{\min} = 297 \text{ MPa}$

$\sigma_m = 386 \text{ MPa}$

$\sigma_a = 89 \text{ MPa}$

$R = 0.625$

Endurance Strength

11. $s'_n = 211 \text{ MPa}$

13. $s'_n = 31.2 \text{ ksi}$

Design and Analysis

19. $N = 1.57 \text{ (low)}$

23. $N = 2.82$ at right load. OK

25. $N = 11.8$

29. $D = 40 \text{ mm}; a = 9.93 \text{ mm}$

31. $2\frac{1}{2} \text{ in}$ Schedule 40 steel pipe or

$2\frac{1}{2} \text{ in}$ steel tube with 5 gauge wall ($t = 0.220 \text{ in}$)

Steel tube is lighter with smaller area.

33. $b = 1.80 \text{ in}$

35. $N = 9.11$

36. $\sigma = 34.7 \text{ MPa}$

(a) $N = 5.96$

(c) $N = 7.95$

(e) $N = 23.8$

(g) $N = 1.30 \text{ (low)}$

37. $N = 3.37$

39. Force = 1061 lb; $D = 5/16 \text{ in}$

41. $N = 1.64 \text{ (low)}$

43. $N = 5.10$

45. $D = 1.75 \text{ in}$

49. $N = 7.92$

51. $N = 3.19$

55. Specify: ASTM A536 Grade 100-70-03

57. $N = 1.61 \text{ (low)}$

59. One possible material: SAE 3140 OQT 1300

$s_u = 115 \text{ ksi}, s_y = 94 \text{ ksi}, 23\% \text{ elongation}$

61. Design a

64. $N = 0.24$ at pin holes (Failure)

67. $N = 1.65$ at B (low)

69. $N = 1.65 \text{ (low)}$

73. $N = 1.29 \text{ (low)}$

75. $r_{\min} = 0.22 \text{ in}$

Chapter 6 Columns

1. $P_{cr} = 4473 \text{ lb}$

2. $P_{cr} = 14\,373 \text{ lb}$

5. $P_{cr} = 4473 \text{ lb}$

6. $P_{cr} = 32.8 \text{ lb}$

8. (a) Pinned ends: $P_{cr} = 7498 \text{ lb}$

(b) Fixed ends: $P_{cr} = 12\,000 \text{ lb}$

(c) Fixed-pinned ends: $P_{cr} = 10\,300 \text{ lb}$

(d) Fixed-free ends: $P_{cr} = 1700 \text{ lb}$

10. $D = 1.45 \text{ in}$ required. Use $D = 1.50 \text{ in}$.

14. $S = 1.423 \text{ in}$ required. Use $S = 1.500 \text{ in}$.

16. Use $D = 1.50 \text{ in}$.

23. $P = 1189 \text{ lb}$

25. $P = 1877 \text{ lb}$

27. $\sigma = 212 \text{ MPa}; y = 25.7 \text{ mm}$

The stress is above the yield strength of the column material. Specify a larger pipe size.

28. $\sigma = 6685 \text{ psi}; y = 0.045 \text{ in}$

30. $P = 37\,500 \text{ psi}$

31. $P_a = 22\,600 \text{ lb}$

33. $4 \times 4 \times 1/2$ is the smallest outside dimension.
 $I = 11.9 \text{ in}^4$. Weight = 21.5 lb/ft.

$6 \times 4 \times 1/4$ is the lightest from those listed.
 $I_{\min} = I_y = 11.1 \text{ in}^4$. Weight = 15.6 lb/ft.

35. $P_a = 11\,750 \text{ lb}$

37. $P_a = 18\,300 \text{ lb}$

39. Piston rod is safe.

Chapter 7 Belt Drives and Chain Drives

V-Belt Drives

1. 3V Belt, 75 inches long
2. $C = 22.00$ in
3. $\theta_1 = 157^\circ; \theta_2 = 203^\circ$
10. $\nu_b = 2405$ ft/min
13. $P = 6.05$ hp

Roller Chain

25. No. 80 chain
28. Design power rating = 18.08 hp; Type B lubrication (bath)
29. Design power rating = 45.2 hp
34. $L = 96$ in, 128 pitches
35. $C = 35.57$ in

Chapter 8 Kinematics of Gears

Gear Geometry

1. $N = 44; P_d = 12$
 - (a) $D = 3.667$ in
 - (b) $p = 0.2618$ in
 - (c) $m = 2.117$ mm
 - (d) $m = 2.00$ mm
 - (e) $a = 0.0833$ in
 - (f) $b = 0.1042$ in
 - (g) $c = 0.0208$ in
 - (h) $h_t = 0.1875$ in
 - (i) $h_k = 0.1667$ in
 - (j) $t = 0.131$ in
 - (k) $D_o = 3.833$ in
3. $N = 45; P_d = 2$
 - (a) $D = 22.500$ in
 - (b) $p = 1.571$ in
 - (c) $m = 12.70$ mm
 - (d) $m = 12.0$ mm
 - (e) $a = 0.5000$ in
 - (f) $b = 0.6250$ in
 - (g) $c = 0.1250$ in
 - (h) $h_t = 1.1250$ in
 - (i) $h_k = 1.0000$ in
 - (j) $t = 0.7854$ in
 - (k) $D_o = 23.500$ in
5. $N = 22; P_d = 1.75$
 - (a) $D = 12.571$ in
 - (b) $p = 1.795$ in
 - (c) $m = 14.514$ mm

- (d) $m = 16.0$ mm
- (e) $a = 0.5714$ in
- (f) $b = 0.7143$ in
- (g) $c = 0.1429$ in
- (h) $h_t = 1.2857$ in
- (i) $h_k = 1.1429$ in
- (j) $t = 0.8976$ in
- (k) $D_o = 13.714$ in
7. $N = 180; P_d = 80$
 - (a) $D = 2.2500$ in
 - (b) $p = 0.0393$ in
 - (c) $m = 0.318$ mm
 - (d) $m = 0.30$ mm
 - (e) $a = 0.0125$ in
 - (f) $b = 0.0170$ in
 - (g) $c = 0.0045$ in
 - (h) $h_t = 0.0295$ in
 - (i) $h_k = 0.0250$ in
 - (j) $t = 0.0196$ in
 - (k) $D_o = 2.2750$ in
9. $N = 28; P_d = 20$
 - (a) $D = 1.4000$ in
 - (b) $p = 0.1571$ in
 - (c) $m = 1.270$ mm
 - (d) $m = 1.25$ mm
 - (e) $a = 0.0500$ in
 - (f) $b = 0.0620$ in
 - (g) $c = 0.0120$ in
 - (h) $h_t = 0.1120$ in
 - (i) $h_k = 0.1000$ in
 - (j) $t = 0.0785$ in
 - (k) $D_o = 1.5000$ in
11. $N = 45; m = 1.25$
 - (a) $D = 56.250$ mm
 - (b) $p = 3.927$ mm
 - (c) $P_d = 20.3$
 - (d) $P_d = 20$
 - (e) $a = 1.25$ mm
 - (f) $b = 1.563$ mm
 - (g) $c = 0.313$ mm
 - (h) $h_t = 2.813$ mm
 - (i) $h_k = 2.500$ mm
 - (j) $t = 1.963$ mm
 - (k) $D_o = 58.750$ mm

13. $N = 22; m = 20$

- (a) $D = 440.00 \text{ mm}$
- (b) $p = 62.83 \text{ mm}$
- (c) $P_d = 1.270$
- (d) $P_d = 1.25$
- (e) $a = 20.0 \text{ mm}$
- (f) $b = 25.00 \text{ mm}$
- (g) $c = 5.000 \text{ mm}$
- (h) $b_t = 45.00 \text{ mm}$
- (i) $b_k = 40.00 \text{ mm}$
- (j) $t = 31.42 \text{ mm}$
- (k) $D_o = 480.00 \text{ mm}$

15. $N = 180; m = 0.4$

- (a) $D = 72.00 \text{ mm}$
- (b) $p = 1.26 \text{ mm}$
- (c) $P_d = 63.5$
- (d) $P_d = 64$
- (e) $a = 0.40 \text{ mm}$
- (f) $b = 0.500 \text{ mm}$
- (g) $c = 0.100 \text{ mm}$
- (h) $b_t = 0.90 \text{ mm}$
- (i) $b_k = 0.80 \text{ mm}$
- (j) $t = 0.628 \text{ mm}$
- (k) $D_o = 72.80 \text{ mm}$

17. $N = 28; m = 0.8$

- (a) $D = 22.40 \text{ mm}$
- (b) $p = 2.51 \text{ mm}$
- (c) $P_d = 31.75$
- (d) $P_d = 32$
- (e) $a = 0.80 \text{ mm}$
- (f) $b = 1.000 \text{ mm}$
- (g) $c = 0.200 \text{ mm}$
- (h) $b_t = 1.800 \text{ mm}$
- (i) $b_k = 1.60 \text{ mm}$
- (j) $t = 1.257 \text{ mm}$
- (k) $D_o = 24.00 \text{ mm}$

19. Problem 1: $P_d = 12$; backlash = 0.006 to 0.009 in
Problem 12: $m = 12$; backlash = 0.52 to 0.82 mm

21.(a) $C = 14.000 \text{ in}$

- (b) $VR = 4.600$
- (c) $n_G = 48.9 \text{ rpm}$
- (d) $v_t = 294.5 \text{ ft/min}$

23. (a) $C = 2.266 \text{ in}$

- (b) $VR = 6.25$
- (c) $n_G = 552 \text{ rpm}$
- (d) $v_t = 565 \text{ ft/min}$

25.(a) $C = 90.00 \text{ mm}$

- (b) $VR = 3.091$
- (c) $n_G = 566 \text{ rpm}$
- (d) $v_t = 4.03 \text{ m/s}$

27. (a) $C = 162.0 \text{ mm}$

- (b) $VR = 1.250$
- (c) $n_G = 120 \text{ rpm}$
- (d) $v_t = 1.13 \text{ m/s}$

For problems 29 through 32, the following are errors in the given statements:

29. The pinion and the gear cannot have different pitches.**30.** The actual center distance should be 8.333 in.**31.** There are too few teeth in the pinion; interference is to be expected.**32.** The actual center distance should be 2.156 in. Apparently, the outside diameters were used instead of the pitch diameters to compute C .**33.** $Y = 8.45 \text{ in}; X = 10.70 \text{ in}$ **35.** $Y = 44.00 \text{ mm}; X = 58.40 \text{ mm}$ **37.** Output speed = 111 rpm CCW**39.** Output speed = 144 rpm CW

Helical Gearing

41. $p = 0.3927 \text{ in}$ $p_n = 0.3401 \text{ in}$ $P_{nd} = 9.238$ $P_x = 0.680 \text{ in}$ $D = 5.625 \text{ in}$ $\phi_n = 12.62^\circ$ $F/P_x = 2.94$ axial pitches in the face width**42.** $P_d = 8.485$ $p = 0.370 \text{ in}$ $p_c = 0.2618 \text{ in}$ $P_x = 0.370 \text{ in}$ $\phi_t = 27.2^\circ$ $D = 5.657 \text{ in}$ $F/P_x = 4.05$ axial pitches in the face width

Bevel Gears

45. Selected results: $F = 1.25 \text{ in}$ specified. $d = 2.500 \text{ in}$ $D = 7.500 \text{ in}$ $\gamma = 18.435^\circ$ $\Gamma = 71.565^\circ$ $A_o = 3.953 \text{ in}$ $F_{\text{nom}} = 1.186 \text{ in}$ $A_m = A_{mG} = 3.328 \text{ in}$ $h = 0.281 \text{ in}$ $c = 0.035 \text{ in}$ $b_m = 0.316 \text{ in}$ $a_p = 0.213 \text{ in}$ $a_G = 0.068 \text{ in}$ $d_o = 2.992 \text{ in}$ $D_o = 7.555 \text{ in}$ **49.** Selected results: $F = 0.800 \text{ in}$ specified. $d = 1.500 \text{ in}$ $D = 6.000 \text{ in}$ $\gamma = 14.03^\circ$ $\Gamma = 75.97^\circ$ $A_o = 3.092 \text{ in}$ $F_{\text{nom}} = 0.928 \text{ in}$ $A_m = A_{mG} = 2.692 \text{ in}$ $h = 0.145 \text{ in}$ $c = 0.018 \text{ in}$ $b_m = 0.163 \text{ in}$ $a_p = 0.112 \text{ in}$ $a_G = 0.033 \text{ in}$ $d_o = 1.755 \text{ in}$ $D_o = 6.020 \text{ in}$

Wormgearing

52. $L = 0.3142 \text{ in}$

$a = 0.100 \text{ in}$

$D_{oW} = 1.450 \text{ in}$

$D_G = 4.000 \text{ in}$

$VR = 40$

$\lambda = 4.57^\circ$

$b = 0.1157 \text{ in}$

$D_{RW} = 1.0186 \text{ in}$

$C = 2.625 \text{ in}$

Analysis of Complex Gear Trains

59. 0.4067 rpm

61. 0.5074 rpm

Kinematic Design of a Single Gear Pair

63. $N_p = 22, N_G = 38$

65. $N_p = 19, N_G = 141$

Kinematic Design of Gear Trains

68. One possible solution: Triple reduction;
Layout as in Figure 8–48.

$$N_A = N_C = N_E = 17, N_B = 136, N_D = 119, \\ N_F = 85$$

$TV = 280$ exactly; $n_{\text{out}} = 12 \text{ rpm}$ exactly;
Used factoring method

69. One possible solution: Triple reduction with an idler

$$N_{P1} = 18, N_{G1} = 126, N_{P2} = 18, N_{G2} = 108, \\ N_{P3} = 18, N_{G3} = 135, N_{\text{idler}} = 18 \\ n_{\text{out}} = 13.33 \text{ rpm}$$

72. One possible solution: Double reduction;
Layout as in Figure 8–47.

$$N_A = N_C = 18, N_B = 75, N_D = 51 \\ n_{\text{out}} = 148.2 \text{ rpm}$$

Chapter 9 Spur Gear Design

1. (a) $n_G = 486.1 \text{ rpm}$

(b) $VR = m_G = 3.600$

(c) $D_P = 1.667 \text{ in}; D_G = 6.000 \text{ in}$

(d) $C = 3.833 \text{ in}$

(e) $v_t = 764 \text{ ft/min}$

(f) $T_P = 270 \text{ lb} \cdot \text{in}; T_G = 972 \text{ lb} \cdot \text{in}$

(g) $W_t = 324 \text{ lb}$

(h) $W_r = 118 \text{ lb}$

(i) $W_N = 345 \text{ lb}$

3. (a) $n_G = 752.7 \text{ rpm}$

(b) $VR = m_G = 4.583$

(c) $D_P = 1.000 \text{ in}; D_G = 4.583 \text{ in}$

(d) $C = 2.792 \text{ in}$

(e) $v_t = 903 \text{ ft/min}$

(f) $T_P = 13.7 \text{ lb} \cdot \text{in}; T_G = 62.8 \text{ lb} \cdot \text{in}$

(g) $W_t = 27.4 \text{ lb}$

(h) $W_r = 10.0 \text{ lb}$

(i) $W_N = 29.2 \text{ lb}$

5. (a) $n_G = 304.4 \text{ rpm}$

(b) $VR = m_G = 3.778$

(c) $D_P = 3.600 \text{ in}; D_G = 13.600 \text{ in}$

(d) $C = 8.600 \text{ in}$

(e) $v_t = 1084 \text{ ft/min}$

(f) $T_P = 2739 \text{ lb} \cdot \text{in}; T_G = 10348 \text{ lb} \cdot \text{in}$

(g) $W_t = 1522 \text{ lb}$

(h) $W_r = 710 \text{ lb}$

(i) $W_N = 1680 \text{ lb}$

8. A10

9. A7

11. A2

15. A8

26. (a) $s_{at} = 28.26 \text{ ksi}; s_{ac} = 93.50 \text{ ksi} - \text{U.S.}$

$s_{at} = 194.9 \text{ MPa}; s_{ac} = 644.6 \text{ MPa} - \text{SI}$

(c) $s_{at} = 43.72 \text{ ksi}; s_{ac} = 157.9 \text{ ksi} - \text{U.S.}$

$s_{at} = 301.5 \text{ MPa}; s_{ac} = 1088.6 \text{ MPa} - \text{SI}$

(e) $s_{at} = 36.80 \text{ ksi}; s_{ac} = 104.1 \text{ ksi} - \text{U.S.}$

$s_{at} = 253.7 \text{ MPa}; s_{ac} = 718.5 \text{ MPa} - \text{SI}$

(g) $s_{at} = 57.20 \text{ ksi}; s_{ac} = 173.9 \text{ ksi} - \text{U.S.}$

$s_{at} = 394.3 \text{ MPa}; s_{ac} = 1200.5 \text{ MPa} - \text{SI}$

27. $HB = 300$ for Grade 1; $HB = 192$ for Grade 2

33. (a) $s_{at} = 45.0 \text{ ksi}; s_{ac} = 170.0 \text{ ksi} - \text{U.S.}$

$s_{at} = 310 \text{ MPa}; s_{ac} = 1172 \text{ MPa} - \text{SI}$

(c) $s_{at} = 55.0 \text{ ksi}; s_{ac} = 180.0 \text{ ksi} - \text{U.S.}$

$s_{at} = 379 \text{ MPa}; s_{ac} = 1241 \text{ MPa} - \text{SI}$

(e) $s_{at} = 55.0 \text{ ksi}; s_{ac} = 180.0 \text{ ksi} - \text{U.S.}$

$s_{at} = 379 \text{ MPa}; s_{ac} = 1241 \text{ MPa} - \text{SI}$

(f) $s_{at} = 5.00 \text{ ksi}; s_{ac} = 50.0 \text{ ksi} - \text{U.S.}$

$s_{at} = 35.0 \text{ MPa}; s_{ac} = 345 \text{ MPa} - \text{SI}$

(h) $s_{at} = 27.0 \text{ ksi}; s_{ac} = 92.0 \text{ ksi} - \text{U.S.}$

$s_{at} = 186 \text{ MPa}; s_{ac} = 634 \text{ MPa} - \text{SI}$

(i) $s_{at} = 23.6 \text{ ksi}; s_{ac} = 65.0 \text{ ksi} - \text{U.S.}$

$s_{at} = 163 \text{ MPa}; s_{ac} = 448 \text{ MPa} - \text{SI}$

(l) $s_{at} = 9.00 \text{ ksi}; s_{ac}$ not listed

$s_{at} = 62.0 \text{ MPa}; s_{ac}$ not listed

34. $b_e = 0.027 \text{ in}$

35. $b_e = 0.90 \text{ mm}$

The following three sets of answers are given in groups of four problems that all relate to the same basic set of design data.

Group A

37. $s_{tP} = 32740 \text{ psi}; s_{tG} = 26940 \text{ psi}$

43. $s_{atP} = 34460 \text{ psi}; s_{atG} = 28100 \text{ psi}$

49. $s_{cP} = 172100 \text{ psi}; s_{cG} = 172100 \text{ psi}$

55. $s_{acP} = 189200 \text{ psi}; s_{acG} = 185100 \text{ psi}$

Group B

39. $s_{tP} = 2300 \text{ psi}$; $s_{tG} = 2000 \text{ psi}$
 45. $s_{atP} = 3700 \text{ psi}$; $s_{atG} = 3100 \text{ psi}$
 51. $s_{cP} = 37\ 800 \text{ psi}$; $s_{cG} = 37\ 800 \text{ psi}$
 57. $s_{acP} = 63\ 600 \text{ psi}$; $s_{acG} = 62\ 200 \text{ psi}$

Group C

41. $s_{tP} = 9458 \text{ psi}$; $s_{tG} = 8134 \text{ psi}$
 47. $s_{atP} = 10\ 254 \text{ psi}$; $s_{atG} = 8642 \text{ psi}$
 53. $s_{cP} = 78\ 263 \text{ psi}$; $s_{cG} = 78\ 263 \text{ psi}$
 59. $s_{acP} = 87\ 531 \text{ psi}$; $s_{acG} = 85\ 727 \text{ psi}$

Problems 60–70 are design problems for which there are no unique solutions.

71. Power capacity = 12.9 hp based on gear contact stress at 15 000 h life.

Problems 73–83 are design problems for which there are no unique solutions.

Chapter 10 Helical Gears, Bevel Gears, and Wormgearing

1. $W_t = 89.6 \text{ lb}$; $W_x = 51.7 \text{ lb}$; $W_r = 23.2 \text{ lb}$
 $A_v = 11$; $s_t = 2778 \text{ psi}$; $s_c = 36\ 228 \text{ psi}$
 Cast iron Class 20
3. $W_t = 143 \text{ lb}$; $W_x = 143 \text{ lb}$; $W_r = 37.0 \text{ lb}$
 $A_v = 9$; $s_t = 9720 \text{ psi}$; $s_c = 73\ 300 \text{ psi}$
 Ductile iron 60–40–18 or Cast iron Class 40
14. $W_{tP} = W_{tG} = 599 \text{ lb}$; $W_{xP} = W_{rG} = 69 \text{ lb}$;
 $W_{rP} = W_{xG} = 207 \text{ lb}$; $A_v = 9$
18. $D_G = 4.000 \text{ in}$; $C = 2.625 \text{ in}$; $VR = 40$
 $W_{xW} = W_{tG} = 462 \text{ lb}$; $W_{xG} = W_{tW} = 53 \text{ lb}$;
 $W_{rG} = W_{rW} = 120 \text{ lb}$
 Efficiency = 70.3%; Worm speed = 1200 rpm;
 $P_i = 0.626 \text{ hp}$
 $\sigma_G = 24\ 223 \text{ psi}$ [Slightly high for phosphor bronze]
 Rated wear load = $W_{tr} = 659 \text{ lb}$. [OK, $> W_{tG}$]

Chapter 11 Keys, Couplings, and Seals

1. Use 1/2 in square key; SAE 1040 cold-drawn steel; length = 3.75 in.
3. Use 3/8 in square key; SAE 1018 cold-drawn steel; required length = 1.02 in based on compression on cast iron hub; use $L = 1.50 \text{ in}$ to be just shorter than the 1.75 in hub length.
5. T = torque; D = shaft diameter; L = hub length. From Table 11–6, $K = T/(D^2L)$.
- (a) Data from Problem 1: required $K = 1313$; too high for any spline in Table 11–6.
- (c) Data from Problem 3: required $K = 208$; use 6 splines.

7. Sprocket: 1/2 in square key; SAE 1020 CD;
 $L = 1.00 \text{ in}$
 Wormgear: 3/8 in square key; SAE 1020 CD;
 $L = 1.75 \text{ in}$
13. $T = 2885 \text{ lb}\cdot\text{in}$
15. $T = 27\ 970 \text{ lb}\cdot\text{in}$
19. Data from Problem 16: $T = 313 \text{ lb}\cdot\text{in}$ per inch of hub length
 Data from Problem 18: $T = 4300 \text{ lb}\cdot\text{in}$ per inch of hub length

Chapter 12 Shaft Design

1. $T_B = 3436 \text{ lb}\cdot\text{in}$
 $F_{Bx} = W_{tB} = 430 \text{ lb} \leftarrow$
 $F_{By} = W_{rB} = 156 \text{ lb} \downarrow$
3. $T_B = 656 \text{ lb}\cdot\text{in}$
 $F_{Bx} = W_{tB} = 437 \text{ lb} \rightarrow$
 $F_{By} = W_{rB} = 159 \text{ lb} \uparrow$
5. $T_D = 3938 \text{ lb}\cdot\text{in}$
 $W_{tD} = 985 \text{ lb}$ Up at 30° left of vertical
 $W_{rD} = 358 \text{ lb}$ To right 30° above horizontal
 $F_{Dx} = 182 \text{ lb} \leftarrow$
 $F_{Dy} = 1032 \text{ lb} \uparrow$
7. $T_C = 6563 \text{ lb}\cdot\text{in}$
 $F_{Cx} = W_{tC} = 1313 \text{ lb} \rightarrow$
 $F_{Cy} = W_{rC} = 478 \text{ lb} \uparrow$
9. $T_C = 1432 \text{ lb}\cdot\text{in}$
 $F_{Cx} = W_{tC} = 477 \text{ lb} \leftarrow$
 $F_{Cy} = W_{rC} = 174 \text{ lb} \downarrow$
11. $T_F = 1432 \text{ lb}\cdot\text{in}$
 $W_{tF} = 477 \text{ lb}$ Down at 45° left of vertical
 $W_{rF} = 174 \text{ lb}$ To right 45° below horizontal
 $F_{Fx} = 214 \text{ lb} \leftarrow$
 $F_{Fy} = 460 \text{ lb} \downarrow$
13. $T_A = 3150 \text{ lb}\cdot\text{in}$
 $F_{Ax} = 0$
 $F_{Ay} = F_A = 630 \text{ lb} \downarrow$
15. $T_C = 1444 \text{ lb}\cdot\text{in}$
 $F_C = 289 \text{ lb}$ Down at 15° left of vertical
 $F_{Cx} = 75 \text{ lb} \leftarrow$
 $F_{Cy} = 279 \text{ lb} \downarrow$
17. $T_C = 2056 \text{ lb}\cdot\text{in}$
 $F_{Cx} = F_C = 617 \text{ lb} \leftarrow$
 $F_{Cy} = 0$
19. $T_C = 10\ 500 \text{ lb}\cdot\text{in}$
 $F_{Cx} = F_C = F_{Dx} = F_D = 1500 \text{ lb} \leftarrow$
 $F_{Cy} = F_{Dy} = 0$

21. $T_E = 1313 \text{ lb} \cdot \text{in}$

$$\begin{aligned} F_E &= 438 \text{ lb Up at } 30^\circ \text{ above horizontal} \\ F_{Ex} &= 379 \text{ lb} \rightarrow \\ F_{Ey} &= 219 \text{ lb} \uparrow \end{aligned}$$

31. $T_B = 727 \text{ lb} \cdot \text{in}$

$$\begin{aligned} F_{Bx} &= W_{tB} = 351 \text{ lb} \rightarrow \\ F_{By} &= W_{rB} = 132 \text{ lb} \downarrow \\ W_{xB} &= 94 \text{ lb exerts a CCW concentrated moment of } 194.6 \text{ lb} \cdot \text{in on shaft at } B. \end{aligned}$$

W_{xB} also places the shaft in compression from A to B if bearing A resists the thrust load.

33. $T_A = 270 \text{ lb} \cdot \text{in}$

$$\begin{aligned} F_{Ax} &= 0 \\ F_{Ay} &= F_A = 162 \text{ lb} \downarrow \\ F_{Cx} &= W_{tW} = 265 \text{ lb} \leftarrow \\ F_{Cy} &= W_{rW} = 352 \text{ lb} \uparrow \\ W_{xW} &= 962 \text{ lb exerts a CW concentrated moment of } 962 \text{ lb} \cdot \text{in on shaft at worm.} \end{aligned}$$

W_{xW} also places the shaft in compression from bearing B to worm if bearing B resists the thrust load.

35. Torques: Shaft 1— $T_1 = 175 \text{ lb} \cdot \text{in}$; Shaft 2— $T_2 = 350 \text{ lb} \cdot \text{in}$; Shaft 3— $T_3 = 1050 \text{ lb} \cdot \text{in}$

Forces for Shaft 2: Directions from end view for tangential; Side view of shaft for axial and radial

Forces on Gear B: Tangential — $W_{tB} = 233 \text{ lb} \rightarrow$; Axial — $W_{xB} = 233 \text{ lb} \rightarrow$; Radial — $W_{rB} = 85 \text{ lb} \downarrow$

Forces on Gear C: Tangential — $W_{tC} = 350 \text{ lb} \leftarrow$; Axial — $W_{xC} = 350 \text{ lb} \leftarrow$; Radial — $W_{rC} = 128 \text{ lb} \downarrow$

37. Torque on bevel gear: $T_g = 420 \text{ lb} \cdot \text{in}$;

Torque on each sprocket: $T_{sp} = 210 \text{ lb} \cdot \text{in}$

Bevel gear forces: Tangential — $W_{tg} = 108 \text{ lb}$; Radial — $W_{rg} = 12 \text{ lb}$; Axial — $W_{ag} = 37 \text{ lb}$

Force on each sprocket:

$$F_{c2} = 42 \text{ lb} \rightarrow; F_{C1} = 42 \text{ lb} \leftarrow$$

39. Torque on motor shaft: $T_m = 657 \text{ lb} \cdot \text{in}$;

Bending force on motor shaft: $F_B = 352 \text{ lb}$

Reducer input shaft 1: $T_1 = 986 \text{ lb} \cdot \text{in}$;

Bending force from belt drive: $F_B = 352 \text{ lb}$

Forces on Gear A: Tangential — $W_{tA} = 1096 \text{ lb}$;

Radial — $W_{rA} = 399 \text{ lb}$

Reducer shaft 2: $T_2 = 2958 \text{ lb} \cdot \text{in}$

Forces on Gear B: Tangential — $W_{tB} = 1096 \text{ lb}$; Radial — $W_{rB} = 399 \text{ lb}$

Forces on Gear C: Tangential — $W_{tC} = 1479 \text{ lb}$;

Radial — $W_{rC} = 538 \text{ lb}$

Reducer shaft 3: $T_3 = 5917 \text{ lb} \cdot \text{in}$

Forces on output Gear D: Tangential — $W_{tD} = 1479 \text{ lb}$; Radial — $W_{rD} = 538 \text{ lb}$

Forces on Chain sprocket: Net force

$$F_N = 2817 \text{ lb}; F_{Nx} = 964 \text{ lb}; F_{Ny} = 2647 \text{ lb}$$

41. Force on Lever 2: $F_2 = 30 \text{ N}$;

Torque = $1200 \text{ N} \cdot \text{mm}$ between B and D.

Chapter 13 Tolerances and Fits

1. RC8: Hole—3.5050/3.5000; shaft—3.4930/3.4895; clearance—0.0070 to 0.0155 in

3. RC8: Hole—0.6313/0.6285; shaft—0.6250/0.6234; clearance—0.0035 to 0.0079 in

5. RC8: Hole—1.2540/1.2500; pin—1.2450/1.2425; clearance—0.0050 to 0.0115 in

7. RC5: Hole—0.7512/0.7500; pin—0.7484/0.7476; clearance—0.0016 to 0.0036 in (tighter fit could be used)

10. FN5: Hole—3.2522/3.2500; shaft—3.2584/3.2570; interference—0.0048 to 0.0084 in; pressure = 13 175 psi; stress = 64 363 psi

12. FN5: Interference—0.0042 to 0.0072 in; pressure = 8894 psi; stress = 18 901 psi at inner surface of aluminum cylinder; stress = -8894 psi at outer surface of steel rod; stress in aluminum is very high

13. Maximum interference = 0.00178 in.

14. Temperature = 567°F

15. Shrinkage = 0.0038 in; $t = 284^\circ\text{F}$

16. Final ID = 3.4973 in

Chapter 14 Rolling Contact Bearings

1. Life = 2.76×10^6 rev

2. $C = 12\ 745 \text{ lb}$

For Problems 5–17 calling for the selection of suitable bearings for given applications, several possible solutions exist. The listed possible solutions use the data in Table 14–3 and the bearing with the smallest bore was selected that would satisfy the load requirements. The design life is a design decision and the values used for the given solutions are listed. For pure radial loads, R , the method from Section 14–9 is used. For both radial and thrust loading (R and T), the method from Section 14–10 is used. Because the data in Table 14–3 are not from any specific bearing manufacturer's catalog, these results cannot be relied upon for actual implementation. It is recommended that online manufacturer's catalogs be used for actual applications.

5. For 10 000 h life:

At B : $R = 4643 \text{ lb}$; Required $C = 33\ 029 \text{ lb}$; Bearing 6319

At C : $R = 2078 \text{ lb}$; Required $C = 14\ 782 \text{ lb}$; Bearing 6311

7. For 20 000 h life:

At A : $R = 509 \text{ lb}$; Required $C = 2519 \text{ lb}$; Bearing 6302

At C : $R = 1742 \text{ lb}$; Required $C = 8621 \text{ lb}$; Bearing 6212

9. For 20 000 h life: $R = 455$ lb;
Required $C = 5066$ lb; Bearing 6306
11. For 5000 h life: $R = 1265$ lb, $T = 645$ lb;
Required $C = 6284$ lb; Bearing 6307
13. For 15 000 h life: $R = 2875$ lb, $T = 1350$ lb;
Required $C = 31\ 909$ lb; Bearing 6318
15. For 2000 h life: $R = 5.6$ kN, $T = 2.8$ kN;
Required $C = 25.61$ kN; Bearing 6306
17. For 20 000 h life: $R = 1.2$ kN, $T = 0.85$ kN;
Required $C = 20.62$ kN; Bearing 6305
19. Life = 45 285 hours
21. Life = 24 909 hours
23. Life = 39 231 hours
25. $C = 17\ 229$ lb
27. $C = 4580$ lb

Chapter 15 No practice problems

Chapter 16 Plain Surface Bearings

All problems in this chapter are design problems for which no unique solutions exist.

Example Solution—Problem 16–1:

Bearing length = $L = 1.50$ in;
Bearing bore diameter = $D = 3.00$ in
Pressure = $p = 16.67$ psi; $V = 1374$ ft/min
 $pV = 22\ 900$ psi-fpm;
Design value for $pV = 45\ 800$ psi-fpm
Specify porous bronze/oil impregnated bearing:
 pV rating = 50 000 psi-fpm

Chapter 17 Linear Motion Elements

5. $2\frac{1}{2}$ –3 Acme thread
6. $L > 1.23$ in
7. $T = 6974$ lb·in
8. $T = 3712$ lb·in
11. Lead angle = 4.72° ; self-locking
12. Efficiency = 35%
13. $n = 180$ rpm; $P = 0.866$ hp
14. Specify a $\frac{3}{4}$ –2 ball screw
17. 24.7 years
18. Required $A_t = 1667$ mm 2 ; Use M55×9 screw
19. $T_u = 658.6$ N·m
20. $T_d = 291.9$ N·m
21. Power = 260.5 kW
22. Lead angle = $\lambda = 3.25^\circ < 5.0^\circ$ – Self locking
23. Efficiency = 33.4 percent

Chapter 18 Springs

1. $k = 13.3$ lb/in
2. $L_f = 1.497$ in
3. $F_s = 47.8$ lb; $L_f = 1.25$ in
7. $ID = 0.93$ in; $D_m = 1.015$ in; $C = 11.94$;
 $N = 6.6$ coils
8. $C = 8.49$; $p = 0.241$ in; pitch angle = 8.70° ;
 $L_s = 1.12$ in
9. $F_o = 10.25$ lb; stress = 74 500 psi
11. OD = 0.583 in when at solid length
12. $F_s = 26.05$ lb; stress = 189 300 psi (High)
31. Bending stress = 114 000 psi;
torsion stress = 62 600 psi. Stresses are safe.
35. Torque = 0.91 lb·in to rotate spring 180° .
Stress = 184 800 psi; OK for severe service

Chapter 19 Fasteners

4. Grade 2 bolts: 5/16–18; $T = 70.3$ lb·in
5. $F = 1190$ lb
6. $F = 4.23$ kN
7. Nearest metric thread is M24 × 2. Metric thread is 1.8 mm larger (8% larger).
8. Closest standard thread is M5 × 0.8. (#10–32 is also close.)
9. $F = 6.35$ kN
10. (a) 1177 lb
(c) 2385 lb
(e) 2862 lb
(g) 1081 lb
(i) 2067 lb
(k) 143 lb

Chapter 20 Machine Frames, Bolted Connections, and Welded Joints

Problems 1–16 are design problems for which there are no unique solutions.

17. _____

| | Material | Diameter (in) | Weight (lb per inch of length) |
|----|-------------------------|------------------|--------------------------------------|
| a. | 1020 HR steel | 0.638 | 0.0906 |
| c. | Aluminum 2014-T6 | 0.451 | 0.0160 |
| e. | Ti-6Al-4V (Annealed) | 0.319 | 0.0128 |

Chapter 21 Electric Motors and Controls

13. 480V, 3phase because the current would be lower and the motor size smaller
16. $n_s = 1800$ rpm in the United States
 $n_s = 1500$ rpm in France
17. 2-Pole motor; $n = 3600$ rpm at zero load (approximate)
18. $n_s = 12\,000$ rpm
19. 1725 rpm and 1140 rpm
20. Variable frequency control
34. (a) Single phase, split phase AC motor
(b) $T = 41.4$ lb·in
(c) $T = 62.2$ lb·in
(d) $T = 145$ lb·in
35. (b) $T = 4.15$ N·m
(c) $T = 6.23$ N·m
(d) $T = 14.5$ N·m
39. Full load speed = synchronous speed = 720 rpm
47. Use a NEMA Type K SCR control to convert 115 VAC to 90 VDC; use a 90 VDC motor.

51. Speed theoretically increases to infinity

52. $T = 20.5$ N·m

54. NEMA 2 starter

55. NEMA 1 starter

Chapter 22 Motion Control: Clutches and Brakes

1. $T = 495$ lb·in
3. $T = 41$ lb·in
5. Data from Problem 1 : $T = 180$ lb·in
Data from Problem 3 : $T = 27.4$ lb·in
7. Clutch: $T = 2122$ N·m
Brake: $T = 531$ N·m
8. $T = 143$ lb·ft
9. $T = 60.9$ lb·ft
11. $T = 223.6$ lb·ft
15. $F_a = 109$ lb
17. $W = 138$ lb
18. $b > 16.0$ in

INDEX

A

Abrasion resistance, 298
Adhesives, 702
Aerospace Materials System (AMS), 39–40
Air blasting, 466
Allowable stress, 189
Allowance, 547, 548
Aluminum, 56–58, A–9
 casting alloys, 57–58
 forging alloys, 58
Aluminum Association (AA), 39
American Gear Manufacturers Association, (AGMA), 311, 317, 320, 381, 382, 390–395, 397–399, 415, 416, 419, 420, 433, 437, 438, 444–453, 455, 461, 462, 465, 637
American Iron and Steel Institute (AISI), 39
American National Standards Institute, (ANSI), standards, 547, 548, 551, 554, 584
American Society for Testing and Materials, (ASTM), 16, 30, 31, 34–36, 40–43, 51–53, 663–666, A–7, A–8
American Society of Mechanical Engineers, (ASME), standard, 551, 554, 558
American standard beam shapes, 16, A–15–10
Angles, equal and unequal leg, 18, A–15–1, A–15–2, A–15–3
Annealing, 47
Areas, properties of, A–1
Austempered ductile iron (ADI), 53, A–8
Automotive universal joints, 495, 496
Average stress, 100
Axiomatic design, 8

B

Babbitt, 618
Ball screws, 649–651
 column buckling, 652
 efficiency, 651
 materials, 652
 performance, 649–650
 torque, 651
 travel life, 651
Basic sizes, preferred, 14, A–2
Beams, 104
 bending stress, 104–105
 concentrated bending moment, 105–109
 curved, 113–120
 deflections, 110–112, A–14
 flexural center, bending, 110
 shapes, A–15
 shear center, 110
Bearings, plain surface, 615–638
 bearing characteristic number, 627
 bearing parameter, $\mu n/p$, 616–618
 boundary lubrication, 619–624
 operating temperature, 620–621
 oscillating loading, 623–624

pV factor, 619–620
 wear considerations, 624
 clearance, diametral, 621–622, 626
 coefficient of friction variable, 617, 619, 628
 design of full film hydrodynamic bearings, 624–630
 film thickness variable, 624–626
 friction torque and power, 640
 full-film (hydrodynamic) lubrication, 615, 616, 624–625
 geometry, 615
 grooving, 630–631
 hydrostatic bearing performance, 632–635
 journal, 614
 Kugel Fountain, 635
 length, 619
 materials, 618–619
 mixed-film lubrication, 616, 624
 $\mu n/p$ parameter, 617–618
 pressure, 620, 624–625
 pV factor, 619–620
 Sommerfeld number, 627–628
 Stribeck curve, 617
 surface roughness, 625
 temperature of lubricant, 626–627
 viscosity, 627
 wear factor, 638
Bearings, rolling contact, 563–586
 brinelling, 571
 design life, 575–576
 dynamic load rating, 571
 equivalent load, 576–578
 flange units, 569
 grease for, 582, 583
 installation, 583
 life factor, 575
 load/life relationship, 570–571
 locknuts, 579–580
 lubrication, 582–583
 manufacturers' data, 571–575
 materials, 569–570
 mean effective load, 585–586
 mounted bearings, 568–569
 mounting, 578–580
 oil film thickness, 584–585
 pillow blocks, 591
 preloading, 583
 rated life (L_{10}), 571
 reliability, 578
 rotation factor, 576
 sealing, 583–584
 selection, 576–578
 sizes, 571
 speed factor, 575
 speeds, limiting, 584
 standards, 584
 static load rating, 571

- stiffness, 583
 take-up bearings, 569
 tapered roller bearings, 580–582
 thrust bearing, 567–568
 thrust factor, 581
 tolerances, 584
 types, 565–567
 varying loads, 585–586
 Belleville spring, 657–658
 Belt drives, 246–251
 belt, chain speed, 246
 configuration, 248
 fixed center distances, 276
 kinematics of, 246–251
 multiple shaft drive, 276–277
 pitch circle diameter, 247
 pulleys, 246
 span belt, 249
 speed increaser, 248
 speed reducer, 248, 249, 251
 twin power belts, 276, 278
 types of, 251–252
 whip belt, 249
 Belt pulleys, flat, 516
 Belts and chains. *See* Chain drives;
 V-belt drives
 Bending
 normal stress, 104–105
 shear stress, 102–103
 Bolted connections, 696–698, 710–712
 Brakes. *See* Clutches and brakes
 Brass, 60–61
 properties, A-12
 Brazing, 702
 Brinell hardness, 31
 Bronze, 60–61, 392–393
 properties, A-12
 sintered, 618
 Buckling of columns, 189
 Buckling of springs, 667
 Bushing, split taper, 485
- C**
- Carbo-nitriding, 49
 Carburized steels, properties of, A-5
 Carburizing, 49, 391–392, A-11
 of gear teeth, 392
 Cardan universal joint, 494
 Case hardening
 flame hardening, 48–49
 heat treating operations, cautions, 49–50
 induction hardening, 48–49
 Cast iron, 392–393
 SI units (design properties) basis, A-8A
 U.S. units (design properties) basis, A-8
 Ceramics, bearing material, 570
 Chain drives, 246–251, 278–291
 attachments, 279
 center distance formula, 281–282
 configuration, 248
 conveyor chain, 279, 282
 design of, 279–291
 forces on shafts, 514–515
 kinematics of, 246–251
 length of chain formula, 282
 lubrication, 286–291
 metric sizes, 280
 multiple strands, factors, 281
 pitch, 278–279
 power ratings, 283–285
 roller chain, 278–280
 service factors, 286
 sizes, 279
 sprockets, 278
 styles, 279
 U.S. units, 279
 Channel beam shapes, 16, A-15–4 to A-15–8
 Charpy test, 36
 Clearance fits, 551–553, 626
 Clevis joints, 126
 Clutches and brakes, 749–774
 actuation, 753–756
 applications, typical, 752
 band brakes, 753, 772–773
 brake, defined, 750
 brake, fail-safe, 754
 clutch-brake module, 751
 clutch, coupling, 751
 clutch, defined, 750
 coefficient of friction, 764–765
 cone clutch or brake, 752–753, 767–768
 disc brakes, 752, 767
 drum brakes, 768–772
 eddy current drive, 774
 energy absorption, 762
 fiber clutch, 774
 fluid clutch, 774
 friction materials, 764–765
 inertia, effective, 760–762
 jaw clutch, 773
 overload clutch, 774
 performance, 756–757
 plate type, 756, 765–767
 radius of gyration, 758
 ratchet, 774
 response time, 762–764
 single-revolution clutch, 774
 slip clutch, 751, 755
 sprag clutch, 774
 tensioners, 774
 types, 751–756
 wear, 764–765
 Wk^2 , inertia, 758–764
 wrap spring clutch, 774
 Coefficient of friction, 457, 458, 619, 764–765
 Coefficient of thermal expansion, 39
 Collars, 501
 Columns, 217–239
 buckling, 217–218
 column constant, 222
 crooked, 232–233
 design factors for, 222
 design of, 229–232
 eccentrically loaded, 233–236
 effective length, 220–221
 efficient shapes for column cross sections, 227–229
 end fixity, 220–221
 Euler formula, 221–223
 J. B. Johnson formula, 223–226
 radius of gyration, 218
 secant formula, 233–234
 slenderness ratio, 221
 Combined stresses, 144–150
 Complex loading conditions, 164
 Composite materials. *See* Materials, composites
 Computational aids, 13–14. *See also* MDESIGN software;
 Spreadsheets as design aids

Concentrated bending moment, 105–109
 Connections, keyless, 483–484
 Constant velocity (CV) joint, 494
 Conversion factors, A–16
 Coordinate measurement machine (CMM), 342
 Copper, 60–61
 properties, A–12
 Copper Development Association (CDA), 39
 Cornay™ universal joint, 494–495, 497
 Coulomb-Mohr theory (CMT), 174–175
 Couplings, 470–505
 bellows, 488
 chain, 487
 D-Flex, 488
 Dynaflex®, 489
 Ever-Flex, 487
 flexible, 487–490
 floating shaft-type, 493, 494
 FORM-FLEX®, 489
 gear, 488
 Grid-Flex, 487
 jaw-type, 489
 PARA-FLEX®, 488
 polygon connection, 484–485
 rigid, 486–487
 Ringfeder Locking Assemblies®, 483
 Creep, 36–37
 Criteria for machine design, 10–11
 Critical speed, 534, 535, 652
 Crushing resistance, 298
 Curved beams
 composite cross sectional shape, 117–120
 cross sectional shape, 114–116, 118
 general procedure, bending moment, 114–117
 stress analysis, 113–114, 120
 Cyaniding, 49
 Cyclic loading
 brittle materials, 188
 ductile materials, 185–186
 Smith diagram, 186–188

D

Damage accumulation method, 204–207
 Decision analysis, 592
 Deflected beam shape, equations, 112–113
 Deformation, 94
 Density, 38
 Designation comparison, steels and aluminum, 42
 Design calculations, 14
 Design details, power transmission, 589–611
 Design factor, 189
 Design for six sigma (DFSS), 8
 Design philosophy, 189–191
 Design problem examples, 193–203
 Design procedure, 191–193
 Design process
 axiomatic designx, 8
 design for six sigma (DFSS), 8
 engineering design process-embodiment design, 9
 example, 12–13
 failure modes and effects analysis (FMEA), 9
 product design for manufacture and assembly, 9
 quality function deployment (QFD), 8
 total design, 9
 TRIZ (Theory of Inventive Problem Solving), 8
 Design projects, 778–780
 Design requirements, 10–11
 Design skills, 9–10

Direct axial load
 deformation, 94
 normal stress, 93–94
 Direct Gear Design®, 465
 Direct shear stress, 94
 Distortion energy theory (DET), 174, 510, 518–520
 Double cardan universal joint, 494
 Drawings, assembly, 608–611
 shaft details, 605–608
 Drop weight test, 36
 Ductile iron, 52–53, A–8
 Ductility, 29
E
 Early cycle yielding, 186
 Elastic limit, 28
 Electrical conductivity, 39
 Electrical resistivity, 39
 Endurance limit, 178–185
 actual, 178
 graph *vs.* tensile strength, 179
 size factors, U.S. customary units, 181
 Endurance strength, 36
 Equivalent torque, 161
 Euler formula for columns, 221–223
 Evaluation criteria, 10–11
 Extra improved plow steel (XIP), 297

F

Factor of safety. *See* Design factor
 Failure modes, 92, 645
 Failure modes and effects analysis (FMEA), 9
 Failure theories, 172–173
 Fasteners, 691–702
 adhesives, 702
 American Standard, 695
 bolted joints, 696–698
 bolt materials, 693–695
 braze, 702
 clamping load, 696–697
 coatings and finishes, 695
 head styles, 692
 locking devices, 701
 metric, 696
 screws, 693
 set screws, 700
 soldering, 702
 strength, 693–695
 thread designations, 695–696, A–2
 thread stripping, 700
 tightening torque, 697
 washers, 698
 Fatigue, 36
 failures, stress analysis
 high-cycle fatigue (HCF), 175–176
 low-cycle fatigue (LCF), 175–178
 loading, 169, 188–189
 resistance, 298
 Fiber core (FC), 292
 Fillets, shoulder, 474
 Finite-element analysis (FEA), 164
 Finite life method, 204–207
 Fits, 547–548
 for bearings, 601
 clearance, 551–553
 locational, 553
 running and sliding, 551

- interference, 554–555
 - force fits, 554–555
 - locational, 553
 - shrink, 554
 - stresses for, 555–557
- transition, 555
- Flame hardening, gears, 48, 390, 391
- Flexible couplings, 487–490
 - effects on shafts, 516
 - torque capacity, shafts, 535
- Flexible disc coupling selection procedure, 490–494
- Flexural center, 110
- Flexural modulus, 30–31
- Flexure formula, 105
- Fluctuating stress, 170–172
- Force, 21
- Force fits, 555–557
 - stresses for, 555–557
- Forces exerted on shafts by machine elements, 513–516
- Friction, 636
- Function statements, 11

- G**
- Garter springs, 657
- Gearmotors, 462
- Gears
 - bevel, 326–330, 439–456
 - allowable bending strength number, 448–450
 - bearing forces, 441–444
 - bending moments on shafts, 443–444
 - bending stress number, 445
 - contact stress number, 449–455
 - dynamic factor, 446
 - forces on, 439–441
 - geometry, 326–330
 - geometry factor, 446, 448
 - load distribution factor, 446, 447
 - material selection, 446
 - miter gears, 326
 - overload factor, 445
 - pitch cone angle, 326
 - pitch diameter, 445
 - pitches, 445
 - pitting resistance, 413
 - practical considerations, 456
 - reducers, 420
 - size factor for bending strength, 445–446
 - stresses in, 444–456
 - stresses in teeth, 416
 - tangential force, 445
 - cutting tools, 338
 - design process
 - non-standard gearing and gear tooth forms, 465
 - peening, 465–466
 - software, 466
 - helical, 323–326, 430–439
 - crossed, 305
 - design of, 434–439
 - forces on teeth, 430–433, 513
 - geometry, 323–326
 - geometry factor, 375–378
 - helix angle, 514
 - pitches, 324–325
 - pitting resistance, 433–434, 437, 438
 - reducers, 390, 391
 - stresses in teeth, 433
 - internal, 322–323
 - manufacture and quality, 337–343
 - form milling, 338
 - hobbing, 338
 - measurement, 340–343
 - quality numbers (AGMA standards), 382–384
 - shaping, 338
 - stress analysis, 374
 - worm. *See* Wormgearing
- Gears, spur, 311–321, 362–422
 - addendum, 317
 - backlash, 317
 - center distance, 317
 - clearance, 379
 - contact stress, 387–389
 - dedendum, 415
 - design of, 400–412
 - dynamic factor, 382
 - efficiency, 367
 - elastic coefficient, 387–389
 - face width, 401, 402
 - forces on shafts, 513–516
 - forces on teeth, 513
 - gear teeth geometry, 311–317
 - AGMA standards, 311
 - comments, 317
 - design considerations, 311
 - metric module system, 311, 316
 - geometry, 375, 376
 - geometry factor, 377, A-19
 - Hertz stress on teeth, 387
 - idler, 394
 - internal, 338
 - involute tooth form, 309–311
 - base circle, 310
 - conjugate curves, 309
 - constant angular velocity ratio, 309
 - law of gearing, 310
 - Lewis form factor, 375, 416
 - life factor, 394
 - load distribution factor, 378–380
 - lubrication, 419–420
 - manufacture, 337–339
 - materials, 393–396
 - material specification, 413
 - metric module, 405
 - overload factor, 378
 - pitch, diameter, 364–365
 - pitch, diametral, 365
 - pitting resistance, 413, A-19
 - plastics gearing, 414–415
 - power flow, 367
 - power transmitting capacity, 412–413
 - pressure angle, 365
 - quality, 340–343
 - rack, 349
 - reliability factor, 394
 - rim thickness factor, 380–381
 - size factor, 378
 - stresses, allowable, 374
 - stresses in teeth, 374–384
 - styles, 309
 - undercutting, 322
- Gear trains
 - devising
 - designing, single pair, 353
 - factoring approach, compound gear trains, 355–356
 - hunting tooth, 351–353
 - residual ratio, 354–355
 - train value, 345–347, 351–356
 - velocity ratio, 343–345, 353

Gear-type speed reducers, 420–422, 509, 567, 746
 Geometry factor, I, A–19
 Gerber criterion, 186
 Goodman criterion, 186
 Goodman method, 168
 Gray iron, 27, 52, A–8, A–8A
 Greases, 637

H

Hardness, 31–34
 carburizing, A–5
 conversions, 32, A–17
 measurement, 33
 properties, A–4
 Heat treating of steels
 annealing, 46, 47
 carbo-nitriding, 48, 49
 carburizing, 49, 50, 391–392
 case hardening, 48–49, 391
 flame hardening, 48–49, 391
 induction hardening, 48–49, 391
 nitriding, 48–49, 183, 392
 normalizing, 47
 tempering, 47–48
 through-hardening, 47–48
 Heavy-duty industrial type double universal joint, 494, 496
 Heavy-duty right angle gear reducer, 456
 Hertz stress, 387
 Hollow structural shapes (HSS), 18
 Hunting tooth, 351–353
 Hydrodynamic lubrication, 625–630
 Hydrostatic bearings, 632–635

I

I-beam shapes, 41, 42, A–15–9 to A–15–13
 Idler gear, 347–348
 Impact energy, 35–36
 Impact loading, 172
 Improved plow steel (IPS), 297–298
 Inconel alloys, 694
 Independent wire rope core (IWRC), 292, 300
 Induction hardening, gears, 48–49, 391
 Interference, 637
 fits, 554–555
 Internal gear, 322–323
 International Organization for Standardization (ISO), 465
 Involute tooth form, 374–376
 Izod test, 35

J

J. B. Johnson formula for columns, 223–226
 J-factor
 for helical gears, 433–435
 for spur gears, 375

K

Keys, 471–505
 chamfers, 472, 474
 design of, 477, 478
 forces on, 476, 477
 gib head, 472, 475
 materials for, 476
 parallel, 472, 473
 pin, 472–473, 475
 sizes, 472, 473
 stresses in, 476–478
 taper, 472, 475
 tolerances, 472, 605

types, 472–475
 Woodruff, 473, 475
 Keyseats and keyways
 dimensions, 475
 fillets, 474
 selections and installations, 474–475
 stress concentrations, 516–517
 Kugel Fountain, 635

L

Law of gearing, 308
 Leaf springs, 657
 Lewis form factor, 461
 Linear motion elements, 641–652
 Loading types, 167, 172
 Locknuts, 501, 579
 Lubricants, 636–638
 solid, 638
 Lubrication
 bearings
 plain. *See* Bearings, plain surface
 rolling contact, 471
 chain drives, 286
 gears, 419
 Lug joints. *See also* Clevis joints
 stress concentration factors, 126–129

M

Machinability, 35
 Machine frames and structures, 705–719
 deflection limits, 707
 materials, 707
 torsion, 709–710
 Magnesium alloys, 59
 die-cast alloys, A–10–2
 Malleable iron, 52, A–8
 Mass, 21
 Materials in mechanical design, 25–81
 aluminum, 56–58, A–9
 brass and bronze, 60–61, 393, A–12
 carbon and alloy steel, 43–46, 390–391, A–3, A–4
 cast iron, 392–393, A–8, A–8A
 composites, 64–76
 advantages of, 67–68
 construction of, 70–71
 design guidelines, 72–76
 filament winding, 67
 limitations of, 70–71
 preimpregnated materials, 66
 extrusion, 67
 reinforcing fibers, 64
 sheet molding compound, 67
 wet processing, 66
 copper, 60–61
 decision analysis, 77–78
 gear, 393–400
 nickel alloys, 59
 other considerations, 78–81
 plastics, 61–64, 413–418, A–13
 powdered metals, 53–56
 process, 76
 properties, 27–39
 selection, 76–81
 stainless steels, A–6
 structural steel, A–7
 thermoplastics, 62
 thermosets, 62
 titanium, 60, A–11
 zinc, 58–59, A–10

Maximum normal stress theory (MNST), 174
 Maximum principal stresses, 145
 Maximum shear stress, 146
 Maximum shear stress theory (MSST), 164, 173–174
 MDESIGN software
 synchronous belts, 303
 Mechanical design process. *See* Design process
 Megagear®, 465
 Metallic gear materials
 allowable bending stress number, AGMA 2001-DO4, 390
 Metal Powder Industries Foundation (MPIF), 53
 Metals and alloys, classification, 39–42
 Metric power screws, 645
 trapezoidal screw thread, examples, 646
 Metric sizes, keys. *See* Keys
 Metric units, 19
 MGT Frictionless Drive System®, 465
 Miner's rule, 205–206, 585
 Minimum principal stresses, 145
 Miter gears, 326
 Modified Mohr theory (MMT), 175
 Modulus of elasticity
 in shear, 29
 spring wire, 668
 in tension, 28–29
 Mohr's circle, 150–156
 practice problems, 157–159
 special stress conditions, 159–164
 three-dimensional stresses, 156
 tresca stress, 156
 von mises stress, 156
 Molding, 486
 Monel alloys, 569–570
 Moore, R.R. fatigue test device, 169
 Motion control. *See* Clutches and brakes
 Motors, electric, 723–746
 AC motors and types, 727, 733–735
 AC variable speed drive, 740
 AC voltages, 726
 brushless DC, 746
 capacitor start, 731–732
 compound-wound, DC, 744
 controls, AC, 735–742
 DC motor control, 744
 DC motor types, 743–744
 DC power, 742
 enclosures, motors, 734
 frame sizes, 734–735
 frame types, 733
 induction motors, 729–731
 linear motors, 746
 NEMA AC motor designs B, C, D, 729
 overload protection, 739–740
 performance curves, AC motors, 729–733
 permanent magnet, DC, 744
 permanent split capacitor, 732
 printed circuit motors, 746
 rectifiers (SCR), 742
 selection factors, 725–726
 series-wound, DC, 743
 servomotors, 744–746
 shaded pole, 732–733
 shunt-wound, DC, 743
 single-phase motors, 731–733
 single-phase power, 736
 sizes, 736
 speed control, AC, 744
 speeds, 729
 split-phase, 731
 squirrel cage motors, 729–731

starters, 736–739
 stepping motors, 746
 synchronous motors, 730
 three phase power, 737
 torque motors, 744
 universal motor, 730–731
 wound rotor motor, 729
 Motor starters, 736–740

N

Nanotechnology applications, materials, 75–78
 National Electrical Manufacturers Association (NEMA), 729
 Nickel-based alloys, 59–60
 properties, A-11–1
 Ni-resist alloy, 59
 Nitriding, 183, 392
 Non-circular gears, 465
 Normalizing, 47
 Normal stress, 92
 bending, 104–105
 direct axial load, 93–94
 element, 93
 Notch sensitivity, 129

O

Oils, 636–637
 Open tube, 100

P

Palmgren-Miner rule, 585
 Percent elongation, 29
 Pillow blocks, 568
 Pinning, 482–483
 Pipe, 19
 Pitch circle diameter, 247
 Plastic gear materials, 414–415
 Plastics, 61–64, 413–415, 619
 bearing material, 569
 properties, A-13
 Poisson's ratio, 29
 Polar section modulus, 97
 Polygon connection, 484–485
 Powdered metals, 53–56
 application, disadvantages, 53
 examples, 54
 industrial application, 56
 processing, 53
 proprietary formulations and grades, 53–56
 Powder metallurgy (PM). *See* Powdered metals
 Power, 94–96
 Power screws, 644–649
 Acme thread, 644, 647–648
 butress thread, 644
 efficiency, 647
 lead angle, 647
 metric thread, 645–647
 power required, 648
 self-locking, 647
 square thread, 647
 torque required, 647
 Power-torque-speed relationship, 94
 Press fit, 486. *See also* Fits, interference; Force fits;
 Shrink fits
 Pressure angle
 spur gears, 335
 wormgearing, 335
 Principal stress, maximum and minimum, 145

Product design for manufacture and assembly, 9
 Product realization process, 9
 Properties of materials in mechanical design
 coefficient of thermal expansion, 39
 creep, 36–37
 density, 38
 ductility elongation, 29
 elastic limit, 28
 electrical resistivity, 39
 endurance strength, 36
 fatigue strength, 36
 flexural modulus, 30–31
 flexural strength, 30–31
 hardness, 31–34
 impact energy, 35–36
 machinability, 35
 modulus of elasticity
 in shear, G , 29
 in tension, E , 28–29
 non-destructive measurement, 29–30
 percent elongation, 29
 Poisson's ratio, ν , 29
 proportional limit, 28
 relaxation, 37–38
 shear strength, S_{ys} and S_{us} , 29
 tensile strength, S_t , 28
 thermal conductivity, 39
 toughness, 35–36
 wear, mechanical devices, 34
 yield strength, S_y , 28
 Proportional limit, 28
 Pulleys
 flat belt, 516
 V-belt, 244, 515–516. *See also Sheaves*
 Pure oscillation, 186
 Pure pulsating stress, 186
 pV factor, 619

Q

Quality function deployment (QFD), 8

R

Rack, 349–350
 Radius of gyration, 218
 Random loading, 172
 Ratchet, 774
 Relaxation, 37–38
 Reliability factors, 180–181, 448, 449
 Residual stress, 183
 Resistivity, electrical, 39
 Retaining ring grooves, 517
 Retaining rings, 499, 500
 Reyn, 627
 Ringfeder Locking Assemblies®, 483
 Robust product design, 560
 Rockwell hardness, 31
 Rotational speed, 94–96
 R.R. Moore fatigue test device, 169

S

SAE numbering system
 alloy groups, 44
 designation, 43–45
 Sand blasters, 466
 Screw threads, 14–16, 695, A–2
 Seals, 502–505
 bearings, 503, 504, 583–584
 diaphragm, 502, 503
 elastomers, 504

face, 503, 504
 gaskets, 505
 O-rings, 502
 packings, 505
 rigid materials, 505
 shafts, 505
 T-rings, 502
 types, 502–504
 Section modulus, 105
 polar, 97
 Self-locking, 460
 Set screws, 485
 Shaft design, 509–535
 design stresses, 517–520
 dynamic considerations, 534–535
 equation for diameter, 519
 examples, 519–520
 fastening elements
 keyless hub, 483–484
 Ringfeder Locking Assemblies®, 483
 flexible, 535
 forces exerted on shafts, 513–516
 preferred basic sizes, 521, A–2
 procedure, 510–512
 stress concentrations in, 516–517
 Shapes
 commonly used metals, 41–42
 load-carrying members, A–15
 section properties, 16, A–15
 types, 16–19. *See also Structural shapes*
 Shaping of gears, 339
 Shear center, 110
 Shear pin, 387
 Shear strength, 29
 Shear stress, 92
 direct, 94
 due to torsional load, 96–98
 element, 92–93
 formulas, 97
 horizontal, 102
 on keys, 95
 positive and negative, 93
 special shear stress formulas, 103–104
 vertical, 102–103, 518–519
 Sheaves, 246
 forces on shafts, 515–516
 Shock loading, 172
 Shot peening, 465, 466
 Shoulders, shaft, 501, 579
 Shrink fits, 554
 stresses for, 555–557
 SI units, 20
 prefixes, 20
 typical quantities in machine design, 20
 Size factor, 181–182, 378
 Slenderness ratio for columns, 221
 Smith diagram, mean stress, 186–188
 Society of Automotive Engineers (SAE), 39, 40, 479, 765
 Soderberg criterion, 185–186
 Soldering, 702
 Sommerfeld number, 627–628
 Spacers, 501
 Special stress conditions, Mohr's circle
 biaxial tension and compression, 160
 combined tension and shear, 161–162
 cylinder with internal pressure, 162–164
 pure shear, 161
 uniaxial compression, 160
 uniaxial tension, 159, 161
 Specific modulus, 67
 Specific strength, 67

- Specific weight, 38
- Splines, 479–482
- fits, 480–481
 - geometry, 479
 - involute, 480–482
 - modules, 482
 - pitches, 481–482
 - straight-sided, 479–481
 - torque capacity, 480
- Split taper bushings, 499
- Spreadsheets as design aids
- chain design, 291
 - columns, 226–227, 229, 232
 - force fits, stresses, 558
 - gear design, 409–412
 - shaft design, 533
 - springs, design, 673–677
- Springs
- helical compression, 659–666
 - allowable stresses, 680
 - analysis, 667–670
 - buckling, 667
 - deflection, 666–667
 - design of, 670–677
 - end treatments, 659
 - materials, 663, 668
 - number of coils, 662
 - pitch, 662
 - pitch angle, 662–663
 - spring index, 662
 - spring rate, 662
 - stresses, 666–667
 - Wahl factor, 667
 - wire diameters, 659–660
 - helical extension, 677–681
 - allowable stresses, 663–666, 680
 - end configurations, 677–680
- helical torsion, 681–687
- deflection, 682
 - design procedure, 682–687
 - design stresses, 682
 - number of coils, 682
 - spring rate, 682
 - stresses, 682
- types, 657–659
- manufacturing, 687–688
 - shot peening, 687
- Sprockets, chain, 262, 514–515
- Stainless steel, A–6
- Statical moment, 102
- Static loading
- brittle materials, 174–175
 - ductile materials, 173–174
- Statistical approaches to design, 203–204
- Steel, 43–53
- alloy groups, 45–46
 - bearing, 45, 569–570
 - carbon and alloy, 43–46, 390, 391, A–3 to A–7
 - carbon content, 45
 - carburized, 49, 391–392, A–5
 - conditions, 46–51
 - designation systems, 43–45
 - heat treating, 46–51
 - high-carbon, 45
 - low-carbon, 45
 - medium-carbon, 45
 - properties, heat-treated, A–3 to A–7
 - stainless, A–6
 - structural, A–7
 - uses for, 46
- Stochastic methods, 203
- Strength
- endurance, 36
 - reduction factor, 129
 - shear, 29
 - tensile, 28
 - yield, 28
- Stress
- allowable for gears, 374
 - amplitude, 168, 176
 - combined bending and torsion on circular shafts, 520, 521
 - combined stress, general, 144–145
 - concentration factors, 516–517, A–18
 - concentrations, 122–129
 - defined, 122, 123
 - factors, lug joints, 126–129
 - general guideline, for use, 124–126
 - keyseats, 516
 - in shaft design, 516–517
 - design, for shafts, 517–520
 - direct shear, 91
 - due to shrink or force fits, 555–557
 - elements, 92–93
 - fluctuating, 170–172
 - gear analysis, 374
 - high-cycle fatigue (HCF), 175–176
 - longitudinal, 162
 - low-cycle fatigue (LCF), 175–178
 - maximum shear, 146
 - normal, direct axial load, 93–94
 - principal, 145
 - ratio, 168–172
 - repeated and reversed, 169–170
 - special shear stress formulas, 103–104
 - static, 168–169
 - torsional shear, 96–98
 - transformation
 - maximum and minimum principal stresses, 145
 - maximum shear stress, 146
 - principal stress element, angle, 145–146
 - three-dimensional, 146
 - vertical shearing stress, 102–103
- Stress-life diagram, 176
- Structural shapes, 16–18, A–15
- angles, A–15–1 to A–15–3
 - channels, A–15–4 to A–15–8
 - I-shapes, A–15–9 to A–15–13
 - pipe, A–15–17
 - tubing
 - mechanical, round, A–15–18, A–15–19
 - square and rectangular, A–15–14 to A–15–16
- Structural steel, A–7
- Superposition principle, 120–122
- Surface finish, 180, 558, 560, 687
- Synchronous belts, 251, 262–278
- configurations for, 275–278
 - construction of, 264
 - kinematics of, 246
 - MDESIGN software for, 303
 - metric sizes, 262, 266
 - selection procedure, 266, 270–273
 - taperlock bushings, 264–265
- T**
- Taguchi method, 560
- Taper and screw, 485, 486
- Tapered roller bearings, 580–582
- Taperlock bush, 264–265
- Tempering, 47, A–3 to A–7
- Tensile strength, 28
- Tensile stress, 120
- The engineering design process-embodiment design, 9

Thermal conductivity, 39
 Thermal expansion coefficient, 555
 Three-stage industrial gear reducer, 456
 Thrust bearings, 567–568
 Titanium, 60, A-11–2
 Titanium/nickel alloys, bearing material, 569
 Tolerance, 546–560
 geometric, 558, 559
 grades, 548, 550
 Torque, 94–96
 equivalent, 161
 tubes, 495, 497–499
 Torsion
 in closed thin-walled tubes, 100
 deformation, 98
 in noncircular cross sections, 98–100
 in open thin-walled tubes, 100–101
 shear stress formula, 97–98
 stress distribution, 97
 Torsional deformation, 98
 Torsional shear, 96
 stress formula, 97–98
 Total design, 9
 Toughness, 35–36
 Train value, 345–346
 Transition fits, 555
 Transmission, design of, 590–611
 Tresca criterion, 164
 TRIZ (Theory of Inventive Problem Solving), 8–9
 Tubes, stresses in, 100–101, 103

U

Undercutting of gear teeth, 322
 Unified numbering system, UNS, 39–40
 Unimegagear®, 465
 Unit systems, 20–21
 Universal joints, 494–499
 U.S. customary units, 20
 typical quantities in machine design, 20

V

V-belt drives, 252–262
 angle of contact, 253
 angle of wrap correction factor, 259
 belt construction, 252
 belt cross sections, 253
 belt lengths
 correction factor, 259
 formula, 257
 standard, 260
 belt tension, 262
 center distance formula, 261
 design of, 253–262
 forces on shafts, 515–516
 kinematics of, 246
 metric sizes, belt cross section, 253
 power rating charts, 257, 258
 pulleys. *See* Sheaves
 SAE standards, 286
 service factors, 256
 sheaves, 251–255
 span length, 253
 Velocity ratio, gears, 334
 gear trains, 343–344
 Viscosity, 627
 Viscosity index (VI), 637
 von Mises criterion, 164

W

Wear, 638
 Wear resistance

austempered ductile iron (ADI), 52
 bronze, 60
 CMNCs.(ceramic matrix nano composites), 76
 gray iron (ADI), 52
 malleable iron (ADI), 52
 steel, 31
 Weight, 21
 Welded joints, 712–719
 allowable stresses, 712, 714
 geometry factors, 715
 size of weld, 713–714, 716
 treating weld as a line, 714
 types of joints, 713
 types of welds, 713
 Wheel blasting, 466
 White iron, 53
 Wide flange beam shapes, 18–19, A-15–9
 Wire ropes, 292–300
 application of, 292
 classification, 292–293
 construction, 292–293, 298
 design factors, 299–300
 lay of, 294
 material and grades, 297
 nominal diameter, 292
 properties of, 300
 roller bearing, 296
 selection of, 298–299
 sheave and drum design, 295–297
 strand construction, 293–295
 tread diameter, 295
 working loads, 299–300
 Woodruff keys, 473, 475, 479

Wormgearing, 330–337, 456–464
 coefficient of friction, 457, 458
 efficiency, 458–460
 face length of worm, 336
 forces on, 456–460
 friction force, 458
 geometry, 332–337
 input power, 458
 lead, 333
 lead angle, 333
 output torque, 457
 pitches, 332
 pitch line speed, 456
 power loss, 458
 pressure angle, 335
 reducer, 331, 332, 456
 self-locking, 335, 460
 shell worm, 335, 336
 stresses, 461
 surface durability, 461–464
 threads (teeth), 332
 tooth dimensions, 335
 types, 330–332
 velocity ratio, 334, 456
 worm diameter, 335
 wormgear dimensions, 335–336

Y

Yield locus, 173
 Yield point, 28
 Yield strength, 28, 173–175, 185, 186, 188–190

Z

Zinc, 58–59
 die-cast alloys, A-10–1