



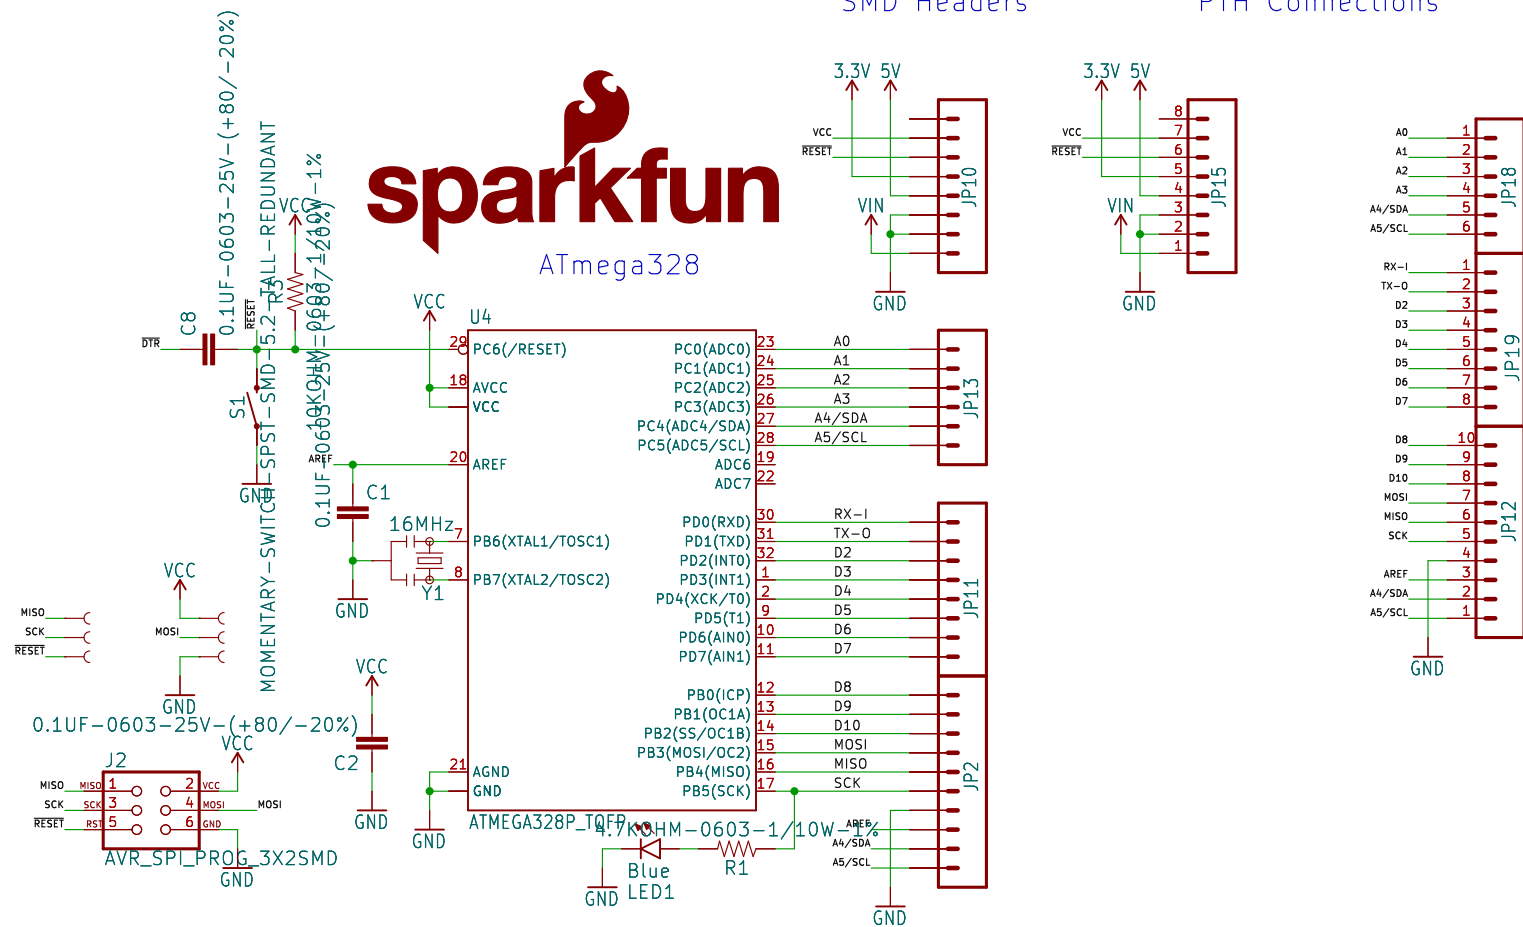

SMD Headers


PTH Connections

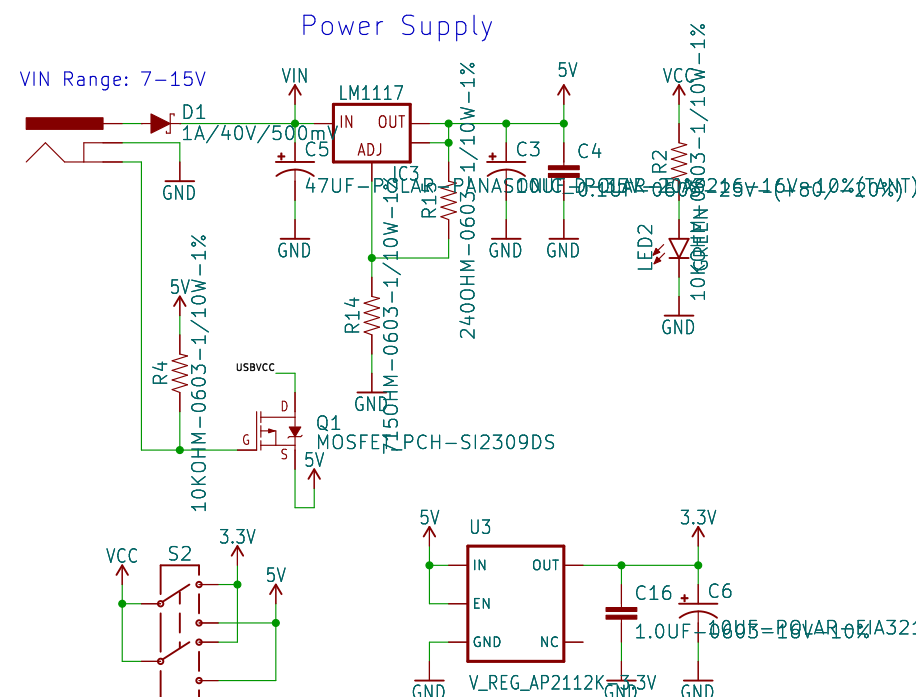

Board I/O Voltage


Slide the switch to change the I/O Voltage.
Applying tape over switch is recommended
to prevent accidental change.
This switch is limited to 1.2VA.

Qwiic 3.3V Conversion

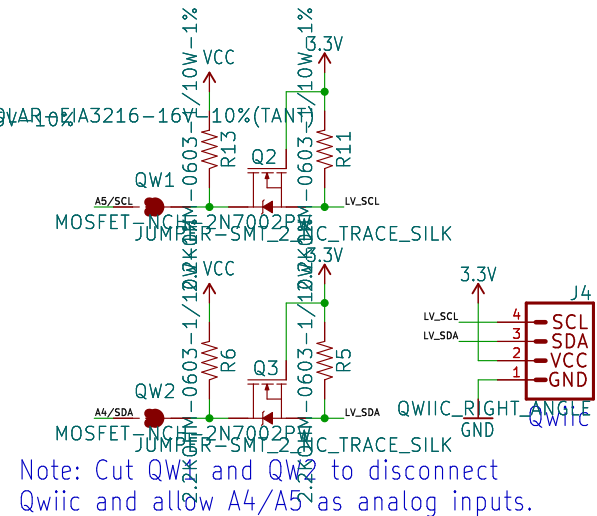

Note: Cut QW1 and QW2 to disconnect
Qwiic and allow A4/A5 as analog inputs.

USB-to-Serial Converter

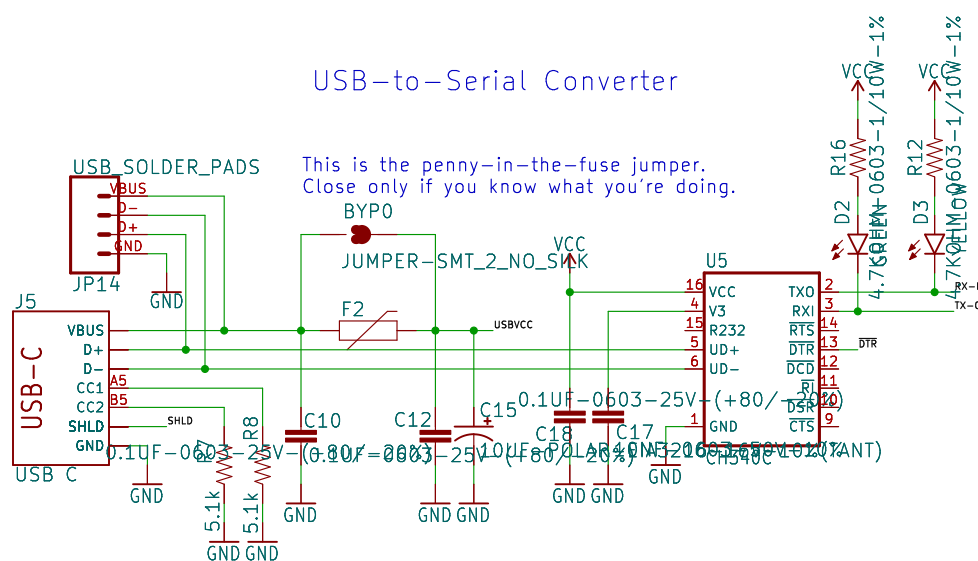

This is the penny-in-the-fuse jumper.
Close only if you know what you're doing.

Trace width calculation:
2A, 1oz. copper
10C rise in temperature
30.8 mil width
<https://www.eeweb.com/tools/external-pcb-trace-max-current>



Released under the Creative Commons Attribution Share-Alike 4.0 License https://creativecommons.org/licenses/by-sa/4.0/			⊗ ⊗	
TITLE: \${PROJECTNAME}			⊗ ⊗	
Design by: >DESIGNER, N. Seidle Based on Arduino by: M.Banzi, D.Cuartielles, T.Igor, G.Martino, D.Mettis			REV: >REV	
Date: \${CURRENT_DATE}			Sheet: \${#}/\${##}	
Size: User KiCad E.D.A. kicad- cli 7.0.6-7.0.6-ubuntu22.04.1			Rev: Id: 1/1	