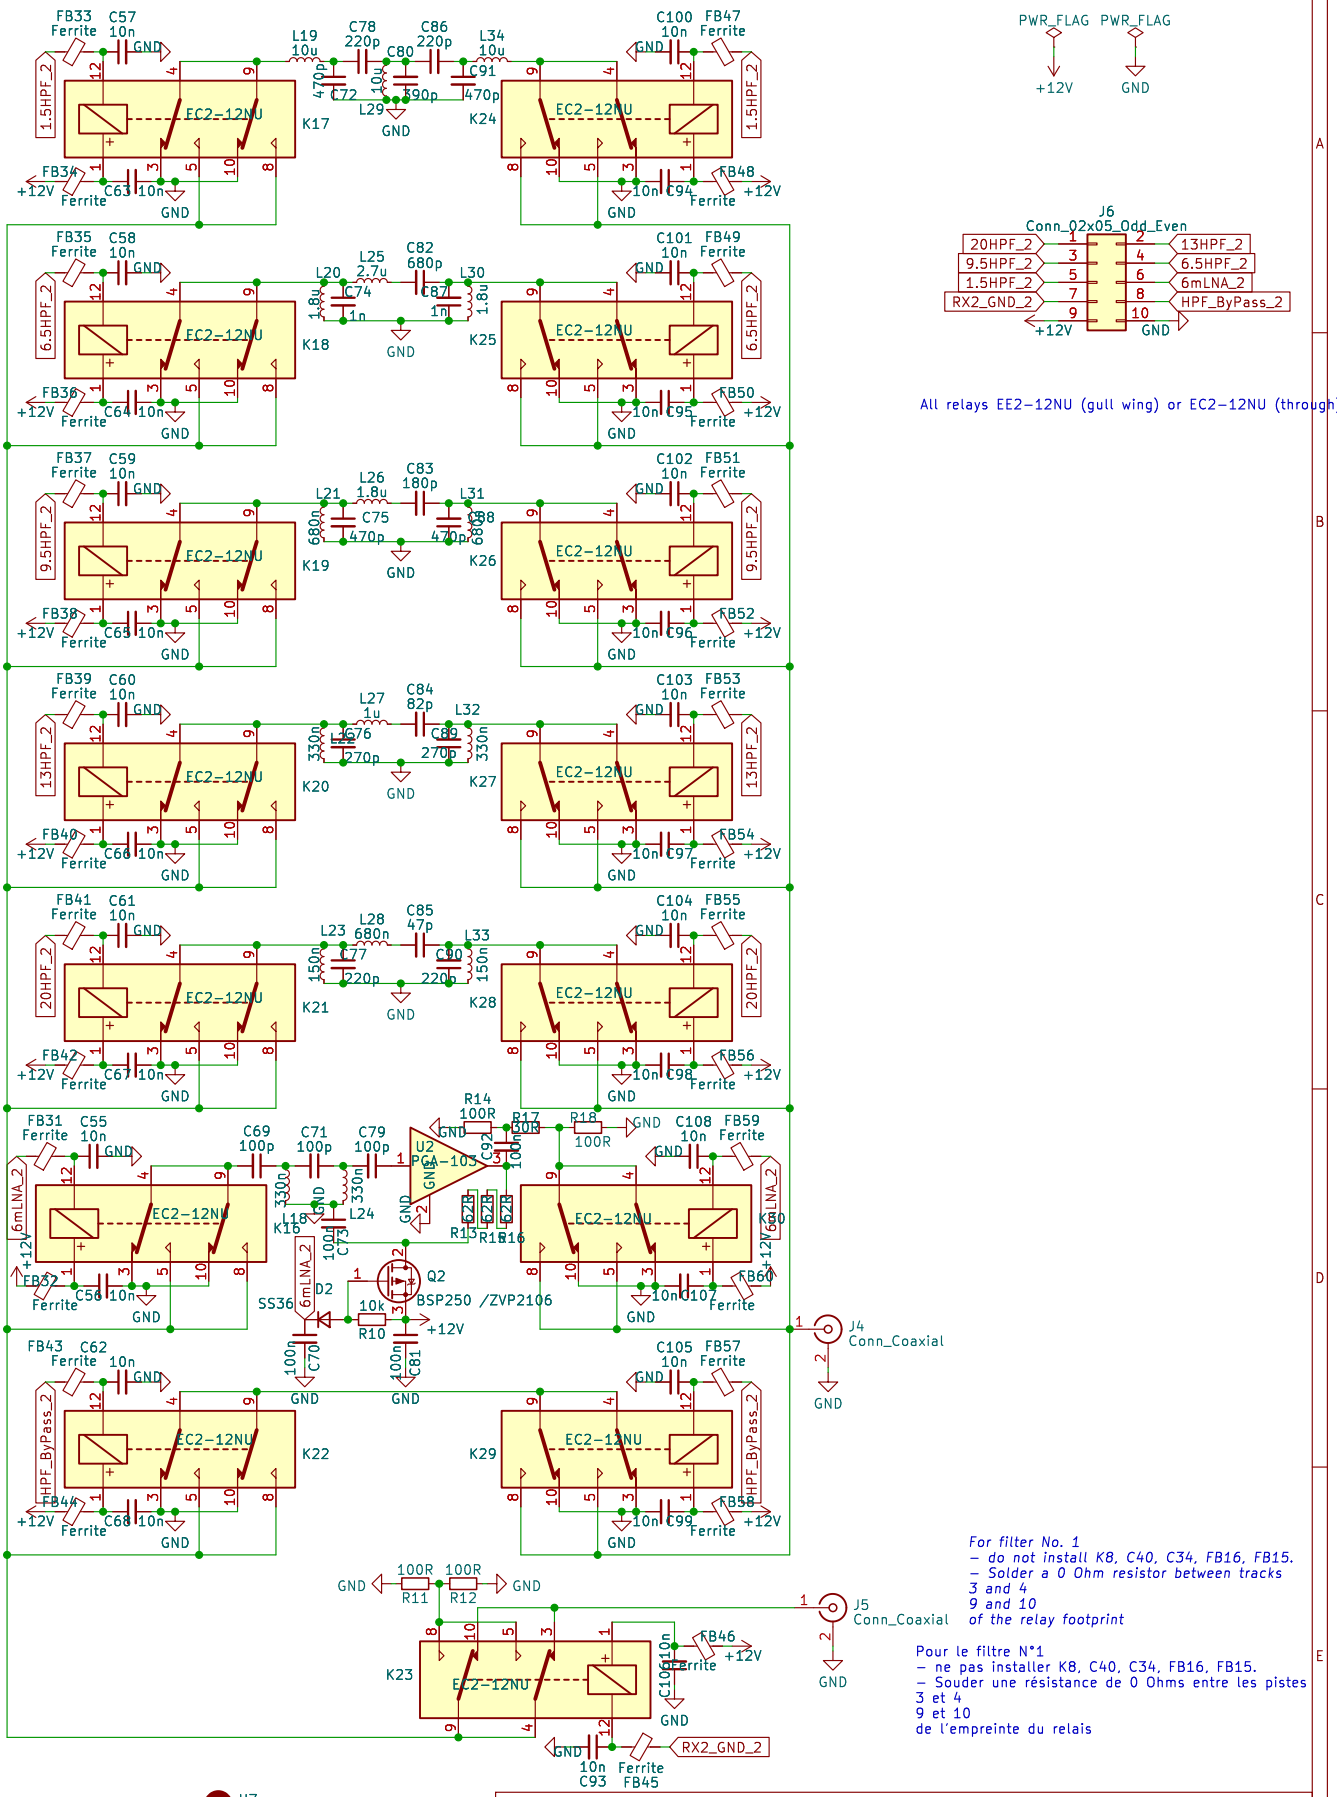
PWR_FLAG PWR_FLAG
+12V GND
J6
Conn_02x05_Odd_Even
20HPF_2 13HPF_2
9.5HPF_2 6.5HPF_2
1.5HPF_2 6mLNA_2
RX2_GND_2 HPF_ByPass_2
+12V GND
All relays EE2-12NU (gull wing) or EC2-12NU (through)
EC2-12NU
K17 K18 K19 K20 K21 K22 K23 K24 K25 K26 K27 K28 K29
U2 PGA-103
Q2 BSP250 /ZVP2106
D2 SS36
J4 Conn_Coaxial
J5 Conn_Coaxial
For filter No. 1
– do not install K8, C40, C34, FB16, FB15.
– Solder a 0 Ohm resistor between tracks
3 and 4
9 and 10
of the relay footprint
Pour le filtre N°1
– ne pas installer K8, C40, C34, FB16, FB15.
– Souder une résistance de 0 Ohms entre les pistes
3 et 4
9 et 10
de l'empreinte du relais
H5 MountingHole_Pad
H6 MountingHole_Pad
H7 MountingHole_Pad
H8 MountingHole_Pad
Sheet: /
File: working.kicad_sch
Title:
Size: A4
Date:
Rev:
KiCad E.D.A. kicad-cli 7.0.6-7.0.6~ubuntu22.04.1
Id: 1/1