1. E-match shorts, check if fuse blows after some time

2. Check if sense_e can go high without firing ematch PASS

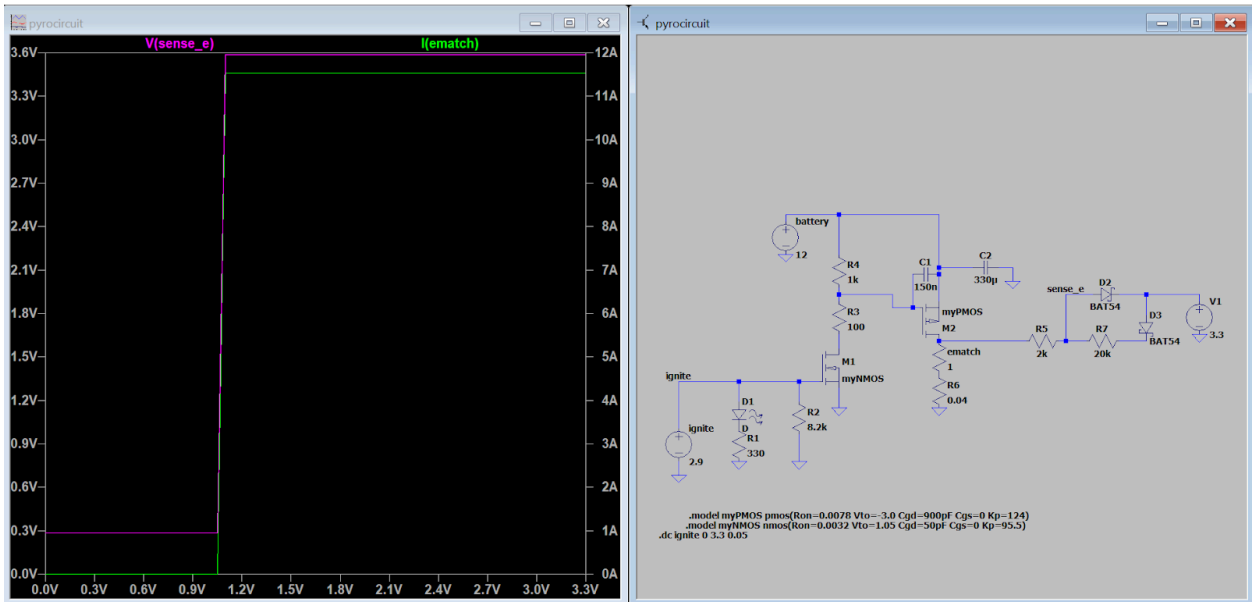

3. Check if pmos turns on when +12.6V is armed (ignite is 0). It should not turn on. PASS

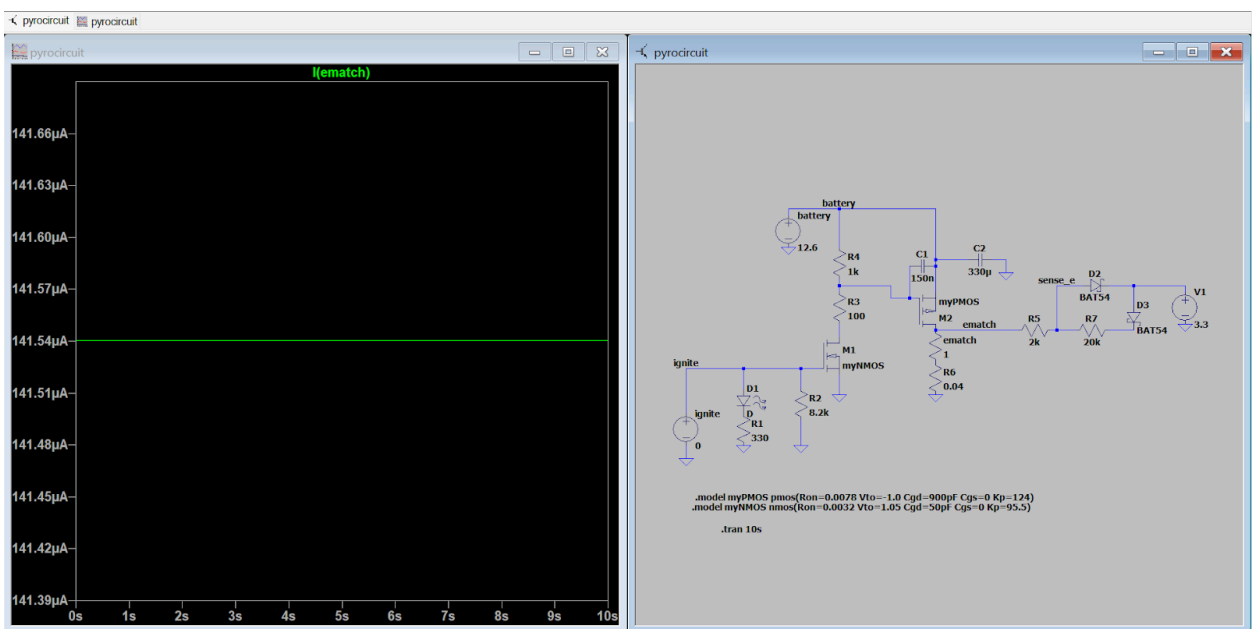

4. Check if ignite goes hi but arm is off, does the pyrocircuit fire. No. PASS

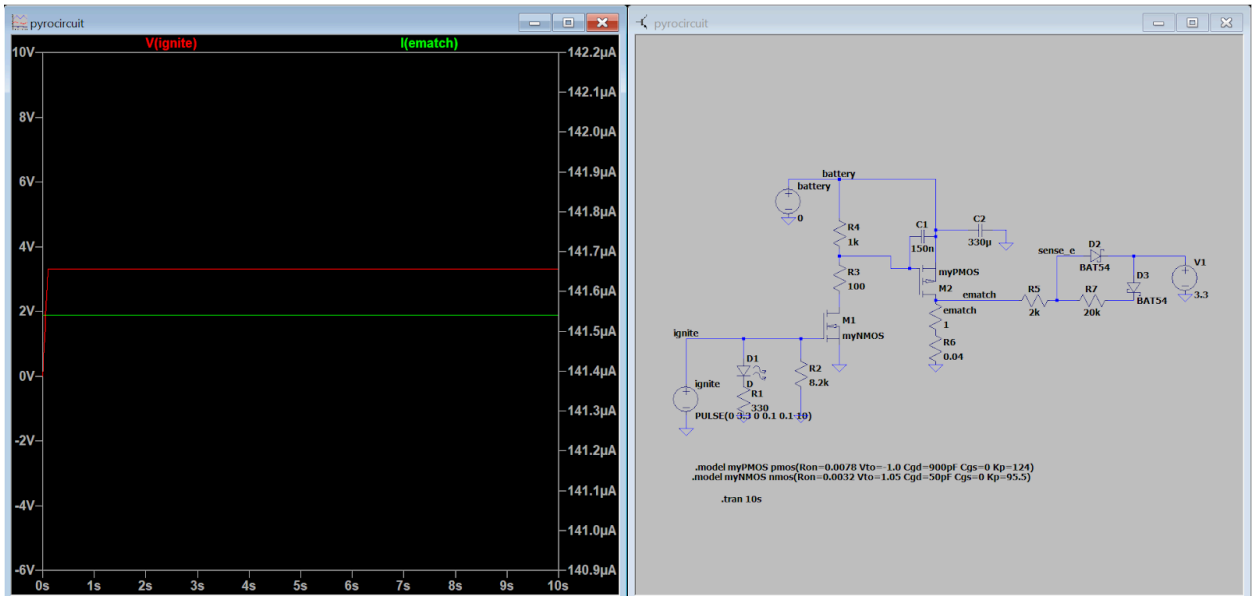

5. Check if floating ignite pin doesn't set off ematch PASS

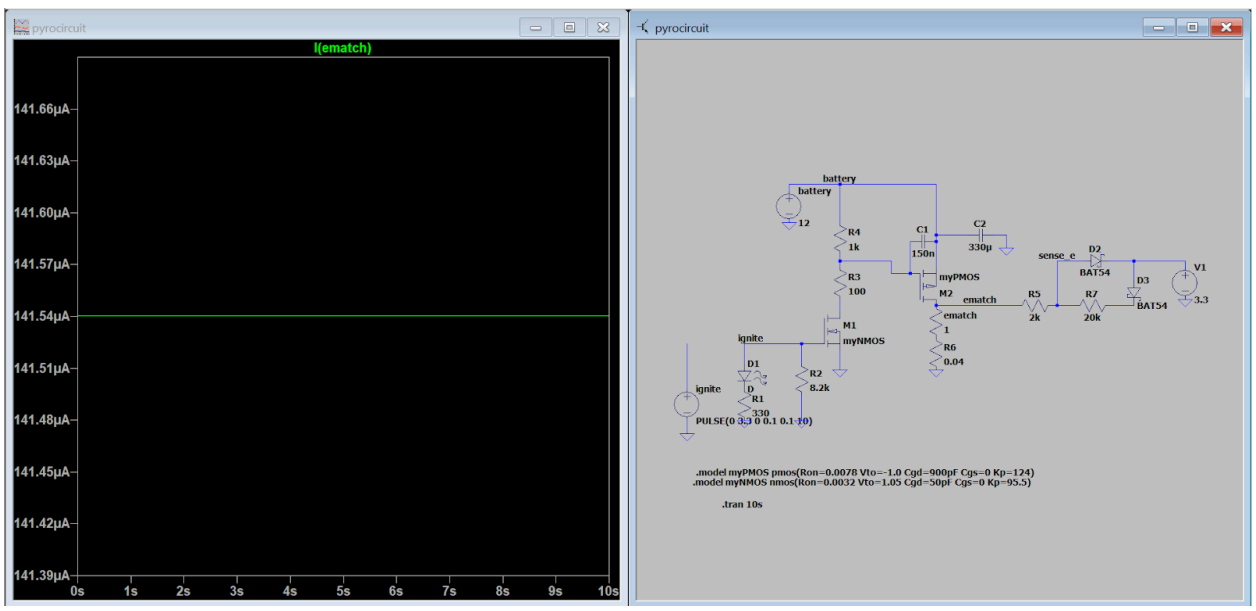

6. Check if pyrocircuit can still fire correctly(when ignite goes hi) when battery sags to 9V and for some reason ignite is 2.9V (its minimum) PASS

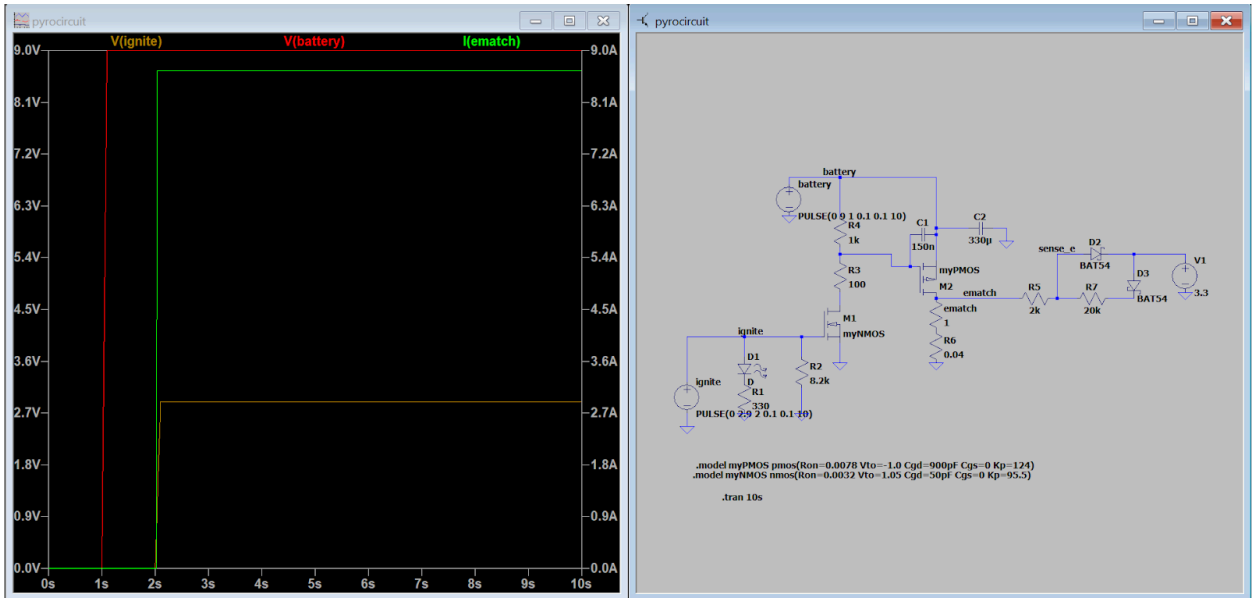

Worse case threshold voltages:

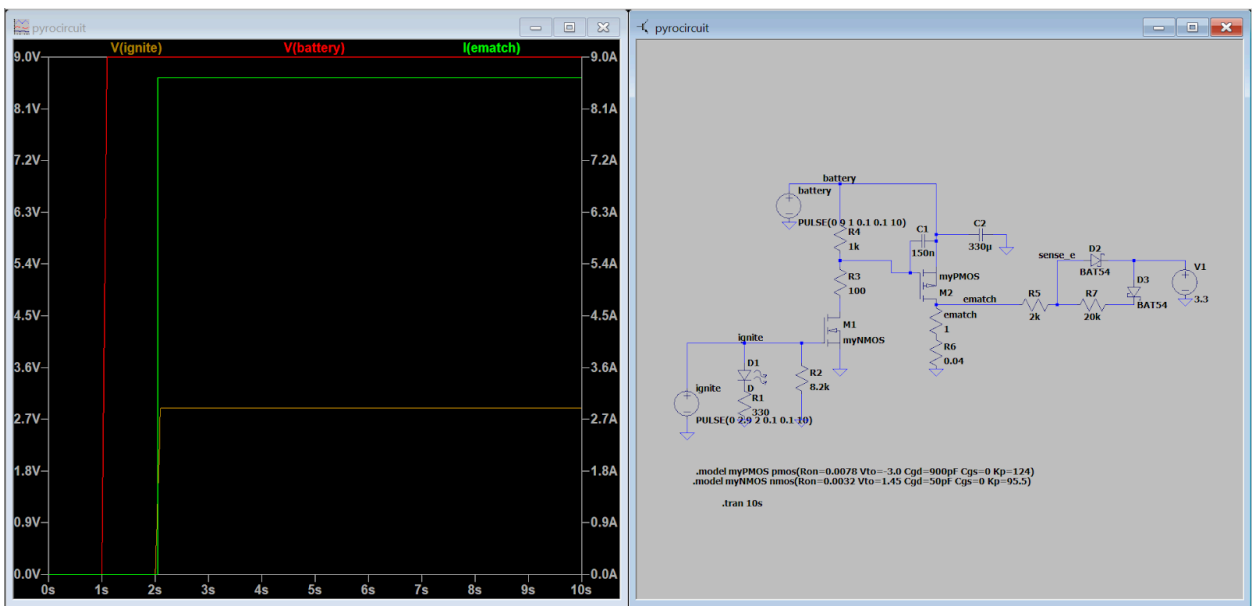

7. Check if ematch blows correctly when ignite is high and battery is on: V_arm=12V, ignite=3.3V. PASS

Worse thresholds:

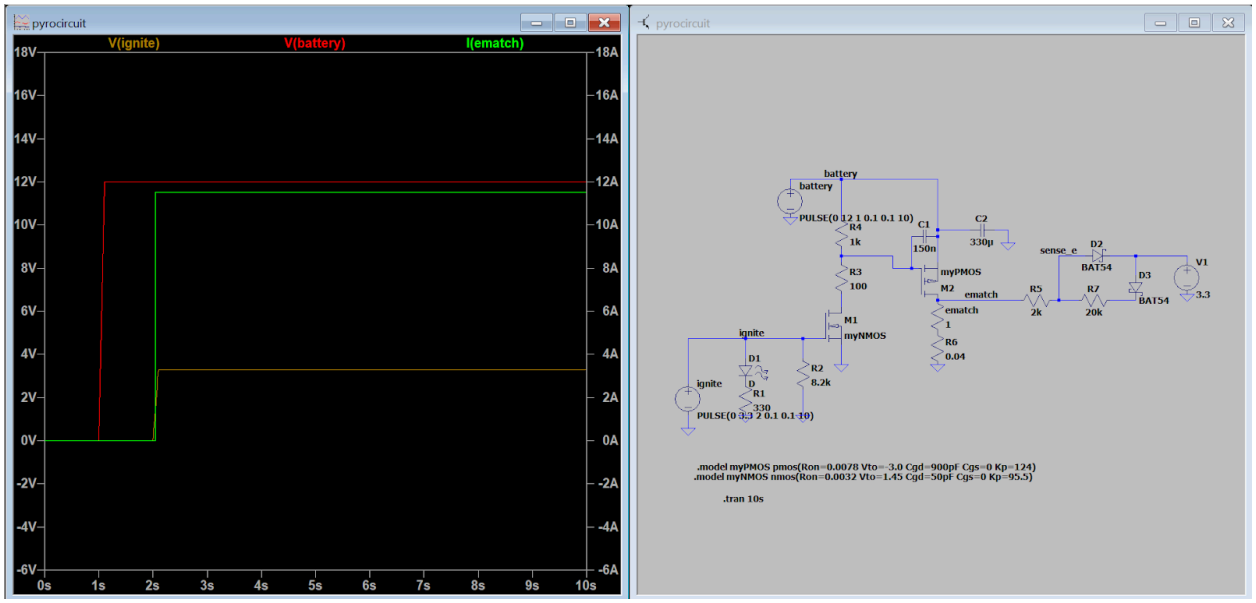
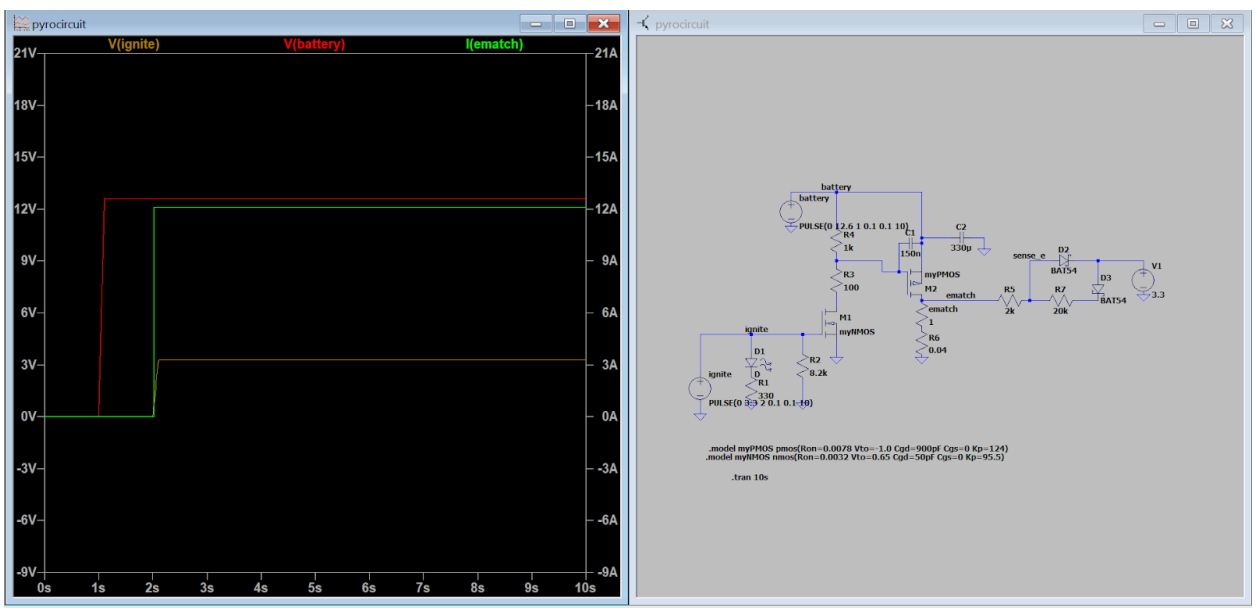
Highest battery, lowest thresholds