

LINE 1: fault / guasto — GPIO19 (Pi pin 35)

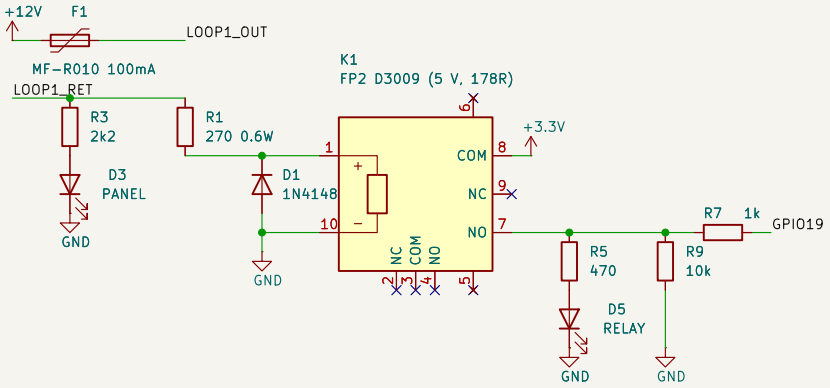


NOTES
1. Normal = loop closed: coil on, NO closed, GPIO = 3.3 V (reads 1). Alarm, power loss or cut cable = GPIO 0.
2. The FP2 D3009 coil is 5 V (178R, limit 11 V) and POLARIZED: pin 1 +, pin 10 −. R1/R2 drop 12 V to about 4.8 V.
3. 3V3 comes from the Pi, so a GPIO never sees voltage while the Pi is off.
4. Relay LEDs run from 3.3 V: use red, orange or yellow (forward voltage up to 2.2 V). Blue or white will not light.
5. R9/R10 pull down harder than a leftover Pi pull-up. R7/R8 protect the GPIO from wiring mistakes.
6. F1/F2: a short on the panel cable trips only that line, so the Pi and modem stay powered and can report it.
7. The PANEL LED cannot tell an alarm from an unplugged cable: both open the loop.

H1 H2


LINE 2: alarm / allarme — GPIO26 (Pi pin 37)

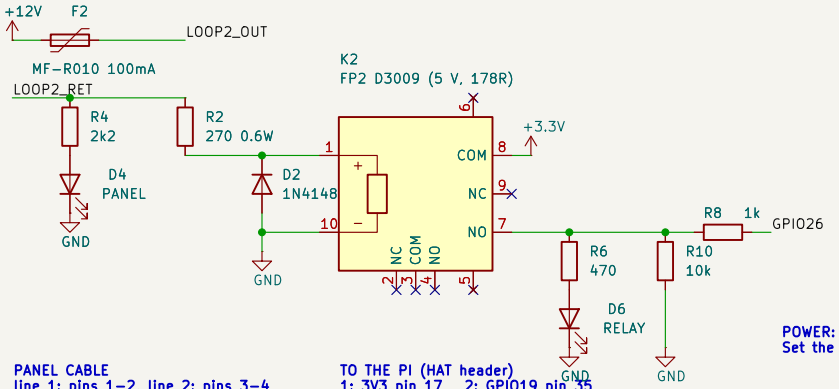


PANEL CABLE
line 1: pins 1–2, line 2: pins 3–4

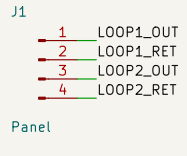

TO THE PI (HAT header)
1: 3V3 pin 17 2: GPIO19 pin 35
3: GPIO26 pin 37 4: GND pin 39

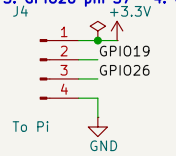

POWER: 12 V in, 5 V out to HAT pins 2 and 6
Set the trimmer to 5.1 V BEFORE connecting the Pi

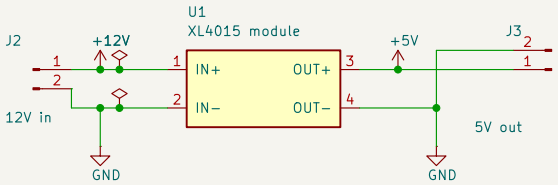

2 supervised 12 V loops > relays > GPIO19 / GPIO26, plus 12 V to 5 V supply
wedi

Sheet: /
File: panel-interface.kicad_sch

Title: wediAlert fire panel interface

Size: A4	Date:	**Rev: 1**
KiCad E.D.A. 10.0.5		Id: 1/1