


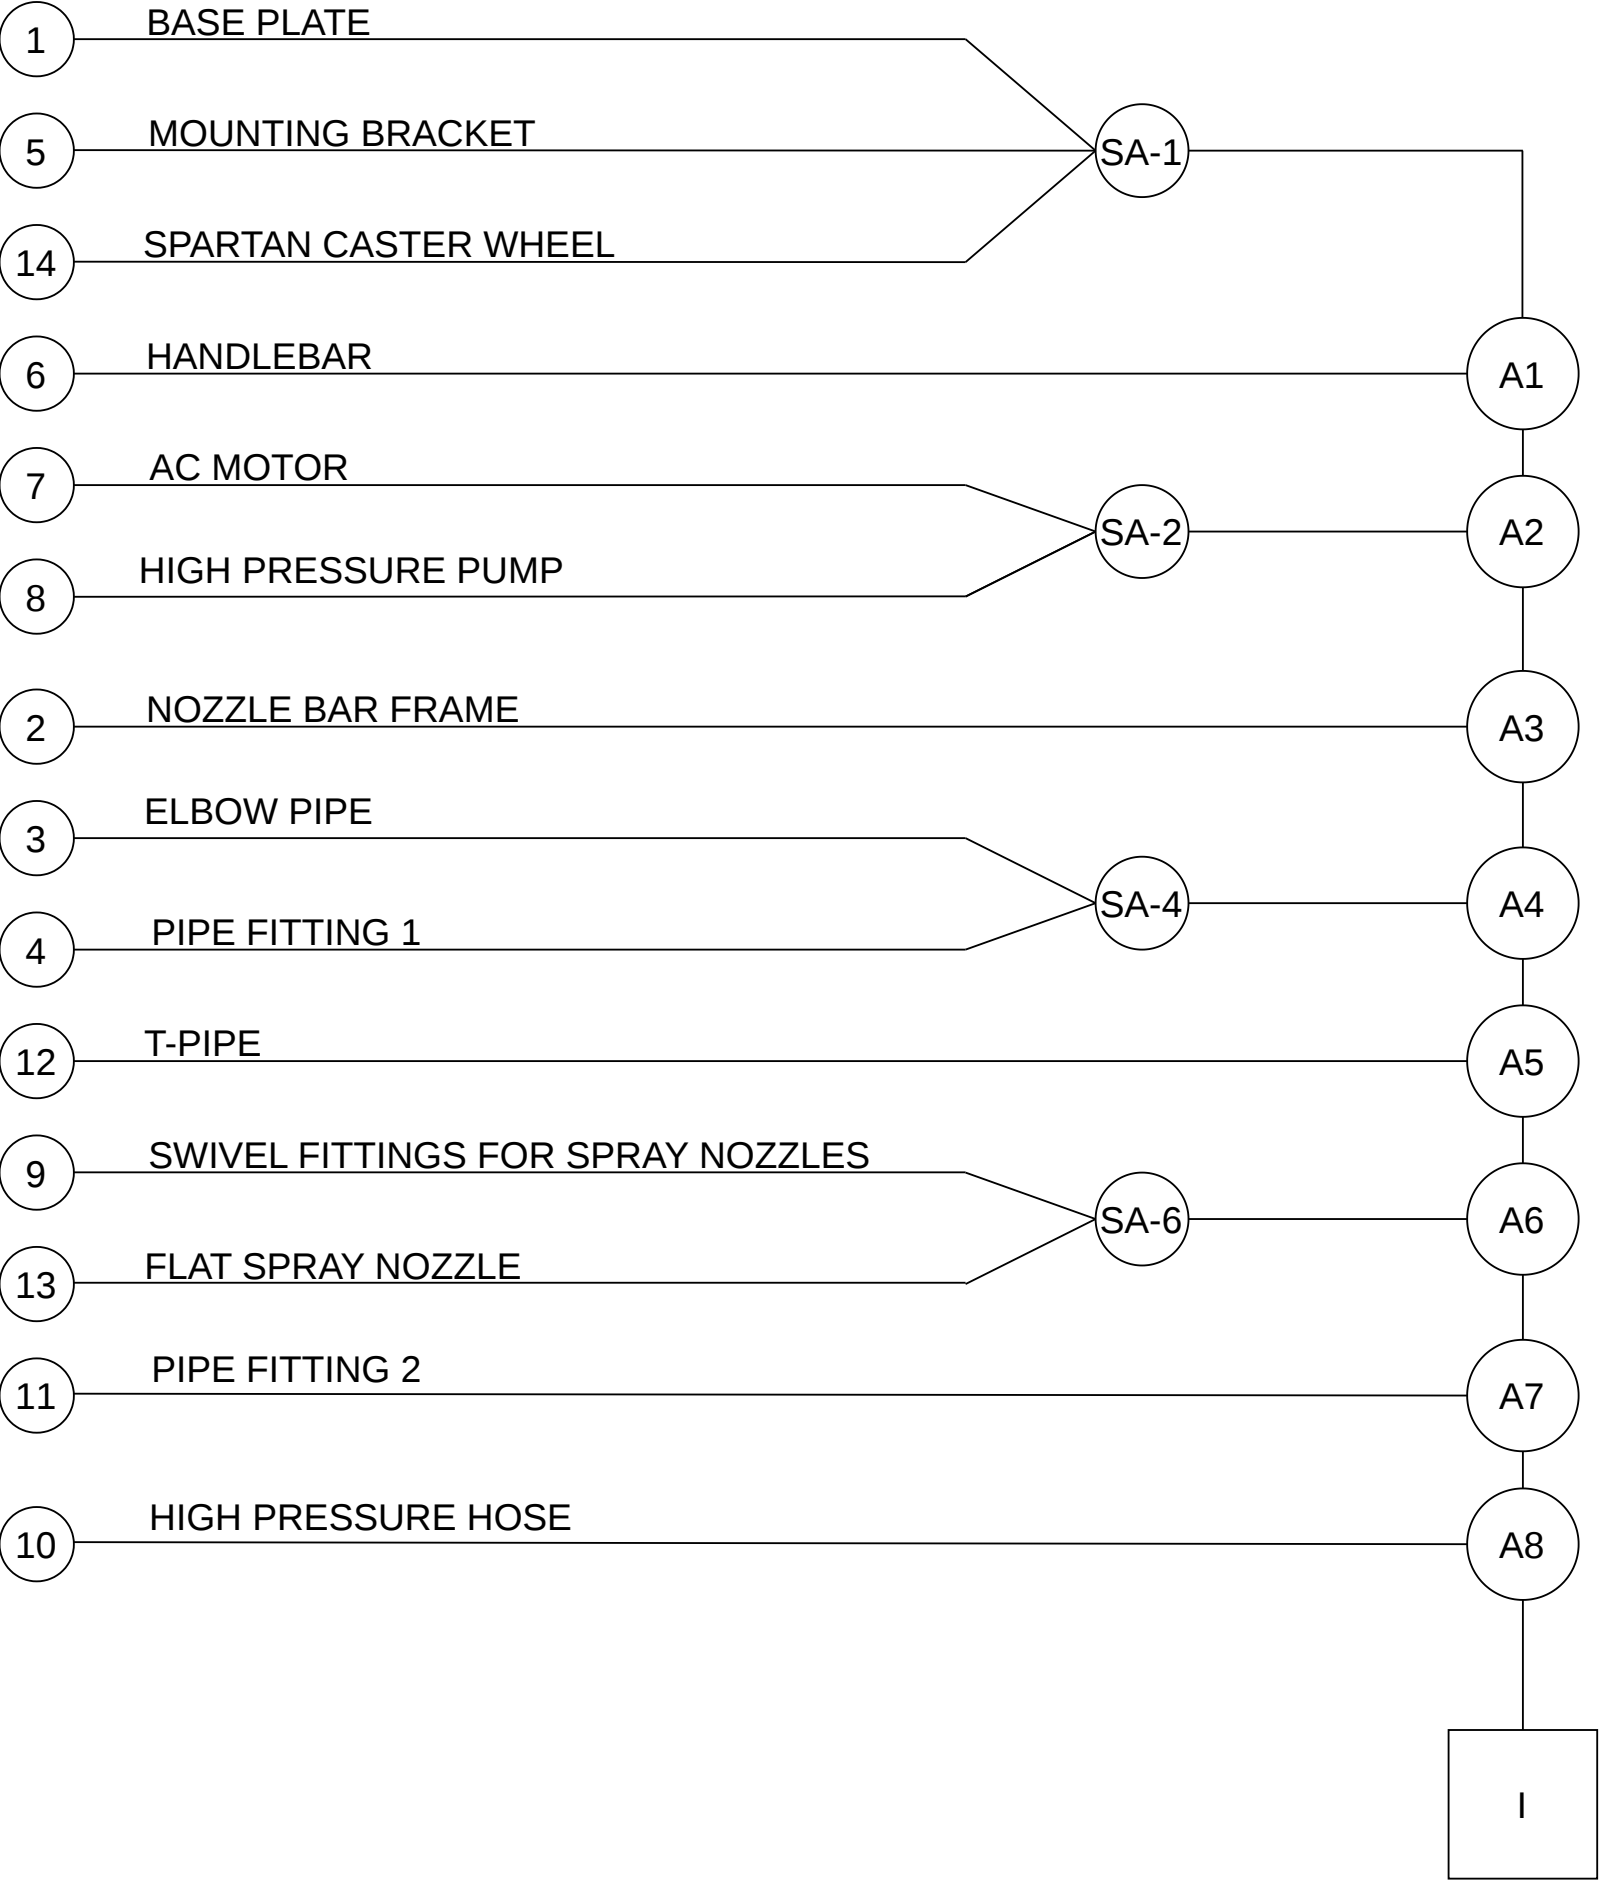

Secure the **Handlebar (6)** into the **Mounting Bracket (5)** located on Sub-assembly 1 (**Base Plate**); Prerequisite: Sub-assembly 1 (Items 1, 5, 14) must be pre-assembled

Couple the **AC Motor (7)** to the **High Pressure Pump (8)** (Sub-assembly 2) and fasten the combined unit onto the main assembly.

Align the **Nozzle Bar Frame (2)** at the designated mounting point and permanently join via welding.

Install Sub-assembly 4 (**Elbow Pipe [3]** and **Pipe Fitting 1 [4]**) onto the frame assembly.

Thread and secure the **T-Pipe (12)** into the fluid delivery line

Assemble the **Flat Spray Nozzles (13)** into the **Swivel Fittings (9)** and mount the full set onto the Nozzle Bar.

Install **Pipe Fitting 2 (11)** to complete the manifold circuit.

Connect the **High Pressure Hose (10)** to bridge the connection between the High Pressure Pump and the nozzle assembly.

Conduct a final visual inspection of all fasteners and weld points; perform a pressure test to ensure system integrity.

CAPE PENINSULA UNIVERSITY OF TECH.

DEPT. INDUSTRIAL ENGINEERING

ASSEMBLY CHART

FADEEL PHILLIPS

DATE: 4 APRIL 2026