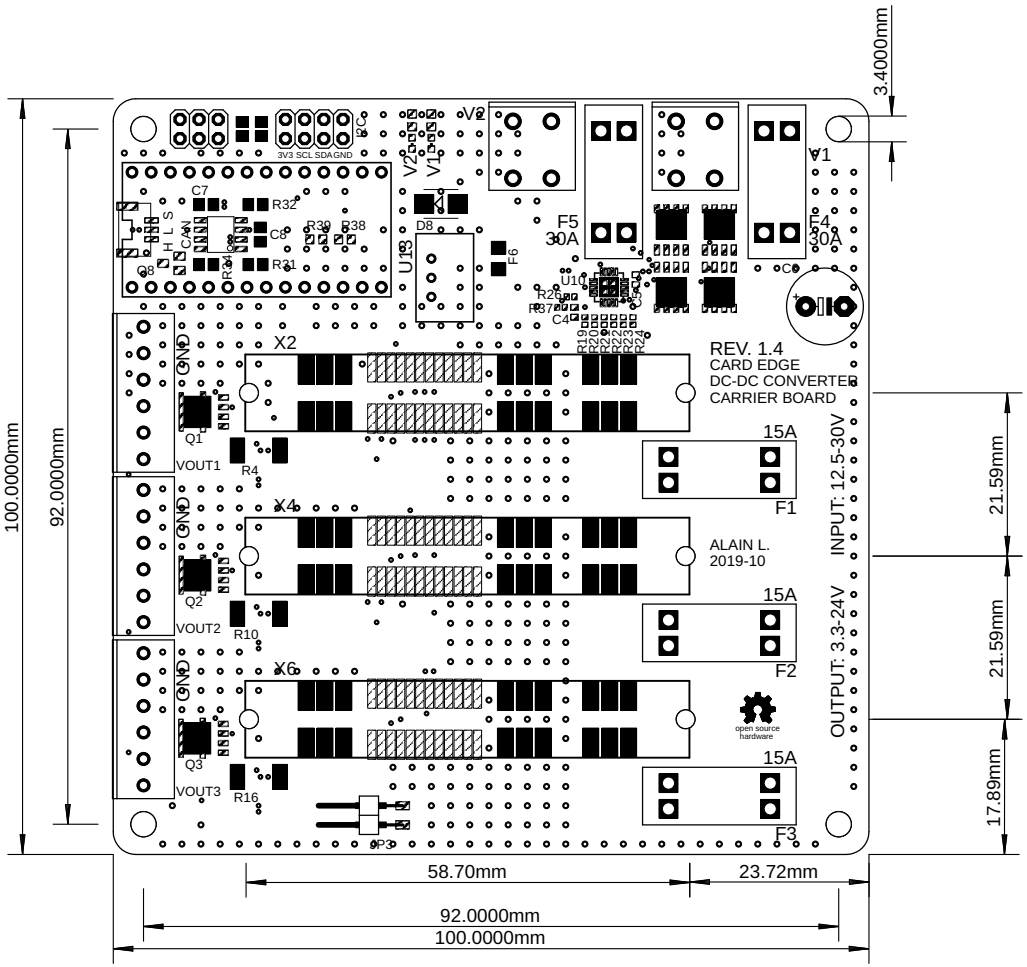

NOTES:
1. Solder board in following order:
   1.1 Reflow solder top surface mounted components except edge connectors
   1.2 Hand solder bottom components
   1.3 Hand solder remaining top components
   1.3.1 Solder edge connectors first
2. Use LP MINI 891 fuses for F1 through F5
3. 2oz copper suggested, but not required

carrier_board

2019-10-14 1:07 PM