
3216 OTTON

STEP 1 - MOTOR ASSEMBLY

note: whole build will need 26x m2 x10mm self tapping socked head

1x motor_frame
2x servo
4x m2 screw

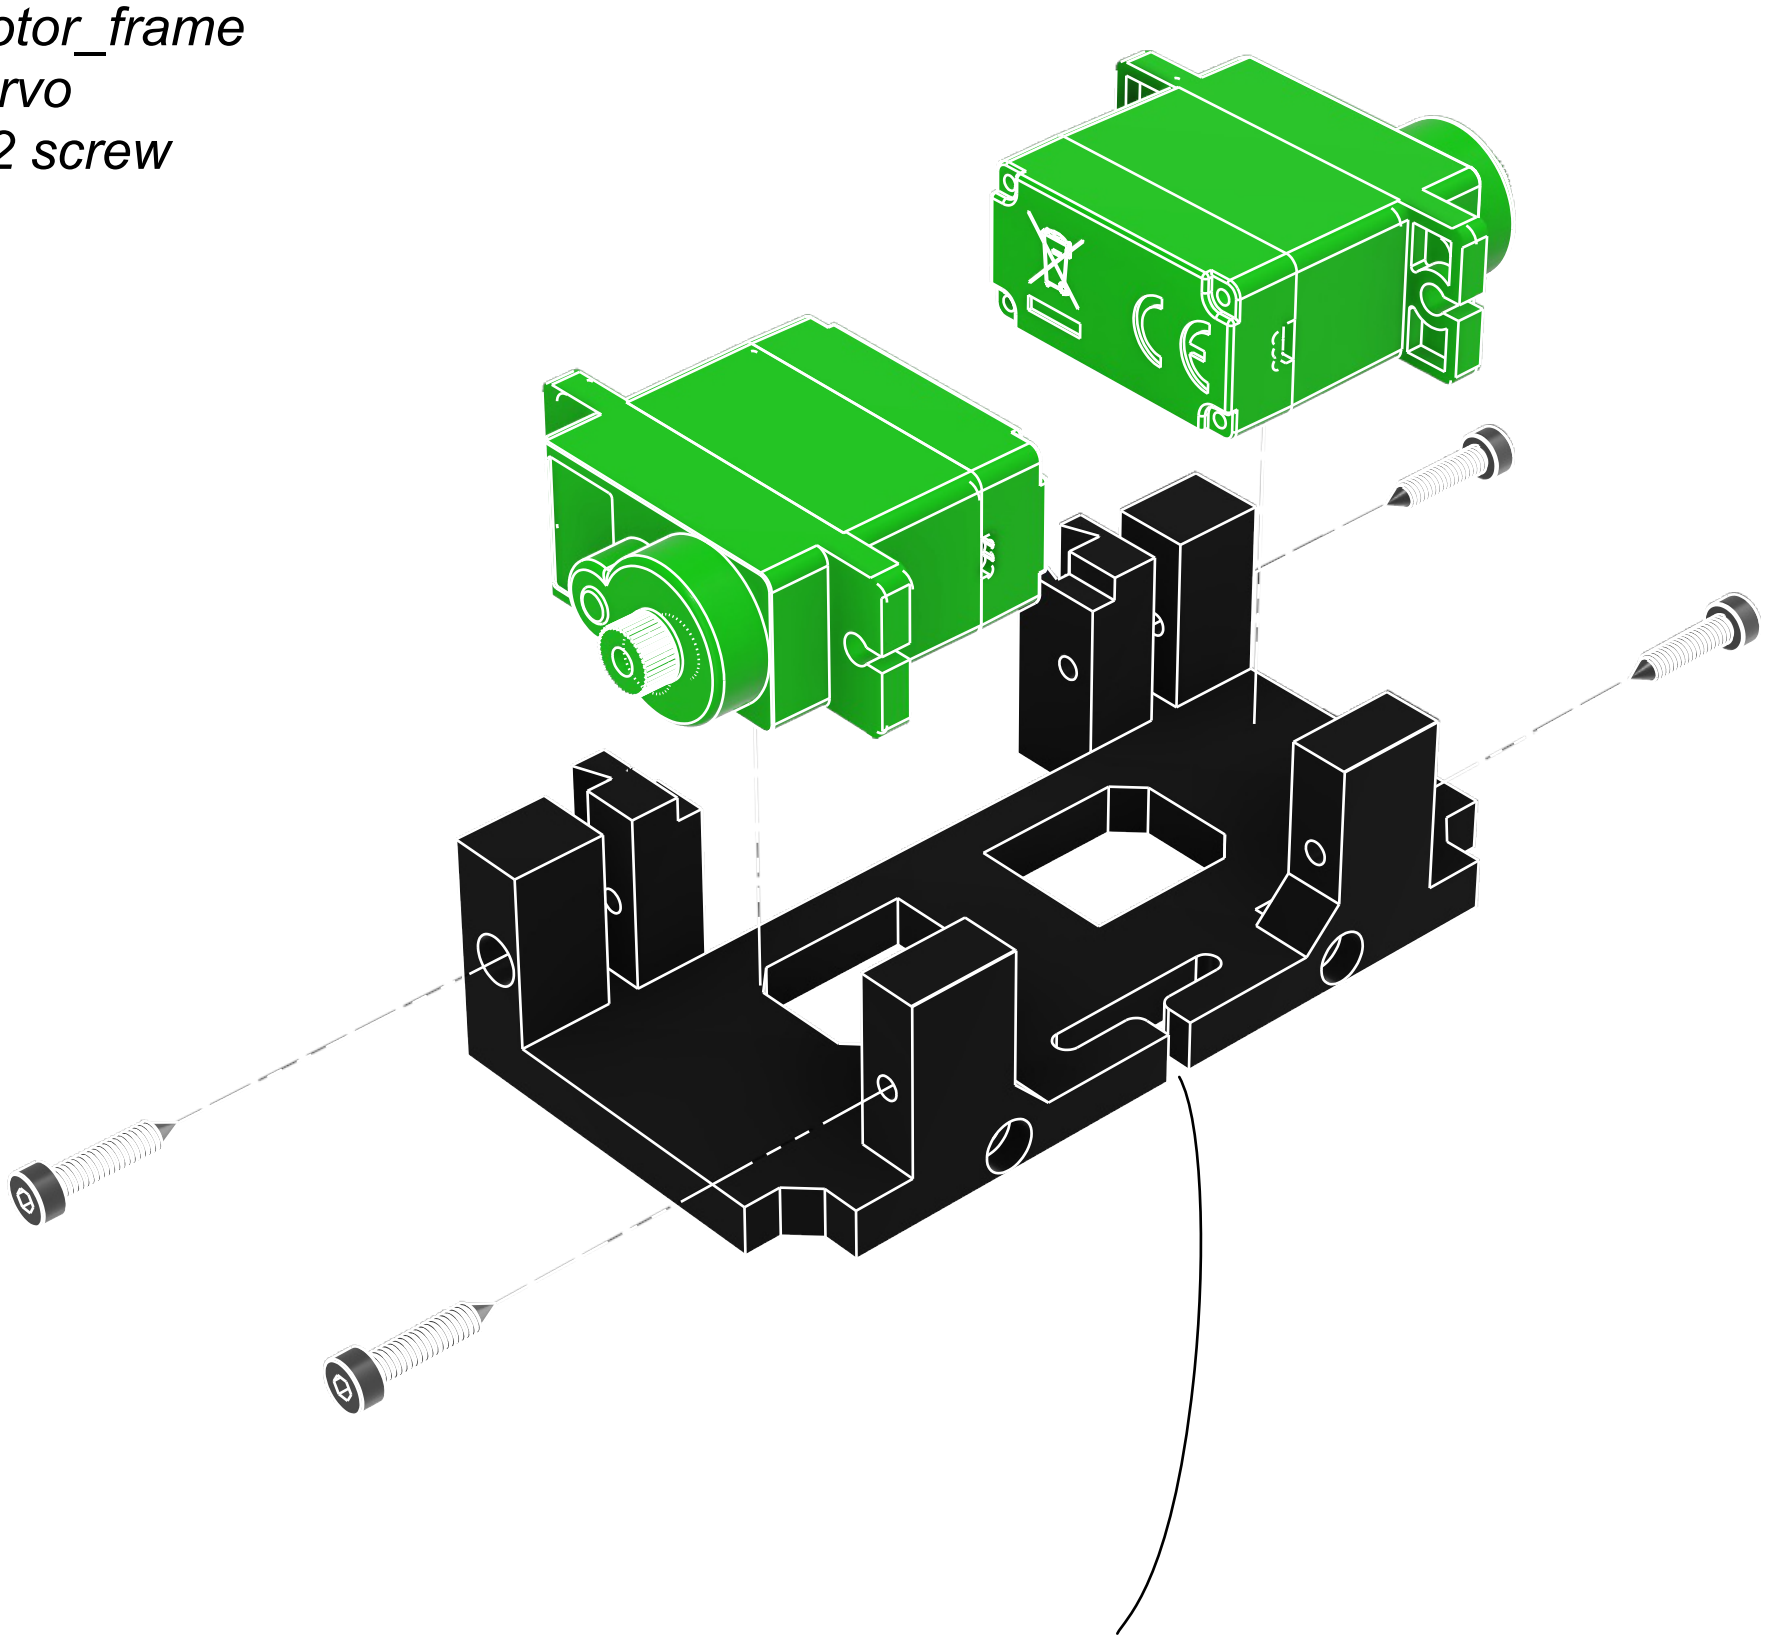


route motor wires through hole

OTTON

STEP 2 - SENSOR ASSEMBLY


1x sensor_coaster_frame
1x coaster
2x light sensor
2x m2 screw
1x metal ball

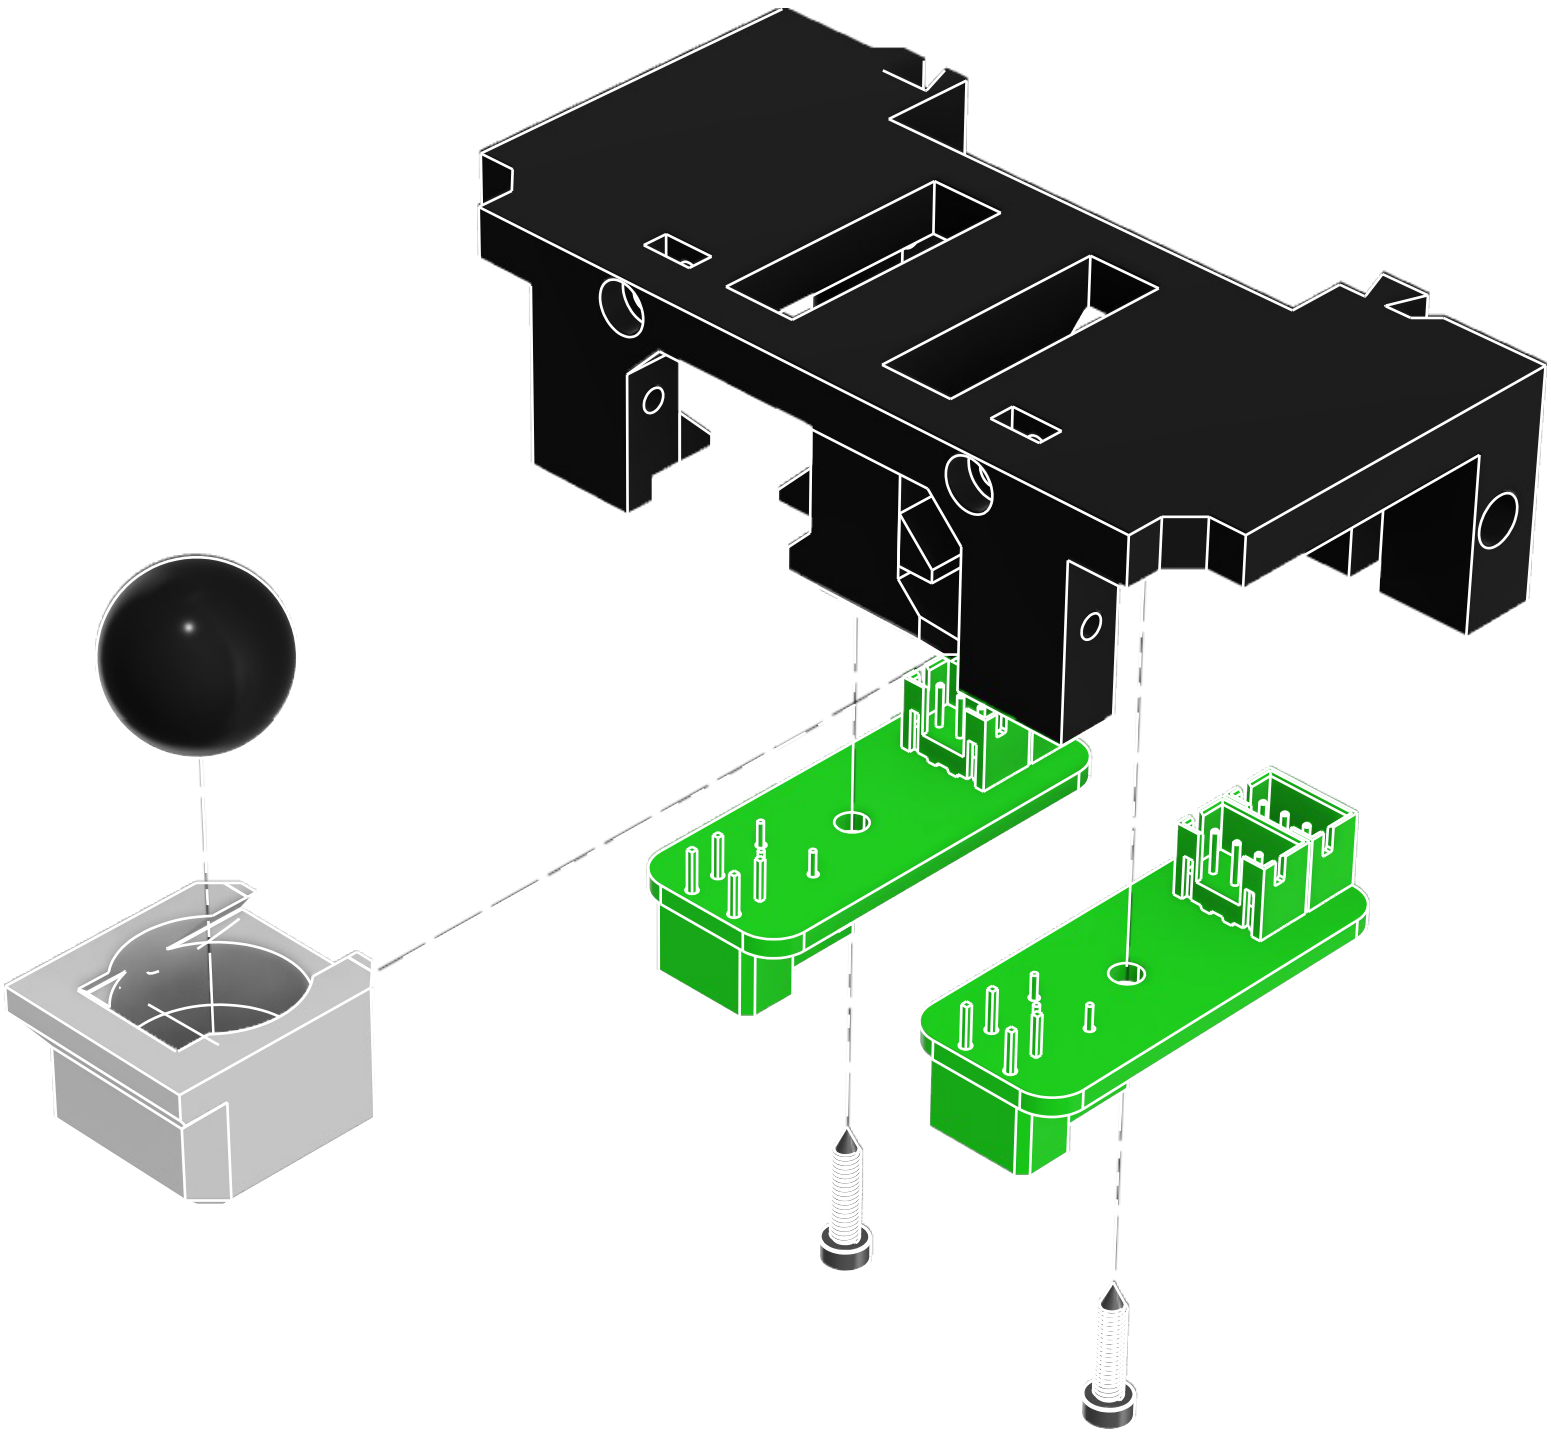

OTTON

STEP 3 - ULTRASONIC SENSOR ASSEMBLY


1x front_sensor_mount
1x ultrasonic sensor
4x screw b

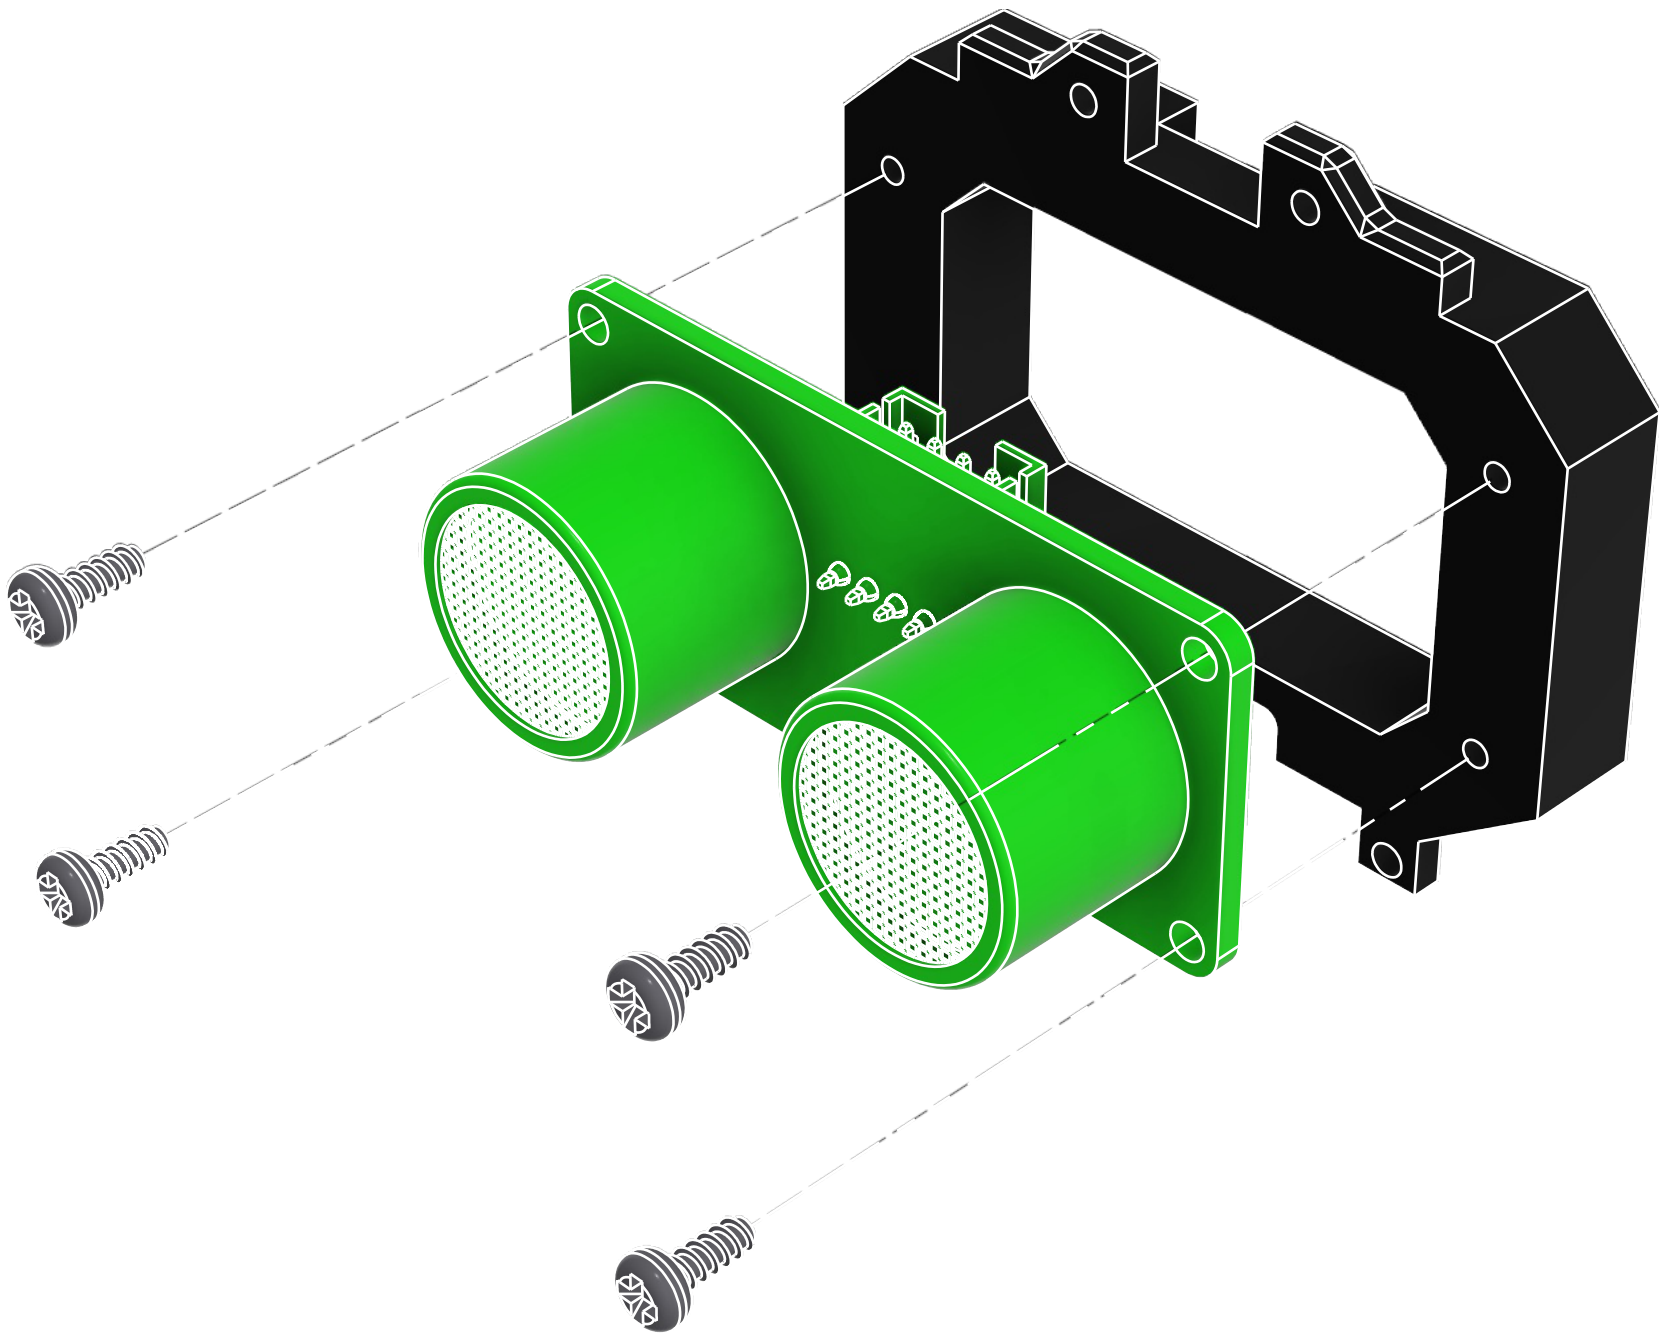

3216 OTTON

STEP 4- CORE ASSEMBLY

1x mainboard print
1x mainboard_support
1x mainboard_top
1x battery
1x mainboard pcb
1x ultrasonic assembly
4x m2 screw

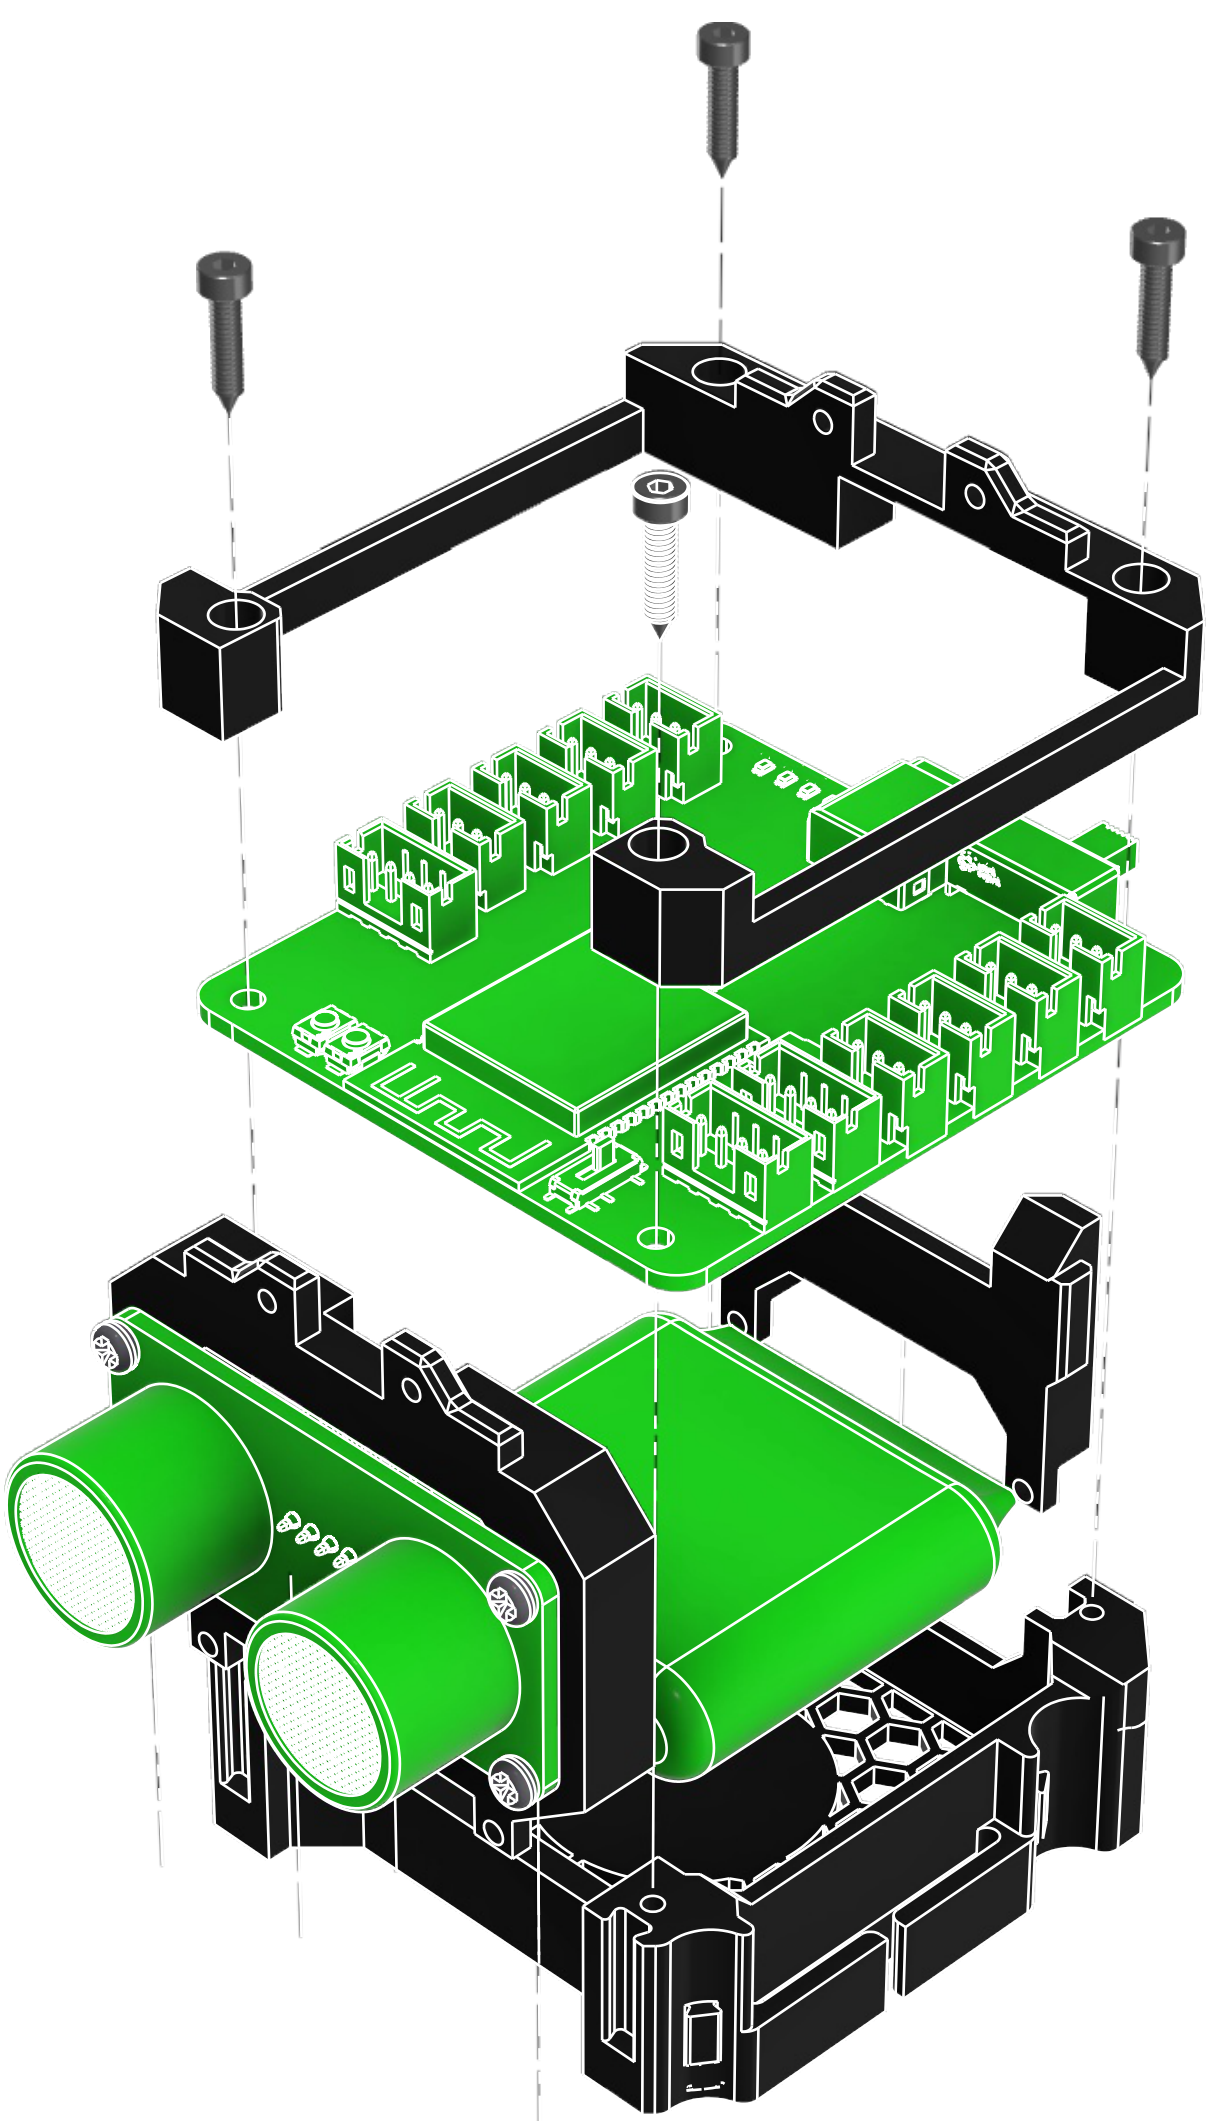


3216 OTTON

STEP 5 - MID AND BOTTOM ASSEMBLY

1x core assembly
1x motor assembly
1x sensor assembly
4x m2 screw

route sensor motor wires through side holes

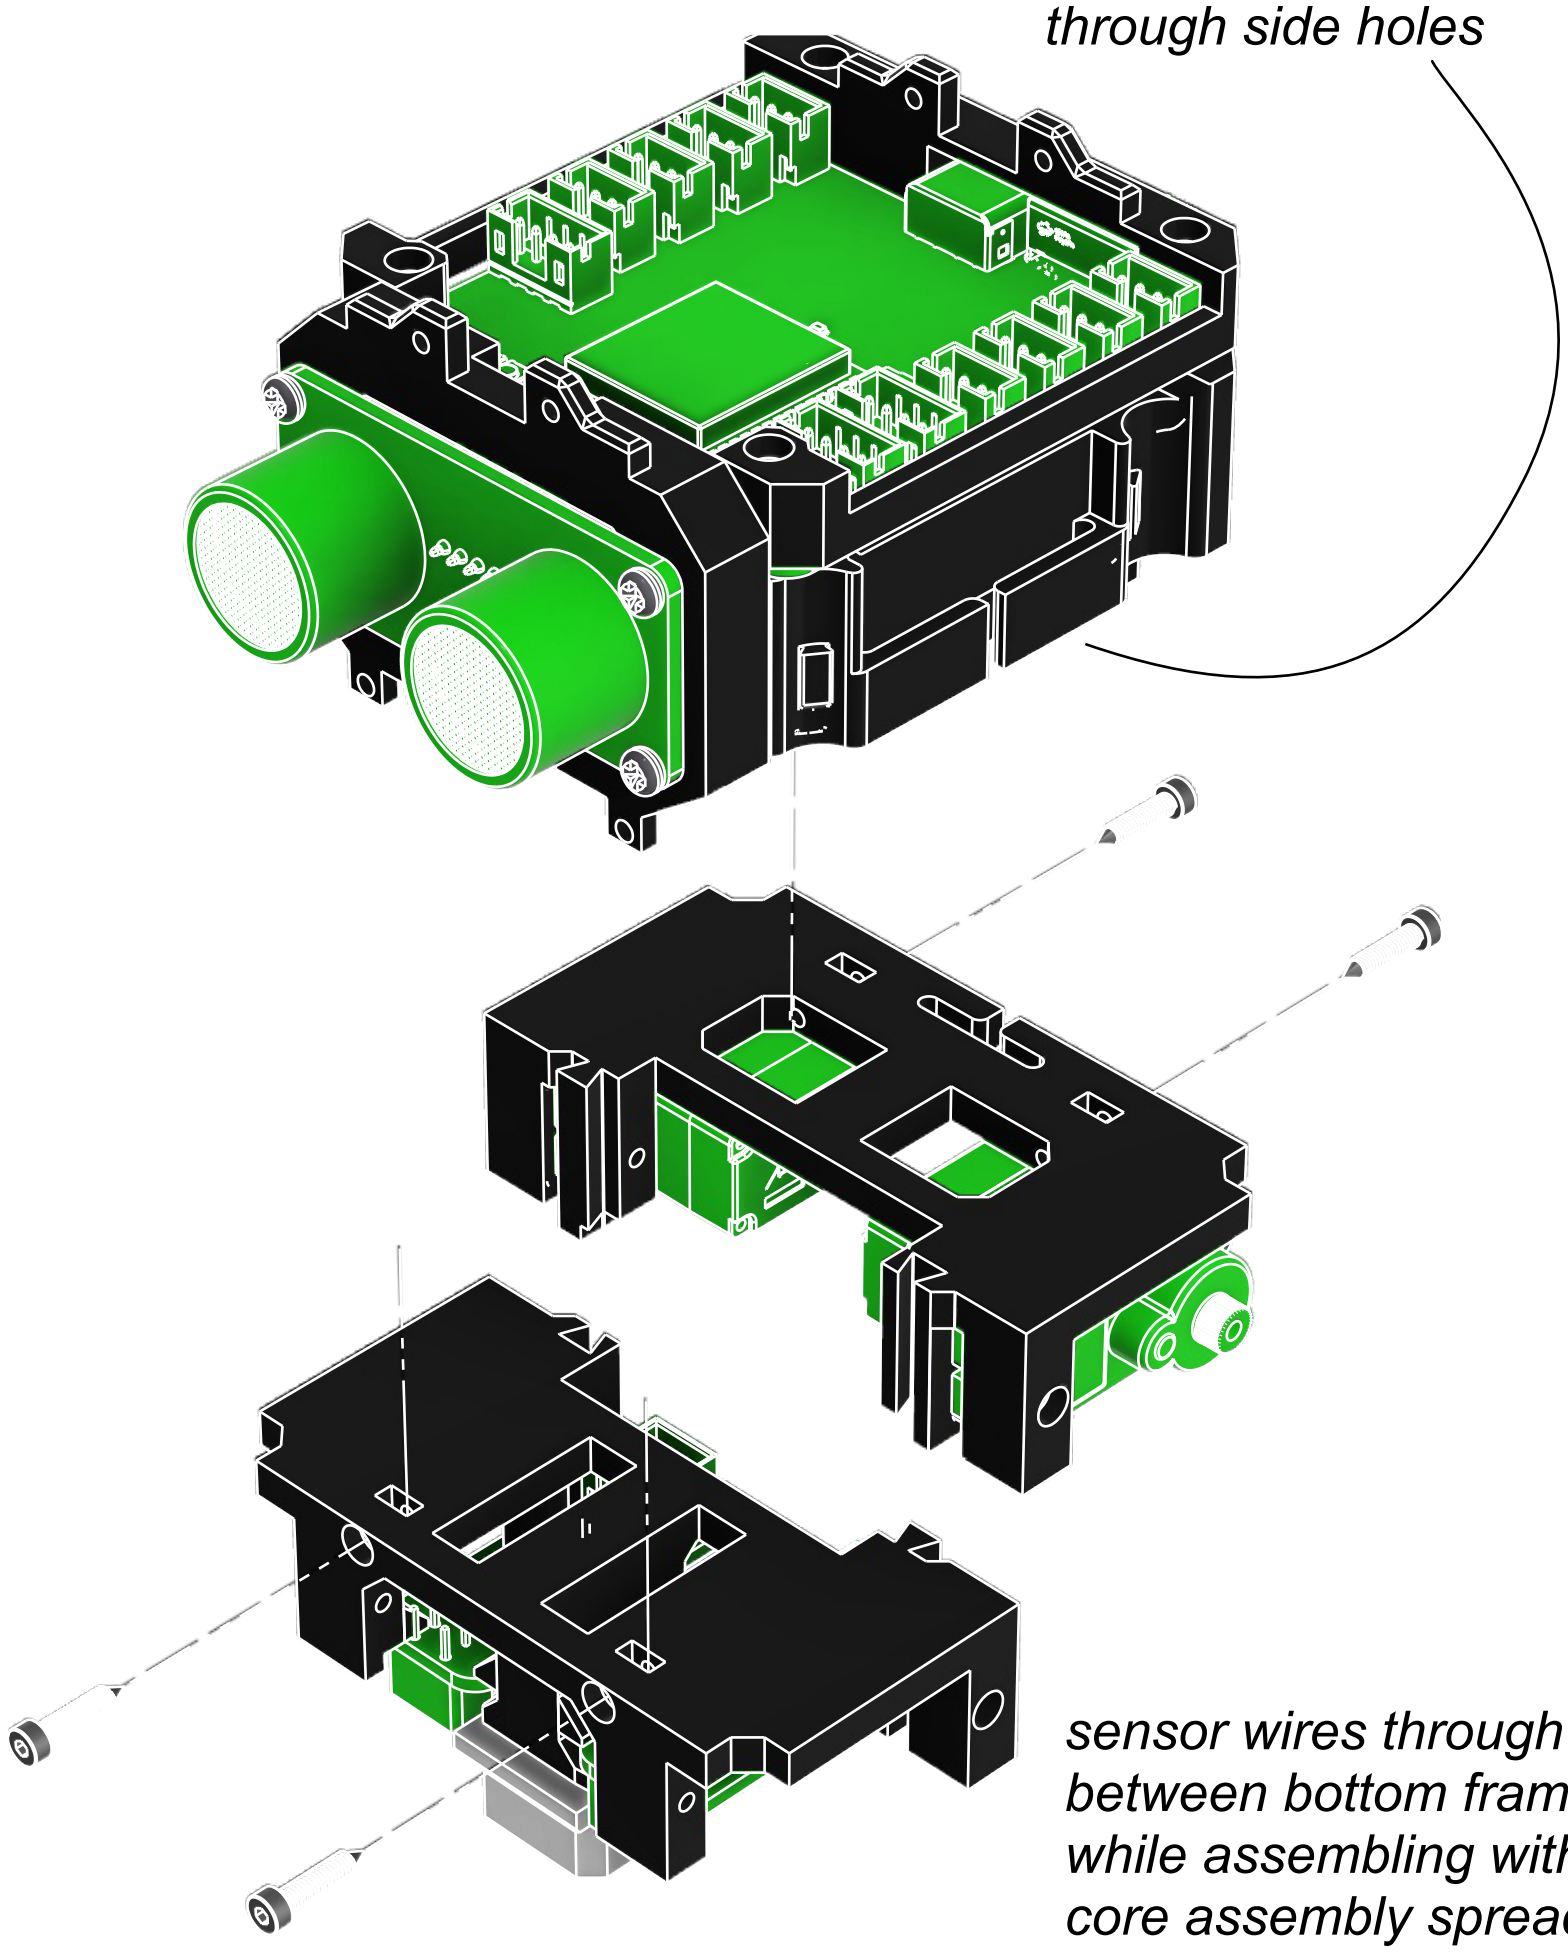


sensor wires through hole between bottom frames while assembling with core assembly spread wires per side (left/right)

3216 OTTON

STEP 6 - INNER FRAME

1x mid and bottom assembly
2x led_frame
1x led_grid
1x led pcb
8x m2 screw

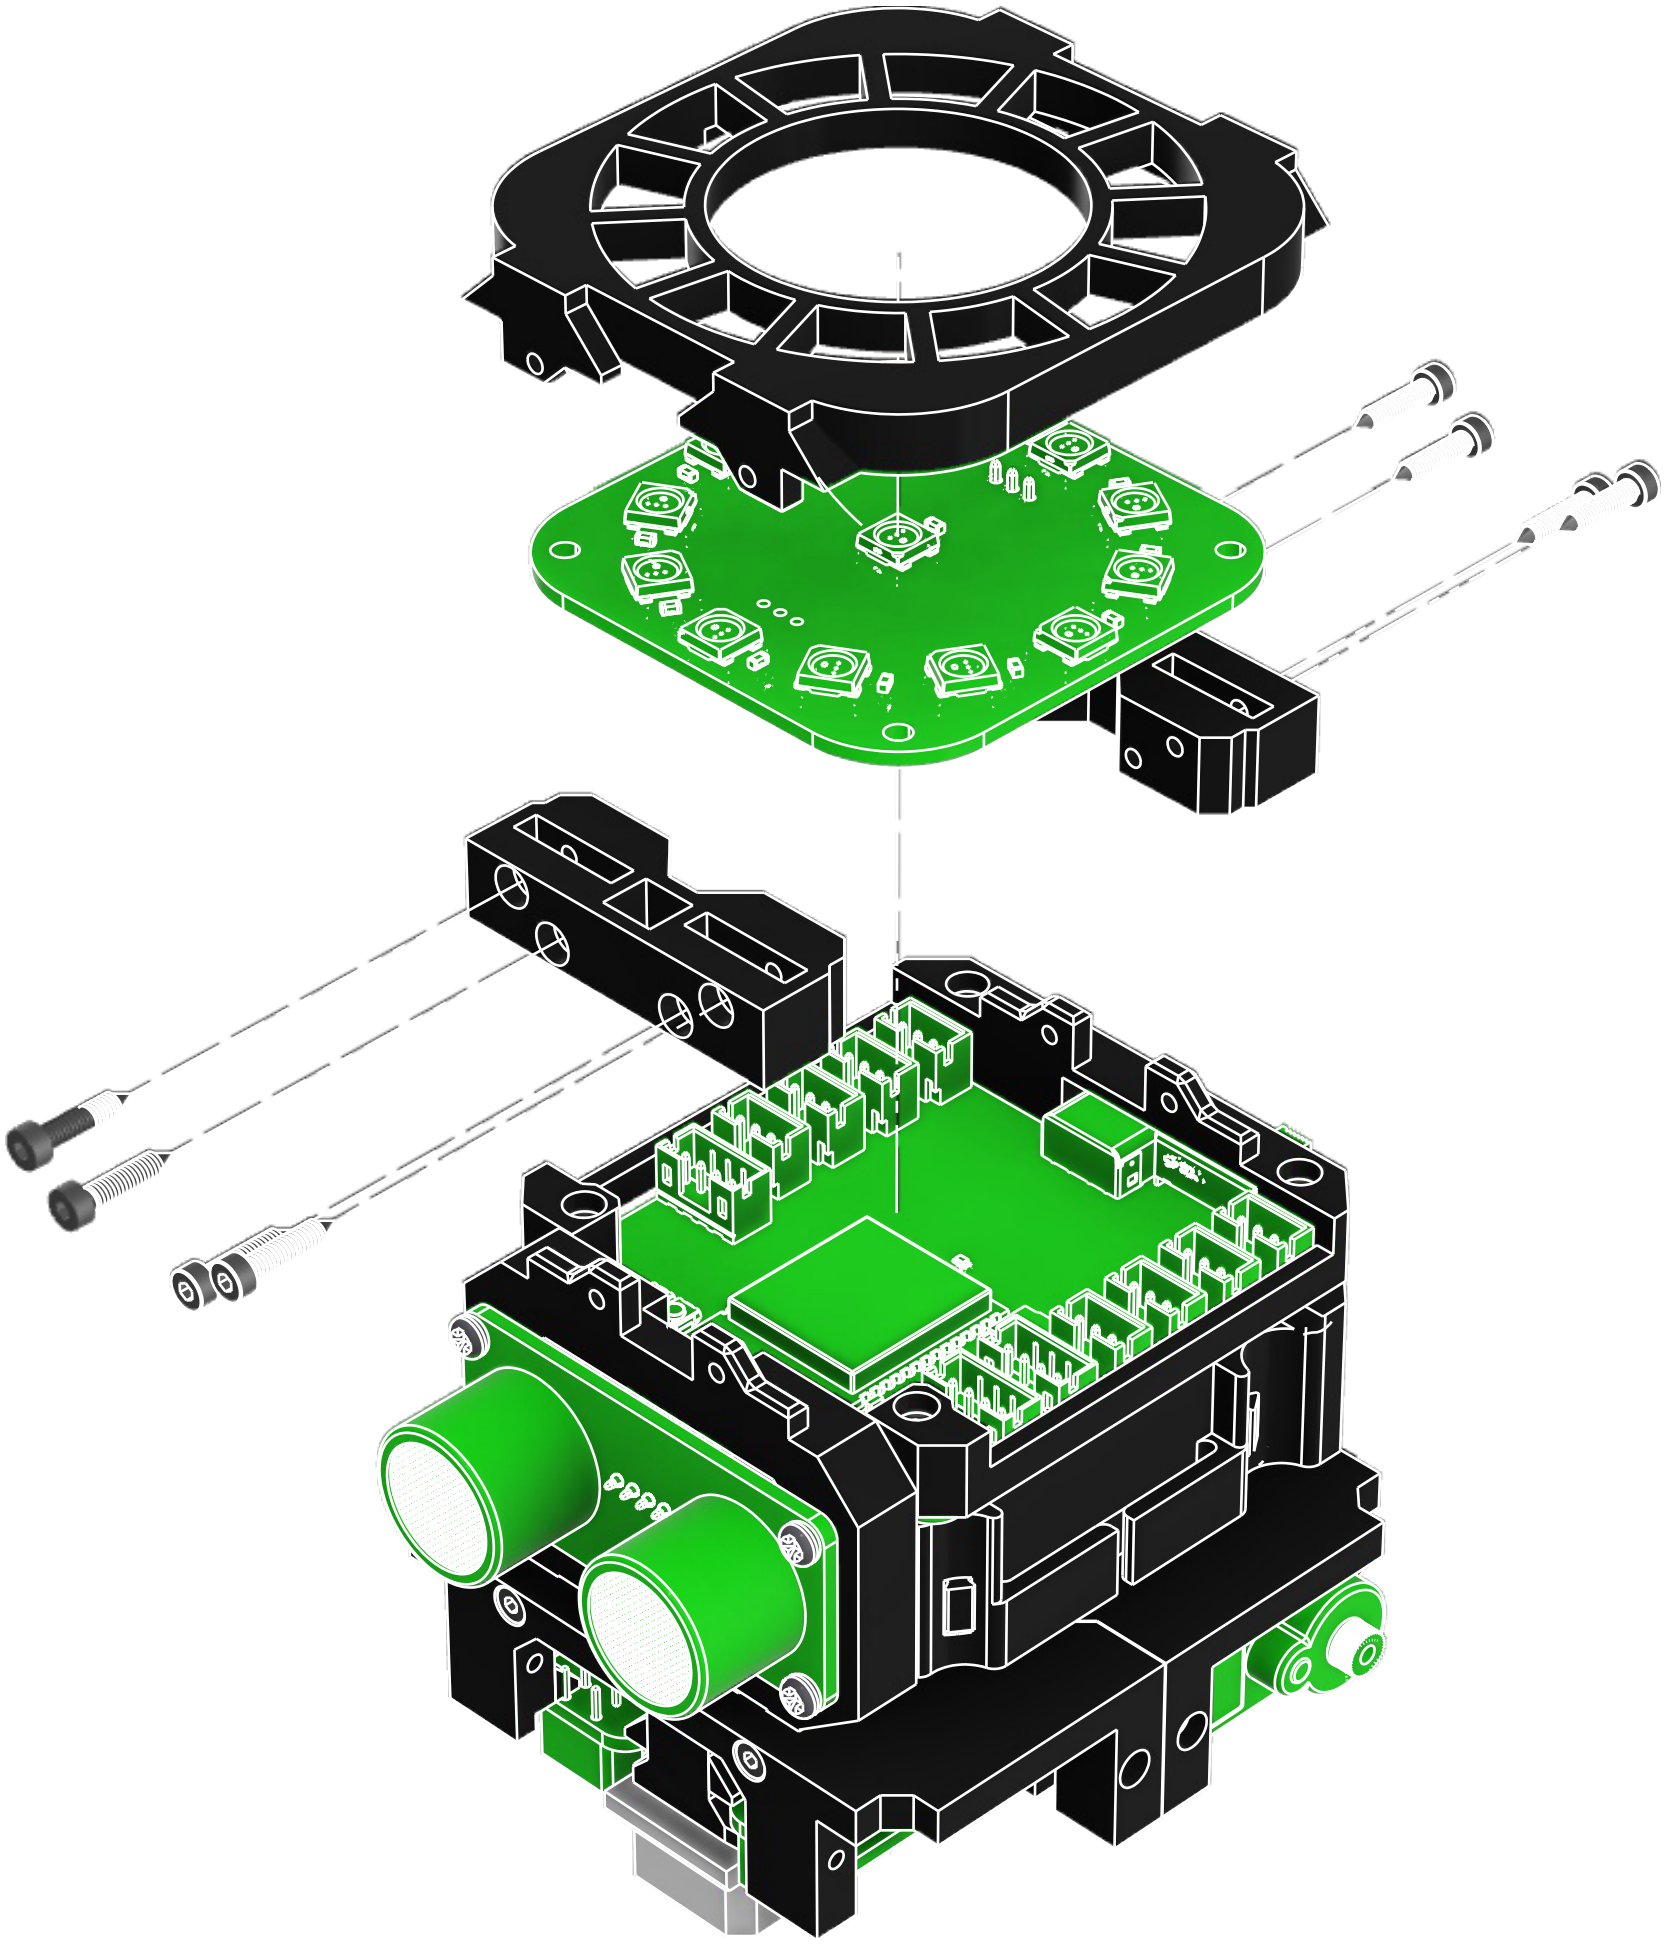



3216 OTTON


STEP 7 - BOTTOM

1x inner frame assembly
1x horizontal frame

bottom fitment of horizontal frame is tight and requires a little bit of force.
align frame with two slots at front of robot and tilt rest of it until it clicks

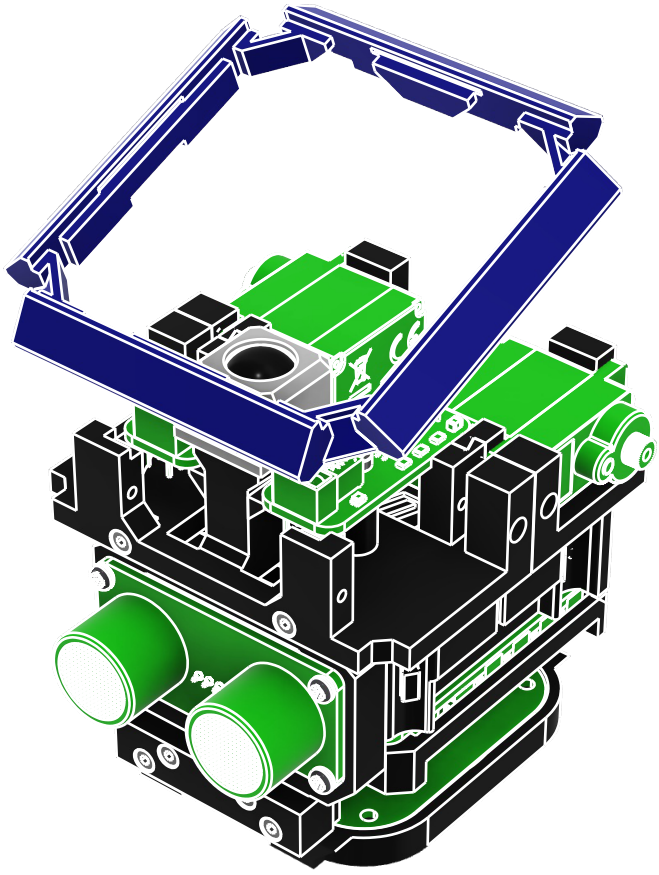

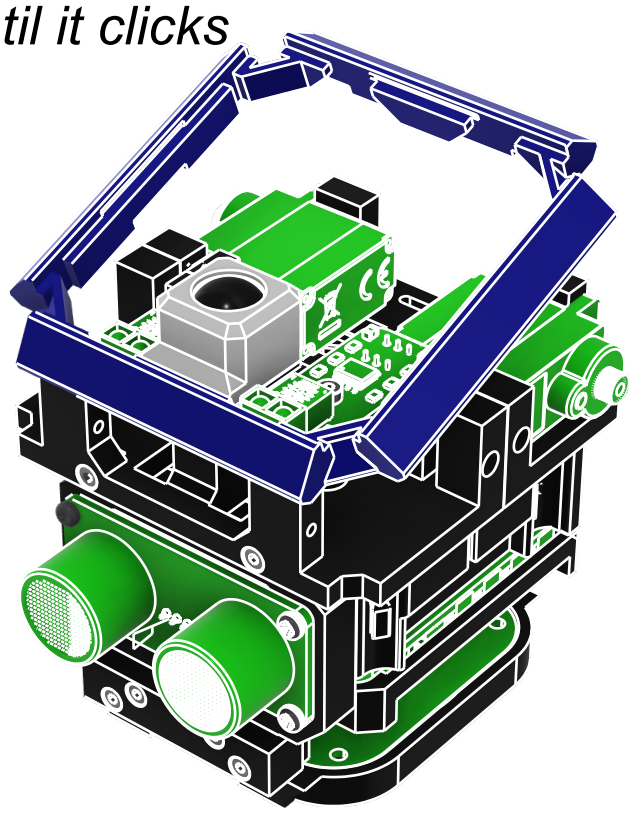


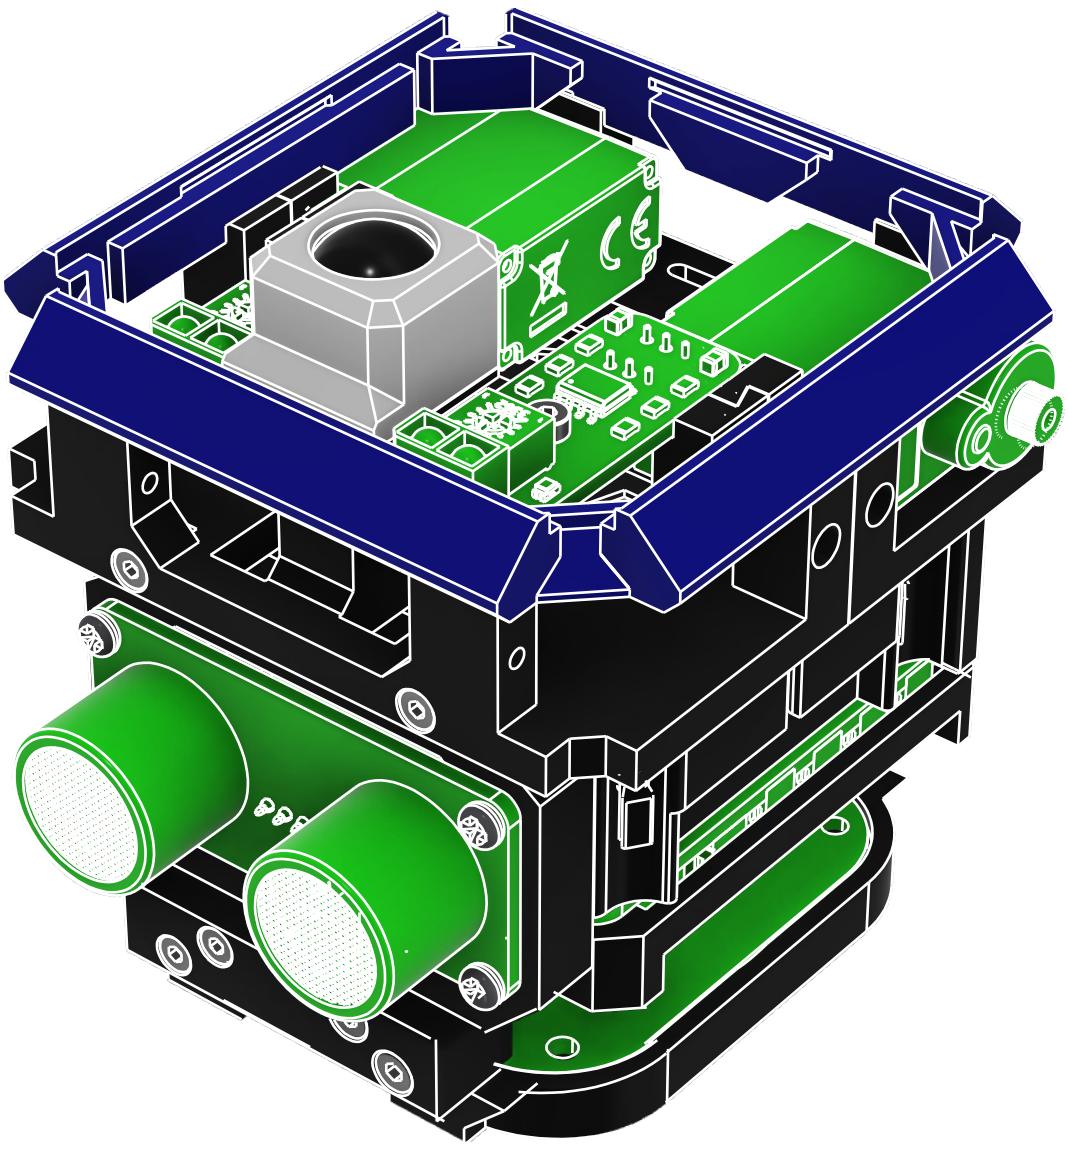

3216 OTTON

STEP 8 - TOP


1x horizontal frame

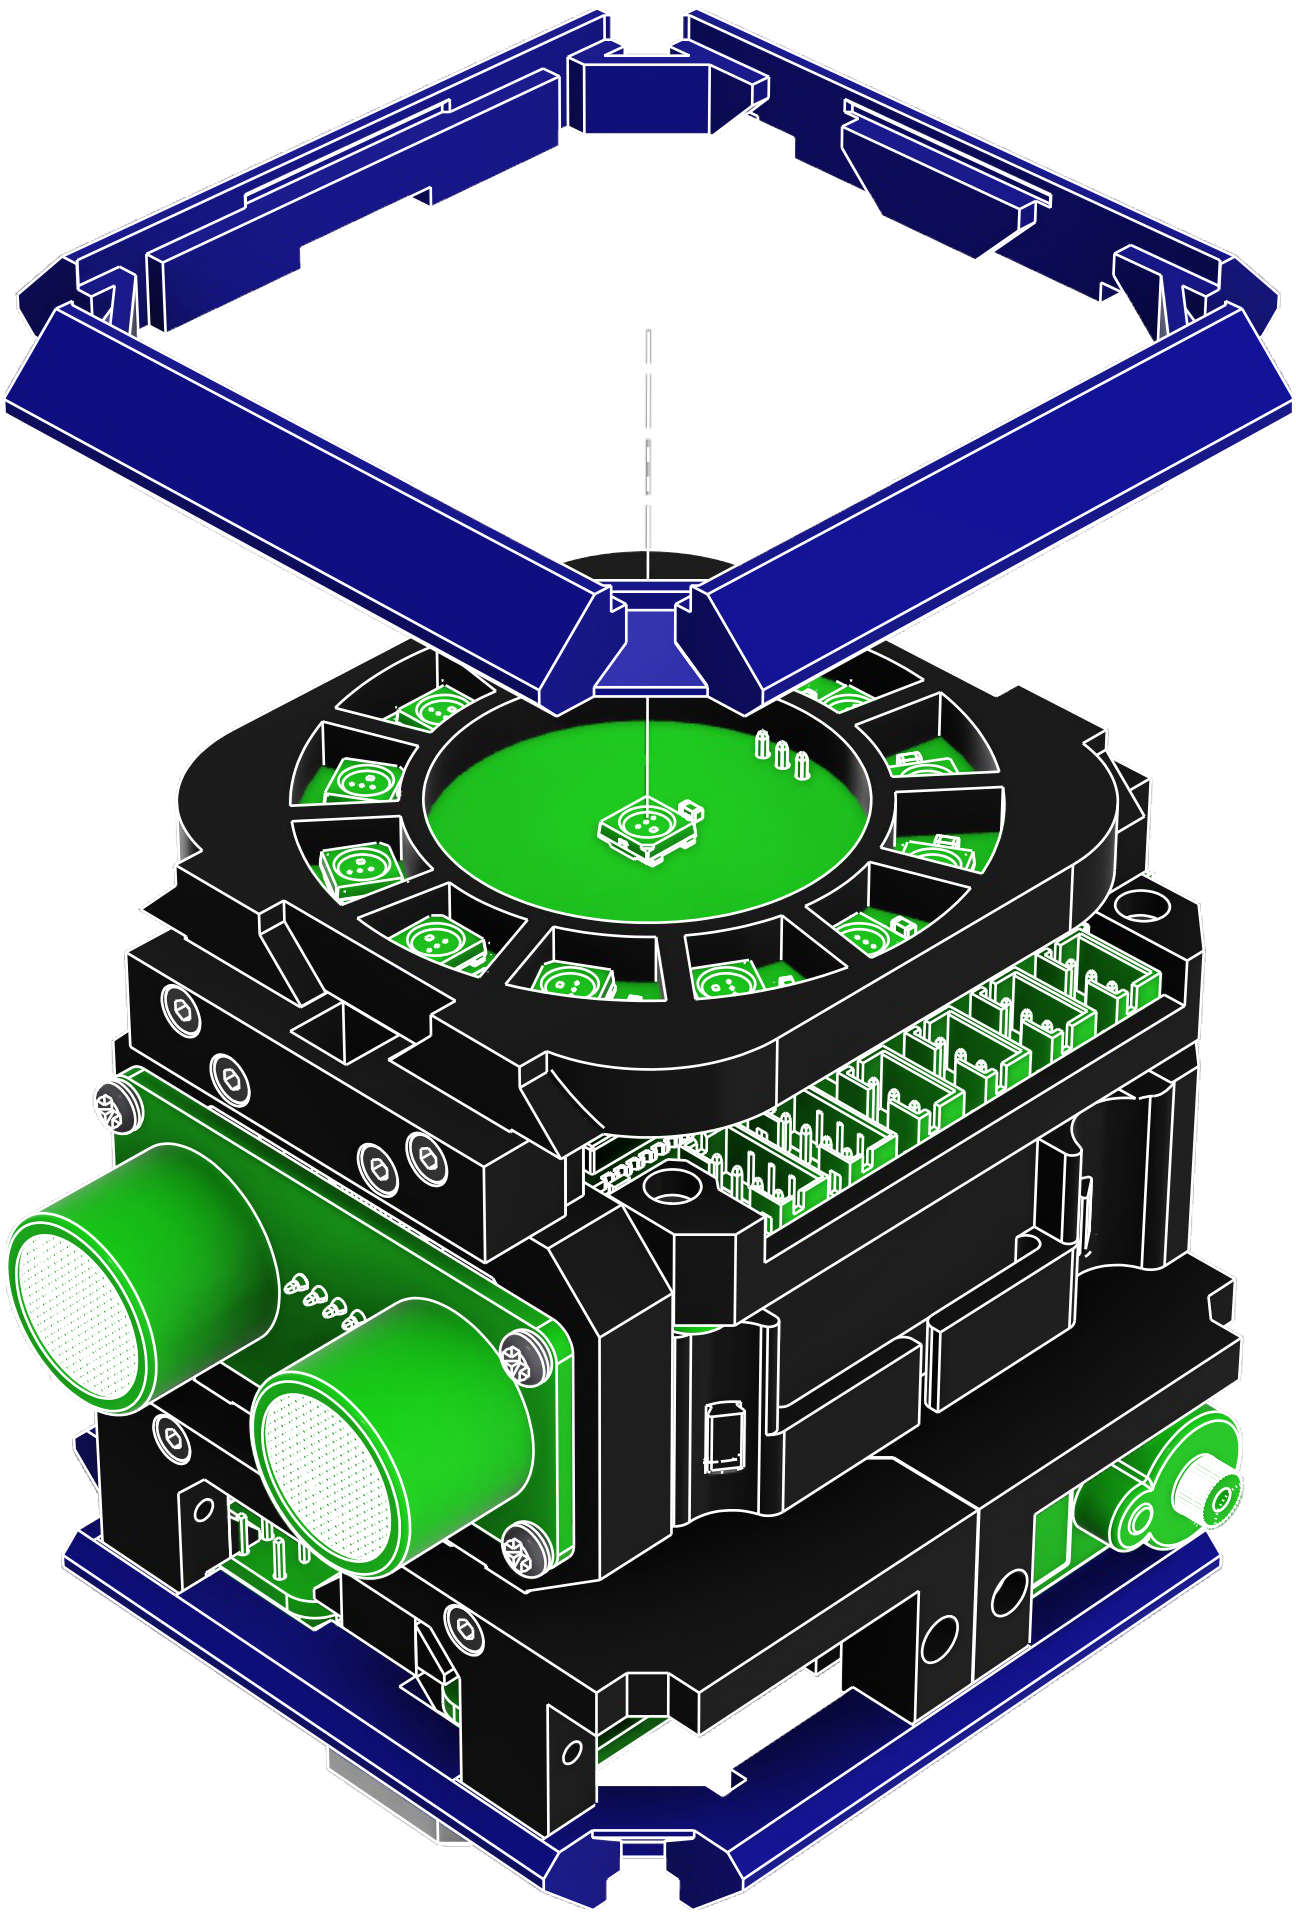

3216 OTTON

STEP 9 - OUTER FRAME

4x corner_01
4x corner_02

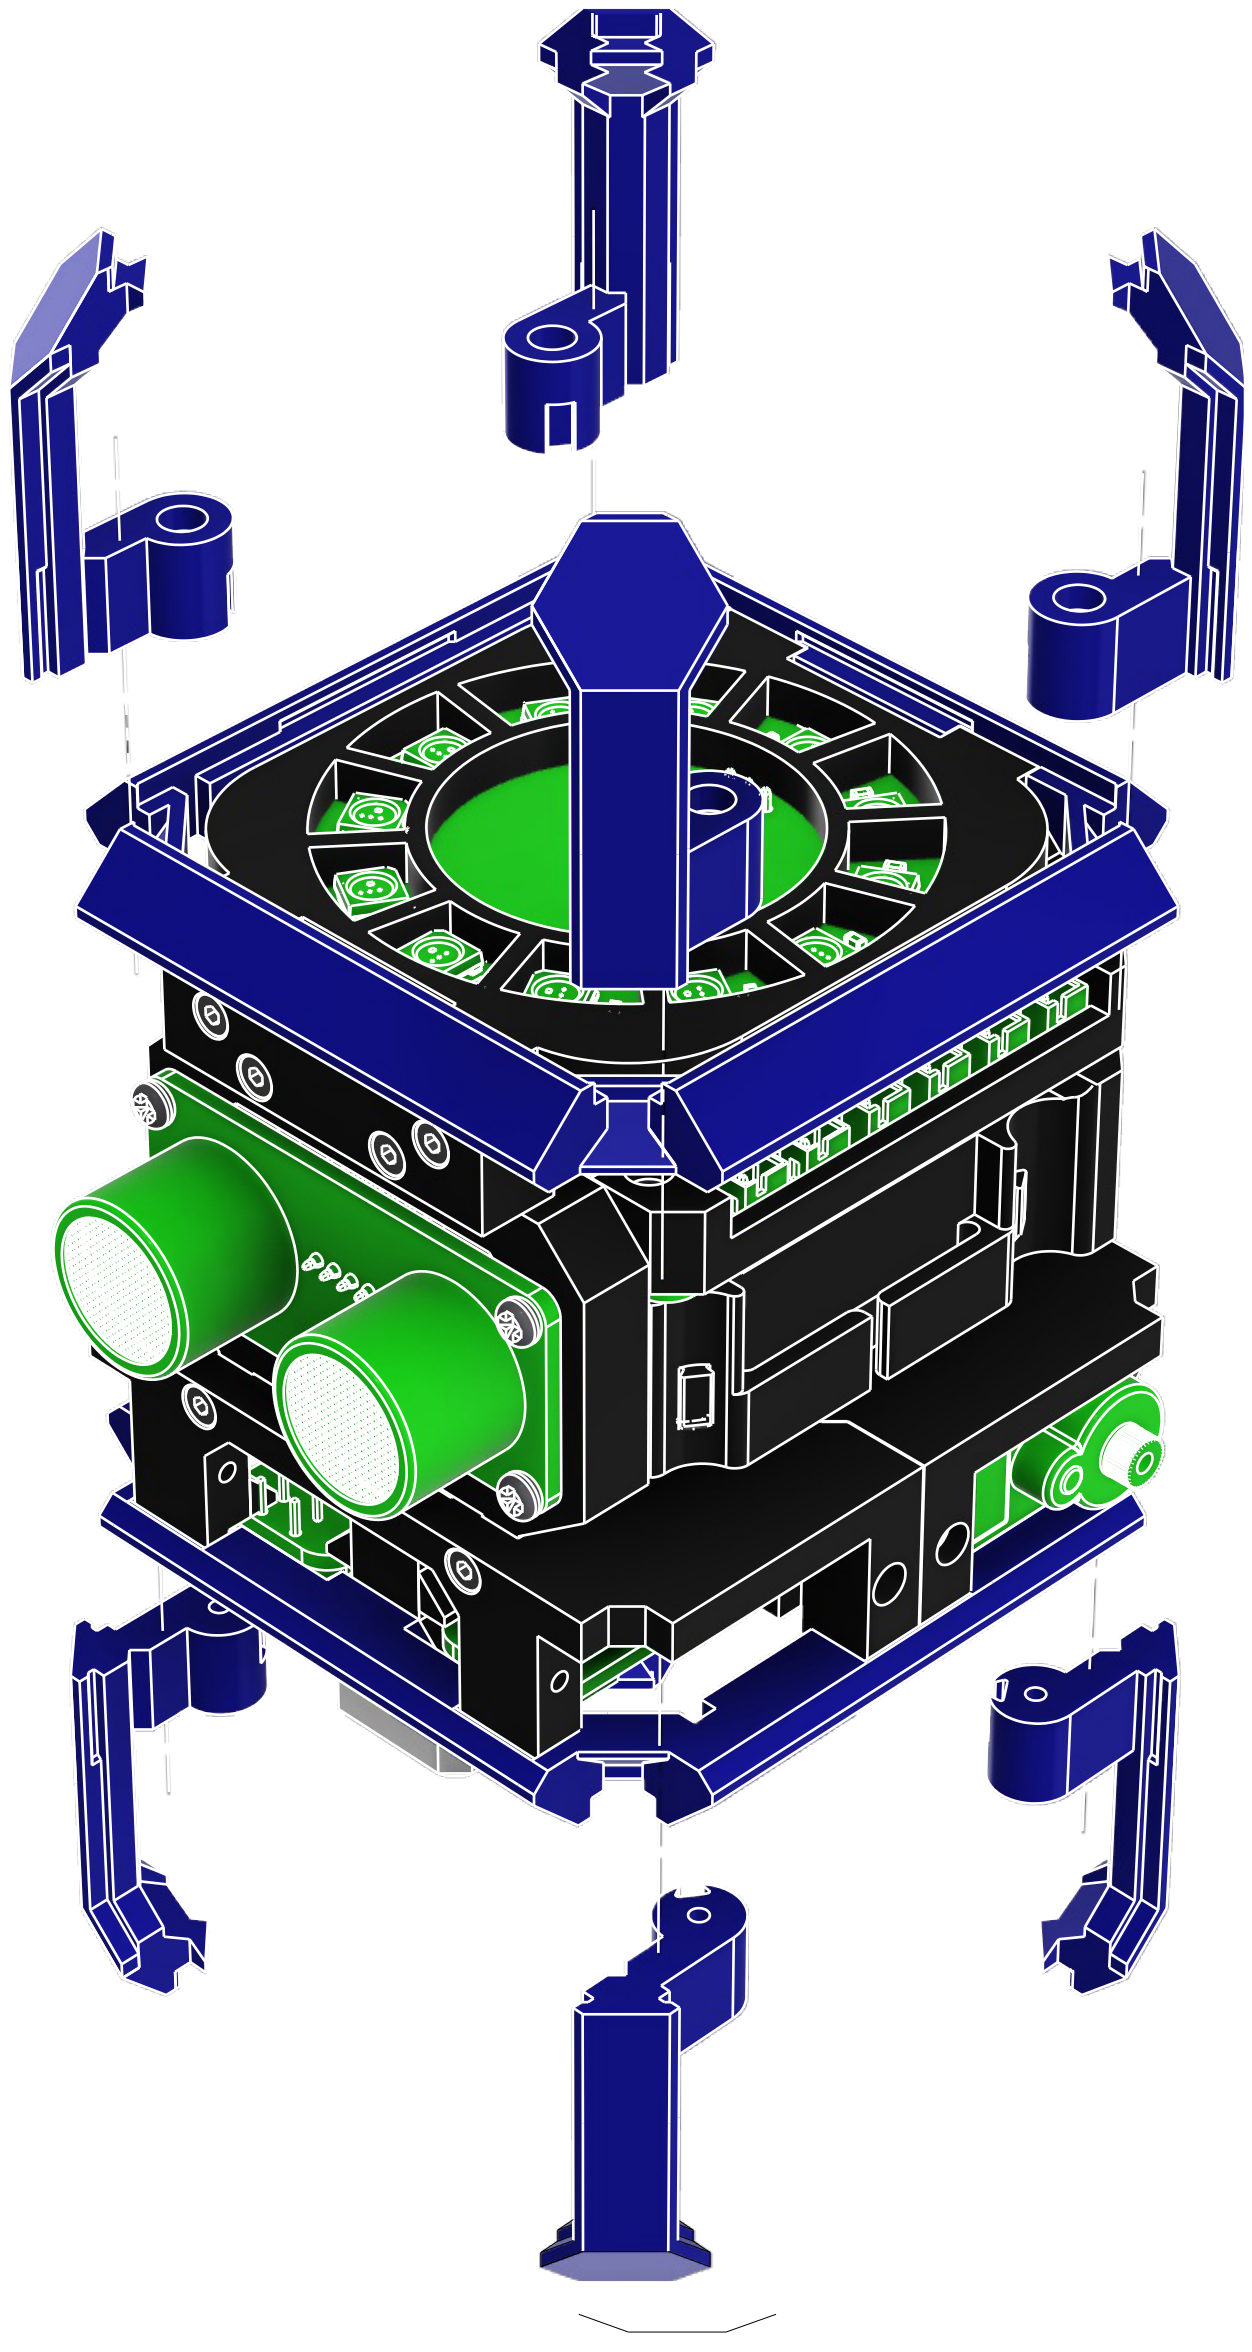


3216 OTTON


STEP 10 - OUTER FRAME

4x m2 screw

position all screws in holes of top corners

go to next page for detail how to tie them

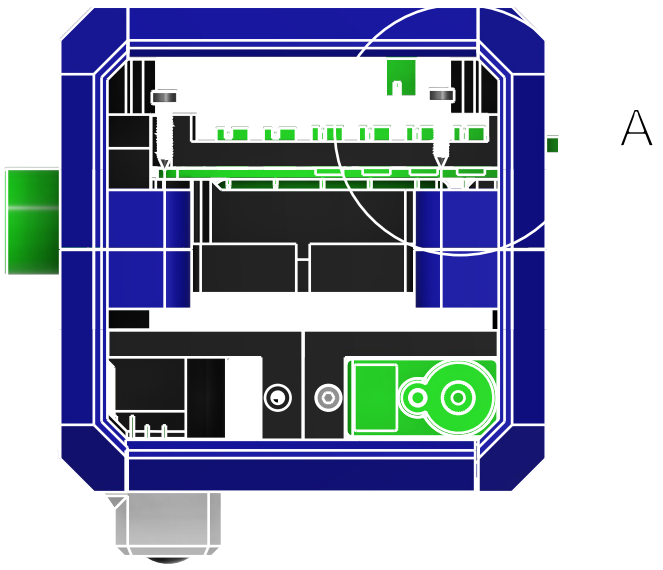


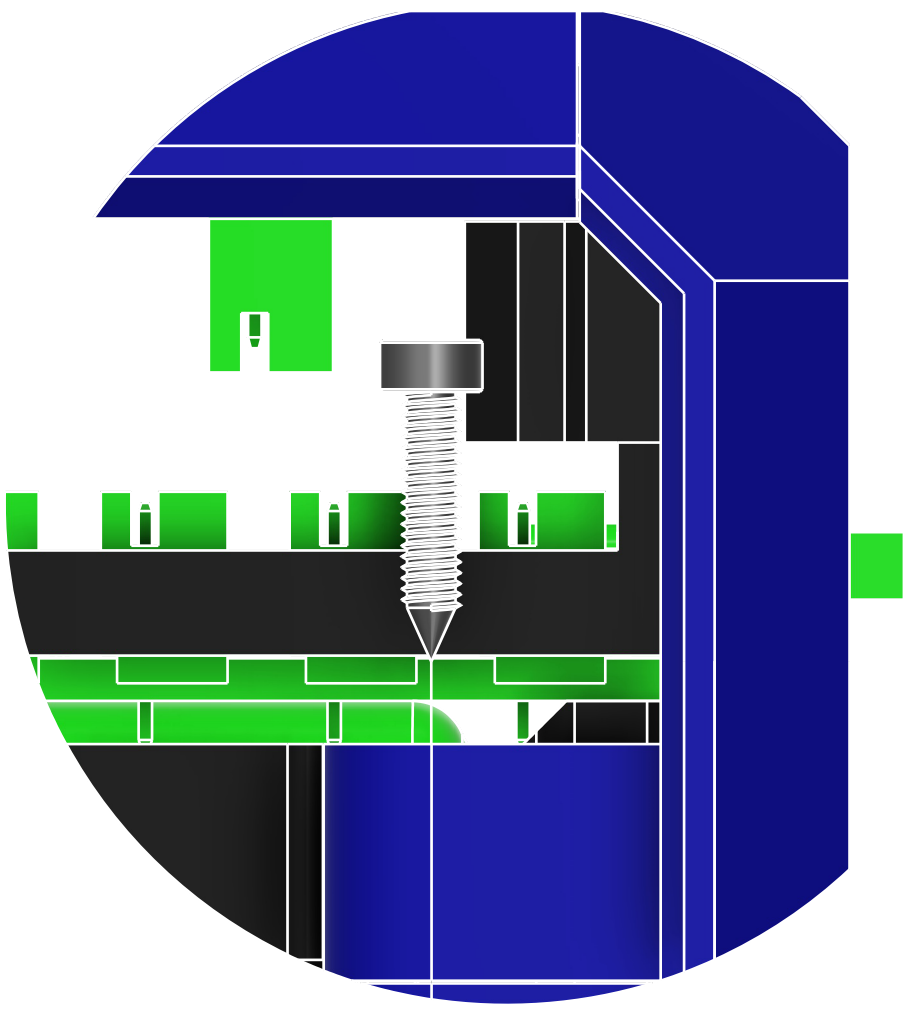


3216 OTTON

STEP 11 - OUTER FRAME

top frame have access holes. use them to tie down m2 screws

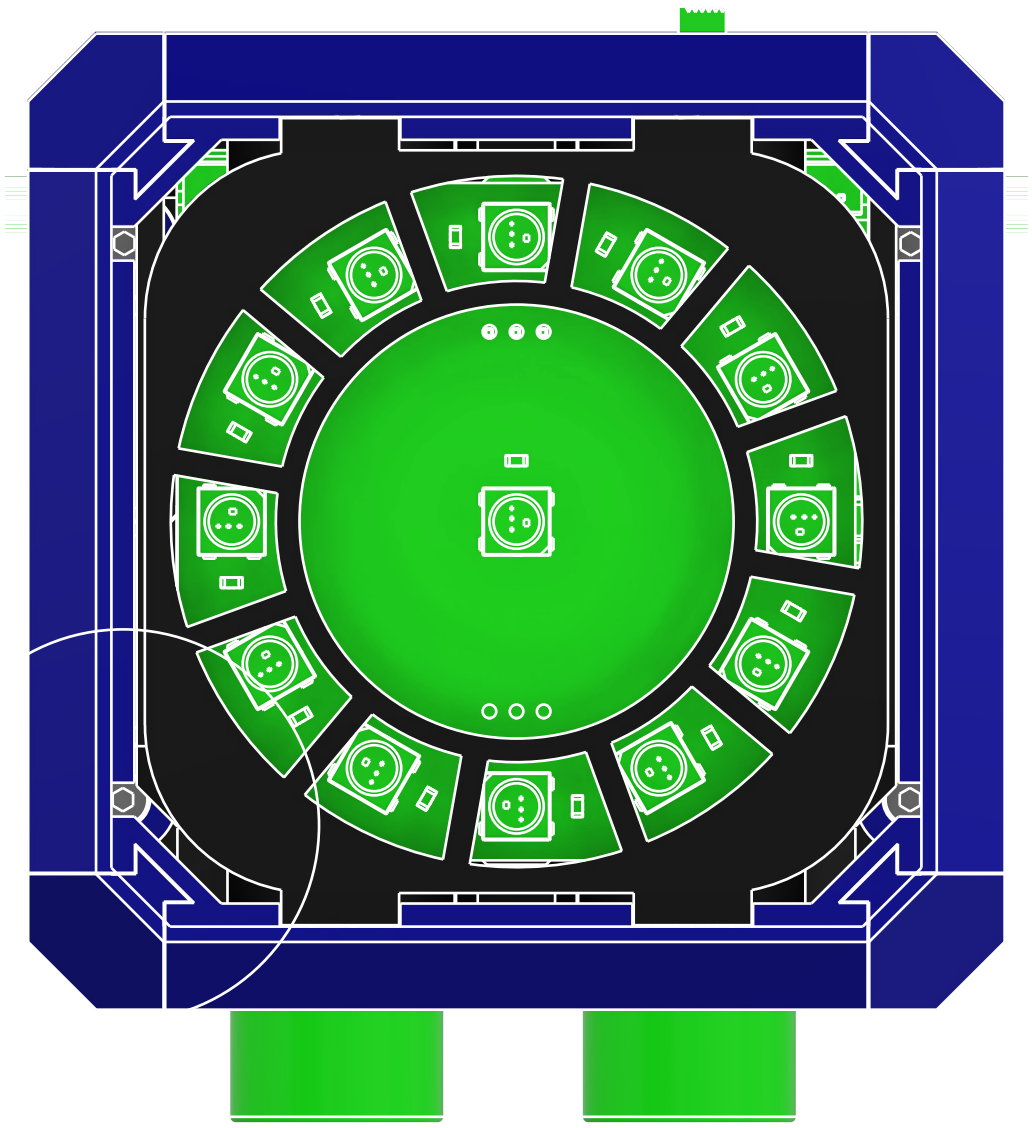

B

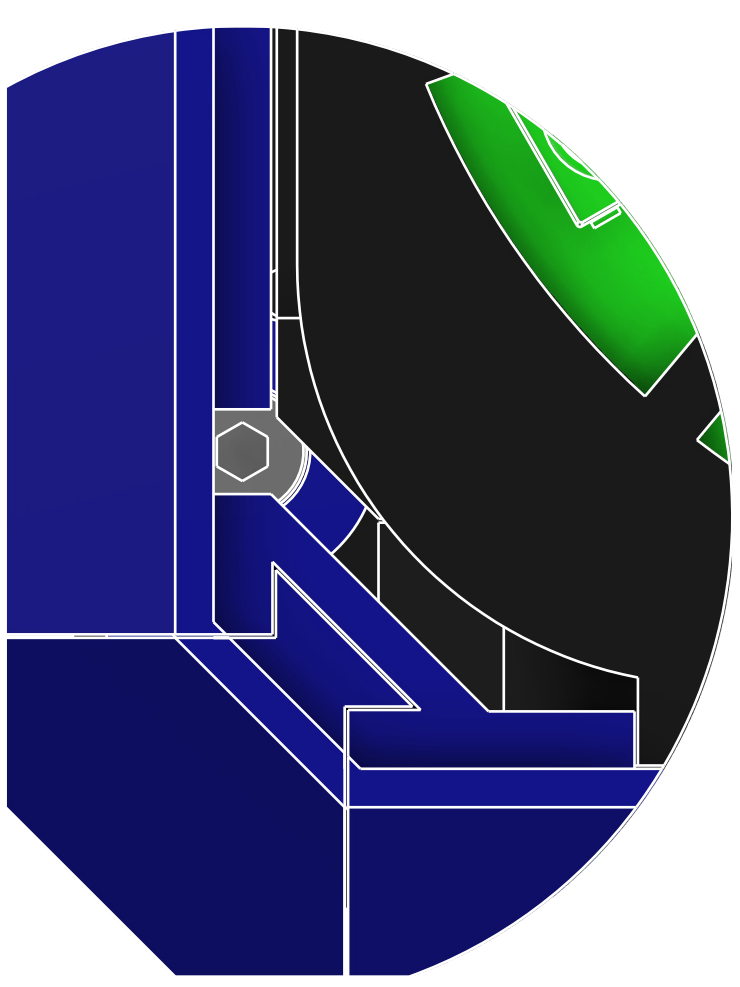


B (5:1)

3216 OTTON

STEP 12 - PANELS

6x panels

use panels for assigned sides

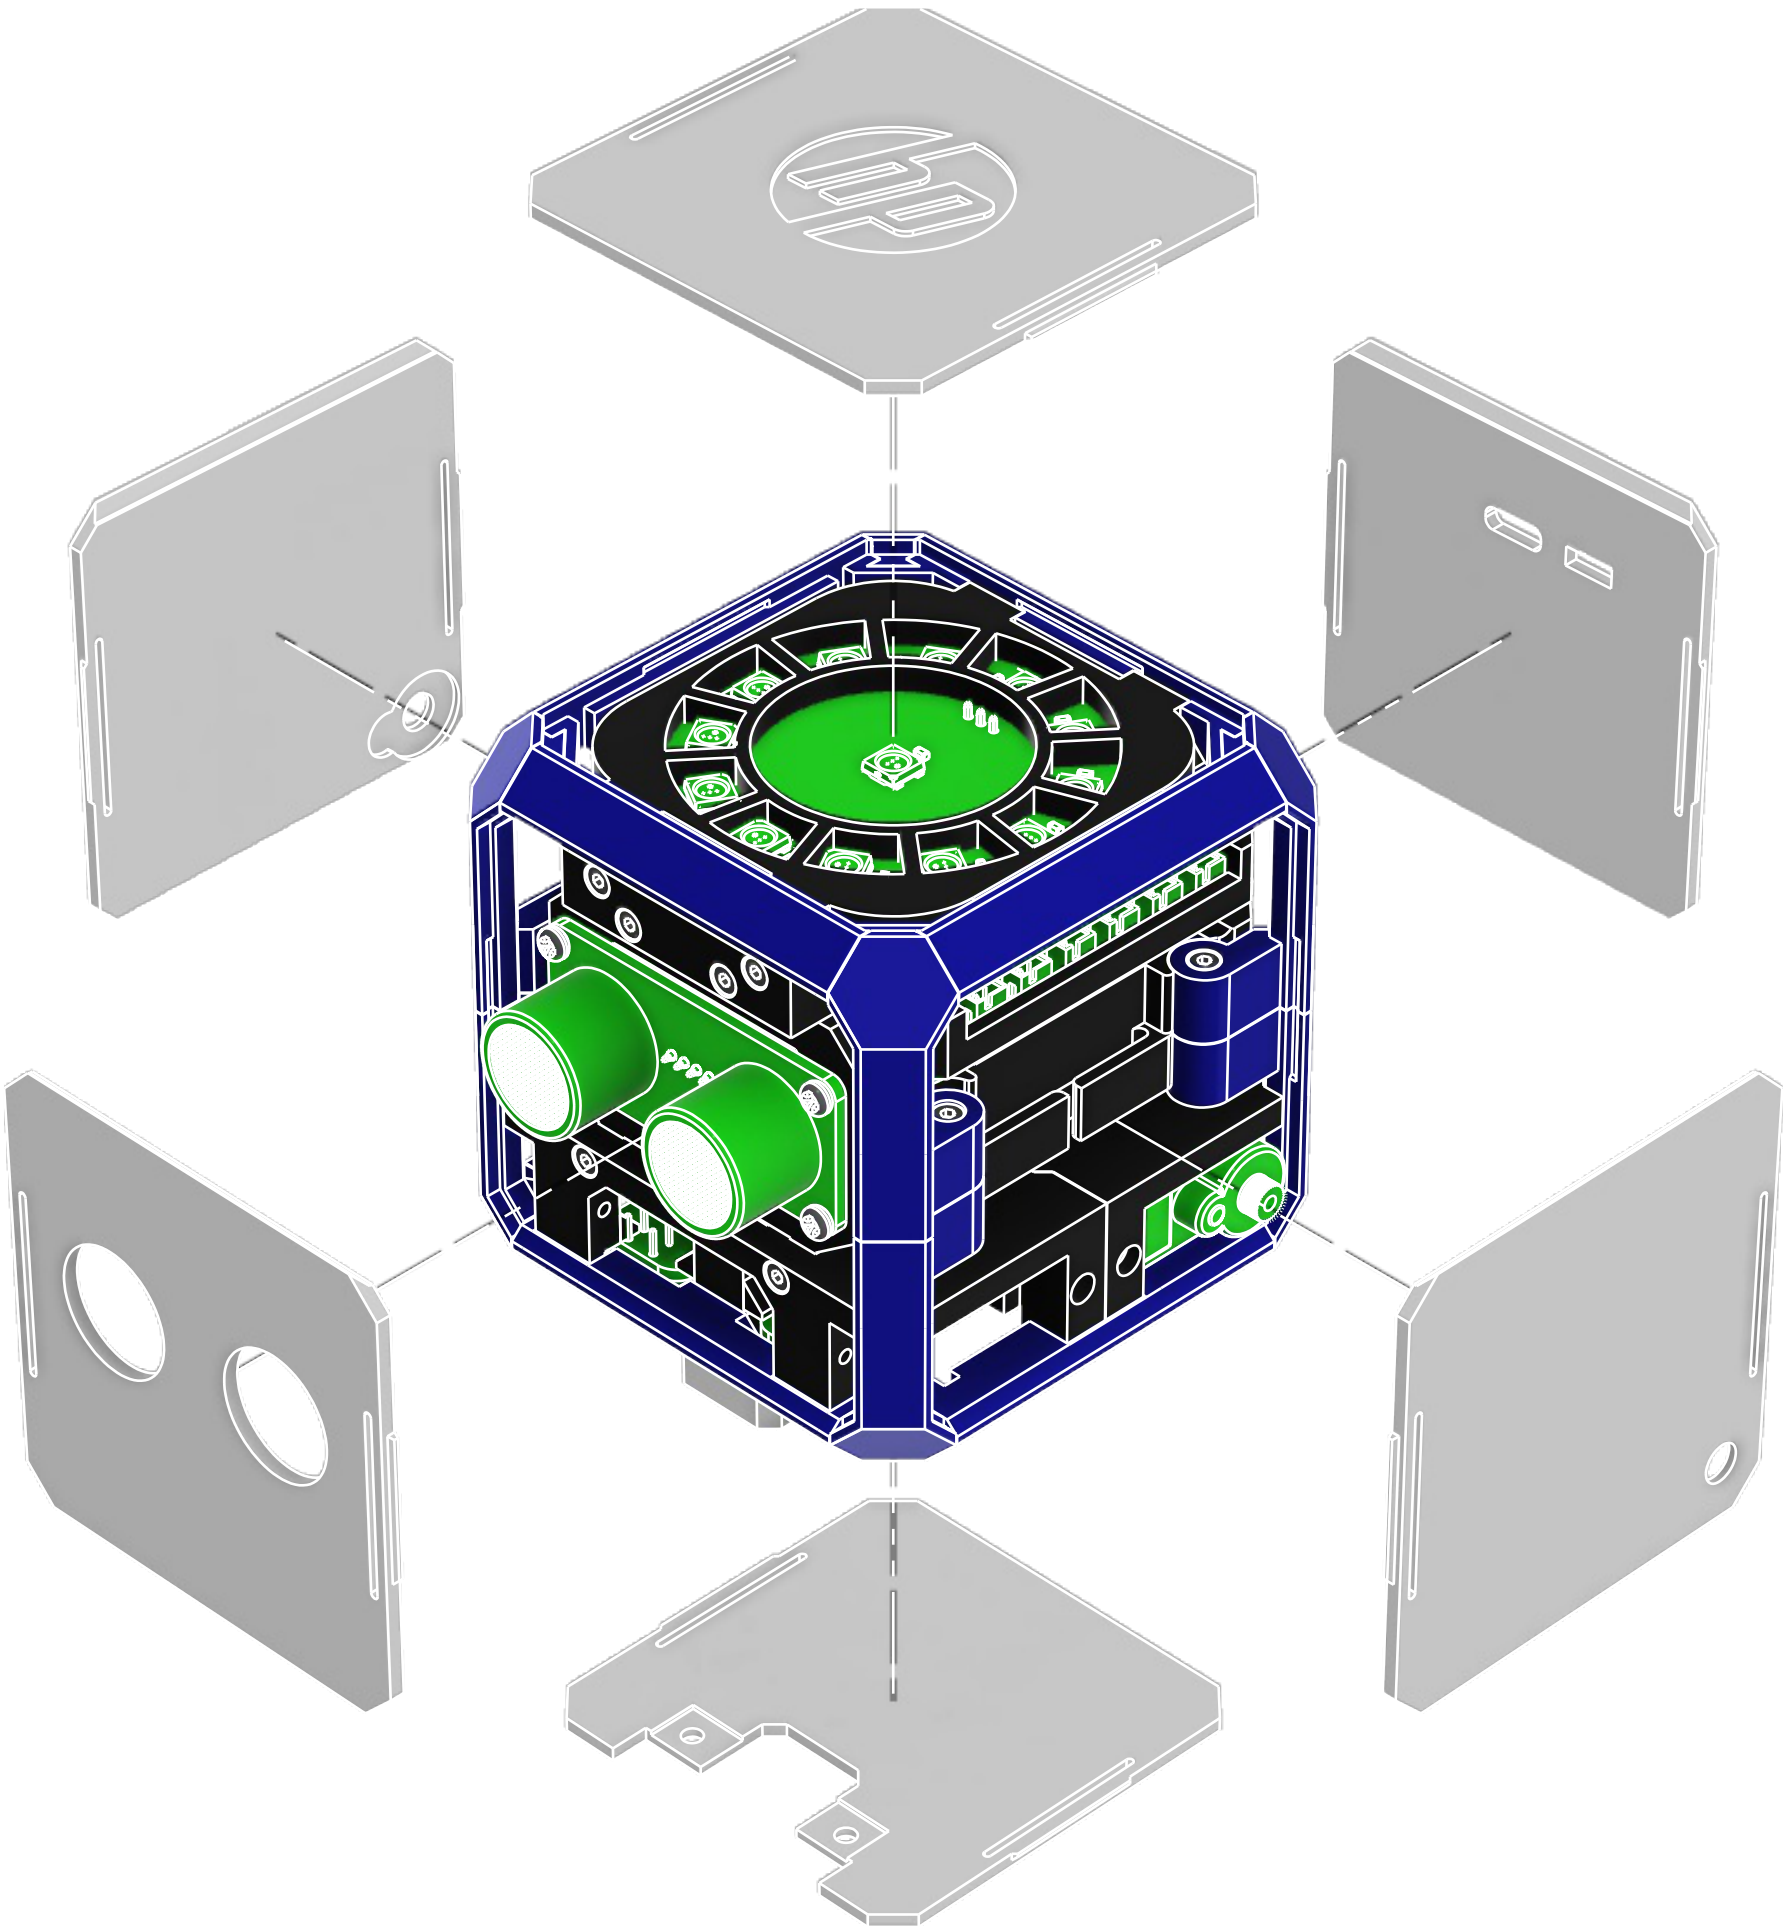

use details from original instructions for wheel fitment