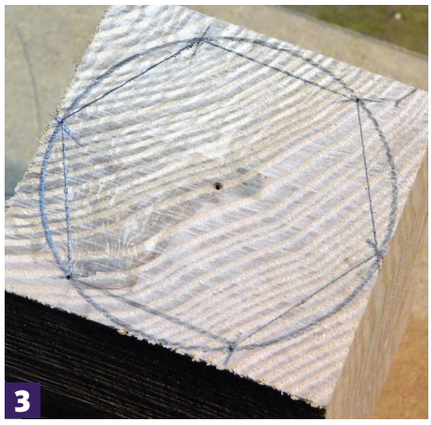
3

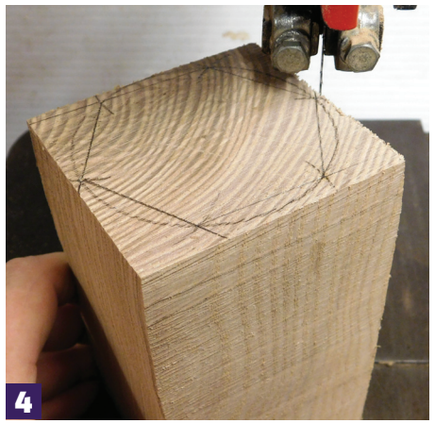
4

3 To provide a guide for cutting you can transfer the individual points down the side of the blank, on to the end, and draw the hexagon on the opposite end. You may only need to do this if cutting the waste away with a hand saw. If your bandsaw cuts straight and true this isn't necessary

4 You can cut the waste away either with a hand saw or a bandsaw. If using a saw you will need to hold the blank in a vice. If you are using a bandsaw that will cut to a depth of 170mm then you can cut the blank in the horizontal position. Take care and support the cut waste with a push stick. Cut to the pencil lines

5

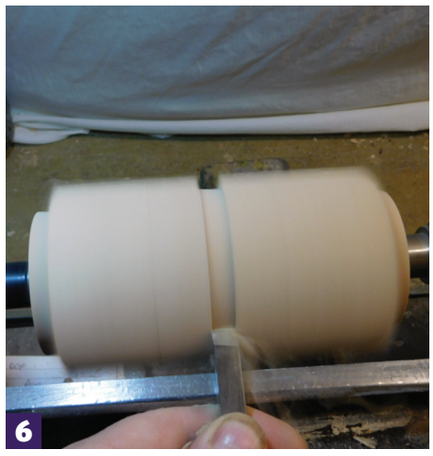
6

5 Now mount the blank between centres. Here I am using a Morse taper adapter to save chuck removal in order to fit the steb centre. Cut a tenon on each end to suit your scroll chuck. Mark the centre of the blank for reference, then mark at 5mm either side of this mark and again at 25mm either side of this mark, as illustrated here. Mark the two outside areas with a 'X'. These are the waste areas

6 Using a 10mm parting and beading tool carefully cut down to the round. The diameter will be close to 60mm, which may also be the diameter of your tenon, however this is acceptable

7

8

7 Next remove the waste from the two areas marked 'X'. You can do this either with the parting tool or a spindle gouge, whichever is easiest for you. Keep the sides of the transition clean. You can abrade these two areas now. I abraded to 240 grit as I don't think a super-fine finish suits the box

8 The next part can be tricky if you haven't cut pommels before. Using only the long point of a freshly sharpened skew, take cuts from the outer edge down to the cylinder, working back to about 5mm at the top edge. Be careful to only use the tip of the skew and don't rush the cuts

9

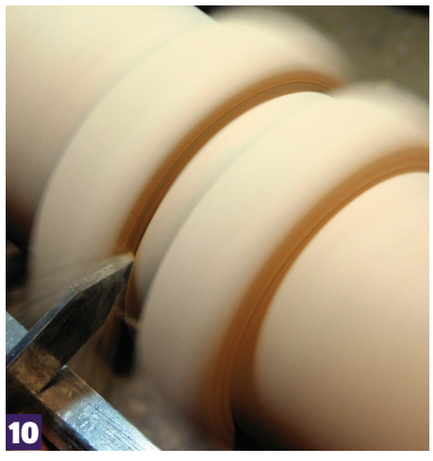
10

9 This should leave you with a clean and shapely curve. Match this curve on the opposite side of the flange and then repeat the process on both sides of the second flange. These surfaces should need little if any abrading. If you need to abrade them take care as there are 24 points to knock your fingers!

10 Using a 2mm parting tool make a cut, perhaps 5mm deep, to define the eventual parting place of lid and base. Now carefully abrade the resulting box tenon – to the right of the tool in this picture. The tenon should be parallel and true. Be careful of the points on the flange when abrading

WT_287_45_49_ANDY_COATESckbdJRACSD.indd 47 06/11/2015 09:46