4. Screw each bored workpiece on to the screw chuck's screw. Having a workpiece's right-hand end located by the tailcentre's centre point as you screw it on aids axial chucking.
5. Turn each workpiece to a cylinder whose diameter equals the piece's bottom diameter. Mark out, and finish-turn each man working from right to left. Then sand.
6. Polish the men in the lathe as described in the first article in this series.

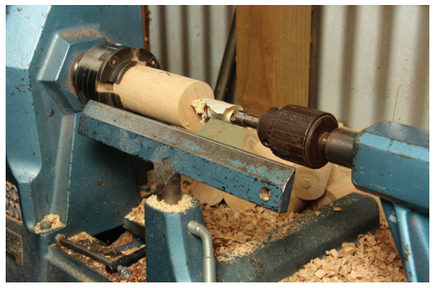

Boring the 16mm leading hole after skimming the man's bottom

Cutting a bishop's slot on a sawbench. The hole drilled into the jig was 1¾in diameter

Screwing a workpiece onto the homemade screw chuck while keeping the point of the tailcentre located in the impression left earlier by the point of the drive centre

After turning the workpiece to 42mm diameter, marking out a king from a pencil gauge

Planing the lower conical section of a king

Making the knights

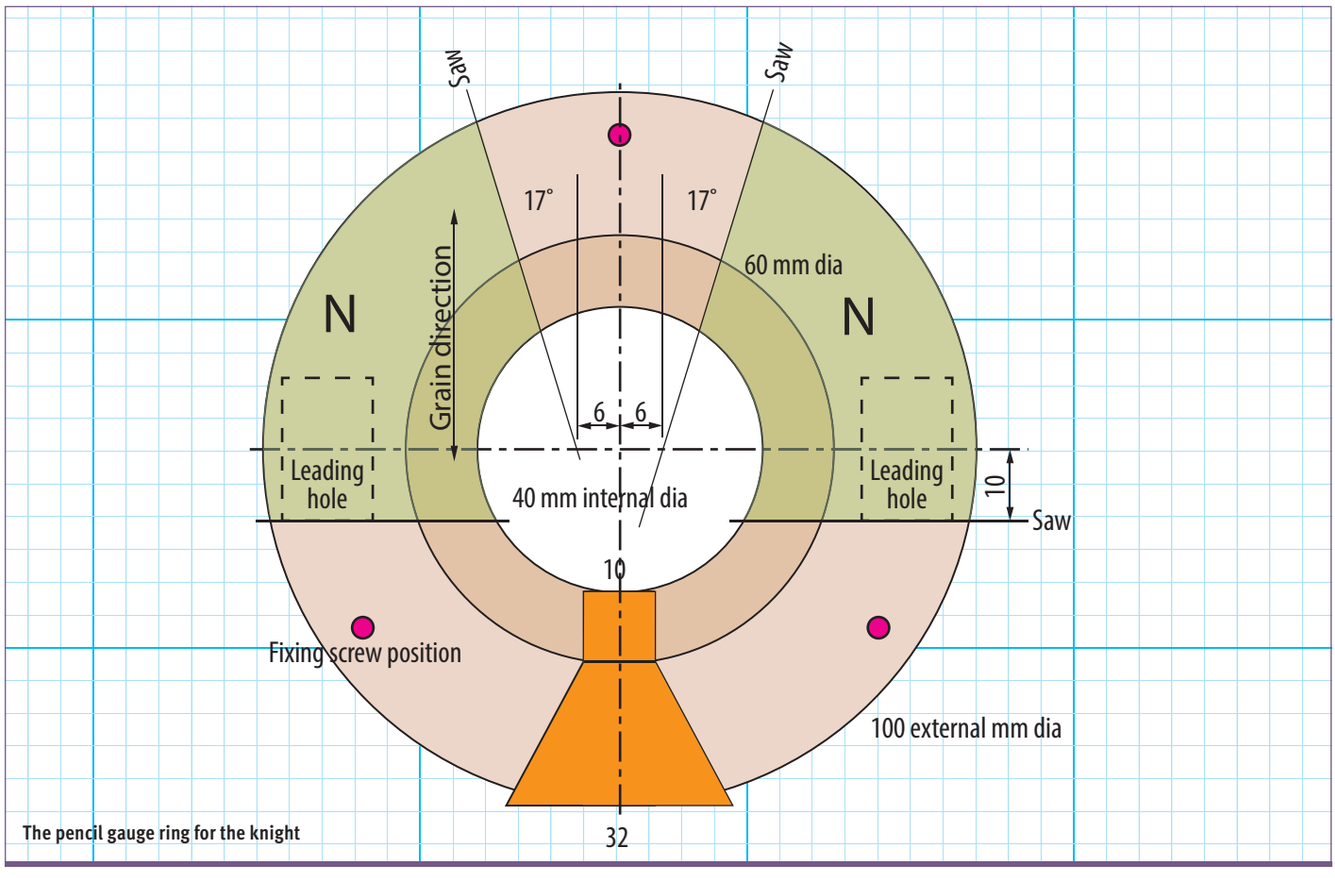

The pencil gauge ring for the knight

WT_287_67_70_CONE_CHESS_SET_TECH2JROPMDMBSD.indd 69 10/11/2015 15:52