INEPT

HOW TO

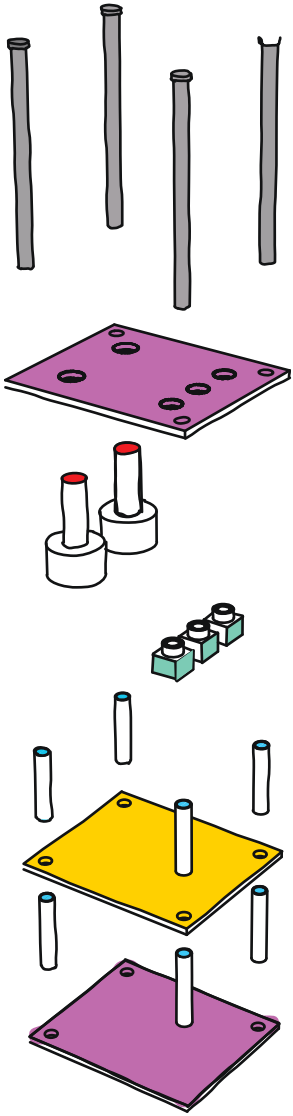

TOOLS

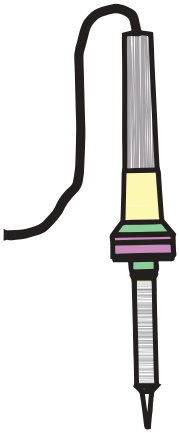

SOLDERING IRON

WIRE STRIPPER

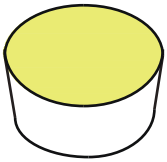

FLUX

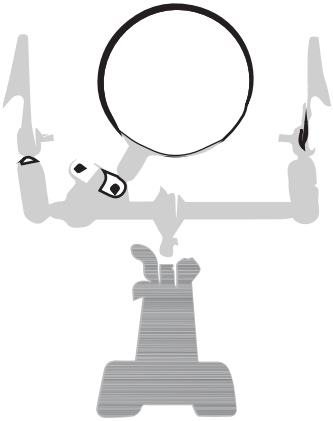

PLIERS

SOLDERING WIRE

COMPONENTS



7 PIN IC SOCKET

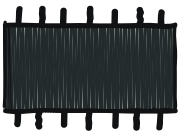

556 IC

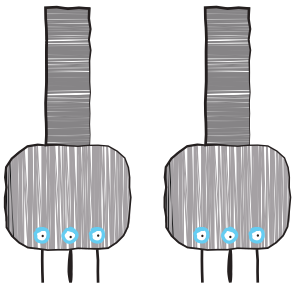

500 K POTENTIOMETER

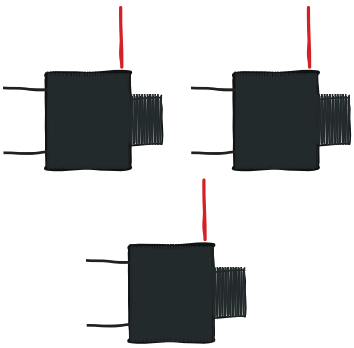

4 MM AUDIO JACK

RESISTOR

CAPACITOR



VOLT BATTERY CLIP

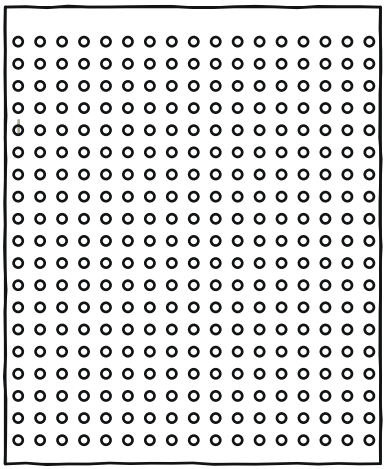

FRONT

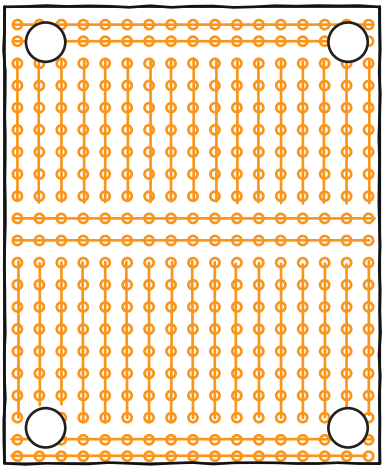

BACK

PCB

STEP A

LASER CUT THE **INEPT.DWG** FILE

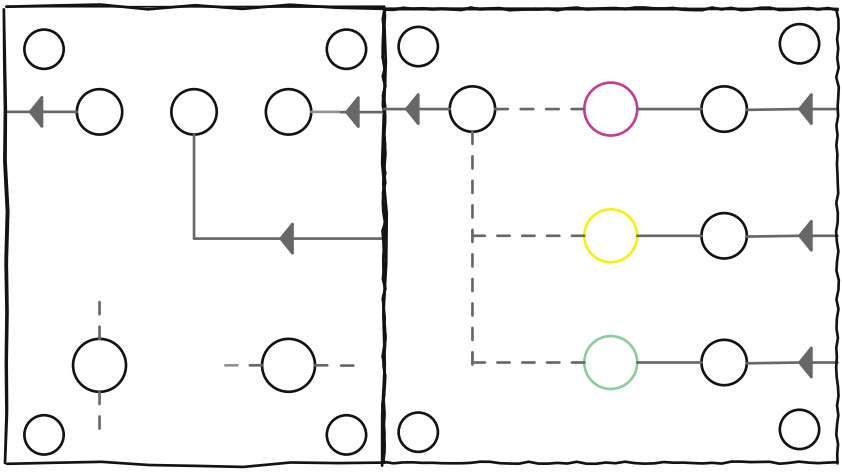

STEP B

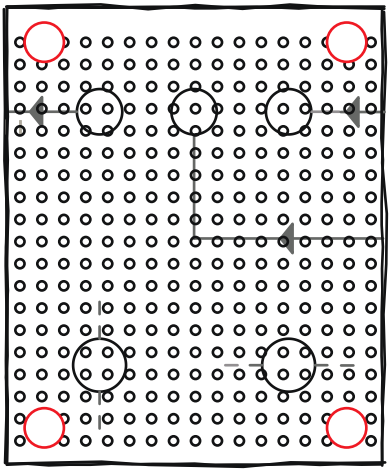

DRILL HOLES
4 MM

STEP C

NOTICE THAT SOME OF THE CONNECTIONS ARE ALREADY MADE IN THE PCB

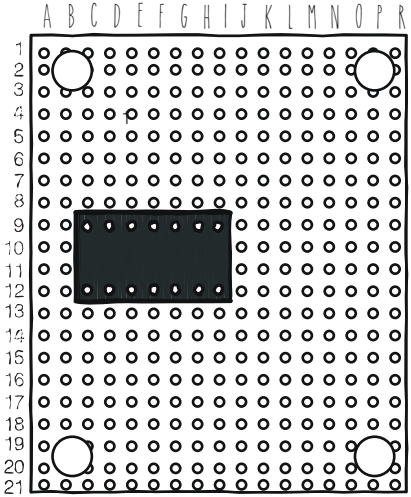

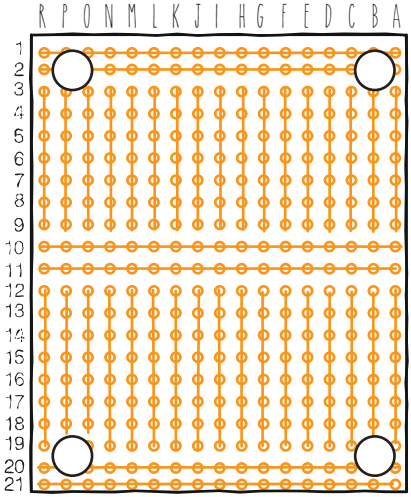

STEP D

PLACE THE IC SOCKET AS SEEN BELOW

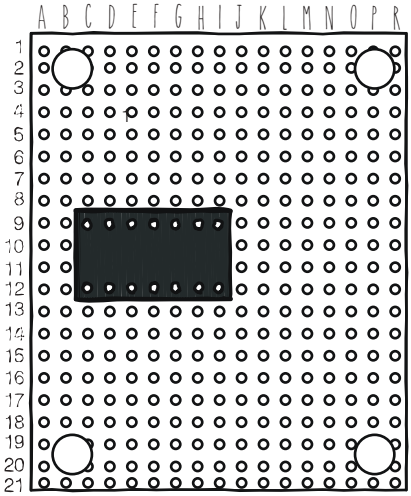

SOLDER THE LEGS

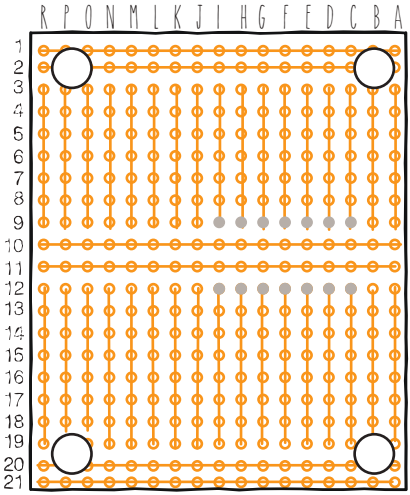

STEP E

IDENTIFY THE POTENTIOMETERS

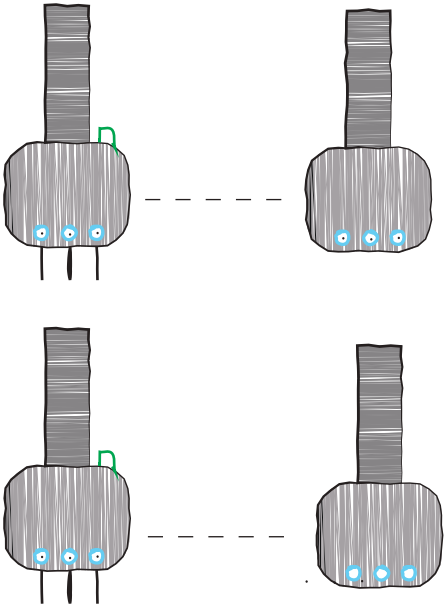

CUT WITH

STEP F

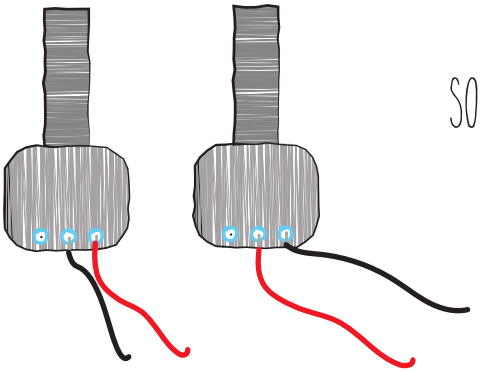

SOLDER THE WIRES TO POTENTIOMETERS

STEP 6

ADD BATTERY CLIP

CONNECT POSITIVE AND NEGATIVE SIDES

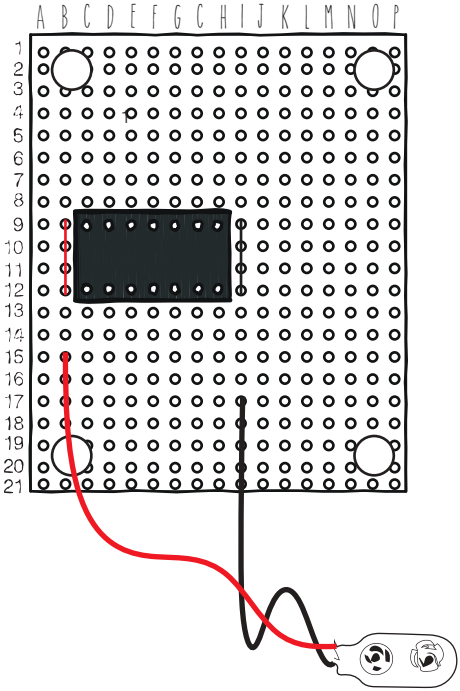

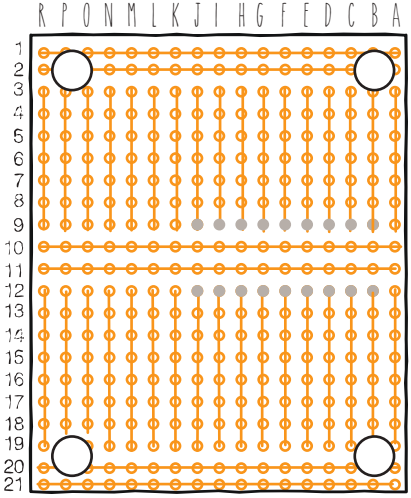

CONNECT

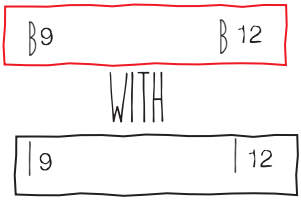

STEP H

CONNECT WIRES TO AUDIO JACKS

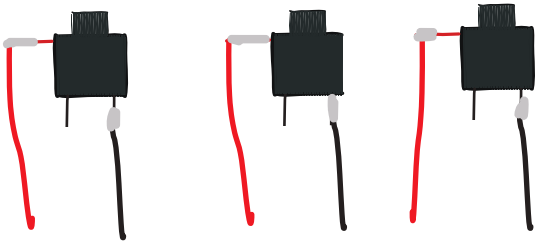

STEP I

CONNECT C 13 AND G 13 WITH

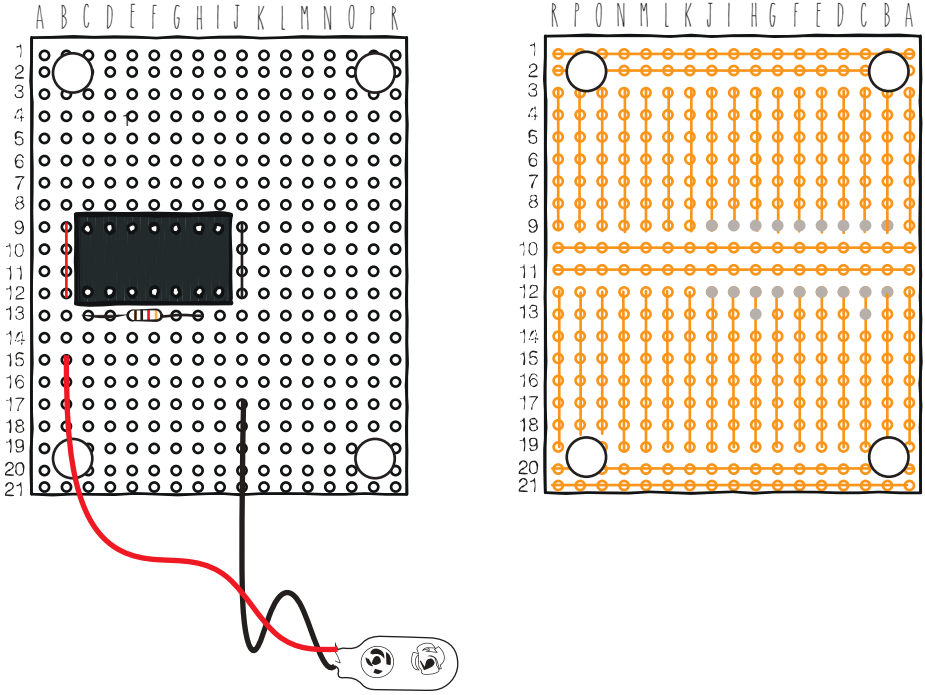

STEP J

CONNECT G 15 AND J 15 WITH

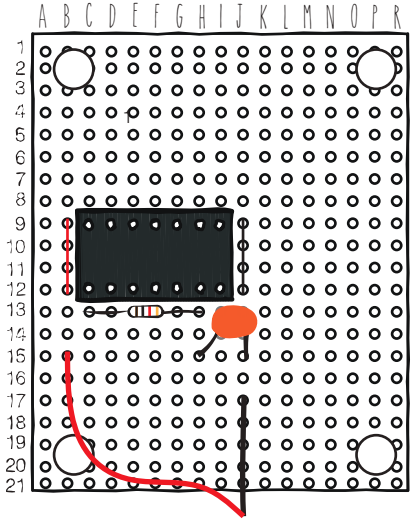

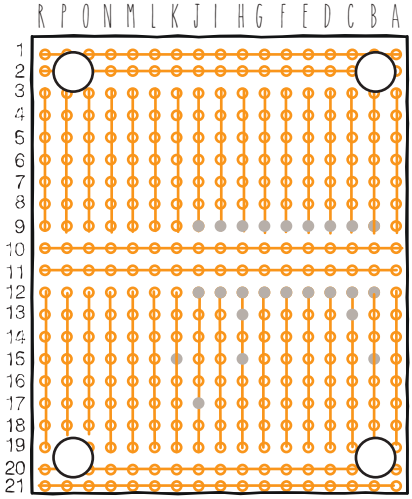

STEP K

CONNECT D 14 AND H 14 WITH

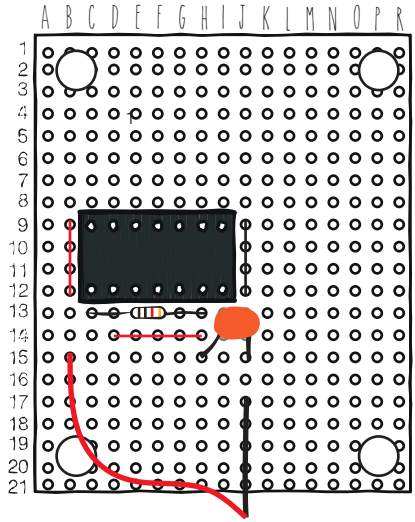

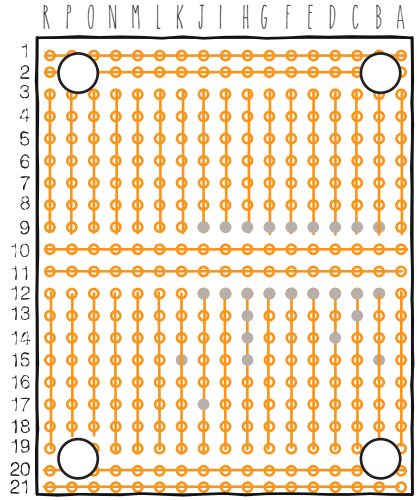

STEP L

CONNECT B 8 AND C 8 WITH SOLDER

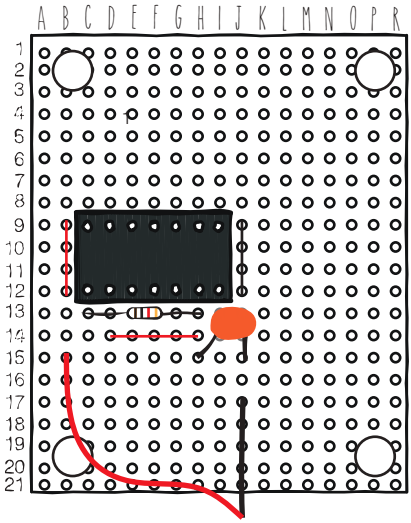

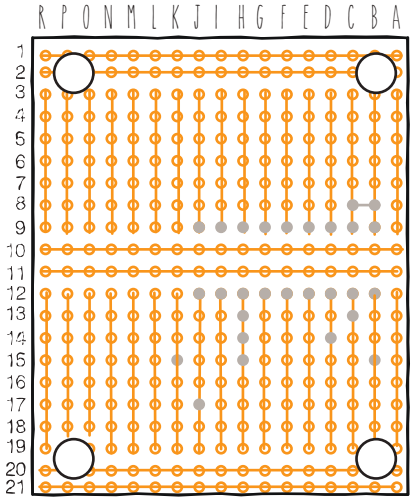

STEP M

CONNECT C 7 AND G 7 WITH —

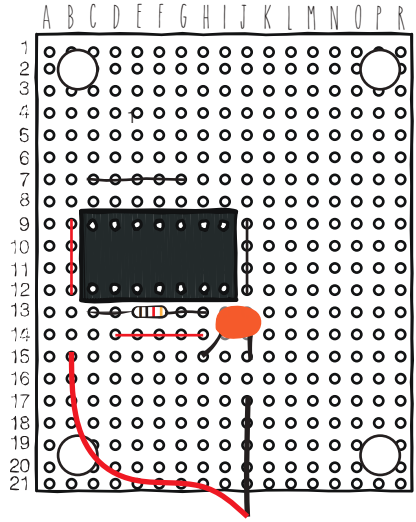

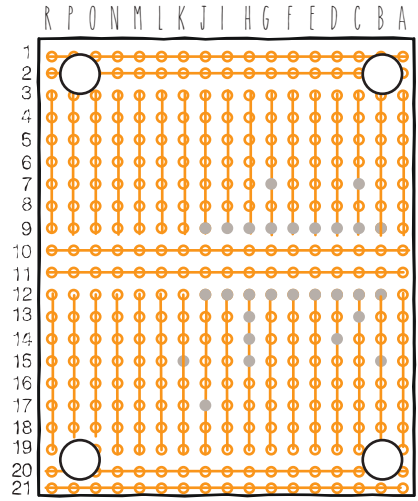

STEP N

CONNECT D 8 AND E 8 WITH SOLDER

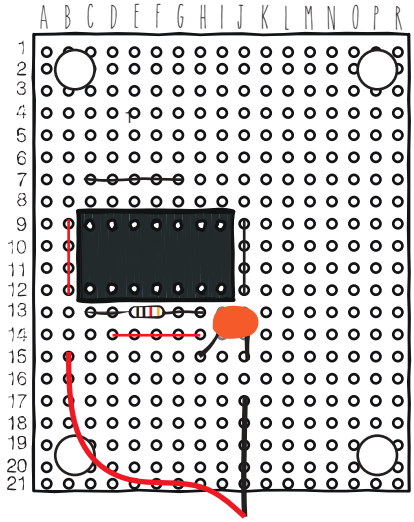

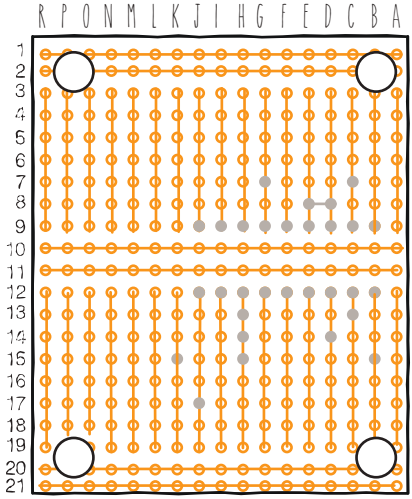

STEP O

CONNECT H 15 AND I 8 WITH SOLDER

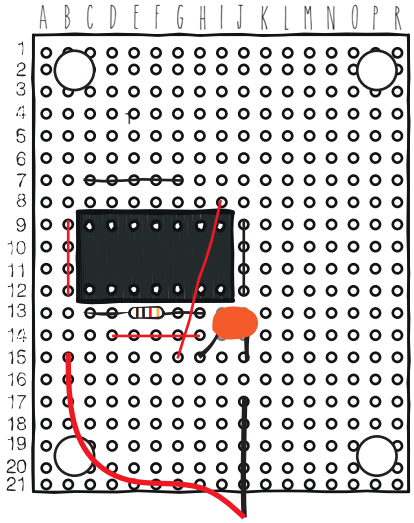

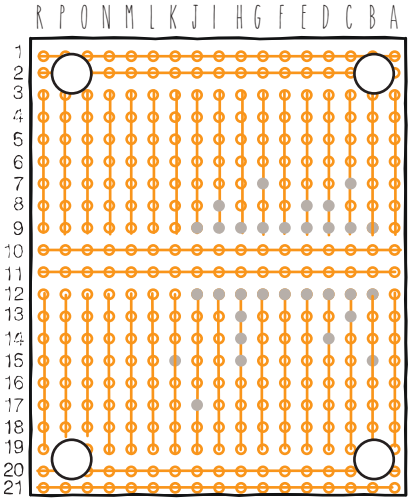

STEP P

CONNECT I 13 AND J 13 WITH

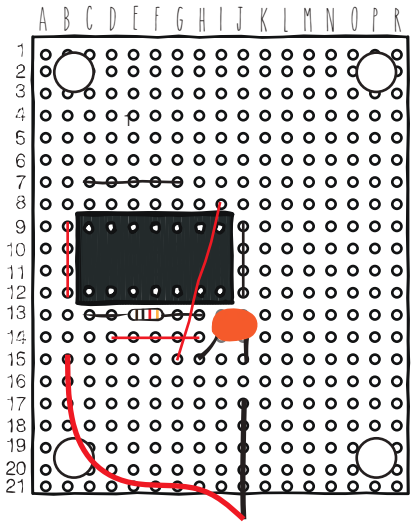

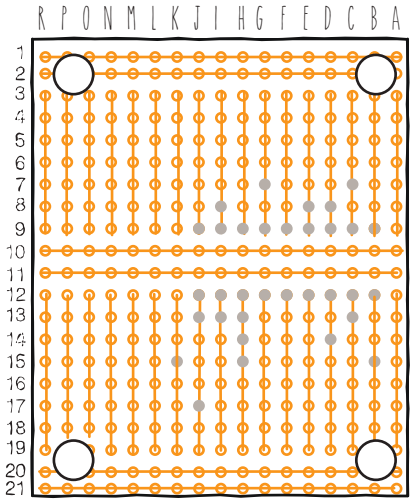

STEP R

CONNECT E 6 AND J 6 WITH

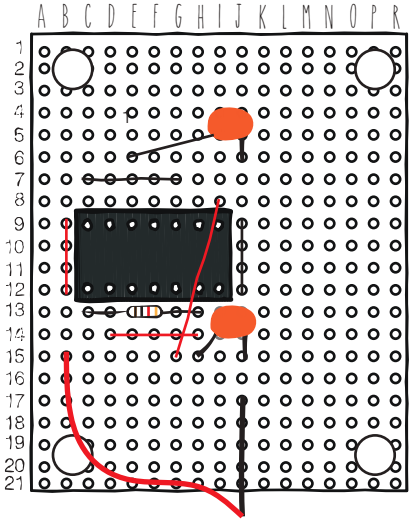

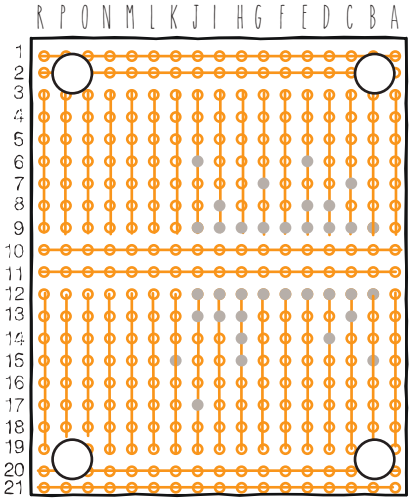

STEP 5

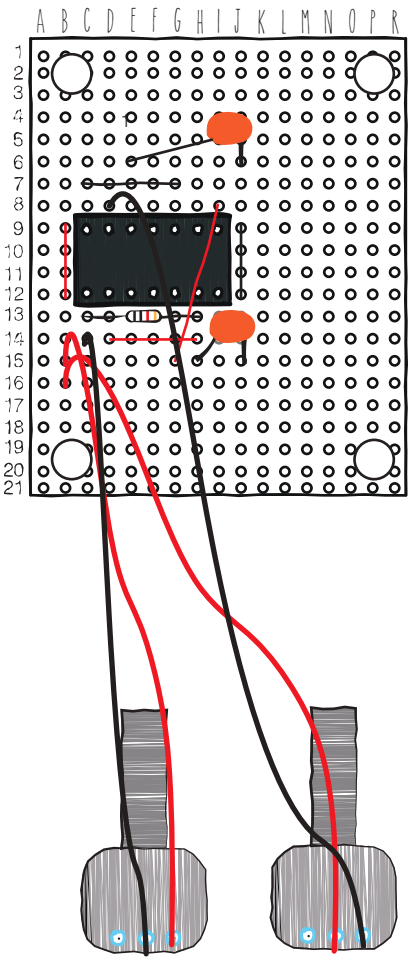
A B C D E F G H I J K L M N O P R
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21

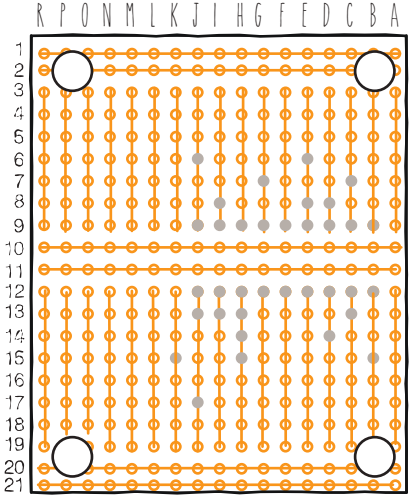
R P O N M L K J I H G F E D C B A
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21

STEP T

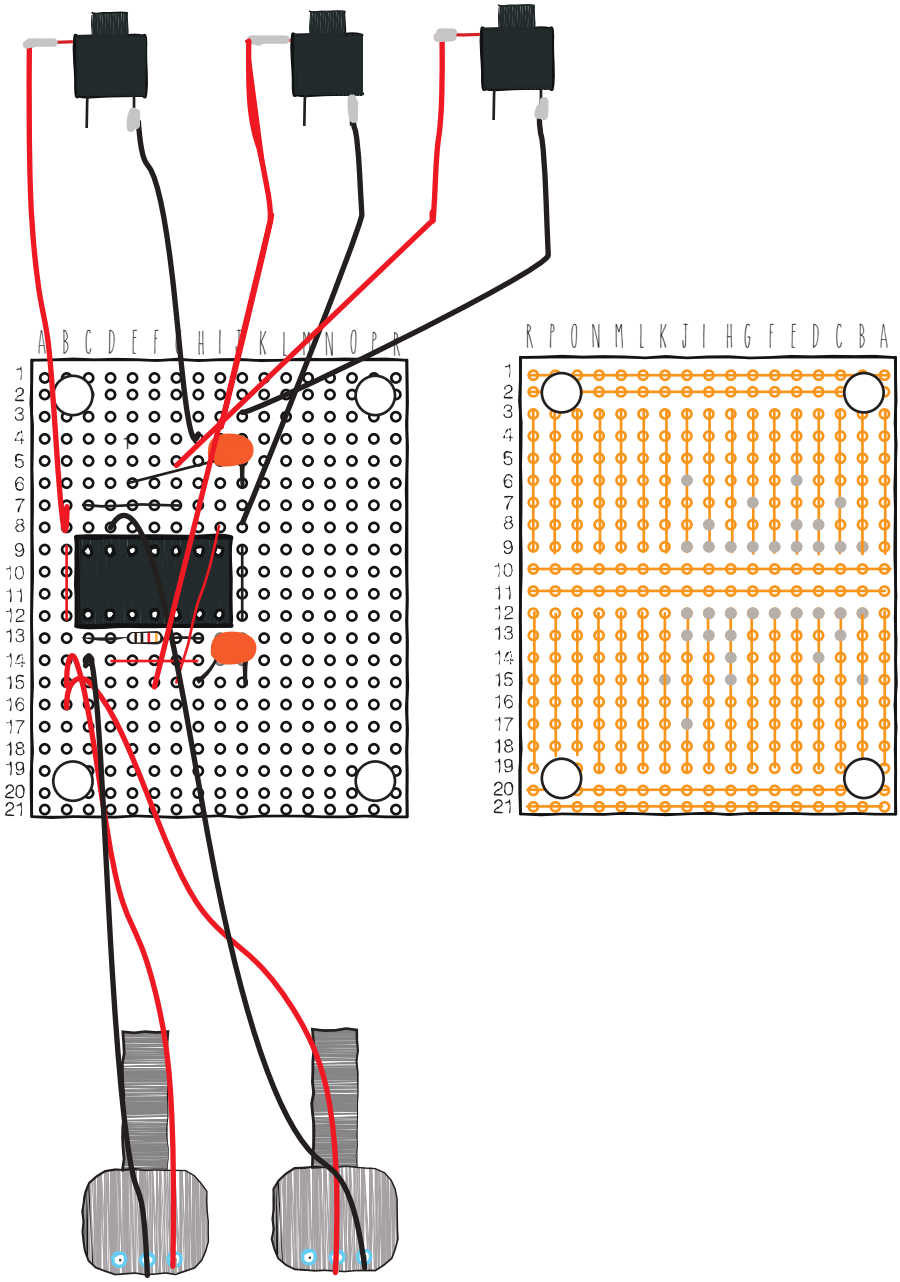
A B C D E F G H I J K L M N O P Q R
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21
R P O N M L K J I H G F E D C B A
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21