How to clock part 01 on the UR3e

View from the robot toward the printed frame • proposed bare-flange pose at (0, −0.4, 0.3) m

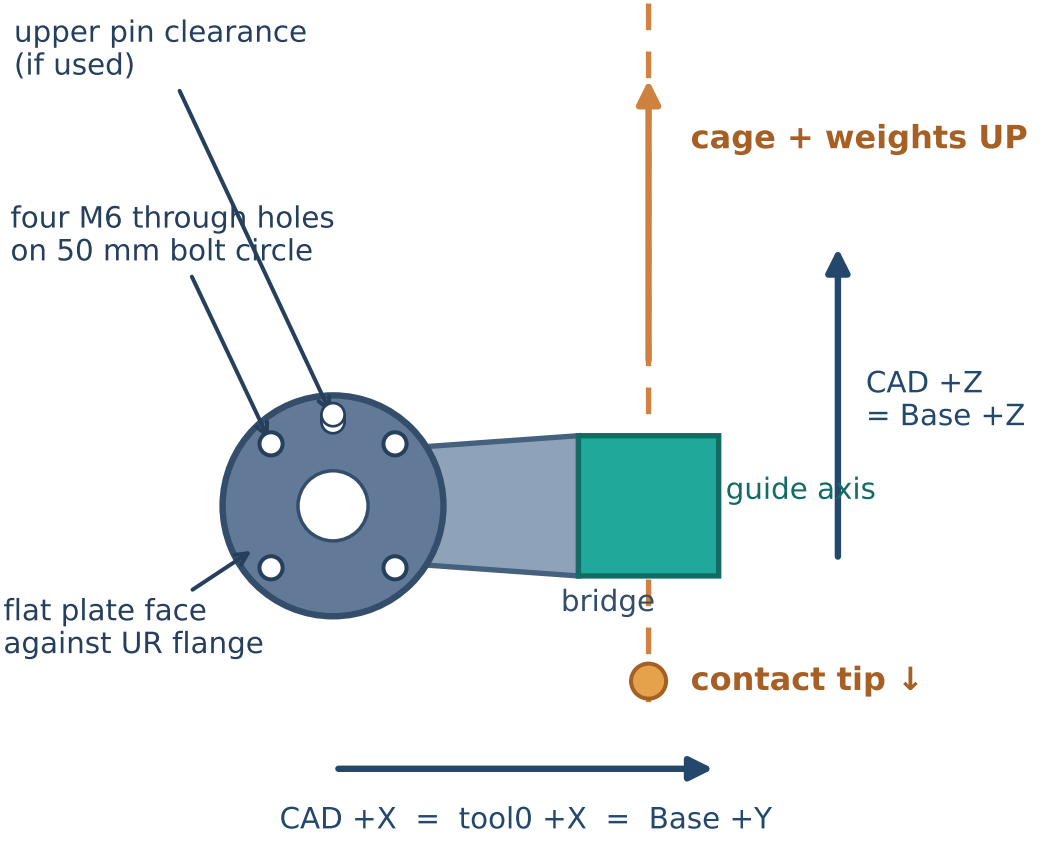

Place the round plate against the robot flange. Rotate part 01 until the bridge points toward Base +Y and the pin slot is uppermost.

Check that the four bolts align without force and that the guide axis is vertical. The physical flange may require a different wrist clocking.